


MOTOROLA Models MoPar 613 used in Plymouth P26, P27, and MoPar 614 used in Dodge D55, D56.

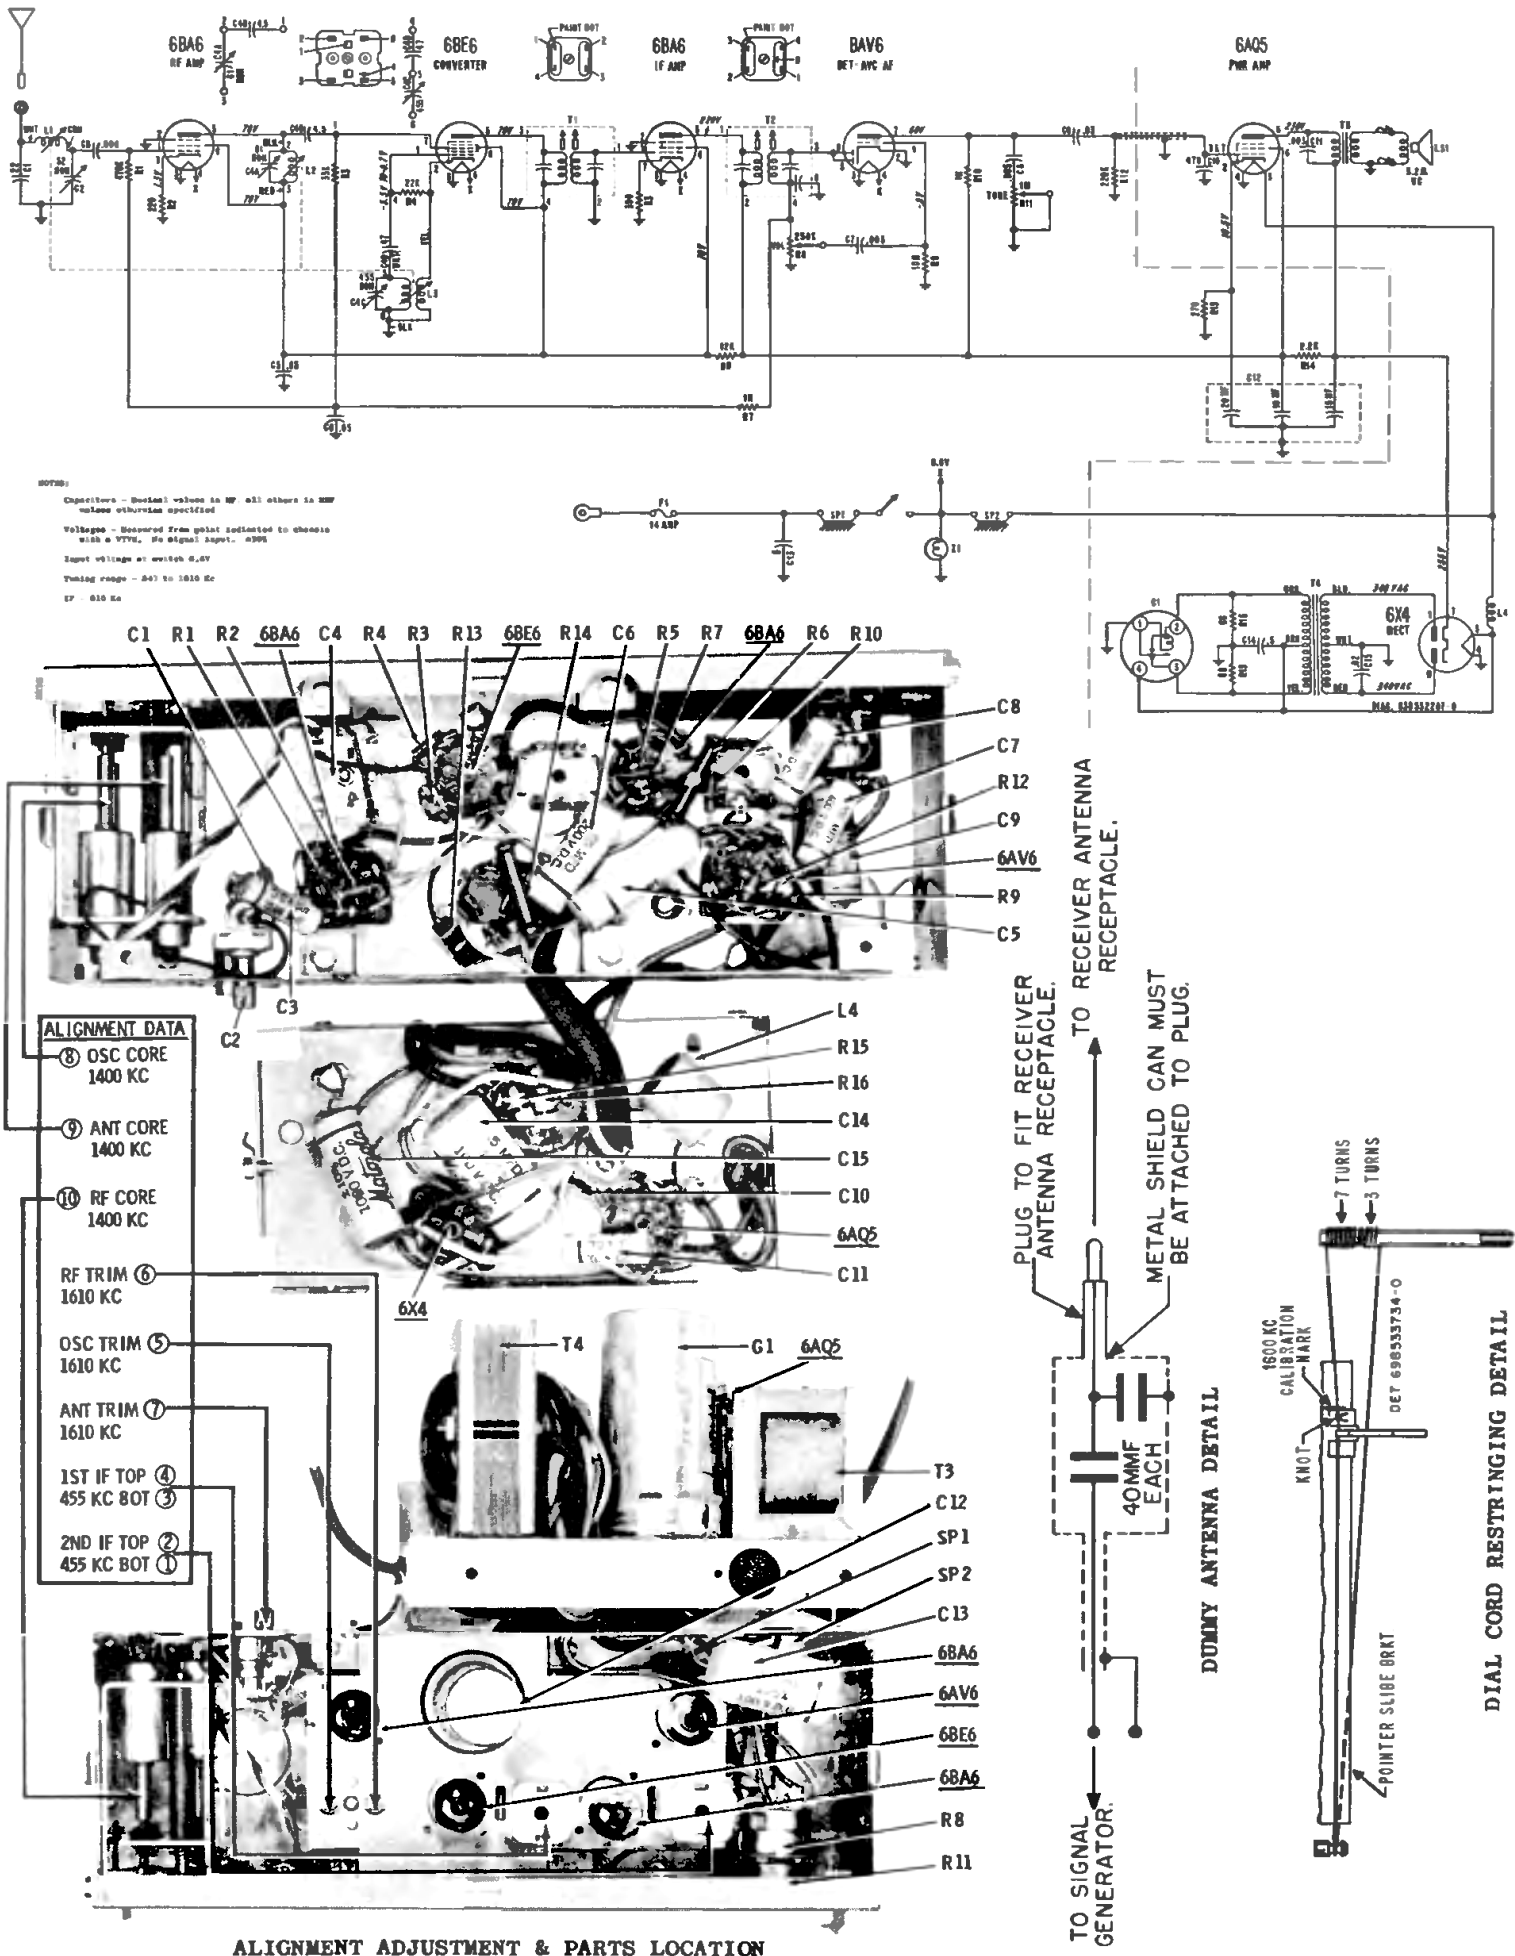

ALIGNMENT ADJUSTMENT & PARTS LOCATION