


WESTERN AIR PATROL

MODEL 6-M3T Table
Chassis W480

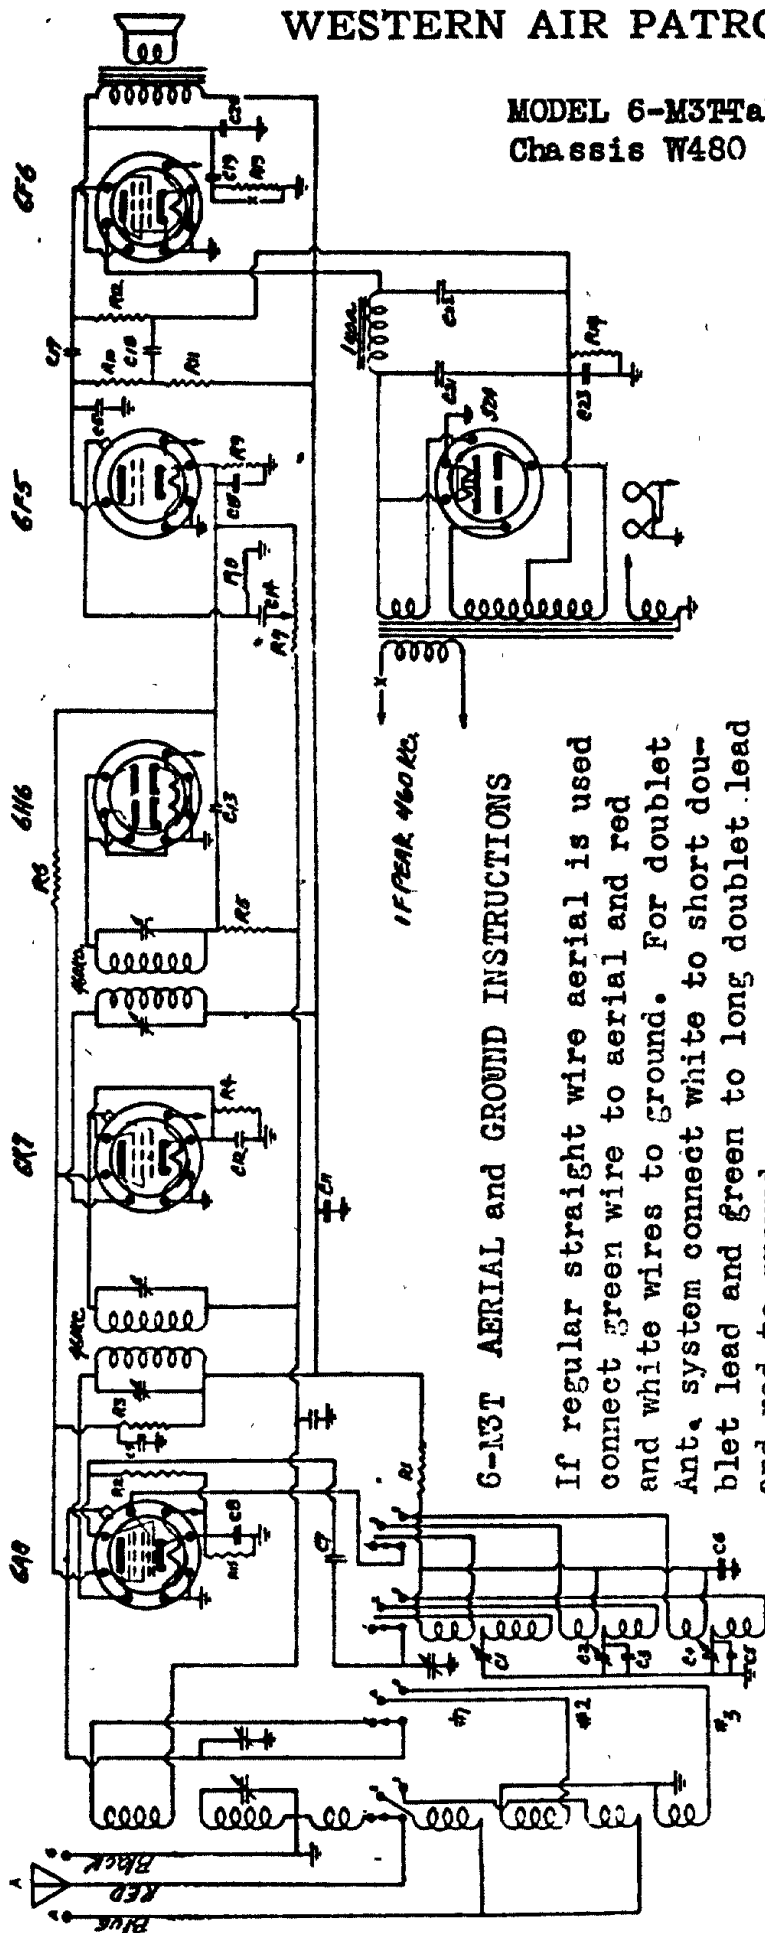

6-M3T AERIAL and GROUND INSTRUCTIONS

If regular straight wire aerial is used connect green wire to aerial and red and white wires to ground. For doublet Ant. system connect white to short doublet lead and green to long doublet lead and red to ground.


CONDENSERS

C6-C9-C11	1 MFD.	400volts
C10	.1 "	200V
C14-C17	.02 "	600V
C8-C12	.05 "	200V
C18	.25 "	400V
C23	.10 "	30V
C20	.006 "	800V
C15	.01 "	200V
C19	.03 "	600V
C3	.00075 "	Mica 3%
C5	.002 "	" 3%
C7	.0001 "	" 10%
C13	.00025 "	" 10%
C16	.001 "	" 10%
C21-C22	8Mfd.	450V filter cond.
C1-C2	500 Mfd.	Variable padder.
C4	1000 "	"

RESISTORS

R1, R13	20,000 ~	1/2 watt carbon
R3	10,000 ~	2 watt carbon
R4, R15	200 ~	wire wound
R8	100,000 ~	1/3 watt carbon
R2	40,000 ~	" "
R5	500,000 ~	1/2 " "
R6	12,000 ~	1 " "
R7	200,000 ~	Vol. Control
R9	100 ~	wire wound
R10, R11	70,000 ~	1/3 watt carbon
R12	1Meg. 1/2	" "
R14	250 condohm	" "
	2 watt.	" "

Tube Placement.

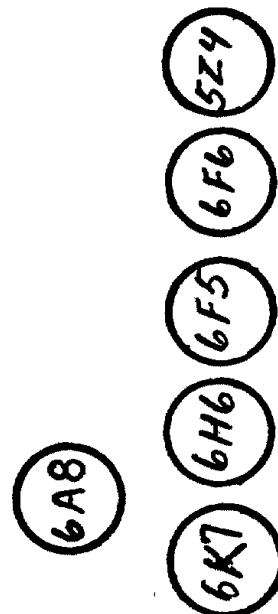

REAR TOP VIEW.