



VIEW FACING OUTSIDE OF SOCKET
LEADS TO BE CONNECTED TO HEATERS AS INDICATED BY NUMBERS

NOTE- ALL VOLTAGES TAKEN FROM THIS POINT.
ALL VOLTAGE READINGS LISTED ARE TAKEN WITH ALL CONTROLS TURNED ON FULL AND NO SIGNAL- USE 1000 OHMS PER VOLT VOLTMETER.

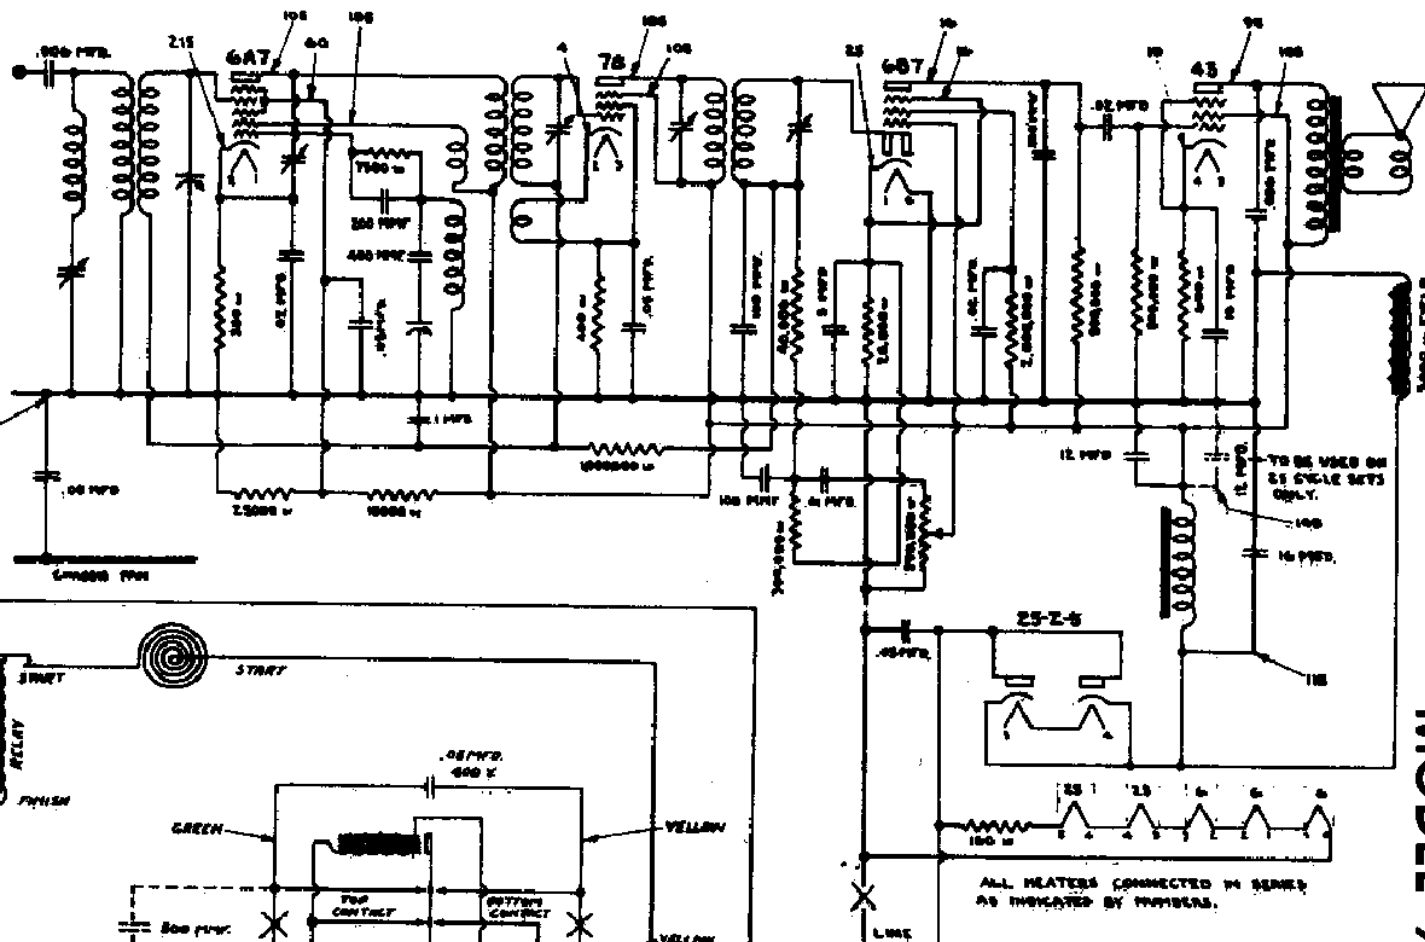

MODEL 95 U

WARE ING CORP.

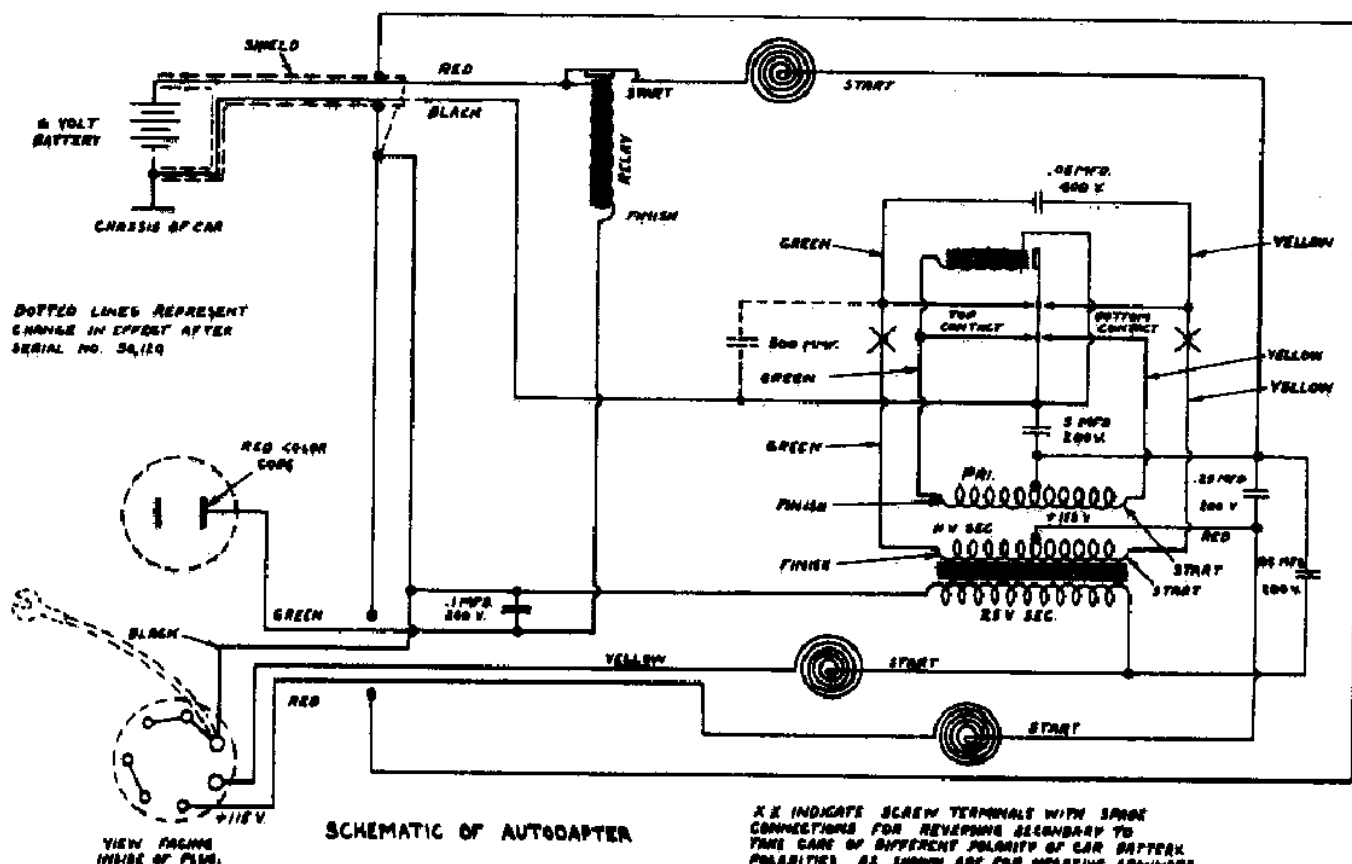

SCHEMATIC OF AUTODAPTER

XX INDICATE SCREW TERMINALS WITH SPARE CONNECTIONS FOR REVERSING SECONDARY TO TAKE CARE OF DIFFERENT POLARITY OF CAR BATTERY POLARITIES AS SHOWN ARE FOR NEGATIVE GROUNDED SIX VOLT AUTO STORAGE BATTERIES

