

AM / FM STEREO TUNER

T-88V
SERVICE MANUAL

T-88V CIRCUIT DESCRIPTION

Power Supply

The mains input to the tuner goes via power switch to the mains transformer which has two windings:

1. A 12 volt winding for the panel lamps.
2. Q225 (2SD235) transistor is used as a regulator to obtain from 17 volt to a 12 volt DC supply for AM and FM tuner section.

AM Section

A superhet design using a mixer/local oscillator and two stages of IF amplifications at 455KHz. A ferrite rod antenna with 3 windings is used, the first winding is connected to the external antenna terminal, the second is connected to the first section of a 2 gang tuning condenser, the last winding feeding the base of the mixer transistor.

The oscillator operates at 455KHz above the incomming signal to produce the intermediate frequency, which is passed through a ceramic filter and then amplified by two further transistor IF stages. The audio is then recovered by a D216 germanium diode detector and passed on to the pre-amp via selector switch, and signal strength meter is driven from a D215 germanium diode detector. An AGC voltage which is detected at the D217 and D218 controls the gain of the first IF amplifier, two diodes D213 and D214 are used for increasing the AGC effect. This method used provides an audio output relatively constant with varying RF signal strength.

FM Front-end

An input balun transformer matches either 300-ohm or 75-ohm antenna input to the front-end, which has a 4 gang tuning capacitors and consists of a FET for the tuned RF amp feeding, via a two section transformer, the bi-polar transistor "Colpitts" oscillator operates at 10.7MHz above the incomming signal. C115, C116, C117 and C118 are negative temperature coefficient condensers to stabilize the oscillator to less than 25KHz per 10 deg. Celsius. The output is then fed via 3pF condenser to the mixer, the resultant 10.7MHz passes through a double tuned IFT included in the front-end module. The front-end module is well shielded to prevent any spurious radiation, and to offer good image and selectivity response.

FM IF and MPX Sections

The IF strip is contained on the same printed circuit board as the AM, the stereo multiplex decoder and muting circuit. The 10.7MHz IF intermediate frequency is amplified by a transistor Q214 then passed through a ceramic filter with a side chain AGC amplifier to provide a DC control voltage for the RF input FET to improve the front-end overload capabilities. The main chain is again amplified by a further transistor and ceramic filter providing a wide pass band with steep sides.



At the audio output when the receiver is off-tuned from centre either a positive or negative DC will appear which is monitored both by a centre tune meter and a bi-phase detector using one NPN and one PNP transistor which with another NPN forms an "AND" gate for one of two "shmitt" trigger circuits. The other shmitt trigger receives a command from the signal strength circuit previously mentioned. The collectors of the final transistor in each circuit form a "wired OR" gate which via the muting "on-off" switch on the front panel controls the gate on the FET audio mute circuit if it is enabled. The composite audio passes on to the PLL stereo demodulator, which will derive the L and R audio output, the PLL stereo demodulator also is connected directly to the stereo indicator lamp.

The Left and Right go through L.C. type rejection filters to remove the 19KHz pilot. These are both in one moulding. Finally, a one transistor amplifier is used in each channel to raise the level to 1.6V for the audio preamp.


STEP	Signal Source Connected to	Set Signal to	Set Radio Dial to	Output Indicator Connected to	Adjust	Adjust for
1		Set selector switch to "FM", muting switch to "off", and turn power switch "on".				
2				DC VTVM PB1004 (19)		Check that voltage is between 11.2 - 12.0V
3						Check voltage at each part
4	<u>Sweep Generator</u> PB1004 (15)	+400KHz sweep centered at 10.7MHz Generator output level 90 - 100dB	Quiet point on band	<u>Oscilloscope</u> PB1004 TP201		Due to the fixed frequency of the ceramic filters, find the center frequency of a symmetrical band pass response. Make a note of it (for example 10.75MHz)
5				<u>Oscilloscope</u> PB1004 TP203	T201 T202 core	Symmetrical response centered at the frequency noted by step 4.
6				<u>Oscilloscope</u> PB1004 TP205	T203 top core T203 bottom core	Maximum linearity and amplitude of "S" curve centered at the frequency noted by step 4
7	<u>FM Signal Generator</u> Across FM antenna terminals(300-ohm) through matching net work	Reduce the output level to zero (interstation receiving condition)	93MHz		T203 top core	Center indication of the tuning meter
8		93MHz at 400Hz 100% modulation, output level 1mV		<u>Oscilloscope</u> <u>DistortionMeter</u> AC VTVM OUT	T203 bottom core	Minimum distortion. At the minimum distortion setting, the output level must be within 1/2dB of peak output.
9		Repeat steps 8 and 9 as necessary to obtain maximum output level and minimum distortion at center point of tuning meter and the meter must also shows center at interstation state.				
10	<u>FM Signal Generator</u> Across FM antenna terminals(300-ohm) through matching network	88MHz at 400Hz 100% modulation, generator output level 1mV	88MHz	<u>Oscilloscope</u> <u>DistortionMeter</u> AC VTVM OUT	T204 core	The signal strength meter must indicate its maximum, at the same time as the center tune meter indicates center.
11					L102	Accurate indication of pointer on dial to within <u>±1</u> pointer width
12		108MHz at 400Hz 100% modulation, generator output level 1mV	108MHz		TC102	
13		88MHz at 400Hz 100% modulation, generator output level 5-10uV	88MHz		T103 top core T103 bottom core T101, T102	Maximum indication of signal strength meter
14					L101	

STEP	Signal Source Connected to	Set Signal to	Set Radio Dial to	Output Indicator Connected to	Adjust	Adjust for
15	<u>FM Signal Generator</u> Across FM antenna terminals(300-ohm)	108MHz at 400Hz 100% modulation generator output level 5 - 10uV	108MHz	Oscilloscope DistortionMeter AC VTVM OUT	TC103 TC104 TC101	Maximum indication of signal strength meter
16						
17	through matching network					
18	Repeat steps 10 - 17 as necessary to obtain correct tuning on dial and the maximum indication of signal meter with uniform sensitivity throughout the band					
19	<u>FM Signal Generator</u> Across FM antenna terminals(300-ohm)	Reduce the output level to zero (interstation receiving state)	93MHz	Oscilloscope DistortionMeter AC VTVM OUT	T203 top core T203 bottom core	Center indication of the tuning meter
20	through matching network	93MHz at 400Hz 100% modulation, output level 1mV				Minimum distortion. At the minimum distortion setting, the output level must be within 1/2dB of peak output
21		88MHz at 400Hz 100% modulation	88MHz			IHF maximum usable sensitivity which is the minimum output level of FMSG required for distortion and noise to be -30dB of total output
22		108MHz at 400Hz 100% modulation	108MHz			
23	Set muting switch at "on"					
24	<u>FM Signal Generator</u> Across FM antenna terminals(300-ohm)	98MHz at 400Hz 100% modulation, generator output level 1mV	98MHz	Oscilloscope AC VTVM OUT	VR205	Adjust to read 90% of full scale of meter
25	through matching network	98MHz at 400Hz 100% modulation output level 7 uV			VR204	Fix VR204 at the point where output signals appear (muting adjustment)
26	Set selector switch to "FM auto", muting switch to "off"					
27	<u>FM Signal Generator</u> Across FM antenna terminals(300-ohm)	98MHz at 400Hz 100% modulation, generator output level 1mV	98MHz	Frequency Counter	VR202	Adjust VR202 until 19.00KHz is read at TP206 on the frequency counter
28	through matching network	98MHz at 19KHz 10% L(or R) stereo 90% modulation output level 1mV	98MHz	Oscilloscope AC VTVM OUT	VR201	Maximum separation
29		98MHz at 19Khz 5% L (or R) stereo 90% modulation output level 1mV			VR203	Adjust VR203 until the stereo indicator lamp lights up
30	Set selector switch to "AM" position					
31	Adjust VR206 at its extreme counter-clockwise position					

STEP	<u>Signal Scource</u> Connected to	Set Signal to	Set Radio Dial to	Output Indicator Connected to	Adjust	Adjust for
32	<u>Sweep Generator</u> TC1, through 1uF mylar capacitor	+20 - 25KHz sweep centered at 455KHz generator output level 3mV	Quiet point on band near 1600KHz	Oscilloscope PB1004 TP207	T206	Maximum amplitude Do not adjust for two humps Symmetrical response with flat top
33	<u>AM Signal Generator</u> Standard radiating loop antenna placed near AM built-in antenna	600KHz at 400Hz 30% modulation field strength 50dB/m	600KHz	Oscilloscope AC VTVM OUT	T205 core	Accurate indication of pointer on dial to within \pm 1 pointer width
34					L1 core	Maximum reading on AC VTVM
35		1400KHz at 400Hz 30% modulation, field strength 50dB/m	1400KHz		TC 2	Accurate indication of pointer on dial to within \pm 1 pointer width
36					TC 1	Maximum reading on AC VTVM
37	Repeat steps 33 - 36 as necessary to obtain exact tuning on dial scale and maximum sensitivity					
38	<u>AM Signal Generator</u> Standard radiating loop antenna placed near AM built in antenna	1000KHz at 400Hz 30% modulation, field strength 100dB/m	1000KHz		VR206	Adjust to read 90% of full scale of meter

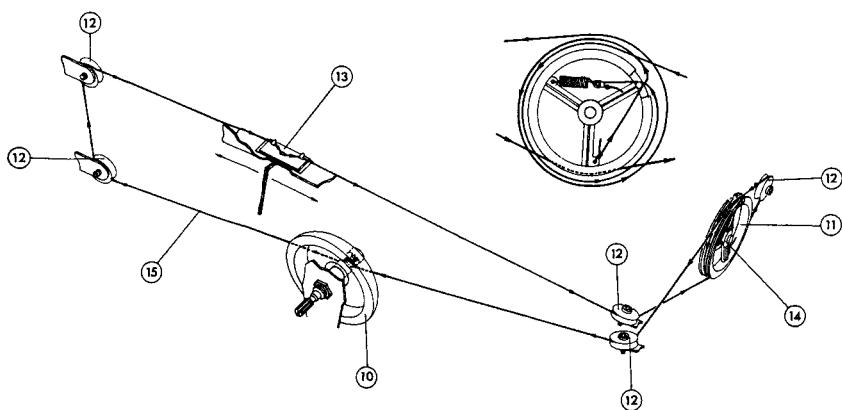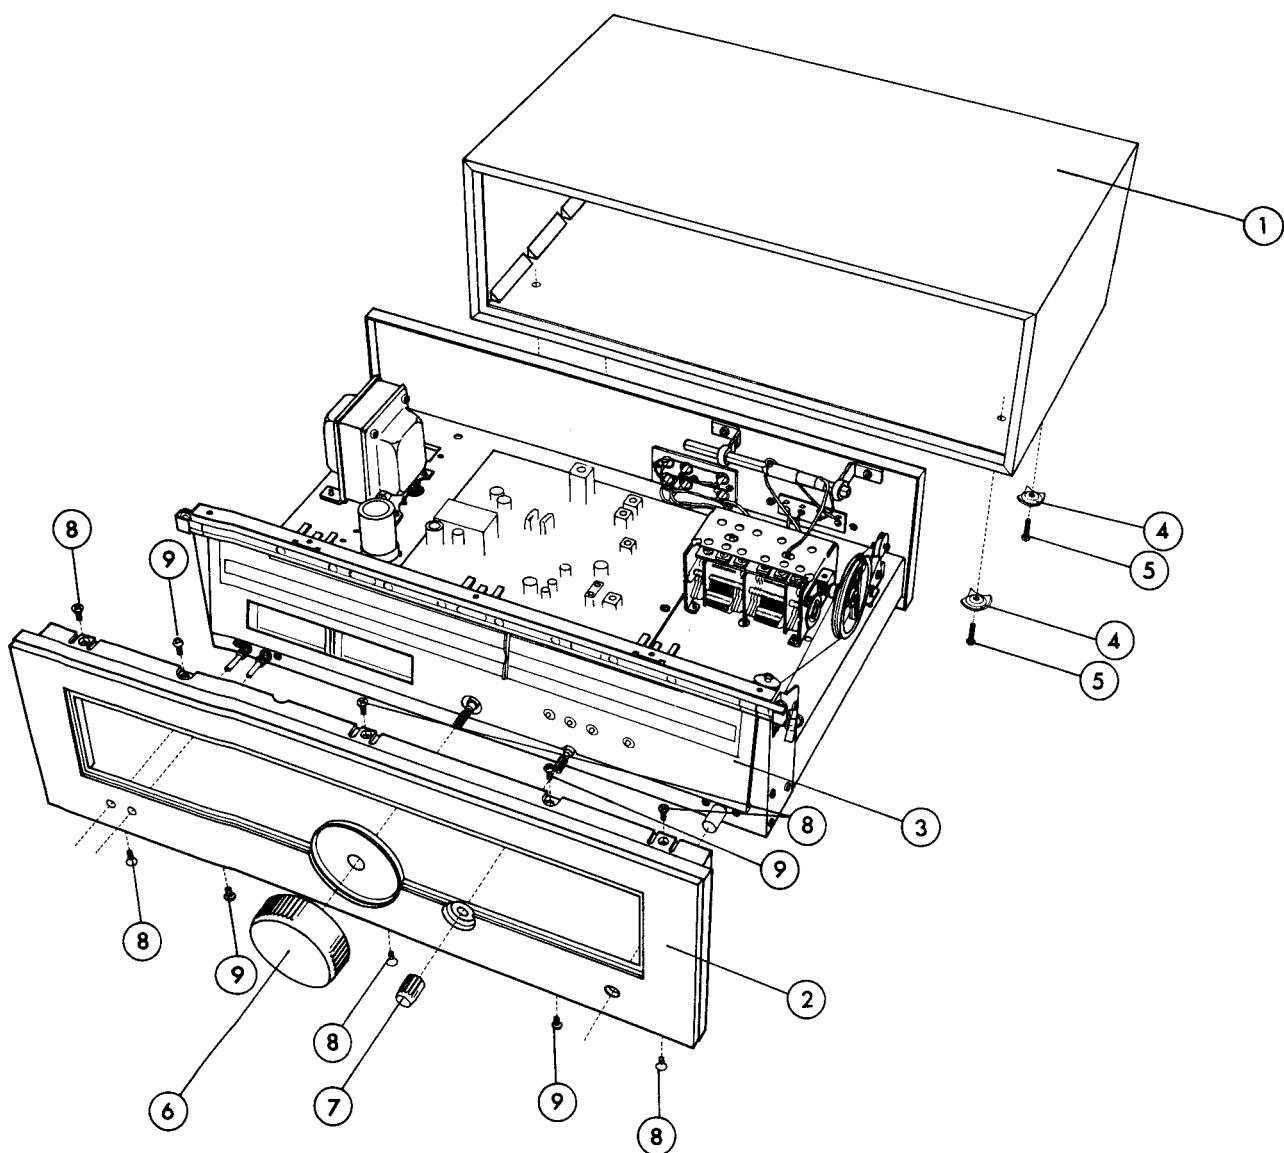



- 1 Cover
- 2 Panel (Front Complete Ass'y)
- 3 Dial Scale
- 4 Washer 4mm
- 5 Screw 4mm x 15mm
- 6 Knob (Tuning)
- 7 Knob (Band Selector)
- 8 Screw 3mm x 6mm
- 9 Screw 3mm x 6mm
- 10 Tuning Shaft and Flywheel Ass'y
- 11 Drum (Tuning Capacitor)
- 12 Pully
- 13 Tuning Pointer Ass'y
- 14 Spring (Tension for Dial Cord)
- 15 Cord, Dial
- 16 Antenna for AM
- 17 FM Center Meter
- 18 Signal Meter
- 19 Power Trans # P-2037 U type model
P-1979 X type model
- 20 Type X model replaced by Voltage Selector

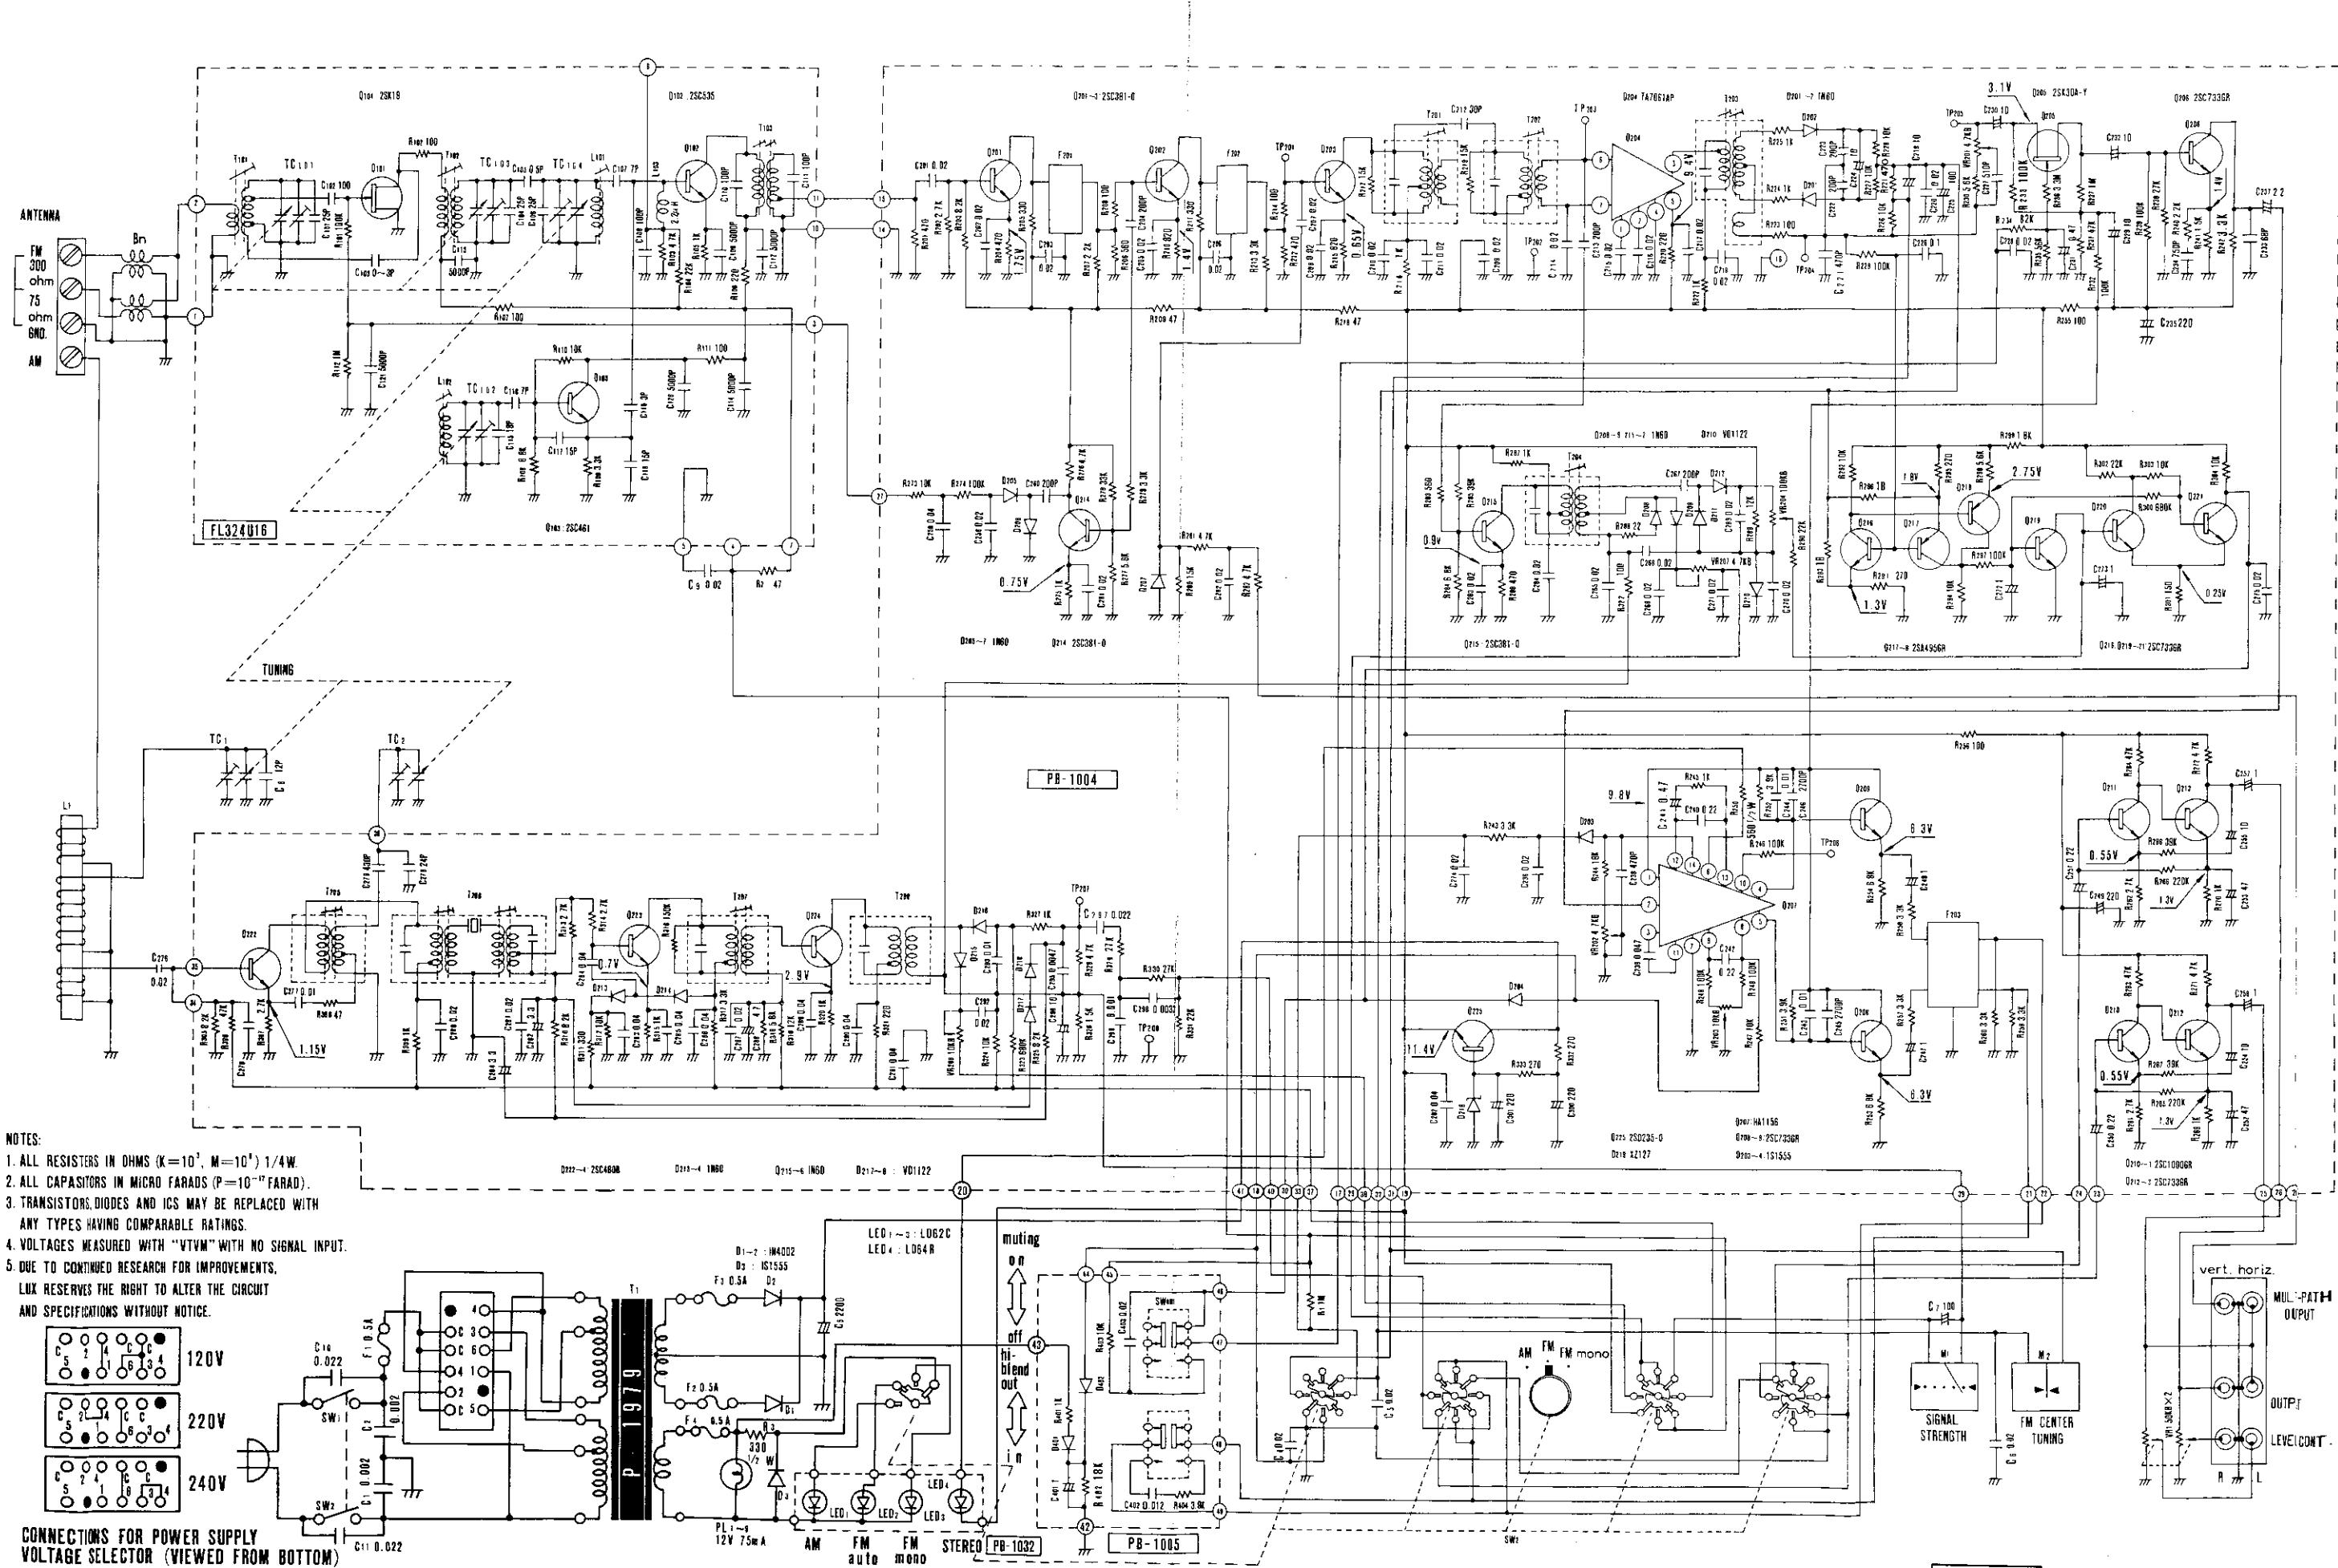

**CONNECTIONS FOR POWER SUPPLY
VOLTAGE SELECTOR (VIEWED FROM BOTTOM)**



T-88V

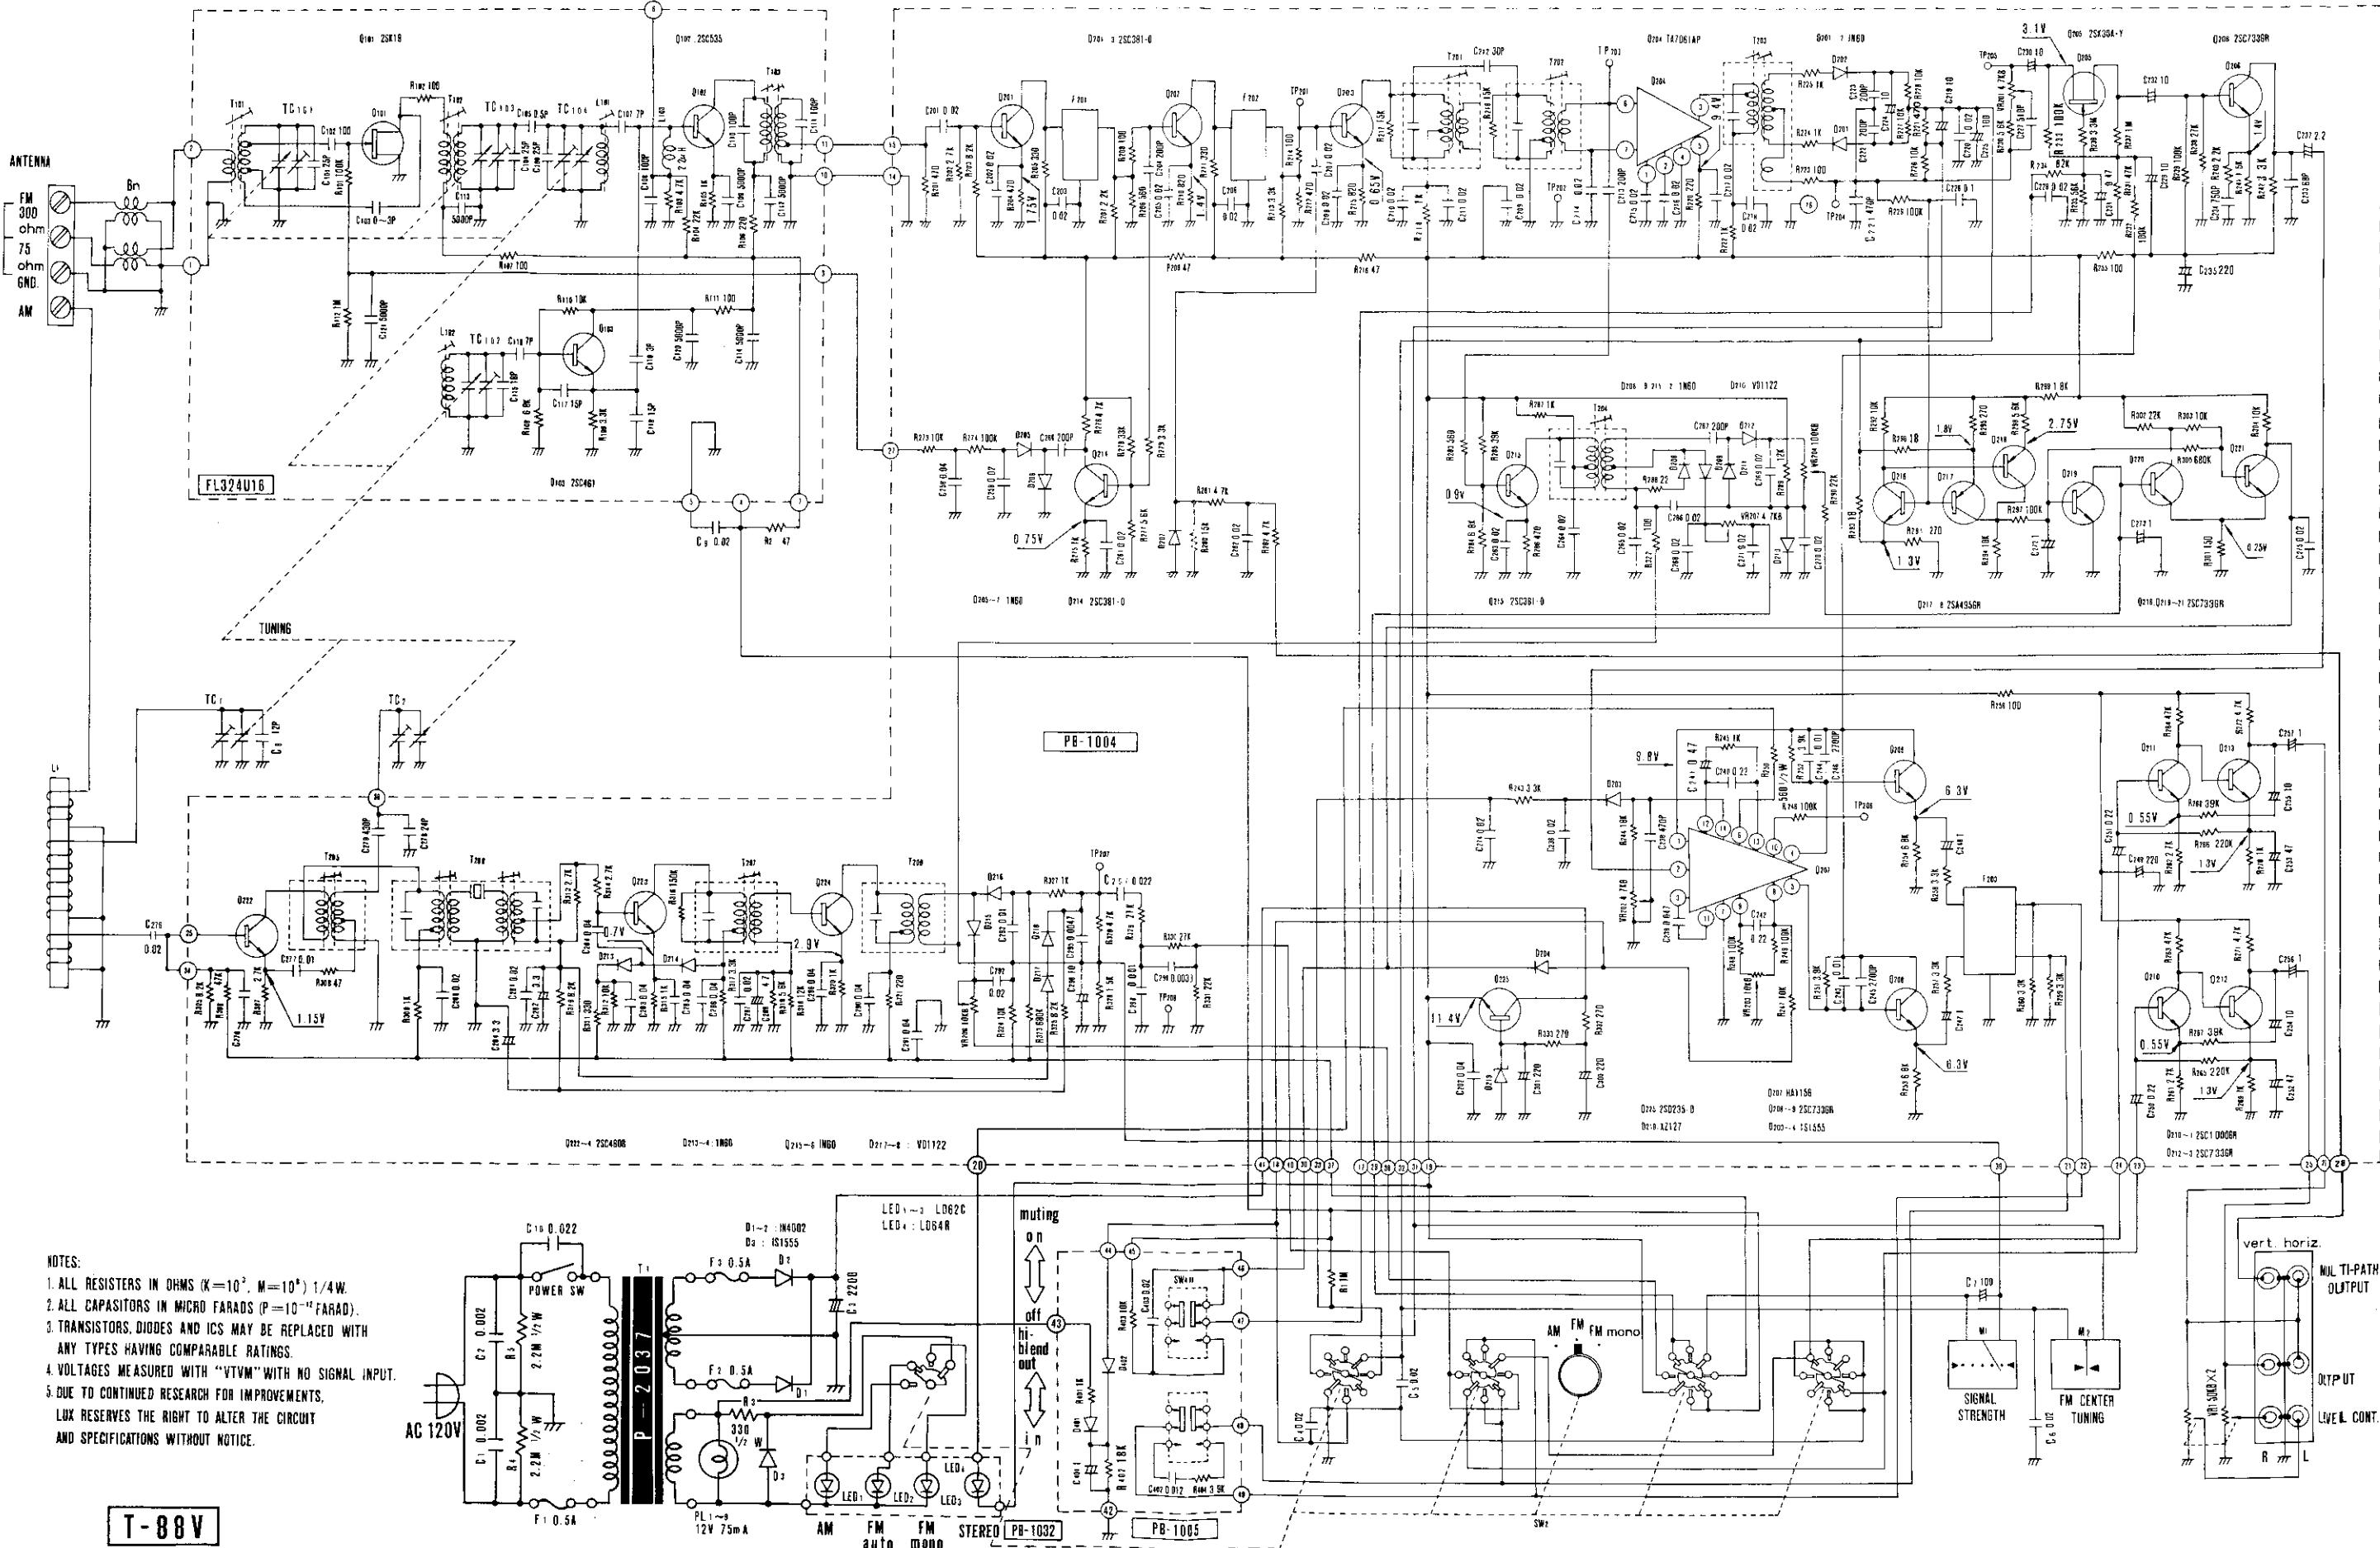

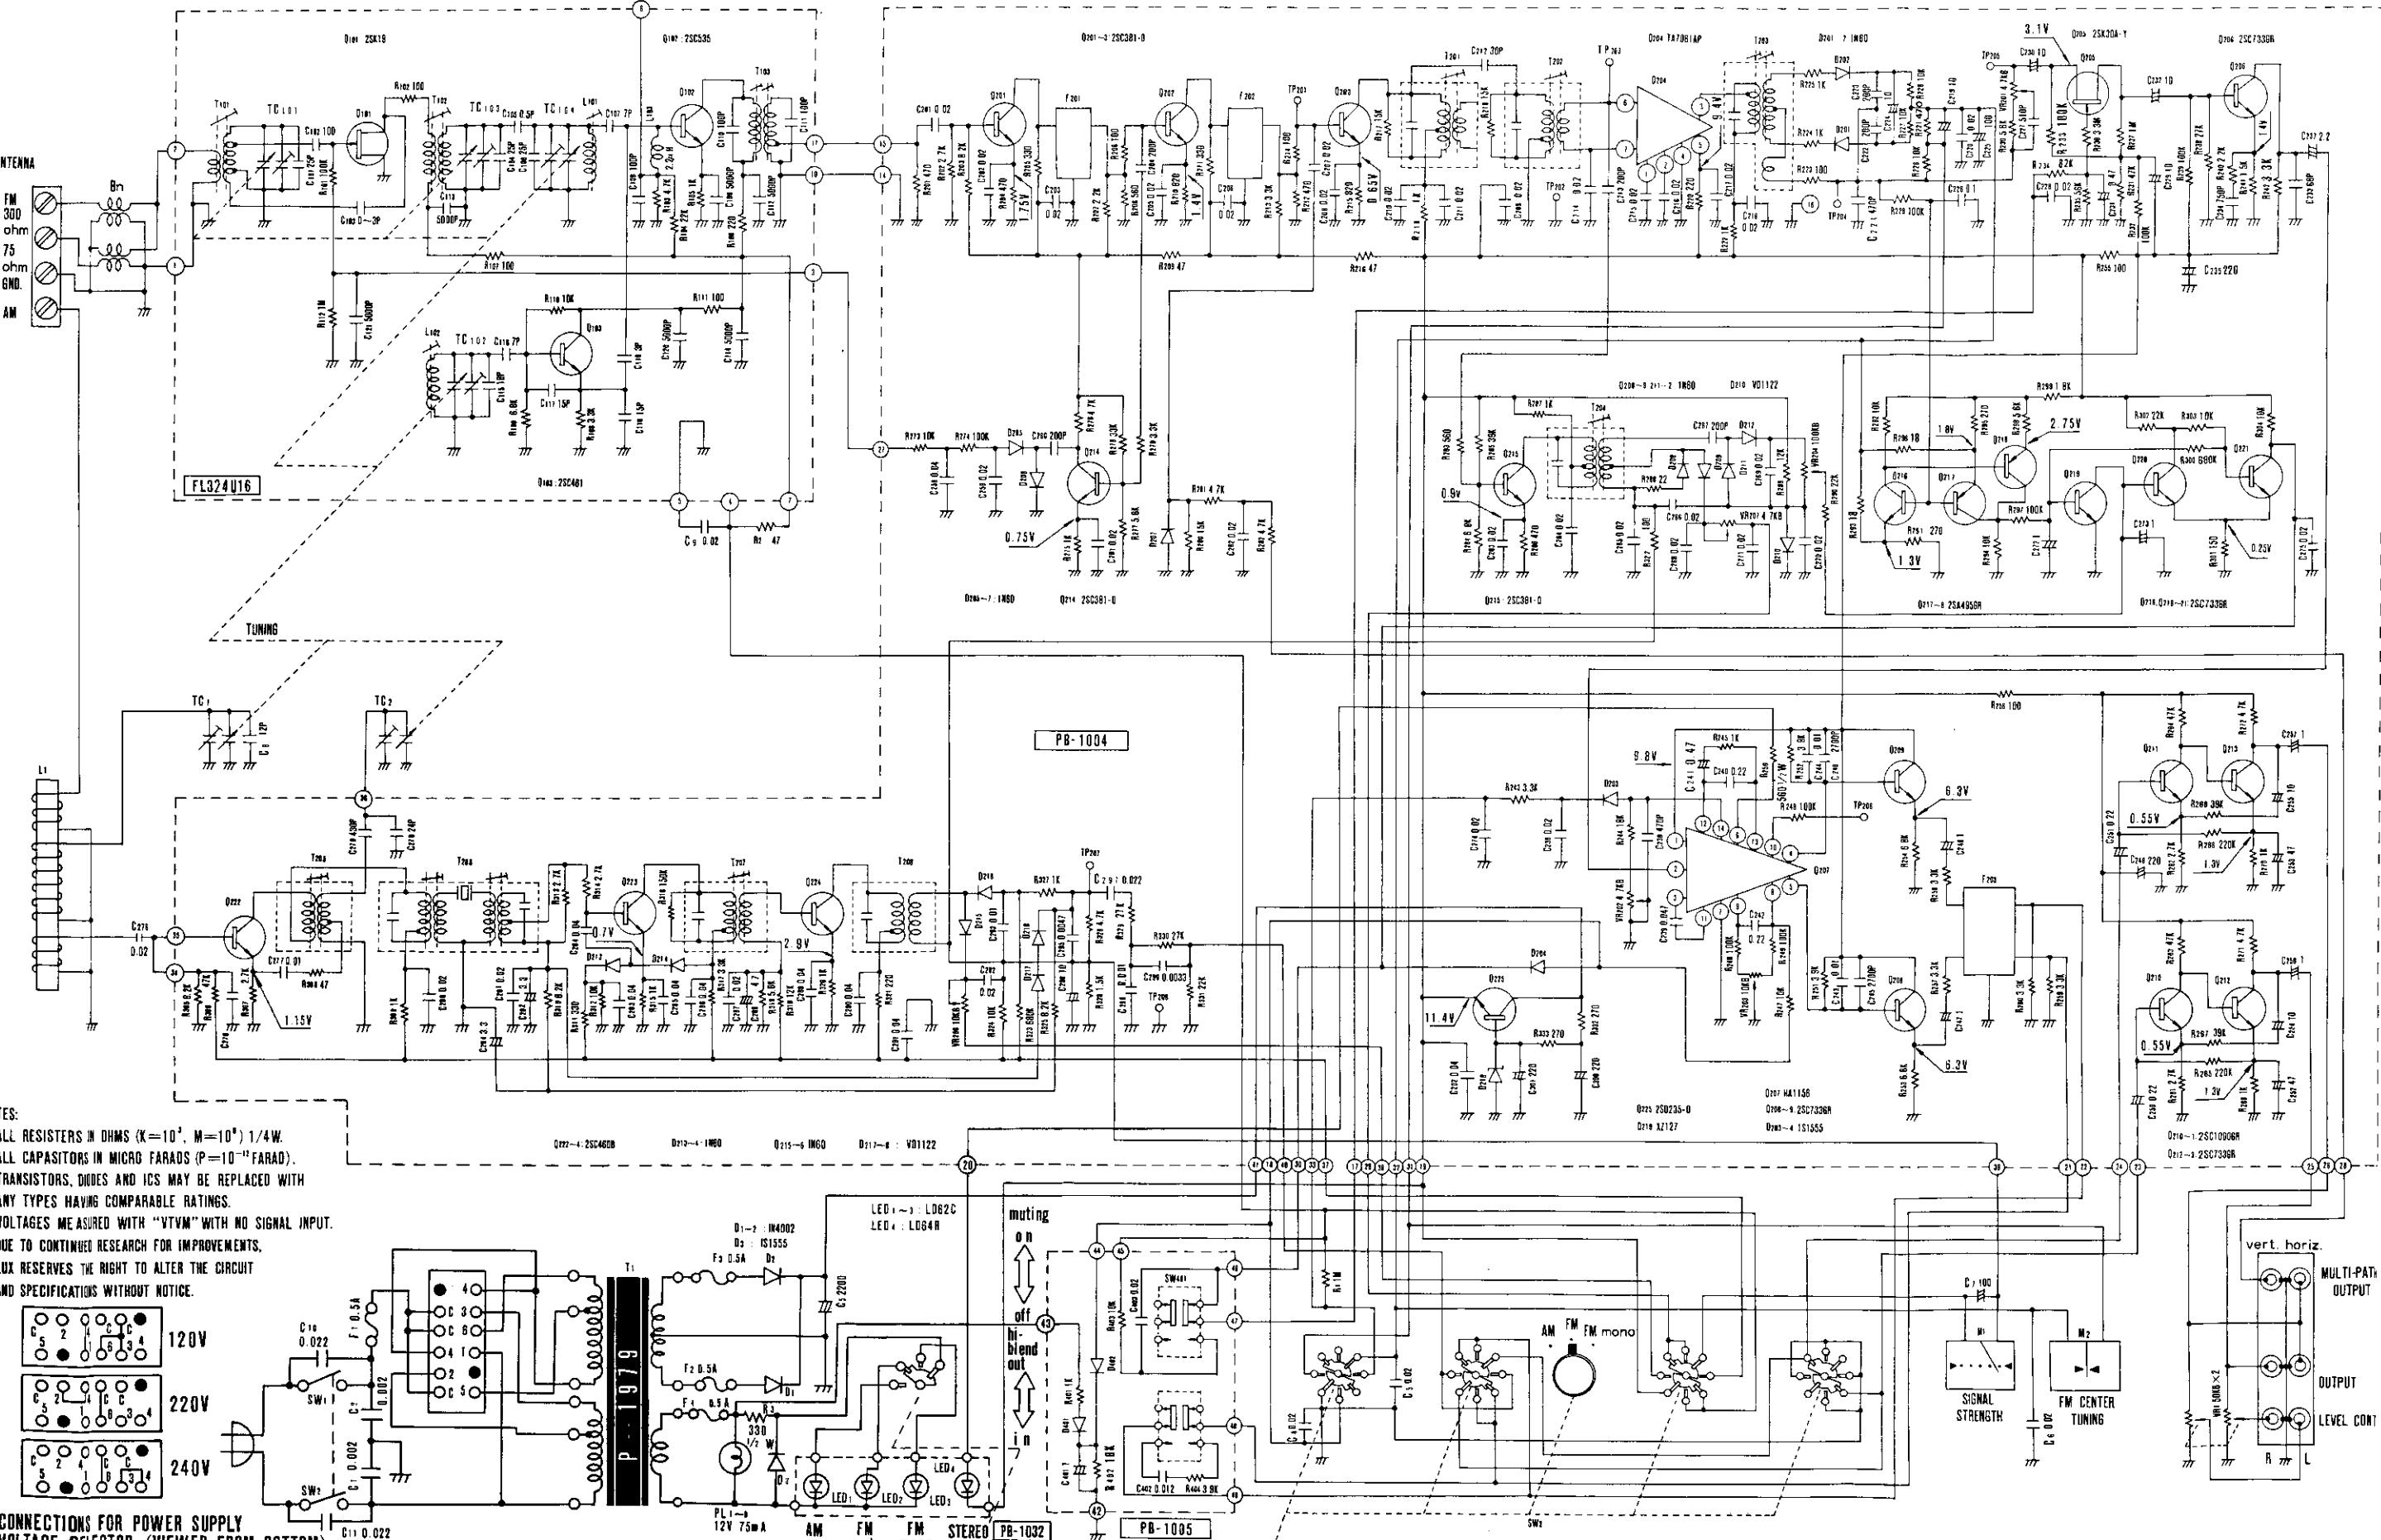

CONNECTIONS FOR POWER SUPPLY
VOLTAGE SELECTOR (VIEWED FROM BOTTOM)

T-88V

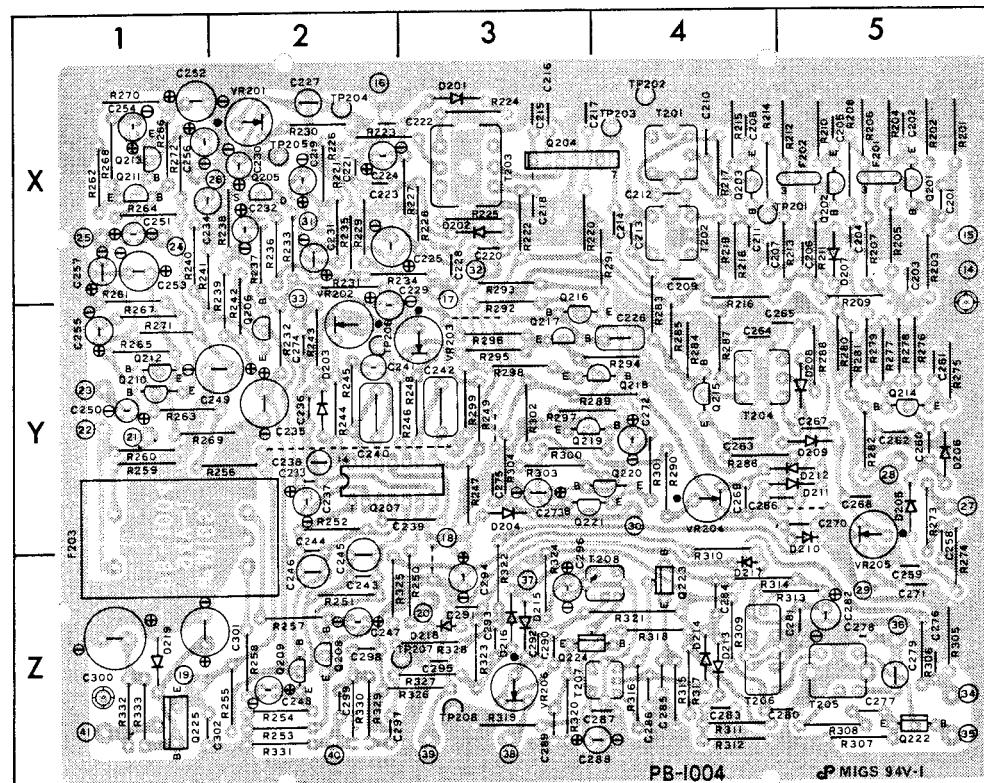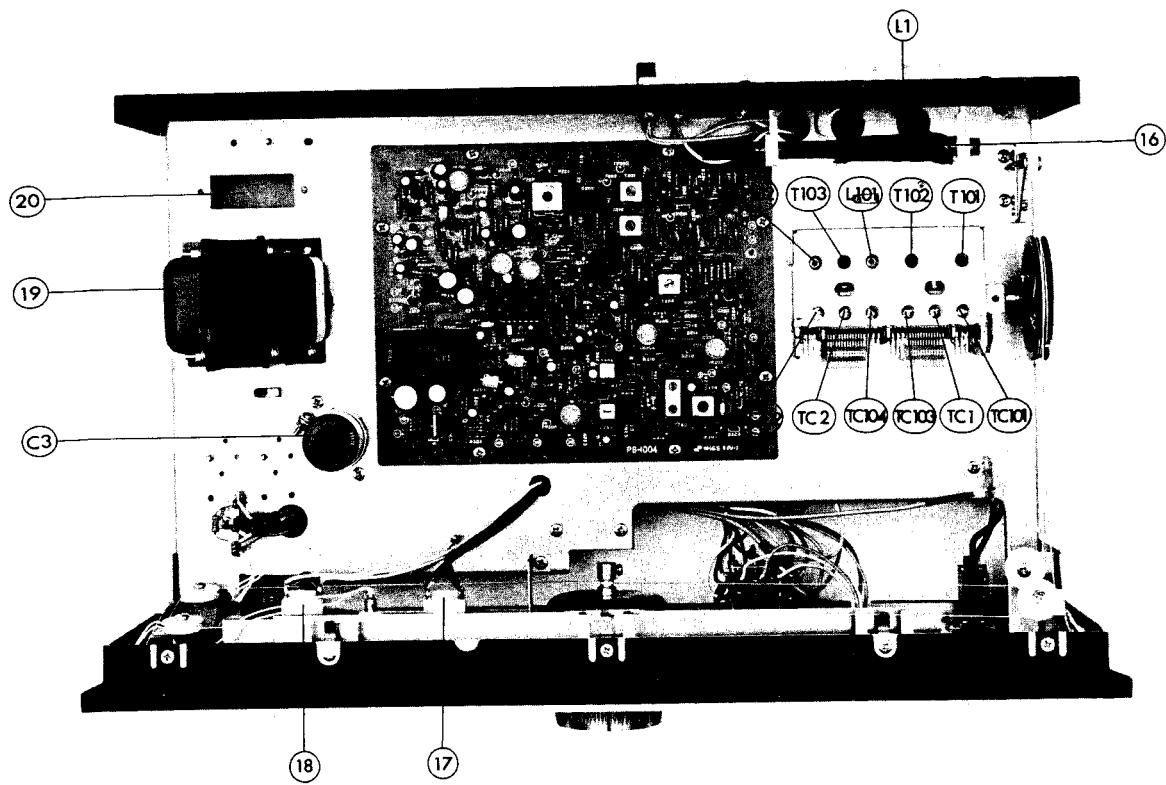

REPLACEMENT PARTS & LOCATION

RESISTORS; $\pm 10\%$ 1/4 watt deposited carbon, unless noted otherwise.

SYMBOL NO.

R201	470	X5	R240	2.2K	X1	R279	33K	Y5
202	2.7K	X5	241	1.5K	X1	280	15K	Y5
203	8.2K	X5	242	3.3K	Y2	281	4.7K	Y5
204	470	X5	243	3.3K	Y2	282	4.7K	Y5
205	330	X5	244	18K	Y2	283	560	Y4
206	560	X5	245	1K	Y2	284	6.8K	Y4
207	2.2K	X5	246	100K	Y2	285	39K	Y4
208	100	X5	247	10K	Y3	286	470	Y4
209	47	Y5	248	100K	Y3	287	1K	Y4
210	820	X5	249	100K	Y3	288	22Ω	Y4
211	330	X5	250	56K1/2W	Z3	289	12K	Y4
212	470	X5	251	3.9K	Y2	290	22K	Y4
213	3.3K	X5	252	3.9K	Y2	291	270	X4
214	100	X4	253	6.8K	Z2	292	10K	Y3
215	820	X4	254	6.8K	Z2	293	18	X3
216	47	Y4	255	100	Z2	294	10K	Y4
217	15K	X4	256	100	Y2	295	270	Y3
218	1K	X4	257	3.3K	Z2	296	18	Y3
219	15K	X4	258	3.3K	Z2	297	100K	Y3
220	220	X3	259	3.3K	Y1	298	5.6K	Y3
221	470	X2	260	3.3K	Y1	299	1.8K	Y3
222	1K	X3	261	2.7K	X1	300	680K	Y3
223	100	X2	262	2.7K	X1	301	150	Y4
224	1K	X3	263	47K	Y1	302	22K	Y3
225	1K	X3	264	47K	X1	303	10K	Y3
226	10K	X3	265	220K	Y1	304	10K	Y3
227	10K	X3	266	220K	X1	305	8.2K	Z5
228	10K	X3	267	39K	Y1	306	47K	Z5
229	100K	X2	268	39K	X1	307	2.7K	Z5
230	5.6K	X2	269	1K	Y1	308	47	Z5
231	47K	X2	270	1K	X1	309	1K	Z4
232	100K	X2	271	4.7K	Y1	310	8.2K	Z4
233	100K	X2	272	4.7K	X1	311	330	Z4
234	82K	X2	273	10K	Y5	312	10K	Z4
235	56K	X2	274	100K	Z5	313	2.7K	Z5
236	3.3M	X2	275	1K	Y5	314	2.7K	Z4
237	1M	X2	276	4.7K	Y5	315	1K	Z4
238	27K	X2	277	5.6K	Y5	316	150K	Z4
239	100K	X2	278	33K	Y5	317	3.3K	Z4
R318	12K	Z4	R327	1K	Z3	R 1	1M	
319	5.6K	Z3	328	4.7K	Z3	2	47	
320	1K	Z3	329	27K	Z2	3	330	1/2W
321	220	Z4	330	27K	Z2	4(U)	2.2M	1/2W
322	100	Z4	331	22K	Z2	5(U)	2.2M	1/2W
323	680K	Z3	332	270	Z1			
324	10K	Z3	333	270	Z1			
325	8.2K	Z2						
326	1.5K	Z3						

CAPACITORS

E...electrolytic, C...ceramic, S...styrol, T...tantalum, M...mylar

C201	0.02	+80% -20%	25V	C	X5	C219	10	+50% -10%	16V	E	X2	C237	2.2	+50% -10%	16V	E	Y2
202	0.02	"	"	C	X5	220	0.02	+80% -20%	25V	C	X3	238	470p	+5% -5%	25V	S	Y2
203	0.02	"	"	C	X5	221	470p	+20% -20%	25V	C	X2	239	0.047	+10% -10%	50V	M	Y3
204	200P	+10% -10%	25V	C	X5	222	200p	+10% -10%	25V	C	X2	240	0.22	"	50V	M	Y2
205	0.02	+80% -20%	25V	C	X5	223	200p	"	"	C	X2	241	4.7	+50% -20%	6.3V	T	Y2
206	0.02	"	"	C	X5	224	10	+50% -10%	16V	E	X2	242	0.22	+10% -10%	50V	M	Y3
207	0.02	"	"	C	X4	225	100	"	"	E	X2	243	0.01	"	50V	M	Z2
208	0.02	"	"	C	X4	226	0.1	+10% -10%	50V	M	Y4	244	0.01	"	"	M	Y2
209	0.02	"	"	C	X4	227	510p	+5% -5%	250V	S	X2	245	2700p	+5% -5%	25V	S	Z2
210	0.02	"	"	C	X4	228	0.02	+80% -20%	25V	C	Y3	246	2700p	"	"	S	Z2
211	0.02	"	"	C	X4	229	10	+50% -10%	16V	E		247	1	+75% -10%	50V	E	Z2
212	30P	+10% -10%	25V	C	X4	230	10	+50% -20%	16V	T	Y2	248	1	"	"	E	Z2
213	200p	"	"	C	X4	231	0.47			E	Y2	249	220	+50% -10%	16V	E	Y1
214	0.02	+80% -20%	25V	C	X4	232	10	+50% -20%	16V	T	Y2	250	0.22	+50% -20%	35V	T	Y1
215	0.02	"	"	C	X3	233	68p	+10% -10%	250V	C	Y2	251	0.22	"	"	T	X1
216	0.02	"	"	C	X3	234	750p	+5% -5%	250V	S	X1	252	47	+50% -10%	16V	E	X1
217	0.02	"	"	C	X3	235	220	+50% -10%	16V	E	Y2	253	47	"	"	E	X1
218	0.02	"	"	C	X3	236	0.02	+80% -20%	25V	C	Y2	254	10	"	"	E	X1

C255	10	+50%-10%	16V	E	Y1	C279	430p	+5%-5%	25V	S	Z5	C 1	2200p [oil(X), film(U)]
256	1	+75%-10%	50V	E	X1	280	0.02	+80%-20%	25V	C	Z4	2	2200p [oil(X), film(U)]
257	1	"	"	E	X1	281	0.02	"	"	C	Z5	3	2200 +50%-10% 25V E
258	0.04	+80%-20%	25V	C	Y5	282	3.3	+75%-10%	25V	E	Z5	4	0.02 +80%-20% 25V C
259	0.02	"	"	C	Z5	283	0.04	+80%-20%	25V	C	Z4	5	0.02 " " C
260	200p	+10%-10%	"	C	Y5	284	0.04	"	"	C	Z4	6	0.02 " " C
261	0.02	+80%-20%	"	C	Y5	285	0.04	"	"	C	Z4	7	100 +50%-10% 16V E
262	0.02	"	"	C	Y5	286	0.04	"	"	C	Z4	8	12p +10%-10% 25V C
263	0.02	"	"	C	Y4	287	0.02	"	"	C	Z4	9	0.02 +80%-20% 25V C
264	0.02	"	"	C	Y4	288	4.7	+75%-10%	25V	E	Z4	10	0.022
265	0.02	"	"	C	Y4	289	0.04	+80%-20%	"	C	Z3	11	0.022
266	0.02	"	"	C	Y4	290	0.04	"	"	C	Z3		
267	200p	+10%-10%	25V	C	Y5	291	0.04	"	"	C	Z3		
268	0.02	+80%-20%	25V	C	Y5	292	0.02	"	"	C	Z3		
269	0.02	"	"	C	Y4	293	0.01	"	"	C	Z3		
270	0.02	"	"	C	Y5	294	3.3	+75%-10%	25V	C	Z3		
271	0.02	"	"	C	Z5	295	0.0047	+10%-10%	M	Z3			
272	1	+75%-10%	16V	E	Y4	296	10	+50%-10%	16V	E	Z3		
273	1	"	"	E	Y3	297	0.02	+10%-10%	M	Z2			
274	0.02	+80%-20%	25V	C	Y2	298	0.001	"	M	Z2			
275	0.02	"	"	C	Y3	299	0.0033	"	M	Z2			
276	0.02	"	"	C		300	220	+50%-10%	16V	E	Z1		
277	0.01	"	"	C	Z5	301	220	"	"	E	Z1		
278	24p	+10%-10%	"	C	Z5	302	0.04	+80%-20%	25V	C	Z1		

<u>TRANSISTORS & IC's</u>			<u>DIODES</u>			<u>L.E.D.'s</u>		
Q201	2SC381	X5	D201	IN60		X3	LED 1	LD62C
202	2SC381	X5	202	IN60		X3	LED 2	LD62C
203	2SC381	X4	203	IS1555		Y2	LED 3	LD62C
204	TA7061AP	X3	204	IS1555		Y3	LED 4	LD64R
205	2SK30A	X2	205	IN60		Y5		
206	2SC733	Y2	206	IN60		Y5		
207	HA1156W	Y2	207	IN60		Y5		
208	2SC733	Z2	208	IN60		Y5		
209	2SC733	Z2	209	IN60		Y5		
210	2SC1000	Y1	210	VD1122		Y5		
211	2SC1000	X1	211	IN60		Y5		
212	2SC733	Y1	212	IN60		Y5		
213	2SC733	X1	213	IN60		Z4		
214	2SC381	Y5	214	IN60		Z4		
215	2SC381	Y4	215	IN60		Z3		
216	2SC733	Y3	216	IN60		Z3		
217	2SA495	Y3	217	VD1122		Z4		
218	2SA495	Y4	218	VD1122		Z3		
219	2SC733	Y3	219	WZ120		Z1		
220	2SC733	Y3					SW 1	push sw
221	2SC733	Y3					SW 2	4-8-3 rotary sw
222	2SC460	Z5	D 1	IN4002				
223	2SC460	Z4	2	IN4002				
224	2SC460	Z3	3	IS1555				
<u>VARIABLE RESISTORS</u>								
VR201	4.7K-B							X2
202	4.7K-B							Y2
203	10K-B							Y3
204	100K-B							Y4
205	4.7K-B							Y5
206	10K-B							Z3
VR 1	50K-B x 2 chassis							
<u>SWITCH</u>								
SW401	2-2	push sw						
SW402	2-2	push sw						
SW 1		push sw						
SW 2								

<u>TRANSFORMER & FILTERS</u>			<u>chassis</u>			<u>chassis</u>		
T1	power trans					T101	FM ANT COIL	FM frontend
	P-1979 (E)					102	FM RF COIL	FM frontend
	P-2037 (U)					103	FM IFT	FM frontend
T201	154AC-40716N		X4			L101	FM RF COIL	FM frontend
202	154AC-40716N		X4			102	FM OSC COIL	FM frontend
203	MV4FCC-20600BW		X3			L 1	5638	
204	154AC-40783AIS		Y4			F201	CFSA-30AC-10	X5
205	RWR-41097A		Z5			202	CFSA-30AC-10	
206	CFT-455B		Z4			203	LUX-14562	Y1
207	7LC-352713N9		Z4					
208	159GC-1008A		Z4					

PB-1005

R401	1K	+10%-10%	1/4W	deposited carbon		C401	1u	+75%-10%	50V E
402	18K	"	"	"		402	0.012	+10%-10%	50V M
403	10K	"	"	"		403	0.02	+80%-20%	25V C
404	3.9K	"	"	"		D401	IN60	diode	
						402	IS1555	diode	

LUX CORPORATION, JAPAN

HEAD OFFICE & FACTORY 1-8-31 NAGAHASHI, NISHINARI-KU, OSAKA
PHONES: 632 0031 CABLE: LUXELECT OSAKA
TELEX: J63694

LUX AUDIO OF AMERICA LTD.

200 AERIAL WAY, SYOSSET, NEW YORK 11791, U.S.A.
PHONE: (516)822-7070