

R6.6  
**ECC 808**  
460 014 19



R6.6  
**ECC 808**  
460 014 19

R6.8  
**ECC 82**  
460 001 19

R6.9  
**ELL 80**  
460 051 19

nur bei Arabella

V20	V21	V22	V23
470.100.12	470.100.12	470.007.14	470.007.14

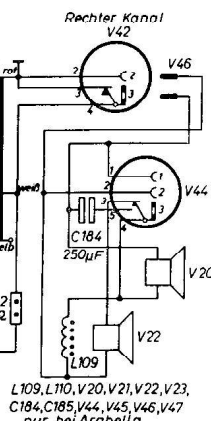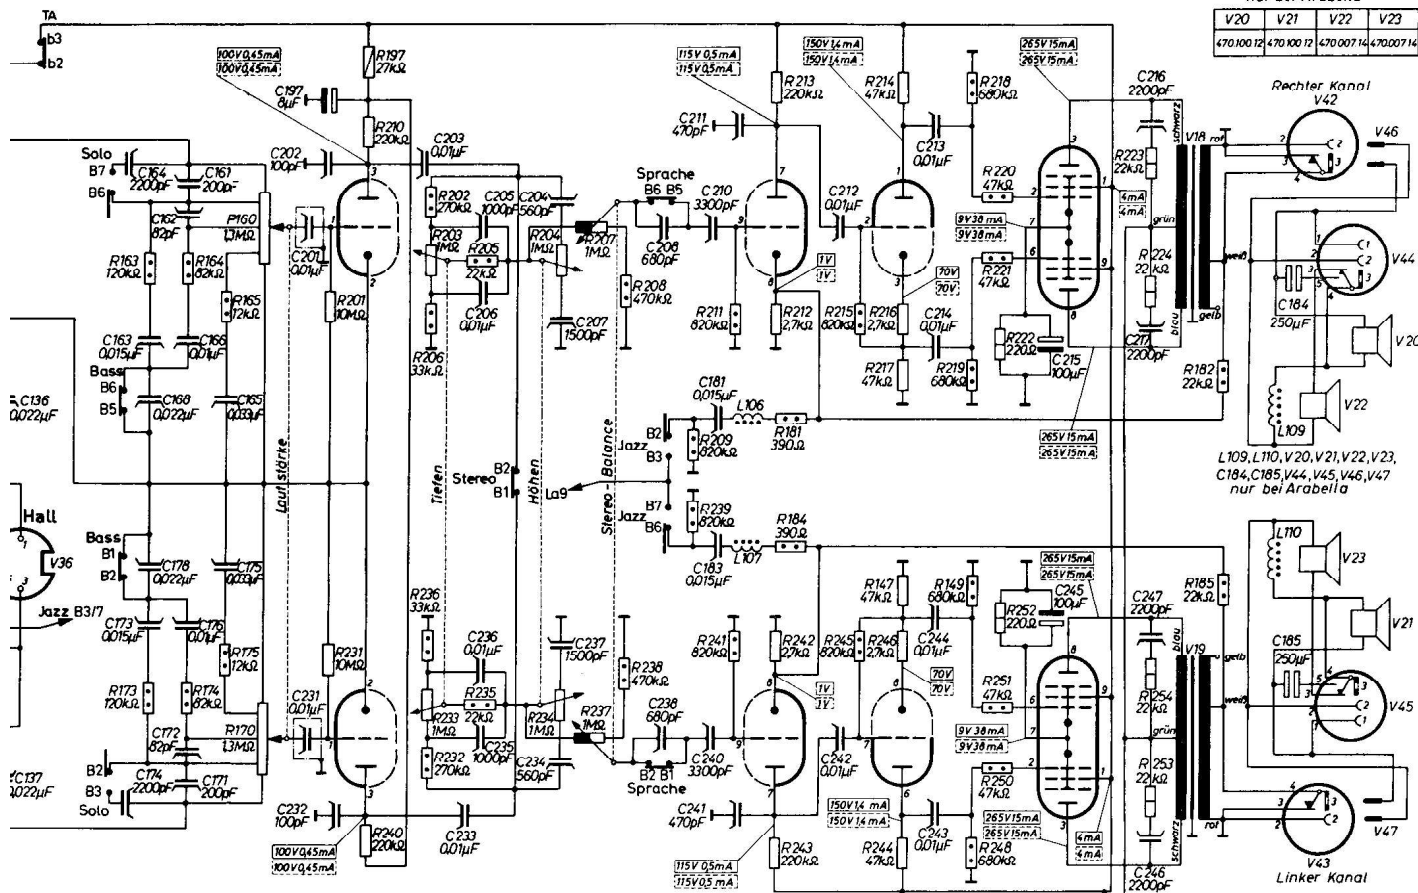



L109, L110, V20, V21, V22, V23, C184, C185, V44, V45, V46, V47 nur bei Arabella

R6.7  
**ECC 808**  
460 014 19



R6.7  
**ECC 808**  
460 014 19

R6.8  
**ECC 82**  
460 001 19

R6.10  
**ELL 80**  
460 051 19


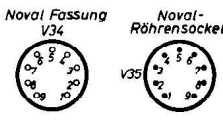
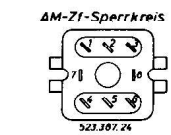


Alle Buchsen u. Fassungen von der Einsteckseite gesehen  
Alle Stecker u. Röhren von der Stiftseite gesehen

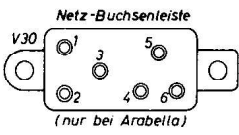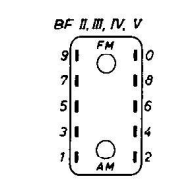


W-Anschlüsse, Ansicht  
ungseite

75	76	77	78	79	80
470pF	1000pF	5pF	220pF	5µF	
S.500-	0.500-	S.500-	R.800-	443.351	
					624-077
740	141	142	143	144	145
5µF	3300pF	220pF	220pF	220pF	
443.087	R.500	R.563-	R.563-	R.563-	
47kΩ	22kΩ	0.125W	0.125W		
0.125W					
218	219	220	221	222	223
680kΩ	680kΩ	47kΩ	47kΩ	220 Ω	22kΩ
0.125W	0.125W	0.125W	0.125W	1W	1W
324	325	326	327	328	329
1kΩ	3kΩ	10kΩ	10kΩ		
0.125W	402.489	402.489	402.489		
45	46	47			
lautsprecherbuchse	lautsprecherbuchse	lautsprecherbuchse			
174.151.14	175.105.14	175.105.14			

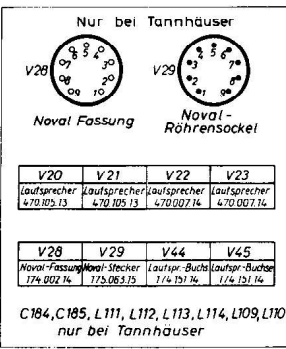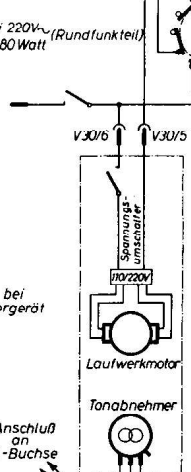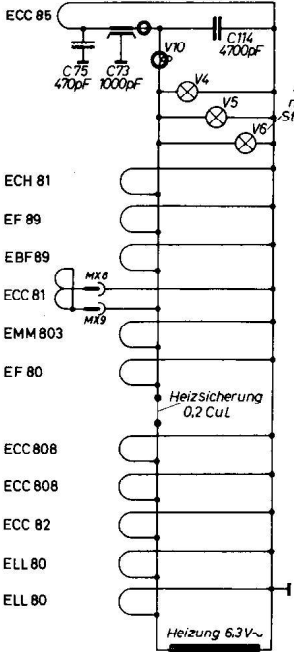

V20	V21	V22	V23
lautsprecher	lautsprecher	lautsprecher	lautsprecher
470.103.13	470.105.13	470.007.14	470.007.14
V28	V29	V44	V45
Noval-Fassung/Noval-Stecker	Noval-Stecker	Lautspr.-Buchse	Lautspr.-Buchse
174.002.14	175.063.15	1/4.151.14	1/4.151.14

C184, C185, L111, L112, L113, L114, L109, L110 nur bei Tannhäuser

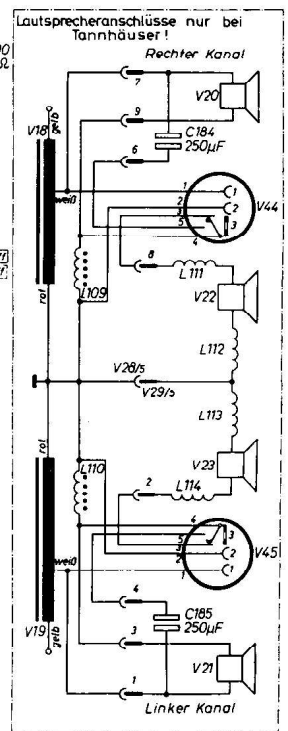

**NORDMENDE**

8+1/2-Kreis-Super  
**6/634**  
Stereo

Steuergerät 3004, Arabella,  
Tannhäuser