


SHARP SERVICE MANUAL

No. S5431XLMP100H

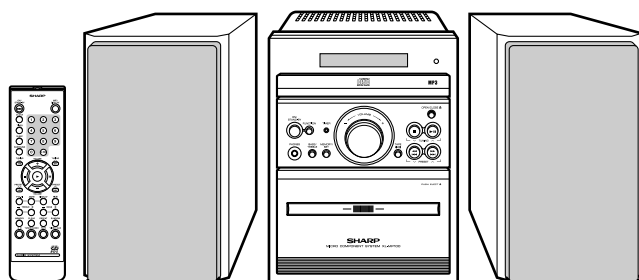

MICRO COMPONENT SYSTEM MODEL XL-MP100H

XL-MP100H Micro Component System consisting of XL-MP100H (main unit) and CP-MP100H (speaker system).



CD-R/RW
Playable



MP3

(Except for U.K.)

• In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified be used.

• Note for users in U.K.

Recording and playback of any material may require consent which SHARP is unable to give. Please refer particularly to the provisions of Copyright Act 1956, the Dramatic and Musical Performers Protection Act 1956, the Performers Protection Acts 1963 and 1972 and to any subsequent statutory enactments and orders.

CONTENTS

CHAPTER 1. GENERAL DESCRIPTION

- [1] SAFETY PRECAUTION FOR SERVICE MANUAL 1-1
- [2] IMPORTANT SERVICE NOTES (FOR U.K. ONLY) 1-1
- [3] SPECIFICATIONS 1-2
- [4] NAMES OF PARTS 1-3

CHAPTER 2. ADJUSTMENTS

- [1] ADJUSTMENT 2-1
- [2] TEST MODE 2-2

CHAPTER 3. MECHANICAL DESCRIPTION

- [1] REMOVING AND REINSTALLING THE MAIN PARTS 3-1
- [2] DISASSEMBLY 3-3

CHAPTER 4. DIAGRAMS

- [1] BLOCK DIAGRAM 4-1

CHAPTER 5. CIRCUIT DESCRIPTION

- [1] WAVEFORMS OF CD CIRCUIT 5-1
- [2] VOLTAGE 5-2

CHAPTER 6. CIRCUIT SCHEMATICS AND PARTS LAYOUT

- [1] NOTES ON SCHEMATIC DIAGRAM 6-1
- [2] TYPES OF TRANSISTOR AND LED 6-1
- [3] WIRING SIDE OF PWB/SCHEMATIC DIAGRAM 6-2

CHAPTER 7. CD CLEANER

- [1] When the CD does not function 7-1

CHAPTER 8. OTHERS

- [1] FUNCTION TABLE OF IC 8-1
- [2] LCD DISPLAY 8-12

Parts Guide



CHAPTER 1. GENERAL DESCRIPTION

[1] SAFETY PRECAUTION FOR SERVICE MANUAL

Precaution to be taken when replacing and servicing the Laser Pickup.

The AEL (Accessible Emission Level) of Laser Power Output for this model is specified to be lower than Class 1 Requirements. However, the following precautions must be observed during servicing to protect your eyes against exposure to the Laser beam.

- 1) When the cabinet has been removed, the power is turned on without a compact disc, and the Pickup is on a position outer than the lead-in position, the Laser will light for several seconds to detect a disc. Do not look into the Pickup Lens.
- 2) The Laser Power Output of the Pickup inside the unit and replacement service parts have already been adjusted prior to shipping.
- 3) No adjustment to the Laser Power should be attempted when replacing or servicing the Pickup.
- 4) Under no circumstances look directly into the Pickup Lens at any time.
- 5) CAUTION - Use of controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.

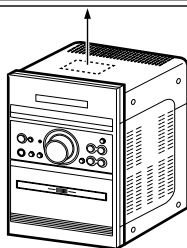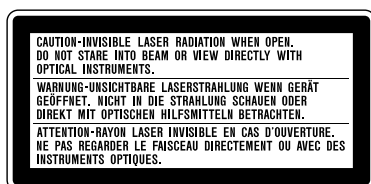

Laser Diode Properties
Material: GaAlAs
Wavelength: 780 nm
Emission Duration: continuous
Laser Output: max. 0.6 mW

ADVERSEL-SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING.
SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.
VARO! AVATTAESSA OLET ALTTIINA NÄKYVÄLLE JA NÄKYMÄTTÖMÄLLE
LASERSÄTEILYLLE ÄLÄ TUIJOTA SÄTEESEEN ÄLÄKÄ KATSO SITÄ
OPTISEN LAITTEEN LÄPI.
VARNING-SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA
DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRÄKTA EJ
STRÅLEN GENOM OPTISKT INSTRUMENT.


**VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ
KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA
ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1
YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.
VARNING - OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN
I DENNA BRUKSANVISNING SPECIFICERAS. KAN
ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASER-
STRÅLNING, SOM ÖVERSKRIDER GRÄNSEN FÖR
LASERKLASS 1.**

[2] IMPORTANT SERVICE NOTES (FOR U.K. ONLY)

Before returning the unit to the customer after completion of a repair or adjustment it is necessary for the following withstand voltage test to be applied to ensure the unit is safe for the customer to use.

Setting of Withstanding Voltage Tester and set.

Set name	set value
Withstanding Voltage Tester	
Test voltage	4,240 VPEAK 3,000 VRMS
Set time	6 secs
Set current (Cutoff current)	4 mA
Unit	
Judgment	
OK: The "GOOD" lamp lights.	
NG: The "NG" lamp lights and the buzzer sounds.	

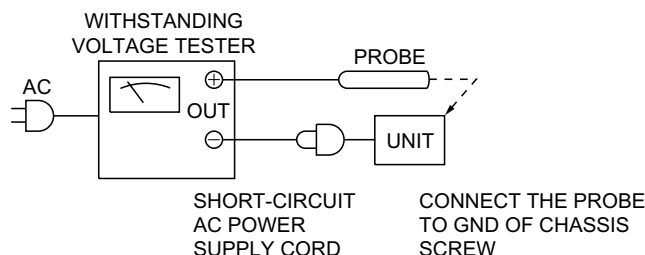

FOR A COMPLETE DESCRIPTION OF THE OPERATION OF THIS UNIT, PLEASE REFER TO THE OPERATION MANUAL.

[3] SPECIFICATIONS

Except for U.K.

■ General

Power source	AC 230 V, 50 Hz
Power consumption	Power on: 107 W Power stand-by: 0.6 W
Dimensions	Width: 160 mm (6-5/16") Height: 228 mm (9") Depth: 248 mm (9-13/16")
Weight	4.2 kg (9.3 lbs.)

■ Amplifier

Output power	PMPO: 300 W (total) MPO: 150 W (75 W + 75 W) (DIN 45 324) RMS: 100 W (50 W + 50 W) (DIN 45 324) RMS: 75 W (37.5 W + 37.5 W) (DIN 45 500)
Output terminals	Speakers: 6 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms) CD digital output (optical)
Input terminals	Video/Auxiliary (audio signal): 500 mV/47 k ohms

■ Tuner

Frequency range	FM: 87.5 - 108 MHz AM: 522 - 1,620 kHz
------------------------	---

■ CD player

Type	Compact disc player
Signal readout	Non-contact, 3-beam semiconductor laser pickup
D/A converter	1-bit D/A converter
Frequency response	20 - 20,000 Hz
Dynamic range	90 dB (1 kHz)

■ Cassette deck

Frequency response	50 - 14,000 Hz (normal tape)
Signal/noise ratio	50 dB (recording/playback)
Wow and flutter	0.3 % (DIN 45 511)

■ Speaker

Type	2-way type speaker system 4 cm (1-9/16") semi dome tweeter 9 cm (3-9/16") woofer
Maximum input power	100 W
Rated input power	50 W
Impedance	6 ohms
Dimensions	Width: 132 mm (5-3/16") Height: 228 mm (9") Depth: 197 mm (7-13/16")
Weight	2.0 kg (4.4 lbs.)/each

For U.K.

■ General

Power source	AC 230 - 240 V, 50 Hz
Power consumption	Power on: 107 W Power stand-by: 0.6 W
Dimensions	Width: 160 mm (6-5/16") Height: 228 mm (9") Depth: 248 mm (9-13/16")
Weight	4.2 kg (9.3 lbs.)

■ Amplifier

Output power	RMS: 100 W (50 W + 50 W) (10 % T.H.D.) RMS: 75 W (37.5 W + 37.5 W) (0.9 % T.H.D.)
Output terminals	Speakers: 6 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms) CD digital output (optical)
Input terminals	Video/Auxiliary (audio signal): 500 mV/47 k ohms

■ Tuner

Frequency range	FM: 87.5 - 108 MHz AM: 522 - 1,620 kHz
------------------------	---

■ CD player

Type	Compact disc player
Signal readout	Non-contact, 3-beam semiconductor laser pickup
D/A converter	1-bit D/A converter
Frequency response	20 - 20,000 Hz
Dynamic range	90 dB (1 kHz)

■ Cassette deck


Frequency response	50 - 14,000 Hz (normal tape)
Signal/noise ratio	50 dB (recording/playback)
Wow and flutter	0.25 % (WRMS)

■ Speaker

Type	2-way type speaker system 4 cm (1-9/16") semi dome tweeter 9 cm (3-9/16") woofer
Maximum input power	100 W
Rated input power	50 W
Impedance	6 ohms
Dimensions	Width: 132 mm (5-3/16") Height: 228 mm (9") Depth: 197 mm (7-13/16")
Weight	2.0 kg (4.4 lbs.)/each

Specifications for this model are subject to change without prior notice.


[4] NAMES OF PARTS

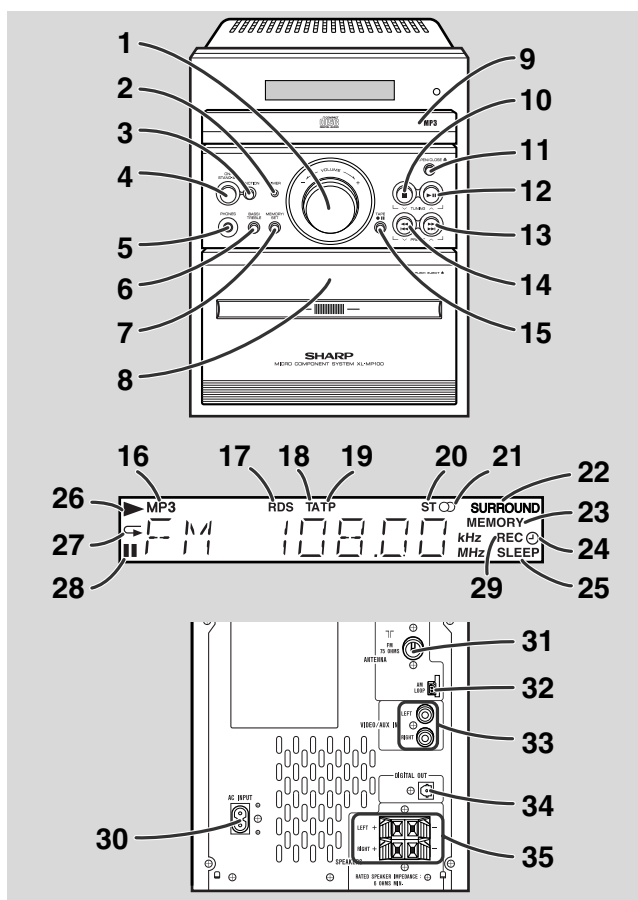


1. Volume Control
2. Timer Set Indicator
3. Function Selector Button
4. On/Stand-by Button
5. Headphone Socket
6. Bass/Treble Selector Button
7. Memory/Set Button
8. Cassette Compartment
9. Disc Tray
10. Disc or Tape Stop, Tuning Down Button
11. Disc Tray Open/Close Button
12. Disc Play or Pause, Tape Play, Tuning Up Button
13. Disc Track Up or Fast Forward, Tape Fast Forward, Tuner Preset Up Button
14. Disc Track Down or Fast Reverse, Tape Rewind, Tuner Preset Down Button
15. Tape Record Pause Button

16. MP3 Disc Indicator
17. RDS Indicator
18. Traffic Announcement Indicator
19. Traffic Programme Indicator
20. FM Stereo Mode Indicator
21. FM Stereo Receiving Indicator
22. Surround Indicator
23. Memory Indicator
24. Timer Play Indicator
25. Sleep Indicator
26. Disc Play Indicator
27. Disc Repeat Indicator
28. Disc Pause Indicator
29. Tape Record Indicator

30. AC Power Input Socket
31. FM 75 Ohms Aerial Socket
32. AM Loop Aerial Socket
33. Video/Auxiliary (Audio Signal) Input Sockets
34. CD Digital Output Socket
35. Speaker Terminals

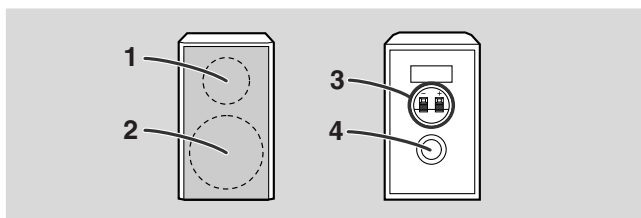

1. Tweeter
2. Woofer
3. Speaker Terminals
4. Bass Reflex Duct

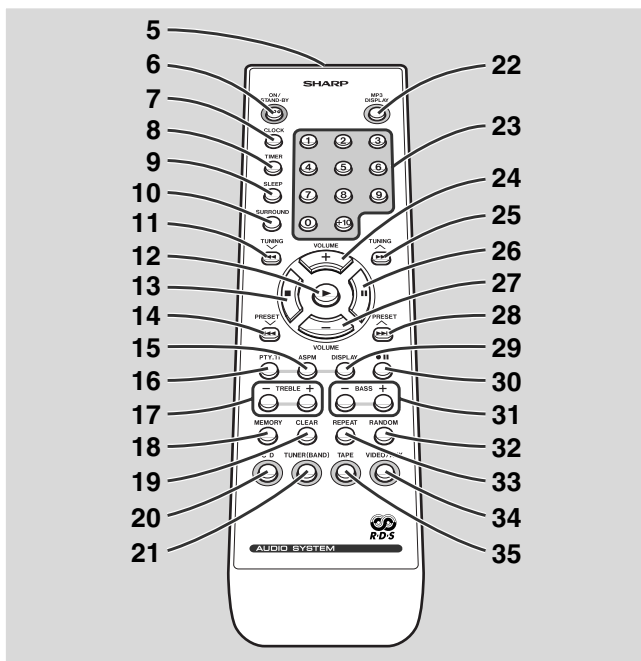

5. Remote Control Transmitter
6. On/Stand-by Button
7. Clock Button
8. Timer Button
9. Sleep Button
10. Surround Button
11. Disc Fast Reverse, Tuning Down, Tape Rewind Button
12. Disc or Tape Play Button
13. Disc or Tape Stop Button
14. Disc Track Down, Tuner Preset Down, Time Down Button
15. RDS ASPM (Auto Station Programme Memory) Button
16. RDS Programme Type/Traffic Information Search Button
17. Treble Up and Down Buttons
18. Memory Button
19. Disc Programme Clear Button
20. CD/MP3 Disc Button
21. Tuner and Band Selector Button
22. MP3 Disc Display Button
23. Direct Search Buttons
24. Volume Up Button
25. Disc Fast Forward, Tuning Up, Tape Fast Forward Button
26. Disc Pause Button
27. Volume Down Button
28. Disc Track Up, Tuner Preset Up, Time Up Button
29. RDS Display Mode Select Button
30. Tape Record Pause Button
31. Bass Up and Down Buttons
32. Disc Random Play Button
33. Disc Repeat Button
34. Video/Auxiliary Button
35. Tape Button

CHAPTER 2. ADJUSTMENTS

[1] ADJUSTMENT

1. MECHANISM SECTION

• Driving Force Check

Torque Meter	Specified Value
Play: TW-2111	Over 80 g

• Torque Check

Torque Meter	Specified Value
Play: TW-2111	30 to 80 g.cm
Fast forward: TW-2231	70 to 180 g.cm
Rewind: TW-2231	70 to 180 g.cm

• Tape Speed

Test Tape	Adjusting Point	Specified Value	Instrument Connection
MTT-111	Variable Resistor in motor.	3,000 $\pm$ 30 Hz	Speaker Terminal (Load resistance: 6 ohms)

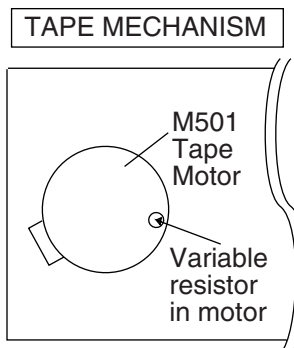


Figure 1

2. TUNER SECTION

fL: Low-range frequency

fH: High-range frequency

• AM IF/RF

Signal generator: 400 Hz, 30%, AM modulated

Test Stage	Frequency	Frequency Display	Setting/Adjusting Parts	Instrument Connection
IF	450 kHz	1,602 kHz	L305	*1
AM Band Coverage	—	522 kHz	(fL): L306 1.1 $\pm$ 0.1 V	*2
AM Tracking	990 kHz	990 kHz	L302	*3

*1. Input: IC301 1Pin Output: IC301 23Pin

*2. Input: Input is not connected Output: TP301(IC301 28Pin)

*3. Input: Antenna Output: IC301 23Pin

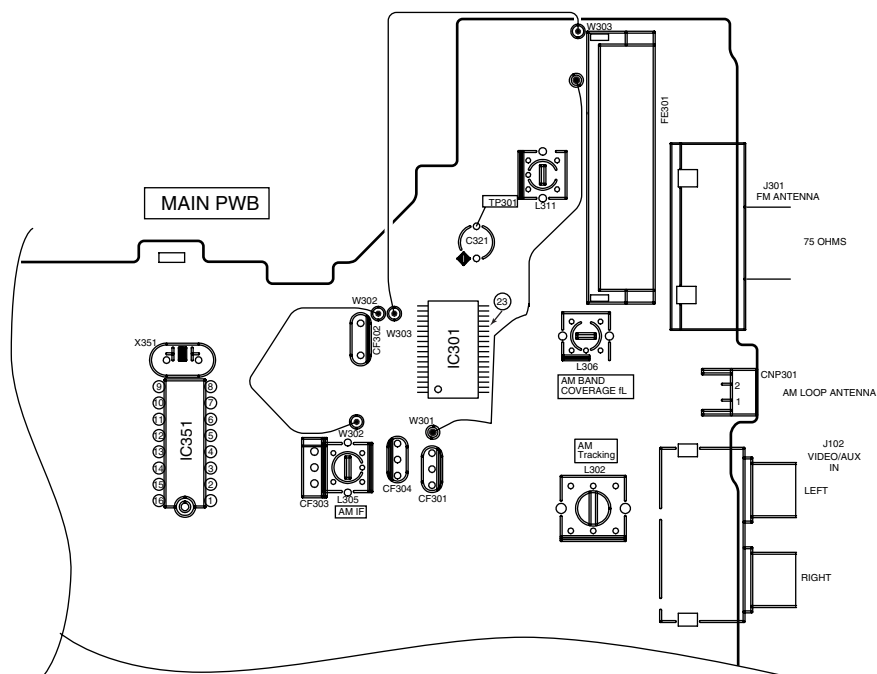


Figure 2 ADJUSTMENT POINTS

3. CD SECTION

• Adjustment

Since this CD system incorporates the following automatic adjustment functions, readjustment is not needed when replacing the pickup. Therefore, different PWBs and pickups can be combined freely.

Each time a disc is changed, these adjustments are performed automatically. Therefore, playback of each disc can be performed under optimum conditions.

[2] TEST MODE

Test Mode Key Operation

KEY1	KEY2	KEY3	TEST CONTENTS	INDICATION
Memory	Preset Down	Power	Preset clear	Tu CL
Memory	Stop	Power	Preset set	FM P-01
Memory	Play	Power	Display	
Memory	Preset up	Power	CD	TEST-1
Memory	REC	Power	Soft reset	CLEAR
Bass/treble	Preset down	Power	Volume	TEST-3
Bass/treble	Play	Power	Timer test	TEST-4
Bass/treble	TAPE-REC	Power	all key	TEST-6
Bass/treble	Stop	Power	Tuner aspm	TEST-7

All test modes can be terminated by turning off the power with ON/STAND-BY key.

• Preset clear test

All tuner preset stations are cleared.

• Preset set test

CH	BAND	FREQUENCY
1	FM STEREO	FM 87.50 MHz
2		FM 108.00 MHz
3		FM 98.00 MHz
4		FM 90.00 MHz
5		FM 106.00 MHz
1	AM	AM 522 kHz
2		AM 1620 kHz
3		AM 990 kHz
4		AM 603 kHz

CH	BAND	FREQUENCY
5	AM	AM 1404 kHz
AM6-30		
FM11-30		
.		
35		
36	FM MONO	FM 106.00 MHz
37		FM 90.00 MHz
38		FM 98.00 MHz
39		FM 108.00 MHz
40		FM 87.50 MHz

Stations are set according to destination.

• Display test

When test mode is activated, the entire display lights up. As the "PLAY" button is pressed, half of the display lights up alternately.

• CD test

[cd step 1] Enter test mode.

↓ Hold down the "memory" button

[cd step 2] After some steps, the laser turns on.

↓ Hold down the "memory" button

[cd step 3] After some steps, focus search is performed.

↓ Hold down the "memory" button

[cd step 4] After some steps, CLV rotation is performed.

↓ Hold down the "memory" button

[cd step 5] CD playback starts.

↓ Hold down the "stop" button to return to [cd step 1]

In step 5, hold down the AUX button on the remote control. The tracking servo is switched on/off.

From step 3, the pick up can be moved with the FF/REW button.

- **Soft reset test**

All data in RAM is cleared.

- **VOLUME test**

Starting from level 23 (default), check all the levels (0 - 23 - MAX).

- **Tuner aspm test**

106.50 MHz FM stereo is set by default. Hold down the "ASPM" button (on the remote control) to start scanning from 105.00 MHz. The unit receives stations and stores them as PS (preset stations).

If no station is received, "OMEMORY" appears.

- **TIMER test**

Start the timer at 1:00. When it reaches 1:05, turn on the power with the AUX function and turn off the power after about 30 seconds.

(In the test mode, fade-in and fade-out are not required.)

- **ALL KEY test**

In the test mode, hold down all the buttons on the main unit and then press the "POWER" button. "OK" appears.

If only the "ON/STAND-BY" key is pressed, "ERROR" appears.

CHAPTER 3. MECHANICAL DESCRIPTION

[1] REMOVING AND REINSTALLING THE MAIN PARTS

1. TAPE MECHANISM SECTION

Perform steps 1 to 5 and 7 of the disassembly method to remove the tape mechanism. (See page 3-3,3-4)

1.1. How to remove the record / playback and erase heads (See Fig. 1)

1. Remove the screws (A1) x 2 pcs., to remove the erase head.
2. Remove the screws (A2) x 2 pcs., to remove the record/playback head.

NOTE: After replacing the heads and performing the azimuth adjustment, be sure to apply screw lock.

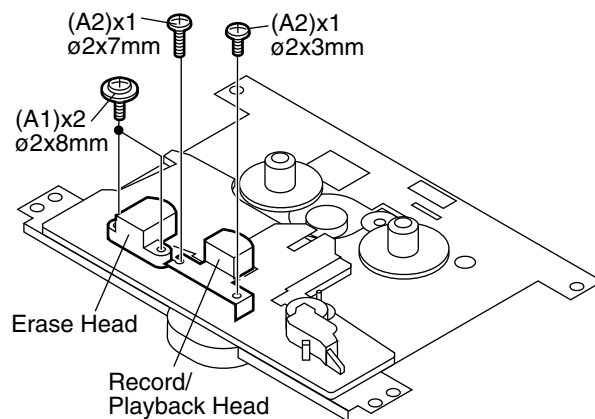


Figure 1

1.2. How to remove the pinch roller (See Fig.2)

1. Carefully bend the pinch roller pawl in the direction of the arrow <A>, and remove the pinch roller (B1) x 1 pc., upwards.

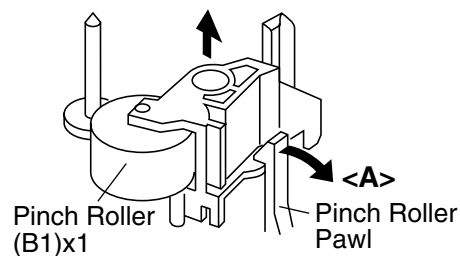


Figure 2

1.3. How to remove the belts (See Fig.3)

1. Remove the main belt (C1) x 1 pc., from the motor pulley.
2. Remove the FF/REW belt (C2) x 1 pc., from the REW/FF roller.
3. Put on the belts in the reverse order of removal.

NOTE: When putting on the belt, ascertain that the belt is not twisted, and clean it.

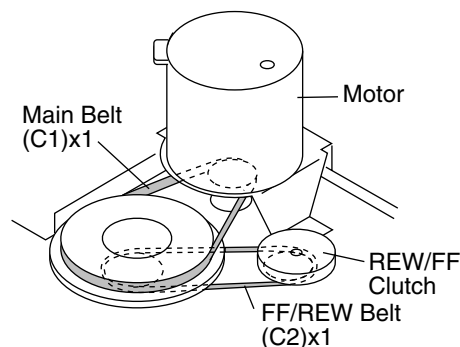


Figure 3

1.4. How to remove the motor (See Fig.4)

1. Remove the main belt.
2. Remove the screws (D1) x 2 pcs., to remove the motor bracket.
3. Remove the screws (D2) x 3 pcs., to remove the motor.

NOTE: When mounting the motor, pay attention to the motor mounting angle.

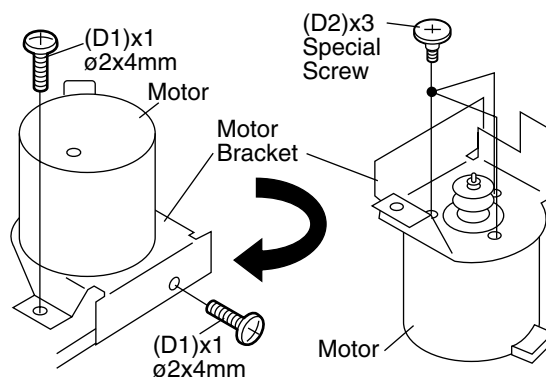


Figure 4

1.5. How to remove the flywheel (See Fig. 5)

1. Remove the belt.
2. Remove the stop washer (E1) x 1 pc., with a small precision screwdriver to extract the flywheel from the capstan metal.

NOTE: When the stop washer is deformed or damaged, replace it with a new one.

1.6. How to reinstall the parts

Install each part in the reverse order of the removal with care.

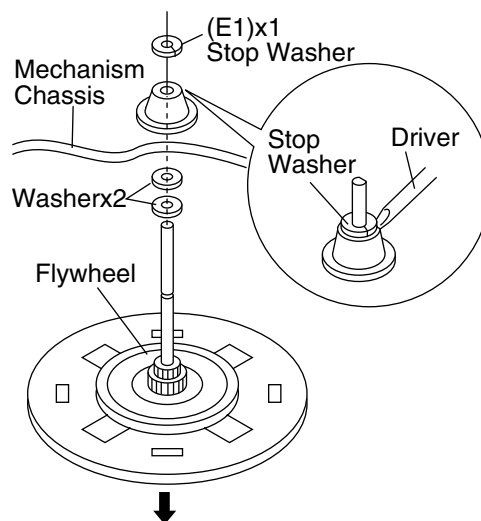


Figure 5

1.7. How to remove the tape mechanism PWB (See Fig. 6)

1. Remove the screw (F1) x 1 pc., to remove the tape mechanism PWB.
2. Remove the screws (F2) x 1 pc.
3. Remove the solder joints (F3) x 2 pcs., to remove the tape mechanism PWB.

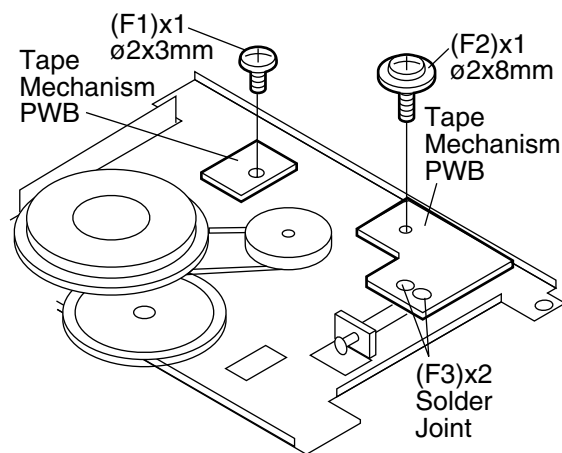


Figure 6

[2] DISASSEMBLY

Caution on Disassembly

Follow the below-mentioned notes when disassembling the unit and reassembling it, to keep it safe and ensure excellent performance:

- 1) Take cassette tape and compact disc out of the unit.
- 2) Be sure to remove the power supply plug from the wall outlet before starting to disassemble the unit.
- 3) Take off nylon bands or wire holders where they need to be removed when disassembling the unit. After servicing the unit, be sure to rearrange the leads where they were before disassembling.
- 4) Take sufficient care on static electricity of integrated circuits and other circuits when servicing.

STEP	REMOVAL	PROCEDURE	FIGURE
1	Top Cabinet	1. Screw.....(A1) x 7	1
2	Side Panel	1. Screw.....(B1) x 6	1
3	CD Player Unit	1. Turn on the power supply, open the disc tray, take out the CD tray cover, and close.(Note 1) 2. CD Tray Cover.....(C1) x 1 3. Hook.....(C2) x 2 4. Flat Cable.....(C3) x 2 5. Socket.....(C4) x 1	2
4	Rear Panel/Main PWB	1. Screw.....(D1) x 8 2. Screw.....(D2) x 3	2,4
5	Main PWB	1. Screw.....(E1) x 4 2. Flat Cable.....(E2) x 1 3. Socket.....(E3) x 5	4
6	Power PWB	1. Screw.....(F1) x 4	4
7	Front Panel	1. Screw.....(G1) x 2	4
8	Display PWB	1. Knob.....(H1) x 1 2. Screw.....(H2) x 8	5
9	Tape Mechanism	1. Screw.....(J1) x 4	5
10	Headphones PWB	1. Screw.....(K1) x 1	6
11	CD Servo PWB (Note 2)	1. Screw.....(L1) x 4 2. Flat Cable.....(L2) x 1 3. Socket.....(L3) x 2	6,7
12	CD Player Unit	1. Screw.....(M1) x 4	6
13	CD Mechanism	1. Screw.....(N1) x 4	7

Note 1: How to open the changer manually. (Fig. 3)

When CD tray doesn't come out even if the power is turned on, push a right lever with the screwdriver and others.

Note 2:

After removing the connector for the optical pickup from the connector, wrap the conductive aluminium foil around the front end of the connector so as to protect the optical pickup from electrostatic damage.

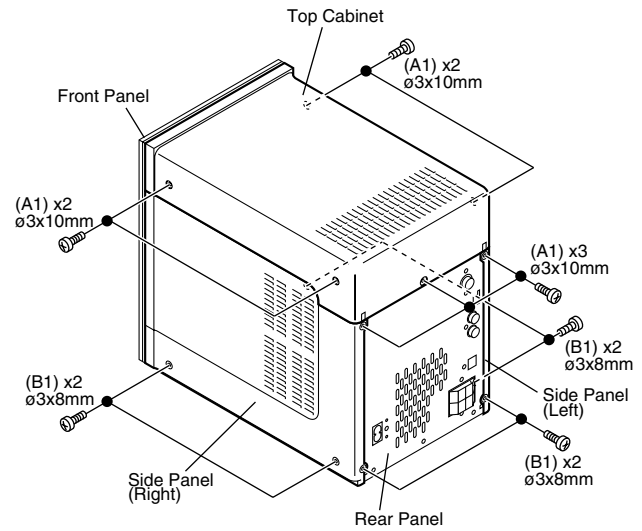


Figure 1

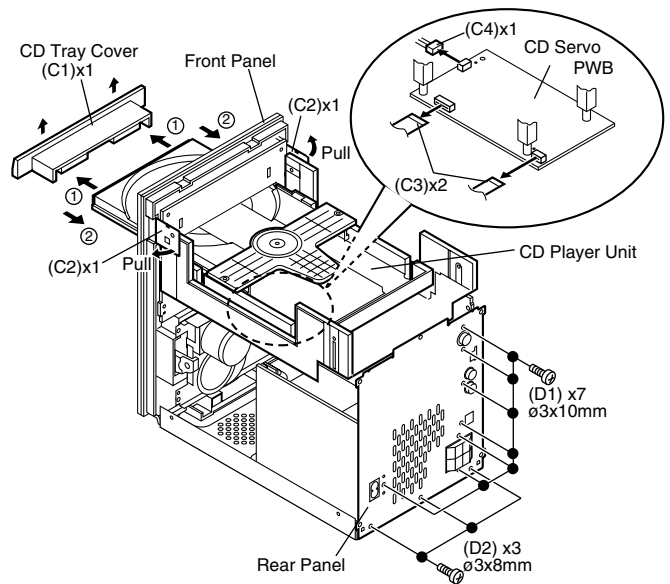


Figure 2

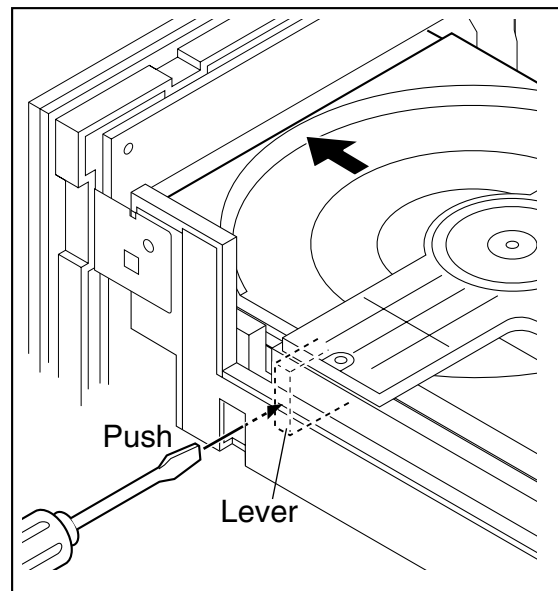


Figure 3

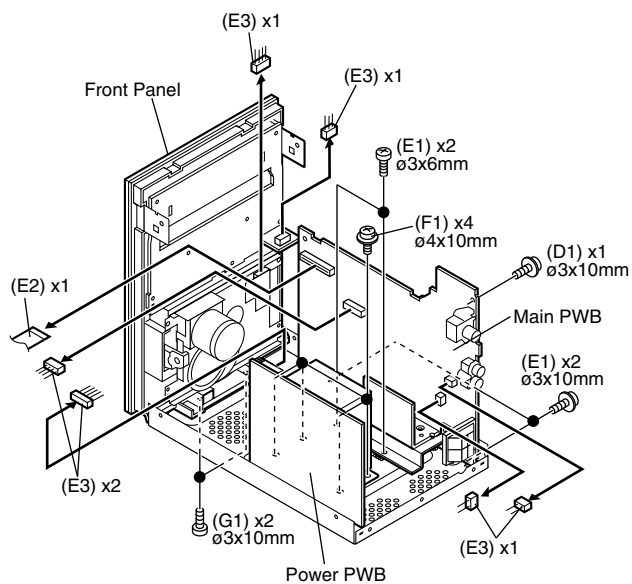


Figure 4

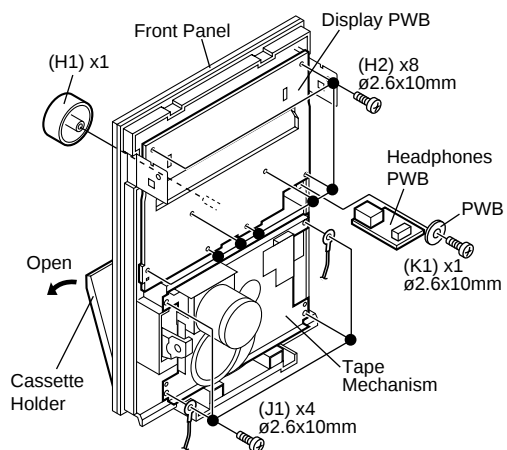


Figure 5

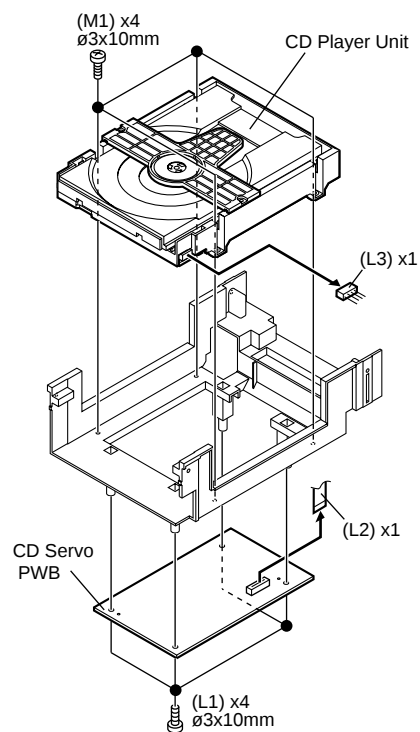


Figure 6

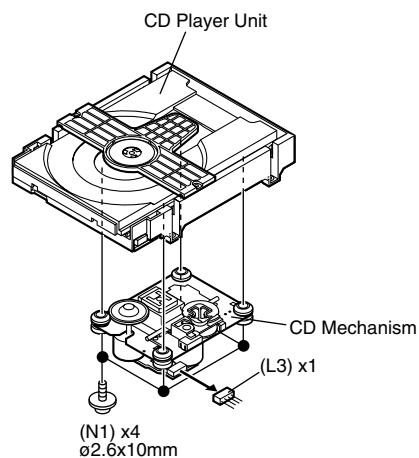


Figure 7

4-1

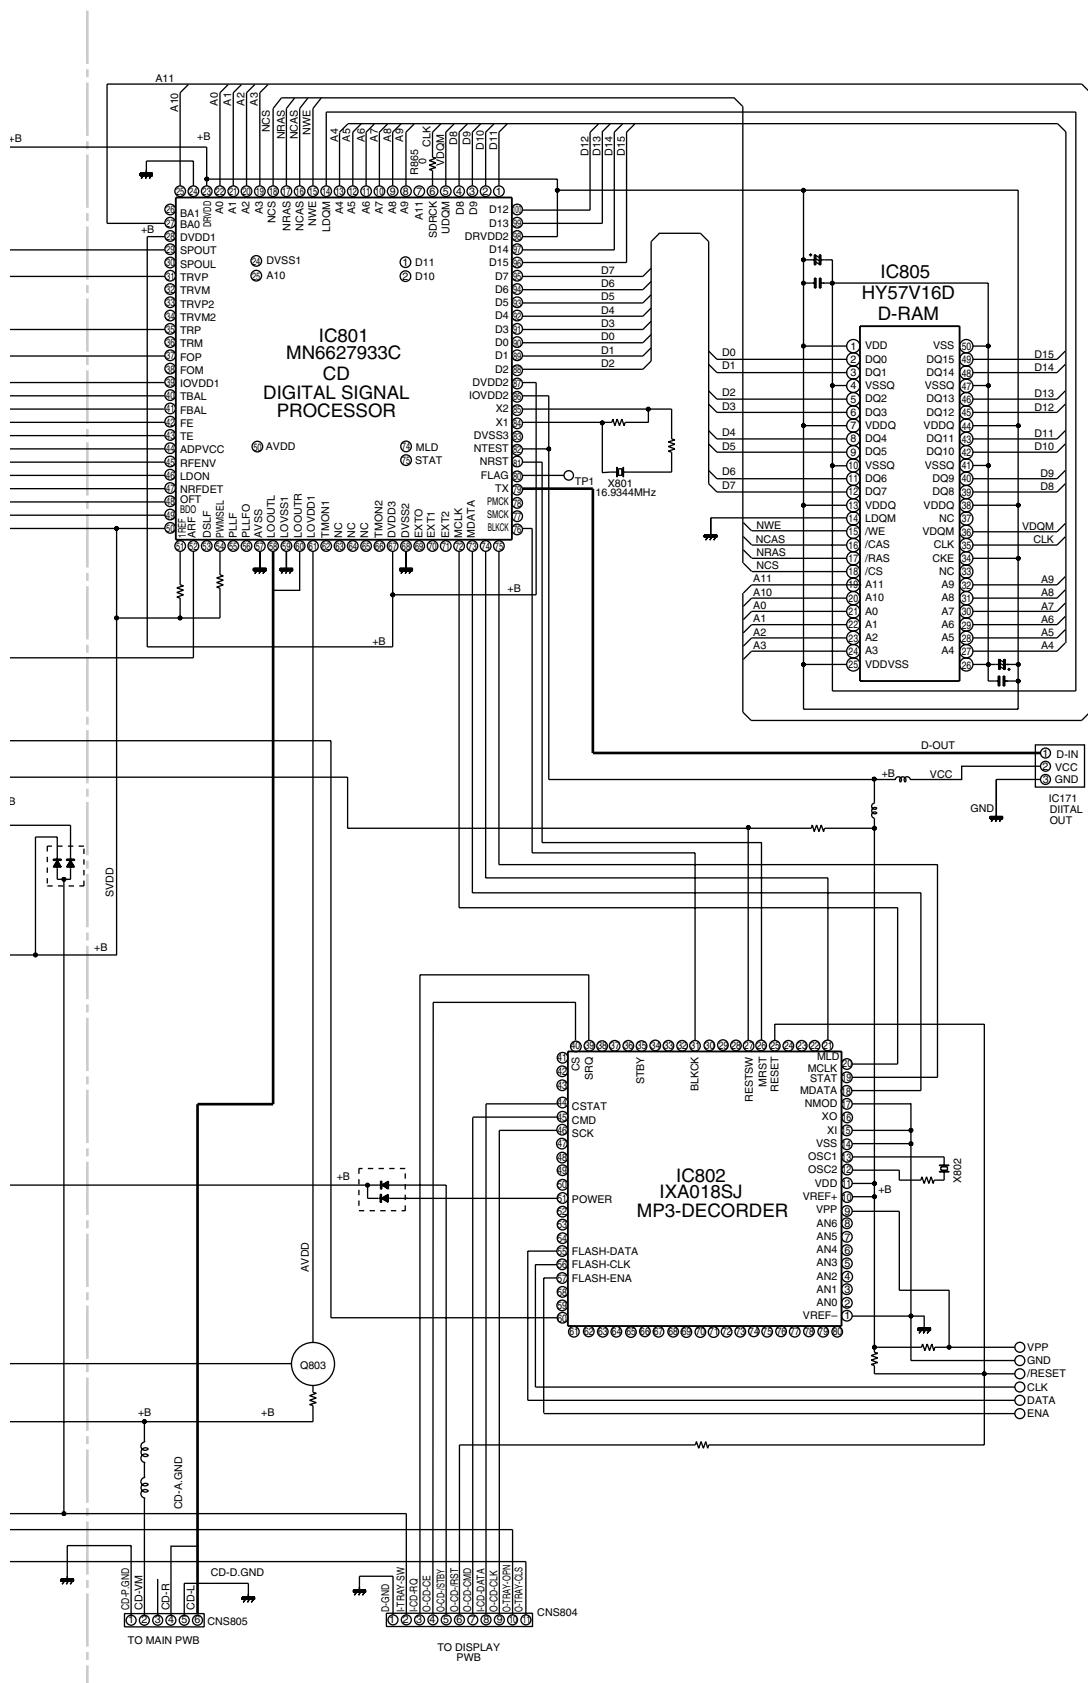


Figure 4-2 BLOCK DIAGRAM (2/5)

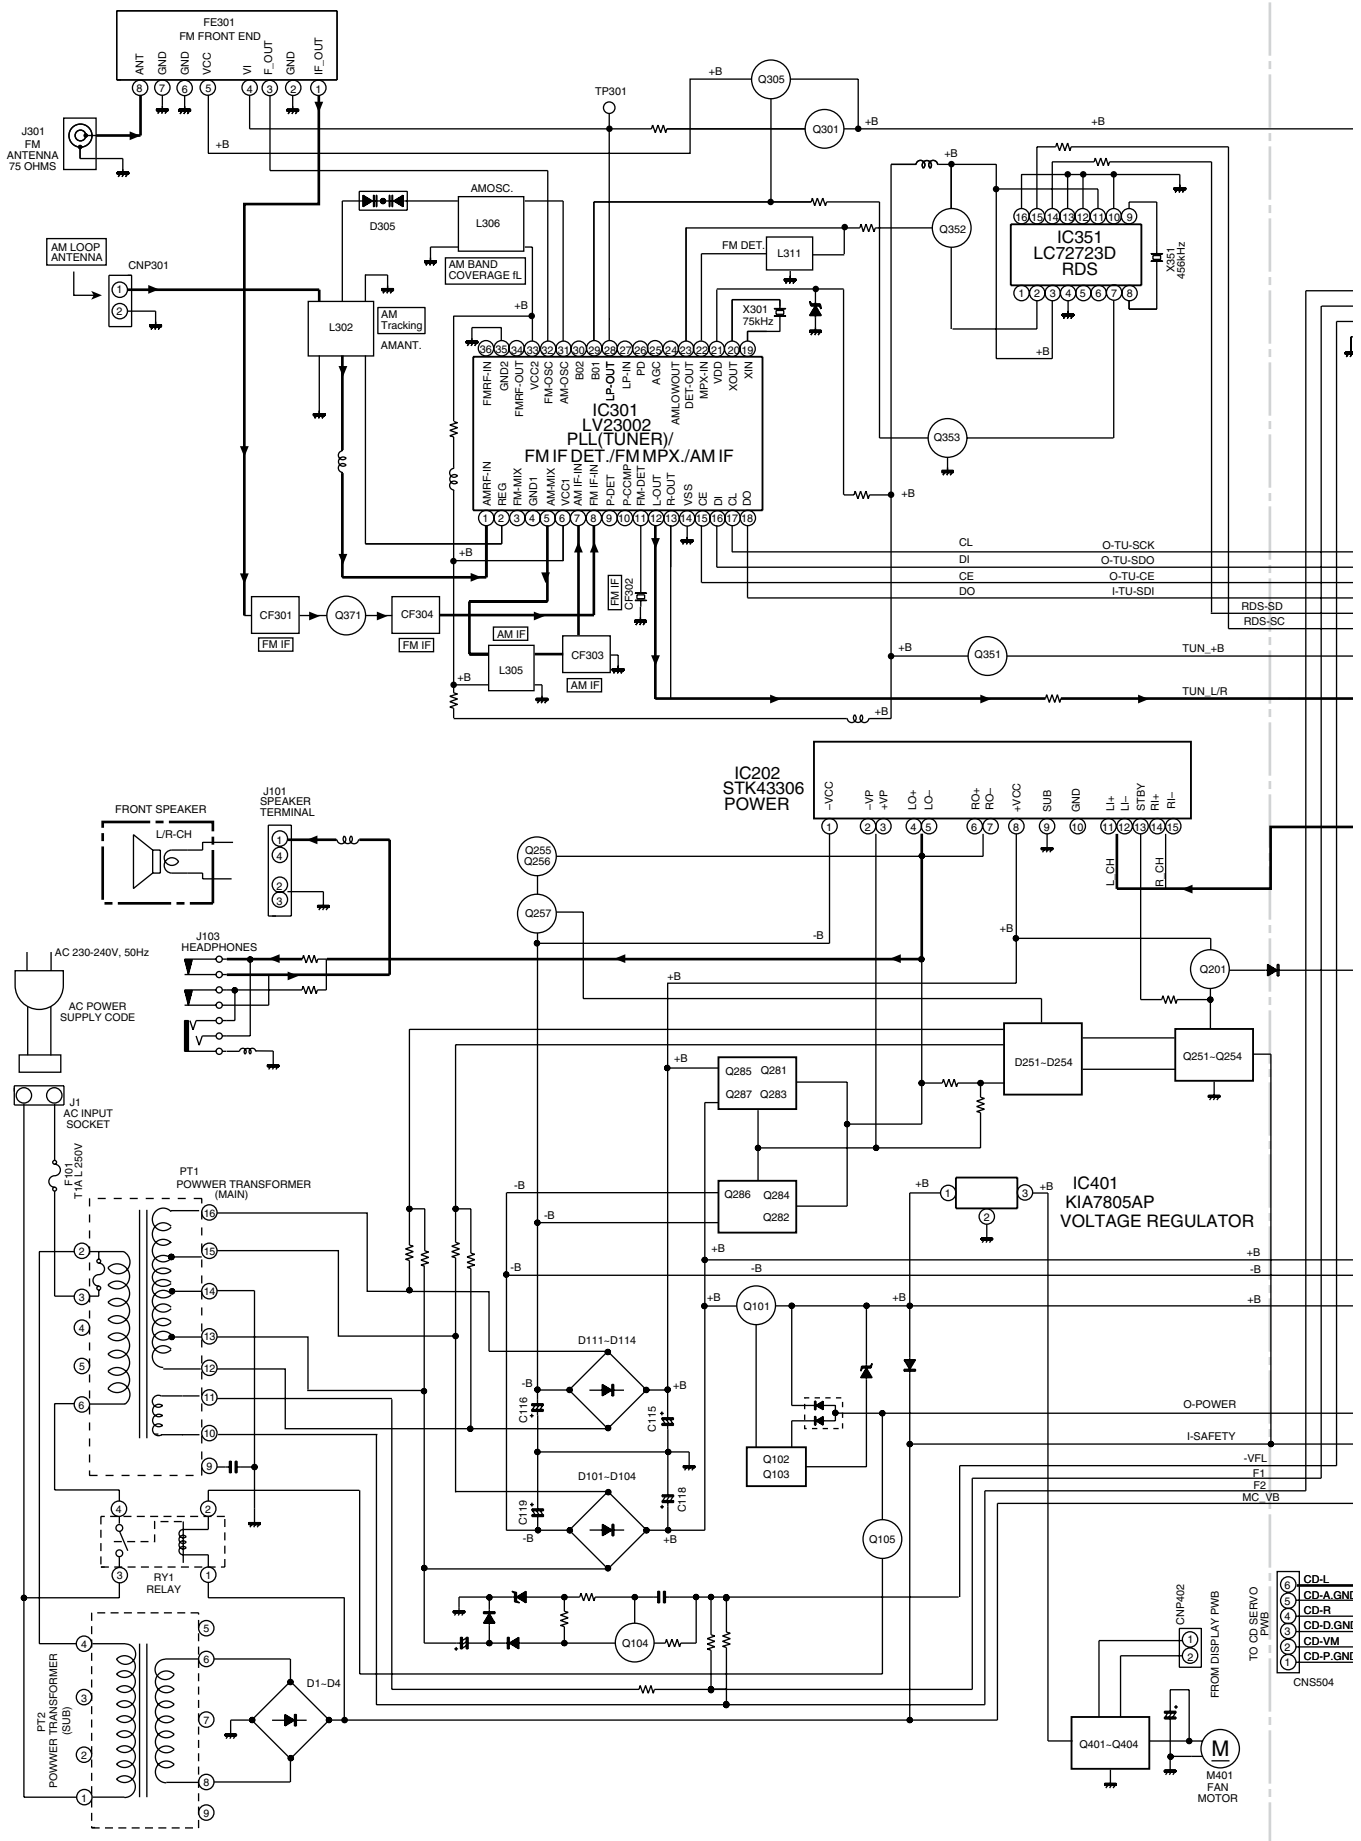


Figure 4-3 BLOCK DIAGRAM (3/5)

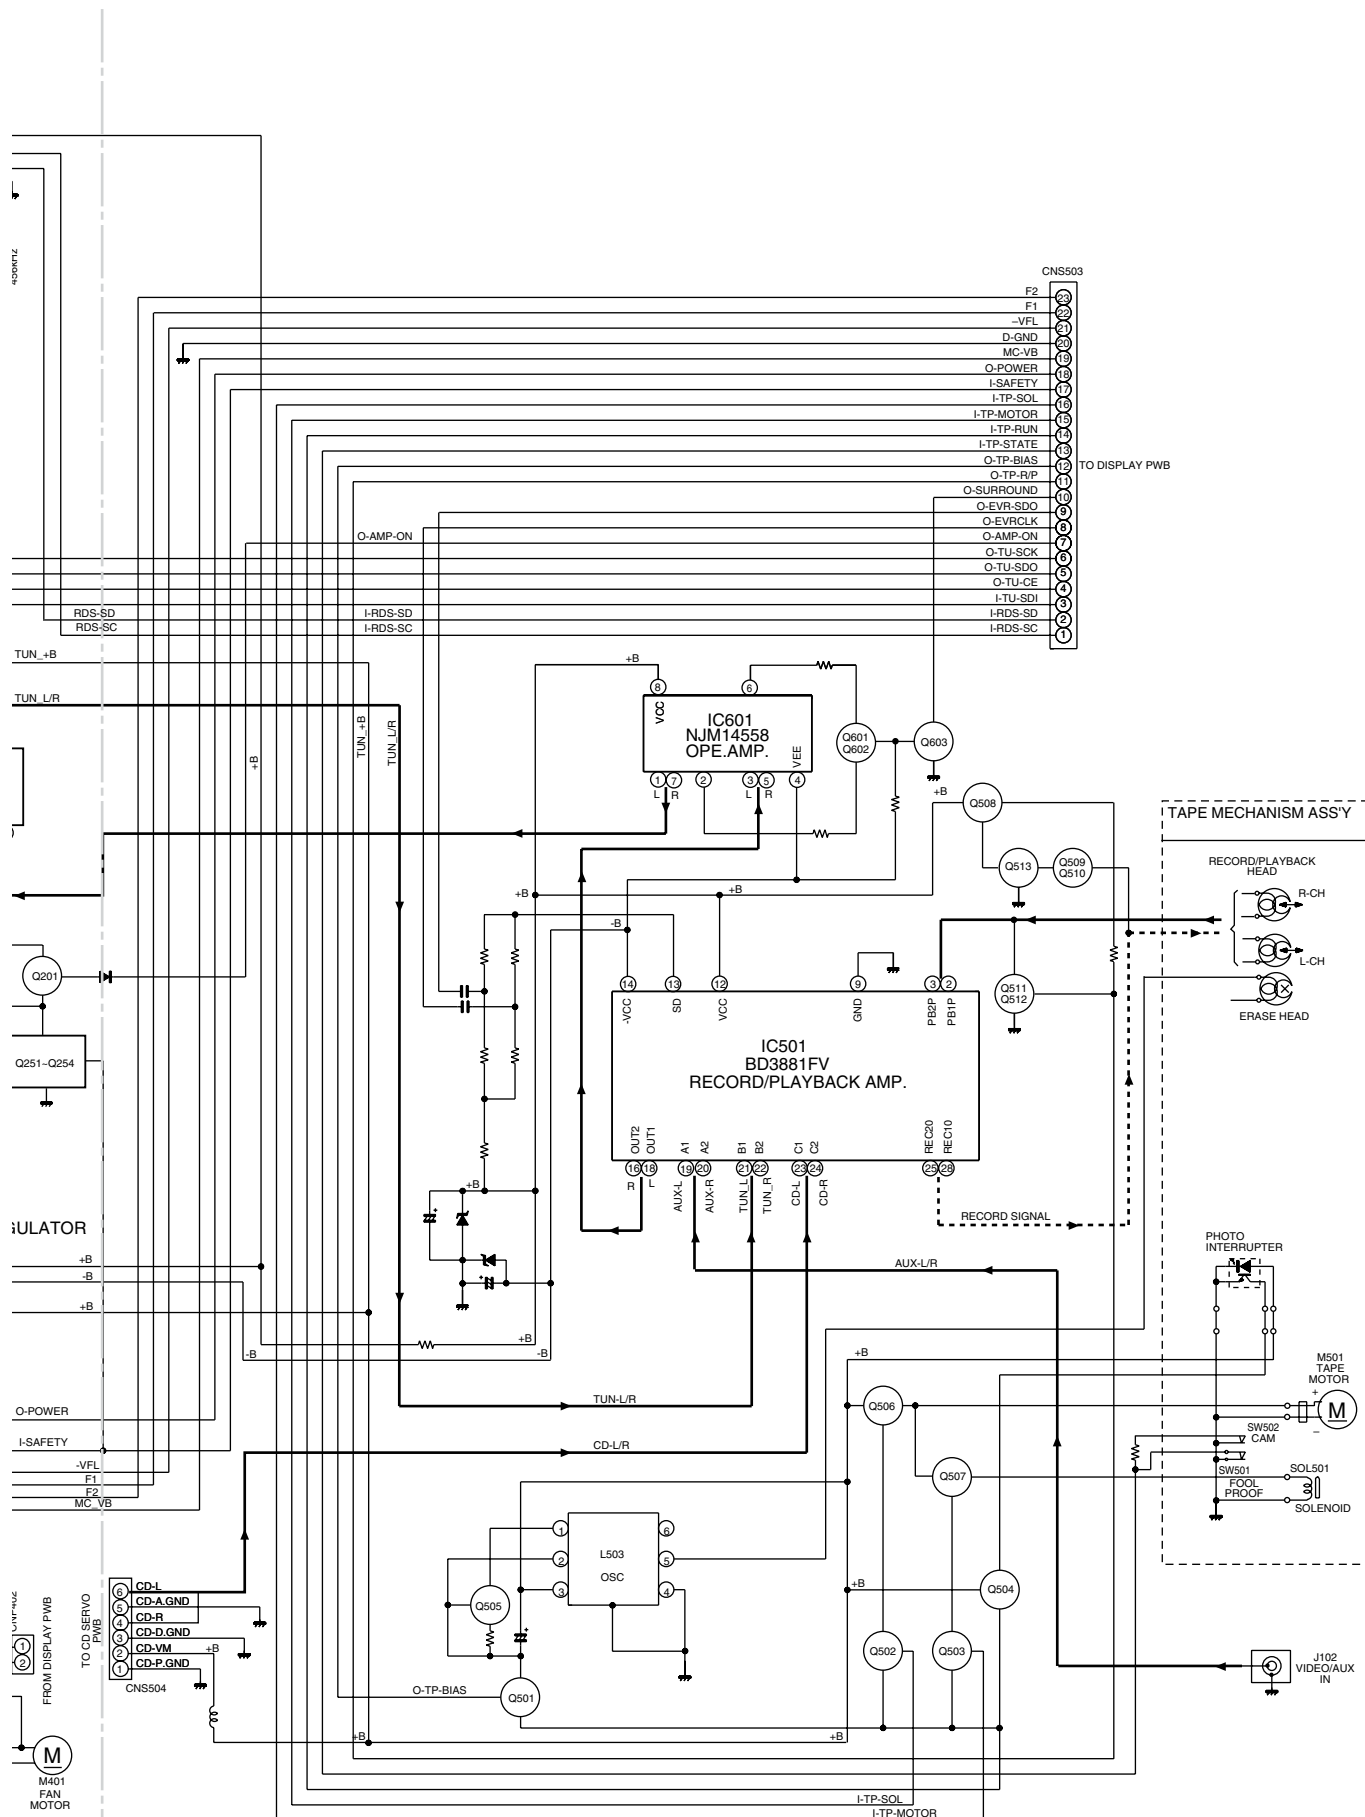


Figure 4-4 BLOCK DIAGRAM (4/5)







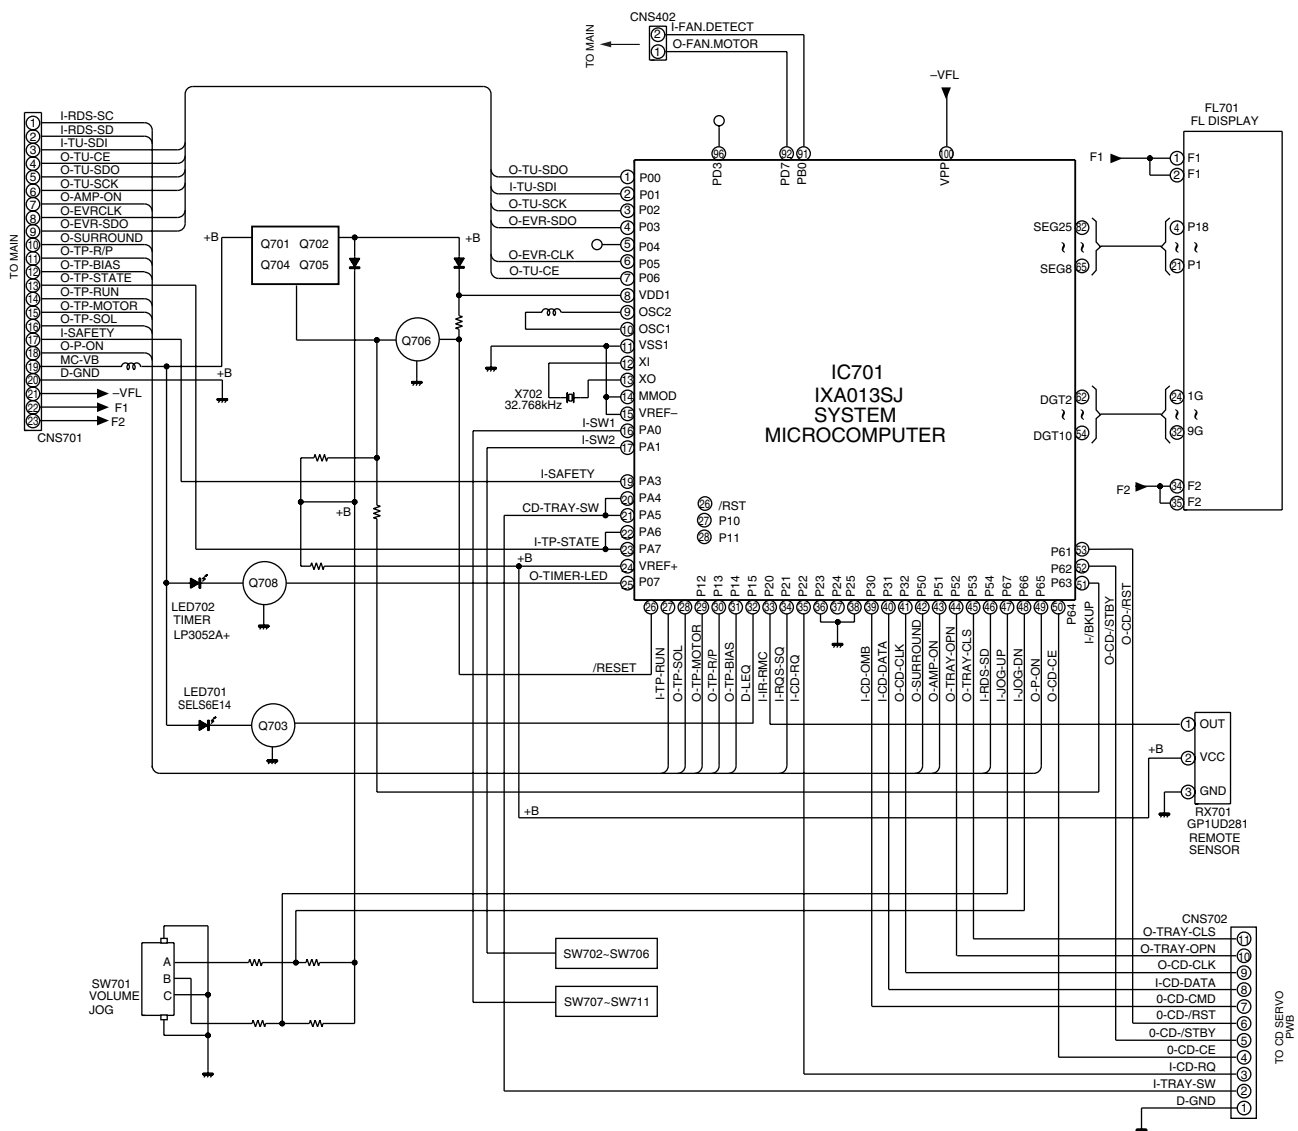


Figure 4-5 BLOCK DIAGRAM (5/5)

CHAPTER 5. CIRCUIT DESCRIPTION

[1] WAVEFORMS OF CD CIRCUIT

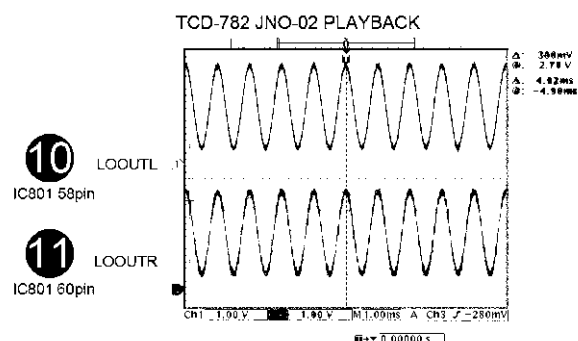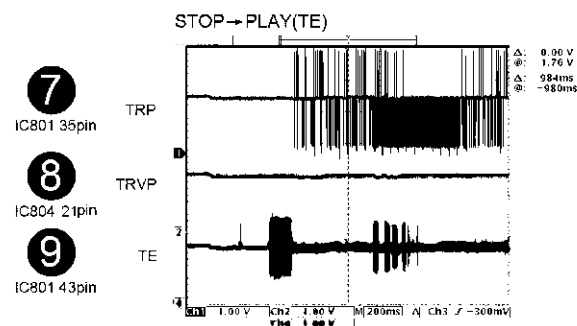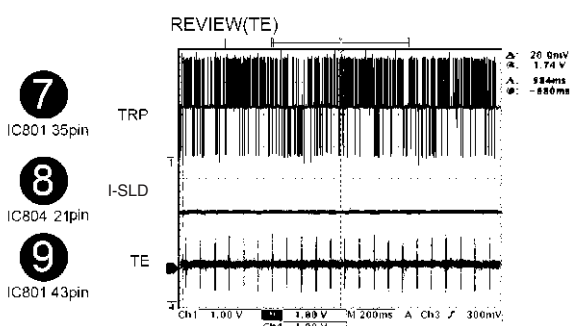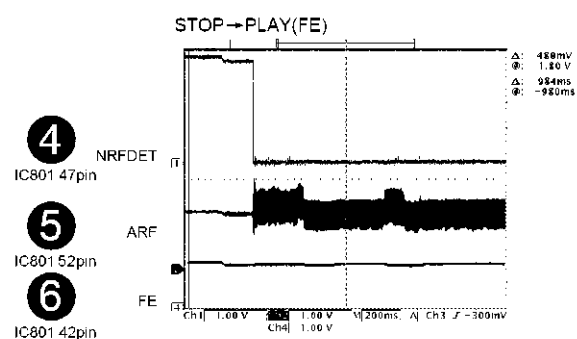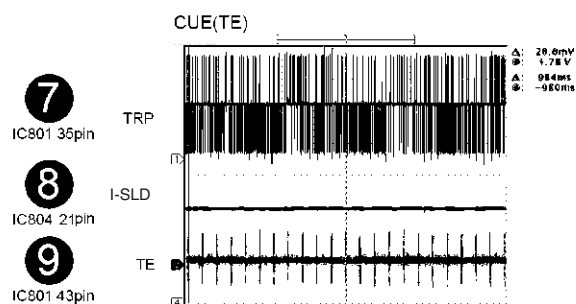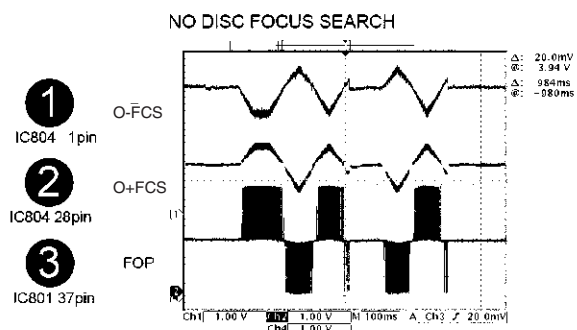

[2] VOLTAGE

IC202	
PIN NO.	VOLTAGE
1	-35.1 V
2	-16.0 V
3	15.5 V
4	0 V
5	0 V
6	0 V
7	0 V
8	35.0 V
9	0 V
10	0 V
11	0 V
12	0 V
13	1.98 V
14	0 V
15	0 V

IC301	
PIN NO.	VOLTAGE
1	0 V
2	2.22 V
3	2.24 V
4	0 V
5	4.66 V
6	4.66 V
7	2.19 V
8	2.21 V
9	3.69 V
10	3.55 V
11	2.54 V
12	2.16 V
13	2.15 V
14	0 V
15	0 V
16	3.30 V
17	3.34 V
18	0 V
19	1.66 V
20	1.64 V
21	3.26 V
22	2.20 V
23	2.47 V
24	0.68 V
25	1.40 V
26	1.99 V
27	1.99 V
28	3.26 V
29	4.30 V
30	1.26 V
31	4.61 V
32	4.56 V
33	4.57 V
34	3.72 V
35	0 V
36	0.97 V

IC351	
PIN NO.	VOLTAGE
1	2.37 V
2	2.36 V
3	4.76 V
4	0 V
5	2.37 V
6	2.36 V
7	0.06 V
8	2.41 V
9	2.34 V
10	0 V
11	4.76 V
12	0 V
13	0 V
14	2.40 V
15	2.37 V
16	0 V

IC401	
PIN NO.	VOLTAGE
1	8.5 V
2	0 V
3	5.0 V

IC501	
PIN NO.	VOLTAGE
1	0 V
2	0 V
3	0 V
4	0 V
5	0 V
6	0 V
7	0 V
8	0 V
9	0 V
10	0 V
11	0 V
12	4.76 V
13	0 V
14	-4.76 V
15	0 V
16	0 V
17	0 V
18	0 V
19	0 V
20	0 V
21	0 V
22	0 V
23	0 V
24	0 V
25	0 V
26	0 V
27	0 V
28	0 V

IC601	
PIN NO.	VOLTAGE
1	0 V
2	0 V
3	0 V
4	-4.7 V
5	0 V
6	0 V
7	0 V
8	4.7 V

IC804	
PIN NO.	VOLTAGE
1	3.96 V
2	1.73 V
3	2.52 V
4	1.54 V
5	1.53 V
6	1.73 V
7	2.52 V
8	0 V
9	2.52 V
10	8.07 V
11	3.91 V
12	3.87 V
13	3.44 V
14	4.25 V
15	0 V
16	2.86 V
17	3.74 V
18	3.90 V
19	8.03 V
20	1.73 V
21	1.72 V
22	0 V
23	8.06 V
24	1.73 V
25	0 V
26	3.87 V
27	0 V
28	3.66 V

IC802	
PIN NO.	VOLTAGE
1	0 V
2	3.48 V
3	3.48 V
4	3.48 V
5	3.48 V
6	3.48 V
7	3.48 V
8	3.48 V
9	3.48 V
10	3.48 V
11	3.48 V
12	1.70 V
13	1.70 V
14	0 V
15	0 V
16	3.48 V
17	0 V
18	0 V
19	0 V
20	3.48 V
21	3.48 V
22	3.48 V
23	3.48 V
24	3.48 V
25	3.33 V
26	3.48 V
27	3.48 V
28	3.48 V
29	3.48 V
30	3.48 V
31	0 V
32	3.48 V
33	3.48 V
34	3.48 V
35	3.27 V
36	3.48 V
37	3.48 V
38	3.48 V
39	3.48 V
40	3.27 V
41	3.48 V
42	3.48 V
43	3.48 V
44	3.48 V
45	0 V
46	3.33 V
47	3.48 V
48	3.48 V
49	3.48 V
50	3.48 V
51	3.48 V
52	3.48 V
53	3.48 V
54	3.48 V
55	3.48 V
56	3.48 V
57	3.48 V
58	3.48 V
59	3.48 V
60	0 V
61	3.48 V
62	3.48 V
63	3.48 V
64	3.48 V
65	3.48 V
66	3.48 V
67	3.48 V
68	3.48 V
69	3.48 V
70	3.48 V
71	3.48 V
72	3.48 V
73	3.48 V
74	3.48 V
75	3.48 V
76	3.48 V
77	3.48 V
78	3.48 V
79	3.48 V
80	0 V

IC805	
PIN NO.	VOLTAGE
1	3.49 V
2	1.17 V
3	1.52 V
4	0 V
5	0.63 V
6	0 V
7	3.49 V
8	0.89 V
9	0.58 V
10	0 V
11	0.83 V
12	0 V
13	3.51 V
14	3.49 V
15	3.51 V
16	3.49 V
17	3.49 V
18	3.48 V
19	2.61 V
20	0 V
21	1.46 V
22	1.20 V
23	1.33 V
24	1.41 V
25	3.51 V
26	0 V
27	2.66 V
28	1.67 V
29	0.62 V
30	0 V
31	0 V
32	0 V
33	3.52 V
34	1.63 V
35	3.49 V
36	0 V
37	3.52 V
38	3.52 V
39	0 V
40	0.64 V
41	0.30 V
42	0.63 V
43	0.30 V
44	3.48 V
45	1.88 V
46	0 V
47	0 V
48	1.92 V
49	0 V
50	0 V

IC803	
PIN NO.	VOLTAGE
1	0.21 V
2	2.27 V
3	3.40 V
4	0 V
5	2.04 V
6	2.14 V
7	1.82 V
8	1.59 V
9	1.68 V
10	1.60 V
11	2.10 V
12	0.89 V
13	0.12 V
14	0.13 V
15	0.12 V
16	3.38 V
17	0.14 V
18	1.70 V
19	1.78 V
20	1.78 V
21	1.78 V
22	1.77 V
23	1.78 V
24	0.03 V
25	1.77 V
26	1.76 V
27	1.77 V
28	1.77 V
29	1.78 V
30	1.78 V
31	1.78 V
32	1.78 V

IC701			
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
1	3.35 V	51	3.4 V
2	3.46 V	52	3.28 V
3	3.34 V	53	3.28 V
4	0 V	54	-18.17 V
5	3.32 V	55	-22.74 V
6	0 V	56	-22.74 V
7	0 V	57	-22.74 V
8	3.35 V	58	-22.74 V
9	1.66 V	59	-22.74 V
10	-	60	-22.74 V
11	0 V	61	-22.74 V
12	1.61 V	62	-22.74 V
13	1.60 V	63	-25.45 V
14	0 V	64	-25.45 V
15	0 V	65	-22.21 V
16	3.44 V	66	-12.52 V
17	3.44 V	67	-25.52 V
18	2.36 V	68	-25.52 V
19	1.03 V	69	-15.51 V
20	1.25 V	70	-25.57 V
21	1.25 V	71	-18.69 V
22	0 V	72	-21.64 V
23	0 V	73	-8.91 V
24	3.45 V	74	-18.18 V
25	0 V	75	-22.70 V
26	3.34 V	76	-18.97 V
27	3.14 V	77	-10.47 V
28	0 V	78	-9.03 V
29	0 V	79	-1.41 V
30	0 V	80	-1.15 V
31	0 V	81	-12.97 V
32	3.2 V	82	-13.90 V
33	3.35 V	83	0.59 V
34	0 V	84	-0.56 V
35	3.45 V	85	-0.89 V
36	0 V	86	-0.81 V
37	0 V	87	-0.76 V
38	0 V	88	-0.36 V
39	0 V	89	-0.65 V
40	3.46 V	90	-0.84 V
41	3.34 V	91	0 V
42	0 V	92	3.24 V
43	0 V	93	2.43 V
44	0 V	94	2.96 V
45	0 V	95	2.96 V
46	0 V	96	2.83 V
47	3.2 V	97	3.33 V
48	3.2 V	98	0 V
49	0 V	99	2.56 V
50	2.5 V	100	-25.97 V

IC801			
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
1	0.33 V	51	0.86 V
2	1.27 V	52	1.71 V
3	1.32 V	53	1.71 V
4	1.89 V	54	3.36 V
5	3.49 V	55	1.75 V
6	1.62 V	56	1.46 V
7	0.04 V	57	0 V
8	0.05 V	58	0 V
9	0.04 V	59	0 V
10	2.53 V	60	1.75 V
11	2.29 V	61	3.48 V
12	1.93 V	62	0 V
13	1.52 V	63	0 V
14	3.48 V	64	0 V
15	3.50 V	65	0 V
16	3.48 V	66	0 V
17	3.48 V	67	1.52 V
18	3.47 V	68	0 V
19	1.90 V	69	0 V
20	1.69 V	70	0 V
21	2.22 V	71	0 V
22	1.25 V	72	3.23 V
23	0 V	73	1.42 V
24	0 V	74	3.34 V
25	0 V	75	0.41 V
26	0 V	76	0 V
27	3.50 V	77	0 V
28	1.53 V	78	0.69 V
29	1.62 V	79	1.74 V
30	0 V	80	0.03 V
31	1.72 V	81	3.48 V
32	0 V	82	3.49 V
33	0 V	83	0 V
34	0 V	84	1.70 V
35	1.68 V	85	3.48 V
36	0 V	86	3.45 V
37	1.50 V	87	1.53 V
38	0 V	88	0.03 V
39	3.46 V	89	0 V
40	1.71 V	90	0 V
41	1.70 V	91	0 V
42	1.73 V	92	0 V
43	1.77 V	93	0 V
44	1.75 V	94	0 V
45	1.60 V	95	0 V
46	3.38 V	96	0 V
47	3.17 V	97	0 V
48	0.20 V	98	3.49 V
49	0.16 V	99	0 V
50	3.34 V	100	0 V

Q101		Q281		Q371		Q508		Q703	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	15.6 V	E	7.9 V	E	0.07 V	E	0.94 V	E	3.05 V
C	8.5 V	C	14.85 V	C	3.41 V	C	0.75 V	C	2.4 V
B	14.9 V	B	7.9 V	B	0.8 V	B	0.3 V	B	2.34 V
Q102		Q282		Q401		Q509		Q704	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	0.2 V	E	-8.18 V	E	0 V	E	0 V	E	0.01 V
C	13.5 V	C	-37.1 V	C	0 V	C	0 V	C	4.8 V
B	0.85 V	B	-8.18 V	B	0.65 V	B	0.62 V	B	0.6 V
Q103		Q283		Q402		Q510		Q705	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	0 V	E	15.48 V	E	0 V	E	0 V	E	0.05 V
C	0.85 V	C	7.84 V	C	0 V	C	0 V	C	3.4 V
B	0.56 V	B	16.09 V	B	0.61 V	B	0 V	B	0.03 V
Q104		Q284		Q403		Q511		Q706	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	-25.8 V	E	-16.7 V	E	0 V	E	0 V	E	0 V
C	-28 V	C	-8.20 V	C	1.27 V	C	0 V	C	3.3 V
B	-26 V	B	-16.2 V	B	0.26 V	B	0 V	B	-
Q105		Q285		Q404		Q512		Q708	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	1.74 V	E	14.39 V	E	5.01 V	E	0 V	E	0 V
C	2.17 V	C	34.01 V	C	4.60 V	C	0 V	C	6.7 V
B	2.4 V	B	14.27 V	B	4.22 V	B	0 V	B	0 V
Q201		Q286		Q501		Q513		Q801	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	2.76 V	E	-34.34 V	E	0 V	E	0 V	E	2.9 V
C	32 V	C	-15.01 V	C	8.3 V	C	0.57 V	C	1.8 V
B	3.3 V	B	-34.27 V	B	0 V	B	0 V	B	2.2 V
Q251		Q287		Q502		Q601		Q803	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	0 V	E	-7.18 V	E	0 V	E	0 V	E	3.4 V
C	1.1 V	C	-34.6 V	C	0V	C	0 V	C	7.2 V
B	0 V	B	-7.17 V	B	0.65 V	B	3.13 V	B	4.1 V
Q252		Q301		Q503		Q602		Q804	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	-	E	10.7 V	E	0 V	E	0 V	E	3.4 V
C	0.4 V	C	12.7 V	C	8.4 V	C	0 V	C	6.2 V
B	0 V	B	11.26 V	B	0 V	B	3.13 V	B	4.1 V
Q253		Q305		Q504		Q603		Q805	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	1.14 V	E	0 V	E	3.4 V	E	2.67 V	E	3.5 V
C	1.02 V	C	4.16 V	C	3 V	C	3.21 V	C	7.9 V
B	1.36 V	B	0 V	B	2.6 V	B	3.22 V	B	4.1 V
Q254		Q351		Q505		Q701		Q806	
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
E	1 V	E	4.76 V	E	8.2 V	E	0.01 V	E	3.4 V
C	0 V	C	8.05 V	C	8.5 V	C	0 V	C	5.1 V
B	1 V	B	5.42 V	B	8.49 V	B	0.66 V	B	4.1 V
Q256		Q352		Q506		Q702			
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE		
E	0 V	E	2.65 V	E	8.5 V	E	4.0 V		
C	35 V	C	4.5 V	C	8.44 V	C	7.7 V		
B	0 V	B	3.2 V	B	7.76 V	B	4.7 V		
Q257		Q353		Q507					
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE	PIN NO.	VOLTAGE				
E	-35 V	E	0 V	E	8.4 V				
C	0 V	C	0 V	C	0 V				
B	-35 V	B	0.61 V	B	8.4 V				

XL-MP100H

—MEMO—

CHAPTER 6. CIRCUIT SCHEMATICS AND PARTS LAYOUT

[1] NOTES ON SCHEMATIC DIAGRAM

- Resistor:

To differentiate the units of resistors, such symbol as K and M are used: the symbol K means 1000 ohm and the symbol M means 1000 kohm and the resistor without any symbol is ohm-type resistor. Besides, the one with "Fusible" is a fuse type.

- Capacitor:

To indicate the unit of capacitor, a symbol P is used: this symbol P means micro-micro-farad and the unit of the capacitor without such a symbol is microfarad. As to electrolytic capacitor, the expression "capacitance/withstand voltage" is used.

(CH), (TH), (RH), (UJ): Temperature compensation

(ML): Mylar type

(P.P.): Polypropylene type

- Schematic diagram and Wiring Side of P.W.Board for this model are subject to change for improvement without prior notice.

- The indicated voltage in each section is the one measured by Digital Multimeter between such a section and the chassis with no signal given.


- In the tuner section,
 - () indicates AM
 - < > indicates FM stereo
- In the main section, a tape is being played back.
- In the deck section, a tape is being played back.
 - () indicates the record state.
- In the power section, a tape is being played back.
- In the CD section, the CD is stopped.

- Parts marked with "  " () are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

REF. NO	DESCRIPTION	POSITION
SW501	FOOL PROOF	ON—OFF
SW502	CAM	ON—OFF
SW701	VOLUME	ON—OFF
SW702	ON/STAND-BY	ON—OFF
SW703	FUNCTION	ON—OFF
SW704	BASS/TRBLE	ON—OFF
SW705	MEMORY/SET	ON—OFF

REF. NO	DESCRIPTION	POSITION
SW706	OPEN/CLOSE	ON—OFF
SW707	TUNING UP	ON—OFF
SW708	TUNING DOWN	ON—OFF
SW709	PRESET UP	ON—OFF
SW710	PRESET DOWN	ON—OFF
SW711	TAPE REC/PAUSE	ON—OFF
SW801	OPEN/CLOSE	ON—OFF

[2] TYPES OF TRANSISTOR AND LED

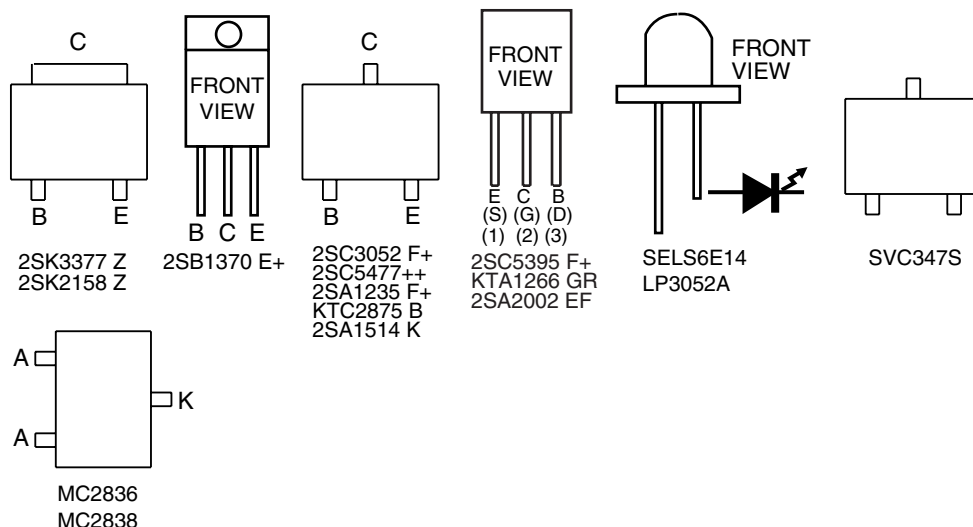

[3] WIRING SIDE OF PWB/SCHEMATIC DIAGRAM

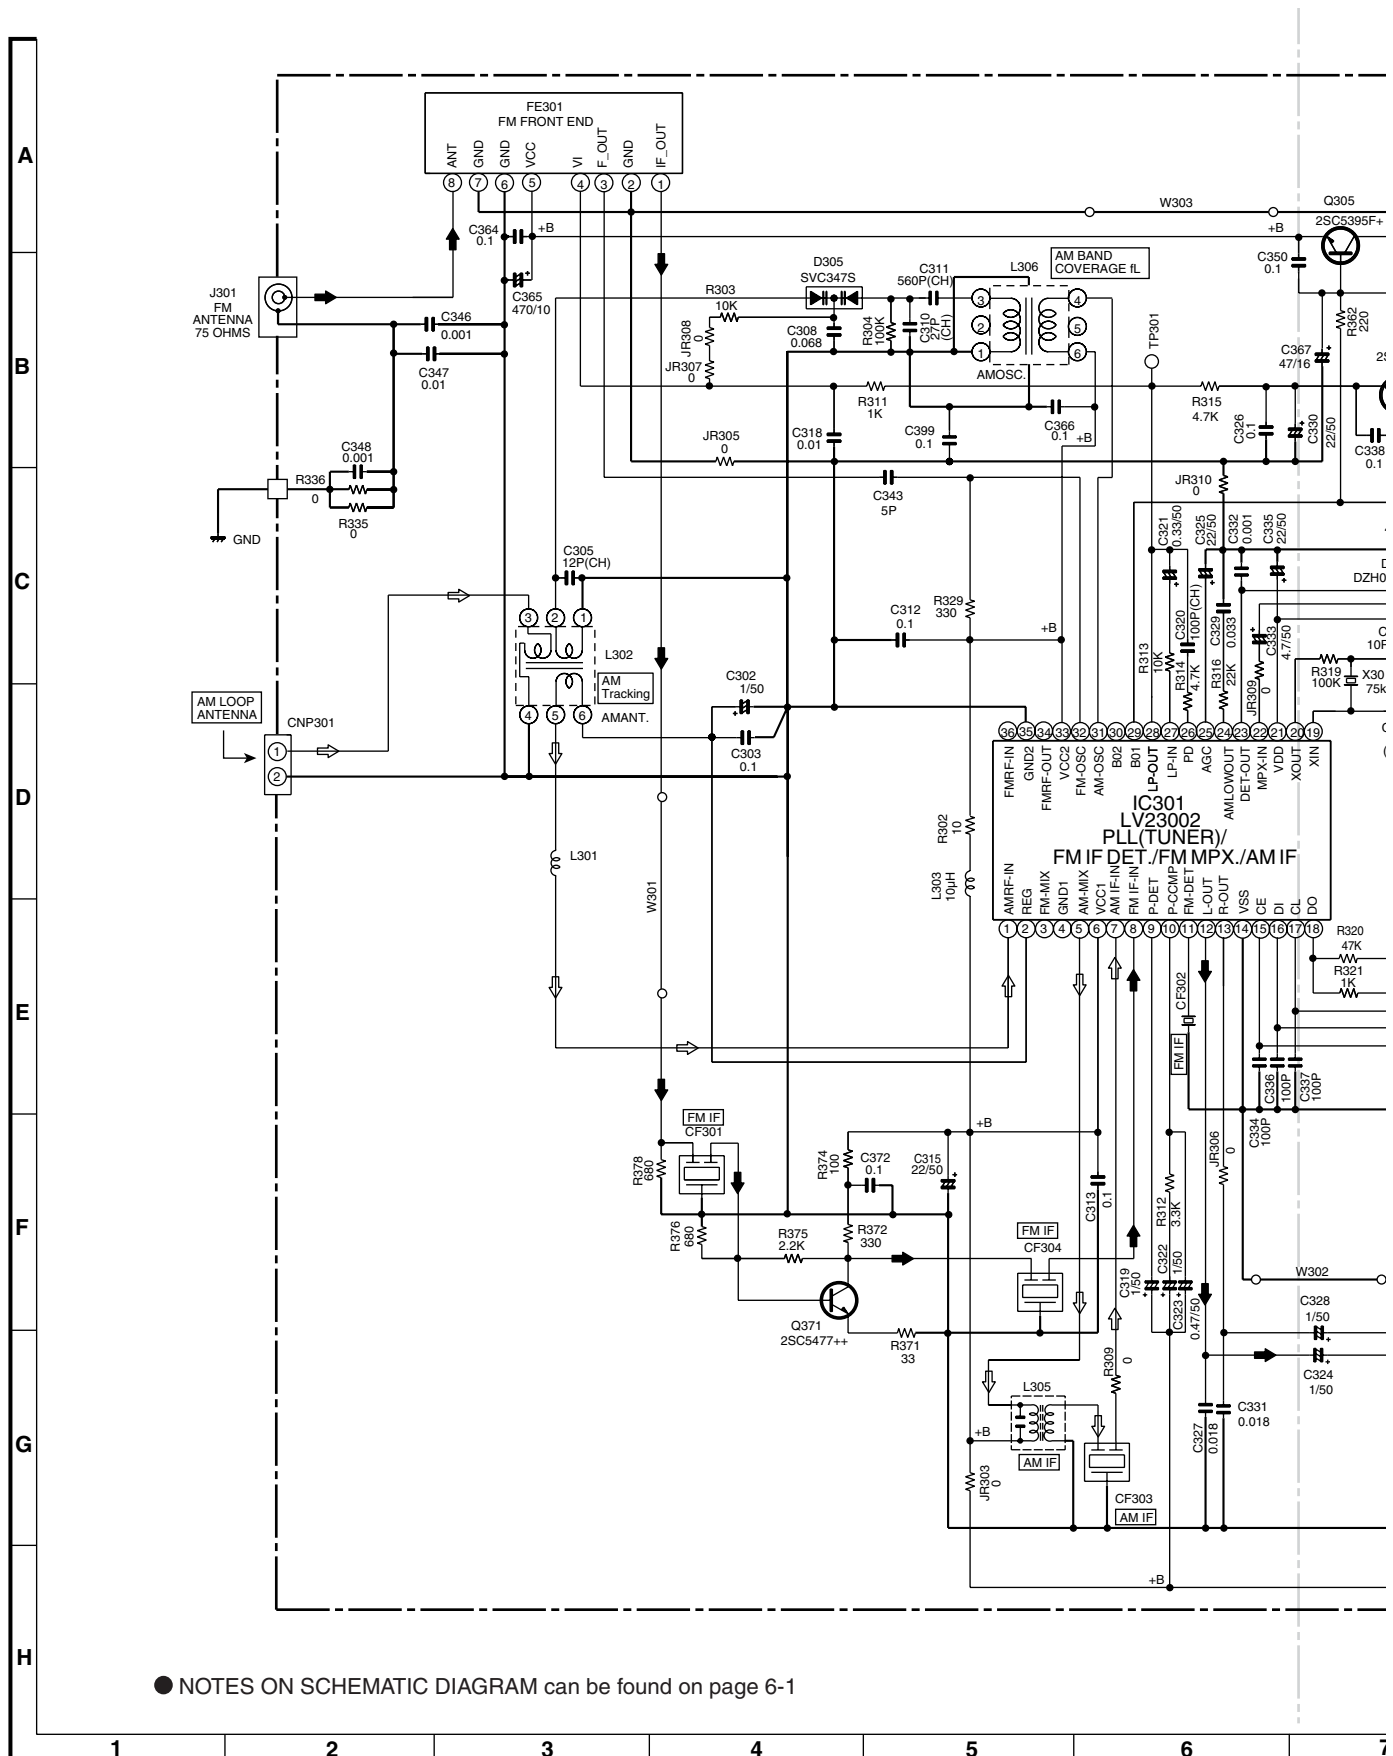


Figure 6-2 SCHEMATIC DIAGRAM (1/10)

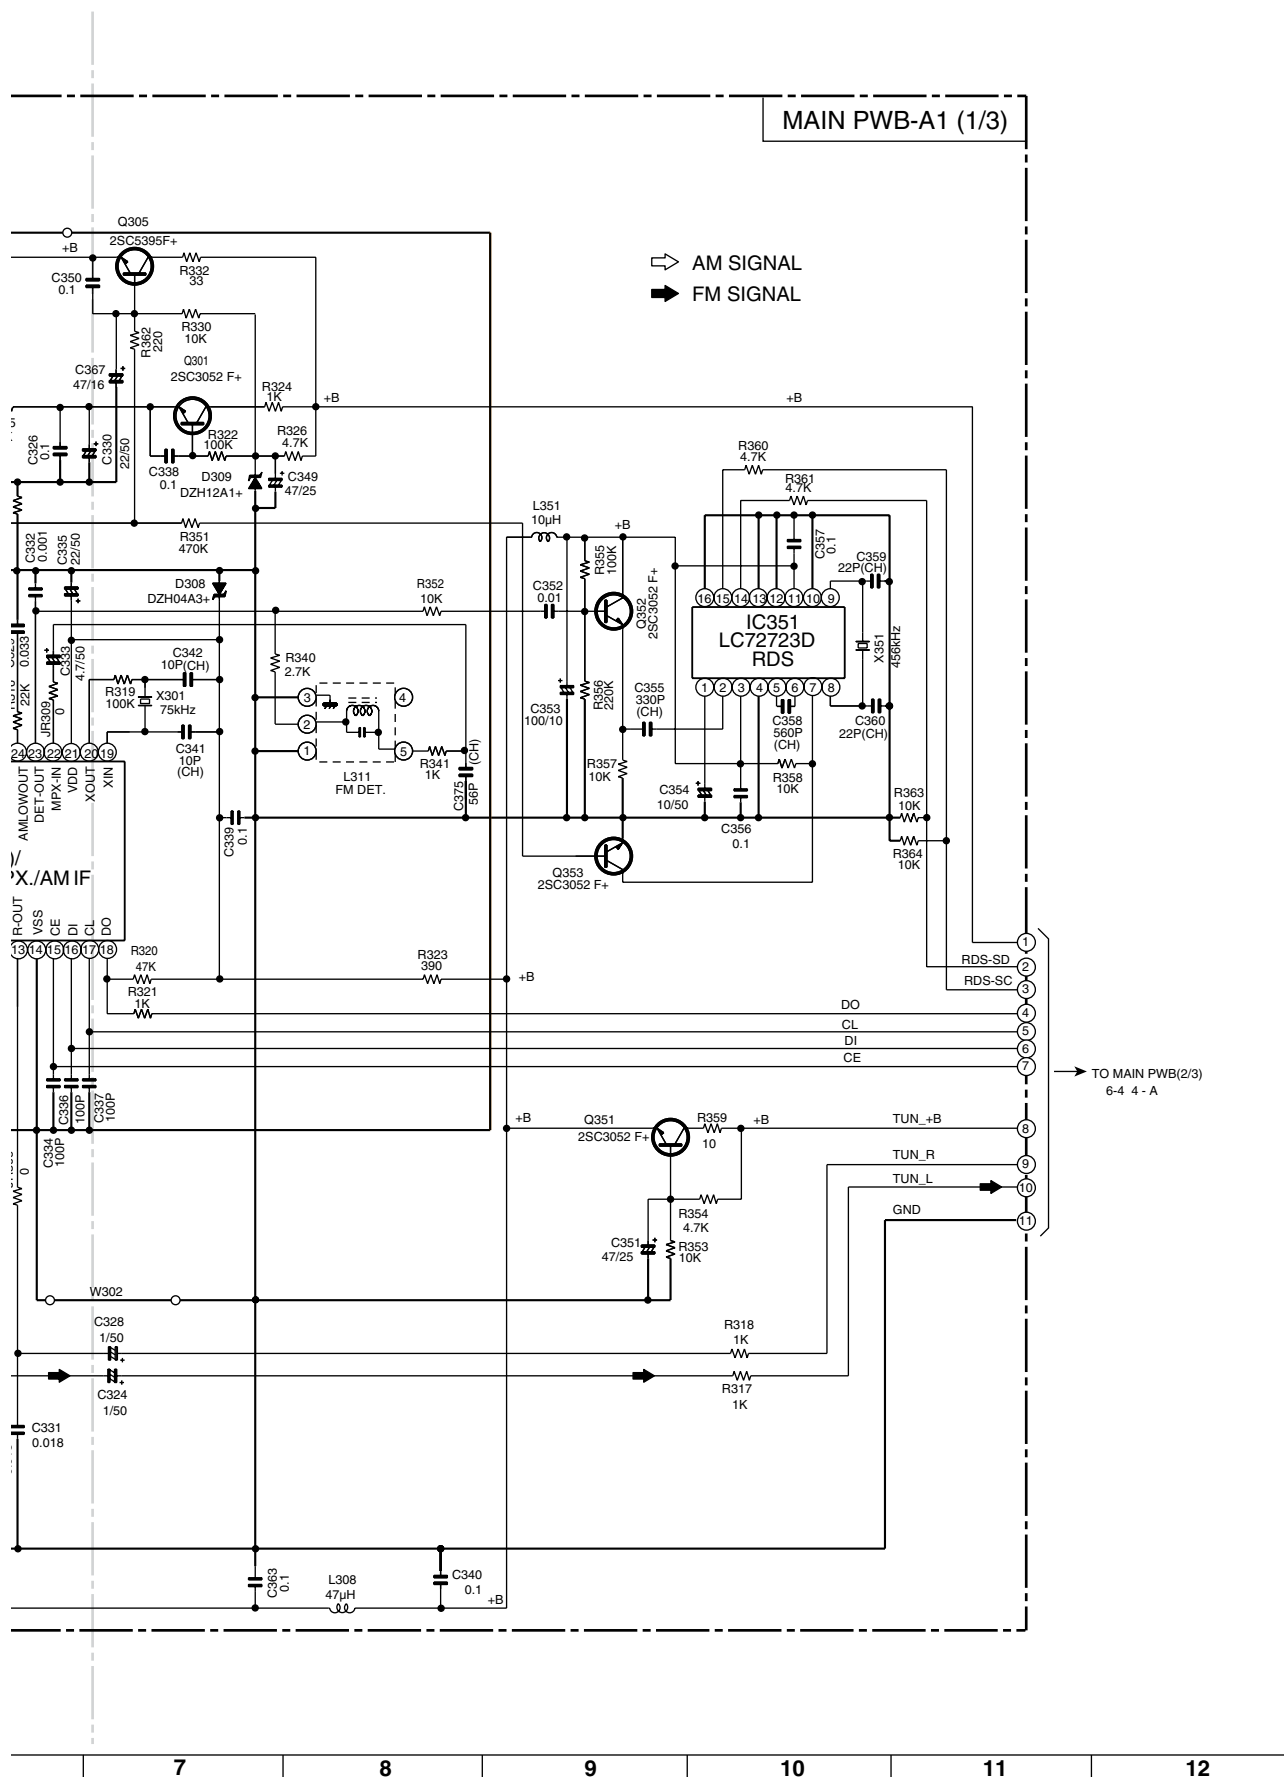


Figure 6-3 SCHEMATIC DIAGRAM (2/10)

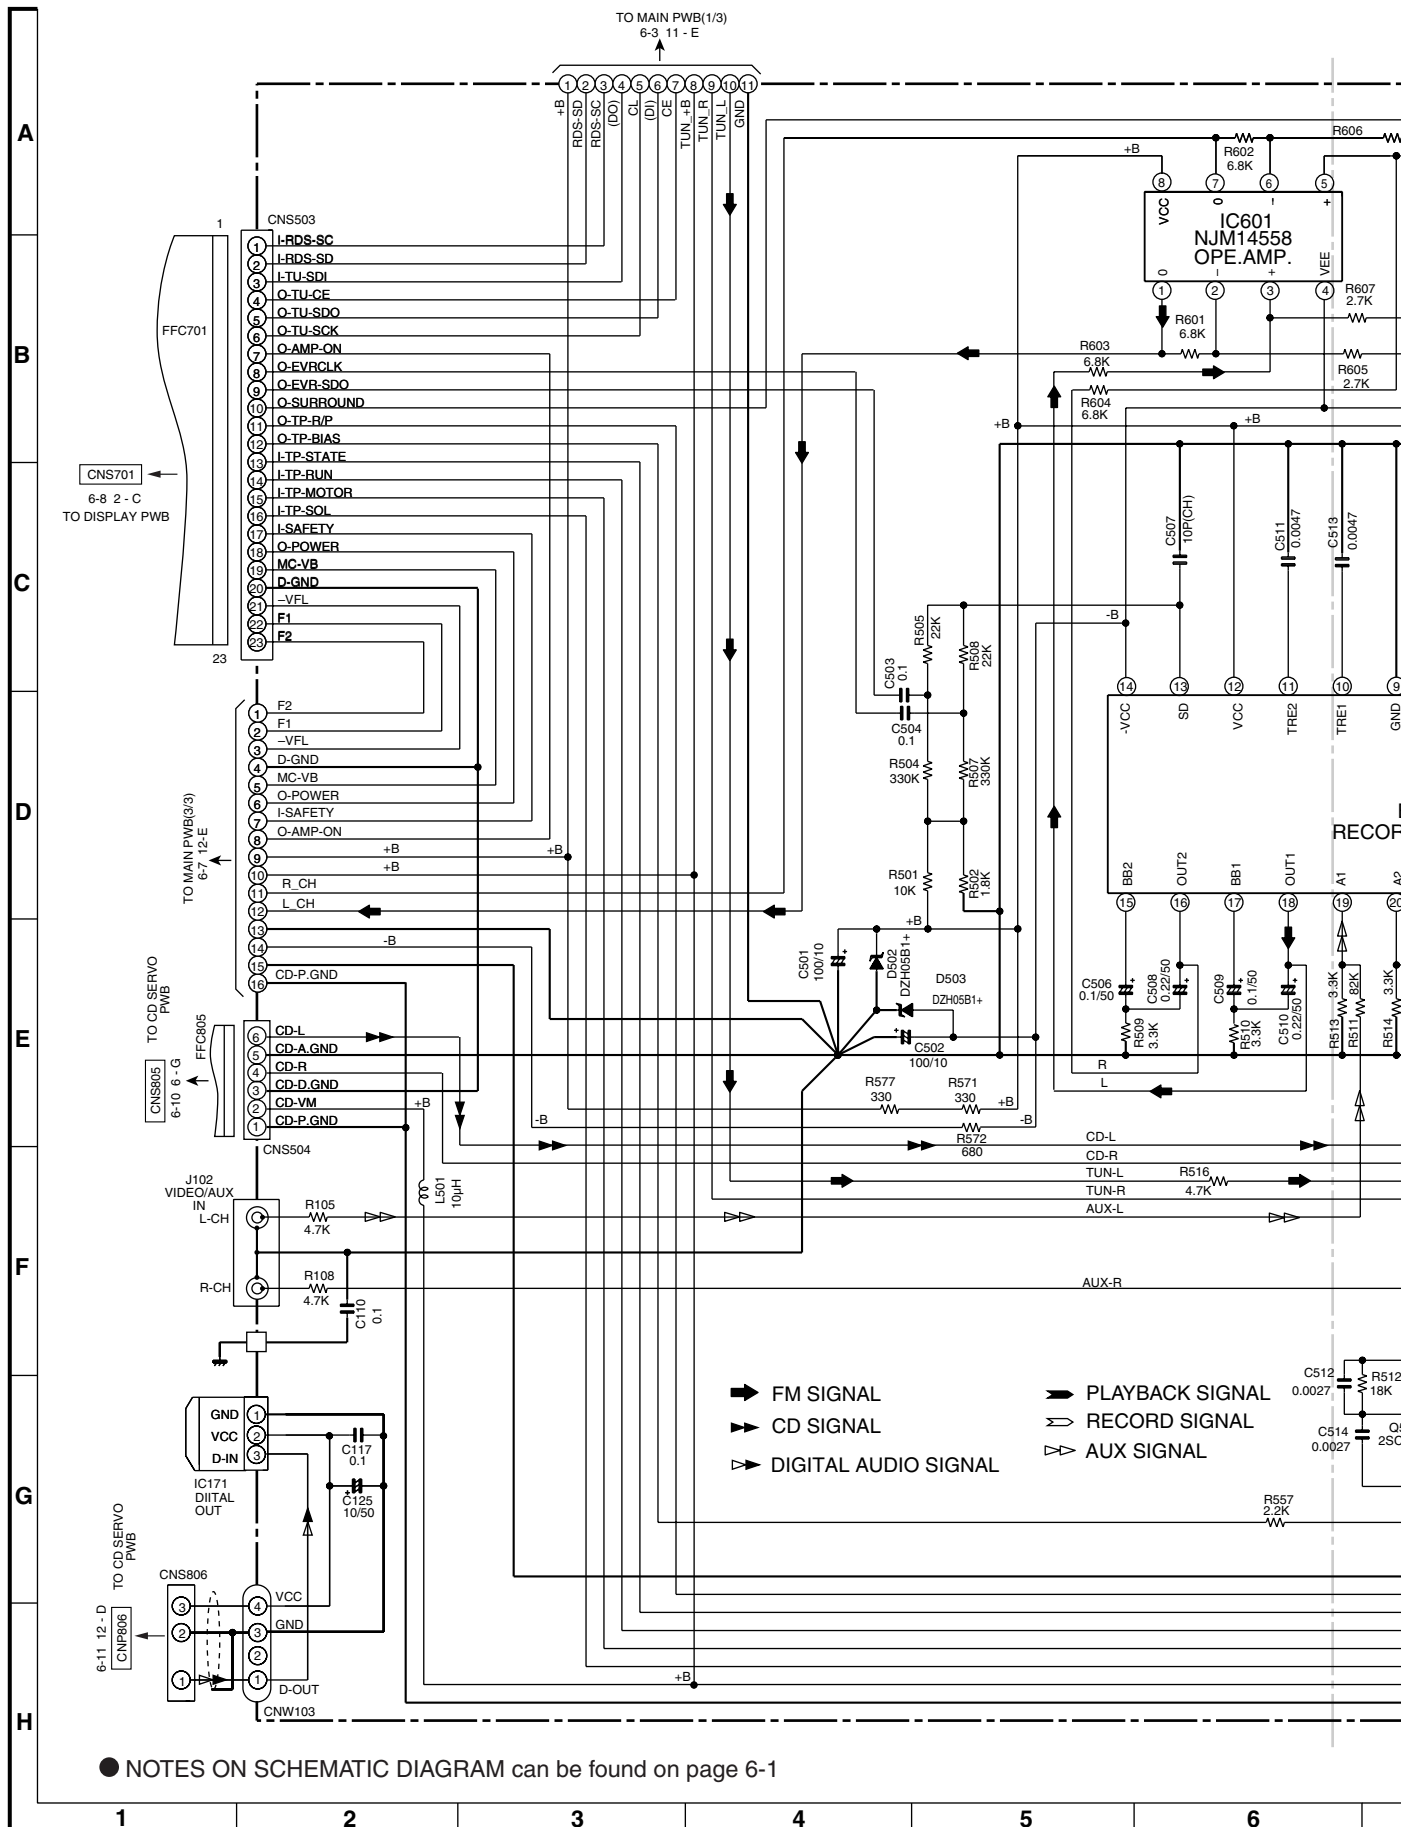


Figure 6-4 SCHEMATIC DIAGRAM (3/10)

6-5


6 – 6



6-7



6-8

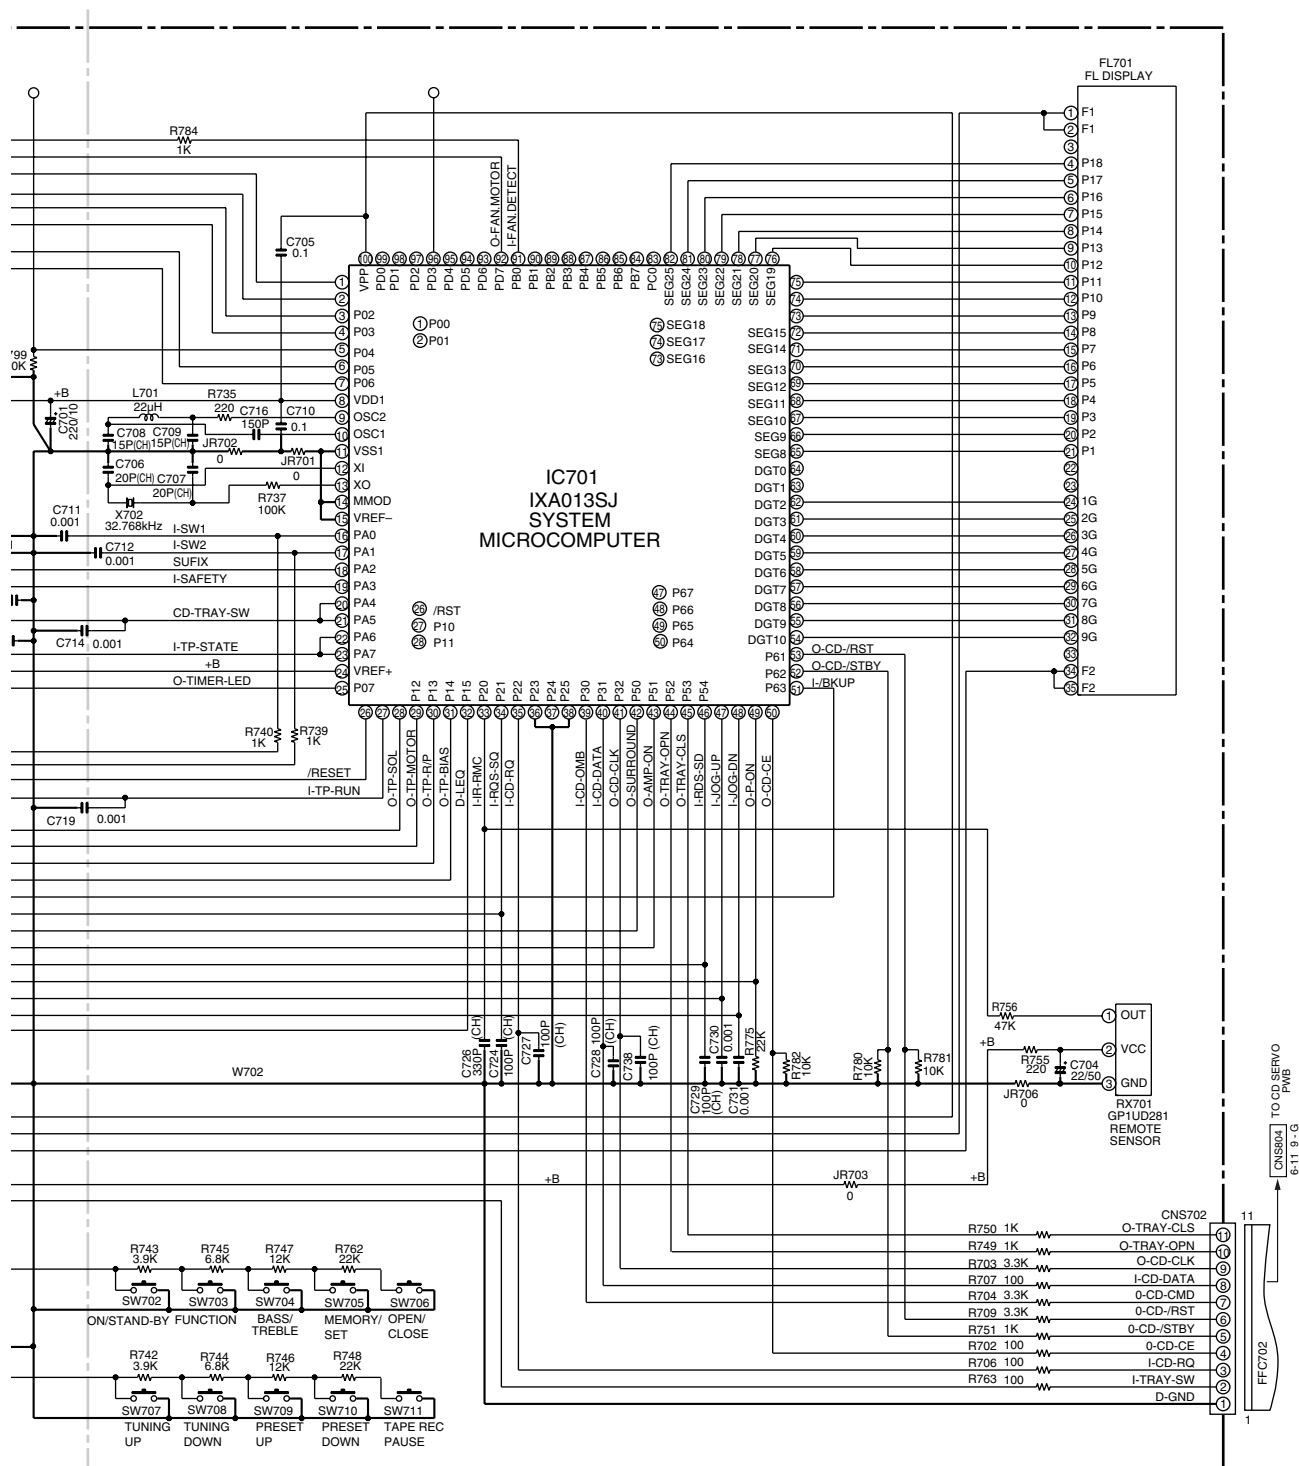

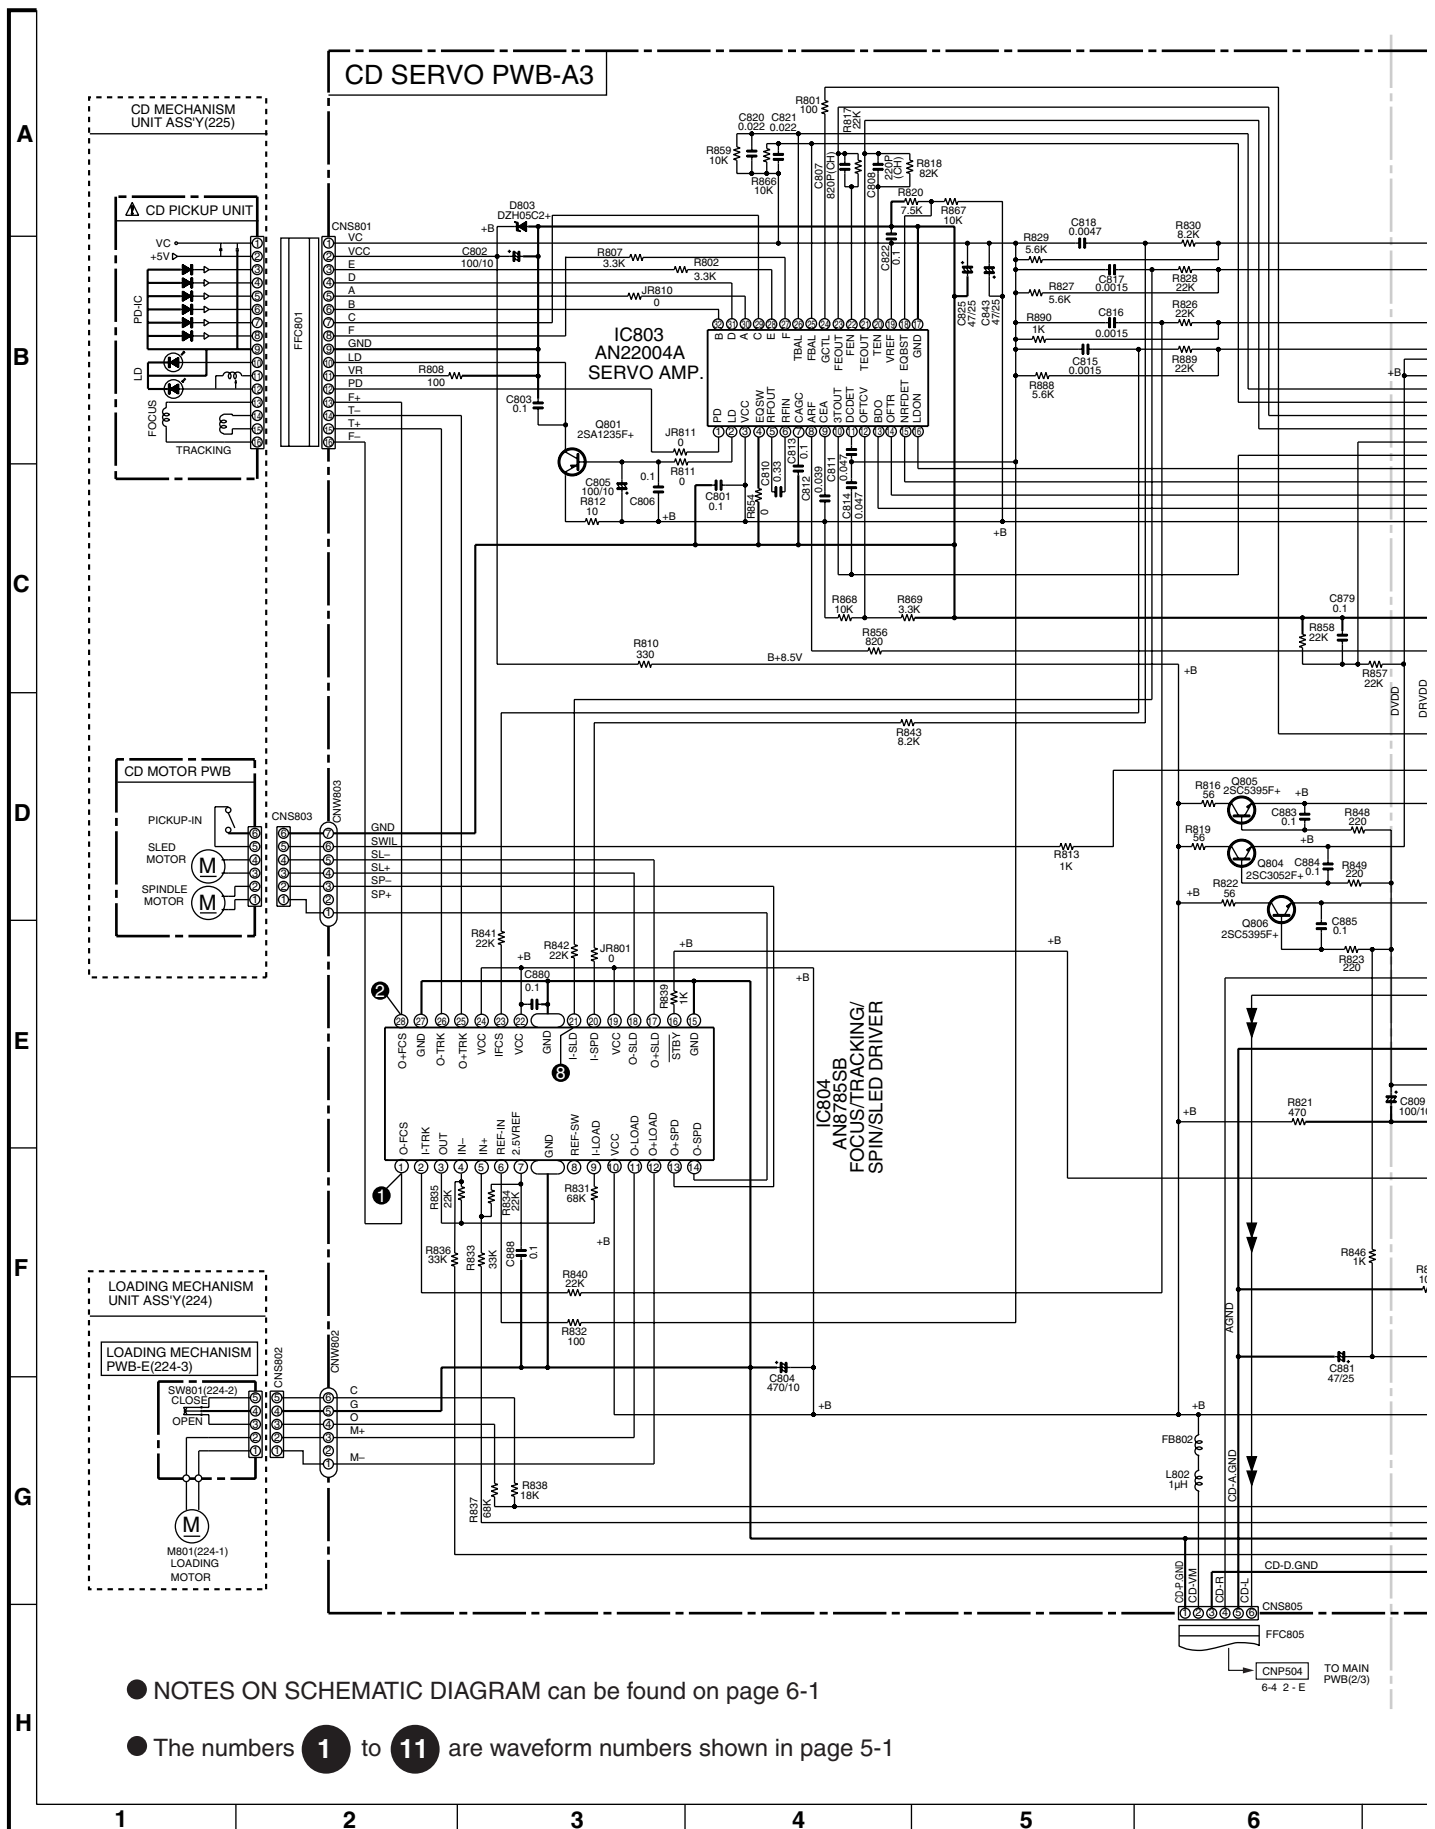


Figure 6-10 SCHEMATIC DIAGRAM (9/10)

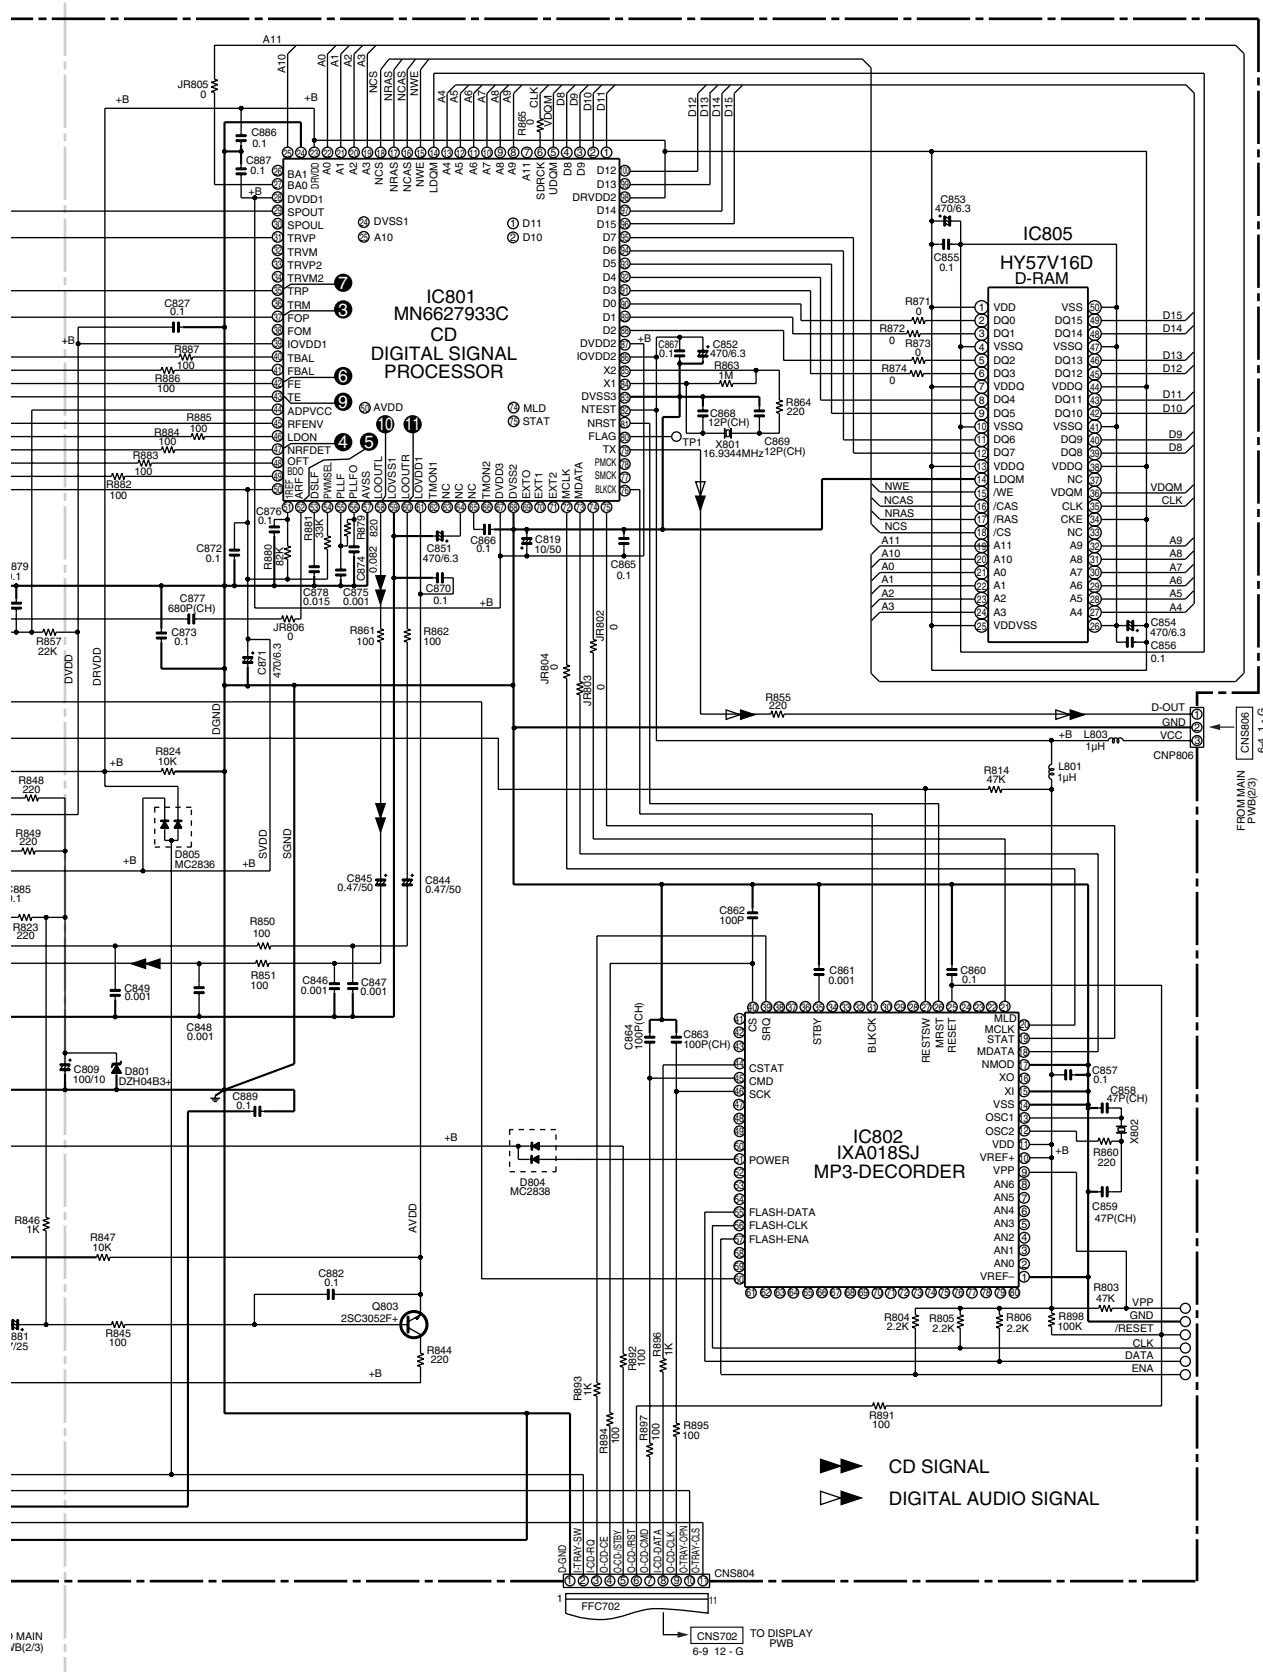


Figure 6-11 SCHEMATIC DIAGRAM (10/10)

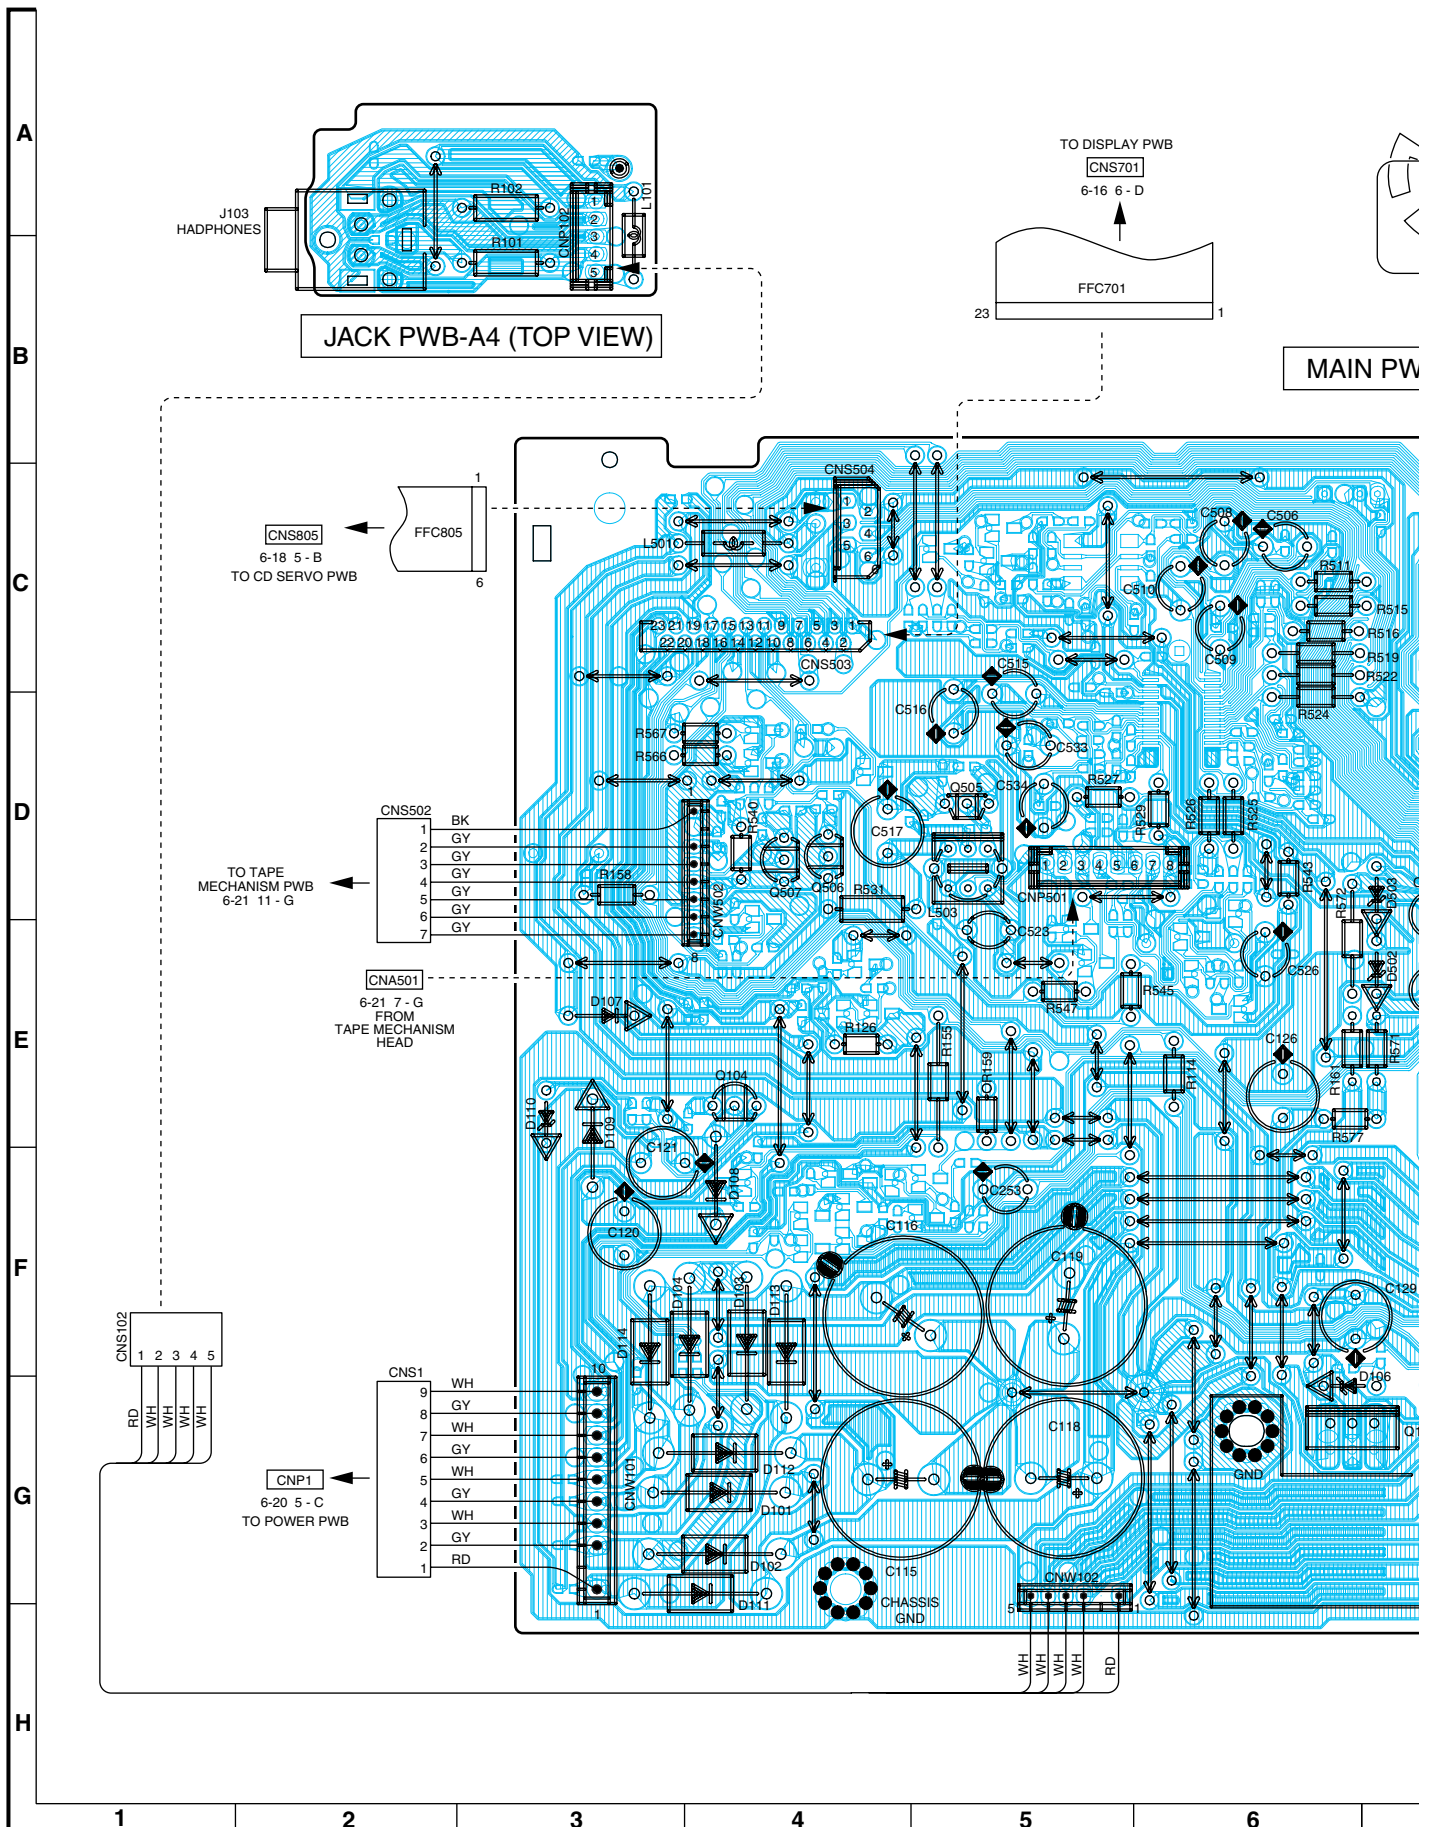


Figure 6-12 WIRING SIDE OF PWB (1/10)


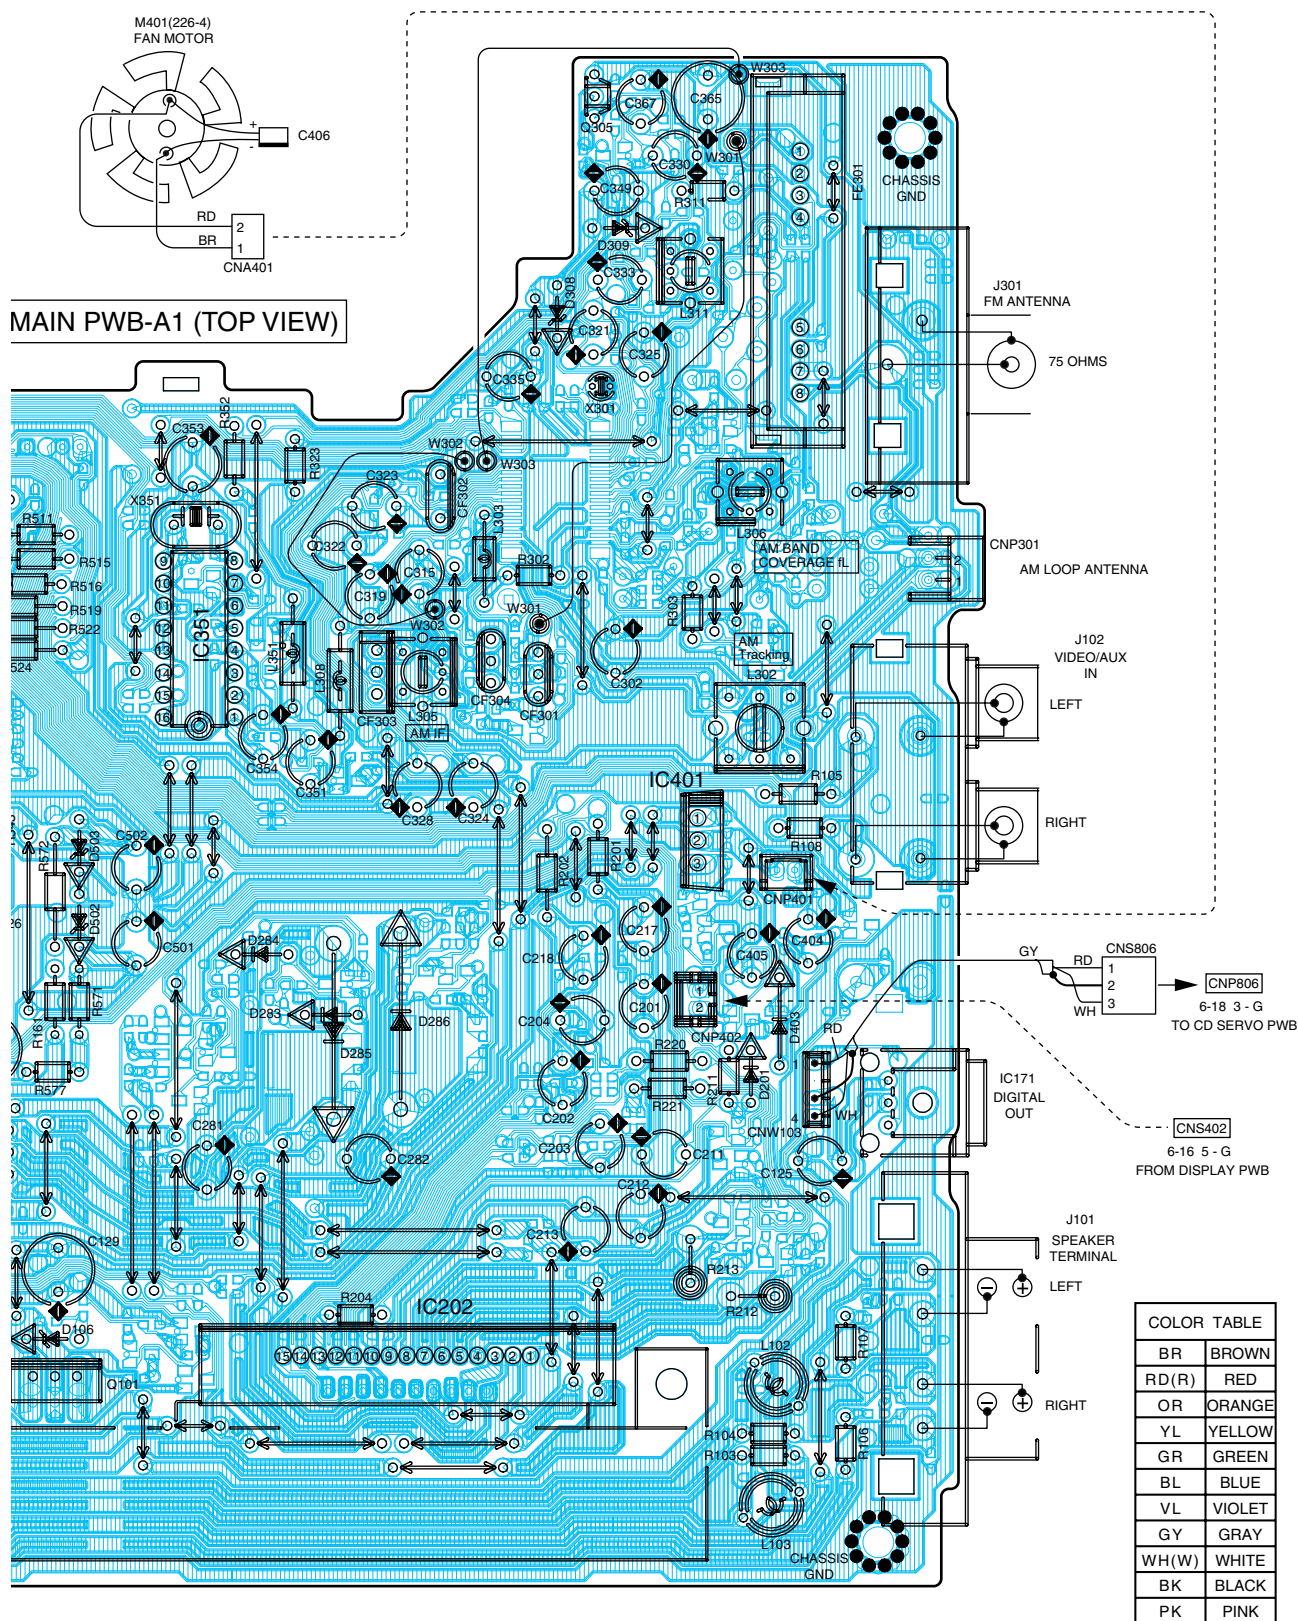



Figure 6-13 WIRING SIDE OF PWB (2/10)

6 - 14

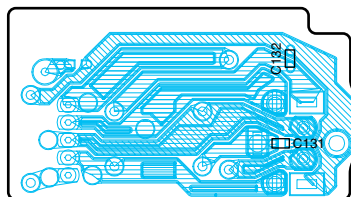

JACK PWB-A4 (BOTTOM VIEW)

MAIN PWB-A1 (BOTTOM VIEW)

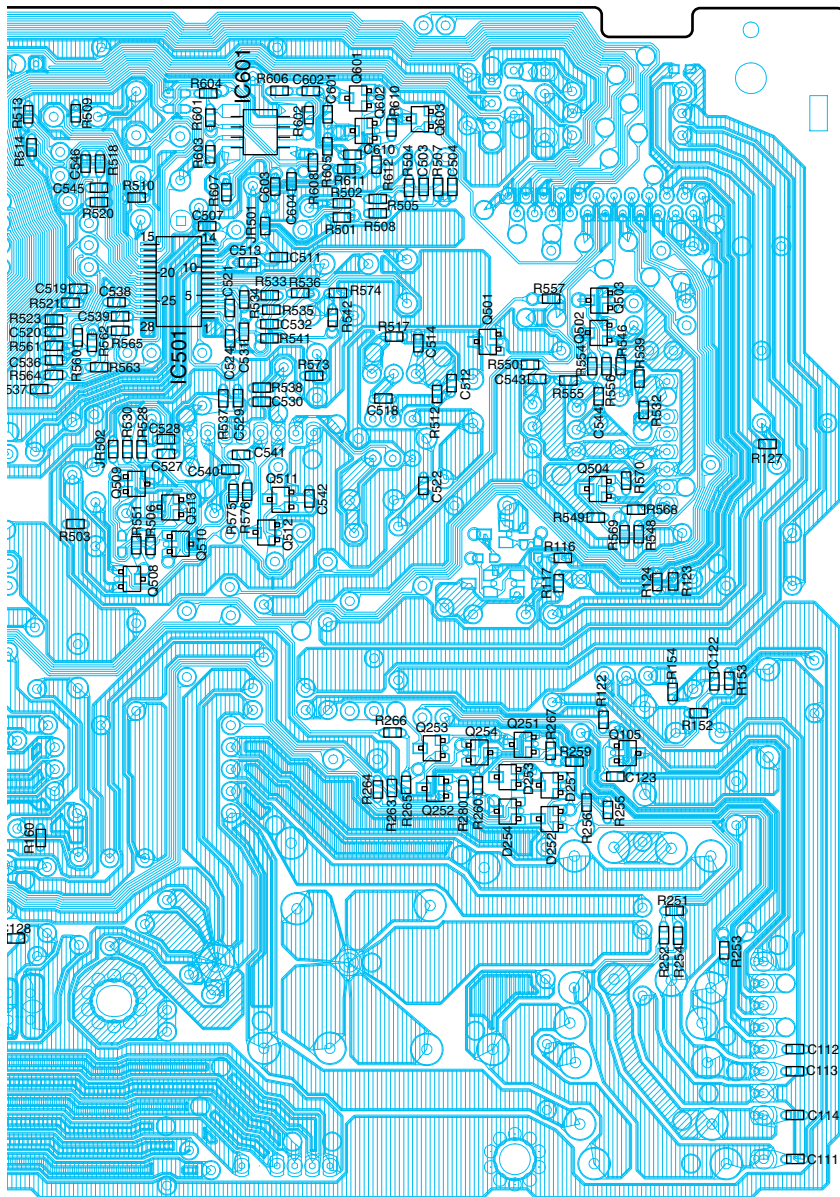

	7	8	9	10	11	12
--	---	---	---	----	----	----

Figure 6-15 WIRING SIDE OF PWB (4/10)

Figure 6-16 WIRING SIDE OF PWB (5/10)



Figure 6-17 WIRING SIDE OF PWB (6/10)

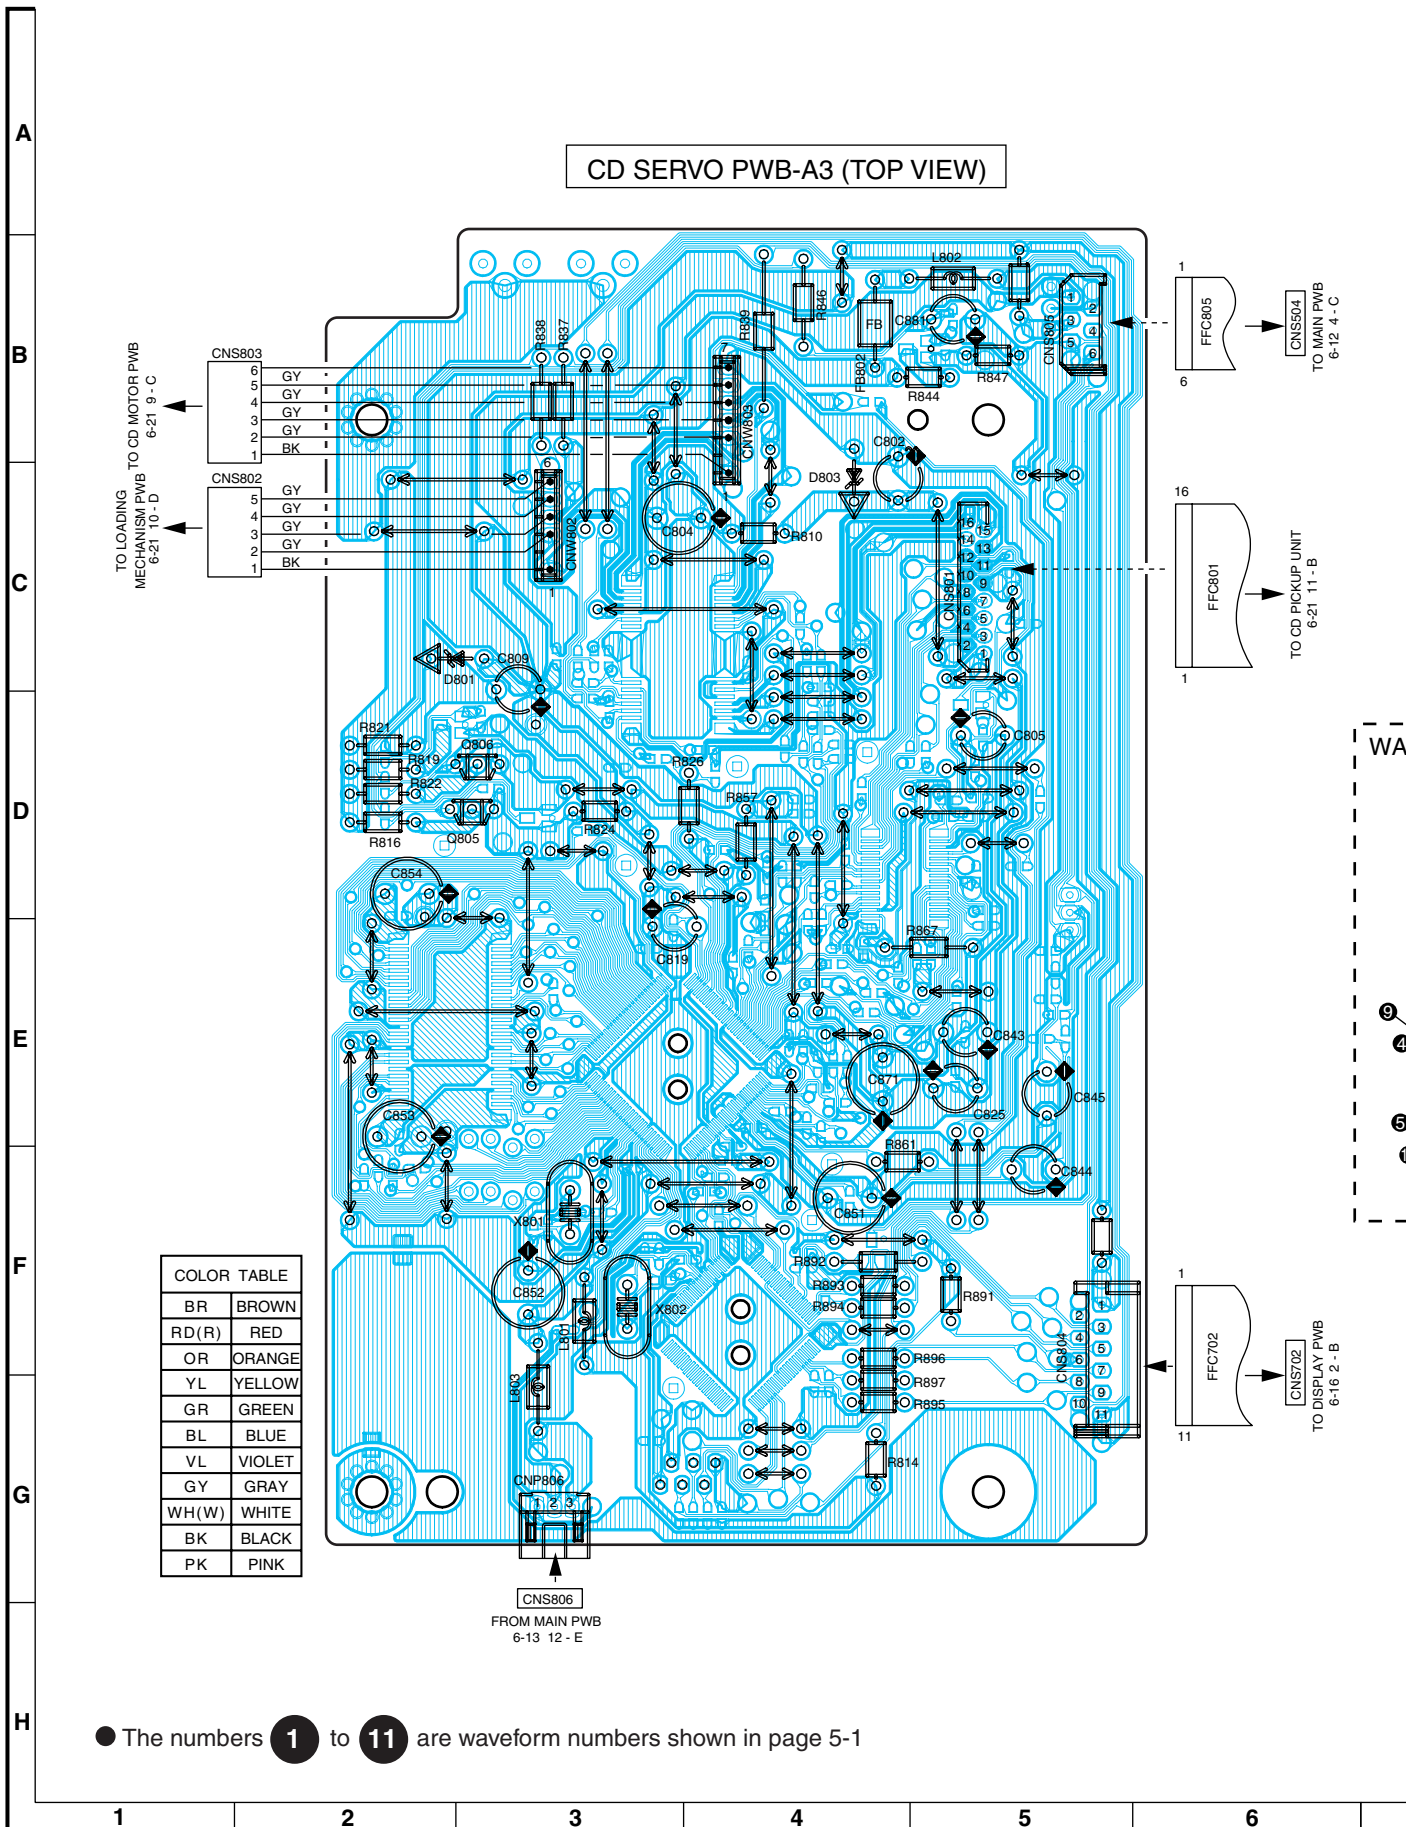
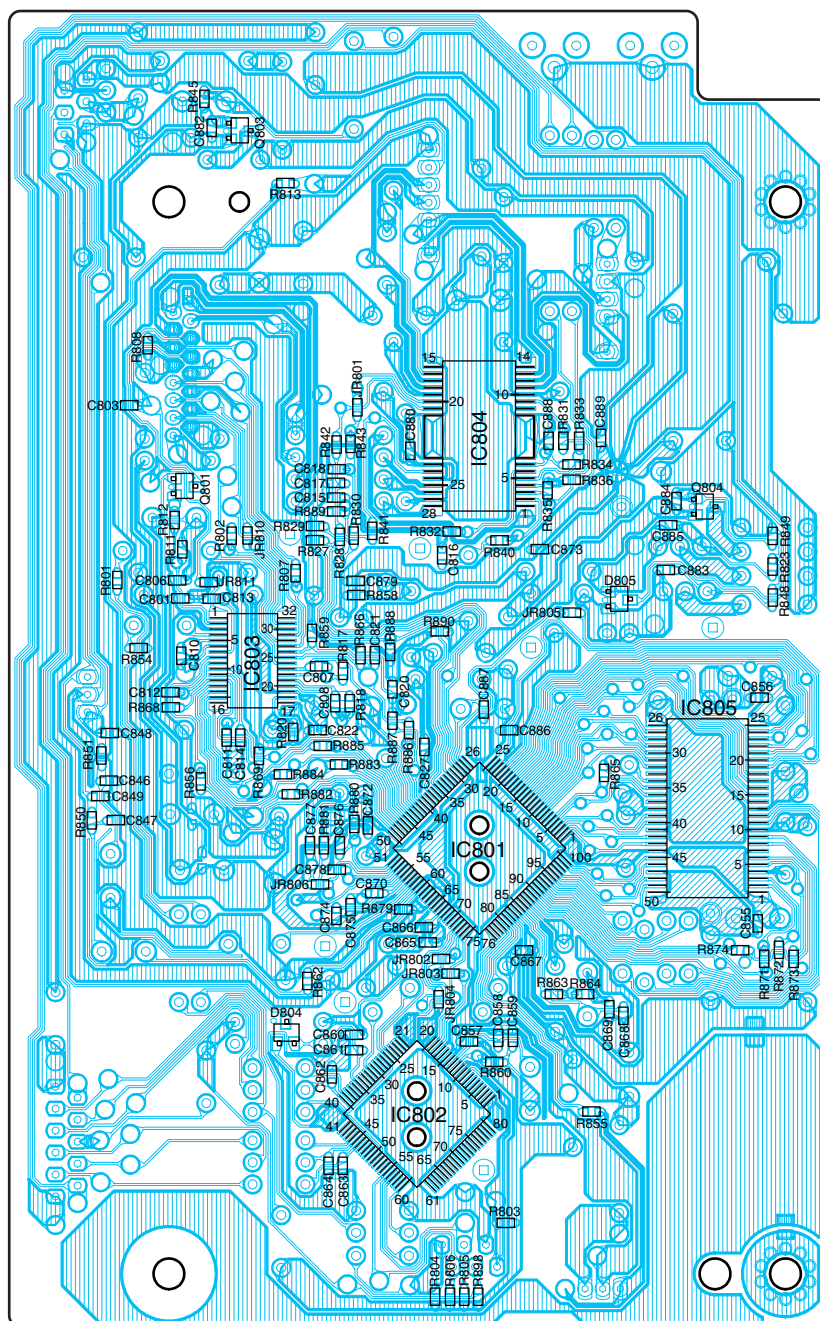
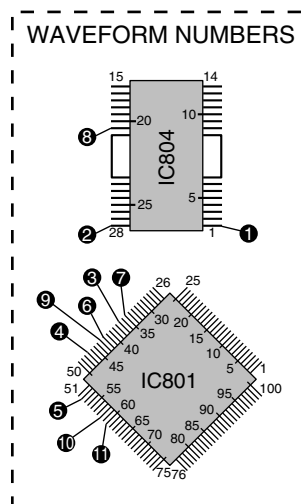


Figure 6-18 WIRING SIDE OF PWB (7/10)

6-16 2-B
DU DISPLAY FVWB

	7	8	9	10	11	12
--	---	---	---	----	----	----

Figure 6-19WIRING SIDE OF PWB (8/10)


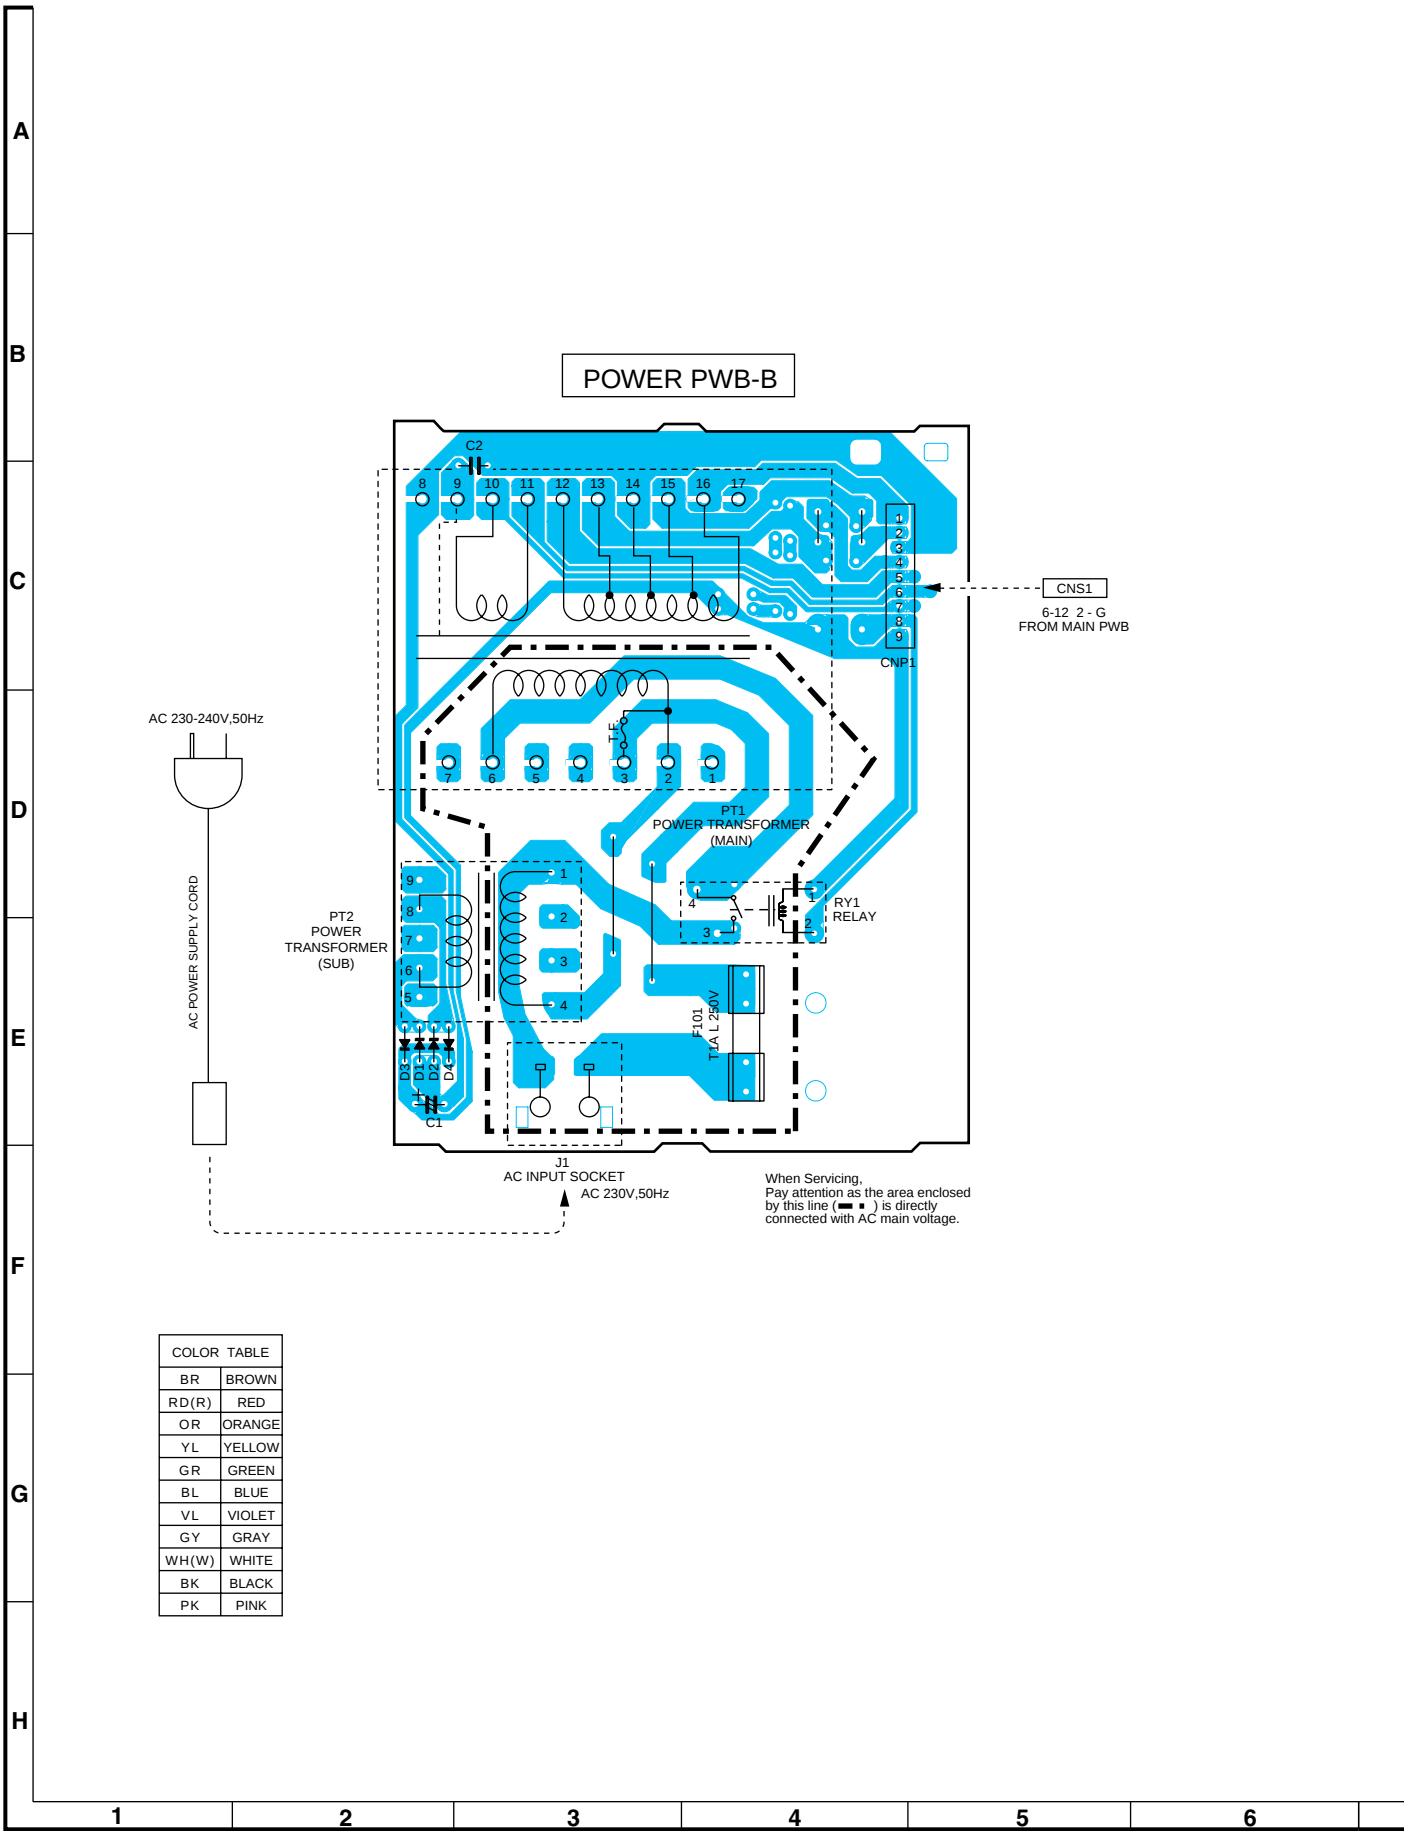


Figure 6-20 WIRING SIDE OF PWB (9/10)

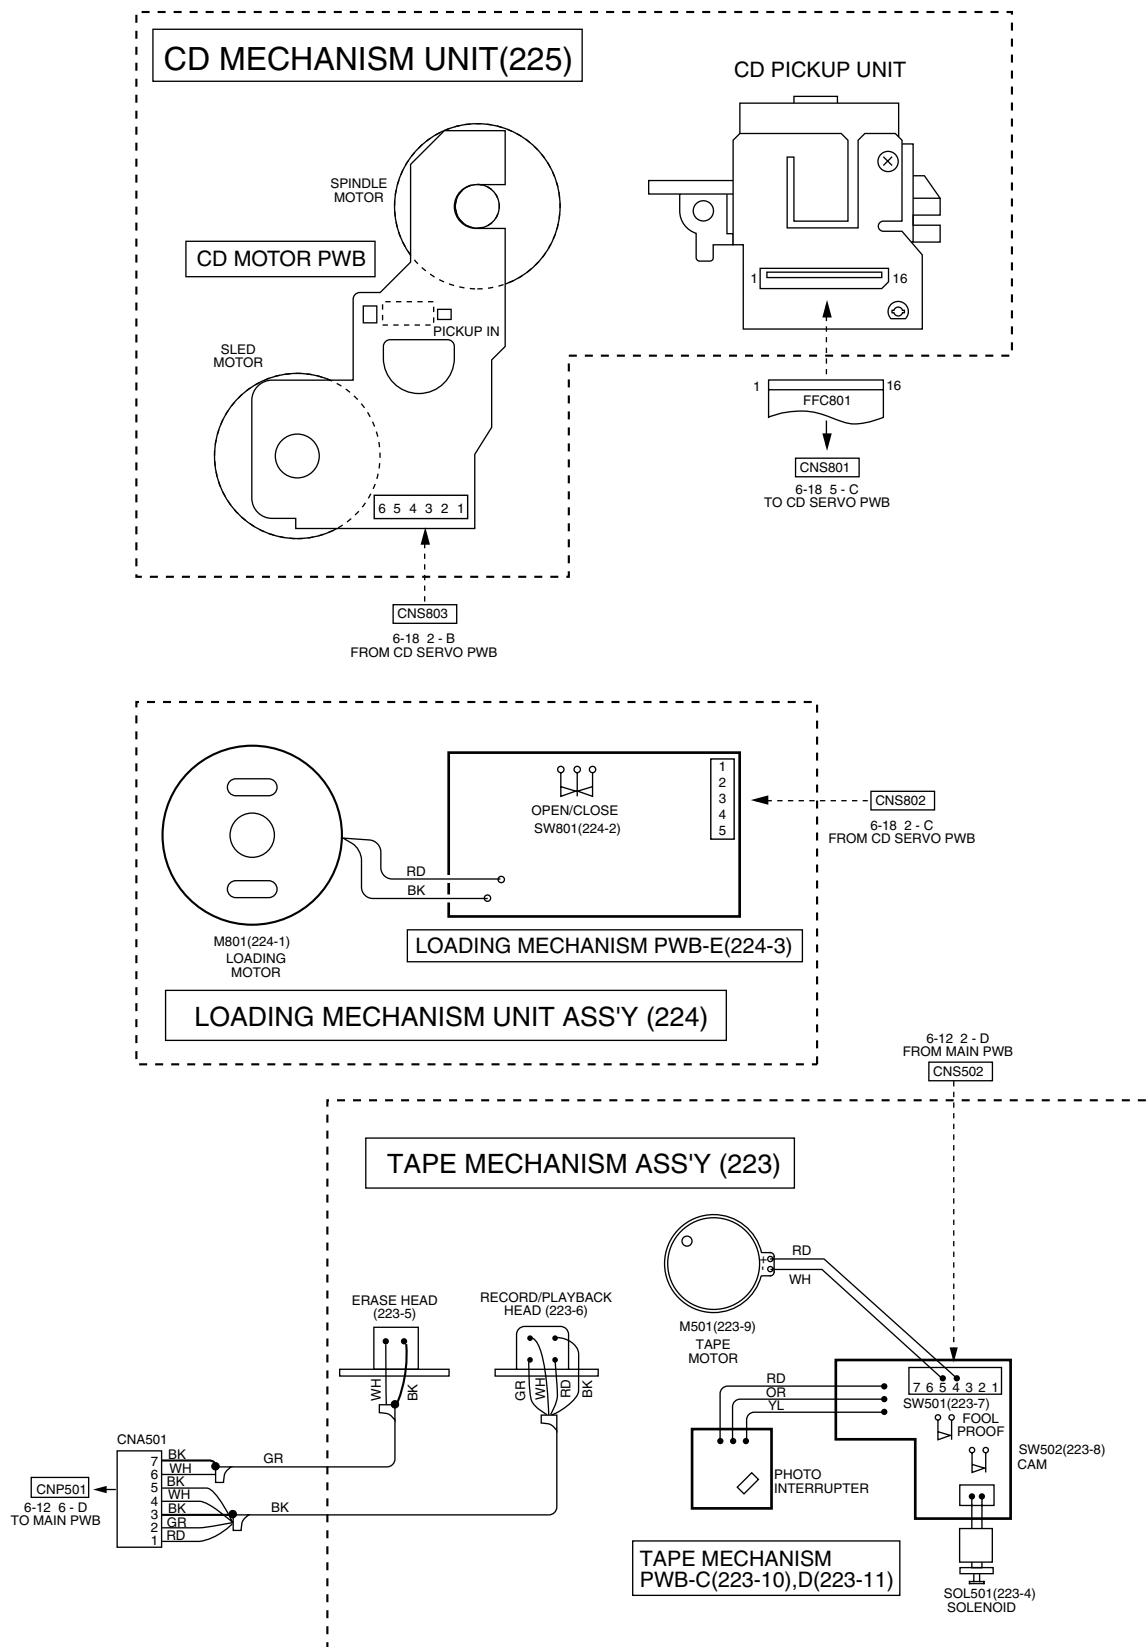

	7	8	9	10	11	12
--	---	---	---	----	----	----

Figure 6-21 WIRING SIDE OF PWB (10/10)

CHAPTER 7. CD CLEANER

[1] When the CD does not function

The CD section may not operate when the objective lens of the optical pickup is dirty. Clean the objective lens, and check the playback operation. When this section does not operate even after the above step is taken, check the following items.

Remove the cabinet and follow the trouble shooting instructions.

"Track skipping and/or no TOC (Table Of Contents) may be caused by build up of dust or other foreign matter on the laser pickup lens. Before attempting any adjustment make certain that the lens is clean. If not, clean it as mentioned below."

Turn the power off.

Gently clean the lens with a lens cleaning tissue and a small amount of isopropyl alcohol.

Do not touch the lens with the bare hand.


Dust gradually accumulates on the objective lens during use, and it may degrade performance. To avoid this problem, use a cleaning disc designed for CD optical pickup lenses.

HOW TO USE

1. Using the brush in the cleaner cap, apply 1 or 2 drops of the cleaning fluid to the brush on the CD cleaner disc which has the ▲ mark next to it.
2. Place the CD cleaner disc onto the CD disc tray with the brush side down, then press the play button.
3. You will hear music for about 20 seconds and the CD player will automatically stop. If it continues to turn, press the stop button.

CAUTION

- The CD lens cleaner should be effective for 30~50 operations, however if the brushes become worn out earlier then please replace the cleaner disc.
- If the CD cleaner brushes become very wet then wipe off any excess fluid with a soft cloth.
- Do not drink the cleaner fluid or allow it to come in contact with the eyes. In the event of this happening then drink and / or rinse with clean water and seek medical advice.
- The CD cleaner disc must not be used on car CD players or on computer CD ROM drives.
- All rights reserved. Unauthorized duplicating, broadcasting and renting this product is prohibited by law.

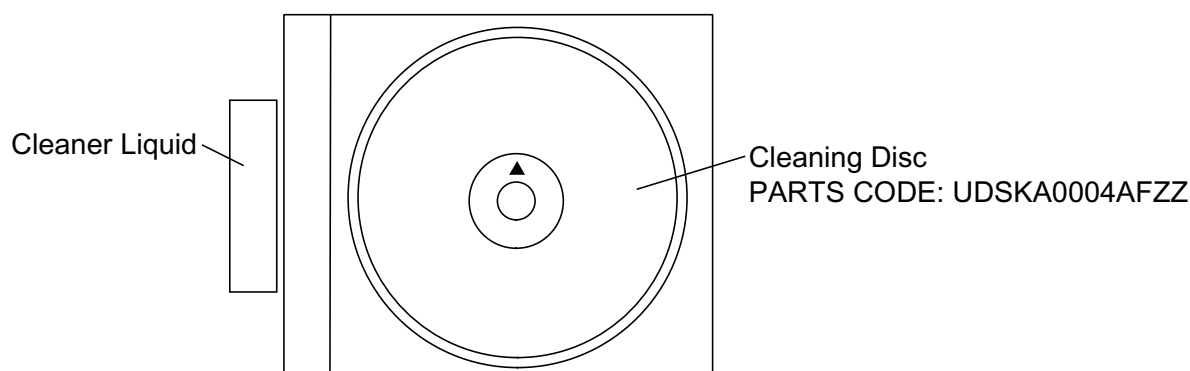

If pick up in SW cannot be switched on or off, turn off the power.

CHAPTER 8. OTHERS

[1] FUNCTION TABLE OF IC

IC202 VHISTK43306-1: Power (STK43306)

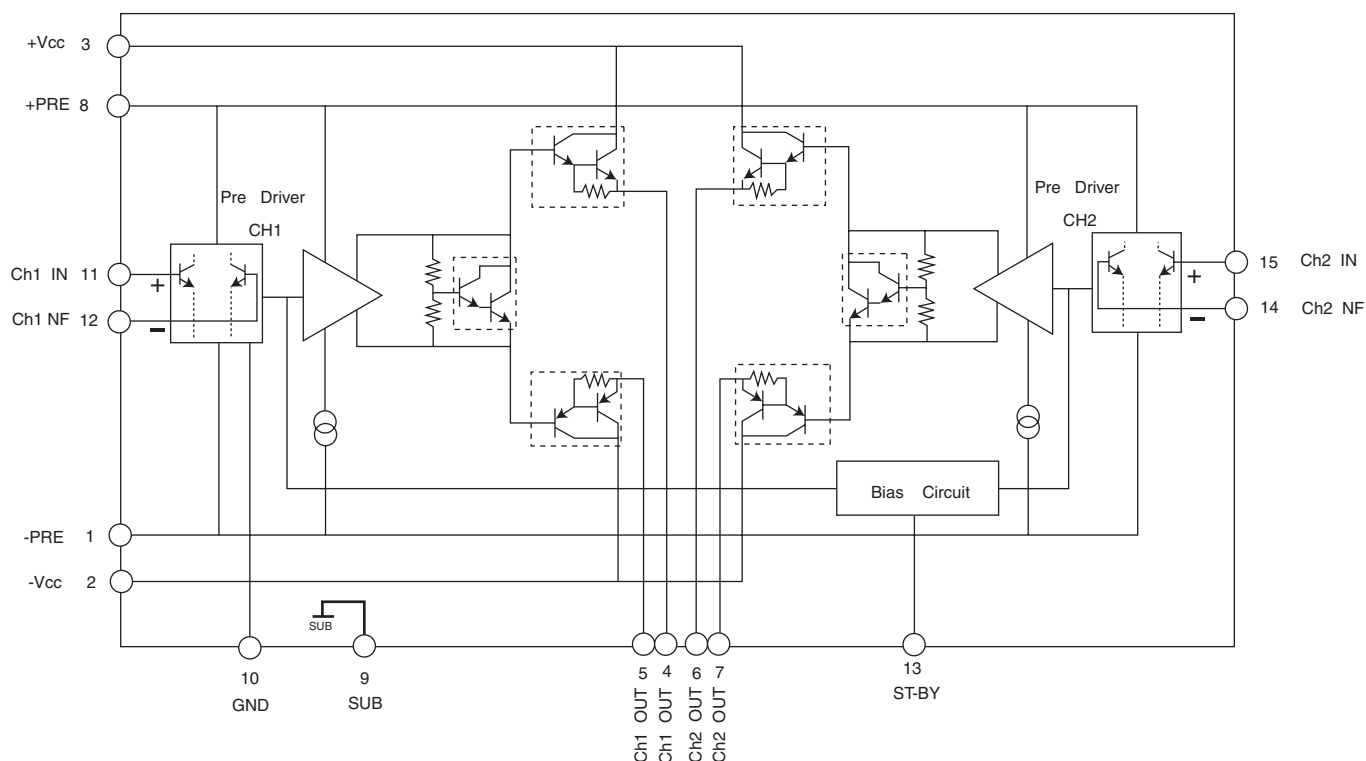


Figure 1 BLOCK DIAGRAM OF IC

IC301 VHILV23002M-1: PLL (Tuner)/FM IF Det./AM IF (LV23002M)

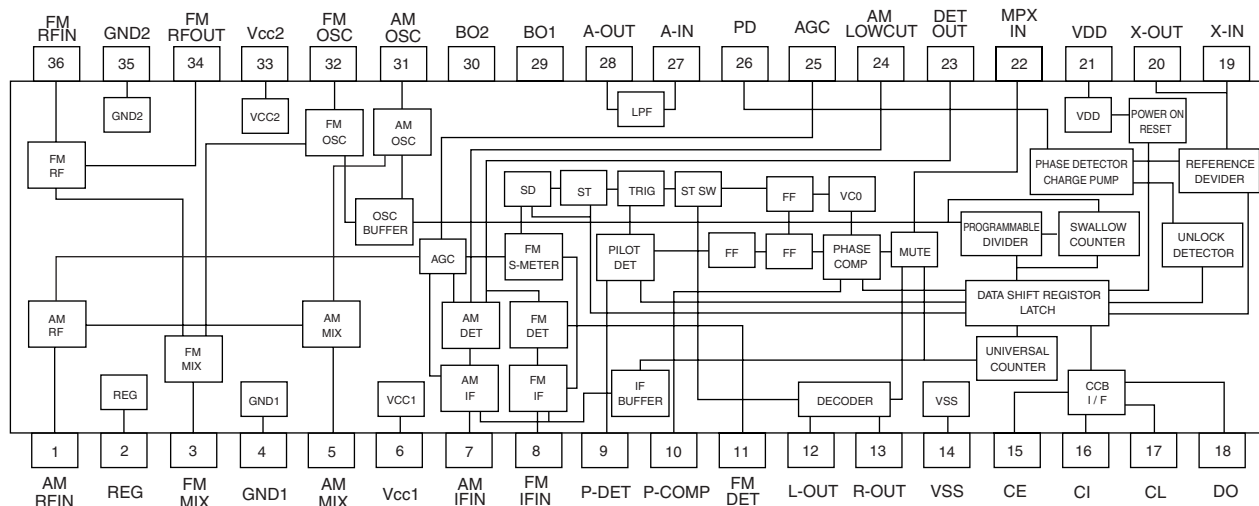


Figure 2 BLOCK DIAGRAM OF IC

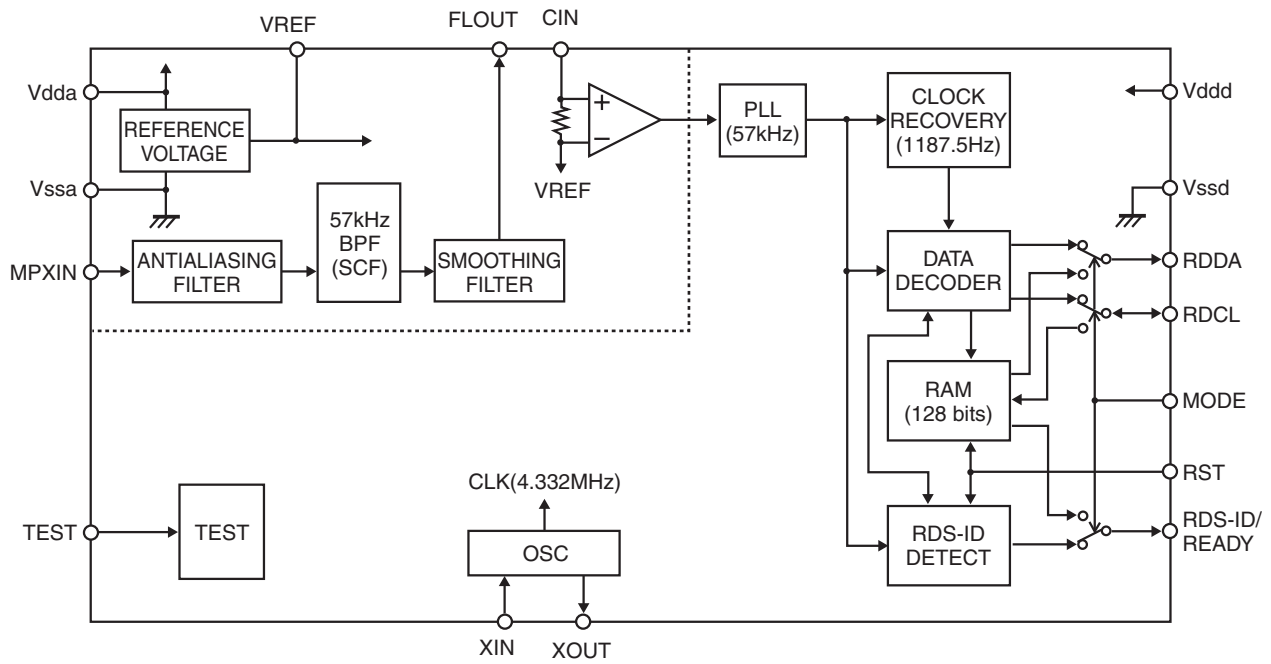
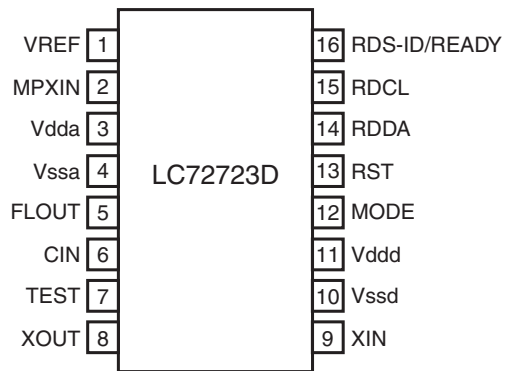


Figure 3 BLOCK DIAGRAM OF IC

IC501 VHIBD3881FV-1: Record/Playback Amp. (BD3881FV)

No.	Terminal Name	Function	No.	Terminal Name	Function
1	PB1N	Ch1 Tape Filter Pin	15	BAS2	Ch2 Bass Filter Setting Pin
2	PB1P	Ch1 Tape Input Pin	16	OUT2	Ch2 Output Pin
3	PB2P	Ch2 Tape Filter Pin	17	BAS1	Ch1 Bass Filter Setting Pin
4	PB2N	Ch2 Selector Output Pin	18	OUT1	Ch1 Output Pin
5	PB2O	Ch2 Selector Output Pin	19	INA1	Ch1 Input Pin A
6	PB1O	Ch1 Selector Output Pin	20	INA2	Ch2 Input Pin A
7	VOLIN1	Ch1 Volume Input Pin	21	INB1	Ch1 Input Pin B
8	VOLIN2	Ch2 Volume Input Pin	22	INB2	Ch2 Input Pin B
9	GND	Ground Pin	23	INC1	Ch1 Input Pin C
10	TRE1	Ch1 Treble Filter Setting Pin	24	INC2	Ch2 Input Pin C
11	TRE2	Ch2 Treble Filter Setting Pin	25	REC2C	Ch2 REC Output Pin
12	VDD	Positive Power Supply Pin	26	REC2N	Ch2 REC Filter Pin
13	CONT	Serial Control Receiving Pin	27	REC1N	Ch1 REC Filter Pin
14	VEE	Negative Power Supply Pin	28	REC1O	Ch1 REC Output Pin

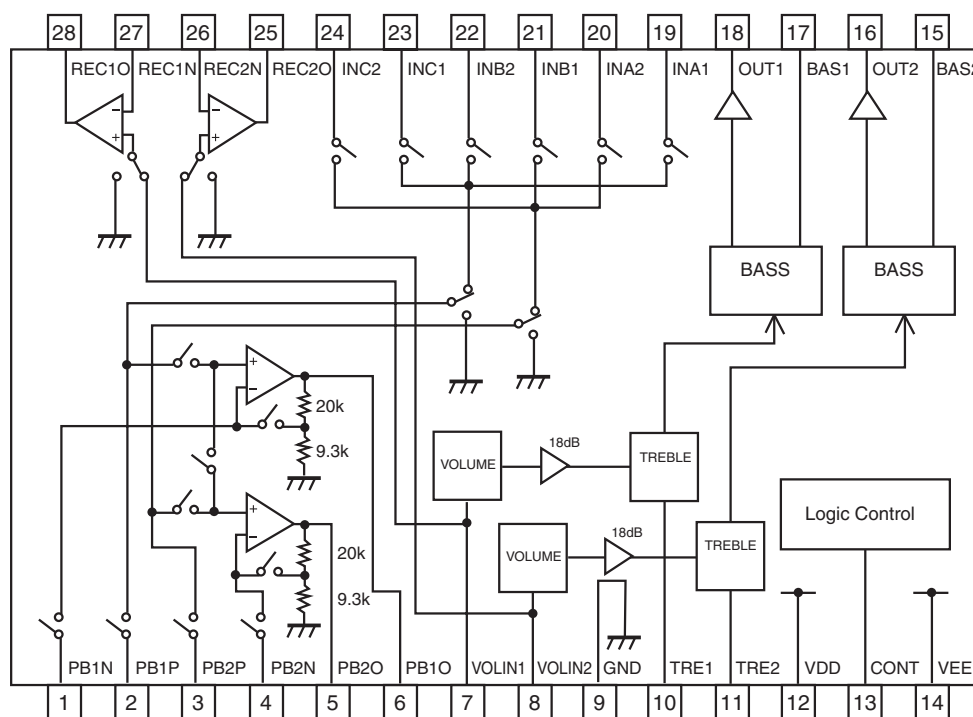


Figure 4 BLOCK DIAGRAM OF IC

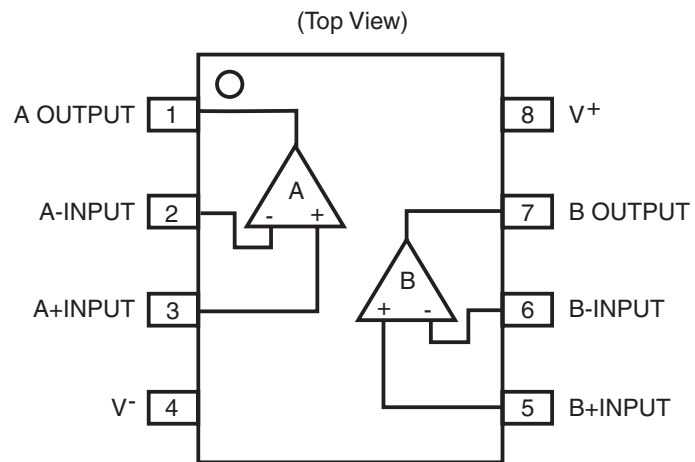
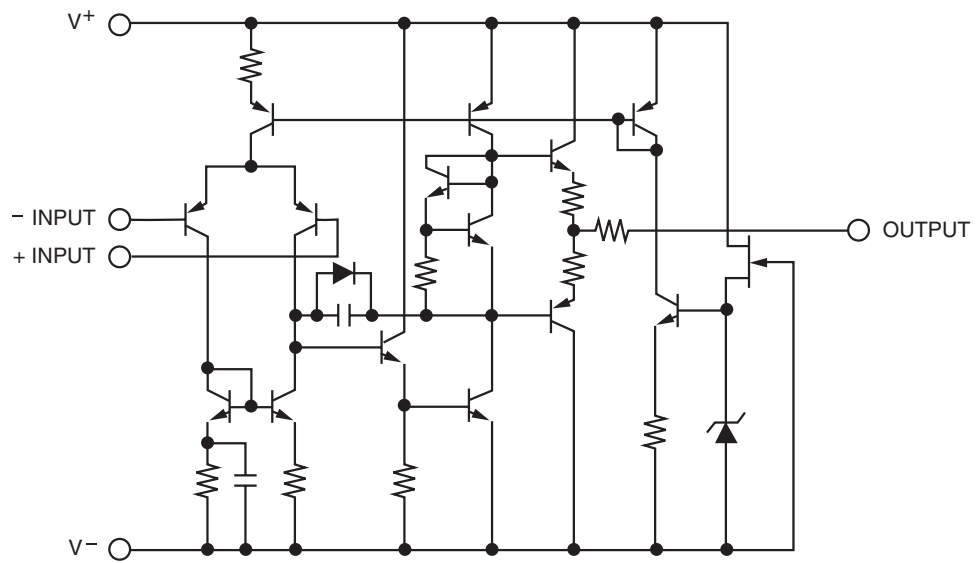


Figure 5 BLOCK DIAGRAM OF IC

IC701 RH-iXA013SJZZ: System Microcomputer (IXA013SJ)

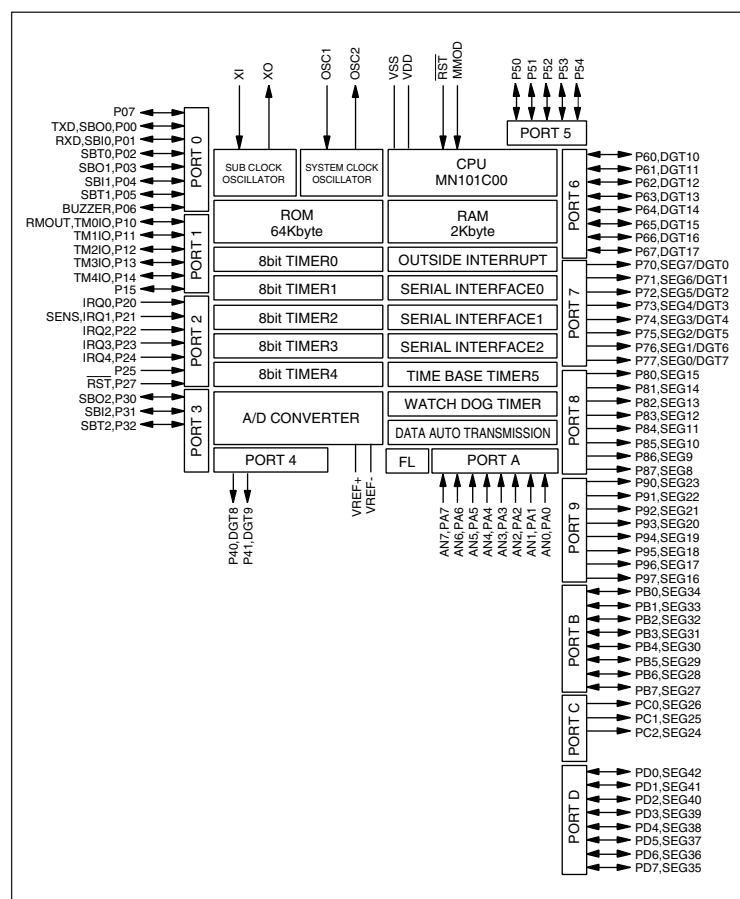
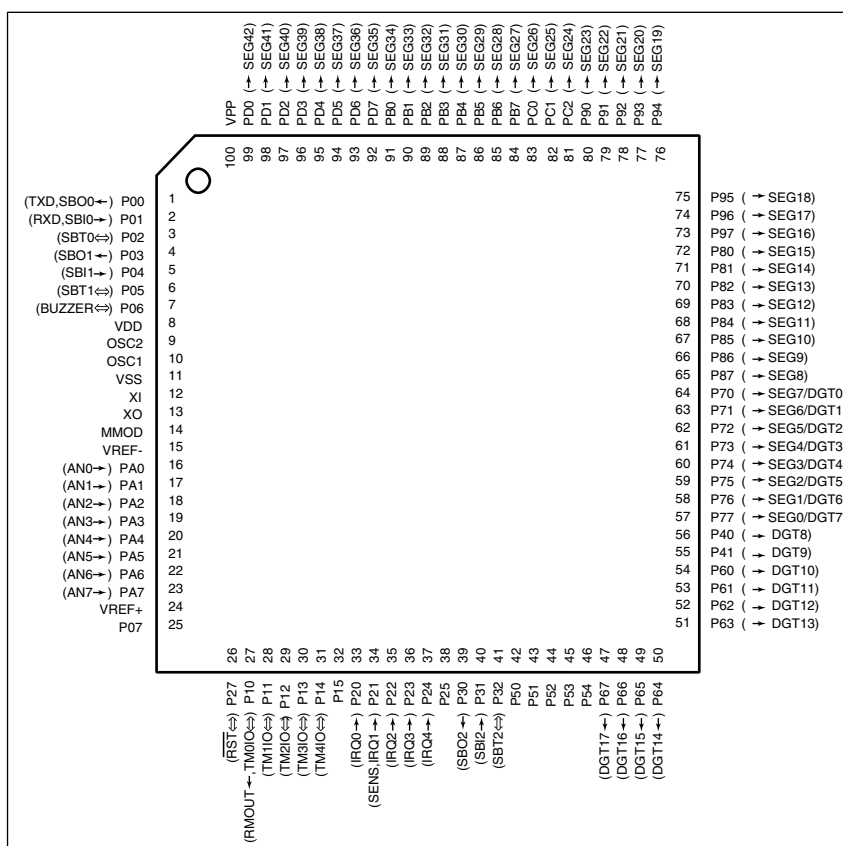


Figure 6 BLOCK DIAGRAM OF IC

XL-MP100H

IC801 VHIMN6627933C: CD Digital Signal Processor (MN6627933C) (1/2)

Pin No.	Terminal Name	I/O	Function
1	D11	I/O	DRAM data signal input/output 11
2	D10	I/O	DRAM data signal input/output 10
3	D9	I/O	DRAM data signal input/output 9
4	D8	I/O	DRAM data signal input/output 8
5	UDQM	O	SDRAM upper byte data mask signal output
6	SDRCK	O	SDRAM clock signal output
7*	A11	O	DRAM address signal output 11
8	A9	O	DRAM address signal output 9
9	A8	O	DRAM address signal output 8
10	A7	O	DRAM address signal output 7
11	A6	O	DRAM address signal output 6
12	A5	O	DRAM address signal output 5
13	A4	O	DRAM address signal output 4
14	LDQM	O	SDRAM lower byte data mask signal output
15	NWE	O	DRAM write enable signal output
16	NCAS	O	DRAM CAS control signal output
17	NRAS	O	DRAM RAS control signal output
18	NCS	O	SDRAM chip select signal output
19	A3	O	DRAM address signal output 3
20	A2	O	DRAM address signal output 2
21	A1	O	DRAM address signal output 1
22	A0	O	DRAM address signal output 0
23	DRVDD1	I	DRAM interface I/O power supply 1
24	DVSS1	I	Digital circuit GND 1
25	A10	O	DRAM address signal output 10
26*	*BA1	O	SDRAM bank select signal output 1
27	*BA0	O	SDRAM bank select signal output 0
28	DVDD1	I	Internal digital circuit power supply 1
29	SPOUT	O	Spindle drive signal output (absolute value)
30*	*SPPOL	O	Spindle drive signal output (polarized)
31	TRVP	O	Traverse drive signal output (positive)
32*	*TRVM	O	Traverse drive signal output (negative)
33*	*TRVP2	O	Traverse drive signal output 2 (positive)
34*	*TRVM2	O	Traverse drive signal output 2 (negative)
35	TRP	O	Tracking drive signal output (positive)
36*	*TRM	O	Tracking drive signal output (negative)
37	FOP	O	Focus drive signal output (positive)
38*	*FOM	O	Focus drive signal output (negative)
39	IOVDD1	I	Digital I/O power supply 1
40	TBAL	O	Tracking balance adjustment signal output
41	FBAL	O	Focus balance adjustment signal output
42	FE	I	Focus error signal input
43	TE	I	Tracking error signal input
44	ADPVCC	I	Voltage input for monitoring power supply
45	RFENV	I	RF envelope signal input
46	LDON	O	Laser ON signal output
47	NRFDET	I	RF detection signal input
48	OFT	I	Off-track signal input
49	BDO	I	Drop-out signal input
50	AVDD	I	Analog circuit power supply 1
51	IREF	I	Analog reference current input
52	ARF	I	RF signal input
53	DSLIF	O	DSL loop filter pin
54	PWMSEL	I	PWM output mode switch input. L: direct H: ternary
55	PLLIF	O	PLL loop filter pin (phase comparison output)
56	PLLFO	O	PLL loop filter pin (speed comparison output)
57	AVSS	I	Analog circuit GND 1

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

NOTE: Signals with * are switched to other signals by microcomputer command.

DRAM pins differ in specifications depending on the type and capacity.

IC801 VHIMN6627933C: CD Digital Signal Processor (MN6627933C) (2/2)

Pin No.	Terminal Name	I/O	Function
58	LOOUTL	O	Left channel audio signal output for line-out output
59	LOVSS1	I	Line-out output GND
60	LOOUTR	O	Right channel audio signal output for line-out output
61	LOVDD1	I	Line-out output power supply
62*	N.C.	—	
63*	TMON	O	Test monitor output 1
64	N.C.	—	
65	N.C.	—	
66*	TMON2	O	Test monitor output 2
67	DVDD3	I	Digital circuit power supply 3
68	DVSS2	I	Digital circuit GND 2
69*	*EXT0	I/O	Extended input/output port 0
70*	*EXT1	I/O	Extended input/output port 1
71*	*EXT2	I/O	Extended input/output port 2
72	MCLK	I	Microcomputer command clock signal input
73	MDATA	I	Microcomputer command data signal input
74	MLD	I	Microcomputer command load signal input
75	*STAT	O	Status signal output
76	*BLKCK	O	Sub code block clock signal output
77*	*SMCK	O	4.2336/8.4672 MHz clock signal output
78*	*PMCK	O	88.2 kHz clock signal output
79	*TX	O	Digital audio interface signal output
80	*FLAG	O	Flag signal output
81	NRST	I	LSI reset signal input
82	NTEST	I	Test mode setting input
83	DVSS3	I	Digital circuit GND 3
84	X1	I	Crystal oscillation circuit input
85	X2	O	Crystal oscillation circuit output
86	IOVDD2	I	Digital I/O power supply 2
87	DVDD2	I	Internal digital circuit power supply 2
88	D2	I/O	DRAM data signal input/output 2
89	D1	I/O	DRAM data signal input/output 1
90	D0	I/O	DRAM data signal input/output 0
91	D3	I/O	DRAM data signal input/output 3
92	D4	I/O	DRAM data signal input/output 4
93	D5	I/O	DRAM data signal input/output 5
94	D6	I/O	DRAM data signal input/output 6
95	D7	I/O	DRAM data signal input/output 7
96	D15	I/O	DRAM data signal input/output 15
97	D14	I/O	DRAM data signal input/output 14
98	DRVDD2	I	DRAM interface I/O power supply 2
99	D13	I/O	DRAM data signal input/output 13
100	D12	I/O	DRAM data signal input/output 12

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

NOTE: Signals with * are switched to other signals by microcomputer command.

DRAM pins differ in specifications depending on the type and capacity.

NOTE: When sharing the PCB with MN6627932, connect pins as follows:

No. 62 pin (N.C. pin) = L (fixed), No. 54 pin (N.C. pin): LOVDD2, No. 65 pin (N.C. pin): LOVSS2

Refer to the MN6627932 specifications for the product details.

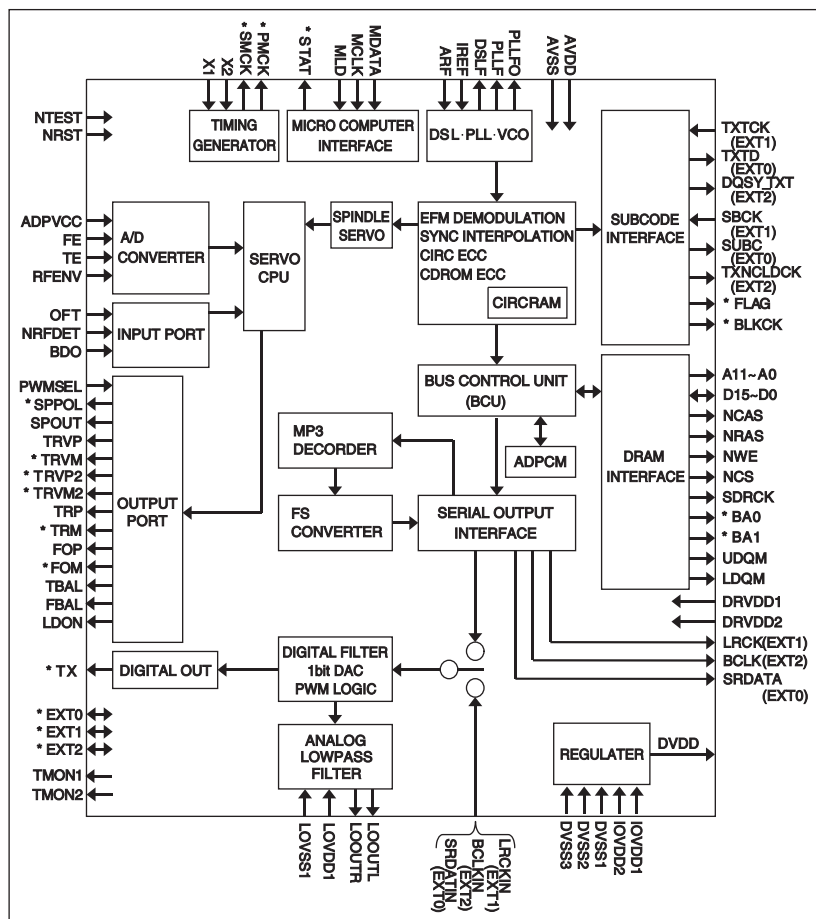
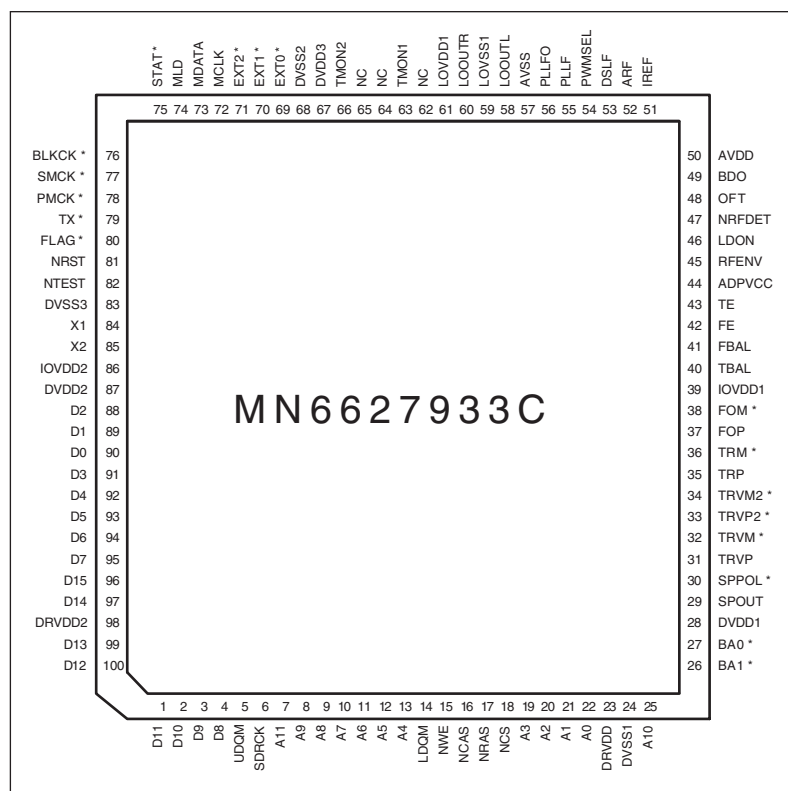


Figure 7 BLOCK DIAGRAM OF IC

IC802 RH-iXA018SJZZ: MP3 DECODER (IXA018SJ)

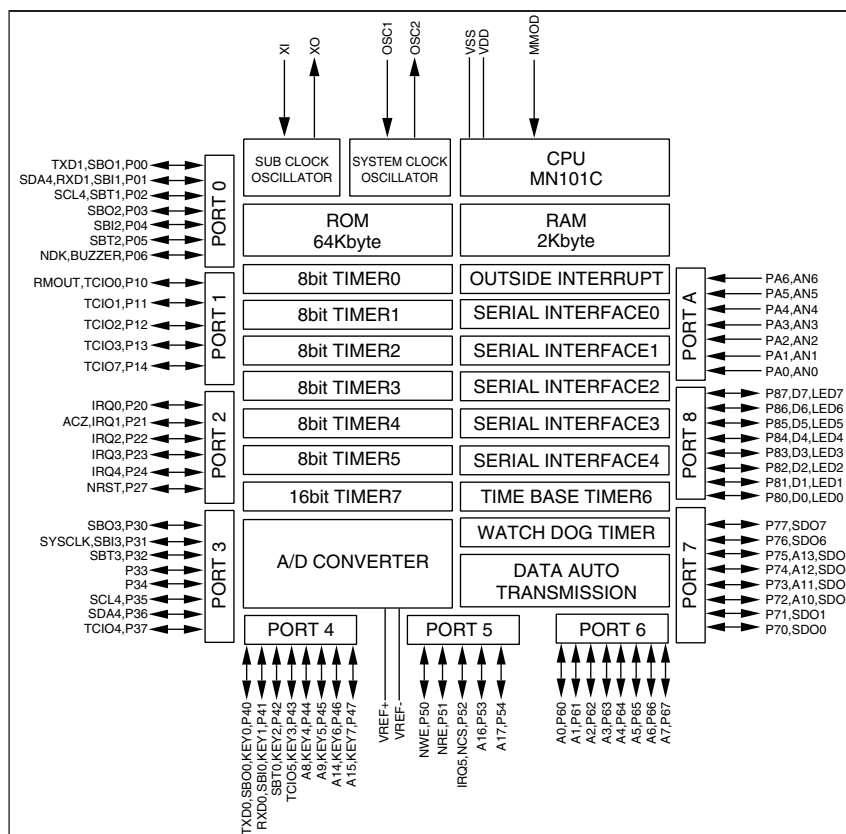
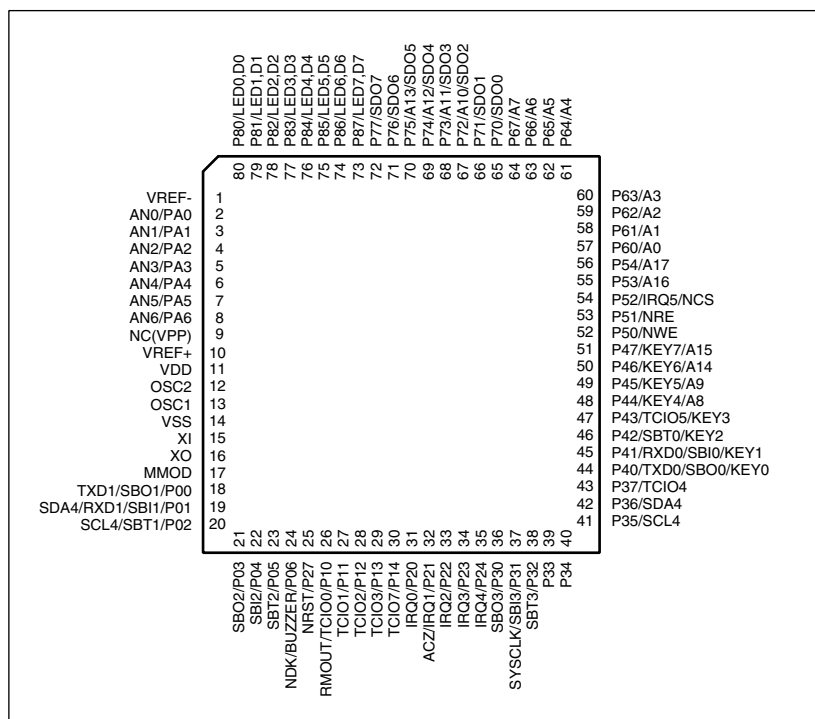


Figure 8 BLOCK DIAGRAM OF IC



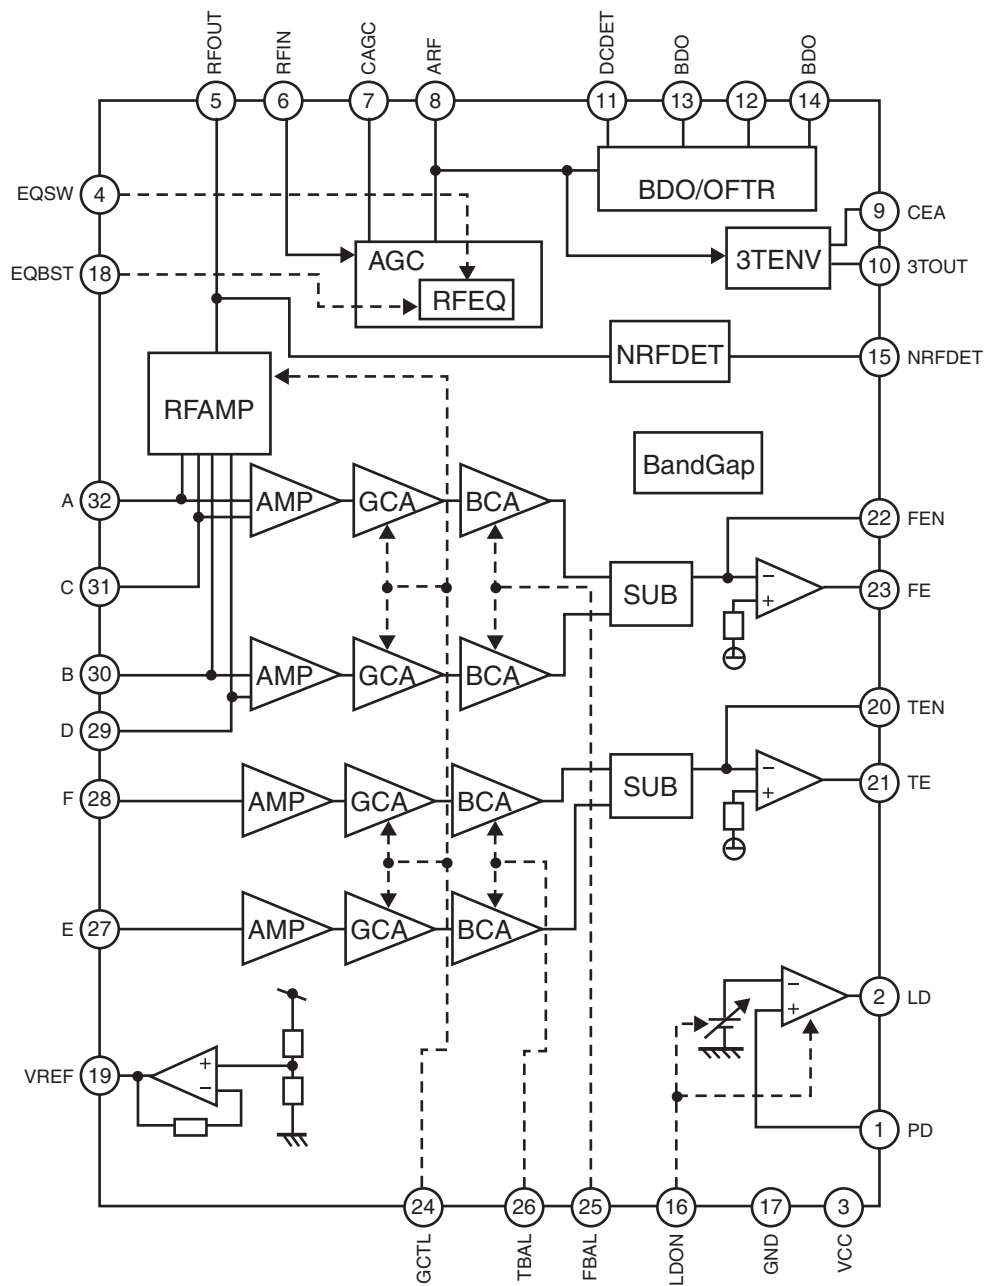


Figure 9 BLOCK DIAGRAM OF IC

IC805 VHIHY57V16D-1: DRAM (HY57V16D)

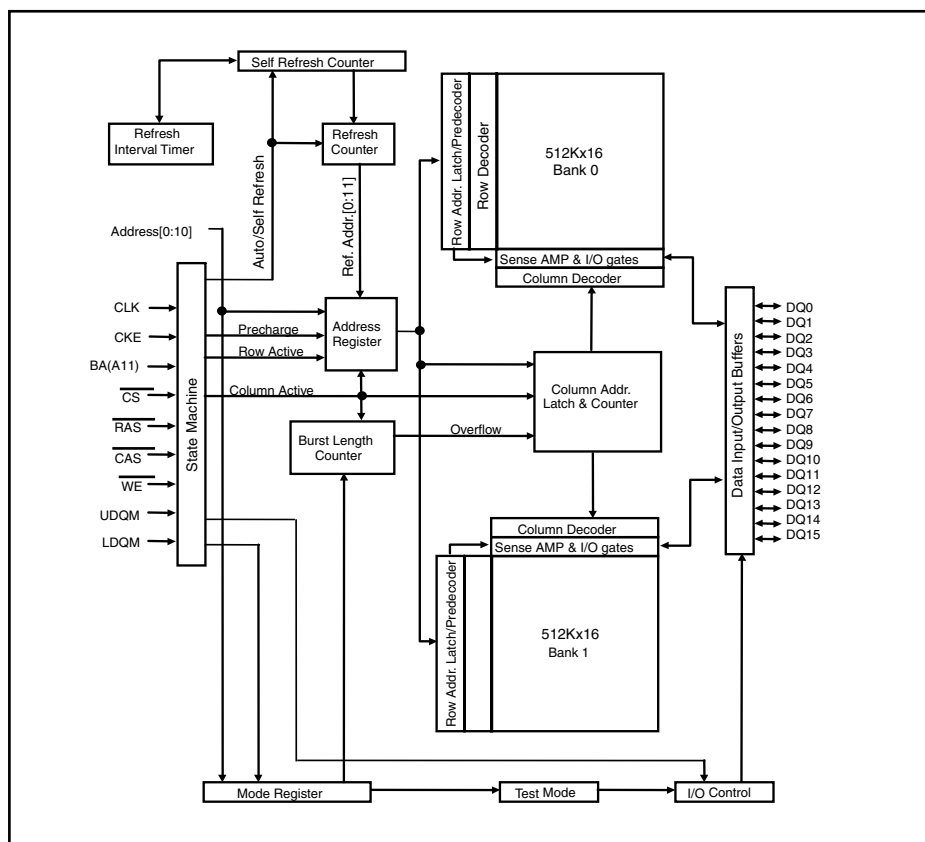

8 - 11

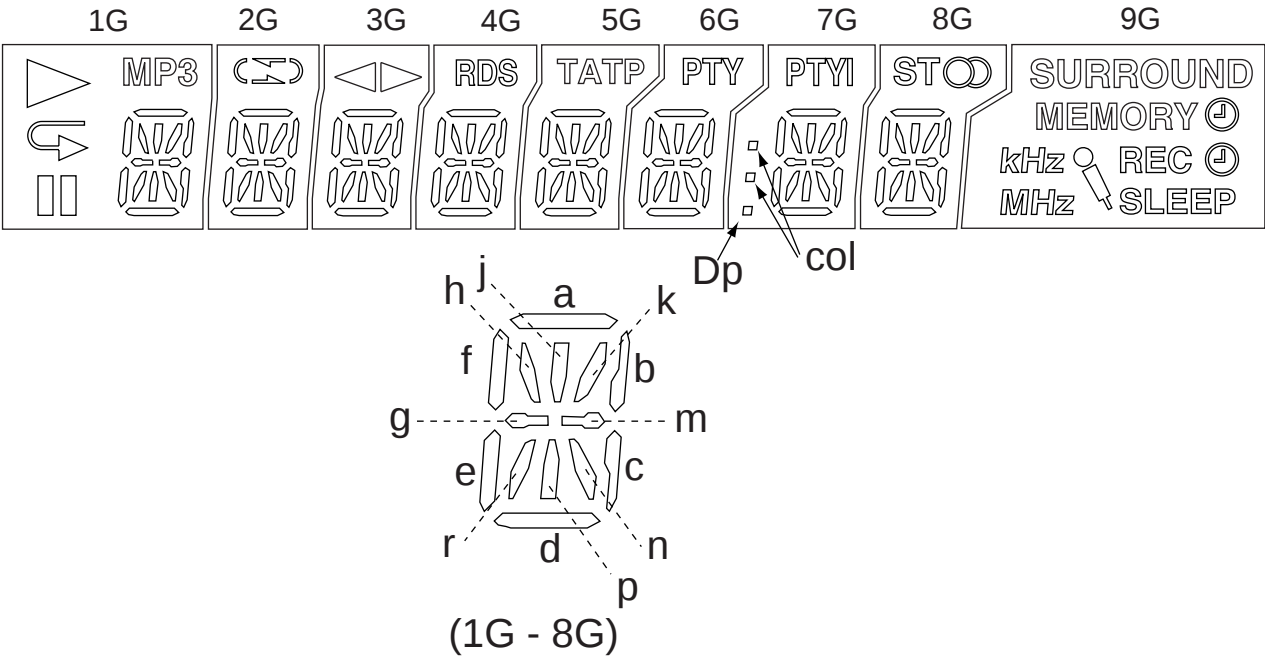

ANODE CONNECTION

	1G	2G	3G	4G	5G	6G	7G	8G	9G
P1	e	e	e	e	e	e	e	e	
P2	c	c	c	c	c	c	c	c	
P3	n	n	n	n	n	n	n	n	
P4	p	p	p	p	p	p	p	p	
P5	d	d	d	d	d	d	d	d	
P6	r	r	r	r	r	r	r	r	SLEEP
P7	g	g	g	g	g	g	g	g	
P8	m	m	m	m	m	m	m	m	MHz
P9	f	f	f	f	f	f	f	f	⌚ (lower)
P10	h	h	h	h	h	h	h	h	REC
P11	j	j	j	j	j	j	j	j	kHz
P12	k	k	k	k	k	k	k	k	⌚ (upper)
P13	b	b	b	b	b	b	b	b	MEMORY
P14	a	a	a	a	a	a	a	a	SURROUND
P15									
P16							col		
P17	MP3				TP		Dp		
P18				RDS	TA	PTY	PTYI	ST	

OUTER DRAWING



PIN CONNECTION

PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
CONNECTION	F1	F1	NP	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2	P1	NC	NC	1G	2G	3G

PIN NO.	27	28	29	30	31	32	33	34	35
CONNECTION	4G	5G	6G	7G	8G	9G	NP	F2	F2

SHARP PARTS GUIDE

No. S5431XLMP100H

MICRO COMPONENT SYSTEM

MODEL XL-MP100H

XL-MP100H Micro Component System consisting of XL-MP100H (main unit) and CP-MP100H (speaker system).

CONTENTS

- | | |
|-------------------------|---|
| [1] INTEGRATED CIRCUITS | [10] OTHER CIRCUITRY PARTS |
| [2] TRANSISTORS | [11] CABINET PARTS |
| [3] DIODES | [12] SPEAKER BOX PARTS |
| [4] FILTERS | [13] ACCESSORIES/PACKING PARTS |
| [5] TRANSFORMERS | [14] P.W.B. ASSEMBLY (Not Replacement Item) |
| [6] COILS | [15] OTHER SERVICE PARTS |
| [7] VIBRATORS | ■ INDEX |
| [8] CAPACITORS | |
| [9] RESISTORS | |

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[1] INTEGRATED CIRCUITS					
iC202	VHiSTK43306-1	AY			Power,STK43306
iC301	VHiLV23002M-1	AS			PLL (Tuner)/FM IF Det./FM Mpx./AM IF, LV23002M
iC351	VHiLC72723D-1	AP			RDS,LC72723D
iC401	VHiKiA7805APi	AF			Voltage Regulator, KIA7805AP
iC501	VHiBD3881FV-1	AP			Record/Playback Amp.,BD3881FV
iC601	VHiNJM14558-1	AF			Pre. Amp.,NJM14558
iC701	RH-iXA013SJZZ	AX			System Microcomputer,IXA013SJ
iC801	VHiMN6627933C	BB			CD Digital Signal Processor,MN6627933C
iC802	RH-iXA018SJJZ	AX			MP3 DECODER,IXA018SJ
iC803	VHiAN22004A-1	AN			Servo Amp.,AN22004A
iC804	VHiAN8785SB-1	AP			Focus/Tracking/Spin/Sled Driver,AN8785SB
iC805	VHiHY57V16D-1	AT			DRAM, HY57V16D
[2] TRANSISTORS					
Q101	VS2SB1370E+-1	AG			Silicon,PNP,2SB1370 E+
Q102	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q103	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q104	VSKTA1266GR-1	AB			Silicon,PNP,KTA1266 GR
Q105	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q201	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q251	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q252	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q253	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q254	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q255	VS2SA1514K/-1	AC			Silicon,PNP,2SA1514 K
Q256	VS2SA1514K/-1	AC			Silicon,PNP,2SA1514 K
Q257	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q281	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q282	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q283	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q284	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q285	VS2SK3377Z/-1	AH			FET,2SK3377 Z
Q286	VS2SK3377Z/-1	AH			FET,2SK3377 Z
Q287	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q301	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q305	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
Q351	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q352	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q353	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q371	VS2SC5477+-1	AD			Silicon,NPN,2SC5477++
Q401	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q402	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q403	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q404	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q501	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q502	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q503	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q504	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q505	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
Q506	VS2SA2002EF-1	AE			Silicon,PNP,2SA2002 EF
Q507	VS2SA2002EF-1	AE			Silicon,PNP,2SA2002 EF
Q508	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q509	VSKTC2875B/-1	AC			Silicon,NPN,KTC2875 B
Q510	VSKTC2875B/-1	AC			Silicon,NPN,KTC2875 B
Q511	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q512	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q513	VSKTC2875B/-1	AC			Silicon,NPN,KTC2875 B
Q601	VS2SK2158/-1	AB			FET,2SK2158
Q602	VS2SK2158/-1	AB			FET,2SK2158
Q603	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q701	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q702	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
Q703	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
Q704	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q705	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q706	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q708	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
Q801	VS2SA1235F+-1	AD			Silicon,PNP,2SA1235 F+
Q803	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q804	VS2SC3052F+-1	AD			Silicon,NPN,2SC3052 F+
Q805	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
Q806	VS2SC5395F+-1	AD			Silicon,NPN,2SC5395 F+
[3] DIODES					
D1	VHD1N4148/-1	AA			Silicon,1N4148
D2	VHD1N4148/-1	AA			Silicon,1N4148
D3	VHD1N4148/-1	AA			Silicon,1N4148
D4	VHD1N4148/-1	AA			Silicon,1N4148
D101	VHDRL203///-1	AC			Silicon,RL203
D102	VHDRL203///-1	AC			Silicon,RL203
D103	VHDRL203///-1	AC			Silicon,RL203
D104	VHDRL203///-1	AC			Silicon,RL203
D105	VHDMC2836/-1	AB			Silicon Epitaxial Double,MC2836
D106	VHEDZH07A3+-1	AB			Zener,7V,DZH07A3+
D107	VHD1N4148/-1	AA			Silicon,1N4148

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[3] DIODES					
D108	VHD1N4004//--1	AB			Silicon,1N4004
D109	VHD1N4004//--1	AB			Silicon,1N4004
D110	VHEDZH2701+-1	AB			Zener,26.6V,DZH271
D111	VHDL203///-1	AC			Silicon,RL203
D112	VHDL203///-1	AC			Silicon,RL203
D113	VHDL203///-1	AC			Silicon,RL203
D114	VHDL203///-1	AC			Silicon,RL203
D201	VHD1N4148//--1	AA			Silicon,1N4148
D251	VHDMC2838//--1	AB			Silicon Epitaxial Double,MC2838
D252	VHDMC2836//--1	AB			Silicon Epitaxial Double,MC2836
D253	VHDMC2838//--1	AB			Silicon Epitaxial Double,MC2838
D254	VHDMC2836//--1	AB			Silicon Epitaxial Double,MC2836
D281	VHDMC2838//--1	AB			Silicon Epitaxial Double,MC2838
D282	VHDMC2836//--1	AB			Silicon Epitaxial Double,MC2836
D283	VHD1N4148//--1	AA			Silicon,1N4148
D284	VHD1N4148//--1	AA			Silicon,1N4148
D285	VHD1N5402M/-1	AE			Silicon,1N5402M
D286	VHD1N5402M/-1	AE			Silicon,1N5402M
D305	VHCVC347S/-1	AG			Variable Capacitance,SVC347S
D308	VHEDZH04A3+-1	AB			Zener,3.6V,DZH04A3+
D309	VHEDZH12A1+-1	AB			Zener,12V,DZH12A1+
D403	VHD1N4148//--1	AA			Silicon,1N4148
D502	VHEDZH05B1+-1	AB			Zener,4.5V,DZH05B1+
D503	VHEDZH05B1+-1	AB			Zener,4.5V,DZH05B1+
D701	VHEDZH03C3+-1	AB			Zener,3.3V,DZH03C3+
D703	VHD1N4148//--1	AA			Silicon,1N4148
D704	VHD1N4148//--1	AA			Silicon,1N4148
D801	VHEDZH04B3+-1	AB			Zener,40V,DZH04B3+
D803	VHEDZH05C2+-1	AB			Zener,5.1V,DZH05C2+
D804	VHDMC2838//--1	AB			Silicon Epitaxial Double,MC2838
D805	VHDMC2836//--1	AB			Silicon Epitaxial Double,MC2836
LED701	VHPSELS6E14-1	AM			LED,Blue,SELS6E14
LED702	VHPLP3052A+-1	AC			LED,Red,LP3052A
[4] FILTERS					
CF301	RFiLF0004SJZZ	AG			FM IF,10.7 MHz
CF302	RFiLF0003AWZZ	AK			FM IF
CF303	RFiLA0003SJZZ	AF			AM IF
CF304	RFiLF0004SJZZ	AG			FM IF,10.7 MHz
[5] TRANSFORMERS					
PT1	RTRNPA008SJZZ	BC			Power (Main)
PT2	RTRNPA009SJZZ	AL			Power (Sub)
[6] COILS					
FB802	RCORFA002SJZZ	AC			Core
L101	VP-DH1R0K0000	AC			1 μ H
L102	RCiLZA001SJZZ	AC			1 μ H
L103	RCiLZA001SJZZ	AC			1 μ H
L301	RCORFA003SJZZ	AB			Core
L302	RCiLA0007SJZZ	AG			AM Antenna
L303	VP-DH100K0000	AB			10 μ H,Choke
L305	RCiLiA001SJZZ	AC			AM IF
L306	RCiLB0009SJZZ	AG			AM OSC.
L308	VP-DH470K0000	AB			47 μ H,Choke
L311	RFiLLA001SJZZ	AE			FM Detector
L351	VP-DH100K0000	AB			10 μ H,Choke
L501	VP-DH100K0000	AB			10 μ H,Choke
L503	RCiLBA001SJZZ	AE			OSC
L701	VP-MK220K0000	AB			22 μ H,Choke
L702	VP-DH100K0000	AB			10 μ H,Choke
L801	VP-DH1R0K0000	AC			1 μ H
L802	VP-DH1R0K0000	AC			1 μ H
L803	VP-DH1R0K0000	AC			1 μ H
[7] VIBRATORS					
X301	RCRSPA001SJZZ	AE			Crystal,75 kHz
X351	RCRSP0005SJZZ	AF			Crystal,456 kHz
X702	RCRSPA007SJZZ	AE			Crystal,32.768 kHz
X801	RCRSP0011SJZZ	AE			Crystal,16.9344 MHz
X802	RCRSPA005SJZZ	AF			Crystal
[8] CAPACITORS					
C1	RC-GZA477AF1C	AC			470 μ F,16V,Electrolytic
C2	VCFYFA1HA104J	AC			0.1 μ F,50V,Thin Film
C102	VCKYCY1HB103K	AA			0.01 μ F,50V
C103	VCKYCY1HB103K	AA			0.01 μ F,50V
C104	VCKYCY1HF104Z	AB			0.1 μ F,50V
C105	VCKYCY1HF104Z	AB			0.1 μ F,50V
C106	VCKYCY1HF104Z	AB			0.1 μ F,50V
C107	VCKYCY1HF104Z	AB			0.1 μ F,50V
C108	VCKYCY1HF104Z	AB			0.1 μ F,50V
C109	VCKYCY1HF104Z	AB			0.1 μ F,50V
C110	VCKYCY1HF104Z	AB			0.1 μ F,50V

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[8] CAPACITORS					
C111	VCKYCY1HF104Z	AB			0.1 μ F,50V
C112	VCKYCY1HF104Z	AB			0.1 μ F,50V
C113	VCKYCY1HF104Z	AB			0.1 μ F,50V
C114	VCKYCY1HF104Z	AB			0.1 μ F,50V
C115	RC-GZW228AF1H	AH			2200 μ F,50V,Electrolytic
C116	RC-GZW228AF1H	AH			2200 μ F,50V,Electrolytic
C117	VCKYCY1HF104Z	AB			0.1 μ F,50V
C118	RC-GZW338AF1E	AG			3300 μ F,25V,Electrolytic
C119	RC-GZW338AF1E	AG			3300 μ F,25V,Electrolytic
C120	RC-GZA107AF1V	AB			100 μ F,35V,Electrolytic
C121	RC-GZA107AF1H	AC			100 μ F,50V,Electrolytic
C122	VCKYCY1HF104Z	AB			0.1 μ F,50V
C123	VCKYCY1HB472K	AA			0.0047 μ F,50V
C124	VCKYCY1HB103K	AA			0.01 μ F,50V
C125	RC-GZA106AF1H	AB			10 μ F,50V,Electrolytic
C126	RC-GZA227AF1E	AB			220 μ F,25V,Electrolytic
C128	VCKYCY1HF104Z	AB			0.1 μ F,50V
C129	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C131	VCKYCY1HB102K	AA			0.001 μ F,50V
C132	VCKYCY1HB102K	AA			0.001 μ F,50V
C201	RC-GZA225AF1H	AB			2.2 μ F,50V,Electrolytic
C202	RC-GZA225AF1H	AB			2.2 μ F,50V,Electrolytic
C203	RC-GZA106AF1H	AB			10 μ F,50V,Electrolytic
C204	RC-GZA106AF1H	AB			10 μ F,50V,Electrolytic
C205	VCCCCY1HH471J	AA			470 pF (CH),50V
C206	VCCCCY1HH471J	AA			470 pF (CH),50V
C207	VCKYCY1HB822K	AA			0.0082 μ F,50V
C208	VCKYCY1HB822K	AA			0.0082 μ F,50V
C209	VCCSCY1HL3R0C	AD			3 pF,50V
C210	VCCSCY1HL3R0C	AD			3 pF,50V
C211	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C212	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C213	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C214	VCKYCY1HB103K	AA			0.01 μ F,50V
C215	VCKYCY1HB153K	AA			0.015 μ F,50V
C216	VCKYCY1HB153K	AA			0.015 μ F,50V
C217	RC-GZA104AF1H	AB			0.1 μ F,50V,Electrolytic
C218	RC-GZA104AF1H	AB			0.1 μ F,50V,Electrolytic
C219	VCKYCY1HF104Z	AB			0.1 μ F,50V
C220	VCKYCY1HF104Z	AB			0.1 μ F,50V
C221	VCKYCY1HB332K	AA			0.0033 μ F,50V
C222	VCKYCY1HB332K	AA			0.0033 μ F,50V
C231	VCCCCY1HH471J	AA			470 pF (CH),50V
C232	VCCCCY1HH471J	AA			470 pF (CH),50V
C251	VCKYCY1HB102K	AA			0.001 μ F,50V
C252	VCKYCY1HB102K	AA			0.001 μ F,50V
C253	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C254	VCKYCY1HB103K	AA			0.01 μ F,50V
C281	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C282	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C283	VCKYCY1HF104Z	AB			0.1 μ F,50V
C302	RC-GZA105AF1H	AB			1 μ F,50V,Electrolytic
C303	VCKYCY1HF104Z	AB			0.1 μ F,50V
C305	VCCCCY1HH120J	AA			12 pF (CH),50V
C308	VCKYCY1HB683K	AB			0.068 μ F,50V
C310	VCCCCY1HH270J	AA			27 pF (CH),50V
C311	VCCCCY1HH561J	AB			560 pF (CH),50V
C312	VCKYCY1EB104K	AD			0.1 μ F,25V
C313	VCKYCY1HF104Z	AB			0.1 μ F,50V
C315	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C318	VCKYCY1HB103K	AA			0.01 μ F,50V
C319	RC-GZA105AF1H	AB			1 μ F,50V,Electrolytic
C320	VCCCCY1HH101J	AA			100 pF (CH),50V
C321	RC-GZA334AF1H	AA			0.33 μ F,50V,Electrolytic
C322	RC-GZA105AF1H	AB			1 μ F,50V,Electrolytic
C323	RC-GZA474AF1H	AA			0.47 μ F,50V,Electrolytic
C324	RC-GZA105AF1H	AB			1 μ F,50V,Electrolytic
C325	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C326	VCKYCY1HF104Z	AB			0.1 μ F,50V
C327	VCKYCY1EB183K	AB			0.018 μ F,25V
C328	RC-GZA105AF1H	AB			1 μ F,50V,Electrolytic
C329	VCKYCY1HB333K	AB			0.033 μ F,50V
C330	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C331	VCKYCY1EB183K	AB			0.018 μ F,25V
C332	VCKYCY1HB102K	AA			0.001 μ F,50V
C333	RC-GZA475AF1H	AB			4.7 μ F,50V,Electrolytic
C334	VCKYCY1HB101K	AB			100 pF,50V
C335	RC-GZA226AF1H	AB			22 μ F,50V,Electrolytic
C336	VCKYCY1HB101K	AB			100 pF,50V
C337	VCKYCY1HB101K	AB			100 pF,50V
C338	VCKYCY1HF104Z	AB			0.1 μ F,50V
C339	VCKYCY1HF104Z	AB			0.1 μ F,50V
C340	VCKYCY1HF104Z	AB			0.1 μ F,50V
C341	VCCCCY1HH100J	AA			10 pF (CH),50V
C342	VCCCCY1HH100J	AA			10 pF (CH),50V

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[8] CAPACITORS					
C343	VCCSCY1HL5R0C	AD			5 pF,50V
C346	VCKYCY1HB102K	AA			0.001 μ F,50V
C347	VCKYCY1HB103K	AA			0.01 μ F,50V
C348	VCKYCY1HF104Z	AB			0.1 μ F,50V
C349	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C350	VCKYCY1HF104Z	AB			0.1 μ F,50V
C351	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C352	VCKYCY1HB103K	AA			0.01 μ F,50V
C353	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C354	RC-GZA106AF1H	AB			10 μ F,50V,Electrolytic
C355	VCCCCY1HH331J	AA			330 pF (CH),50V
C356	VCKYCY1HF104Z	AB			0.1 μ F,50V
C357	VCKYCY1HF104Z	AB			0.1 μ F,50V
C358	VCCCCY1HH561J	AB			560 pF (CH),50V
C359	VCCCCY1HH220J	AA			22 pF (CH),50V
C360	VCCCCY1HH220J	AA			22 pF (CH),50V
C363	VCKYCY1HF104Z	AB			0.1 μ F,50V
C364	VCKYCY1HF104Z	AB			0.1 μ F,50V
C365	RC-GZA477AF1A	AC			470 μ F,10V,Electrolytic
C366	VCKYCY1HF104Z	AB			0.1 μ F,50V
C367	RC-GZA476AF1C	AB			47 μ F,16V,Electrolytic
C372	VCKYCY1HF104Z	AB			0.1 μ F,50V
C375	VCCCCY1HH560J	AA			56 pF (CH),50V
C399	VCKYCY1HF104Z	AB			0.1 μ F,50V
C401	VCKYCY1HF104Z	AB			0.1 μ F,50V
C402	VCKYCY1HF104Z	AB			0.1 μ F,50V
C404	RC-GZA106AF1C	AB			10 μ F,16V,Electrolytic
C405	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C406	RC-GZA225AF1H	AB			2.2 μ F,50V,Electrolytic
C501	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C502	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C503	VCKYCY1EB104K	AD			0.1 μ F,25V
C504	VCKYCY1EB104K	AD			0.1 μ F,25V
C506	RC-GZA104AF1H	AB			0.1 μ F,50V,Electrolytic
C507	VCCCCY1HH100J	AA			10 pF (CH),50V
C508	RC-GZA224AF1H	AA			0.22 μ F,50V,Electrolytic
C509	RC-GZA104AF1H	AB			0.1 μ F,50V,Electrolytic
C510	RC-GZA224AF1H	AA			0.22 μ F,50V,Electrolytic
C511	VCKYCY1HB472K	AA			0.0047 μ F,50V
C512	VCKYCY1HB272K	AA			0.0027 μ F,50V
C513	VCKYCY1HB472K	AA			0.0047 μ F,50V
C514	VCKYCY1HB272K	AA			0.0027 μ F,50V
C515	RC-GZA224AF1H	AA			0.22 μ F,50V,Electrolytic
C516	RC-GZA224AF1H	AA			0.22 μ F,50V,Electrolytic
C517	RC-GZA227AF1A	AB			220 μ F,10V,Electrolytic
C518	VCKYCY1HB103K	AA			0.01 μ F,50V
C519	VCKYCY1HB102K	AA			0.001 μ F,50V
C520	VCKYCY1HB102K	AA			0.001 μ F,50V
C521	VCCCCY1HH470J	AA			47 pF (CH),50V
C522	VCKYCY1EF104Z	AA			0.1 μ F,25V
C523	VCQYKA1HM562J	AA			0.0056 μ F,50V,Mylar
C524	VCCCCY1HH470J	AA			47 pF (CH),50V
C526	RC-GZA475AF1H	AB			4.7 μ F,50V,Electrolytic
C527	VCKYCY1HB332K	AA			0.0033 μ F,50V
C528	VCKYCY1HB332K	AA			0.0033 μ F,50V
C529	VCKYCY1HB122K	AA			0.0012 μ F,50V
C530	VCKYCY1HB122K	AA			0.0012 μ F,50V
C531	VCKYCY1HB153K	AA			0.015 μ F,50V
C532	VCKYCY1HB153K	AA			0.015 μ F,50V
C533	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C534	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C536	VCKYCY1HB103K	AA			0.01 μ F,50V
C537	VCKYCY1HB103K	AA			0.01 μ F,50V
C538	VCCCCY1HH181J	AA			180 pF (CH),50V
C539	VCCCCY1HH181J	AA			180 pF (CH),50V
C540	VCCCCY1HH391J	AB			390 pF (CH),50V
C541	VCCCCY1HH391J	AB			390 pF (CH),50V
C542	VCKYCY1EF104Z	AA			0.1 μ F,25V
C543	VCKYCY1HB472K	AA			0.0047 μ F,50V
C544	VCKYCY1HB472K	AA			0.0047 μ F,50V
C545	VCKYCY1HB332K	AA			0.0033 μ F,50V
C546	VCKYCY1HB332K	AA			0.0033 μ F,50V
C601	VCKYCY1HB562K	AA			0.0056 μ F,50V
C602	VCKYCY1HB562K	AA			0.0056 μ F,50V
C603	VCKYCY1HB562K	AA			0.0056 μ F,50V
C604	VCKYCY1HB562K	AA			0.0056 μ F,50V
C610	VCKYCY1EF104Z	AA			0.1 μ F,25V
C701	RC-EZD227AF1A	AC			220 μ F,10V,Electrolytic
C702	VCKYCY1CB473K	AA			0.047 μ F,16V
C703	RC-EZD107AF1A	AB			100 μ F,10V,Electrolytic
C704	RC-EZD226AF1H	AB			22 μ F,50V,Electrolytic
C705	VCKYCY1EF104Z	AA			0.1 μ F,25V
C706	VCCCCY1HH200J	AA			20 pF (CH),50V
C707	VCCCCY1HH200J	AA			20 pF (CH),50V
C708	VCCCCY1HH150J	AA			15 pF (CH),50V

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[8] CAPACITORS					
C709	VCCCCY1HH150J	AA			15 pF (CH),50V
C710	VCKYCY1EF104Z	AA			0.1 μ F,25V
C711	VCKYCY1HB102K	AA			0.001 μ F,50V
C712	VCKYCY1HB102K	AA			0.001 μ F,50V
C713	VCKYCY1HB102K	AA			0.001 μ F,50V
C714	VCKYCY1HB102K	AA			0.001 μ F,50V
C715	VCKYCY1HB102K	AA			0.001 μ F,50V
C716	VCKYCY1HB151K	AA			150 pF,50V
C717	VCKYCY1EF104Z	AA			0.1 μ F,25V
C718	VCKYCY1EF104Z	AA			0.1 μ F,25V
C719	VCKYCY1HB102K	AA			0.001 μ F,50V
C720	VCKYCY1HB103K	AA			0.01 μ F,50V
C721	VCKYCY1EF104Z	AA			0.1 μ F,25V
C722	VCKYCY1EF104Z	AA			0.1 μ F,25V
C723	VCKYCY1HB103K	AA			0.01 μ F,50V
C724	VCCCCY1HH101J	AA			100 pF (CH),50V
C726	VCCCCY1HH331J	AA			330 pF (CH),50V
C727	VCCCCY1HH101J	AA			100 pF (CH),50V
C728	VCCCCY1HH101J	AA			100 pF (CH),50V
C729	VCCCCY1HH101J	AA			100 pF (CH),50V
C730	VCKYCY1HB102K	AA			0.001 μ F,50V
C731	VCKYCY1HB102K	AA			0.001 μ F,50V
C732	RC-EZD476AF1V	AC			47 μ F,35V,Electrolytic
C733	RC-EZD105AF1H	AB			1 μ F,50V,Electrolytic
C734	RC-EZD105AF1H	AB			1 μ F,50V,Electrolytic
C736	VCKYCY1HB101K	AB			100 pF,50V
C738	VCCCCY1HH101J	AA			100 pF (CH),50V
C801	VCKYCY1EF104Z	AA			0.1 μ F,25V
C802	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C803	VCKYCY1EF104Z	AA			0.1 μ F,25V
C804	RC-GZA477AF1A	AC			470 μ F,10V,Electrolytic
C805	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C806	VCKYCY1EF104Z	AA			0.1 μ F,25V
C807	VCCCCY1HH821J	AB			820 pF (CH),50V
C808	VCCCCY1HH221J	AA			220 pF (CH),50V
C809	RC-GZA107AF1A	AB			100 μ F,10V,Electrolytic
C810	VCKYCY1EB334K	AC			0.33 μ F,25V
C811	VCKYCY1CB473K	AA			0.047 μ F,16V
C812	VCKYCY1EB393K	AB			0.039 μ F,25V
C813	VCKYCY1EB104K	AD			0.1 μ F,25V
C814	VCKYCY1CB473K	AA			0.047 μ F,16V
C815	VCKYCY1HB152K	AA			0.0015 μ F,50V
C816	VCKYCY1HB152K	AA			0.0015 μ F,50V
C817	VCKYCY1HB152K	AA			0.0015 μ F,50V
C818	VCKYCY1HB472K	AA			0.0047 μ F,50V
C819	RC-GZA106AF1H	AB			10 μ F,50V,Electrolytic
C820	VCKYCY1EB223K	AB			0.022 μ F,25V
C821	VCKYCY1EB223K	AB			0.022 μ F,25V
C822	VCKYCY1EF104Z	AA			0.1 μ F,25V
C825	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C827	VCKYCY1EF104Z	AA			0.1 μ F,25V
C843	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C844	RC-GZA474AF1H	AA			0.47 μ F,50V,Electrolytic
C845	RC-GZA474AF1H	AA			0.47 μ F,50V,Electrolytic
C846	VCKYCY1HB102K	AA			0.001 μ F,50V
C847	VCKYCY1HB102K	AA			0.001 μ F,50V
C848	VCKYCY1HB102K	AA			0.001 μ F,50V
C849	VCKYCY1HB102K	AA			0.001 μ F,50V
C851	RC-GZA477AF0J	AB			470 μ F,6.3V,Electrolytic
C852	RC-GZA477AF0J	AB			470 μ F,6.3V,Electrolytic
C853	RC-GZA477AF0J	AB			470 μ F,6.3V,Electrolytic
C854	RC-GZA477AF0J	AB			470 μ F,6.3V,Electrolytic
C855	VCIFYFA1HA104J	AC			0.1 μ F,50V,Thin Film
C856	VCIFYFA1HA104J	AC			0.1 μ F,50V,Thin Film
C857	VCKYCY1EF104Z	AA			0.1 μ F,25V
C858	VCCCCY1HH470J	AA			47 pF (CH),50V
C859	VCCCCY1HH470J	AA			47 pF (CH),50V
C860	VCKYCY1EF104Z	AA			0.1 μ F,25V
C861	VCKYCY1HB102K	AA			0.001 μ F,50V
C862	VCCCCY1HH101J	AA			100 pF (CH),50V
C863	VCCCCY1HH101J	AA			100 pF (CH),50V
C864	VCCCCY1HH101J	AA			100 pF (CH),50V
C865	VCKYCY1EF104Z	AA			0.1 μ F,25V
C866	VCKYCY1EF104Z	AA			0.1 μ F,25V
C867	VCKYCY1EF104Z	AA			0.1 μ F,25V
C868	VCCCCY1HH120J	AA			12 pF (CH),50V
C869	VCCCCY1HH120J	AA			12 pF (CH),50V
C870	VCKYCY1EF104Z	AA			0.1 μ F,25V
C871	RC-GZA477AF0J	AB			470 μ F,6.3V,Electrolytic
C872	VCKYCY1EF104Z	AA			0.1 μ F,25V
C873	VCKYCY1EF104Z	AA			0.1 μ F,25V
C874	VCKYCY1EB823K	AB			0.082 μ F,25V
C875	VCKYCY1HB102K	AA			0.001 μ F,50V
C876	VCKYCY1EB104K	AD			0.1 μ F,25V
C877	VCCCCY1HH681J	AC			680 pF (CH),50V

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[8] CAPACITORS					
C878	VCKYCY1HB153K	AA			0.015 μ F,50V
C879	VCKYCY1EF104Z	AA			0.1 μ F,25V
C880	VCFYFA1HA104J	AC			0.1 μ F,50V,Thin Film
C881	RC-GZA476AF1E	AB			47 μ F,25V,Electrolytic
C882	VCKYCY1EF104Z	AA			0.1 μ F,25V
C883	VCKYCY1EF104Z	AA			0.1 μ F,25V
C884	VCKYCY1EF104Z	AA			0.1 μ F,25V
C885	VCKYCY1EF104Z	AA			0.1 μ F,25V
C886	VCKYCY1EF104Z	AA			0.1 μ F,25V
C887	VCKYCY1EF104Z	AA			0.1 μ F,25V
C888	VCKYCY1EF104Z	AA			0.1 μ F,25V
C889	VCKYCY1EF104Z	AA			0.1 μ F,25V
[9] RESISTORS					
JR303	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR305	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR306	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR307	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR308	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR309	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR310	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR401	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR501	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR502	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR701	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR702	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR703	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR704	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR706	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR801	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR802	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR803	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR804	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR805	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR806	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR810	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
JR811	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R101	VRD-ST2EE102J	AA			1 kohm,1/4W
R102	VRD-ST2EE102J	AA			1 kohm,1/4W
R103	VRD-ST2CD100J	AA			10 ohm,1/6W
R104	VRD-ST2CD100J	AA			10 ohm,1/6W
R105	VRD-ST2CD472J	AA			4.7 kohms,1/6W
R106	VRD-ST2CD100J	AA			10 ohm,1/6W
R107	VRD-ST2CD100J	AA			10 ohm,1/6W
R108	VRD-ST2CD472J	AA			4.7 kohms,1/6W
R109	VRS-CY1JB101J	AA			100 ohm,1/16W
R110	VRS-CY1JB152J	AA			1.5 kohms,1/16W
R111	VRS-CY1JB681J	AA			680 ohms,1/16W
R114	VRD-ST2CD472J	AA			4.7 kohms,1/6W
R116	VRS-CY1JB103J	AA			10 kohm,1/16W
R117	VRS-CY1JB103J	AA			10 kohm,1/16W
R118	VRS-CY1JB101J	AA			100 ohm,1/16W
R122	VRS-CY1JB560J	AA			56 ohms,1/16W
R123	VRS-CY1JB821J	AA			820 ohms,1/16W
R124	VRS-CY1JB821J	AA			820 ohms,1/16W
R126	VRD-ST2CD1R0J	AA			1 ohm,1/6W
R127	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R152	VRS-CY1JB102J	AA			1 kohm,1/16W
R153	VRS-CY1JB102J	AA			1 kohm,1/16W
R154	VRS-CY1JB100J	AA			10 ohm,1/16W
R155	VRD-ST2CD222J	AA			2.2 kohms,1/6W
R158	VRD-ST2CD224J	AA			220 kohms,1/6W
R159	VRD-ST2CD333J	AA			33 kohms,1/6W
R160	VRS-CY1JB330J	AA			33 ohms,1/16W
R161	VRD-ST2CD331J	AA			330 ohms,1/6W
R201	VRD-ST2CD272J	AA			2.7 kohms,1/6W
R202	VRD-ST2CD272J	AA			2.7 kohms,1/6W
R203	VRS-CY1JB563J	AA			56 kohms,1/16W
R204	VRD-ST2CD272J	AA			2.7 kohms,1/6W
R205	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R206	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R207	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R208	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R209	VRS-CY1JB563J	AA			56 kohms,1/16W
R210	VRS-CY1JB563J	AA			56 kohms,1/16W
R211	VRD-ST2CD333J	AA			33 kohms,1/6W
R212	VRS-VV3AAR22J	AC			2.2 ohms,1W
R213	VRS-VV3AAR22J	AC			2.2 ohms,1W
R214	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R215	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R216	VRS-CY1JB101J	AA			100 ohm,1/16W
R217	VRS-CY1JB101J	AA			100 ohm,1/16W
R218	VRS-CY1JB123J	AA			12 kohms,1/16W
R219	VRS-CY1JB123J	AA			12 kohms,1/16W
R220	VRD-ST2CD102J	AA			1 kohm,1/6W

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[9] RESISTORS					
R221	VRD-ST2CD102J	AA			1 kohm,1/6W
R222	VRS-CY1JB103J	AA			10 kohm,1/16W
R223	VRS-CY1JB103J	AA			10 kohm,1/16W
R224	VRS-CY1JB563J	AA			56 kohms,1/16W
R251	VRS-CY1JB223J	AA			22 kohms,1/16W
R252	VRS-CY1JB473J	AA			47 kohms,1/16W
R253	VRS-CY1JB473J	AA			47 kohms,1/16W
R254	VRS-CY1JB223J	AA			22 kohms,1/16W
R255	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R256	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R257	VRS-CY1JB154J	AA			150 kohms,1/16W
R258	VRS-CY1JB154J	AA			150 kohms,1/16W
R259	VRS-CY1JB473J	AA			47 kohms,1/16W
R260	VRS-CY1JB473J	AA			47 kohms,1/16W
R261	VRS-CY1JB473J	AA			47 kohms,1/16W
R262	VRS-CY1JB473J	AA			47 kohms,1/16W
R263	VRS-CY1JB123J	AA			12 kohms,1/16W
R264	VRS-CY1JB473J	AA			47 kohms,1/16W
R265	VRS-CY1JB104J	AA			100 kohm,1/16W
R266	VRS-CY1JB104J	AA			100 kohm,1/16W
R267	VRS-CY1JB101J	AA			100 ohm,1/16W
R268	VRS-CY1JB103J	AA			10 kohm,1/16W
R269	VRS-CY1JB223J	AA			22 kohms,1/16W
R270	VRS-CY1JB103J	AA			10 kohm,1/16W
R271	VRS-CY1JB223J	AA			22 kohms,1/16W
R272	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R273	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R274	VRS-CY1JB103J	AA			10 kohm,1/16W
R275	VRS-CY1JB103J	AA			10 kohm,1/16W
R276	VRS-CY1JB102J	AA			1 kohm,1/16W
R277	VRS-CY1JB334J	AA			330 kohms,1/16W
R278	VRS-CY1JB103J	AA			10 kohm,1/16W
R279	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R280	VRS-CY1JB101J	AA			100 ohm,1/16W
R281	VRS-CY1JB103J	AA			10 kohm,1/16W
R282	VRS-CY1JB103J	AA			10 kohm,1/16W
R283	VRS-CY1JB103J	AA			10 kohm,1/16W
R284	VRS-CY1JB103J	AA			10 kohm,1/16W
R285	VRS-CY1JB103J	AA			10 kohm,1/16W
R286	VRS-CY1JB103J	AA			10 kohm,1/16W
R287	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R288	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R289	VRS-CY1JB103J	AA			10 kohm,1/16W
R290	VRS-CY1JB103J	AA			10 kohm,1/16W
R291	VRS-CY1JB104J	AA			100 kohm,1/16W
R292	VRS-CY1JB104J	AA			100 kohm,1/16W
R293	VRS-CY1JB821J	AA			820 ohms,1/16W
R294	VRS-CY1JB821J	AA			820 ohms,1/16W
R295	VRS-CY1JB101J	AA			100 ohm,1/16W
R296	VRS-CY1JB101J	AA			100 ohm,1/16W
R297	VRS-CY1JB152J	AA			1.5 kohms,1/16W
R298	VRS-CY1JB471J	AA			470 ohms,1/16W
R302	VRD-ST2CD100J	AA			10 ohm,1/6W
R303	VRD-ST2CD103J	AA			10 kohm,1/6W
R304	VRS-CY1JB104J	AA			100 kohm,1/16W
R309	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R311	VRD-ST2CD102J	AA			1 kohm,1/6W
R312	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R313	VRS-CY1JB103J	AA			10 kohm,1/16W
R314	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R315	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R316	VRS-CY1JB223J	AA			22 kohms,1/16W
R317	VRS-CY1JB102J	AA			1 kohm,1/16W
R318	VRS-CY1JB102J	AA			1 kohm,1/16W
R319	VRS-CY1JB104J	AA			100 kohm,1/16W
R320	VRS-CY1JB473J	AA			47 kohms,1/16W
R321	VRS-CY1JB102J	AA			1 kohm,1/16W
R322	VRS-CY1JB104J	AA			100 kohm,1/16W
R323	VRD-ST2CD391J	AA			390 ohms,1/6W
R324	VRS-CY1JB102J	AA			1 kohm,1/16W
R326	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R329	VRS-CY1JB331J	AA			330 ohms,1/16W
R330	VRS-CY1JB103J	AA			10 kohm,1/16W
R332	VRS-CY1JB330J	AA			33 ohms,1/16W
R335	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R336	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R340	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R341	VRS-CY1JB102J	AA			1 kohm,1/16W
R351	VRS-CY1JB474J	AA			470 kohms,1/16W
R352	VRD-ST2CD103J	AA			10 kohm,1/6W
R353	VRS-CY1JB103J	AA			10 kohm,1/16W
R354	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R355	VRS-CY1JB104J	AA			100 kohm,1/16W
R356	VRS-CY1JB224J	AA			220 kohms,1/16W
R357	VRS-CY1JB103J	AA			10 kohm,1/16W


NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[9] RESISTORS					
R358	VRS-CY1JB103J	AA			10 kohm,1/16W
R359	VRS-CY1JB100J	AA			10 ohm,1/16W
R360	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R361	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R362	VRS-CY1JB221J	AA			220 ohms,1/16W
R363	VRS-CY1JB103J	AA			10 kohm,1/16W
R364	VRS-CY1JB103J	AA			10 kohm,1/16W
R371	VRS-CY1JB330J	AA			33 ohms,1/16W
R372	VRS-CY1JB331J	AA			330 ohms,1/16W
R374	VRS-CY1JB101J	AA			100 ohm,1/16W
R375	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R376	VRS-CY1JB681J	AA			680 ohms,1/16W
R378	VRS-CY1JB681J	AA			680 ohms,1/16W
R403	VRS-CY1JB103J	AA			10 kohm,1/16W
R407	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R409	VRS-CY1JB223J	AA			22 kohms,1/16W
R410	VRS-CY1JB474J	AA			470 kohms,1/16W
R411	VRS-CY1JB101J	AA			100 ohm,1/16W
R412	VRS-CY1JB150J	AB			15 ohms,1/16W
R413	VRS-CY1JB150J	AB			15 ohms,1/16W
R414	VRS-CY1JB103J	AA			10 kohm,1/16W
R415	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R416	VRS-CY1JB273J	AA			27 kohms,1/16W
R501	VRS-CY1JB103J	AA			10 kohm,1/16W
R502	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R503	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R504	VRS-CY1JB334J	AA			330 kohms,1/16W
R505	VRS-CY1JB223J	AA			22 kohms,1/16W
R506	VRS-CY1JB471J	AA			470 ohms,1/16W
R507	VRS-CY1JB334J	AA			330 kohms,1/16W
R508	VRS-CY1JB223J	AA			22 kohms,1/16W
R509	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R510	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R511	VRD-ST2CD823J	AA			82 kohms,1/6W
R512	VRS-CY1JB183J	AA			18 kohms,1/16W
R513	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R514	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R515	VRD-ST2CD823J	AA			82 kohms,1/6W
R516	VRD-ST2CD472J	AA			4.7 kohms,1/6W
R517	VRS-CY1JB8R2J	AA			8.2 ohms,1/16W
R518	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R519	VRD-ST2CD472J	AA			4.7 kohms,1/6W
R520	VRS-CY1JB182J	AA			1.8 kohms,1/16W
R521	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R522	VRD-ST2CD473J	AA			47 kohms,1/6W
R523	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R524	VRD-ST2CD473J	AA			47 kohms,1/6W
R525	VRD-ST2CD102J	AA			1 kohm,1/6W
R526	VRD-ST2CD102J	AA			1 kohm,1/6W
R527	VRD-ST2CD101J	AA			100 ohm,1/6W
R528	VRS-CY1JB103J	AA			10 kohm,1/16W
R529	VRD-ST2CD101J	AA			100 ohm,1/6W
R530	VRS-CY1JB103J	AA			10 kohm,1/16W
R531	VRD-ST2EE120J	AA			12 ohms,1/4W
R532	VRS-CY1JB273J	AA			27 kohms,1/16W
R533	VRS-CY1JB394J	AA			390 kohms,1/16W
R534	VRS-CY1JB123J	AA			12 kohms,1/16W
R535	VRS-CY1JB394J	AA			390 kohms,1/16W
R536	VRS-CY1JB123J	AA			12 kohms,1/16W
R537	VRS-CY1JB473J	AA			47 kohms,1/16W
R538	VRS-CY1JB473J	AA			47 kohms,1/16W
R539	VRS-CY1JB123J	AA			12 kohms,1/16W
R540	VRD-ST2CD473J	AA			47 kohms,1/6W
R541	VRS-CY1JB121J	AA			120 ohms,1/16W
R542	VRS-CY1JB121J	AA			120 ohms,1/16W
R543	VRD-ST2CD472J	AA			4.7 kohms,1/6W
R545	VRD-ST2CD104J	AA			100 kohm,1/6W
R546	VRS-CY1JB333J	AA			33 kohms,1/16W
R547	VRD-ST2CD103J	AA			10 kohm,1/6W
R548	VRS-CY1JB681J	AA			680 ohms,1/16W
R549	VRS-CY1JB473J	AA			47 kohms,1/16W
R550	VRS-CY1JB473J	AA			47 kohms,1/16W
R551	VRS-CY1JB101J	AA			100 ohm,1/16W
R554	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R555	VRS-CY1JB473J	AA			47 kohms,1/16W
R556	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R557	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R560	VRS-CY1JB223J	AA			22 kohms,1/16W
R561	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R562	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R563	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R564	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R565	VRS-CY1JB223J	AA			22 kohms,1/16W
R566	VRD-ST2CD473J	AA			47 kohms,1/6W
R567	VRD-ST2CD473J	AA			47 kohms,1/6W

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[9] RESISTORS					
R568	VRS-CY1JB153J	AA			15 kohms,1/16W
R569	VRS-CY1JB472J	AA			4.7 kohms,1/16W
R570	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R571	VRD-ST2CD331J	AA			330 ohms,1/6W
R572	VRD-ST2CD681J	AA			680 ohms,1/6W
R573	VRS-CY1JB473J	AA			47 kohms,1/16W
R574	VRS-CY1JB473J	AA			47 kohms,1/16W
R575	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R576	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R577	VRD-ST2CD331J	AA			330 ohms,1/6W
R601	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R602	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R603	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R604	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R605	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R606	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R607	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R608	VRS-CY1JB272J	AA			2.7 kohms,1/16W
R610	VRS-CY1JB103J	AA			10 kohm,1/16W
R611	VRS-CY1JB105J	AA			1 Mohm,1/16W
R612	VRS-CY1JB104J	AA			100 kohm,1/16W
R701	VRD-ST2CD102J	AA			1 kohm,1/6W
R702	VRD-ST2CD101J	AA			100 ohm,1/6W
R703	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R704	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R705	VRS-CY1JB104J	AA			100 kohm,1/16W
R706	VRD-ST2CD101J	AA			100 ohm,1/6W
R707	VRD-ST2CD101J	AA			100 ohm,1/6W
R708	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R709	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R710	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R711	VRD-ST2CD102J	AA			1 kohm,1/6W
R712	VRD-ST2CD101J	AA			100 ohm,1/6W
R713	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R714	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R715	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R716	VRD-ST2CD101J	AA			100 ohm,1/6W
R717	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R718	VRD-ST2CD102J	AA			1 kohm,1/6W
R719	VRS-CY1JB122J	AA			1.2 kohms,1/16W
R720	VRS-CY1JB122J	AA			1.2 kohms,1/16W
R721	VRS-CY1JB102J	AA			1 kohm,1/16W
R722	VRS-CY1JB122J	AA			1.2 kohms,1/16W
R723	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R724	VRS-CY1JB333J	AA			33 kohms,1/16W
R725	VRS-CY1JB101J	AA			100 ohm,1/16W
R726	VRD-ST2CD223J	AA			22 kohms,1/6W
R727	VRD-ST2CD223J	AA			22 kohms,1/6W
R728	VRD-ST2CD223J	AA			22 kohms,1/6W
R731	VRS-CY1JB221J	AA			220 ohms,1/16W
R732	VRS-CY1JB104J	AA			100 kohm,1/16W
R733	VRD-ST2CD334J	AA			330 kohms,1/6W
R734	VRS-CY1JB102J	AA			1 kohm,1/16W
R735	VRS-CY1JB221J	AA			220 ohms,1/16W
R736	VRD-ST2CD223J	AA			22 kohms,1/6W
R737	VRS-CY1JB104J	AA			100 kohm,1/16W
R739	VRS-CY1JB102J	AA			1 kohm,1/16W
R740	VRS-CY1JB102J	AA			1 kohm,1/16W
R741	VRS-CY1JB102J	AA			1 kohm,1/16W
R742	VRS-CY1JB392J	AA			3.9 kohms,1/16W
R743	VRS-CY1JB392J	AA			3.9 kohms,1/16W
R744	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R745	VRS-CY1JB682J	AA			6.8 kohms,1/16W
R746	VRS-CY1JB123J	AA			12 kohms,1/16W
R747	VRS-CY1JB123J	AA			12 kohms,1/16W
R748	VRS-CY1JB223J	AA			22 kohms,1/16W
R749	VRD-ST2CD102J	AA			1 kohm,1/6W
R750	VRD-ST2CD102J	AA			1 kohm,1/6W
R751	VRD-ST2CD102J	AA			1 kohm,1/6W
R753	VRD-ST2CD121J	AA			120 ohms,1/6W
R755	VRD-ST2CD221J	AA			220 ohms,1/6W
R756	VRD-ST2CD473J	AA			47 kohms,1/6W
R757	VRD-ST2CD1R0J	AA			1 ohm,1/6W
R759	VRD-ST2CD471J	AA			470 ohms,1/6W
R760	VRD-ST2CD223J	AA			22 kohms,1/6W
R761	VRS-CY1JB473J	AA			47 kohms,1/16W
R762	VRS-CY1JB223J	AA			22 kohms,1/16W
R763	VRD-ST2CD101J	AA			100 ohm,1/6W
R764	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R766	VRS-CY1JB101J	AA			100 ohm,1/16W
R767	VRS-CY1JB101J	AA			100 ohm,1/16W
R768	VRD-ST2CD332J	AA			3.3 kohms,1/6W
R769	VRS-CY1JB102J	AA			1 kohm,1/16W
R770	VRS-CY1JB102J	AA			1 kohm,1/16W
R771	VRS-CY1JB101J	AA			100 ohm,1/16W

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[9] RESISTORS					
R772	VRS-CY1JB102J	AA			1 kohm,1/16W
R773	VRS-CY1JB102J	AA			1 kohm,1/16W
R774	VRD-ST2CD101J	AA			100 ohm,1/6W
R775	VRS-CY1JB223J	AA			22 kohms,1/16W
R776	VRD-ST2CD121J	AA			120 ohms,1/6W
R777	VRD-ST2CD471J	AA			470 ohms,1/6W
R778	VRD-ST2CD101J	AA			100 ohm,1/6W
R779	VRD-ST2CD101J	AA			100 ohm,1/6W
R780	VRS-CY1JB103J	AA			10 kohm,1/16W
R781	VRD-ST2CD103J	AA			10 kohm,1/6W
R782	VRS-CY1JB103J	AA			10 kohm,1/16W
R784	VRS-CY1JB102J	AA			1 kohm,1/16W
R785	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R796	VRD-ST2CD103J	AA			10 kohm,1/6W
R797	VRS-CY1JB103J	AA			10 kohm,1/16W
R799	VRD-ST2CD104J	AA			100 kohm,1/6W
R801	VRS-CY1JB101J	AA			100 ohm,1/16W
R802	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R803	VRS-CY1JB473J	AA			47 kohms,1/16W
R804	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R805	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R806	VRS-CY1JB222J	AA			2.2 kohms,1/16W
R807	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R808	VRS-CY1JB101J	AA			100 ohm,1/16W
R810	VRD-ST2CD331J	AA			330 ohms,1/6W
R811	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R812	VRS-CY1JB100J	AA			10 ohm,1/16W
R813	VRS-CY1JB102J	AA			1 kohm,1/16W
R814	VRD-ST2CD473J	AA			47 kohms,1/6W
R816	VRD-ST2CD560J	AA			56 ohms,1/6W
R817	VRS-CY1JB223J	AA			22 kohms,1/16W
R818	VRS-CY1JB823J	AA			82 kohms,1/16W
R819	VRD-ST2CD560J	AA			56 ohms,1/6W
R820	VRS-CY1JB752J	AA			7.5 kohms,1/16W
R821	VRD-ST2CD471J	AA			470 ohms,1/6W
R822	VRD-ST2CD560J	AA			56 ohms,1/6W
R823	VRS-CY1JB221J	AA			220 ohms,1/16W
R824	VRD-ST2CD103J	AA			10 kohm,1/6W
R826	VRD-ST2CD223J	AA			22 kohms,1/6W
R827	VRS-CY1JB562J	AA			5.6 kohms,1/16W
R828	VRS-CY1JB223J	AA			22 kohms,1/16W
R829	VRS-CY1JB562J	AA			5.6 kohms,1/16W
R830	VRS-CY1JB822J	AA			8.2 kohms,1/16W
R831	VRS-CY1JB683J	AA			68 kohms,1/16W
R832	VRS-CY1JB101J	AA			100 ohm,1/16W
R833	VRS-CY1JB333J	AA			33 kohms,1/16W
R834	VRS-CY1JB223J	AA			22 kohms,1/16W
R835	VRS-CY1JB223J	AA			22 kohms,1/16W
R836	VRS-CY1JB333J	AA			33 kohms,1/16W
R837	VRD-ST2CD683J	AA			68 kohms,1/6W
R838	VRD-ST2CD183J	AA			18 kohms,1/6W
R839	VRD-ST2CD102J	AA			1 kohm,1/6W
R840	VRS-CY1JB223J	AA			22 kohms,1/16W
R841	VRS-CY1JB223J	AA			22 kohms,1/16W
R842	VRS-CY1JB223J	AA			22 kohms,1/16W
R843	VRS-CY1JB822J	AA			8.2 kohms,1/16W
R844	VRD-ST2CD221J	AA			220 ohms,1/6W
R845	VRS-CY1JB101J	AA			100 ohm,1/16W
R846	VRD-ST2CD102J	AA			1 kohm,1/6W
R847	VRD-ST2CD103J	AA			10 kohm,1/6W
R848	VRS-CY1JB221J	AA			220 ohms,1/16W
R849	VRS-CY1JB221J	AA			220 ohms,1/16W
R850	VRS-CY1JB101J	AA			100 ohm,1/16W
R851	VRS-CY1JB101J	AA			100 ohm,1/16W
R854	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R855	VRS-CY1JB221J	AA			220 ohms,1/16W
R856	VRS-CY1JB821J	AA			820 ohms,1/16W
R857	VRD-ST2CD223J	AA			22 kohms,1/6W
R858	VRS-CY1JB223J	AA			22 kohms,1/16W
R859	VRS-CY1JB103J	AA			10 kohm,1/16W
R860	VRS-CY1JB221J	AA			220 ohms,1/16W
R861	VRD-ST2CD101J	AA			100 ohm,1/6W
R862	VRS-CY1JB101J	AA			100 ohm,1/16W
R863	VRS-CY1JB105J	AA			1 Mohm,1/16W
R864	VRS-CY1JB221J	AA			220 ohms,1/16W
R865	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R866	VRS-CY1JB103J	AA			10 kohm,1/16W
R867	VRD-ST2CD103J	AA			10 kohm,1/6W
R868	VRS-CY1JB103J	AA			10 kohm,1/16W
R869	VRS-CY1JB332J	AA			3.3 kohms,1/16W
R871	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R872	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R873	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R874	VRS-CY1JB000J	AA			0 ohm,Jumper,0.8x1.55mm,Green
R879	VRS-CY1JB821J	AA			820 ohms,1/16W

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[9] RESISTORS					
R880	VRS-CY1JB823J	AA			82 kohms,1/16W
R881	VRS-CY1JB333J	AA			33 kohms,1/16W
R882	VRS-CY1JB101J	AA			100 ohm,1/16W
R883	VRS-CY1JB101J	AA			100 ohm,1/16W
R884	VRS-CY1JB101J	AA			100 ohm,1/16W
R885	VRS-CY1JB101J	AA			100 ohm,1/16W
R886	VRS-CY1JB101J	AA			100 ohm,1/16W
R887	VRS-CY1JB101J	AA			100 ohm,1/16W
R888	VRS-CY1JB562J	AA			5.6 kohms,1/16W
R889	VRS-CY1JB223J	AA			22 kohms,1/16W
R890	VRS-CY1JB102J	AA			1 kohm,1/16W
R891	VRD-ST2CD101J	AA			100 ohm,1/6W
R892	VRD-ST2CD101J	AA			100 ohm,1/6W
R893	VRD-ST2CD102J	AA			1 kohm,1/6W
R894	VRD-ST2CD101J	AA			100 ohm,1/6W
R895	VRD-ST2CD101J	AA			100 ohm,1/6W
R896	VRD-ST2CD102J	AA			1 kohm,1/6W
R897	VRD-ST2CD101J	AA			100 ohm,1/6W
R898	VRS-CY1JB104J	AA			100 kohm,1/16W
[10] OTHER CIRCUITRY PARTS					
CNA401	QCWNWA085SJZZ	AC			Connector Ass'y,2Pin
CNA501	QCWNWA069SJZZ	AF			Connector Ass'y,8Pin
△ CNP1	QCNCM998JAFZZ	AC			Plug,9Pin
CNP102	QCNCM999EAFZZ	AG			Plug,5Pin
CNP301	QCNCM049BSJZZ	AB			Plug,2Pin
CNP401	QCNCM038BSJZZ	AB			Plug,2Pin
CNP402	QCNCM999BAFZZ	AD			Plug,2Pin
CNP501	QCNCM999HAFZZ	AD			Plug,8Pin
CNP806	QCNCM004CAFZZ	AB			Plug,3Pin
CNS503	QCNCWA016SJ23	AE			Socket,23Pin
CNS504	QCNCWA007SJ06	AD			Socket,6Pin
CNS701	QCNCWA016SJ23	AE			Socket,23Pin
CNS702	QCNCWA007SJ11	AD			Socket,11Pin
CNS801	QCNCWA016SJ16	AE			Socket,16Pin
CNS804	QCNCWA007SJ11	AD			Socket,11Pin
CNS805	QCNCWA007SJ06	AD			Socket,6Pin
CNW101	QCWNWA062SJZZ	AG			Connector Ass'y,10/9Pin,With CNS1
CNW102	QCWNWA063SJZZ	AD			Connector Ass'y,6/5Pin,With CNS102
CNW103	QCWNWA065SJZZ	AD			Connector Ass'y,4/3Pin,With CNS806
CNW502	QCWNWA066SJZZ	AE			Connector Ass'y,8/7Pin,With CNS502
CNW710	QCWNWA101SJZZ	AC			Connector Ass'y,2/2Pin,With CNS402
CNW802	QCWNWA067SJZZ	AE			Connector Ass'y,6/5Pin,With CNS802
CNW803	QCWNWA028SJZZ	AE			Connector Ass'y,7/6Pin,With CNS803
△ F101	QFS-D102CAWN i	AC			Fuse,T1A L 250V
FE301	RTUNS0027AWZZ	AU			FM Front End
FFC701	QCWNWA052SJZZ	AE			Flat Cable,23Pin
FFC702	QCWNWA051SJZZ	AD			Flat Cable,11Pin
FFC801	QCWNWA055SJZZ	AE			Flat Cable,16Pin
FFC805	QCWNWA056SJZZ	AD			Flat Cable,6Pin
FL701	VVK09SS53T/-1	AT			FL Display
△ IC171	VHPBFTX2001-1	AL			Socket,Digital Out
△ J1	QSOCA0212AWZZ	AD			Socket AC Input
J101	QTANA9024SJZZ	AD			Terminal,Speaker
J102	QSOCJ0003SJZZ	AG			Socket,Video/AUX Input
J103	QJAKM0001SJZZ	AG			Jack,Headphone
J301	QTANC9006SJZZ	AD			FM Antenna Terminal
M401	RMOTV0409AFZZ	AL			Motor,Air Cooling Fan (226-4)
M501	9GD192112347	AX			Motor with Pulley [Tape] (223-9)
M801	9GD8188012A	AX			Motor with Pulley [Loading] (224-1)
△ RX701	VHLGP1UD281-1	AL			Remote Sensor,GP1UD281
△ RY1	RRLYD0004SJZZ	AG			Relay
SOL501	9GD19212118	AP			Solenoid Ass'y (223-4)
SW501	9GD640101210	AE			Switch,Leaf Type [Fool Proof] (223-7)
SW502	9GD640101210	AE			Switch,Leaf Type [Cam] (223-8)
SW701	QSW-Z0003SJZZ	AG			Switch,Rotary Type,Jog [VOLUME]
SW702	QSW-K0002SJZZ	AC			Switch,Key Type [ON/STAND-BY]
SW703	QSW-K0002SJZZ	AC			Switch,Key Type [FUNCTION]
SW704	QSW-K0002SJZZ	AC			Switch,Key Type [BASS/TREBLE]
SW705	QSW-K0002SJZZ	AC			Switch,Key Type [MEMORY/SET]
SW706	QSW-K0002SJZZ	AC			Switch,Key Type [OPEN/CLOSE]
SW707	QSW-K0002SJZZ	AC			Switch,Key Type [TUNING UP]
SW708	QSW-K0002SJZZ	AC			Switch,Key Type [TUNING DOWN]
SW709	QSW-K0002SJZZ	AC			Switch,Key Type [PRESET UP]
SW710	QSW-K0002SJZZ	AC			Switch,Key Type [PRESET DOWN]
SW711	QSW-K0002SJZZ	AC			Switch,Key Type [TAPE REC/PAUSE]
SW801	9GD8188015A				Switch,Leaf Type [Open/Close] (224-2)
W301	QCWNWA070SJZZ	AB			Lead Wire
W302	QCWNWA111SJZZ	AB			Lead Wire
W303	QCWNWA112SJZZ	AB			Lead Wire
W701	QCWNWA064SJZZ	AB			Lead Wire
W702	QCWNWA109SJZZ	AB			Lead Wire Ass'y

[11] CABINET PARTS

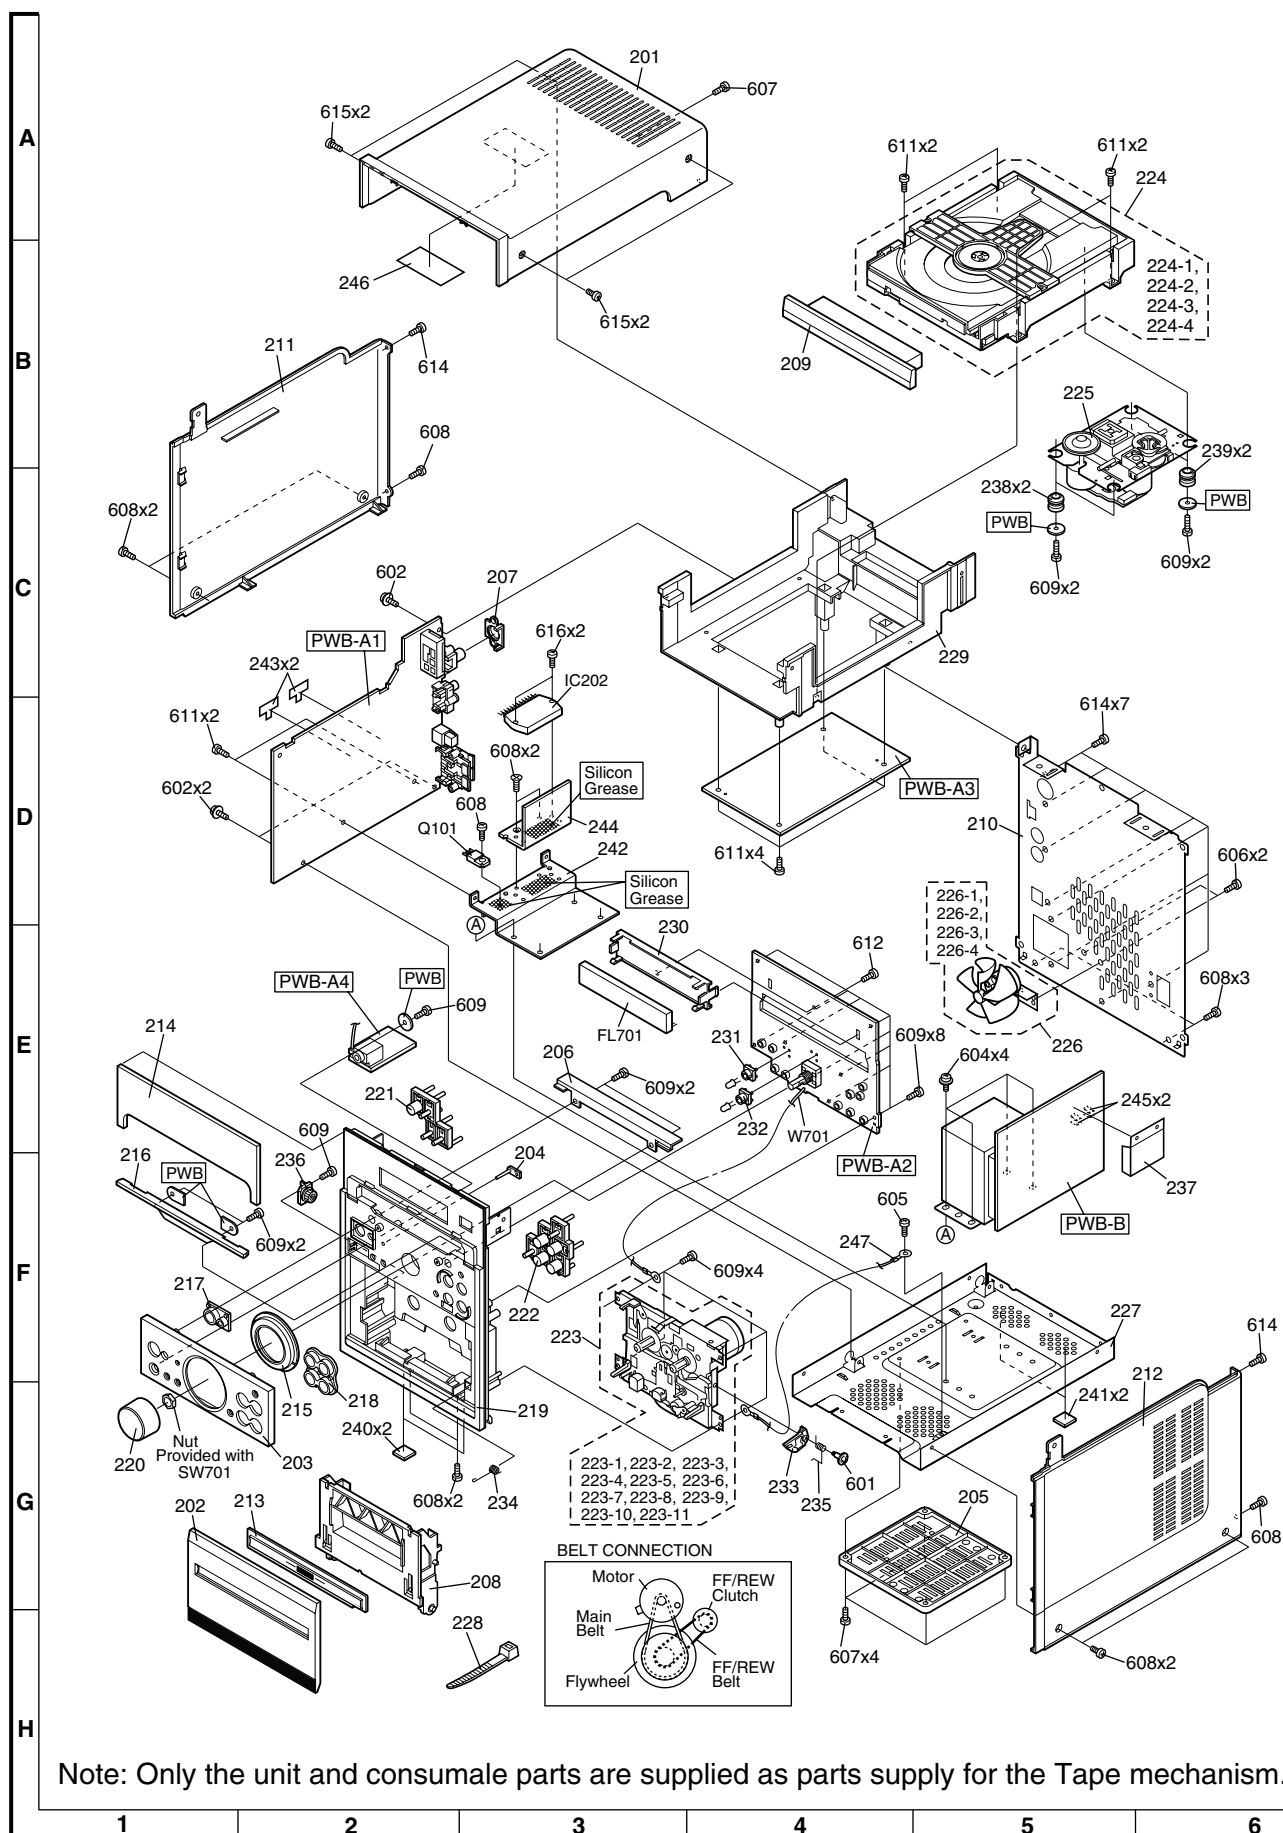

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[11] CABINET PARTS					
201	GCABCA006SJSA	AN			Top Cabinet
202	GCOVAA008SJSA	AG			Cassette Cover
203	GCOVAA009SJSA	AG			Operation Panel
204	GCOVAA010SJSA	AD			LED Timer Cover
205	GCOVAA018SJZZ	AF			Chassis,Cover
206	GCOVAA019SJSA	AD			PWB Cover
207	GCOVH1016SJSA	AC			Cover,FM
208	GDORFA004SJSA	AH			Cassette Holder
209	GDORTA002SJSA	AH			CD Lid
210	GiTARA008SJFW	AG			Rear Panel [For Europe]
210	GiTARA015SJFW	AG			Rear Panel [For U.K./Australia/New Zealand]
211	GiTASA005SJSA	AM			Side Panel,Left
212	GiTASA006SJSA	AM			Side Panel,Right
213	HDECQA026SJSA	AE			Cassette Window
214	HDECQA027SJSA	AK			FL Window
215	HDECQA028SJSA	AG			Jog decorate ring
216	HDECQA029SJSA	AE			Illumination Plate
217	HDECQA030SJSA	AE			Ring A
218	HDECQA031SJSA	AE			Ring B
219	HPNLCA004SJSA	AK			Front Panel
220	JKNBKA003SJSA	AG			Jog Knob
221	JKNBZA016SJSA	AF			Knob A
222	JKNBZA017SJSA	AG			Knob B
223	KMECBA002SJZZ	AY			Tape Mechanism Ass'y
223- 1	94R19210703	AE			Belt,REW/FF
223- 2	9GD19210943	AG			Belt,Main
223- 3	94R192104310	AL			Pinch Roller Arm Ass'y
223- 4	9GD19212118	AP			Solenoid Ass'y (SOL501)
223- 5	9GD62161401	AN			Head,Erase
223- 6	94GD62070122	AT			Head,Record/Playback
223- 7	9GD640101210	AE			Switch,Leaf Type [Fool Proof] (SW501)
223- 8	9GD640101210	AE			Switch,Leaf Type [Cam] (SW502)
223- 9	9GD192112347	AX			Motor with Pulley [Tape] (M501)
223-10	9GD192121303	AZ			Tape Mechanism PWB Ass'y (PWB-C)
223-11	9GD192121306	AP			Tape Mechanism PWB Ass'y (PWB-D)
224	KMECZA002SJZZ	AT			Loading Mechanism Ass'y
224- 1	9GD8188012A				Motor with Pulley [Loading] (M801)
224- 2	9GD8188015A				Switch,Leaf Type [Open/Close] (SW801)
224- 3	9GD8188013A				Loading Mechanism PWB (PWB-E)
224- 4	9GD8188016A				Belt
225	KRPLE0025SJM2	BB			CD Mechanism Ass'y
226	CFANP0001SJ07	AM			Fan Motor Ass'y
226- 1	LANGKA025SJFW	AD			Bracket,Fan Motor
226- 2	MSPRK0001SJFJ	AC			Spring,Fan Stoper
226- 3	NFANP0001SJSA	AG			Fan
226- 4	RMOTV0409AFZZ	AL			Motor,Air Cooling Fan (M401)
227	LCHSMA003SJFW	AH			Chassis,Main
228	LHLDW1001SJZZ	AD			Nylon Band
229	LHLDZA014SJSA	AG			Holder,Loading Mechanism Unit
230	LHLDZA015SJSA	AC			FL Holder
231	LHLDZA019SJZZ	AB			LED Holder,Timer
232	LHLDZA022SJZZ	AB			LED Holder
233	MLEVP0002SJSA	AC			Lock Lever,Cassette
234	MSPRDA003SJFJ	AD			Spring,Cassette Holder
235	MSPRDA009SJFJ	AB			Spring,Cassette Lock Lever
236	NGERH0003SJSA	AE			Gear,Damper
237	PCOVSA001SJZZ	AD			PWB Shield Cover
238	PCUSG0001AWSA	AD			Cushion (Green)
239	PCUSG0004AWSA	AD			Cushion (Brown)
240	PCUSGA003SJZZ	AB			Cushion,Leg Front
241	PCUSGA010SJZZ	AB			Cushion,Leg Rear
242	PRDARA005SJFW	AK			Radiator,Main
243	PRDARA015SJFW	AC			Radiator,Copper
244	PRDARA018SJFW	AN			Radiator,Sub
245	QFSDH1013CEZZ	AB			Holder,Fuse
246	TLABS0042SJZZ	AB			Label,Laser
247	QCNWNA068SJZZ	AC			Lead Wire Ass'y
601	LX-BZA001SJFD	AB			Screw,M2x5mm
602	LX-JZ0001SJFD	AA			Screw,M3x10mm
604	LX-JZA003SJFD	AB			Screw,M4x12mm
605	XHBSD30P06000	AA			Screw,M3x6mm
606	XHBSD20P03000	AA			Screw,M2x3mm
607	XHBSF30P06000	AA			Screw,M3x6mm
608	XHBSF30P08000	AA			Screw,M3x8mm
609	XJBSD25P10000	AD			Screw,M2.5x10mm
610	XJBSD30P08000	AA			Screw,M3x8mm
611	XJBSD30P10000	AA			Screw,M3x10mm
612	XJBSE30P06000	AA			Screw,M3x6mm
613	XJBSE30P08000	AA			Screw,M3x8mm
614	XJBSE30P10000	AA			Screw,M3x10mm
615	XJBSE30P12000	AA			Screw,M3x12mm
616	XJBSE30P16000	AA			Screw,M3x16mm

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[12] SPEAKER BOX PARTS					
	B3CPXLMP100H	BG			Speaker Box Ass'y,L-CH/R-CH


[13] ACCESSORIES/PACKING PARTS**PACKING METHOD (FOR U.K.ONLY)**

- | | |
|----------------------------------|---------------|
| 1. AC Power Supply Cord | QACCB0005SJ00 |
| 2. AM Loop Antenna | QANTL0005SJZZ |
| 3. FM Antenna | QANTWA001SJZZ |
| 4. Speaker wire | QCNWGA003SJZZ |
| 5. Remote Control | RRMCGA004SJSA |
| 6. Packing Add., Unit,Top | SPAKAA024SJZZ |
| 7. Packing Add., Unit,Bottom | SPAKAA025SJZZ |
| 8. Packing Case | SPAKCA018SJZZ |
| 9. Supprt Case | SPAKPA007SJZZ |
| 10. Polyethylene Bag,Accessories | SSAKA0014SJZZ |

- | | |
|---------------------------|---------------|
| 11. Polyethylene Bag Unit | SSAKHA011SJZZ |
| 12. Polyethylene Bag Unit | SSAKHA017SJZZ |
| 13. Register Card | TCADN0003SJZZ |
| 14. Operation Manual | TINSEA015SJZZ |
| 15. Quick Guide | TINSZA009SJZZ |
| 16. Label,Saving Energy | TLABZ0034SJZZ |
| 19. Label,Pop | TLABZA017SJZZ |

Setting position of switches and knobs

Tape Mechanism	STOP
Cassette Holder	CLOSE
CD Lid	CLOSE

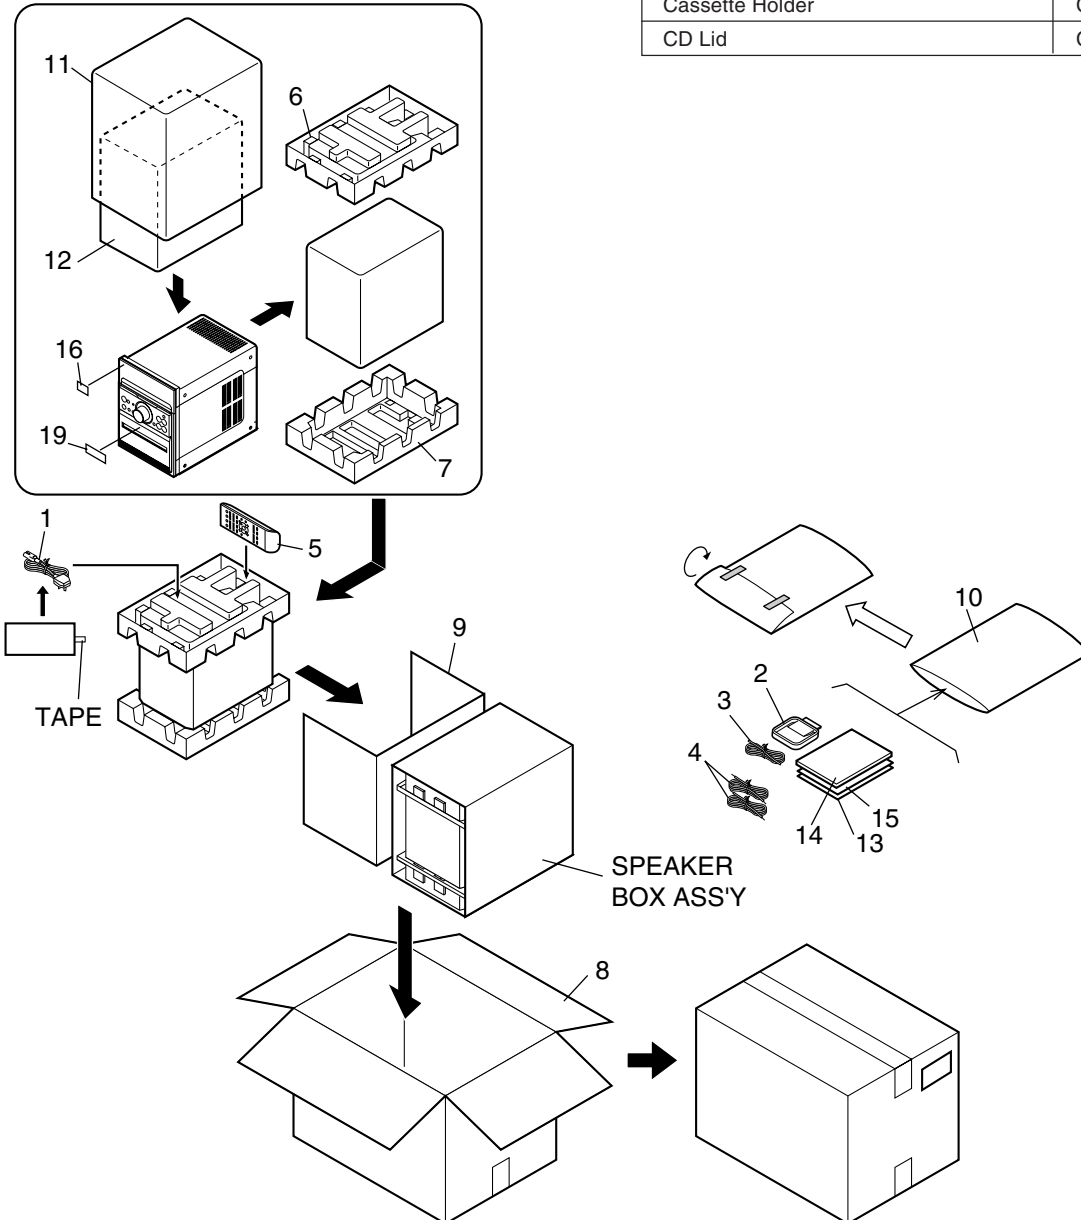

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[13] ACCESSORIES/PACKING PARTS					
△	1	QACCE0002SJZZ	AT		AC Power Supply Cord [For Europe]
△	1	QACCB0005SJ00	AH		AC Power Supply Cord [For U.K.]
△	1	QACCL0002SJ00	AL		AC Power Supply Cord [For Australia/New Zealand]
	2	QANTL0005SJZZ	AG		AM Loop Antenna
	3	QANTWA001SJZZ	AF		FM Antenna
	4	QCNWGA003SJZZ	AG		Speaker Wire
	5	RRMCGA004SJSA	AR		Remote Control
	5-1	GCOVAA026SJSA			Battery Lid, Remote Control
	6	SPAKAA024SJZZ	AE		Packing Add., Unit, Top
	7	SPAKAA025SJZZ	AE		Packing Add., Unit, Bottom
	8	SPAKCA018SJZZ	AM		Packing Case [For U.K./Australia/New Zealand]
	8	SPAKCA036SJZZ	AM		Packing Case [For Europe]
	9	SPAKPA007SJZZ	AE		Support Case
	10	SSAKA0014SJZZ	AB		Polyethylene Bag, Accessories
	11	SSAKHA011SJZZ	AD		Polyethylene Bag Unit
	12	SSAKHA017SJZZ	AD		Polyethylene Bag Unit
	13	TCADN0003SJZZ	AD		Register Card [For U.K. Only]
	14	TiNSEA014SJZZ	AF		Operation Manual [Australia/New Zealand]
	14	TiNSEA015SJZZ	AE		Operation Manual [For U.K.]
	14	TiNSZA010SJZZ	AM		Operation Manual [For Europe]
	15	TiNSZA009SJZZ	AD		Quick Guide [For U.K. Only]
	16	TLABZ0034SJZZ	AC		Label, Saving Energy
	17	TLABZ0067SJZZ	AB		Label, Energy [For Europe]
	18	TLABZA016SJZZ	AC		Label, Pop [For Seeg]
	19	TLABZA017SJZZ			Label, Pop [For U.K.]
	20	-----	-		Battery (Not Replacement Item) [Except fo U.K.]
[14] P.W.B. ASSEMBLY (Not Replacement Item)					
	PWB-A1~4	DCEKKV421SJ03	-		Main/Display/CD Servo/Jack
△	PWB-B	DCEKNV421SJ03	-		Power
	PWB-C	9GD192121303	AZ		Tape Mechanism PWB (223-10)
	PWB-D	9GD192121306	AP		Tape Mechanism PWB (223-11)
	PWB-E	9GD8188013A			Loading Mechanism PWB (224-3)
[15] OTHER SERVICE PARTS					
		UDSKA0004AFZZ	AZ		CD Pickup Lens Cleaner

INDEX

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
【 B 】				
B3CPXLMP100H	12-	BG		
【 C 】				
CFANP0001SJ07	11-226	AM		
【 D 】				
DCEKKV421SJ03	14-PWB-A1~4	-		
DCEKNV421SJ03	14-PWB-B	-		
【 G 】				
GCABCA006SJSA	11-201	AN		
GCOVAA008SJSA	11-202	AG		
GCOVAA009SJSA	11-203	AG		
GCOVAA010SJSA	11-204	AD		
GCOVAA018SJZZ	11-205	AF		
GCOVAA019SJSA	11-206	AD		
GCOVAA026SJSA	13-5-1			
GCOVH1016SJSA	11-207	AC		
GDORFA004SJSA	11-208	AH		
GDORTA002SJSA	11-209	AH		
GiTARA008SJFW	11-210	AG		
GiTARA015SJFW	11-210	AG		
GiTASA005SJSA	11-211	AM		
GiTASA006SJSA	11-212	AM		
【 H 】				
HDECQA026SJSA	11-213	AE		
HDECQA027SJSA	11-214	AK		
HDECQA028SJSA	11-215	AG		
HDECQA029SJSA	11-216	AE		
HDECQA030SJSA	11-217	AE		
HDECQA031SJSA	11-218	AE		
HPNLCA004SJSA	11-219	AK		
【 J 】				
JKNBKA003SJSA	11-220	AG		
JKNBZA016SJSA	11-221	AF		
JKNBZA017SJSA	11-222	AG		
【 K 】				
KMECBA002SJZZ	11-223	AY		
KMECZA002SJZZ	11-224	AT		
KRPLE0025SJM2	11-225	BB		
【 L 】				
LANGKA025SJFW	11-226- 1	AD		
LCHSMA003SJFW	11-227	AH		
LHLDW1001SJZZ	11-228	AD		
LHLDZA014SJSA	11-229	AG		
LHLDZA015SJSA	11-230	AC		
LHLDZA019SJZZ	11-231	AB		
LHLDZA022SJZZ	11-232	AB		
LX-BZA001SJFD	11-601	AB		
LX-JZ0001SJFD	11-602	AA		
LX-JZA003SJFD	11-604	AB		
【 M 】				
MLEVP0002SJSA	11-233	AC		
MSPRDA003SJFJ	11-234	AD		
MSPRDA009SJFJ	11-235	AB		
MSPRK0001SJFJ	11-226- 2	AC		
【 N 】				
NFANP0001SJSA	11-226- 3	AG		
NGERH0003SJSA	11-236	AE		
【 P 】				
PCOVSA001SJZZ	11-237	AD		
PCUSG0001AWSA	11-238	AD		
PCUSG0004AWSA	11-239	AD		
PCUSGA003SJZZ	11-240	AB		
PCUSGA010SJZZ	11-241	AB		
PRDARA005SJFW	11-242	AK		
PRDARA015SJFW	11-243	AC		
PRDARA018SJFW	11-244	AN		
【 Q 】				
QACCB0005SJ00	13-1	AH		
QACCE0002SJZZ	13-1	AT		
QACCL0002SJ00	13-1	AL		
QANTL0005SJZZ	13-2	AG		
QANTWA001SJZZ	13-3	AF		
QCNCCLA007SJ11	10-CNS804	AD		
QCNCM004CAFZZ	10-CNP806	AB		
QCNCM038BSJZZ	10-CNP401	AB		
QCNCM049BSJZZ	10-CNP301	AB		
QCNCM998JAFZZ	10-CNP1	AC		
QCNCM999BAFZZ	10-CNP402	AD		
QCNCM999EAFZZ	10-CNP102	AG		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
QCNCM999HAFZZ	10-CNP501	AD		
QCNCWA007SJ06	10-CNS504	AD		
"	10-CNS805	AD		
QCNCWA007SJ11	10-CNS702	AD		
QCNCWA016SJ16	10-CNS801	AE		
QCNCWA016SJ23	10-CNS503	AE		
"	10-CNS701	AE		
QCNWGA003SJZZ	13-4	AG		
QCNWNA028SJZZ	10-CNW803	AE		
QCNWNA051SJZZ	10-FFC702	AD		
QCNWNA052SJZZ	10-FFC701	AE		
QCNWNA055SJZZ	10-FFC801	AE		
QCNWNA056SJZZ	10-FFC805	AD		
QCNWNA062SJZZ	10-CNW101	AG		
QCNWNA063SJZZ	10-CNW102	AD		
QCNWNA064SJZZ	10-W701	AB		
QCNWNA065SJZZ	10-CNW103	AD		
QCNWNA066SJZZ	10-CNW502	AE		
QCNWNA067SJZZ	10-CNW802	AE		
QCNWNA068SJZZ	11-247	AC		
QCNWNA069SJZZ	10-CNA501	AF		
QCNWNA070SJZZ	10-W301	AB		
QCNWNA085SJZZ	10-CNA401	AC		
QCNWNA101SJZZ	10-CNW710	AC		
QCNWNA109SJZZ	10-W702	AB		
QCNWNA111SJZZ	10-W302	AB		
QCNWNA112SJZZ	10-W303	AB		
QFS-D102CAWNI	10-F101	AC		
QFSHD1013CEZZ	11-245	AB		
QJAKM0001SJZZ	10-J103	AG		
QSOCA0212AWZZ	10-J1	AD		
QSOCJ0003SJZZ	10-J102	AG		
QSW-K0002SJZZ	10-SW702	AC		
"	10-SW703	AC		
"	10-SW704	AC		
"	10-SW705	AC		
"	10-SW706	AC		
"	10-SW707	AC		
"	10-SW708	AC		
"	10-SW709	AC		
"	10-SW710	AC		
"	10-SW711	AC		
QSW-Z0003SJZZ	10-SW701	AG		
QTANA9024SJZZ	10-J101	AD		
QTANC9006SJZZ	10-J301	AD		
【 R 】				
RC-EZD105AF1H	8-C733	AB		
"	8-C734	AB		
RC-EZD107AF1A	8-C703	AB		
RC-EZD226AF1H	8-C704	AB		
RC-EZD227AF1A	8-C701	AC		
RC-EZD476AF1V	8-C732	AC		
RC-GZA104AF1H	8-C217	AB		
"	8-C218	AB		
"	8-C506	AB		
"	8-C509	AB		
RC-GZA105AF1H	8-C302	AB		
"	8-C319	AB		
"	8-C322	AB		
"	8-C324	AB		
"	8-C328	AB		
RC-GZA106AF1C	8-C404	AB		
RC-GZA106AF1H	8-C125	AB		
"	8-C203	AB		
"	8-C204	AB		
"	8-C354	AB		
"	8-C819	AB		
RC-GZA107AF1A	8-C353	AB		
"	8-C501	AB		
"	8-C502	AB		
"	8-C533	AB		
"	8-C534	AB		
"	8-C802	AB		
"	8-C805	AB		
"	8-C809	AB		
RC-GZA107AF1H	8-C121	AC		
RC-GZA107AF1V	8-C120	AB		
RC-GZA224AF1H	8-C508	AA		
"	8-C510	AA		
"	8-C515	AA		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
//	8-C516	AA		
RC-GZA225AF1H	8-C201	AB		
//	8-C202	AB		
//	8-C406	AB		
RC-GZA226AF1H	8-C212	AB		
//	8-C213	AB		
//	8-C281	AB		
//	8-C282	AB		
//	8-C315	AB		
//	8-C325	AB		
//	8-C330	AB		
//	8-C335	AB		
RC-GZA227AF1A	8-C517	AB		
RC-GZA227AF1E	8-C126	AB		
RC-GZA334AF1H	8-C321	AA		
RC-GZA474AF1H	8-C323	AA		
//	8-C844	AA		
//	8-C845	AA		
RC-GZA475AF1H	8-C333	AB		
//	8-C526	AB		
RC-GZA476AF1C	8-C367	AB		
RC-GZA476AF1E	8-C129	AB		
//	8-C211	AB		
//	8-C253	AB		
//	8-C349	AB		
//	8-C351	AB		
//	8-C405	AB		
//	8-C825	AB		
//	8-C843	AB		
//	8-C881	AB		
RC-GZA477AF0J	8-C851	AB		
//	8-C852	AB		
//	8-C853	AB		
//	8-C854	AB		
//	8-C871	AB		
RC-GZA477AF1A	8-C365	AC		
//	8-C804	AC		
RC-GZA477AF1C	8-C1	AC		
RC-GZW228AF1H	8-C115	AH		
//	8-C116	AH		
RC-GZW338AF1E	8-C118	AG		
//	8-C119	AG		
RCiLA0007SJZZ	6-L302	AG		
RCiLB0009SJZZ	6-L306	AG		
RCiLBA001SJZZ	6-L503	AE		
RCiLTA001SJZZ	6-L305	AC		
RCiLZA001SJZZ	6-L102	AC		
//	6-L103	AC		
RCORFA002SJZZ	6-FB802	AC		
RCORFA003SJZZ	6-L301	AB		
RCRSP0005SJZZ	7-X351	AF		
RCRSP0011SJZZ	7-X801	AE		
RCRSPA001SJZZ	7-X301	AE		
RCRSPA005SJZZ	7-X802	AF		
RCRSPA007SJZZ	7-X702	AE		
RFiLA0003SJZZ	4-CF303	AF		
RFiLF0003AWZZ	4-CF302	AK		
RFiLF0004SJZZ	4-CF301	AG		
//	4-CF304	AG		
RFiLLA001SJZZ	6-L311	AE		
RH-iXA013SJZZ	1-iC701	AX		
RH-iXA018SJZZ	1-iC802	AX		
RMOTV0409AFZZ	10-M401	AL		
//	11-226- 4	AL		
RRLYD0004SJZZ	10-RY1	AG		
RRMGA004SJSA	13-5	AR		
RTRNPA008SJZZ	5-PT1	BC		
RTRNPA009SJZZ	5-PT2	AL		
RTUNS0027AWZZ	10-FE301	AU		
【 S 】				
SPAKAA024SJZZ	13-6	AE		
SPAKAA025SJZZ	13-7	AE		
SPAKCA018SJZZ	13-8	AM		
SPAKCA036SJZZ	13-8	AM		
SPAKPA007SJZZ	13-9	AE		
SSAKA0014SJZZ	13-10	AB		
SSAKHA011SJZZ	13-11	AD		
SSAKHA017SJZZ	13-12	AD		
【 T 】				
TCADN0003SJZZ	13-13	AD		
TINSEA014SJZZ	13-14	AF		
TINSEA015SJZZ	13-14	AE		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
TINSZA009SJZZ	13-15	AD		
TINSZA010SJZZ	13-14	AM		
TLABS0042SJZZ	11-246	AB		
TLABZ0034SJZZ	13-16	AC		
TLABZ0067SJZZ	13-17	AB		
TLABZA016SJZZ	13-18	AC		
TLABZA017SJZZ	13-19			
【 U 】				
UDSKA0004AFZZ	15-	AZ		
【 V 】				
VCCCCY1HH100J	8-C341	AA		
//	8-C342	AA		
//	8-C507	AA		
VCCCCY1HH101J	8-C320	AA		
//	8-C724	AA		
//	8-C727	AA		
//	8-C728	AA		
//	8-C729	AA		
//	8-C738	AA		
//	8-C862	AA		
//	8-C863	AA		
//	8-C864	AA		
VCCCCY1HH120J	8-C305	AA		
//	8-C868	AA		
//	8-C869	AA		
VCCCCY1HH150J	8-C708	AA		
//	8-C709	AA		
VCCCCY1HH181J	8-C538	AA		
//	8-C539	AA		
VCCCCY1HH200J	8-C706	AA		
//	8-C707	AA		
VCCCCY1HH220J	8-C359	AA		
//	8-C360	AA		
VCCCCY1HH221J	8-C808	AA		
VCCCCY1HH270J	8-C310	AA		
VCCCCY1HH331J	8-C355	AA		
//	8-C726	AA		
VCCCCY1HH391J	8-C540	AB		
//	8-C541	AB		
VCCCCY1HH470J	8-C521	AA		
//	8-C524	AA		
//	8-C858	AA		
//	8-C859	AA		
VCCCCY1HH471J	8-C205	AA		
//	8-C206	AA		
//	8-C231	AA		
//	8-C232	AA		
VCCCCY1HH560J	8-C375	AA		
VCCCCY1HH561J	8-C311	AB		
//	8-C358	AB		
VCCCCY1HH681J	8-C877	AC		
VCCCCY1HH821J	8-C807	AB		
VCCSCY1HL3R0C	8-C209	AD		
//	8-C210	AD		
VCCSCY1HL5R0C	8-C343	AD		
VCFYFA1HA104J	8-C2	AC		
//	8-C855	AC		
//	8-C856	AC		
//	8-C880	AC		
VCKYCY1CB473K	8-C702	AA		
//	8-C811	AA		
//	8-C814	AA		
VCKYCY1EB104K	8-C312	AD		
//	8-C503	AD		
//	8-C504	AD		
//	8-C813	AD		
//	8-C876	AD		
VCKYCY1EB183K	8-C327	AB		
//	8-C331	AB		
VCKYCY1EB223K	8-C820	AB		
//	8-C821	AB		
VCKYCY1EB334K	8-C810	AC		
VCKYCY1EB393K	8-C812	AB		
VCKYCY1EB823K	8-C874	AB		
VCKYCY1EF104Z	8-C522	AA		
//	8-C542	AA		
//	8-C610	AA		
//	8-C705	AA		
//	8-C710	AA		
//	8-C717	AA		
//	8-C718	AA		
//	8-C721	AA		

XL-MP100H

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
"	8-C722	AA		
"	8-C801	AA		
"	8-C803	AA		
"	8-C806	AA		
"	8-C822	AA		
"	8-C827	AA		
"	8-C857	AA		
"	8-C860	AA		
"	8-C865	AA		
"	8-C866	AA		
"	8-C867	AA		
"	8-C870	AA		
"	8-C872	AA		
"	8-C873	AA		
"	8-C879	AA		
"	8-C882	AA		
"	8-C883	AA		
"	8-C884	AA		
"	8-C885	AA		
"	8-C886	AA		
"	8-C887	AA		
"	8-C888	AA		
"	8-C889	AA		
VCKYCY1HB101K	8-C334	AB		
"	8-C336	AB		
"	8-C337	AB		
"	8-C736	AB		
VCKYCY1HB102K	8-C131	AA		
"	8-C132	AA		
"	8-C251	AA		
"	8-C252	AA		
"	8-C332	AA		
"	8-C346	AA		
"	8-C519	AA		
"	8-C520	AA		
"	8-C711	AA		
"	8-C712	AA		
"	8-C713	AA		
"	8-C714	AA		
"	8-C715	AA		
"	8-C719	AA		
"	8-C730	AA		
"	8-C731	AA		
"	8-C846	AA		
"	8-C847	AA		
"	8-C848	AA		
"	8-C849	AA		
"	8-C861	AA		
"	8-C875	AA		
VCKYCY1HB103K	8-C102	AA		
"	8-C103	AA		
"	8-C124	AA		
"	8-C214	AA		
"	8-C254	AA		
"	8-C318	AA		
"	8-C347	AA		
"	8-C352	AA		
"	8-C518	AA		
"	8-C536	AA		
"	8-C537	AA		
"	8-C720	AA		
"	8-C723	AA		
VCKYCY1HB122K	8-C529	AA		
"	8-C530	AA		
VCKYCY1HB151K	8-C716	AA		
VCKYCY1HB152K	8-C815	AA		
"	8-C816	AA		
"	8-C817	AA		
VCKYCY1HB153K	8-C215	AA		
"	8-C216	AA		
"	8-C531	AA		
"	8-C532	AA		
"	8-C878	AA		
VCKYCY1HB272K	8-C512	AA		
"	8-C514	AA		
VCKYCY1HB332K	8-C221	AA		
"	8-C222	AA		
"	8-C527	AA		
"	8-C528	AA		
"	8-C545	AA		
"	8-C546	AA		
VCKYCY1HB333K	8-C329	AB		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VCKYCY1HB472K	8-C123	AA		
"	8-C511	AA		
"	8-C513	AA		
"	8-C543	AA		
"	8-C544	AA		
"	8-C818	AA		
VCKYCY1HB562K	8-C601	AA		
"	8-C602	AA		
"	8-C603	AA		
"	8-C604	AA		
VCKYCY1HB683K	8-C308	AB		
VCKYCY1HB822K	8-C207	AA		
"	8-C208	AA		
VCKYCY1HF104Z	8-C104	AB		
"	8-C105	AB		
"	8-C106	AB		
"	8-C107	AB		
"	8-C108	AB		
"	8-C109	AB		
"	8-C110	AB		
"	8-C111	AB		
"	8-C112	AB		
"	8-C113	AB		
"	8-C114	AB		
"	8-C117	AB		
"	8-C122	AB		
"	8-C128	AB		
"	8-C219	AB		
"	8-C220	AB		
"	8-C283	AB		
"	8-C303	AB		
"	8-C313	AB		
"	8-C326	AB		
"	8-C338	AB		
"	8-C339	AB		
"	8-C340	AB		
"	8-C348	AB		
"	8-C350	AB		
"	8-C356	AB		
"	8-C357	AB		
"	8-C363	AB		
"	8-C364	AB		
"	8-C366	AB		
"	8-C372	AB		
"	8-C399	AB		
"	8-C401	AB		
"	8-C402	AB		
VCQYKA1HM562J	8-C523	AA		
VHCSV347S/-1	3-D305	AG		
VHD1N4004//-1	3-D108	AB		
"	3-D109	AB		
VHD1N4148//-1	3-D1	AA		
"	3-D2	AA		
"	3-D3	AA		
"	3-D4	AA		
"	3-D107	AA		
"	3-D201	AA		
"	3-D283	AA		
"	3-D284	AA		
"	3-D403	AA		
"	3-D703	AA		
"	3-D704	AA		
VHD1N5402M/-1	3-D285	AE		
"	3-D286	AE		
VHDMC2836//-1	3-D105	AB		
"	3-D252	AB		
"	3-D254	AB		
"	3-D282	AB		
"	3-D805	AB		
VHDMC2838//-1	3-D251	AB		
"	3-D253	AB		
"	3-D281	AB		
"	3-D804	AB		
VHDRL203///-1	3-D101	AC		
"	3-D102	AC		
"	3-D103	AC		
"	3-D104	AC		
"	3-D111	AC		
"	3-D112	AC		
"	3-D113	AC		
"	3-D114	AC		
VHEDZH03C3+-1	3-D701	AB		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VHEDZH04A3+-1	3-D308	AB		
VHEDZH04B3+-1	3-D801	AB		
VHEDZH05B1+-1	3-D502	AB		
"	3-D503	AB		
VHEDZH05C2+-1	3-D803	AB		
VHEDZH07A3+-1	3-D106	AB		
VHEDZH12A1+-1	3-D309	AB		
VHEDZH2701+-1	3-D110	AB		
VHiAN22004A-1	1-iC803	AN		
VHiAN8785SB-1	1-iC804	AP		
VHiBD3881FV-1	1-iC501	AP		
VHiHY57V16D-1	1-iC805	AT		
VHiK1A7805APi	1-iC401	AF		
VHiLC72723D-1	1-iC351	AP		
VHiLV23002M-1	1-iC301	AS		
VHiMN6627933C	1-iC801	BB		
VHiNJM14558-1	1-iC601	AF		
VHiSTK43306-1	1-iC202	AY		
VHLGP1UD281-1	10-RX701	AL		
VHPBFTX2001-1	10-iC171	AL		
VHPLP3052A+-1	3-LED702	AC		
VHPSELS6E14-1	3-LED701	AM		
VP-DH100K0000	6-L303	AB		
"	6-L351	AB		
"	6-L501	AB		
"	6-L702	AB		
VP-DH1R0K0000	6-L101	AC		
"	6-L801	AC		
"	6-L802	AC		
"	6-L803	AC		
VP-DH470K0000	6-L308	AB		
VP-MK220K0000	6-L701	AB		
VRD-ST2CD100J	9-R103	AA		
"	9-R104	AA		
"	9-R106	AA		
"	9-R107	AA		
"	9-R302	AA		
VRD-ST2CD101J	9-R527	AA		
"	9-R529	AA		
"	9-R702	AA		
"	9-R706	AA		
"	9-R707	AA		
"	9-R712	AA		
"	9-R716	AA		
"	9-R763	AA		
"	9-R774	AA		
"	9-R778	AA		
"	9-R779	AA		
"	9-R861	AA		
"	9-R891	AA		
"	9-R892	AA		
"	9-R894	AA		
"	9-R895	AA		
"	9-R897	AA		
VRD-ST2CD102J	9-R220	AA		
"	9-R221	AA		
"	9-R311	AA		
"	9-R525	AA		
"	9-R526	AA		
"	9-R701	AA		
"	9-R711	AA		
"	9-R718	AA		
"	9-R749	AA		
"	9-R750	AA		
"	9-R751	AA		
"	9-R839	AA		
"	9-R846	AA		
"	9-R893	AA		
"	9-R896	AA		
VRD-ST2CD103J	9-R303	AA		
"	9-R352	AA		
"	9-R547	AA		
"	9-R781	AA		
"	9-R796	AA		
"	9-R824	AA		
"	9-R847	AA		
"	9-R867	AA		
VRD-ST2CD104J	9-R545	AA		
"	9-R799	AA		
VRD-ST2CD121J	9-R753	AA		
"	9-R776	AA		
VRD-ST2CD183J	9-R838	AA		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VRD-ST2CD1R0J	9-R126	AA		
"	9-R757	AA		
VRD-ST2CD221J	9-R755	AA		
"	9-R844	AA		
VRD-ST2CD222J	9-R155	AA		
VRD-ST2CD223J	9-R726	AA		
"	9-R727	AA		
"	9-R728	AA		
"	9-R736	AA		
"	9-R760	AA		
"	9-R826	AA		
"	9-R857	AA		
VRD-ST2CD224J	9-R158	AA		
VRD-ST2CD272J	9-R201	AA		
"	9-R202	AA		
"	9-R204	AA		
VRD-ST2CD331J	9-R161	AA		
"	9-R571	AA		
"	9-R577	AA		
"	9-R810	AA		
VRD-ST2CD332J	9-R703	AA		
"	9-R704	AA		
"	9-R708	AA		
"	9-R709	AA		
"	9-R710	AA		
"	9-R713	AA		
"	9-R714	AA		
"	9-R715	AA		
"	9-R768	AA		
VRD-ST2CD333J	9-R159	AA		
"	9-R211	AA		
VRD-ST2CD334J	9-R733	AA		
VRD-ST2CD391J	9-R323	AA		
VRD-ST2CD471J	9-R759	AA		
"	9-R777	AA		
"	9-R821	AA		
VRD-ST2CD472J	9-R105	AA		
"	9-R108	AA		
"	9-R114	AA		
"	9-R516	AA		
"	9-R519	AA		
"	9-R543	AA		
VRD-ST2CD473J	9-R522	AA		
"	9-R524	AA		
"	9-R540	AA		
"	9-R566	AA		
"	9-R567	AA		
"	9-R756	AA		
"	9-R814	AA		
VRD-ST2CD560J	9-R816	AA		
"	9-R819	AA		
"	9-R822	AA		
VRD-ST2CD681J	9-R572	AA		
VRD-ST2CD683J	9-R837	AA		
VRD-ST2CD823J	9-R511	AA		
"	9-R515	AA		
VRD-ST2EE102J	9-R101	AA		
"	9-R102	AA		
VRD-ST2EE120J	9-R531	AA		
VRS-CY1JB000J	9-R127	AA		
"	9-R309	AA		
"	9-R335	AA		
"	9-R336	AA		
"	9-R811	AA		
"	9-R854	AA		
"	9-R865	AA		
"	9-R871	AA		
"	9-R872	AA		
"	9-R873	AA		
"	9-R874	AA		
"	9-JR303	AA		
"	9-JR305	AA		
"	9-JR306	AA		
"	9-JR307	AA		
"	9-JR308	AA		
"	9-JR309	AA		
"	9-JR310	AA		
"	9-JR401	AA		
"	9-JR501	AA		
"	9-JR502	AA		
"	9-JR701	AA		
"	9-JR702	AA		

XL-MP100H

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
"	9-JR703	AA		
"	9-JR704	AA		
"	9-JR706	AA		
"	9-JR801	AA		
"	9-JR802	AA		
"	9-JR803	AA		
"	9-JR804	AA		
"	9-JR805	AA		
"	9-JR806	AA		
"	9-JR810	AA		
"	9-JR811	AA		
VRS-CY1JB100J	9-R154	AA		
"	9-R359	AA		
"	9-R812	AA		
VRS-CY1JB101J	9-R109	AA		
"	9-R118	AA		
"	9-R216	AA		
"	9-R217	AA		
"	9-R267	AA		
"	9-R280	AA		
"	9-R295	AA		
"	9-R296	AA		
"	9-R374	AA		
"	9-R411	AA		
"	9-R551	AA		
"	9-R725	AA		
"	9-R766	AA		
"	9-R767	AA		
"	9-R771	AA		
"	9-R801	AA		
"	9-R808	AA		
"	9-R832	AA		
"	9-R845	AA		
"	9-R850	AA		
"	9-R851	AA		
"	9-R862	AA		
"	9-R882	AA		
"	9-R883	AA		
"	9-R884	AA		
"	9-R885	AA		
"	9-R886	AA		
"	9-R887	AA		
VRS-CY1JB102J	9-R152	AA		
"	9-R153	AA		
"	9-R276	AA		
"	9-R317	AA		
"	9-R318	AA		
"	9-R321	AA		
"	9-R324	AA		
"	9-R341	AA		
"	9-R721	AA		
"	9-R734	AA		
"	9-R739	AA		
"	9-R740	AA		
"	9-R741	AA		
"	9-R769	AA		
"	9-R770	AA		
"	9-R772	AA		
"	9-R773	AA		
"	9-R784	AA		
"	9-R813	AA		
"	9-R890	AA		
VRS-CY1JB103J	9-R116	AA		
"	9-R117	AA		
"	9-R222	AA		
"	9-R223	AA		
"	9-R268	AA		
"	9-R270	AA		
"	9-R274	AA		
"	9-R275	AA		
"	9-R278	AA		
"	9-R281	AA		
"	9-R282	AA		
"	9-R283	AA		
"	9-R284	AA		
"	9-R285	AA		
"	9-R286	AA		
"	9-R289	AA		
"	9-R290	AA		
"	9-R313	AA		
"	9-R330	AA		
"	9-R353	AA		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
"	9-R357	AA		
"	9-R358	AA		
"	9-R363	AA		
"	9-R364	AA		
"	9-R403	AA		
"	9-R414	AA		
"	9-R501	AA		
"	9-R528	AA		
"	9-R530	AA		
"	9-R610	AA		
"	9-R780	AA		
"	9-R782	AA		
"	9-R797	AA		
"	9-R859	AA		
"	9-R866	AA		
"	9-R868	AA		
VRS-CY1JB104J	9-R265	AA		
"	9-R266	AA		
"	9-R291	AA		
"	9-R292	AA		
"	9-R304	AA		
"	9-R319	AA		
"	9-R322	AA		
"	9-R355	AA		
"	9-R612	AA		
"	9-R705	AA		
"	9-R732	AA		
"	9-R737	AA		
"	9-R898	AA		
VRS-CY1JB105J	9-R611	AA		
"	9-R863	AA		
VRS-CY1JB121J	9-R541	AA		
"	9-R542	AA		
VRS-CY1JB122J	9-R719	AA		
"	9-R720	AA		
"	9-R722	AA		
VRS-CY1JB123J	9-R218	AA		
"	9-R219	AA		
"	9-R263	AA		
"	9-R534	AA		
"	9-R536	AA		
"	9-R539	AA		
"	9-R746	AA		
"	9-R747	AA		
VRS-CY1JB150J	9-R412	AB		
"	9-R413	AB		
VRS-CY1JB152J	9-R110	AA		
"	9-R297	AA		
VRS-CY1JB153J	9-R568	AA		
VRS-CY1JB154J	9-R257	AA		
"	9-R258	AA		
VRS-CY1JB182J	9-R205	AA		
"	9-R206	AA		
"	9-R207	AA		
"	9-R208	AA		
"	9-R502	AA		
"	9-R518	AA		
"	9-R520	AA		
VRS-CY1JB183J	9-R512	AA		
VRS-CY1JB221J	9-R362	AA		
"	9-R731	AA		
"	9-R735	AA		
"	9-R823	AA		
"	9-R848	AA		
"	9-R849	AA		
"	9-R855	AA		
"	9-R860	AA		
"	9-R864	AA		
VRS-CY1JB222J	9-R272	AA		
"	9-R273	AA		
"	9-R279	AA		
"	9-R287	AA		
"	9-R288	AA		
"	9-R375	AA		
"	9-R554	AA		
"	9-R556	AA		
"	9-R557	AA		
"	9-R717	AA		
"	9-R723	AA		
"	9-R764	AA		
"	9-R804	AA		
"	9-R805	AA		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
"	9-R806	AA		
VRS-CY1JB223J	9-R251	AA		
"	9-R254	AA		
"	9-R269	AA		
"	9-R271	AA		
"	9-R316	AA		
"	9-R409	AA		
"	9-R505	AA		
"	9-R508	AA		
"	9-R560	AA		
"	9-R565	AA		
"	9-R748	AA		
"	9-R762	AA		
"	9-R775	AA		
"	9-R817	AA		
"	9-R828	AA		
"	9-R834	AA		
"	9-R835	AA		
"	9-R840	AA		
"	9-R841	AA		
"	9-R842	AA		
"	9-R858	AA		
"	9-R889	AA		
VRS-CY1JB224J	9-R356	AA		
VRS-CY1JB272J	9-R214	AA		
"	9-R215	AA		
"	9-R340	AA		
"	9-R605	AA		
"	9-R606	AA		
"	9-R607	AA		
"	9-R608	AA		
VRS-CY1JB273J	9-R416	AA		
"	9-R532	AA		
VRS-CY1JB330J	9-R160	AA		
"	9-R332	AA		
"	9-R371	AA		
VRS-CY1JB331J	9-R329	AA		
"	9-R372	AA		
VRS-CY1JB332J	9-R312	AA		
"	9-R407	AA		
"	9-R415	AA		
"	9-R509	AA		
"	9-R510	AA		
"	9-R513	AA		
"	9-R514	AA		
"	9-R521	AA		
"	9-R523	AA		
"	9-R561	AA		
"	9-R564	AA		
"	9-R570	AA		
"	9-R785	AA		
"	9-R802	AA		
"	9-R807	AA		
"	9-R869	AA		
VRS-CY1JB333J	9-R546	AA		
"	9-R724	AA		
"	9-R833	AA		
"	9-R836	AA		
"	9-R881	AA		
VRS-CY1JB334J	9-R277	AA		
"	9-R504	AA		
"	9-R507	AA		
VRS-CY1JB392J	9-R742	AA		
"	9-R743	AA		
VRS-CY1JB394J	9-R533	AA		
"	9-R535	AA		
VRS-CY1JB471J	9-R298	AA		
"	9-R506	AA		
VRS-CY1JB472J	9-R255	AA		
"	9-R256	AA		
"	9-R314	AA		
"	9-R315	AA		
"	9-R326	AA		
"	9-R354	AA		
"	9-R360	AA		
"	9-R361	AA		
"	9-R562	AA		
"	9-R563	AA		
"	9-R569	AA		
VRS-CY1JB473J	9-R252	AA		
"	9-R253	AA		
"	9-R259	AA		

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
"	9-R260	AA		
"	9-R261	AA		
"	9-R262	AA		
"	9-R264	AA		
"	9-R320	AA		
"	9-R537	AA		
"	9-R538	AA		
"	9-R549	AA		
"	9-R550	AA		
"	9-R555	AA		
"	9-R573	AA		
"	9-R574	AA		
"	9-R761	AA		
"	9-R803	AA		
VRS-CY1JB474J	9-R351	AA		
"	9-R410	AA		
VRS-CY1JB560J	9-R122	AA		
VRS-CY1JB562J	9-R827	AA		
"	9-R829	AA		
"	9-R888	AA		
VRS-CY1JB563J	9-R203	AA		
"	9-R209	AA		
"	9-R210	AA		
"	9-R224	AA		
VRS-CY1JB681J	9-R111	AA		
"	9-R376	AA		
"	9-R378	AA		
"	9-R548	AA		
VRS-CY1JB682J	9-R503	AA		
"	9-R575	AA		
"	9-R576	AA		
"	9-R601	AA		
"	9-R602	AA		
"	9-R603	AA		
"	9-R604	AA		
"	9-R744	AA		
"	9-R745	AA		
VRS-CY1JB683J	9-R831	AA		
VRS-CY1JB752J	9-R820	AA		
VRS-CY1JB821J	9-R123	AA		
"	9-R124	AA		
"	9-R293	AA		
"	9-R294	AA		
"	9-R856	AA		
"	9-R879	AA		
VRS-CY1JB822J	9-R830	AA		
"	9-R843	AA		
VRS-CY1JB823J	9-R818	AA		
"	9-R880	AA		
VRS-CY1JB8R2J	9-R517	AA		
VRS-VV3AAR22J	9-R212	AC		
"	9-R213	AC		
VS2SA1235F+-1	2-Q254	AD		
"	2-Q282	AD		
"	2-Q283	AD		
"	2-Q287	AD		
"	2-Q404	AD		
"	2-Q504	AD		
"	2-Q508	AD		
"	2-Q603	AD		
"	2-Q801	AD		
VS2SA1514K/-1	2-Q255	AC		
"	2-Q256	AC		
VS2SA2002EF-1	2-Q506	AE		
"	2-Q507	AE		
VS2SB1370E+-1	2-Q101	AG		
VS2SC3052F+-1	2-Q102	AD		
"	2-Q103	AD		
"	2-Q105	AD		
"	2-Q201	AD		
"	2-Q251	AD		
"	2-Q252	AD		
"	2-Q253	AD		
"	2-Q257	AD		
"	2-Q281	AD		
"	2-Q284	AD		
"	2-Q301	AD		
"	2-Q351	AD		
"	2-Q352	AD		
"	2-Q353	AD		
"	2-Q401	AD		
"	2-Q402	AD		

XL-MP100H

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
"	2-Q403	AD		
"	2-Q501	AD		
"	2-Q502	AD		
"	2-Q503	AD		
"	2-Q511	AD		
"	2-Q512	AD		
"	2-Q701	AD		
"	2-Q704	AD		
"	2-Q705	AD		
"	2-Q706	AD		
"	2-Q803	AD		
"	2-Q804	AD		
VS2SC5395F+-1	2-Q305	AD		
"	2-Q505	AD		
"	2-Q702	AD		
"	2-Q703	AD		
"	2-Q708	AD		
"	2-Q805	AD		
"	2-Q806	AD		
VS2SC5477+-1	2-Q371	AD		
VS2SK2158/-1	2-Q601	AB		
"	2-Q602	AB		
VS2SK3377Z/-1	2-Q285	AH		
"	2-Q286	AH		
VSKTA1266GR-1	2-Q104	AB		
VSKTC2875B/-1	2-Q509	AC		
"	2-Q510	AC		
"	2-Q513	AC		
VVK09SS53T/-1	10-FL701	AT		
【 X 】				
XHBSD20P03000	11-606	AA		
XHBSD30P06000	11-605	AA		
XHBSF30P06000	11-607	AA		
XHBSF30P08000	11-608	AA		
XJBSD25P10000	11-609	AD		
XJBSD30P08000	11-610	AA		
XJBSD30P10000	11-611	AA		
XJBSF30P06000	11-612	AA		
XJBSF30P08000	11-613	AA		
XJBSF30P10000	11-614	AA		
XJBSF30P12000	11-615	AA		
XJBSF30P16000	11-616	AA		
【 9 】				
94GD62070122	11-223- 6	AT		
94R192104310	11-223- 3	AL		
94R19210703	11-223- 1	AE		
9GD19210943	11-223- 2	AG		
9GD192112347	10-M501	AX		
"	11-223- 9	AX		
9GD19212118	10-SOL501	AP		
"	11-223- 4	AP		
9GD192121303	11-223-10	AZ		
"	14-PWB-C	AZ		
9GD192121306	11-223-11	AP		
"	14-PWB-D	AP		
9GD62161401	11-223- 5	AN		
9GD640101210	10-SW501	AE		
"	10-SW502	AE		
"	11-223- 7	AE		
"	11-223- 8	AE		
9GD8188012A	10-M801	AX		
"	11-224- 1			
9GD8188013A	11-224- 3			
"	14-PWB-E			
9GD8188015A	10-SW801			
"	11-224- 2			
9GD8188016A	11-224- 4			

“HOW TO ORDER REPLACEMENT PARTS”

To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER
2. REF. No.
3. PART NO.
4. DESCRIPTION

★ MARK: SPARE PARTS-DELIVERY SECTION

For U.S.A. only

Contact your nearest SHARP Parts Distributor to order.

For location of SHARP Parts Distributor,
Please call Toll-Free;
1-800-BE-SHARP

Explanation of capacitors/resistors parts codes

Capacitors

- VCC Ceramic type
- VCK Ceramic type
- VCT Semiconductor type
- VC •• MF Cylindrical type (without lead wire)
- VC •• MN Cylindrical type (without lead wire)
- VC •• TV Square type (without lead wire)
- VC •• TQ Square type (without lead wire)
- VC •• CY Square type (without lead wire)
- VC •• CZ Square type (without lead wire)
- VC J .. The 13th character represents capacity difference.
("J" ±5%, "K" ±10%, "M" ±20%, "N" ±30%,
"C" ±0.25 pF, "D" ±0.5 pF, "Z" +80-20%.)

If there are no indications for the electrolytic capacitors, error is ±20%.

Resistors

- VRD Carbon-film type
- VRS Carbon-film type
- VRN Metal-film type
- VR •• MF Cylindrical type (without lead wire)
- VR •• MN Cylindrical type (without lead wire)
- VR •• TV Square type (without lead wire)
- VR •• TQ Square type (without lead wire)
- VR •• CY Square type (without lead wire)
- VR •• CZ Square type (without lead wire)
- VR J .. The 13th character represents error.
("J" ±5%, "F" ±1%, "D" ±0.5%.)

If there are no indications for other parts, the resistors are ±5% carbon-film type.

SHARP

COPYRIGHT © 2004 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Higashihirosima, Hiroshima 739-0192, Japan

Printed in Japan

A0405-1SS•HA•C

SG•SK•SA