
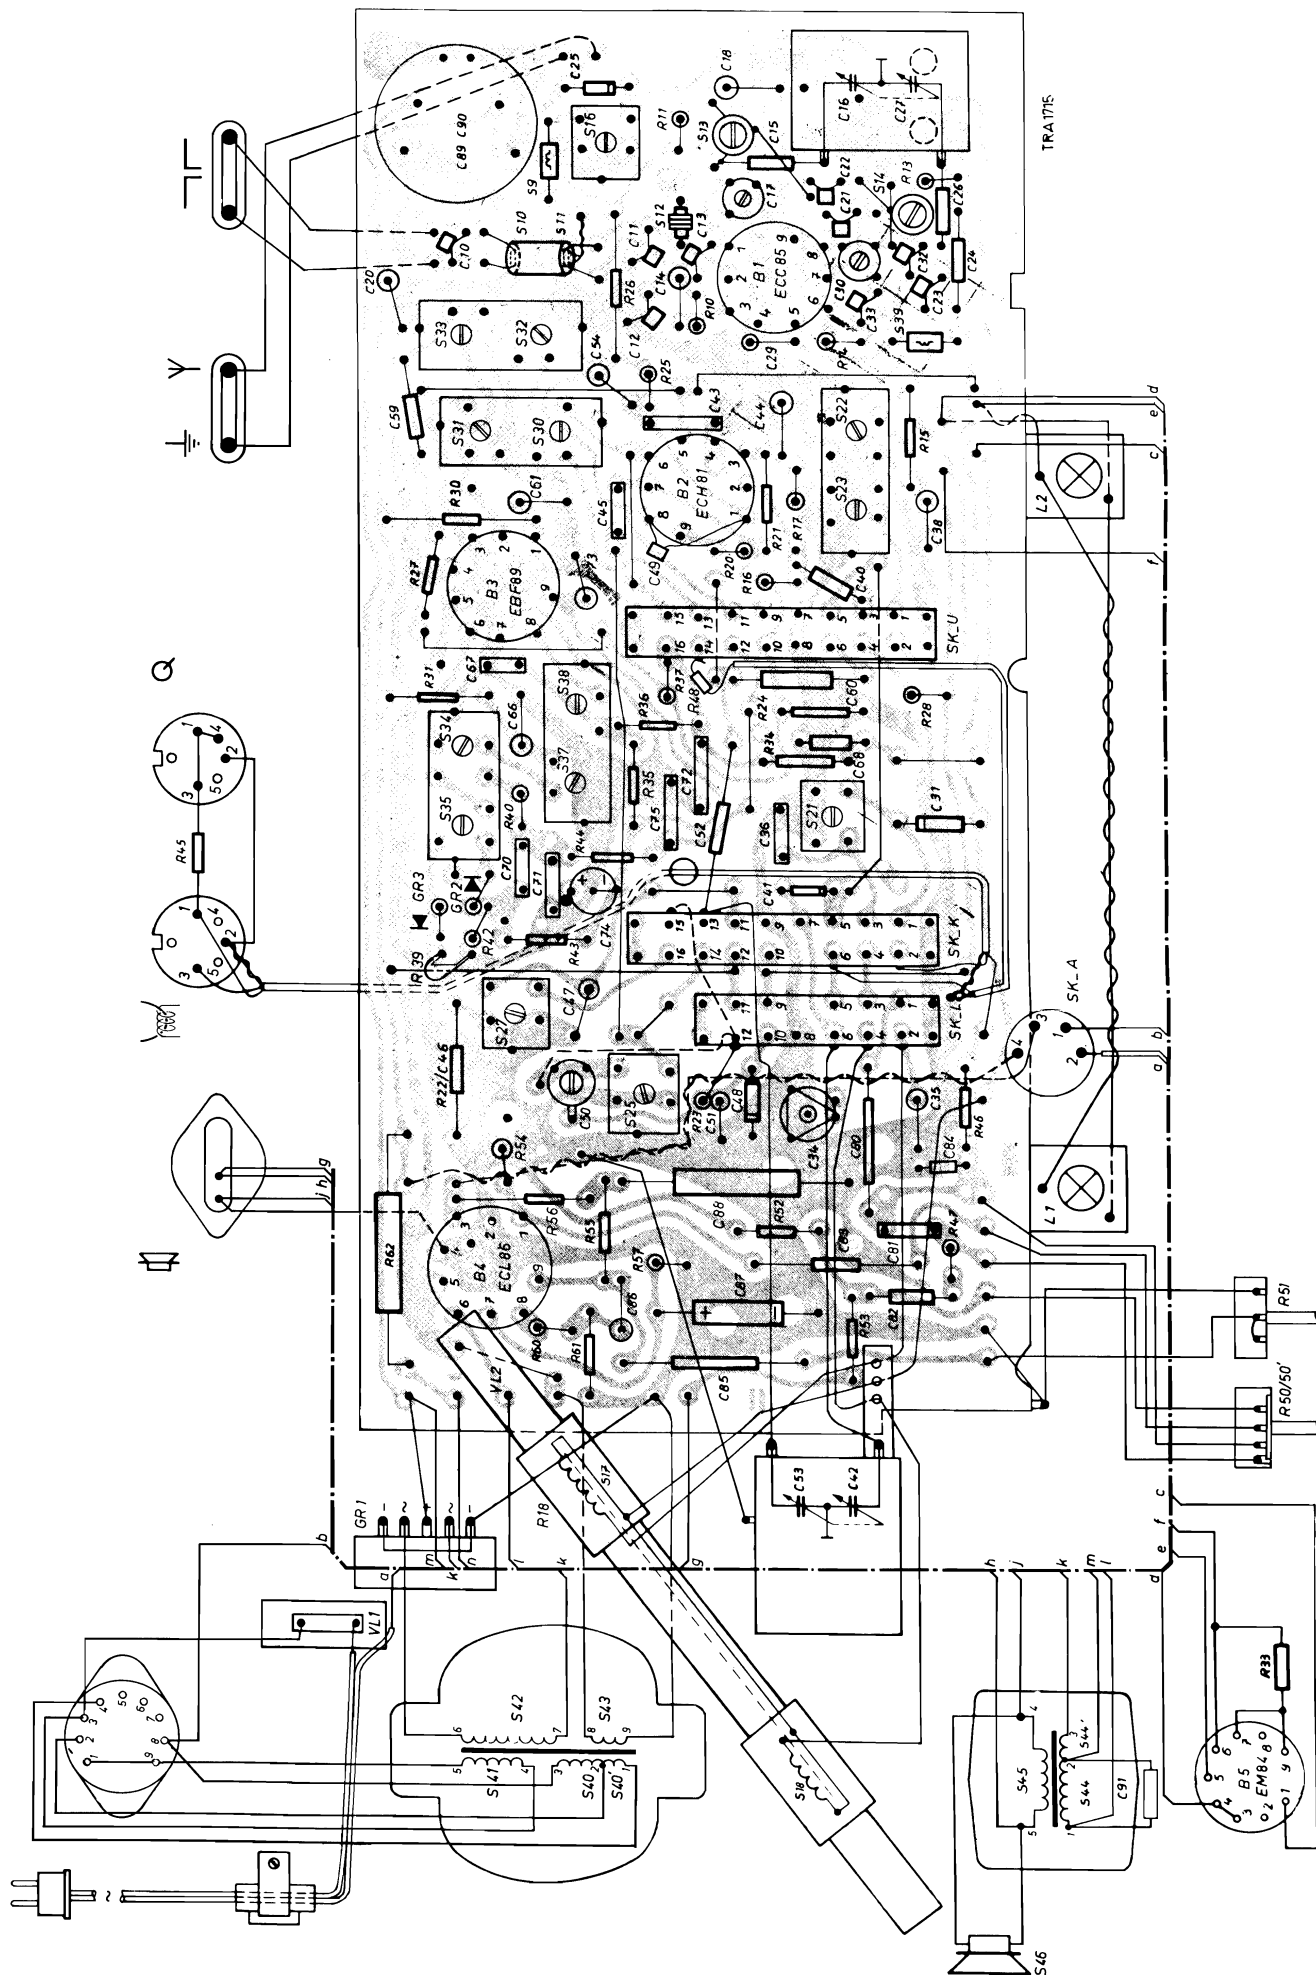


[illegible]


B3X54A/00

B3X54A/00

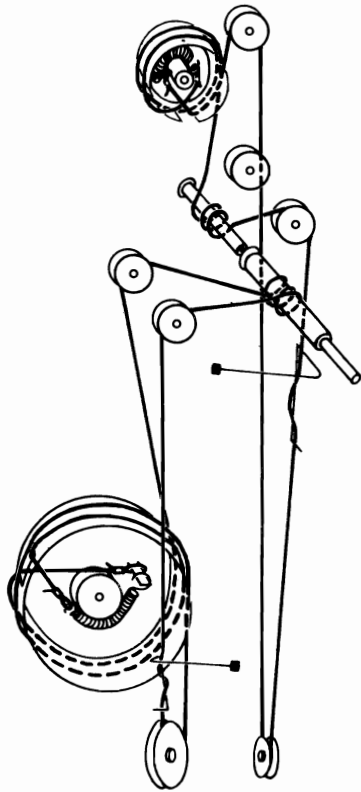

TRA 1219 A

Serv-o-Meum E-a-1 E-a-2 E-a-3	Wave range Gegenstandsbereich Wellenbereich Margen de ondas	Trimming point Point de réglage Trimmpunkt Punto de ajuste	Signal Signal Signal Signal	Trim Trim Trim Trim	Indication Indication Indication Indication
IP-MP-FI-ZP-FI	PM-MQ-PO-MW-OM	1620 kc/s	452 kc/s ~ 282 via 35000 pF	838,837 852,555	Max. output
		512 kc/s	452 kc/s	816	Min. output
	PM-MQ-PO-MW-OM	600 kc/s	600 kc/s	825,518	
		1500 kc/s	1500 kc/s	850,534	
RP-RP-HP-RP-RP	SM-KQ-OC-KW-OC	6,45Mc/s	6,45 Mc/s	827,521	Max. output
		11,8 Mc/s	11,8 Mc/s	847	
	LM-LQ-OL-OM-OL	168 kc/s	168 kc/s	851,517	
		262 kc/s	262 kc/s	855	
IP-MP-FI-ZP-FI	PM-MW	88 Mc/s	10,7 Mc/s via 282	834 835 850,531	Max. DV 0 V DV Max. DV
RP-RP-HP-RP-RP	PM-MW	102,6 Mc/s	102,6 Mc/s	850,517	Max. DV
		88,2 Mc/s	88,2 Mc/s	815,514	

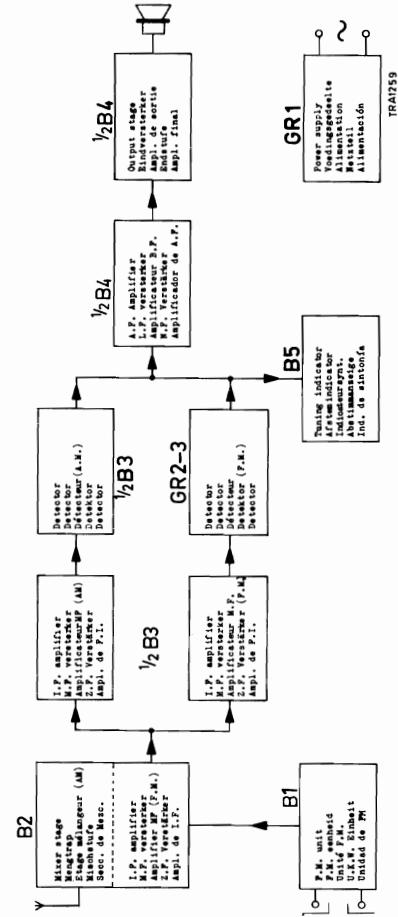

TRA 1219 A

Cabinet	4822 210 01163	Kast	Ebénisterie	Gehäuse	4822 210 01163	Mueble
Frontplate	4822 210 01164	Frontplaat	Plaque frontal	Frontplatte	4822 210 01164	Placa frontal
Foot	4822 211 01238	Voet	Pied	Fuss	4822 211 01238	Pie
Pulley (14 mm)	965/2,05x14	Rol (14 mm)	Rouleau (14 mm)	Rolle (14 mm)	965/2,05x14	Rollo (14 mm)
Fuse holder	974/2x20	Zekeringhouder	Porte fusible	Sicherungshalter	974/2x20	Portafusible
Voltage adaptor	4822 210 01152	Spanningsomschakelaar	Carrousel de tension	Spannungswähler	4822 210 01152	Selector de tensión
Socket PU-recorder	979/5x180	Contrastecker PU-magn.	Fiche femelle PU-enrég.	Kontrastecker TA-TB	979/5x180	Enchufe hembra PU-magn.
Socket LS	979/S2x4	Stekerbus LS	Douille h-p	Steckerbuchse LS	979/S2x4	Hembrilla altavoz
Socket aerial (AM)	4822 211 01241	Stekerbus antenne (AM)	Douille antenne (AM)	Steckerbuchse Antenne (AM)	4822 211 01241	Hembrilla antena (AM)
Socket aerial (FM)	4822 211 01242	Stekerbus antenne (FM)	Douille antenne (FM)	Steckerbuchse Antenne (UKW)	4822 211 01242	Hembrilla antena (FM)
Mains switch	F 071 AA/01	Netschakelaar	Commutateur secteur	Netzschalter	F 071 AA/01	Commutador de red
Push button unit	4822 211 01243	Druktoetseenheid	Unité de touche poussoir	Drucktasteineinheit	4822 211 01243	Unidad de pulsador
Push button (3-7)	4822 188 00444	Druktoets (3-7)	Touche poussoir (3-7)	Drucktaste (3-7)	4822 188 00444	Pulsador (3-7)
Knob (9)	4822 211 01244	Knop (9)	Bouton (9)	Knopf (9)	4822 211 01244	Botón (9)
Knob (8)	4822 211 01231	Knop (8)	Bouton (8)	Knopf (8)	4822 211 01231	Botón (8)
Knob (1,2)	4822 211 01245	Knop (1,2)	Bouton (1,2)	Knopf (1,2)	4822 211 01245	Botón (1,2)
Lampholder	976/S2x12	Lamphouder	Support de lampe	Lampenfassung	976/S2x12	Portalámpara
Slide switch FM	4822 210 01001	Schuifschakelaar FM	Comm. à glisser FM	Schiebeschalter UKW	4822 210 01001	Comm. deslizante FM
Slider FM	4822 210 01004	Schuif FM	Tiroir FM	Schieber UKW	4822 210 01004	Deslizador FM
Slide switch SW	4822 210 01002	Schuifschakelaar KG	Comm. à glisser OC	Schiebeschalter KW	4822 210 01002	Comm. deslizante OC
Slider SW	4822 210 01005	Schuif KG	Tiroir OC	Schieber KW	4822 210 01005	Deslizador OC
Slide switch LW	4822 210 01003	Schuifschakelaar LG	Comm. à glisser GO	Schiebeschalter LW	4822 210 01003	Comm. deslizante OL
Slider LW	4822 210 01006	Schuif LG	Tiroir GO	Schieber LW	4822 210 01006	Deslizador OL
Coupling piece for slide	4822 211 01078	Koppelstuk voor schuif	Pièce de couplage pour tiroir	Kopplungsstück für Schieber	4822 211 01078	Pieza de acoplo para deslizador
Dial (NB/ZW/FR/Ö)	4822 211 01239	Schaal (NB/ZW/FR/Ö)	Cadran (NB/ZW/FR/Ö)	Skala (NB/ZW/FR/Ö)	4822 211 01239	Cuadrante (NB/ZW/FR/Ö)

FOR PARTS WHICH ARE NOT MENTIONED REFER TO OUR CATALOGUE OF PHILIPS SERVICE PARTS. - VOOR NIET VERMELDE ONDERDELEN ZIE ONZE CATALOGUS VOOR PHILIPS SERVICE-ONDERDELEN.
 FOUR DES PIÉCES PAS MENTIONNÉES VOIR NOTRE CATALOGUE POUR PIÉCES SERVICE PHILIPS. - FUER NICHT GENANNT TEILE SIEHE UNSEREN KATALOG VON PHILIPS EINZELTEILE.
 PARA COMPONENTES NO MENCIONADOS SE REMITE A NUESTRO CATALOGO DE ACCESORIOS PHILIPS.

S9	VK 210 29/3B	Choke Smorspoel Self Drossel Choque	S22) S23) C37)	4822 210 01013	IF band-pass filter FM MF-bandfilter FM Filtre passe bande FI, FM ZF-Bandfilter UKW Filtro de pasabanda FI, FM	S34) S35) S36) C62) C63)	4822 210 01016	Ratio detector FM Ratio detector FM Décteur de rapport FM Ratio-Detektor UKW Detector de razón FM
S10) S11)	4822 210 01009	Input coil FM Ingangspoel FM Bobine d'entrée FM UKW-Eingangsspule Bobina de entrada FM	S24) S25)	4822 210 01014	Oscillator coil MW Oscillatorspoel MG Bobine oscillatrice PO Oscillatorspule MW Bobina de oscilador OM	S37) S38) C64) C65)	A3 910 39	IF band-pass filter AM MF-bandfilter AM Filtre passe bande FI, AM ZF-Bandfilter AM Filtro de pasabanda FM
S14) S15)	4822 210 01011	Oscillator coil FM Oscillatorspoel FM Bobine oscillatrice FM Oscillatorspule UKW Bobina de oscilador FM	S26) S27)	4822 210 00843	Oscillator coil SW Oscillatorspoel KG Bobine oscillatrice OC Oscillatorspule KW Bobina de oscilador OC	S39	4822 207 00275	Choke Smorspoel Self Drossel Choque
S16) R12)	4822 210 01012	IF wave-trap coil MF-sperkringspoel Bobine de circuit bouchon FI ZF-Sperkreisspule Bobina de trampa	S30) S31) C55) C56)	4822 210 01015	IF band-pass filter FM MF-bandfilter FM Filtre passe bande FI, FM ZF-Bandfilter UKW Filtro de pasabanda FI, FM	S40) S40') S41) S42) S43)	4822 211 01246	Mains transformer Nettransformator Transformateur secteur Netztransformator Transformador de red
S17) S18)	WE 741 14	Ferroceptor MW-LW Ferroceptor MG-LG Ferrocepteur PO-GO Ferroceptor MW-LW Ferroceptor OM-OL	S32) S33) C57) C58)	A3 129 30	IF band-pass filter AM MF-bandfilter AM Filtre passe bande FI, AM ZF-Bandfilter AM Filtro de pasa banda FI, AM	S44) S44') S45)	4822 210 00876	Loudspeaker transformer Luidsprekertransformator Transformateur de h-p Lautsprechertransformator Transformador de altavoz
S20) S21)	4822 210 00839	Aerial coil SW Antennespoel KO Bobine d'antenne OC Antennenspule KW Bobina de antena OC				S46	940/AD3386RX	Loudspeaker Luidspreker Haut-parleur Lautsprecher Altavoz
C10,11 C12,33 C13 C16) C27) C17,30,50 C21,22 C23 C25 C31 C32	18 pF 500 V 22 pF 500 V 3,3 pF 500 V 6 pF 8,2 pF 500 V 10 pF 500 V 1000 pF 125 V 3000 pF 125 V 12 pF 500 V	4822 069 00966 4822 069 00967 4822 069 00968 4822 210 01017 4822 069 00886 4822 069 00969 904/10E C 285 AB/A1K 905/B3K 4822 069 00972	C34 C41 C46) R22) C42) C53) C48 C49 C60,68 C74 C87	30 pF 470 pF 125 V 330 pF + 330 n 270 pF 125 V 4,7 pF 500 V 4700 pF 30 V 5 µF 70 V 125 µF 16 V	C 005 CC/30E C 285 AB/D470E 4822 071 00908 4822 059 00351 4822 069 00573 4822 069 00973 4822 069 01101 909/06,4 909/W125	C89) C90) R15 R28 R62 R50) R51 R39 VL1 VL2 L1,2	50 + 50 µF 350 V 6800 n 0,5 W 1000 n 0,5 W 1000 n 5,5 W 1,5 Mn+0,5 Mn 0,47 Mn 1000 n 200 mA 4 A	AC 8308/50+50 E 001 AD/A6KB E 001 AD/A1K 938/A1K 4822 071 01026 4822 071 00921 4822 071 00822 974/V200 974/4000 955/D6,3x100

FOR PARTS WHICH ARE NOT MENTIONED REFER TO OUR CATALOGUE OF PHILIPS SERVICE PARTS - VOOR NIET GENOEMDE ONDERDELEN ZIE ONZE CATALOGUS VOOR PHILIPS SERVICE-ONDERDELEN
 POUR DES PIÉCES PAS MENTIONNÉES VOIR NOTRE CATALOGUE POUR PIÉCES SERVICE PHILIPS - FUER NICHT GENANNT TEILE SIEHE UNSEREN KATALOG VON PHILIPS SERVICE EINZELTEILE
 PARA COMPONENTES NO MENCIONADOS SE REMITE A NUESTRO CATALOGO DE ACCESORIOS PHILIPS