

I.F. circuits - M.F. kringen - Circuits M.F. - Z.F.Kreise - Circuitos de F.I.

Wave range	Tuning capacitor	Signal	Adjust to max. output
Golfbereik	Afstemcondensator	Signaal	Afregelen op max. uitg. spanning
Gamme	Cond. variable	Signal	Régler au max. de sortie
Wellenbereich	Drehkondensator	Signal	Abgleichen auf Max. Ausg. Spannung
Margen	Cond. variable	Señal	Ajustense al max. de salida
M W M G P O M W O M	Min.	452 kc/s - 33.000 pF - b - Ts1	S10, S8, S6

R.F. circuits - H.F. kringen - Circuits H.F. - H.F. Kreise - Circuitos de R.F.

The signals are applied to the ferroceptor by means of a coupling winding


De signalen worden door middel van een koppelwikkeling aan de ferroceptor toegevoerd

Les signaux sont appliqués au ferrocepteur au moyen d'un enroulement de couplage


Die Signale werden mittels einer Kopplungswicklung dem Ferroceptor zugeführt

Las señales se aplican al ferroceptor por medio de un arrollamiento de acopla

Wave range	Tuning capacitor	Signal	Adjust to max. output
Golfbereik	Afstemcondensator	Signaal	Afregelen op max. uitg. spanning
Gamme	Cond. variable	Signal	Régler au max. de sortie
Wellenbereich	Drehkondensator	Signal	Abgleichen auf Max. Ausg. Spannung
Margen	Cond. variable	Señal	Ajustense al max. de salida
M.W M G P O M W O M	Max.	525 kc/s	S4
	Min.	1620 kc/s	C24
	Repeat - Herhalen - Répéter - Wiederholen - Repítanse		
		1500 kc/s	
		Tune receiver Apparaat afstemmen Accorder le récepteur Empfänger abstimmen Sintonícese el receptor	C23
L W L G G O L W O L		240 kc/s Tune receiver Apparaat afstemmen Accorder le récepteur Empfänger abstimmen Sintonícese el receptor	C27

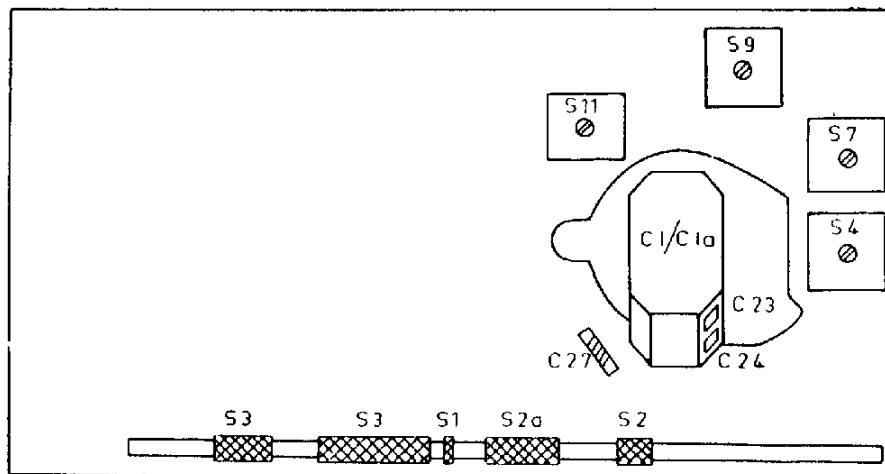


S	4.	3. 14. 14a. 13a. 13. 12. 15.	D. 2a.	C.	2. B. A.
C	22. 19.	21.	20. 18.	4. 3. 15. 12. 16. 12. 14.	27. 11. 8. 1. 24. 7. 25. 1a. 26. 6. 23. 5. 2. 29.
R	23. 22.	20. 21.	3.	18.	13. 25. 24. 2. 7. 9. 15. 11. 9. 16. 17. 14. 12. 19. 4. 10. 5. 1. 27. 26. 6.

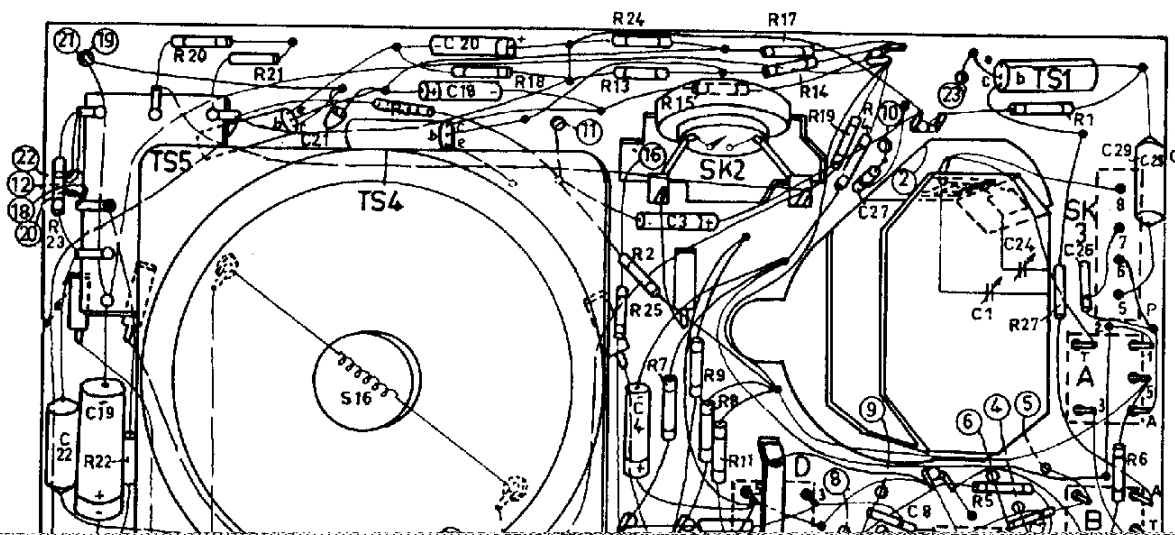


Printed in Holland

93 715.75.1.90
93 715.75.1.90
93 715.75.1.90

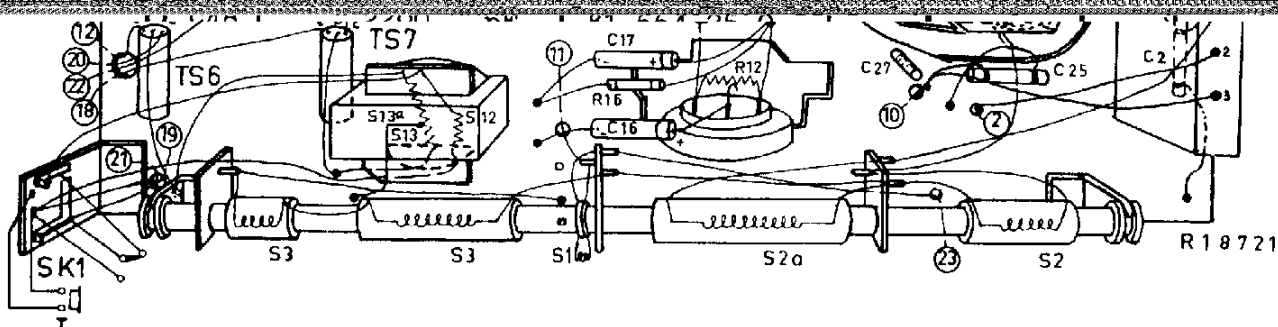

S	2	20	13	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
C	10	25	23	27	1	3	24	26	2	29	9	4	5	6	7	10	8	9	11
R																			

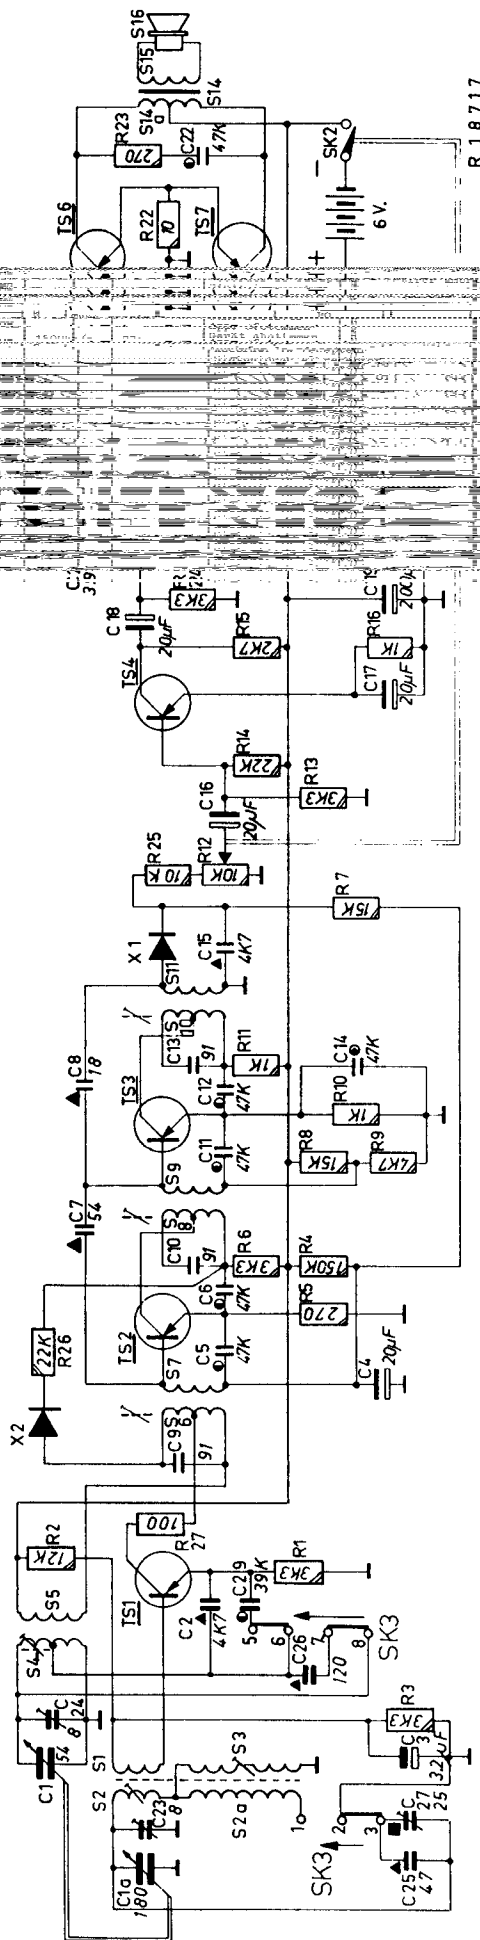

S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	S13	S14	S15	S16	S17	S18	S19	S20
FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82	FD 004 82

C16	C17	C18	C19	C20	C21	C22	C23	C24	C25	C26	C27	C28	C29	C30	C31	C32	C33	C34	C35
153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90	153 90

Cabinet (black)	Kast (zwart)	Coffret (noir)	Gehäuse (schwarz)	Caja (negre)	A3 960 02
Knob, wave range switch	Knop, golfbereikschakelaar	Bouton, comm. de gammes	Knopf, Wellenb. Schalter	Botón, comm. de ondas	FK 334 57/01
Plate, behind knob	Plaat, achter knop	Plaque, derrière le bouton	Platte hinter Knopf	Pietina, detrás del botón	A3 827 27
Knob, tuning	Knop, afstemming	Bouton, synt.	Knopf, Abstimmung	Botón, sintonía	A3 783 69
Screw, fixing knob	Schroef, bevestiging knop	Vis, fixation le bouton	Schraube, Befest. Knopf	Tornillo, fijación botón	A3 715 28
Knob, vol. control + batt. switch	Knop, vol.reg. + batt. schak.	Bouton, regl. d'int. + comm. de batt.	Knopf, Lautst. regler + Batt. Schalter	Botón, reg. de vol. + comm. de bat.	A3 772 57
Cover	Deksel	Couvercle	Deckel	Cubierta	P5 190 04/350/HA
Screw, fixing cover	Schroef, bevest. dekkel	Vis, fixation couvercle	Schraube, Befest. Deckel	Tornillo, fijación cubierta	A3 714 46
Cover, for battery holder	Kap, voor batterijhouder	Capot, pour porte-pile	Kappe, für Batteriehälter	Cubierta, para porta-pila	P5 280 65/377
Battery contact springs	Contactveren voor batterijhouder	Ressorts de contact pour porte-pile	Kontaktfedern, für Batt. halter	Resortes de contacto, para porta-pila	A9 865 63
Socket plate, earphone connection	Stekkerplaat, telef. aansl.	Douille, pour casque d'écoute	Steckerplatte, für Kopfhörer	Placa de hembra para auriculares	A3 777 26
Wave range switch	Golfbereikschakelaar	Comm. de gammes	Wellenbereichschalter	Comm. de ondas	FD 151 93
Dial	Schaal	Cadran	Skala	Cuadrante	928/L1X90T-00R

L1X90T

PHILIPS *Service*

RADIO

L1X90T-00S-00X-01R-01S-01X



With the following exceptions the versions -00S, -00X, 01R, -01S and -01X are identical to the -00R version.

Met de volgende uitzonderingen zijn de uitvoeringen -00S, -00X, -01R, -01S en -01X gelijk aan de -00R uitvoering.

Avec les exceptions suivantes, les exécutions -00S, -00X, -01R, -01S et -01X sont identiques à l'exécution -00R.

Mit Ausnahme des Untenstehenden sind die Ausführungen -00S, 00X, -01R, -01S und -01X gleich an die -00R Ausführung.

Con las excepciones siguientes, las ejecuciones -00S, -00X, -01R, -01S y -01X son idénticas a la ejecución -00R.

SERVICE INFORMATION										
------------------------	--	--	--	--	--	--	--	--	--	--

		Delete Afvoeren Rayer Abzüglich Suprimase	Add Toevoegen Ajouter Zuzüglich Anadase
<u>-00S</u>	Cabinet Kast Coffret Gehäuse Caja	A3 960 02	A3 960 27
<u>-00X</u>	Cabinet Kast Coffret Gehäuse Caja Cover Deksel Couvercle Deckel Cubierta	A3 960 02 P5 190 04/350/HA	A3 960 50 P5 190 04/350/MC
<u>-01R</u>	Loudspeaker Luidspreker Hautparleur Lautsprecher Altavoz S14-14a-15	AD 2200 Z A3 153 90	AD 2216 Z A3 154 23
<u>-01S</u>	Cabinet Kast Coffret Gehäuse Caja Cover Deksel Couvercle Deckel Cubierta Loudspeaker Luidspreker Hautparleur Lautsprecher Altavoz S14-14a-15	A3 960 02 P5 190 04/350/HA AD 2200 Z A3 153 90	A3 960 27 P5 190 04/350/JT AD 2216 Z A3 154 23
<u>-01X</u>	Cabinet Kast Coffret Gehäuse Caja Cover Deksel Couvercle Deckel Cubierta Loudspeaker Luidspreker Hautparleur Lautsprecher Altavoz S14-14a-15	A3 960 02 P5 190 04/350/HA AD 2200 Z A3 153 90	A3 960 50 P5 190 04/350/MC AD 2216 Z A3 154 23