




servicegegevens

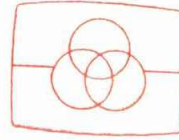


Free service manuals

Gratis schema

22 RB 484

Digitized by

www.freeservicemanuals.info

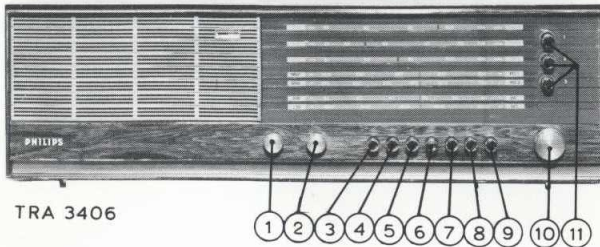

BEDIENINGSORGANEN

1 Klank	(R63)
2 Geluidssterkte	(R64)
3 Aan/uit	(SK-I)
4 PU	(SK-II)
5 Middengolf 2	(SK-III)
6 Middengolf 1	(SK-IV)
7 Langegolf	(SK-V)
8 Kortegolf	(SK-VI)
9 FM	(SK-VII)
10 Afstemming AM	(C31, 33)
11 Afstemming FM/Voorinstelling	(S4, 6, 7+SK-VIII)

CODENUMMERS


Kast-/00 (noten)	4822 425 60061
Kast-/62/65 (teak)	4822 425 60063
Kast-/72 (palissander)	4822 425 60064
Kast-/92 (macorée)	4822 425 60065
Voet	4822 462 70561
Frontplaat-/00	4822 426 50104
Frontplaat-/62/65	4822 426 50103
Frontplaat-72	4822 426 50105
Frontplaat-/92	4822 426 50106
Beugel voor bevestiging achterwand	4822 401 10012
Afstemindicator M	4822 346 10068
Knop afstemming AM	4822 413 40415
Knop klank, geluidssterkte	4822 413 30362
Knop afstemming FM	4822 413 30376
Druktoets	4822 410 20811
Druktoetseenheid	4822 276 70044
Aansluiting antenne AM+FM	4822 267 40129
Antennesteker AM	4822 264 30042
Antennesteker FM	4822 264 30043
Aansluiting bandrecorder/PU	4822 267 40125
Steker recorder/PU	4822 266 30026
Aansluiting luidspreker	4822 267 30182
Steker luidspreker	4822 264 30041
Snaarwiel AM	4822 528 80358
Ring bevestiging, snaarwiel AM en knop FM	4822 492 61357
Wijzer AM	4822 450 80249
Wijzer FM	4822 450 80248
Aandrijfsnaar	4822 321 30102
Geleiding voor aandrijfsnaar	4822 462 70562
Lamphouder	4822 255 10007
Diffusieplaat achter schaal	4822 466 70162
Schaal (104 MHz)	4822 333 50283
Detectie-eenheid (452 kHz)	4822 210 20161
Detectie-eenheid (460 kHz)	4822 210 20159
Detectie-eenheid (470 kHz)	4822 210 20164
Afstemeenheid (104 MHz)	4822 210 10134
Print, samenstelling + kernen (104 MHz)	4822 210 10127
Afstemeenheid (108 MHz)	4822 210 10135
Print, samenstelling + kernen (108 MHz)	4822 210 10136
Druktoetsas, samenstelling	4822 310 20197
Microschakelaar SK-VIII	4822 278 90035

Elektrische onderdelen

S11, 12, 13, C19	4822 153 50093
S14, 15, 16, 17	4822 158 60248
S18, 19	4822 156 40502
S20 - 25, C41, 42	4822 153 70012
S26, 27, 28	4822 156 10328
S29, 30, 31	4822 156 10329
S32, 33, 34	4822 156 10331
S35	4822 156 40089
S36, C36	4822 153 10202
S38, 39, 40, C44	4822 153 10214
S48 - 53	4822 156 40089
Luidspreker	4822 240 20101
C22	4822 121 50083
C25, 28, 58, 61, 99	4822 125 50018
C26	4822 122 10083
C31 - 34	4822 125 20148
C35, 43	4822 121 50088
C54	4822 121 50038
C57	4822 121 50388
C60	4822 125 50026
C96	4822 124 40005
TS3, 4, 5	40820 4822 130 40421
TS10, 11	4822 130 40319
R44	4822 111 30156
R63	4822 101 20116
R64	4822 101 30083
R71	4822 110 60061
R72	4822 111 30111
R74	4822 116 30082
R75	4822 111 30014
VL1	4822 252 20001
LA1	4822 134 40008
D4, 5	4822 130 30312


Voor verdere gegevens en trimvoorschriften wordt
verwezen naar de volledige servicedocumentatie.

22 RB 484

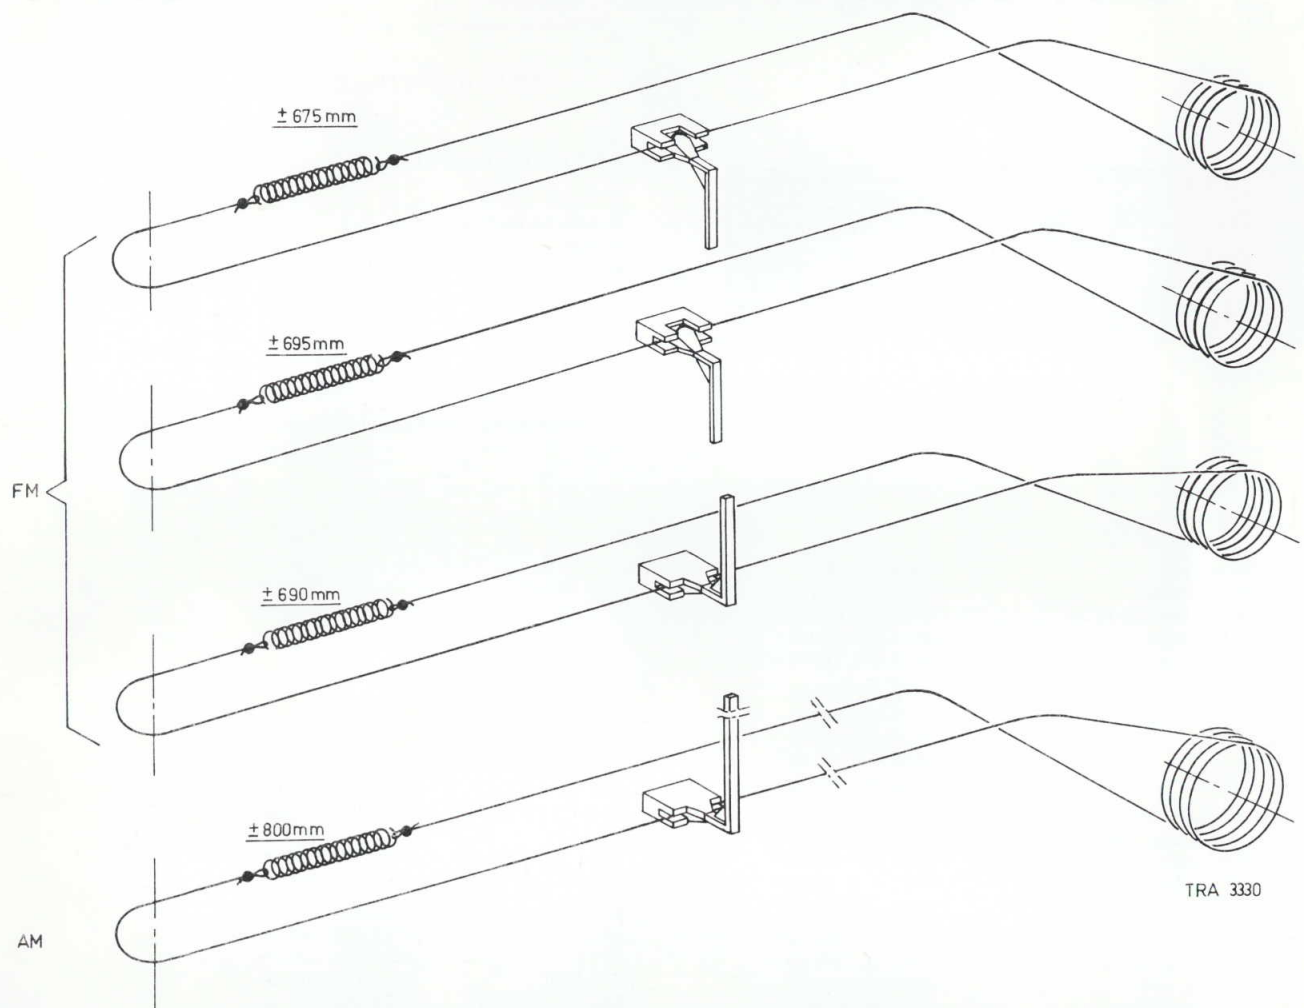

22 RB 484

S	41÷46 0.N.P.G.H.												F.	10.	M.K.	6.7 L J. A.	5.D.	C.E.4.	B. 1 2,3.	S			
C	98	97	95	96	88 94	93	101	90	105 92	91 103 89	87	70	69	65	58 39 54 47 59 64 55 61 99	46 52 30 57 62 37 60 56 53 45 50	48 51	58 39	20 38 25 66	22 23 24 29 38	28 102	C	
C																							C
R	74	80	79 63 73 75	71	78 72 61 70	82	64 67 66 44 65 85	77 84 68 69 62 76 81	60	54 35 36 39 33 34	27	37 28 32 31 33 26 25 30 21 15	29 20 23 18	13	19 22	17 16 40	57 41 14 42	12	45	87			R
R																							R

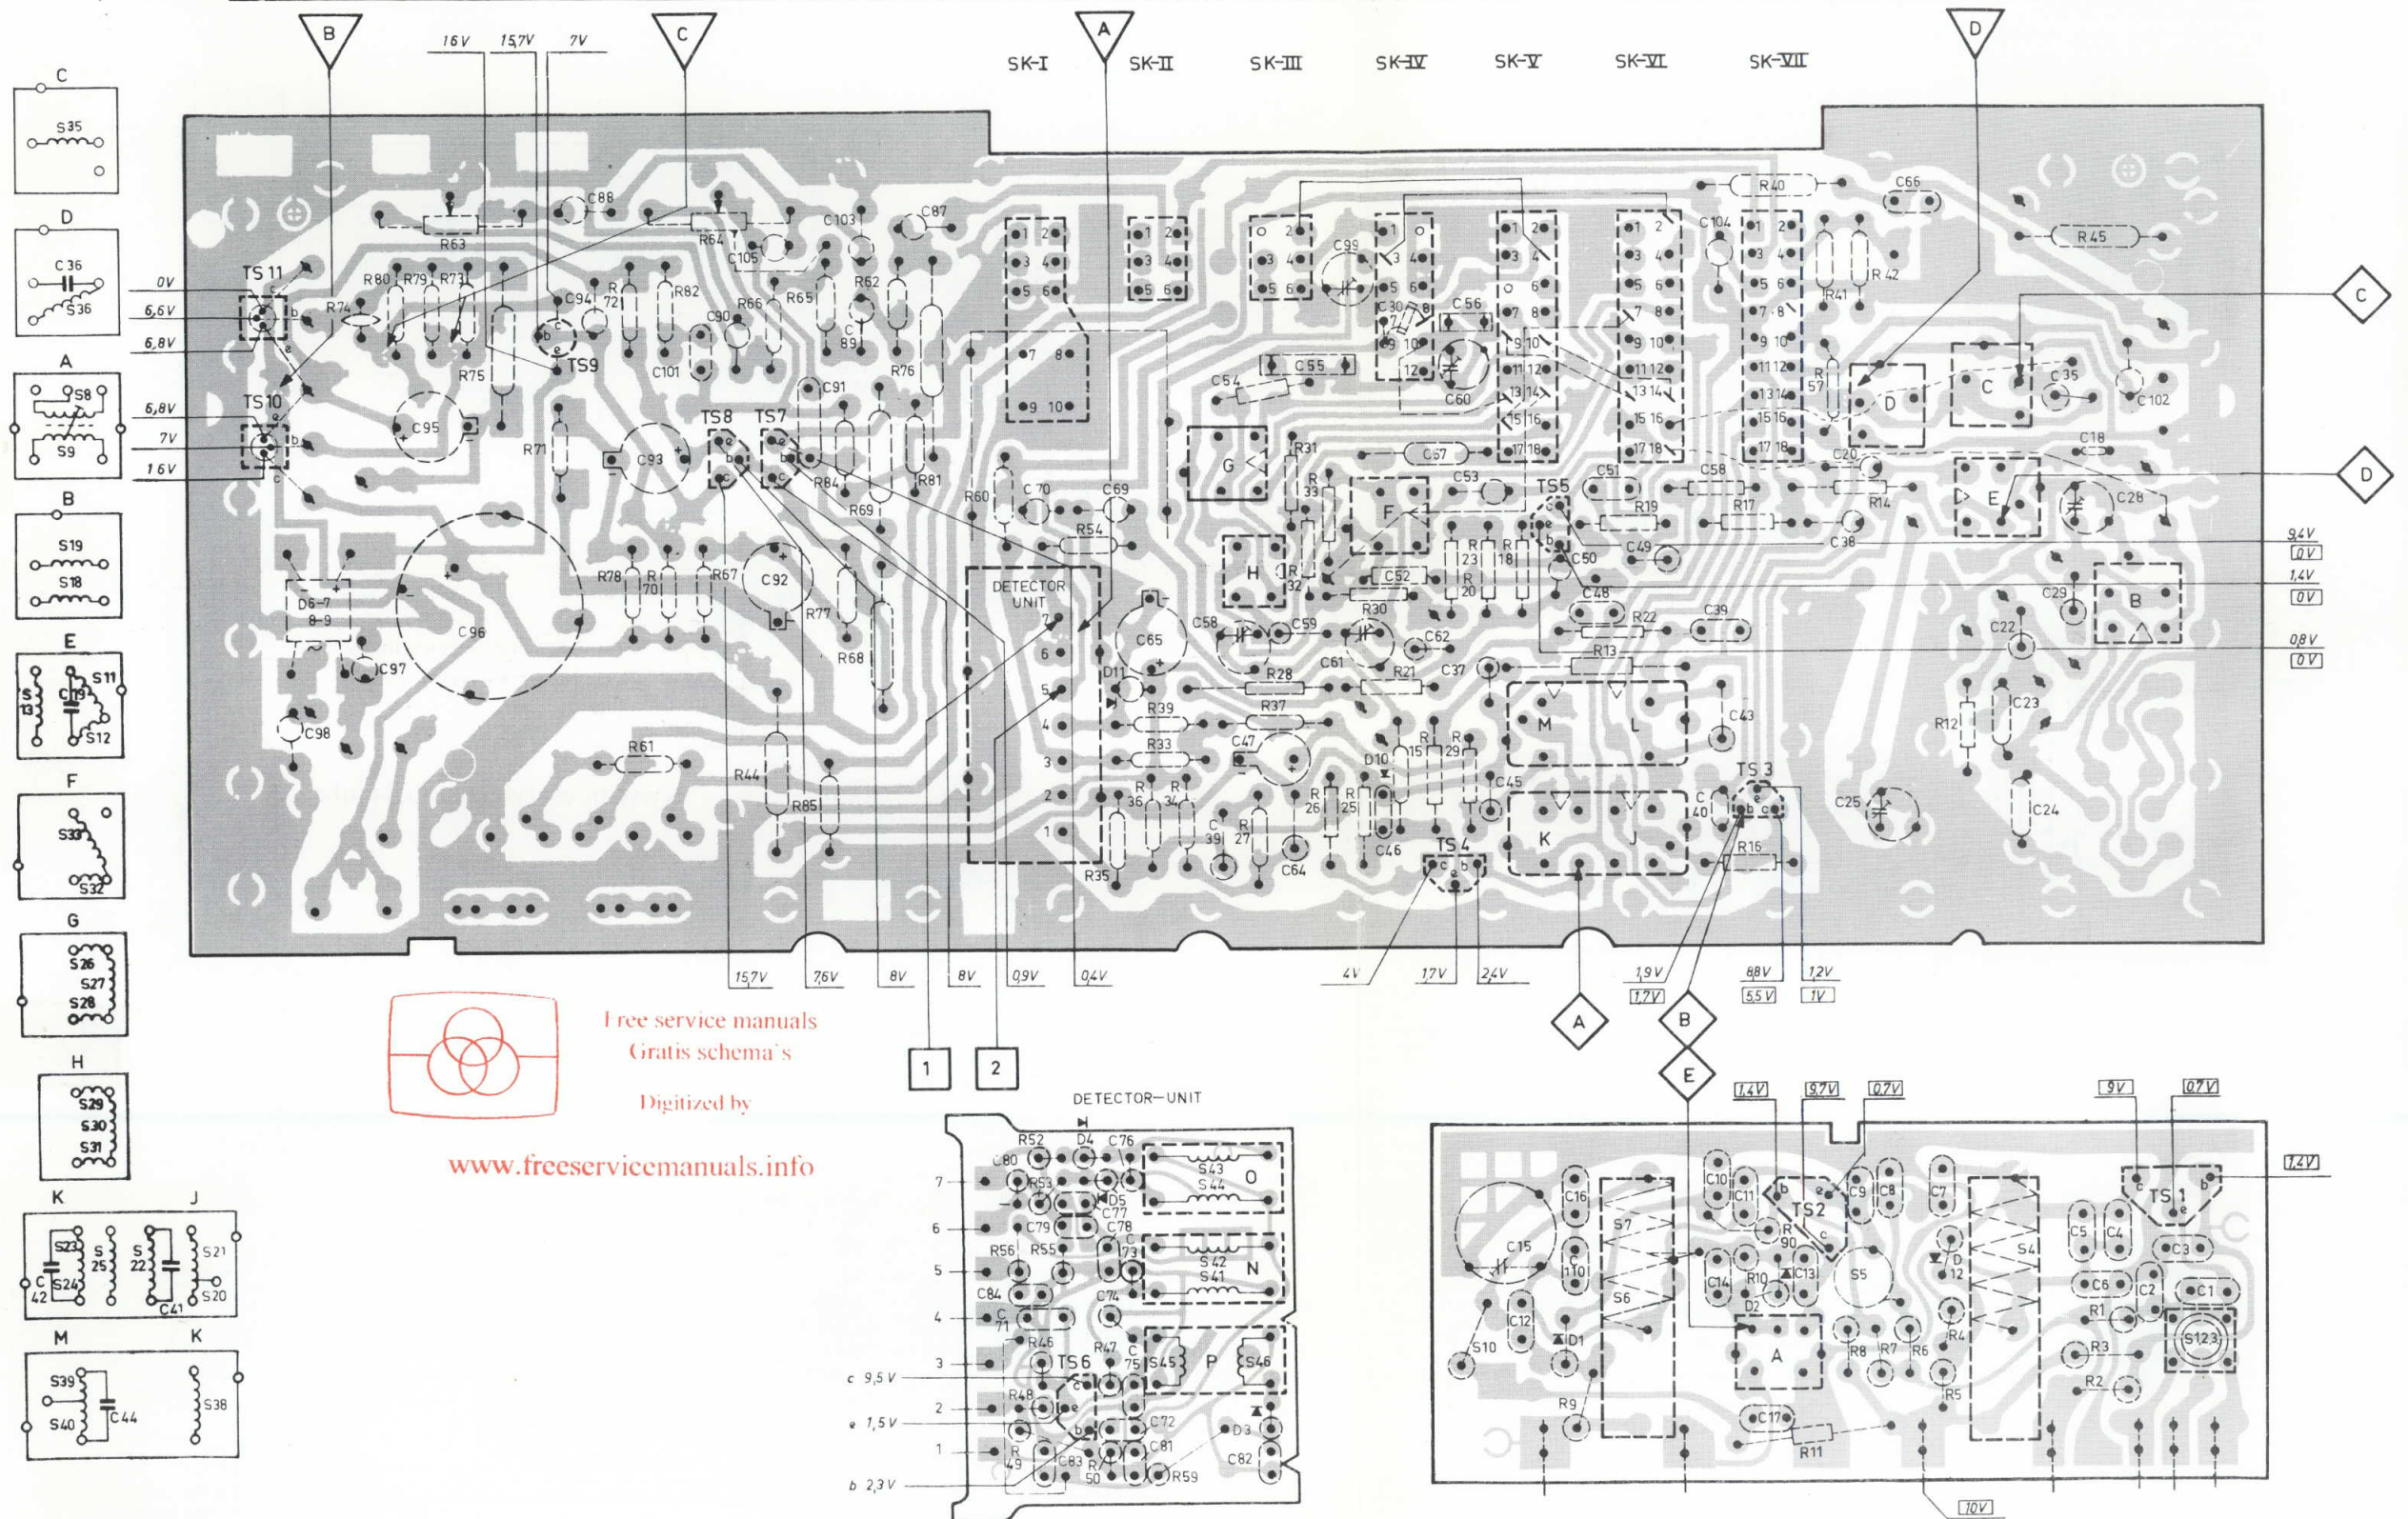

Free service manuals
(Gratis schema's)
Digitized by
www.freeservicemanuals.info

OFF UIT DESCONN. AUS DESCON.	PU PU TA PU	MW2 MG 2 PO 2 MW2 OM2	MW1 MG 1 PO 1 MW1 OM1	LW LG GO LW OL	KW KG OC KW OC	FM FM FM UKW FM
SK-I	SK-II	SK-III	SK-IV	SK-V	SK-VI	SK-VII
10 0 2	10 0 2	10 0 2	10 0 2	10 0 2	10 0 2	10 0 2
30 0 4	30 0 4	30 0 4	30 0 4	30 0 4	30 0 4	30 0 4
50 0 6	50 0 6	50 0 6	50 0 6	50 0 6	50 0 6	50 0 6
70 0 8	70 0 8	70 0 8	70 0 8	70 0 8	70 0 8	70 0 8
90 0 10	90 0 10	90 0 10	90 0 10	90 0 10	90 0 10	90 0 10
110 0 12	110 0 12	110 0 12	110 0 12	110 0 12	110 0 12	110 0 12
130 0 14	130 0 14	130 0 14	130 0 14	130 0 14	130 0 14	130 0 14
150 0 16	150 0 16	150 0 16	150 0 16	150 0 16	150 0 16	150 0 16
170 0 18	170 0 18	170 0 18	170 0 18	170 0 18	170 0 18	170 0 18

Global electronic heritage manuals