

Service Service Service



Service Manual



TABLE OF CONTENTS

	Page
Location of PC Boards	1-2
Versions Variation & Package	1-2
Specifications	1-3
Measurement Setup	1-4
Service Aids	1-5
ESD & Safety Instruction	1-6
Setting Procedure & Repair Instructions	2
Disassembly Instructions & Service positions	3
Block & Wiring Diagram	4
Key (Control / Standby / Vol) Board	5
Tuner Board	6
DVD loader	7
Main Board	8
Power Board	9
Exploded View	10

**CLASS 1
LASER PRODUCT**

© Copyright 2004 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by BB-ET0409 Service Audio Printed in The Netherlands Subject to modification.


 3139 785 30600

Version 1.0



PHILIPS

LOCATION OF PC BOARDS

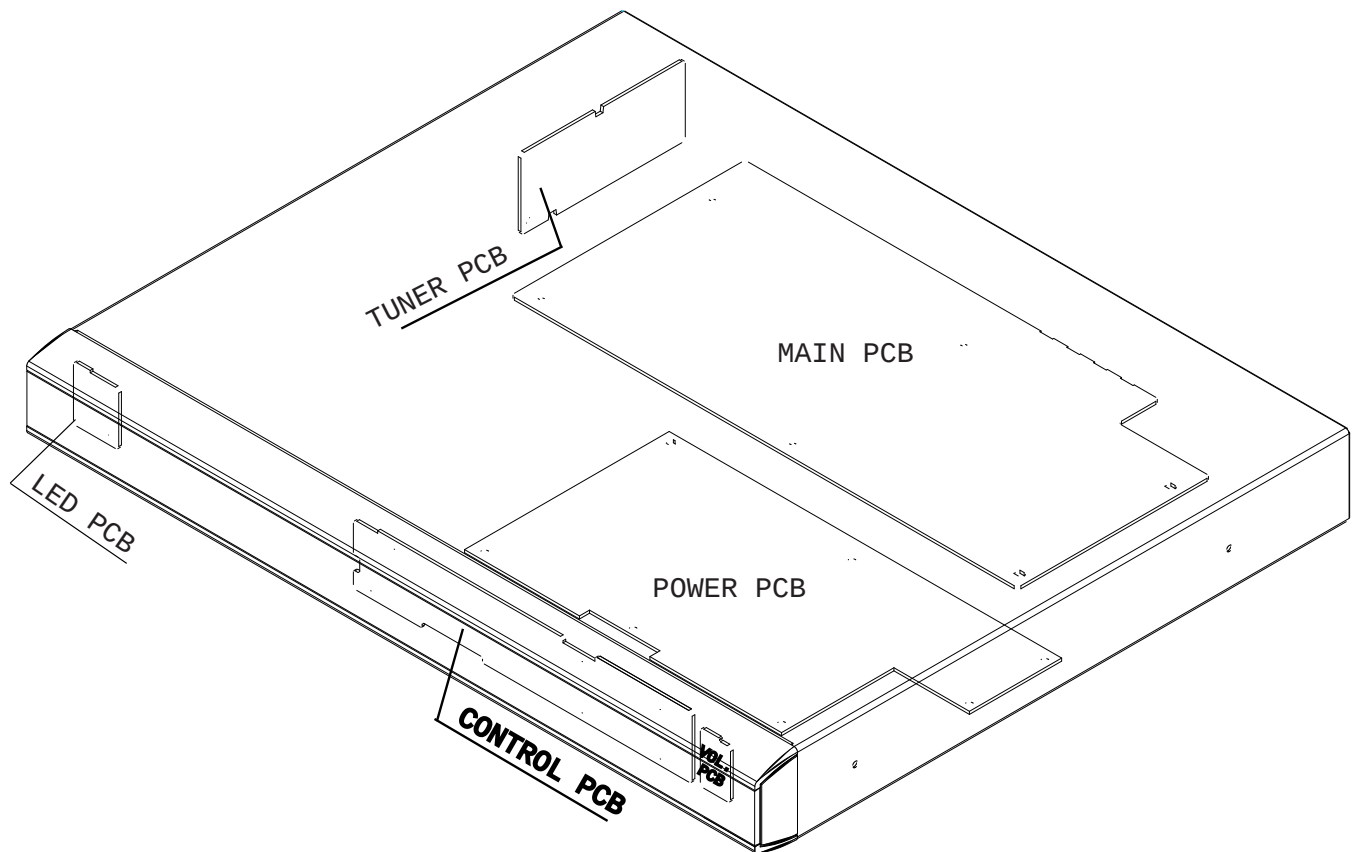

VERSION VARIATION:

Type /Versions:	MX6050
	/ 17
Features & Board in used:	
RDS	
Rotary Encoder (volume control)	x
Aux Input	x
Digital Output	x
Line Output	x
Progressive scan	x
Power supply (110V)	x

