

WHEN EXTERNAL ANTENNA IS USED, REMOVE THIS WIRE FROM ANTENNA CLIP AND INSERT ANTENNA WIRE.


12SA7GT

12SK7GT

12SQ7GT

50L6GT

RESISTORS				CONDENSERS			
R	OHMS	M	PART NO.	C	CAPACITY	VOLT	PART NO.
248	1M	V.C.	17-1783	1	TWO GANG		
9	1M	1/4	17-2080	2	VARIABLE		17-1784
241	175	1/4	17-14385	274A	20 MFD	150	
3	300K	1/4	17-2070	274B	10 MFD	150	17-1740
171	15M	1/4	17-14288	274C	20 MFD	25	
174	20K	1/4	17-14291	223	.002	400	17-1438
172	100	1/4	17-1438	229	.02	400	17-14327
222	10M	1/4	17-14317	230	.0005	400	17-14328
213	10M	1/4	17-14300	222	2	400	17-14317
				193	.05	200	17-14274
				248	.05	400	17-14300
				191	.01	400	17-14272
				22	.0022	400	17-14273
				275	.0005	400	17-14404

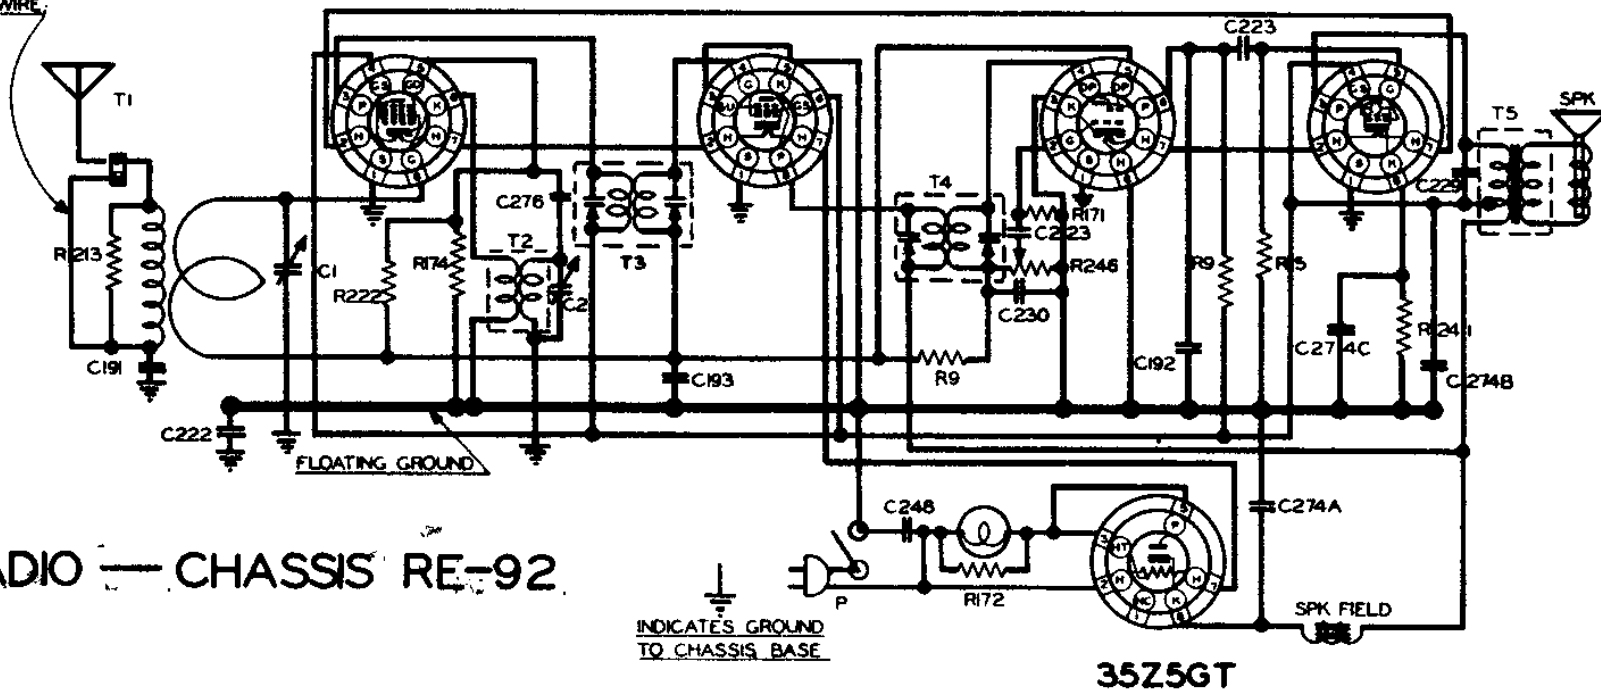

ARVIN HOME RADIO — CHASSIS RE-92