


CBS

CBS-COLUMBIA

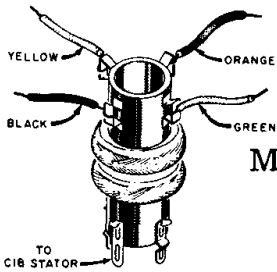

Chassis 616, Model C240,
Chassis 636, Models C230, C231, C232,
Chassis 656, Model C220.


Material on pages 15 and 16; separate diagrams shown for each chassis.

Alignment


Set volume control to maximum. Adjust output of signal generator no higher than

Oscillator Coil, all Chassis | necessary for satisfactory indication. Use an insulated alignment tool.


Step	Signal Generator		Receiver Tuning	Output Meter Connection	Adjust
	Freq.	Connect to			
1	455KC MOD.	Pin 1 of V2, 12BA6, thru .05 mf	Minimum capacity	Across voice coil	T2, top and bottom slugs, for maximum indication.
2	As above	Pin 7 of V1, 12BE6, thru .05 mf	As above	As above	T1, top and bottom slugs, for maximum indication.
3	1620KC MOD.	As above	As above	As above	C1B, oscillator trimmer, for maximum indication.
4	1400KC MOD.	Couple inductively to loop antenna	For maximum signal	As above	C1A, antenna trimmer, for maximum indication.

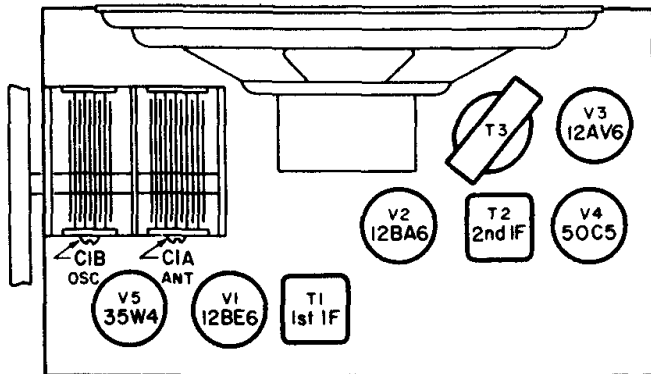

Tube and Trimmer Locations

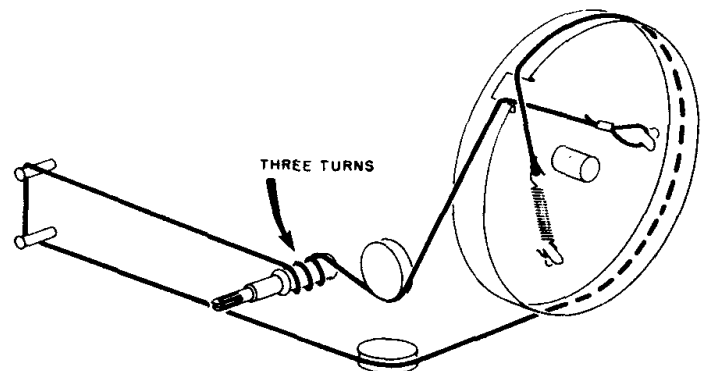

Dial Stringing.

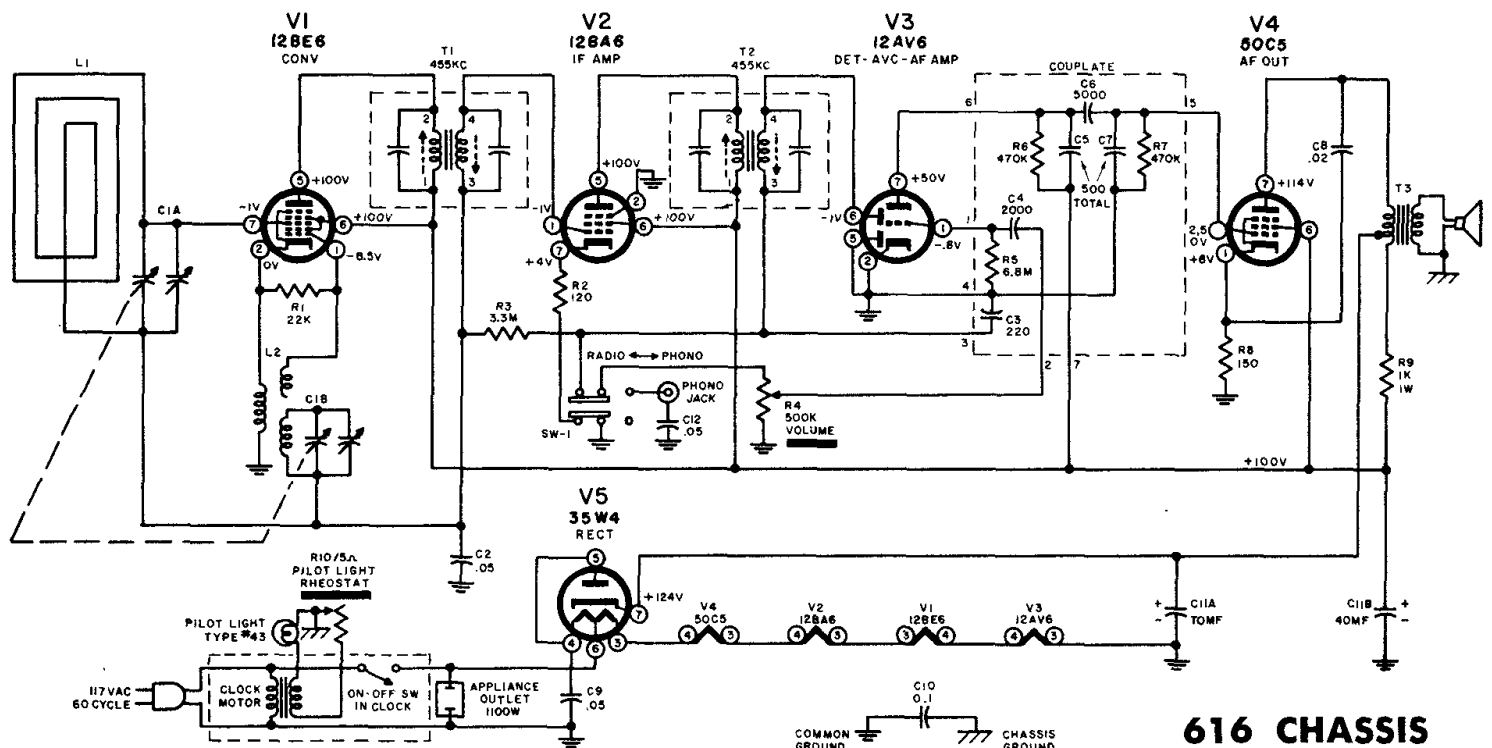

616 CHASSIS