

# Bendix

## MODELS 753M, 753W, & 753F


**BENDIX TELEVISION AND RADIO**

**DIVISION OF BENDIX AVIATION CORPORATION**

TUNING CONDENSER FULLY CLOSED



**DIAL BACK PLATE REFERENCE MARKS**

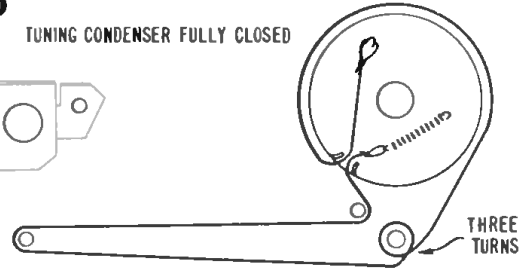

### ALIGNMENT PROCEDURE

Signal Generator Coupling	Signal Generator Frequency	Dial Setting	Connect	Adjust	Remarks
High side through .01 to pin 7 (Grid) of 12BE6 Low side to B-	455KC	Max. to right	Output Meter across voice coil	T3, T2	Adjust in order given for max. meter reading
A loop fashioned of several turns of wire radiating the signal into the receivers antenna	1640	To the correct dial marking See Fig. 4	Same	C1d	Adjust for max. meter reading
Same	1475	To correct dial mark-	Same	C1b	Adjust for max. meter reading

