


BELMONT RADIO CORP.

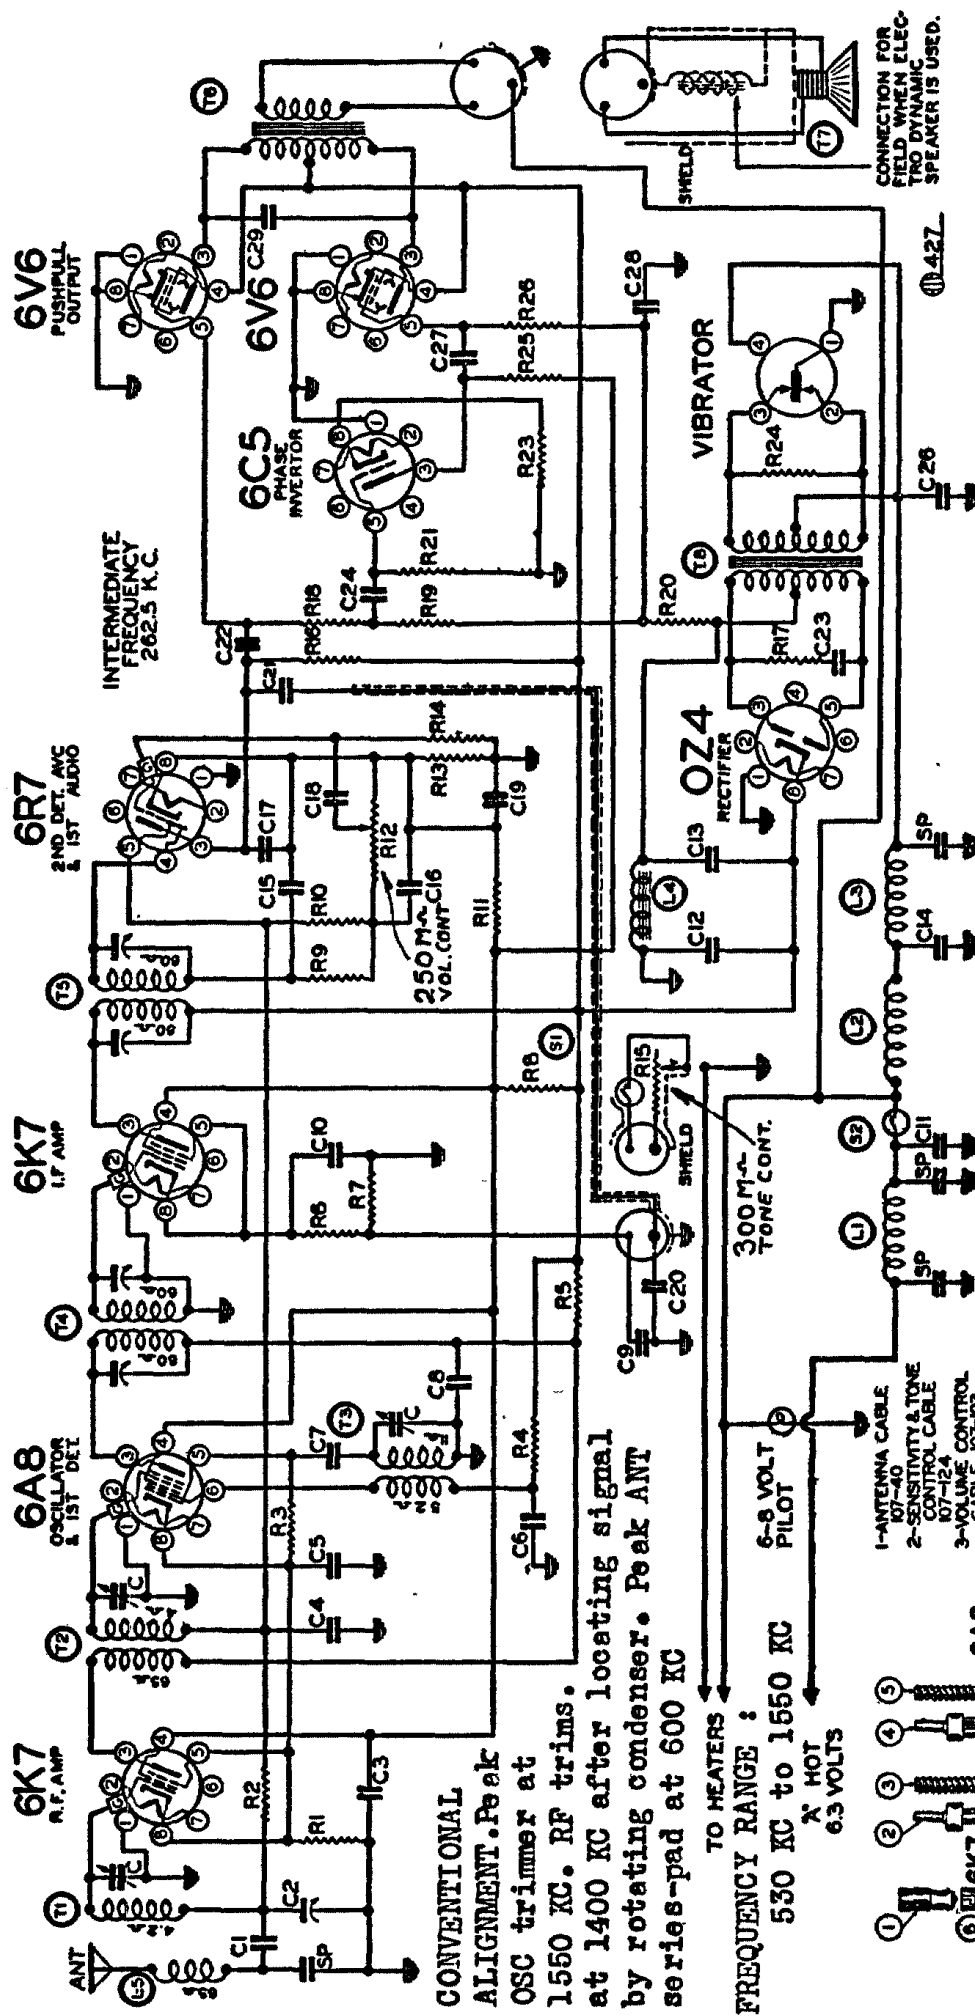

Series pad C3, C5, C18 and C19 in same unit
C4, C6, C8 and C10 in same unit
C22, C24, C27 and C28 in same unit

T1 111-73A Antenna Coil
T2 109-36 R. F. Coil
T3 110-59 Oscillator Coil
T4 108-101 Input L. F. Coil
T5 108-102B Output L. F. Coil
T6 105-49 Output Transformer
T7 114-94 8" Dynamic Speaker
T8 104-112 Power transformer
L1 105-26 RFA Choke
L2 105-24 A Choke
L3 105-19 B Choke
L4 105-48 Antenna Filter choke assembly
S1 Sensitivity switch in control head
S2 On-off Switch in control head

350 mmf. Nominal - Series pad
C2 124-36
C3 116-20B
C4 116-19B
C5 116-20B
C6 116-19B
C7 129-12
C8 116-19B
C9 129-2
C10 116-19B
C11 100-31
C12 119-43
C13 119-43
C14 100-31
C15 129-5
C16 129-5
C17 129-5
C18 116-20B
C19 116-20B
C20 100-13
C21 100-13
C22 116-23
C23 100-68
C24 116-23
C25 100-31
C26 100-31
C27 116-23
C28 116-23
C29 100-58

500 ohm - 1/3 w.
250M ohm - 1/3 w.
50M ohm - 1/3 w.
50M ohm - 1/2 w.
1500 ohm - 1/3 w.
1000 ohm - 1/3 w.
40M ohm - 1/3 w.
20M ohm - 1/2 w.
50M ohm - 1/3 w.
1 megohm - 1/3 w.
40M ohm - 1/3 w.
700 ohm - 1/3 w.
1 megohm - 1/3 w.
Tone control in control head
5M ohm - 1/3 w.
150M ohm - 1/3 w.
250M ohm - 1/3 w.
30M ohm - 1/3 w.
200 ohm - 1/3 w.
100M ohm - 1/3 w.
250M ohm - 1/3 w.

3 gang variable
CONDENSERS
C1 102-45A
C2 129-73

1-ANTENNA CABLE 107-40
2-SENSITIVITY & TONE CONTROL CABLE 107-103
3-VOLUME CONTROL CABLE 107-124
4-SPEAKER CABLE 107-133
5-TUNING CABLE 107-104
6-ANTENNA FILTER ASSEMBLY 111-74
7-ANTENNA COIL 111-73A
8-ANTENNA FILTER CHOKES 111-76
9-RT. COIL 109-36
10-PT. PASS BLOCK 109-101
11-PT. PASS BLOCK 109-101
12-PT. PASS BLOCK 109-101
13-VARIABLE CONDENSER 105-49
14-OUTPUT TRANSFORMER 114-94
15-PT. PASS BLOCK 109-101
16-PT. PASS BLOCK 109-101
17-POWER TRANSFORMER 104-112
18-OUTPUT TRANSFORMER 114-94
19-LYTIC CONDENSER 105-49
20-VIBRATOR 126-1
21-FILTER ASSEMBLY 105-50

1-ANTENNA CABLE 107-40
2-SENSITIVITY & TONE CONTROL CABLE 107-103
3-VOLUME CONTROL CABLE 107-124
4-SPEAKER CABLE 107-133
5-TUNING CABLE 107-104
6-ANTENNA FILTER ASSEMBLY 111-74
7-ANTENNA COIL 111-73A
8-ANTENNA FILTER CHOKES 111-76
9-RT. COIL 109-36
10-PT. PASS BLOCK 109-101
11-PT. PASS BLOCK 109-101
12-PT. PASS BLOCK 109-101
13-VARIABLE CONDENSER 105-49
14-OUTPUT TRANSFORMER 114-94
15-PT. PASS BLOCK 109-101
16-PT. PASS BLOCK 109-101
17-POWER TRANSFORMER 104-112
18-OUTPUT TRANSFORMER 114-94
19-LYTIC CONDENSER 105-49
20-VIBRATOR 126-1
21-FILTER ASSEMBLY 105-50

MODEL 881
(Serial No. 88000 and up)

MODEL 881
(Serial No. 88000 and up)

350 mmf. Nominal - Series pad
C2 124-36
C3 116-20B
C4 116-19B
C5 116-20B
C6 116-19B
C7 129-12
C8 116-19B
C9 129-2
C10 116-19B
C11 100-31
C12 119-43
C13 119-43
C14 100-31
C15 129-5
C16 129-5
C17 129-5
C18 116-20B
C19 116-20B
C20 100-13
C21 100-13
C22 116-23
C23 100-68
C24 116-23
C25 100-31
C26 100-31
C27 116-23
C28 116-23
C29 100-58

500 ohm - 1/3 w.
250M ohm - 1/3 w.
50M ohm - 1/3 w.
50M ohm - 1/2 w.
1500 ohm - 1/3 w.
1000 ohm - 1/3 w.
40M ohm - 1/3 w.
20M ohm - 1/2 w.
50M ohm - 1/3 w.
1 megohm - 1/3 w.
40M ohm - 1/3 w.
700 ohm - 1/3 w.
1 megohm - 1/3 w.
Tone control in control head
5M ohm - 1/3 w.
150M ohm - 1/3 w.
250M ohm - 1/3 w.
30M ohm - 1/3 w.
200 ohm - 1/3 w.
100M ohm - 1/3 w.
250M ohm - 1/3 w.

3 gang variable
CONDENSERS
C1 102-45A
C2 129-73

1-ANTENNA CABLE 107-40
2-SENSITIVITY & TONE CONTROL CABLE 107-103
3-VOLUME CONTROL CABLE 107-124
4-SPEAKER CABLE 107-133
5-TUNING CABLE 107-104
6-ANTENNA FILTER ASSEMBLY 111-74
7-ANTENNA COIL 111-73A
8-ANTENNA FILTER CHOKES 111-76
9-RT. COIL 109-36
10-PT. PASS BLOCK 109-101
11-PT. PASS BLOCK 109-101
12-PT. PASS BLOCK 109-101
13-VARIABLE CONDENSER 105-49
14-OUTPUT TRANSFORMER 114-94
15-PT. PASS BLOCK 109-101
16-PT. PASS BLOCK 109-101
17-POWER TRANSFORMER 104-112
18-OUTPUT TRANSFORMER 114-94
19-LYTIC CONDENSER 105-49
20-VIBRATOR 126-1
21-FILTER ASSEMBLY 105-50

1-ANTENNA CABLE 107-40
2-SENSITIVITY & TONE CONTROL CABLE 107-103
3-VOLUME CONTROL CABLE 107-124
4-SPEAKER CABLE 107-133
5-TUNING CABLE 107-104
6-ANTENNA FILTER ASSEMBLY 111-74
7-ANTENNA COIL 111-73A
8-ANTENNA FILTER CHOKES 111-76
9-RT. COIL 109-36
10-PT. PASS BLOCK 109-101
11-PT. PASS BLOCK 109-101
12-PT. PASS BLOCK 109-101
13-VARIABLE CONDENSER 105-49
14-OUTPUT TRANSFORMER 114-94
15-PT. PASS BLOCK 109-101
16-PT. PASS BLOCK 109-101
17-POWER TRANSFORMER 104-112
18-OUTPUT TRANSFORMER 114-94
19-LYTIC CONDENSER 105-49
20-VIBRATOR 126-1
21-FILTER ASSEMBLY 105-50