


167—Series 2—Wiring Diagram

MODEL 167 Series 2
Schematic, Voltage

CROSLLEY RADIO CORP.

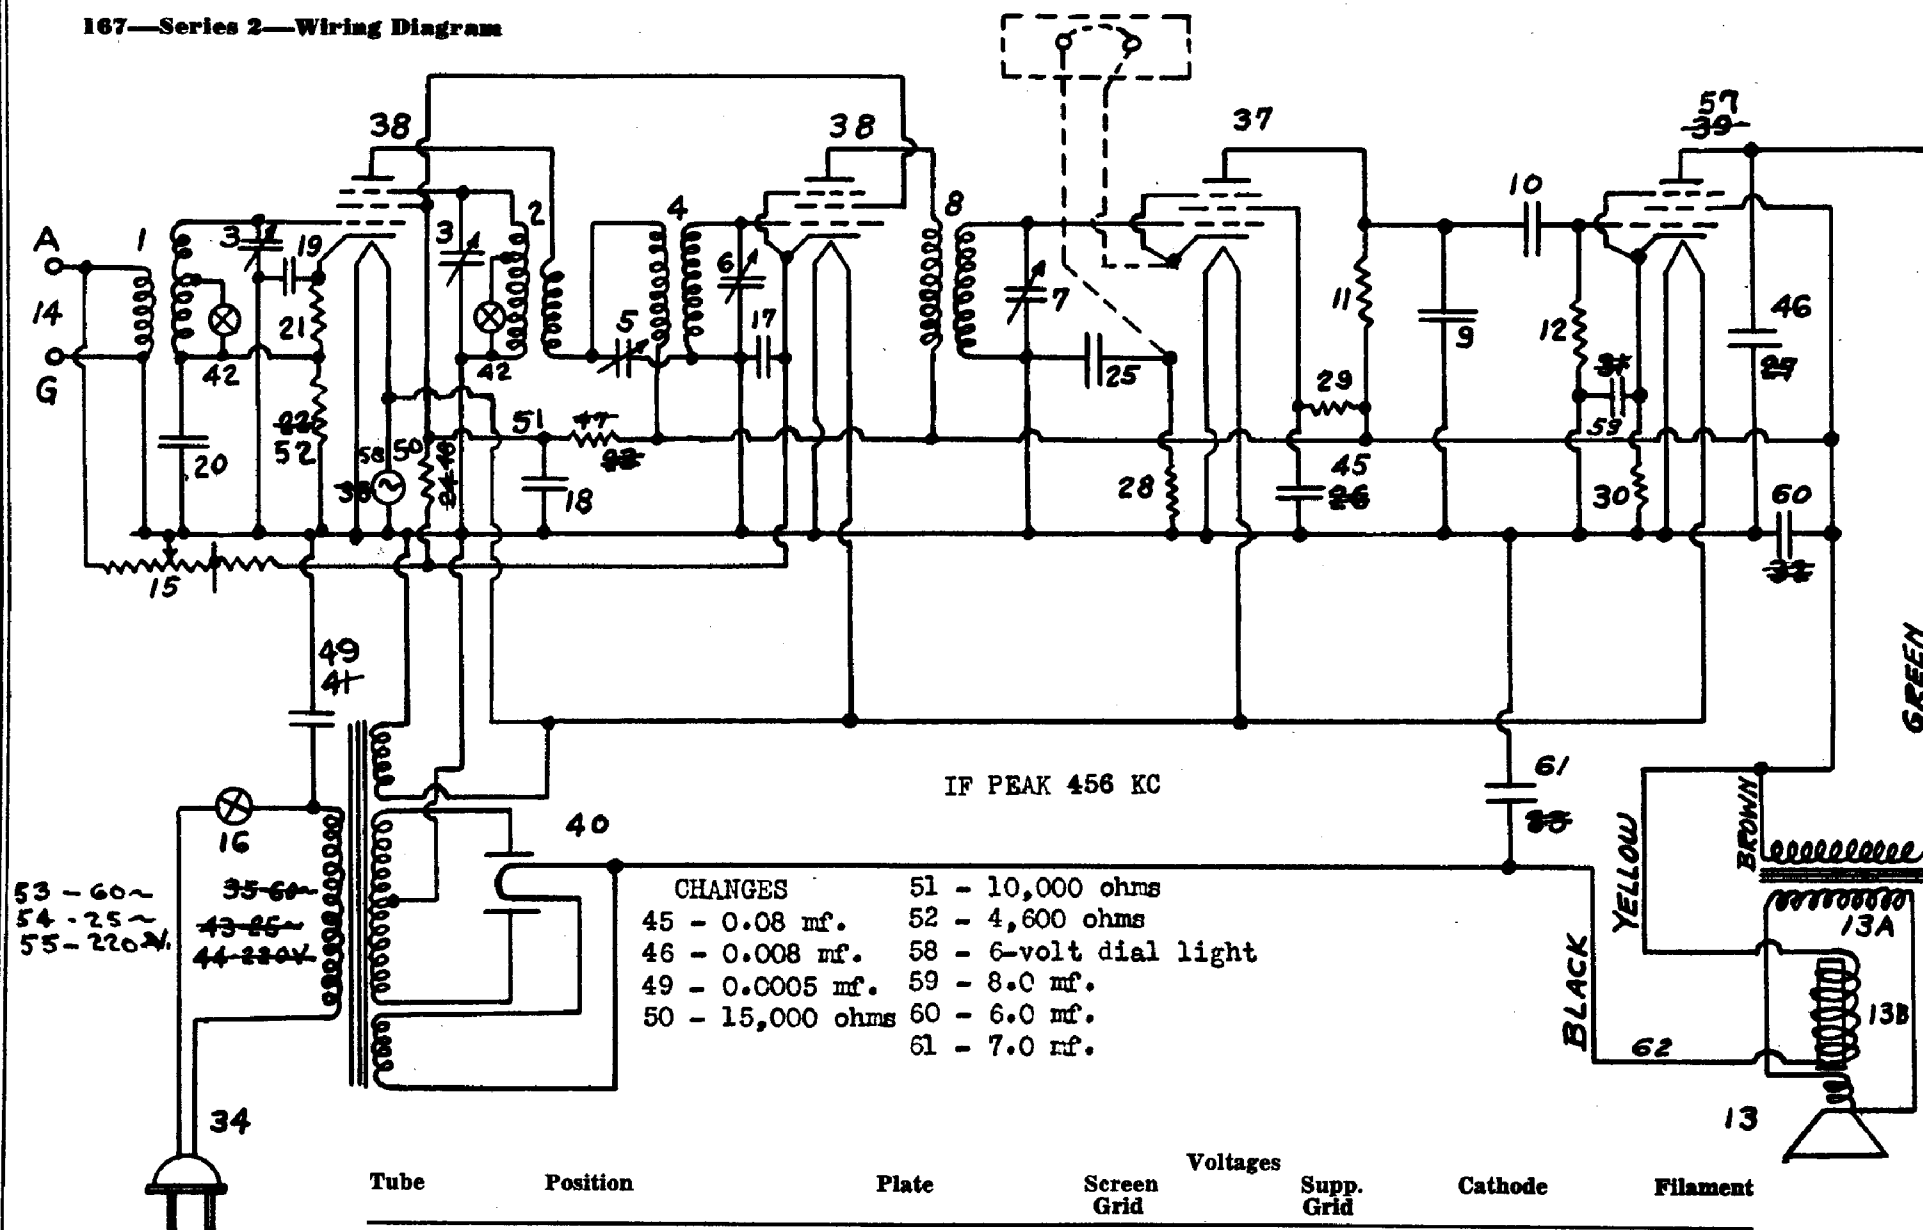

Tube	Position	Plate	Screen Grid	Voltages	Supp. Grid	Cathode	Filament
58	Oscillator modulator	267	150		0	35	2.4
58	I. F. Amplifier	267	150		3.5	3.5	2.4
58	Detector	150	48		6.5	6.5	2.4
2A5	Output	250	267			21.5	2.4
80	Rectifier	340					4.7

Voltage limits are plus or minus ten percent of the values given.

MODEL 167
Schematic
Parts List



* Figures in 2nd last column refer to parts shown in diagram.

SPEAKER PARTS

	Magnavox 335-SM Spec. 715	Magnavox 335-SM Spec. 1602	Jensen 335-SJ Spec. 3452	Rola 335-SR Spec. F-5-A	Crosley 335-3C			
1	27452	30675	30658	30655	G2-29529	Cone Assem.	13	2.50
1	27658	30676	30659	30580	W-29764	Field Coil	13B	1.10
1	27660	30677	30660	30656	G2-29535	Transformer	13A	1.25