



CROSLEY RADIO CORP. MODEL 438

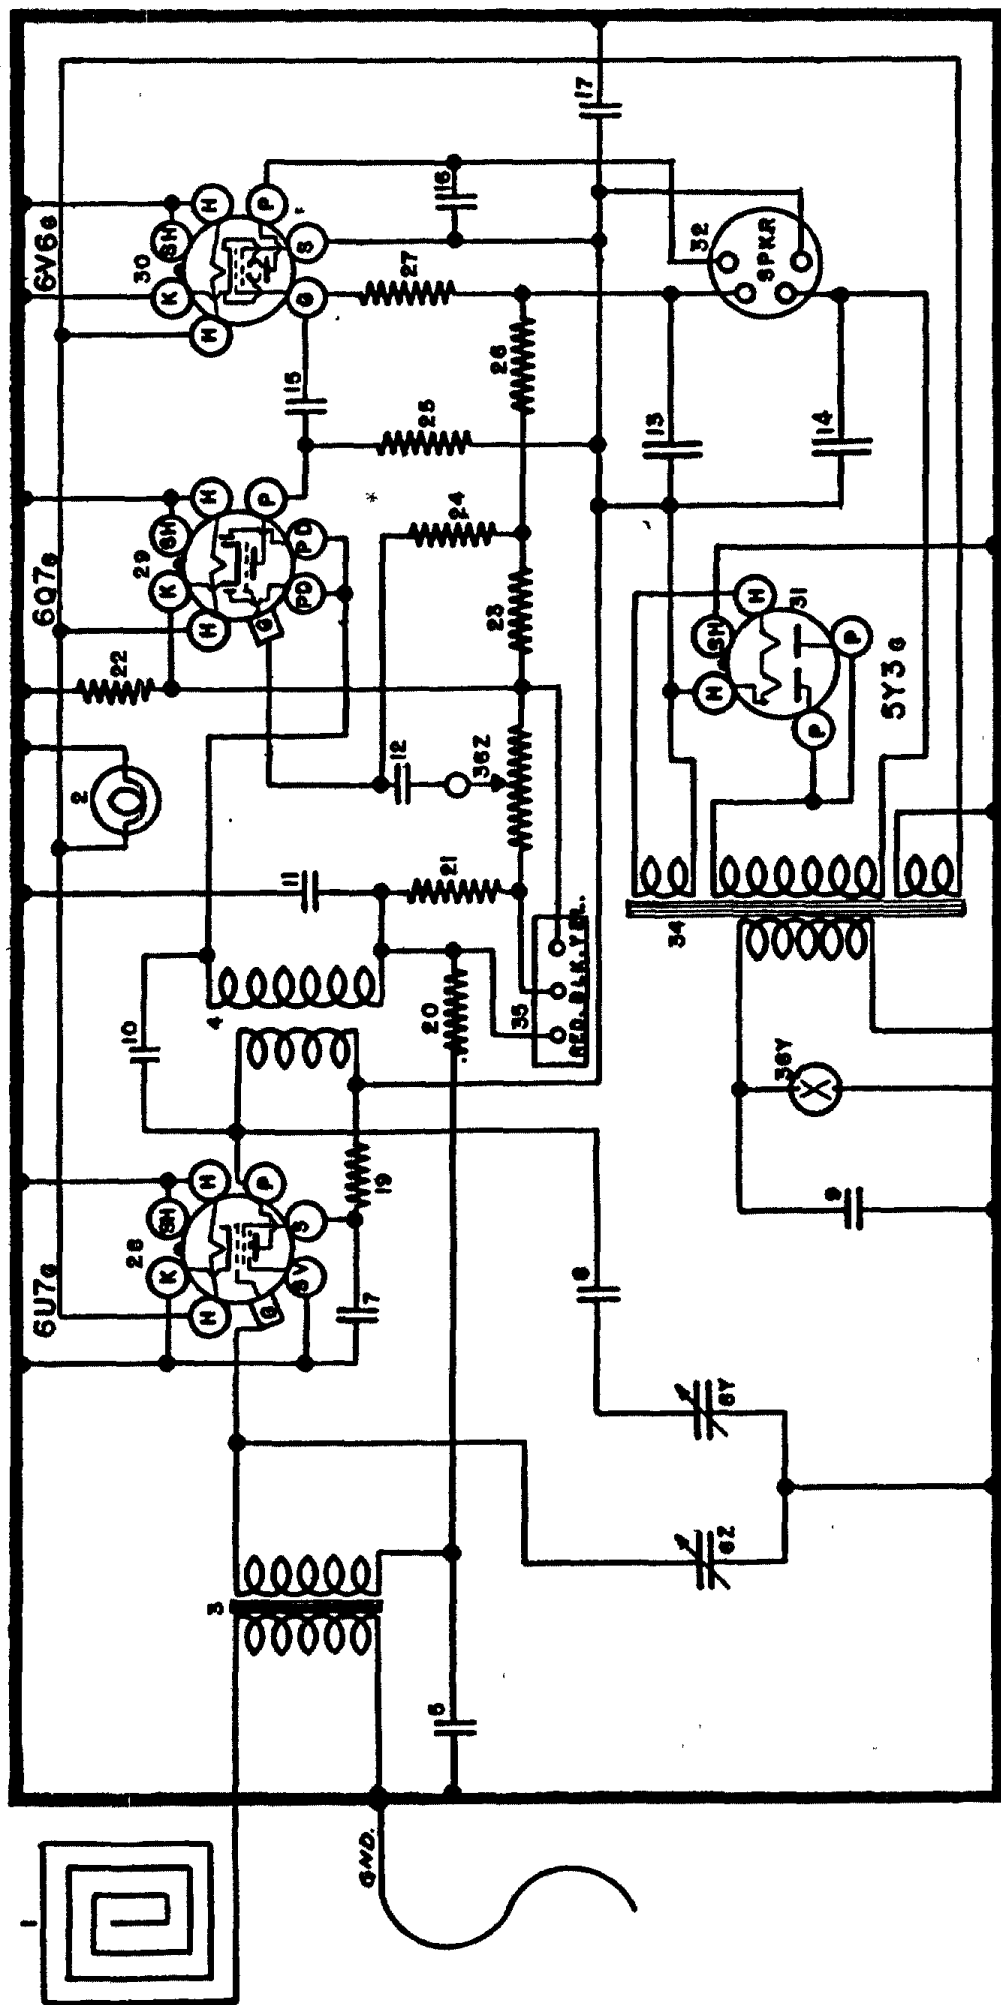

- 1 W-46237-A ANTENNA ROLL
- 2 W-37922 DIAL LIGHT 6-8V. RNT.
- 3 6177-32000 COIL R.F.
- 4 6177-32001 COIL R.F.
- 5 W-45780-B COND. 0.2MF 160V PAPER
- 6Z 658-33001 VAR. COND. ANT. SECT.
- 6Y 658-33001 VAR. COND. R.F. SECT.
- 7 W-45780-B COND. 0.2MF 160V PAPER
- 8 W-45780-B COND. 0.2MF 160V PAPER
- 9 W-30805 COND. 0.1MF 400V PAPER
- 10 66-50640 COND. CAP. COUPLING.
- 11 62-34002 COND. 100-MF MICR.
- 12 W-45780-B COND. 0.2MF 160V PAPER
- 13 W-46128 COND. 15-MF 150V ELEC.
- 14 W-46128 COND. 15-MF 150V ELEC.
- 15 W-45780-B COND. 0.2MF 160V PAPER
- 16 W-28621 COND. 0.2MF 200V PAPER
- 17 W-22688 COND. 1-MF 400V PAPER

- 18 B-45769 CABLE & PLUG A.C.
- 19 21453 RES. 40000-Ω 1/2W CARB
- 20 26577 RES. 3MEG-Ω 1/2W CARB
- 21 21237-A RES. 60,000-Ω 1/2W CARB
- 22 W-24537 RES. 60Ω 1/2W FLEX
- 23 W-37631 RES. 32Ω 1/2W FLEX
- 24 26577 RES. 3MEG-Ω 1/2W CARB
- 25 34020 RES. 250,000-Ω 1/2W CARB
- 26 W-41759 RES. 140Ω 1/2W FLEX

- 27 21455 RES. 300,000-Ω 1/2W CARB
- 28 6178-36400 SOCKET NO MARKING
- 29 6178-36400 SOCKET NO MARKING
- 30 6178-36400 SOCKET NO MARKING
- 31 6178-36400 SOCKET NO MARKING
- 32 6103-28807 SOCKET, SPEAKER
- 33 461A1 SPEAKER 380BP12
- 34 461/33 TRANSFORMER, PWR.
- 35 641-26719 TERM. BOARD, PHONO
- 36Z 41624 VOLUME CONTROL 1M66
- 36Y SWITCH A.C.

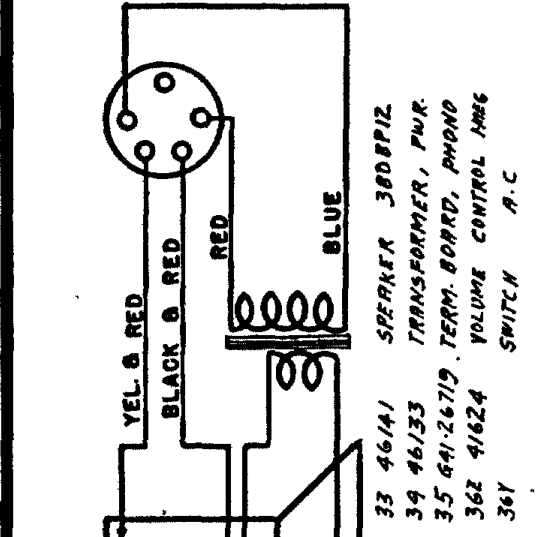

MODEL -- 438