


## RADIO MODEL T-230A

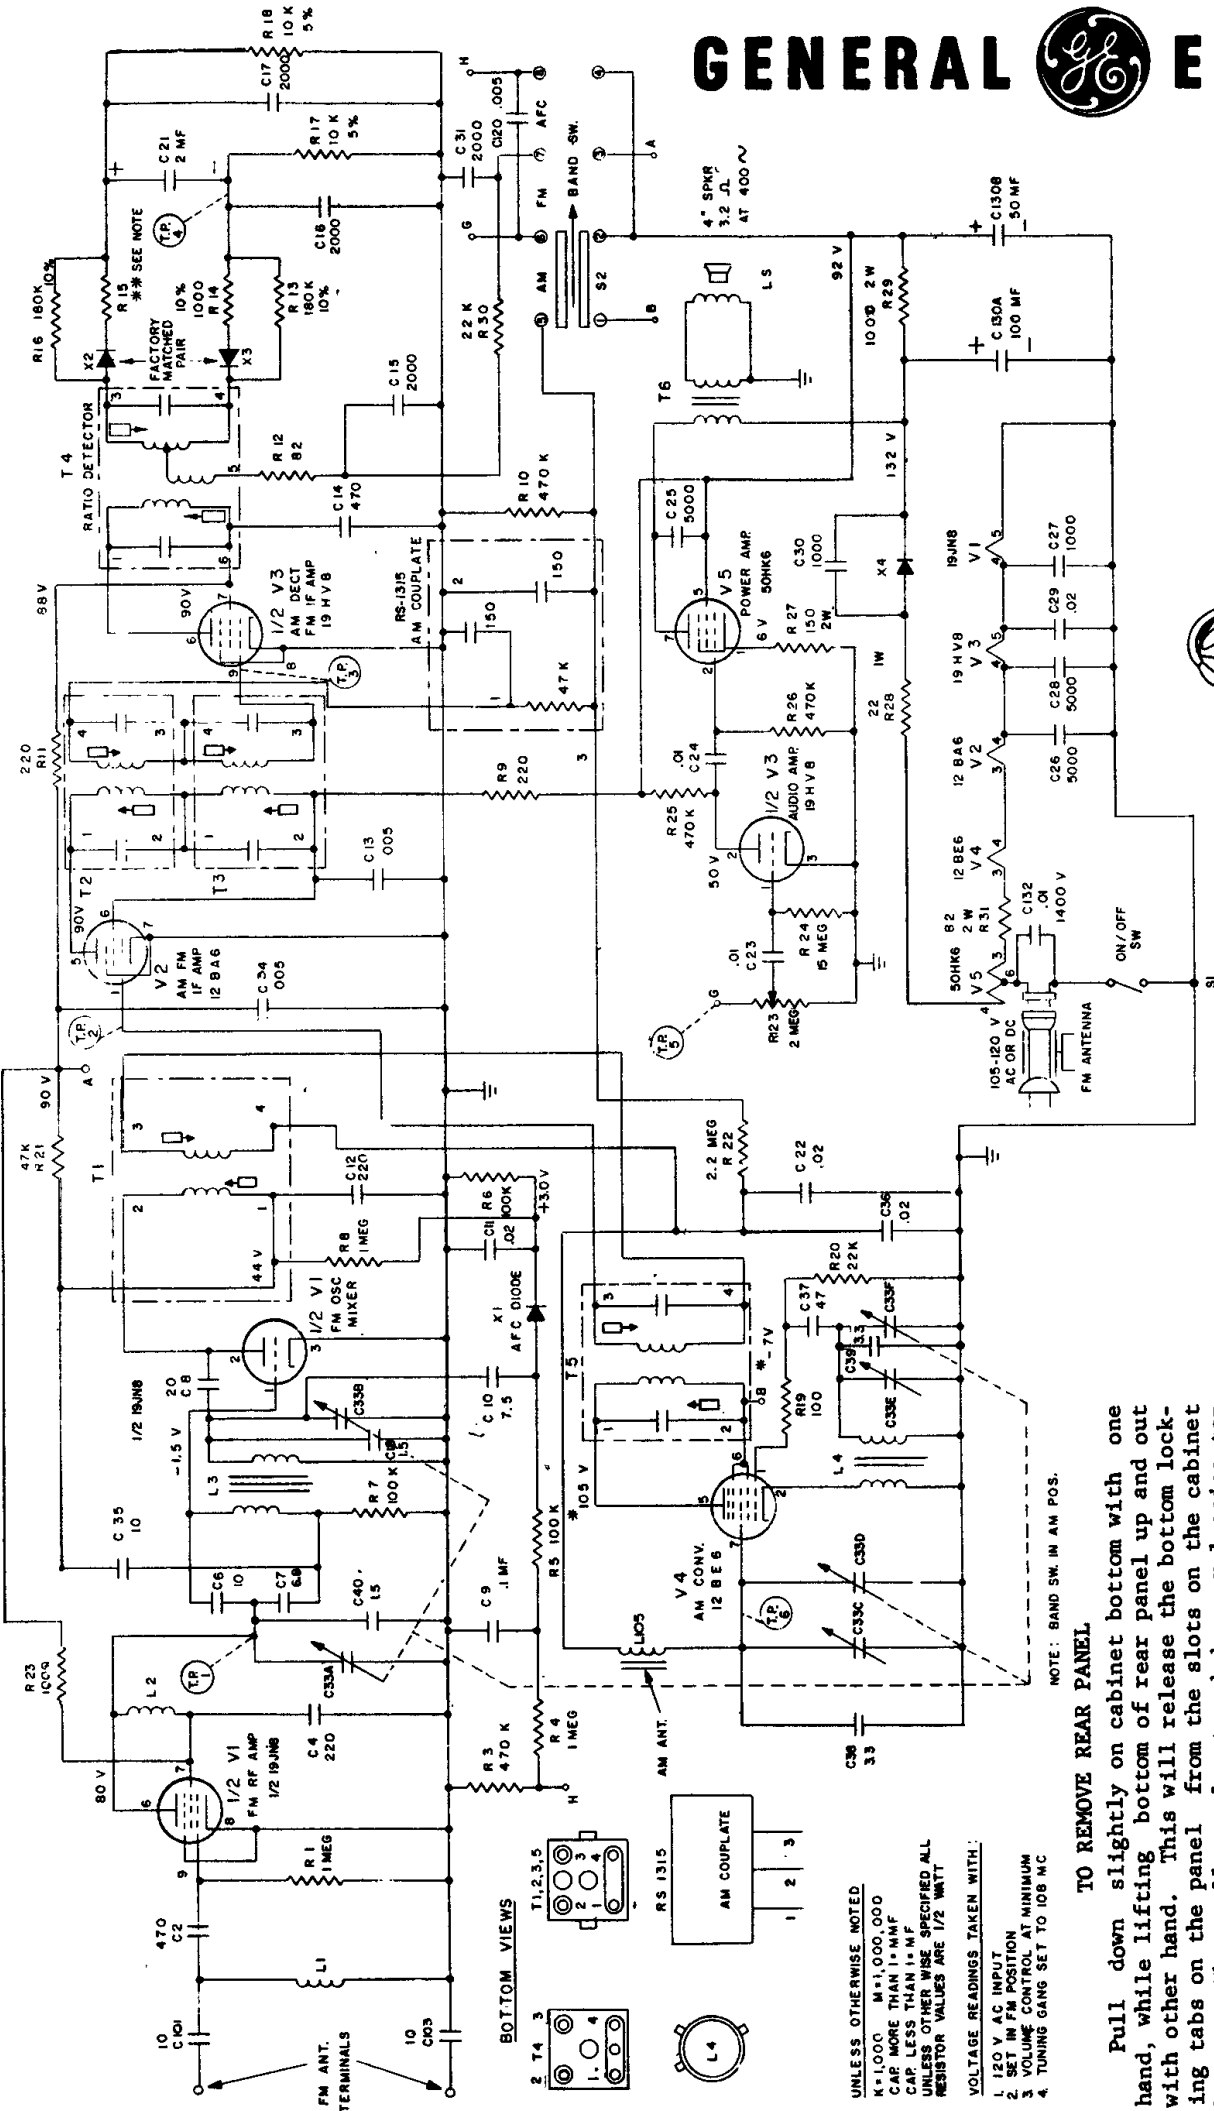

\* SET IN AM POSITION

NOTE

\* IF DIODES V2 OR V3 NEED REPLACEMENT REPLACE BOTH DIODES WITH A FACTORY MATCHED PAIR OF 1N34 DIODES. THEN CHANGE R15 TO 680 OHMS TO ACHIEVE MAXIMUM PERFORMANCE. AS RECEIVED, R15 MAY BE ANY VALUE FROM 180 TO 850 OHMS WHICH WAS SELECTED WITH THE DIODES PAIR CURRENTLY IN THE RECEIVER.

I.F. AM 455 KC  
FM 10.7 MC

NOTE: BAND SW IN AM POS.

### TO REMOVE REAR PANEL

Pull down slightly on cabinet bottom with one hand, while lifting bottom of rear panel up and out with other hand. This will release the bottom locking tabs on the panel from the slots on the cabinet bottom. Then pull panel out and down, releasing top locking tabs from top slots.

### TO REMOVE CHASSIS FROM CABINET

1. Remove rear panel as detailed above.
2. Pull out volume and tuning control knobs.
3. Remove nut securing volume control to cabinet.
4. Remove four screws on cabinet bottom which fasten the chassis down and remove screw, holding front bracket.
5. Unsolder speaker leads.
6. Slide chassis out to rear.

STRINGING DIAGRAM