


PHILCO RADIO & TELEV. CORP.

FORD - PHILCO MODEL — F-1540 SINGLE UNIT RECEIVER

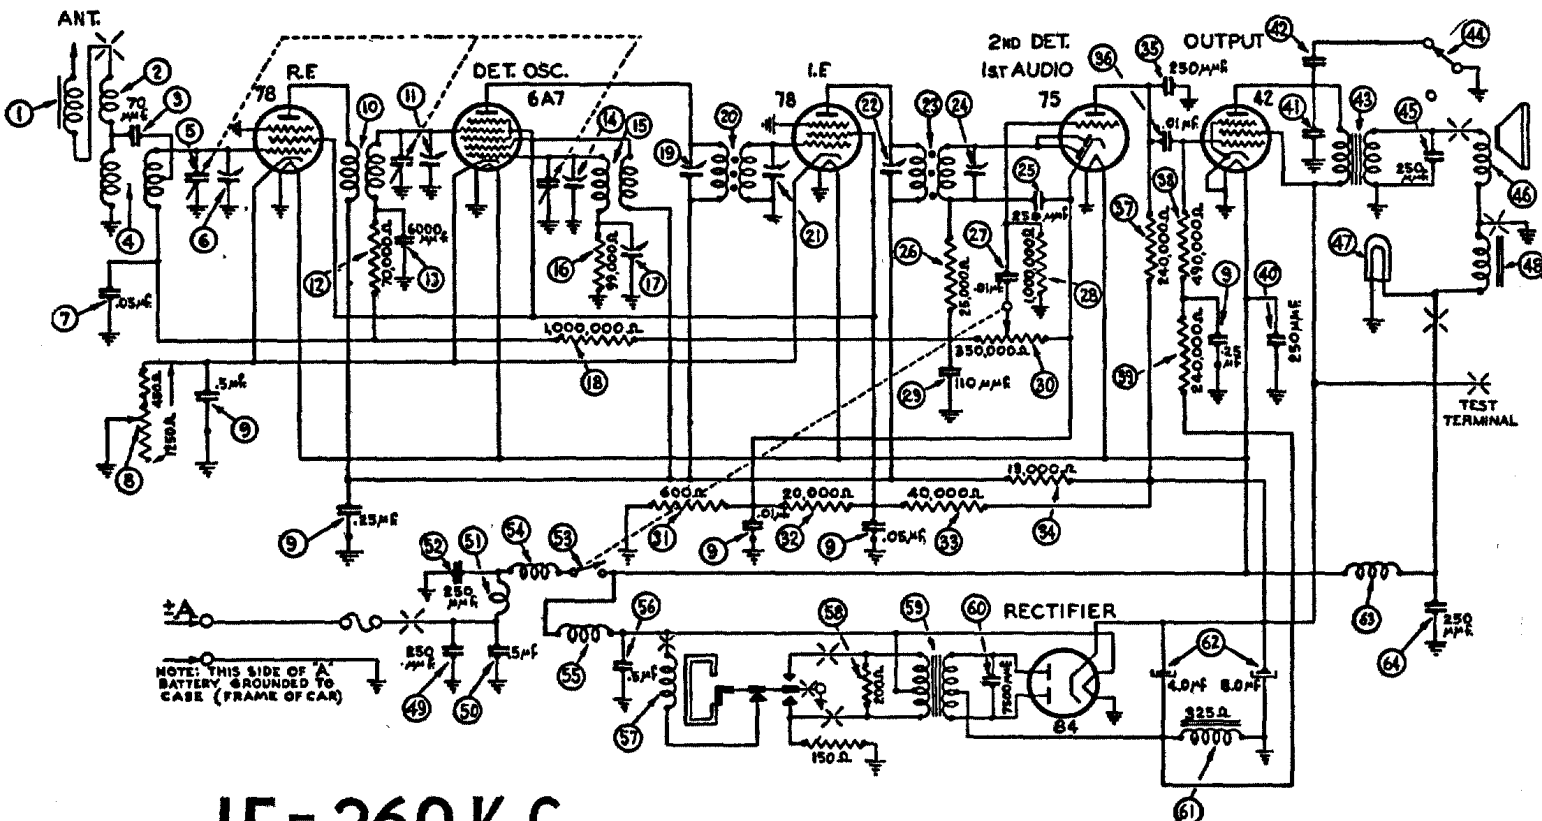

FOR ALIGNMENT
SEE INDEX

DECEMBER 15, 1937

MODEL F-1540 PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Lead	41-3386	27	Resistor (240,000 ohms)	33-424344
2	Antenna Choke	32-1372	28	Resistor (490,000 ohms)	33-449344
3	Condenser (.01 mfd.)	30-1105	29	Resistor (240,000 ohms)	33-424344
4	Antenna Transformer	32-2912	30	Condenser (250 mmfd.)	30-1032
5	Tuning Condenser	31-2181	31	Condenser (.02 mfd.)	30-4495
6	First Padder (on Tun. Cond.)	30-4444	32	Condenser (.02 mfd.)	30-4495
7	Condenser (.01 mfd.)	33-5239	33	Output Transformer	32-7946
8	Sensitivity Control	33-5239	34	Tone Control Switch	42-1406
9	Condenser (.01-.05-.25-.5 mfd.)	30-4561	35	Condenser (250 mmfd.)	30-1032
10	R. F. Transformer	32-2830	36	Cone & Voice Coil	45-2608
11	Second Padder (on Tun. Cond.)	33-370344	37	Pilot Lamp	34-2039
12	Resistor (70,000 ohms)	33-370344	38	Field Coil Assembly	32-9263
13	Condenser (6,000 mmfd.)	30-4467	39	Condenser (250 mmfd.)	30-1032
14	Third Padder (on Tun. Cond.)	32-2828	40	Condenser (.5 mfd.)	30-4474
15	Oscillator Transformer	33-393344	41	"A" Choke	32-1374
16	Resistor (99,000 ohms)	31-6230	42	Condenser (250 mmfd.)	30-1032
17	Low Frequency Padder	33-510344	43	On-Off Switch	33-5260
18	Resistor (1,000,000 ohms)	33-510344	44	Filament Choke	32-1644
19	Padder (Pri. 1st I. F. Trans.)	32-2286	45	Vibrator Choke	32-2911
20	Padder (Sec. 1st I. F. Trans.)	32-2908	46	Condenser (.5 mfd.)	30-4474
21	Padder (Pri. 2nd I. F. Trans.)	30-1032	47	Vibrator	41-3170-3
22	Second I. F. Transformer	33-325344	48	Resistor (200 ohms)	33-120344
23	Condenser (250 mmfd.)	30-4479	49	Power Transformer	32-7944
24	Resistor (1,000,000 ohms)	33-510344	50	Condenser (7,500 mmfd.)	30-4420
25	Condenser (110 mmfd.)	30-1031	51	"B" Filter Choke	32-7943
26	Volume Control (350,000 ohms)	33-5260	52	Filter Condenser (4-8 mfd.)	30-2295
27	Resistor (800 ohms)	33-160331	53	Choke	32-1561
28	Resistor (20,000 ohms)	33-320344	54	Condenser (250 mmfd.)	30-1032
29	Resistor (40,000 ohms)	33-340444	55	Four Prong Socket	27-6044
30	Resistor (13,000 ohms)	33-313344	56	Five Prong Socket	27-6035
31	Condenser (250 mmfd.)	30-1032	57	Six Prong Socket	27-6036
32	Condenser (.01 mfd.)	30-4501	58	Seven Prong Socket	27-6037
			59	Speaker Socket	27-6038
			60	Receiver Housing	38-9384
			61	Tuning & Volume Knob	27-4897
			62	Dial Assembly	42-5826
			63	Tuning Shaft	28-6795
			64	Volume Shaft	28-8837

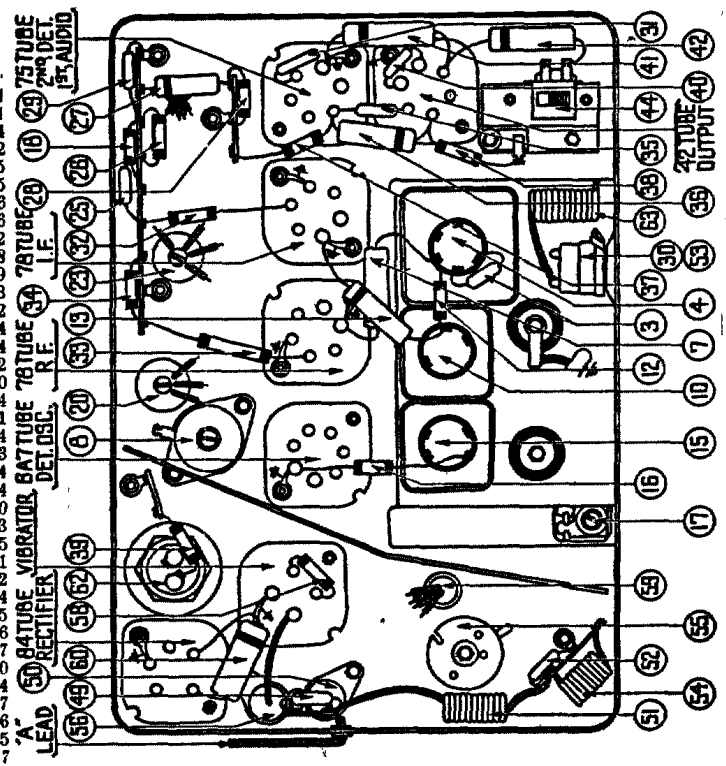


FIGURE 2