


Gamble-Skogmo, Inc.

CORONADO MODEL RA 48-8182A

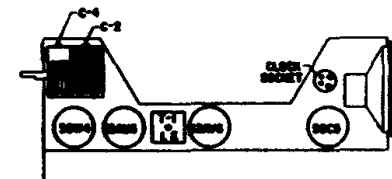

ALIGNMENT PROCEDURE CHART

STEP	CONNECT HIGH SIDE OF SIGNAL GENERATOR TO -	SET SIGNAL GENERATOR TO -	TURN RECEIVER DIAL TO -	ADJUST THE FOLLOWING FOR MAXIMUM OUTPUT. (KEEP SIGNAL FROM SIGNAL GENERATOR AS LOW AS POSSIBLE.)
1	ANTENNA SECTION TUNING CONDENSER IN SERIES WITH .1MFD COND.	455 KC.	FULL CLOCKWISE POSITION (CONDENSER PLATES FULLY OPEN)	BOTTOM & TOP OF T-1 IN SAME ORDER (I F TRANSFORMER)
2		1650 KC.		C4 (OSCILLATOR TRIMMER)
3	USE RADIATED SIGNAL	1500 KC.	MAXIMUM SIGNAL APPROX 1500 KC.	C2 (ANTENNA TRIMMER)
4			REPEAT STEPS 2 AND 3	

