

MODEL 97-56-S CHASSIS RECEIVER MODELS 97-561 to 97-569

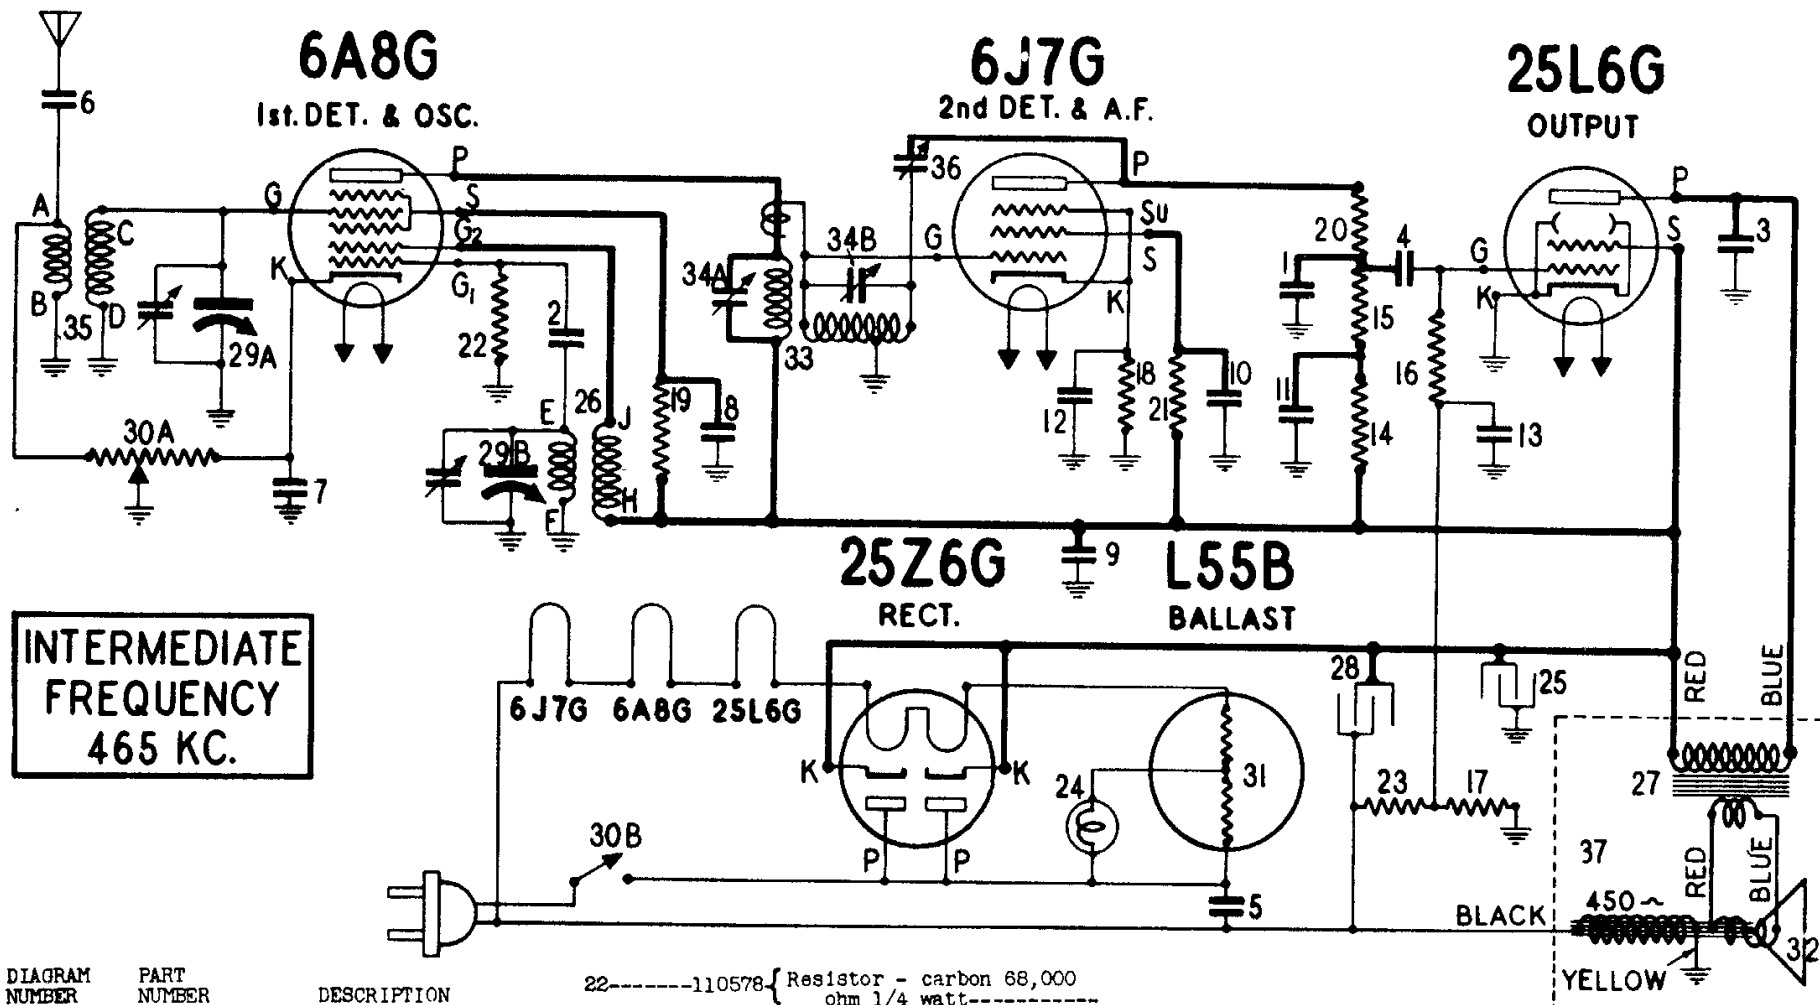


DIAGRAM NUMBER	PART NUMBER	DESCRIPTION
1-----	83539	Condenser - mica 260 mmfd.
2-----	83783	Condenser - mica 110 mmf.-
3-4-5-----	88028	Condenser - paper .02 mfd. 400 volt
6-----	88029	Condenser - paper .004 mfd. 400 volt
7-8-9-----	89421	Condenser - paper .1 mfd. 200 volt
10-11-----	89532	Condenser - paper .25 mfd. 200 volt
14-----	110553	Resistor - carbon 220,000 ohm 1/4 watt
15-16-----	110559	Resistor - carbon 470,000 ohm 1/4 watt
17-----	110564	Resistor - carbon 100,000 ohm 1/4 watt
18-----	110565	Resistor - carbon 22,000 ohm 1/4 watt
19-----	110566	Resistor - carbon 33,000 ohm 1/4 watt
20-----	110569	Resistor - carbon 10,000 ohm 1/4 watt
21-----	110570	Resistor - carbon 2.2 meg. 1/4 watt
22-----	110578	Resistor - carbon 68,000 ohm 1/4 watt
23-----	110584	Resistor - carbon 330,000 ohm 1/4 watt
24-----	110629	Lamp - 6.3 volt-.25 amps.
25-----	112898	Condenser - electrolytic 16 mfd. 150 volt
26-----	113042	Coil - oscillator
27-----	R-113343	Transformer - output for R-115013 speaker
28-----	113472	Condenser - electrolytic 40 mfd. 150 volt
29A - 29B-----	113478	Condenser - variable gang
30A - 30B-----	113501	Volume control-20,000 ohms with on-off switch
31-----	113506	Ballast Resistor - L55B
32-----	R-113737	Cone - voice coil assem. for R-115025 speaker
33-----	113738	Transformer - I.F. (with trimmer)
34A - 34B-----	113743	Condenser - trimmer (2 section for I.F.)
35-----	113744	Coil - antenna
36-----	113745	Condenser - trimmer (regen control)
37-----	R-115025	Speaker - dynamic - 5" (sub. R-115013)

