
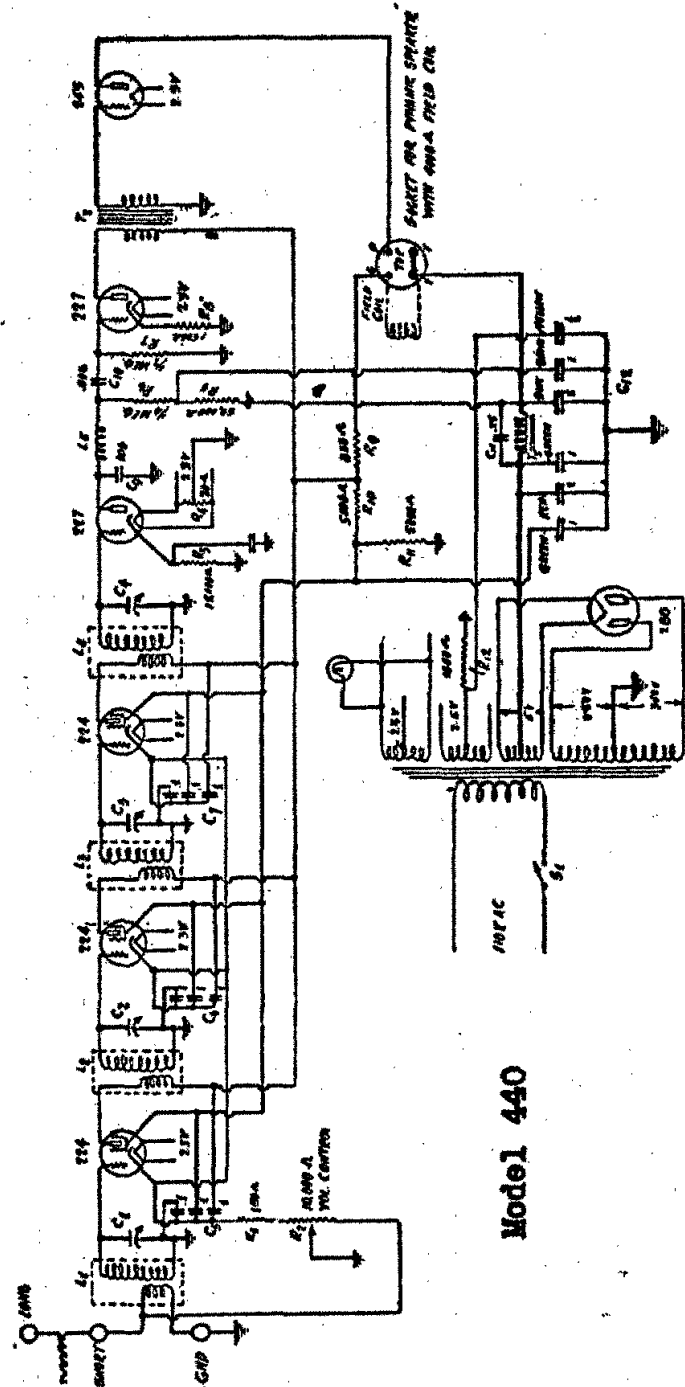


# SENTINEL RADIO CORP.

MODEL 440

MODEL 444

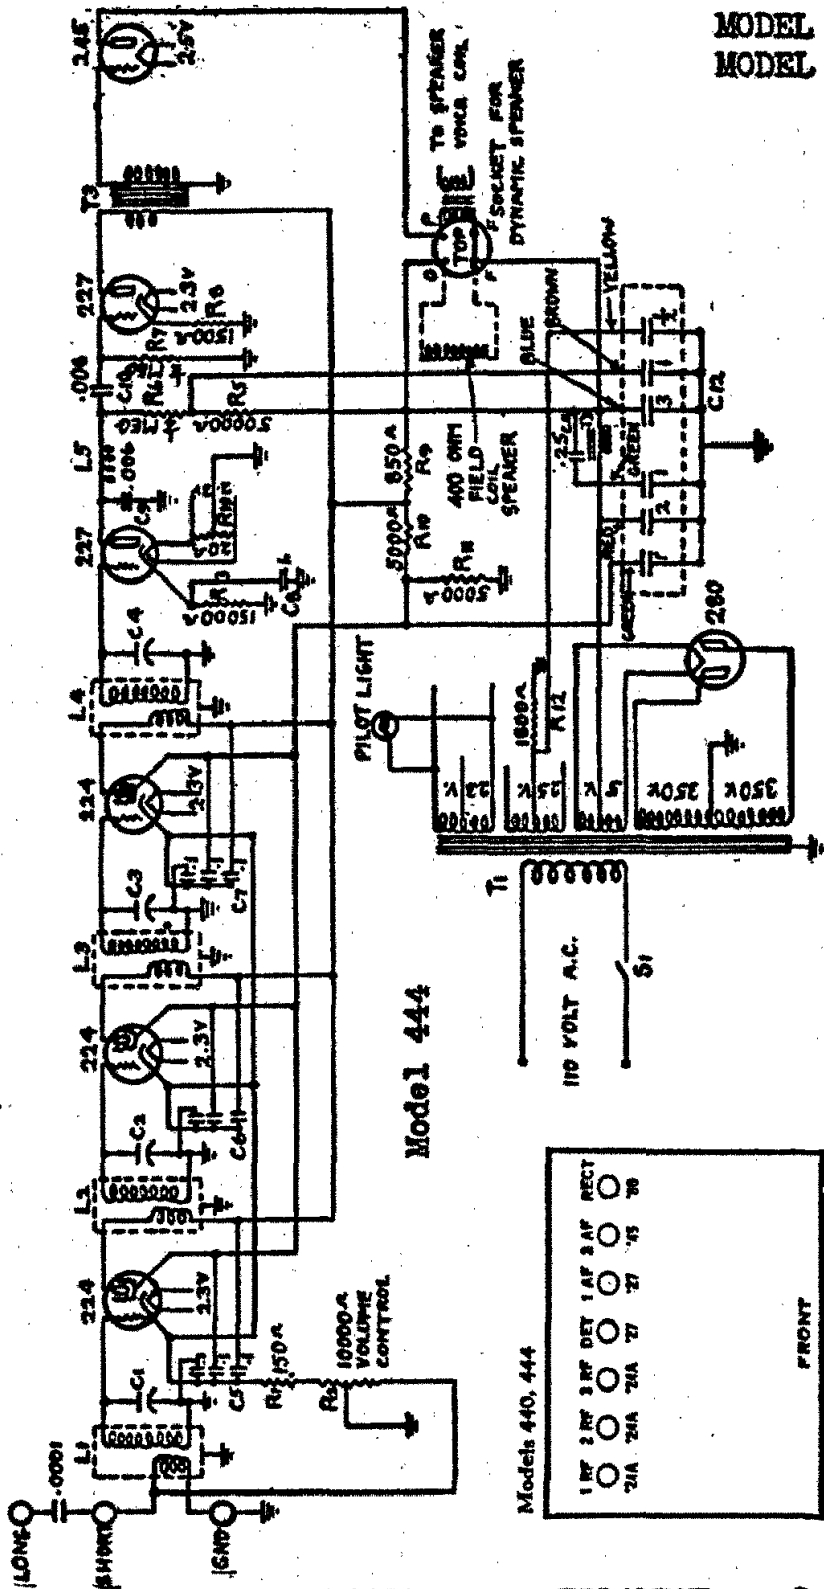

TUBE VOLTAGES		FILAMENT VOLTS	B VOLTS	C VOLTS	NORMAL PLATE M.A.	SCREEN VOLTS
Tube	Position of Tube					
224	1st RF	2.35	155	2	3.5	75
224	2nd RF	2.35	155	2	3.5	75
224	3rd RF	2.35	155	2	3.5	75
227	Detector	2.35	110	18	.2	
227	1st Audio	2.35	122	8	10.5	
245	Output	2.4	245	50	27	
280	Rectifier	4.75		*55		

350 A.C. Volts each side high voltage secondary

\*51-55 M.A. each plate

115 volts line

With volume control to full on position