


TRAV-LER RADIO Models 56C220, 56C230, 56C231, 56C232, 56C233

The diagram below is exact for above listed sets. Model 56C240 is very similar but includes pilot light and phono input jack and switch.

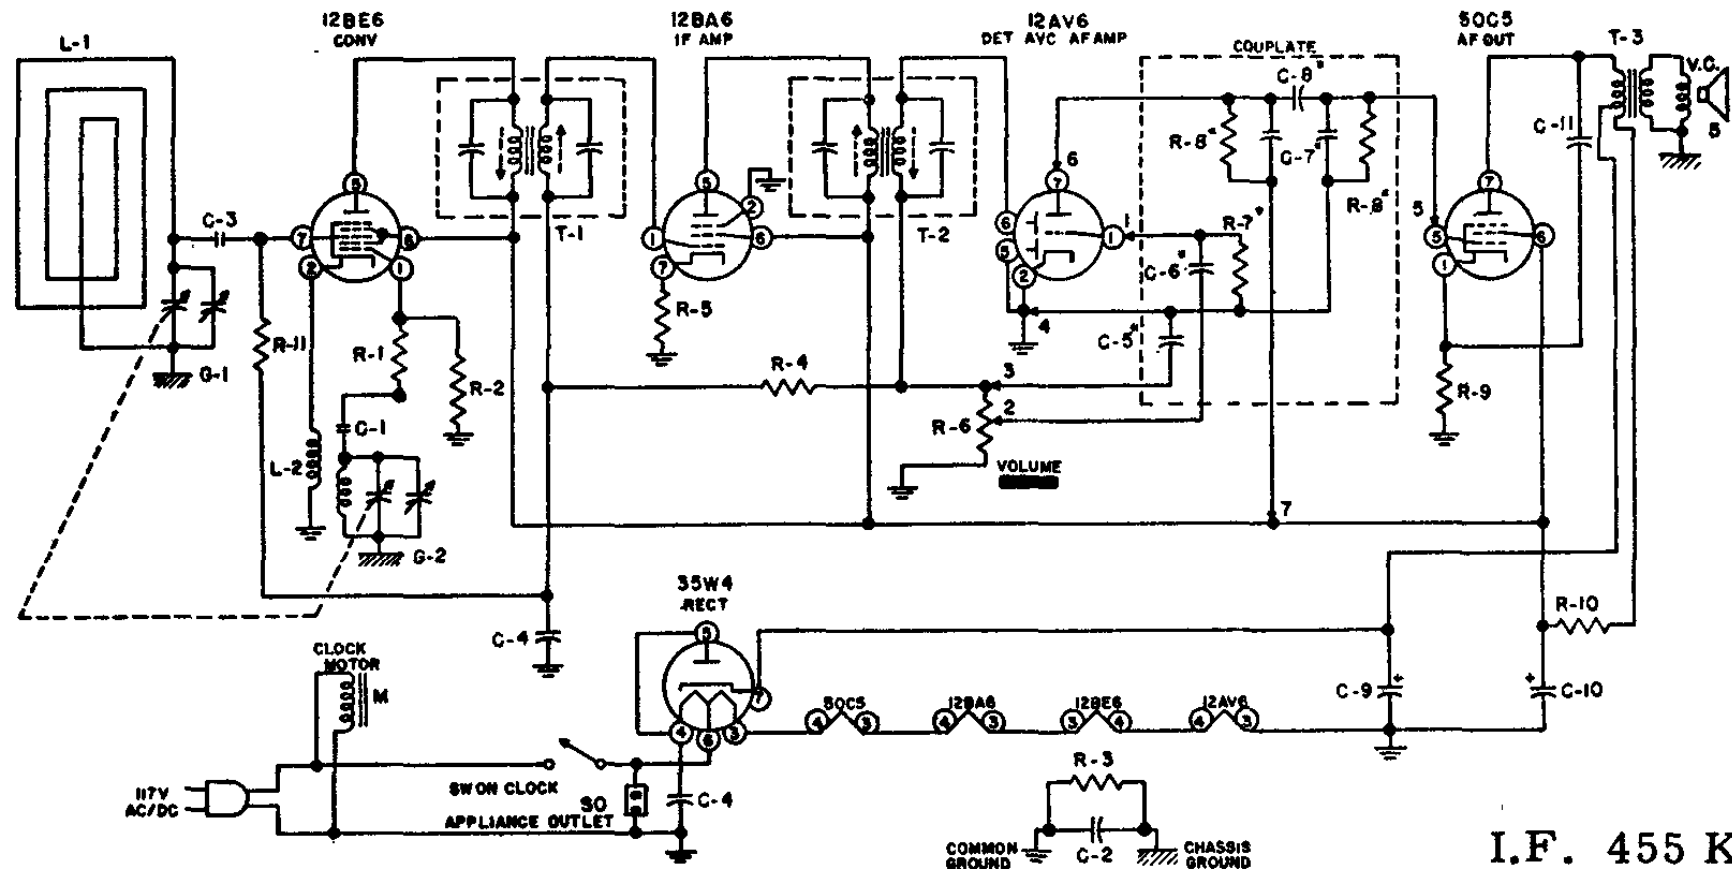

PART NO.		DESCRIPTION	PART NO.		DESCRIPTION	PART NO.		DESCRIPTION
IR-4	R-1	47Ω RESISTOR 1/2W. 20%	CC-12	G-1	47 MMF0 CERAMIC CONDENSER	SPK-55	S	4"x6" P.M. SPEAKER
IR-45	R-2	22MΩ RESISTOR 1/2W. 10%	PC-8	G-2	.1 MFD.CONDENSER 400 V.	AT-24	V.C.	VOICE COIL
IR-20	R-3	220MΩ RESISTOR 1/2W. 20%	CC-33	G-3	220 MMF0. 500V. 20% GER COND.	T-3		OUTPUT TRANSFORMER
IR-23	R-4	3.3ME6.RESISTOR 1/2W. 20%	PC-5	G-4	.05 MFD.CONDENSER 400 V.	LL-48	L-1	LOOP ANTENNA
IR-155	R-5	120Ω RESISTOR 1/2W. 10%		G-5	220 MMF0.	LO-27	L-2	OSC COIL
VG-101	R-6	1MEG. VOLUME CONTROL		G-6	.002 MFD.	SO-54	SO	APPLIANCE OUTLET SOCKET
MC-18	R-7	6.8MEG.	MO-19	G-7	250 MMF0.			
	R-8	470MΩ		G-8	.005 MFD.	CK-7	M	ELECTRIC CLOCK
IR-98	R-9	150Ω RESISTOR 1/2W. 10%	EC-68	G-9	70 MFD. 150W.V.O.G.ELECTROLYTIC		SW	
IR-42	R-10	1000Ω RESISTOR 1W. 10%	PC-47	G-10	40 MFD.			
IR-12	R-11	1MEG. RESISTOR 1/2W. 20%		G-11	.02 MFD. CONDENSER 400V.			
LI-18	T-1	INPUT LF TRANSFORMER	BC-24	G-1	TUNING CONDENSER			
	T-2	OUTPUT LF TRANSFORMER		G-2				