



MOTOROLA

Chassis HS-1048 and
HS-1050 used in
Models SK-77-2,
SK-78-1, SK-79-1,
SK-111, SK-112,
SK-115, SK-116.

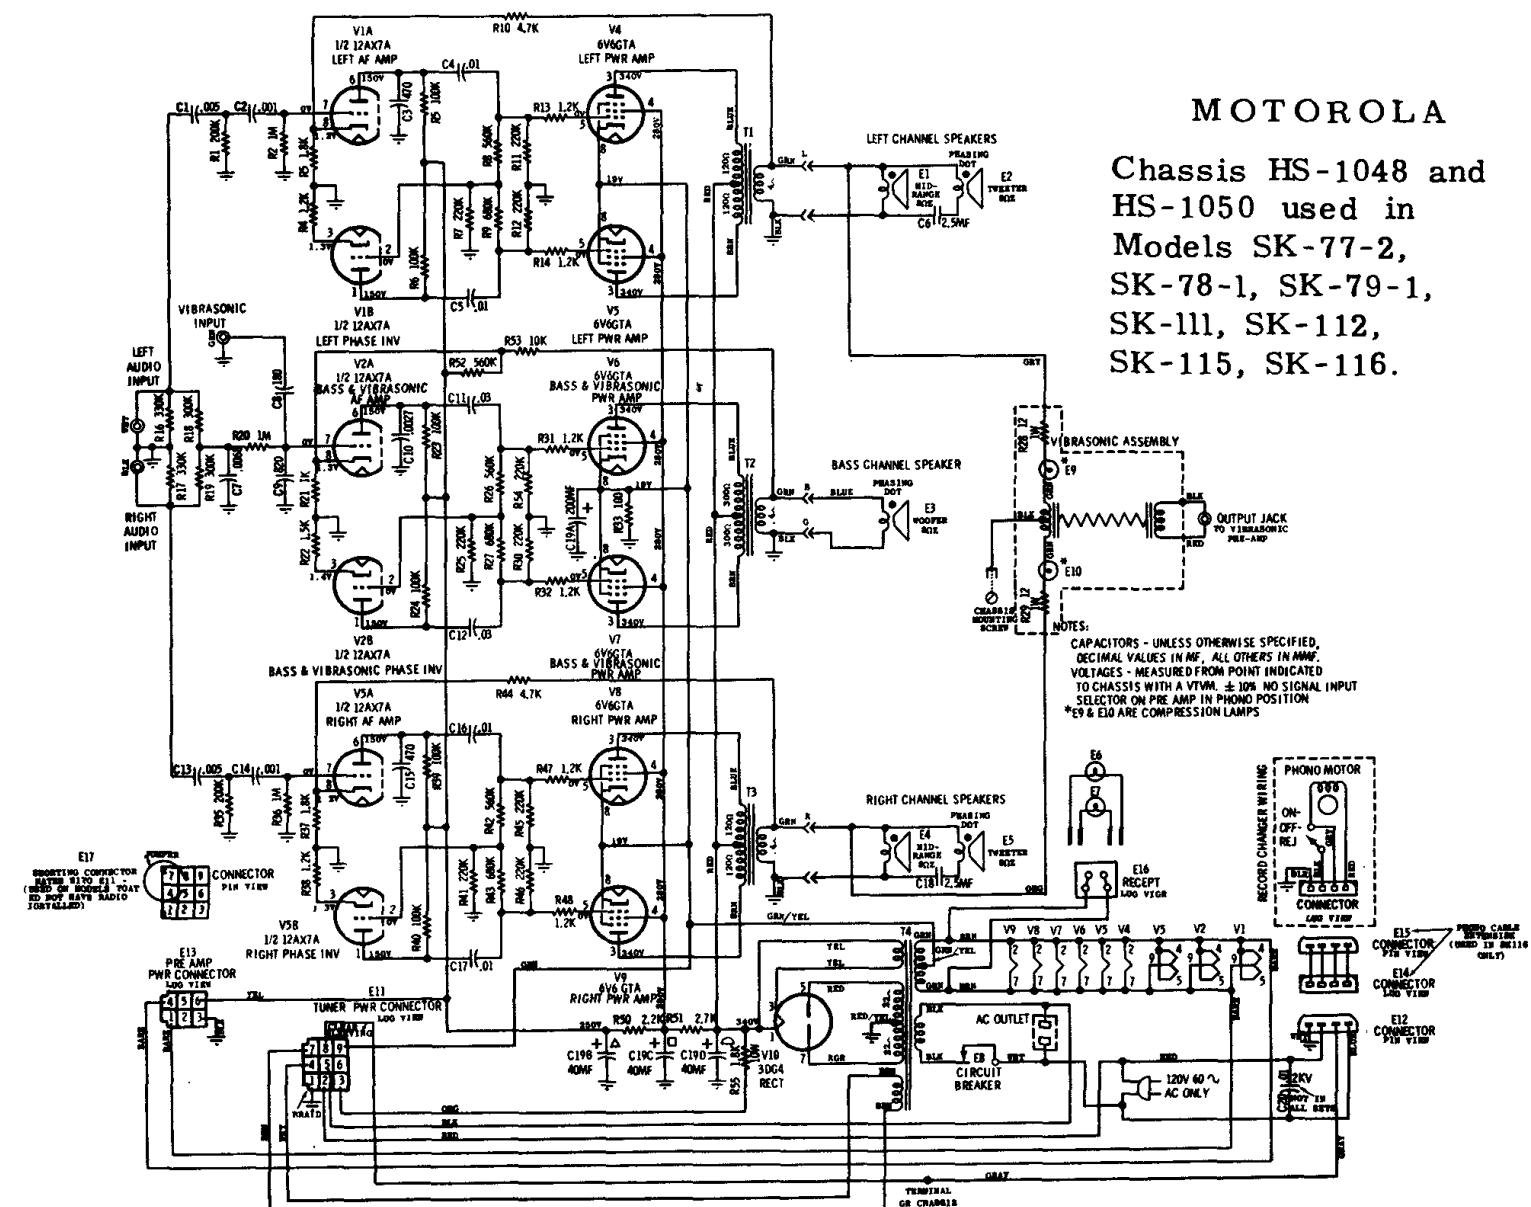

HS-1048 POWER AMP & POWER SUPPLY SCHEMATIC DIAGRAM

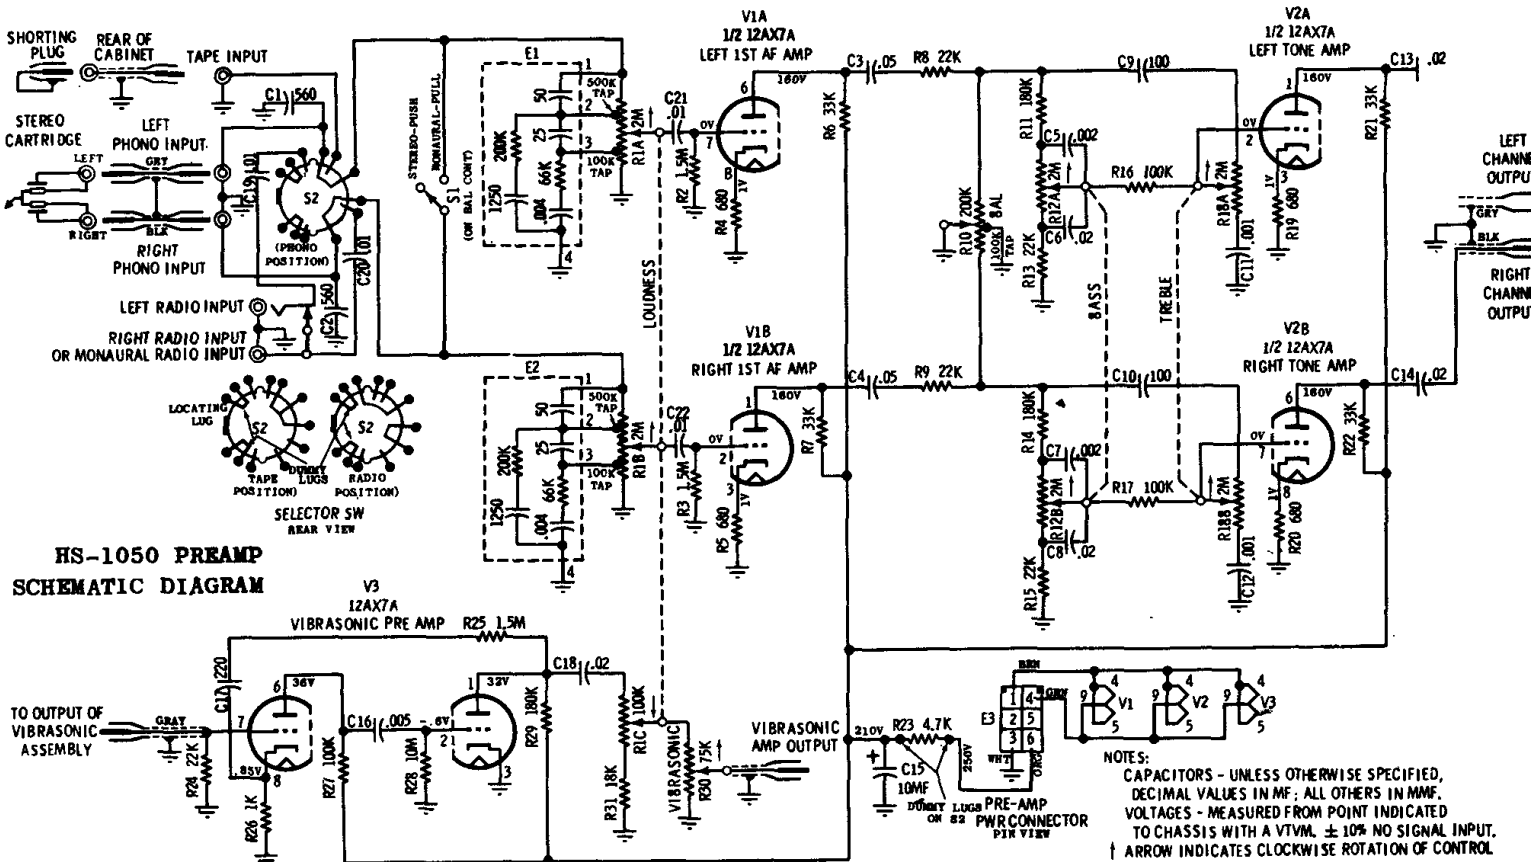

HS-1050 PREAMP
SCHEMATIC DIAGRAM

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN MF; ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO CHASSIS WITH A VTVM, $\pm 10\%$ NO SIGNAL INPUT.
*E9 & E10 ARE COMPRESSION LAMPS
† ARROW INDICATES CLOCKWISE ROTATION OF CONTROL