


PHILCO RADIO & TELEVISION CORP.


MODEL P-1835

Packard

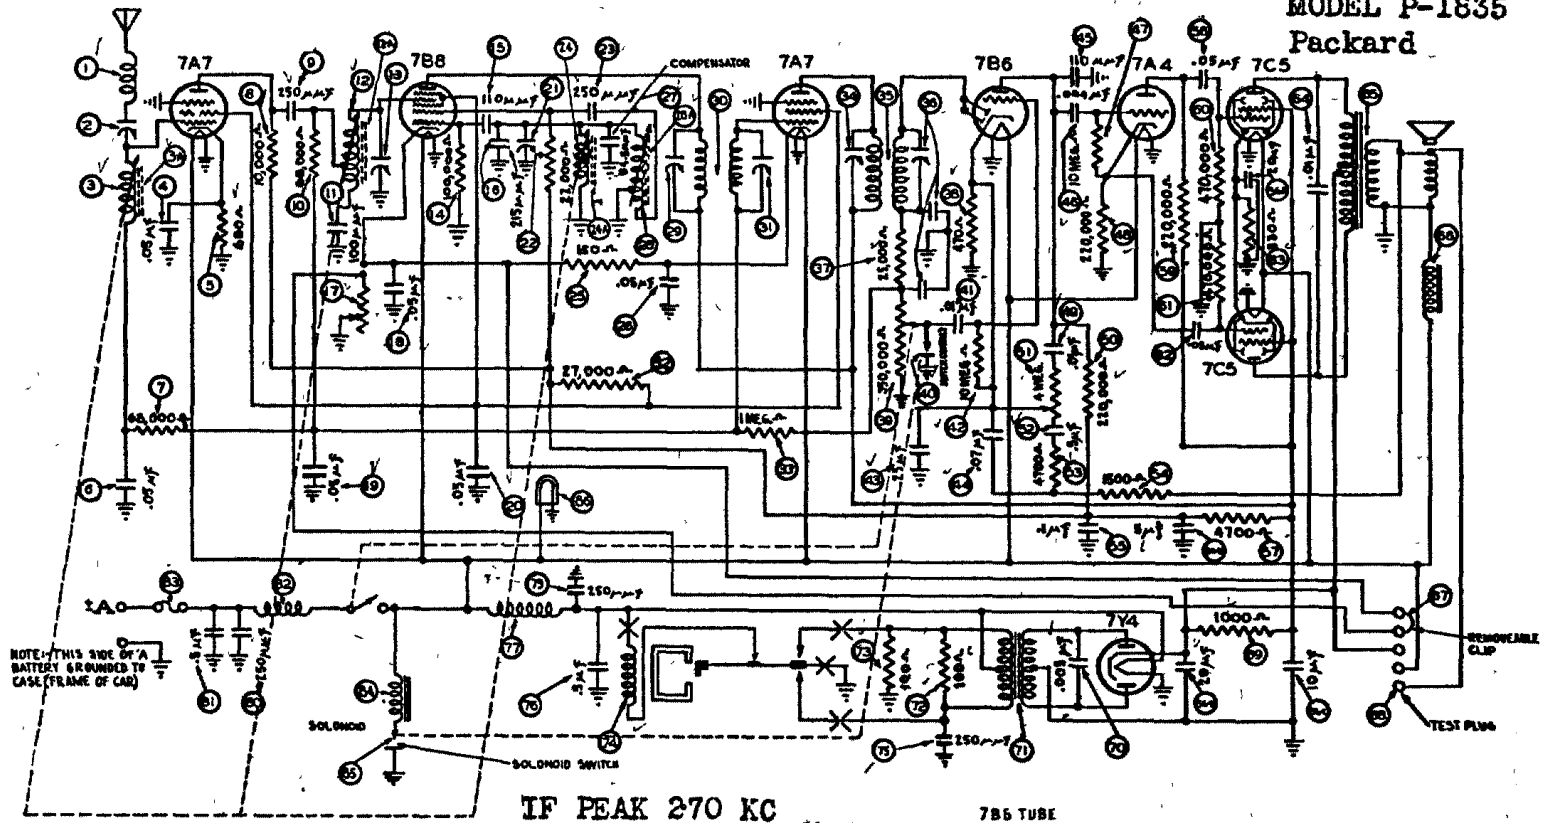

PARTS LIST — P-1835

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	65-0378	27	Resistor (10,000,000 ohms)	33-610154
2	Antenna Padder	65-0054	28	Resistor (220,000 ohms)	33-422334
3	Antenna Transformer	65-0349	29	Condenser (.01 Mfd.)	61-0100
4	Iron Core	57-1541	30	Resistor (220,000 ohms)	33-422334
5	Condenser (.05 Mfd.)	61-0111	31	Tone Control	
6	Resistor (680 ohms)	33-168334	32	(4,000,000 ohms)	Part of 30
7	Condenser (.05 Mfd.)	61-0111	33	Condenser (.5 Mfd.)	65-0134
8	Resistor (68,000 ohms)	33-368154	34	Resistor (4,700 ohms)	33-247154
9	Resistor (10,000 ohms)	33-810334	35	Resistor (1,500 ohms)	33-215154
10	Condenser (250 Mmfd.)	60-125157	36	Condenser (.1 Mfd.)	61-0113
11	Resistor (68,000 ohms)	33-368154	37	Filter Condenser	
12	Condenser (100 Mmfd.)	60-110327	38	(5-10-20-20 Mfd.)	61-0150
13	R. F. Transformer	65-0359	39	Resistor (4,700 ohms)	33-247434
14	Iron Core	57-1541	40	Condenser (.05 Mfd.)	61-0122
15	Padder	61-0055	41	Resistor (220,000 ohms)	33-422334
16	Resistor (100,000 ohms)	33-410154	42	Resistor (470,000 ohms)	33-447154
17	Condenser (110 Mmfd.)	60-110157	43	Resistor (470,000 ohms)	33-447154
18	Condenser (215 Mmfd.)	61-0148	44	Condenser (.05 Mfd.)	61-0111
19	Sensitivity Control	67-0038	45	Resistor (330 ohms)	33-133436
20	Condenser (.05 Mfd.)	61-0111	46	Condenser (.01 Mfd.)	61-0124
21	Condenser (.05 Mfd.)	61-0111	47	Output Transformer	65-0354
22	Condenser (.05 Mfd.)	61-0101	48	Field Coil	Not Replaceable
23	Padder	61-0052	49	Cone & Voice Coil	
24	Resistor (22,000 ohms)	33-322334	50	(For 73-0050-2 Speaker)	91-0167
25	Condenser (250 Mmfd.)	60-125157	51	(For 73-0050-4 Speaker)	91-0168
26	Oscillator Transformer	65-0387	52	Jumper	57-1121
27	Iron Core	57-1542	53	Test Socket	55-1078
28	Resistor (150 ohms)	33-115336	54	Resistor (1,000 ohms)	33-210434
29	Condenser (.05 Mfd.)	61-0111	55	Condenser (5,000 Mmfd.)	61-0153
30	Condenser (54.5 Mmfd.)	61-0149	56	Power Transformer	65-0347
31	Oscillator Tracking		57	Resistor (100 ohms)	33-110434
32	Transformer	65-0351	58	Resistor (100 ohms)	33-110434
33	Oscillator Tracking Core	57-0998	59	Vibrator	83-0027
34	Padder (Pri. 1st I. F. Trans.)	65-0352	60	Condenser (250 Mmfd.)	60-125157
35	First I. F. Transformer	65-0352	61	Condenser (.5 Mfd.)	61-0137
36	Padder (Sec. 1st I. F. Trans.)	33-327434	62	Vibrator Choke	65-0151
37	Resistor (27,000 ohms)	33-327434	63	Condenser (250 Mmfd.)	60-125157
38	Resistor (1,000,000 ohms)	33-510154	64	Condenser (250 Mmfd.)	60-125157
39	Padder (Pri. 2nd I. F. Trans.)	65-0353	65	Condenser (.5 Mfd.)	61-0137
40	Second I. F. Transformer	65-0353	66	"A" Choke	32-1644
41	Padder (Sec. 2nd I. F. Trans.)	33-325154	67	Fuse	45-2359
42	Resistor (25,000 ohms)	33-325154	68	Solenoid	85-0360
43	Resistor (470 ohms)	33-147336	69	Solenoid Switch	Part of 85-0125
44	Volume Control (350,000 ohms)		70	Pilot Lamp	34-2064
45	& Tone Control & On-Off		71	Front Bezel	57-1550FA8
46	Switch	67-0035	72	Color Disc Assembly	77-0649
47	Muter Switch	85-0125	73	Coupling & Key Assembly	77-0451
48	Condenser (.01 Mfd.)	61-0100	74	Tuning Switch only	77-0601
49	Resistor		75	R. F. Transformer Spring	57-1538
50	(10,000,000 ohms)	33-610154	76	R. F. Transformer Mtg.	
51	Condenser (.25 Mfd.)	61-0151	77	Screw	97-0126
52	Condenser (.07 Mfd.)	61-0152	78	Core Draw Bar Spring	57-1649
53	Condenser (110 Mmfd.)	60-110157			
54	Condenser (4,000 Mmfd.)	61-0128			

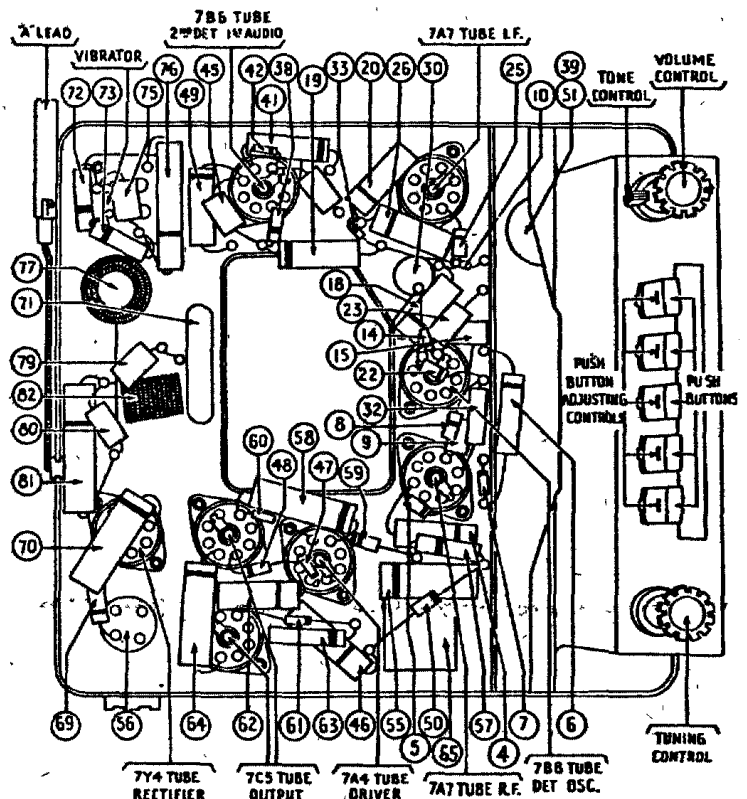

Description	Part No.	Description	Part No.
Latch Bar Spring	57-1650	Vibrator Socket	27-6153
Push Button Spring	57-1651	Tube Socket	27-6152
Push Button Knob	77-0613	Hook Bolt (Radio Mtg.)	57-1560FA3
Muter Spring	57-1652	Wing Nut (Radio Mtg.)	W895FA3
Pointer Spring	57-1653	Ignition Switch Condenser	30-4007
Pointer & Cam Assembly	77-0650	Generator Condenser	30-4475
Dial	55-1034	Distributor Resistor	33-1196
Tuning & Volume Knob	77-0643	Screw (Bezel Mtg.)	97-0111FA4
Tone Lever	57-1559FA8	Speaker Cover & Bracket	77-0663
Manual Return Spring	57-1620FA3	Tube Side Cover	57-1554FC51
Speaker Gasket	55-1037	Speed Nut (Dial Mtg.)	87-0137FE7
Speaker Unit	73-0050	Housing & Bracket	77-0662FC51
Speaker Cable	95-0161	Screw (Cover Mtg.)	W-2212FA26