



MODEL S-1825

Studebaker "Custom" PHILCO RADIO & TELEVISION CORP.

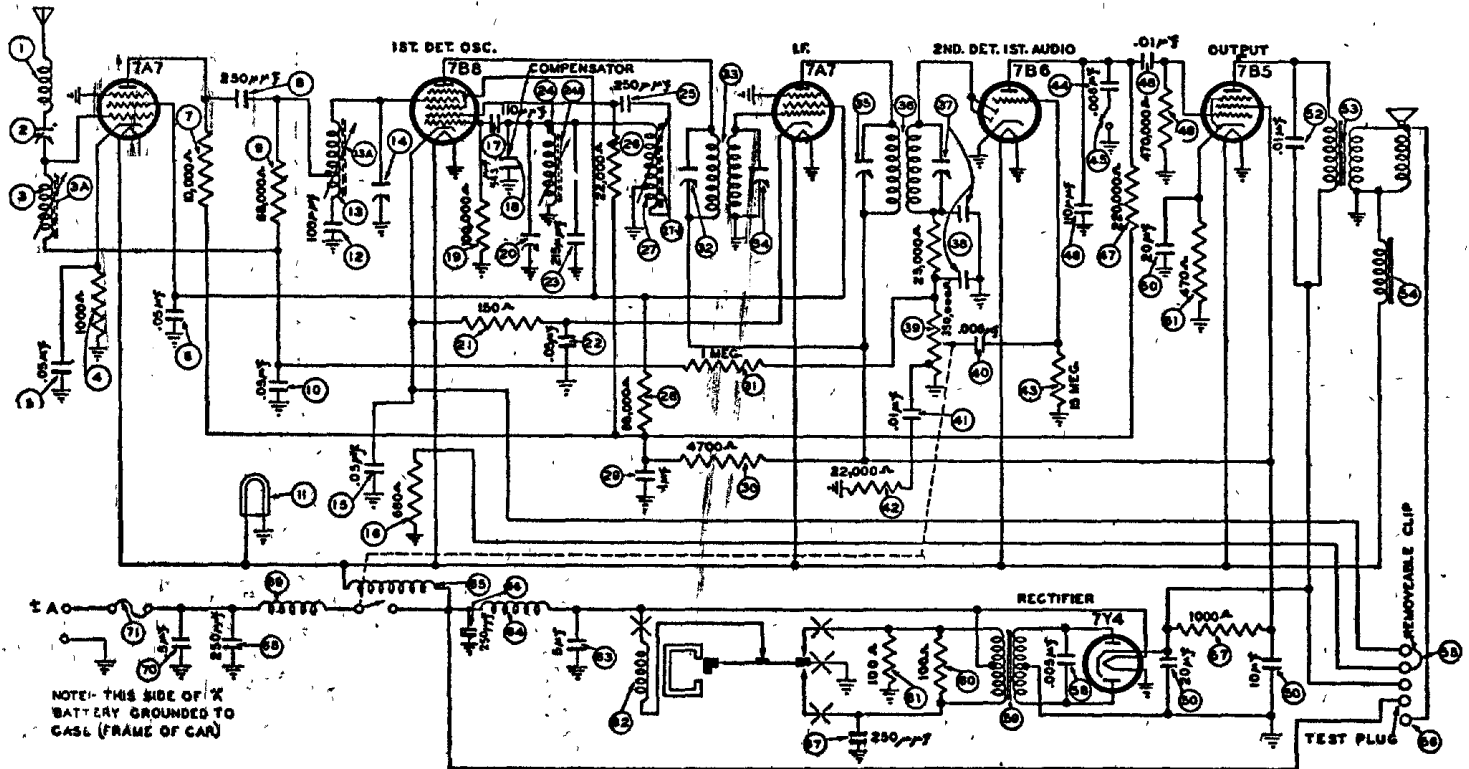

PARTS LIST — S-1825

No.	Description	Part No.	No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	65-0378	27	Resistor (220,000 ohms)	33-422334	60	Vibrator	63
2	Antenna Padder	63-0053	28	Condenser (.01 Mfd.)	61-0100	61	7B5 TUBE	21
3	Antenna Transformer	65-0349	29	Resistor (470,000 ohms)	33-447154	62	2ND DET. 1ST. AUDIO	36
4	Iron Core	57-1541	30	Filter Condenser (10-20-20 Mfd.)	61-0072	63	7A7 TUBE	17
5	Resistor (1,000 ohms)	33-210334	31	Resistor (470 ohms)	33-147436	64	7B6 TUBE	25
6	Condenser (.05 Mfd.)	61-0101	32	Condenser (.01 Mfd.)	61-0124	65	7B5 TUBE	26
7	Condenser (.05 Mfd.)	61-0111	33	Output Transformer	65-0364	66	7B5 TUBE	28
8	Resistor (10,000 ohms)	33-310334	34	Field Coil	Not Replaceable	67	7B5 TUBE	28
9	Condenser (250 Mmfd.)	60-125157	35	Cone & Voice Coil	91-0186	68	7B5 TUBE	28
10	Resistor (68,000 ohms)	33-368154	36	Jumper	57-1121	69	7B5 TUBE	28
11	Condenser (.05 Mfd.)	61-0101	37	Test Socket	55-1078	70	7B5 TUBE	28
12	Pilot Lamp	34-2064	38	Resistor (1,000 ohms)	33-210434	71	7B5 TUBE	28
13	Condenser (100 Mmfd.)	60-110327	39	Condenser (5,000 Mmfd.)	61-0153	72	7B5 TUBE	28
14	R. F. Transformer	65-0359	40	Power Transformer	65-0347	73	7B5 TUBE	28
15	Iron Core	57-1541	41	Resistor (100 ohms)	33-110434	74	7B5 TUBE	28
16	Padder	63-0055	42	Resistor (100 ohms)	33-110434	75	7B5 TUBE	28
17	Condenser (.05 Mfd.)	61-0111	43	Vibrator	83-0027	76	7B5 TUBE	28
18	Resistor (680 ohms)	33-168336	44	Condenser (.5 Mfd.)	61-0137	77	7B5 TUBE	28
19	Condenser (110 Mmfd.)	60-110157	45	Vibrator Choke	65-0151	78	7B5 TUBE	28
20	Condenser (54.5 Mmfd.)	61-0149	46	Filament Choke	32-1604	79	7B5 TUBE	28
21	Resistor (100,000 ohms)	33-410154	47	Condenser (250 Mmfd.)	60-125157	80	7B5 TUBE	28
22	Padder	63-0052	48	Condenser (250 Mmfd.)	60-125157	81	7B5 TUBE	28
23	Resistor (150 ohms)	33-115336	49	Condenser (250 Mmfd.)	60-125157	82	7B5 TUBE	28
24	Condenser (.05 Mfd.)	61-0111	50	"A" Choke	32-1644	83	7B5 TUBE	28
25	Condenser (215 Mmfd.)	61-0148	51	Condenser (.5 Mfd.)	61-0137	84	7B5 TUBE	28
26	Oscillator Transformer	65-0350	52	Fuse	45-2559	85	7B5 TUBE	28
27	Iron Core	57-1542	53	Manual Knob Sleeve	57-1623	86	7B5 TUBE	28
28	Condenser (250 Mmfd.)	60-125157	54	Manual Knob Spacer	57-1669	87	7B5 TUBE	28
29	Resistor (22,000 ohms)	33-322334	55	Manual Knob Spring	57-1628FA3	88	7B5 TUBE	28
30	Series Tracking Transformer	65-0351	56	Manual Knob Skirt	55-1081	89	7B5 TUBE	28
31	Series Tracking Core	57-1659	57	Manual Knob	55-1087	90	7B5 TUBE	28
32	Resistor (68,000 ohms)	33-368334	58	Tone & Volume Knob	77-0633	91	7B5 TUBE	28
33	Condenser (.1 Mfd.)	61-0113	59	Sneaker Cable	95-0161	92	7B5 TUBE	28
34	Resistor (4,700 ohms)	33-247434	60	Screw (Cover Mtg.)	W-2212FA35	93	7B5 TUBE	28
35	Resistor (1,000,000 ohms)	33-510154	61	Tube Side Cover	57-1547FC54	94	7B5 TUBE	28
36	Padder (Pri. 1st I. F. Trans.)	65-0352	62	Wiring Side Cover	57-1548PK4	95	7B5 TUBE	28
37	First I. F. Transformer	65-0352	63	Sneaker Unit	73-0053	96	7B5 TUBE	28
38	Padder (Sec. 1st I. F. Trans.)	65-0353	64	Sneaker Gasket	55-1045	97	7B5 TUBE	28
39	Padder (Pri. 2nd I. F. Trans.)	65-0353	65	Bezel Front	57-1582FA8	98	7B5 TUBE	28
40	Second I. F. Transformer	65-0353	66	Sneed Nut	97-0136FW7	99	7B5 TUBE	28
41	Condenser (Sec. 2nd I. F. Trans.)	65-0353	67	Dial	55-1012	100	7B5 TUBE	28
42	Resistor (25,000 ohms)	33-325154	68	Gland Nuts	28-6558FA8	101	7B5 TUBE	28
43	Volume Control (350,000 ohms)	67-0039	69	Housing	77-0660FC54	102	7B5 TUBE	28
44	& On-Off Switch	67-0039	70	Vibrator Socket	27-8153	103	7B5 TUBE	28
45	Condenser (6,000 Mmfd.)	61-0103	71	Tube Socket	27-8151	104	7B5 TUBE	28
46	Condenser (.01 Mfd.)	61-0110	72	Push Button Knob	77-0612	105	7B5 TUBE	28
47	Resistor (22,000 ohms)	33-322154	73	Tuning Switch	77-0640	106	7B5 TUBE	28
48	Resistor (15,000,000 ohms)	33-615154	74	Coil Form Spring	57-1538	107	7B5 TUBE	28
49	Condenser (6,000 Mmfd.)	61-0155	75	Coil Form Screw	97-0126	108	7B5 TUBE	28
50	Tone Control Switch	85 0126	76	Core Draw Bar Spring	57-1649	109	7B5 TUBE	28
51	Condenser (110 Mmfd.)	60-110157	77			110	7B5 TUBE	28

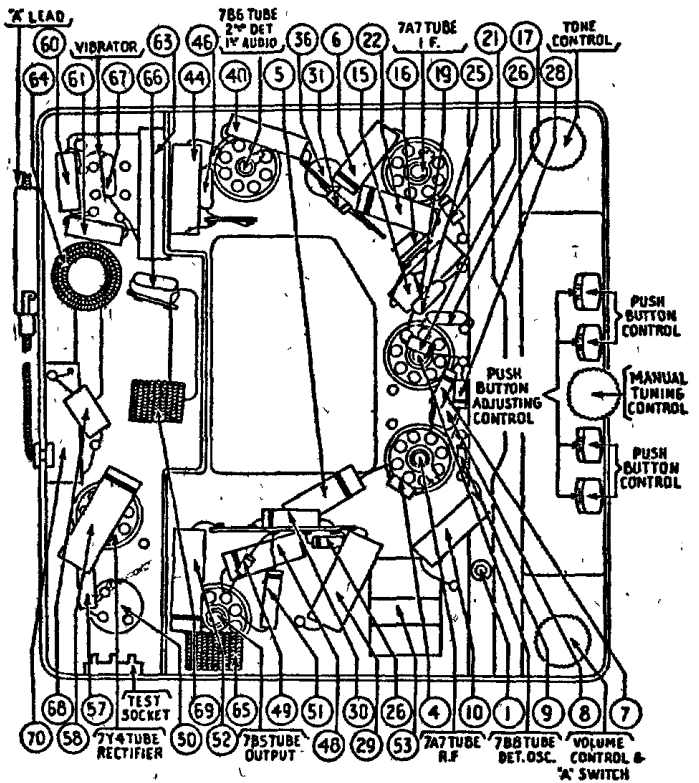

Description	Part No.	No.	Description	Part No.
Latch Bar Spring	57-1650	60	Distributor Condenser	60-125157
Push Bar Spring	57-1651	61	Fuel Gauge Resistor	87-0041
Pointer Spring	57-1653	62	Ground Strap	77-0336
Pointer & Cam Assembly	77-0647	63	Wiring Nut	
Gland Nut Wrench	28-5636FA3	64	(Radio Mtg.)	97-0048FA3
Generator Condenser	30-4007	65	Hook Bolt	
Distributor Resistor	30-2250	66	(Radio Mtg.)	97-0135FA3