



Model 53

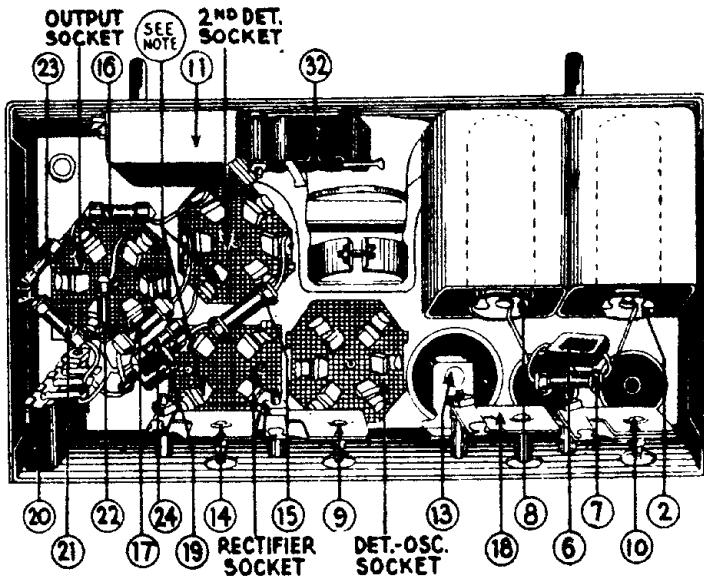

No. on Figs. 2, 3 and 4	Description	Part No.
①	Volume Control	33-5001
②	Antenna Transformer	32-1000
③	Tuning Condenser Assembly	31-1000
④	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑤	Filter Condenser Block (.05-.09-.25-.75-.2 Mfd.)	30-4000
⑥	Condenser (.0014 Mfd.)	7007
⑦	Resistor (8,000 ohms) Gray-Black-Red	5838
⑧	Oscillator Transformer	32-1001
⑨	Compensating Condenser (I.F. Primary)	04000-A
⑩	Compensating Cond. (Low Frequency)	04000-S
⑪	Condenser (10.0 Mfd.)	7440
⑫	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑬	I.F. Transformer	32-1002
⑭	Compensating Cond. (I.F. Secondary)	04000-A
⑮	Resistor (10,000 ohms) Brown-Black-Orange	4412
⑯	Resistor (490,000 ohms) Yellow-White-Yellow	4517
⑰	Resistor (10,000 ohms) Brown-Black-Orange	4412
⑱	Compensating Condenser (Regeneration)	04000
⑲	Condenser (.00025 Mfd.)	3082
⑳	Condenser (.01 Mfd.)	3903-AM
㉑	Resistor (240,000 ohms) Red-Yellow-Yellow	4410
㉒	Resistor (490,000 ohms) Yellow-White-Yellow	4517
㉓	Resistor (51,000 ohms) Green-Brown-Orange	4518
㉔	Resistor (99,000 ohms) White-White-Orange	4411
㉕	Condenser (.015 Mfd.)	3793-S
㉖	Output Transformer	32-7000
㉗	Voice Coil and Cone Assembly	36-3000
㉘	A. C. Switch (Part of Volume Control Assembly)	33-5001
㉙	Resistors (2 Wire Wound-108 ohms each)	{ 33-3000 33-3001
㉚	Electrolytic Condenser (8 Mfd.)	30-2000
㉛	Electrolytic Condenser (8 Mfd.)	30-2000
㉜	Condenser (.05 Mfd.)	3615-E
㉝	Filter Choke	32-7001
㉞	Tube Shield	7172
㉟	Knobs (Both Controls)	03064
㊱	Four Prong Socket	7544

Model 54

(A. C. — D. C.)

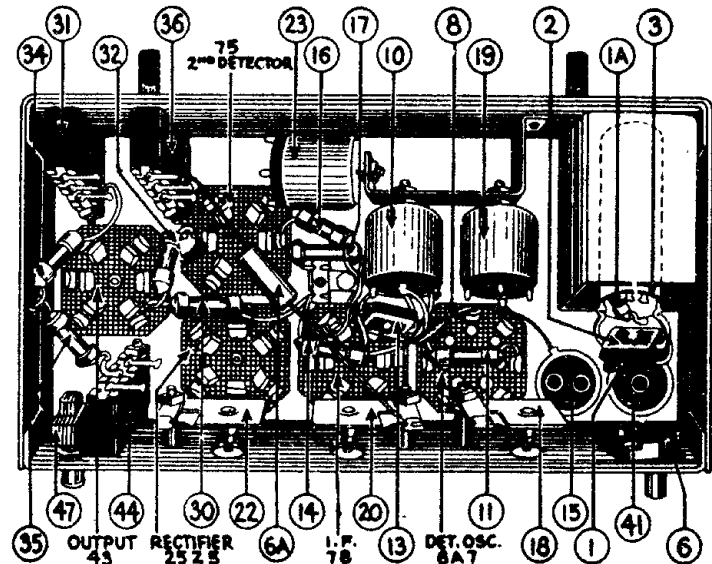

No. on Figs.	Description	Part No.
①	Condenser	30-1005
①a	Resistor (Green-Black-Red)	6096
②	Condenser	5215
③	Antenna Transformer Assembly	32-1117
④	Tuning Condenser Assembly	31-1027
⑤	Compensating Condenser (Part of ④)	
⑥	Wave Band Switch	42-1027
⑥a	Condenser	30-4020
⑦	Filter Condenser (Block)	30-4023
⑧	Resistor (Flexible)	33-3010
⑨	Compensating Condenser (High Frequency 1400) Part of ④	
⑩	Oscillator Coil	32-1118
⑪	Resistor (Green-Brown-Orange)	4518
⑫	Compensating Condenser (Low Freq.)	04000-B
⑬	Condenser	4519
⑭	Resistor (Green-Black-Red)	5310
⑮	Electrolytic Condenser (Double)	30-2002
⑯	Resistor (White-White-Orange)	4411
⑰	Resistor (Gray-Black-Red)	5838
⑱	Compensating Cond. (1st I. F. Primary)	04000-A
⑲	1st I. F. Transformer	32-1115
⑳	Compensating Condenser (1st I. F. Secondary)	04000-A
㉑	Resistor (Red-Black-Green)	5872
㉒	Compensating Cond. (2nd I. F. Primary)	04000-A
㉓	2nd I. F. Transformer	32-1116
㉔	Condenser (Double)	8035-G
㉕	Volume Control and "On-Off" Switch	33-5010
㉖	Resistor (Green-Brown-Orange)	4518
㉗	Condenser	3903AM
㉘	Resistor (Yellow-White-Yellow)	6097
㉙	Resistor (Green-Brown-Orange)	4518
㉚	Condenser (Double)	8035-F
㉛	Resistor (Red-Yellow-Yellow)	4410
㉜	Resistor (Yellow-White-Yellow)	4517
㉝	Resistor (Red-Green-Orange)	4516
㉞	Condenser	3793-Y
㉟	Output Transformer	32-7020
㊱	Voice Coil and Cone Assembly	36-3029
㊲	Field Coil and Pot Assembly	36-3040
㊳	Filter Choke	32-7036
㊴	Electrolytic Condenser	30-2001
㊵	Resistor (Wire Wound)	33-3012
㊶	Resistor (Yellow-White-Yellow)	6097
㊷	Condenser	3615-B
㊸	Pilot Lamp	4567
㊹	Resistor (Wire Wound)	33-3011
㊺	Safety Switch	42-1028
㊻	Tube Shield	28-1130
㊼	Six Prong Socket	7547
㊽	Seven Prong Socket	27-6005