


Western Auto Supply Company

Model No. D2214A

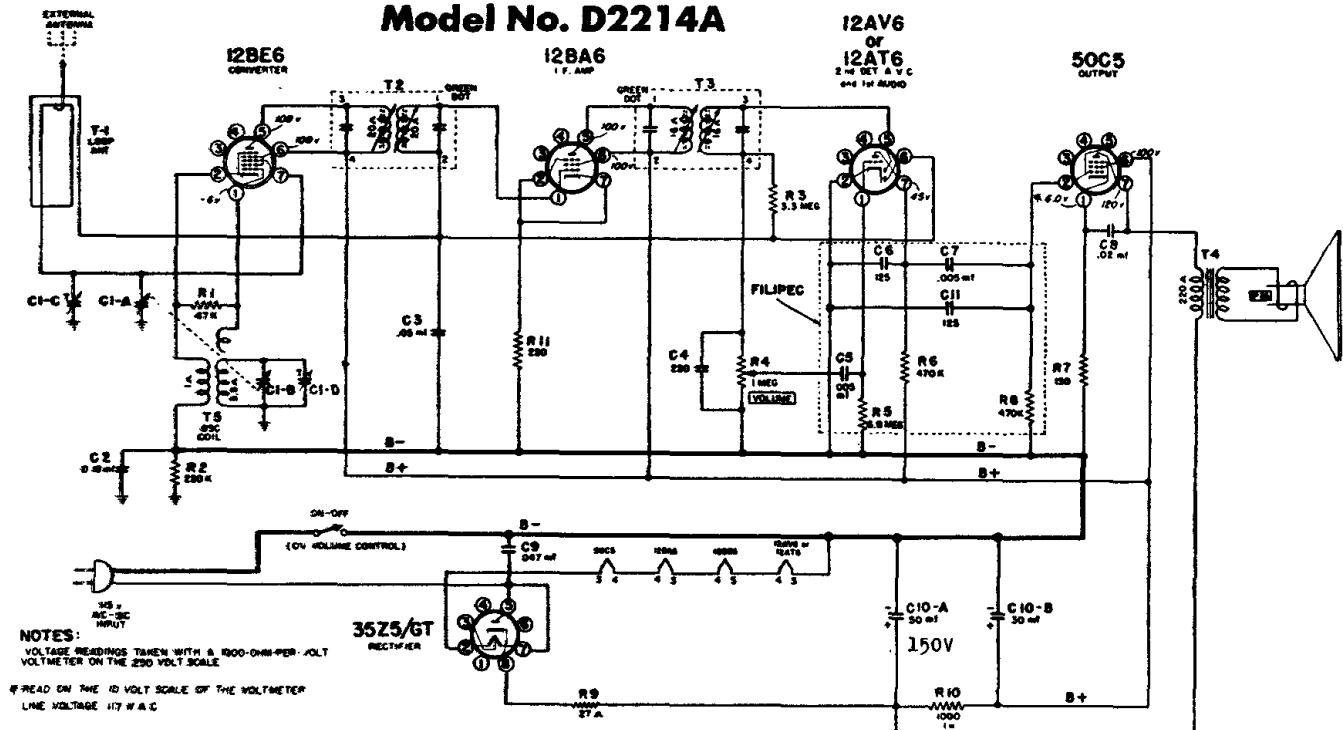


ALIGNMENT PROCEDURE

- Loop must be connected and set volume to maximum.

NOTE: Capacitor C4 is included in filpec.
Capacitor C2 should be .09 mmf.

SIGNAL GENERATOR			Ground Connection	TUNER SETTING	ADJUST FOR MAXIMUM OUTPUT	INPUT FOR 50-MILLIWATT OUTPUT
Frequency	Coupling Capacitor	Connection to Radio				
455 kc.	.1 mf	12BE6, Pin 7	HEAVY BUSS LEAD ACROSS CENTER OF CHASSIS	Capacitor fully open (plates out of mesh)	Top and bottom Cores in output and input I.F. cans	65 microvolts
1620 kc.	.1 mf	12BE6, Pin 7		Capacitor fully open (plates out of mesh)	Oscillator trimmer C1-D on gang	70 microvolts
535 kc.	.1 mf	12BE6, Pin 7		Capacitor fully closed	Check for adequate range	70 microvolts
1400 kc.	—	Lay generator lead near back of cabinet		Tune in 1400 kc. signal	Antenna trimmer C-1C on gang	200 to 400 microvolts
400 cycles	.1 mf	12AT6, Pin 1		—	—	.06 volts

Dial Stringing Diagram

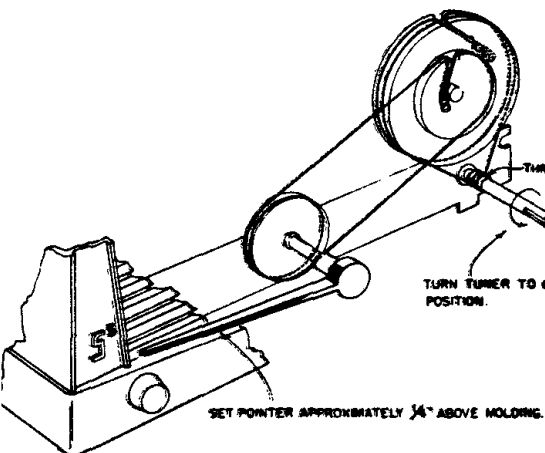

MODEL D-2205

WESTERN AUTO SUPPLY CO.

