


# WESTINGHOUSE

Models H-51MP1, H-51MP2,  
H-51MP3, Chassis V-2508-1

## CHASSIS REMOVAL

1. Remove 4 phillips screws holding the motorboard. Lift the motorboard.
2. Disconnect the speaker leads.
3. Remove the chassis cover (2 screws) and unsolder the 2 leads from the pickup cartridge and 2 leads from the phono motor.
4. Remove the 2 speed nuts holding the chassis to the motorboard.

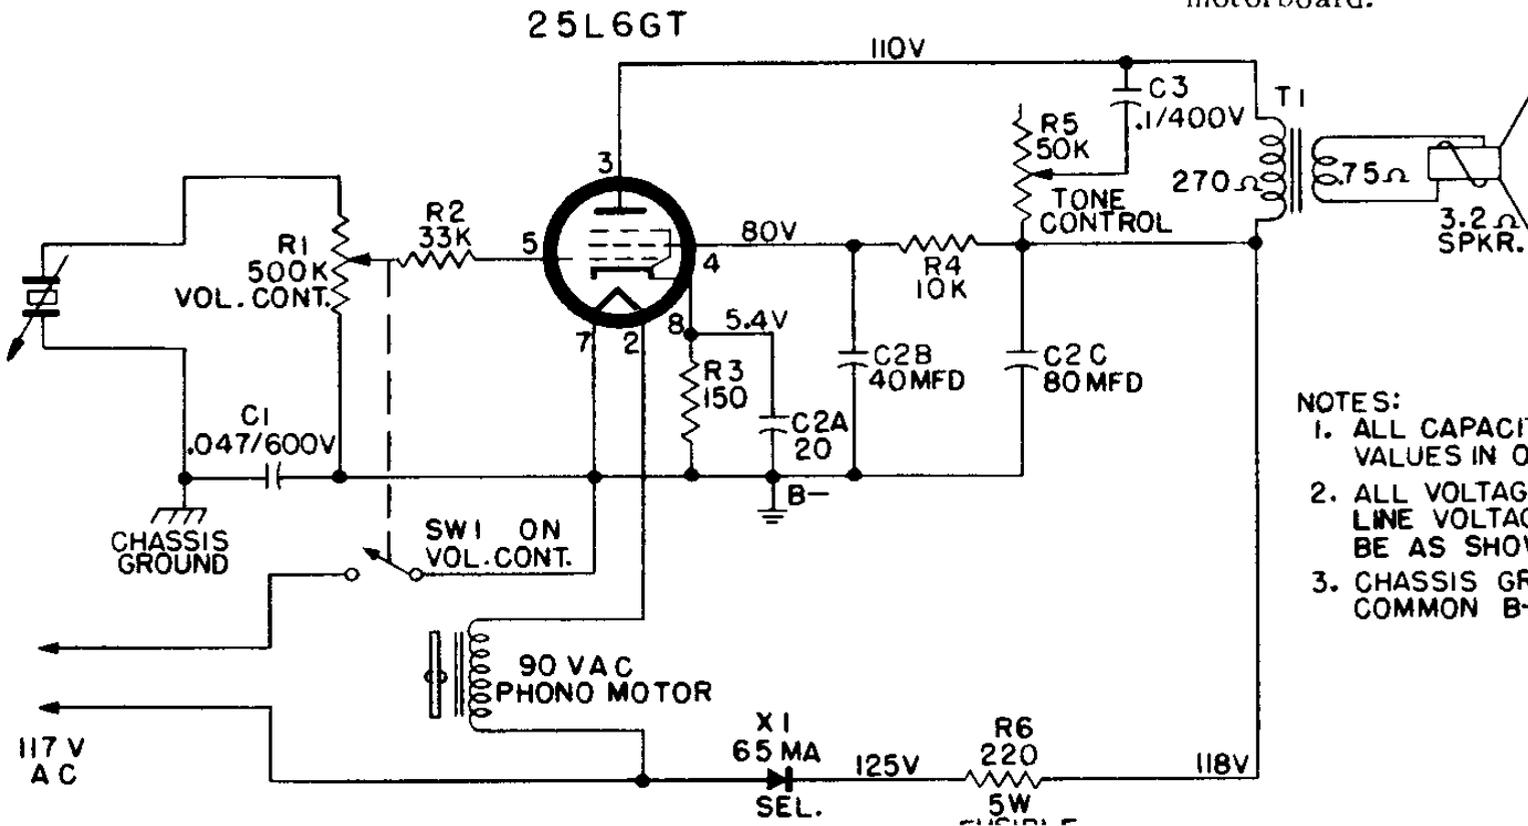

## NOTES:

1. ALL CAPACITANCE VALUES IN MFD AND ALL RESISTANCE VALUES IN OHMS UNLESS OTHERWISE STATED.
2. ALL VOLTAGES MEASURED FROM B- USING A V.T.V.M. LINE VOLTAGE SET AT 117 VAC READINGS SHOULD BE AS SHOWN  $\pm 20\%$ .
3. CHASSIS GROUND  COMMON B- 