



Westinghouse Electric
Models H-104, H-105,
H-107, H-108.
Chassis for models
H-110, H-111, H-137,
& H-138 are similar
to the above models.

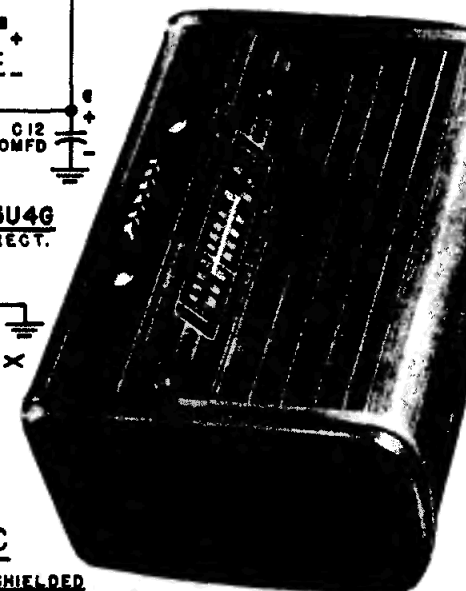

H-104 & H-105

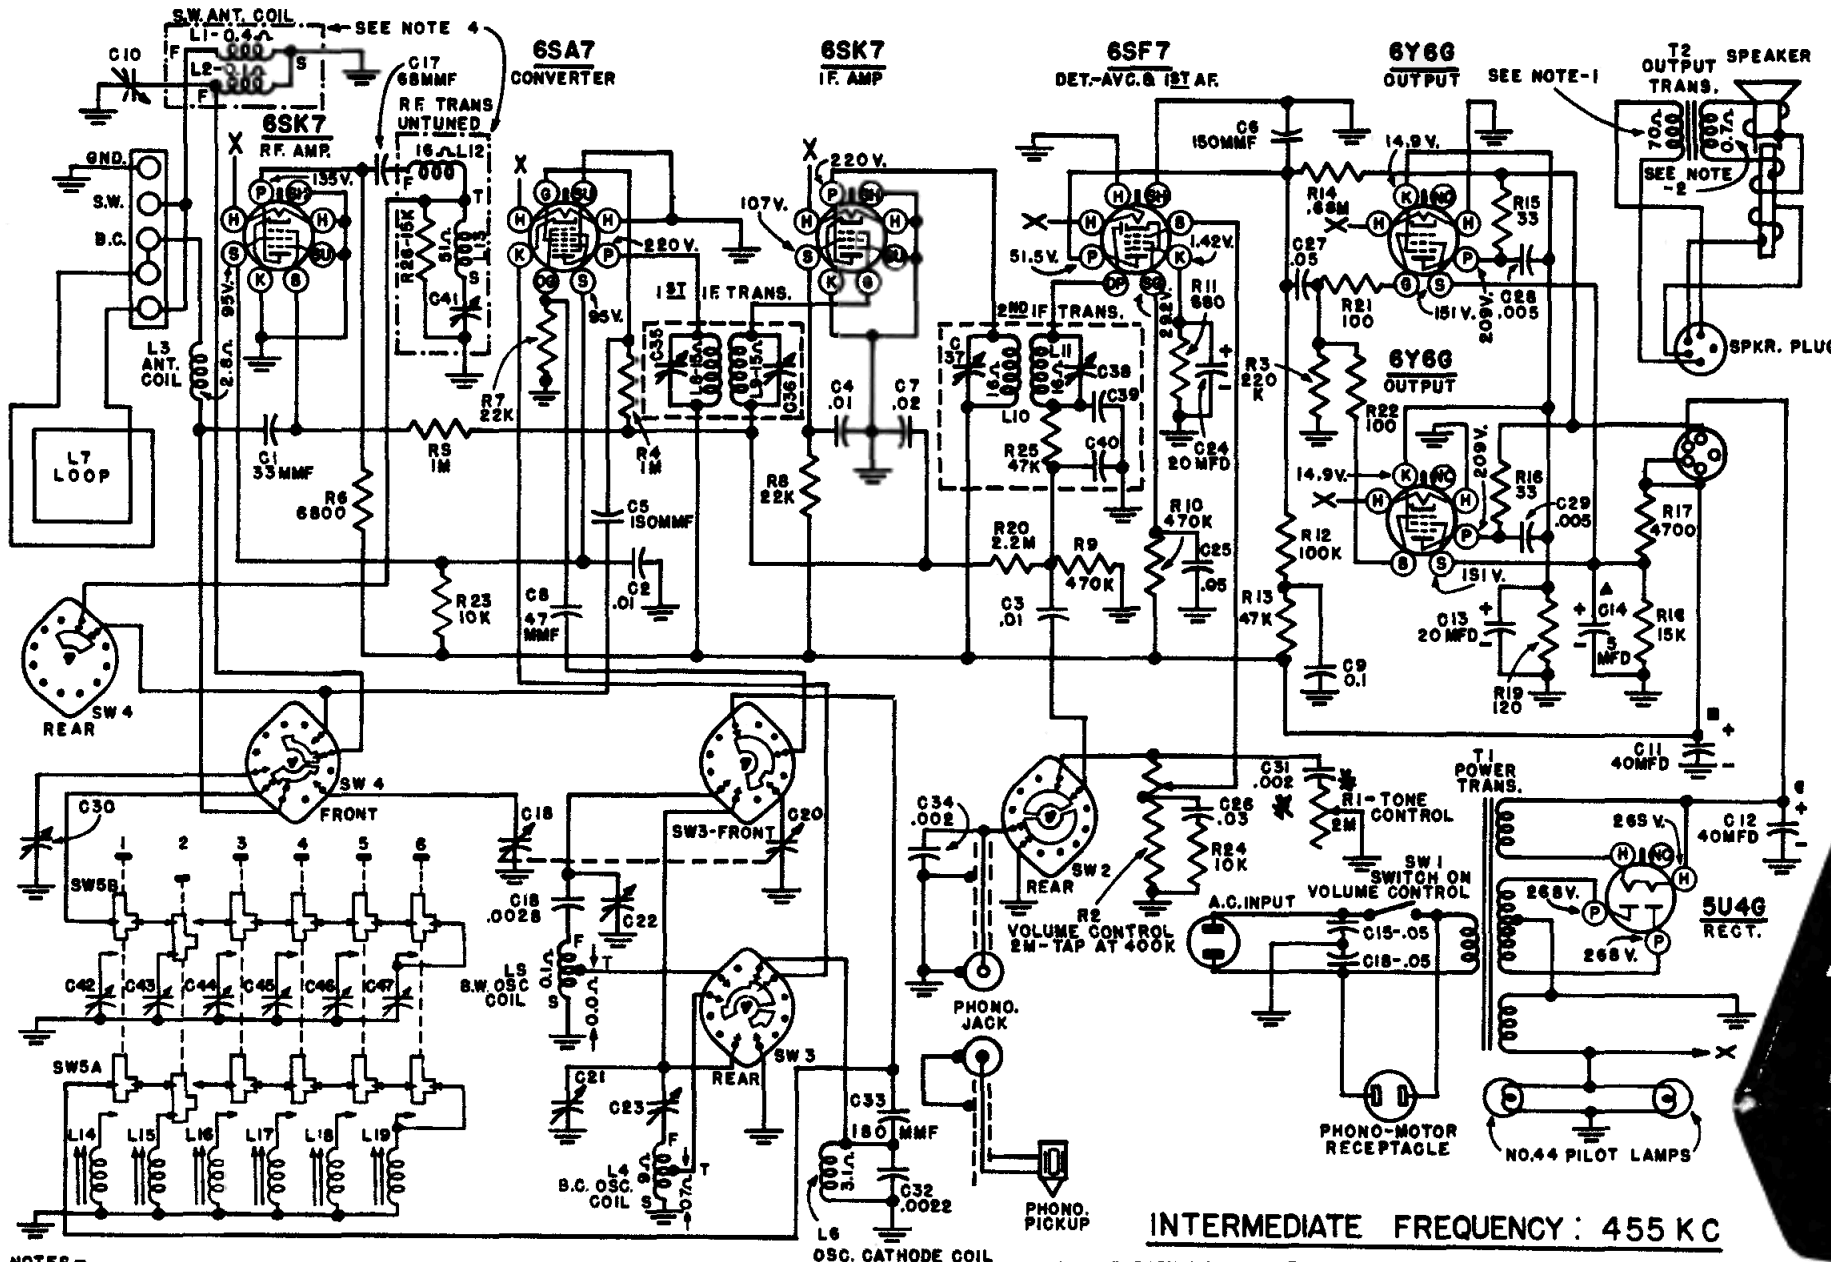

INTERMEDIATE FREQUENCY: 455 KC

- NOTES -
1. SPEAKER PLUG REMOVED
 2. VOICE COIL DISCONNECTED.
 3. SWITCH SW2-3 & 4 SHOWN AS VIEWED FROM FRONT OF SET IN P.B.-B.C. POSITION. EXTREME COUNTER CLOCKWISE POSITION IS PHONO. SECOND POSITION CLOCKWISE IS P.B.-B.C. BAND. THIRD POSITION CLOCKWISE IS MANUAL B.C. BAND. FOURTH POSITION CLOCKWISE IS S.W. BAND.

4. DOT-DASH LINE DENOTES ASSEMBLY OF COMPONENT PARTS UNSHIELDED.
5. ALL VOLTAGES MEASURED FROM CHASSIS (GND.) USING 20,000 OHMS/VOLT METER. LINE VOLTAGE 117 V.A.C. MAX. VOLUME CONTROL SETTING AT NO SIGNAL CONDITIONS FOR THE BROADCAST BAND. READINGS SHOULD APPROXIMATE THE VALUES SHOWN WITHIN 20 PERCENT.

*R1-C31 in some later models were wired across R14 for tone control action.

H-104 **H-105** **H-107** **H-108**
MAHOGANY WALNUT MAHOGANY WALNUT