


# ZENITH RADIO CORPORATION

# MODELS C520B,V,W

# CHASSIS 5C09

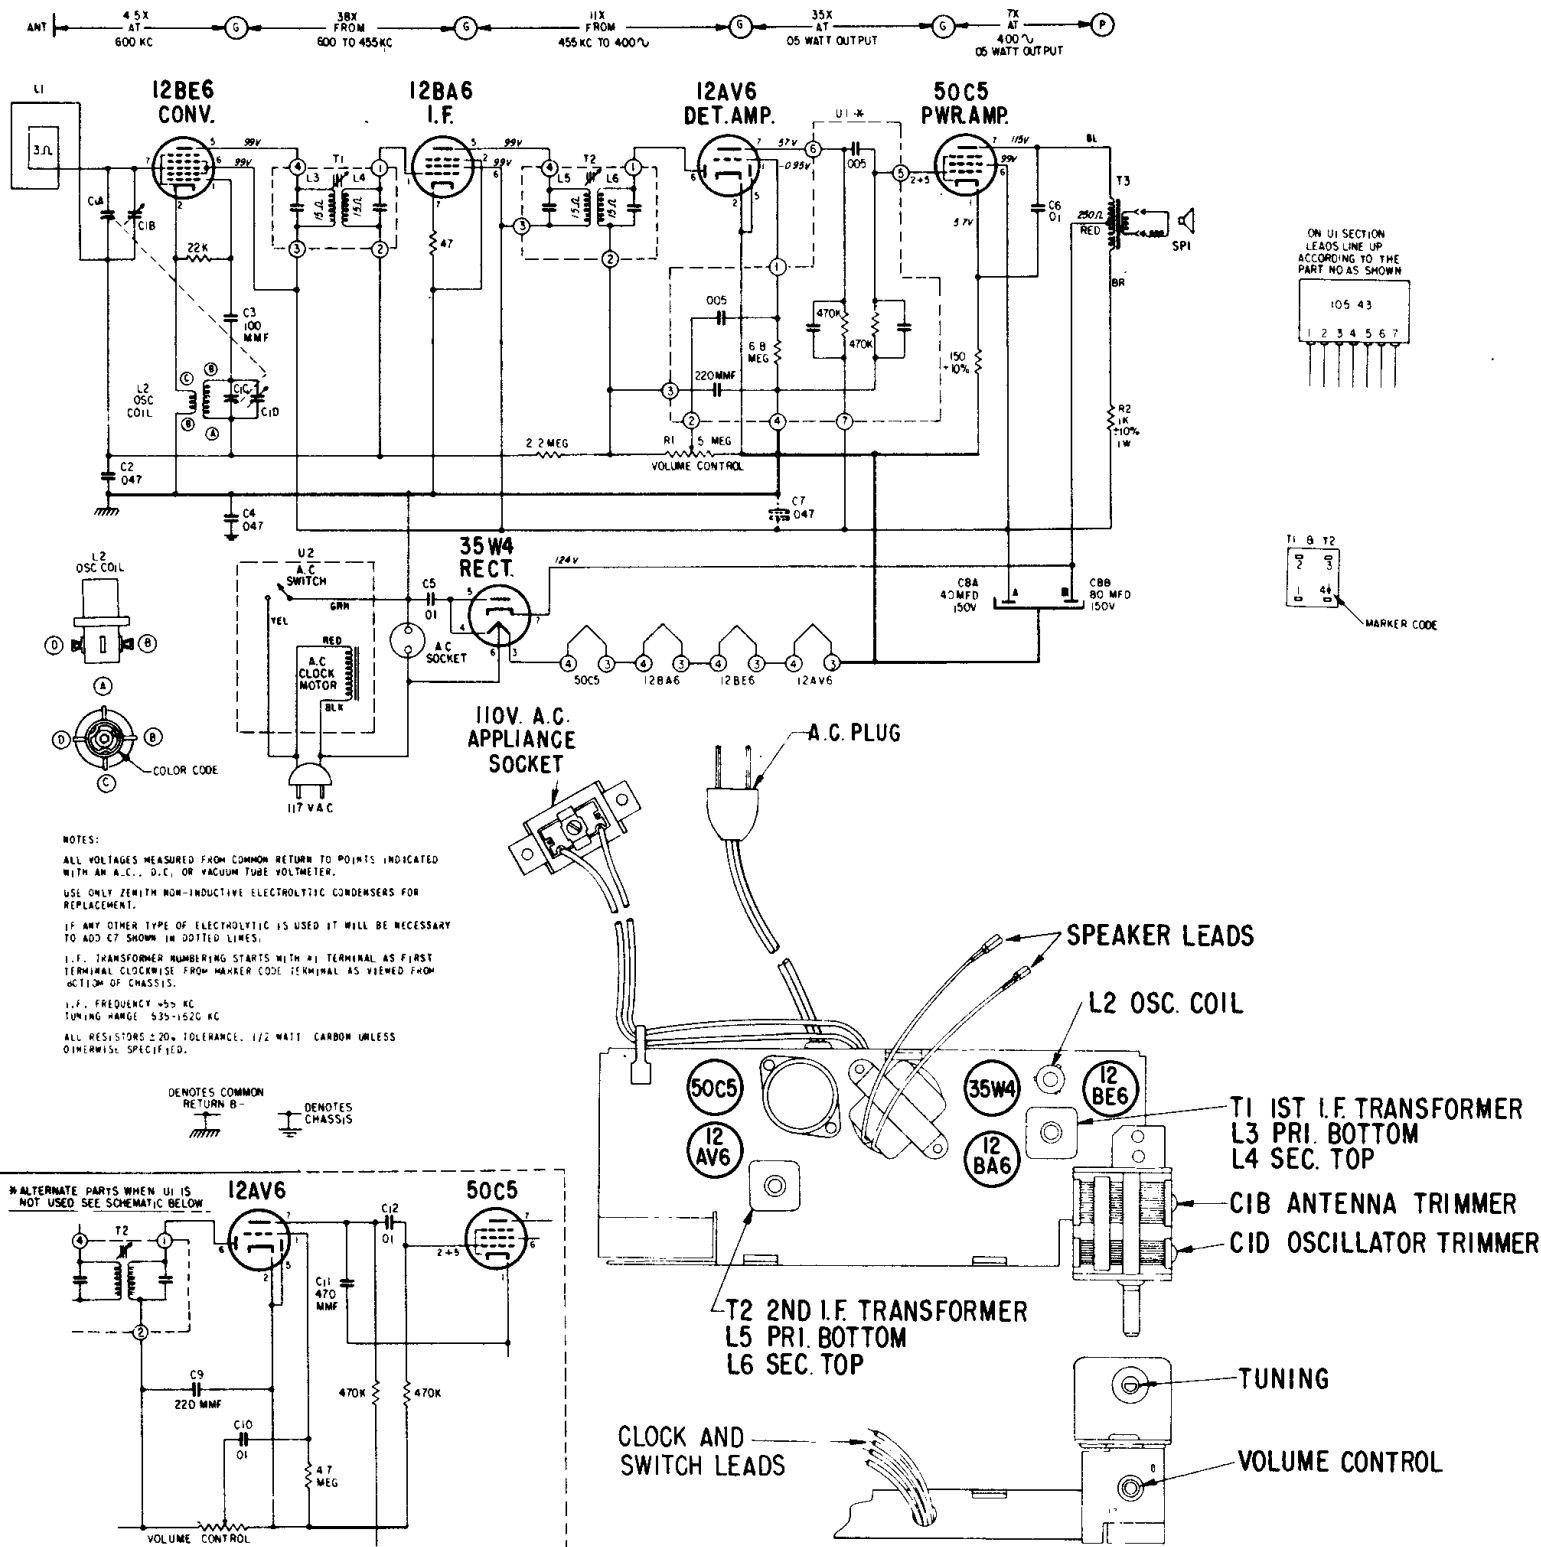

## TUBE AND TRIMMER LAYOUT

## ALIGNMENT PROCEDURE

Operation	Connect Oscillator To	Dummy Antenna	Input Sig. Frequency	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc.	L3,L4,L5, L6	For I.F. Align-ment.
2	One Turn Loop Coup- led Loosely to Wave Magnet	—	1600 Kc.	1600 Kc.	C1D	Set Oscillator to Dial Scale
3		—	1400 Kc.	1400 Kc.	C1B	Align Antenna Stage