
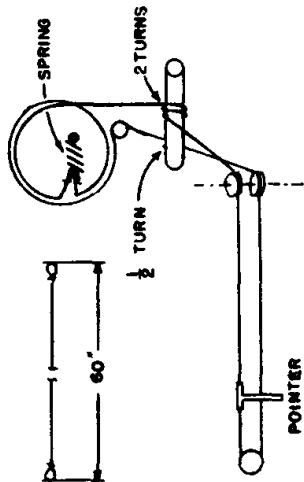


# Westinghouse CHASSIS ASSEMBLY V-2229-1

Also Chassis V-2229-2 and V-2229-3,

Models H-457T6, H-458T6, H-459T6, H-460T6,  
H-465R6, H-466R6, H-467R6, H-468R6.

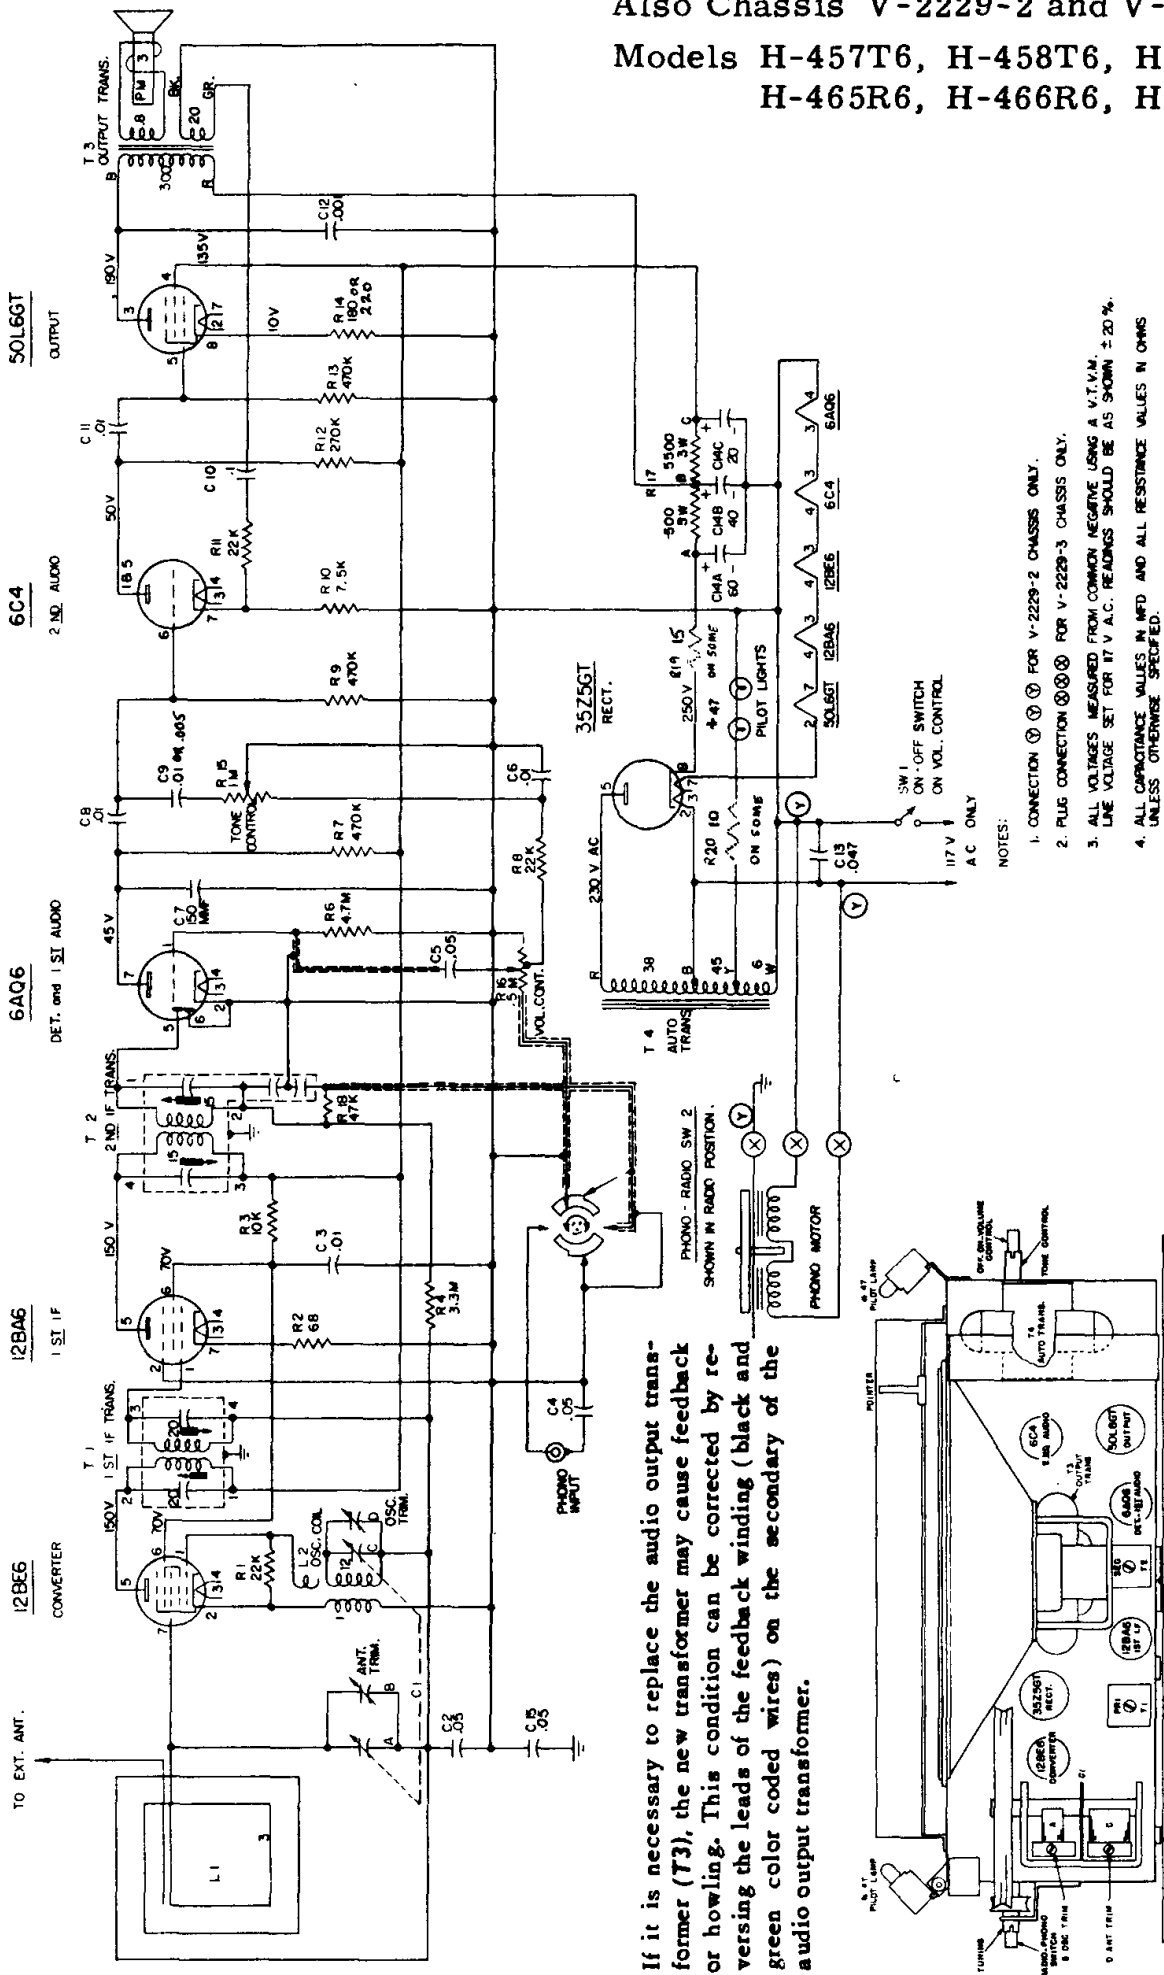

Step	Connect Signal Generator to ~	Signal Generator Frequency	Tuning Capacitor	Adjust for Maximum output
1	Stator of Ant. Tuning Capacitor (A) through A 200 mmf. capacitor	455 KC	Minimum Capacity	Top and Bottom Slugs of T2 and T1 in given order*
2	Same as step 1	1,625 KC	Minimum Capacity	Oscillator Trimmer (D)
3	Radiated Signal	1,400 KC	1,400 KC	Antenna Trimmer (B)

\* It is recommended that a fiber aligning tool that snugly fits in the powdered iron core be used to prevent chipping of the slot.