


IR5 CONVERTER

IN5GT I.F.

IH5GT DET.-AMP

IC5GT PWR. AMP.

SPEAKER

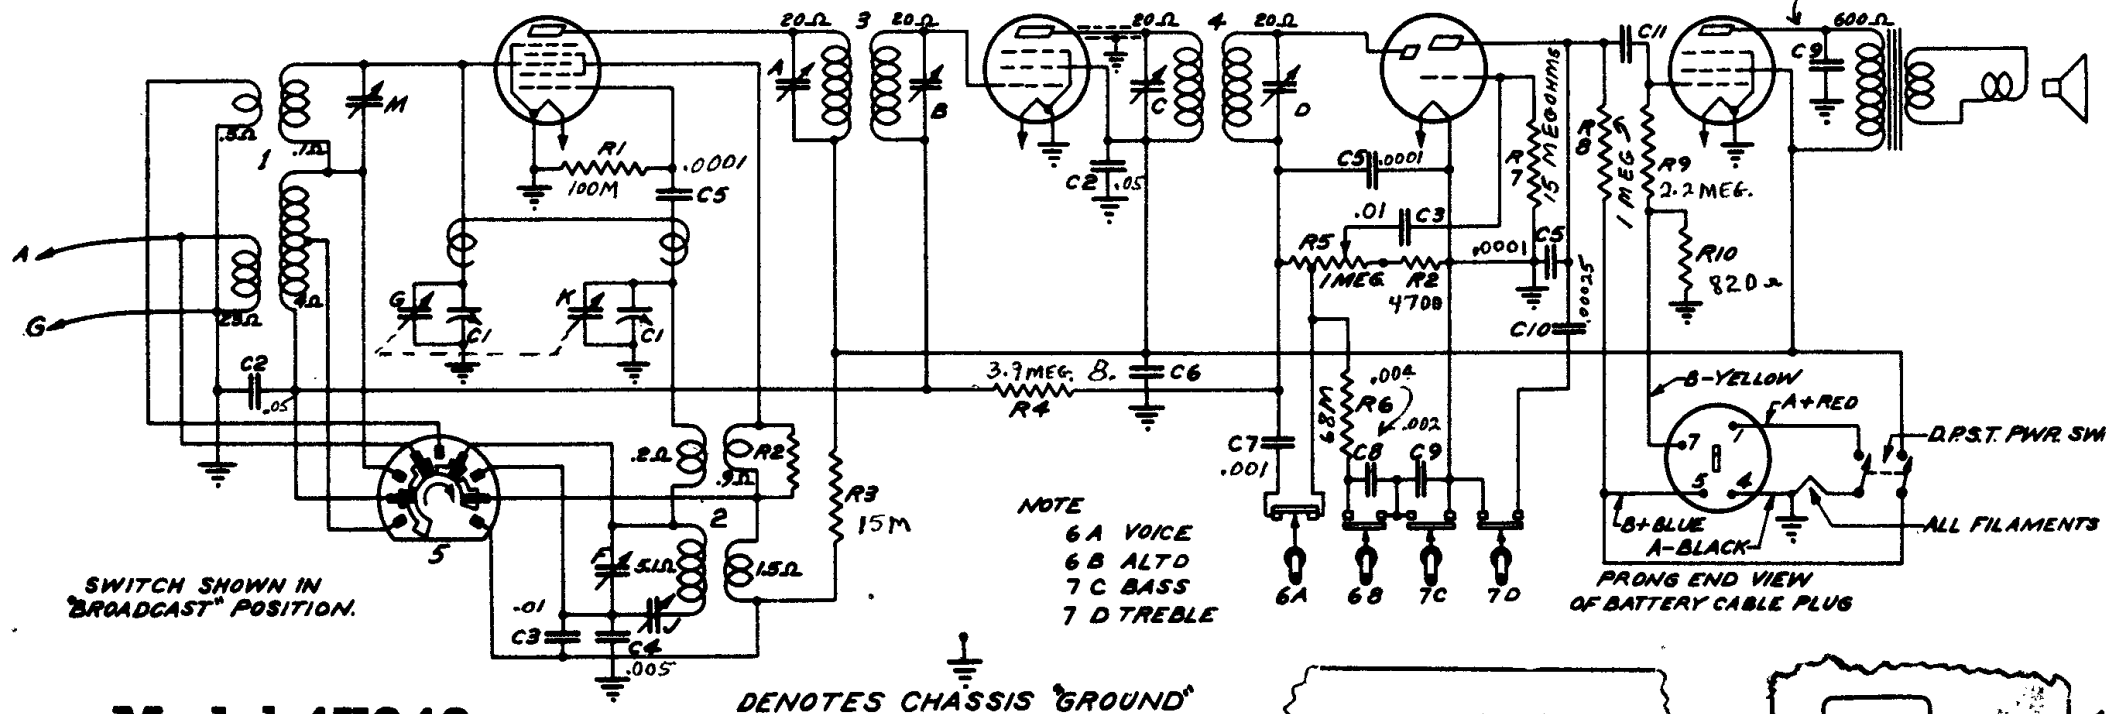

Model 4K640

Chassis No. 4B05

Zenith Radio

ALIGNMENT PROCEDURE

Operation	Conn. Test Osc. to	Dummy Ant.	Input Sig. Freq.	Band	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mfd.	455 Kc.	Broadcast	600 Kc.	A B C D	Align I. F.
2	Ant.—Gnd.	400 Ohms	18 Mc.	Short Wave	18 Mc.	K	Set. Osc. to Scale
3	Ant.—Gnd.	200 Mmf.	1600 Kc.	Broadcast	1600 Kc.	F	Set Osc. to Scale
4	Ant.—Gnd.	200 Mmf.	1400 Kc.	Broadcast	1400 Kc.	G	Align Ant.
5	Ant.—Gnd.	200 Mmf.	600 Kc.	Broadcast	600 Kc.	J	Rock Gang & Adj. to Max.
6	Ant.—Gnd.	400 Ohms	18 Mc.	Short Wave	18 Mc.	M	Rock Gang

