

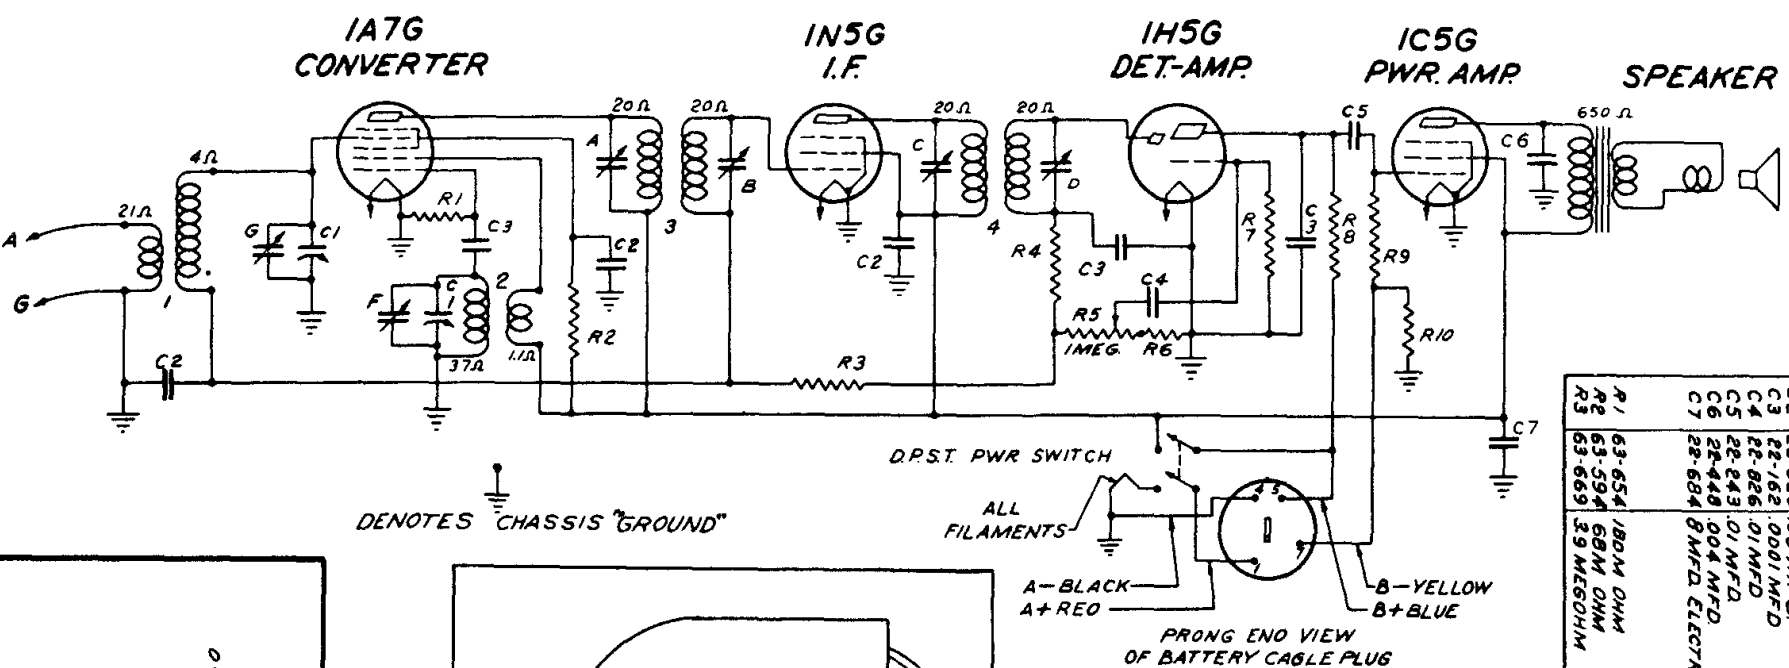


DIAG. No.	PART No.	DESCRIPTION	P.O.S. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION
C1	22-695	TWO GANG VARIABLE	R4	63-593	47M OHM	4	95-590	2ND I.F. TRANS. ASSEM
C2	22-829	0.5 MFD	R5	63-1072	VOLUME CONTROL			
C3	22-162	0.001 MFD	R6	63-587	4700 OHM			
C4	22-826	0.1 MFD	R7	63-604	10 MEG OHM			
C5	22-243	0.1 MFD	R8	63-271	1 MEG OHM	A		1ST I.F. TRANS. PRI
C6	22-448	0.04 MFD	R9	63-600	2.2 MEG OHM	G		2ND I.F. TRANS. PRI
C7	22-684	8 MFD ELECTROLYTIC	R10	63-238	1000 OHM	D		BROADCAST OSC. (ON GANG)
R1	63-654	180M OHM				F		ANT. B. CAST (ON GANG)
R2	63-594	68M OHM						
R3	63-663	3.9 MEG OHM						

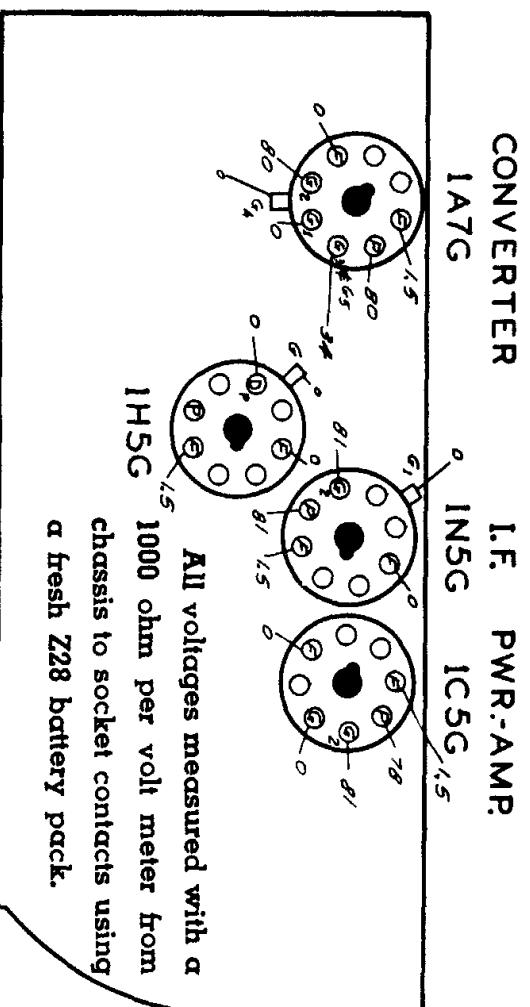

1½V BATTERY PORTABLE
I.F. FREQUENCY 455 KC.
4 TUBE SUPERHETERODYNE
CHASSIS No. 5420
ZENITH RADIO CORPORATION

Models 4K422—4K435—4K465—4K466
 Chassis No. 5420

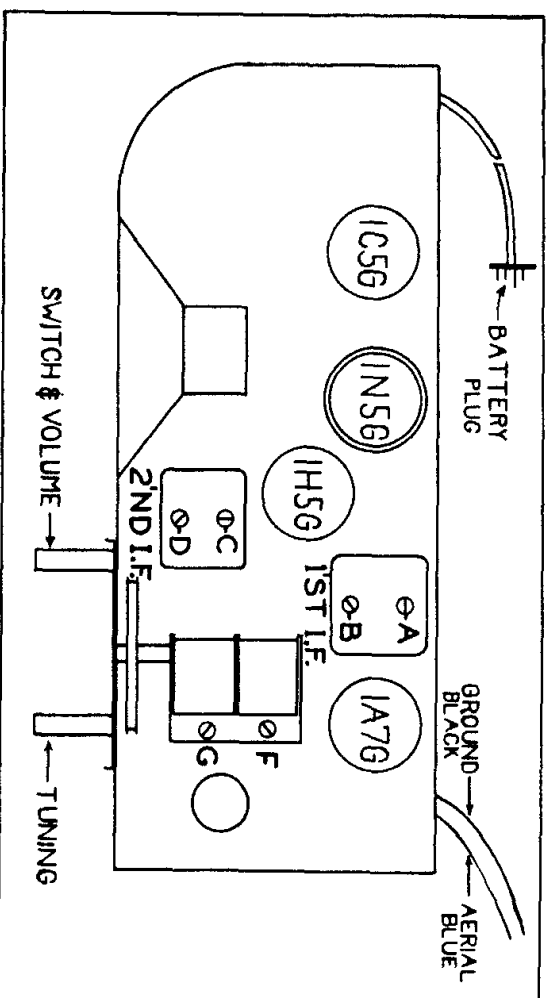

MODEL SPEAKER

4K422 49-286 5"

4K435 49-328 6½"

4K465 49-359 8"

4K466 49-342 10"

FRONT OF CHASSIS