
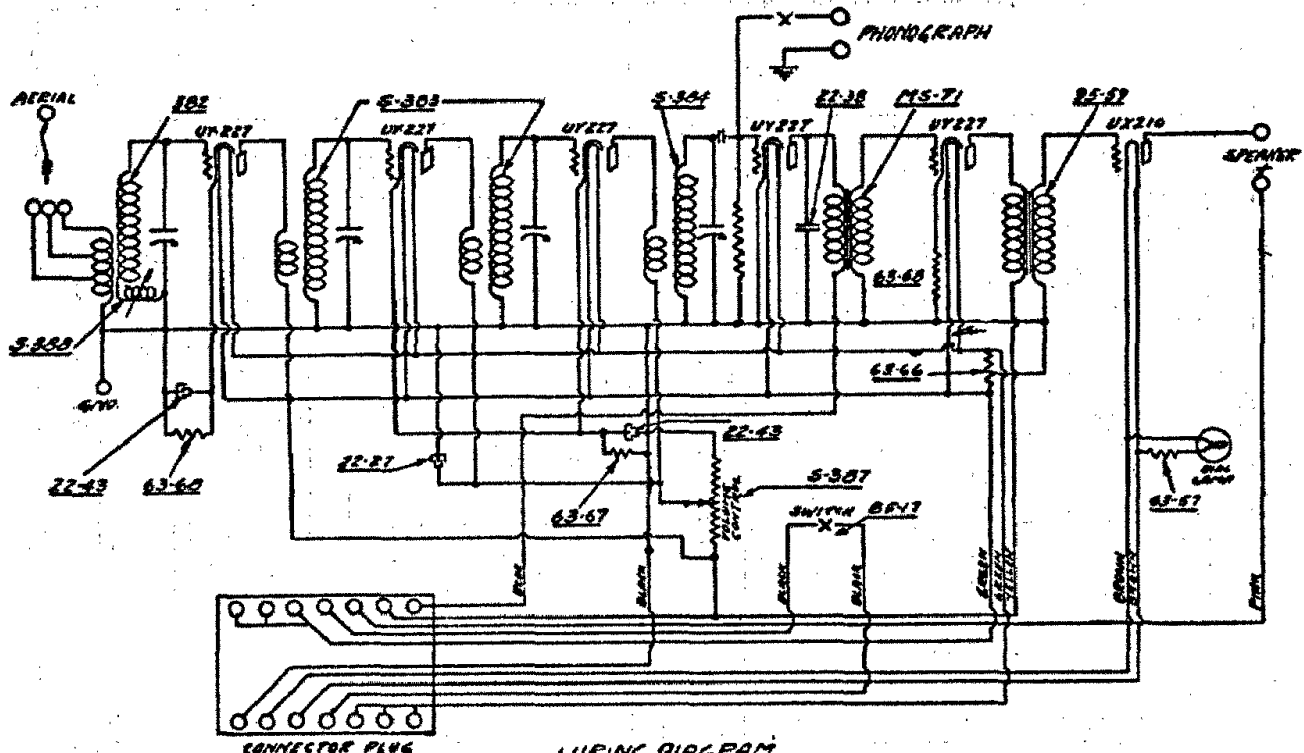
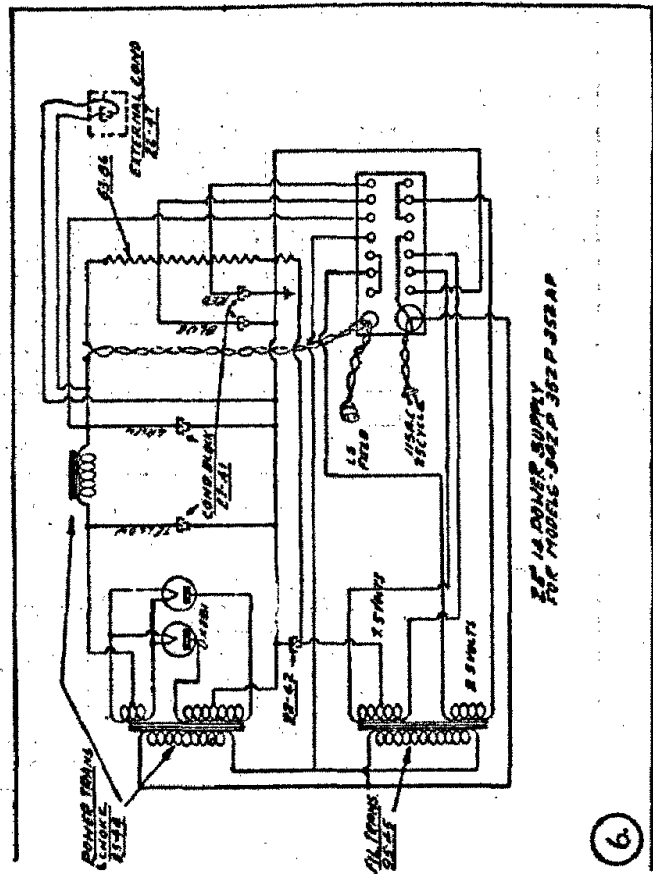


# ZENITH RADIO CORP.


MODEL 34-P, 342-P  
MODEL ZE-11  
MODEL ZE-14

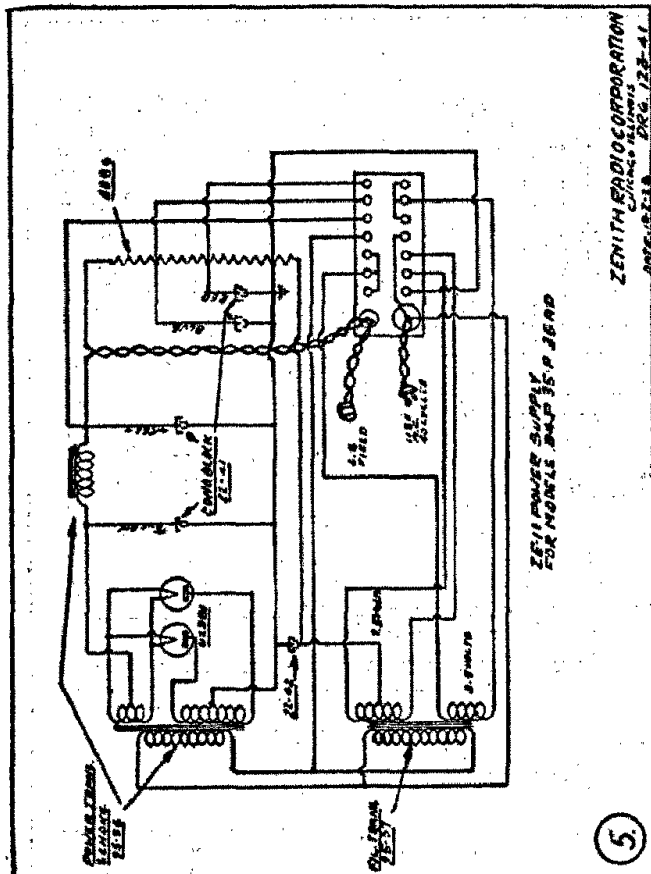

ZENITH—Models 34P-342P  
Line Voltage 115.

Models 341, 342P (1928)

TUBE NO. IN SOCKET	TYPE OF TUBE	POSITION OF TUBE (BY RF DET ETC)	READINGS PLUG & SOCKET OF SET						
			TUNE OUT			TUNE IN TESTER			
			1	2	3	4	5	6	7
227	1st. R.F.		2.05	92	5.5	—	2.7	4	1.3
227	2nd. R.F.		2.05	92	5.0	—	2.5	6.5	3.0
227	3rd. R.F.		2.05	92	5.0	—	3.5	6.5	3.0
227	Detector		2.00	40	0.0	—	2.2	2.2	0.0
227	1st. A.F.		2.05	84	5.0	—	2.4	3.6	1.2
210	2nd. A.F.		7.40	400	34.0	—	25	25	2.0
281	Rectifier		7.25	—	—	—	42	—	—
281	Rectifier		7.25	—	—	—	42	—	—

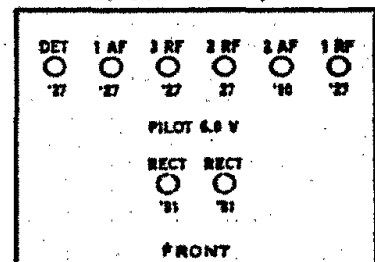

2 CX-381's used in separate power units.