



# ZENITH RADIO CORP

MODEL 41,42  
MODEL 422

Model 41,42

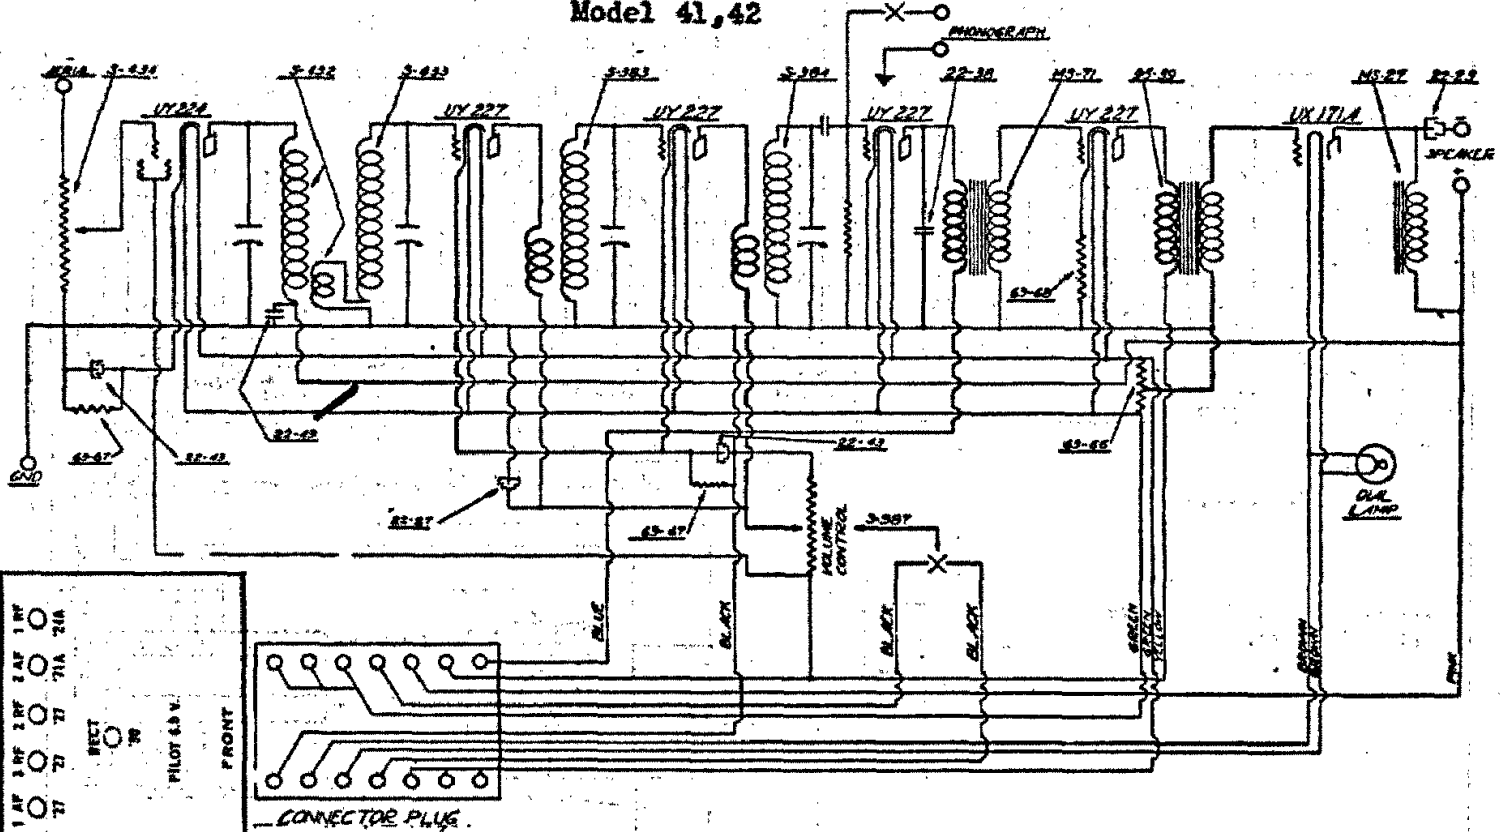

Model 41 (1929)

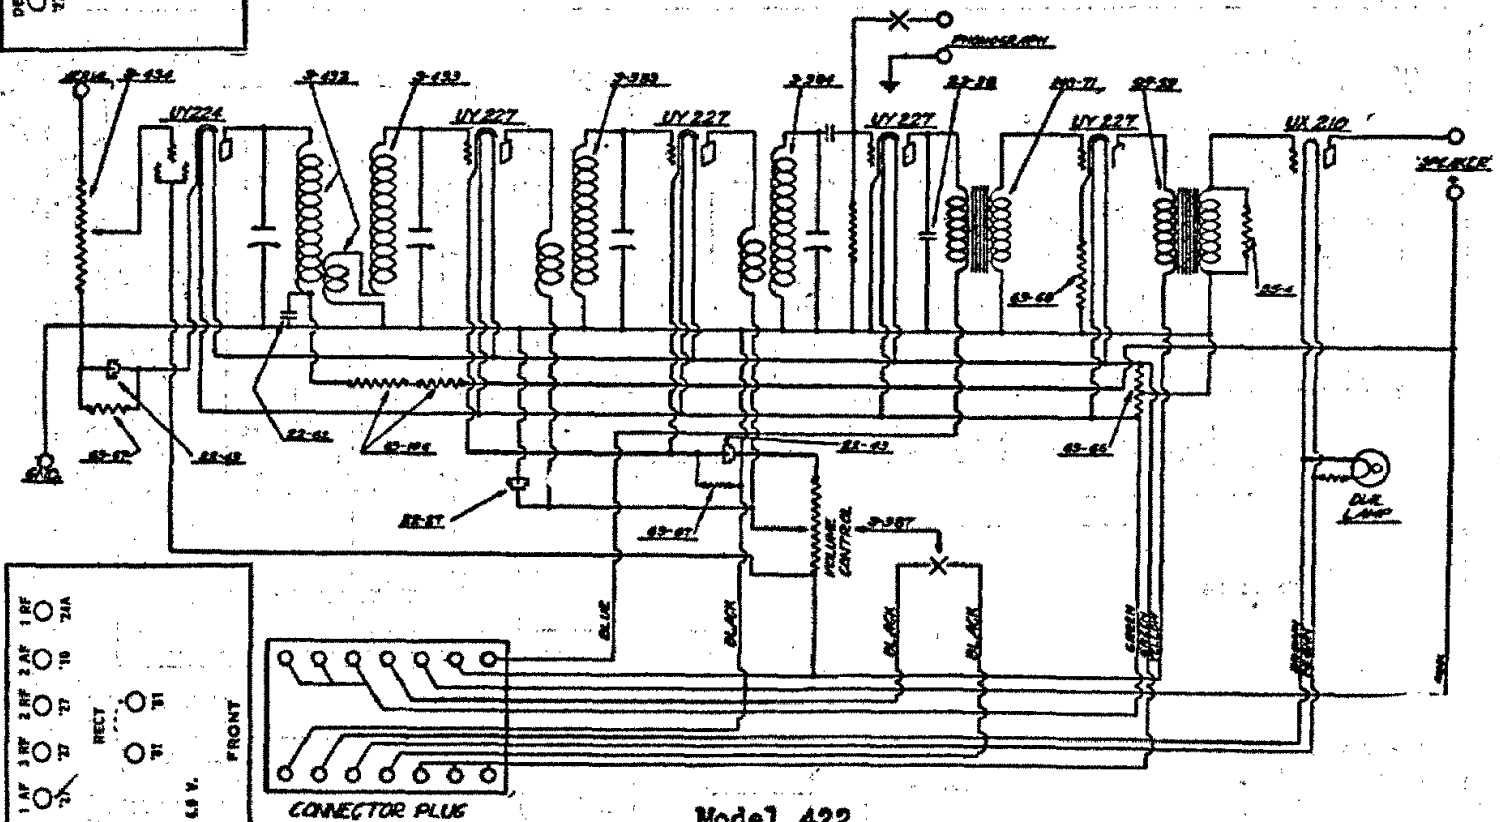

Model 42 (1929)

Model 422

ZENITH—MODEL 42

Type Tube	Position of Tube	"A" Vts.	"B" Vts.	"C" Vts.	Plate MA.	Screen Grid	Cath. Volts
24	1 R. F.	1.90	214	3	3.4	94	+2.2
27	2 R. F.	1.90	80	4	3.5		+4
27	3 R. F.	1.90	85	4	3.5		+4
27	Det.	1.00	35		2.2		
27	1 Aud.	1.00	78	4	2.5		+4
10	2 Aud.	6.9	420	31	20		
81	Rect.	6.9			45		
81					45		

LV—115. Volume Control Max.

ZENITH—MODEL 41

Type Tube	Position of Tube	"A" Vts.	"B" Vts.	"C" Vts.	Plate MA.	Screen Grid	Cath. Volts
24	1 R. F.	1.95	200	2	3	98	+2
27	2 R. F.	2	95	4.5	4		+4.5
27	3 R. F.	2	95	4.5	4		+4.5
27	Det.	1.95	38		2.1		
27	1 Aud.	2	89	4.5	3		+4.5
71A	2 Aud.	4.3	145	29	14.5		
80	Rect.	4.1			17.8		

LV—110. Volume Control Max.