



POSIZIONI COMMUTATORE		CONTATTI																			
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
I	CORTISS	●	●	○	●	●	○	●	○	●	●	●	●	○	○	○	○	○	○	○	○
II	CORTE	●	○	○	●	●	○	●	●	○	●	●	●	○	○	○	○	○	○	○	○
III	MEDIE	○	●	●	●	○	○	●	●	○	○	○	○	○	○	○	○	○	○	○	○
IV	LUNGHE	○	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
V	FONO	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

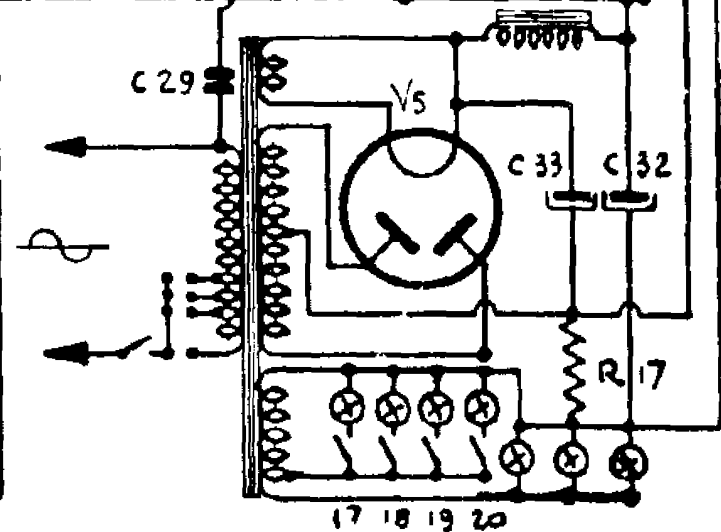

WATT RADIO. — Mod. « Sabaudo II° » e « Augusto ». — Media frequenza: 465 kHz.

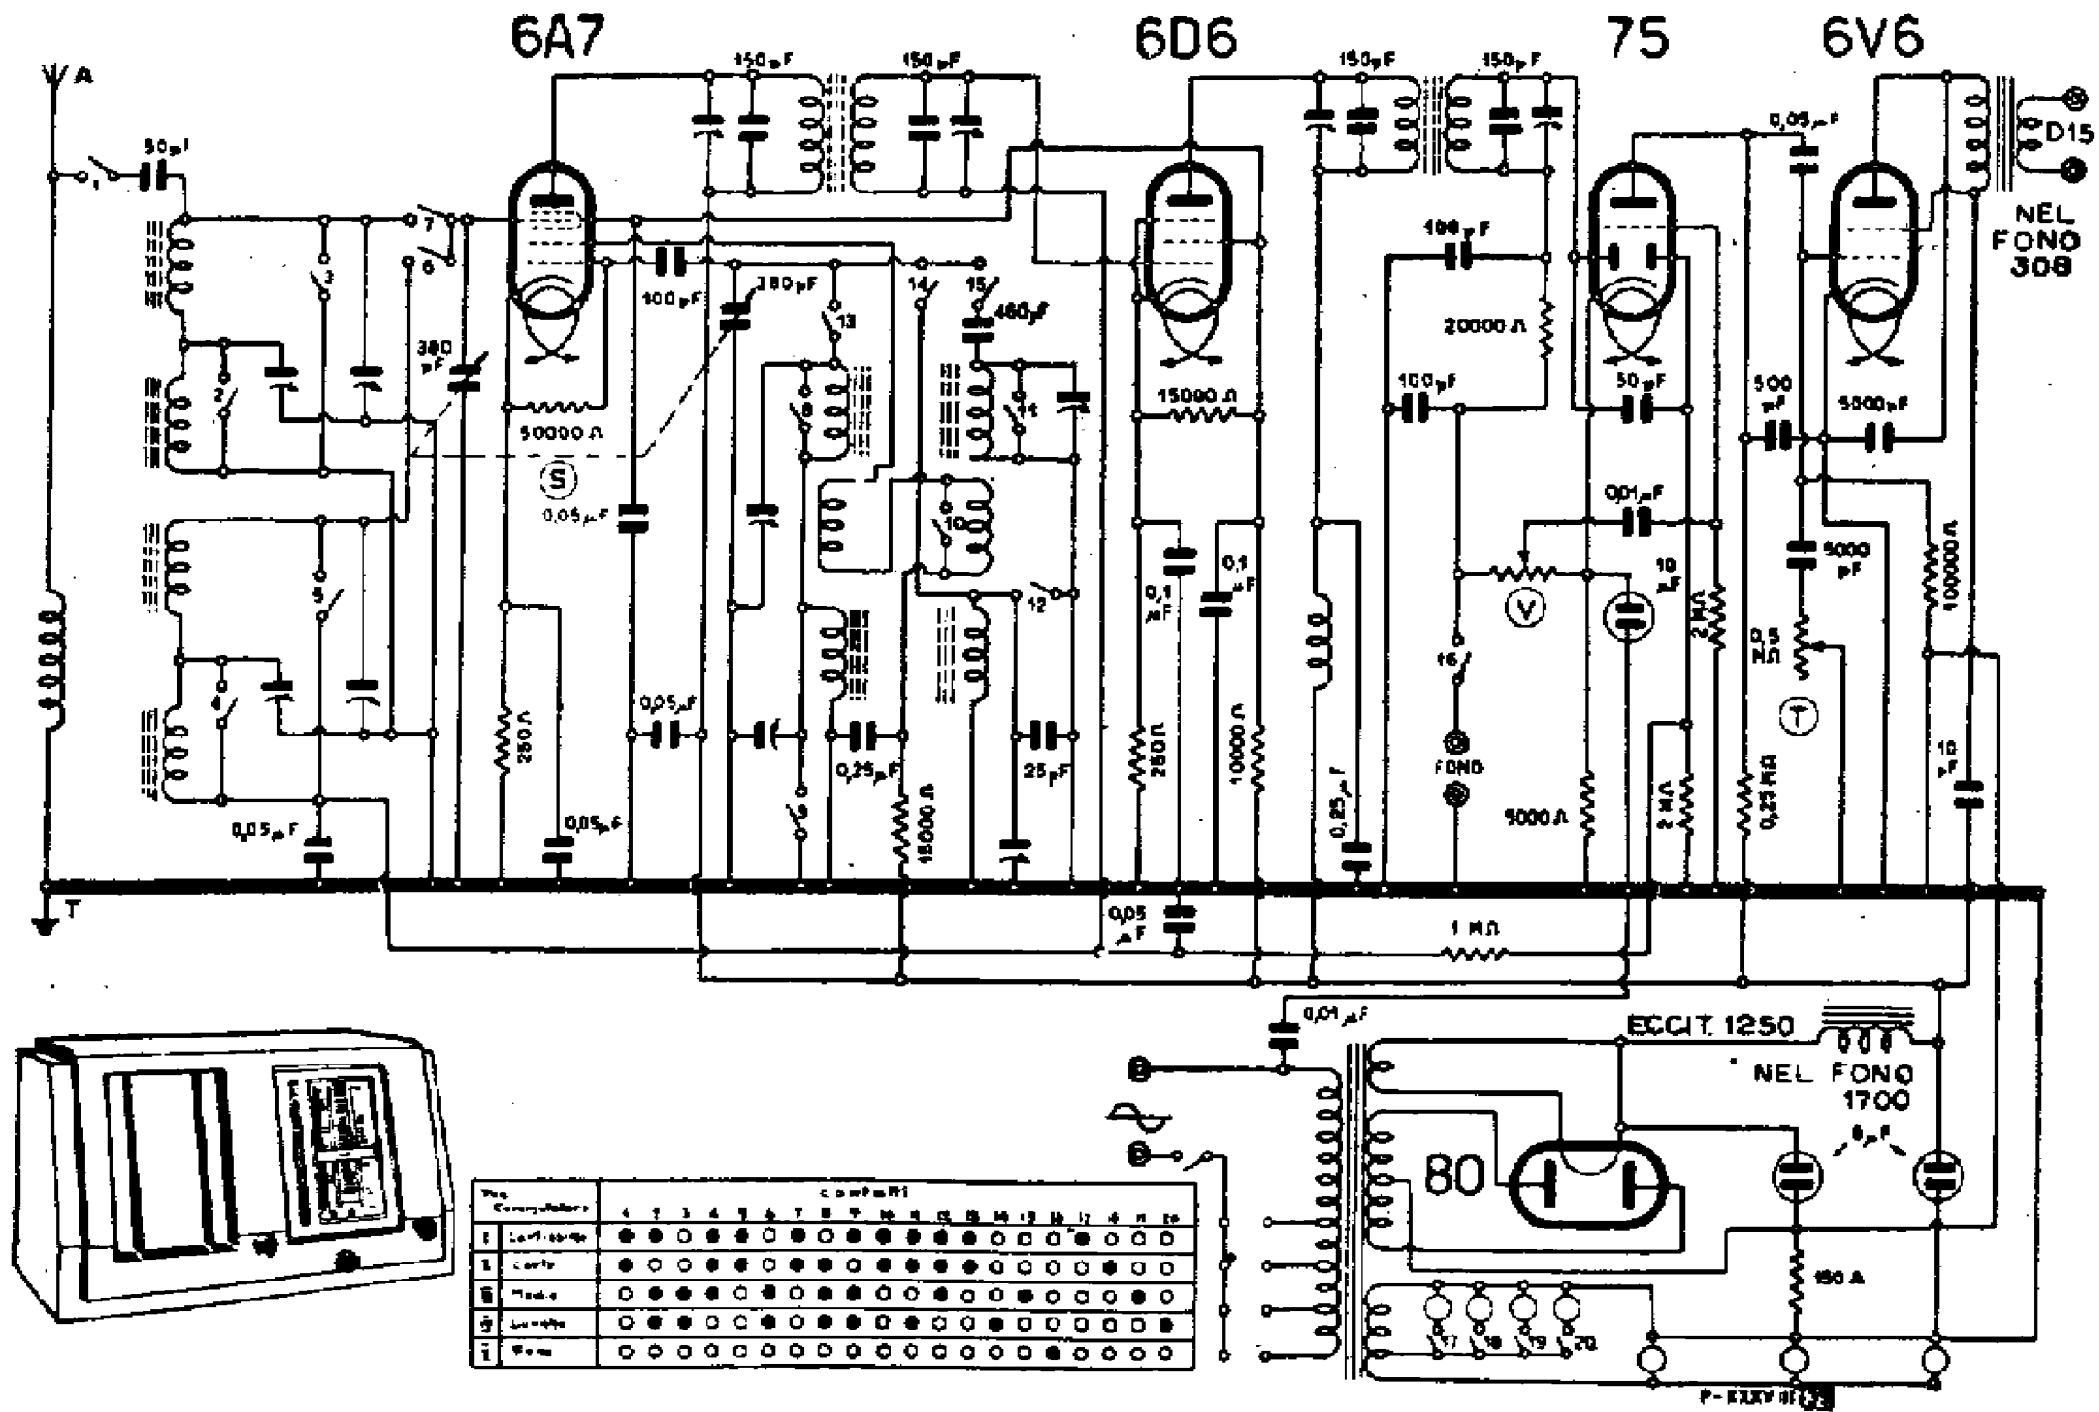

WATT RADIO - MOD « AUGUSTO »

# WATT RADIO

## Mod. Sabaudo II<sup>o</sup> e Augusto

Valvola	Placca	Schermo	G. O.	Catodo
6A7	225	105	160	3,3
6D6	220	105	—	4,1
75	138	—	—	1,5
6V6	220	225	—	11,8
80	2 × 380	—	—	—

Campo: 1250 ohm.

Media frequenza: 465 kHz.

Taratura: a 1400 kHz regolare vite in basso a sinistra sotto scala parlante. Nessuna altra vite di taratura va toccata.