


Service
Service
Service

Service Manual





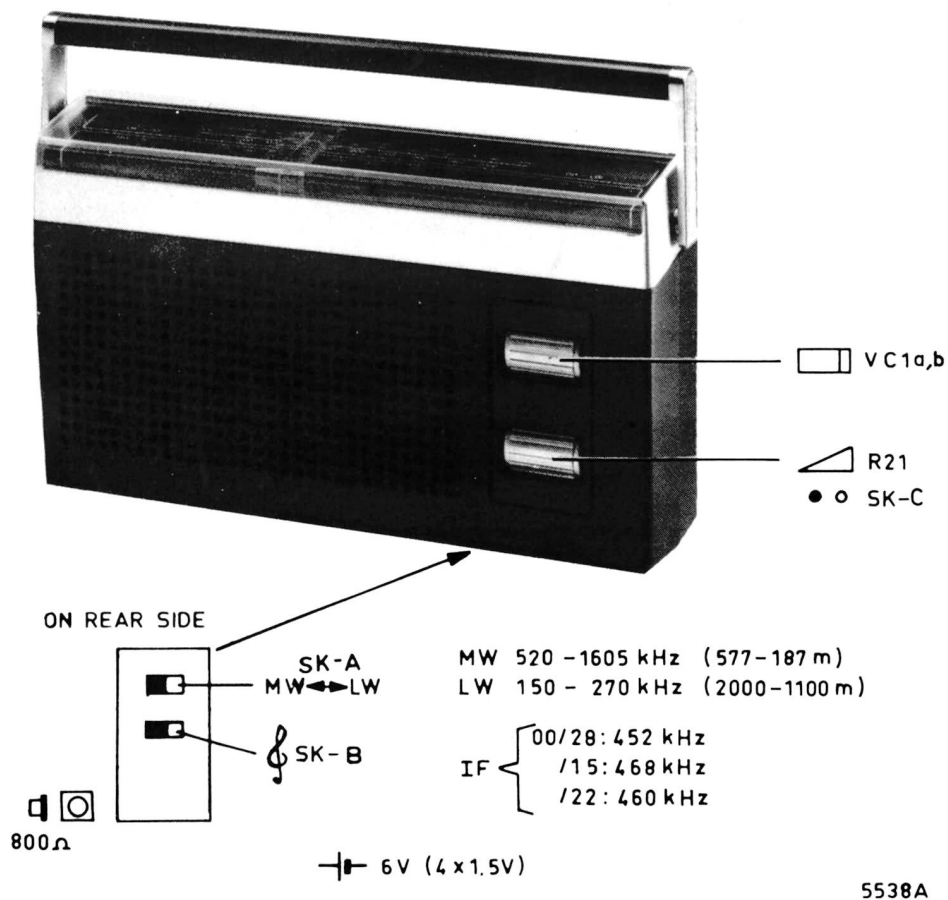




CS51600


Documentation Technique Service Dokumentation Documentazione di Servizio Huolto-Ohje Manual de Servicio Manual de Servicio



Subject to modification
4822 725 11372
Printed in The Netherlands



PHILIPS

Wave range SK...	 Signal to		Tuning	 Detune	 Adjust	 Indication
MW (520-1605 kHz)	<div>1</div> via 39 nF	<div>A</div>	Min. Cap.	S4,S5,S6	S4,S5,S6	<div>1</div> max.
MW (520-1605 kHz)	512 kHz	<div>B</div>	Max. Cap.		S3	<div>1</div> max.
	1635 kHz		Min. Cap.		CTb	
	600 kHz				S1	
	1400 kHz		Tune in		CTa	
LW (150-255 kHz)	147 kHz	<div>B</div>	Max. Cap.		C5	<div>1</div> max.
					S2	
Repeat - Herhalen - Répéter - Wiederholen - Repitanse						
<div>1</div> Align. AM IF for -/00/28 = 452 kHz -/15: = 468 kHz -/22: = 460 kHz						




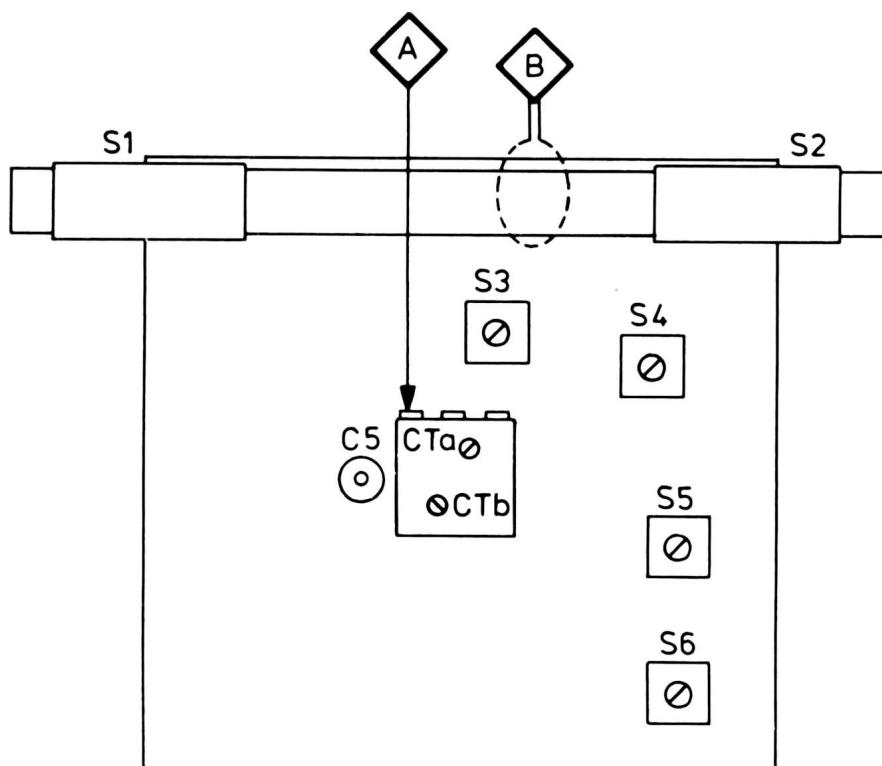



5271A

MISC.	SK-A,B		TS5,6		D3		Vc1a		CTa		TS1		CTb		S3		TS7,4		Vc1b		D1		S4÷6		TS2,3		D2	
C	19	1	18	17	3	2	5	13	16	4	14	15	9	10	12	20	11	6÷8										
R			16		20	17	19	2	18	14	10	13	15	11	4	12	3	1	5÷9									

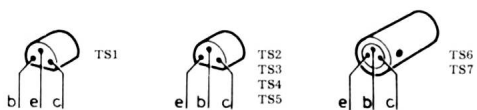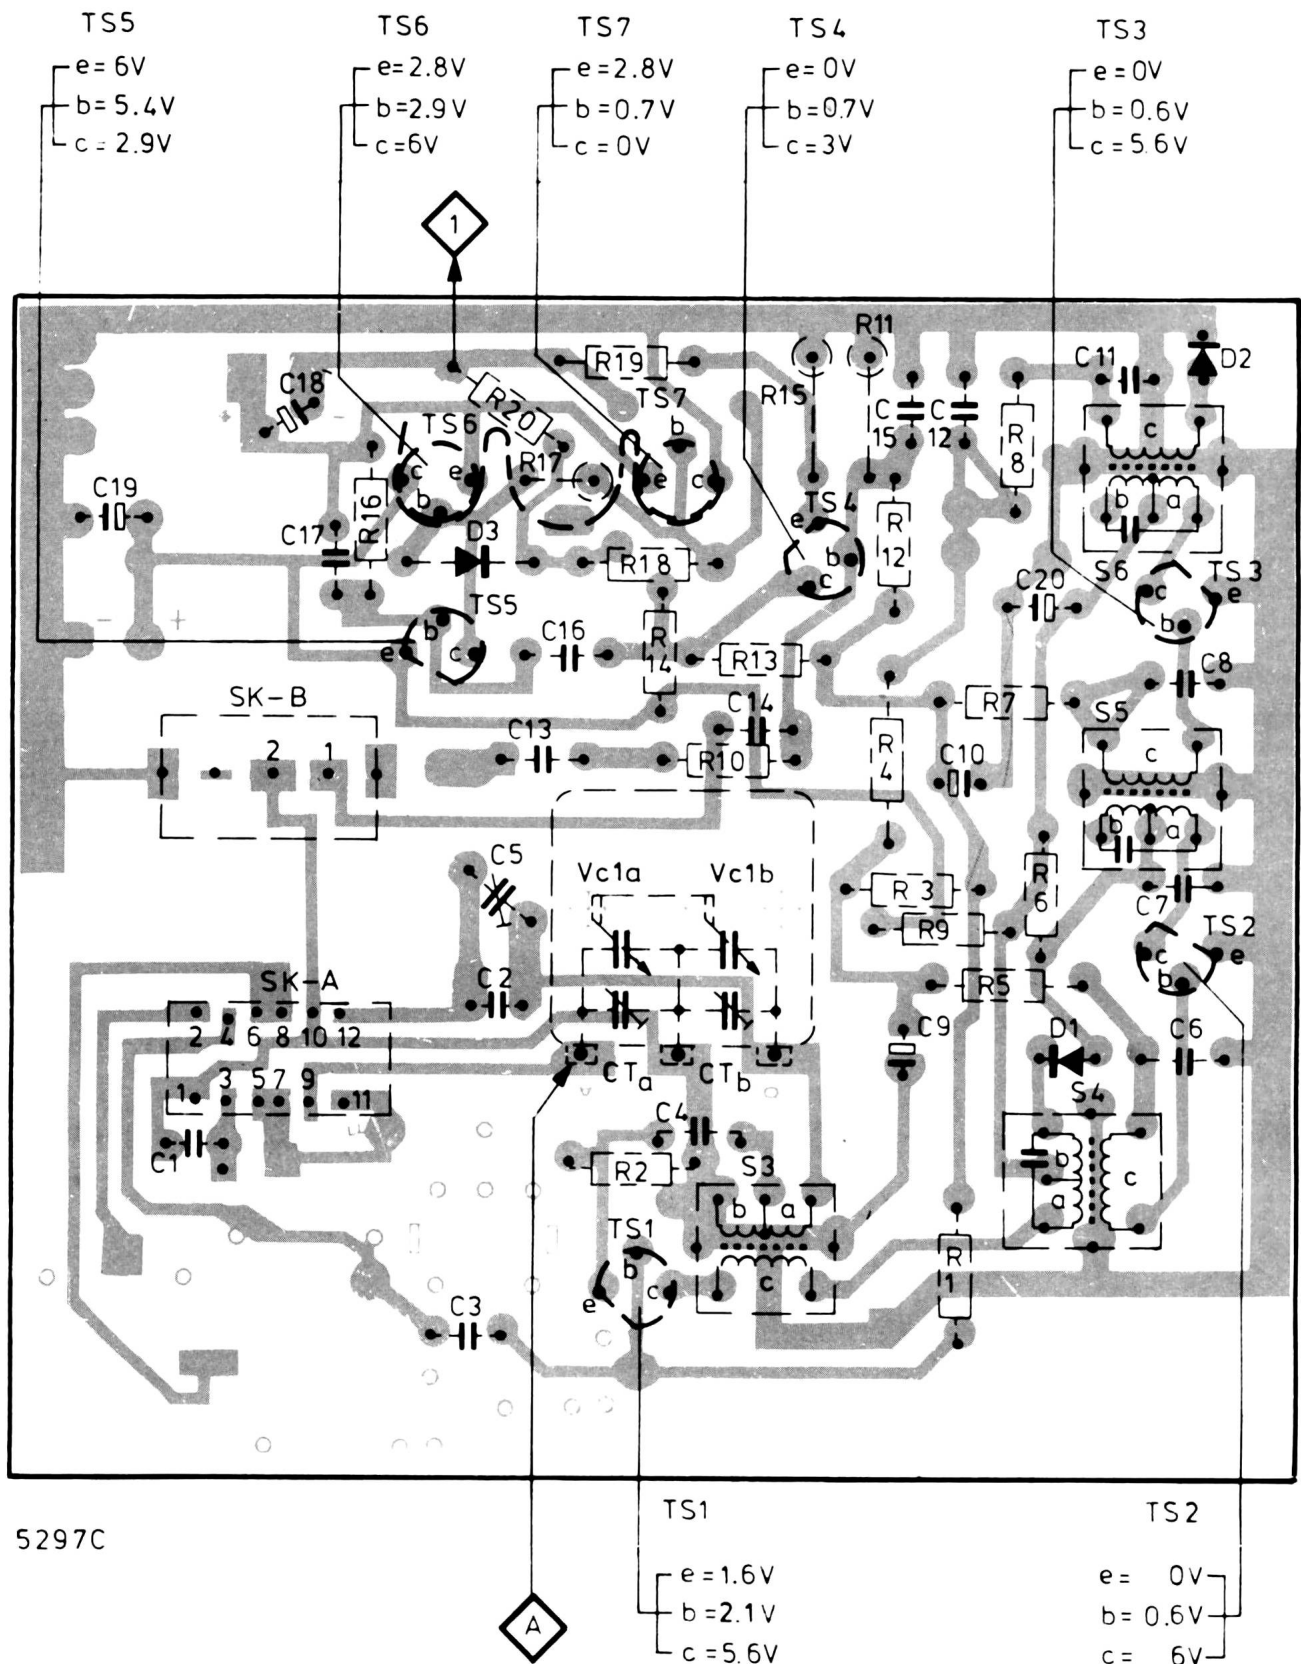

MISC.	SK-A,B	TS5,6 D3	Vc1a CTa TS1	S1 CTb S3	TS7,4Vc1b	D1 S4-6	TS2,3 D2	S2	SK-C	S7
C	19 1	18 17	3 2 5 13 16	4 14	15	9 10 12 20 11	6-8			
R		16	20 17 19	2 18 14 10 13 15	11 4 12 3	1 5-9			21	

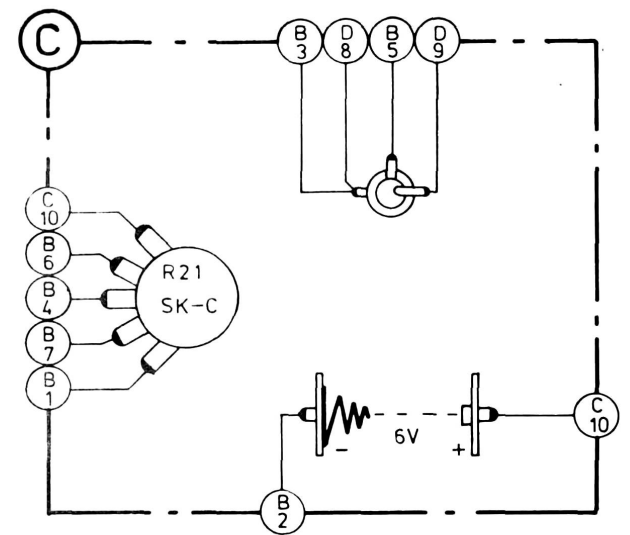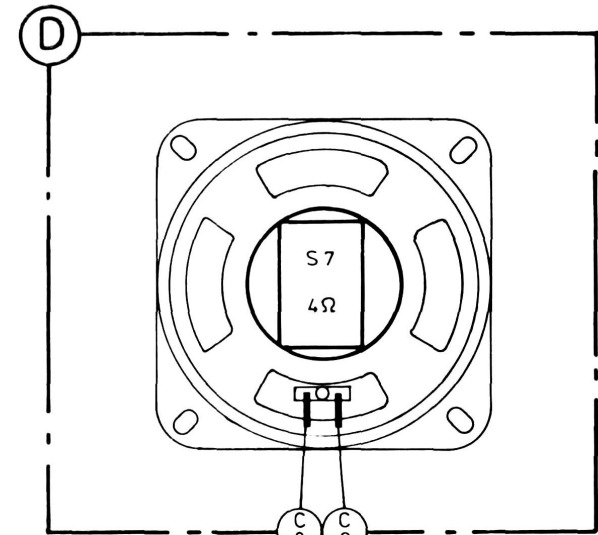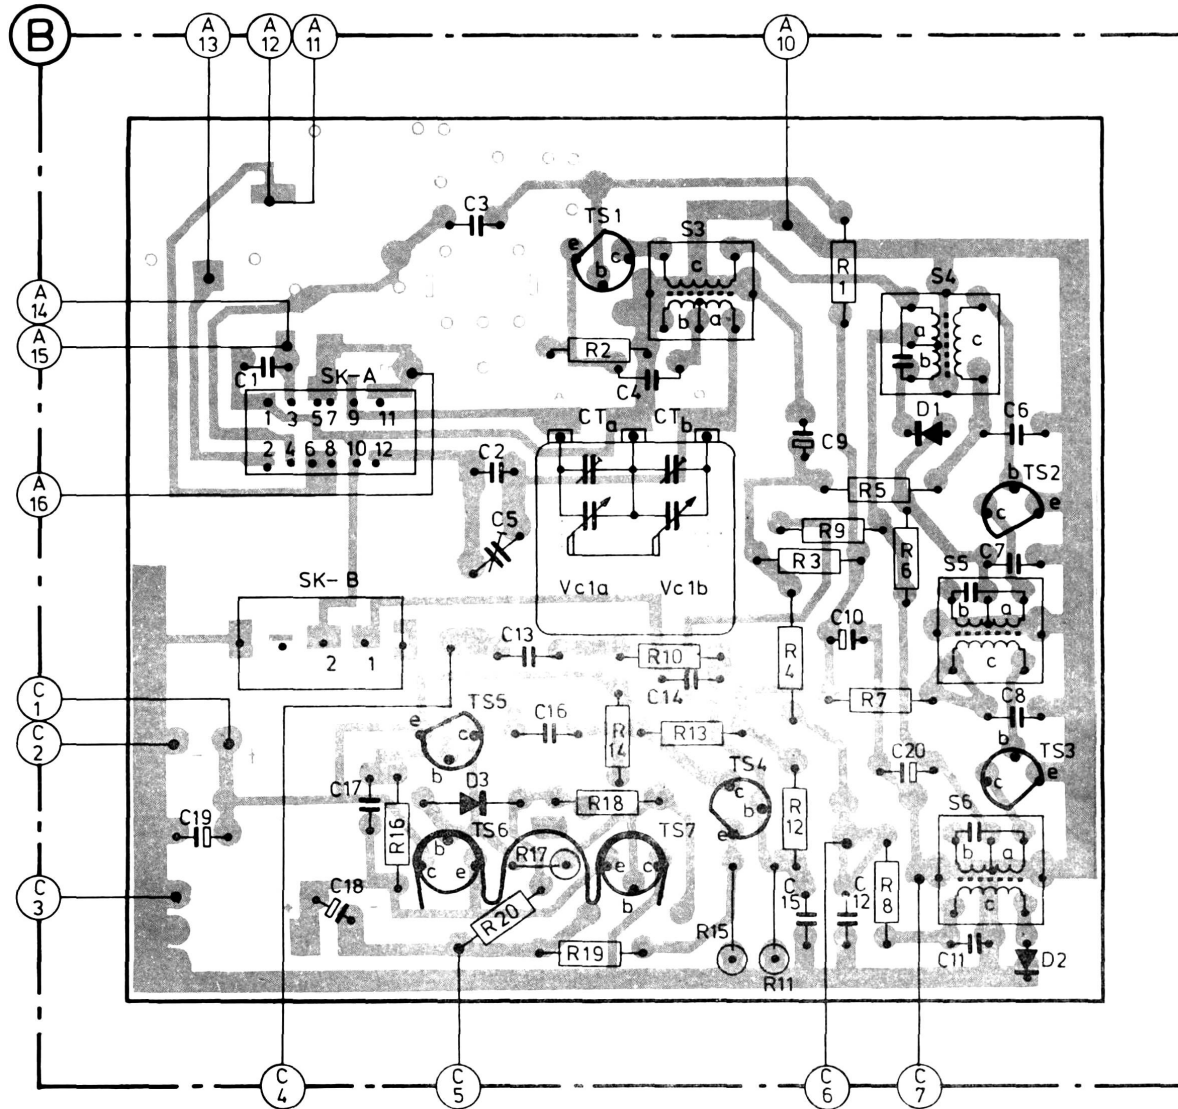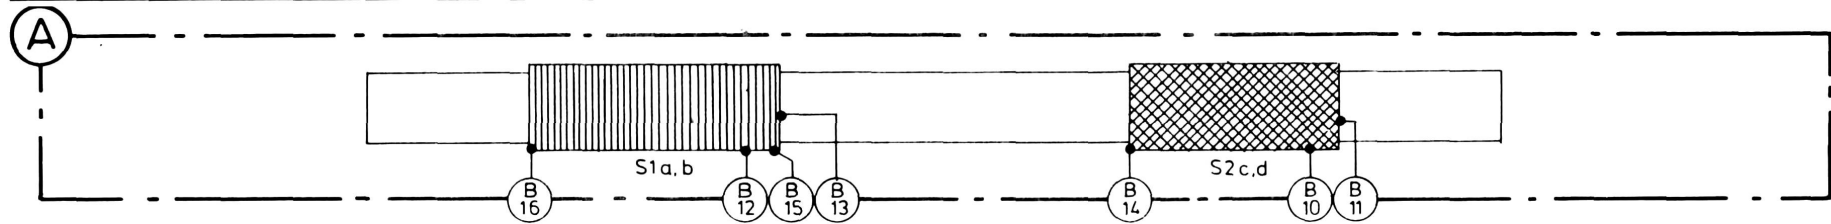


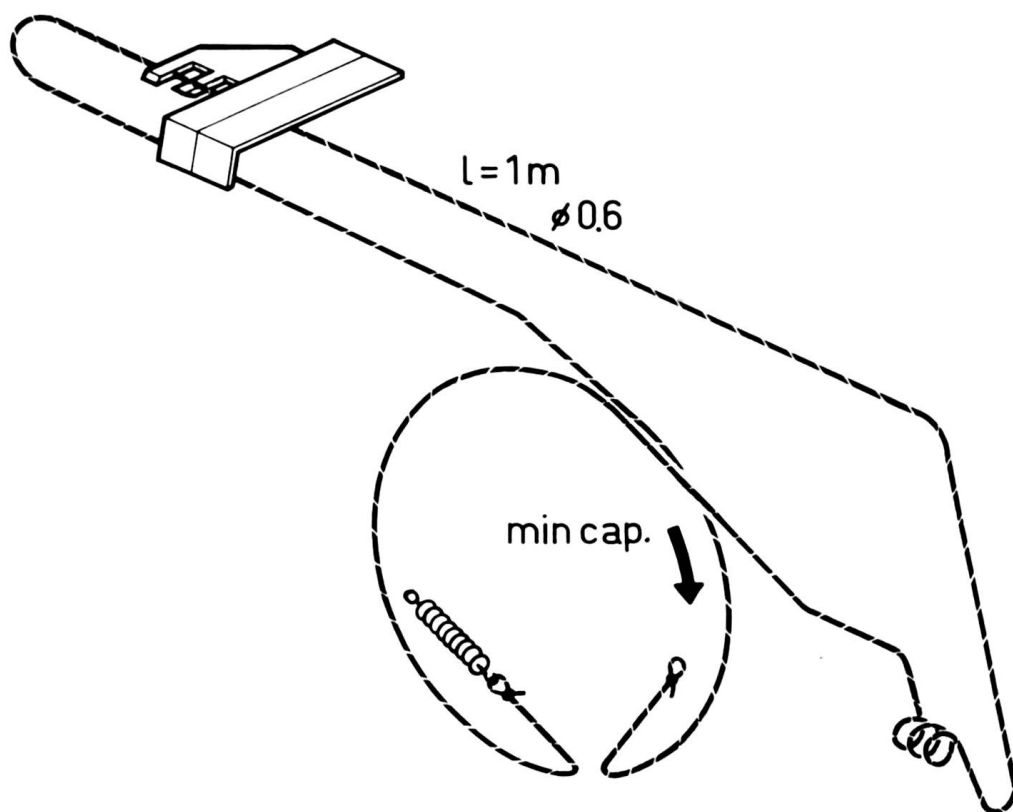

5283A

REMOVE THE CABINET 1...7
(TAKE CARE FOR POINTER DAMAGE)

REMOVE THE PRINT 1,2,8.

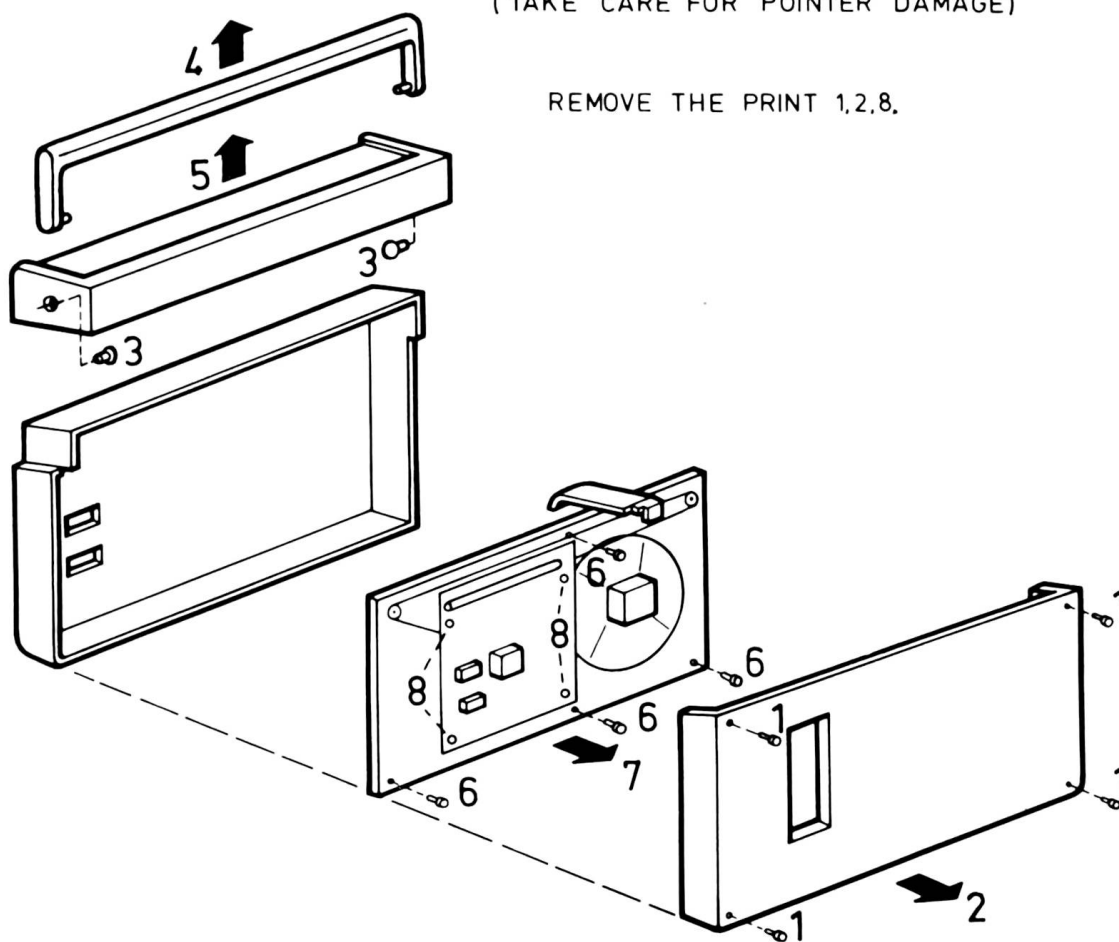

5357B

MISC	S2 S1			TS1		S3	S4 TS2 D1		S5	TS3	S6 D2			TS4		D3 TS5	TS6 TS7	S7							
C	VC1a	1	9	2 3	VC1b	4	a	6 9	7	a	8	a	11	12	13	14	15	16	10	17	20	18	19		
R				1	2			5	3	6	7	4	8		21	10	11	12	15	19	20	16-18	13	14	9

