TX-D1000 HE

SCHEMATIC DIAGRAM

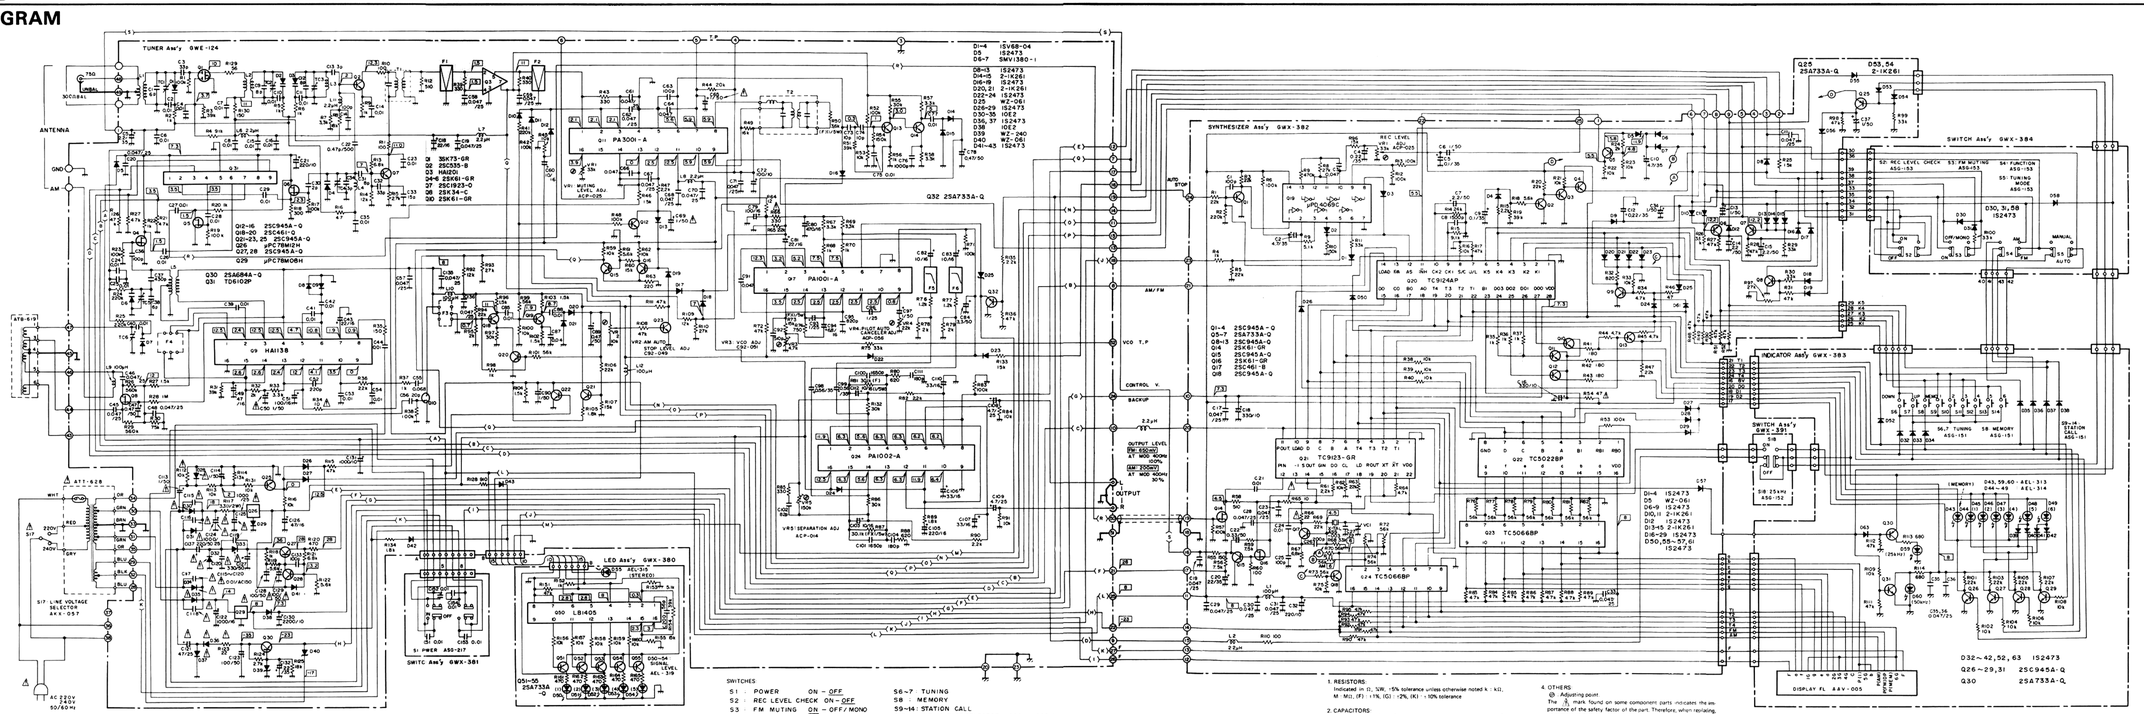

SWITCHES

S1 : POWER	ON – OFF	S6~7 : TUNING	
S2 : REC LEVEL CHECK	ON – OFF	S8 : MEMORY	
S3 : FM MUTING	ON – OFF/MONO	S9~14 : STATION CALL	
S4 : FUNCTION	FM – AM	S17 : LINE VOLTAGE SELECTOR	220V – 240V
S5 : TUNING MODE	AUTO – MANUAL	S18 : 25kHz	ON – OFF

The underlined indicates the switch position.

1. RESISTORS:
Indicated in Ω, 1/4W, ±5% tolerance unless otherwise noted k : kΩ, M : MΩ, (F) : +1%, (G) : ±2%, (K) : ±10% tolerance

2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted p : pF
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE:
DC voltage (V) at no input signal

4. OTHERS
Adjusting point
The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.