


Current Equipment Type

TYPE C17LM
B12A (DUODECAL)
BASE

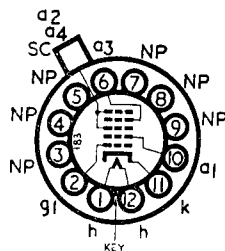

The BRIMAR C17LM is a rectangular 70° deflection angle Teletube with electrostatic focus, an aluminized screen and external conductive coating. The screen colour is white, with a grey glass faceplate with a transmission of approximately 70 per cent.

RATINGS

Heater Voltage	...	...	...	...	6.3 volts
Heater Current	...	...	...	...	0.3 amps.
Final Anode Voltage ($V_{a2} + 4$)	...	...	...	...	18 kilovolts max.
Final Anode Voltage ($V_{a2} + 4$)	...	...	...	...	12 kilovolts min.
Focus Anode Voltage (V_{a3})	...	...	...	...	—500 to 1,000 volts max.
First Anode Voltage (V_{a1})	...	...	...	...	500 volts max.
First Anode Voltage (V_{a1})	...	...	...	...	200 volts min.
Grid Voltage (V_g), Peak	...	...	...	...	2 volts max.
Heater to Cathode Voltage (V_{hk})	Cathode Positive	...	...	...	200 volts max.
Heater to Cathode Voltage (V_{hk})	Cathode Positive *	...	...	...	410 volts max.
Heater to Cathode Voltage (V_{hk})	Cathode Negative	...	...	...	180 volts max.
Diagonal Deflection Angle	...	...	...	...	70° approx.

* During warm-up, for a period not exceeding 15 seconds

OPERATING CHARACTERISTICS

Final Anode Voltage	...	...	...	...	16 kilovolts
Focus Anode Voltage	...	...	...	...	400 volts
First Anode Voltage	...	...	...	...	400 volts
Peak to Peak Modulating Voltage for Beam Current of 150 μ A	...	...	...	...	30 volts
Grid Voltage to cut-off Beam Current	...	...	...	...	—33 to —77 volts

INTER-ELECTRODE CAPACITANCES

Grid to all	...	...	...	...	7 pF approx.
Cathode to all	...	...	...	...	5 pF approx.
Final Anode to External Coating	...	...	...	...	1,500 pF approx.

NOTES:

- No harmful X-ray radiation is produced by the tube when operated at final anode voltage below 16 kV. At voltages above 16 kV some shielding may be necessary to protect against prolonged exposure at close range.
- Shift magnets, when used, should be mounted in such a position that they do not interfere with the passage of the electron beam through the gun. This position is normally immediately behind the scanning coils.

For dimensions, see type C17PM.

