



SUB COLOR ADJUSTMENT

1. Receive the signal of color bar.
2. Set auto switch to off.
3. Connect oscilloscope to base of Q7603.
4. Set brightness and contrast controls to center position.
5. Adjust color level to 125% with VR7907.

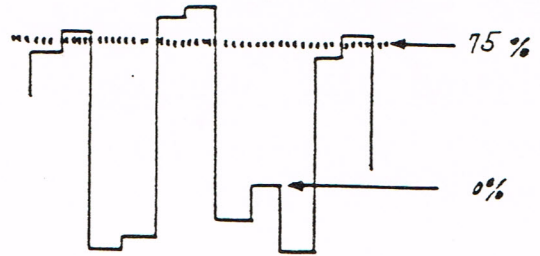


AUTO COLOR ADJUSTMENT

1. Receive the signal of color bar.
2. Set auto switch to on position.
3. Connect oscilloscope to base of Q7603.
4. Set brightness and contrast controls to center position.
5. Adjust color level to 75% with VR7908.

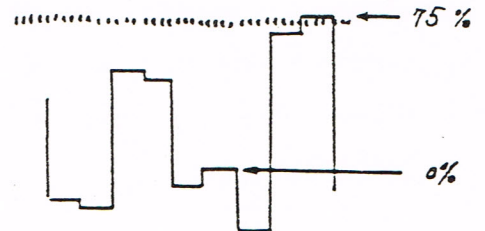

SUB BRIGHT ADJUSTMENT

1. Receive the signal of test pattern.
2. Set contrast control to maximum position and brightness control to minimum position.
3. Adjust 75% of gray scale to black with VR7904.

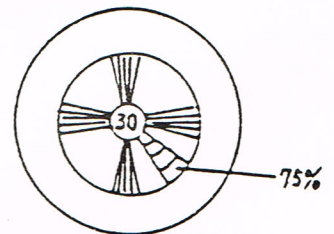

SUB CONTRAST ADJUSTMENT

1. Receive the signal of test pattern.
2. Set contrast and brightness controls to maximum position.
3. Adjust 25% of gray scale to black with VR7909.

