


DENON

Hi-Fi Integrated Stereo Amplifier

SERVICE MANUAL


MODEL PMA-915R/715R MODEL PMA-915RG/715RG

INTEGRATED STEREO AMPLIFIER

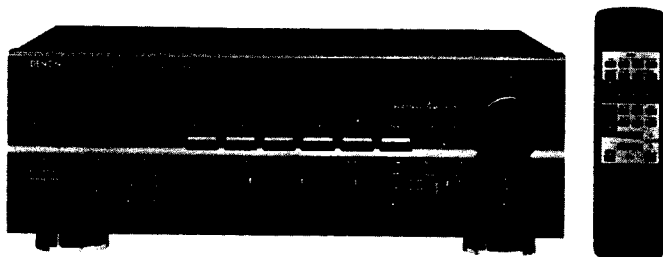

PMA-915R

The photograph shows the PMA-915R.
The PMA-915RG (gold) comes with a side cabinet.

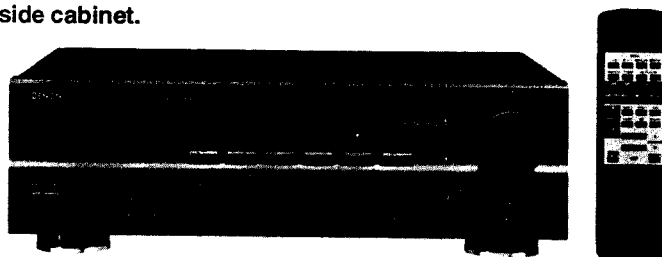

PMA-715R

The photograph shows the PMA-715R.
The PMA-715RG (gold) comes with a side cabinet.

CONTENTS

OPERATING INSTRUCTIONS	2-7
REMOVAL OF EACH SECTION	8, 9
FUNCTION OF NEW CIRCUIT	10, 11
METHOD OF ADJUSTMENTS	12
BLOCK AND LEVEL DIAGRAM	13
SEMICONDUCTORS	14, 15
PRINTED WIRING BOARD (PMA-915R/915RG)	16, 17
PRINTED WIRING BOARD (PMA-715R/715RG)	18, 19
PRINTED WIRING BOARD PARTS LIST	20 ~ 25
WIRING DIAGRAM	26, 27
EXPLODED VIEW OF CHASSIS AND CABINET, PARTS LIST (PMA-915R)	28, 29
EXPLODED VIEW OF CHASSIS AND CABINET, PARTS LIST (PMA-715R)	30, 31
SCHEMATIC DIAGRAM (PMA-915R/915RG)	33
SCHEMATIC DIAGRAM (PMA-715R/715RG)	34
REMOTE CONTROL	35

NIPPON COLUMBIA CO., LTD.

SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

• FOR U.S.A. & CANADA MODEL ONLY

CAUTION

TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

• POUR LE MODELE CANADIEN UNIQUEMENT

ATTENTION

POUR PREVENIR LES CHOCES ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.


• NUR FÜR EUROPÄISCHE MODELLE

Konformitätserklärung

Die DENON Electronic GmbH
 Halskestraße 32
 40880 Ratingen

Erklärt als Hersteller/Importeur, daß das in dieser Bedienungsanleitung beschriebene Gerät den Technischen Vorschriften für Ton- und Fernseh-Rundfunkempfänger nach der Amtsblattverfügung 868/1989 (Amtsblatt des Bundesministers für Post und Telekommunikation vom 31. 8. 1989) entspricht.

1. Read Instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Water and Moisture – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization – Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines – An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
17. Nonuse Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
20. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

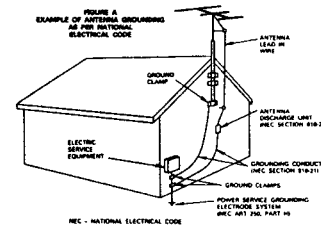

NOTE:

1. Always keep the POWER switch on the main unit turned on.
2. Turn the power on and off from the remote control unit.
3. Unplug the power cord when you do not plan to use the unit for a long period of time.

CAUTION:

If only the MUTE/STANDBY LED is lit, this means that the power is turned off from the remote control unit. Turn the power on from the remote control unit.

HINWEIS:

1. Lassen Sie den Netzschalter (POWER) am Hauptgerät stets eingeschaltet.
2. Schalten Sie den Strom mit dem Fernbedienungsgerät ein und aus.
3. Trennen Sie das Netzkabel vom Netz ab, wenn Sie beabsichtigen, das Gerät über einen längeren Zeitraum hinweg nicht zu benutzen.

VORSICHT:

Wenn nur das Stummschalt-/Bereitschafts-LED (MUTE/STANDBY) leuchtet, so bedeutet dies, daß der Strom vom Fernbedienungsgerät aus ausgeschaltet worden ist. Schalten Sie den Strom vom Fernbedienungsgerät aus ein.

REMARQUE:

1. S'assurer que le commutateur d'alimentation (POWER) sur l'unité principale soit toujours dans la position active.
2. Allumer et éteindre l'appareil avec la télécommande.
3. Débrancher le cordon d'alimentation lorsque l'appareil ne sera pas utilisé pendant une longue période.

ATTENTION:

Si seul le témoin (LED) de sourdine/veille (MUTE/STANDBY) est allumé, cela signifie que l'appareil est mis hors circuit par la télécommande. Allumer l'appareil avec la télécommande.

NOTA:

1. Tenete sempre l'interruttore della corrente (POWER) dell'unità principale nella posizione di attivazione.
2. Accendete e spegnete la corrente usando il telecomando.
3. Scollegate il filo di alimentazione quando avete intenzione di non usare l'apparecchio per un lungo periodo.

AVVISO:

Se sono illuminati solo i LED di attenuazione/attesa (MUTE/STANDBY), questo significa che la corrente è stata spenta con il telecomando. Riaccendete la corrente usando il telecomando.

PRECAUTIONS FOR INSTALLATION

Leave at least 10cm of space between this unit and any other component placed above.

SICHERHEITSMASSNAHMEN BEIM EINBAU


Lassen einen Mindestabstand von 10 cm zwischen diesem Gerät und der anderen Komponente, die daraufgestellt wird.

PRECAUTIONS D'INSTALLATION

Prévoir un espace d'au moins 10cm entre l'unité et tout autre appareil se trouvant au dessus.

PRECAUZIONI PER L'INSTALLAZIONE

Lasciate uno spazio libero di almeno 10 cm fra quest'unità e qualsiasi altro componente che è collocato sopra la stessa.

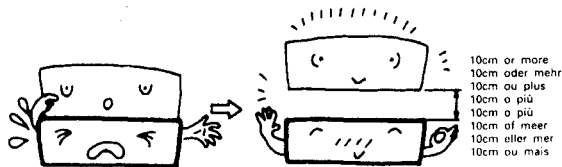**NOTA:**

1. Mantenga siempre activado el interruptor de alimentación (POWER) en la unidad principal.
2. Encienda y apague el equipo desde la unidad de control remoto.
3. Cuando la unidad vaya a estar fuera de uso por un período prolongado de tiempo, desconecte el cable de alimentación.

PRECAUCION:

Cuando sólo el indicador LED de silenciamiento/modo de espera (MUTE/STANDBY) esté encendido, significará que la alimentación a la unidad ha sido desconectada desde la unidad de control remoto. Conecte la alimentación desde la unidad de control remoto.

OPMERKING:

1. Zorg er altijd voor dat de stroomschakelaar (POWER) van het hoofdtoestel in de ingeschakelde stand staat.
2. Schakel de stroom in en uit m.b.v. de afstandsbediening.
3. Trek het netsnoer uit wanneer u denkt het toestel gedurende een lange periode niet te gebruiken.

WAARSCHUWING:

Indien enkel de dempings-(MUTE/STANDBY) LED brandt, betekent dit dat de spanning in met de afstandsbediening is uitgeschakeld. Schakel de spanning in met de afstandsbediening.

OBSERVA:

1. Låt alltid strömbrytaren (POWER) på huvudenheten vara påslagen.
2. Slå till/från strömmen med hjälp av fjärrkontrollen.
3. Koppla loss nätkabeln om apparaten inte skall användas under lång tid.

OBSERVA:

Om endast MUTE/STANDBY-lampen lyser betyder det att strömmen har stängts av via fjärrkontrollen. Strömmen måste då slås på via fjärrkontrollen igen.

NOTA:

1. Mantenha o interruptor da Corrente (POWER) na unidade principal sempre ligado.
2. Ligue e desligue a corrente a partir da unidade de controlo remoto.
3. Desconecte o fio do força quando intentar não utilizar a unidade por longo tempo.

PRECAUÇÃO:

Se apenas se iluminar o LED de súdina/espera (MUTE/STANDBY), isto significa que a força se desligou a partir do controlo remoto. Ligue a força a partir do controlo remoto.

PRECAUCIONES PARA LA INSTALACION

Deje por lo menos 10 cm. de espacio entre esta unidad y cualquier otro componente situado sobre ella.

VOORZORGSMAATREGELEN

Bij plaatsing dient u een ruimte van minstens 10 cm open te laten tussen dit toestel en een ander erop geplaatst component.



FÖRSIKTIGHETSÅTGÄRDER VID INSTALLATIONEN

Sn till att det finns minst 10 cm mellanrum mellan apparaten och en ev. annan apparat som ställs ovanpå.

CUIDADOS NA INSTALAÇÃO


Deixe um espaço de pelo menos 10 cm entre esta unidade e qualquer outro componente colocado acima.

**NOTE ON USE/HINWEISE ZUM GEBRAUCH/OBSERVATIONS RELATIVES A L'UTILISATION
NOTE SULL'USO/NOTAS SOBRE EL USO/ALVORENS TE GEBRUIKEN/OBSERVERA
OBSERVAÇÕES QUANTO AO USO**

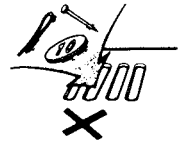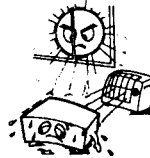


- Keep the set free from moisture, water, and dust.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.
- Mantenga el equipo libre de humedad, agua y polvo.
- Laat geen vochtigheid, water of stof in het apparaat binnendringen.
- Usätt inte apparaten för fukt, vatten och damm.
- Mantenha o aparelho livre de qualquer umidade, água ou poeira.

- Do not let foreign objects in the set.
- Keine fremden Gegenstände in das Gerät kommen lassen.
- Ne pas laisser des objets étrangers dans l'appareil.
- E' importante che nessun oggetto e inserito all'interno dell'unità.
- No deje objetos extraños dentro del equipo.
- Laat geen vreemde voorwerpen in dit apparaat vallen.
- Se till att frammande föremål inte tränger in i apparaten.
- Não deixe objetos estranhos no aparelho.



- Unplug the power cord when not using the set for long periods of time.
- Wenn das Gerät eine längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Disinnestate il filo di alimentazione quando avete l'intenzione di non usare il filo di alimentazione per un lungo periodo di tempo.
- Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.
- Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt.
- Koppla ur nätkabeln om apparaten inte kommer att användas i lång tid.
- Desligue o fio condutor de força quando o aparelho não tiver que ser usado por um longo período.

- Do not let insecticides, benzene, and thinner come in contact with the set.
- Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Assicuratevi che l'unità non venga in contatto con insetticidi, benzolo o solventi.
- No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.
- Laat geen insectenverdelgende middelen, benzine of verdunder met dit apparaat in contact komen.
- Se till att inte insektsmedel på spraybruk, bensin och thinner kommer i kontakt med apparatens hölje.
- Não permita que inseticidas, benzina e dissolvente entrem em contacto com o aparelho.



- Handle the power cord carefully. Hold the plug when unplugging the cord.
- Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.
- Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.
- Maneggiare il filo di alimentazione con cura. Agite per la spine quando scollegate il cavo dalla presa.
- Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.
- Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.
- Hantera nätkabeln varsamt. Håll i kabeln när den kopplas från eluttaget.
- Manuseie com cuidado o fio condutor de energia. Segure a tomada ao desconectar o fio.




* (For sets with ventilation holes)

- Do not obstruct the ventilation holes.
- Die Belüftungsöffnungen dürfen nicht verdeckt werden.
- Ne pas obstruer les trous d'aération.
- Non coprire i fori di ventilazione.
- No obstruya los orificios de ventilación. De ventilatieopeningen mogen niet worden beblokkeerd.
- Tapp inte till ventilationsöppningarna.
- Não obstrua os orificios de ventilação.




- Never disassemble or modify the set in any way.
- Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Non smontate mai, né modificate l'unità in nessun modo.
- Nunca desarme o modifique el equipo de ninguna manera.
- Noör dit apparaat demonteren of op andere wijze modifieren.
- Ta inte isär apparaten och försök inte bygga om den.
- Nunca desmonte ou modifique o aparelho de alguma forma.

**FRONT PANEL
FRONTPLATTE
PANNEAU AVANT
PANNELLO ANTERIORE**

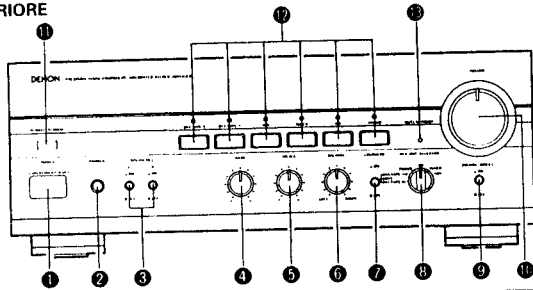

**REAR PANEL
RÜCKWAND
PANNEAU ARRIERE
PANNELLO POSTERIORE**

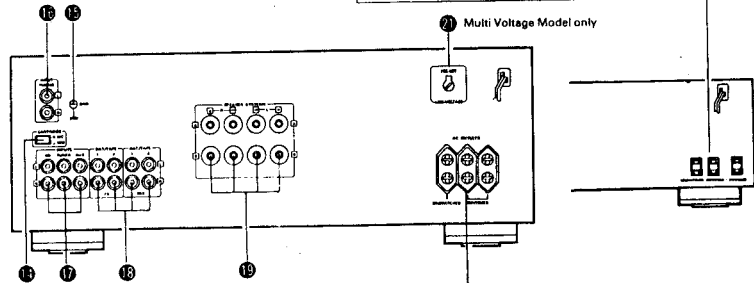

20 • U.S.A., CANADA and Multi Voltage Model only
 • Nur für Modelle für die U.S.A. und KANADA und für Multispannungsmodelle
 • Seulement pour les modèles pour les U.S.A., le CANADA et à tension multiple
 • Solo per i modelli U.S.A. e CANADA e per il modello a voltaggio multiplo


21 **LINE VOLTAGE (Voltage select switch) . . . For Multi-voltage model only.**
 • The desired voltage may be set with the VOLTAGE SELECTOR KNOB on the back panel using a screw driver.
 • Do not twist the VOLTAGE SELECTOR KNOB with excessive force. It may be damaged.
 • If the voltage select switch does not turn smoothly, see qualified serviceman.

22 • Europe model only (except for U.K.)
 • Nur für Europa-Modell (mit Ausnahme Großbritannien)
 • Seulement pour le modèle européen (à l'exception du Royaume-Uni)
 • Solo per il modello destinato all'Europa (eccetto il Regno Unito)


1 CARTRIDGE	2 GND	3 PHONO	4 CD, TUNER, AUX	5 DAT/TAPE-1, DAT/TAPE-2 • TAPE PB • TAPE REC	6 SPEAKERS
Cartridge Selector Switch	GND	Phono Input Terminals (Phono)	Input Terminals (CD, TUNER, AUX)	Playback and Recording Terminals • Playback Terminals • Recording Terminals	Speaker Terminals
Tonabnehmer-Wahlschalter	GND	Schallplatten-Eingangsbuchsen (Phono)	Eingangsbuchsen (CD, TUNER, AUX)	Tonband-Ein/Ausgänge • Wiedergabe • Aufnahme	Lautsprecher-Terminalen
Sélecteur de cartouche	GND	Bornes d'entrée (Phono)	Bornes d'entrée (CD, TUNER, AUX)	Bornes de lecture et d'enregistrement • Bornes de lecture • Bornes d'enregistrement	Bornes de haut-parleurs
Interruttore di selezione cartuccia	GND	Terminali di ingresso Phono	Terminali di ingresso (CD, TUNER, AUX)	Terminali di riproduzione registrazione • Terminali di riproduzione • Terminali di registrazione	Terminali degli altoparlanti

**Fig. 1
Abb. 1**

**CONNECTIONS
ANSCHLÜSSE
CONNEXIONS
CONNESSIONI**

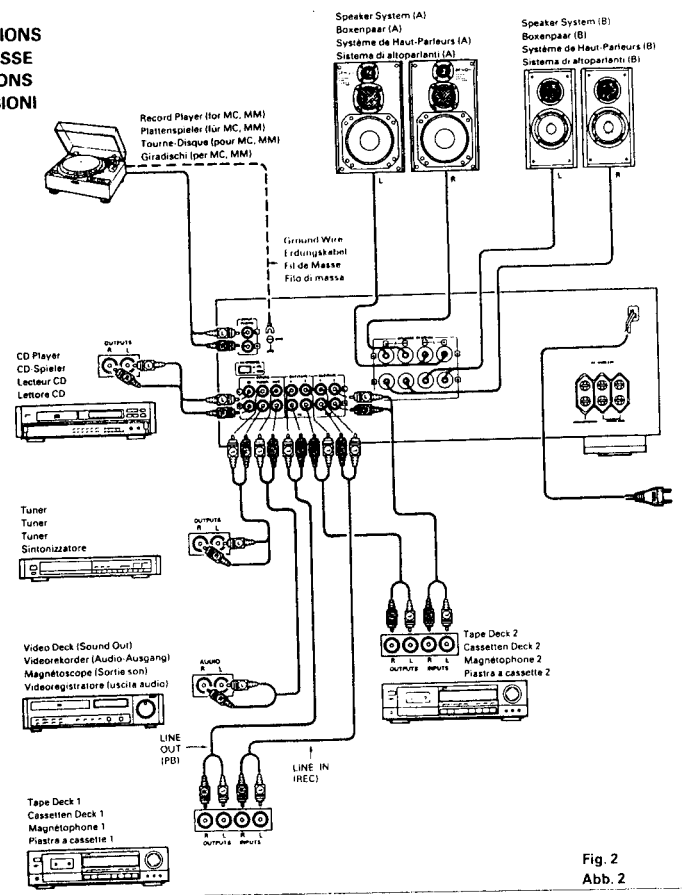


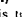
**Fig. 2
Abb. 2**

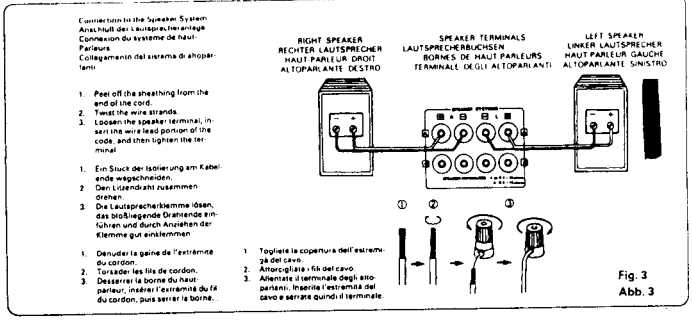

**Fig. 3
Abb. 3**

DESIGNATIONS AND FUNCTIONS OF PANEL CONTROLS

1 POWER (Power Switch)

When the power switch is turned ON (), the MUTE/STANDBY LED () lights.

When the power switch is turned ON, power is supplied to the unit. It takes a few seconds after the power is turned on for the unit to warm up. This is due to the built-in muting circuit that eliminates noise during the on/off operation.

2 PHONES (Headphone Jack)

This jack is used to plug in the headphones.




3 SPEAKERS (Speaker Selection Switch)

The PMA-915R/715R can be connected to two speaker systems: speaker system A and speaker system B. When A is pressed, the speaker system connected to speaker output terminals A operates.




When B is pressed, the speaker system connected to speaker output terminals B operates.

When A and B are pressed on together, both speaker systems operate simultaneously. When the A and B switches are both off (in the out position), there is no output from the speaker terminals. This setting is used to listen to playback through the headphones.


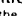
4 BASS (Bass Control)

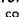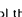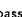This knob is used to control the bass quality of the sound. When the knob is set at the center position, the frequency characteristics are flattened in the range below 1000 Hz. The bass is emphasized as the knob is moved off center to the right (), and reduced as it is moved to the left (). When volume control () is set to the right of the center position, the effect of the other controls is reduced.


5 TREBLE (Treble Control)

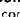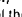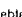This knob is used to control the treble quality of the sound. When the knob is set at the center position, the frequency characteristics are flattened in the range above 1000 Hz. The treble is emphasized as the knob is moved off center to the right (), and reduced as it is moved to the left (). When volume control () is set to the right of the center position, the effect of the other controls is reduced.

6 BALANCE (Balance Control)



This knob is used to adjust the balance between the left and right channels. When it is set to the center position, the amplitude of the amplifier is equal on both sides. If there is a difference in the left and right channel output voltages for a cartridge, move the knob to the left and the right to adjust it. If the volume on the right side is too low, turn the knob to the right (). If the volume on the left side is too low, turn the knob to the left (). This will achieve an even balance on the left and right sides.

7 LOUDNESS (Loudness Switch)

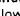

When the volume is low, it is difficult for the human ear to clearly distinguish notes in the low and high frequency ranges. The loudness switch allows a simple "one-touch" correction of this difficulty. Press the loudness switch ON () when listening to music at a low volume. The low notes and high notes will be corrected to produce a natural sound.

8 REC OUT SELECTOR (Rec Out Select Switch)



Use this switch to select the recording component.

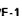- PHONO: Used to recording from the turntable.
- CD: Used to recording from the CD player.
- TUNER: Used to recording from the tuner.
- AUX: Used to recording component that connected to the AUX terminal.
- DAT/TAPE-1  2: Used to recording from the tape deck connected to the DAT/TAPE-1 jacks.
- DAT/TAPE-2  1: Used to recording from the tape deck connected to the DAT/TAPE-2 jacks.

9 SOURCE DIRECT (Source Direct Switch)

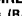The controls (BALANCE, LOUDNESS, and TONE) can be used when this switch is in the OFF () position. When set to the ON () position, the above controls are by-passed and the signals are input directly to the volume control circuit, providing high quality sound.

10 VOLUME (Volume Control)

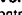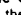
This knob controls the overall volume level. Turn the knob to the right () to raise the volume and to the left () to lower it.

11 REMOTE SENSOR (Remote Control Sensor)

This sensor receives the infra-red light transmitted from the wireless remote control unit. For remote control, point the wireless remote control unit towards the sensor.

12 INPUT SELECTOR (Input Select Switch)

Use these to select the program source. When the button for the desired program source is selected, its LED lights. One program source only can be selected at a time, as follows:


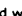
- PHONO: Used to select the output from a turntable that is connected to the PHONO terminal. Use the PHONO switch () (Rear Panel Side) to switch the sensitivity to correspond to the cartridge type being used.
- CD: Used to listen a compact disc player or other component that is connected to the CD terminal.
- TUNER: Used to play a component such as an FM/AM tuner or a TV tuner that is connected to the TUNER terminal.
- AUX: Used to play a component such as a Hi Fi video player, TV tuner, 8-track tape player or tape deck that is connected to the AUX terminal.
- DAT/TAPE-1: Use this Position when using the tape deck, etc., connected to the DAT/TAPE-1 jacks.
- DAT/TAPE-2: Use this Position when using the tape deck, etc., connected to the DAT/TAPE-2 jacks.

13 MUTE/STANDBY LED

This LED flashes while the muting circuit is activated when the power is turned on and when muting is turned on from the remote control unit, and remains lit (without flashing) while the power is on.

14 PHONO (Cartridge Selection Switch): Rear Panel Side

This switch is set according to the type of player cartridge to be used.

- MC (): Used when an MC (moving-coil) cartridge with an output of less than 0.5 mV is used.
- MM (): Used when an MM (moving-magnet) cartridge with an output of 2 mV or more is used.

20 AC OUTLETS: Rear Panel Side

For U.S.A. and Canada models. AC outlets are used for connecting amplifier component units, such as tuner, turntable, tape deck, etc.

- SWITCHED (Total capacity: 120 W): These outlets are turned ON/OFF when main power switch and POWER button on the Remote Control Unit is turned on/off.
- UNSWITCHED (Capacity: 240 W): This outlet is always ON whether power switch is on or OFF.

For Europe (except the U.K.) and Multi-Voltage models. AC outlets are used for connecting amplifier component units, such as tuner, turntable, tape deck, etc.

- SWITCHED (Total capacity: 100 W): These outlets are turned ON/OFF when main power switch and POWER button on the Remote Control Unit is turned on/off.
- UNSWITCHED (Capacity: 100 W): This outlet is always ON whether power switch is on or OFF.


OPERATION

PREPARATION

1. CHECKING CONNECTIONS

- Make sure that all the connections are proper by referring to the back panel. (Fig. 2, 3)
- Check the polarity (positive and negative) of connections, and the directivity of stereo separation (right cord to right channel terminal, and left cord to left channel terminal).
- Check the directivity of pin cord connection.

2. SETTING OF EACH KNOB

- Turn the volume control knob counterclockwise, to "0".
- Set the rotary knob to "flat".
- Set SOURCE DIRECT and LOUDNESS to "OFF ()".

After checking the above items, turn on the power, the amplifier is set in the ready mode in a few seconds.

PLAYING A RECORD

1. Set the INPUT SELECTOR switch to "PHONO".
2. Operate the turntable and play the record.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

PLAYBACK OF CD PLAYER

1. Set the INPUT SELECTOR switch to "CD".
2. Operate the CD player.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

RECEPTION OF RADIO PROGRAMS

1. Set the INPUT SELECTOR switch to "TUNER".
2. Operate the tuner to receive a radio program.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

CONNECTIONS OF AUDIO EQUIPMENT TO AUX TERMINALS

1. Set the INPUT SELECTOR switch to "AUX" Position.
2. Operate the Audio equipment Systems.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

PLAYBACK WITH TAPE DECK

1. Set the INPUT SELECTOR switch to "DAT/TAPE-1" or "DAT/TAPE-2".
2. Operate the Tape Deck.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

RECORDING WITH TAPE DECK

1. Set the REC OUT SELECTOR to the program source you wish to record.
 2. Start the playback of the program source.
 3. Start recording with the component connected to "DAT/TAPE-1" or "DAT/TAPE-2".
- In the PMA-915R/715R, the REC OUT signal and the speaker (headphone) signal are output via separate circuits so that knobs and switches related to the tone and volume have no effect whatsoever on the sound that is recorded. Also, since the recording function is selected by the REC OUT SELECTOR, the free program source can be played through the speakers (or headphones) even during recording.


MONITORING THE RECORDING

A recording in progress can be monitored if a tape deck with three individual heads for recording and playback is used. A tape deck in which a common head is used for both recording and playback cannot be used to monitor recording. When a recording is being made using DAT/TAPE-1, selecting DAT/TAPE-1 with the INPUT SELECTOR will engage the RECORDING MONITOR and permit a check of the recording condition.

CAUTION

Protective Circuit
This set is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when the speaker jacks are not completely connected or when an output is generated by a short circuit. This protective circuit's operation cuts off the output to the speakers. In such a case, be sure to turn the power to the set off and check the connections to the speakers. Then turn the power on again. After muting for several seconds, the set will operate normally.

NOTE


- This amplifier has a full memory back-up system. When the power is turned on, INPUT SELECTOR () are set to the last mode set before the power was turned off.

REMOTE CONTROL OPERATION


The accessory Remote Control Unit is used to control the amplifier from a convenient distance.

(1) Inserting the Dry Cell Batteries


1. Remove the battery cover on the Remote Control Unit.




2. Insert two dry cell batteries as shown in the diagram on the battery supply unit.

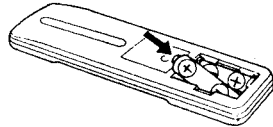

3. Replace the battery cover.



(2) Directions for use

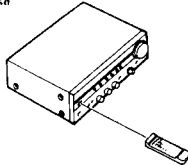

Notes on Battery Usage

- RC-176 uses the size R6P (AA) dry cell batteries.
- The batteries will need to be replaced approximately once a year. This will depend upon how often the Remote Control Unit is used.
- If, in less than a year from the time new batteries were inserted, the Remote Control Unit fails to operate the Amplifier from a near-by position, it is time to replace the batteries.
- Insert the batteries properly, following the polarity diagram inside the battery compartment.
- Batteries are prone to damage and leakage. Therefore:
 - Do not mix new batteries with used ones.
 - Do not mix different types of batteries.
 - Do not jumper opposite poles of the batteries, expose them to heat, break them open, nor expose them to open fire.
- If the batteries have leaked, remove any traces of battery fluid from the battery compartment wiping thoroughly with a dry cloth. Then insert new batteries.

- Operate the Remote Control Unit while pointing it towards the Remote Control Sensor on the Amplifier as shown in the diagram on the left.
- The Remote Control Unit can be used at distances up to about 8 meters in a straight line from the amplifier. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the Remote Control Unit is not directed straight at the amplifier.

Note on operation

- Do not press the operating buttons on the Amplifier and the Remote Control Unit at the same time. This will cause misoperation.
- Operation of the Remote Control Unit will become less effective or erratic if the infrared Remote Control Sensor on the Amplifier is exposed to strong light or if there are obstructions between the Remote Control Unit and the sensor.
- In case you operate a VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause misoperation.


Besides being able to operate the PMA-915R/715R amplifier with this Remote Control Unit, you can also operate a DENON cassette deck and CD player from this handy full-system Remote Control Unit.

Remote control section

Full-system Remote Control Unit

The full-system Remote Control Unit operates all major functions of the Amplifier, such as function switching, volume control. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck and tuner when combined with the PMA-915R/715R to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects.

Remote Control Unit RC-176 supplied with the PMA-915R/715R

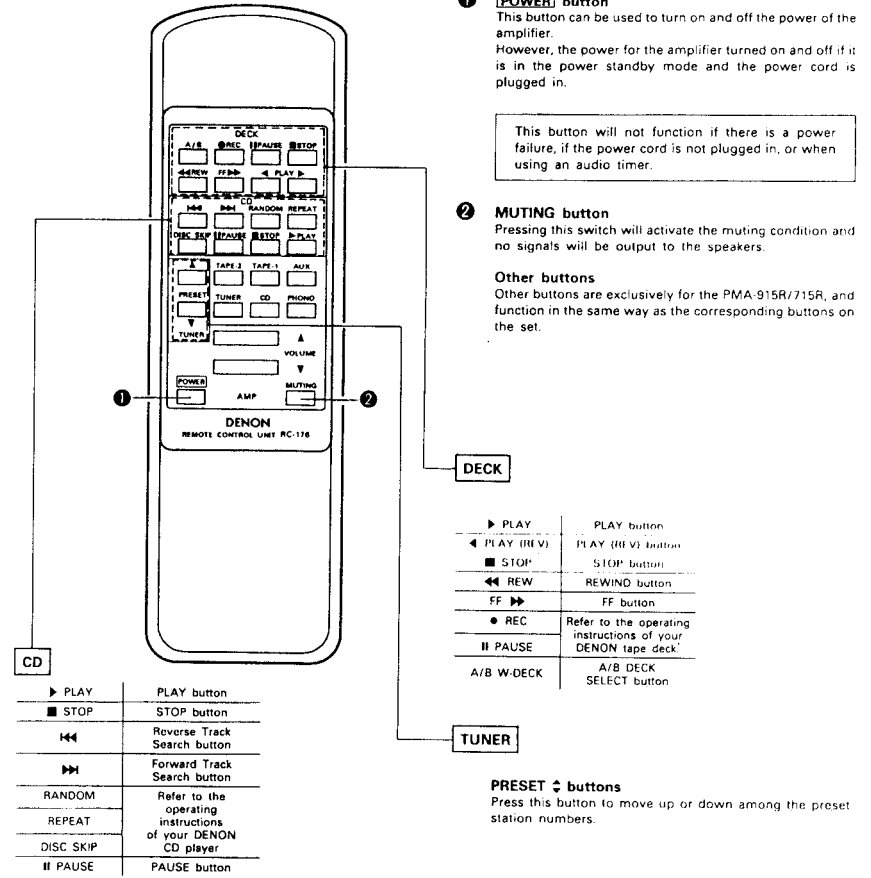

1. **POWER** button
This button can be used to turn on and off the power of the amplifier.
However, the power for the amplifier turned on and off if it is in the power standby mode and the power cord is plugged in.

This button will not function if there is a power failure, if the power cord is not plugged in, or when using an audio timer.

2. **MUTING** button
Pressing this switch will activate the muting condition and no signals will be output to the speakers.

Other buttons
Other buttons are exclusively for the PMA-915R/715R, and function in the same way as the corresponding buttons on the set.

- The RC-176 Remote Control Unit can control CD players and cassette decks manufactured by DENON.
- Note that operation may not be possible for some models.
- Buttons are conveniently separated into groups, each group controlling one specific component. The groups are AMP, FUNCTION, CD, DECK and TUNER etc.

For details on operating other components, refer to the operating instructions for the CD player and/or cassette deck.

CAUTION:

- If the power is turned off with the Remote Control Unit, the set is switched to the power stand-by state. If you are absent for a long period of time, unplug the power cord.
- Only the MUTE/STANDBY LED \odot lights when in the power stand-by mode.
- You may experience erratic operation of the Remote Control Unit if it is operated in fluorescent light and direct sunlight, in particular if this light strikes the Remote Control Sensor on the Amplifier. However, this is not a malfunction, and if this should happen, simply protect the sensor against such light.

Technical Data (typical value)	Technische Daten (typische Werte)	Caractéristiques techniques (valeur caractéristique)	PMA-915R/715R
POWER AMPLIFIER SECTION Rated Output Power: *Both channel driven (8 ohm Load) 20 Hz to 20 kHz, T.H.D. 0.02%/0.05% (4 ohm Load) DIN, 1 kHz, T.H.D. 0.7% *Continuous 80W/65W per channel min into 8 ohms from 20 Hz to 20 kHz with no more than 0.02%/0.05% total harmonic distortion. Total Harmonic Distortion: (-3 dB at rated output, 8 ohms)	LEISTUNGSENDEN VERSTÄRKER Nenn-Ausgangsleistung: *Beide Kanäle betriebeben (an 8 Ohm) 20 Hz bis 20 kHz, T.H.D. 0,02%/0,05% (an 4 Ohm) DIN, 1 kHz, T.H.D. 0,7% *Fortlaufend 80W/65W pro Kanal min. zu 8 Ohm von 20 Hz bis 20 kHz mit einem Gesamtklirrfaktor von nicht mehr als 0,02%/0,05%. Gesamtklirrfaktor: (-3 dB bei Nennausgang, 8 Ohm)	PARTIE AMPLIFICATEUR DEPUISSANCE Puissance nominale: *Entraînement deux canaux (charge 8 ohms) 20 Hz à 20 kHz, D.H.T. 0,02%/0,05% (charge 4 ohms) DIN, 1 kHz, D.H.T. 0,7% *80W/65W en continu par canal sur min. 8 Ohms de 20 Hz à 20 kHz avec une distorsion harmonique totale de 0,02%/0,05% ou moins. Distorsion harmonique totale: (-3 dB à la sortie nominale, 8 ohms)	80W + 80W/65W + 65W 130W + 130W/100W + 100W 80W/65W
PRE AMPLIFIER SECTION Rated Output: (Recut Terminal) Input Sensitivity/ Input Impedance: The value in parentheses () refers to the input impedance when SOURCE DIRECT is ON. PHONO: CD, TUNER, AUX TAPE-1, TAPE-2 RIAA Deviation: PHONO Within ±0.3 dB Maximum Input:	VORVERSTÄRKER Nenn-Ausgangsleistung: (Aufnahme-Ausgangsbuchse) Eingangsempfindlichkeit/ Eingangsimpedanz: Der in Klammern () angegebene Wert bezieht sich auf die Eingangsimpedanz, wenn der Quellen-Direktschalter (SOURCE DIRECT) eingeschaltet (ON) ist. PHONO: CD, TUNER, AUX TAPE-1, TAPE-2 Abweichung von der RIAA-Kennlinie: PHONO Innerhalb ±0,3 dB Maximaler Eingang:	PRE-AMPLI Puissance nominale: (Borne de sortie d'enregistrement) Sensibilité d'entrée/ Impédance d'entrée: Le valeur entre parenthèses () se rapporte à l'impédance d'entrée lorsque le touche de source directe (SOURCE DIRECT) est sur la position sous tension (ON). PHONO: CD, TUNER, AUX TAPE-1, TAPE-2 Variation RIAA: PHONO: Int. ± ±0.3 dB Entrée max.:	0.007% 150 mV MM 2.5 mV/47 kohm MC 200 µV/100 ohm 150 mV/47 kohm (150 mV/10 kohm) 20 Hz ~ 20 kHz PHONO MM 160 mV/1 kHz MC 12mV/1 kHz
OVERALL CHARACTERISTICS SN Ratio (IHF A Network): (input terminals short-circuited) SOURCE-DIRECT: ON Tone Control Adjustable Range: BASS TREBLE Loudness:	GESAMTEIGENSCHAFTEN Signal/Rauschabstand (IHF-A-Weichte): (Eingänge kurzgeschlossen) SOURCE DIRECT: ON Klangregelbereich: TIEFFEN (BASS) HOHEN (TREBLE) Gehörliche Lautstärke:	CARACTERISTIQUES GENERALES Rapport signal/bruit (réseau IHF A): (Bornes d'entrée court-circuitées) SOURCE DIRECT: ON Gamme de réglage de tonalité: GRAVES AIGUS Compensation physiologique:	PHONO: MM: 94 dB (at 5 mV input) MC: 76 dB (at 0.5 mV input) CD, TUNER, AUX TAPE-1, TAPE-2: 110 dB 100 Hz ±8 dB 10 kHz ±8 dB 100 Hz ±7 dB 10 kHz ±6 dB
OTHERS Power Supply AC Outlets Switched x2: Unswitched x1: Power Consumption Dimensions (W) x (H) x (D) Net Weight REMOTE CONTROL UNIT (RC-176) Remote control system: Infrared pulse system Power supply: 3V DC, two size R6P ("AA") dry cell batteries External dimensions: Weight:	SOMSTIGES Netzspannung und -frequenz Wechselstrom-Ausgänge Geschaltet x2: Ungeschaltet x1: Leistungsaufnahme Abmessungen (B) x (H) x (T) Nettogewicht FERNBEDIENUNGSGERÄT (RC-176) Fernbedienungs-System: Infrarot-Impulse Stromversorgung: 3V Gleichstrom, zwei Trocken-zelle-Batterien vom format R6P (AA) Außere Abmessungen: Gewicht:	AUTRES Alimentation Prises secteur (AC) Commutées x2: Non commutées x1: Consommation Dimensions (L) x (H) x (D) Poids UNITE DE TELECOMMANDE (RC-176) Système de télécommande: Système à impulsion infrarouge Alimentation: 3V CC, deux piles sèches de format R6P ("AA") Dimensions extérieures: Poids:	AC230V/50 Hz (For Europe and Australia) AC120V/60 Hz (For U.S.A. and Canada) AC110/220/230V, 50/60 Hz (For Multiple) 100W (Total) (For Europe and Multi-Voltage models, except the U.K. model) 120W (Total) (For U.S.A. and Canada models) 100W (For Europe and Multi-Voltage models, except the U.K. model) 240W (For U.S.A. and Canada models) 230W/210W (IEC) 424/564 (U.S.A. and Canada models) 434W x 160(H) x 35(D)mm PMA-915R (17-3/32" x 6-19/64" x 13-13/16") 434W x 140(H) x 35(D)mm PMA-715R (17-3/32" x 5-11/16" x 13-13/16") 9.0 kg (19 lbs 14 oz) / 8.2 kg (18 lbs 2 oz) 55(W) x 194(H) x 18(D)mm (2-11/64" x 7-41/64" x 45/64") 100 g (about 3.5 oz) (including batteries)

ENGLISH

Please check to make sure the following items are included with the main unit in the carton:

- (1) Operating Instructions 1
- (2) Remote Control Unit (RC-176) 1
- (3) Batteries R6P (AA) 2

DEUTSCH

Bitte überprüfen Sie, ob die folgenden Teile vollständig in der Verpackung enthalten sind:

- (1) Bedienungsanleitung 1
- (2) Fernbedienung (RC-176) 1
- (3) Batterien vom Typ R6P (AA) 2

FRANCAIS

Veillez contrôler que les articles suivants sont bien joints à l'appareil principal dans le carton:

- (1) Mode d'emploi 1
- (2) Unité de télécommande (RC-176) 1
- (3) Piles R6P (AA) 2

ITALIANO

Controllare che le parti seguenti si trovino imballate con l'apparecchio nella scatola di spedizione.

- (1) Libretto delle istruzioni 1
- (2) Telecomando (RC-176) 1
- (3) Batterie R6P (AA) 2

ESPAÑOL

Por favor verifique asegurándose de que los siguientes artículos son empacados en la caja pero separados de la unidad principal.

- (1) Manual de instrucciones 1
- (2) Unidad de control remoto (RC-176) 1
- (3) Pilas R6P (AA) 2

NEDERLANDS

Kontroleer of de volgende accessoires bij het hoofdtoestel in de doos zijn verpakt:

- (1) Gebruiksaanwijzing 1
- (2) Afstandsbediening (RC-176) 1
- (3) Batterijen R6P (AA) 2

SVENSKA

Kontrollera att följande, förutom huvudapparaten, finns med i kartongen.

- (1) Bruksanvisning 1
- (2) Fjärrkontroll (RC-176) 1
- (3) Batterier R6P (AA) 2

PORTUGUÊS

Certifique-se de que as seguintes peças estão incluídas na embalagem fora da unidade principal:

- (1) Instruções de operação 1
- (2) Unidade de controle remoto (RC-176) 1
- (3) Baterias R6P (AA) 2


Note: *1 For Europe and Multi-Voltage *2 For U.S.A. and Canada Hinweis: *1 Für Europe und Mehrspannung *2 Für die USA und Kanada Note: *1 Pour les modèles pour l'Europe et multi-tension *2 Pour les U.S.A. et le Canada

Specifications and contents are subject to change without notice for purposes of improvement.
 Änderungen des Inhalts und der technischen Daten zum Zwecke der Verbesserung vorbehalten.
 Specifications et contenu sont sujets à modification sans préavis.

REMOVAL OF EACH SECTION


1. Top Cover

- (1) Remove 4 screws (A), and 3 screws (B).
- (2) Pull up Top Cover in arrow direction.

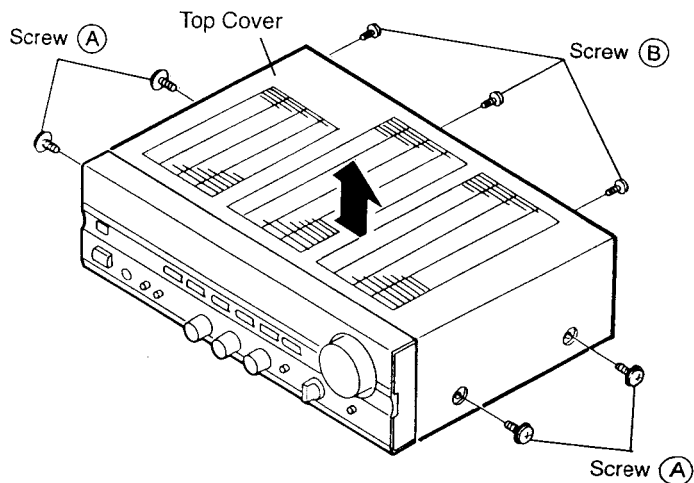


2. Front Panel

- (1) Detach Control Knob and Nut.
- (2) Remove 3 screws (C).
- (3) Remove 4 screws (D).
- (4) Detach Front Panel in arrow direction.

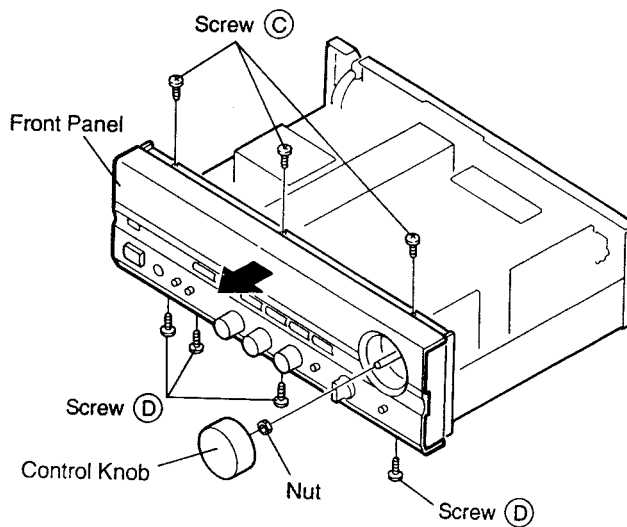


3. Inner Panel

- (1) Detach 4 Knobs and 3 nuts.
- (2) Remove 2 screws (E).
- (3) Remove 2 screws (F).
- (4) Detach Inner Panel in arrow direction.

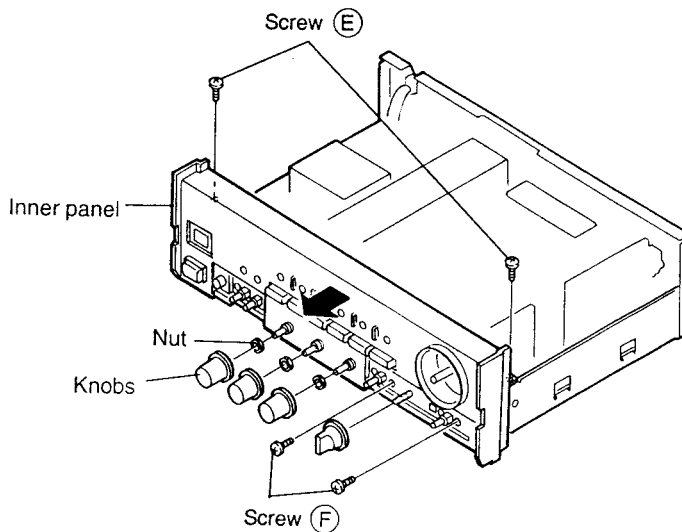

4. P.W. Board attached to Inner Panel


- (1) Remove 6 screws (G) .
- (2) Take out P.W. Board in arrow direction.

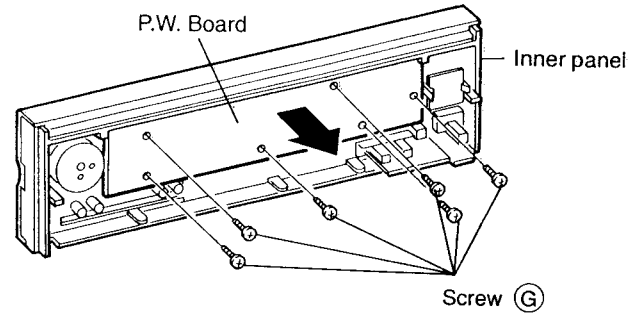

5. Main Chassis

- (1) Remove 2 screws (H) .
- (2) Remove 4 screws (I) .
- (3) Remove 2 screws (J) .
- (4) Remove 4 screws (K) .

Note: Then, by pulling up, FRONT PANEL, POWER RADIATOR, P.W.B., REAR PANEL will be detached as a whole. However, wire on POWER TRANS still remains connected; therefore make repairing on detached CHASSIS side-up.

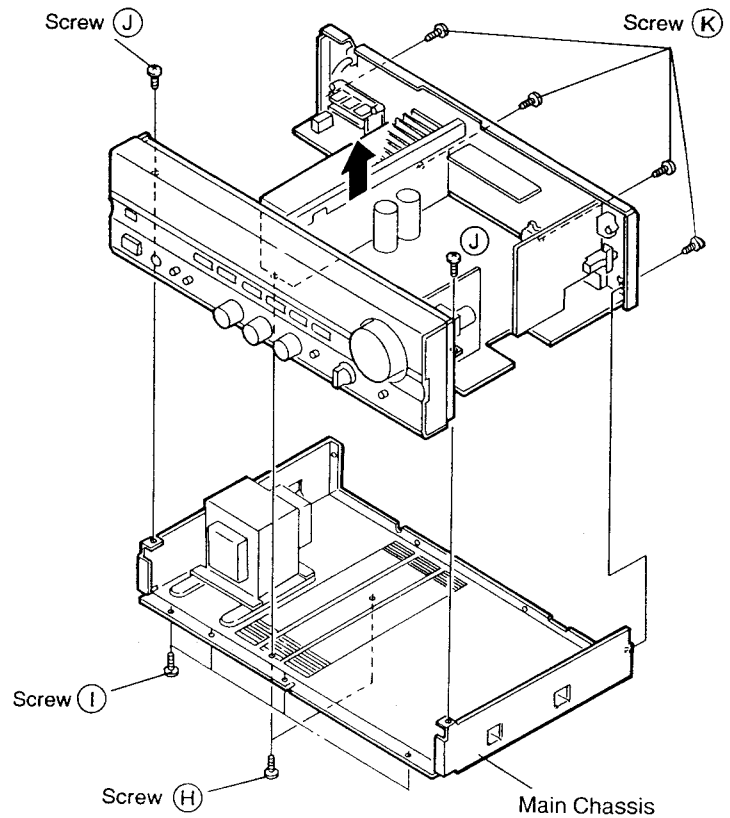

FUNCTION OF NEW CIRCUIT

1. CHARACTERISTIC OF THIS CIRCUIT

The junction temperature of power amplifier output transistor always varies by an ambient temperature and music signal. Occurrence of junction temperature varying causes in change of bias current, unstable function, thus pure music signal playback is unable to do.

To maintain fixed bias current and to make pure music signal playback possible is the purpose of this circuit. This circuit holds stable bias current condition within a few seconds after turning on the power.

2. BLOCK DIAGRAM OF BIAS CONTROL CIRCUIT FUNCTION

As explained in Fig. 1, detects a voltage across the emitter resistors (RE) of TR1, TR2. Converts the detected voltage and comparing with the reference voltage to make the bias current value in stable state. Actually, these functions are performed by 1 chip IC.

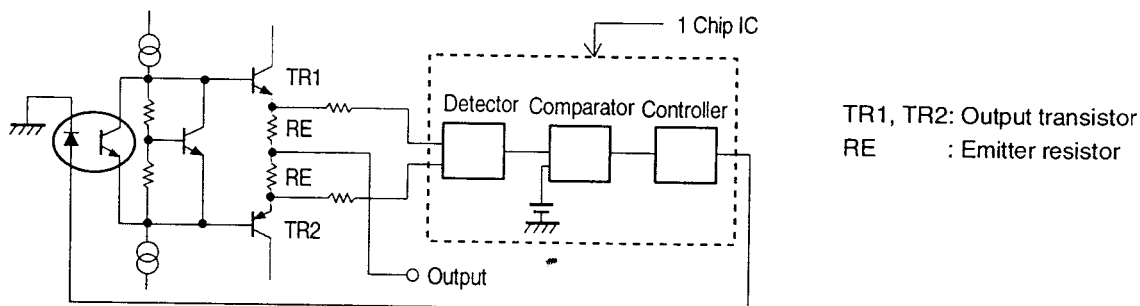


Fig. 1

3. POWER SUPPLY FOR ACTUATING CONTROL CIRCUIT

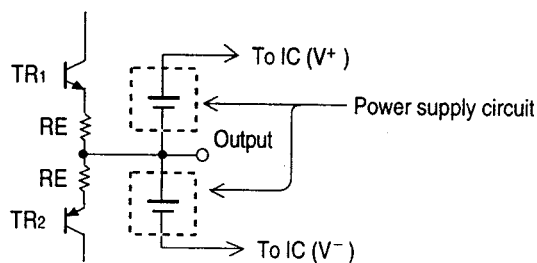




Fig. 2

The circuit (IC) controlling bias current actuates by floating.

Accordingly, the power supply is also needed to be floated.

In this circuit, as indicated in Fig. 2, output is common to provide +, - power system and supplies to IC.


4. IC DESCRIPTION (μ PC5023CS-064)

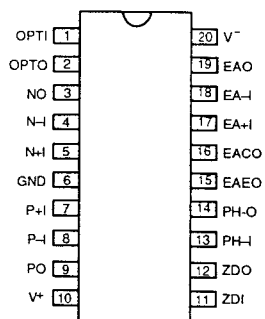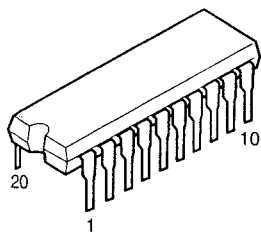


Pin. No.	Name	Contents
1	OPTI	NCP
2	OPTO	
3	NO	Comparator output
4	N-I	Comparator input (-)
5	N+I	Comparator input (+)
6	GND	Floating common
7	P+I	Comparator input (+)
8	P-I	Comparator input (-)
9	PO	Comparator output
10	V+	+ Power supply

Pin. No.	Name	Contents
11	ZDI	Control signal stabilizer input
12	ZDO	Control signal stabilizer output
13	PH-I	Peak hold input
14	PHO	Peak hold output
15	EAE0	Controller gain setting
16	EACO	Control signal output
17	EA+I	Reference voltage
18	EA-I	Comparator gain setting
19	EAO	Comparator output
20	V-	- Power supply

5. CIRCUIT IN THE CONCRETE

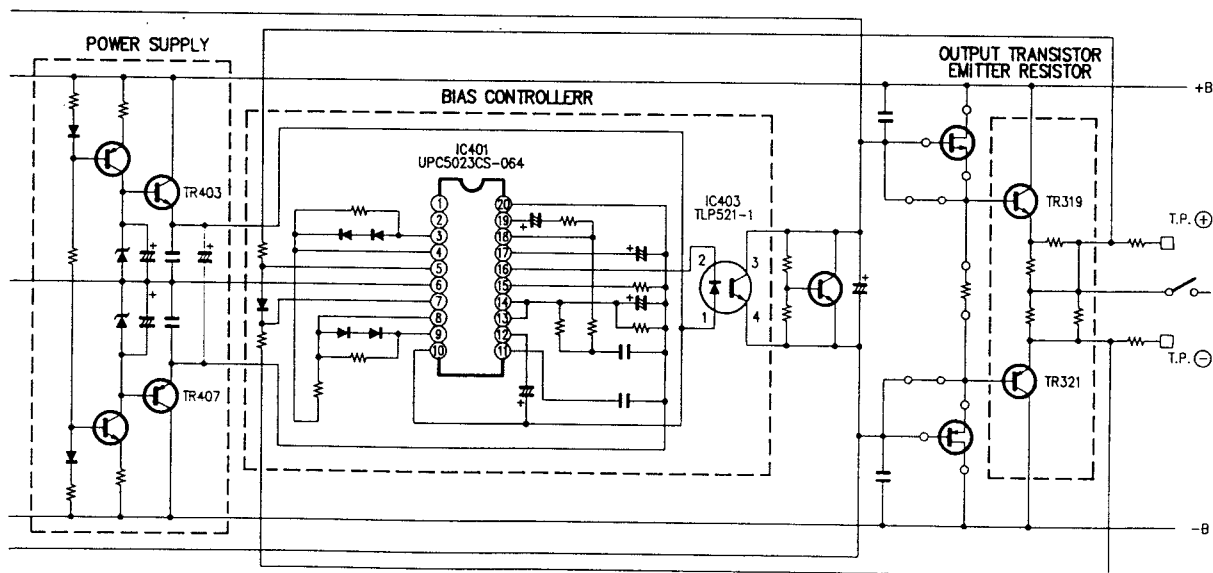

METHOD OF ADJUSTMENTS

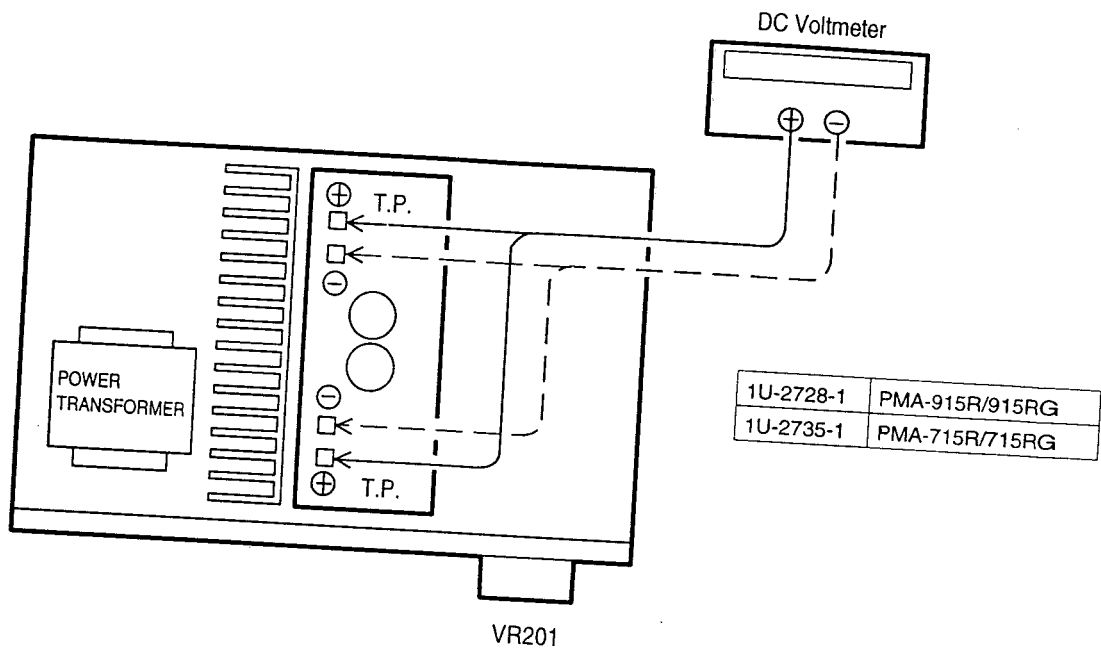

IDLING CURRENT



● Setup

1. Lay the unit at an ordinary position away from a direct current from a cooler or fan. Do the adjustment at a temperature between 15°C (59°F) and 30°C (86°F).
2. Set controls as follows.
POWER SWITCH → OFF (■)
VOLUME CONTROL → fully counterclockwise. (⤵) min.
SPEAKER Terminals → open: do not connect the speakers, dummy load etc.

● Confirm

1. Remove Top cover. And then connect DC Voltmeter to Test points of Main Unit 1U-2728-1 (PMA-915R/915RG) or 1U-2735-1 (PMA-715R/715RG).
2. Connect Power cord to AC Outlet, and turn POWER Switch "on" (■).
3. 10 seconds after check to see DC Voltmeter reading is $8 \pm 5\text{mV}$.
4. 2 minutes after re-check DC Voltmeter for $8 \pm 5\text{mV}$ reading.



BLOCK AND LEVEL DIAGRAM

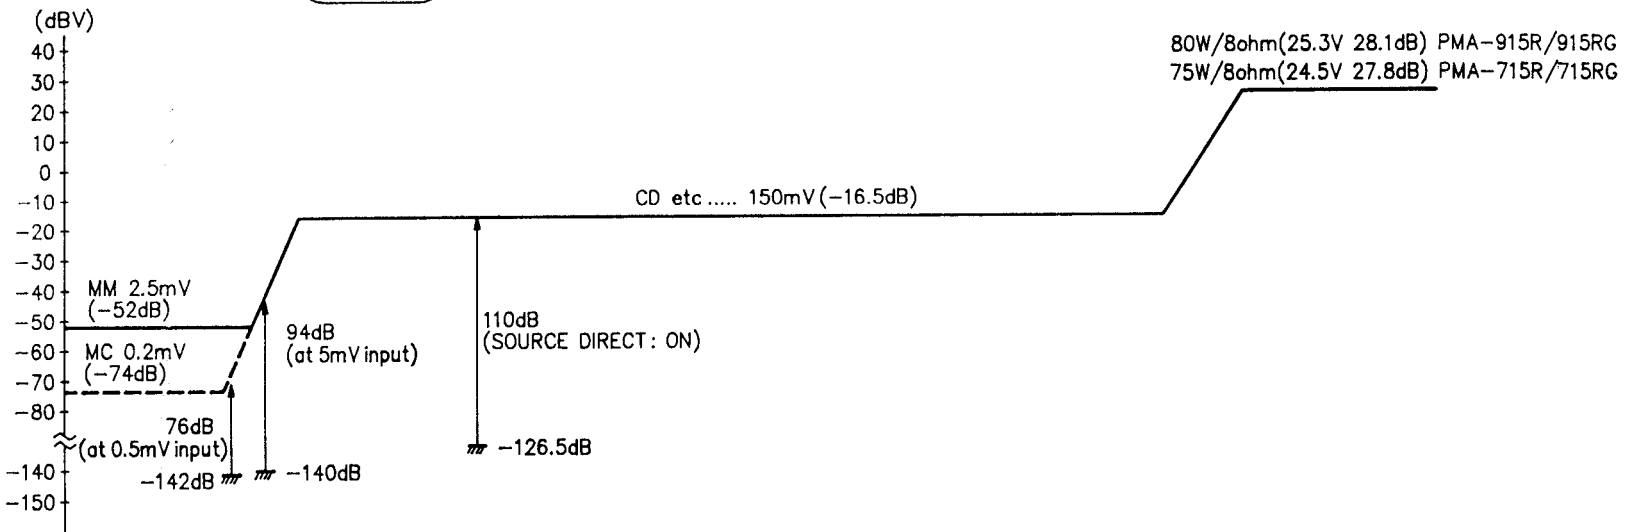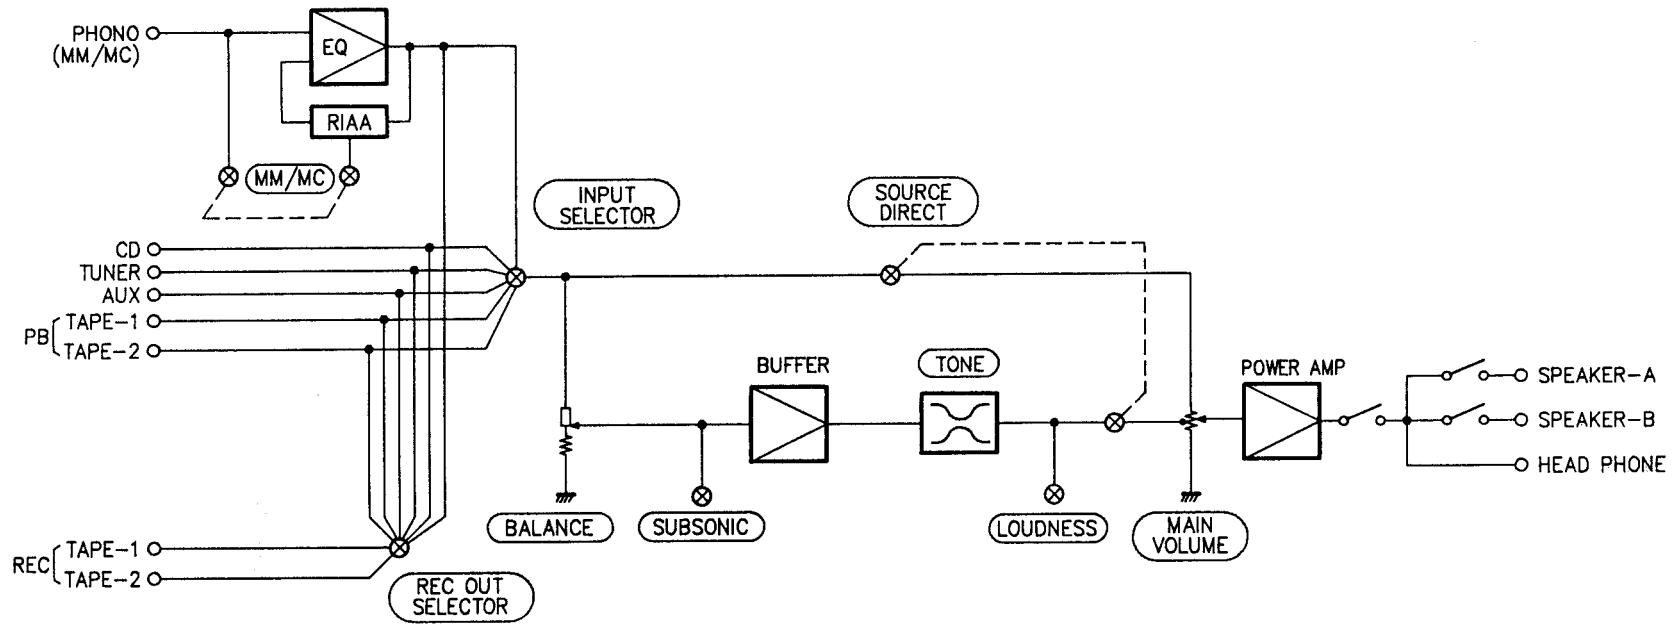

SEMICONDUCTORS

● IC's


μPC5023CS-064 (IC401,402)

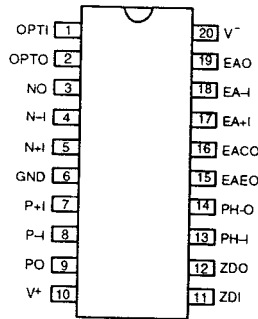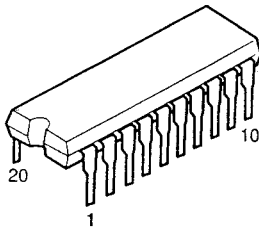

Pin. No.	Name	Contents
1	OPTI	NCP
2	OPTO	
3	NO	Comparator output
4	N-I	Comparator input (-)
5	N+I	Comparator input (+)
6	GND	Floating common
7	P+I	Comparator input (+)
8	P-I	Comparator input (-)
9	PO	Comparator output
10	V+	+ Power supply

Pin. No.	Name	Contents
11	ZDI	Control signal stabiliser input
12	ZDO	Control signal stabiliser output
13	PH-I	Peak hold input
14	PHO	Peak hold output
15	EAEO	Controller gain setting
16	EACO	Control signal output
17	EA+I	Reference voltage
18	EA-I	Comparator gain setting
19	EAO	Comparator output
20	V-	- Power supply


HD404304A13P (IC801)

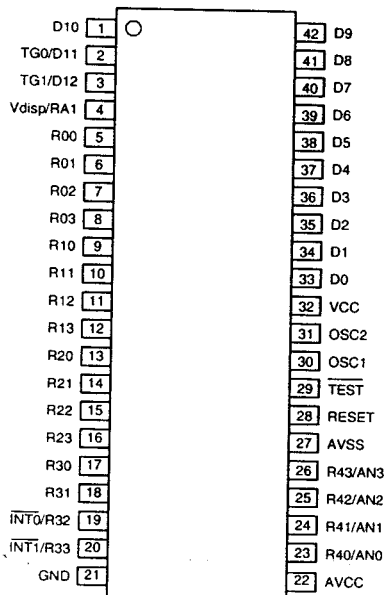


HD404304P Terminal Function

Pin No.	Name	I/O	Contents	Active
1	D10	O	VOLUME LED Indication	H
2	TG0/D11	O	NCP	
3	TG1/D12	O	Power Control (REMOTE Power-ON/OFF)	L
4	Vdisp/RA1	I	NCP	
5	R00	O	NCP	
6	R01	O	Muting Control (Power ON-OFF, Function Shifting, Muting)	L
7	R02	O	SP-A Control	H
8	R03	O	SP-A Control	H
9	R10	O		H
10	R11	O	Key scan strobe	H
11	R12	O		H
12	R13	O	NCP	H
13	R20	I		
14	R21	I	Key scan receive	
15	R22	I		
16	R23	I		
17	R30	O	Volume Control "UP" → "H"	H
18	R31	O	Volume Control "DOWN" → "H"	H
19	INT0/R32	I	Power Breakdown detect input	
20	INT1/R33	I	Remote control signal decoding input	
21	GND		GND	
22	AVcc		AVcc (Vcc)	
23	R40/AN0		NCP	
24	R41/AN1	I	NCP	
25	R42/AN2	I	NCP	
26	R43/AN3	I	Discrimination port by user's genre	
27	AVss		AVss (GND)	
28	RESET		MS1954A; External	
29	TEST		Vcc	
30	OSC1		Center Fill Oscillator 4MHz; External	
31	OSC2		Center Fill Oscillator 4MHz; External	
32	Vcc		Vcc	
33	D0	O	SC-RCE DIRECT Control	H
34	D1	O	NCP	
35	D2	O	TAPE-2 Control	H
36	D3	O	TAPE-1 Control	H
37	D4	O	NCP	
38	D5	O	FAV Control	H
39	D6	O	TUNER Control	H
40	D7	O	NCP	
41	D8	O	CD Control	H
42	D9	O	FM-CHG Control	H

M51954A (IC803)

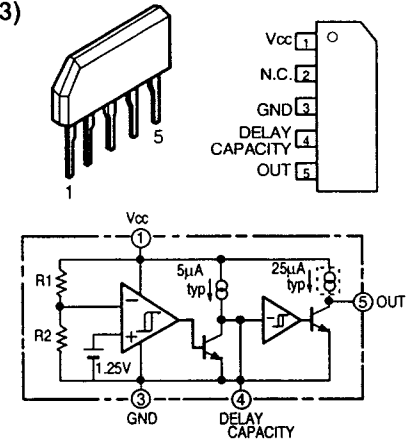


BA4558 (IC201, 901) M5219P

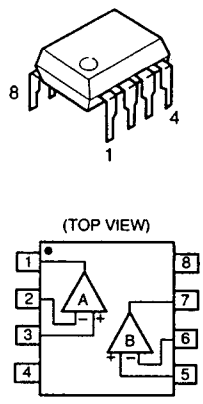


- 1. A OUTPUT
- 2. A-INPUT
- 3. A+INPUT
- 4. V-
- 5. B-INPUT
- 6. B-INPUT
- 7. B OUTPUT
- 8. V+

NJM7806FA(S) (IC702)


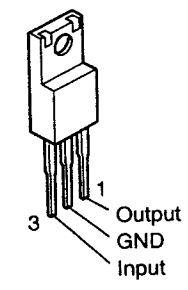


TRP521-1(BL) INFRARED LED + PHOTO TRANSISTOR

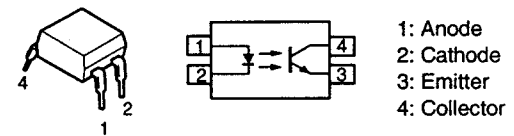


- 1: Anode
- 2: Cathode
- 3: Emitter
- 4: Collector



LB1639 (IC802)

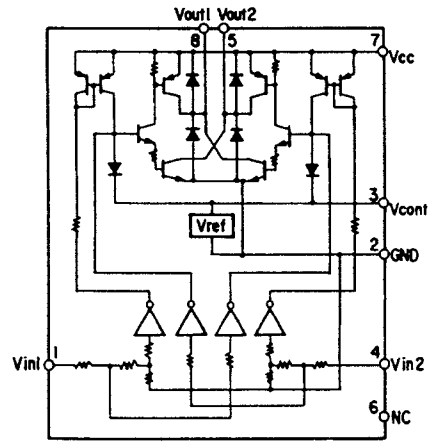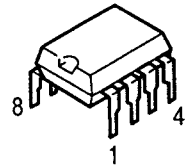

IC PROTECTOR ICP-N15 (IC701)

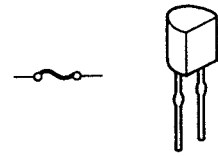


SBX1610-52 (Remote Control Receiver)

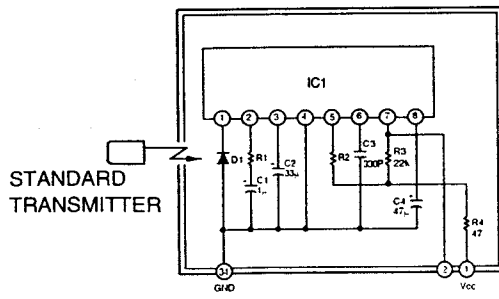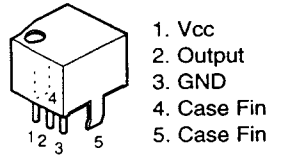


- IC1 : CX20106A Chip
- D1 : PIN Photo Diode Chip
- C1, C2, C4 : Aluminum Electrolytic Capacitor
- C3 : SL Characteristic ±5%
- R1 : Gain Adjuster
- R2 : fo Adjuster ±1% USE
- R3,4 : ±5%

TRANSISTORS


2SA970 (BL), (BL/GR)
2SA988 (E/F)
2SC1841 (E/F)

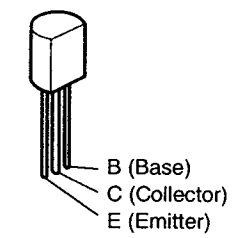

2SA1145 (O)/(Y)
2SC2705 (O)/(Y)

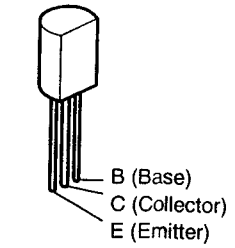


PMA-915R
2SA1491 (O/P/Y)(Z)
2SC3855 (O/P/Y)(Z)


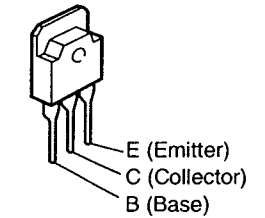


PMA-715R
2SB1560 (O/P/Y)
2SD2390 (O/P/Y)


2SA1038 (S/E)
2SC1740S (S)
2SA933S (S)
2SC2389S (S/E)

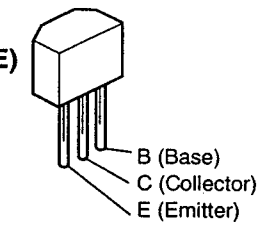


RN2202 PNP

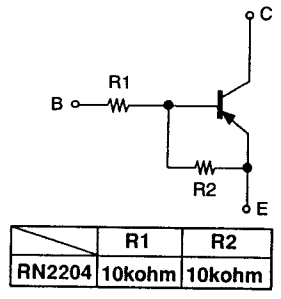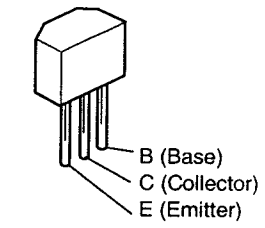


2SJ78
2SK215

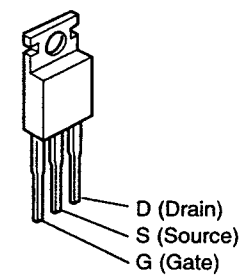


2SD1762 (E/F)
2SB1185 (E/F)

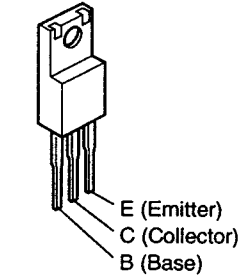

2SK184C (GR)/(RL)

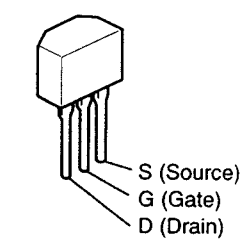


2SK369

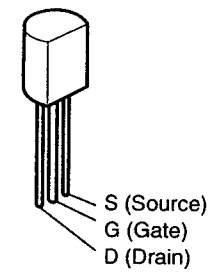


DIODES (including LED)


1SS252




MTZJ3.9A MTZJ18A
MTZJ7.5A MTZJ36A
MTZJ16A




4D4B42 (LC1)(D702): PMA-915R/915RG
S4VB20F (D702): PMA-715R/715RG

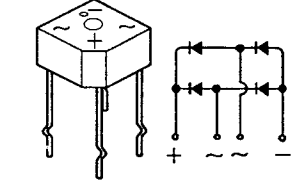


SEI-1810A (Orange)
SEL-1210S (Red)

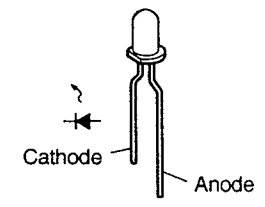

Thyristor SFOR1A42 (SC601)

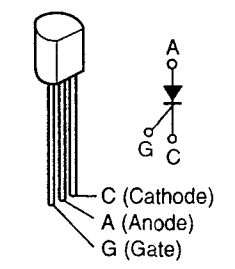

1SR35-200A

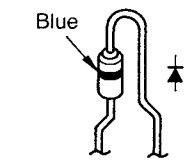


PRINTED WIRING BOARD (Pattern Side)

1 2 3 4 5 6 7 8

1U-2728 MAIN UNIT ASS'Y: PMA-915R/915RG

MAIN UNIT ASS'Y	
-1	Main Unit
-2	S.P. Switch Unit
-3	S.P. Terminal Unit
-4	16V Unit

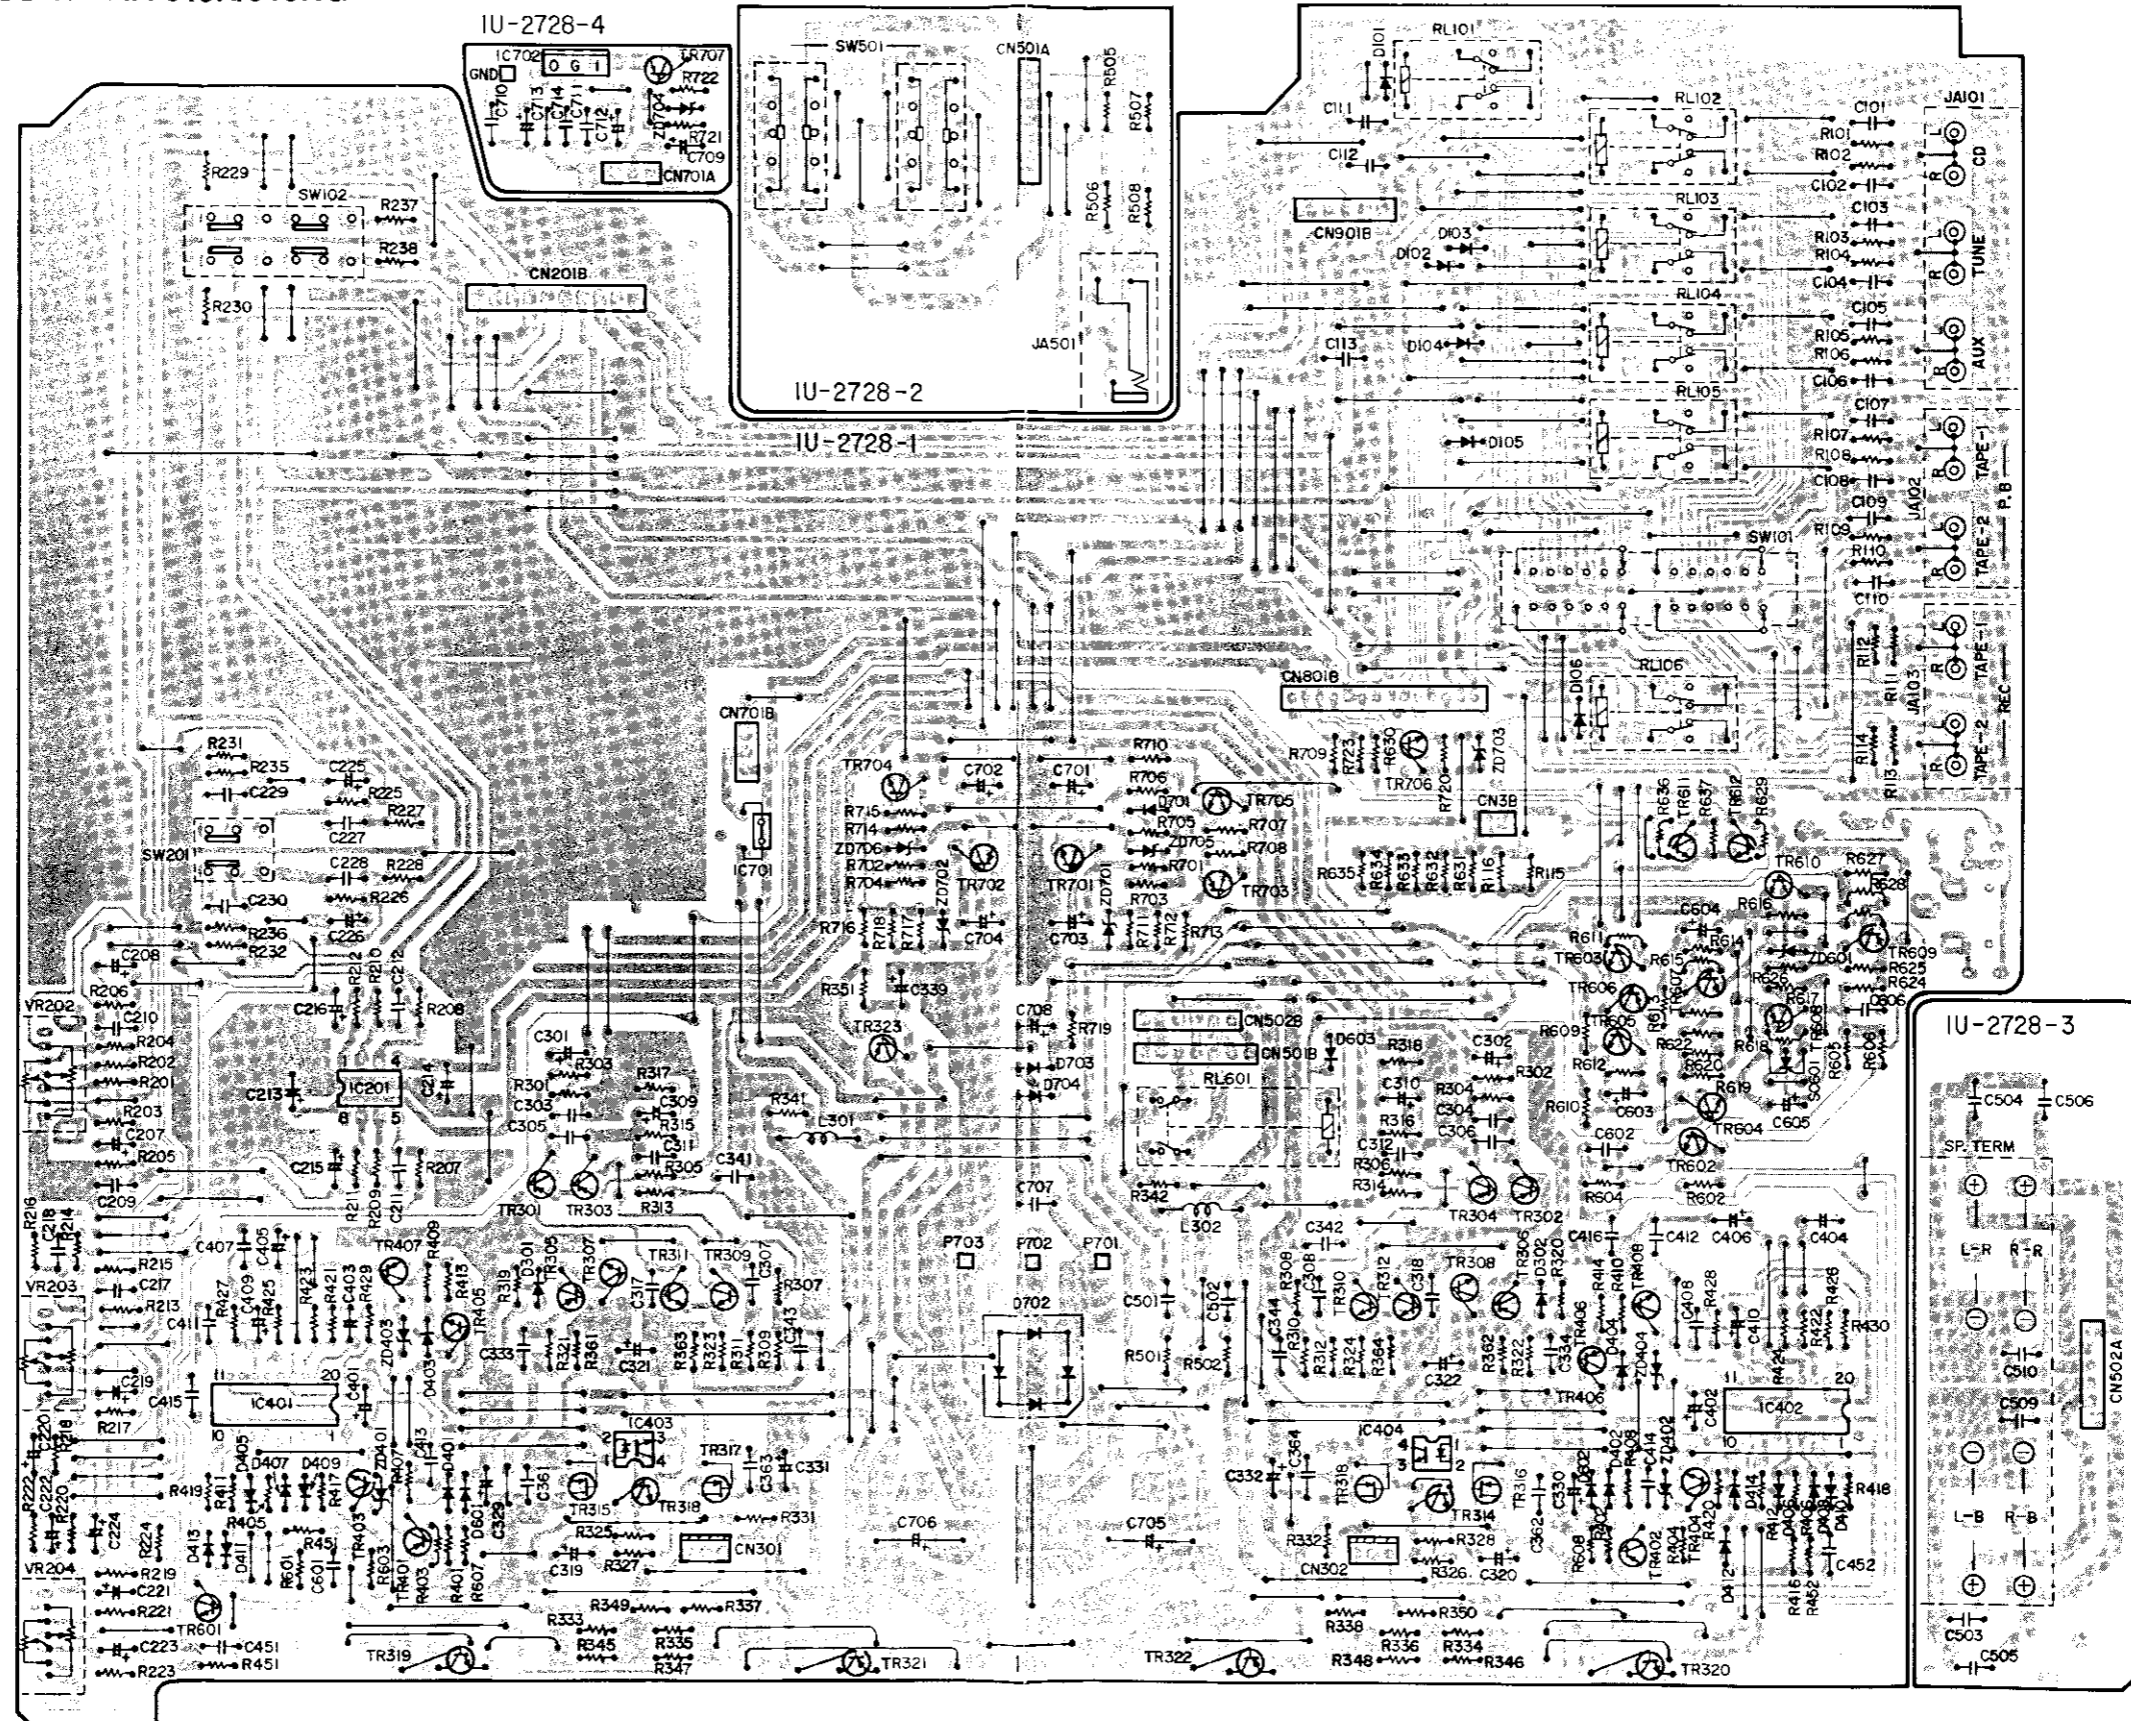


Version	Unit No.	H/P Jack	SP Terminal
Black for Europe	1U-2728A	203 8354 004	203 0484 001
Gold for Europe	1U-2728B	203 8355 003	203 0484 001
U.S.A.	1U-2728D	203 8354 004	203 0632 002
Canada	1U-2728D	203 8354 004	203 0632 002
Multi-Voltage	1U-2728G	203 8354 004	203 0472 013

* (asterisk symbol)

1 2 3 4 5 6 7 8

1U-2729 CONTROL UNIT ASS'Y: PMA-915R/915RG

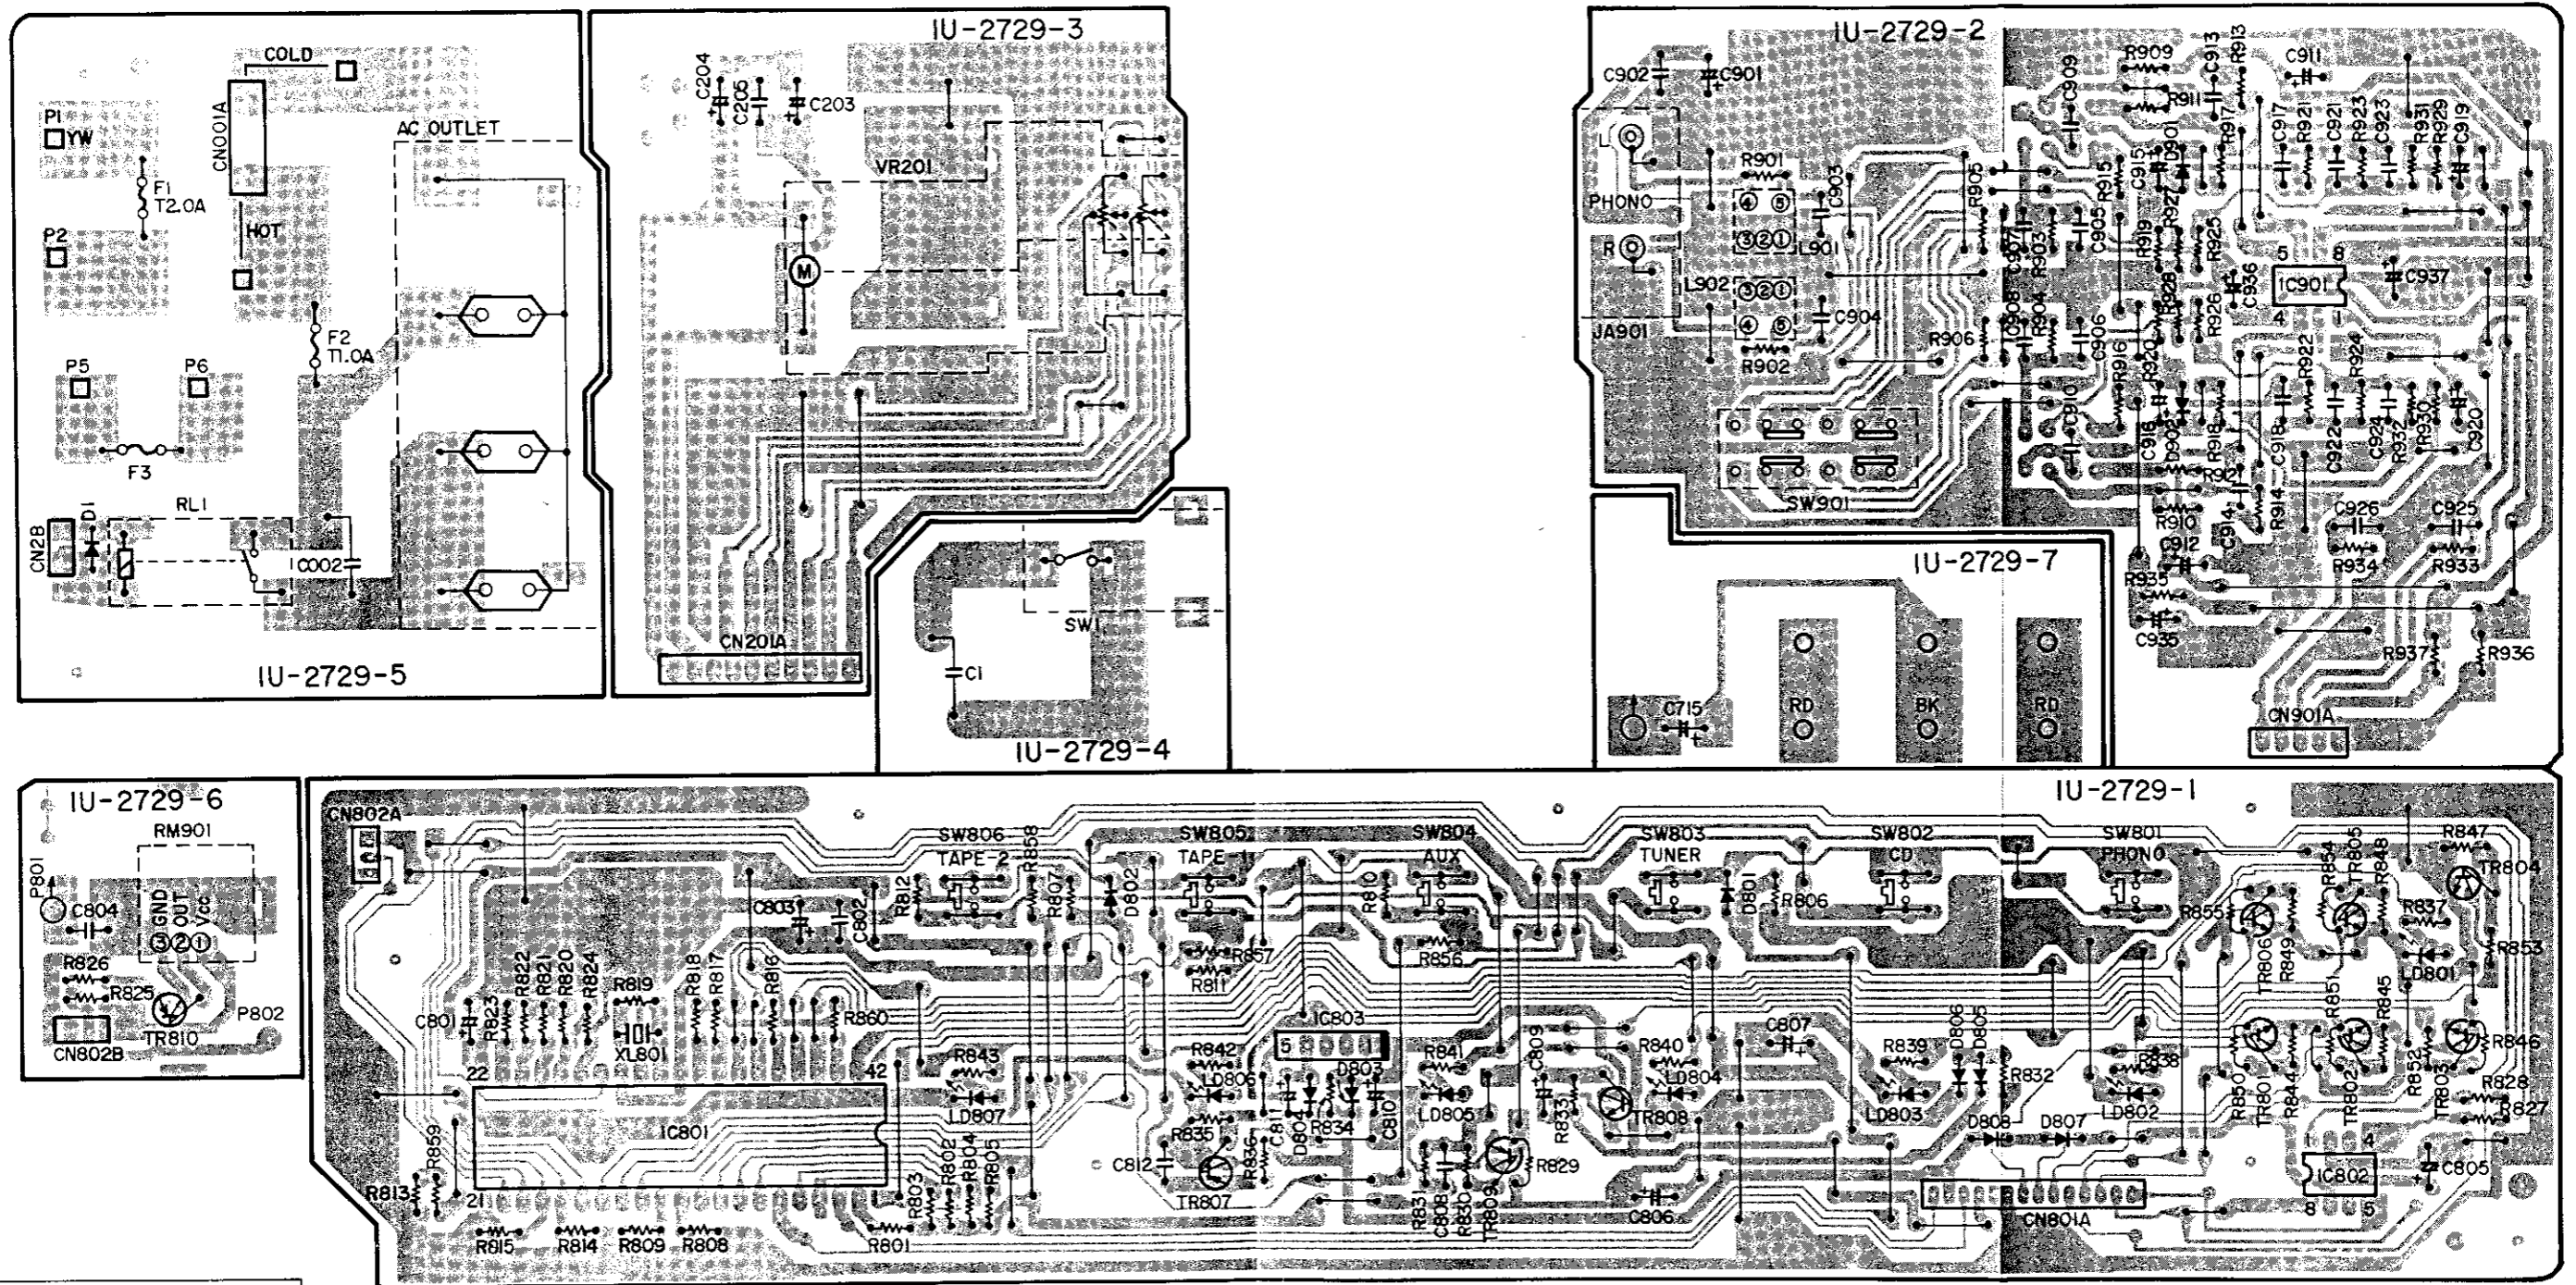

CONTROL UNIT ASS'Y	
-1	μ-Com. Unit
-2	Phono EQ. Unit
-3	Main Vol. Unit
-4	Power Switch Unit
-5	AC Unit
-6	Remocon Sensor Unit
-7	P.T. Unit


* Version	Unit No.	L901, 902	R637, 638	F001	F002	F003	AC Outlet
Europe Black	1U-2729A	235 9003 002	820 ohm	T2.5A	T1A	—	203 3950 002
Europe Gold	1U-2729B	235 9003 002	820 ohm	T2.5A	T1A	—	203 3950 002
U.S.A., Canada	1U-2729D	—	Jumper	T6.3A	T8A	—	—
Multi-Voltage	1U-2729G	—	Jumper	T2.5A	T1A	T3.15A	—

A
B
C
D
E

1 2 3 4 5 6 7 8

1U-2735 MAIN UNIT ASS'Y: PMA-715R/715RG

MAIN UNIT ASS'Y	
-1	Main Unit
-2	S.P. Switch Unit
-3	S.P. Terminal Unit
-4	16V Unit

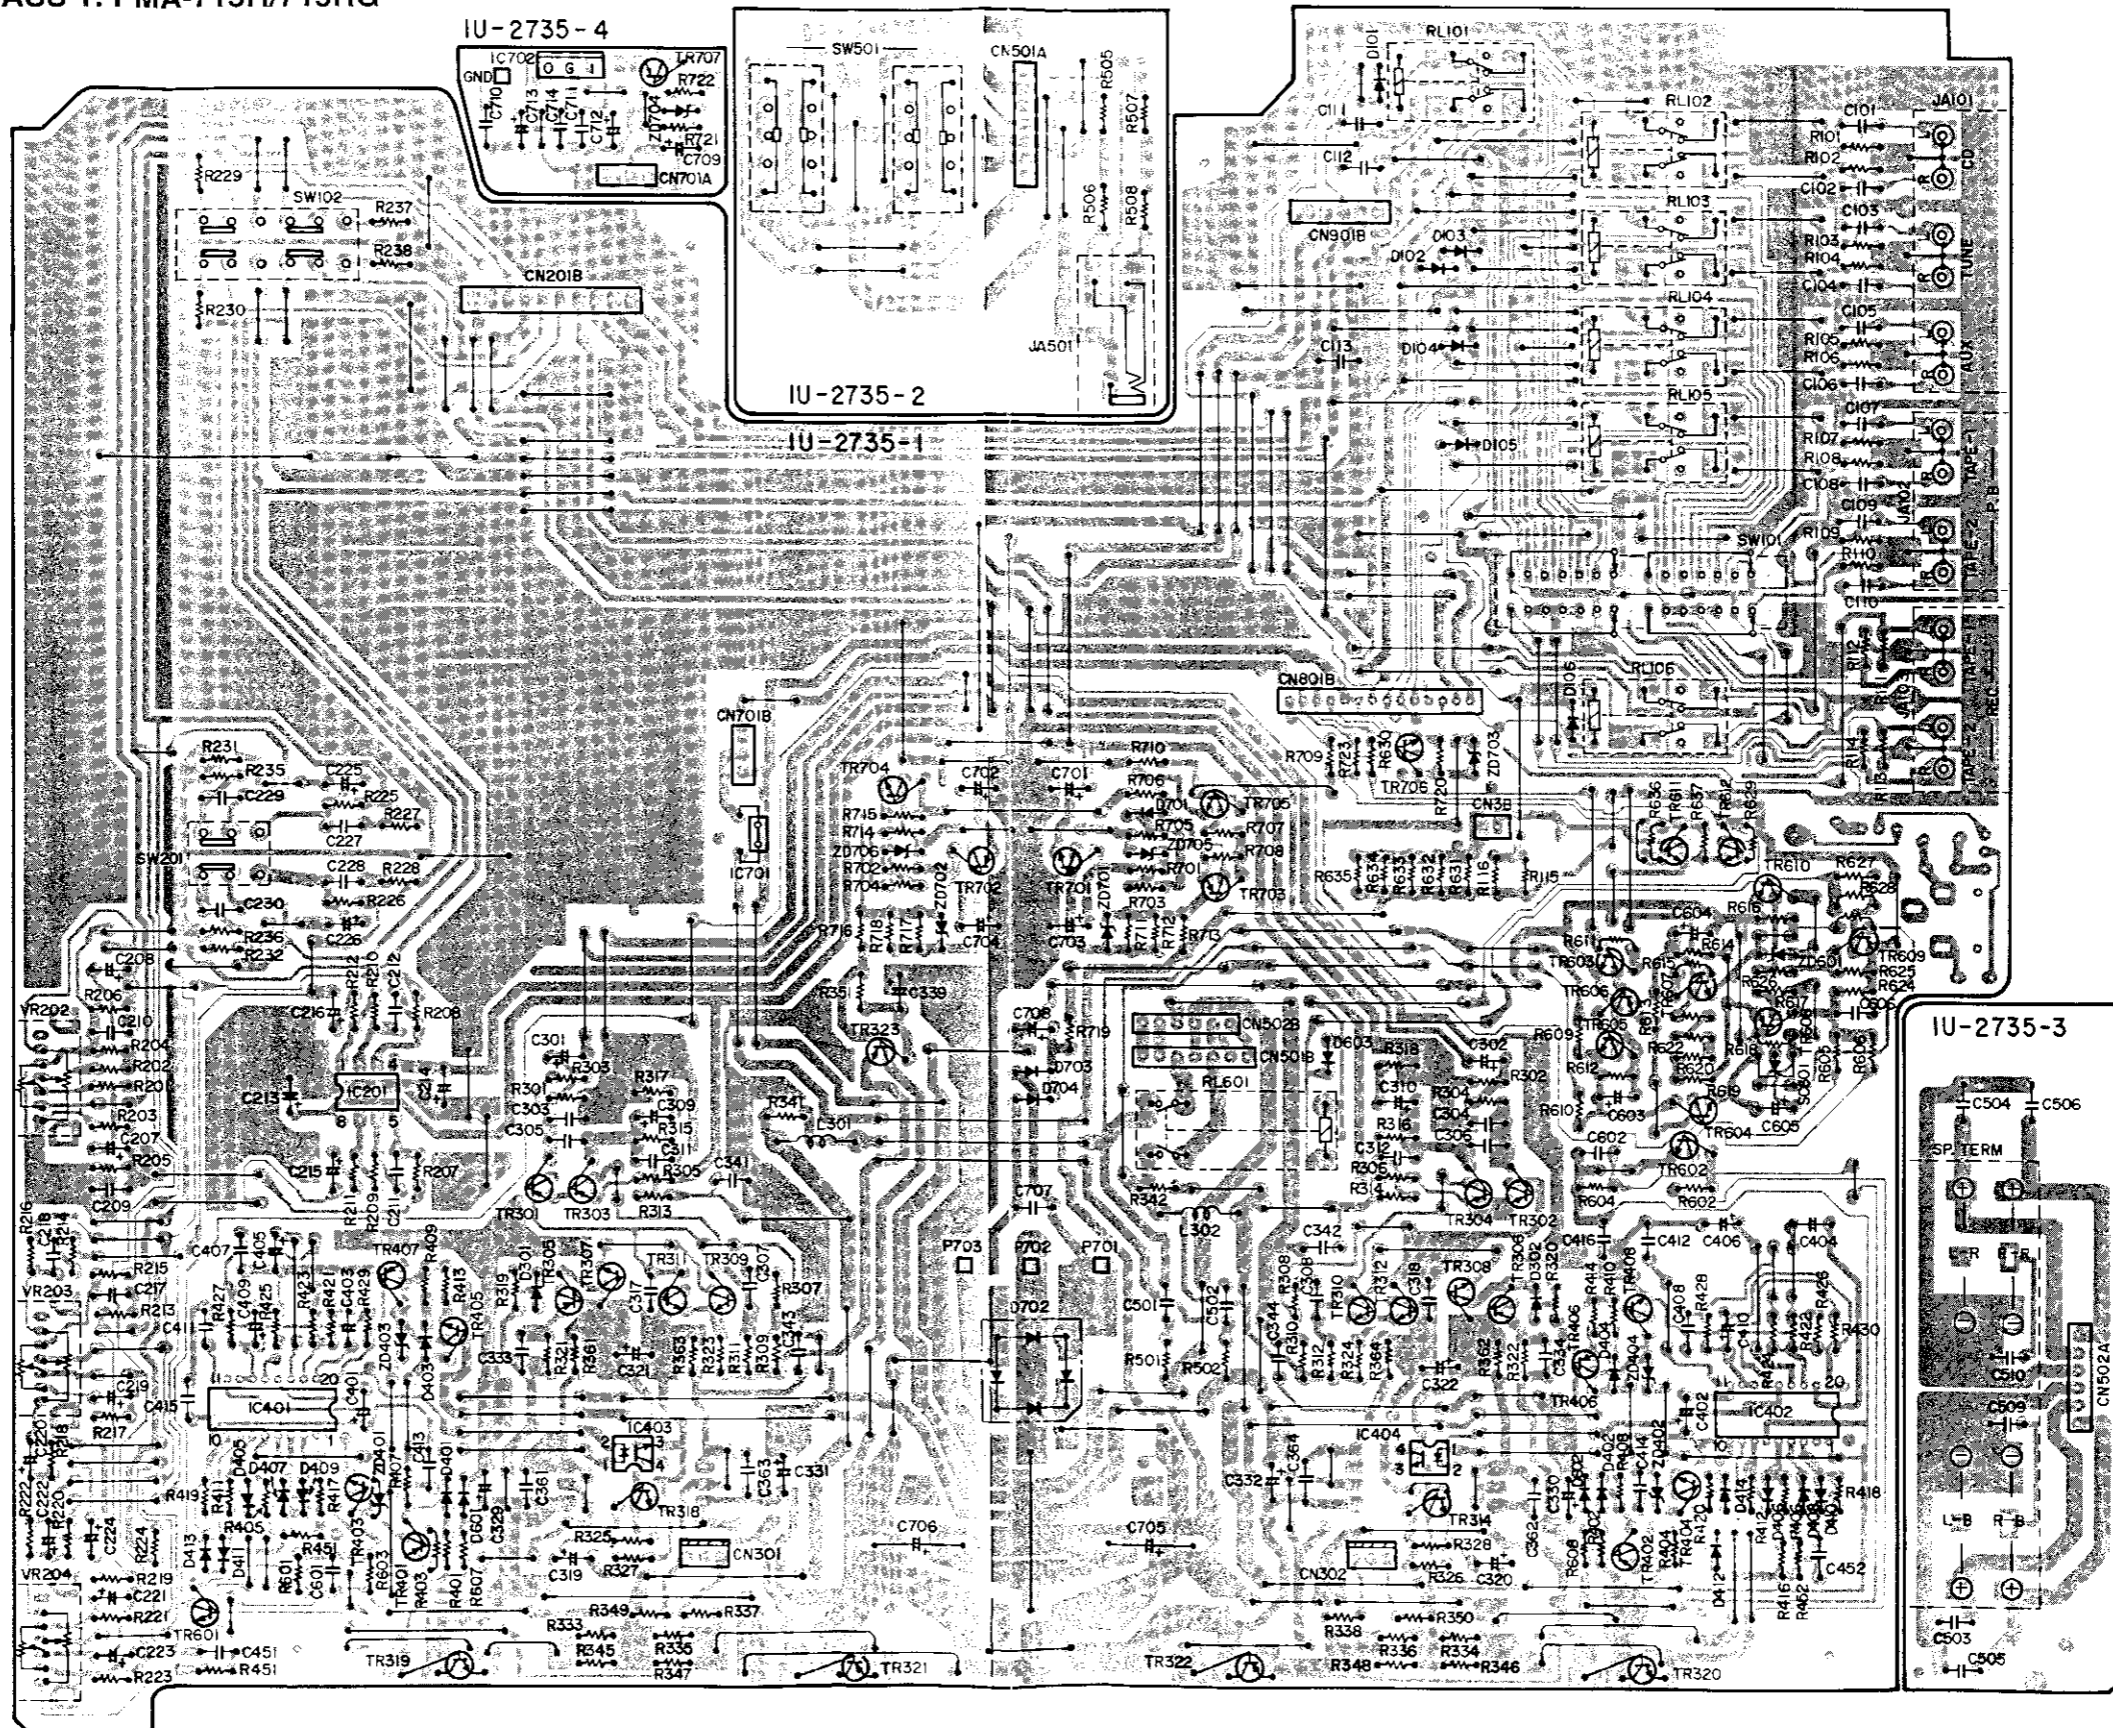


Version	Unit No.	H/P Jack	SP Terminal
Black for Europe	1U-2735A	203 8354 004	203 0484 001
Gold for Europe	1U-2735A	203 8355 003	203 0484 001
Multi-Voltage	1U-2735G	203 8354 004	203 0472 013
Australia, U.K.	1U-2735C	203 8354 004	203 0472 013

*

1 2 3 4 5 6 7 8

1U-2736 CONTROL UNIT ASS'Y: PMA-715R/715RG

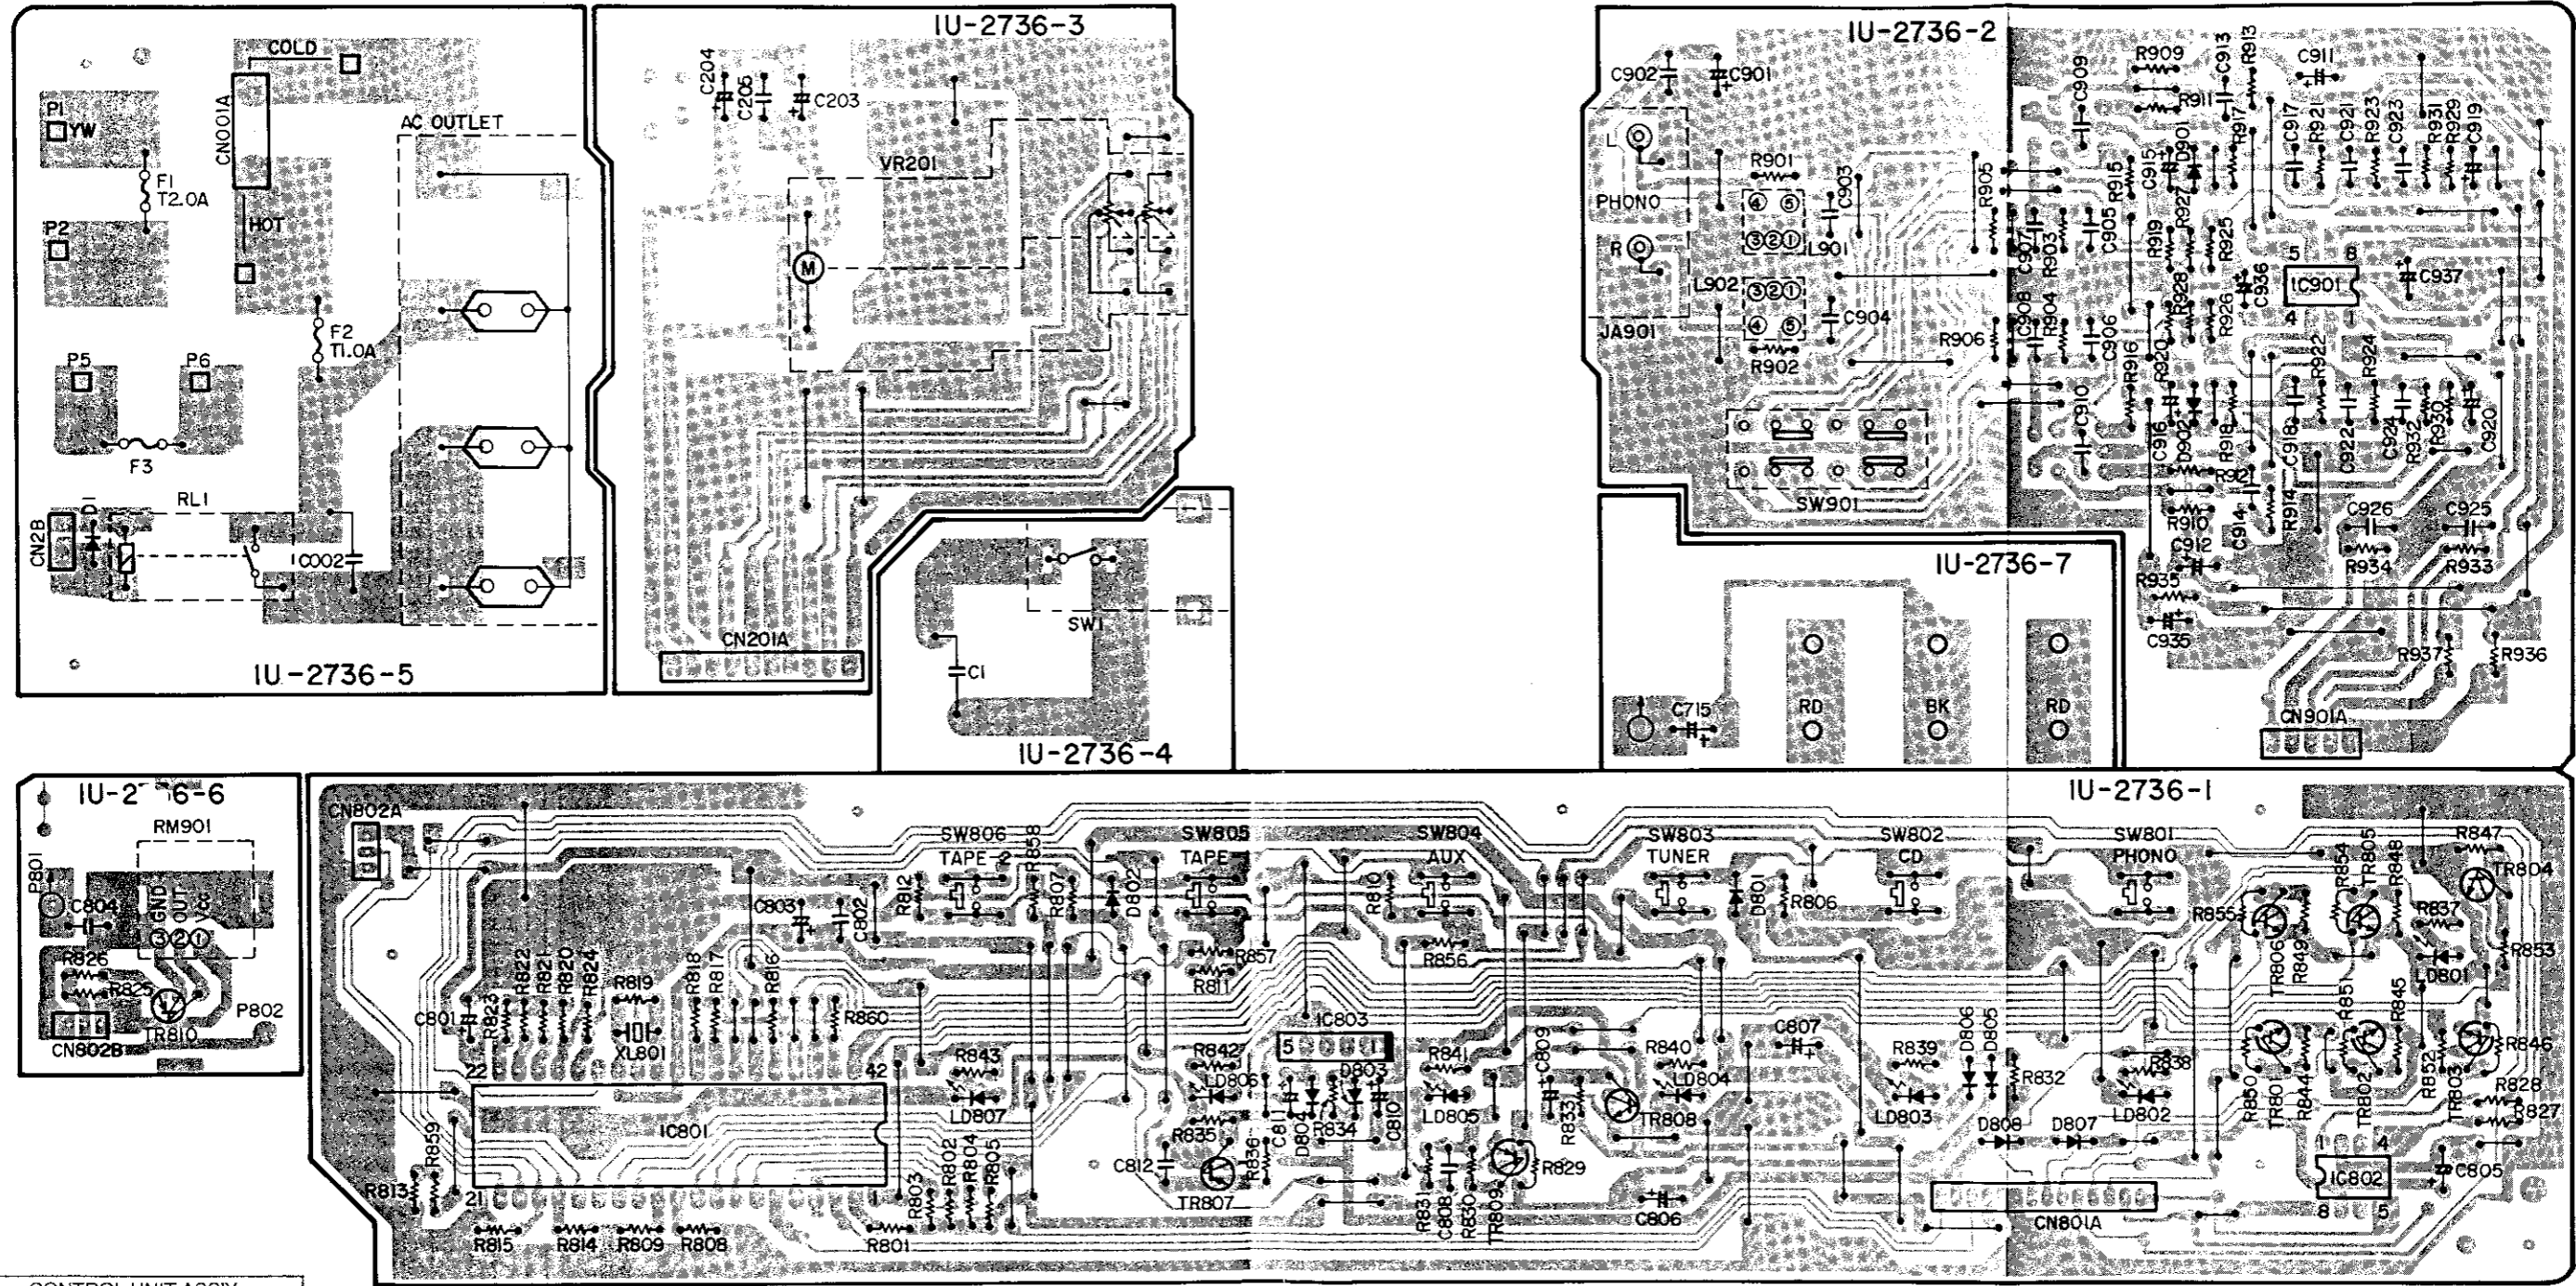

CONTROL UNIT ASS'Y	
-1	μ-Com. Unit
-2	Phono EQ. Unit
-3	Main Vol. Unit
-4	Power Switch Unit
-5	AC Unit
-6	Remocon Sensor Unit
-7	P.T. Unit

*	Version	Unit No.	L901,902	R637,638	F001	F002	F003
	Europe Black	1U-2736A	235 9003 002	820 ohm	2A	1AT	—
	Europe Gold	1U-2736B	235 9003 002	820 ohm	2A	1AT	—
	Multi-Voltage	1U-2736G	—	Jumper	2A	1AT	5A
	Australia, U.K.	1U-2736C	—	Jumper	2A	—	—

A
B
C
D
E

1U-2729A,B CONTROL UNIT ASS'Y (for Europe Version)

Ref. No.	Parts No.	Parts Name	Remarks
C604	254 4252 930	Electrolytic 100µF/10V	CE04W1A101M
C605	254 4252 901	Electrolytic 220µF/10V	CE04W1A220M
C606	255 1265 978	Mylar Film 0.022µF/50V	CQ93M1H223J(B)
C701,702	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C703,704	254 4256 952	Electrolytic 220µF/25V	CE04W1E221M
C707	256 1042 903	Metalized 0.1µF/250V	CF93A2E104K
C708,709	254 4263 916	Electrolytic 0.22µF/100V	CE04W2AR22M
C710	255 1265 978	Mylar Film 0.022µF/50V	CQ93M1H223J(B)
C711	253 1181 904	Ceramic Cap. 0.01µF/50V	CK45F1H103Z
C712,713	254 4260 980	Electrolytic 10µF/50V	CE04W1H100M
C714	253 1181 904	Ceramic Cap. 0.01µF/50V	CK45F1H103Z

OTHER GROUP			Q'ty
	—	(P.W.Board)	(1)
L301,302	235 0068 004	Inductor 1µH	2
SW101	212 0336 005	Rotary Switch	1
SW201	212 1097 000	1 P Push Switch	1
SW202	212 1127 006	1 P Push Switch	1
SW501	212 1132 004	2 P Push Switch	1
RL101-106	214 0127 003	Relay(RY-12W)	6
RL601	214 9003 005	Relay	1
	205 0484 001	8 P SP Terminal	1
	204 8354 004	Headphone Jack	1
	204 8355 003	Headphone Jack	1
	204 8266 008	4 P Pin Jack(S-GND)	2
	204 8278 009	6 P Pin Jack(S-GND)	1
T.P.	205 0190 036	3 P NH Conn. Base	2
CN901B	205 0666 052	5 P Conn. Base(9130)	1
CN201B	205 0666 007	10 P Conn. Base(9130)	1
CN801B	205 0375 042	14 P Conn. Base(KR-PH)	1
CN701A	205 0233 032	3 P EH Conn. Base	1
CN701	203 4833 018	3 P EH-SCN Conn. Cord	1
CN2B	203 5019 103	3 P-PH 2 P-SAN Ass'y	1
CN502	204 0452 001	6 P SCN-SCN Conn. Cord	1
CN501	204 2692 102	7 P SCN-SCN Conn. Cord	1
	203 0600 009	1 P Contact Ass'y	1

1U-2728D for U.S.A., Canada PARTS LIST

(Same as 1U-2728A, B for Europe Black and Gold except the following Parts)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				
C261	253 1181 917	Ceramic Cap. 0.022µF/50 V	Delete	-
OTHER GROUP				
	205 0632 002	8P SP Terminal	Change	1

1U-2728G for Multi Voltage Model PARTS LIST

(Same as 1U-2728A, B for Europe Black and Gold except the following Parts)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
OTHER GROUP				
	205 0472 013	8P SP Terminal	Change	1
	204 8341 004	Headphone Jack	Change	1

Ref. No.	Parts No.	Parts Name	Remarks
SEMICONDUCTORS GROUP			
IC801	262 1579 303	IC HD404304A13P	µ-com
IC802	263 0476 002	IC LB1639	
IC803	263 0535 008	IC M51594AL	
IC901	265 0322 004	IC BA4558	
TR801-806	273 0235 923	Transistor 2SC1841(E/F)	Built in Resistor
TR807	271 0192 905	Transistor 2SA933S(S)	
TR808,809	273 0303 910	Transistor 2SC1740S(S)	
TR810	269 0026 900	Transistor RN2202	
TR901-904	275 0038 045	FET 2SK369(BL)/(GR)-C	
D001	276 0616 907	Diode 1SS252	
D801-808	276 0616 907	Diode 1SS252	
D901,902	276 0616 907	Diode 1SS252	
LD801	393 9453 916	LED SEL1810A	
LD802-807	393 9434 906	LED SEL1210A	499 0150 008
		Remocon Sensor SBX1610-52	

RESISTORS GROUP (Not included Carbon Film ±5%, 1/4 W Type.)			
Refer to the Schematic Diagram for those parts.)			
△ R832	241 2387 940	Carbon Film 4.7ohm 1/4 W(NB)	RD14B2E4R7JNBS
△ R936,937	241 2377 905	Carbon Film 68ohm 1/4 W(NB)	RD14B2E68JNBS
VR201	211 0761 004	Variable Resistor 30kohm	VR201 Main Volume

CAPACITORS GROUP

△ C001,002	253 8003 713	Ceramic Cap. 4700pF/400 V	CK45E2GAC472MC
C202	253 1181 917	Ceramic Cap. 0.022µF/50 V	CK45F1H223Z
C203,204	254 4254 909	Electrolytic 10µF/16 V	CE04W1C100M
C205	253 1181 917	Ceramic Cap. 0.022µF/50 V	CK45F1H223Z
C262	253 4537 966	Ceramic Cap. 47pF/50 V	CC45SL1H470J
C715	253 1181 904	Ceramic Cap 0.01µF/50 V	CE45F1H103Z
C801	254 4213 937	Electrolytic 100µF/6.3 V	CE04W0J101 M(SRA)
C802	253 1181 917	Ceramic Cap. 0.022µF/50 V	CK45F1H223Z
C803	254 4213 937	Electrolytic 100µF/6.3 V	CE04W0J101 M(SRA)
C804	253 1181 917	Ceramic Cap. 0.022µF/50 V	CK45F1H223Z
C805	254 4213 937	Electrolytic 100µF/6.3 V	CE04W0H101 M(SRA)
C806	254 6190 906	Electrolytic 330µF/6.3 V	CE04W0J331 M(SRA)
C807	259 0007 003	Back up Cap. 8200µF/5.5 V	SB CAP=822=C
C808	253 1181 917	Ceramic Cap. 0.022µF/50 V	CK45F1H223Z
C809	254 4196 973	Electrolytic 4.7µF/50 V	CE04W1H4R 7M(SRA)
C810	254 4196 944	Electrolytic 1µF/50 V	CE04W1H01 OM(SRA)
C811	254 4196 928	Electrolytic 0.33µF/50 V	CE04W1HR3 3M(SRA)
C812	256 1034 982	Metalized 0.12µF/50 V	CF93A1H124 J
C901	254 4260 948	Electrolytic 1µF/50 V	CE04W1H01 OM
C902	253 1181 917	Ceramic Cap. 0.022µF/50 V	CK45F1H223Z
C903,904	253 4537 966	Ceramic Cap. 47pF/50 V	CC45SL1H470J
C905,906	253 1179 929	Ceramic Cap. 150pF/50 V	CK45B1H51K
C907,908	253 1179 961	Ceramic Cap. 330pF/50 V	CK45B1H31K
C909,910	253 1179 903	Ceramic Cap. 100pF/50 V	CK45B1H101K
C911,912	254 4260 948	Electrolytic 1µF/50 V	CE04W1H01 OM
C913,914	255 1251 937	Mylar Film 0.0033µF/50 V	CQ92M1H33 2J(MRZ)
C915,916	254 4252 930	Electrolytic 100µF/10 V	CE04W1A10 1M
C917,918	256 1034 953	Metalized 0.068µF/50 V	CF93A1H68 3J
C919,920	254 4254 909	Electrolytic 10µF/16 V	CE04W1C10 OM
C921,922	255 4223 959	Mylar Film 0.018µF/50 V	CQ92M1H18 3J(MRZ)
C923,924	255 6178 976	Film Cap. 0.0012µF/50 V	CQ93S1H12 2J(SMT)

1U-2729G for Multi-Voltage Model PARTS LIST

(Same as 1U-2729A, B for Europe Black and Gold except the following Parts)

Ref. No.	Parts No.	Parts Name	Remarks	
C925,926	253 1179 961	Ceramic Cap. 330pF/50 V	CK45B1H331K	
C935	254 4252 930	Electrolytic 100μF/10 V	CE04W1A101M	
C936,937	254 4256 936	Electrolytic 47μF/25 V	CE04W1E470M	
OTHER GROUP				Q'ty
	—	(P.W.Board)		(1)
L901,902	235 9003 002	FTZ Choke Coil		2
△ RL001	214 0142 004	Relay(TV-5)		1
△ F001	206 1015 032	Fuse 2.5 A		1
△ F002	206 1015 029	Fuse 1 A T		1
△	203 3950 002	3 P AC Outlet		1
	202 0040 909	Fuse Clip		4
△ SW001	212 1101 005	Power Switch (TV-5)		1
SW801-806	212 5604 910	Tact Switch		6
SW901	212 1099 008	1 P Push Switch	MM/MC	1
	204 8413 000	2 P Pin Jack(C-GND)	Phono	1
XL801	399 9018 003	Ceramic Resonator CST 4.00MGW		1
	205 0692 000	2 P Wrapping Terminal		1
CN201A	205 0667 006	10 P Conn. Base -L(9130)		1
CN901A	205 0337 051	5 P Conn. Base -L(9130)		1
CN2B	205 0406 034	3 P Conn. Base (KR-PH)		1
	203 0494 008	1 P Contact Ass'y		1
	203 0418 000	1 P SIN Cord Ass'y		1
CN801A	204 6497 002	14 P PH-SAN Conn. Cord		1
	203 5018 007	3 P SAN-SAN Conn. Cord		1
	203 5020 008	3 P SIN Cord Ass'y		1
	203 2364 000	2 P SIN Cord Ass'y		1
	203 0600 009	1P Contact Ass'y		1
	415 0299 000	Condenser Cover	for C002	1

Ref. No.	Part No.	Part Name	Remarks	Q'ty
OTHER GROUP				
L901,902	235 9003 002	FTZ Choke Coil	Delete	-
△ F003	203 3950 002	3PA Outlet	Delete	-
	206 1015 032	Fuse 2.5A	Add	1
	202 0040 909	Fuse Clip	Add. (for F003)	2(6)
△ F001	206 1036 011	Fuse (6.3A)	Change	1
△ F002	206 1015 061	Fuse (2A)	Change	1
	513 2323 029	Fuse Label T2.0A	Add for F002	1
	513 2323 045	Fuse Label T6.3A	Add for F001	1
	513 2323 058	Fuse Label T2.5A	Add for F003	1

1U-2729D for U.S.A., Canada PARTS LIST

(Same as 1U-2729A, B for Europe Black and Gold except the following Parts)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				
C262	253 4537 966	Ceramic Cap. 47pF/50 V	Delete	-
OTHER GROUP				
L901,902	235 9003 002	FTZ Choke Coil	Delete	-
△ F001	206 1046 001	Fuse 6.3A	Change	1
△ F002	203 3950 002	3P AC Outlet	Delete	-
	206 1046 014	Fuse 8A	Change	1
	513 2323 003	Fuse Label 6.3A	Add for F001	1
	513 1897 093	Fuse Label 8A	Add for F002	1

1U-2736A, B CONTROL UNIT ASS'Y (for Europe Version)

Ref. No.	Parts No.	Parts Name	Remarks
C701,702	254 4260 948	Electrolytic 1 μ F/50 V	CE04W1H010M
C703,704	254 4256 952	Electrolytic 220 μ F/25 V	CE04W1E221M
C705,706	254 4365 704	Electrolytic 10000 μ F/56 V	CE04W==103MC(DL)
C707	256 1042 903	Metalized 0.1 μ F/250 V	CF93A2E104K
C708,709	254 4263 916	Electrolytic 0.22 μ F/100 V	CE04W2AR22M
C711	253 1181 904	Ceramic Cap. 0.01 μ F/50 V	CK45F1H103Z
C712,713	254 4260 980	Electrolytic 10 μ F/50 V	CE04W1H100M
C714	253 1181 904	Ceramic Cap. 0.01 μ F/50 V	CK45F1H103Z

OTHER GROUP			Q'ty
		(P.W.Board)	(1)
L301,302	235 0068 004	Inductor 1 μ H	2
SW101	212 0336 005	Rotary Switch	1
SW201	212 1097 000	1 P Push Switch	1
SW202	212 1127 006	1 P Push Switch	1
SW501	212 1131 005	2 P Push Switch	1
RL101-106	214 0127 003	Relay(RY-12W)	6
RL601	214 9003 005	Relay	1
	205 0484 001	8 P SP Terminal	1
	204 8354 004	Headphone Jack	1
	204 8355 003	Headphone Jack	1
	204 8266 008	4 P Pin Jack(S-GND)	2
	204 8278 009	6 P Pin Jack(S-GND)	1
T.P.	205 0190 036	3 P NH Conn. Base	2
CN901B	205 0666 052	5 P Conn. Base(9130)	1
CN201B	205 0666 007	10 P Conn. Base(9130)	1
CN801B	205 0375 042	14 P Conn. Base(KR-PH)	1
CN701A	205 0233 032	3 P EH Conn. Base	1
CN701	203 4833 018	3 P EH-SCN Conn. Cord	1
CN501	204 2692 102	7 P SCN-SCN Conn. Cord	1
CN502	204 0449 001	6 P SCN-SCN Conn. Cord	1
CN2B	203 5019 103	3 P PH 2 P-SAN Ass'y	1
	203 0600 009	1 P Contact Ass'y	1

1U-2735G for Multi Voltage Model PARTS LIST (Same as 1U-2735A, B for Europe Black and Gold except the following Parts)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				
C261	253 1181 917	Ceramic Cap. 0.022 μ F/50V	Delete	-
OTHER GROUP				
	205 0472 013	8P SP Terminal	Change	1

1U-2735C for Australia, U.K models PARTS LIST (Same as 1U-2735A, B for Europe Black and Gold except the following Parts)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				
C261	253 1181 917	Ceramic Cap. 0.022 μ F/50V	Delete	-
OTHER GROUP				
	205 0472 013	8P SP Terminal	Change	1

Ref. No.	Parts No.	Parts Name	Remarks
SEMICONDUCTORS GROUP			
IC801	262 1579 303	IC HD404304A13P	μ -com
IC802	263 0476 002	IC LB1639	
IC803	263 0535 008	IC M51594AL	
IC901	265 0322 004	IC BA4558	Built in Resistor
TR801-806	273 0235 923	Transistor 2SC1841(E/F)	
TR807	271 0192 905	Transistor 2SA933S(S)	
TR808,809	273 0303 910	Transistor 2SC1740S(S)	
TR810	269 0026 900	Transistor RN2202	
TR901-904	275 0038 045	FET 2SK369(BL)(GR)-C	
D001	276 0616 907	Diode 1SS252	
D801-808	276 0616 907	Diode 1SS252	
D901,902	276 0616 907	Diode 1SS252	
LD801	393 9453 916	LED SEL1810A	Remocon Sensor SBX1610-52
LD802-807	393 9434 906	LED SEL1210A	
	499 0150 008		

RESISTORS GROUP (Not included Carbon Film \pm 5%, 1/4 W Type. Refer to the Schematic Diagram for those parts.)

Ref. No.	Parts No.	Parts Name	Remarks
Δ R832	241 2387 940	Carbon Film 4.7ohm 1/4 W(NB)	RD14B2E4R7JNBS
Δ R936,937	241 2377 905	Carbon Film 68ohm 1/4 W(NB)	RD14B2E680JNBS
VR201	211 0761 004	Variable Resistor 30kohm	VR201 Main Volume

CAPACITORS GROUP

Ref. No.	Parts No.	Parts Name	Remarks
Δ C001,002	253 8003 713	Ceramic Cap. 4700pF/400 V	CK45E2GAC472MC
C203,204	254 4254 909	Electrolytic 10 μ F/16 V	CE04W1C100M
C205	253 1181 917	Ceramic Cap. 0.022 μ F/50 V	CK45F1H223Z
C262	253 4537 966	Ceramic Cap. 47pF/50 V	CK45SL1H470J
C715	253 1181 904	Ceramic Cap. 0.01 μ F/50 V	CK45F1H103Z
C801	254 4213 937	Electrolytic 100 μ F/6.3 V	CE04W0J101M(SRA)
C802	253 1181 917	Ceramic Cap. 0.022 μ F/50 V	CK45F1H223Z
C803	254 4213 937	Electrolytic 100 μ F/6.3 V	CE04W0J101M(SRA)
C804	253 1181 917	Ceramic Cap. 0.022 μ F/50 V	CK45F1H223Z
C805	254 4213 937	Electrolytic 100 μ F/6.3 V	CE04W0J101M(SRA)
C806	254 6190 906	Electrolytic 330 μ F/6.3 V	CE04W0J331M(SRA)
C807	259 0007 003	Back up Cap. 8200 μ F/5.5 V	SB CAP==822=C
C808	253 1181 917	Ceramic Cap. 0.022 μ F/50 V	CK45F1H223Z
C809	254 4196 973	Electrolytic 4.7 μ F/50 V	CE04W1H4R7M(SRA)
C810	254 4196 944	Electrolytic 1 μ F/50 V	CE04W1H010M(SRA)
C811	254 4196 928	Electrolytic 0.33 μ F/50 V	CE04W1HR33M(SRA)
C812	256 1034 982	Metalized 0.12 μ F/50 V	CF93A1H124J
C901	254 4260 948	Electrolytic 1 μ F/50 V	CE04W1H010M
C902	253 1181 917	Ceramic Cap. 0.022 μ F/50 V	CK45F1H223Z
C903,904	253 4537 966	Ceramic Cap. 47pF/50 V	CC45SL1H470J
C905,906	253 1179 929	Ceramic Cap. 150pF/50 V	CK45B1H151K
C907,908	253 1179 961	Ceramic Cap. 330pF/50 V	CK45B1H331K
C909,910	253 1179 903	Ceramic Cap. 100pF/50 V	CK45B1H101K
C911,912	254 4260 948	Electrolytic 1 μ F/50 V	CE04W1H010M
C913,914	255 1251 937	Mylar Film 0.0033 μ F/50 V	CQ92M1H333J(MRZ)
C915,916	254 4252 930	Electrolytic 100 μ F/10 V	CE04W1A101M
C917,918	256 1034 953	Metalized 0.068 μ F/50 V	CF93A1H683J
C919,920	254 4254 909	Electrolytic 10 μ F/16 V	CE04W1C100M

1U-2736C for Australia, U.K models PARTS LIST

(Same as 1U-2736A, B for Europe Black and Gold except the following Parts)

Ref. No.	Parts No.	Parts Name	Remarks	Q'ty
C921,922	255 4223 959	Mylar Film 0.018μF/50 V	CQ92M1H183J(MRZ)	
C923,924	255 6178 976	Film Cap. 0.0012μF/50 V	CQ09S1H122J(SMT)	
C925,926	253 1179 961	Ceramic Cap. 330pF/50 V	CK45B1H331K	
C935	254 4252 930	Electrolytic 100μF/10 V	CE04W1A101M	
C936,937	254 4256 936	Electrolytic 47μF/25 V	CE04W1E470M	
OTHER GROUP				
	—	(P.W.Board)		(1)
L901,902	235 9003 002	FTZ Choke Coil		2
△ FL001	214 0142 004	Relay(TV-5)		1
△ F001	206 1015 061	Fuse 2 A		1
△ F002	206 1015 029	Fuse 1 A T		1
△	203 3950 002	3 P AC Outlet		1
	202 0040 909	Fuse Clip		4
△ SW001	212 1101 006	Power Switch (TV-5)		1
SW801-806	212 5604 910	Tact Switch		6
SW901	212 1099 008	1 P Push Switch	MM/MC	1
	204 8413 000	2 P Pin Jack(C-GND)	Phono	1
XL801	399 9018 003	Ceramic Resonator CST 4.00MGW		1
	205 0692 000	2 P Wrapping Terminal		1
CN201A	205 0667 006	10 P Conn. Base -L(9130)		1
CN901A	205 0667 051	5 P Conn. Base -L(9130)		1
	205 0406 034	5 P Conn. Base (KR-PH)		1
	203 0494 008	1 P Contact Ass'y		1
	203 0418 000	1 P SIN Cord Ass'y		1
CN801A	204 6497 002	14 P PH-SAN Conn. Cord		1
	203 5018 007	3 P SAN-SAN Conn. Cord		1
	203 5020 008	3 P SIN Cord Ass'y		1
	203 2364 000	3 P SIN Cord Ass'y		1
	203 0600 009	1 P Contact Ass'y		1
	415 0299 000	Condenser Cover	for C002	1

Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				
C262	253 4537 966	Ceramic 47pF/50V	Delete	-
OTHER GROUP				
L901,902	235 9003 002	FTZ Choke Coil	Delete	-
△ F002	206 1015 029	Fuse 1AT	Delete	-
△	203 3950 002	3P AC Outlet	Delete	-
	203 0600 009	1P Contact Ass'y	Delete	-


1U-2736G for Multi Voltage Model PARTS LIST

(Same as 1U-2736A, B for Europe Black and Gold except the following Parts)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
CAPACITORS GROUP				
C262	253 4537 966	Ceramic Cap. 0.022μF/50 V	Delete	-
OTHER GROUP				
L901,902	235 9003 002	FTZ Choke Coil	Delete	-
	203 3950 002	3P AC Outlet	Delete	-
△ F003	206 1015 061	Fuse 2A	Add	1
	202 0040 909	Fuse Clip	Add (for F003)	2
△ F001	206 1015 090	Fuse (5A)	Change	1
△ F002	206 1015 001	Fuse (2A)	Change	1
	513 2323 016	Fuse Label T5.0A	Add for F001	1
	513 2323 029	Fuse Label T2.0A	Add for F002	1
	513 2323 032	Fuse Label T2.0A	Add for F003	1
	203 0600 009	1 P Contact Ass'y	Delete	-

WIRING DIAGRAM: PMA-915R/915RG

1 2 3 4 5 6 7 8

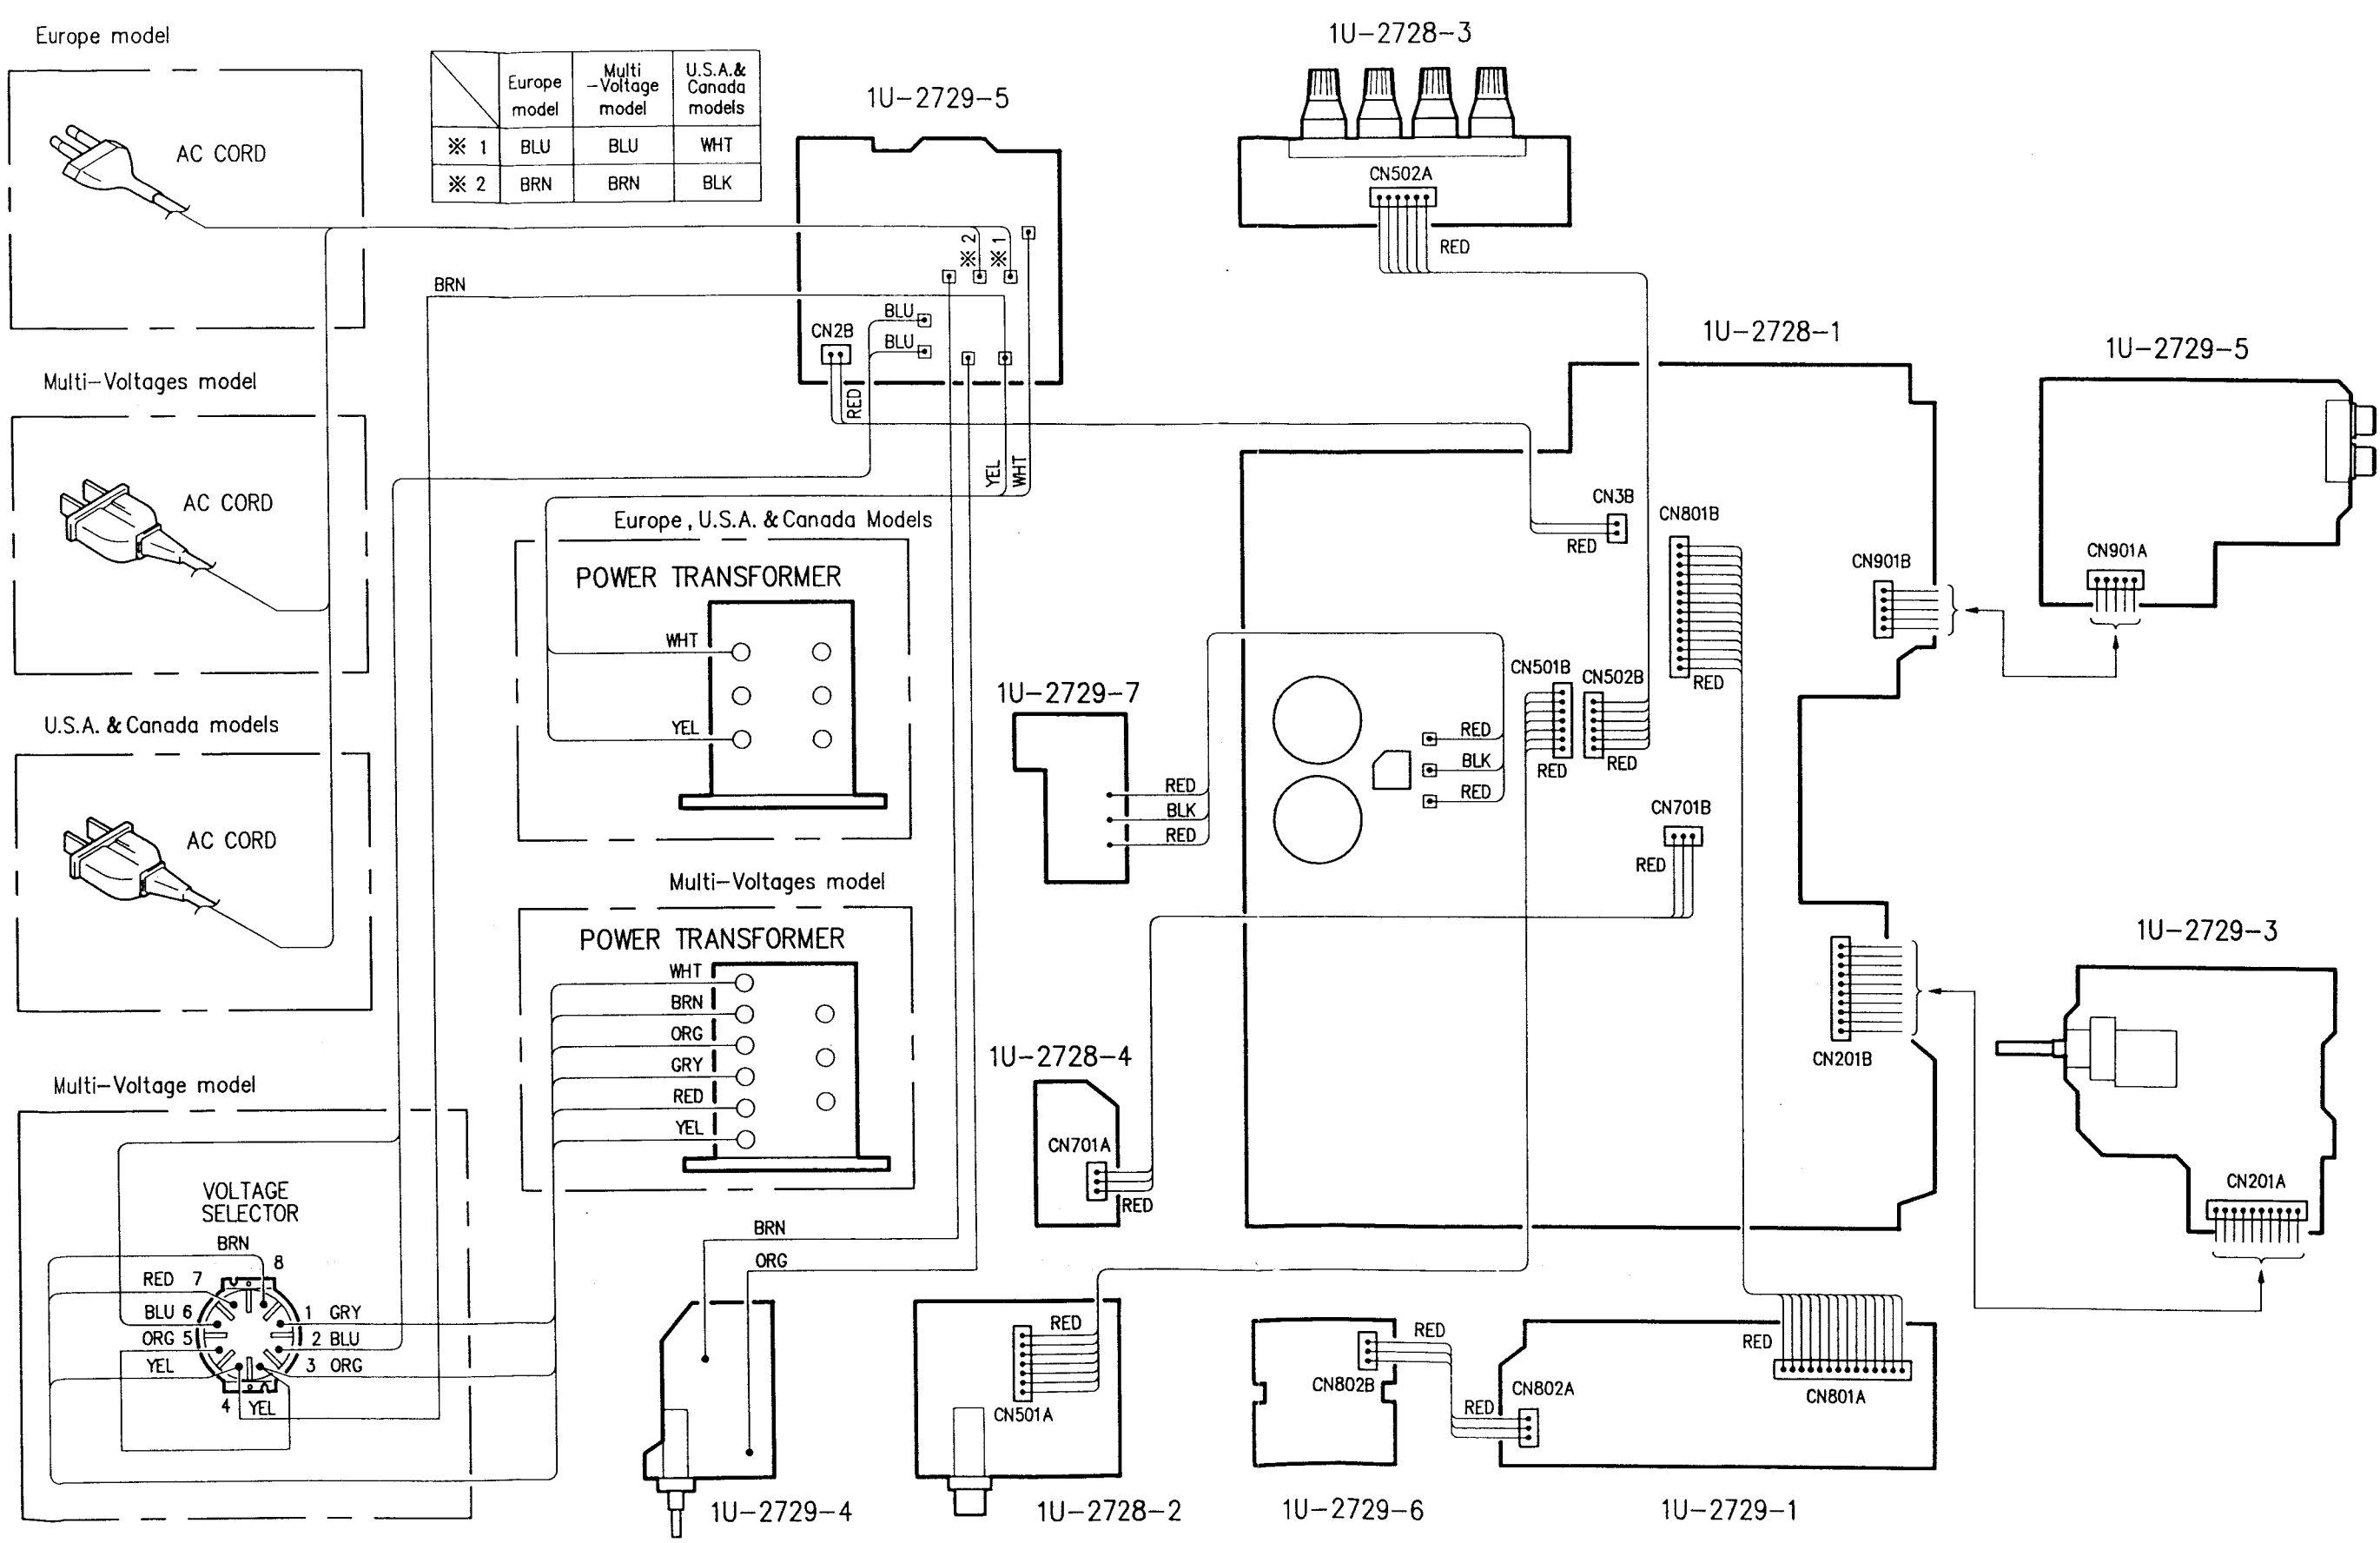

	Europe model	Multi-Voltage model	U.S.A. & Canada models
※ 1	BLU	BLU	WHT
※ 2	BRN	BRN	BLK

Europe, U.S.A. & Canada Models

Multi-Voltages model

VOLTAGE SELECTOR

1U-2729-4

1U-2728-2


1U-2729-6

1U-2729-1


WIRING DIAGRAM: PMA-715R/715RG

1 2 3 4 5 6 7 8















Europe, Australia & U.K. Models

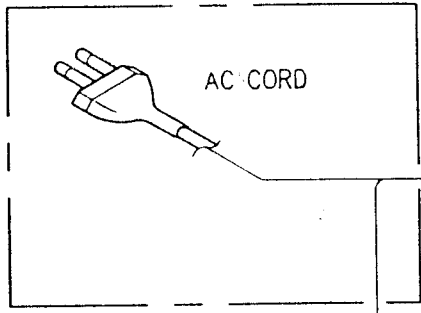


Multi-Voltage model

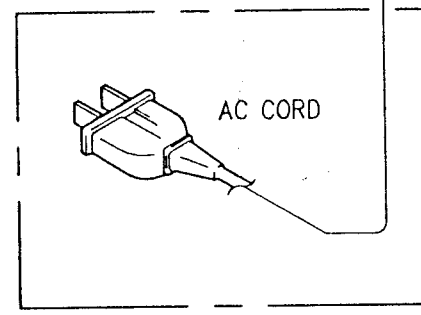


Multi-Voltage model

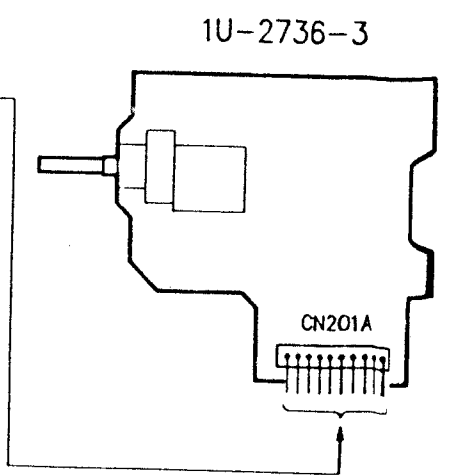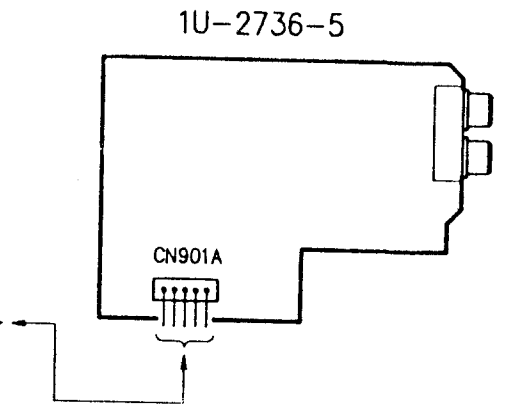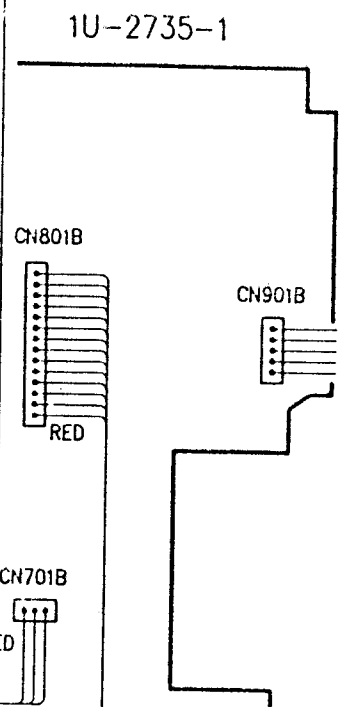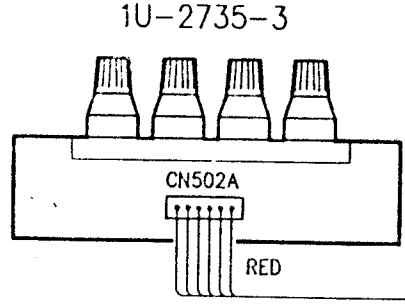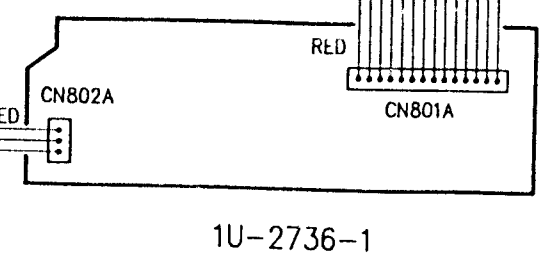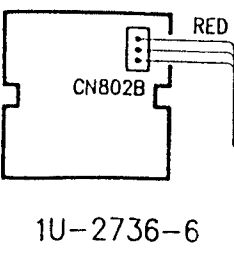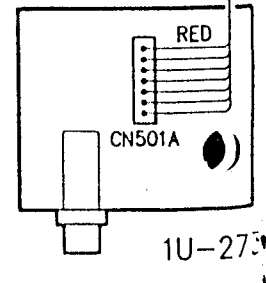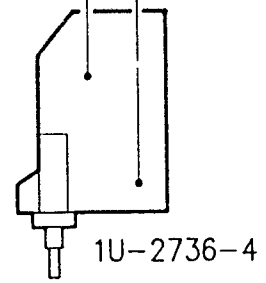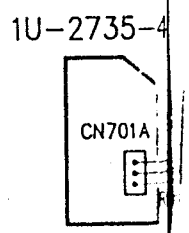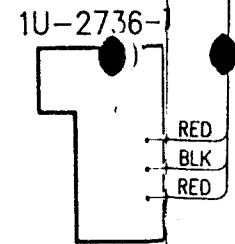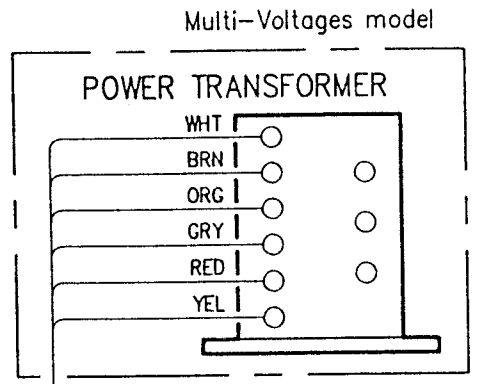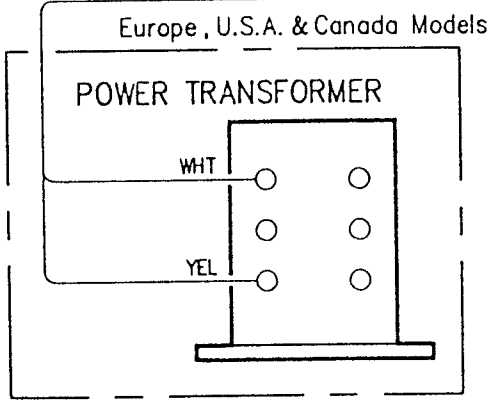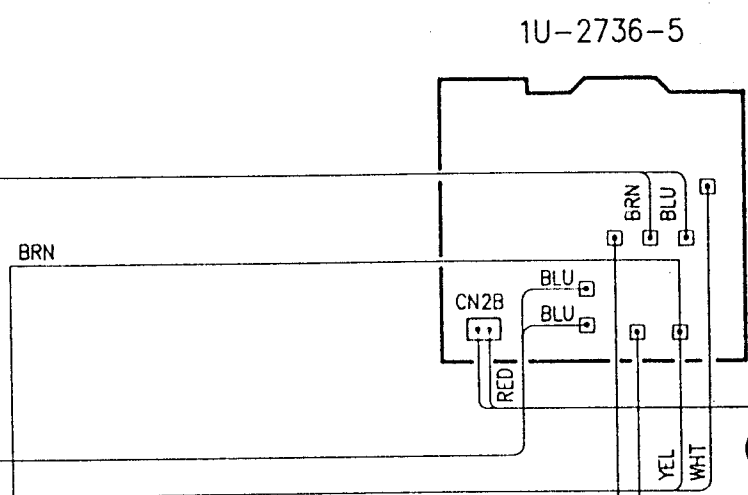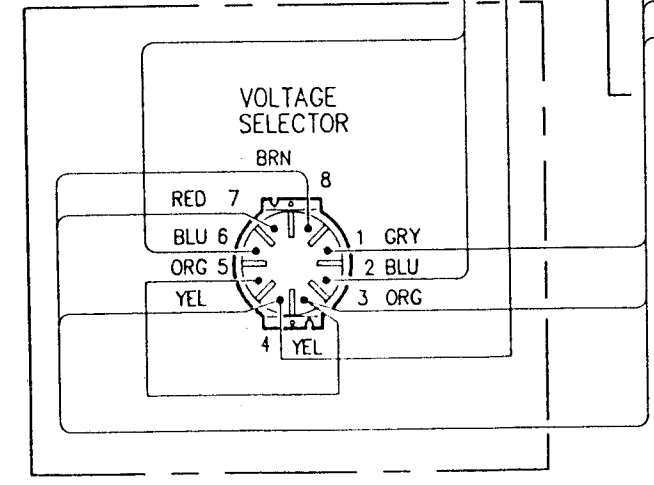


EXPLODED VIEW OF CHASSIS AND CABINET: PMA-915R/915RG

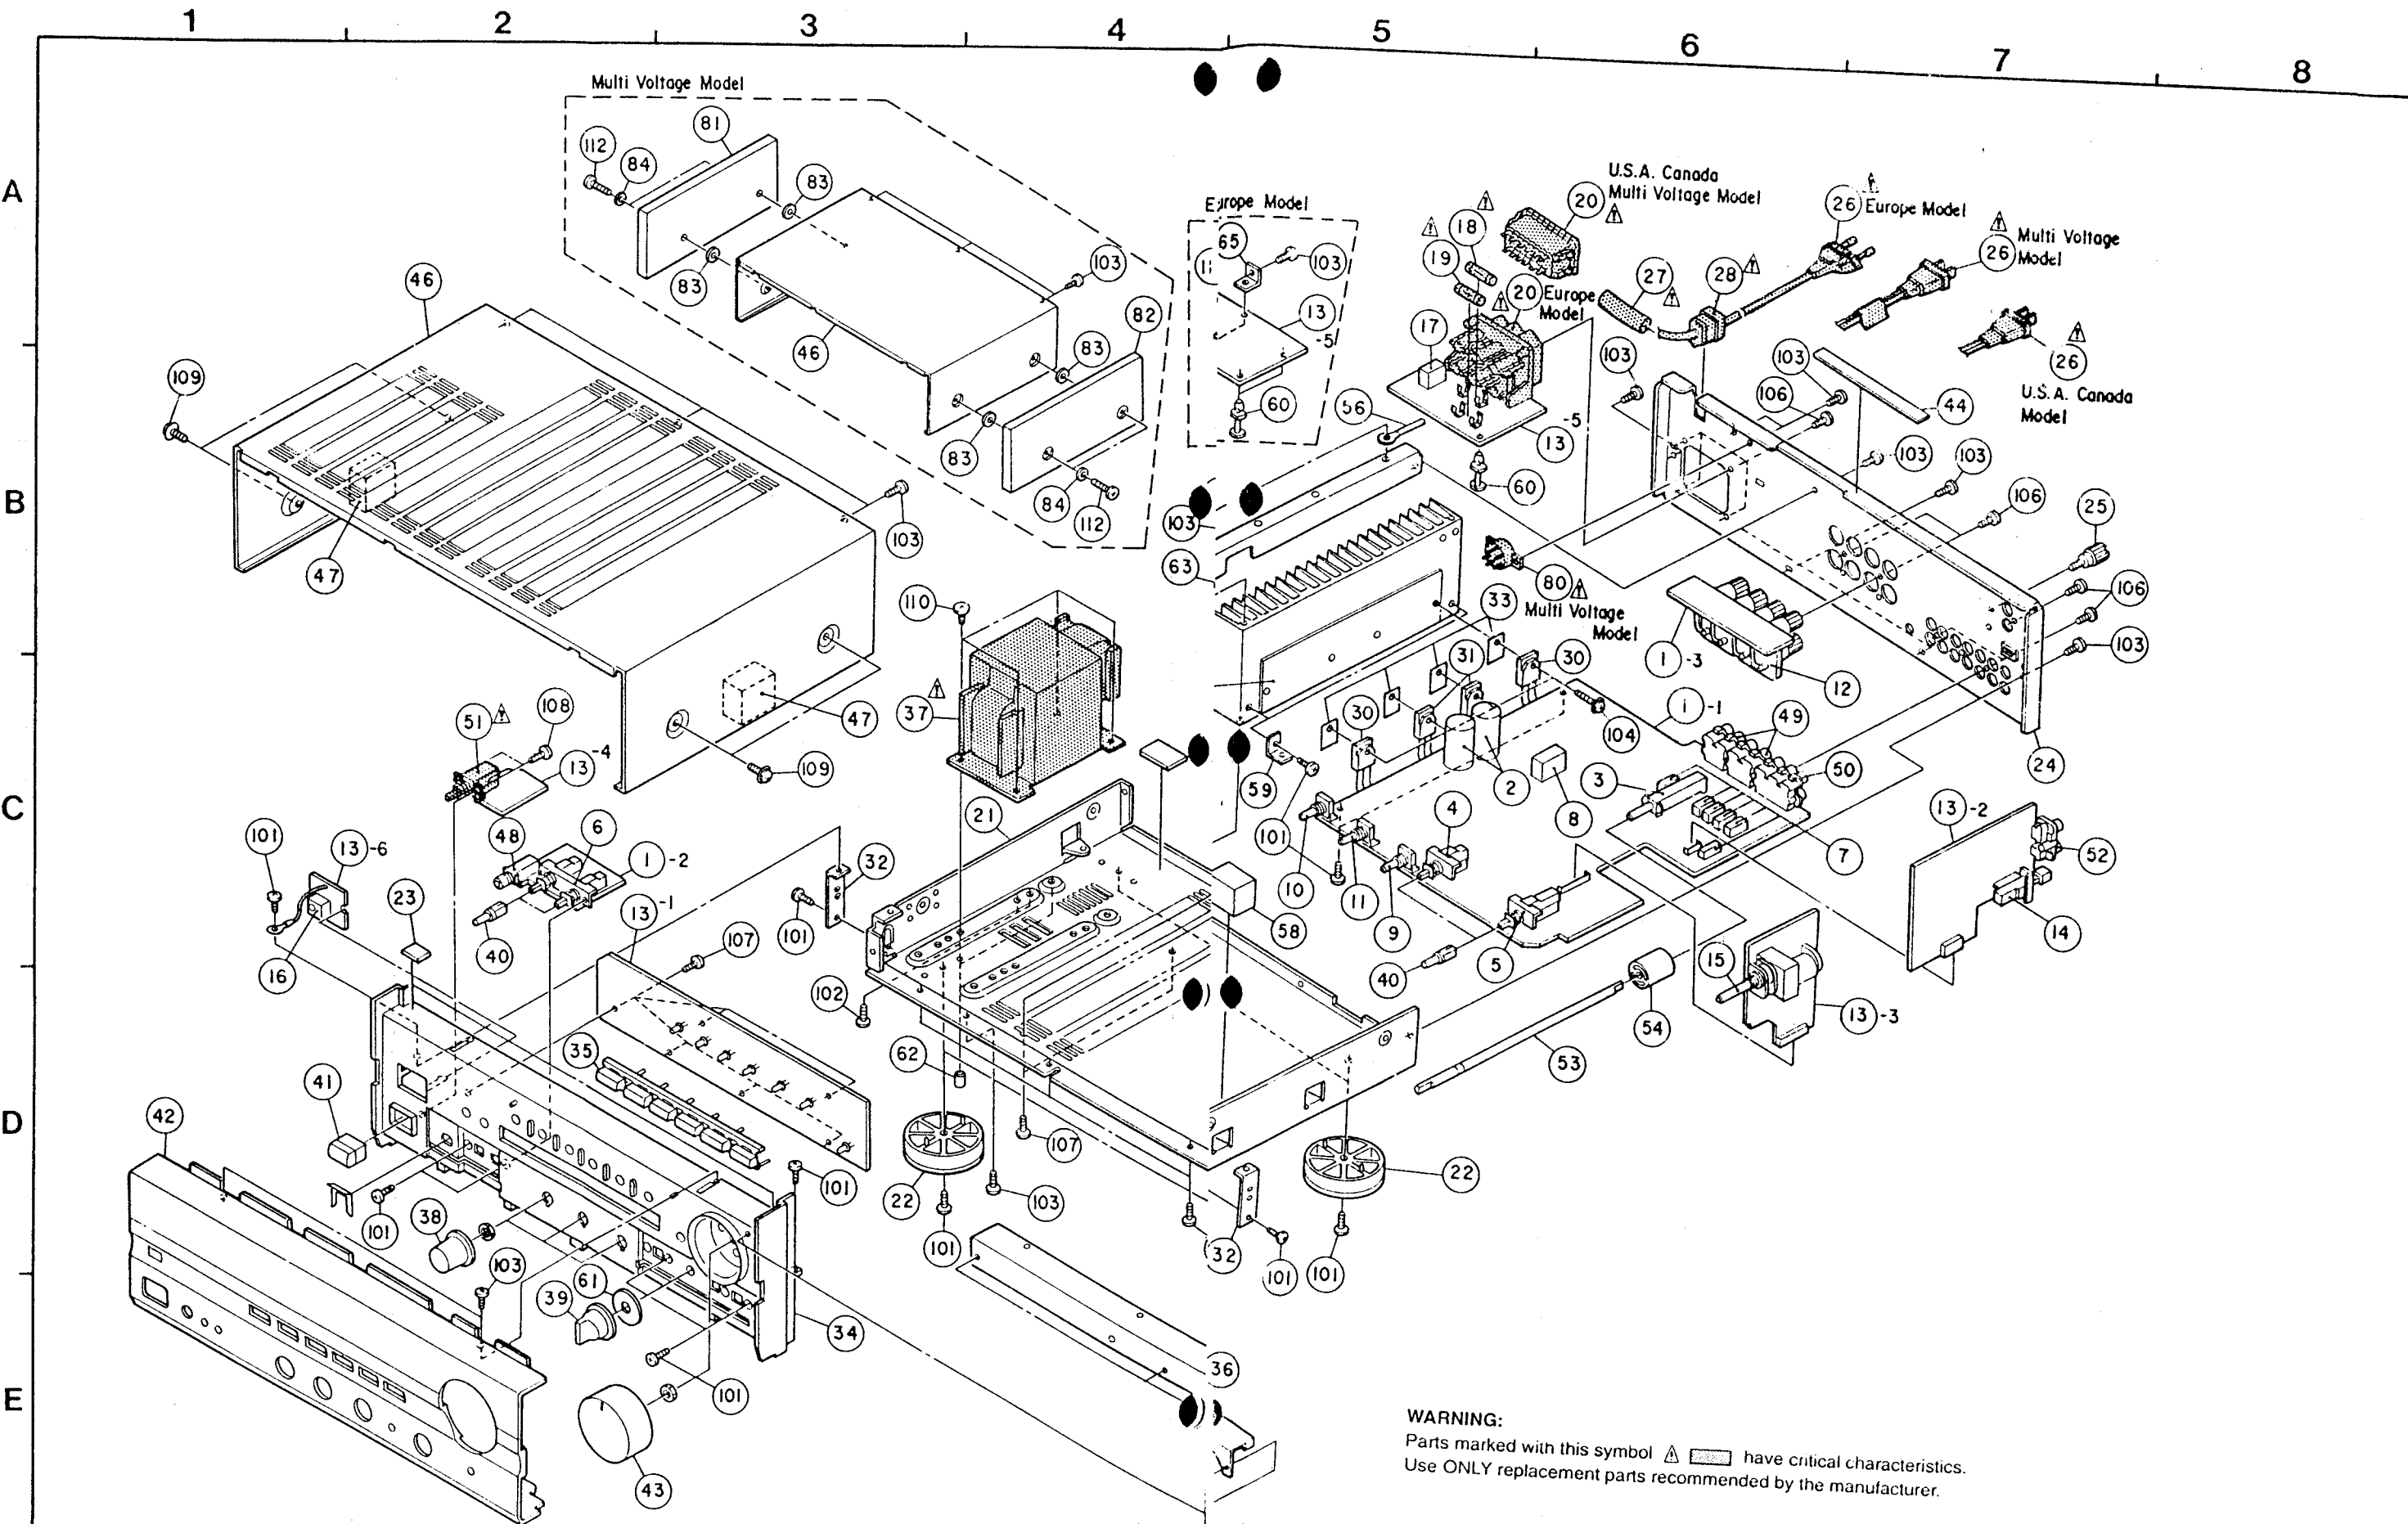

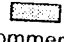WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.


EXPLODED VIEW OF CHASSIS AND CABINET: PMA-715R/715RG

1 2 3 4 5 6 7 8

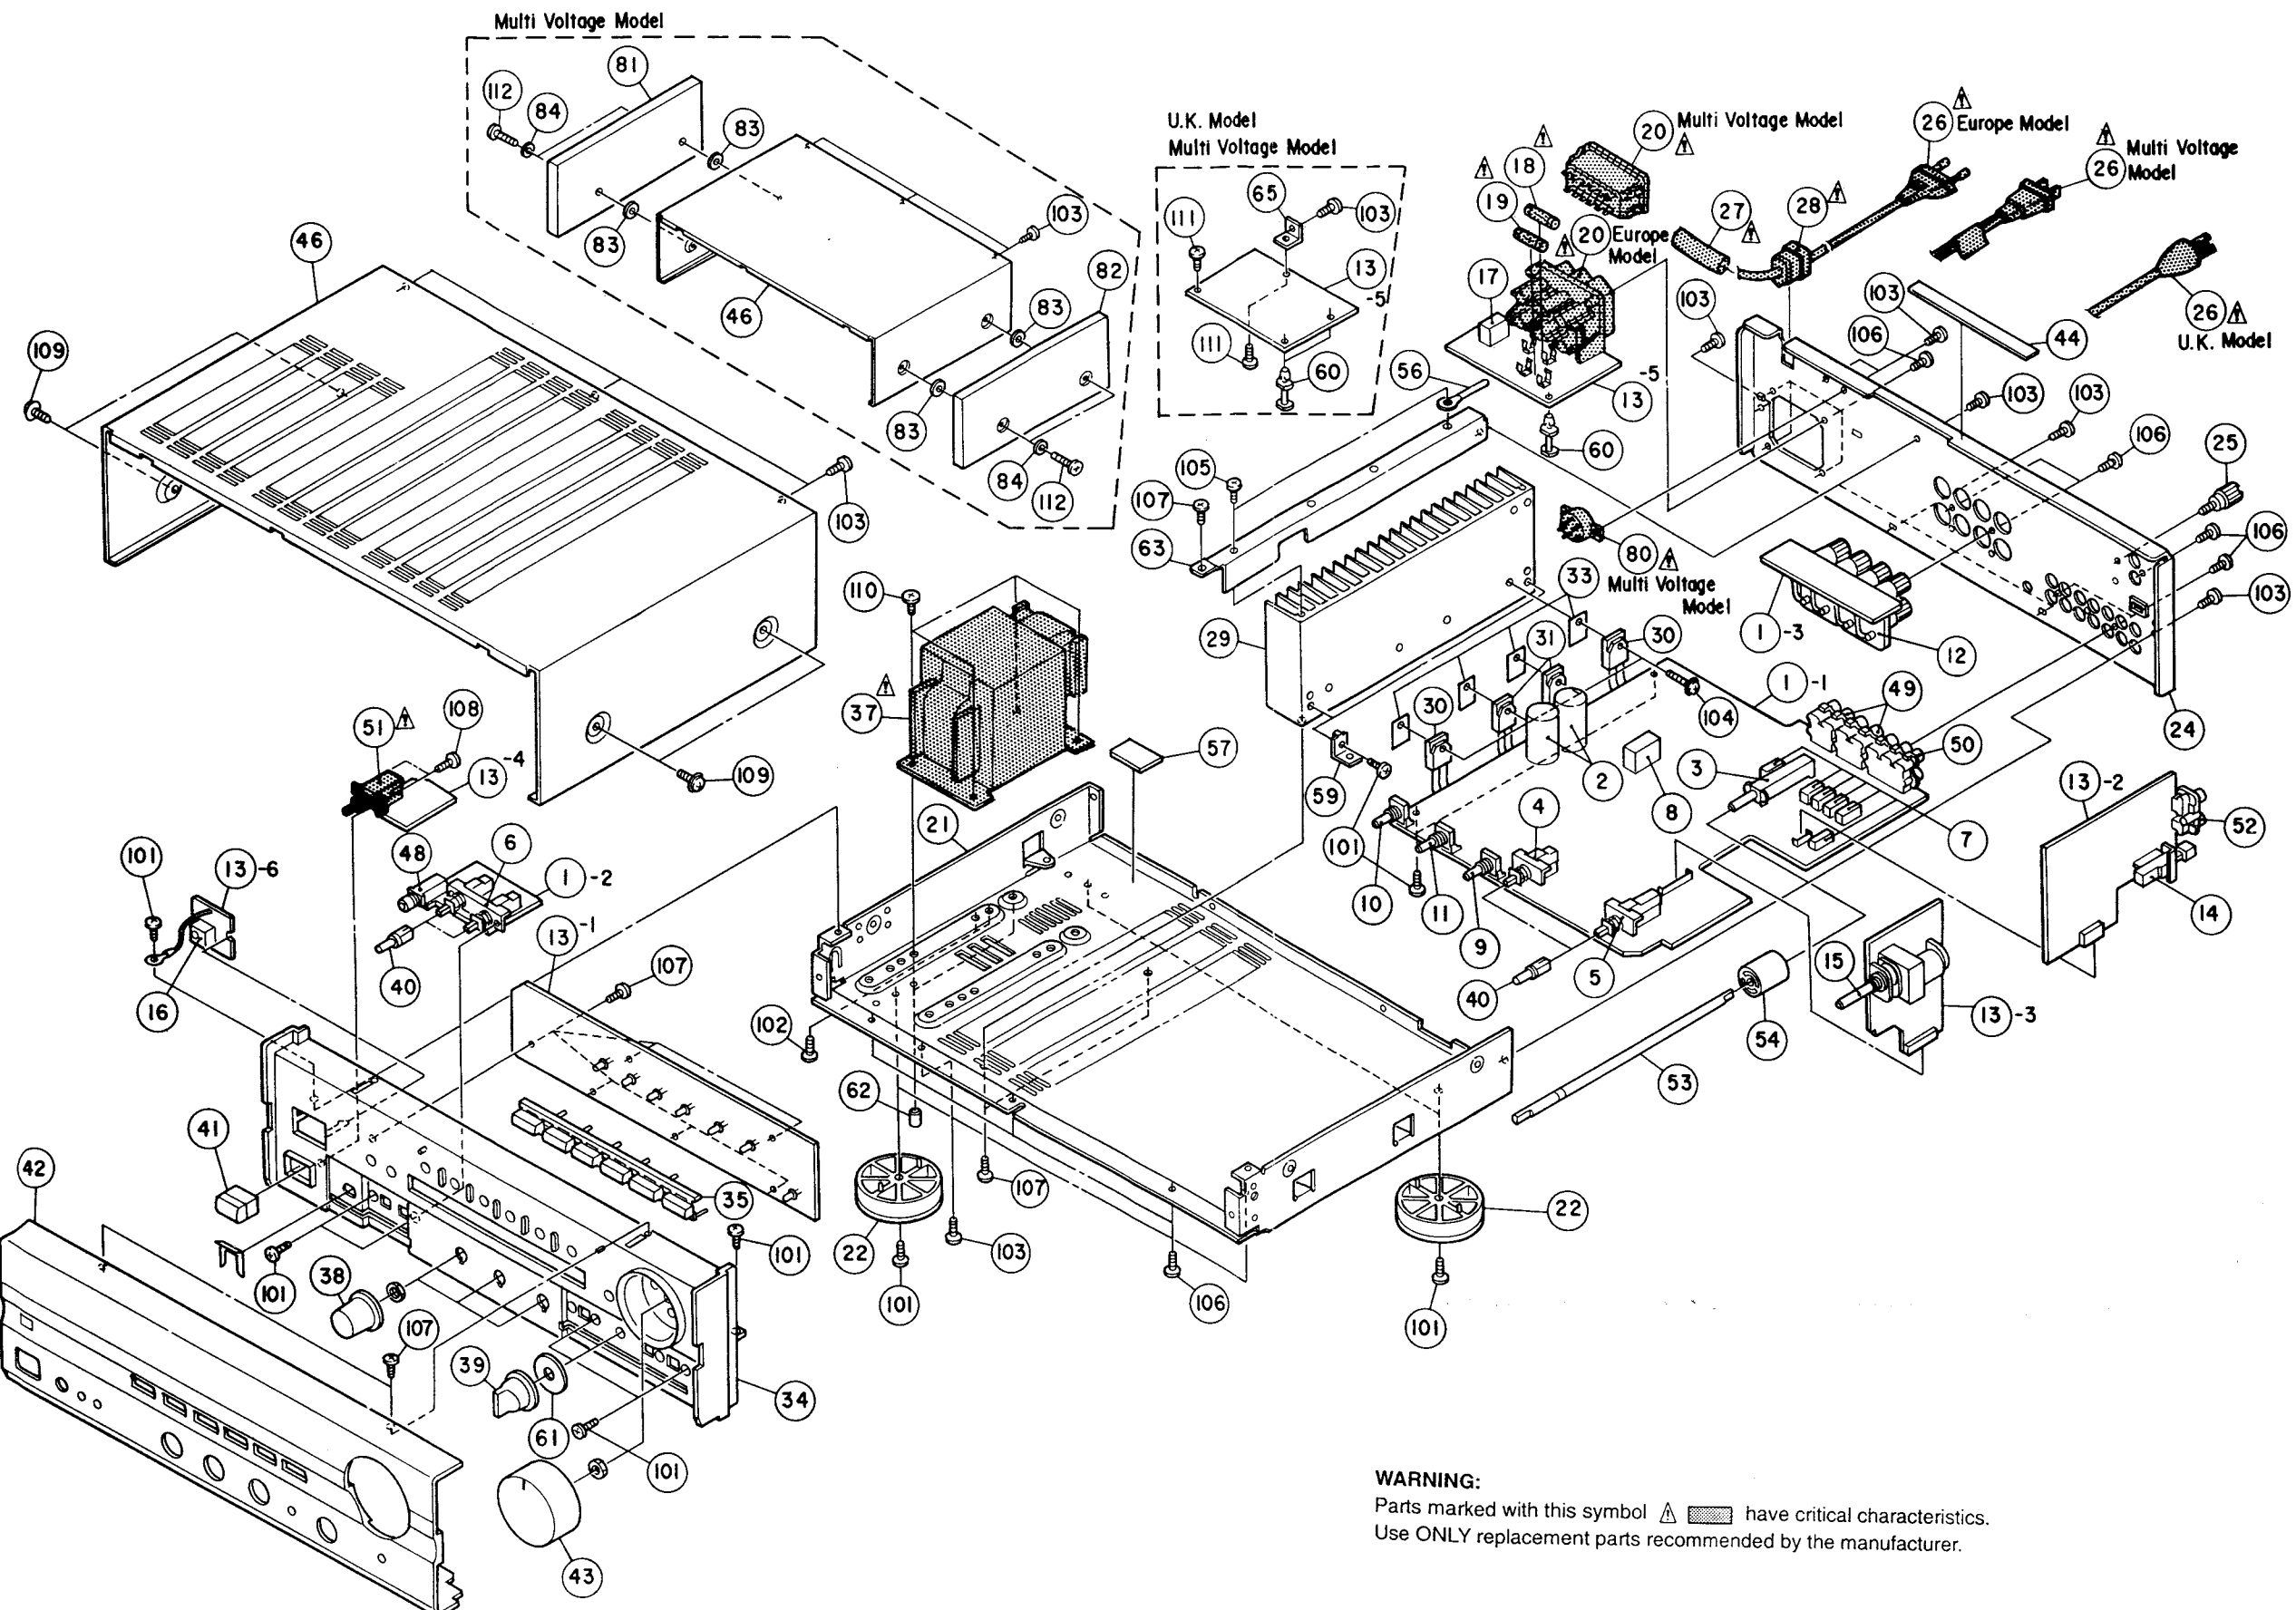

WARNING:
 Parts marked with this symbol \triangle \blacksquare have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

SCHEMATIC DIAGRAM: PMA-715R/715RG

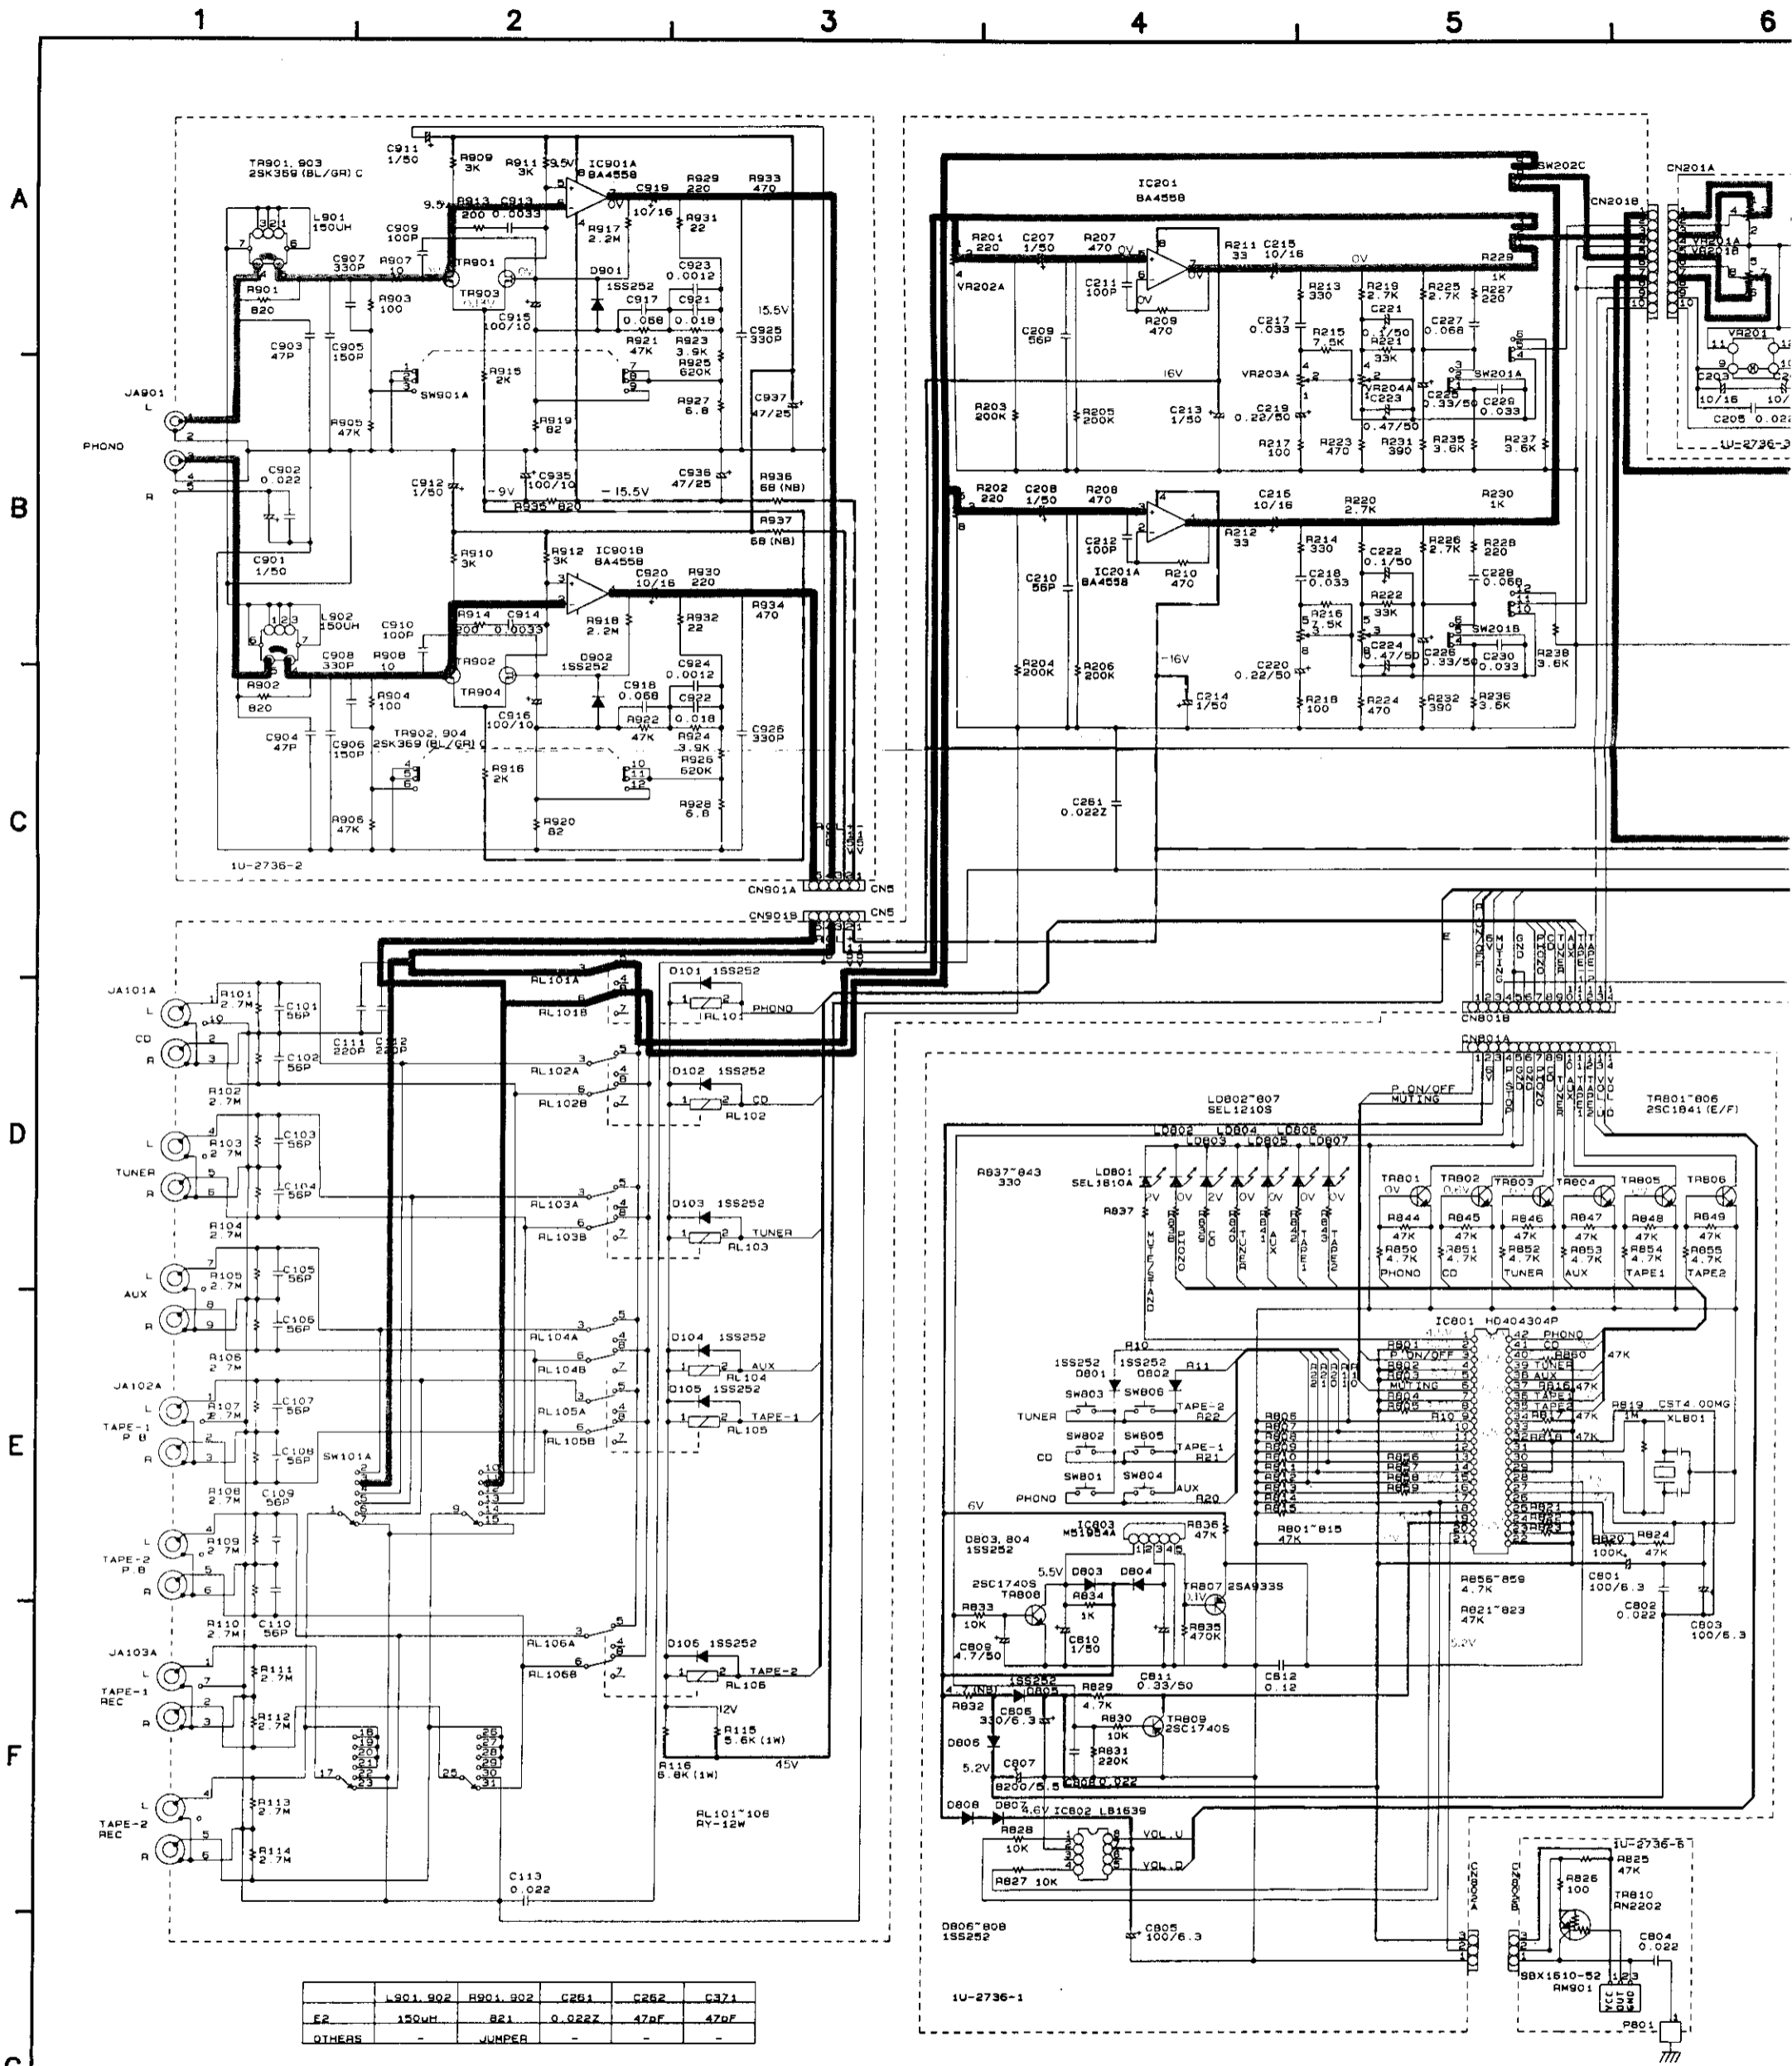


NOTES
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

WARNING:
 Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return to the customer until the problem is located and corrected.

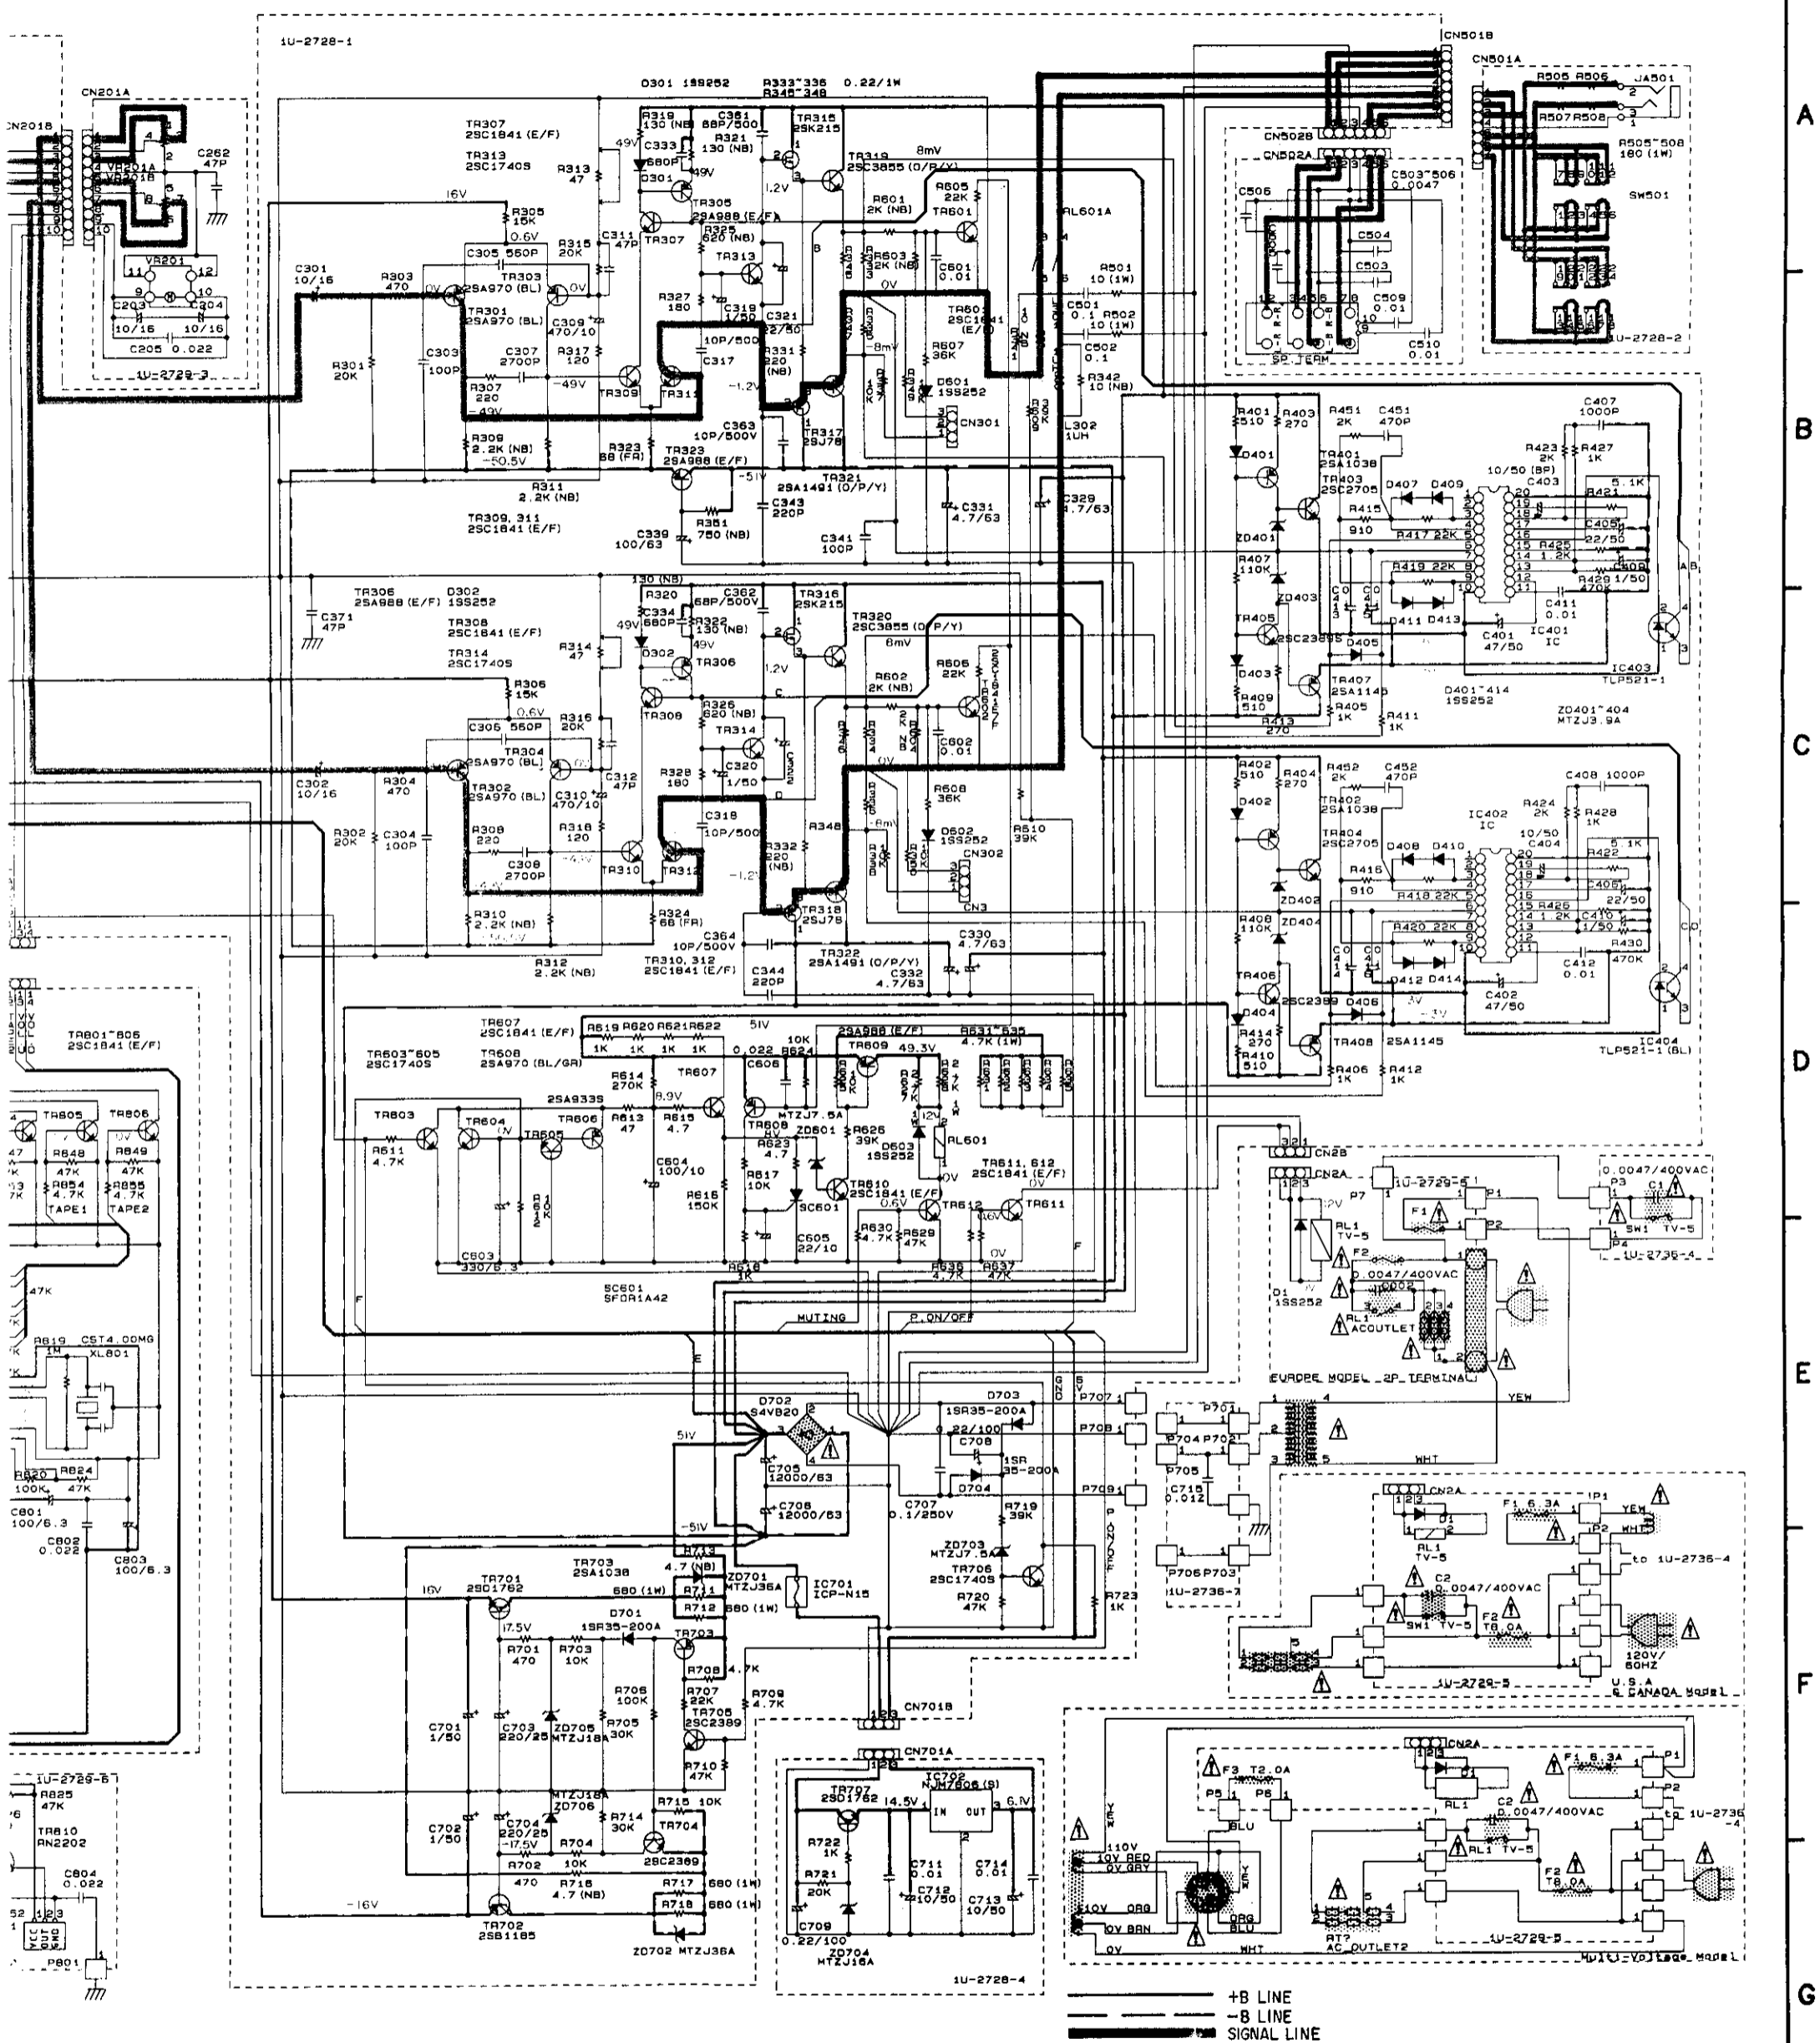

NOTES
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM,
 M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD.
 P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT
 NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE
 WITHOUT PRIOR NOTICE.

WARNING:
 Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

A
B
C
D
E
F
G
H

CHEMATIC DIAGRAM: PMA-915R/915R_G

2


3

4


5

6

7

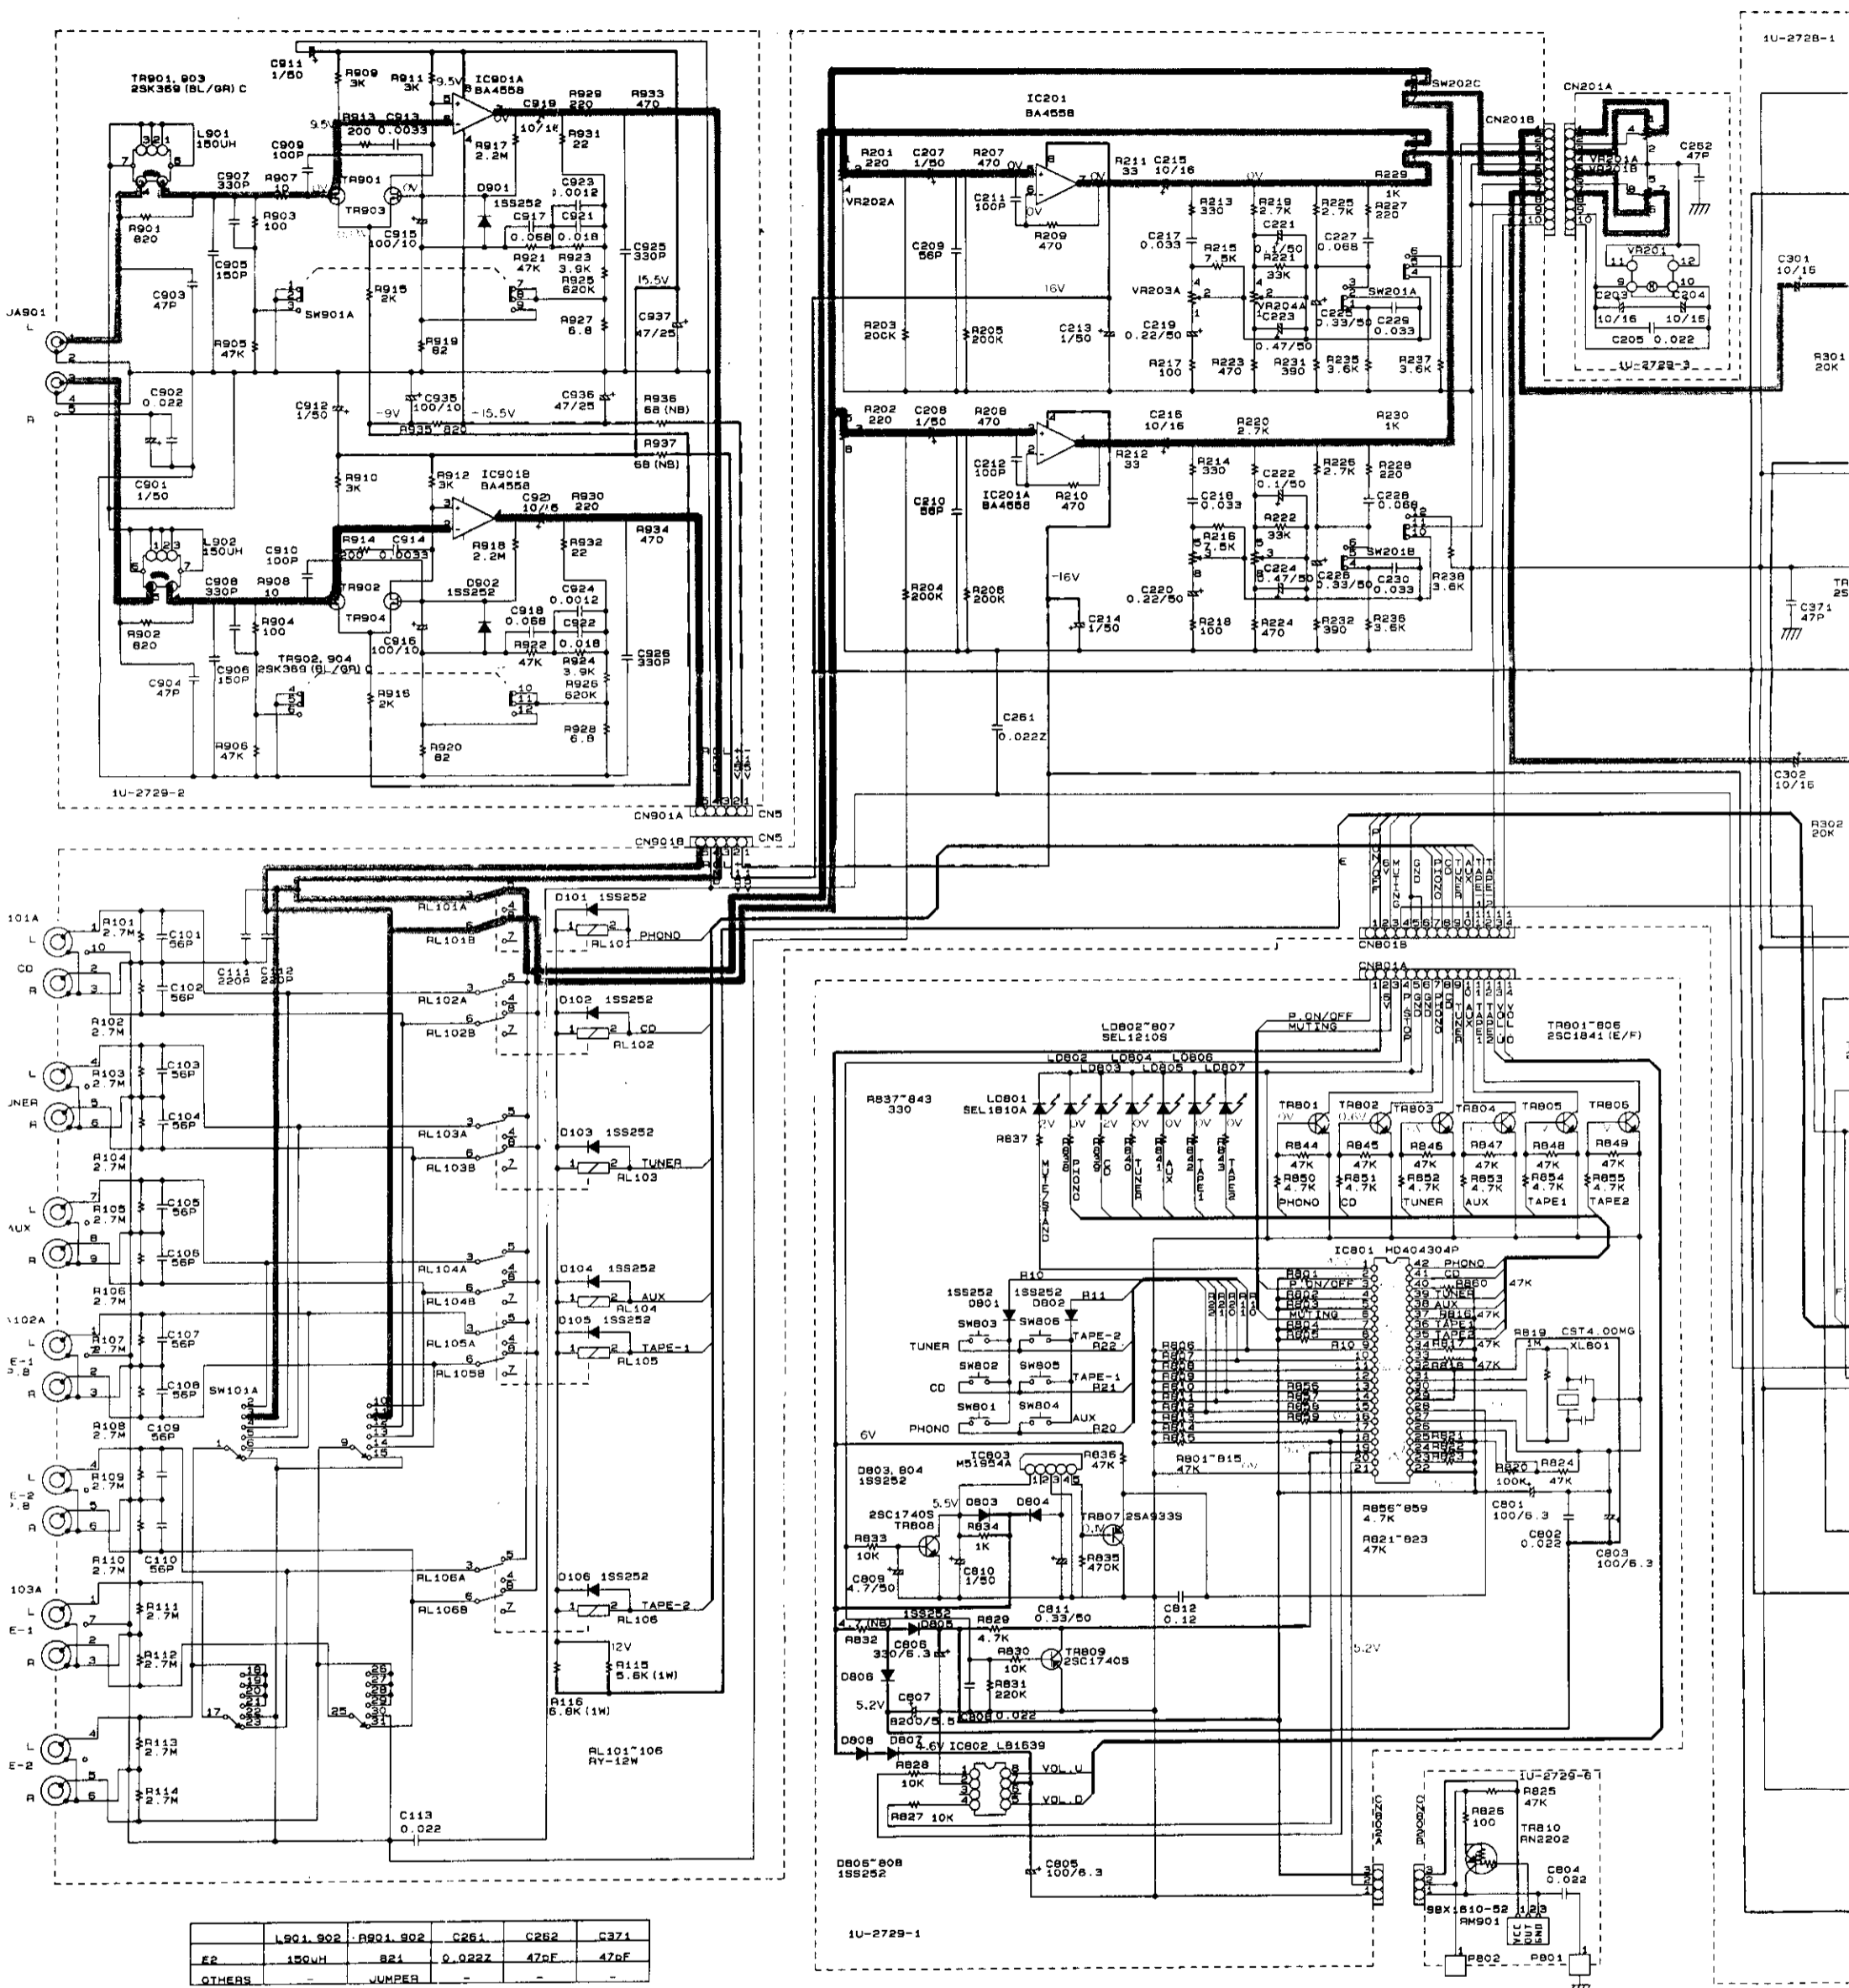

	L901, 902	R901, 902	C251	C252	C371
EP	150uH	821	0.022	47pF	47pF
OTHERS		JUMPER			

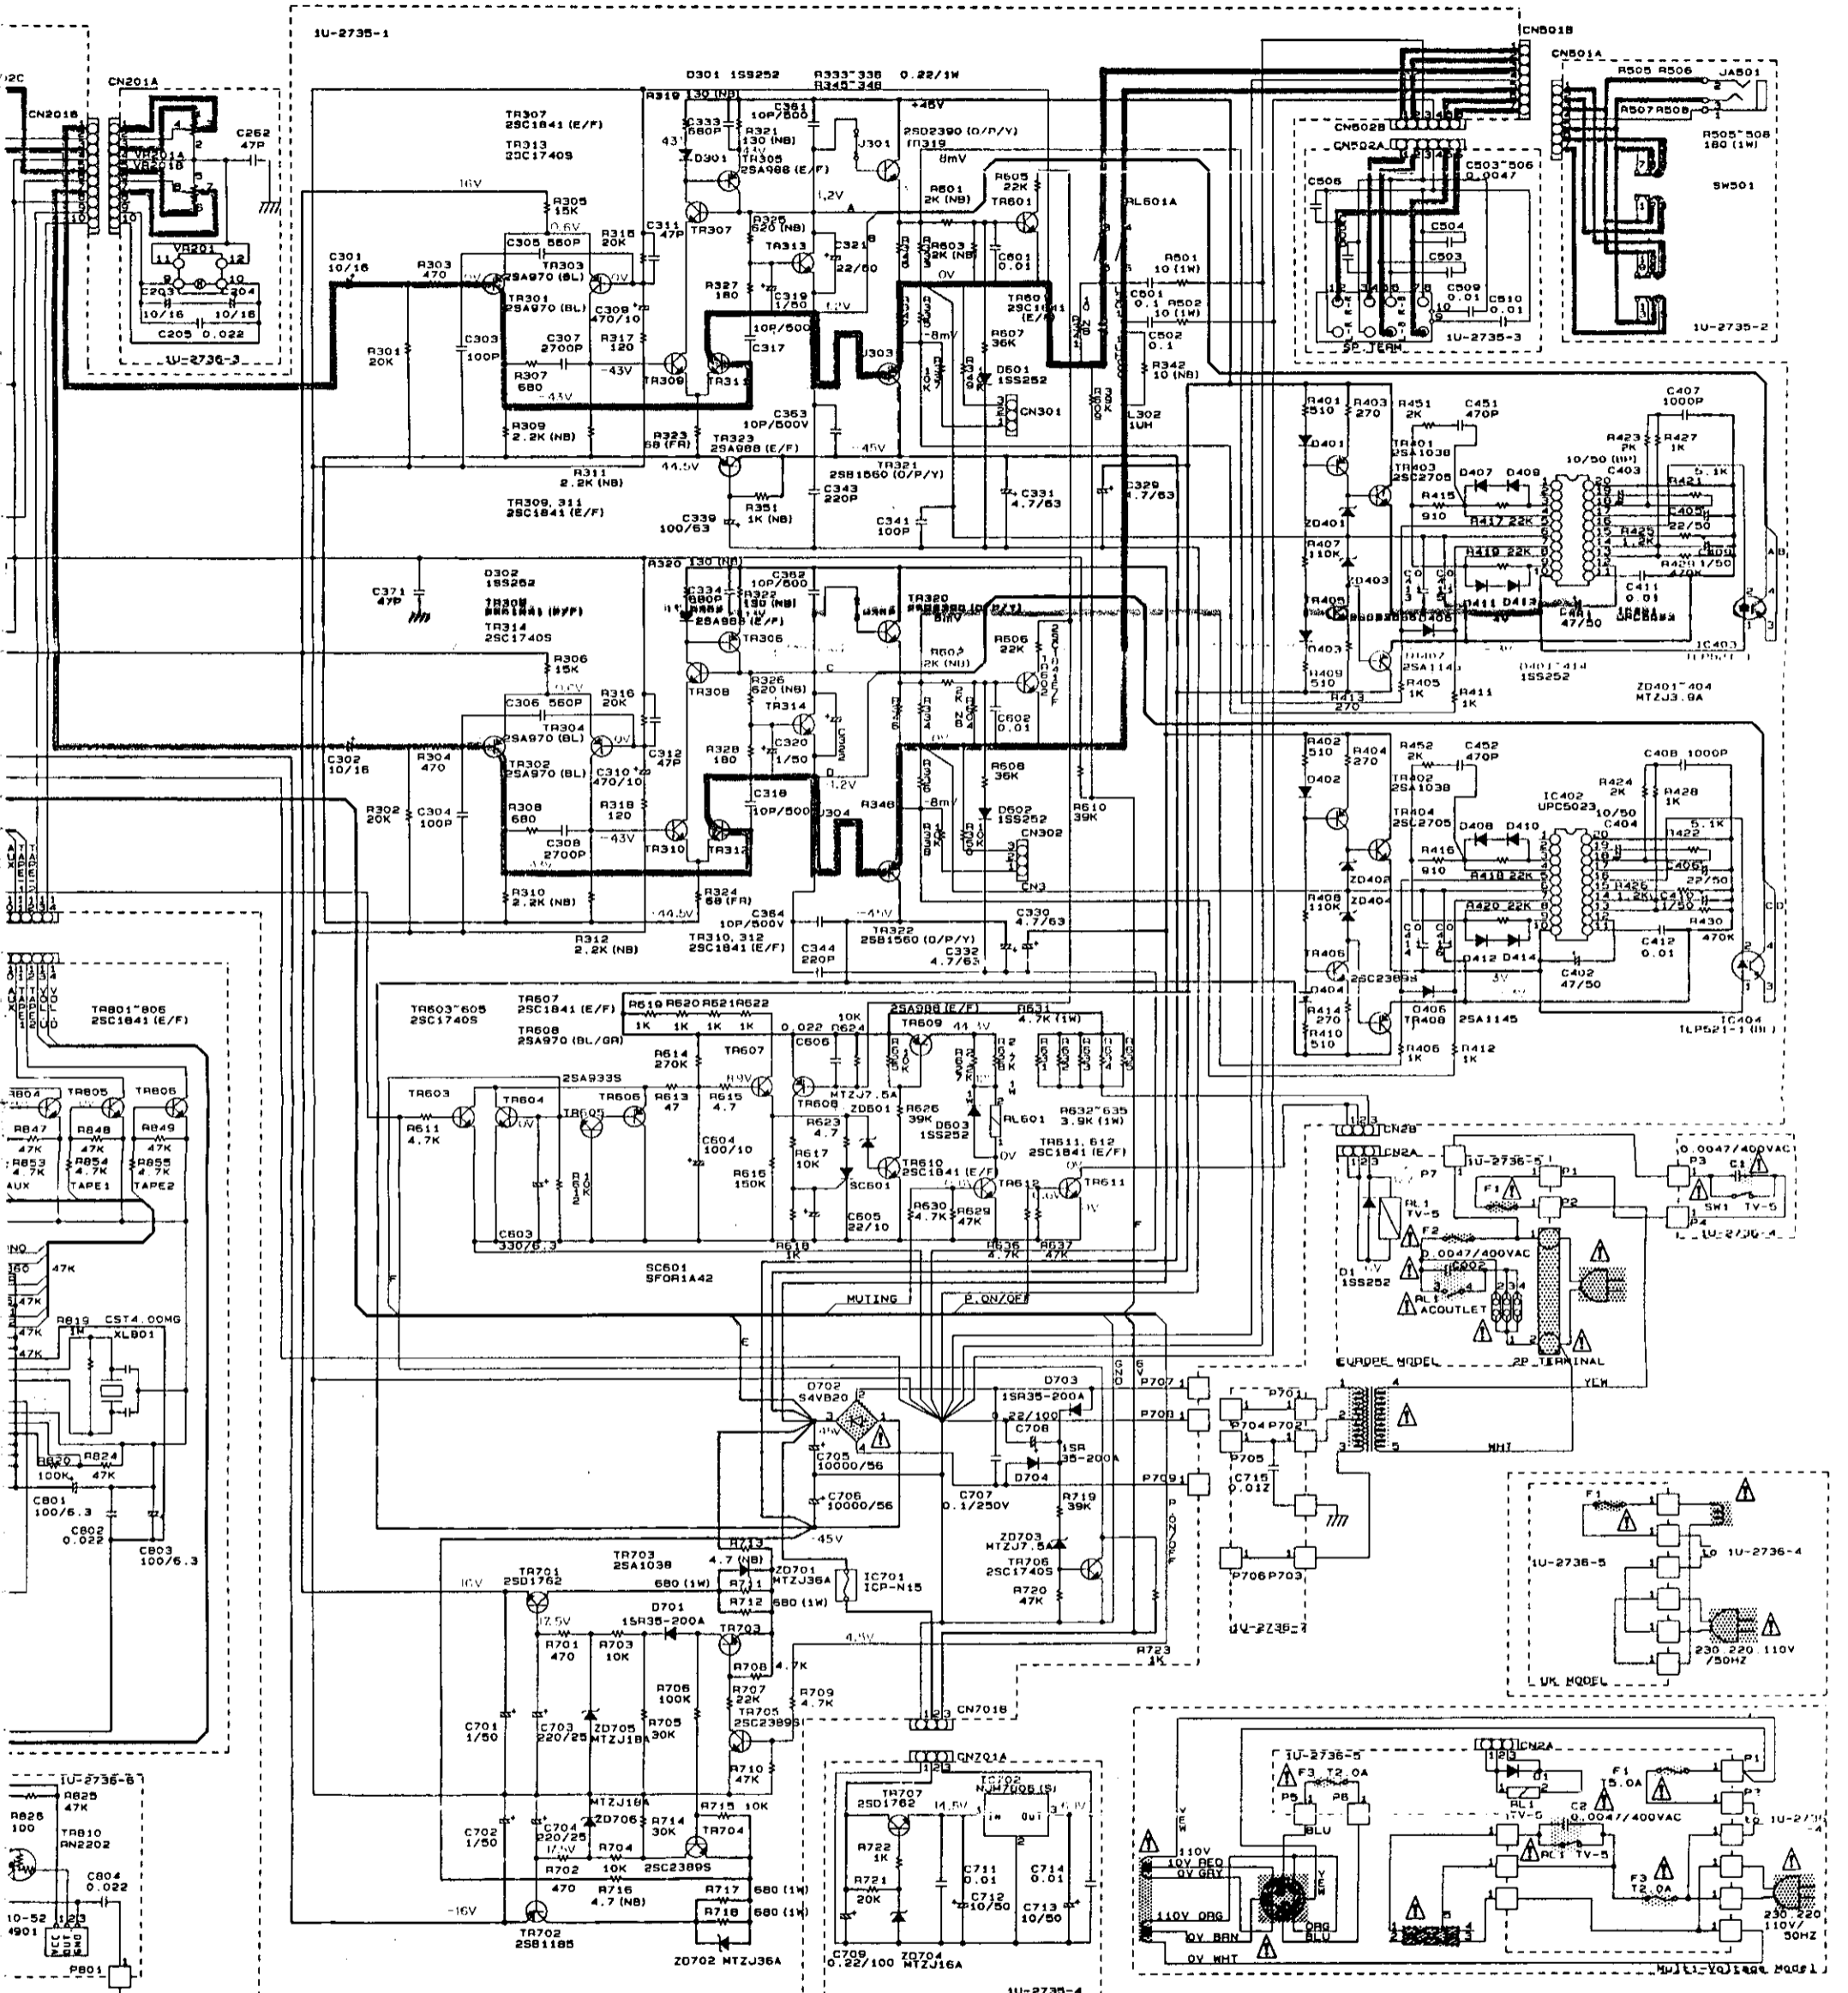

+B LINE
 -B LINE
 SIGNAL LINE