

Sympphonie

SYLVANIA

 **Emerson®**

SERVICE MANUAL

Sec. 1: Main Section

- Specifications
- Preparation for Servicing
- Adjustment Procedures
- Schematic Diagrams
- CBA's


Sec. 2: Deck Mechanism Section

- Standard Maintenance
- Alignment for Mechanism
- Disassembly/Assembly of Mechanism
- Alignment Procedures of Mechanism


Sec. 3: Exploded views and Parts List Section

- Exploded views
- Parts List

VIDEO CASSETTE RECORDER SL260B

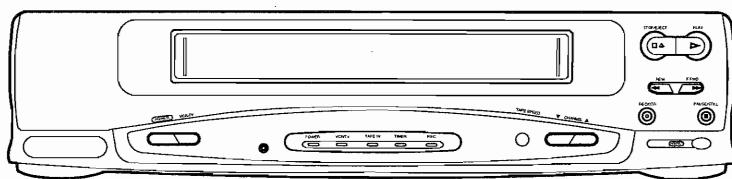

6260VB/EWV601

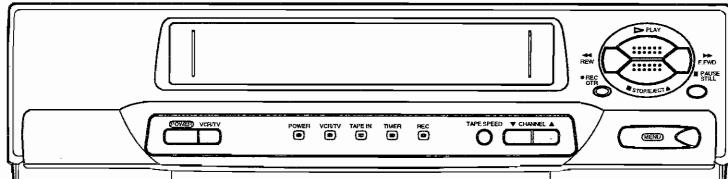

船井サービス株式会社
マニュアル課

VHS

TEL (06) 6746—3359
FAX (06) 6746—3368

JAN.31.2001

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

MAIN SECTION

VIDEO CASSETTE RECORDER

SL260B/6260VB/EWV601

Sec. 1: Main Section

- Specifications
- Preparation for Servicing
- Adjustment Procedures
- Schematic Diagrams
- CBA's

TABLE OF CONTENTS

Specifications	1-1-1
Important Safety Precautions	1-2-1
Standard Notes for Servicing	1-3-1
Preparation for Servicing	1-4-1
Operating Controls and Functions	1-5-1
Cabinet Disassembly Instructions	1-6-1
Electrical Adjustment Instructions	1-7-1
Block Diagrams	1-8-1
Function Indicator Symbols	1-8-11
Power Supply Trouble Shooting Guide	1-8-12
Schematic Diagrams / CBA's and Test Points	1-9-1
Waveforms	1-10-1
Wiring Diagram	1-11-1
System Control Timing Charts	1-12-1
IC Pin Function	1-13-1
Lead Identifications	1-14-1

SPECIFICATIONS

Description	Unit	Minimum	Nominal	Maximum	Remark
1. Video					
1-1. Video Output (PB)	Vp-p	0.8	1.0	1.2	FL6A
1-2. Video Output (R/P)	Vp-p	0.8	1.0	1.2	
1-3. Video S/N Y (R/P)	dB	40	45		SP Mode, W/O Burst
1-4. Video Color S/N AM (R/P)	dB	37	41		SP Mode
1-5. Video Color S/N PM (R/P)	dB	30	36		SP Mode
1-6. Resolution (PB)	Line	230	245		SP Mode
2. Servo					
2-1. Jitter Low	μsec		0.07	0.12	SP Mode
2-2. Wow & Flutter	%		0.3	0.5	SP Mode
3. Normal Audio					
3-1. Output (PB)	dBV	-9	-6	-3	SP Mode
3-2. Output (R/P)	dBV	-9	-6	-1.5	SP Mode
3-3. S/N (R/P)	dB	36	41		SP Mode
3-4. Distortion (R/P)	%		1.0	4.0	SP Mode
3-5. Freq. resp (R/P) at 200Hz	dB	-11	-4		SP Mode
(-20dB ref. 1kHz) at 8kHz	dB	-14	-4		SP Mode
4. Tuner					
4-1. Video output	Vp-p	0.8	1.0	1.2	E-E Mode
4-2. Video S/N	dB	39	42		E-E Mode
4-3. Audio output	dB	-10	-6	-2	E-E Mode
4-4. Audio S/N	dB	40	46		E-E Mode
5. Hi-Fi Audio					
5-1. Output	dBV	-12	-8	-4	SP Mode
5-2. Dynamic Range	dB	70	85		SP Mode
5-3. Freq. resp (6dB B.W)	Hz		20 ~ 20K		SP Mode

Note: Nominal specs represent the design specs. All units should be able to approximate these – some will exceed and some may drop slightly below these specs. Limit specs represent the absolute worst condition that still might be considered acceptable; In no case should a unit fail to meet limit specs.

IMPORTANT SAFETY PRECAUTIONS

Product Safety Notice

Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by a **A** on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continuously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are carefully inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

A. Parts identified by the **A** symbol are critical for safety. Replace only with part number specified.

B. In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.

Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.

C. Use specified internal wiring. Note especially:

1) Wires covered with PVC tubing

2) Double insulated wires

3) High voltage leads

D. Use specified insulating materials for hazardous live parts. Note especially:

1) Insulation tape

2) PVC tubing

3) Spacers

4) Insulators for transistors

E. When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.

F. Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).

G. Check that replaced wires do not contact sharp edges or pointed parts.

H. When a power cord has been replaced, check that 5 - 6 kg of force in any direction will not loosen it.

I. Also check areas surrounding repaired locations.

J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

K. Crimp type wire connector

The power transformer uses crimp type connectors which connect the power cord and the primary side of the transformer. When replacing the transformer, follow these steps carefully and precisely to prevent shock hazards.

Replacement procedure

1) Remove the old connector by cutting the wires at a point close to the connector.

Important: Do not re-use a connector. (Discard it.)

2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.

3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.

4) Use a crimping tool to crimp the metal sleeve at its center. Be sure to crimp fully to the complete closure of the tool.

L. When connecting or disconnecting the internal connectors, first, disconnect the AC plug from the AC outlet.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts, and wires have been returned to their original positions. Afterwards, do the following tests and confirm the specified values to verify compliance with safety standards.


1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Clearance Distance (d) (d')
120 V	$\geq 3.2 \text{ mm (0.126 inches)}$

Note: This table is unofficial and for reference only.
Be sure to confirm the precise values.

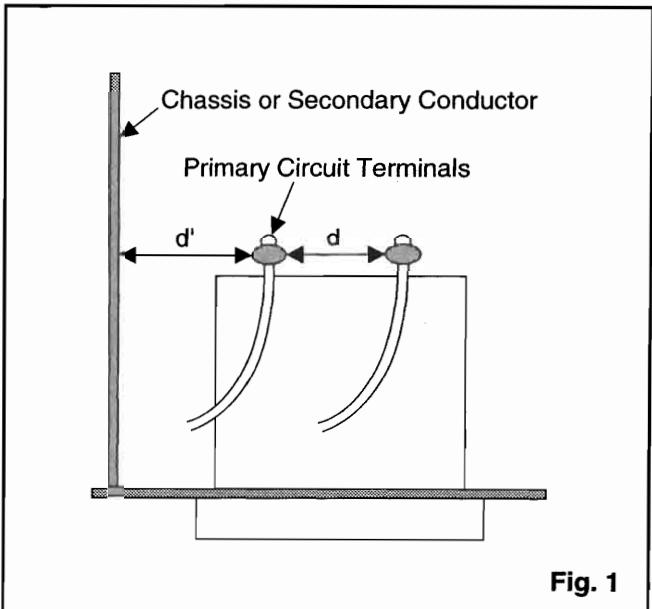

2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.) is lower than or equal to the specified value in the table below.

Measuring Method (Power ON) :

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across the terminals of load Z. See Fig. 2 and the following table.

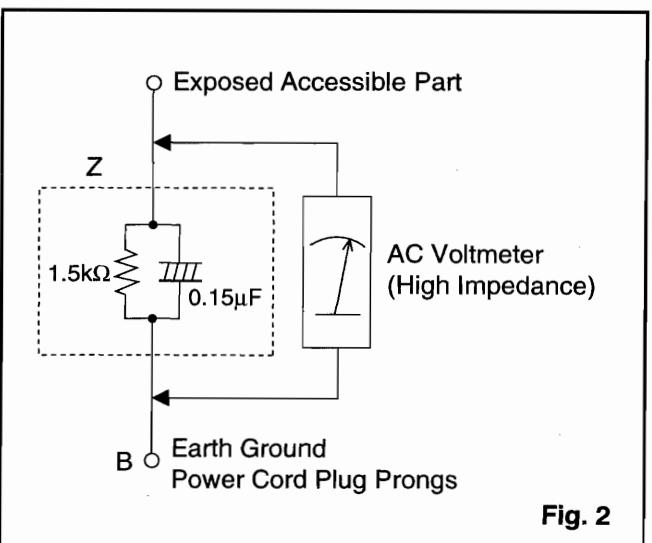


Table 2 : Leakage current ratings for selected areas


AC Line Voltage	Load Z	Leakage Current (I)	Earth Ground (B) to:
120 V	0.15μF CAP. & 1.5kΩ RES. Connected in parallel	$i \leq 0.5\text{mA Peak}$	Exposed accessible parts

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.


STANDARD NOTES FOR SERVICING

Circuit Board Indications


- a. The output pin of the 3 pin Regulator ICs is indicated as shown.

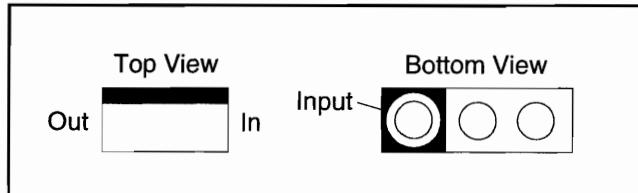

- b. For other ICs, pin 1 and every fifth pin are indicated as shown.

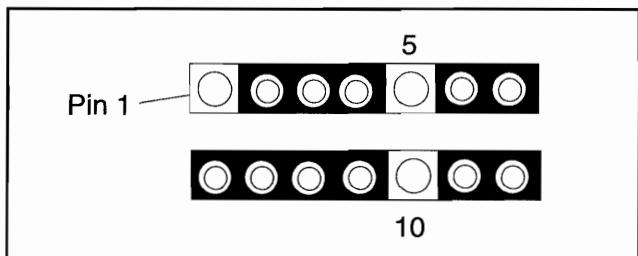


- c. The 1st pin of every male connector is indicated as shown.

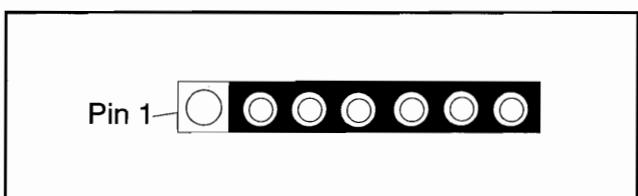

Instructions for Connectors

- When you connect or disconnect the FFC (Flexible Foil Connector) cable, be sure to first disconnect the AC cord.
- FFC (Flexible Foil Connector) cable should be inserted parallel into the connector, not at an angle.

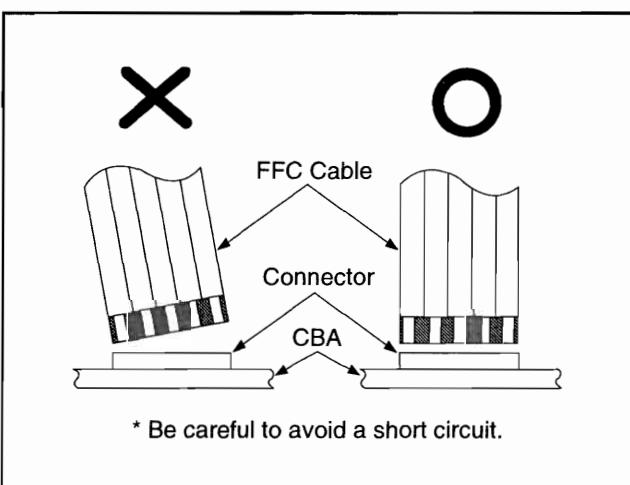

How to Remove / Install Flat Pack-IC

1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

- Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the Flat Pack-IC (about 5 to 6 seconds). (Fig. S-1-1)

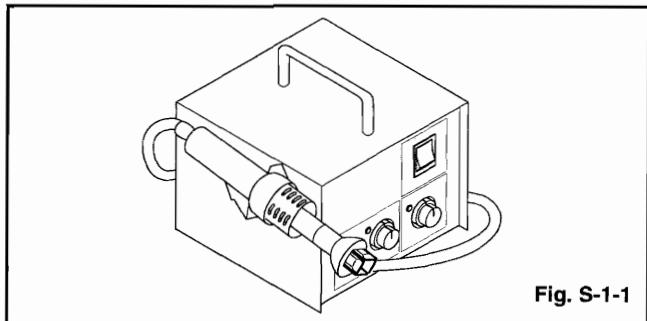


Fig. S-1-1

- Remove the flat pack-IC with tweezers while applying the hot air.
- Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
- Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

Caution:

- Do not supply hot air to the chip parts around the flat pack-IC for over 6 seconds because damage to the chip parts may occur. Put masking tape around the flat pack-IC to protect other parts from damage. (Fig. S-1-2)
- The flat pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or the solder lands under the IC when removing it.


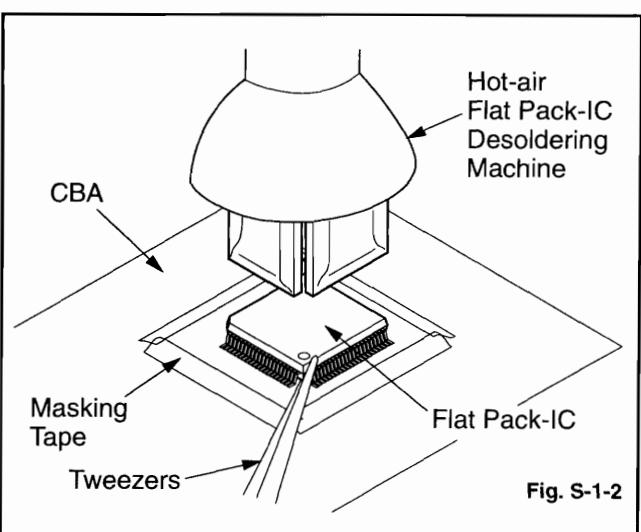



Fig. S-1-2

With Soldering Iron:

- (1) Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

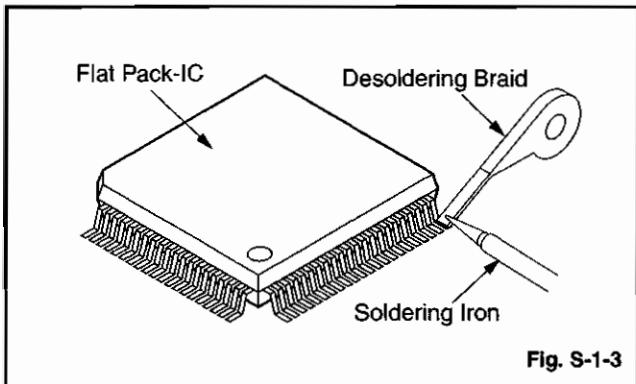

- (2) Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)

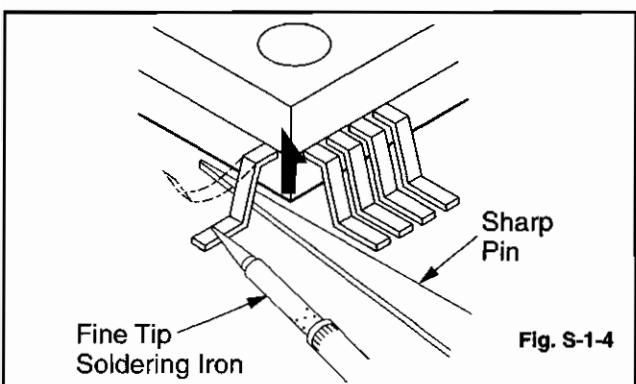

- (3) Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)

- (4) Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

With Iron Wire:

- (1) Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

- (2) Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.



- (3) While heating the pins using a fine tip soldering iron or hot air blower, pull up the wire as the solder melts so as to lift the IC leads from the CBA contact pads as shown in Fig. S-1-5.

- (4) Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)

- (5) Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

Note:


When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue. When the flat pack-IC is removed from the CBA, handle it gently because it may be damaged if force is applied.

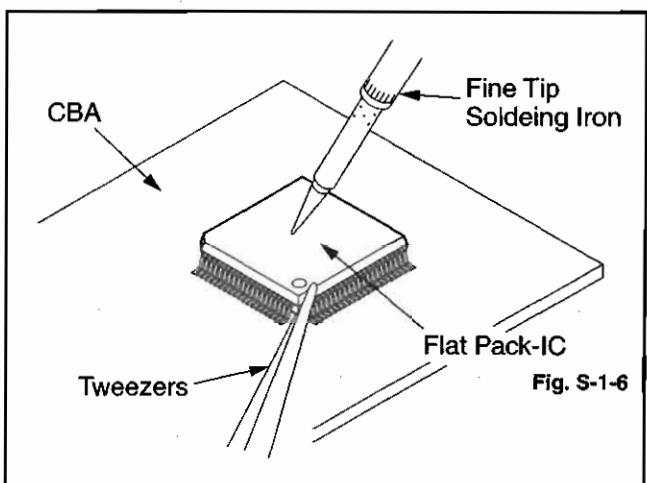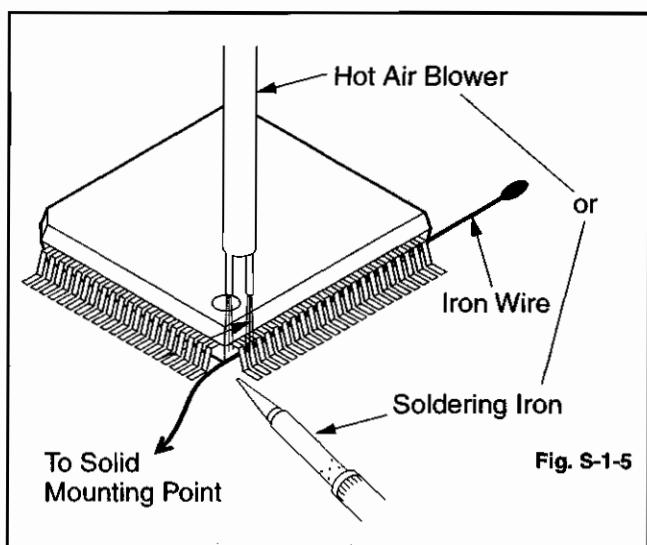

2. Installation

- (1) Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the CBA so you can install a replacement flat pack-IC more easily.
- (2) The "●" mark on the flat pack-IC indicates pin 1. (See Fig. S-1-7.) Be sure this mark matches the 1 on the PCB when positioning for installation. Then pre-solder the four corners of the flat pack-IC. (See Fig. S-1-8.)
- (3) Solder all pins of the flat pack-IC. Be sure that none of the pins have solder bridges.

Example :

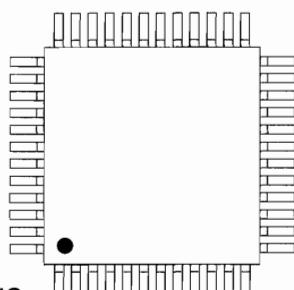

Pin 1 of the Flat Pack-IC
is indicated by a "●" mark.

Fig. S-1-7

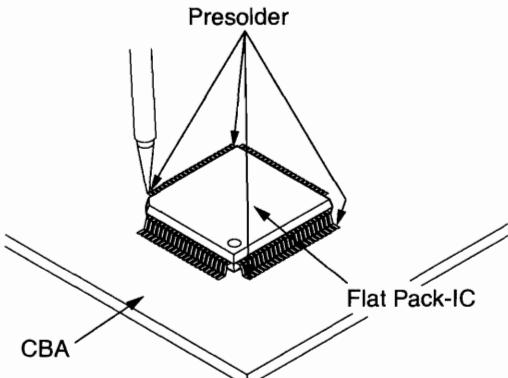


Fig. S-1-8

Instructions for Handling Semiconductors

Electrostatic breakdown of the semiconductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.


1. Ground for Human Body

Be sure to wear a grounding band ($1M\Omega$) that is properly grounded to remove any static electricity that may be charged on the body.


2. Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding ($1M\Omega$) on the workbench or other surface, where the semiconductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semiconductors with your clothing.

< Incorrect >

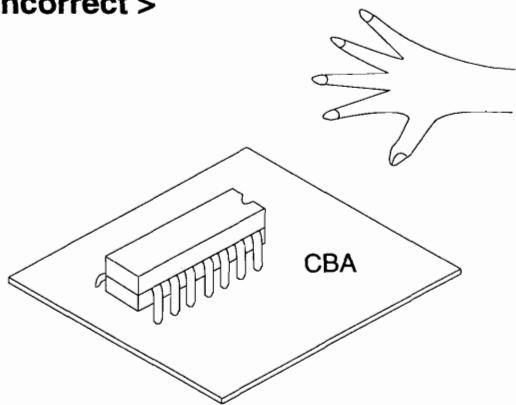

< Correct >

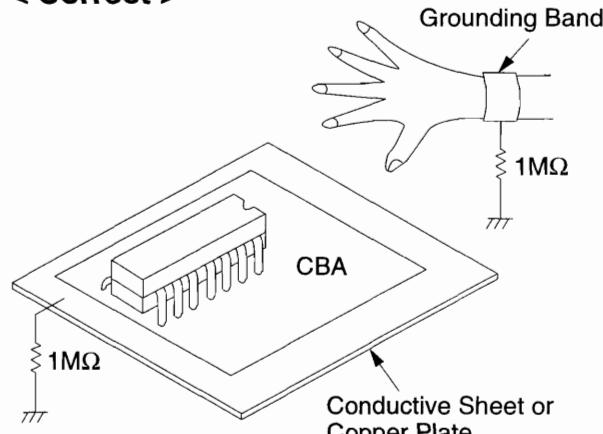

PREPARATION FOR SERVICING

How to Enter the Service Mode

About Optical Sensors

Caution:

An optical sensor system is used for the Tape Start and End Sensors on this equipment. Carefully read and follow the instructions below. Otherwise the unit may operate erratically.

What to do for preparation

Insert a tape into the Deck Mechanism Assembly and press the PLAY button. The tape will be loaded into the Deck Mechanism Assembly. Make sure the power is on, connect TP502 (SENSOR INHIBITION) to TP511 (GROUND). This will stop the function of Tape Start Sensor, Tape End Sensor and Reel Sensors. (If these TPs are connected before plugging in the unit, the function of the sensors will stay valid.) See Fig. 1.

Note: Because the Tape End Sensors are inactive, do not run a tape all the way to the start or the end of the tape to avoid tape damage.

About REC-Safety Switch

Caution:

The REC-Safety Switch is directly mounted on the Main CBA. When the Deck Mechanism Assembly is removed from the Main CBA for servicing, this switch does not work automatically.

What to do for preparation

In order to record, press the Rec button while pushing REC-SAFETY SW on the Main CBA. See Fig. 1.


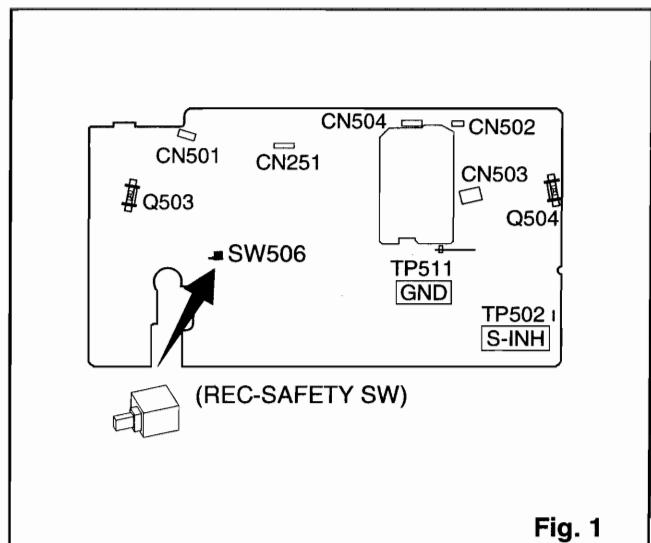


Fig. 1


OPERATING CONTROLS AND FUNCTIONS

Model No.: SL260LB


— VCR FRONT PANEL —

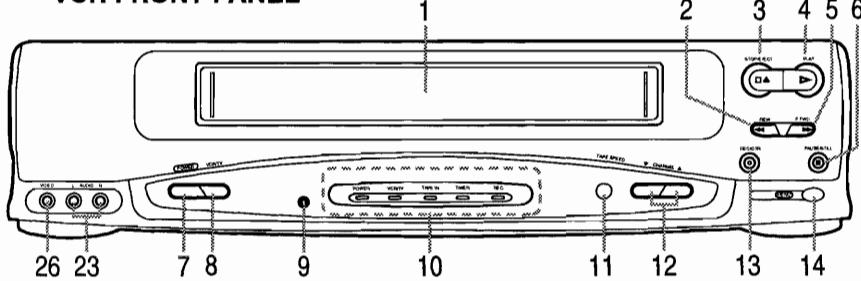

— VCR REAR PANEL —

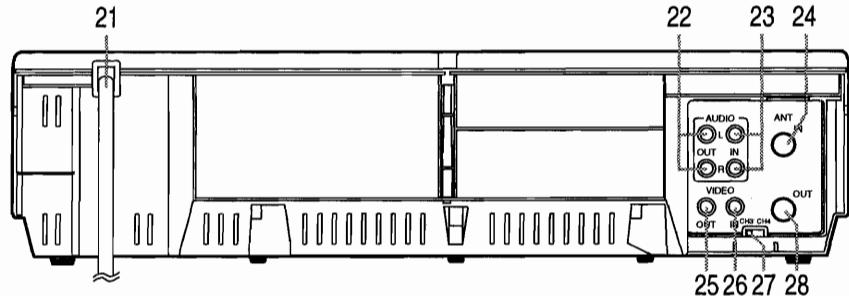

— REMOTE CONTROL —

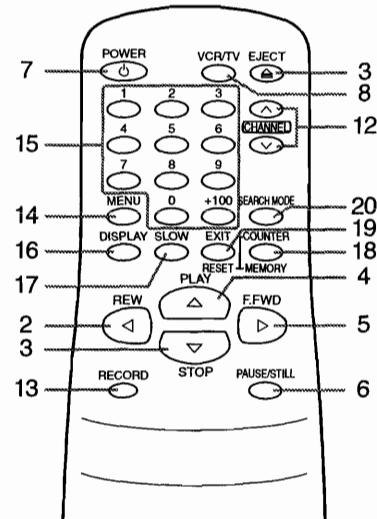

1. Cassette Compartment

2. REW button— Press to rewind the tape, or to view the picture rapidly in reverse during the playback mode. (Rewind Search)

Press to cancel a setting of timer program. Press to correct digits when setting program (For example: setting clock or timer program). Press to add or delete channel numbers during channel preset.

3. EJECT button— Press to remove the tape from the VCR.

STOP button— Press to stop the tape motion.

Press to enter digits when setting program (For example: setting clock or timer program). Press to select the setting modes from the on screen menu.

4. PLAY button— Press to begin playback.

Press to enter digits when setting program (For example: setting clock or timer program).

Press to select the setting modes from the on screen menu.

5. F.FWD button— Press to rapidly advance the tape, or view the picture rapidly in forward during playback. (Forward Search)

When setting program (For example: setting clock or timer program), press to determine your selection and proceed to the next step you want to input. Press to determine the setting modes from the on screen menu. Press to add or delete channel numbers during channel preset.

6. PAUSE/STILL button— Press to temporarily stop the tape during recording or to view a still picture during playback.

Frame Advance function— Press to advance the picture by one frame at a time during still mode.

7. POWER button— Press to turn VCR on and off. Press to activate timer recording, when the timer program has been set.

8. VCR/TV button— Press to select TV or VCR mode.

VCR position: to view playback, to monitor video recordings or watch TV using the VCR tuner.

TV position: to watch TV or to view one program while recording another.

9. Remote sensor window— Receives the infrared signals from the remote control.

10. Indicators

POWER indicator— Indicates that the power is turned on.

VCR/TV indicator— Indicates that the VCR is in the VCR position.

TAPE IN indicator— Indicates that there is a tape in the VCR.


TIMER indicator— Indicates that the timer recording or OTR has been set.

REC indicator— Indicates that it is recording. Flashes when a recording has been paused.


- 11. TAPE SPEED button**– Press to choose the desired recording speed : SP/SLP. (only on the VCR)
- 12. CHANNEL Up or Down buttons**– Press to select the desired channels for viewing or recording.
- Tracking function**– Press to minimize video ‘noise’ (lines or dots on screen) during playback (only on the VCR) or slow mode.
Press to stabilize the picture in the Still mode when the picture begins to vibrate vertically.
- 13. RECORD button**– Press for manual recording.
- OTR button**– Press to activate One Touch Recording. (only on the VCR)
- 14. MENU button**– Press to display the menu on the TV screen. Press to exit the menu on the TV screen.
- 15. NUMBER buttons**– Press to select desired channels for viewing or recording. To select channels from 1 to 9, first press "0" button then 1 to 9. (only on the remote control)
- +100 button**– When selecting cable channels which are higher than 99, press this button first, then press the last two digits. (To select channel 125, first press "+100" button then press "2" and "5"). (only on the remote control)
- 16. DISPLAY button**– Press to display the current time, channel number, real time tape counter, and other information on the TV screen. (only on the remote control)
Each time you press this button, TV screen will change as shown. The status display (STOP, PLAY etc.) and the tape speed display (SP, LP (playback only), or SLP) will disappear after 5 seconds.
- 17. SLOW button**– Press to start slow motion playback. (only on the remote control)
- 18. COUNTER MEMORY button**– Press to set counter memory on and off. (only on the remote control)
- 19. COUNTER RESET button**– Press to reset counter to 0:00:00. (only on the remote control)
- EXIT button**– Press to exit the menu on the TV screen. (only on the remote control)
- 20. SEARCH MODE button**– Press to perform a Time Search or an Index Search. (only on the remote control)
- 21. Power cord**– Connect to a standard AC outlet (120V/60Hz).
- 22. AUDIO OUT jacks**– Connect to the audio input jacks of your audio equipment or another VCR.
- 23. AUDIO IN jacks**– Connect to the audio output jacks of your audio equipment or another VCR.
- 24. ANT. IN terminal**– Connect to an antenna, Cable system or Satellite system.
- 25. VIDEO OUT jack**– Connect to the video input jack of your video camera or another VCR.
- 26. VIDEO IN jack**– Connect to the video output jack of your video camera or another VCR.
- 27. CH3/CH4 selector switch**– Use to select a video output channel (3 or 4) for VCR playback.
- 28. ANT. OUT terminal**– Connects to the antenna input terminal on your TV.

Model No.: 6260VB/EWV601


— VCR FRONT PANEL —

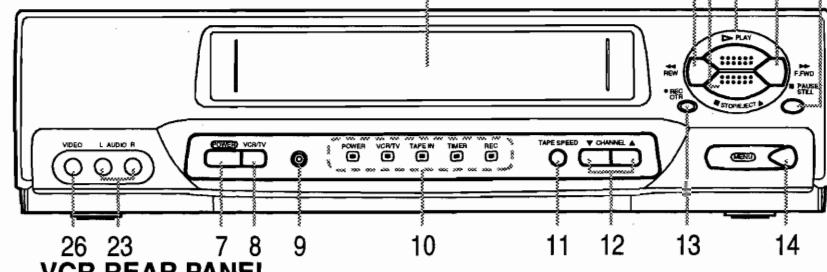

— VCR REAR PANEL —

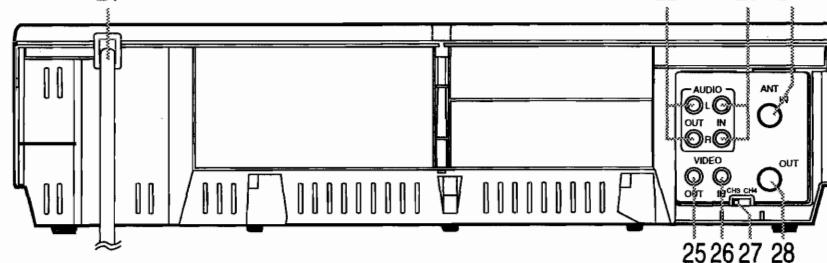

— REMOTE CONTROL —

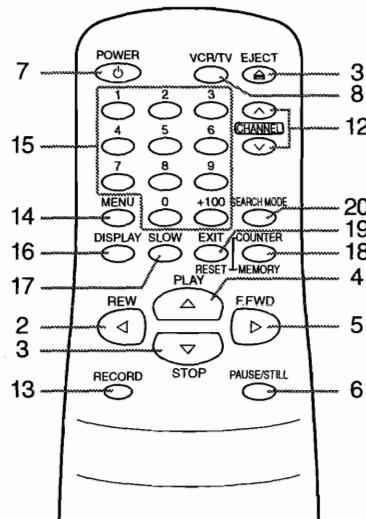

1. Cassette Compartment

2. REW button– Press to rewind the tape, or to view the picture rapidly in reverse during the playback mode. (Rewind Search)
Press to cancel a setting of timer program. Press to correct digits when setting program (For example: setting clock or timer program). Press to add or delete channel numbers during channel preset.

3. EJECT button– Press to remove the tape from the VCR.

STOP button– Press to stop the tape motion.
Press to enter digits when setting program (For example: setting clock or timer program). Press to select the setting modes from the on screen menu.

4. PLAY button– Press to begin playback.
Press to enter digits when setting program (For example: setting clock or timer program).
Press to select the setting modes from the on screen menu.

5. F.FWD button– Press to rapidly advance the tape, or view the picture rapidly in forward during playback. (Forward Search)

When setting program (For example: setting clock or timer program), press to determine your selection and proceed to the next step you want to input. Press to determine the setting modes from the on screen menu. Press to add or delete channel numbers during channel preset.

6. PAUSE/STILL button– Press to temporarily stop the tape during recording or to view a still picture during playback.

Frame Advance function– Press to advance the picture by one frame at a time during still mode.

7. POWER button– Press to turn VCR on and off. Press to activate timer recording, when the timer program has been set.

8. VCR/TV button– Press to select TV or VCR mode.
VCR position: to view playback, to monitor video recordings or watch TV using the VCR tuner.
TV position: to watch TV or to view one program while recording another.

9. Remote sensor window– Receives the infrared signals from the remote control.

10. Indicators

POWER indicator– Indicates that the power is turned on.

VCR/TV indicator– Indicates that the VCR is in the VCR position.

TAPE IN indicator– Indicates that there is a tape in the VCR.

TIMER indicator– Indicates that the timer recording or OTR has been set.


REC indicator– Indicates that it is recording. Flashes when a recording has been paused.

- 11. TAPE SPEED button**– Press to choose the desired recording speed : SP/SLP. (only on the VCR)
- 12. CHANNEL Up or Down buttons**– Press to select the desired channels for viewing or recording.
- Tracking function**– Press to minimize video ‘noise’ (lines or dots on screen) during playback (only on the VCR) or slow mode.
Press to stabilize the picture in the Still mode when the picture begins to vibrate vertically.
- 13. RECORD button**– Press for manual recording.
OTR button– Press to activate One Touch Recording. (only on the VCR)
- 14. MENU button**– Press to display the menu on the TV screen. Press to exit the menu on the TV screen.
- 15. NUMBER buttons**– Press to select desired channels for viewing or recording. To select channels from 1 to 9, first press "0" button then 1 to 9. (only on the remote control)
+100 button– When selecting cable channels which are higher than 99, press this button first, then press the last two digits. (To select channel 125, first press "+100" button then press "2" and "5"). (only on the remote control)
- 16. DISPLAY button**– Press to display the current time, channel number, real time tape counter, and other information on the TV screen. (only on the remote control)
Each time you press this button, TV screen will change as shown. The status display (STOP, PLAY etc.) and the tape speed display (SP, LP (playback only), or SLP) will disappear after 5 seconds.
- 17. SLOW button**– Press to start slow motion playback. (only on the remote control)
- 18. COUNTER MEMORY button**– Press to set counter memory on and off. (only on the remote control)
- 19. COUNTER RESET button**– Press to reset counter to 0:00:00. (only on the remote control)
- EXIT button**– Press to exit the menu on the TV screen. (only on the remote control)
- 20. SEARCH MODE button**– Press to perform a Time Search or an Index Search. (only on the remote control)
- 21. Power cord**– Connect to a standard AC outlet (120V/60Hz).
- 22. AUDIO OUT jacks**– Connect to the audio input jacks of your audio equipment or another VCR.
- 23. AUDIO IN jacks**– Connect to the audio output jacks of your audio equipment or another VCR.
- 24. ANT. IN terminal**– Connect to an antenna, Cable system or Satellite system.
- 25. VIDEO OUT jack**– Connect to the video input jack of your video camera or another VCR.
- 26. VIDEO IN jack**– Connect to the video output jack of your video camera or another VCR.
- 27. CH3/CH4 selector switch**– Use to select a video output channel (3 or 4) for VCR playback.
- 28. ANT. OUT terminal**– Connects to the antenna input terminal on your TV.

CABINET DISASSEMBLY INSTRUCTIONS

1. Disassembly Flowchart

This flowchart indicates the disassembly steps to gain access to item(s) to be serviced. When reassembling, follow the steps in reverse order. Bend, route, and dress the cables as they were originally.

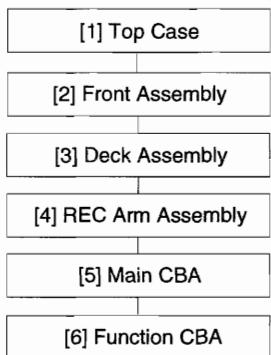

Disassembly Method

ID/ LOC. No.	PART	REMOVAL		
		Fig. No.	REMOVE/ *UNHOOK/UNLOCK/ RELEASE/UNPLUG/ DESOLDER	Note
[1]	Top Case	1	3(S-1)	-
[2]	Front Assembly	2	*3(L-1), *4(L-2)	-
[3]	Deck Assembly	3	5(S-2), *(CN251, CN501, CN502, CN503, CN504)	1, 2
[4]	REC Arm Assembly	3	-----	-
[5]	Main CBA	4	*2(L-4)	-
[6]	Function CBA	4	*(L-3), Desolder	3

↓ ↓ ↓ ↓ ↓
 ① ② ③ ④ ⑤

- ①: Identification (location) No. of parts in the figures
- ②: Name of the part
- ③: Figure Number for reference
- ④: Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
- P=Spring, L=Locking Tab, S=Screw,
CN=Connector
*=Unhook, Unlock, Release, Unplug, or Desolder
e.g. 2(S-2) = two Screws (S-2),
2(L-2) = two Locking Tabs (L-2)
- ⑤: Refer to "Reference Notes."

Reference Notes

CAUTION: Locking Tabs (L-1) and (L-2) are fragile. Be careful not to break them.

1. Remove five Screws (S-2). Then slowly lift the Deck Assembly up. Lifting Deck Assembly disconnects five Connectors (CN251, CN501, CN502, CN503, CN504). (Fig. 3)
2. Before installing the Deck Assembly, be sure to place the pin of LD-SW on Main CBA as shown in Fig. 5. Then, install the Deck Assembly while aligning the hole of Cam Gear with the pin of LD-SW, the shaft of Cam Gear with the hole of LD-SW as shown in Fig. 5.
3. After removing the Main CBA, desolder from bottom of the Main CBA as shown in Fig. 4 to remove the Function CBA.





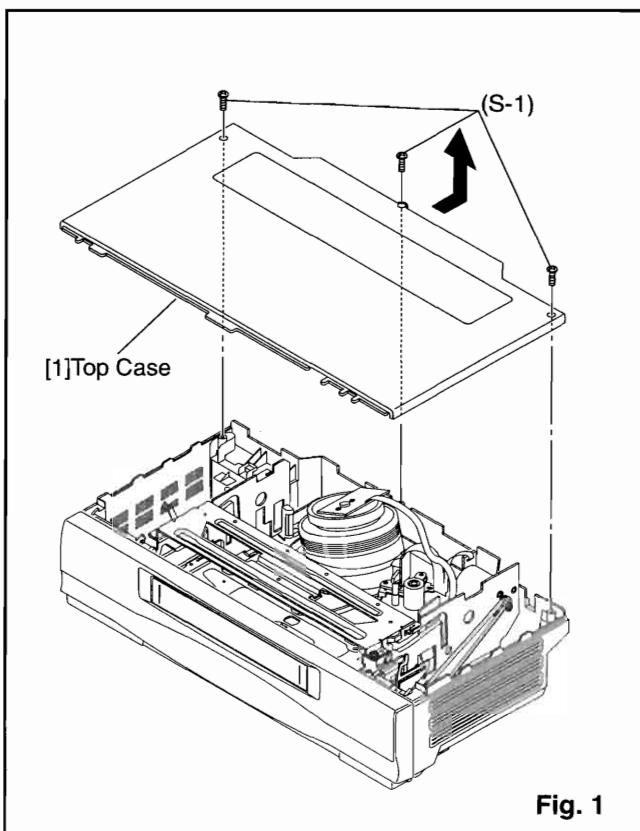


Fig. 1

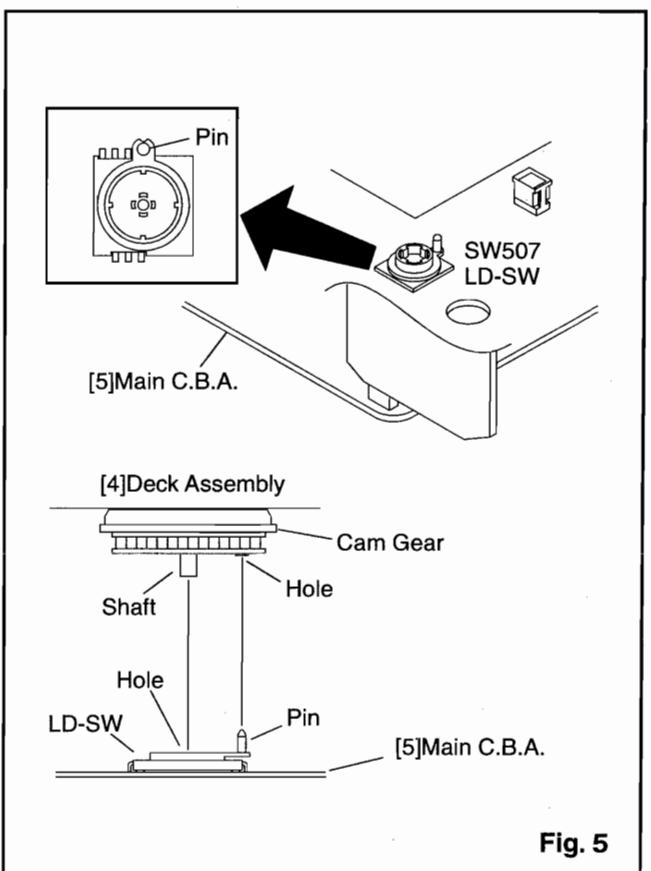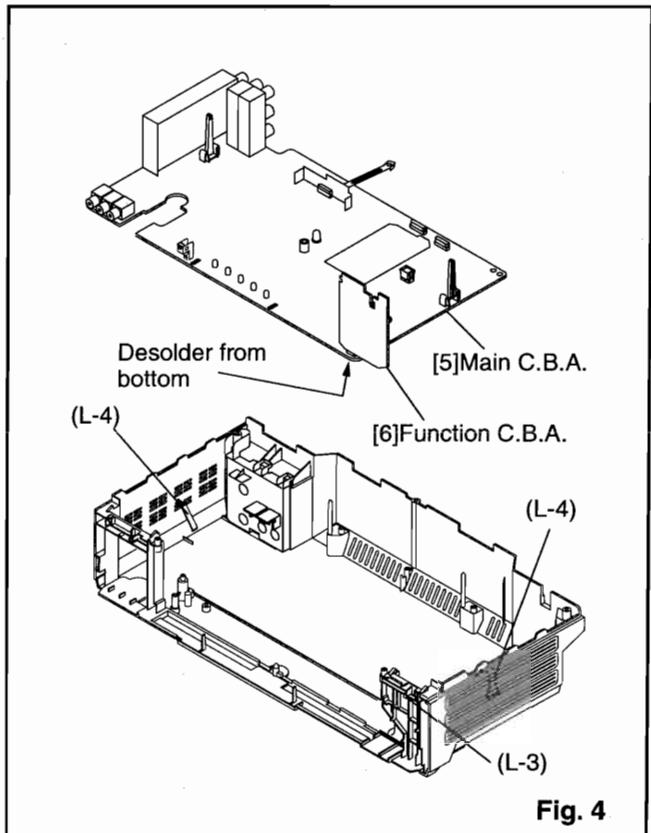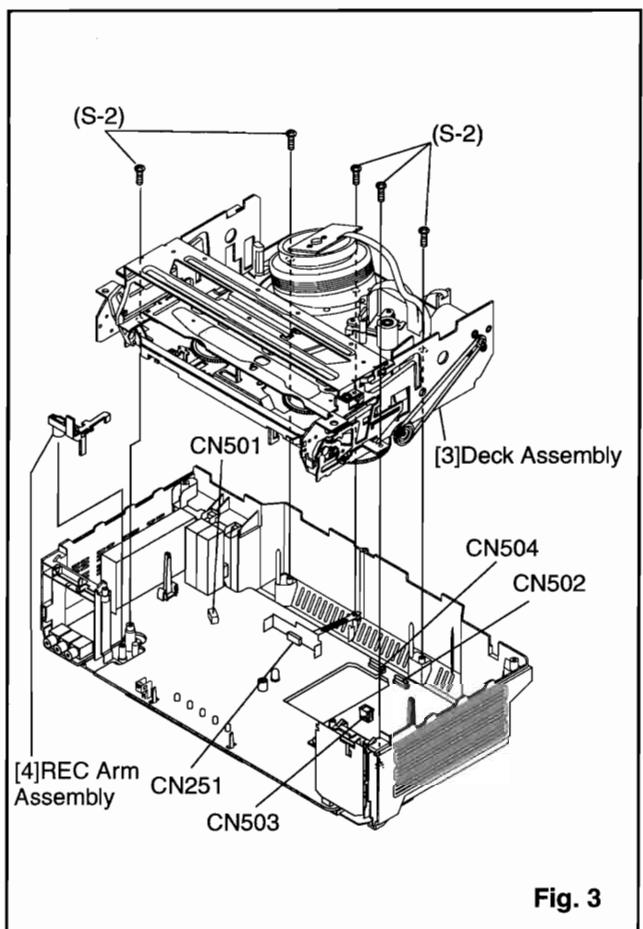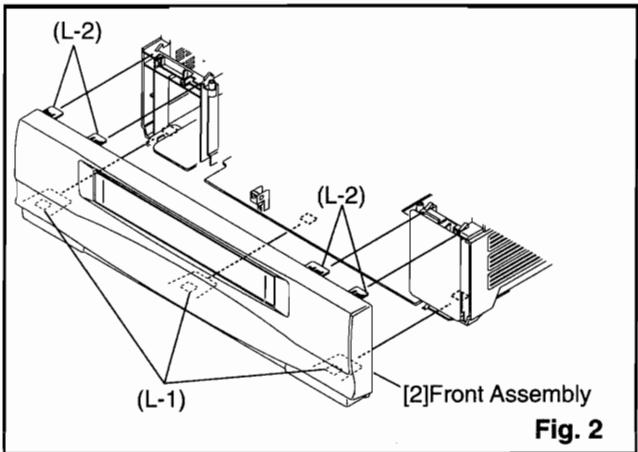

ELECTRICAL ADJUSTMENT INSTRUCTIONS

General Note: "CBA" is an abbreviation for "Circuit Board Assembly."

NOTE:

1. Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to do these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.
2. To perform these alignment / confirmation procedures, make sure that the tracking control is set in the center position: Press either channel "▼" or "▲" button first, then the "PLAY" button (VCR's Front Panel only).

Test Equipment Required

1. Oscilloscope: Dual-trace with 10:1 probe, V-Range: 0.001~50V/Div., F-Range: DC~AC-20MHz
2. Alignment Tape (FL8A)


Head Switching Position Adjustment

Purpose:

To determine the Head Switching point during playback.

Symptom of Misadjustment:

May cause Head Switching noise or vertical jitter in the picture.

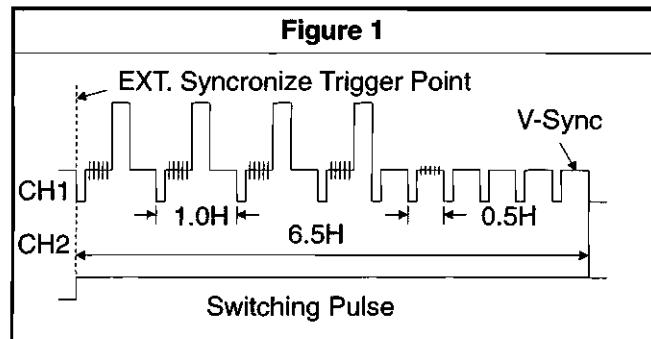



Reference Notes:

Play back the Alignment tape and adjust VR501 so that the V-sync front edge of the CH1 video output waveform is at the 6.5H(412.7μs) delayed position from the rising edge of the CH2 head switching pulse waveform.


Test Point	Adj. Point	Mode	Input
TP751(V-OUT) TP302(RF-SW) TP511(GND)	VR501 (Switching Point) (MAIN CBA)	PLAY (SP)	----
Tape	Measurement Equipment		Spec.
FL8A	Oscilloscope	6.5H±1H (412.7μs±60μs)	
Connections of Measurement Equipment			
Main CBA	TP751 TP501 TP302	Oscilloscope	CH1 CH2 Trig. (+)

Servo/System Control Block Diagram


BLOCK DIAGRAMS

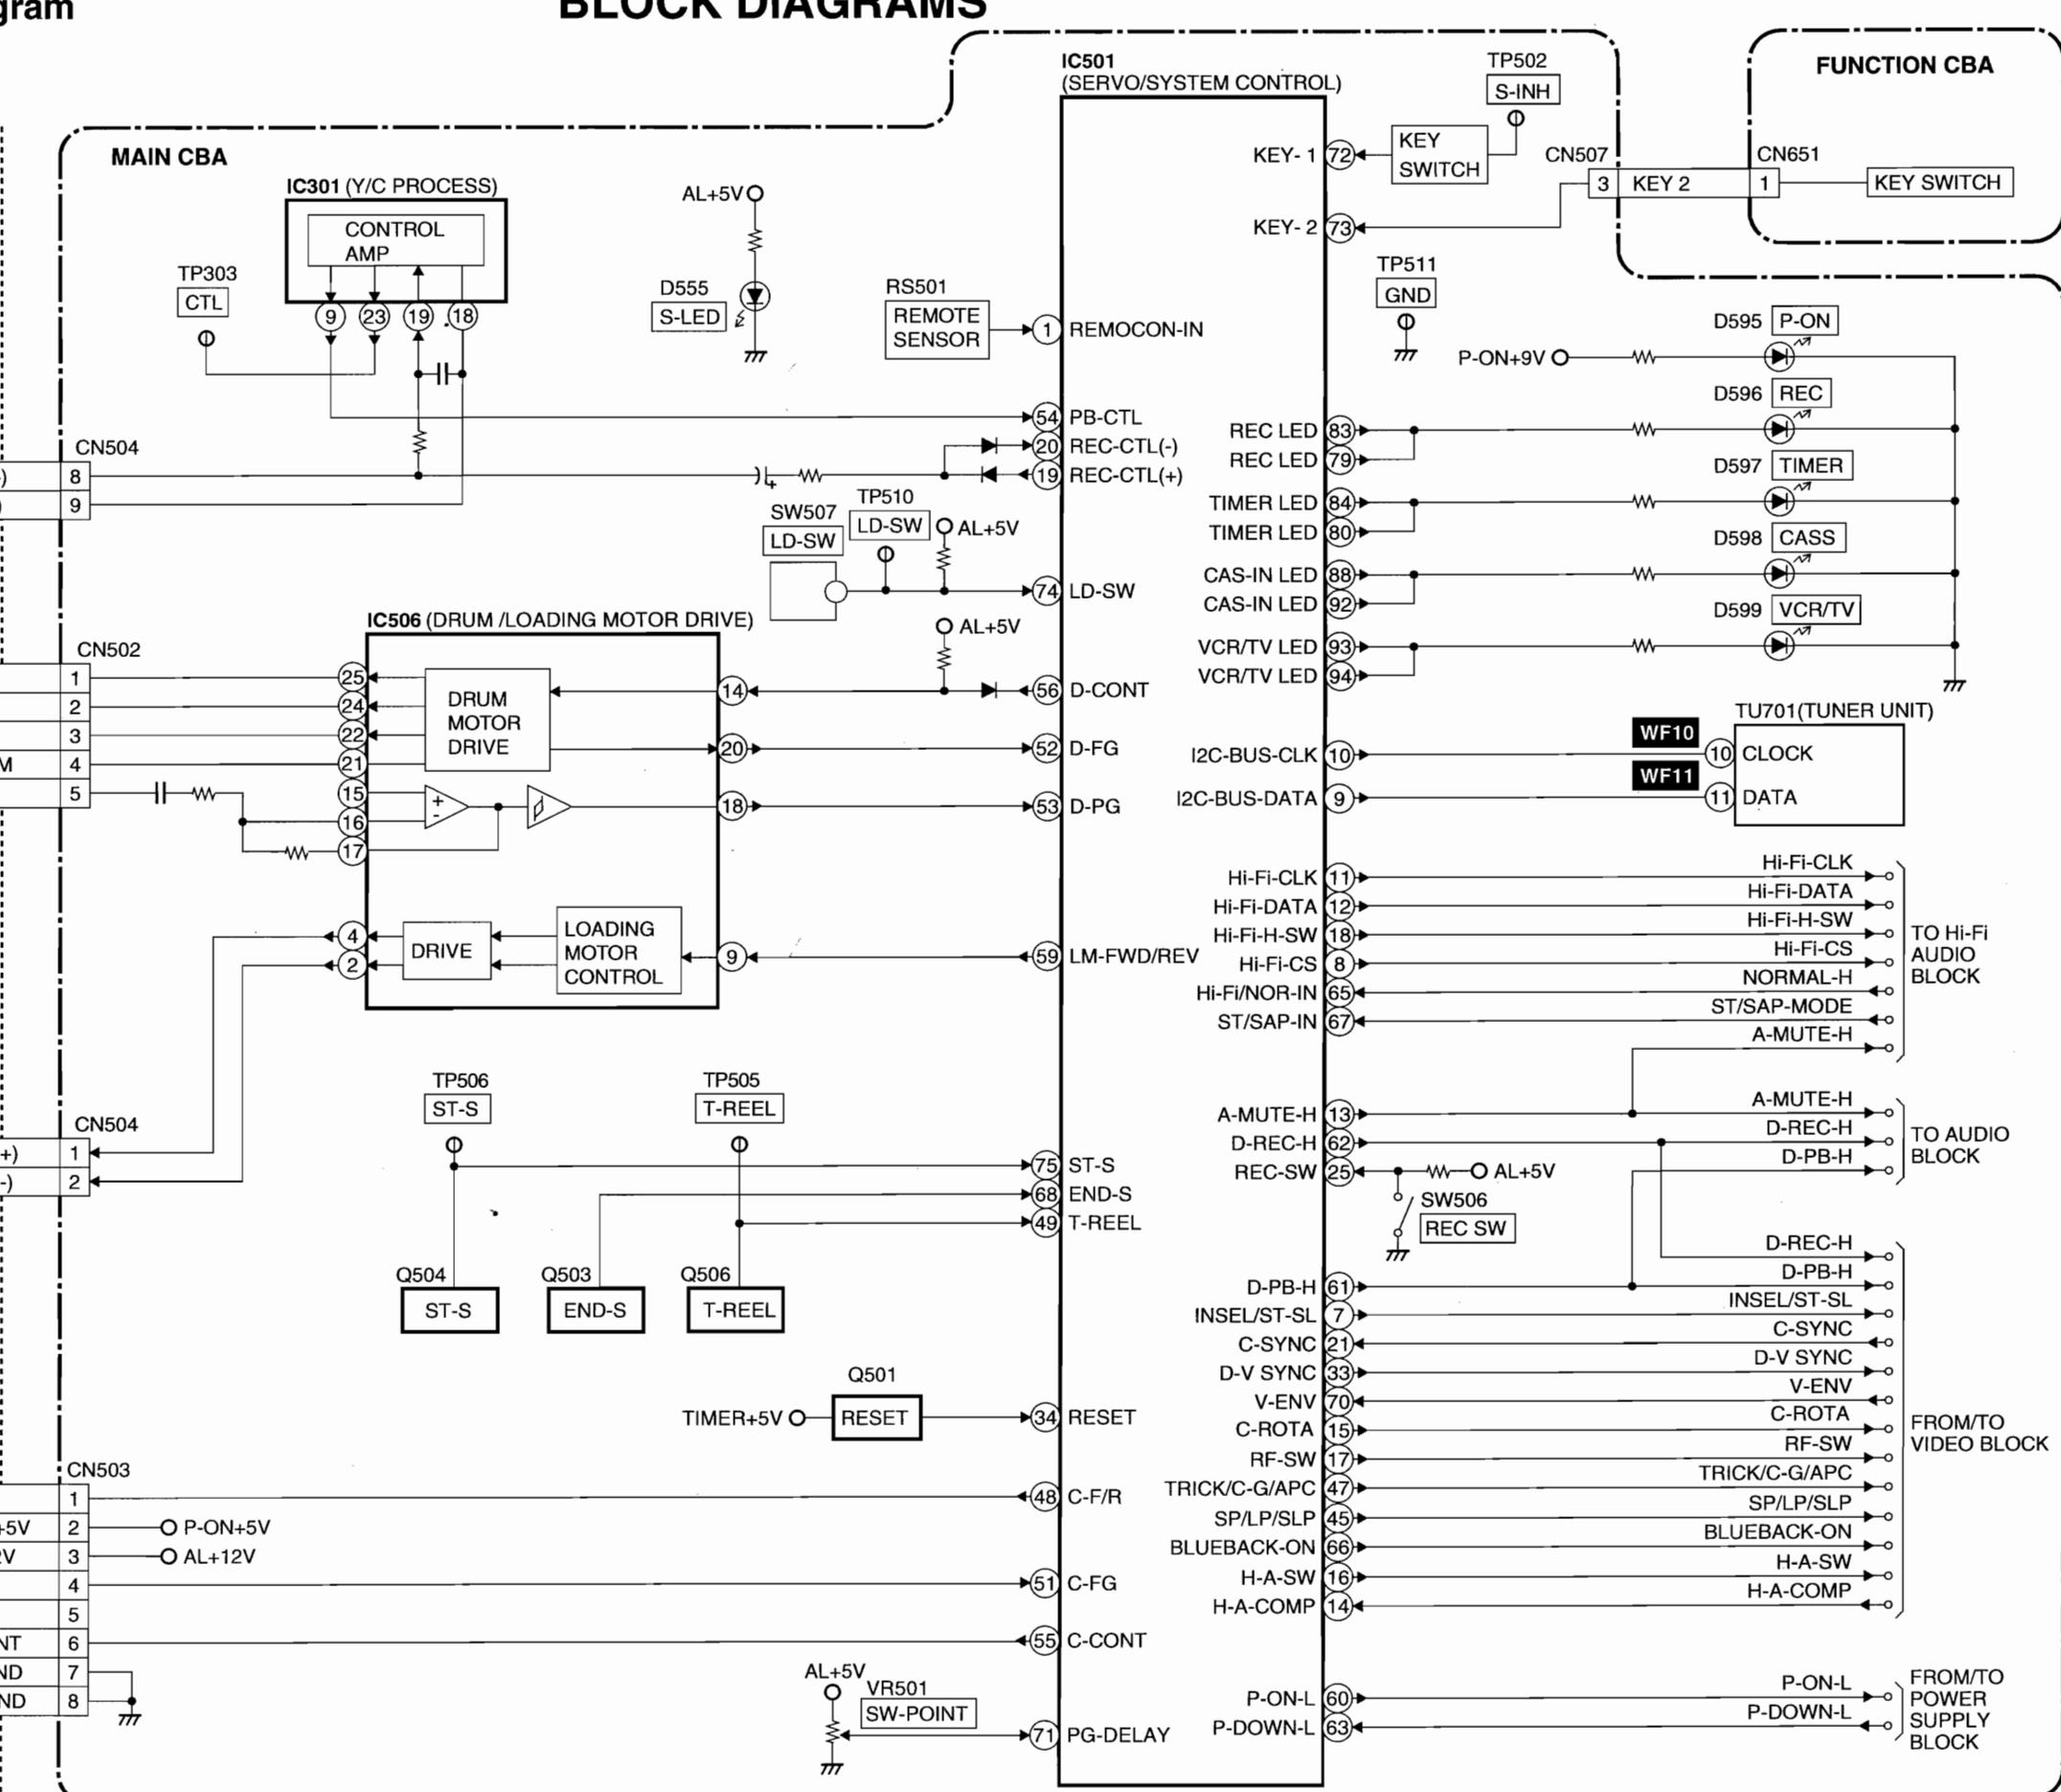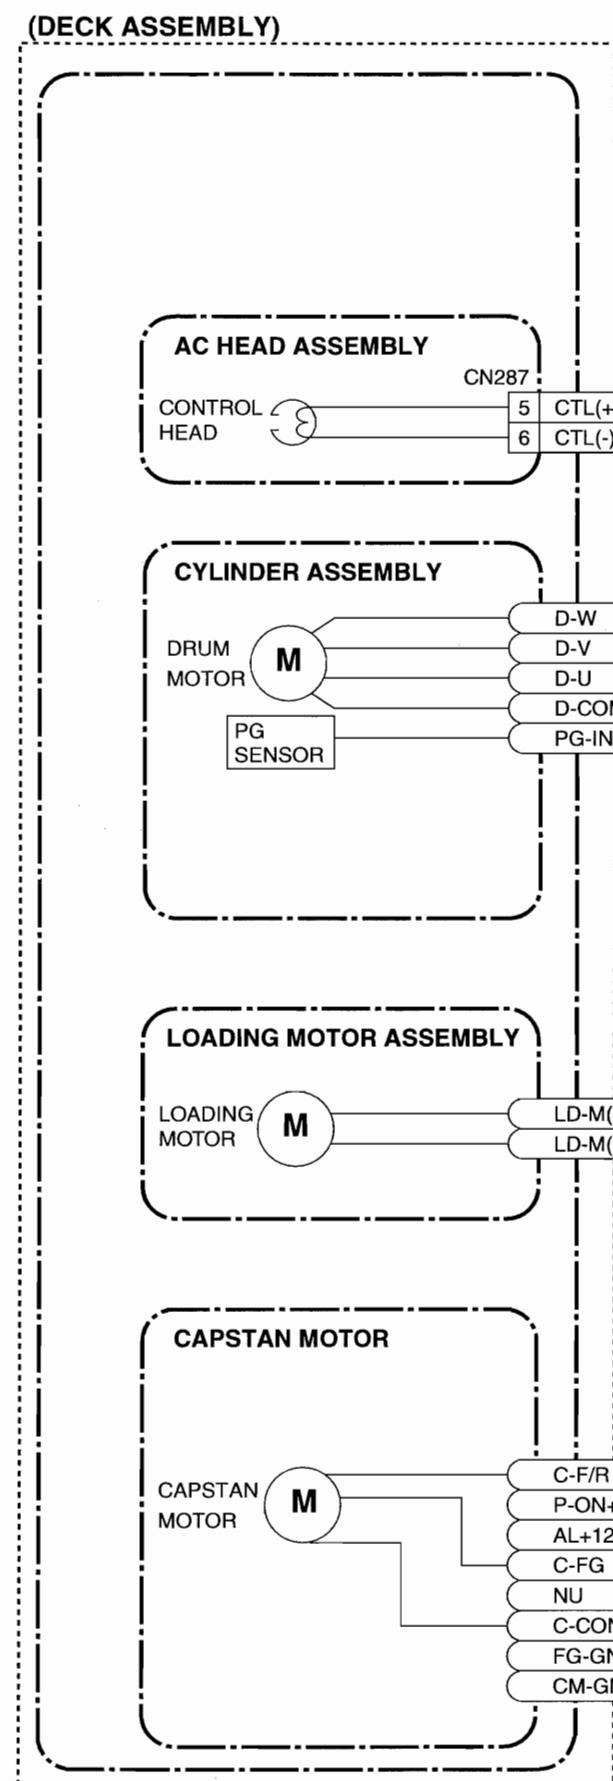


Video Block Diagram

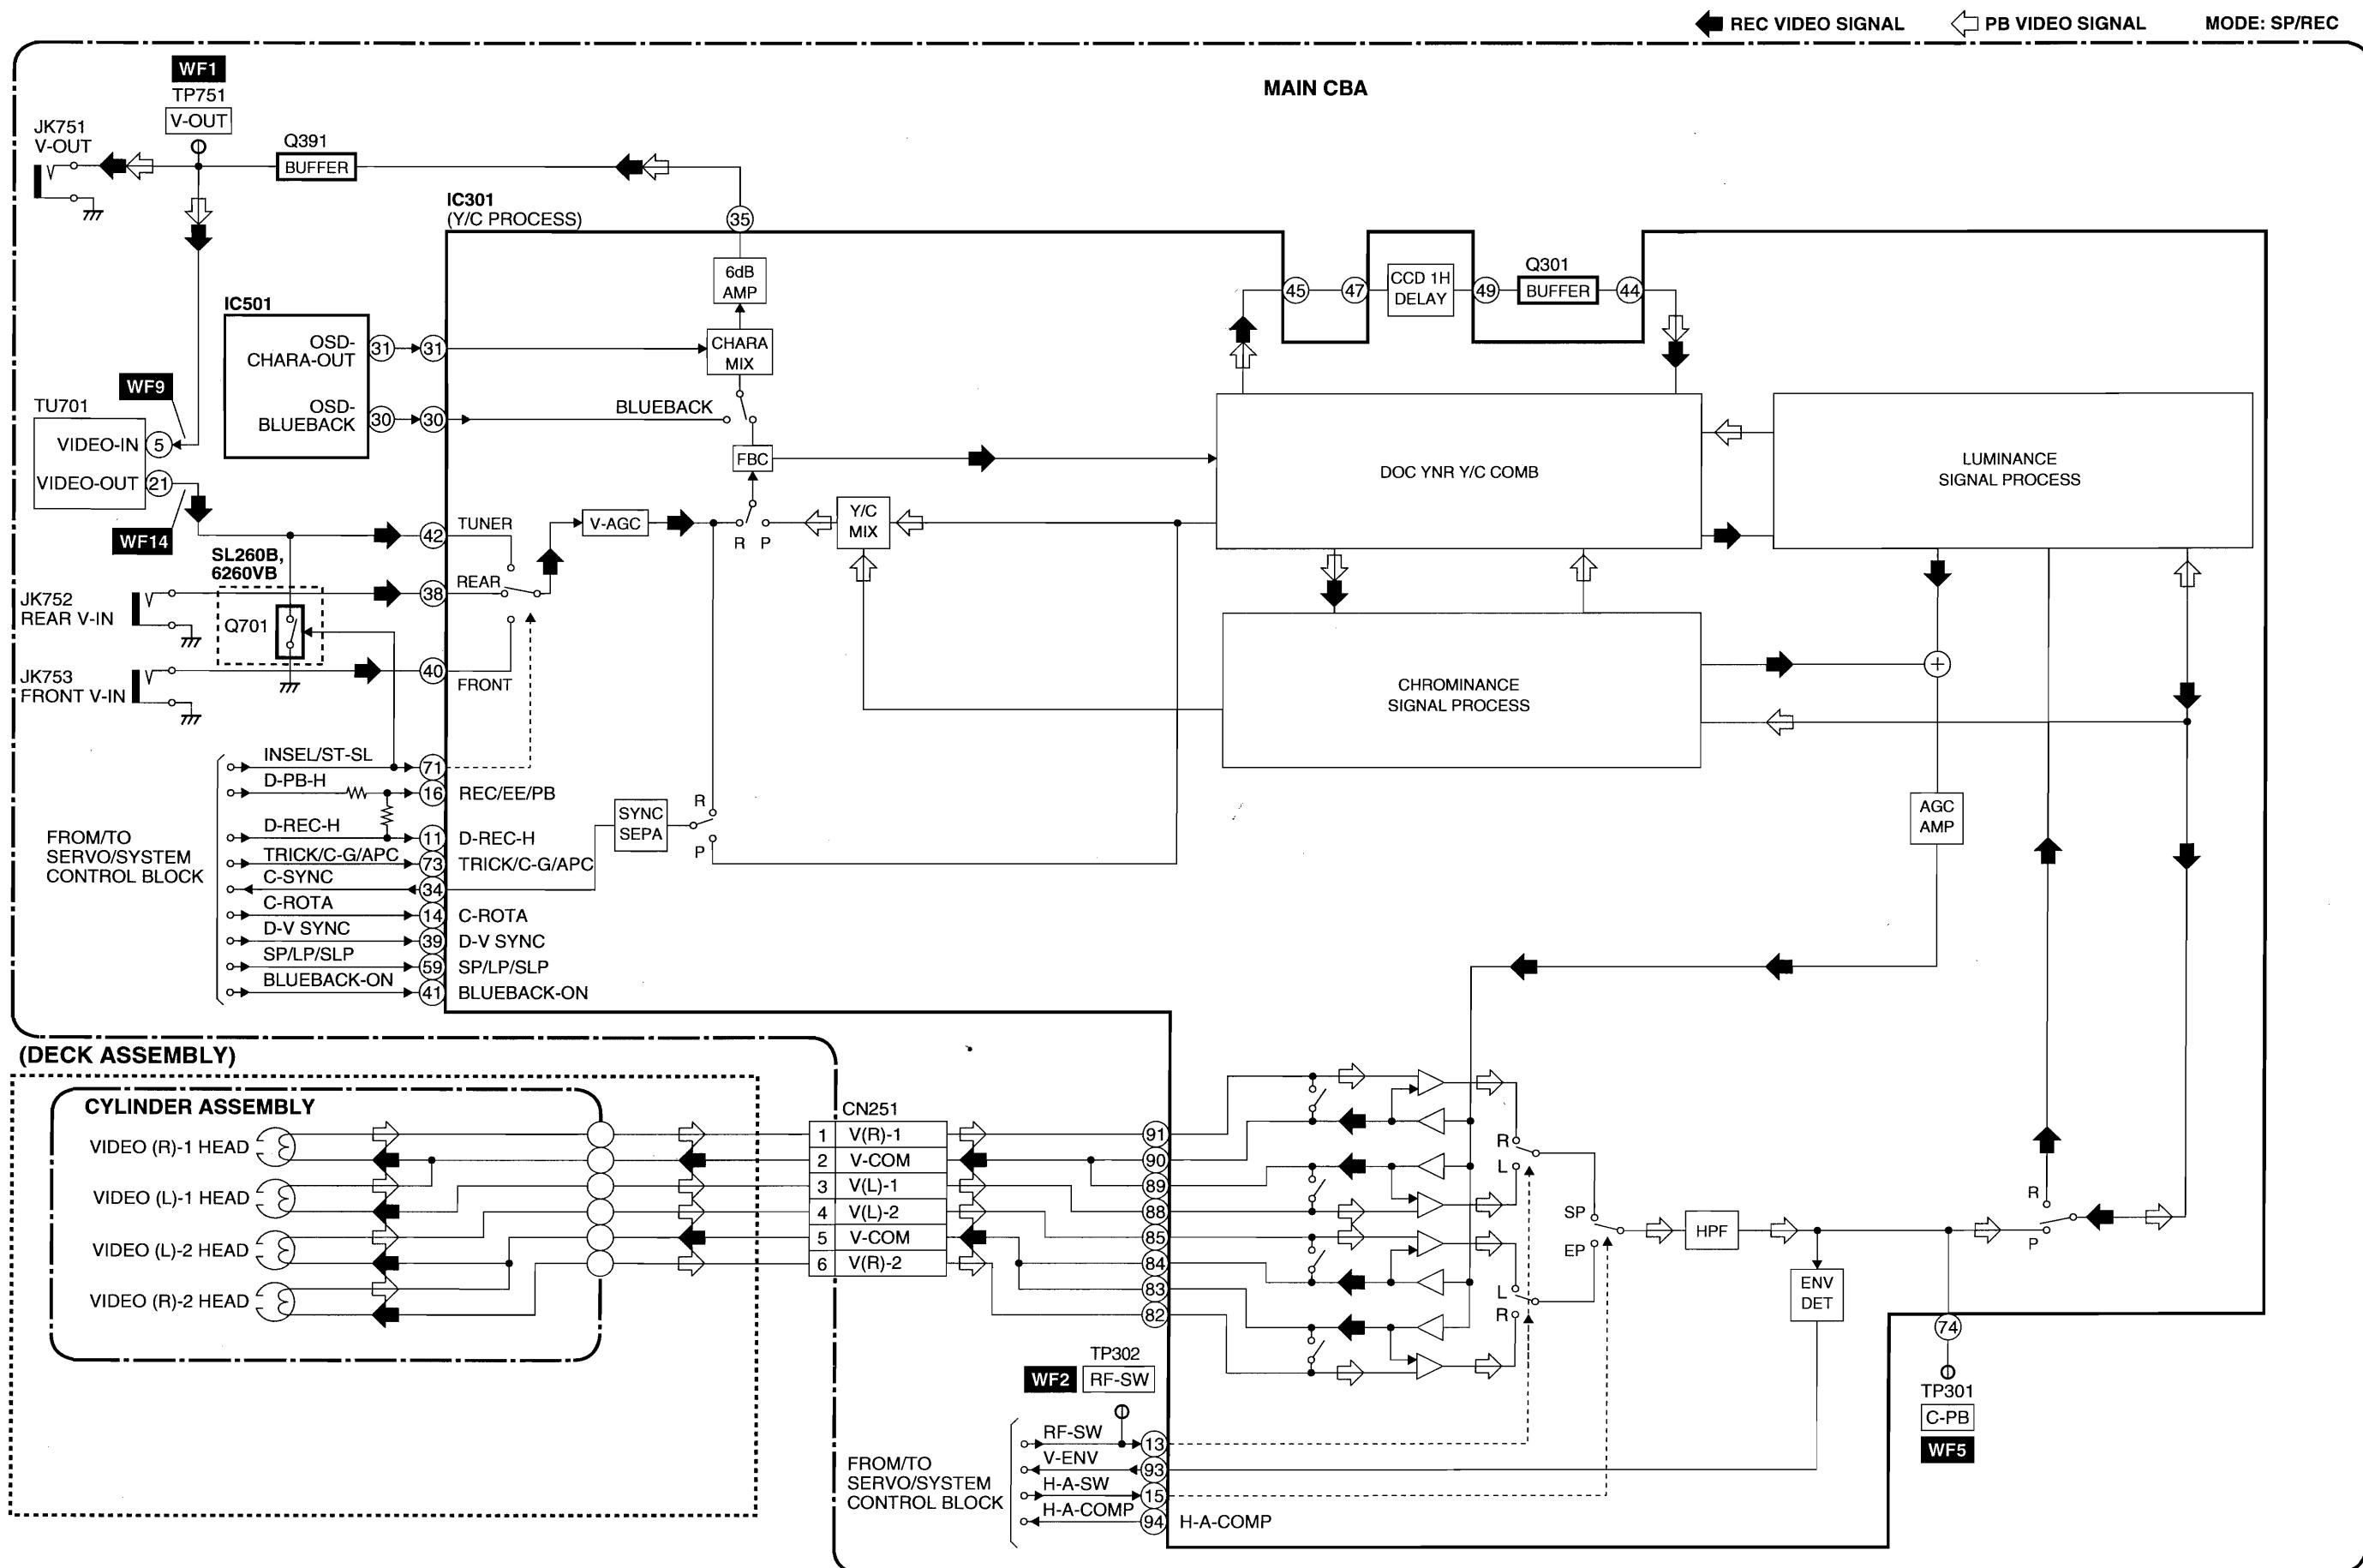

Audio Block Diagram

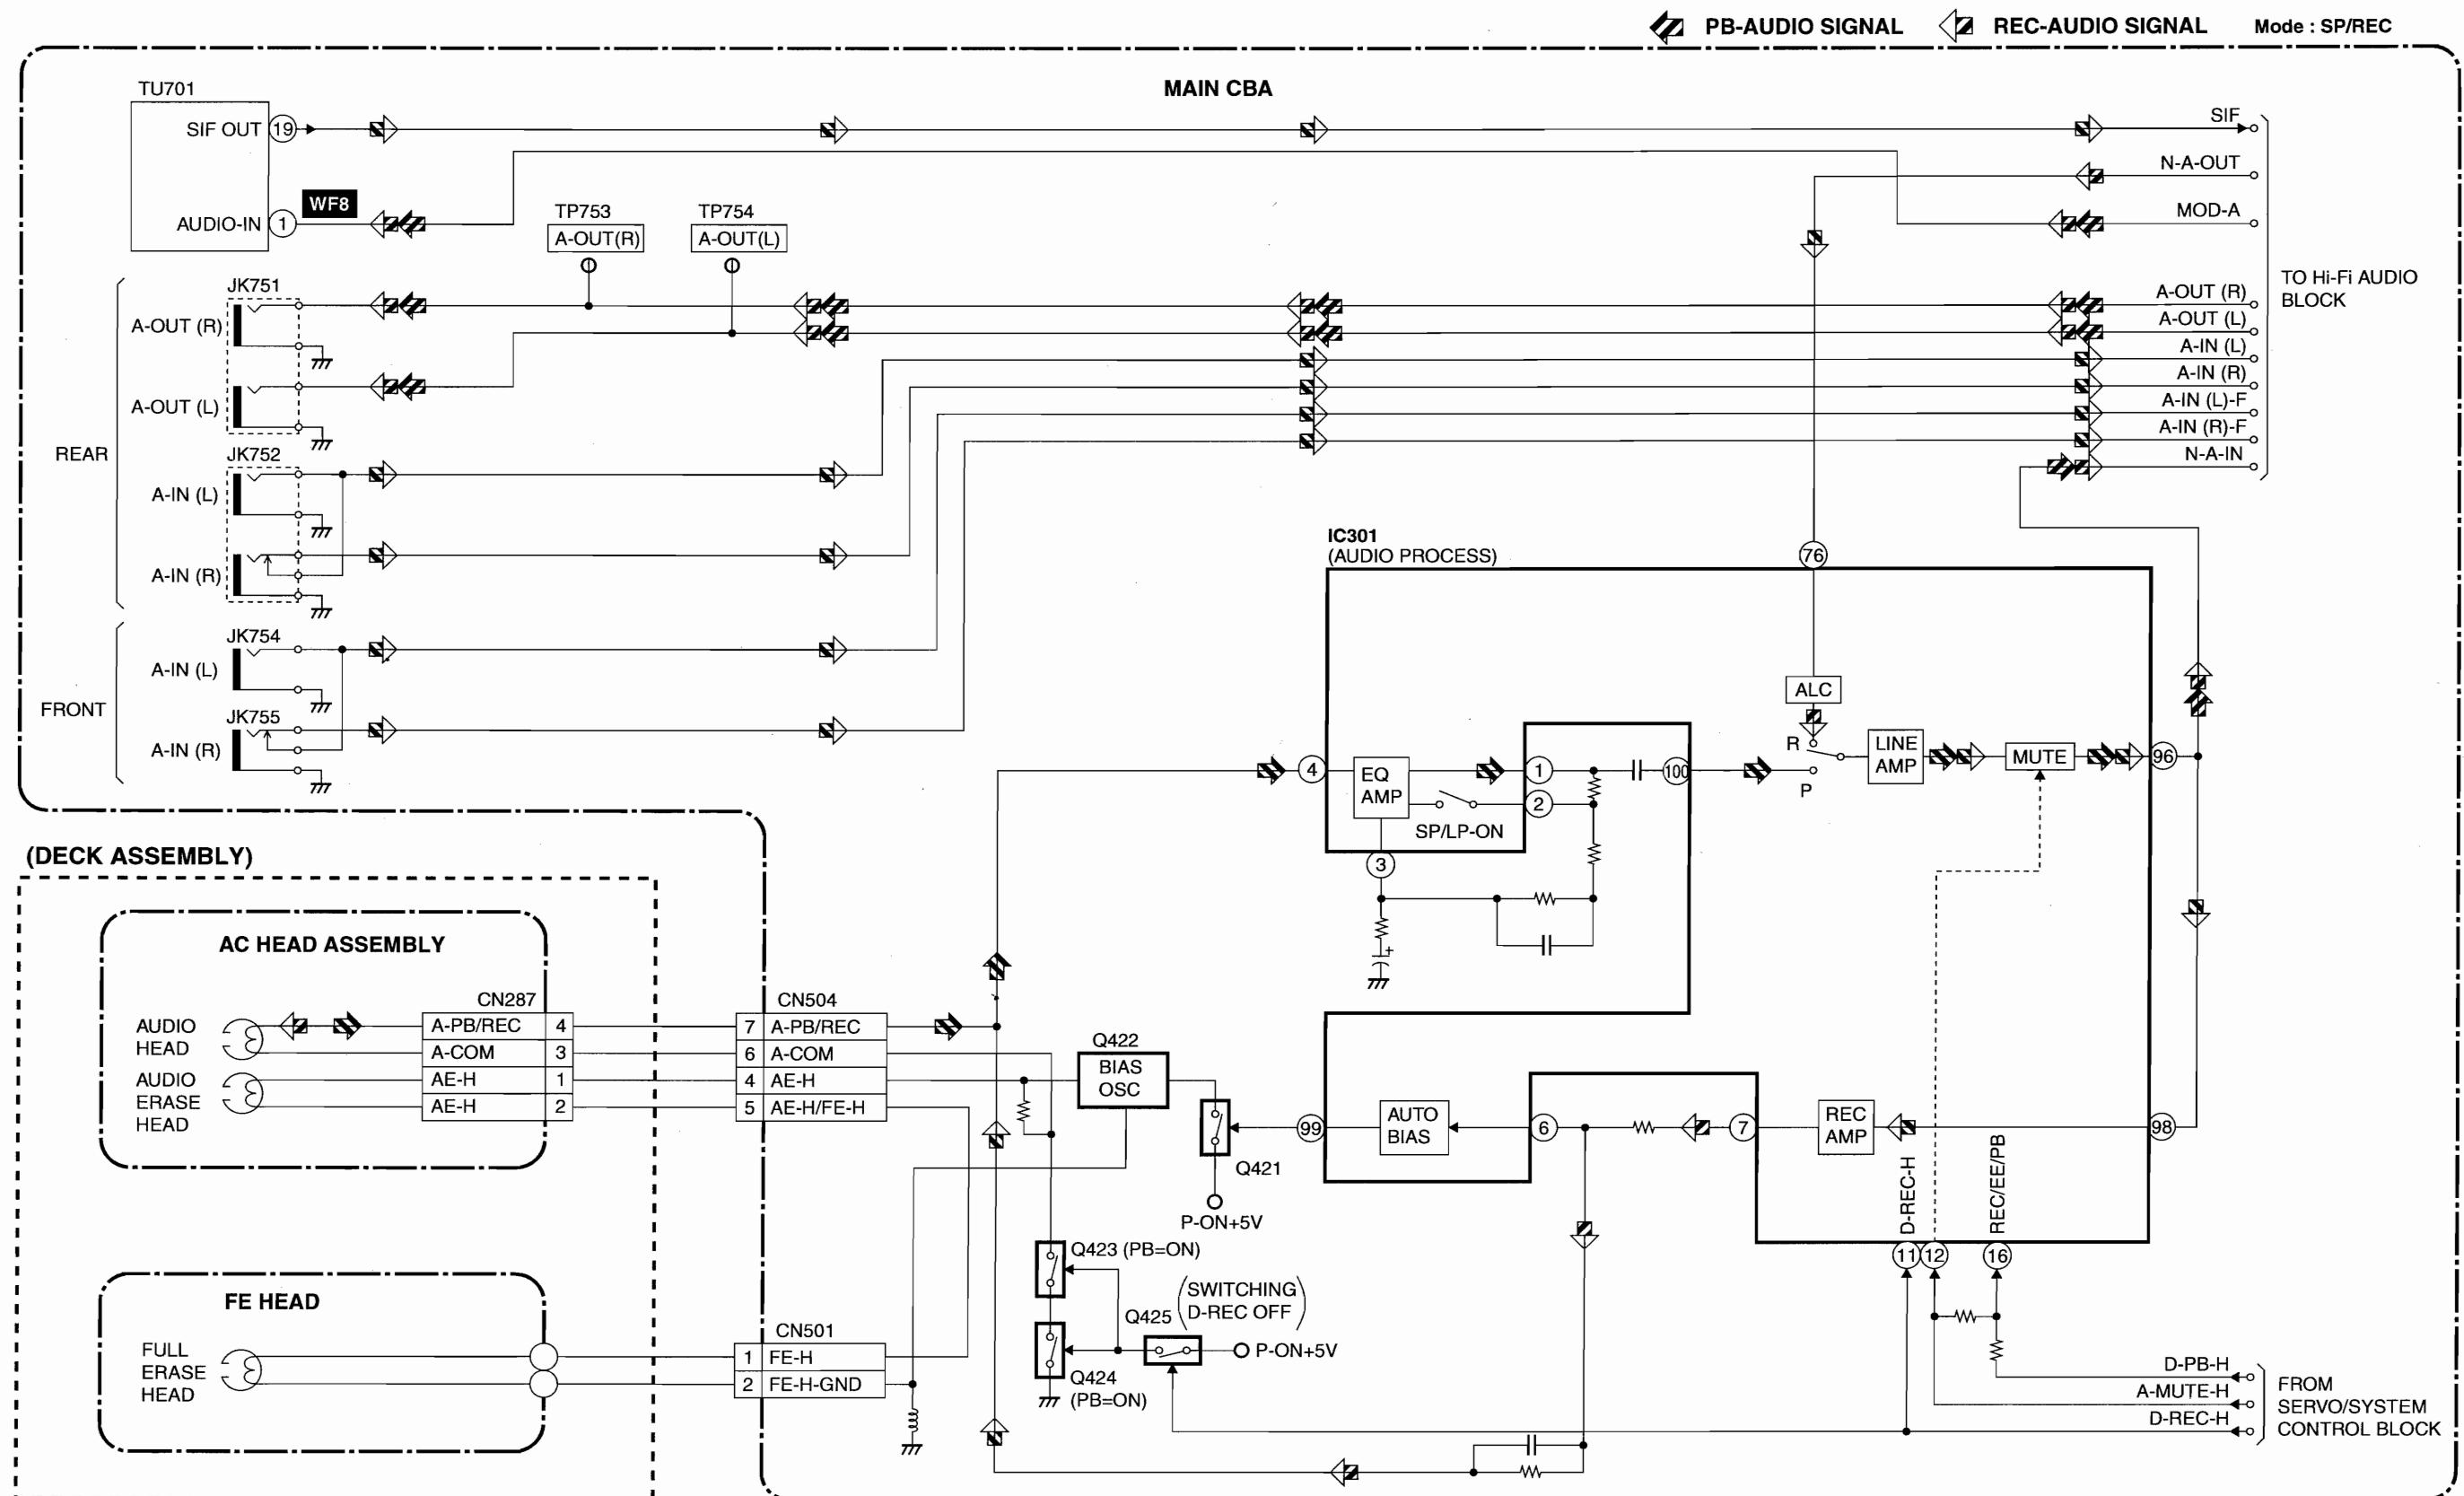


Hi-Fi Audio Block Diagram

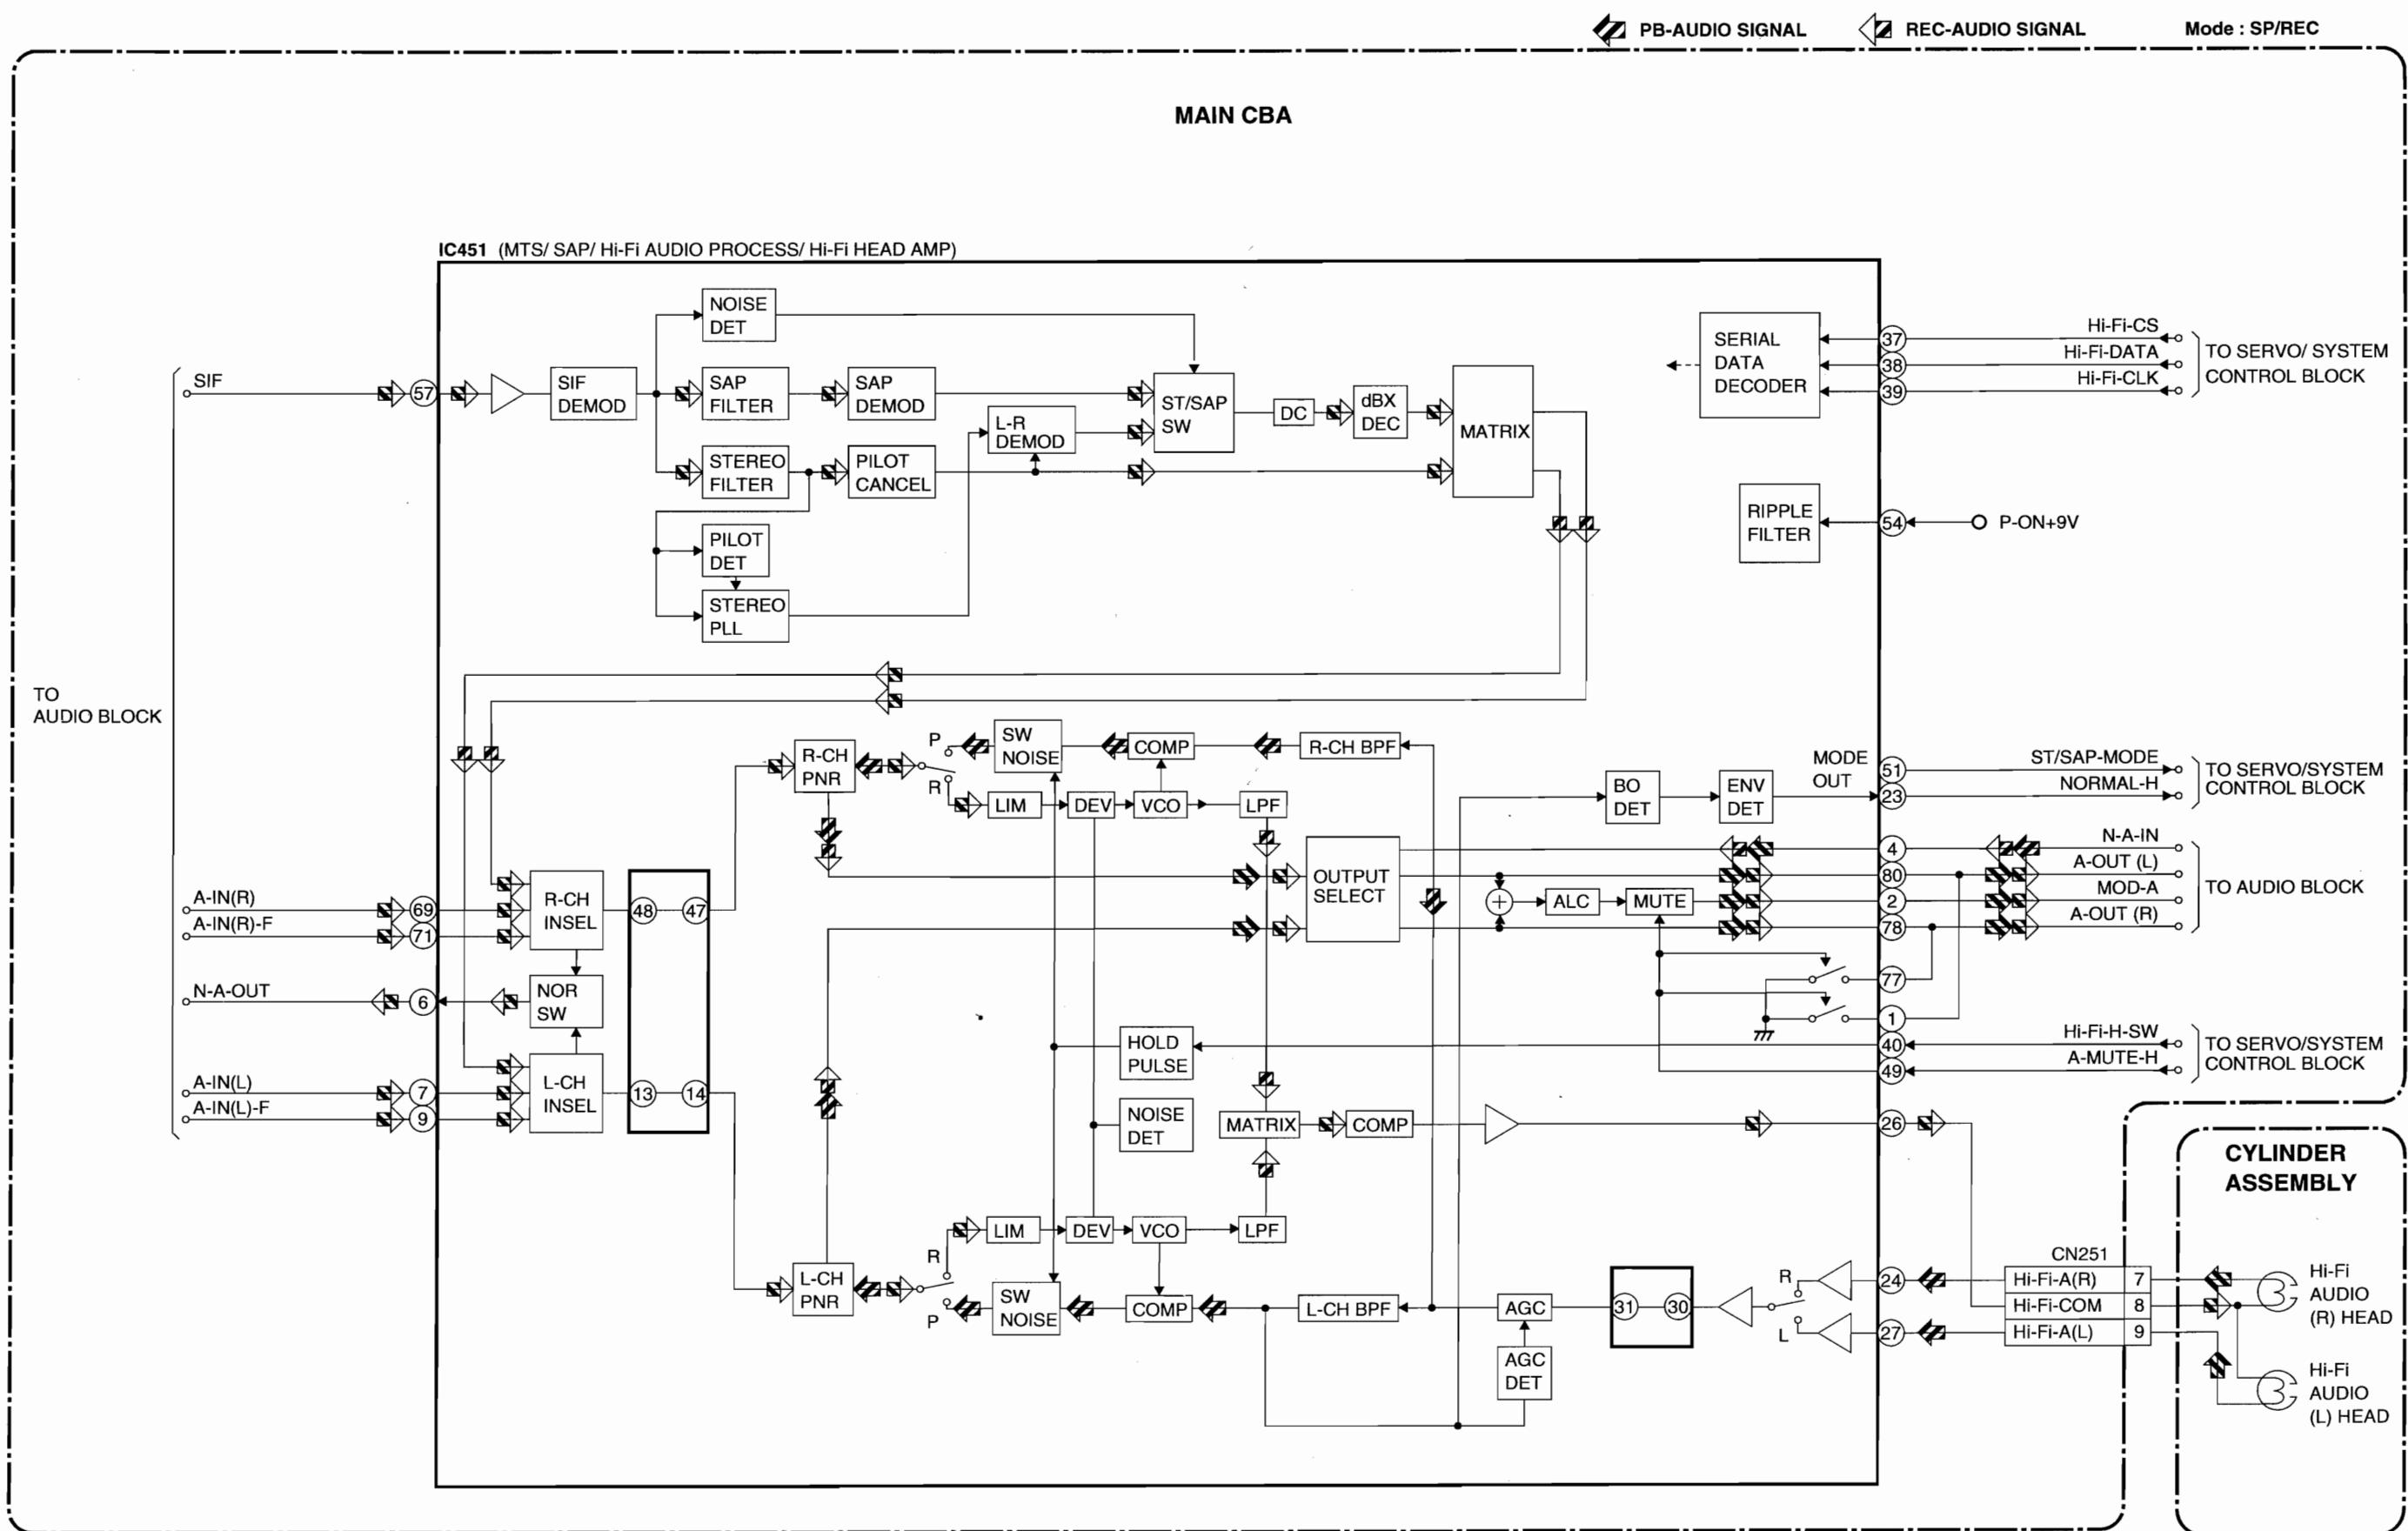

Power Supply Block Diagram

NOTE :

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

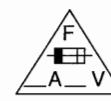

CAUTION


FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.

ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.
RISK OF FIRE -REPLACE FUSE AS MARKED.

■ "This symbol means fast operating fuse."
"Ce symbole représente un fusible à fusion rapide."

CAUTION !

Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F001) is blown, check to see that all components in the
power supply circuit are not defective before you connect the AC plug to
the AC power supply. Otherwise it may cause some components in the
power supply circuit to fail.

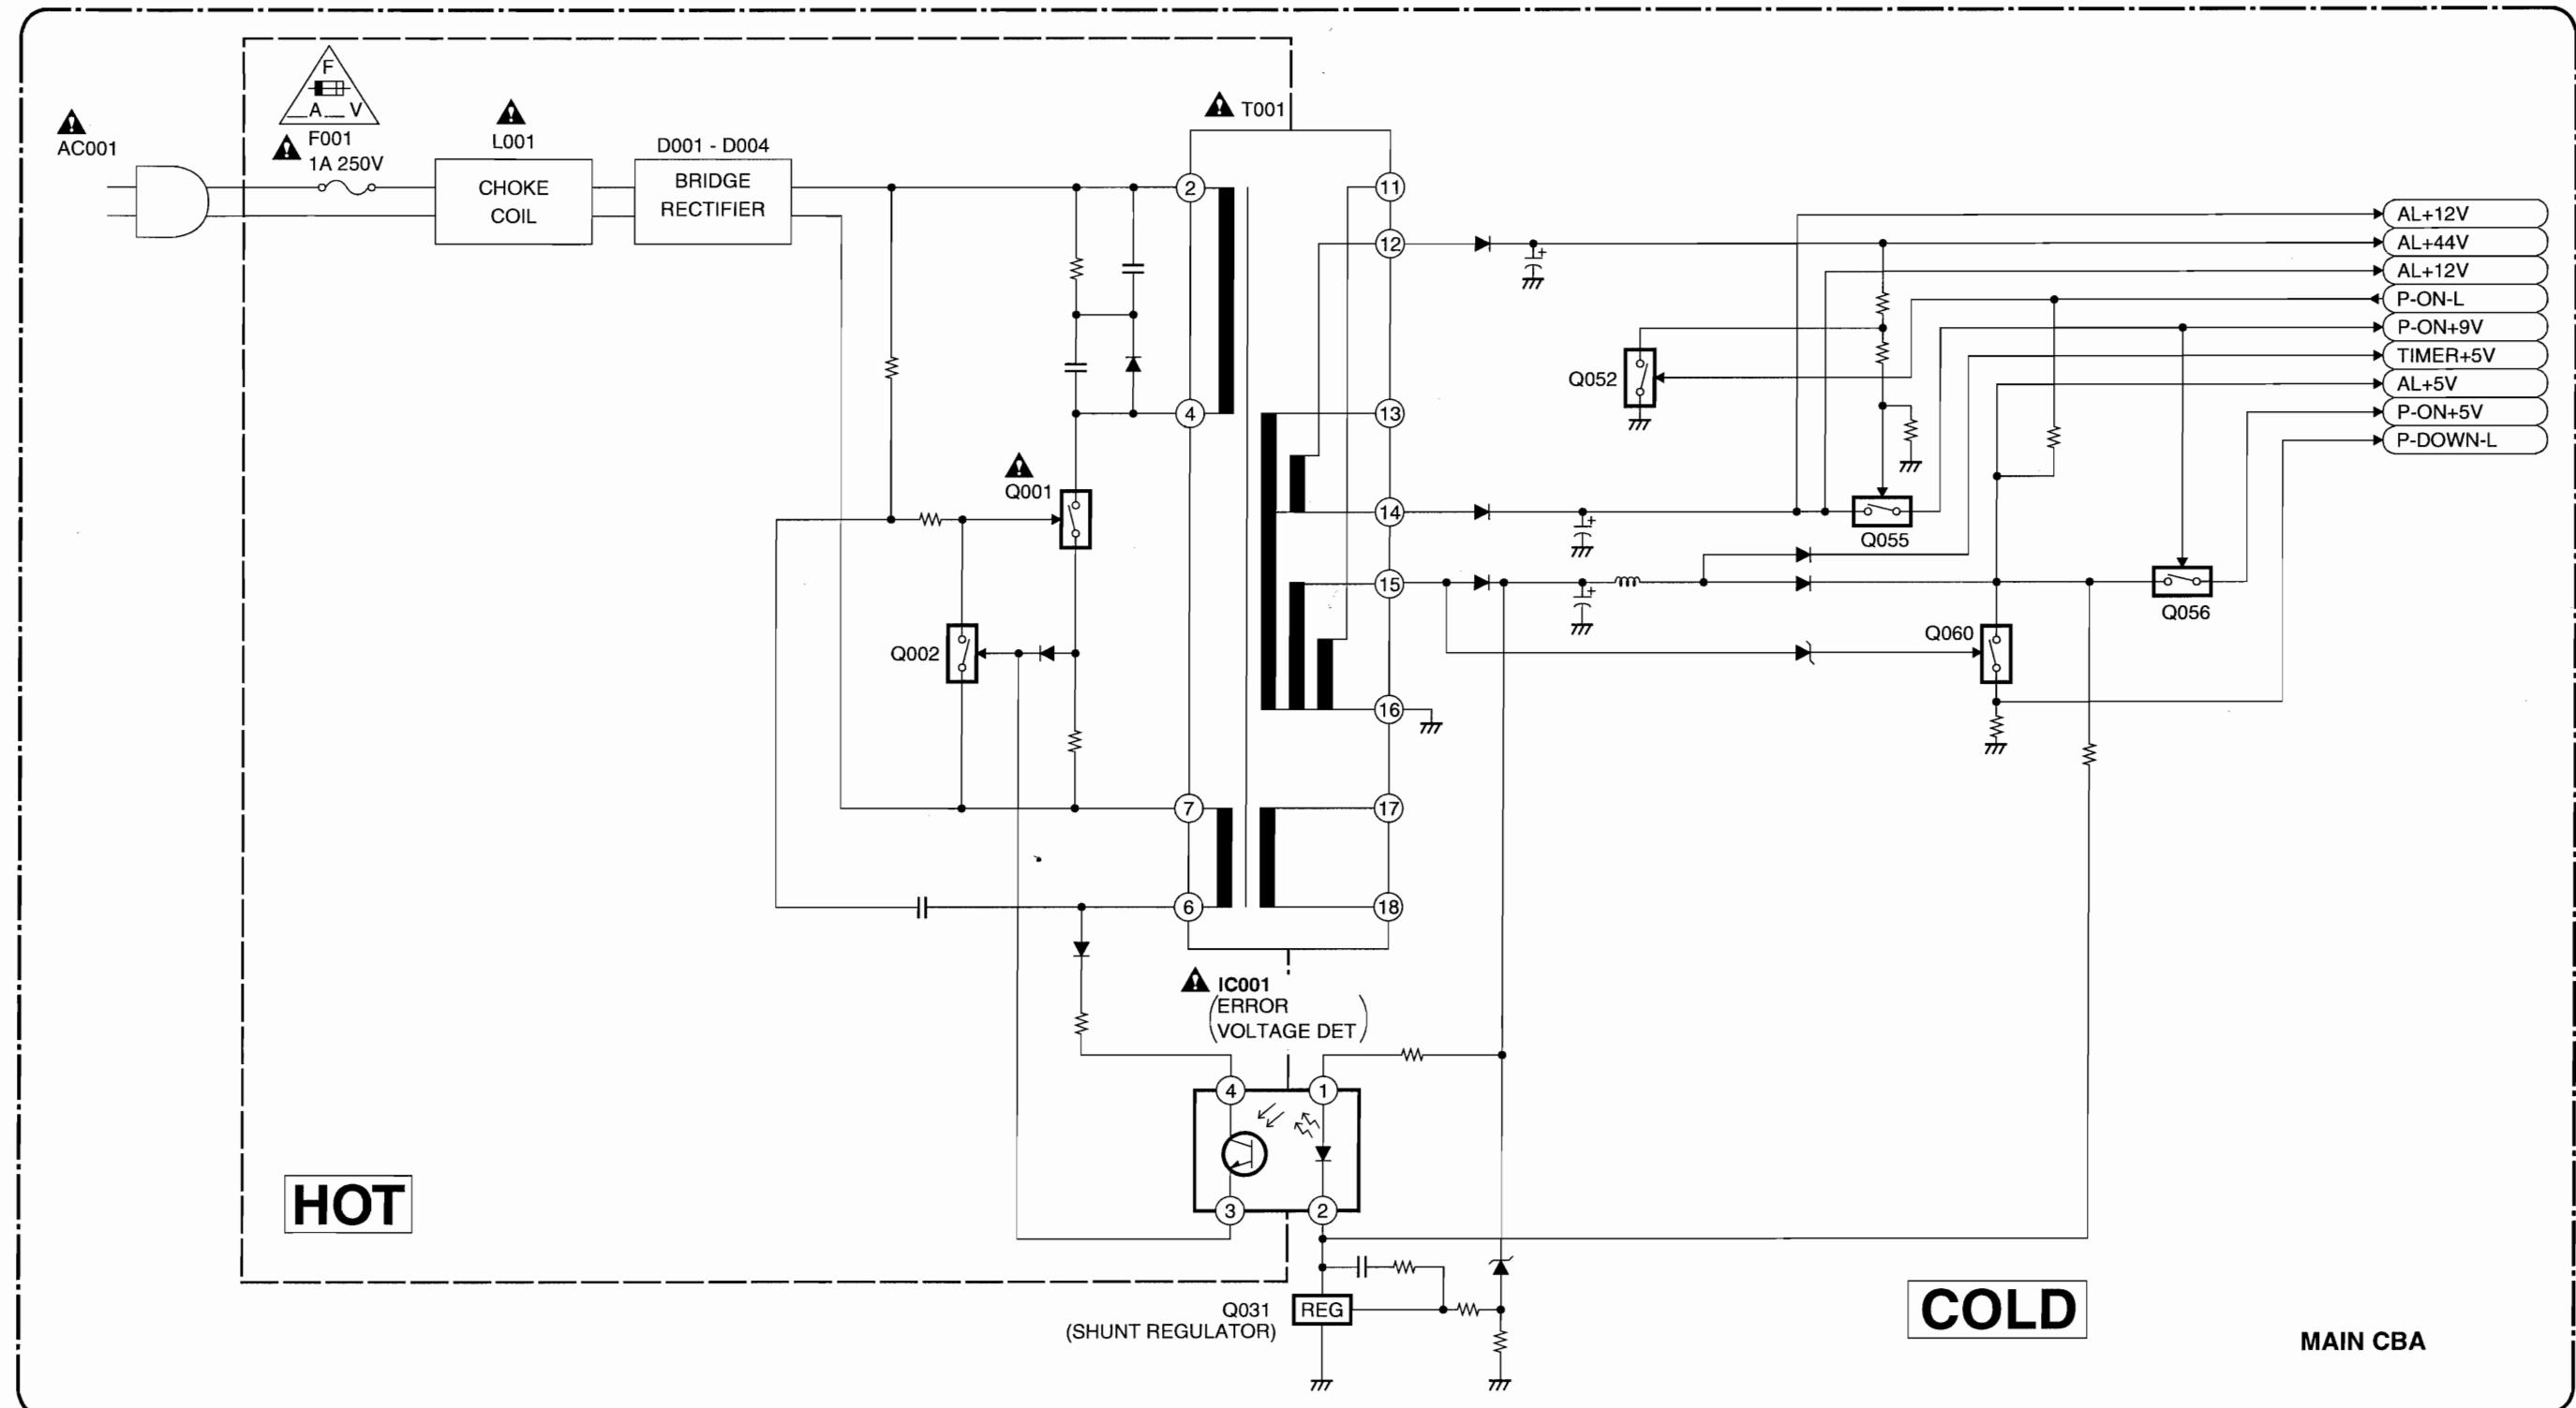


FUNCTION INDICATOR SYMBOLS

Note:


The following symbols will appear on the indicator panel to indicate the current mode or operation of the VCR. On-screen modes will also be momentarily displayed on the tv screen when you press the operation buttons.

Display panel

Model No. : SL260B

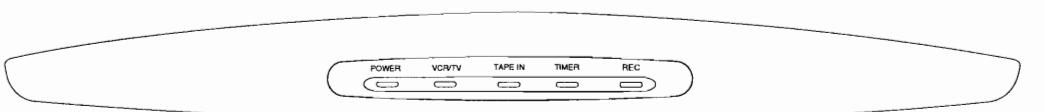

Model No. : 6260VB/EWV601

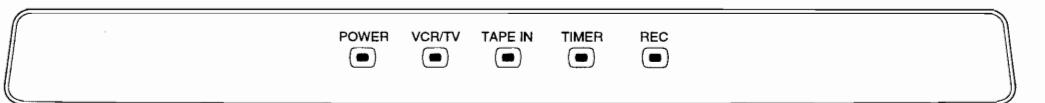


" H " = LED Light on, " L " = LED Light off

Led Mode	Indicator Active	
POWER	Power on = " H " Power off = " L "	
VCR/TV	VCR mode = " H " TV mode = " L "	
TAPE IN	Cassette in = " H " Cassette out = " L "	Blinks at 0.8Hz interval
	Cassette in	Blinks at 1.6Hz interval
	Cassette in	Blinks at 3.2Hz interval
	Cassette in	Blinks at 6.4Hz interval
TIMER	Timer stand by = " H " One touch recording = " H " Timer recording = " H " General mode = " L "	
REC	REC mode = " H " REC pause General mode = " L "	Blinks at 0.8Hz interval

Power Supply Trouble Shooting Guide

It is highly recommended that a variable isolation transformer which can monitor current be used. (Alternatively a variable AC source which monitors current will do). Read directions below before power is added!

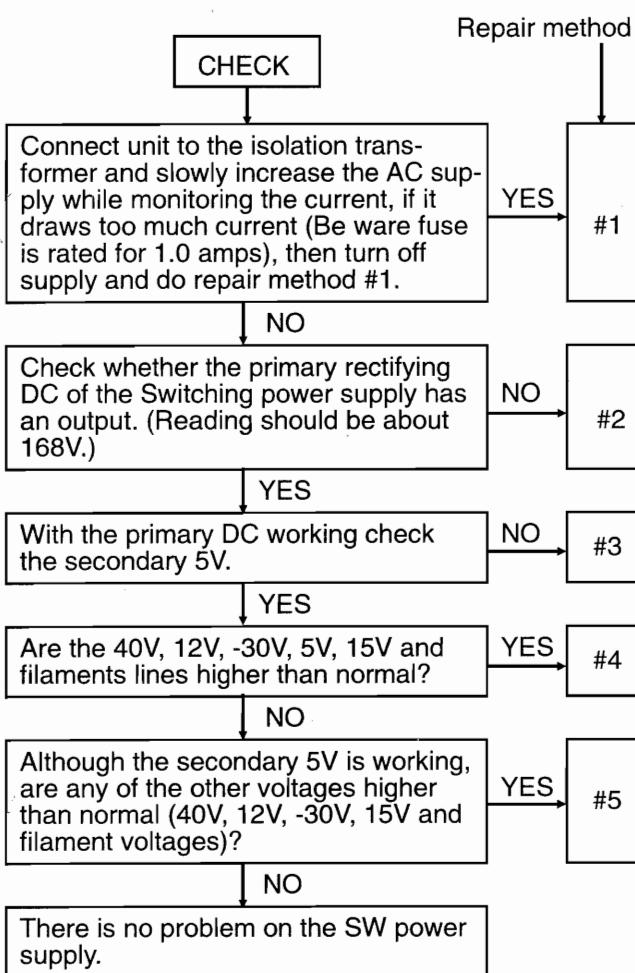

Repair method #1

(Power must be off)

Short circuit in the secondary side. check diode D013 and {(FIP display model only: D012, D014, D015, D016 and D017) or (LED display model only: D014, D015 and D016)}, switching FET (Q001), control transistor (Q002), diode (D006), and resistor (R014) replace as necessary.

Disconnect 40V diode (D013), 15V diode (D014), 12V diode (D015), 5V diode (D016) and {FIP display model only: -30V diode (D012) and filament voltage diode (D017)}Check the load continuity of 40V line, 15V line, 12V line, 5V line, -30V line and filament voltage line through a tester (resistance range).

If the tester indicates a lower resistance value around 0 ohm, the line is short-circuited.

Before repairing the switching power supply, find out the short-circuited area of such line and repair it.

If the tester does not indicate any low resistance value (around 0 ohm), no load is short-circuited and there is no problem.

2] Check for any defective parts while the secondary rectifying diodes are disconnected (D013, D014, D015, D016 and {FIP display model only: D012 and D017}) perform a diode check in both forward and reverse directions through a tester.

3] Remove the following components and check for defects: snubber diode (D051), switching FET (Q001), source resistor (R014), control transistor (Q002).

Repair method #2

Check the fuse 1.0A (F001), primary rectifying diodes (D001-D004) as possible problems. Remove the above mentioned parts and check them. The circuit which turns on switching FET (Q001) may be regarded as a possible cause, even if the load at the secondary side is shorted, it can't be detected because switching FET (Q001) isn't operating. Perform check according to the step 1 and 2 of repair method #1 and check the following parts:

(Remove the part from PCB)

Switching FET (Q001), source resistor (R014), gate resistor (R008) and start resistor (R004 and R005).

Repair method #3

A circuit to turn on switching FET (Q001) may not work and this may be regarded as a cause of trouble. Even if the load at the secondary side is short-circuited, it cannot be detected because switching FET (Q001) does not turn on. Therefore, perform check according to the steps 1] and 2] of the repair method #1 and execute the under-mentioned parts breakage check.

(Remove the part from PCB.)

switching FET (Q001), source resistor (R014), control transistor (Q002), gate resistor (R008) and start resistor (R004 and R005).

Repair method #4

The feedback circuit which is monitored by the output of voltage may not work and this may be regarded as a possible cause, remove control transistor Q002 and check for defects. More over, a photo coupler (IC001) and transistor (Q031) may be defective, replace any defective parts with factory originals.

Repair method #5

If the output voltage of the secondary side is slightly high, the line load may be in the "OPEN" state and this may be regarded as a cause of trouble. If there is no output voltage on the secondary side, the rectifying diodes (D013), (D014), (D015) and {FIP display model only only: (D012) and (D017)} may be defective.

SCHEMATIC DIAGRAMS / CBA'S AND TEST POINTS

Standard Notes

Warning

Many electrical and mechanical parts in this chassis have special characteristics. These characteristics often pass unnoticed and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts that have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the mark "▲" in the schematic diagram and the parts list. Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts that do not have the same safety characteristics as specified in the parts list may create shock, fire, or other hazards.


Capacitor Temperature Markings

Mark	Capacity change rate	Standard temperature	Temperature range
(B)	±10%	20°C	-25~+85°C
(F)	+30 -80%	20°C	-25~+85°C
(SR)	±15%	20°C	-25~+85°C
(Z)	+30 -80%	20°C	-10~+70°C


Capacitors and transistors are represented by the following symbols.

CBA Symbols


(Top View) (Bottom View)

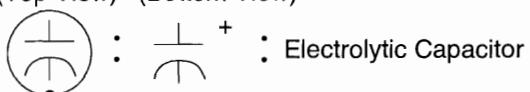


(Bottom View)

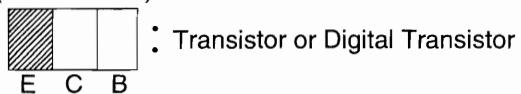

(Top View)

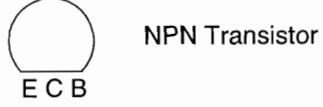


(Top View)

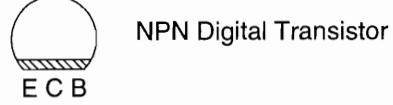

Schematic Diagram Symbols

Digital Transistor

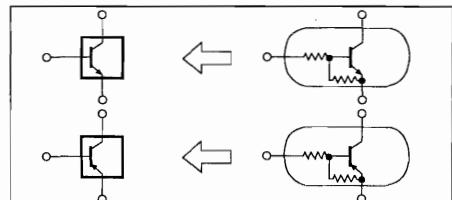

(Top View)



PNP Transistor


(Top View)



PNP Digital Transistor

LIST OF CAUTION, NOTES, AND SYMBOLS USED IN THE SCHEMATIC DIAGRAMS ON THE FOLLOWING PAGES:

1. CAUTION:

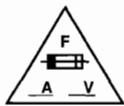

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE.

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.

RISK OF FIRE-REPLACE FUSE AS MARKED.

2. CAUTION:



This symbol means fast operating fuse.

Ce symbole représente un fusible à fusion rapide.

Fixed Voltage (or Auto voltage selectable) power supply circuit is used in this unit.

If Main Fuse (F001) is blown, first check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

3. Note:

(1) Do not use the part number shown on the drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since the drawings were prepared.

(2) To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Wire Connectors


(1) Prefix symbol "CN" means "connector" (can disconnect and reconnect).

(2) Prefix symbol "CL" means "wire-solder holes of the PCB" (wire is soldered directly).

5. Note: Mark "●" is a leadless (chip) component.

6. Mode: SP/REC

7. Voltage indications for PLAY and REC modes on the schematics are as shown below:

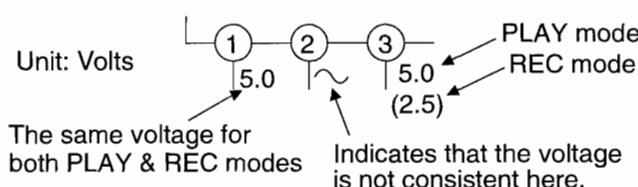


8. How to read converged lines

1-D3
↑
Distinction Area
Line Number
(1 to 3 digits)

Examples:

1. "1-D3" means that line number "1" goes to area "D3".
2. "1-B1" means that line number "1" goes to area "B1".

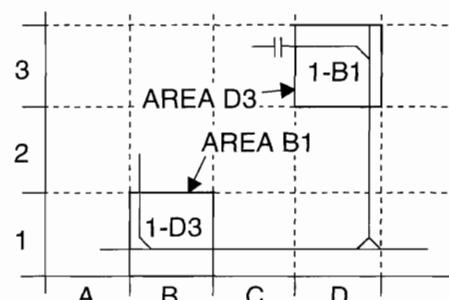

9. Test Point Information


○ : Indicates a test point with a jumper wire across a hole in the PCB.

□ : Used to indicate a test point with a component lead on foil side.

○ : Used to indicate a test point with no test pin.


● : Used to indicate a test point with a test pin.

Main 1/4 Schematic Diagram

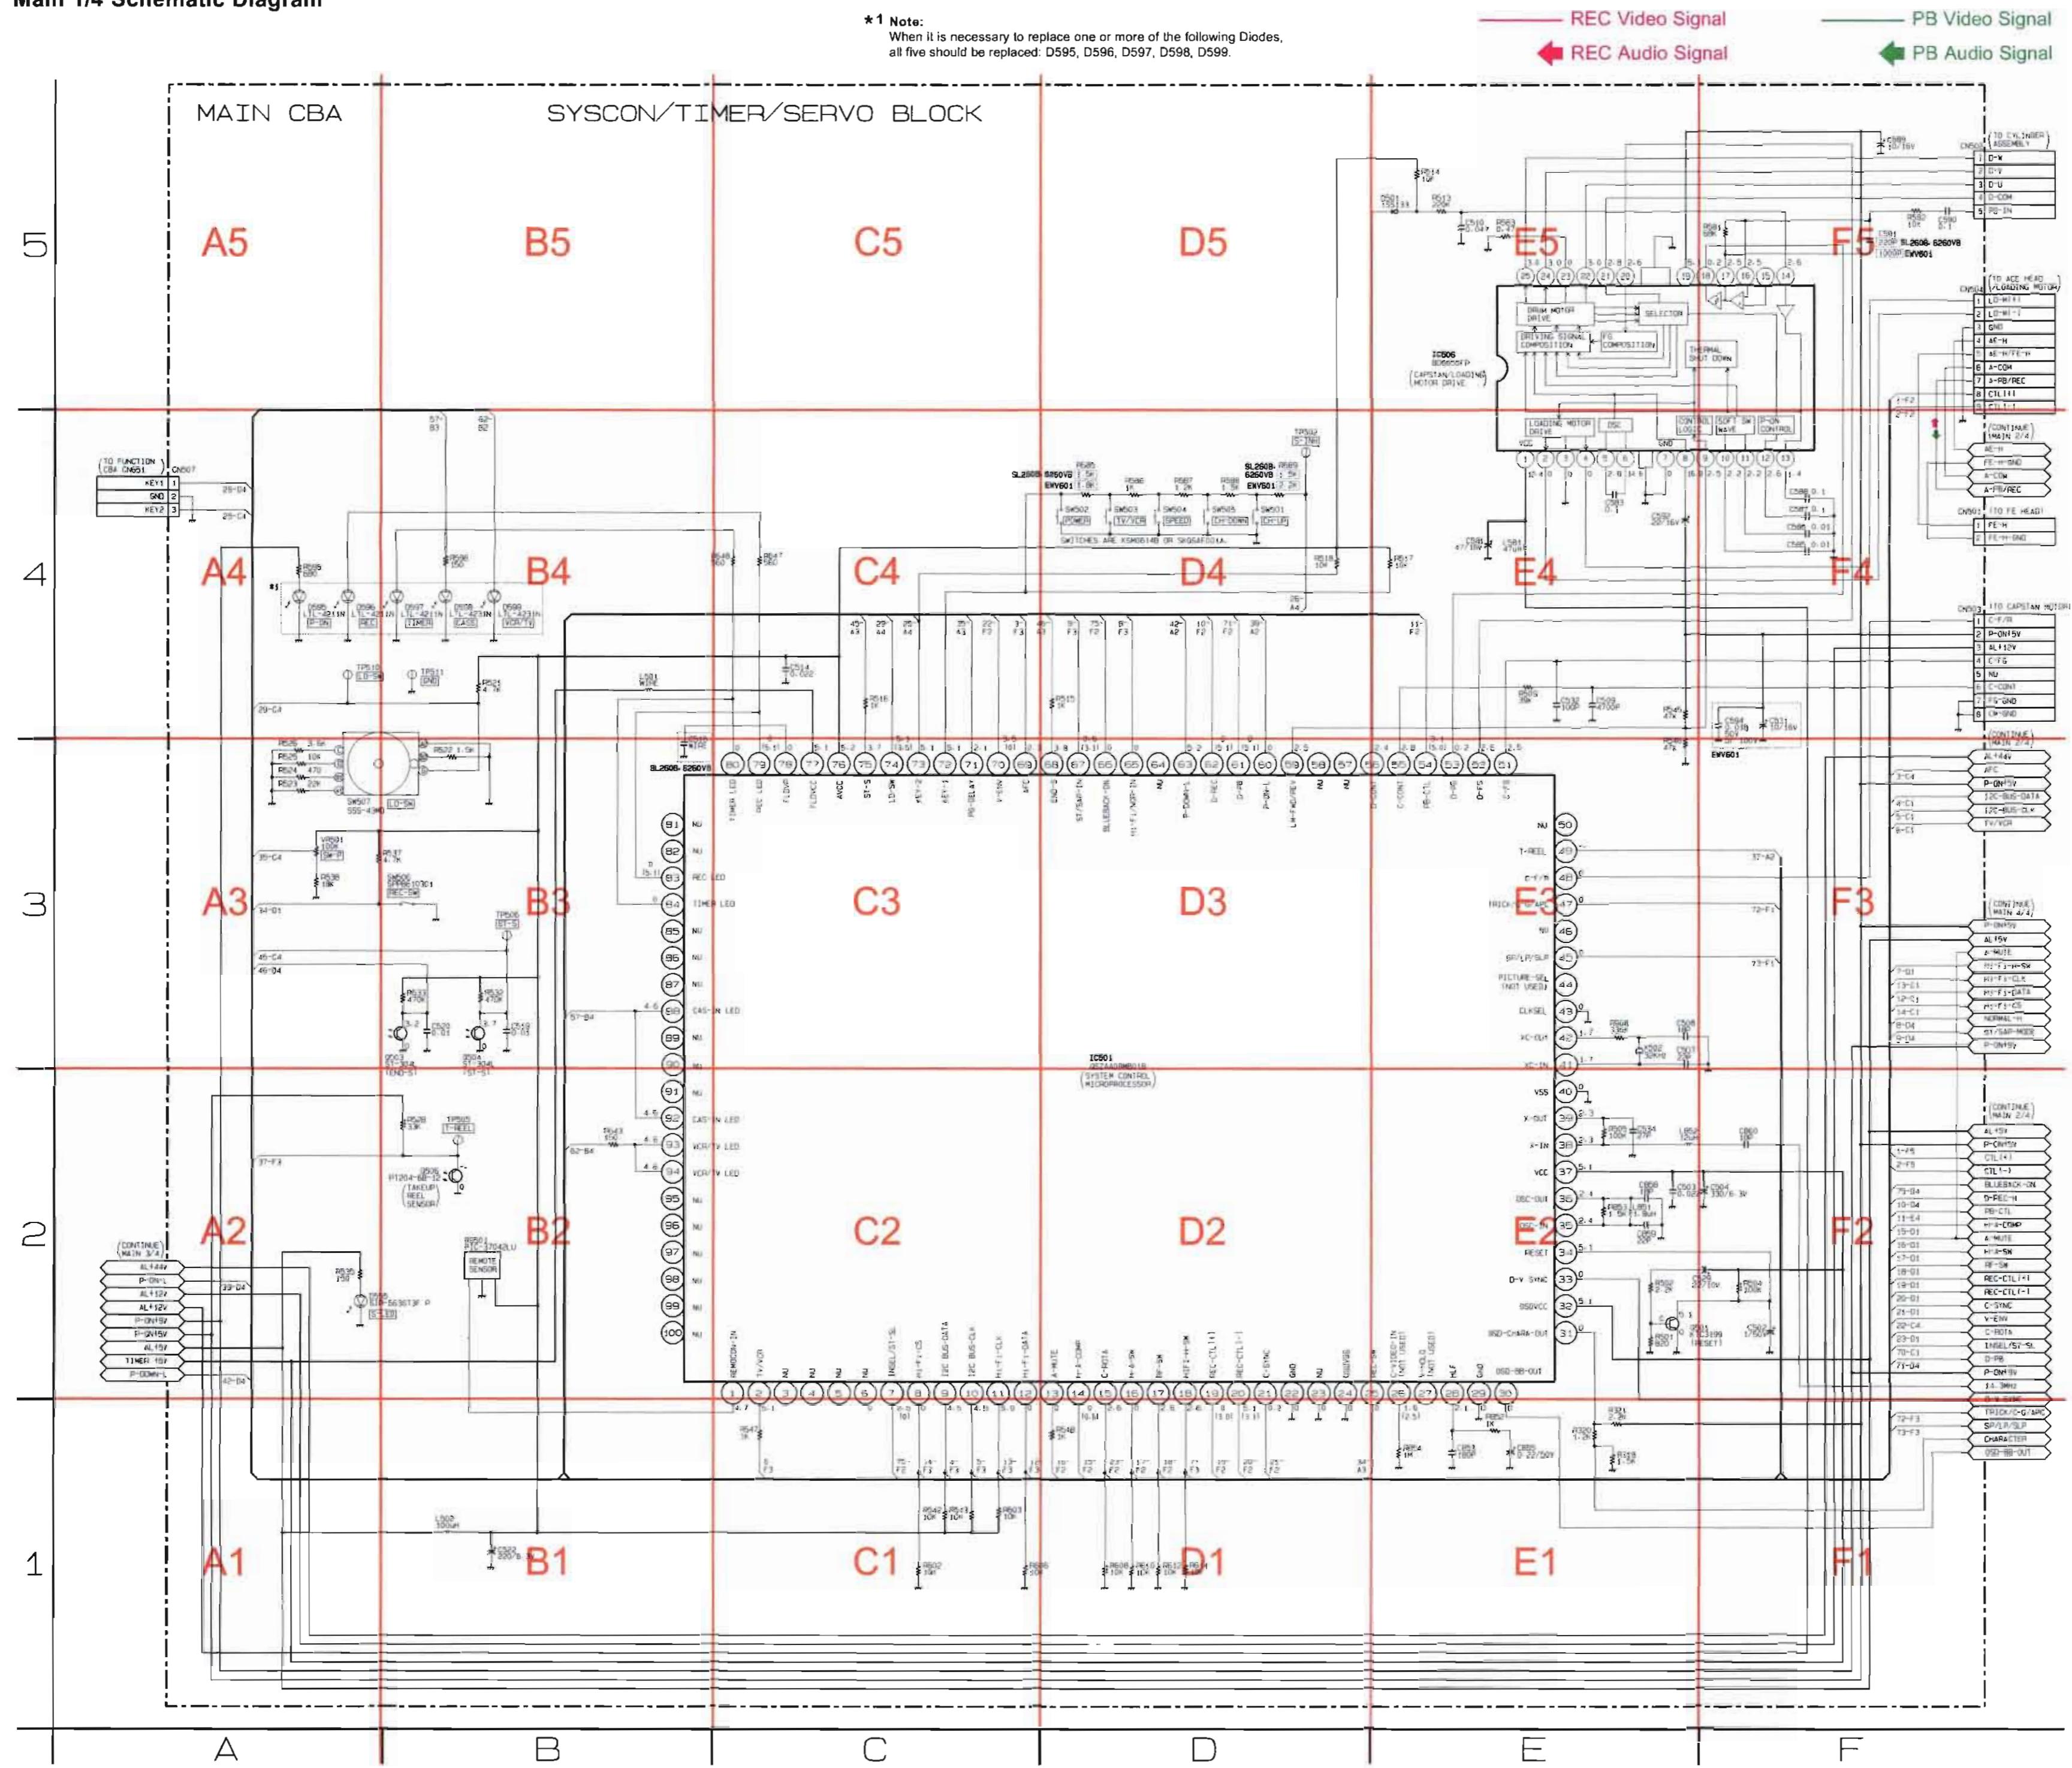

Main 1/4 Schematic Diagram	
Ref. NO	Position
ICS	
IC501	D-3
IC506	E-5
TRANSISTORS	
Q501	E-2
Q503	A-3
Q504	B-3
Q506	B-2
CONNECTORS	
CN501	F-4
CN502	F-5
CN503	F-4
CN504	F-5
VARIABLE RESISTORS	
VR501	A-3
TEST POINTS	
TP502	D-4
TP505	B-2
TP506	B-3
TP510	A-4
TP511	B-4

Main 2/4 Schematic Diagram

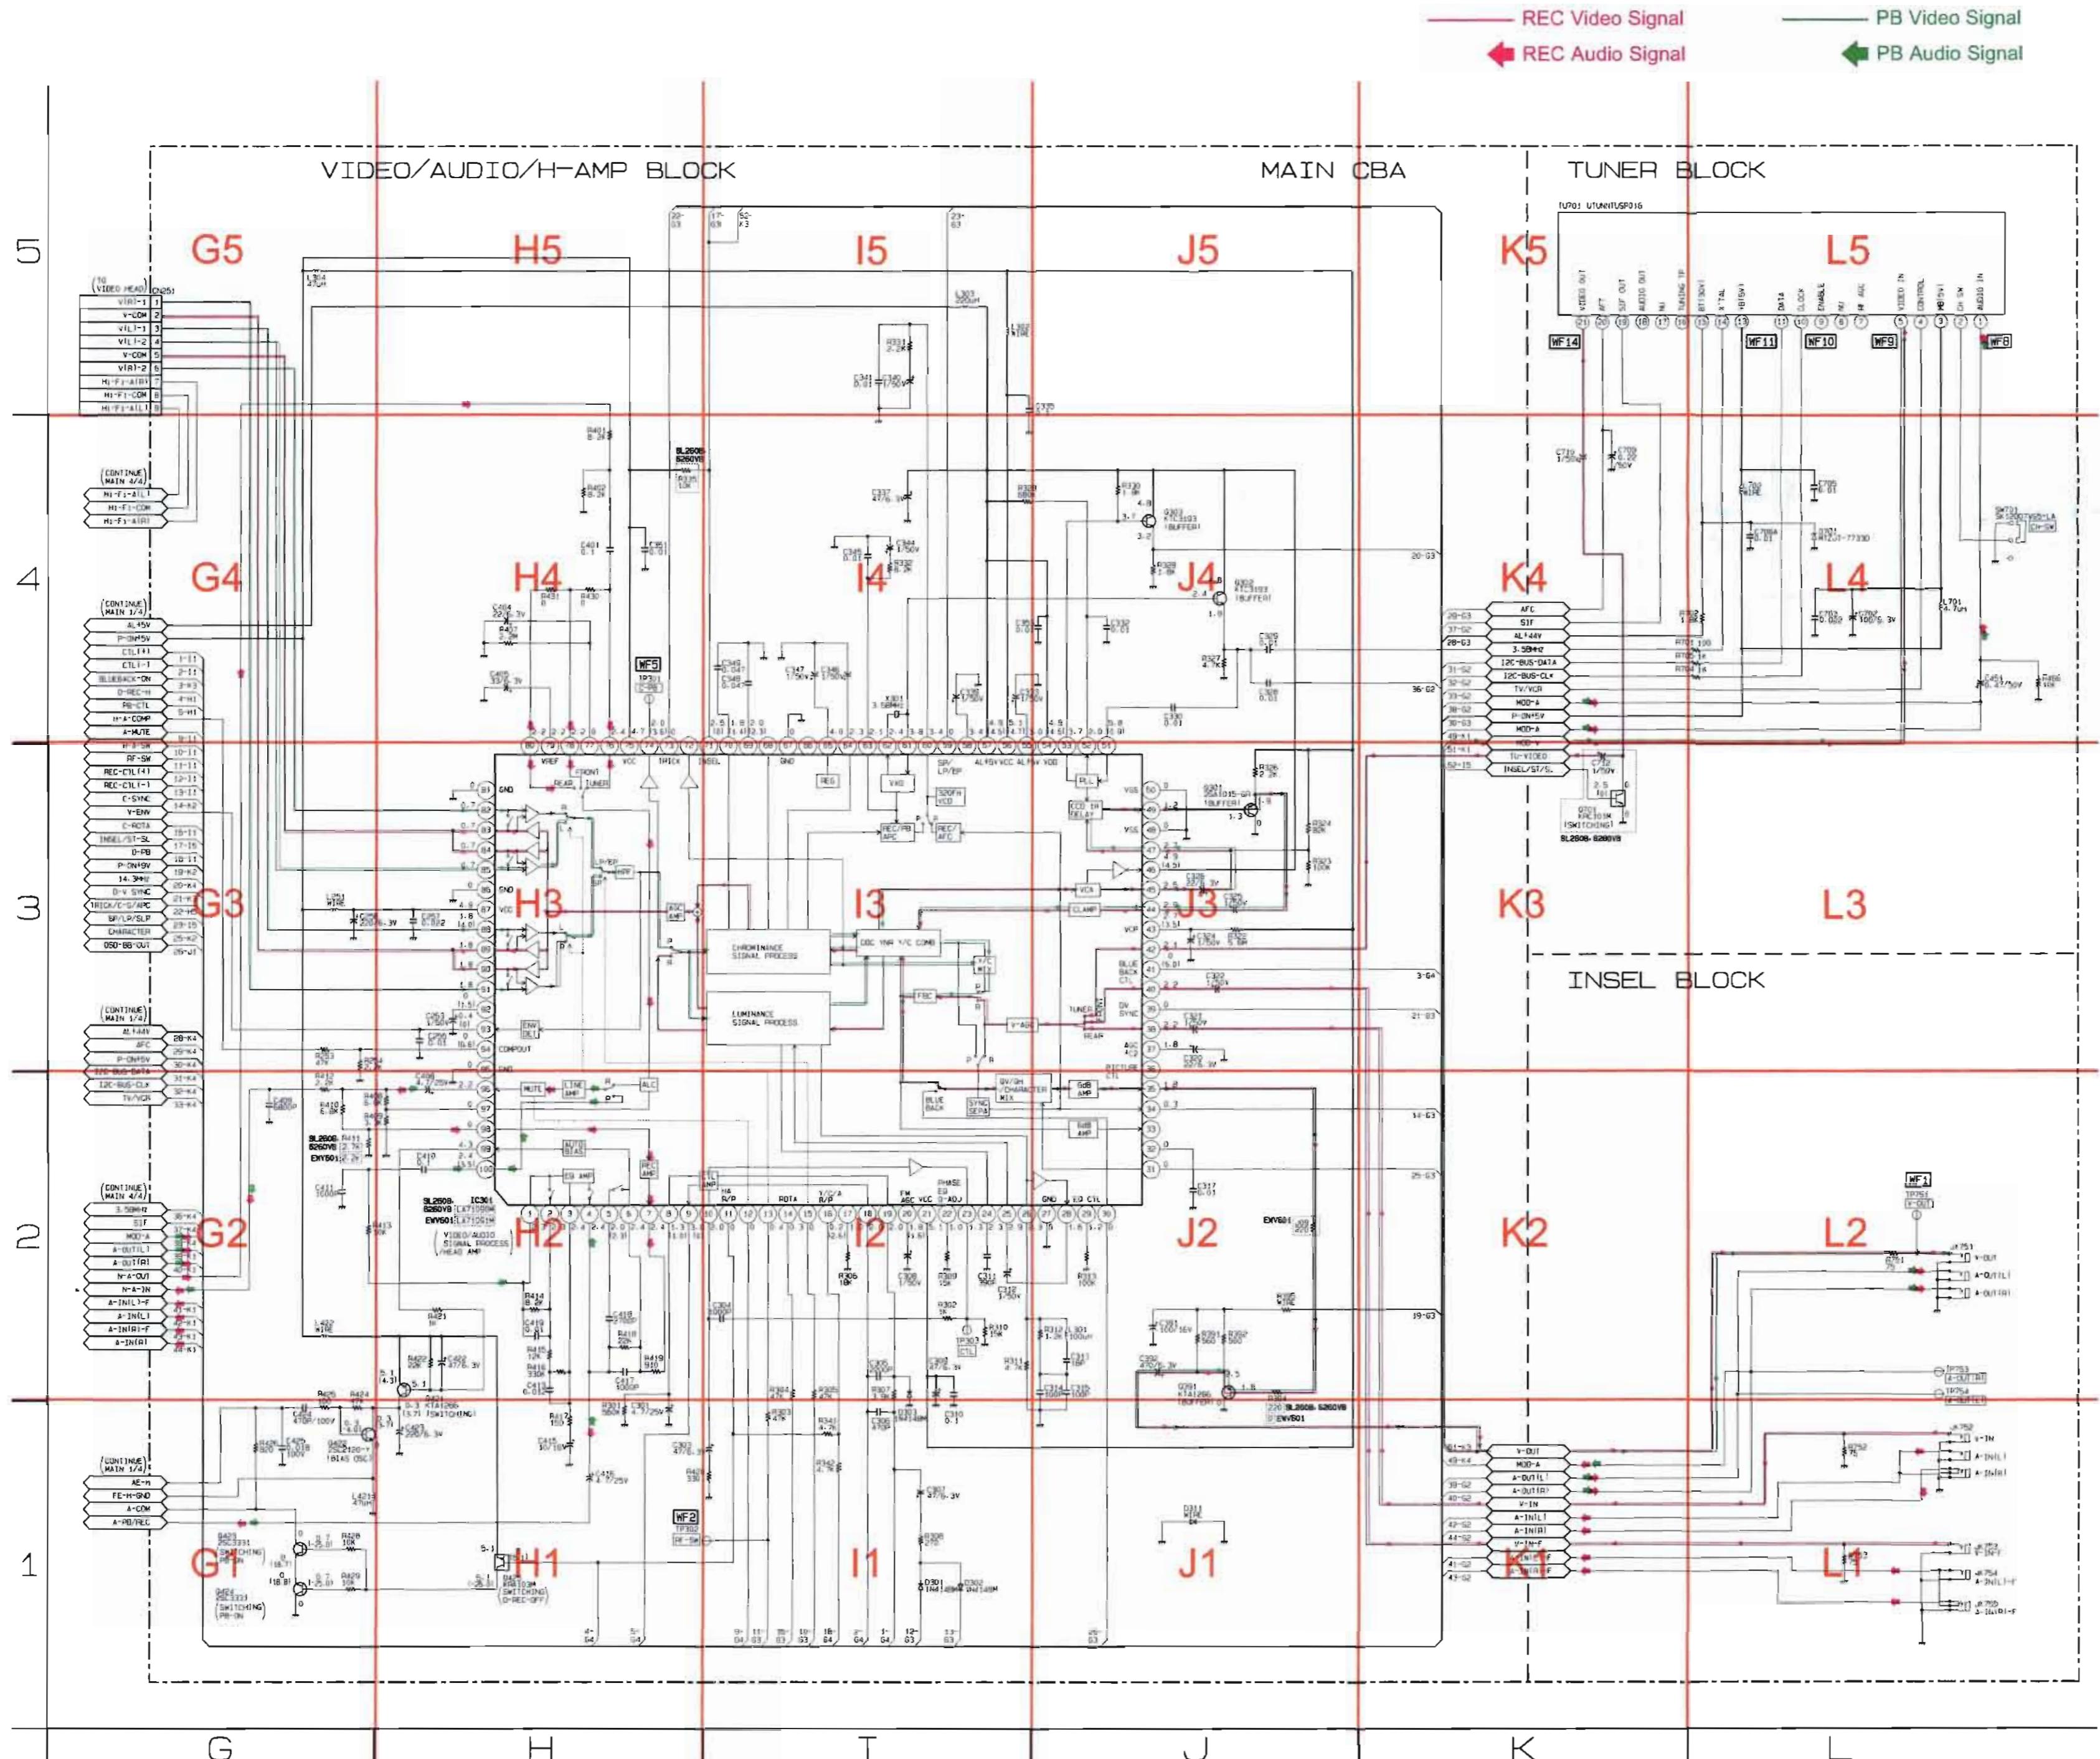

Main 2/4 Schematic Diagram	
Ref.NO	Position
IC301	H-2
TRANSISTORS	
Q301	J-3
Q302	J-4
Q303	J-4
Q391	J-2
Q421	H-2
Q422	G-1
Q423	G-1
Q424	G-1
Q425	H-1
Q701	K-3
CONNECTORS	
CN251	G-5
TEST POINTS	
TP301	I-4
TP302	H-1
TP303	I-2
TP751	L-2
TP753	L-2
TP754	L-2


Main 3/4 Schematic Diagram

CAUTION !

Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F001) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

NOTE :

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

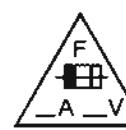


CAUTION

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.


RISK OF FIRE-REPLACE FUSE AS MARKED.

"This symbol means fast operating fuse."
"Ce symbole représente un fusible à fusion rapide."

Ref.NO	Position
ICS	
IC001	N-1
TRANSISTORS	
Q001	N-2
Q002	M-2
Q031	N-1
Q052	O-2
Q055	O-2
Q056	P-2
Q060	P-1

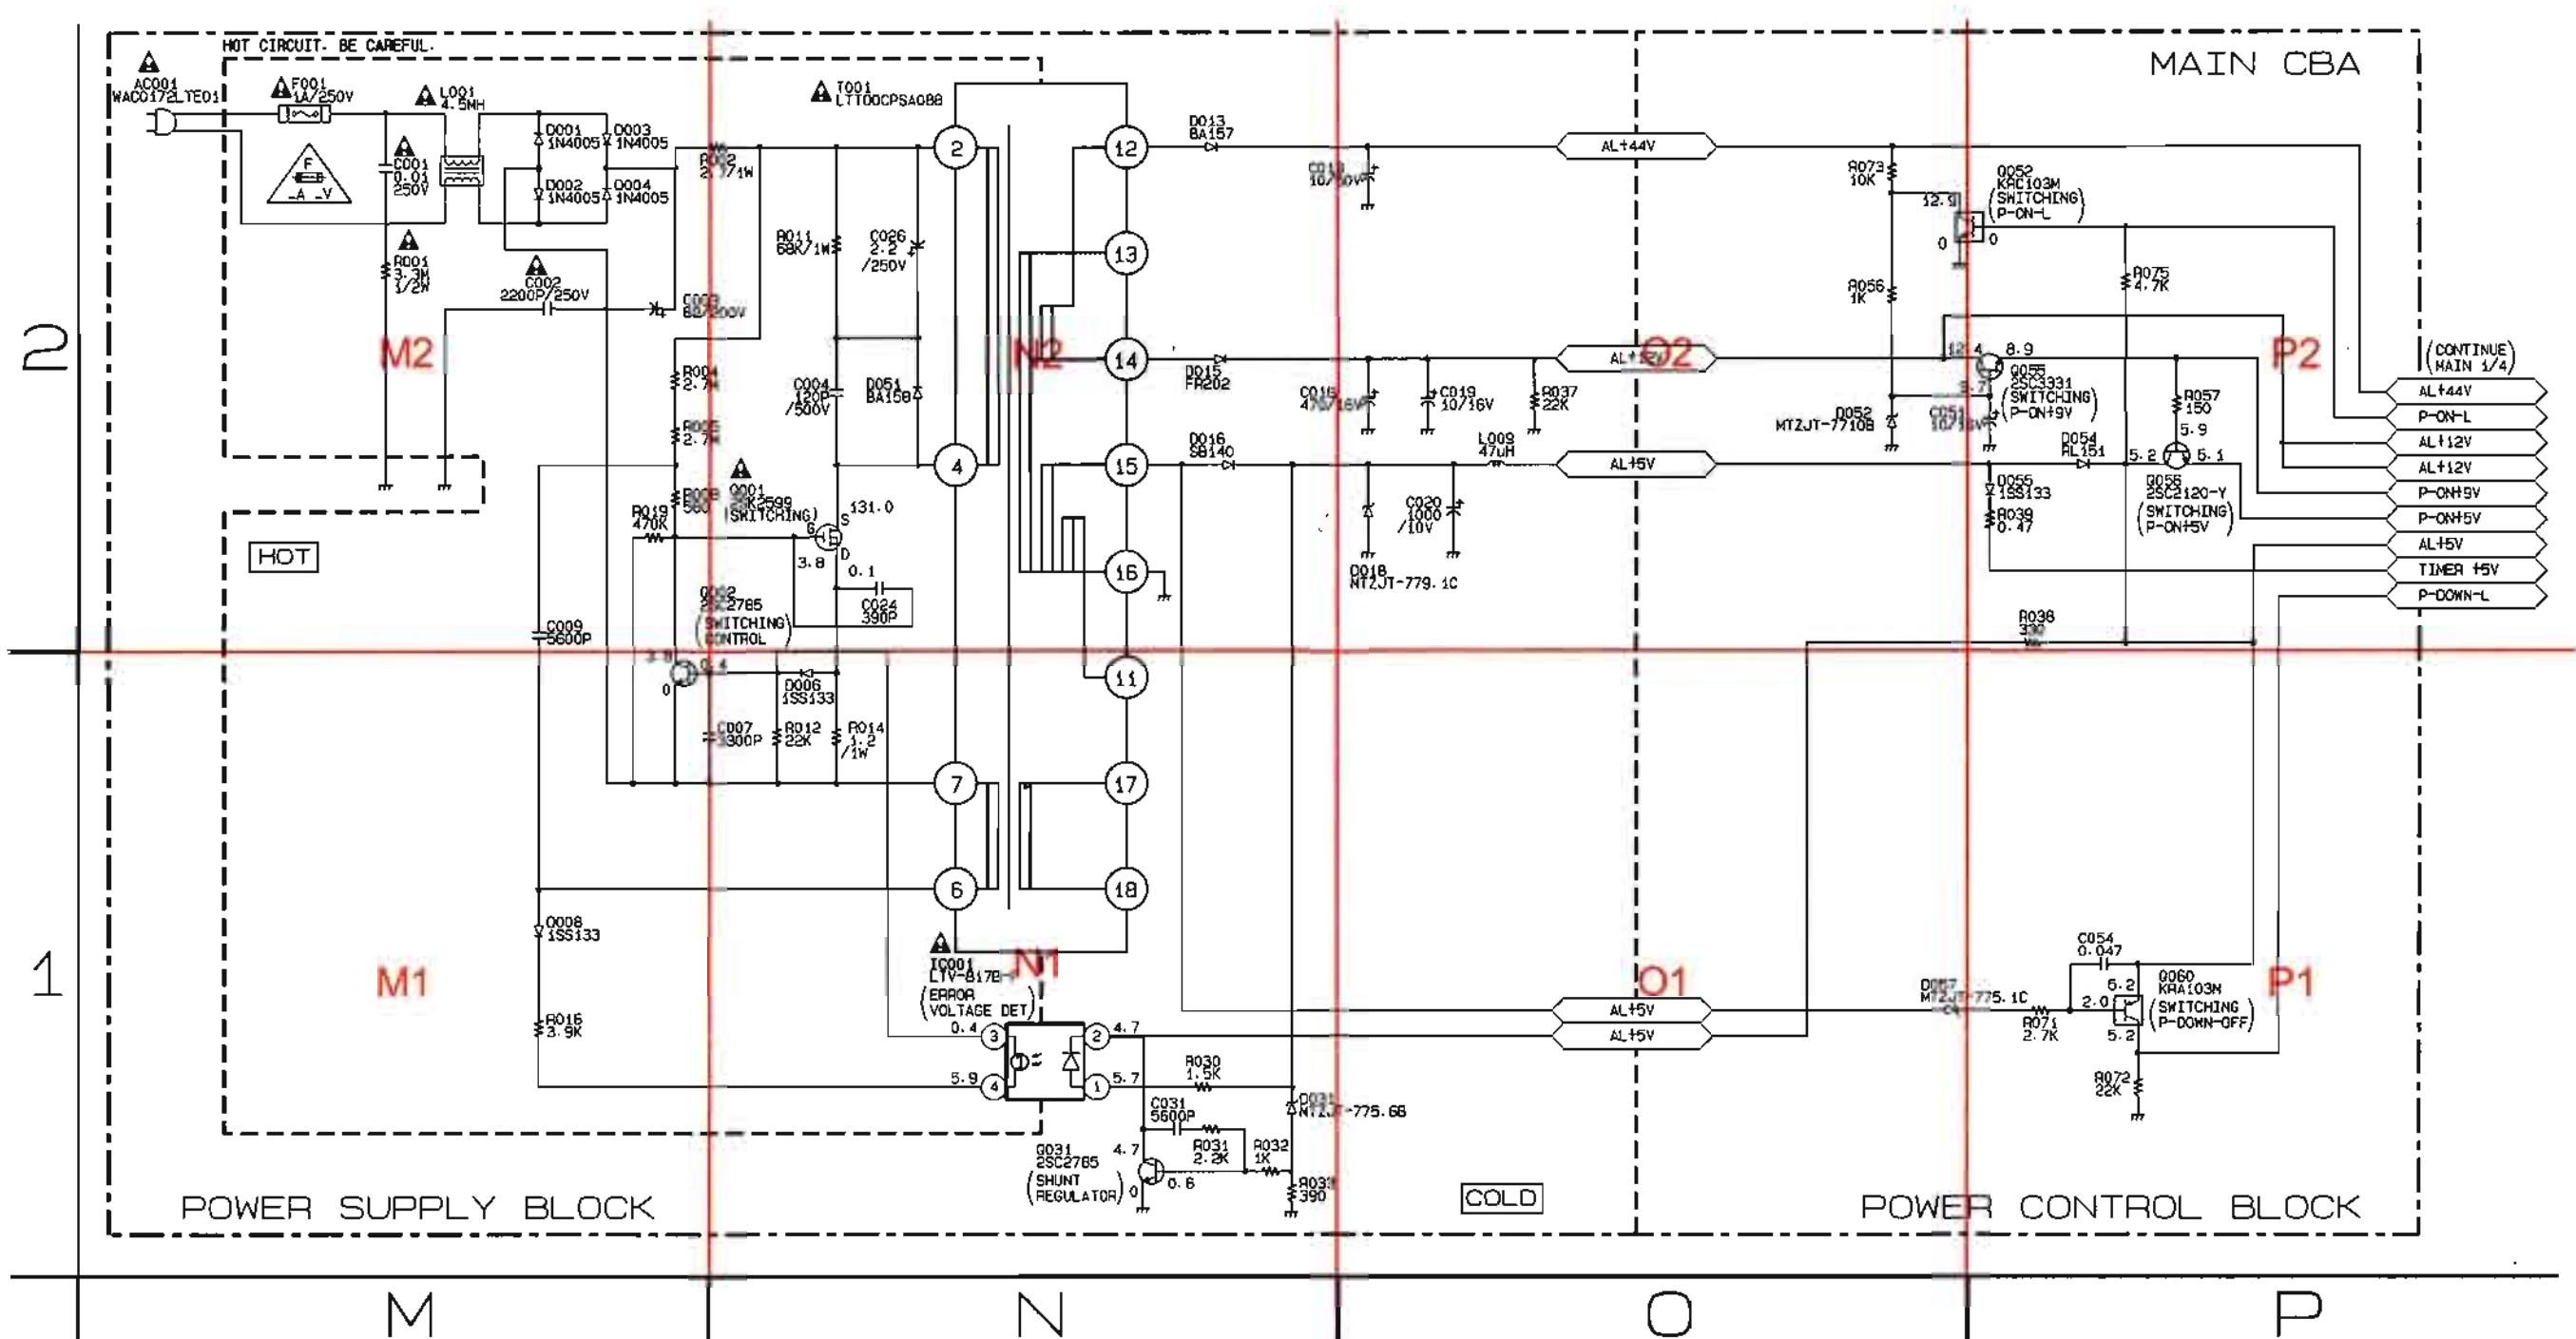

Main 4/4 Schematic Diagram

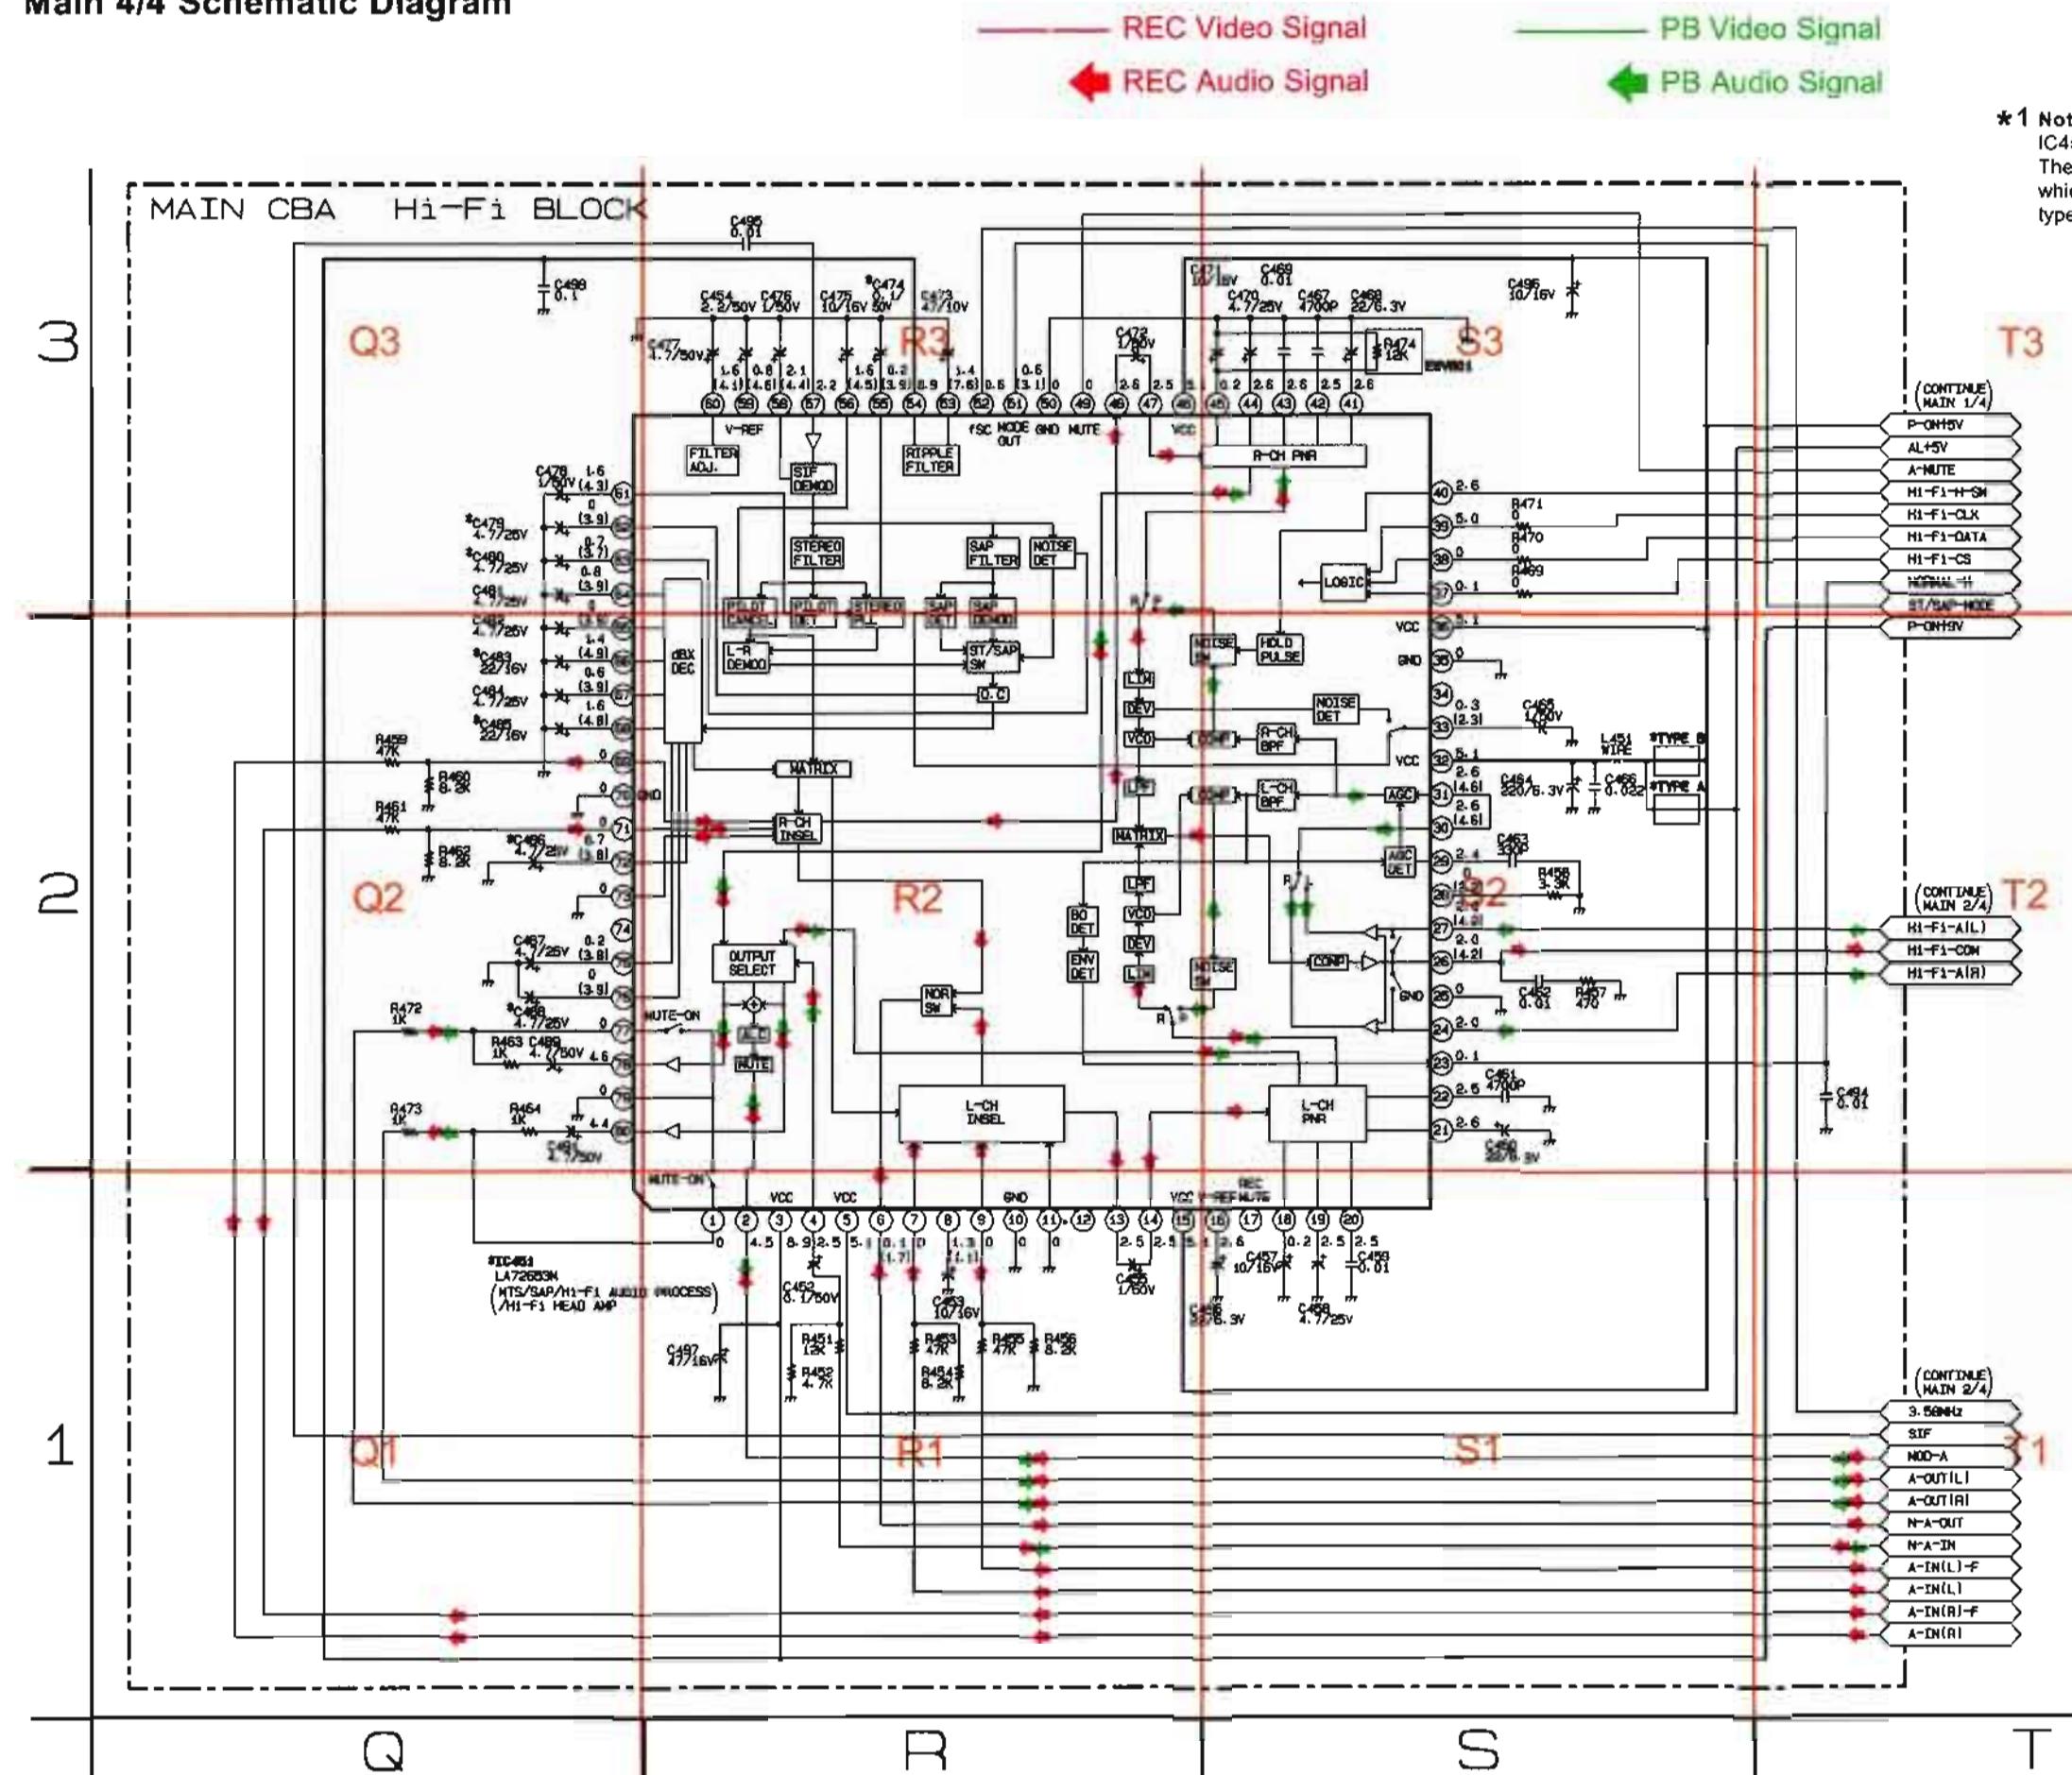


*1 Note:

IC451 is either type A or type B.

These two types are exchangeable and can be equally used whichever the model is. The difference between type A and type B is shown in the table below.

Ref.NO	TYPE A	TYPE B
IC451	LA72652M	LA72653M
C474	0.033	0.1/50V
C479	0.47/50V	4.7/25V
C480	0.1/50V	4.7/25V
C483	47/10V	22/16V
C485	47/6.3V	22/16V
C486	1/50V	4.7/25V
C488	0.47/50V	4.7/25V

Function Schematic Diagram (SL260B)

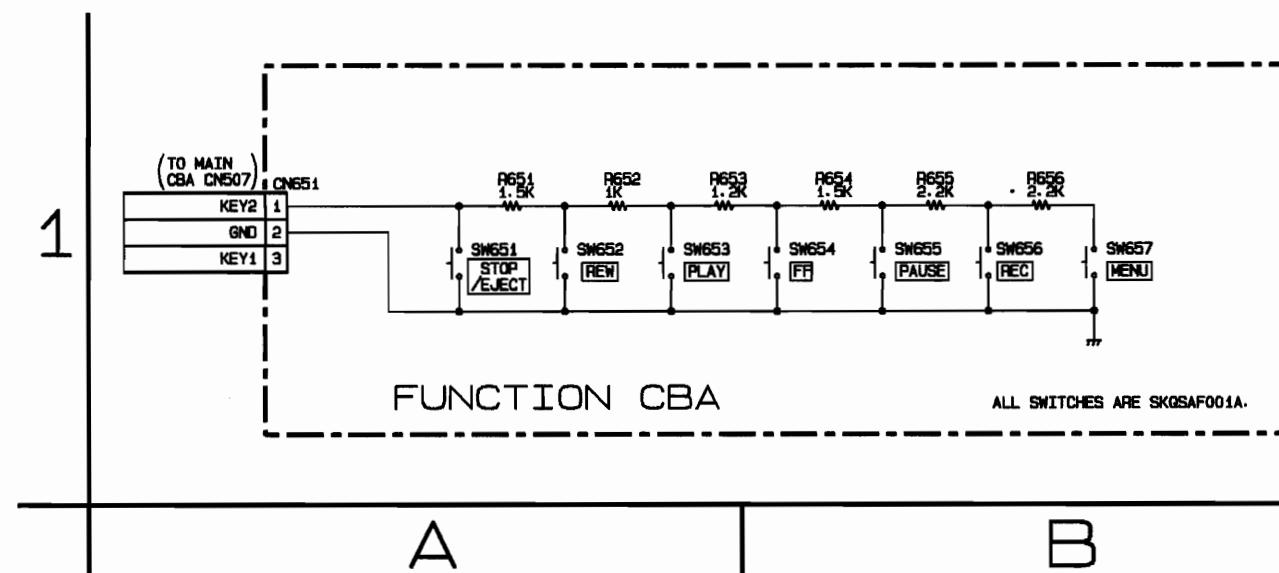


A

B

H7900SCF

Function Schematic Diagram (EWV601)

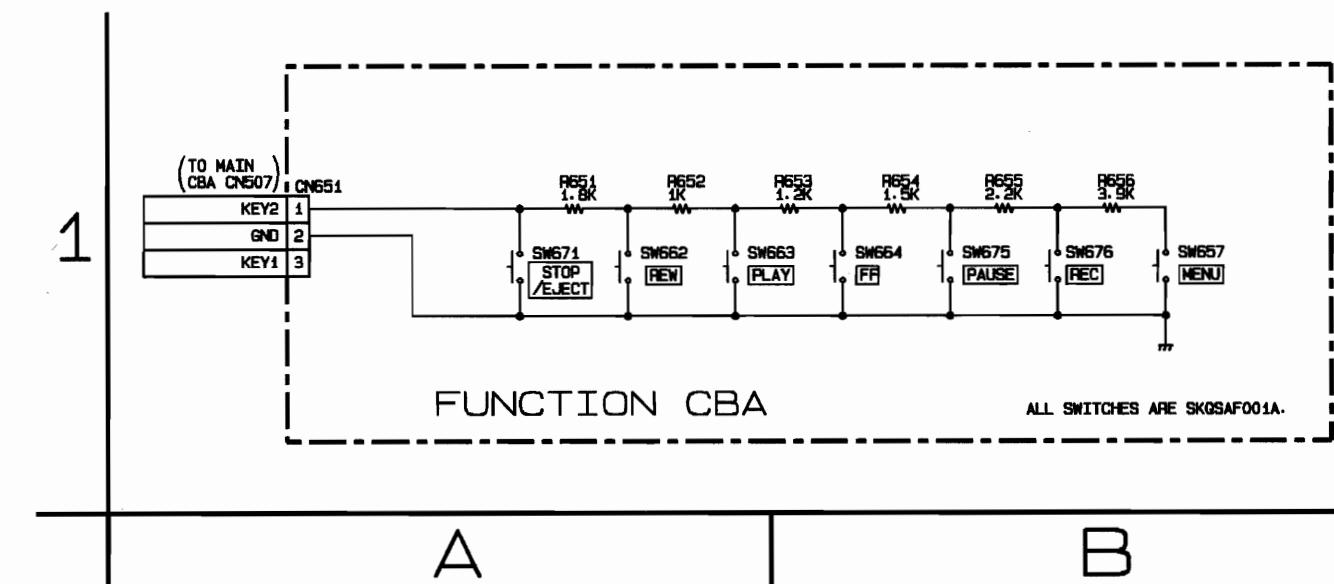


A

B

H7931SCF

Function Schematic Diagram (6260VB)

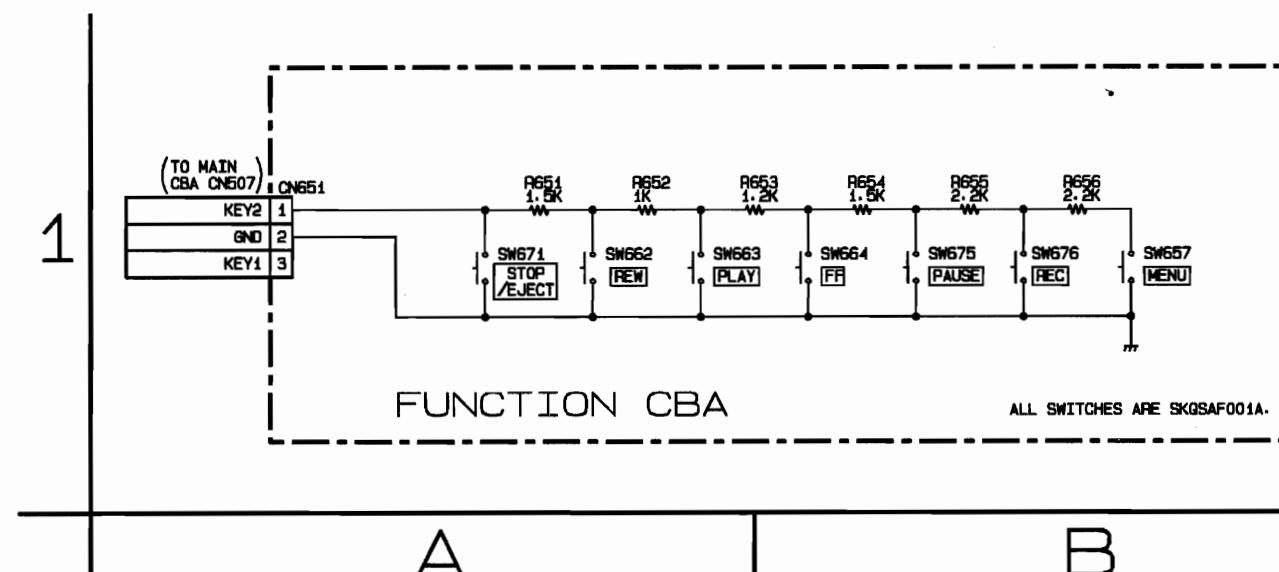


A


B

H7930SCF


Function CBA Top View

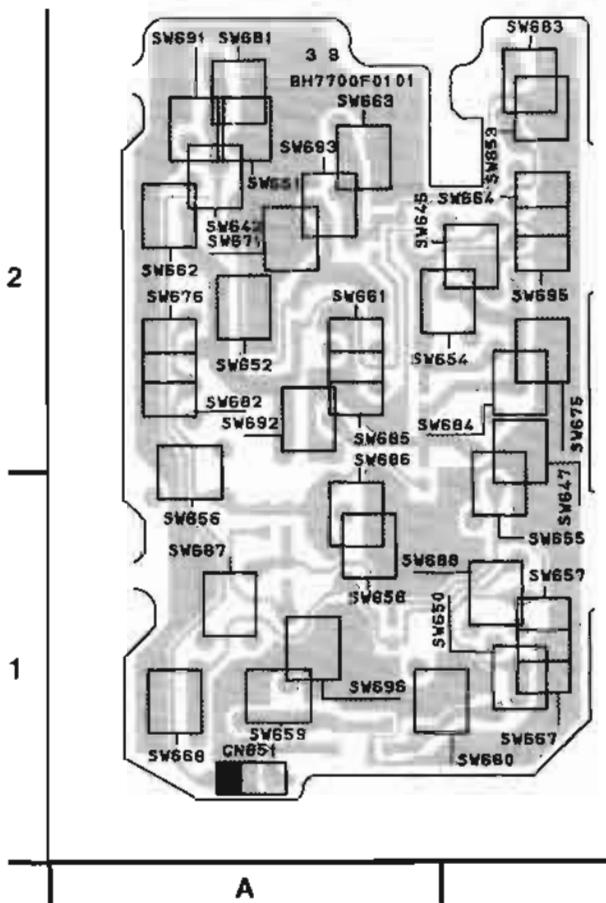


Function CBA Bottom View

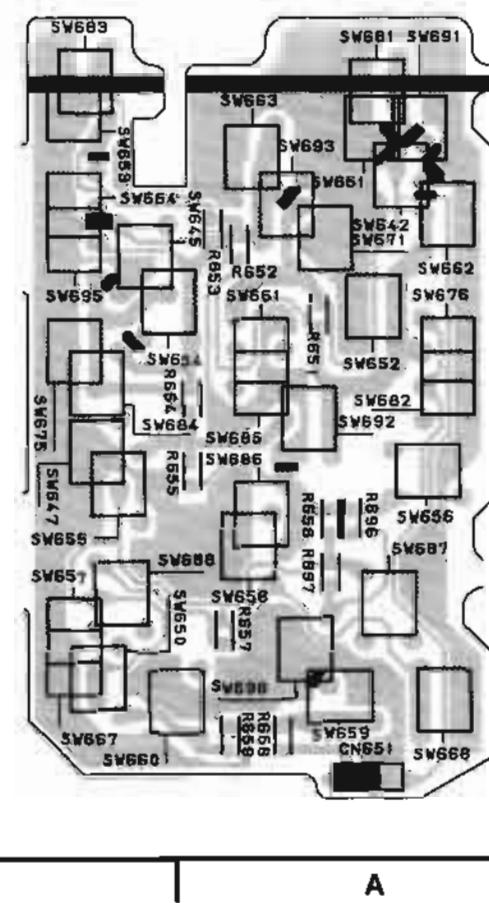

Function CBA Top View

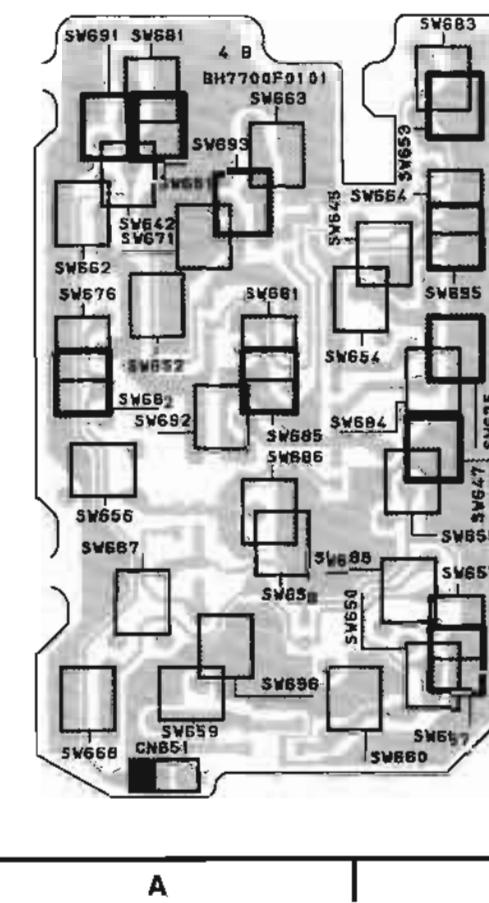

Function CBA Bottom View

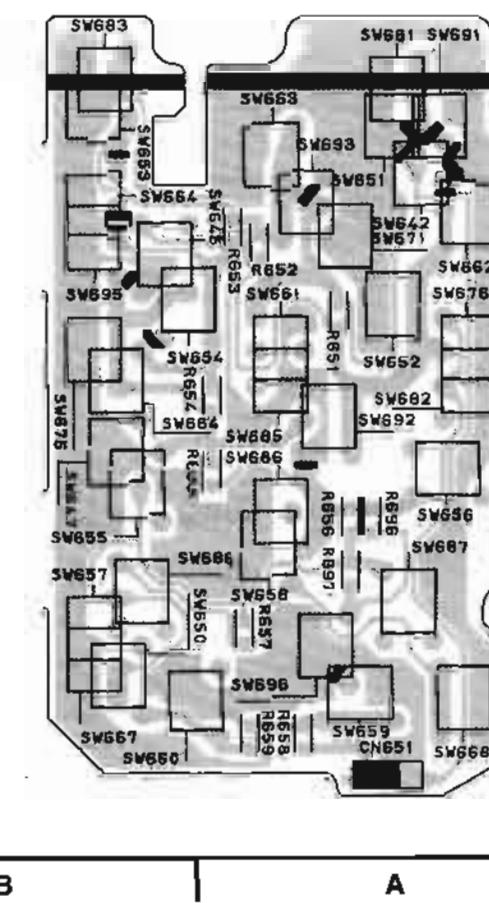


BH7700F01013-B

1-9-16

1-9-15

CAUTION !

Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F001) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.

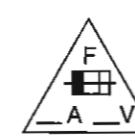


CAUTION

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.
RISK OF FIRE-REPLACE FUSE AS MARKED.
This symbol means fast operating fuse.
Ce symbole représente un fusible à fusion rapide."

BECAUSE A HOT CHASSIS GROUND IS PRESENT IN THE POWER SUPPLY CIRCUIT , AN ISOLATION TRANSFORMER MUST BE USED.
ALSO , IN ORDER TO HAVE THE ABILITY TO INCREASE THE INPUT SLOWLY , WHEN TROUBLESHOOTING THIS TYPE POWER SUPPLY CIRCUIT , A VARIABLE ISOLATION TRANSFORMER IS REQUIRED.

NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

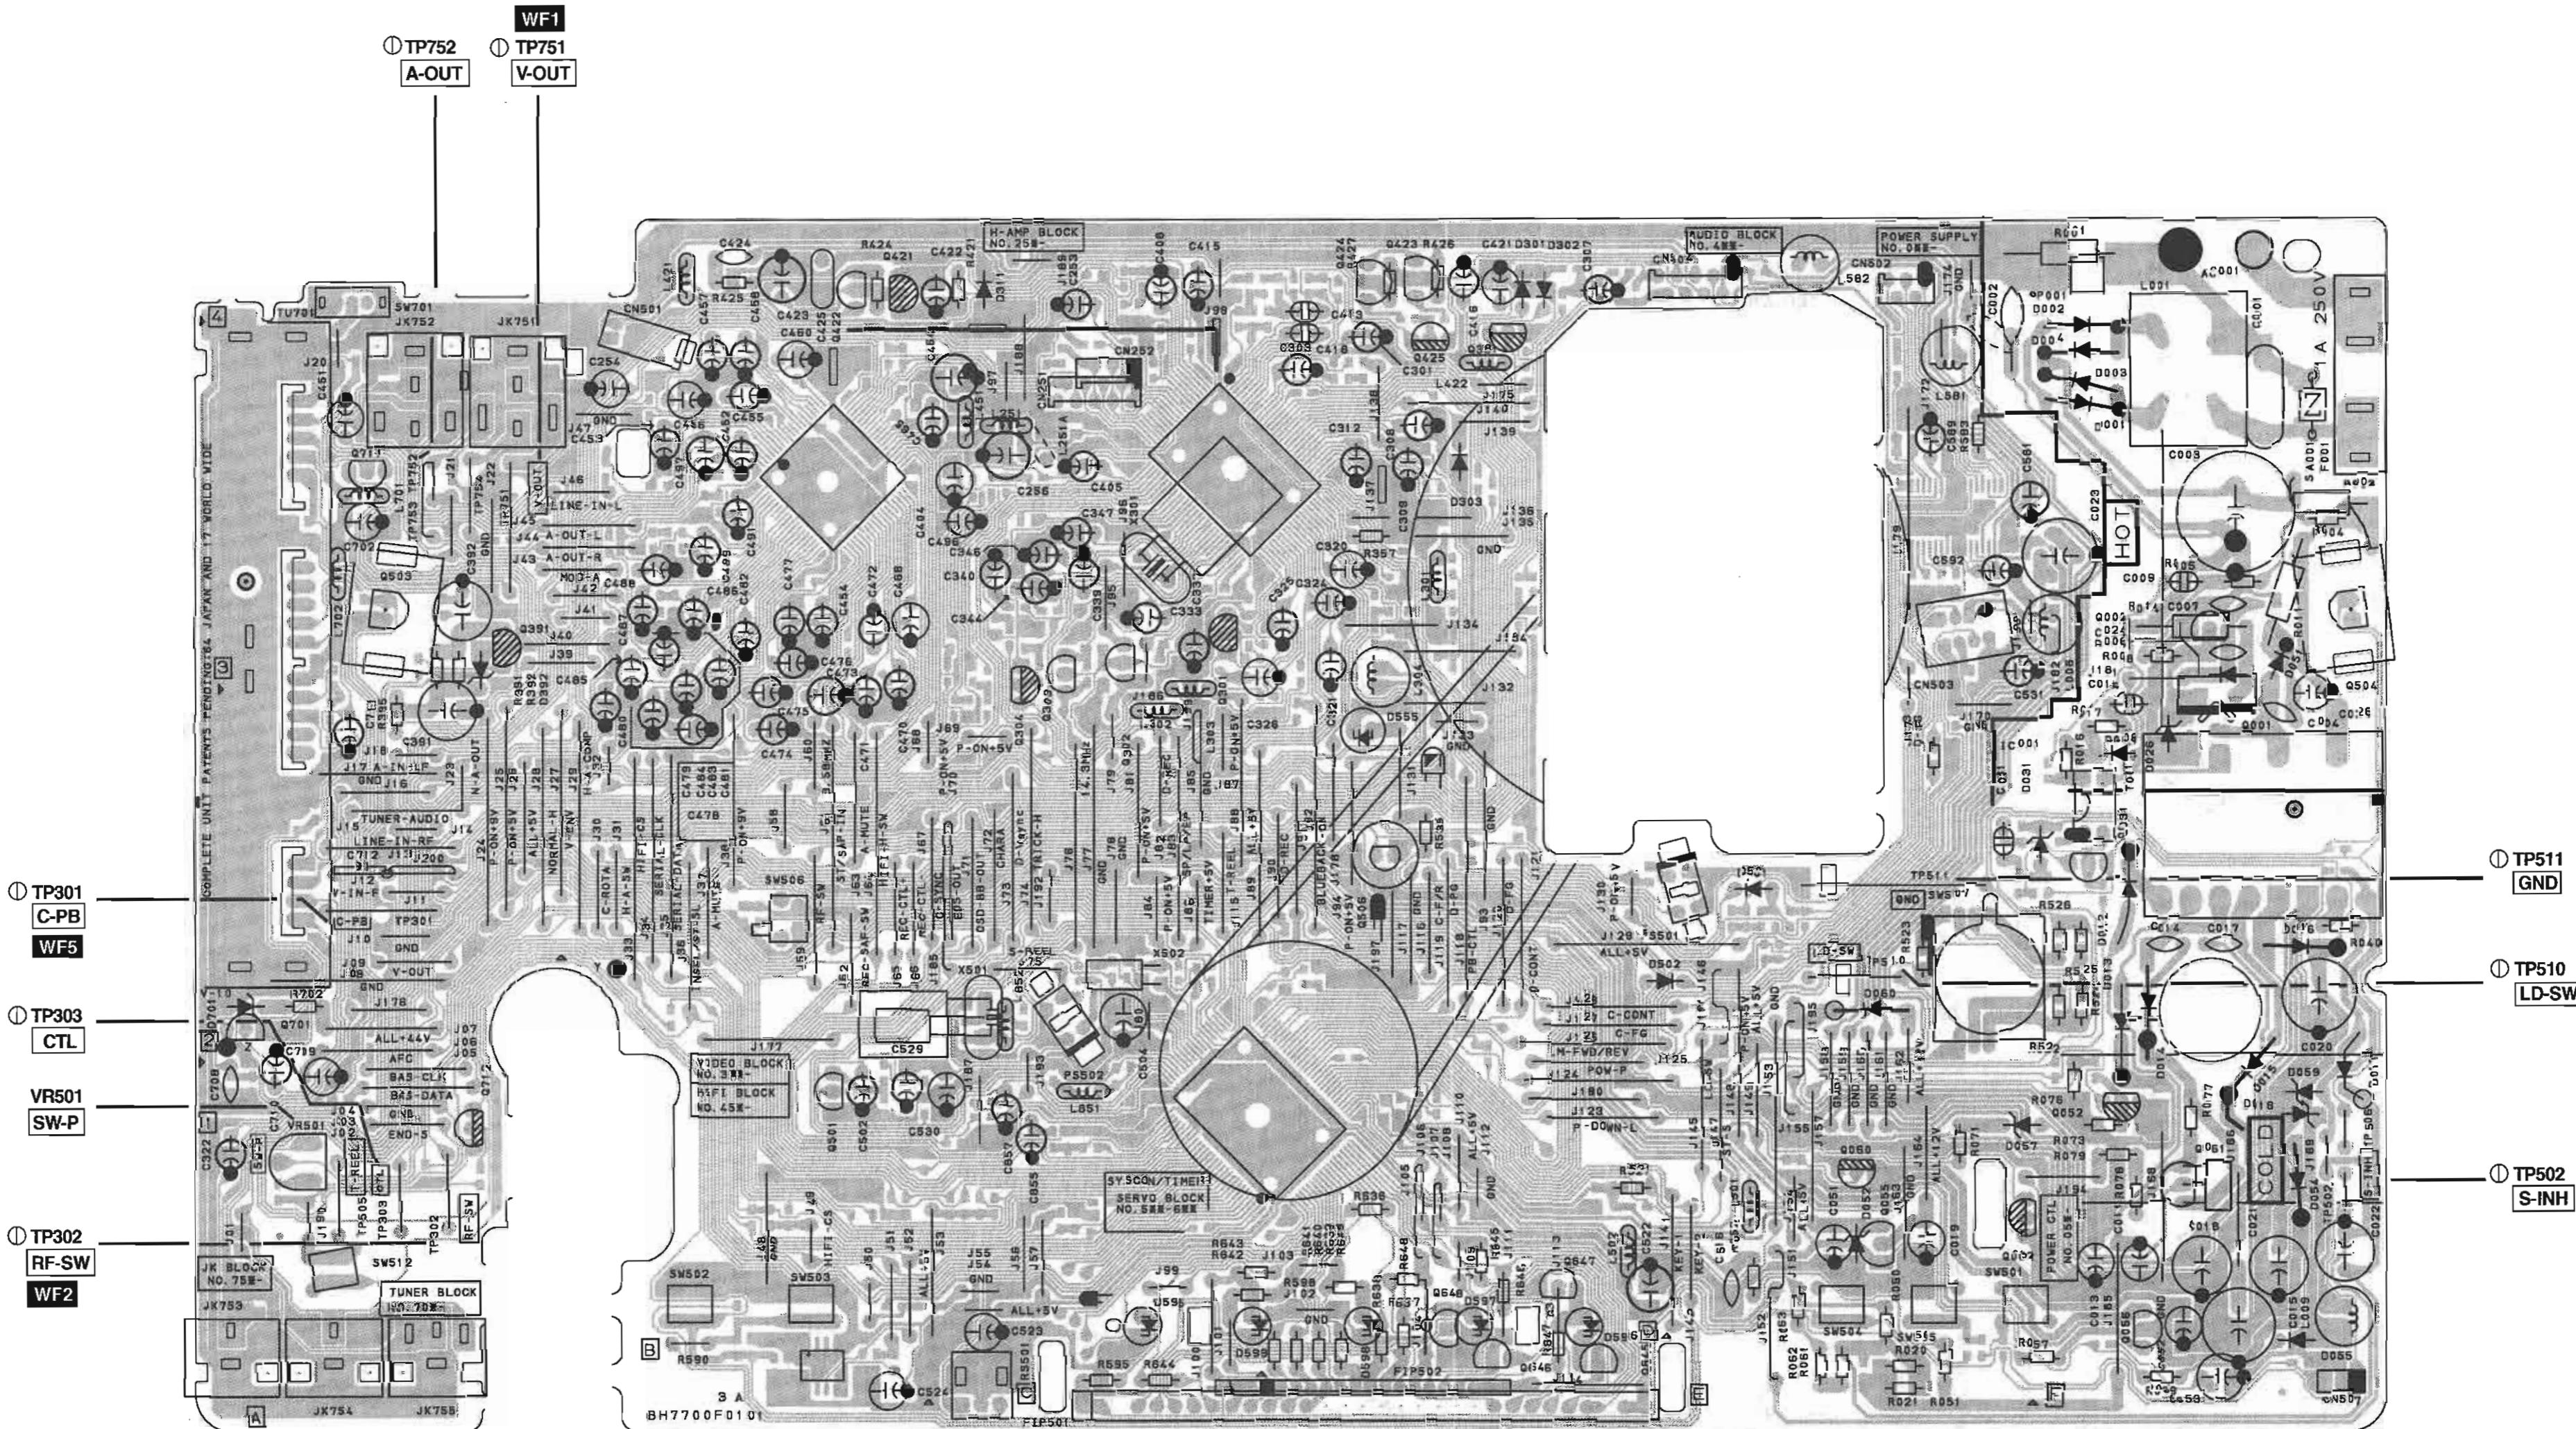

CAUTION !

Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F001) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.

**CAUTION**


FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.

RISK OF FIRE-REPLACE FUSE AS MARKED.

"This symbol means fast operating fuse."
"Ce symbole représente un fusible à fusion rapide."

BECAUSE A HOT CHASSIS GROUND IS PRESENT IN THE POWER SUPPLY CIRCUIT , AN ISOLATION TRANSFORMER MUST BE USED. ALSO , IN ORDER TO HAVE THE ABILITY TO INCREASE THE INPUT SLOWLY , WHEN TROUBLESHOOTING THIS TYPE POWER SUPPLY CIRCUIT , A VARIABLE ISOLATION TRANSFORMER IS REQUIRED.

NOTE :
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

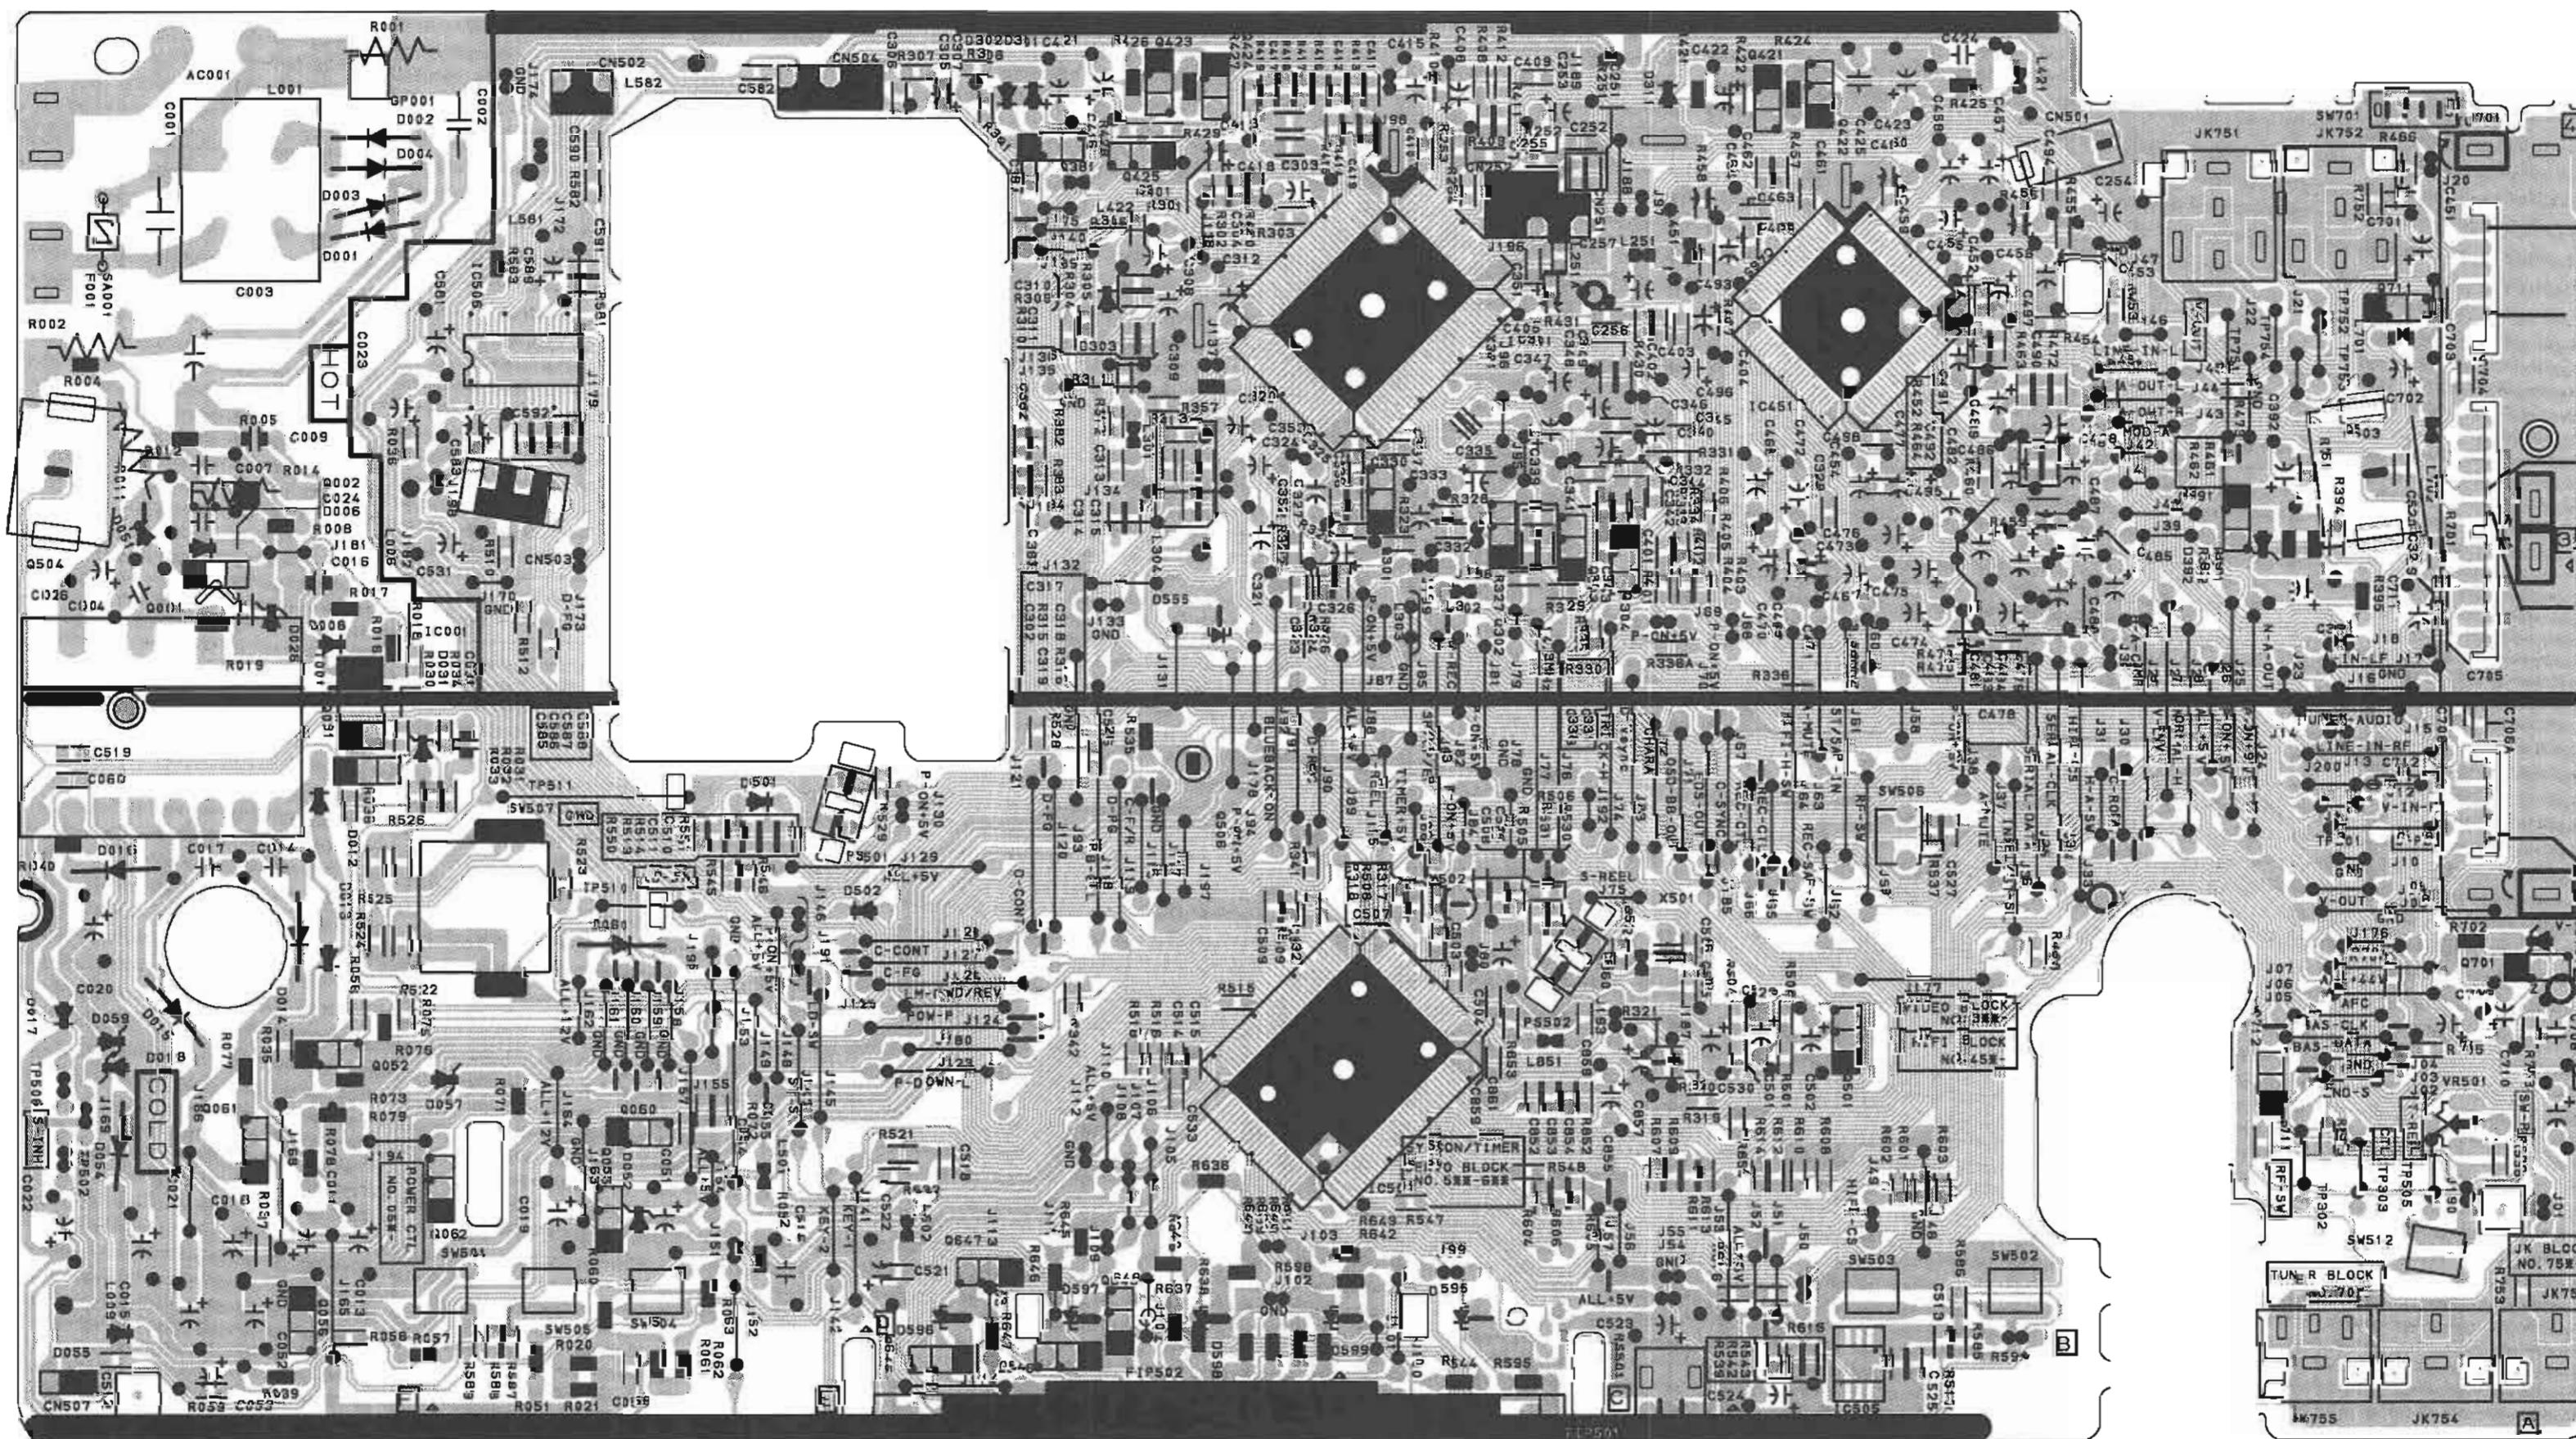


Main CBA	
Ref.NO	Position
IC001	F-2
IC301	C-3
IC451	B-3
IC501	C-1
IC506	E-3
TRANSISTORS	
Q001	F-2
Q002	F-3
Q031	F-2
Q052	F-1
Q055	E-1
Q056	F-1
Q060	E-1
Q301	C-3
Q302	C-2
Q303	C-2
Q391	A-3
Q421	B-4
Q422	B-4
Q423	D-4
Q424	D-4
Q425	D-3
Q501	B-1
Q503	A-3
Q504	F-3
Q506	D-2
Q701	A-2
CONNECTORS	
CN251	C-3
CN501	B-4
CN502	E-4
CN503	E-3
CN504	E-4
VARIABLE RESISTORS	
VR501	A-1
TEST POINTS	
TP301	A-2
TP302	A-1
TP303	A-1
TP502	F-1
TP505	A-1
TP506	F-1
TP510	E-2
TP511	E-2
TP751	A-3
TP753	A-3
TP754	A-3

CAUTION !

Fixed voltage power supply circuit is used in this unit.

If Main Fuse (F001) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.

Otherwise it may cause some components in the power supply circuit to fail.

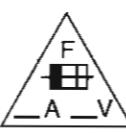

CAUTION

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.


RISK OF FIRE-REPLACE FUSE AS MARKED.
"This symbol means fast operating fuse."

"Ce symbole représente un fusible à fusion rapide."

**BECAUSE A HOT CHASSIS GROUND IS PRESENT IN THE POWER
SUPPLY CIRCUIT , AN ISOLATION TRANSFORMER MUST BE USED.
ALSO , IN ORDER TO HAVE THE ABILITY TO INCREASE THE INPUT
SLOWLY , WHEN TROUBLESHOOTING THIS TYPE POWER SUPPLY
CIRCUIT , A VARIABLE ISOLATION TRANSFORMER IS REQUIRED.**

NOTE :

The voltage for parts in hot circuit is measured using
hot GND as a common terminal.

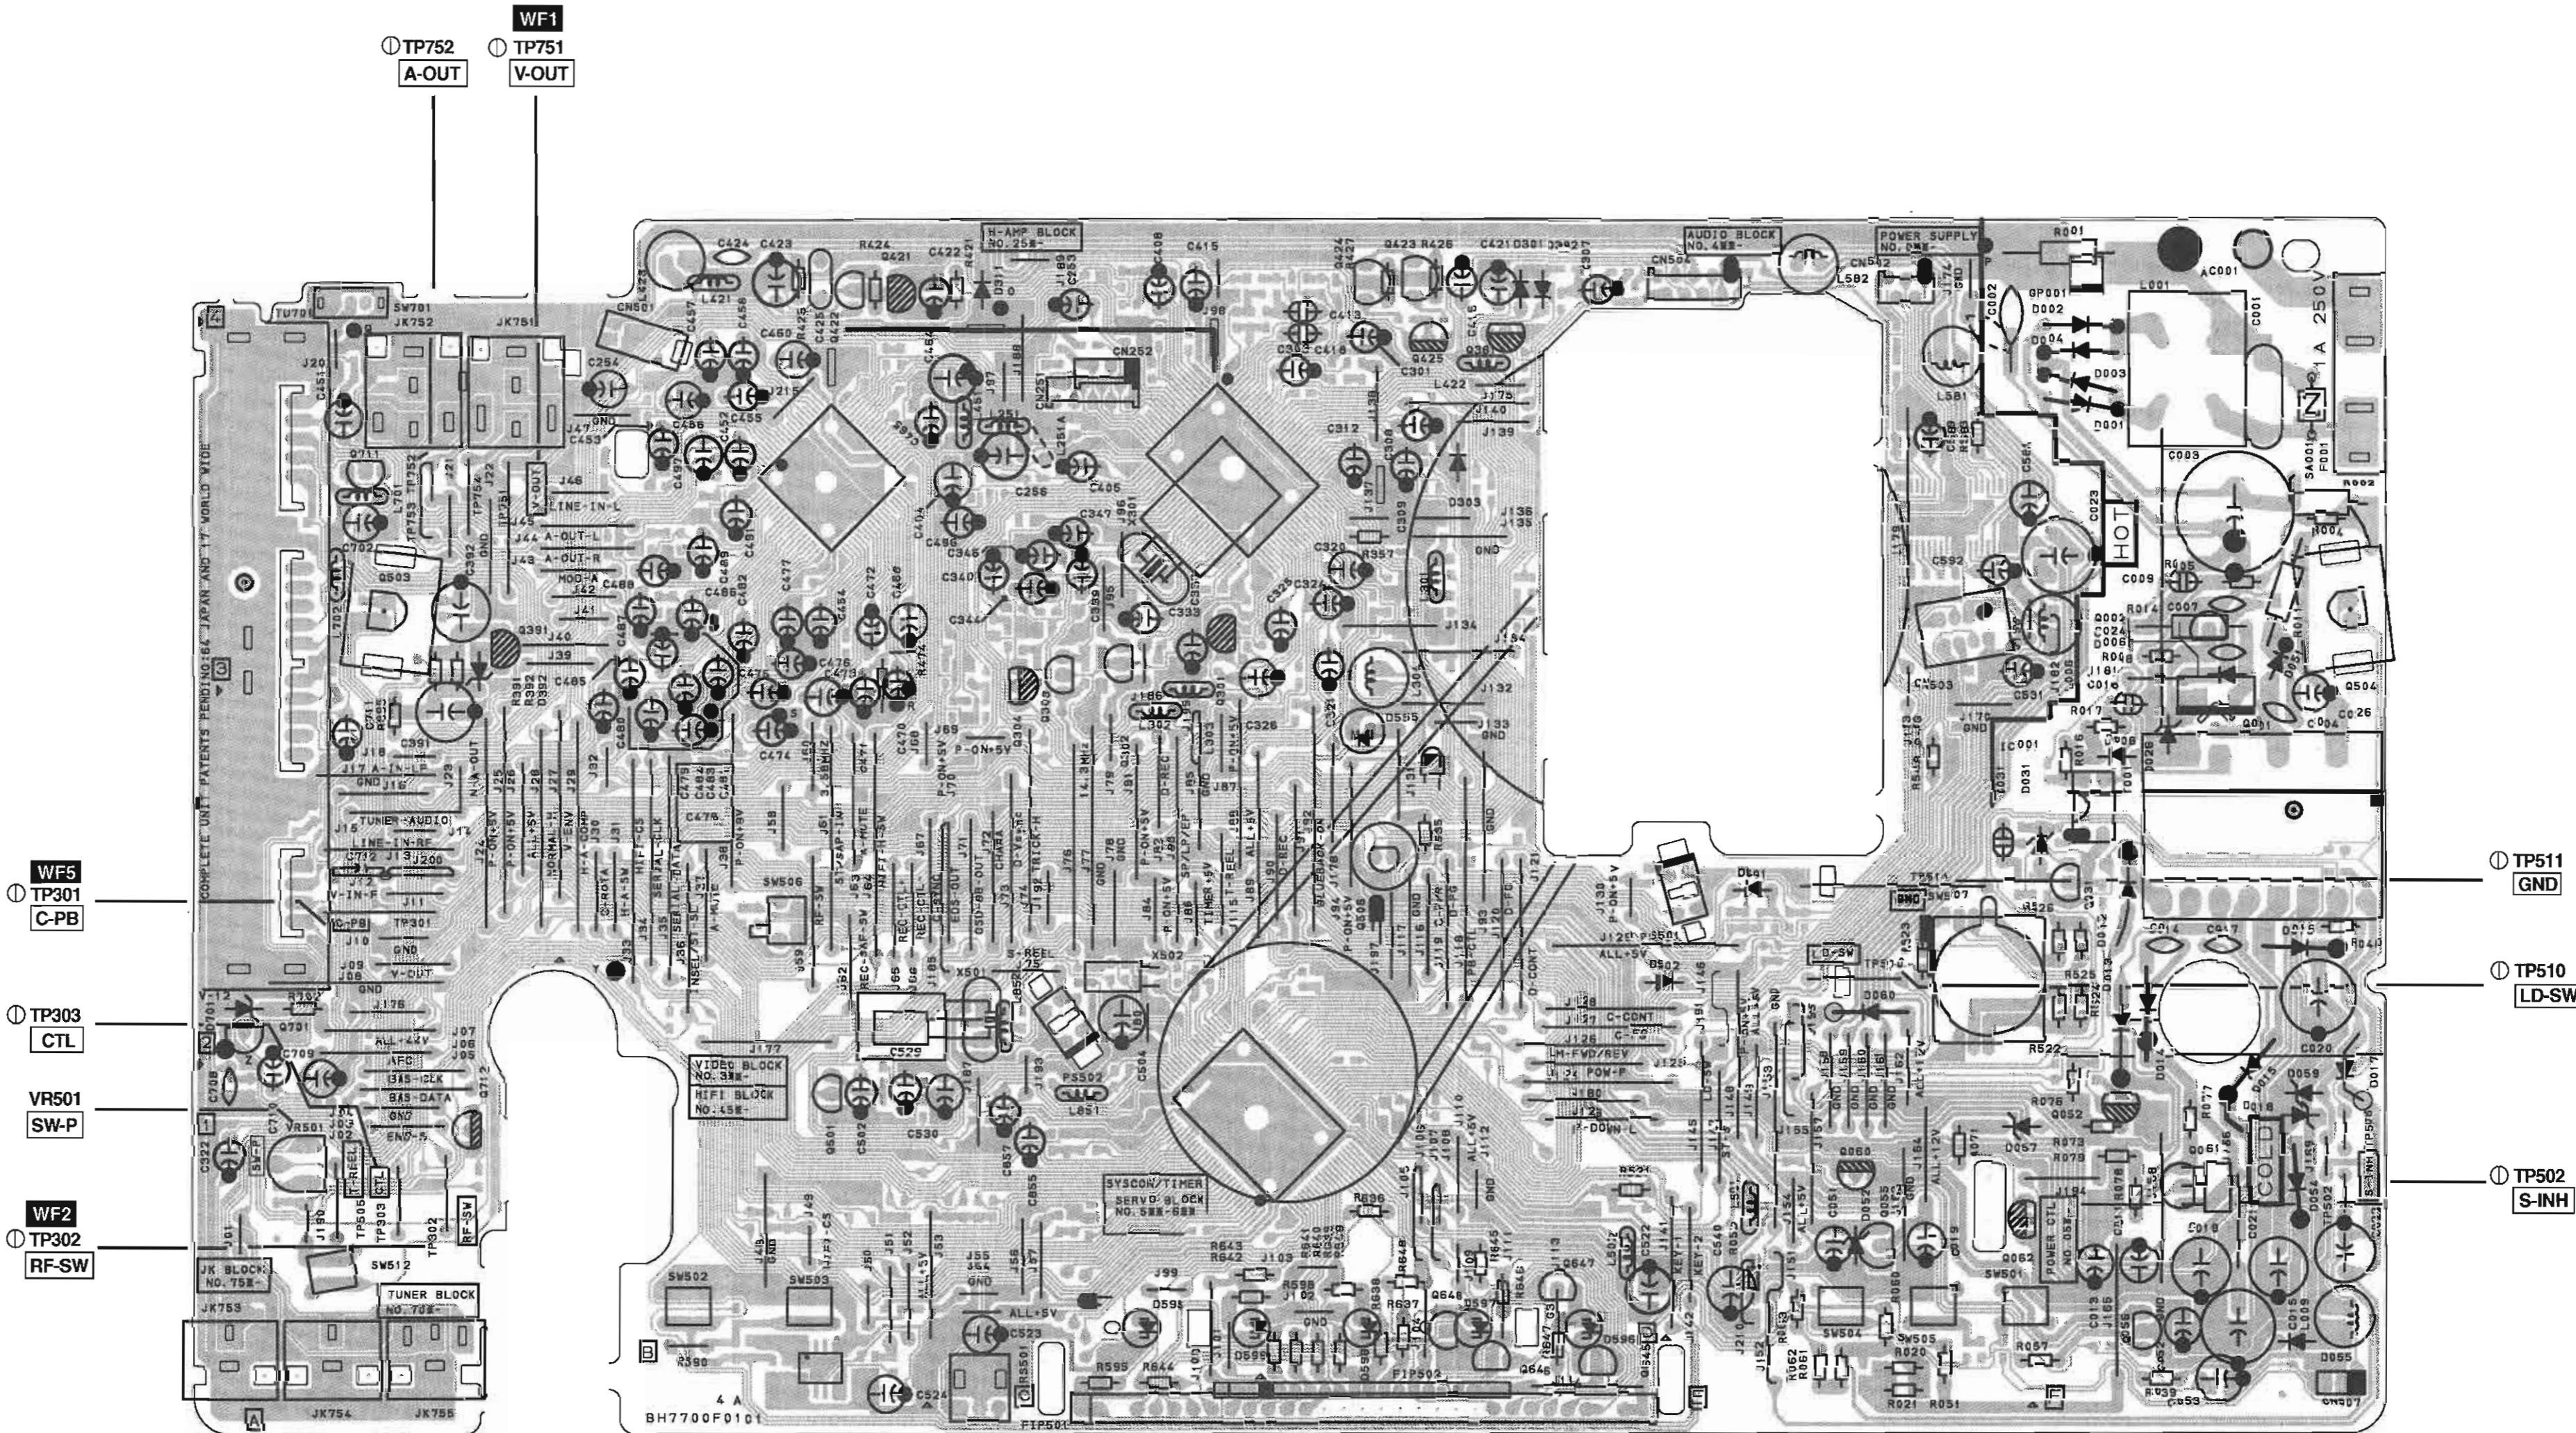


CAUTION !

Fixed voltage power supply circuit is used in this unit.

If Main Fuse (F001) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.

Otherwise it may cause some components in the power supply circuit to fail.

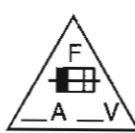**CAUTION**FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.**RISK OF FIRE-REPLACE FUSE AS MARKED.**


"This symbol means fast operating fuse."

"Ce symbole représente un fusible à fusion rapide."

BECAUSE A HOT CHASSIS GROUND IS PRESENT IN THE POWER SUPPLY CIRCUIT , AN ISOLATION TRANSFORMER MUST BE USED.
ALSO , IN ORDER TO HAVE THE ABILITY TO INCREASE THE INPUT SLOWLY , WHEN TROUBLESHOOTING THIS TYPE POWER SUPPLY CIRCUIT , A VARIABLE ISOLATION TRANSFORMER IS REQUIRED.









NOTE :

The voltage for parts in hot circuit is measured using hot GND as a common terminal.

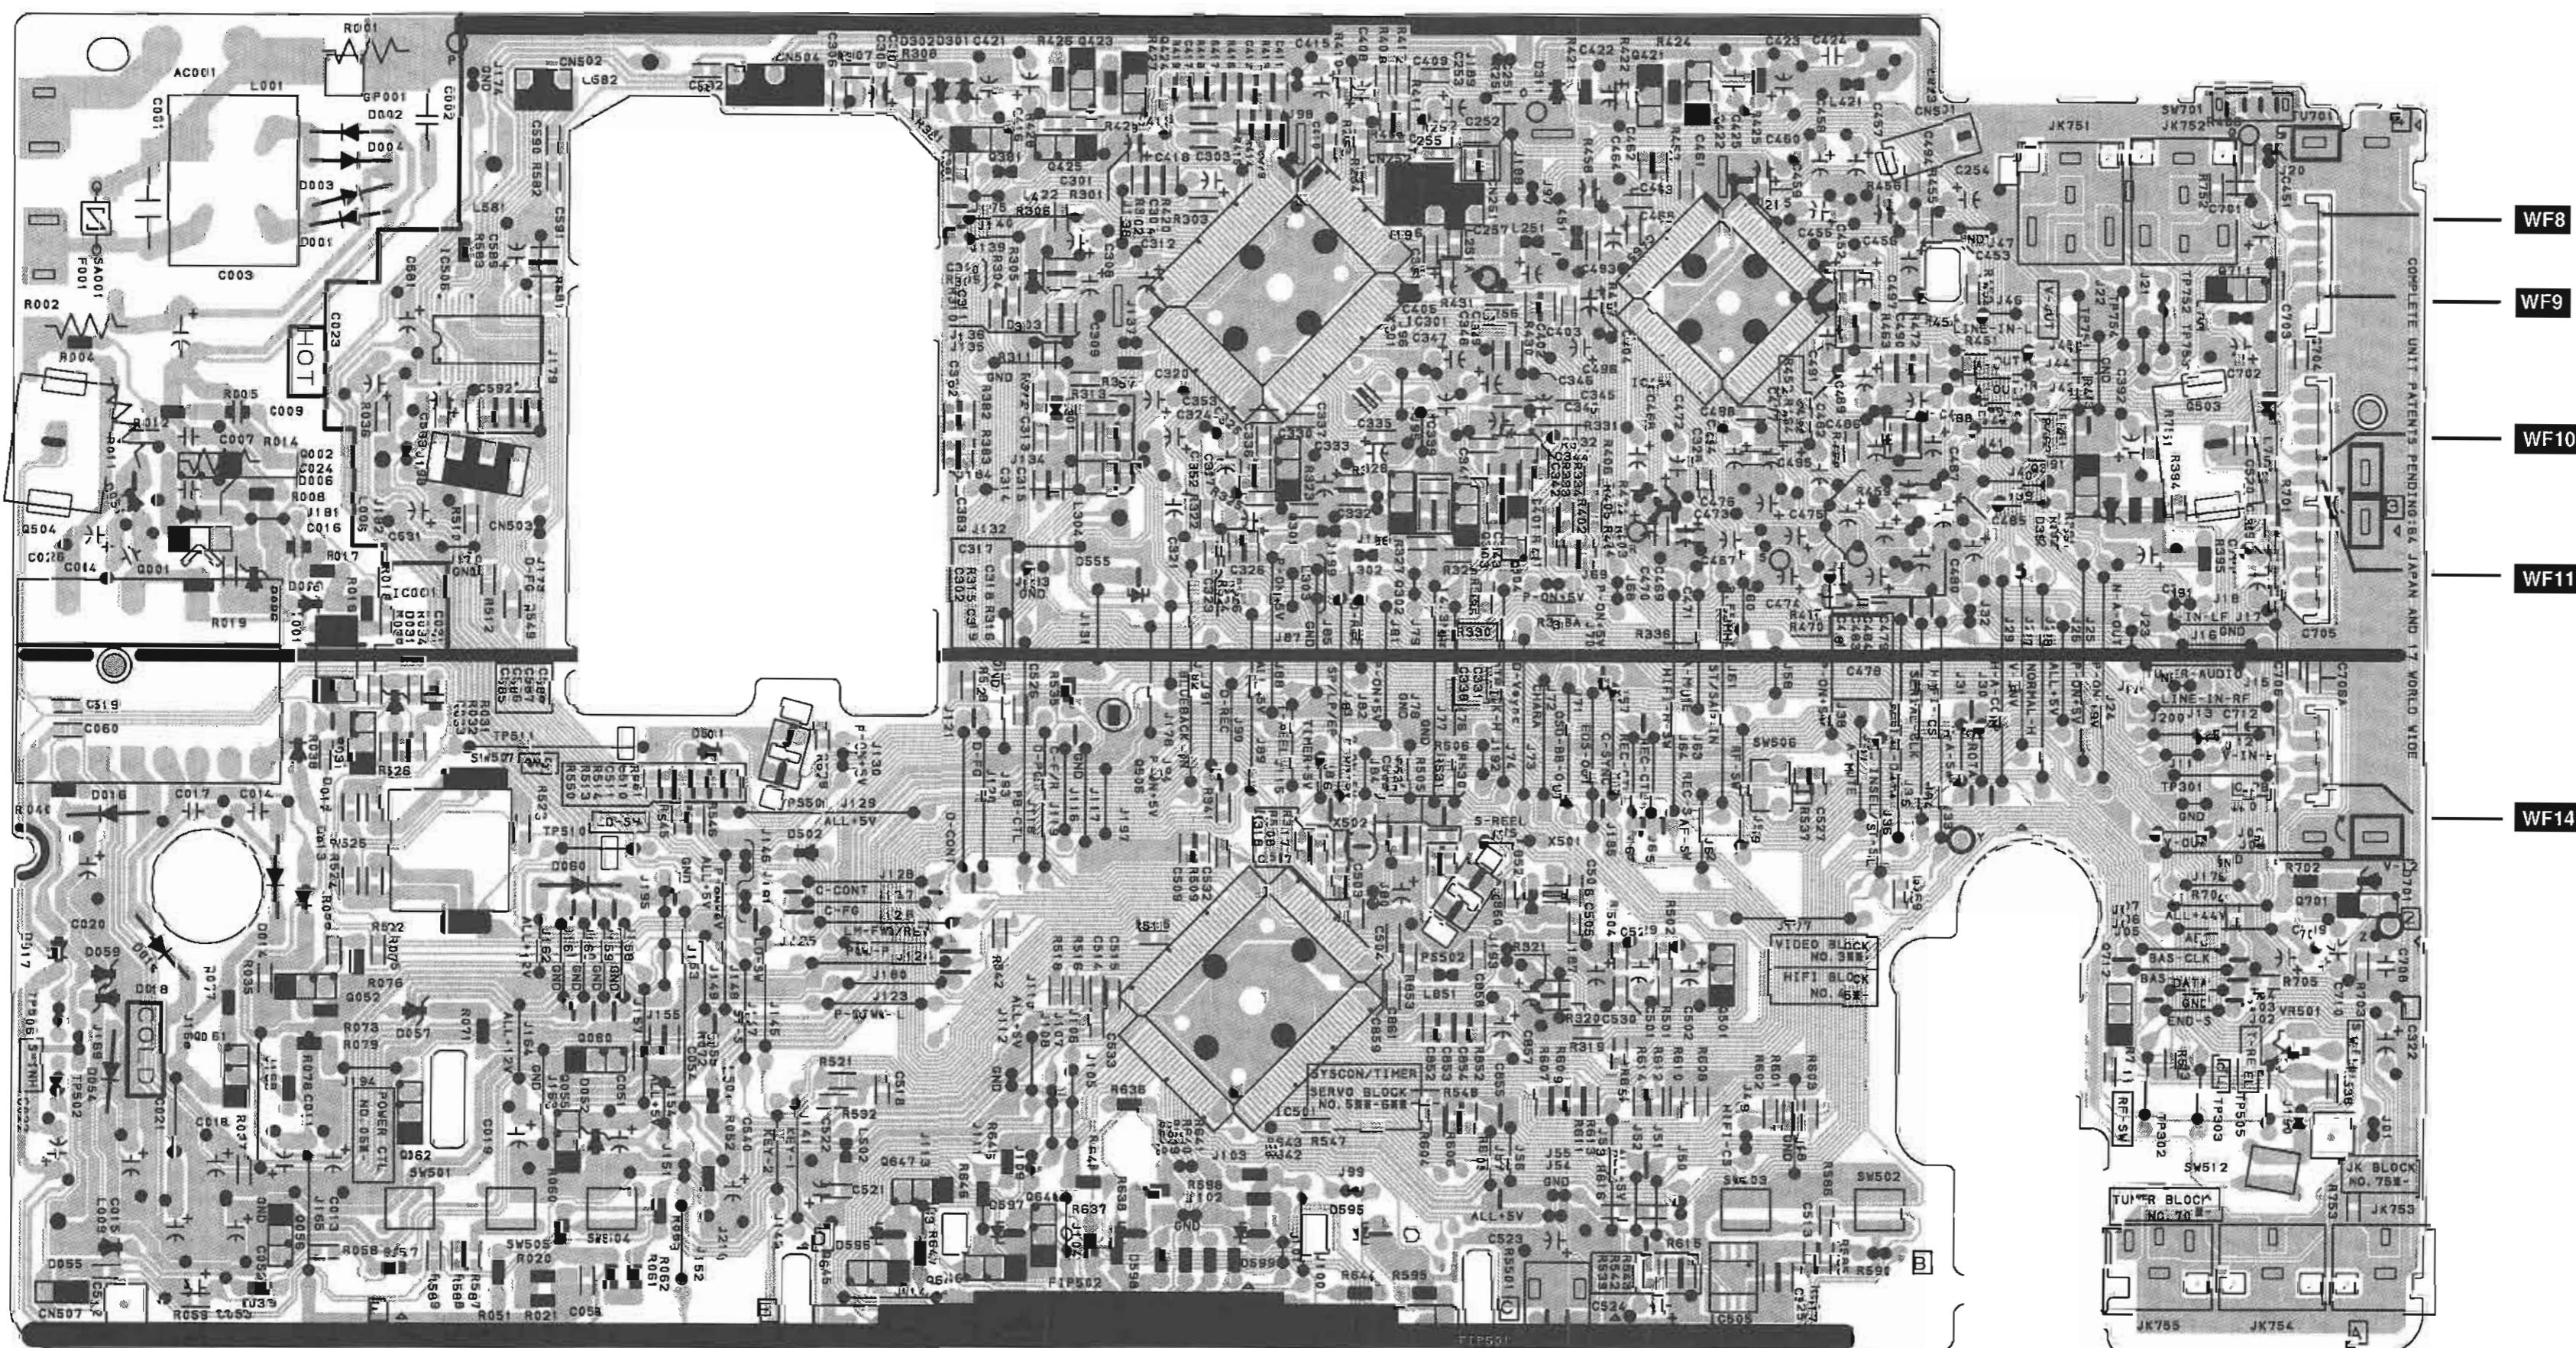


Main CBA		
Ref.NO	ICS	Position
IC001		F-2
IC301		C-3
IC451		B-3
IC501		C-1
IC506		E-3
TRANSISTORS		
Q001		F-2
Q002		F-3
Q031		F-2
Q052		F-1
Q055		E-1
Q056		F-1
Q060		E-1
Q301		C-3
Q302		C-2
Q303		C-2
Q391		A-3
Q421		B-4
Q422		B-4
Q423		D-4
Q424		D-4
Q425		D-3
Q501		B-1
Q503		A-3
Q504		F-3
Q506		D-2
Q701		A-2
CONNECTORS		
CN251		C-3
CN501		B-4
CN502		E-4
CN503		E-3
CN504		E-4
VARIABLE RESISTORS		
VR501		A-1
TEST POINTS		
TP301		A-2
TP302		A-1
TP303		A-1
TP502		F-1
TP505		A-1
TP506		F-1
TP510		E-2
TP511		E-2
TP751		A-3
TP753		A-3
TP754		A-3

WAVEFORMS

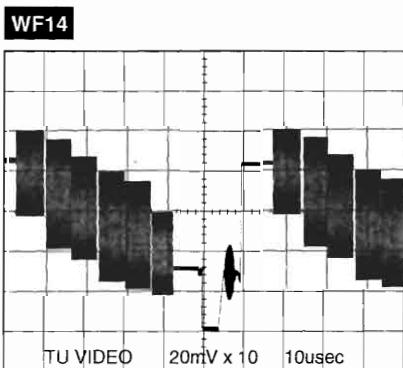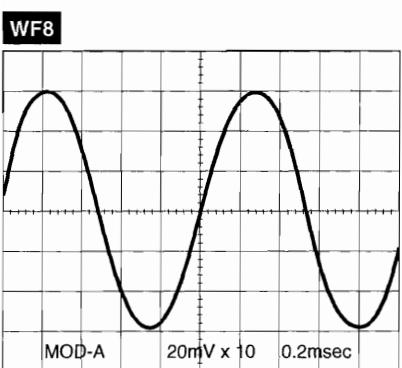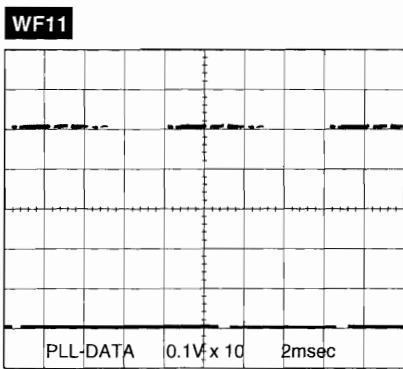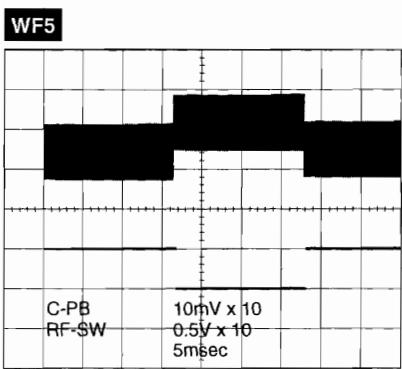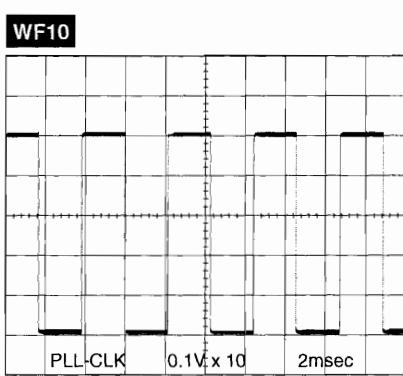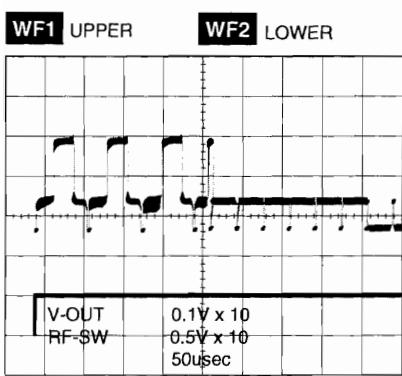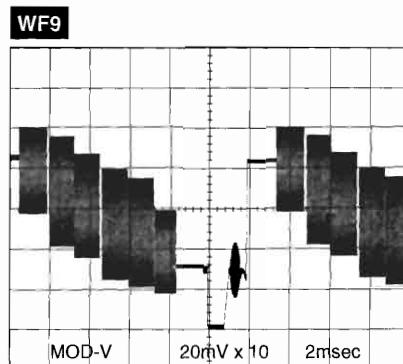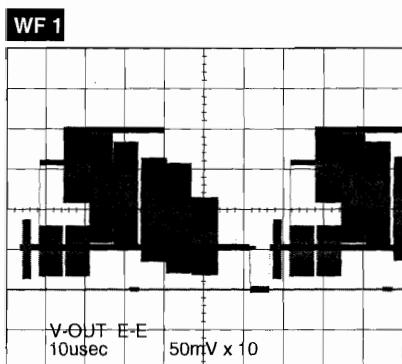

WIRING DIAGRAM

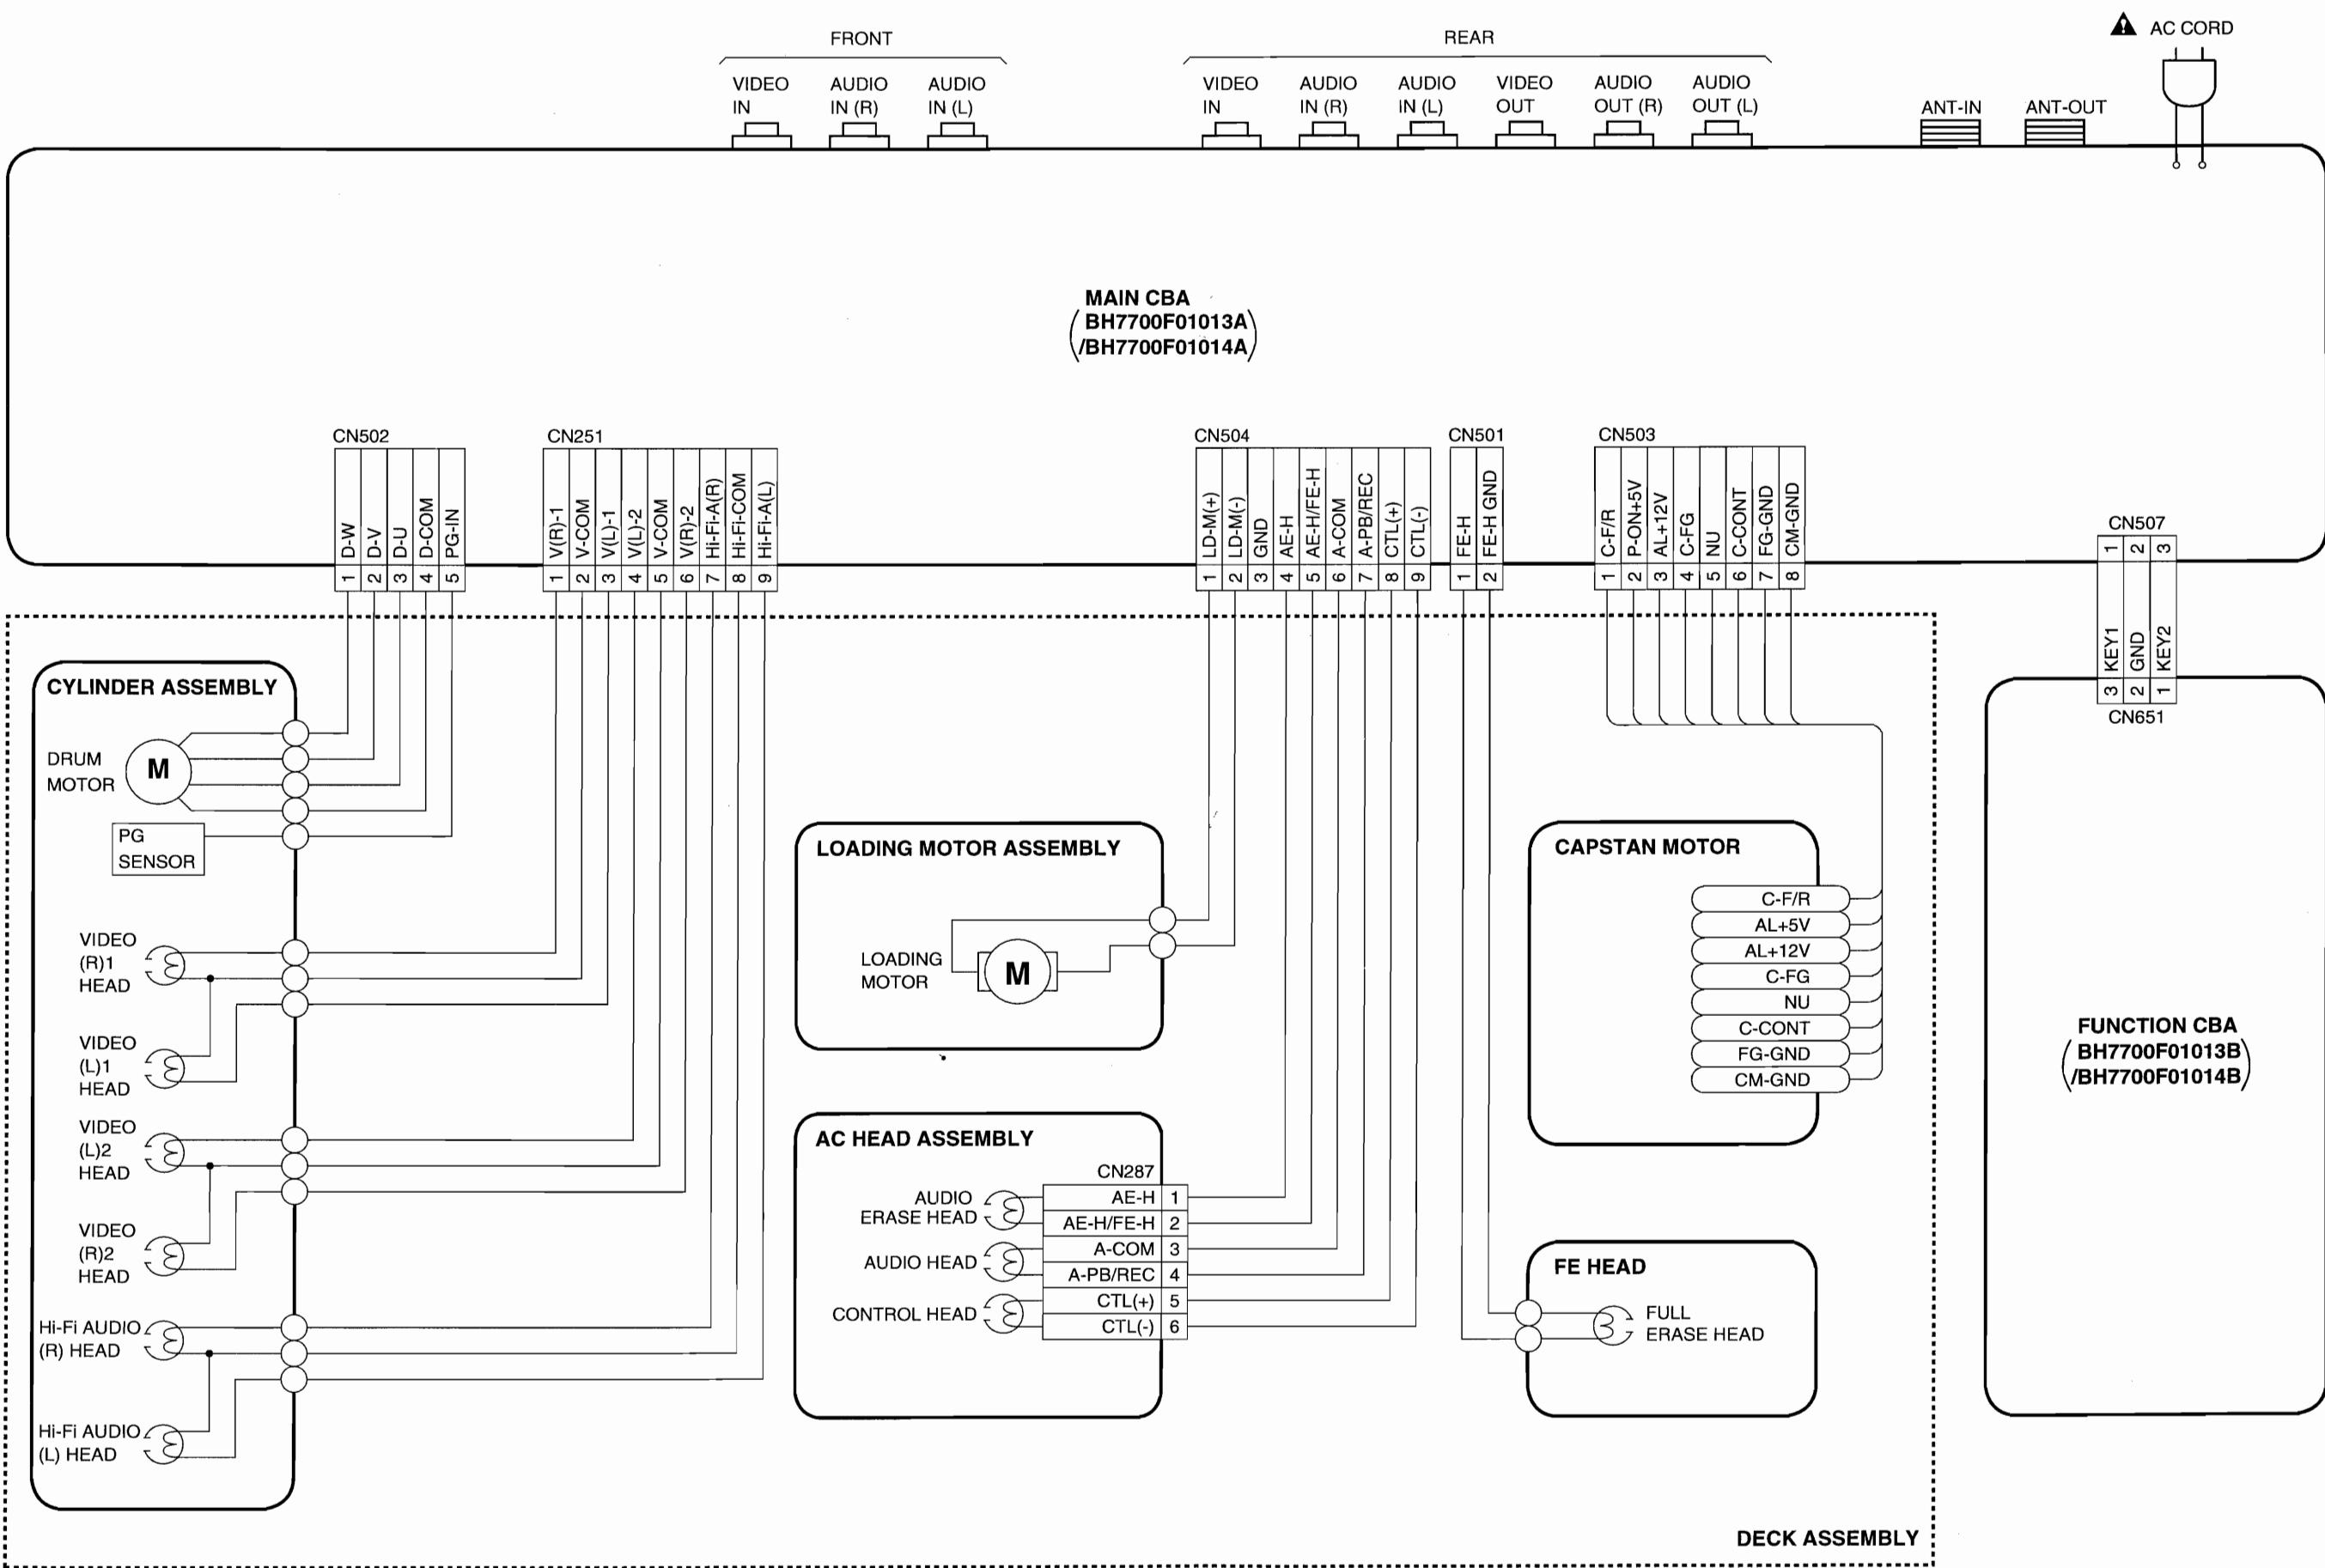

SYSTEM CONTROL TIMING CHARTS

Mode SW : LD-SW

LD-SW Position detection A/D Input voltage Limit (Calculated voltage)	Symbol
3.76V~4.50V (4.12V)	EJ
4.51V~5.00V (5.00V)	CL
0.00V~0.25V (0.00V)	SB
1.06V~1.50V (1.21V)	TL
0.66V~1.05V (0.91V)	FB
1.99V~2.60V (2.17V)	SF
1.51V~1.98V (1.80V)	AU
3.20V~3.75V (3.40V)	AL
0.26V~0.65V (0.44V)	SS
4.51V~5.00V (5.00V)	GC
2.61V~3.19V (2.97V)	RS

Note:

EJ → RS : Loading FWD (LM-FWD "H", LM-REV "L")

RS → EJ : Loading REV (LM-FWD "L", LM-REV "H")

Stop (A) = Loading

Stop (B) = Unloading

Note :

Symbol	Loading Status
EJ	Eject
CL	Eject ~ REW Reel
SB	REW Reel ~ Stop(B)
TL	Stop(B) ~ Brake Cancel
FB	Brake Cancel
SF	~ Stop(A)
AU	Stop(A) ~ Play / REC
AL	Play / REC ~ Still / Slow
SS	Still / Slow ~ Capstan Reversal
GC	Capstan Reversal ~ RS (REW Search)
RS	RS (REW Search)

Still/Slow Control Frame Advance Timing Chart

1) SP Mode

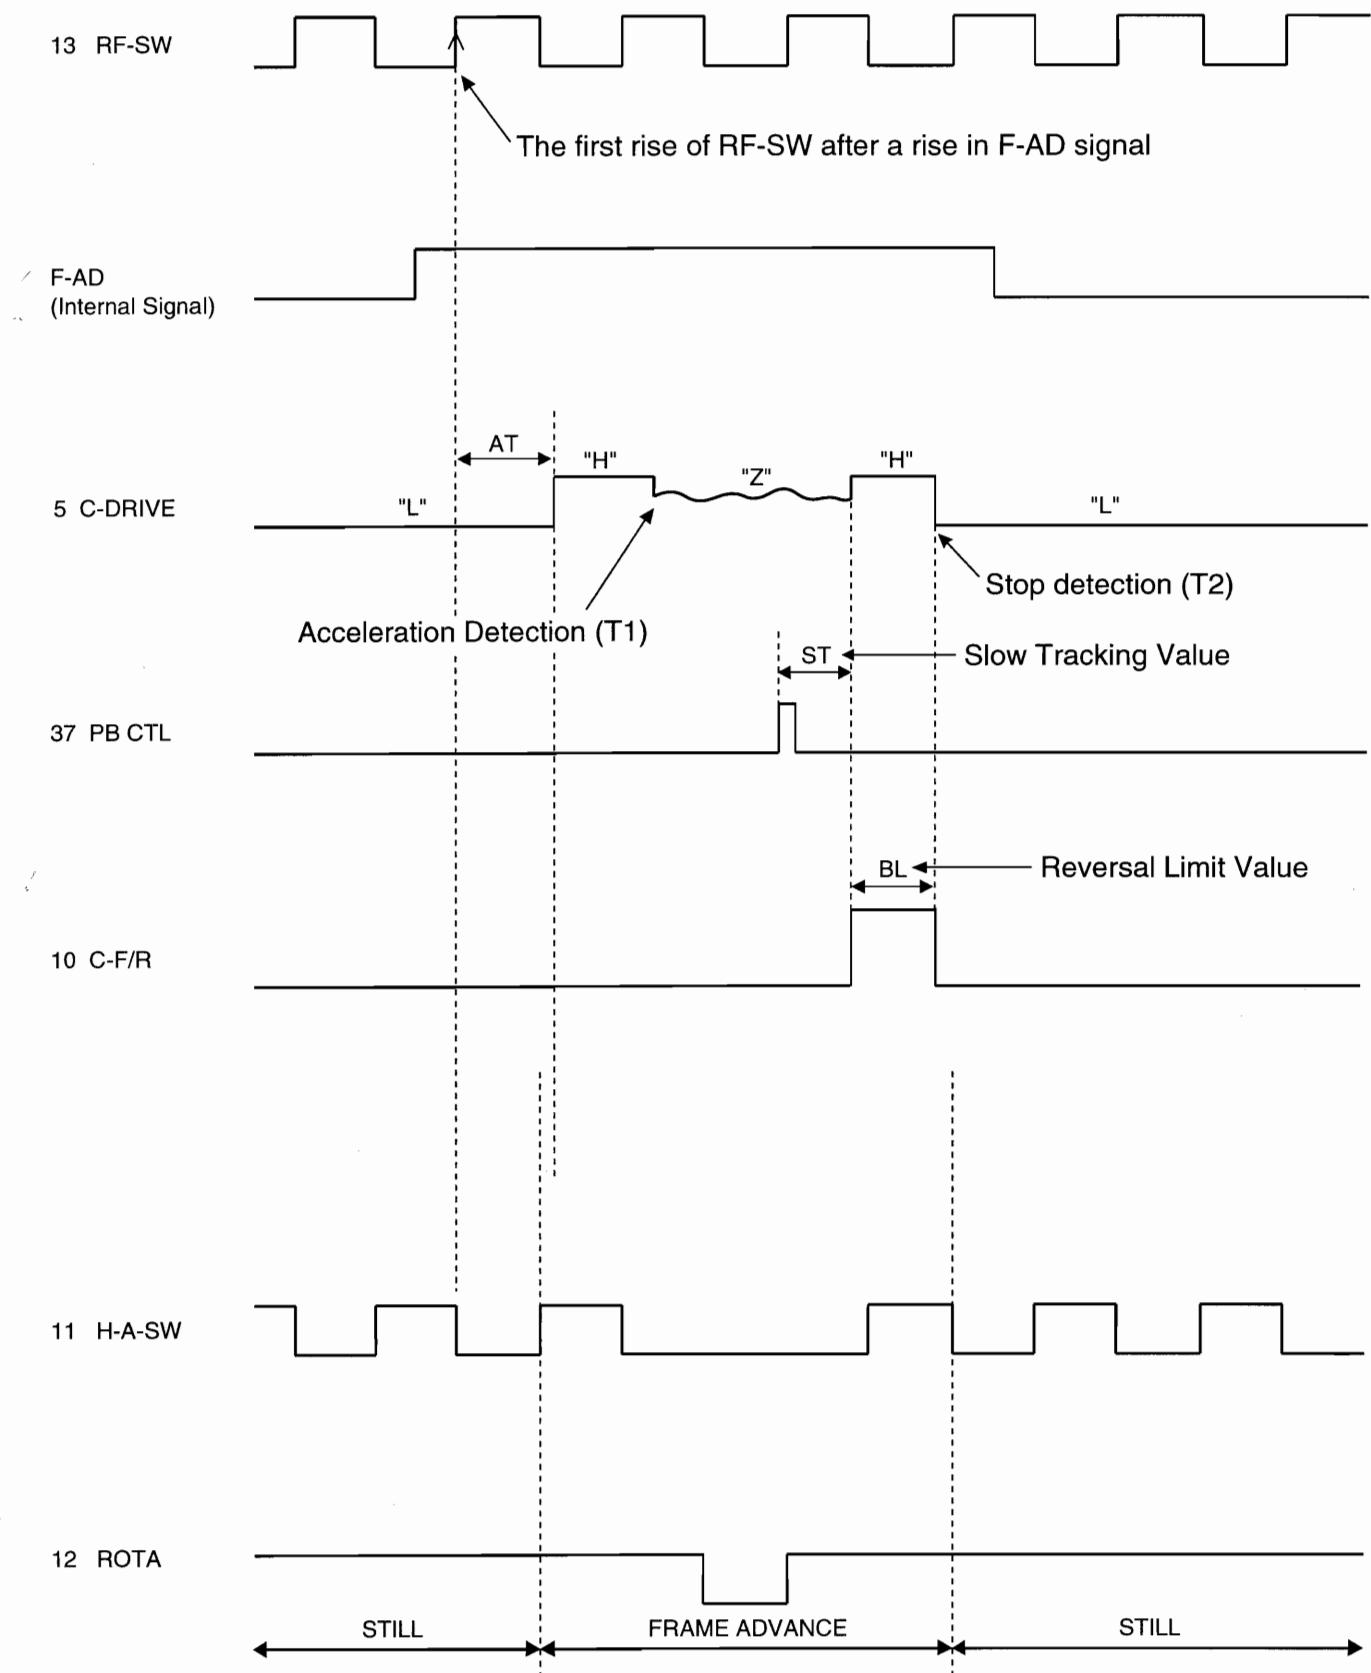


Fig.1

2) LP Mode


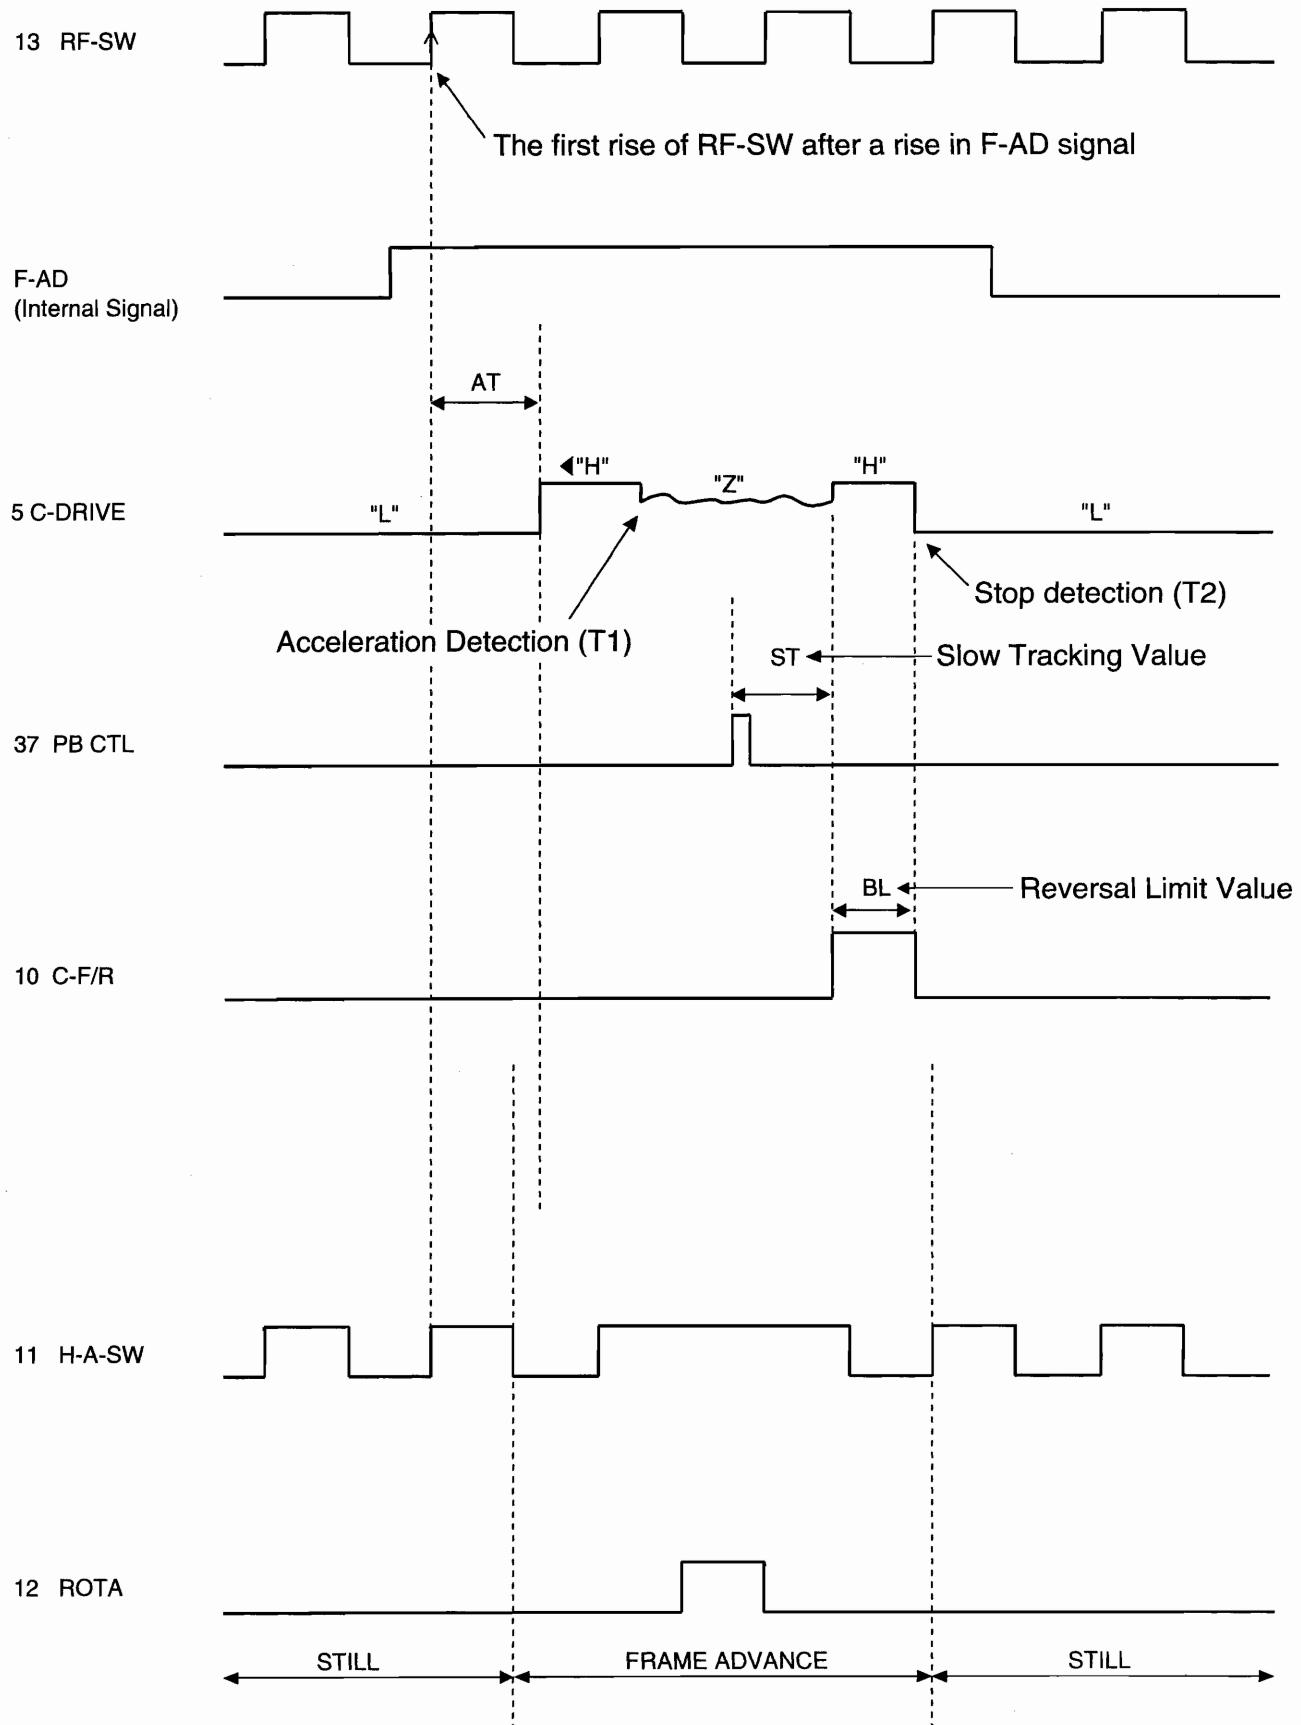


Fig.2

Fig.3

1. EJECT (POWER OFF) -> CASSETTE IN (POWER ON) -> STOP(B) -> STOP(A) -> PLAY -> RS -> FS -> PLAY -> STILL -> PLAY -> STOP(A)

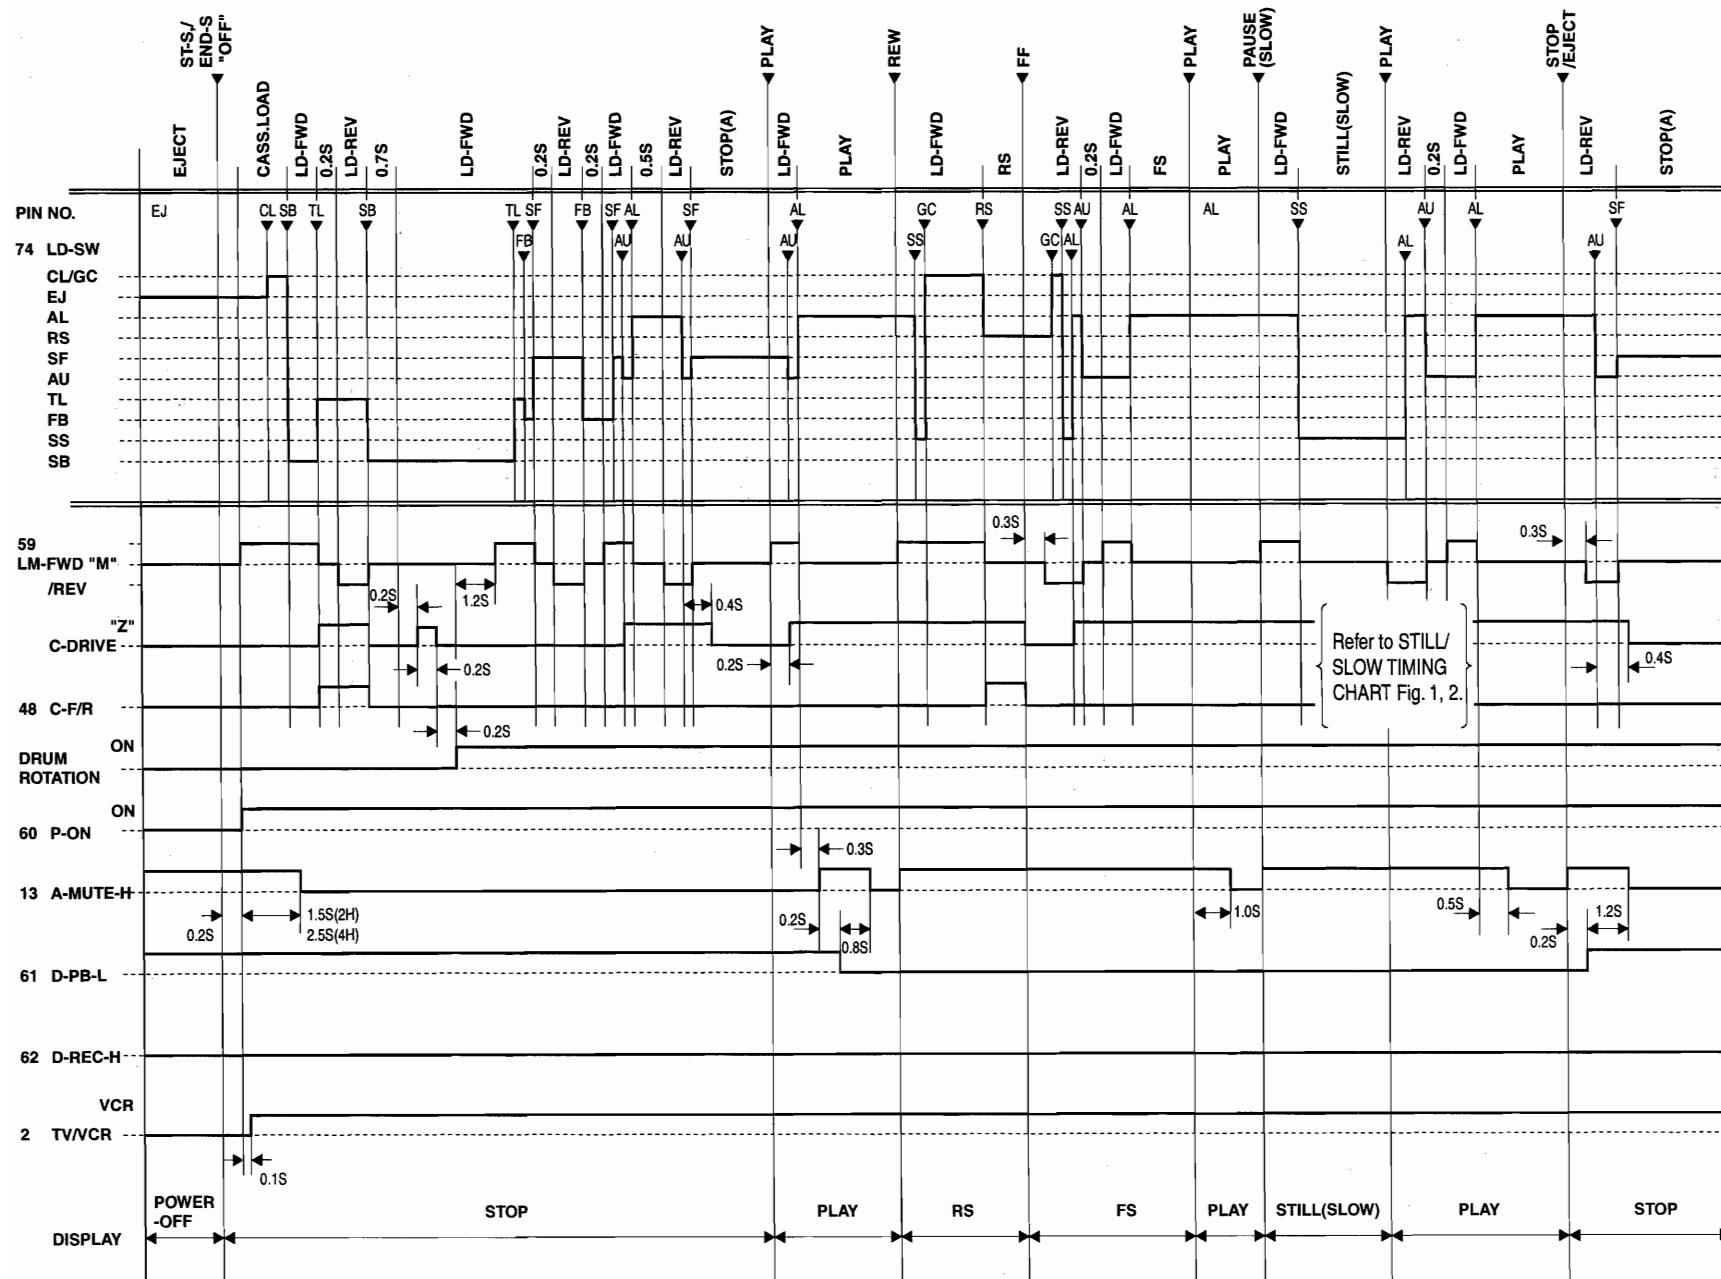

2. STOP(A) -> FF -> STOP(A) -> REW -> STOP(A) -> REC -> PAUSE -> PAUSE or REC -> STOP(A) -> EJECT

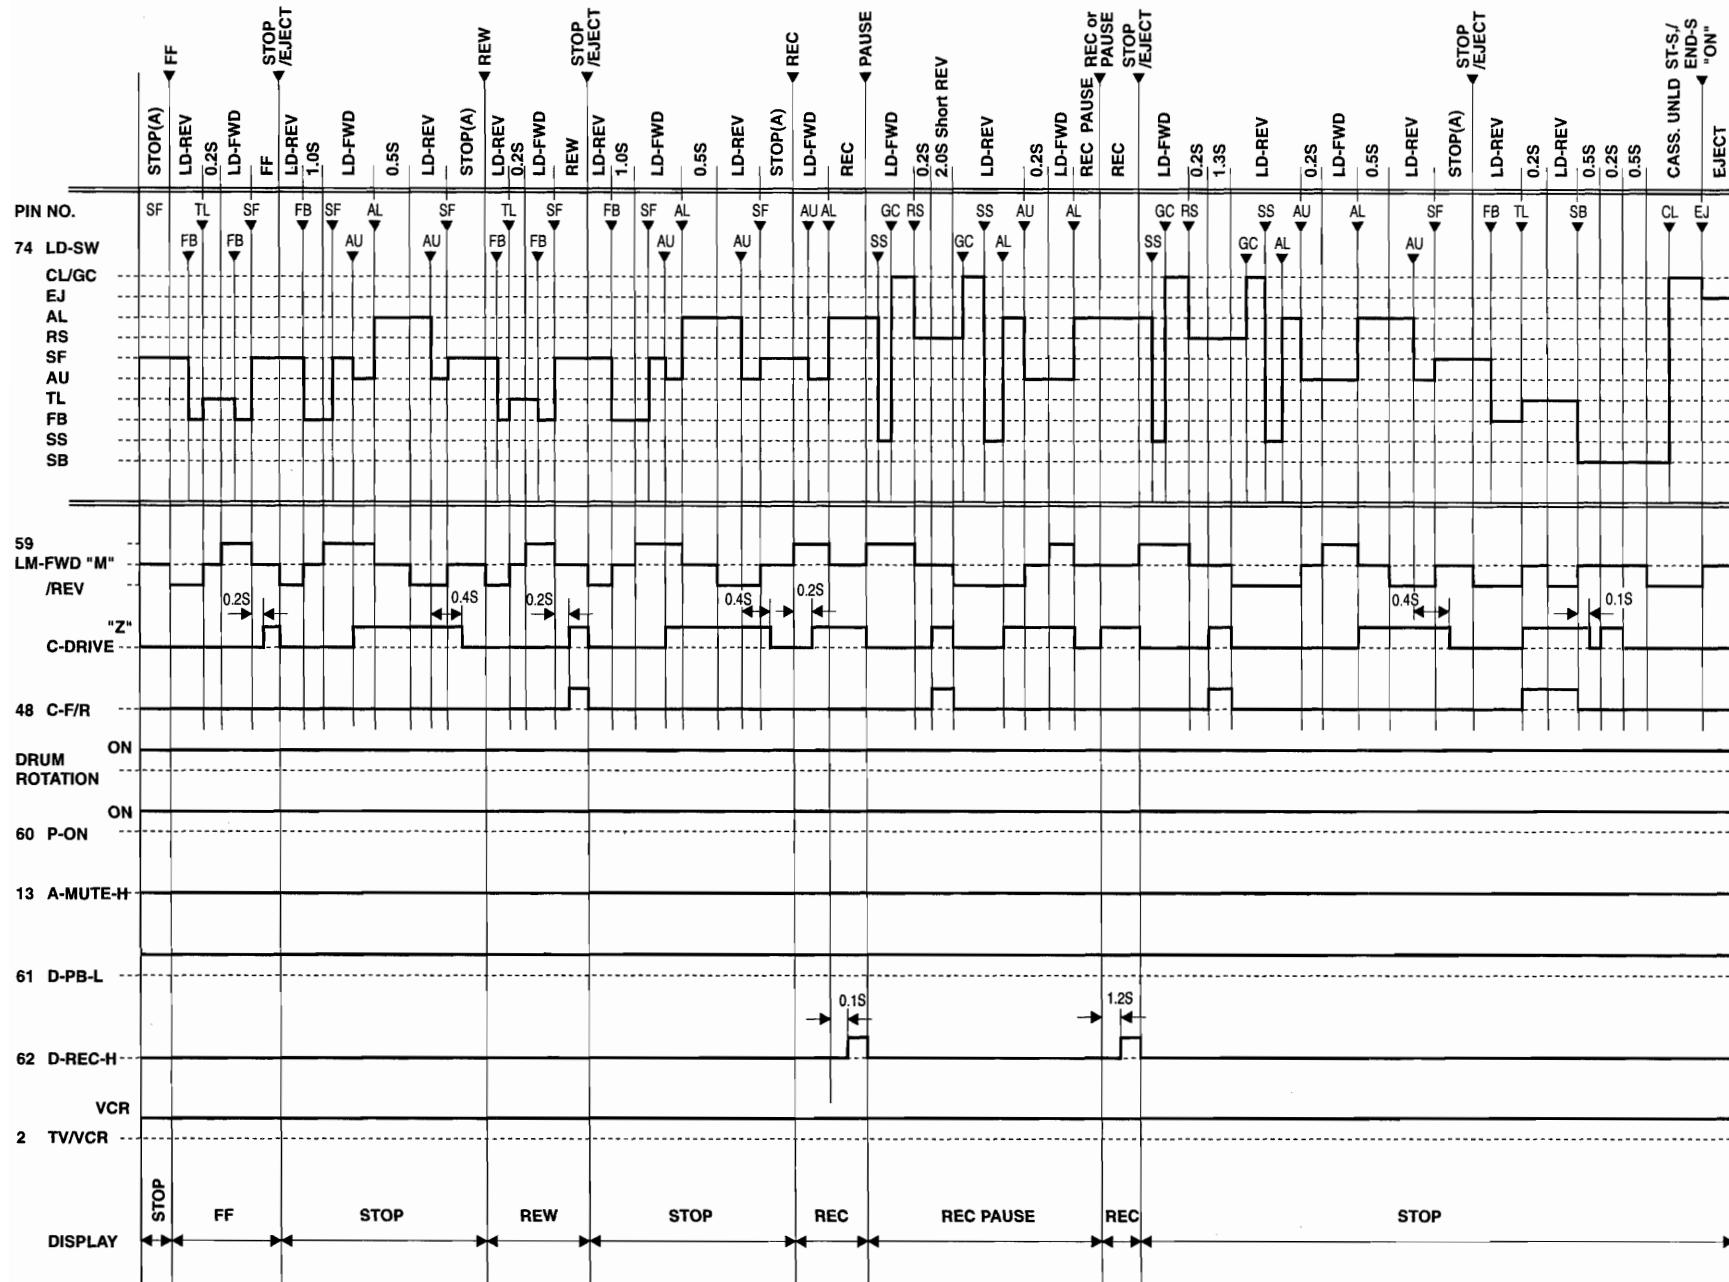


Fig.4

IC PIN FUNCTION

IC501 (SERVO / SYSTEM CONTROL IC)

"H" ≥ 4.5V, "L" ≤ 1.0V

Pins that have * in the Pin No. section on table below are not used.

Pin No.	IN/OUT	Signal Name	Function	Active Level
1	IN	REMO CON-IN	Remote Control Sensor	L
2	OUT	TV/VCR	RF Conv. ON/OFF Signal (TV="L"/ VCR="H")	H/L
3	-	N.U.	Not Used	-
4	-	N.U.	Not Used	-
5	-	N.U.	Not Used	-
6	-	N.U.	Not Used	-
7	OUT	INSEL/ST-SL	Input Selector Control Signal (EE/Rec)/ Still/Slow (Playback)	H/Hi-z /L
8	OUT	HiFi-CS	HiFi IC Chip Select	H
9	IN/OUT	I ² C BUS-DATA	I ² C BUS Data Input/Output	H/L
10	OUT	I ² C BUS-CLK	I ² C BUS Clock Output	H/L
11	OUT	HiFi-CLK	HiFi IC Control Clock Output	H/L
12	OUT	HiFi-DATA	HiFi IC Control Data Output	H/L
13	OUT	A-MUTE	Audio Mute Control Signal (Mute="H")	H
14	IN	H-A-COMP	Head Amp Comparator Signal	H/L
15	OUT	C-ROTA	Color Phase Rotary Changeover Signal	H/L
16	OUT	H-A-SW	Video Head Amp Switching Pulse	H/L
17	OUT	RF-SW	Video Head Switching Pulse	H/L
18	OUT	HiFi-H-SW	HiFi Audio Head Switching Pulse	H/L
19	OUT	REC-CTL (+)	Record Control Signal (+)	H/L
20	OUT	REC-CTL (-)	Record Control Signal (-)	H/L
21	IN	C-SYNC	Composite Synchronized Pulse	PULSE
22	-	GND	GND	-
23	-	N.U.	Not Used	-
24	-	OSDVss	OSDVss	-

Pin No.	IN/OUT	Signal Name	Function	Active Level
25	IN	REC-SAF-SW	Recording Safety SW Detect (With Record tab="L"/ With out Record tab="H")	H/L
*26	IN	C-VIDEO-IN	Composite Video Signal Input (Slicer)	-
*27	IN	VHOLD	Condenser Connected Terminal (Slicer)	-
28	-	HLF	LPF Connected Terminal (Slicer)	-
29	-	GND	GND	-
30	OUT	OSD-BB-OUT	Composite Video Signal Output (Blue Back)	-
31	OUT	OSD-CHARA-OUT	Character Output (Superimposed)	-
32	-	OSDVcc	OSDVcc	-
33	OUT	D-V SYNC-OUT	Dummy V-sync Output	H/Hi-z
34	IN	RESET	System Reset Signal (Reset= "L")	L
35	IN	OSCIN	Clock Input for letter size	-
36	OUT	OSCOUT	Clock Output for letter size	-
37	-	Vcc	Vcc	-
38	IN	XIN	Main Clock Input 14.31818 MHz	-
39	OUT	Xout	Main Clock Output	-
40	-	Vss	Vss(GND)	-
41	IN	XC IN	Sub Clock 32 kHz	-
42	OUT	XC OUT	Sub Clock 32 kHz	-
43	IN	CLKSEL	Clock Select (GND)	L
*44	OUT	PICTURE-SEL	Picture Control Signal	-
45	OUT	SP/LP/SLP	Tape Speed Select Signal (SP="L"/ LP="Z"/SLP="H")	H/Z/L
46	-	N.U.	Not Used	-
47	OUT	TRICK/C-G/APC	Special Playback /Copy Guard/APC Control Signal	H/Z/L

Pin No.	IN/OUT	Signal Name	Function	Active Level
48	OUT	C-F/R	Capstan Motor FWD/REV Control Signal (FWD="L"/REV="H")	H/L
49	IN	T-REEL	Take Up Reel Rotation Signal	PULSE
50	-	N.U.	Not Used	-
51	IN	C-FG	Capstan Motor Rotation Detection Pulse	PULSE
52	IN	D-FG	Drum Motor Rotation Detection Pulse	PULSE
53	IN	D-PG	Drum Motor Pulse Generator	PULSE
54	IN	PB-CTL	Playback Control Signal	PULSE
55	OUT	C-CONT	Capstan Motor Control Signal	PWM
56	OUT	D-CONT	Drum Motor Control Signal	PWM
57	-	N.U.	Not Used	-
58	-	N.U.	Not Used	-
59	OUT	LM-FWD/REV	Loading Motor FWD/REV Output	H/Z/L
60	OUT	P-ON-L	Power On Signal to Low	L
61	OUT	D-PB	Playback Instruction Signal (Playback="L")	L
62	OUT	D-REC	Delayed Record Signal	H
63	IN	P-DOWN-L	Power Voltage Down Detector Signal	L
64	-	N.U.	Not Used	-
65	IN	HiFi/NOR-IN	Audio Mode Input HiFi="L"/Normal="H"	H/L
66	OUT	BLUE BACK-ON	Blueback Control Signal	H
67	IN	ST/SAP-IN	Tuner Stereo/Sap Detector Signal Input	A/D
68	IN	END-S	Tape End Position Detect Signal	A/D
69	IN	AFC	Automatic Frequency Control Signal	A/D
70	IN	V-ENV	Video Envelope Comparator Signal	A/D

Pin No.	IN/OUT	Signal Name	Function	Active Level
71	IN	PG-DELAY	Video Head Switching Pulse Signal Adjusted Voltage	A/D
72	IN	KEY-1	A/D Key Data Signal	A/D
73	IN	KEY-2	A/D Key Data Signal	A/D
74	IN	LD-SW	Deck Mode Position Detect Signal	A/D
75	IN	ST-S	Tape Start Position Detect Signal	A/D
76	-	AVcc	A/D Converter Power Input/Standard Voltage Input	-
77	-	FLDVcc	FLDVcc	-
78	-	FLDVp	GND	-
79	OUT	REC LED	REC Mode LED Indicator	H/L
80	OUT	TIMER LED	TIMER Mode LED Indicator	H/L
81	-	N.U.	Not Used	-
82	-	N.U.	Not Used	-
83	OUT	REC LED	REC Mode LED Indicator	H/L
84	OUT	TIMER LED	TIMER Mode LED Indicator	H/L
85	-	N.U.	Not Used	-
86	-	N.U.	Not Used	-
87	-	N.U.	Not Used	-
88	OUT	TAPE IN LED	Tape IN/OUT LED Indicate	H/L
89	-	N.U.	Not Used	-
90	-	N.U.	Not Used	-
91	-	N.U.	Not Used	-
92	OUT	TAPE IN LED	Tape IN/OUT LED Indicate	H/L
93	OUT	VCR/TV LED	VCR/TV Mode LED Indicate	H/L
94	OUT	VCR/TV LED	VCR/TV Mode LED Indicate	H/L
95	-	N.U.	Not Used	-
96	-	N.U.	Not Used	-
97	-	N.U.	Not Used	-
98	-	N.U.	Not Used	-
99	-	N.U.	Not Used	-
100	-	N.U.	Not Used	-


Notes:

Abbreviation for Active Level:


PWM ----- Pulse Wide Modulation

A/D ----- Analog - Digital Converter


LEAD IDENTIFICATIONS

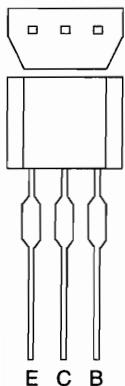


BN1F4M-T
 BA1F4M-T
 KTA1266(GR)
 KTC3193(Y)
 KTC3199(Y,GR,BL)
 2SC2785(J.H.F.K)
 2SC2058(Q)
 KRA103M
 KRC103M
 DTC124ESA
 2SA1015-GR(TPE2)
 DTA124ESA

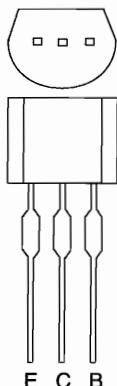



2SC1815-Y(TPE2)
 2SC1815-GR(TPE2)
 2SC3331(T,U)
 2SC2120-Y(TPE2)
 KTC3203(Y)

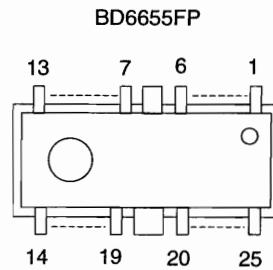


2SC536NF(NG)-NPA-AT

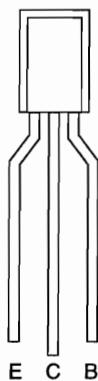


LTV-817(B.C)-F
PC-17T1

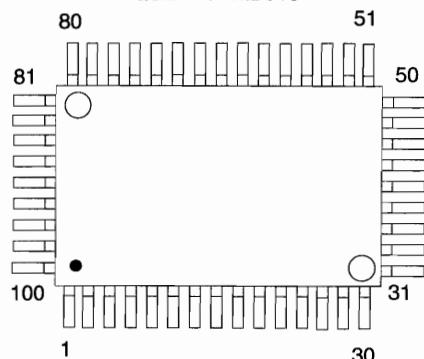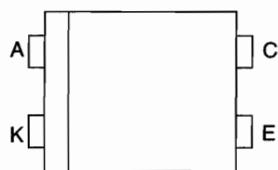


ST-304L-(A,B,C,D)

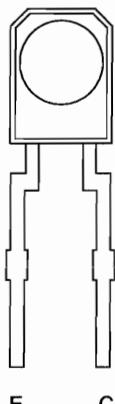

PT204-6B-12

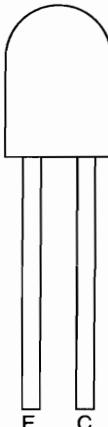

2SK3472
2SK2599

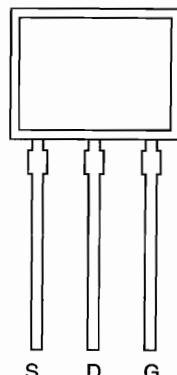

Note:

- A: Anode
- K: Cathode
- E: Emitter
- C: Collector
- B: Base
- R: Reference
- S: Source
- G: Gate
- D: Drain

DECK MECHANISM SECTION

VIDEO CASSETTE RECORDER

SL260B/6260VB/EWV601

Sec. 2: Deck Mechanism Section

- Standard Maintenance
- Alignment for Mechanism
- Disassembly/Assembly of Mechanism
- Alignment Procedures of Mechanism

TABLE OF CONTENTS

Standard Maintenance	2-1-1
Service Fixtures and Tools	2-2-1
Mechanical Alignment Procedures	2-3-1
Disassembly / Assembly Procedures of Deck Mechanism	2-4-1
Alignment Procedures of Mechanism	2-4-9

STANDARD MAINTENANCE

Service Schedule of Components

H: Hours ○: Check ●: Change

Deck		Periodic Service Schedule			
Ref. No.	Part Name	1,000 H	2,000 H	3,000 H	4,000 H
B2	Cylinder Assembly	○	●	○	●
B3	Loading Motor Assembly			●	
B8	Pulley Assembly		●		●
B27	Tension Lever Sub Assembly		●		●
B31	AC Head Assembly			●	
B573, B574	Reel (S), Reel (T)			●	
B37	Capstan Motor		●		●
B52	Cap Belt		●		●
*B73	FE Head			●	
B133	Idler Assembly		●		●
B410	Pinch Arm (A) Assembly		●		●
B414	M Brake S Assembly		●		●
B416	M Brake T Assembly		●		●
B525	LDG Belt		●		●

Notes:

1. Clean all parts for the tape transport (Upper Drum with Video Head / Pinch Roller / Audio Control Head / Full Erase Head) using 90% Isopropyl Alcohol.
2. After cleaning the parts, do all DECK ADJUSTMENTS.
3. For the reference numbers listed above, refer to Deck Exploded Views.

* B73 ----- VCR Model only

Cleaning

Cleaning of Video Head


Clean the head with a head cleaning stick or chamois cloth.

Procedure

1. Remove the top cabinet.
2. Put on a glove (thin type) to avoid touching the upper and lower drum with your bare hand.
3. Put a few drops of 90% Isopropyl alcohol on the head cleaning stick or on the chamois cloth and, by slightly pressing it against the head tip, turn the upper drum to the right and to the left.

Notes:

1. The video head surface is made of very hard material, but since it is very thin, avoid cleaning it vertically.
2. Wait for the cleaned part to dry thoroughly before operating the unit.
3. Do not reuse a stained head cleaning stick or a stained chamois cloth.

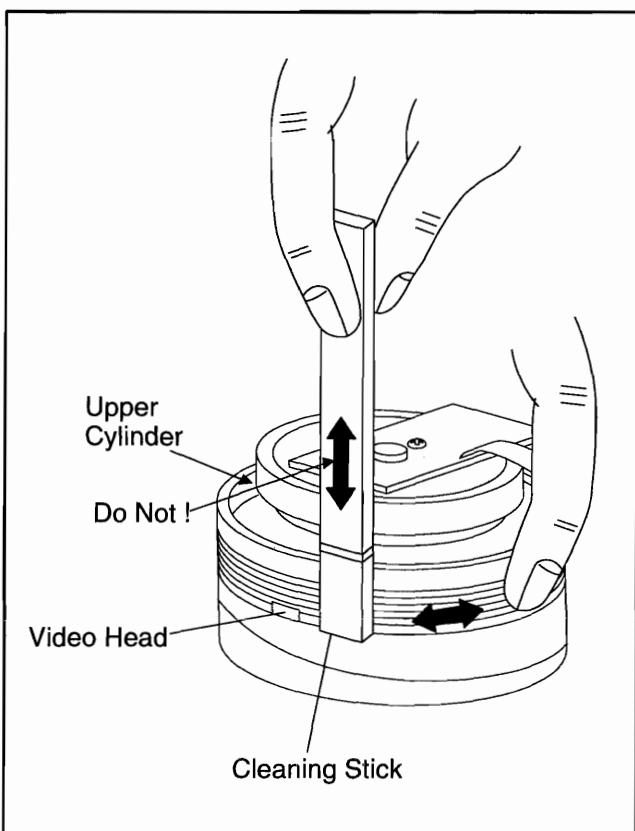

Cleaning of Audio Control Head


Clean the head with a cotton swab.

Procedure






1. Remove the top cabinet.
2. Dip the cotton swab in 90% isopropyl alcohol and clean the audio control head. Be careful not to damage the upper drum and other tape running parts.

Notes:

1. Avoid cleaning the audio control head vertically.
2. Wait for the cleaned part to dry thoroughly before operating the unit or damage may occur.

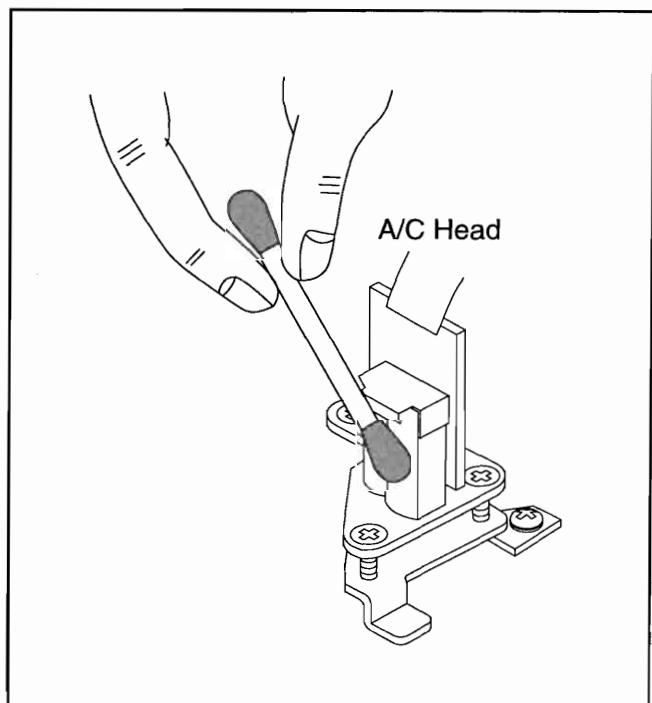

SERVICE FIXTURE AND TOOLS

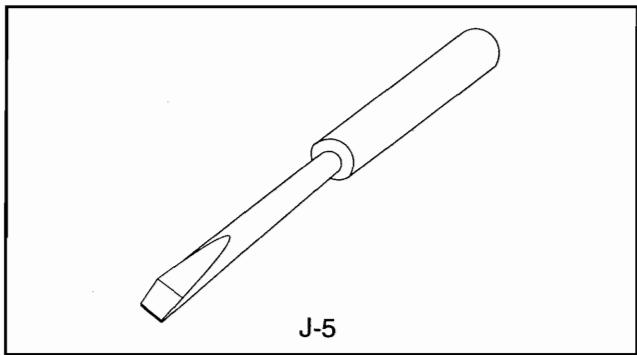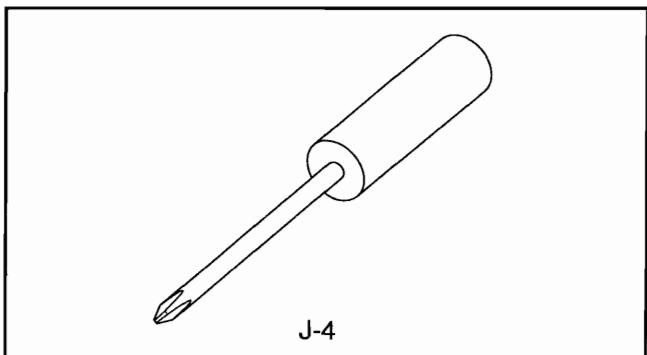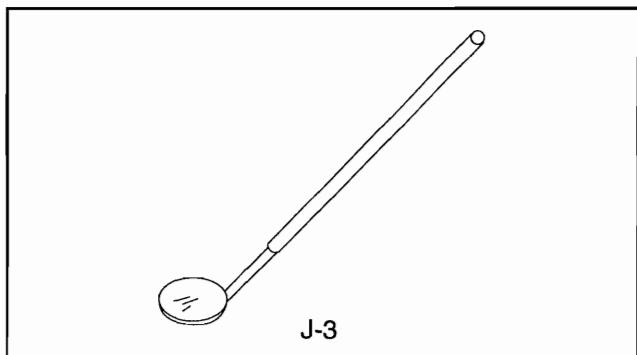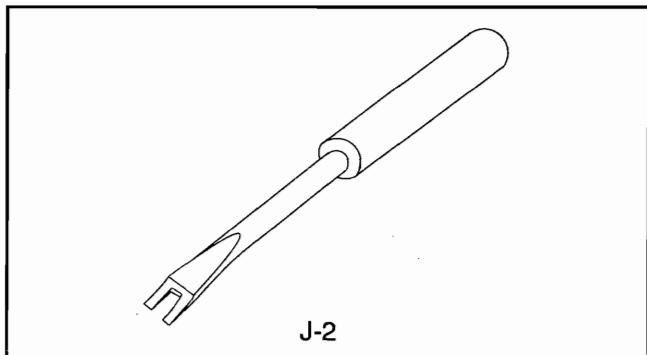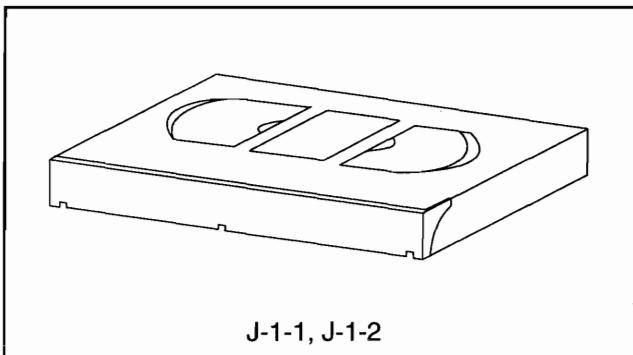

Ref. No.	Name	Part No.	Adjustment
J-1-1	Alignment Tape	FL8A	Head Adjustment of Audio Control Head
J-1-2	Alignment Tape	FL8N (2Head only) FL8NW (4Head only)	Azimuth and X Value Adjustment of Audio Control Head / Adjustment of Envelope Waveform
J-2	Guide Roller Adj.Screwdriver	FSJ-0006	Guide Roller
J-3	Mirror	FSJ-0004	Tape Transportation Check
J-4	Azimuth Adj.Screwdriver +	Available Locally	A/C Head Height
J-5	X Value Adj.Screwdriver -	Available Locally	X Value

Note:

Before starting any adjustment, take the Deck Assembly out of the cabinet and use J-6 to connect the Deck Assembly with the Main CBA.

MECHANICAL ALIGNMENT PROCEDURES

Explanation of alignment for the tape to correctly run starts on the next page. Refer to the information below on this page if a tape gets stuck, for example, in the mechanism due to some electrical trouble of the unit.

Service Information

A. Method for Manual Tape Loading/Unloading

To load a cassette tape manually:



1. Disconnect the AC plug.
2. Remove the Top Case and Front Assembly.
3. Insert a cassette tape. Though the tape will not be automatically loaded, make sure that the cassette tape is all the way in at the inlet of the Cassette Holder. To confirm this, lightly push the cassette tape further in and see if the tape comes back out, by a spring motion, just as much as you have pushed in.
4. Turn the LDG Belt in the appropriate direction shown in Fig. M1 for a minute or two to complete this task.

To unload a cassette tape manually:

1. Disconnect the AC plug.
2. Remove the Top Case and Front Assembly.
3. Make sure that the Moving guide preparations are in the Eject Position.
4. Turn the LDG Belt in the appropriate direction shown in Fig. M1 until the Moving guide preparations come to the Eject Position. Stop turning when the preparations begin clicking or can not be moved further. However, the tape will be left wound around the cylinder.
5. Turn the LDG Belt in the appropriate direction continuously, and the cassette tape will be ejected. Allow a minute or two to complete this task.

B. Method to place the Cassette Holder in the tape-loaded position without a cassette tape

1. Disconnect the AC Plug.
2. Remove the Top Case and Front Assembly.
3. Turn the LDG Belt in the appropriate direction shown in Fig. M1. Release the locking tabs shown in Fig. M1 and continue turning the LDG Belt until the Cassette Holder comes to the tape-loaded position. Allow a minute or two to complete this task.

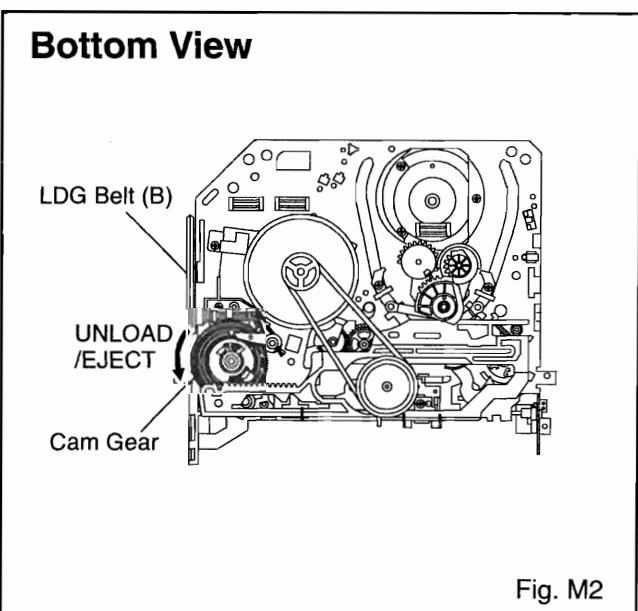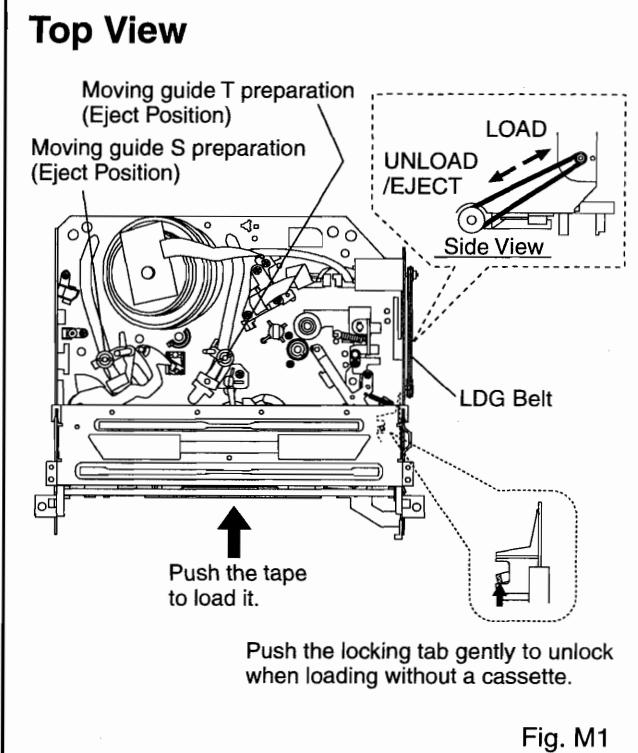

1. Tape Interchangeability Alignment

Note:


To do these alignment procedures, make sure that the Tracking Control Circuit is set to the center position every time a tape is loaded or unloaded. (Refer to page 2-3-4, procedure 1-C, step 2.)

Equipment required:

Dual Trace Oscilloscope
VHS Alignment Tape (FL8NW)
Guide Roller Adj. Screwdriver
X-Value Adj. Screwdriver

Note: Before starting this Mechanical Alignment, do all Electrical Adjustment procedures.

Flowchart of Alignment for tape traveling

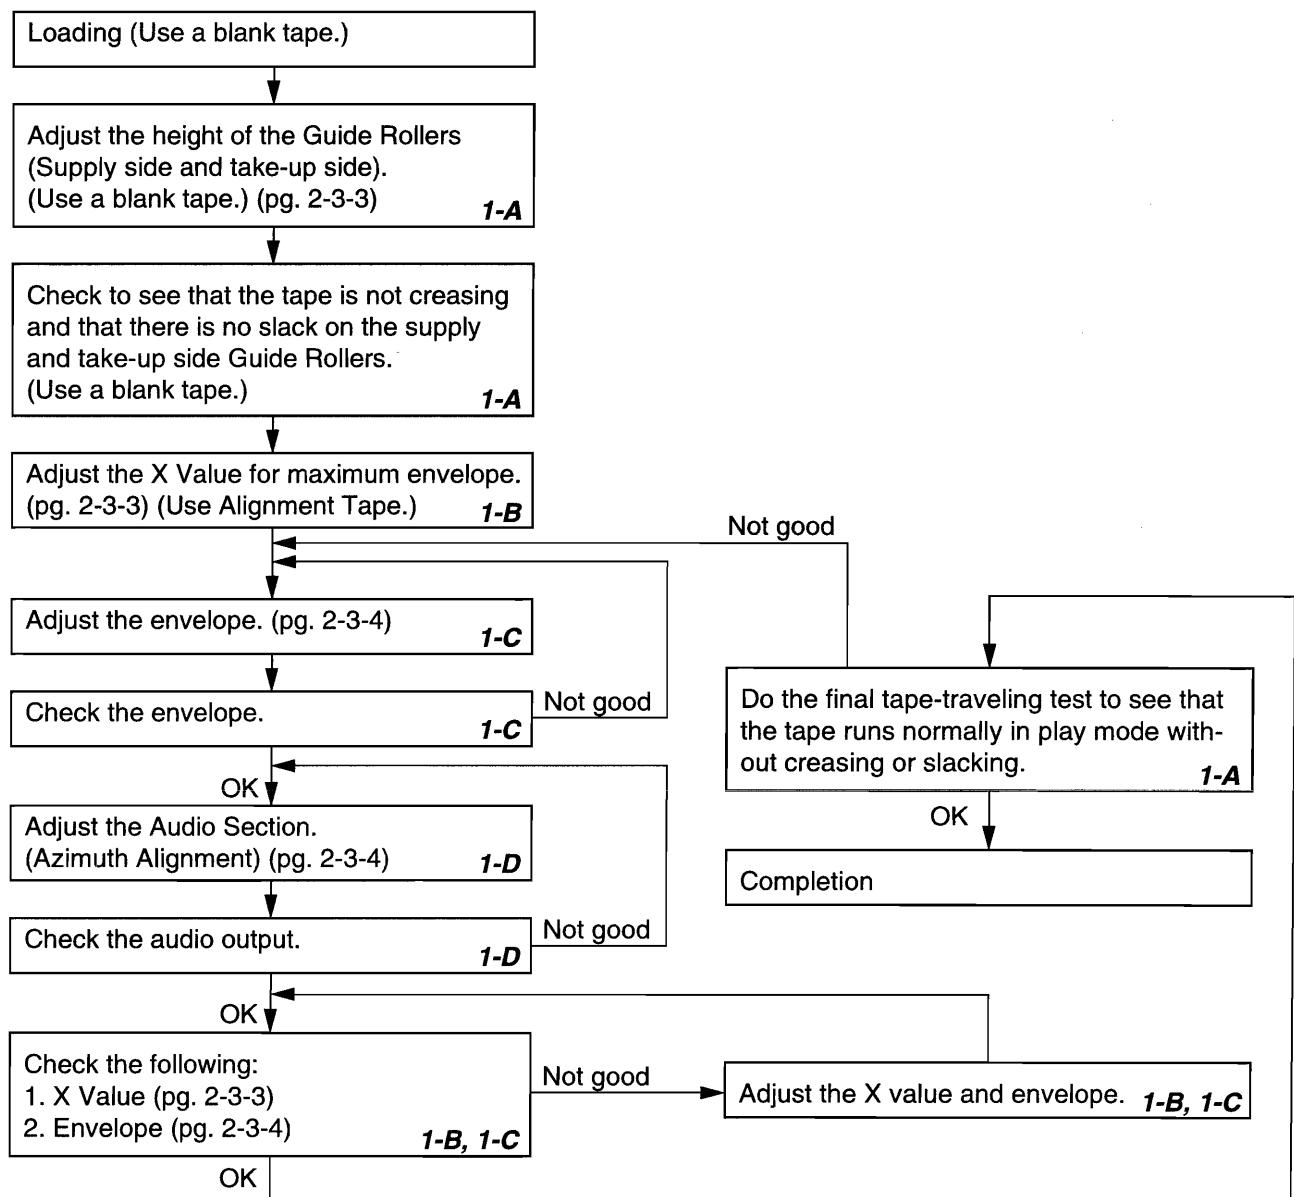

1-A. Preliminary/Final Checking and Alignment of Tape Path

Purpose:

To make sure that the tape path is well stabilized.

Symptom of Misalignment:

If the tape path is unstable, the tape will be damaged.
Note: Do not use an Alignment Tape for this procedure.
If the unit is not correctly aligned, the tape may be damaged.

1. Play back a blank cassette tape and check to see that the tape runs without creasing at Guide Rollers [2] and [3], and at points A and B on the lead surface. (Refer to Fig M3 and M4.)
2. If creasing is apparent, align the height of the guide rollers by turning the top of Guide Rollers [2] and [3] with a Guide Roller Adj. Screwdriver. (Refer to Fig. M3 and M5.)

Note: Beneath each Guide Roller, there is a small screw. (Refer to Fig. M5.) This screw works

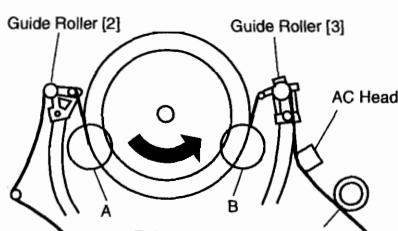


Fig. M3

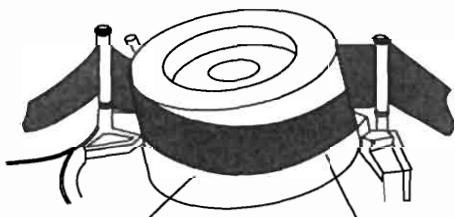


Fig. M4

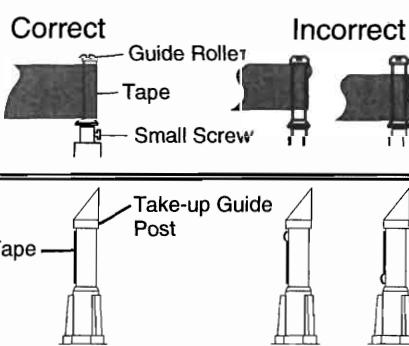


Fig. M5

to apply adequate torque to the shaft of each Guide Roller so that the Guide Roller turns properly. Even when adjusting the height of the Guide Roller(s), do not touch these two small screws.

3. Check to see that the tape runs without creasing at Take-up Guide Post [4] or without snaking between Guide Roller [3] and AC Head. (Fig. M3 and M5)
4. If creasing or snaking is apparent, adjust the Tilt Adj. Screw of the AC Head. (Fig. M6)

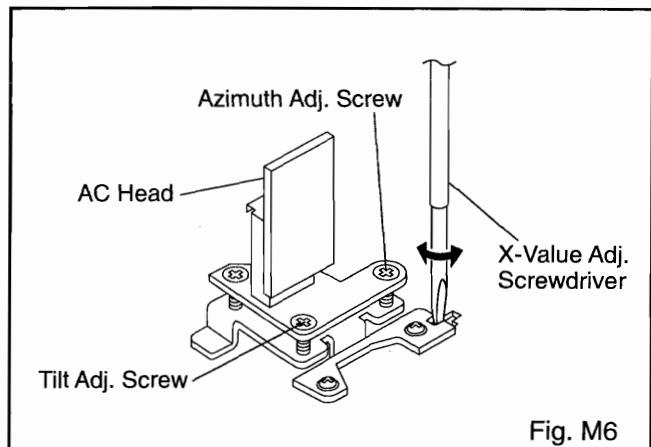


Fig. M6

1-B. X Value Alignment

Purpose:

To align the Horizontal Position of the Audio/Control/Erase Head.

Symptom of Misalignment:

If the Horizontal Position of the Audio/Control/Erase Head is not properly aligned, maximum envelope cannot be obtained at the Neutral position of the Tracking Control Circuit.

1. Connect the oscilloscope to TP301 (C-PB) and TP303 (CTL) on the Main CBA. Use TP302 (RF-SW) as a trigger.
2. Play back the Gray Scale of the Alignment Tape (FL8NW) and confirm that the PB FM signal is present.
3. Set the Tracking Control Circuit to the center position by pressing the CH UP button then the PLAY button on the VCR. (Refer to note on bottom of page 2-3-4.)
4. Use the X-Value Adj. Screwdriver so that the PB FM signal at TP301 (C-PB) is maximum. (Fig. M6)
5. Press CH UP button on the VCR until the CTL waveform has shifted by approx. +2msec. Make sure that the envelope is simply attenuated (shrinks in height) during this process so that you will know the envelope has been at its peak.

6. Press CH DOWN button on the VCR until the CTL waveform has shifted from its original position (not the position achieved in step 5, but the position of CTL waveform in step 4) by approximately -2msec. Make sure that the envelope is simply attenuated (shrinks in height) once CTL waveform passes its original position and is further brought in the minus direction.
7. Set the Tracking Control Circuit to the center position by pressing the CH UP button and then the PLAY button on the VCR.

1-C. Checking/Adjustment of Envelope Waveform

Purpose:

To achieve a satisfactory picture and precise tracking.

Symptom of Misalignment:

If the envelope output is poor, noise will appear in the picture. The tracking will then lose precision and the playback picture will be distorted by any slight variation of the Tracking Control Circuit.

1. Connect the oscilloscope to TP301 (C-PB) on the Main CBA. Use TP302 (RF-SW) as a trigger.
2. Play back the Gray Scale on the Alignment Tape (FL8NW). Set the Tracking Control Circuit to the center position by pressing the CH UP and then the PLAY button on the VCR. Adjust the height of Guide Rollers [2] and [3] (Fig. M3, Page 2-3-3) watching the oscilloscope display so that the envelope becomes as flat as possible. To do this adjustment, turn the top of the Guide Roller with the Guide Roller Adj. Screwdriver.
3. If the envelope is as shown in Fig. M7, adjust the height of Guide Roller [2] (Refer to Fig. M3) so that the waveform looks like the one shown in Fig. M9.
4. If the envelope is as shown in Fig. M8, adjust the height of Guide Roller [3] (Refer to Fig. M3) so that the waveform looks like the one shown in Fig. M9.
5. When Guide Rollers [2] and [3] (Refer to Fig. M3) are aligned properly, there is no envelope drop either at the beginning or end of track as shown in Fig. M9.

Note: Upon completion of the adjustment of Guide Rollers [2] and [3] (Refer to Fig. M3), check the X Value by pushing the CH UP or DOWN buttons alternately, to check the symmetry of the envelope. Check the number of pushes to ensure center position. The number of pushes UP to achieve 1/2 level of envelope should match the number of pushes DOWN from center. If required, redo the "X Value Alignment."

1-D. Azimuth Alignment of Audio/Control/Erase Head

Purpose:

To correct the Azimuth alignment so that the Audio/Control/Erase Head meets tape tracks properly.

Symptom of Misalignment:

If the position of the Audio/Control/Erase Head is not properly aligned, the Audio S/N Ratio or Frequency Response will be poor.

1. Connect the oscilloscope to the audio output jack on the rear side of the deck.
2. Play back the alignment tape (FL8NW) and confirm that the audio signal output level is 8 kHz.
3. Adjust Azimuth Adj. Screw so that the output level on the AC Voltmeter or the waveform on the oscilloscope is at maximum. (Fig. M6)

Dropping envelope level at the beginning of track.



Fig. M7

Dropping envelope level at the end of track.

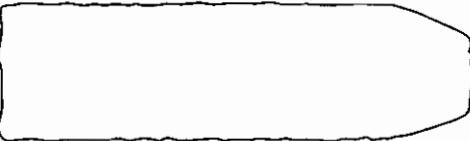


Fig. M8

Envelope is adjusted properly. (No envelope drop)

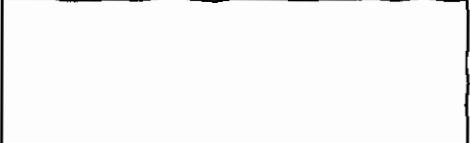


Fig. M9

DISASSEMBLY/ASSEMBLY PROCEDURES OF DECK MECHANISM

Before following the procedures described below, be sure to remove the deck assembly from the cabinet. (Refer to CABINET DISASSEMBLY INSTRUCTIONS on page 1-6-1.)

All the following procedures, including those for adjustment and replacement of parts, should be done in Eject mode; see the positions of [45] and [46] in Fig. DM1 on page 2-4-3. When reassembling, follow the steps in reverse order.

STEP/ LOC. No.	START- ING No.	PART	REMOVAL		INSTALLATION ADJUSTMENT CONDITION
			Fig. No.	REMOVE/*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	
[1]	[1]	Top Plate	T	DM3	2(S-1), *2(L-1)
[2]	[1]	Cassette Holder Assembly	T	DM4	
[3]	[2]	Slider L	T	DM5	(S-2)
[4]	[2]	Slider R	T	DM5	(S-3)
[5]	[4]	Lock Lever	T	DM5	(S-4), *(P-1)
[6]	[2]	Cassette Plate	T	DM5	
[7]	[7]	Cylinder Assembly	T	DM1, DM6	3(S-4), VH Connector A and B, ACH Connector AN(6P) and B(6P)
[8]	[8]	Loading Motor Assembly	T	DM1, DM7	2(S-6), (S-7), LDG Belt, ACH Connector AN(9P) and 9B
[9]	[1]	Tape Guide Assembly	T	DM1, DM8	*(P-2), (C-8)
[10]	[1]	Door Opener B	T	DM1, DM8	(S-8), *(L-2)
[11]	[10]	Pinch Arm (B) Assembly	T	DM1, DM8	*(P-3)
[12]	[11]	Pinch Arm (A) Assembly	T	DM1, DM8	
[13]	[13]	FE Head	T	DM1, DM9	(S-9)
[14]	[14]	TG Post Assembly	T	DM1, DM9	*(L-3)
[15]	[15]	First Post Assembly	T	DM1, DM9	(S-10)
[16]	[16]	Prism	T	DM1, DM9	(S-11)
[17]	[17]	Standard Post	T	DM1, DM9	*(L-4)
[18]	[1]	Slider Shaft	T	DM10	(S-12)
[19]	[18]	C Drive Lever L	T	DM10	
[20]	[18]	C Drive Lever R	T	DM10	
[21]	[9]	Radiator Plate	B	DM2, DM11	(S-13)
[22]	[21]	Capstan Motor	B	DM2, DM11	3(S-14), Cap Belt
[23]	[23]	FF Arm Holder	B	DM2, DM12	(S-15)
[24]	[23]	Clutch Assembly	B	DM2, DM12	(C-1)
[25]	[23]	FF Arm	B	DM2, DM12	
[26a]	[26a]	Cam Holder	B	DM2, DM13	(C-2)
[26b]	[26a]	F Brake Assembly]	B	DM2, DM13	
[27]	[26]	Cam Gear (B)	B	DM2, DM13	(C-3), *(P-4)
[28]	[28]	Mode Gear	B	DM2, DM14	(C-4)
[29]	[28]	Mode Lever	B	DM2, DM14	(C-5)
[30]	[29]	Cam Gear (A)	B	DM2, DM14	
[31]	[30]	Pully Assembly	B	DM2, DM14	

STEP /LOC. No.	START- ING No.	PART	REMOVAL		INSTALLATION ADJUSTMENT CONDITION
			Fig. No.	REMOVE/*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	
[32]	[31]	Worm Holder	B	DM2, DM14 (S-16)	
[33]	[29]	Sensor Gear	B	DM1, DM15 (C-6)	
[34]	[29]	Idler Assembly	B	DM1, DM15	
[35]	[29]	BT Arm	B	DM2, DM15 *(P-5)	
[36]	[29]	Loading Arm S Assembly	B	DM2, DM15	(+) Refer to Alignment Sec. Pg. 2-4-9
[37]	[36]	Loading Arm T Assembly	B	DM2, DM15	(+) Refer to Alignment Sec. Pg. 2-4-9
[38]	[29]	M Brake T Assembly	T	DM1, DM16 *(P-6)	
[39]	[39]	M Brake S Assembly	T	DM1, DM16 *(P-7)	
[40]	[39]	Tension Lever Sub Assembly	T	DM1, DM16 *(P-8), (C-9)	
[41]	[40]	T Lever Holder	T	DM1, DM16 *(L-5)	
[42]	[2]	M Gear	T	DM1, DM16 (C-7)	
[43]	[38]	Reel T	T	DM1, DM16 Poly Slider Washer	
[44]	[40]	Reel S	T	DM1, DM16 Poly Slider Washer	
[45]	[44]	Moving Guide S Preparation	T	DM1, DM17 (S-17), Slide Holder S	
[46]	[37]	Moving Guide T Preparation	T	DM1, DM17 (S-18), Slide Holder T	
[47]	[30]	Rack Assembly	R	DM18	(+) Refer to Alignment Sec. Pg. 2-4-10
[48]	[47]	F Door Opener A	R	DM18 *(P-9)	
[49]	[49]	Cleaner Lever Assembly	T	DM1, DM6	
[50]	[49]	CL Post	T	DM1, DM6 *(L-6)	

↓ ↓ ↓ ↓ ↓ ↓ ↓
 ① ② ③ ④ ⑤ ⑥ ⑦

- ①: Follow steps in sequence. When reassembling, follow the steps in reverse order. These numbers are also used as Identification (location) No. of parts in the figures.
- ②: Indicates the part to start disassembling with in order to disassemble the part in column (1).
- ③: Name of the part
- ④: Location of the part: T=Top B=Bottom R=Right L=Left
- ⑤: Figure Number
- ⑥: Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered. P=Spring, W=Washer, C=Cut Washer, S=Screw, *=Unhook, Unlock, Release, Unplug, or Desolder e.g., 2(L-2) = two Locking Tabs (L-2).
- ⑦: Adjustment Information for Installation
(+): Refer to Deck Exploded Views for lubrication.

Top View

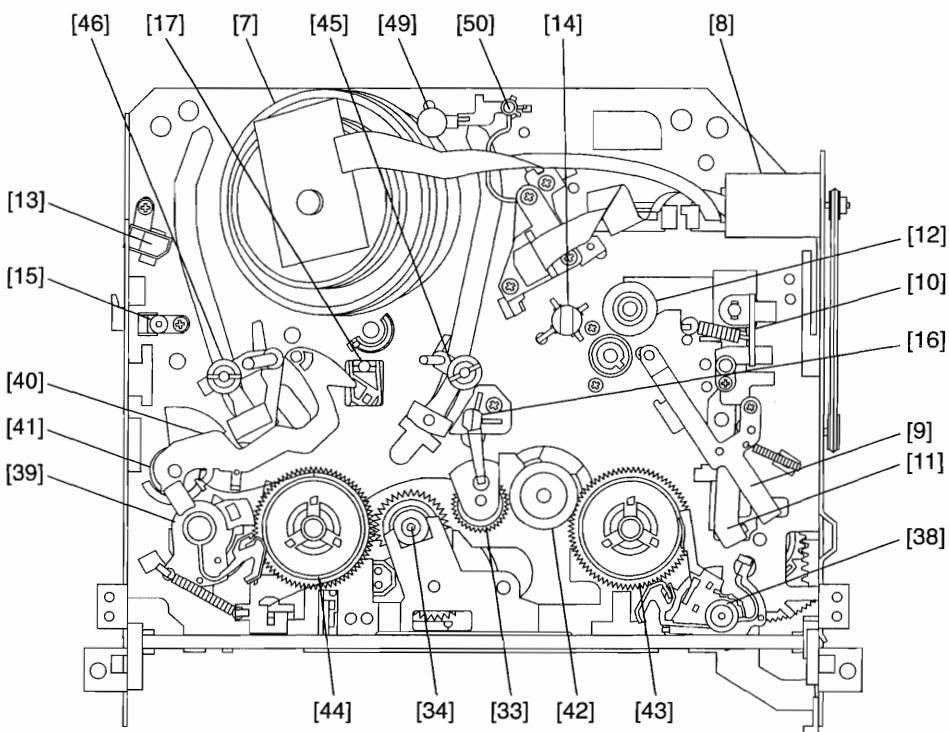


Fig. DM1

Bottom View

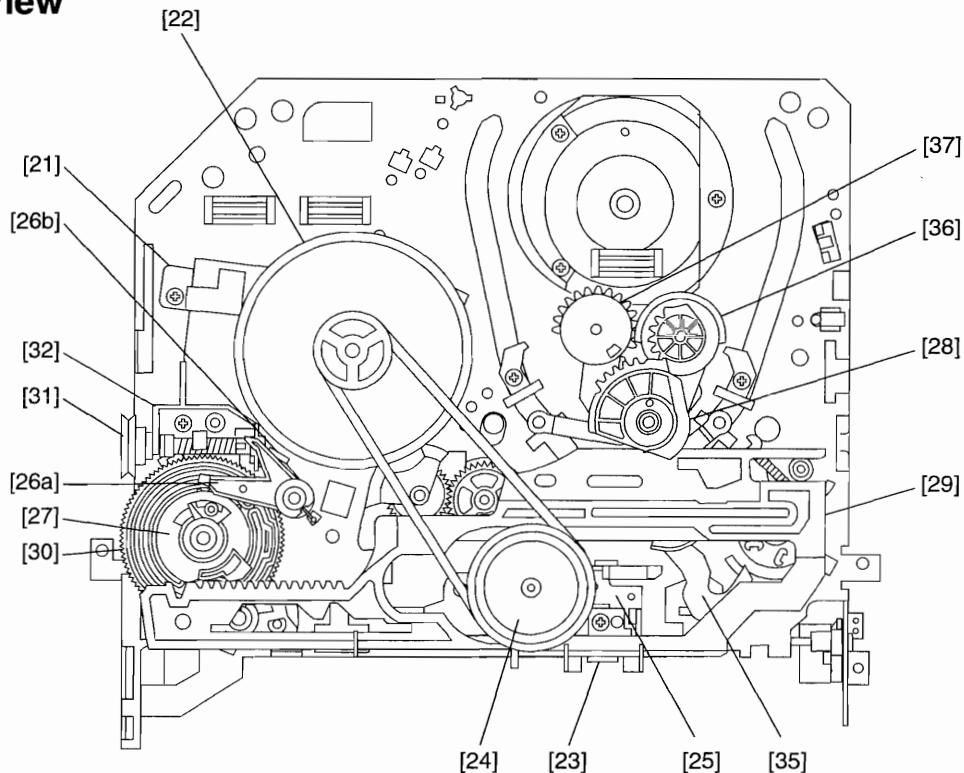


Fig. DM2

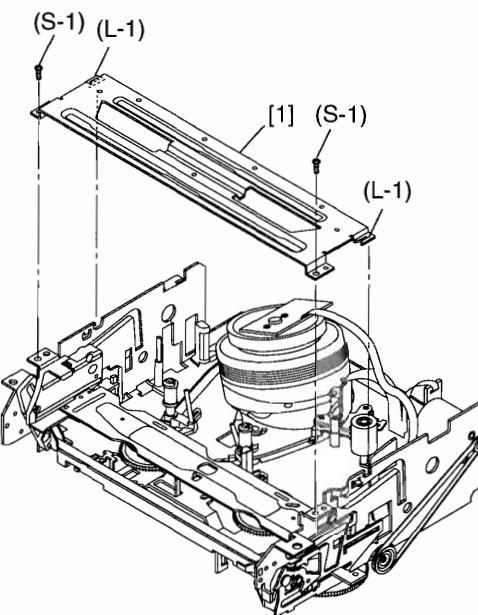


Fig. DM3


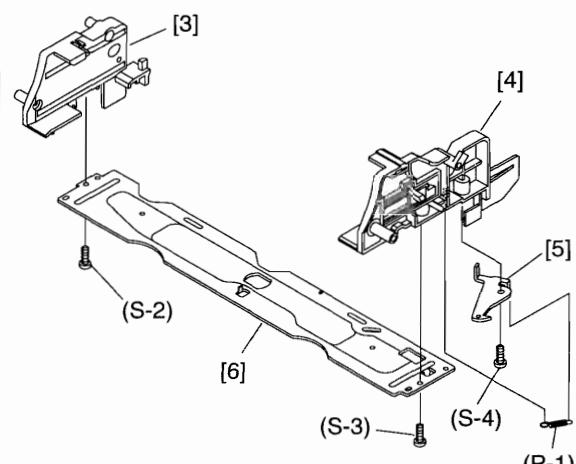


Fig. DM5

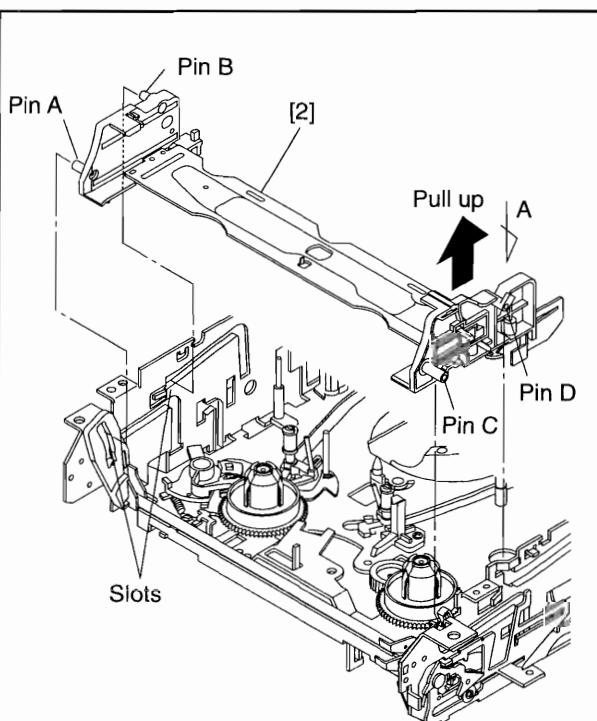

First, insert Pin A and Pin B on the Cassette Holder Assembly into the slots as shown. Then, while pushing the locking tab as shown in the right, pull up the right side on the Cassette Holder Assembly to release Pin C and Pin D.

Locking tab View for A

Fig. DM4

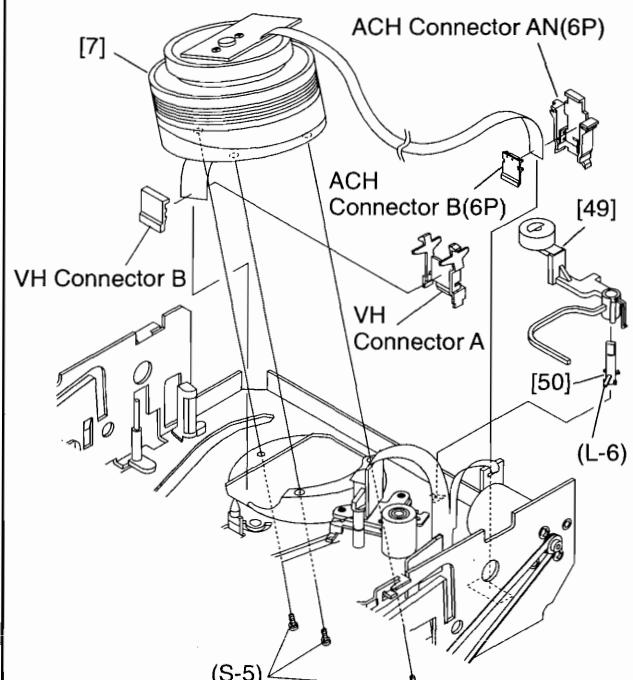


Fig. DM6

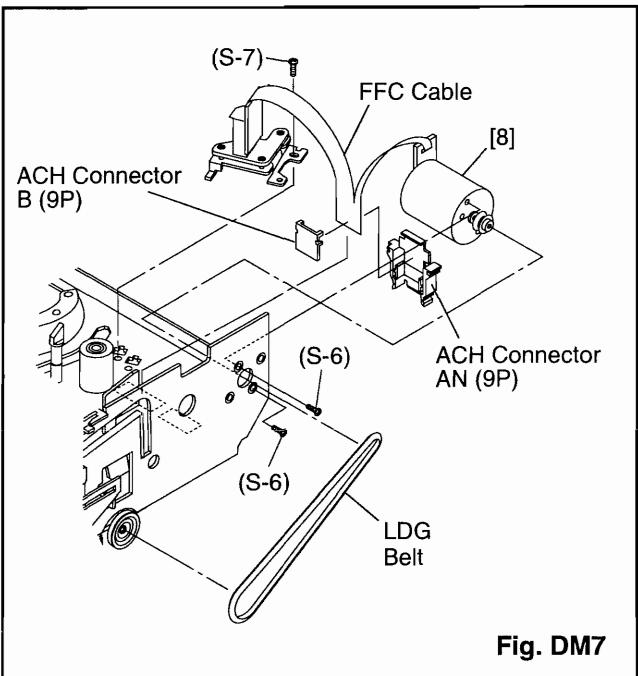


Fig. DM7

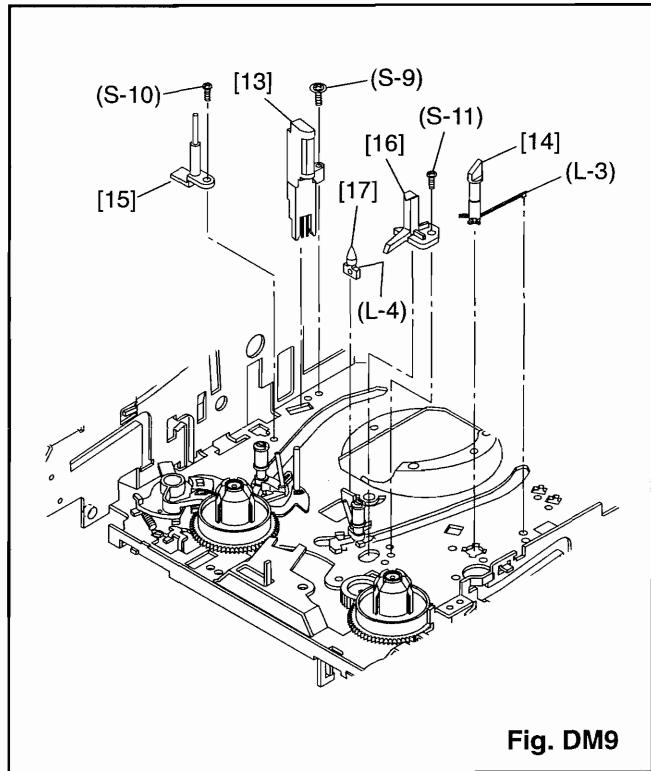


Fig. DM9

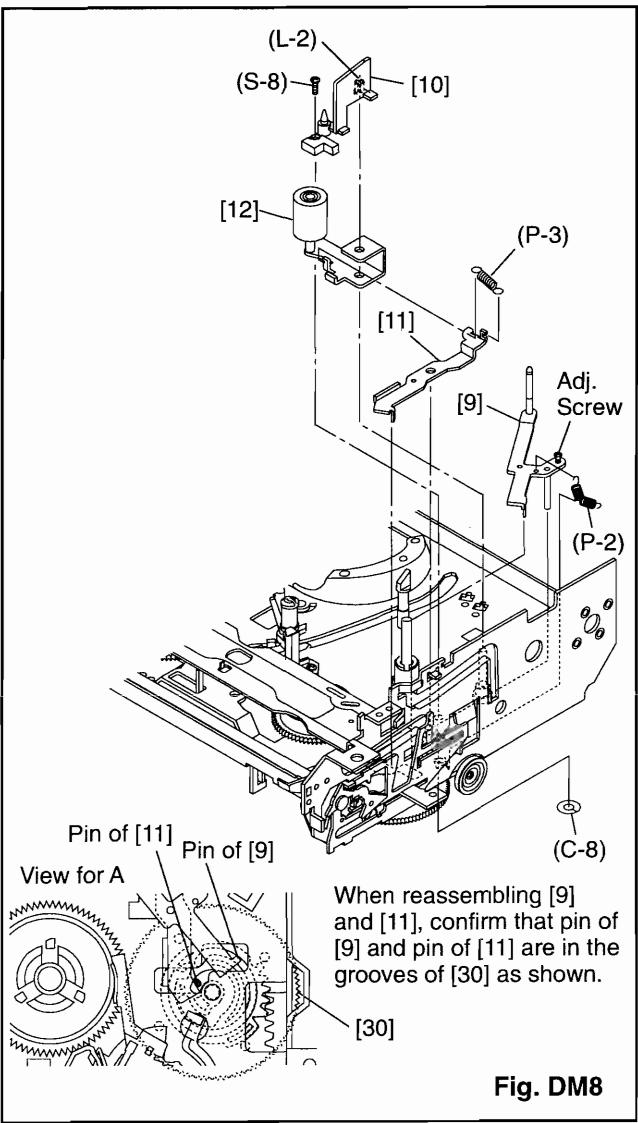


Fig. DM8





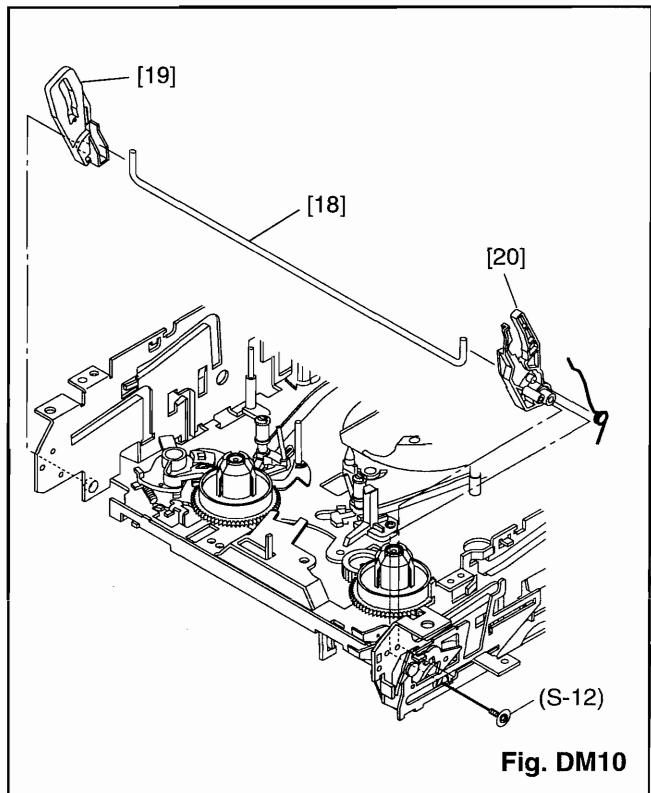


Fig. DM10

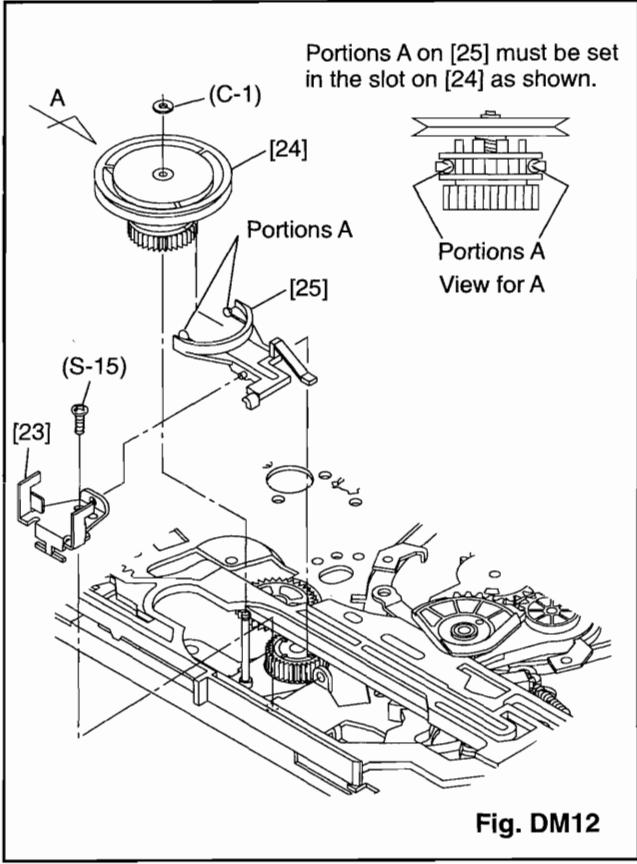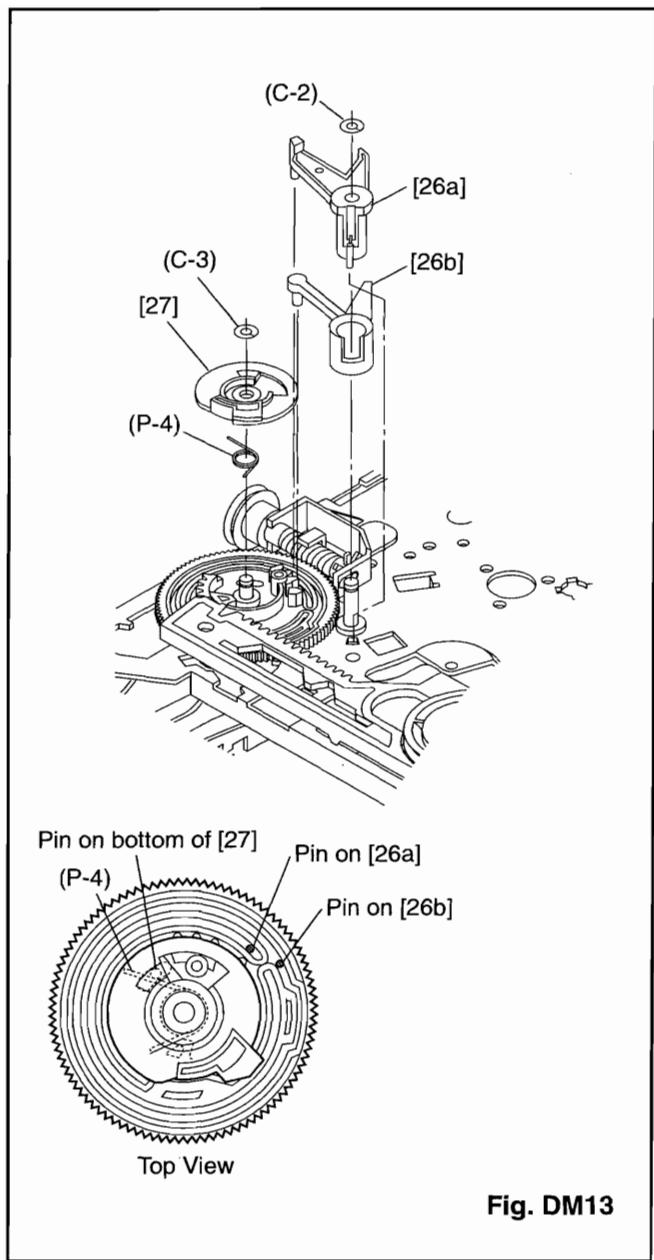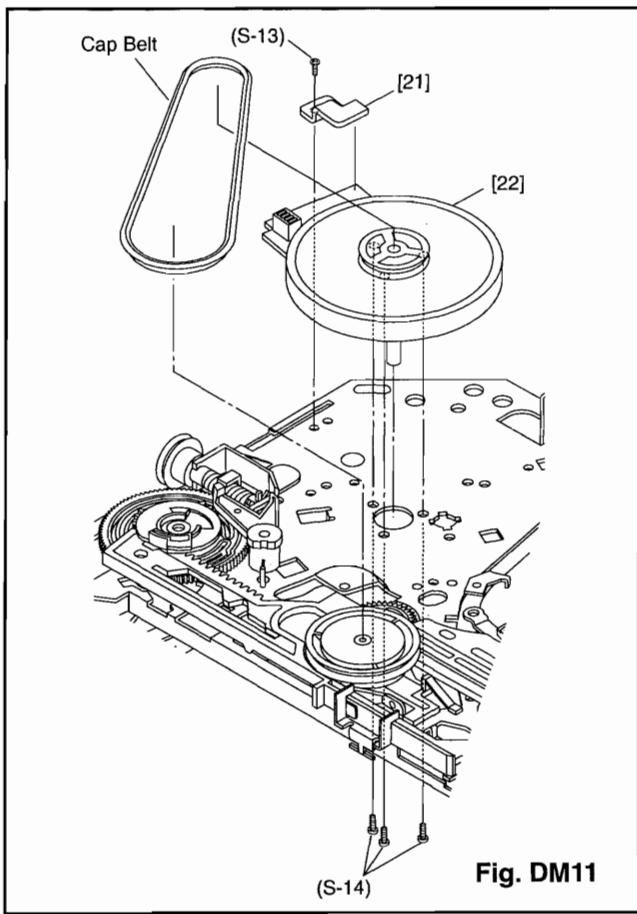

When reassembling [30], confirm that the hole on [30] is in the correct position as shown.

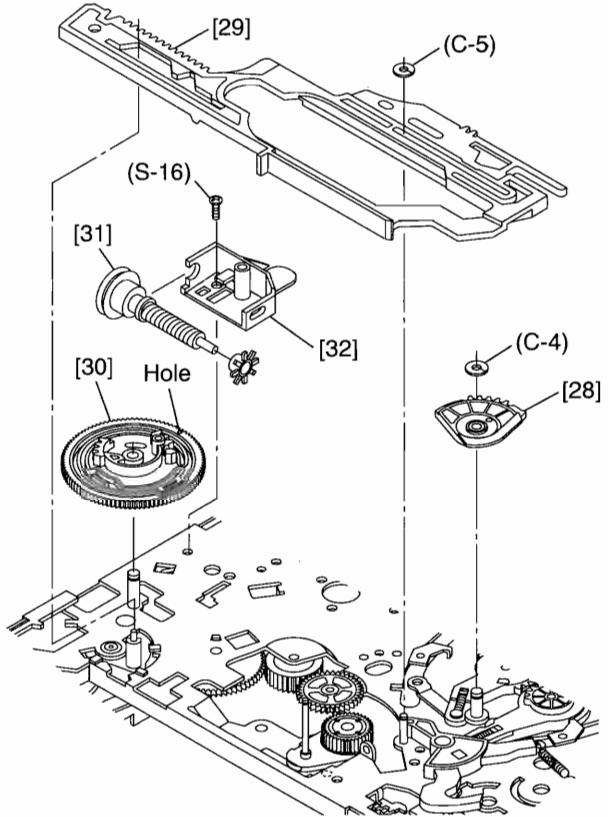

Position of Mode Lever when installed

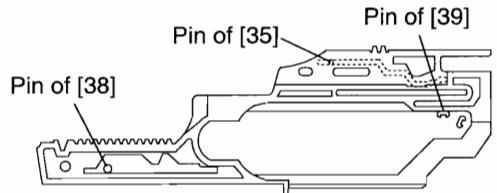


Fig. DM14

Refer to the Alignment Section, Page 2-4-9.

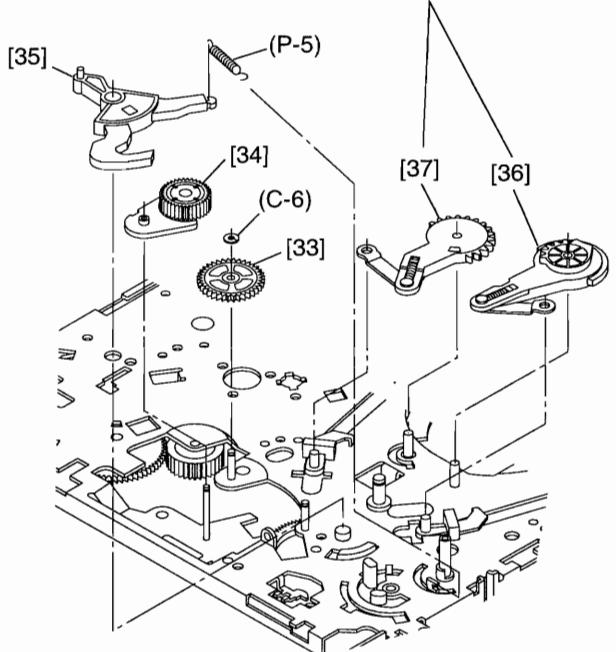


Fig. DM15

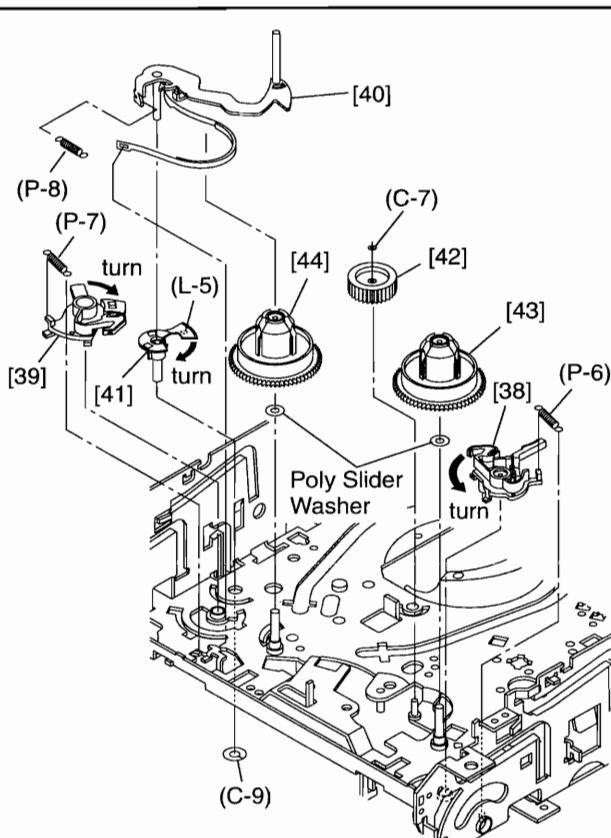


Fig. DM16

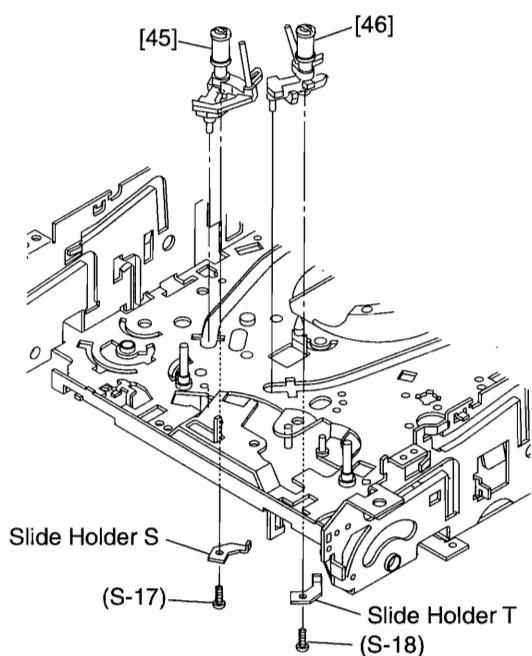


Fig. DM17

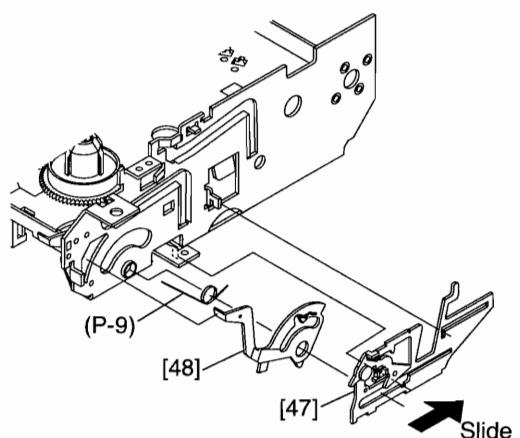


Fig. DM18

ALIGNMENT PROCEDURES OF MECHANISM


The following procedures describe how to align the individual gears and levers that make up the tape loading/unloading mechanism. Since information about the state of the mechanism is provided to the System Control Circuit only through the Mode Switch, it is essential that the correct relationship between individual gears and levers be maintained.

All alignments are to be performed with the mechanism in Eject mode, in the sequence given. Each procedure assumes that all previous procedures have been completed.

IMPORTANT:

If any one of these alignments is not performed properly, even if off by only one tooth, the unit will unload or stop and it may result in damage to the mechanical or electrical parts.

Alignment points in Eject Position

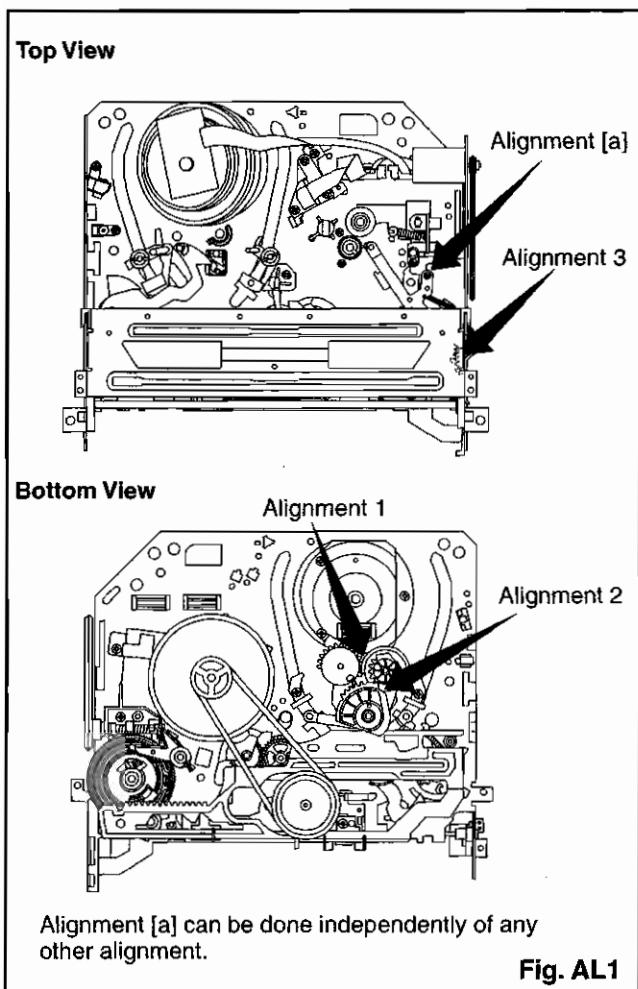

Alignment 1


Loading Arm, S and T Assembly

Install Loading Arm S and T Assembly so that their triangle marks point to each other as shown in Fig. AL2.

Alignment 2

Mode Gear


Keeping the two triangles pointing at each other, install the Loading Arm T Assembly so that the last tooth of the gear meets the most inside teeth of the Mode Gear. See Fig. AL2.

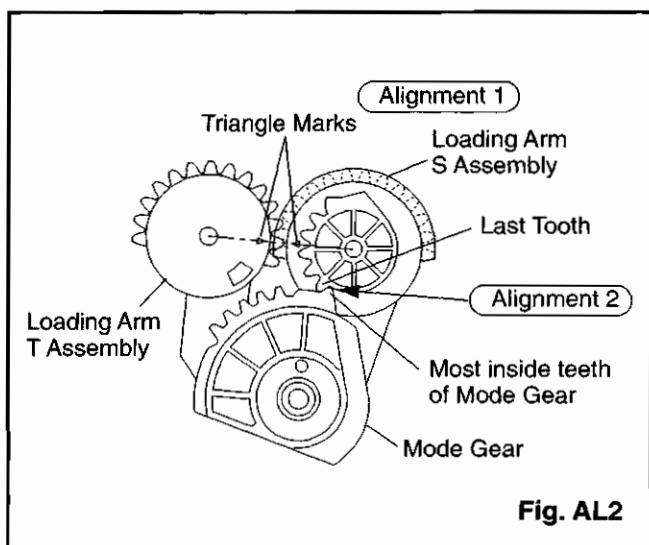

Alignment [a]

Tape Guide Assembly

Measurement of the screw must be as specified in Fig. AL3.

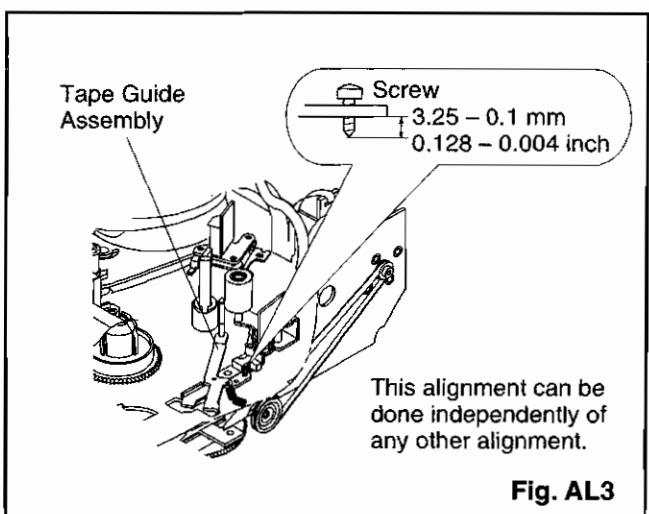

Alignment 3

Cam Gear (A), Rack Assembly

Install the Rack Assembly so that the first tooth on the gear of the Rack Assembly meets the first groove on the Cam Gear (A) as shown in Fig. AL4.

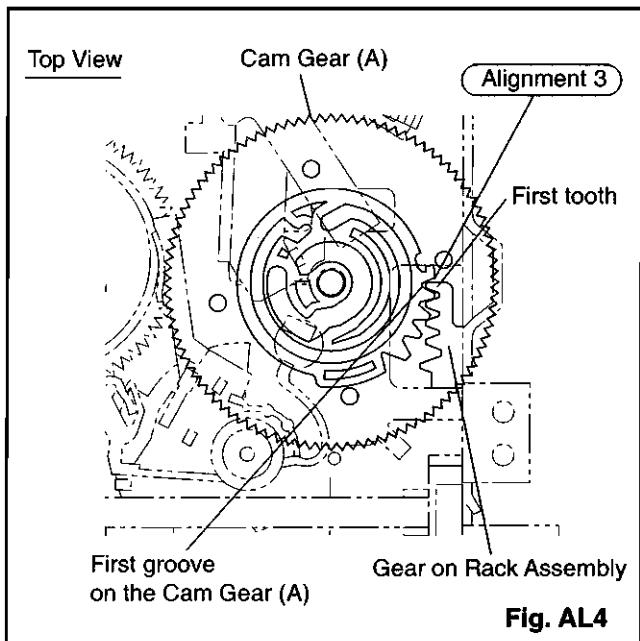


Fig. AL4

EXPLODED VIEWS AND PARTS LIST SECTION

VIDEO CASSETTE RECORDER

SL260B/6260VB/EWV601



**Sec. 3: Exploded views
and Parts List Section**
● Exploded views
● Parts List

TABLE OF CONTENTS

Exploded Views	3-1-1
Mechanical Parts List.....	3-2-1
Electrical Parts List	3-3-1
Deck Parts List.....	3-4-1

EXPLODED VIEWS


Front Panel

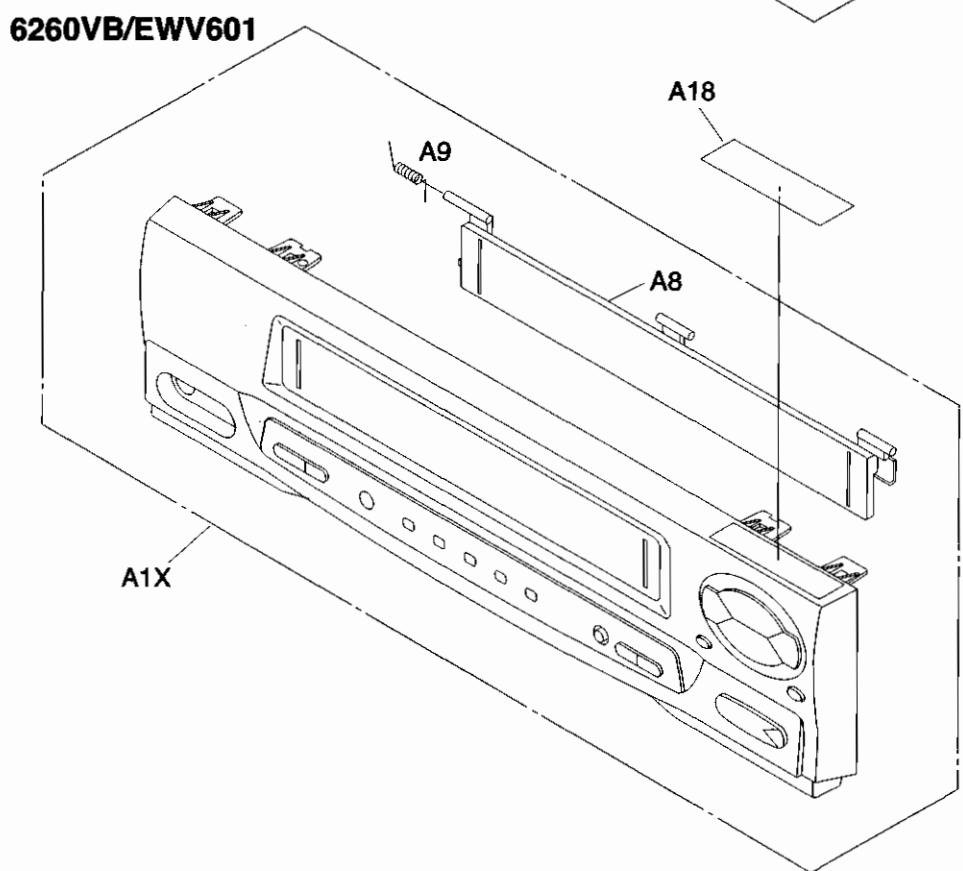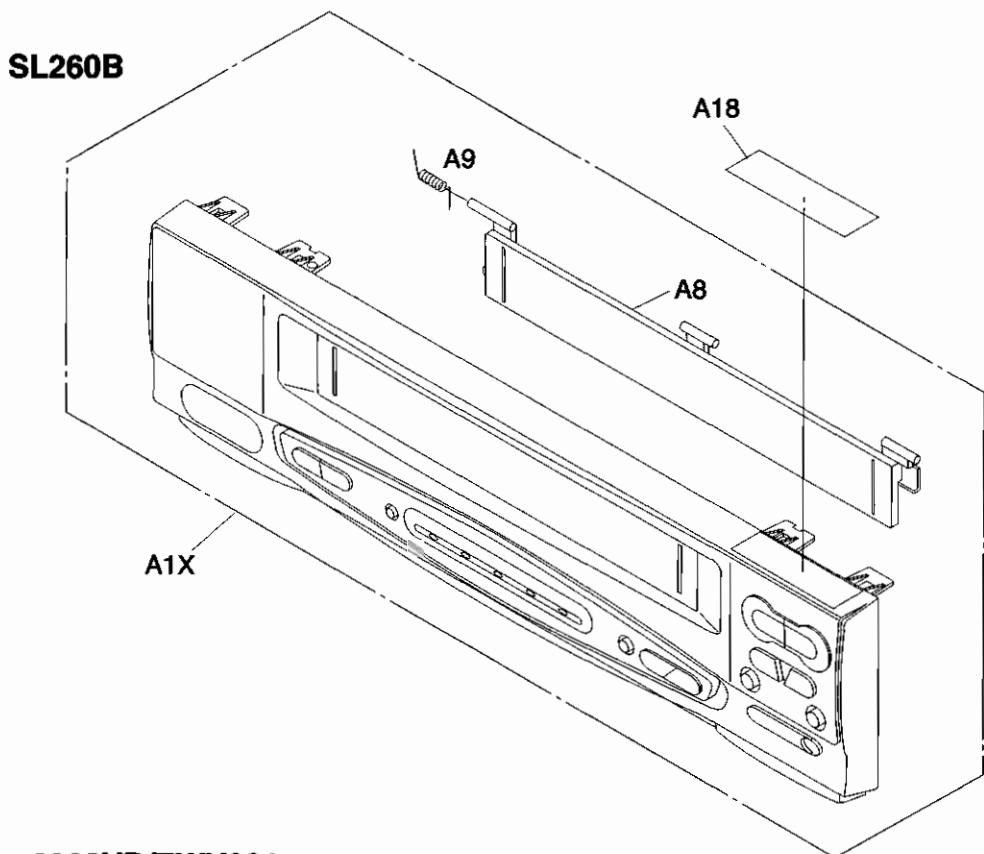

Cabinet


 See Electrical Parts List
for parts with this mark.

Some Ref. Numbers are
not in sequence.

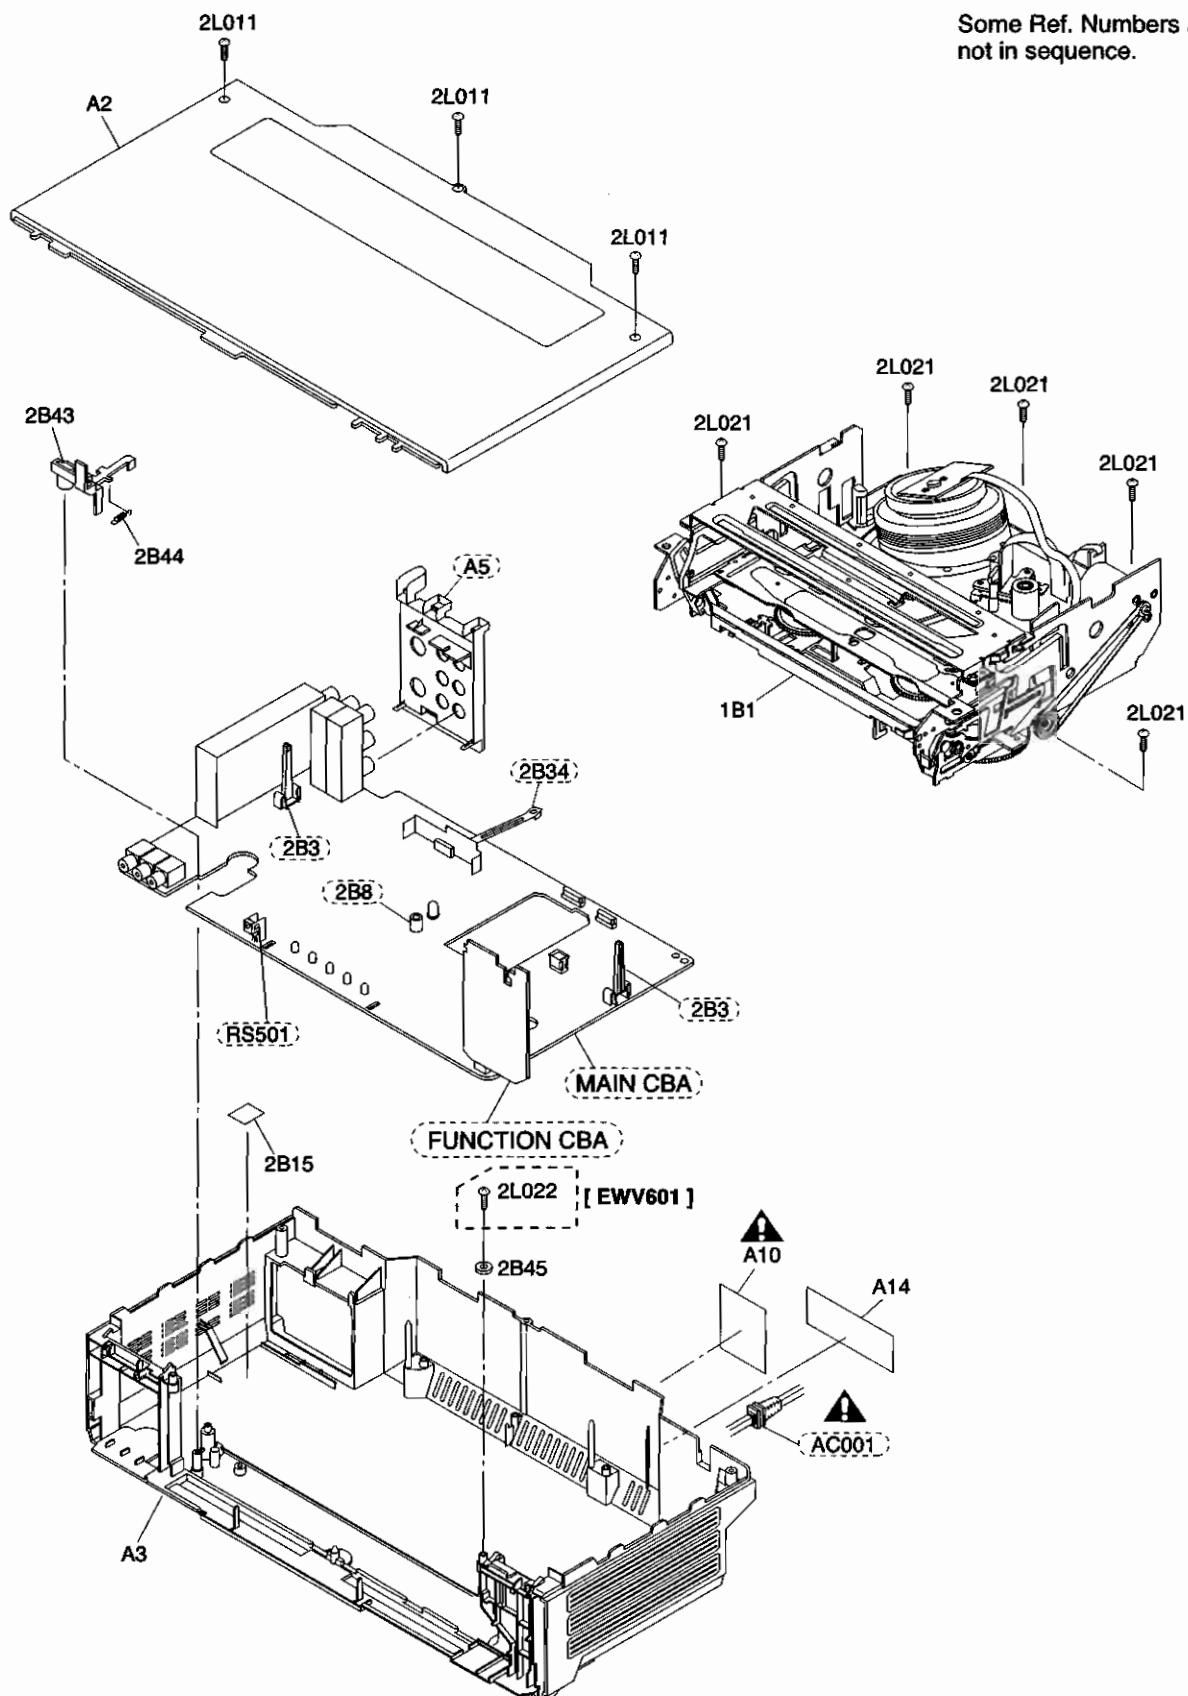


Packing

Some Ref. Numbers are not in sequence.

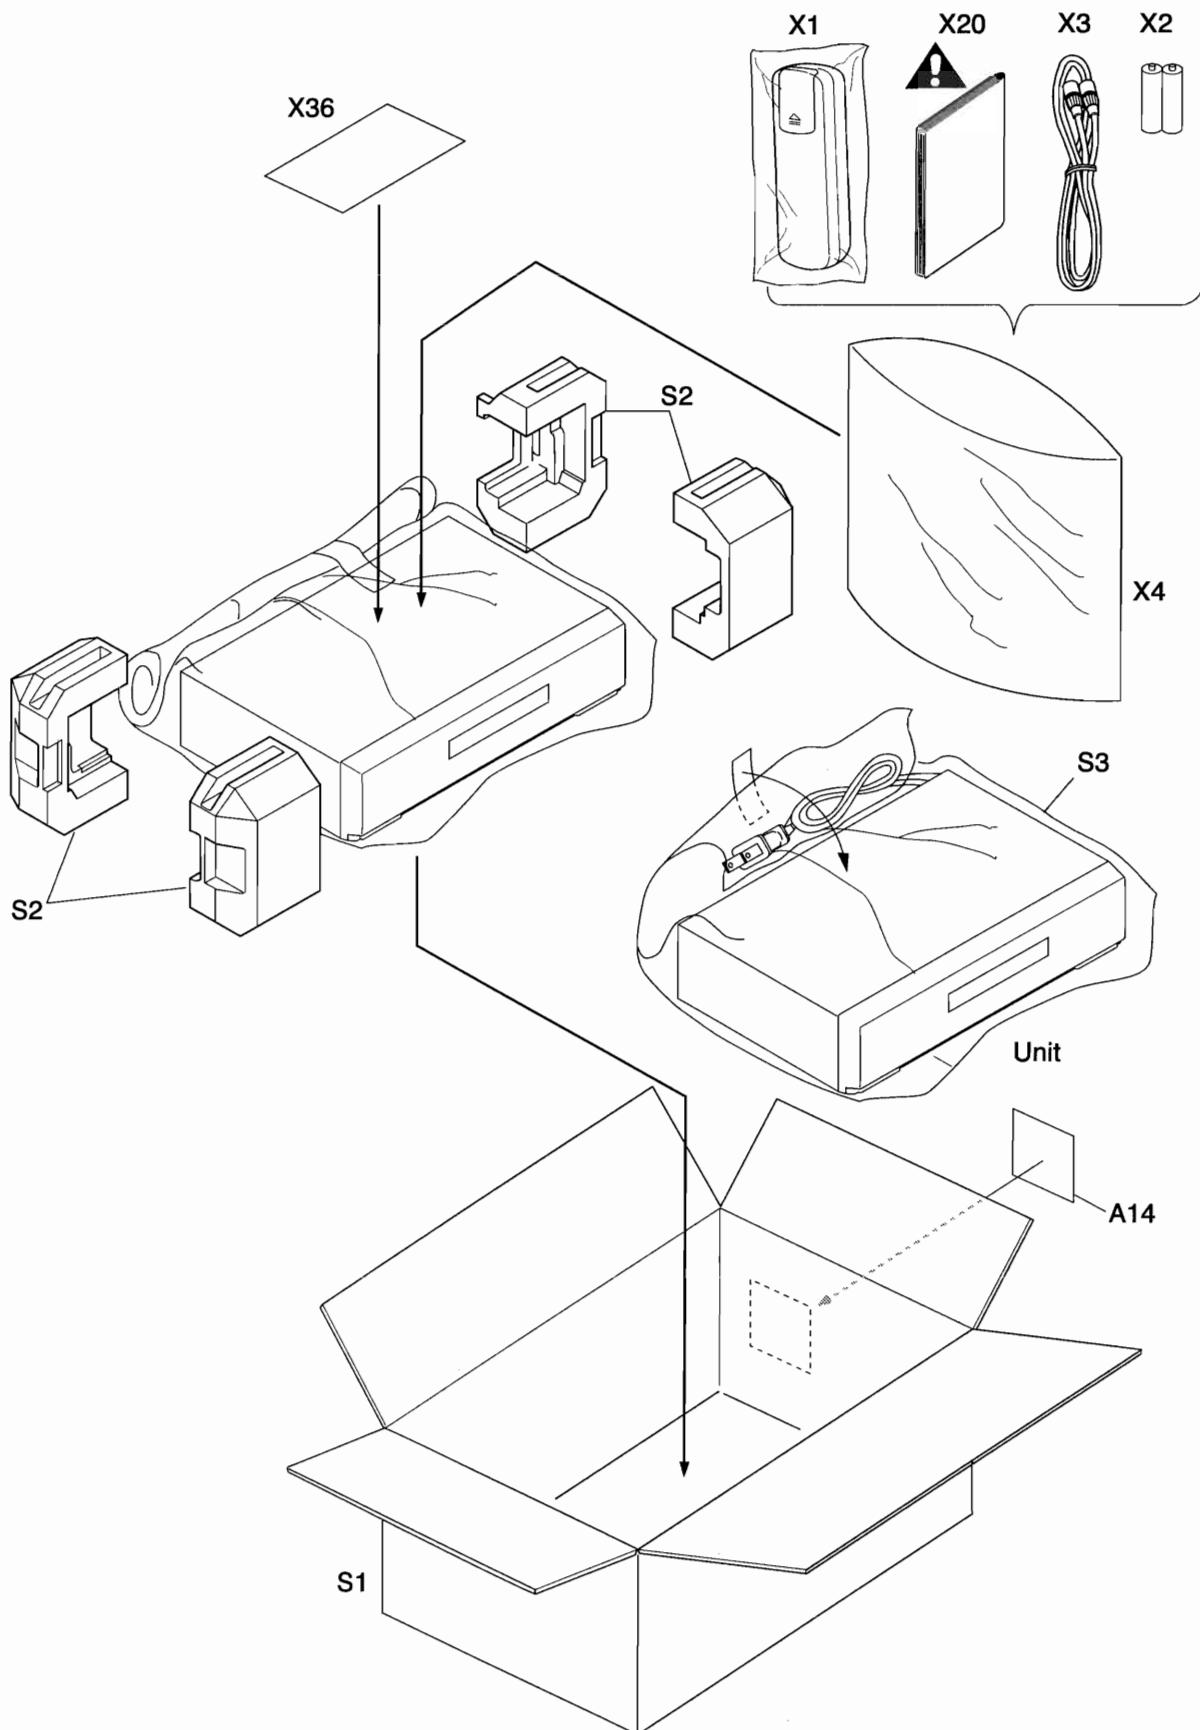

Deck Mechanism View 1

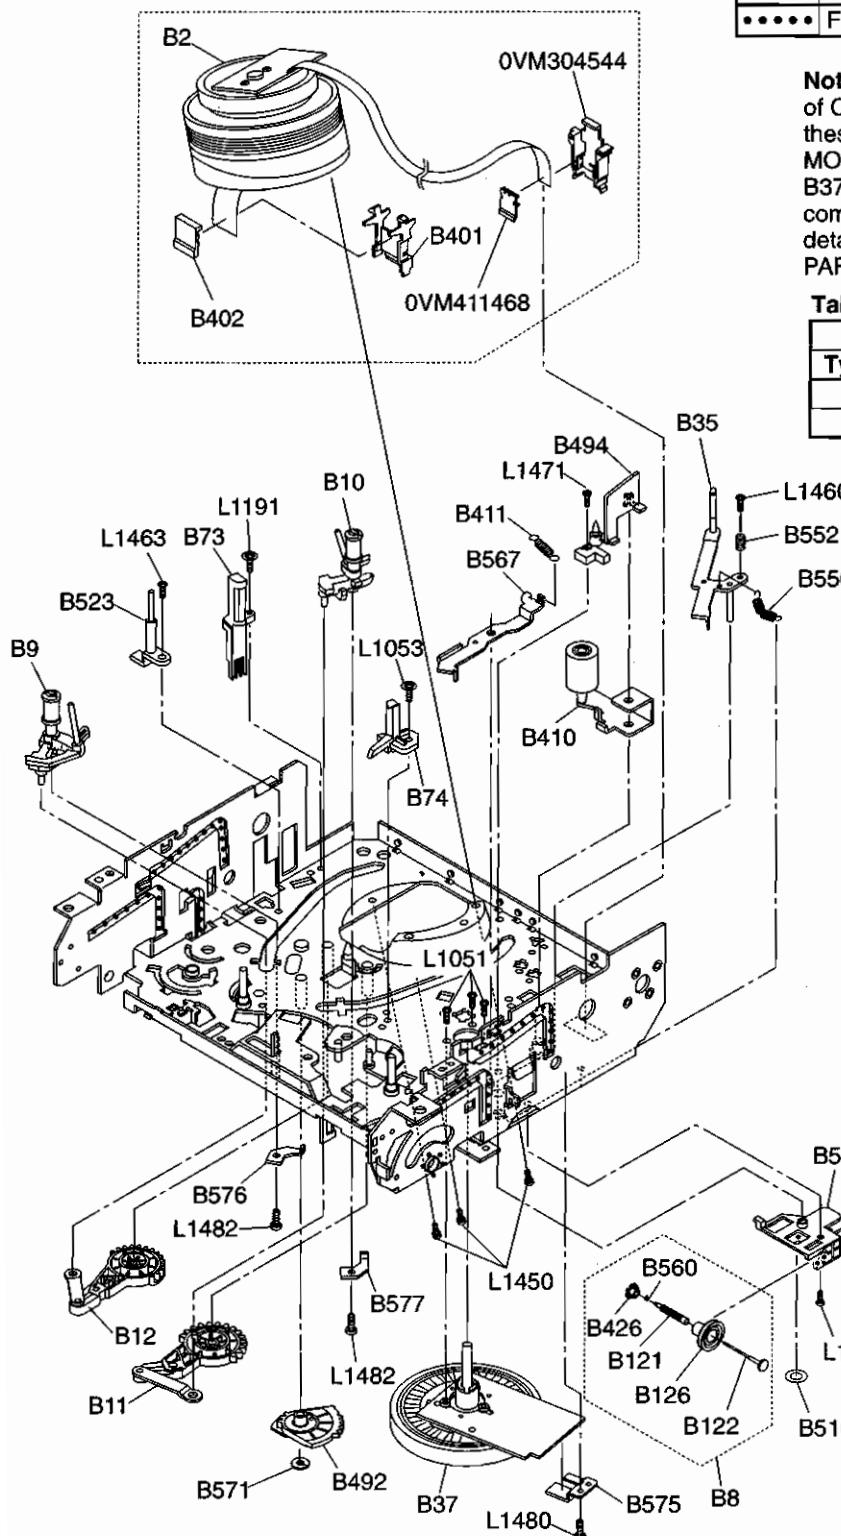


Mark	Description	Part No.
•••••	Foil G-374G (Blue grease)	0VZZ00109


Note: Two different, but interchangeable, types of Capstan Motor (B37) may be installed in these models. Please confirm B37 CAPSTAN MOTOR type by a part number on the rotor. B37 CAPSTAN MOTOR type varies in combination with L1051. Please see Table 1 for details and combination. (Refer to DECK PARTS LIST section on page 3-4-1.)

Table 1 (B37 and L1051 Combination)

B37 Capstan Motor		L1051
Type	ID No.	ID No.
A	N9640CML	GPMS9060
B	N9650CML	GPMB9060

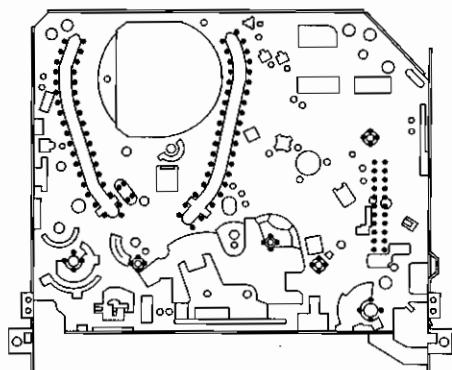

Chassis Assembly
Top View (Grease Point)

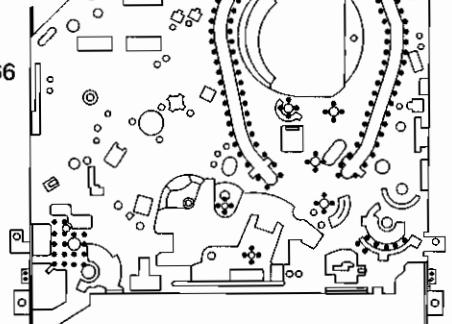


Chassis Assembly
Bottom View (Grease Point)

Some Ref. Numbers are not in sequence.

Deck Mechanism View 2


Mark	Description	Part No.
•••••	Foil G-374G (Blue grease)	0VZZ00109

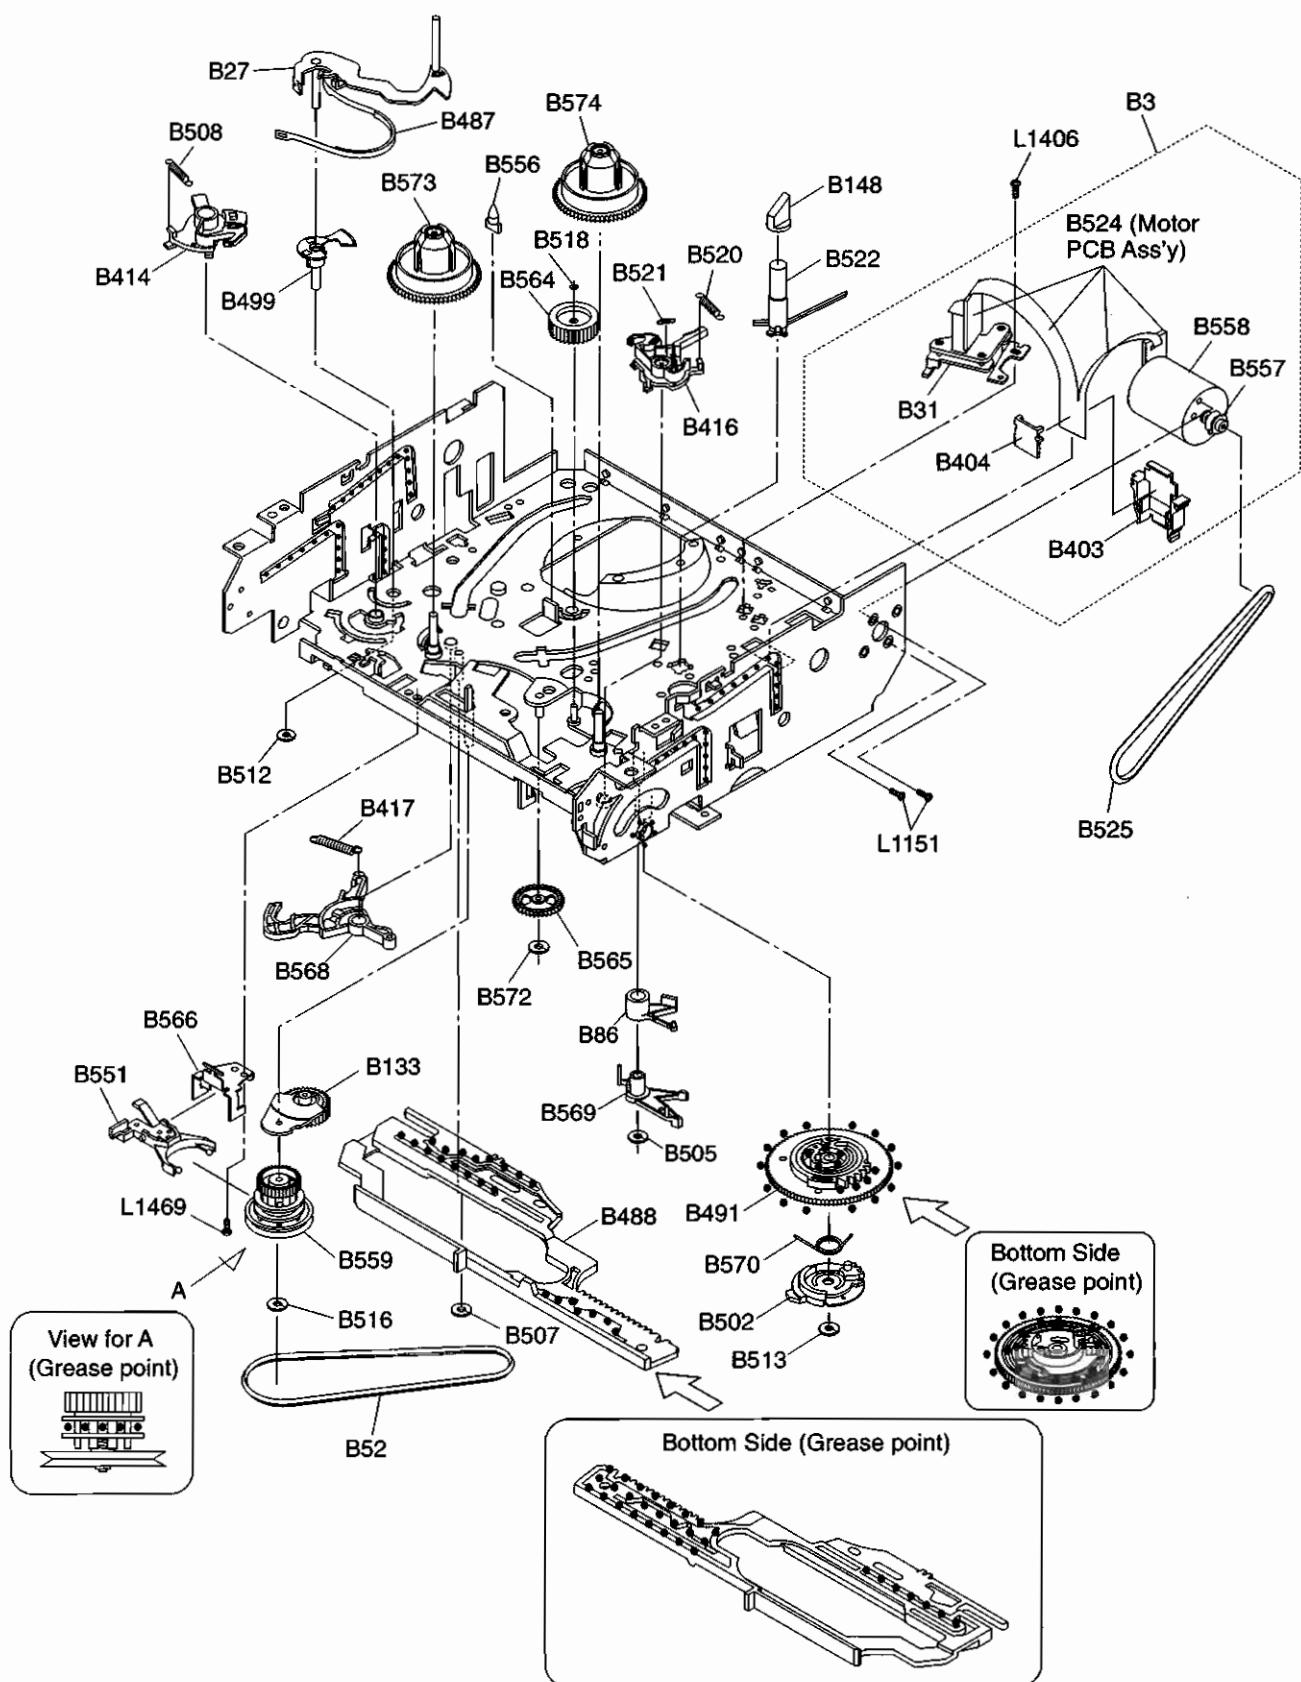

Some Ref. Numbers are not in sequence.

Deck Mechanism View 3

Mark	Description	Part No.
•••••	Foil G-374G (Blue grease)	0VZZ00109

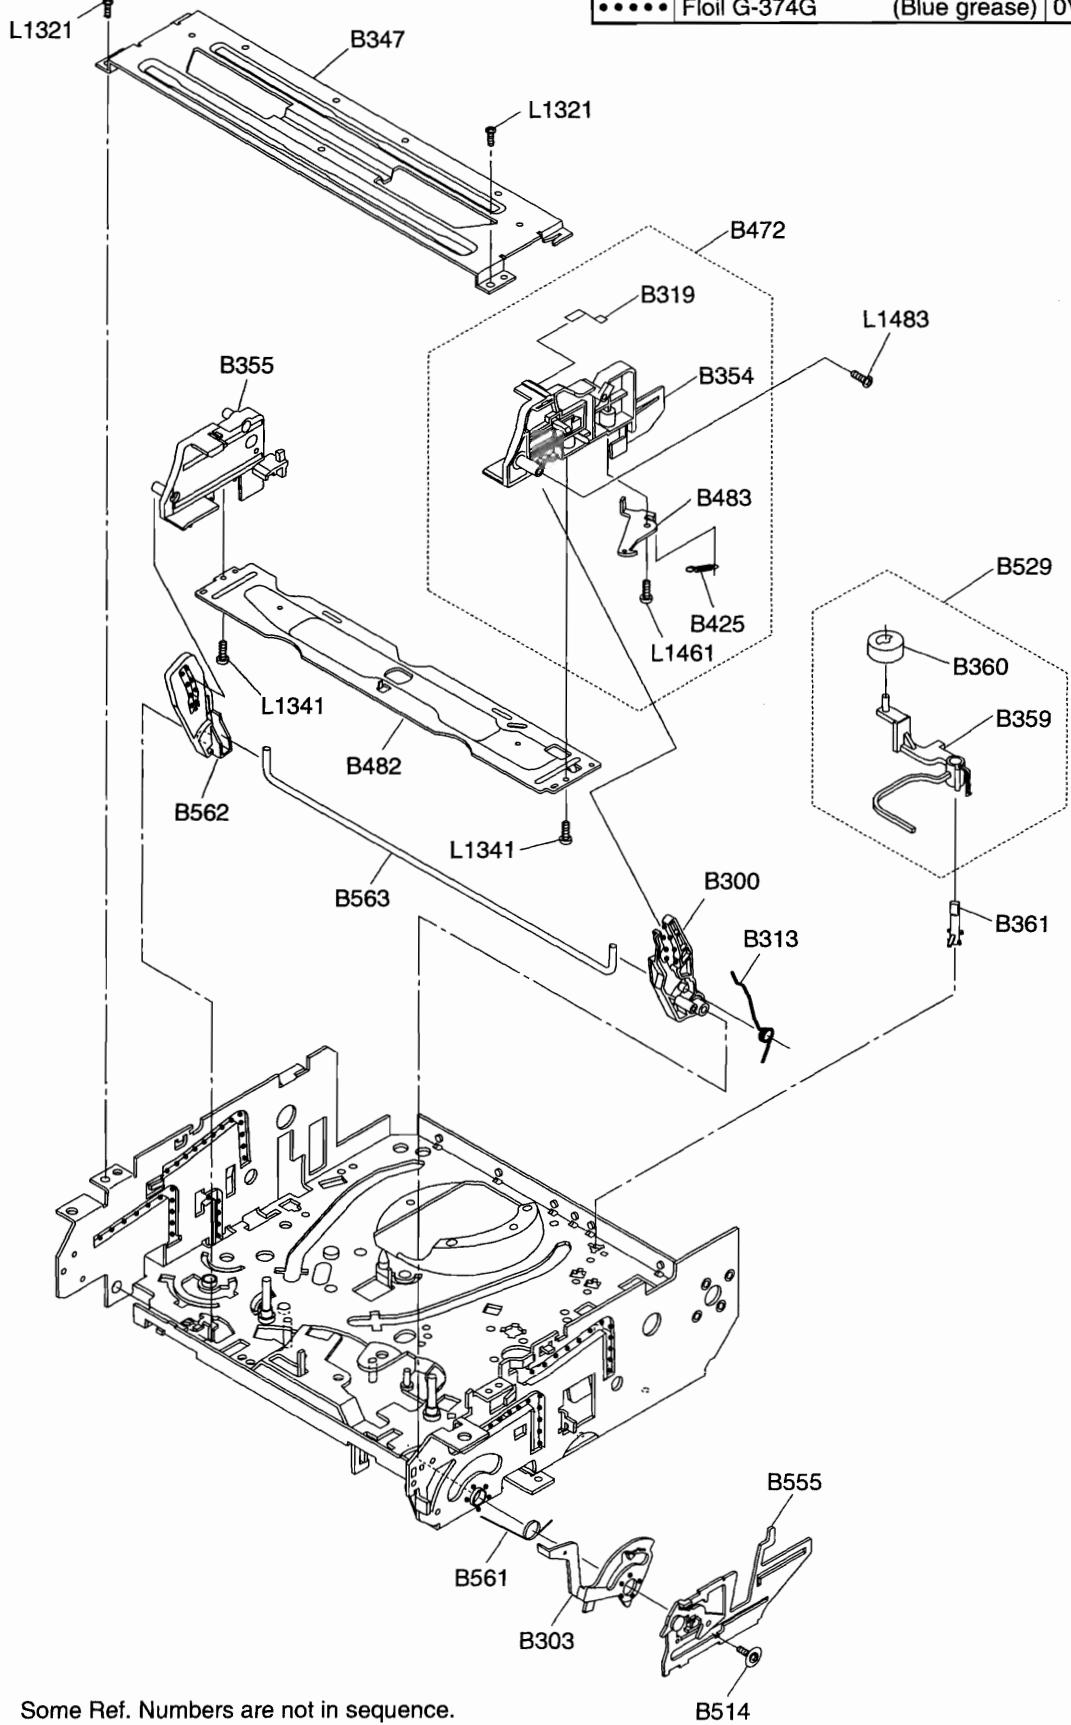

Some Ref. Numbers are not in sequence.

MECHANICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a **▲** have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

1. B359, B360, B361 and B529:
See Deck Exploded View 3. (Refer to page 3-1-6)
2. Comparison chart of Models and Marks:

Model	Mark
SL260B	A
6260VB	B
EWV601	C

Ref. No.	Mark	Description	Part No.
A1X	A	FRONT ASSEMBLY H7900UD	0VM202978
A1X	B	FRONT ASSEMBLY H7930UD	0VM202976
A1X	C	FRONT ASSEMBLY H7931UD	0VM203042
A2		CASE, TOP(U23) H7700UD	0VM100923
A3		CHASSIS(U23) H7700UD	0VM000122
A5		JACK BOARD(HI-FI) H36D4PX:PHILIP-PINE (See Electrical Parts List)	
A8	A	DOOR, CASSETTE H7900UD	0VM411493
A8	B,C	DOOR, CASSETTE H7930UD	0VM411490
A9		SPRING, DOOR H7220UD U15	0VM408617
A10 ▲	A	LABEL, RATING H7900UD	0VM411585
A10 ▲	B	LABEL, RATING H7930UD	0VM411633
A10 ▲	C	LABEL, RATING H7931UD	0VM411669
A14	A,B,C	LABEL, BAR CODE H5700UD	0VM410318
A14	A	LABEL, BAR CODE H7900UD	0VM411586
A14	B	LABEL, BAR CODE H7930UD	0VM411634
A14	C	LABEL, BAR CODE H7931UD	0VM411688
A18	A	LABEL, TELEPHONE NUMBER H5720UD	0VM410319
A18	B	LABEL, TELEPHONE NUMBER H5730UD(SYLVANIA)	0VM410320
A18	C	LABEL, TELEPHONE NUMBER H7931UD(EMERSON)	0VM411684
AC001 ▲		AC CORD WAC0172LTE01 or AC CORD LA-2366 (See Electrical Parts List)	
B359		CLEANER LEVER MK10	0VM304413
B360		CLEANER ROLLER MK9	0VM410032C
B361		CL POST MK10	0VM411114
B529		CLEANER ASSEMBLY MK10	0VSA11161
1B1		DECK ASSEMBLY CZD006/VM1260	N1260FL
2B3		HOLDER, SENSOR(2) H5700UD (See Electrical Parts List)	
2B8		BUSH, LED(F) H3700UD (See Electrical Parts List)	
2B15		TAPE, HIMELON H7700UD(10*15) (See Electrical Parts List)	
2B34		SHIELD, HEAD H7700UD (See Electrical Parts List)	
2B43		REC ARM H7700UD	0VM202907
2B44		REC ARM SPRING MK6	0VM407708C

Ref. No.	Mark	Description	Part No.
2B45		SPACER H7700UD	0VM411667
2L011		SCREW, P-TIGHT 3X10 BIND HEAD+	GBEP3100
2L021		SCREW, P-TIGHT M3X10 WASHER HEAD+	GCMP3100
2L022	C	SCREW, P-TIGHT 3X12 WASHER HEAD+	GCMP3120
RS501		REMOTE RECEIVER PIC-37042LU (See Electrical Parts List)	

PACKING

S1	A	GIFT BOX CARTON H7900UD	0VM304614
S1	B	GIFT BOX CARTON H7930UD	0VM304626
S1	C	GIFT BOX CARTON H7931UD	0VM304653
S2		STYROFOAM(U23F-CORP) H7700UD	0VM202936
S3		UNIT, BAG V4010PA	0VM406453B

ACCESSORIES

X1		REMOTE CONTROL UNIT 364/CRC005 or	N9374UD
		REMOTE CONTROL UNIT 364/CRC005	N9377UD
X2		DRY BATTERY R6P/2S or	XB0M451T0001
		DRY BATTERY(SUNRISE) R6SSE/2S	XB0M451MS002
X3		RF CABLE WPZ0901TM001 or	WPZ0901TM001
		RF CABLE SD-0121	WPZ0901LW001
X4		ACCESSORY BAG H3600UD T=0.03	0VM409454
X20 ▲	A	OWNER'S MANUAL H7900UD	0VMN02614
X20 ▲	B	OWNER'S MANUAL H7930UD	0VMN02627
X20 ▲	C	OWNER'S MANUAL H7931UD	0VMN02638
X36	A	RETURN STOP SHEET H7900UD	0VM411578
X36	B	RETURN STOP SHEET H7930UD	0VM411579
X36	C	RETURN STOP SHEET H7931UD	0VM411668

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a **▲** have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

- Parts that not assigned part numbers (-----) are not available.
- Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25%	D.....±0.5%	F.....±1%
G.....±2%	J.....±5%	K.....±10%
M.....±20%	N.....±30%	Z.....+80/-20%

- LED Type:

When it is necessary to replace one or more of the following diodes, all five should be replaced: D595, D596, D597, D598, D599.

- Comparison chart of Models and Marks:

Model	Mark
SL260B	A
6260VB	B
EWV601	C

- MCV CBA includes two kinds of Type A and Type B by a difference of IC. Please distinguish them by a number on IC.

Type	Number	Ref.No.
A	LA72653M	IC451
B	LA72652M	IC451

A list of MCV CBA (Type B) mentions only difference parts with MCV CBA (Type A)

MCV CBA (Type A)

Ref.No.	Mark	Description	Part No.
A		MCV CBA (MAIN+FUNCTION) MCV CBA (MAIN+FUNCTION) Consists of the following	0VSA11248 0VSA11293
B,C		MAIN CBA (MCV-A) FUNCTION CBA (MCV-B)	-----

MAIN CBA

Ref.No.	Mark	Description	Part No.
		MAIN CBA (MCV-A) Consists of the following	-----
CAPACITORS			
C001 ▲		METALLIZED FILM CAP. 0.01μF/250V K or	CT2E103DC011
		METALLIZED FILM CAP. 0.01μF/250V M	CT2E103MS037
C002 ▲		SAFETY CAP. 2200pF/250V or	CCG2EMA0F222
		SAFETY CAP. 2200pF/250V	CA2E222MR046

Ref.No.	Mark	Description	Part No.
C003		ELECTROLYTIC CAP. 82μF/200V M or	CA2D820S6011
		ELECTROLYTIC CAP. 82μF/200V M	CA2D820NC088
C004		CERAMIC CAP. B K 120pF/500V	CCD2JKP0B121
C007		CERAMIC CAP. B K 3300pF/50V	CCA1JKS0B332
C009		CERAMIC CAP.(AX) X K 5600pF/16V	CCA1CKT0X562
C013		ELECTROLYTIC CAP. 10μF/50V M H7	CE1JMASSL100
C018		ELECTROLYTIC CAP. 470μF/16V M or	CE1CMASDL471
		ELECTROLYTIC CAP. 470μF/16V M	CE1CMASL471
C019		ELECTROLYTIC CAP. 10μF/16V M H7	CE1CMASL100
C020		ELECTROLYTIC CAP. 1000μF/10V M or	CE1AMZPDL102
		ELECTROLYTIC CAP. 1000μF/10V M	CE1AMZPTL102
C024		CERAMIC CAP. SL J 390pF/50V	CCD1JJSSL391
C026		ELECTROLYTIC CAP. 2.2μF/250V M or	CA2E2R2S6009
		ELECTROLYTIC CAP. 2.2μF/250V M(105°C)	CE2EMASTH2R2
C031		CERAMIC CAP.(AX) X K 5600pF/16V	CCA1CKT0X562
C051		ELECTROLYTIC CAP. 10μF/16V M H7	CE1CMASL100
C054		CHIP CERAMIC CAP. B K 0.047μF/50V or	CHD1JK30B473
		CHIP CERAMIC CAP. B K 0.047μF/25V	CHD1EK30B473
C253		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C255		CHIP CERAMIC CAP.(MELF) F Z 0.01μF/ 16V	CZM1CZ30F103
C256		ELECTROLYTIC CAP. 220μF/6.3V M H7	CE0KMASSL221
C257		CHIP CERAMIC CAP. B K 0.022μF/50V or	CHD1JK30B223
		CHIP CERAMIC CAP. B K 0.022μF/25V	CHD1EK30B223
C301		ELECTROLYTIC CAP. 4.7μF/25V M H7	CE1EMASSL4R7
C303		ELECTROLYTIC CAP. 47μF/6.3V M H7	CE0KMASSL470
C304		CHIP CERAMIC CAP.(MELF) Y K 1000pF/ 35V	CZM1GK30Y102
C305		CHIP CERAMIC CAP.(MELF) Y K 2200pF/ 35V	CZM1GK30Y222
C306		CHIP CERAMIC CAP.(MELF) W K 470pF/ 50V	CZM1JK30B471
C307		ELECTROLYTIC CAP. 47μF/6.3V M H7	CE0KMASSL470
C308		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C309		ELECTROLYTIC CAP. 47μF/6.3V M H7	CE0KMASSL470
C310		CHIP CERAMIC CAP. F Z 0.1μF/50V or	CHD1JZ30F104
		CHIP CERAMIC CAP. F Z 0.1μF/25V	CHD1EZ30F104
C311		CHIP CERAMIC CAP. CH J 390pF/50V	CHD1JJ3CH391
C312		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C313		CHIP CERAMIC CAP. CH J 18pF/50V	CHD1JJ3CH180
C314		CHIP CERAMIC CAP.(MELF) SL J 100pF/ 50V	CZM1JJ3SL101
C315		CHIP CERAMIC CAP.(MELF) SL J 100pF/ 50V	CZM1JJ3SL101
C317		CHIP CERAMIC CAP.(MELF) F Z 0.01μF/ 16V	CZM1CZ30F103
C320		ELECTROLYTIC CAP. 22μF/6.3V M H7	CE0KMASSL220
C321		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C322		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C324		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C325		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010
C326		ELECTROLYTIC CAP. 22μF/6.3V M H7	CE0KMASSL220
C328		CHIP CERAMIC CAP.(MELF) F Z 0.01μF/ 16V	CZM1CZ30F103
C329		CHIP CERAMIC CAP.(MELF) F Z 0.01μF/ 16V	CZM1CZ30F103
C330		CHIP CERAMIC CAP.(MELF) F Z 0.01μF/ 16V	CZM1CZ30F103
C332		CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JK30B103
C333		ELECTROLYTIC CAP. 1μF/50V M H7	CE1JMASSL010

Ref.No.	Mark	Description	Part No.
C585		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JK30B103
C586		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JK30B103
C587		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZ30F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZ30F104
C588		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZ30F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZ30F104
C589		ELECTROLYTIC CAP. 10µF/16V M H7	CE1CMSSL100
C590		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZ30F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZ30F104
C591	A,B	CHIP CERAMIC CAP.(MELF) B K 220pF/ 50V	CZM1JK30B221
C591	C	CHIP CERAMIC CAP.(MELF) Y K 1000pF/ 35V or	CZM1GKB0Y102
	C	CHIP CERAMIC CAP.(MELF) Y K 1000pF/ 35V or	CZM1GK30Y102
	C	CHIP CERAMIC CAP. B K 1000pF/50V or	CHD1JKB0B102
	C	CHIP CERAMIC CAP. B K 1000pF/50V	CHD1JK30B102
C592		ELECTROLYTIC CAP. 22µF/16V M H7	CE1CMSSL220
C594	C	FILM CAP.(P) 0.018µF/100V J or	CMA2AJS00183
C594	C	FILM CAP.(P) 0.018µF/50V J	CA1J183MS029
C702		ELECTROLYTIC CAP. 100µF/6.3V M or	CE0KMASDL101
		ELECTROLYTIC CAP. 100µF/6.3V M	CE0KMASTL101
C703		CHIP CERAMIC CAP. B K 0.022µF/50V or	CHD1JK30B223
		CHIP CERAMIC CAP. B K 0.022µF/25V	CHD1EK30B223
C705		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/ 16V	CZM1CZ30F103
C709		ELECTROLYTIC CAP. 0.22µF/50V M or	CE1JMASDLR22
		ELECTROLYTIC CAP. 0.22µF/50V M	CE1JMASTLR22
C710		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASTL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL010
C712	A,B	ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMASSL010
C853		CHIP CERAMIC CAP.(MELF) B K 180pF/ 50V	CZM1JK30B181
C855		ELECTROLYTIC CAP. 0.22µF/50V M H7	CE1JMASSLR22
C858		CHIP CERAMIC CAP.(MELF) SL J 18pF/ 50V	CZM1JJ3SL180
C859		CHIP CERAMIC CAP.(MELF) SL J 22pF/ 50V	CZM1JJ3SL220
C860		CHIP CERAMIC CAP.(MELF) SL D 10pF/ 50V	CZM1JD3SL100
C706A		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JK30B103
CONNECTORS			
CN251		FE CONNECTOR, TOP 9P 09FE-BT-VK-N	JCFEJ09JG001
CN501		CABLE CONNECTOR, 2P TMC-E02X-A1	JCTMC02TG001
CN502		FE CONNECTOR, TOP 5P 05FE-BT-VK-N	JCFEJ05JG001
CN503		CONNECTOR, 8P TMC-J08P-A2	J3TMA08TG004
CN504		FE CONNECTOR, TOP 9P 09FE-BT-VK-N	JCFEJ09JG001
DIODES			
D001		RECTIFIER DIODE 1N4005	NDQZ001N4005
D002		RECTIFIER DIODE 1N4005	NDQZ001N4005
D003		RECTIFIER DIODE 1N4005	NDQZ001N4005
D004		RECTIFIER DIODE 1N4005	NDQZ001N4005
D006		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D008		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D013		RECTIFIER DIODE BA157 or	NDQZ000BA157
		FAST RECOVERY DIODE ERA18-04	QDPZ0ERA1804
D015		RECTIFIER DIODE FR202 or	NDQZ000FR202
		FAST RECOVERY DIODE ERB32-01	QDPZ0ERB3201
D016		SCHOTTKY BARRIER DIODE SB140 or	NDQZ000SB140

Ref.No.	Mark	Description	Part No.
		SCHOTTKY BARRIER DIODE ERB81-004	AERB81004***
D018		ZENER DIODE MTZJT-779.1C or	QDT00MTZJ9R1
		ZENER DIODE DZ-9.1BSCT265	NDTC0DZ9R1BS
D031		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D051		RECTIFIER DIODE BA158 or	NDQZ000BA158
		RECTIFIER DIODE ERA22-10	QDPZ0ERA2210
D052		ZENER DIODE MTZJT-7710B or	QDTB00MTZJ10
		ZENER DIODE DZ-10BSBT265	NDTB00DZ10BS
D054		RECTIFIER DIODE RL151	NDQZ000RL151
D055		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D057		ZENER DIODE MTZJT-775.1C or	QDT00MTZJ5R1
		ZENER DIODE DZ-5.1BSCT265	NDTC0DZ5R1BS
D301		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D302		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D303		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D311		PCB JUMPER D0.6-P5.0	JW5.0T
D501		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148M	NDTZ01N4148M
D555		LED SIR-563ST3F P or	QPQPS1R563ST
		LED SIR-563ST3F Q	QPQQS1R563ST
D701		ZENER DIODE MTZJT-7733D or	QDTD00MTZJ33
		ZENER DIODE DZ-33BSDT265	NDTD00DZ33BS
		TYPE A	
D595		LED(RED) 204HD/E	NPQZ00204HDE
D596		LED(RED) 204HD/E	NPQZ00204HDE
D597		LED(RED) 204HD/E	NPQZ00204HDE
D598		LED(GREEN) 204-10GD/S957	NPQZ10GDS957
D599		LED(GREEN) 204-10GD/S957	NPQZ10GDS957
		TYPE B	
D595		LED(RED) LTL-4211N	NPQZLTL4211N
D596		LED(RED) LTL-4211N	NPQZLTL4211N
D597		LED(RED) LTL-4211N	NPQZLTL4211N
D598		LED(GREEN) LTL-4231N	NPQZLTL4231N
D599		LED(GREEN) LTL-4231N	NPQZLTL4231N
		TYPE C	
D595		LED(RED) LT6311G-41	NPQZ0LT6311G
D596		LED(RED) LT6311G-41	NPQZ0LT6311G
D597		LED(RED) LT6311G-41	NPQZ0LT6311G
D598		LED(GREEN) LT6321-41	NPQZ00LT6321
D599		LED(GREEN) LT6321-41	NPQZ00LT6321
ICS			
IC001▲		PHOTOCOUPLER LTV-817B-F or	NPEB0LTV817F
		PHOTOCOUPLER LTV-817C-F or	NPEC0LTV817F
		PHOTOCOUPLER PC-17T1	QPE100PC17T1
IC301	A,B	IC:Y/C/A LA71090M	QSZBA0RSY011
IC301	C	IC:Y/C/A LA71091M	QSZBA0RSY012
IC451		IC:HIFI LA72653M	QSZBA0RSY013
IC501		MICROCONTROLLER 16BIT M37765MAA1F6GP	QSZAA0RMB018
IC506		IC BD6655FP	QSZAA0SRM001
COILS			
L001▲		LINE FILTER 4.5MH SA-0041B or	LLBG00ZSA001
		LINE FILTER 4MH TLF9U4A402W0R3	LLBG00ZTU027
L009		CHOKE COIL 47µF-K	LLBD00PKV007
L251		PCB JUMPER D0.6-P5.0	JW5.0T
L301		INDUCTOR 100µF-K-26T	LLAXKATTU101

Ref. No.	Description	Part No.
B574	REEL T MK10	OVM202872
B575	RADIATOR PLATE MK10	OVM411330
B576	SLIDE HOLDER(S) MK10	OVM411728
B577	SLIDE HOLDER(T) MK10	OVM411729
L1051	SCREW, S-TIGHT M2.6X6 PAN HEAD +	GPMS9060
L1051	SCREW, B-TIGHT M2.6X6 PAN HEAD+	GPMB9060
L1053	SCREW, S-TIGHT M2.6X8 WASHER HEAD+	GCMS9080
L1151	SCREW, SEMS M2.6X4 PAN +	CPM39040
L1191	SCREW, S-TIGHT M2.6X8 WASHER HEAD+	GCMS9080
L1321	SCREW, S-TIGHT M3X6 BIND HEAD+	GBMS3060
L1341	SCREW, P-TIGHT M2.6X6 BIND HEAD+	GBMP9060
L1406	AC HEAD SCREW MK9	OVM410964
L1450	SCREW, SEMS M2.6X5 PAN HEAD+	CPM39050
L1460	SCREW M2.6X6 PAN HEAD +	SPM39060
L1461	SCREW, P-TIGHT M2.6X6 WASHER HEAD+	GCMP9060
L1463	SCREW, S-TIGHT M2.6X4 BIND HEAD+	GBMS9040
L1466	SCREW, S-TIGHT M2.6X6 BIND HEAD+	GBMS9060
L1469	SCREW, S-TIGHT M2.6X6 PAN HEAD +	GPMS9060
L1471	SCREW, S-TIGHT M2.6X6 BIND HEAD+	GBMS9060
L1480	SCREW, S-TIGHT M2.6X6 PAN HEAD +	GPMS9060
L1482	SCREW, B-TIGHT M2.3X4 BIND HEAD+	GBMBY040
L1483	SCREW, P-TIGHT M2.6X8 BIND HEAD+	GBMP9080

Printed in Japan
2001-01-15 HO