


CDP-270/470

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
E Model
CDP-270*

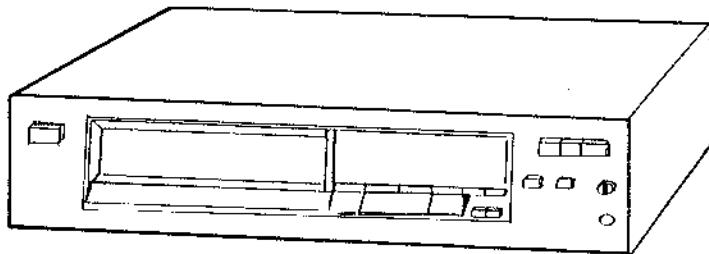

*US Model
Canadian Model
AEP Model
UK Model
E Model
CDP-470*

SPECIFICATIONS

Frequency response	2Hz–20kHz (± 1 dB)
Signal-to-noise ratio	More than 100dB
Dynamic range	More than 90dB
Harmonic distortion (1kHz)	Less than 0.09%
Channel separation	More than 95dB (1kHz)
Outputs	LINE OUT (photo jacks) Output level 2V (at 50kilohms) Load impedance over 10kilohms
General	
Power requirements	US, Canadian model: 120V AC, 60Hz AEP model: 220V AC, 50/60Hz UK model: 240V AC, 50/60Hz E model: 110–120V or 220–240V AC adjustable, 50/60Hz
Power consumption	US, Canadian model: 12W EXCEPT US, Canadian model: 10W
Dimensions (approx. including projections)	AEP, UK model: 430x100x275 mm (17x4x10 inches) EXCEPT AEP, UK model: 430x95x275 mm (17x3 $\frac{3}{4}$ x10 inches)
Weight (approx.)	3.5kg (7 lbs 12oz)

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	1	1
Features	2	2
Safety Check-out	2	2
Servicing Note	3	3
SECTION 1. GENERAL		
1-1. Location and Function of Controls	4	4
1-2. Description on IC6 (MSC6458)	5	5
SECTION 2. ADJUSTMENTS		7
SECTION 3. DIAGRAMS		
3-1. Semiconductor Lead Layouts	10	10
3-2. Printed Wiring Boards	11	11
3-3. Schematic Diagram	13	13
3-4. IC Block Diagrams	16	16
3-5. Waveforms	17	17
SECTION 4. EXPLODED VIEWS		18
SECTION 5. ELECTRICAL PARTS LIST		21
SUPPLEMENT-1		25

COMPACT DISC PLAYER
SONY®

FEATURES

- Three CUSTOM EDIT functions, convenient for tape editing
 - PROGRAM EDIT function for confirming the total playing time while choosing the selection to be programmed.
 - TIME EDIT function for programming selections automatically to fit in a desired duration.
 - TIME FADE function for stopping the play, fading out at the desired time.
- FADE-IN/FADE-OUT function for fading in or out the play when starting or stopping.
- SHUFFLE play for playing the selections in a random order.
- REPEAT function for a single selection, the whole disc, PROGRAM play, or SHUFFLE play.
- Easy-to-read display window shows the selection number being played, all the numbers of the selections on the disc (up to 16), the elapsed playing time, and the remaining time.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

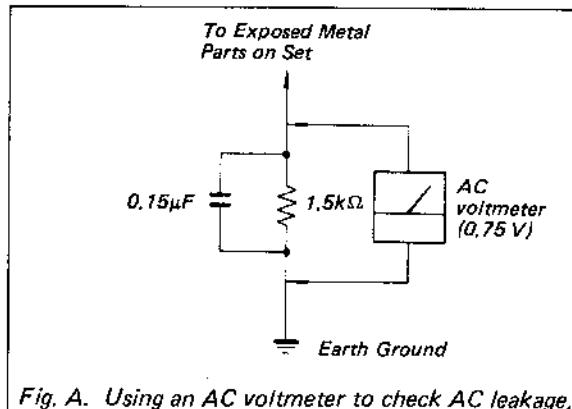


Fig. A. Using an AC voltmeter to check AC leakage.

SERVICING NOTE**PROTECTION OF EYES FROM LASER BEAM DURING SERVICING**

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

1. Laser Diode Properties

- Material: GaAlAs
- Wavelength: 780 nm
- Emission Duration: continuous
- Laser Output: max. 44.6 μW*

* This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.

2. During service, do not take the Optical Pick-up Block apart, and do not adjust the APC circuit. If there is a breakdown in the APC circuit (including laser diode), replace the entire Optocal Pick-up Block (including APC board).**BESKYTTELSE AF ØJNE MOD LASERSTRÅLING UNDER SERVICE**

I dette apparat anvendes laserlys. Derfor skal nedenstående instruktioner nøje følges under service.


Følg iøvrigt instruktionerne i servicemanualen.

ADVARSEL!!

Under service må øjnene ikke komme nær objektiv-linsen på den optiske pick-up enhed. I tilfælde af at det er nødvendigt at kontrollere udsendelsen af laserlys, skal det ske i en afstand af mere end 25 cm fra den optiske pick-up.

LASER ADVARSEL MÆRKNING

Følgende mærkning findes indvendig i apparatet:

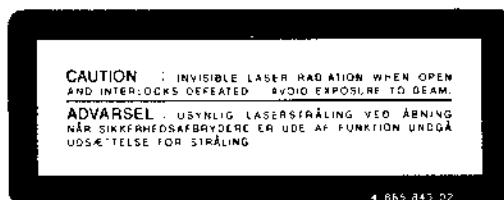1. Aviso Mærkning**1. Laser-didoe data**

- Materiale: GaAlAs
- Bølgelængde: 780 nm
- Udstråling: Kontinuerlig
- Laseroutput: Max. 0,4 mW*

* Målt i 1,6 mm afstand fra overfladen af objektiv-linsen på den optiske pick-up enhed.

- Klassifikation: Klasse IIIb.

2. Adskil aldrig den optiske pick-up enhed under service, og juster ikke APC kredsløbet (Automatic Power Control). Hvis APC kredsløbet (incl. laser-dioden) bryder ned, skal hele den optiske pick-up enhed (incl. APC printkortet) udskiftes.


VAROITUS: Laite sisältää, laserdiodin, joka lähettilää (näkymätöntä) silmille vaarallista lasersateilyä.

SECTION 1

GENERAL

1-1. LOCATION AND FUNCTION OF CONTROLS

Front Panel

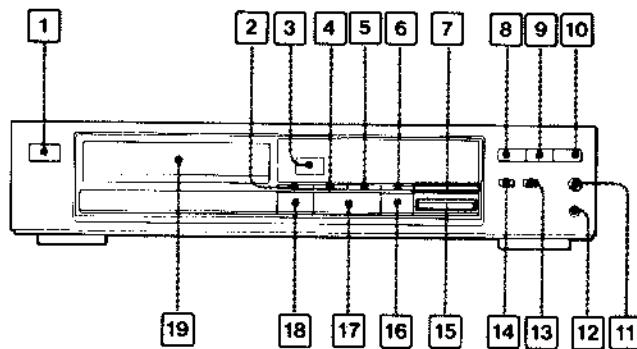


- [1] POWER switch
- [2] TIME button
- [3] Remote control sensor
- [4] AUTO SPACE button
- [5] REPEAT button
- [6] EDIT/TIME FADE button
- [7] $\blacktriangleleft\blacktriangleright$ (manual search) buttons
- [8] PROGRAM (or PGM) button
- [9] SHUFFLE button
- [10] CONTINUE button
- [11] PHONE LEVEL (headphones level) control
- [12] PHONES jack

*AMS is the abbreviation of Automatic Music Sensor.

**RMS is the abbreviation of Random Music Sensor.

Remote Commander (supplied only for the CDP-470)

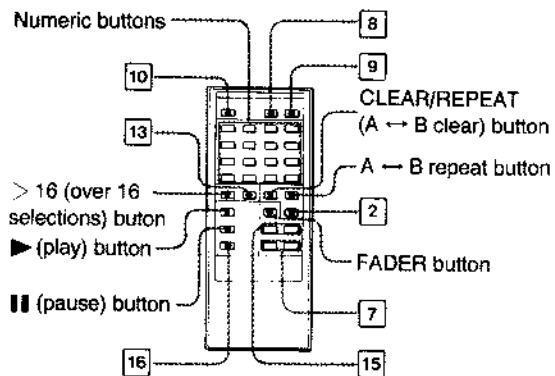

- [13] CLEAR (program clear) button
- [14] PGM CHECK (program check) button
- [15] $\blacktriangleleft\blacktriangleright$ (AMS*/RMS**) buttons
- [16] ■ (stop) button
- [17] ▶ (play/pause) button
- [18] ▲ (OPEN/CLOSE) button
- [19] Disc compartment

Remote Control Operation

Once the POWER switch is turned on, you can remotely control various functions of the player with the remote commander. (Supplied only with the CDP-470).

Operations which performed only with the remote commander

- Direct music selection.
- A → B repeat.
- Fading in/Fading out the play.

Operations which cannot be performed with the remote commander

- Turning the power on and off.
- Opening and closing the disc compartment.
- Setting and releasing auto space function.
- Checking the programmed selections.
- Time edit function.
- Time fade function.

Notes on the remote commander and remote control operation

- Keep the commander away from extremely hot or humid places.
- Avoid dropping any foreign objects into the commander casing, particularly when replacing the batteries.
- To avoid a malfunction, do not simultaneously depress two or more buttons.
- Avoid exposure of the remote sensor to direct sunlight or lighting apparatus. Such exposure can cause a malfunction.

1-2. DESCRIPTION ON IC6 (MSC6458) SYSTEM CONTROL MICROCOMPUTER

IC6 has the following functions:

- Digital signal output to operation key
- Sub Q signal loading and processing
- Fluorescent display (FLD) control
- Servo circuit control

Pin Functions

Pin no.	Pin name	I/O	Description
1	PLL SW	O	"L" in play mode and "H" in search mode.
2	CLK	O	Command transfer of clock to SSP (IC3) and DSP (IC7).
3	DATA	O	Command transfer of data to SSP (IC3) and DSP (IC7).
4	XLK	O	Command transfer of latch to SSP (IC3) and DSP (IC7).
5	PRGL	O	Command transfer of latch to DFIL (IC9).
6	SYNC OUT	O	No connector (NC).
7	SENSE	I	SSP (IC2) and DSP (IC3) sense information.
8	SYNC ON	I	Sync REC ("L" in REC mode).
9	SIRCS	I	Remote control signal input.
10	SCOR	I	Q code read timing.
11	AF ADJ	I	No connection (NC).
12	ADJ	I	"L" in adjustment mode.
13	AMUTE	O	ALL muting. Output to DSP (IC3) MUTG.
14	EMPS	O	No connection (NC)
15	SUBQ	I	Subcode data.
16	SQCLK	O	Subcode data read clock.
17	GFS	I	"H" when CLV is locked.
18	FOK	I	"H" when focus is on.
19	KEY0	I	Key matrix input, "H" active.
20	KEY1	I	Key matrix input, "H" active.
21	KEY2	I	Key matrix input, "H" active.
22	KEY3	I	Key matrix input, "H" active.
23	KEY4	I	Key matrix input, "H" active.
24	KEY5	I	Key matrix input, "H" active.
25	INSW	I	Loading IN SW.
26	LDON	O	Laser on / off.
27	OUTSW	I/O	Loading OUT SW.
28	LODOUT	O	Loading motor control.
29	LODIN	O	Loading motor control.
30	OSC1	I	Oscillator input terminal (4 MHz).
31	OSC0	I	Oscillator input terminal (4 MHz).

Pin No.	Pin name	I/O	Description
32	GND	—	GND terminal.
33	RESET	I	Reset input terminal. Input when power is turned on.
34	TEST	—	No connection (NC).
35	VL DOWN	—	No connection (NC).
36	VL UP	O	Volume up.
37	TIMER	O	No connection (NC).
38	LED	O	Volume indicator.
39	8G	O	FLD timing output.
40	7G	O	FLD timing output.
41	6G	O	FLD timing output.
42	5G	O	FLD timing output.
43	4G	O	FLD timing output.
44	3G	O	FLD timing output.
45	2G	O	FLD timing output.
46	1G	O	FLD timing output.
47	NC	—	No connection (NC).
48	o	O	FLD segment output.
49	n	O	FLD segment output.
50	m	O	FLD segment output.
51	+ 30V	—	+ 30V
52	l	O	FLD segment output.
53	k	O	FLD segment output.
54	j	O	FLD segment output.
55	i	O	FLD segment output.
56	h	O	FLD segment output.
57	g	O	FLD segment output.
58	f	O	FLD segment output.
59	e	O	FLD segment output.
60	d	O	FLD segment output.
61	c	O	FLD segment output.
62	b	O	FLD segment output.
63	a	O	FLD segment output.
64	VDD	—	positive(+) power supply (5V)

SECTION 2


ADJUSTMENTS

ELECTRICAL ADJUSTMENTS

1. Perform adjustments in the order given.
2. Use YEDS-18 (Part No. 3-702-101-01) disc unless otherwise indicated.
3. Use the oscilloscope with more than $10M\Omega$ impedance.

RF PLL Frequency Adjustment/Lock Frequency Check

Procedure:

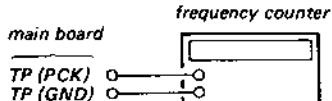


1. Ground test point TP (ASY).
2. Connect the frequency counter to the test points TP (PCK) and TP (GND).
3. Turn POWER switch on.
4. Adjust RV205 so that the reading on the frequency counter is 4.3218 MHz.
... (RF PLL frequency adjustment)
5. Remove the grounding wire from TP (ASY).
6. Put the disc (YEDS-18) in and press \triangleright button.
7. Confirm that the reading on the frequency counter is locked at 4.3218 MHz.


Focus Bias Adjustment

This adjustment should be made after replacing the Optical Pick-up Block.

Procedure:

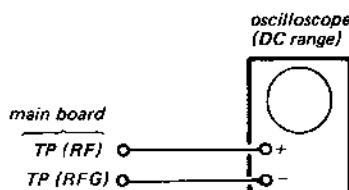


1. Connect oscilloscope to the test points TP (RF) and TP (RFG).
2. Turn POWER switch on.
3. Put the disc (YEDS-18) in and press \triangleright button.
4. Adjust RV202 for an optimum waveform eye pattern. Optimum eye pattern means that shape "◇" can be clearly distinguished at the center of the waveform.

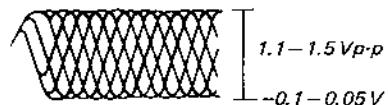


E-F Balance Adjustment

This adjustment should be made after replacing the Optical Pick-up Block.

Procedure:

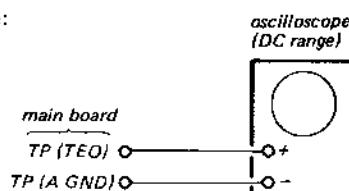

1. Connect the oscilloscope to the test points TP (TEO) and TP (A GND).
2. Ground TP (ADJ) to set an adjustment mode.
3. Turn POWER switch on.
4. Put the disc (YEDS-18) in and press \triangleright button.
5. Adjust RV201 so that the traverse waveform is symmetrical above and below.
6. After adjustment, cancel the adjustment mode.

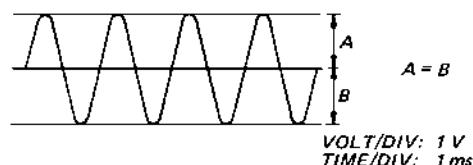

Focus/Tracking Gain Adjustment

A frequency response analyzer is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, this adjustment is not recommended generally to be performed.

Focus/tracking gains determine the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when the 2-axis device operate.

However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise when the 2-axis device operates increases.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
- When gain adjustment is off, the symptoms below appear.


Symptoms	Gain	Focus	Tracking
• The time until music starts becomes longer for STOP → ▶ PLAY or automatic selection (◀▶◀▶ buttons pressed. (Normally takes about 2 seconds.)	low	low or high	
• Music does not start and disc continues to rotate for STOP → ▶ PLAY or automatic selection (◀▶◀▶ buttons pressed.)	—	low	
• Disc table opens shortly after STOP → ▶ PLAY.	low or high	—	
• Sound is interrupted during PLAY. Or time counter display stops progressing.	—	low	
• More noise during 2-axis device operation.	high	high	

The following is a simple adjustment method.


Simple Adjustment —

Note: Since exact adjustment cannot be performed, remember the positions of the controls before performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.



Procedure:

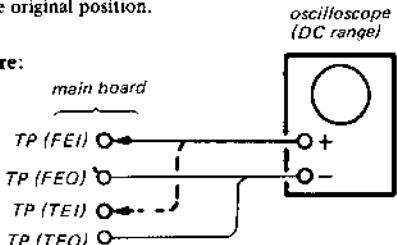

1. Keep the set flat.
If the set is not horizontal, this adjustment cannot be performed due to the gravity against the 2 axis device.
2. Insert the disc (YEDS-18) and press ▶ PLAY button.
3. Connect the oscilloscope to TP (FEI) and TP (FEO).
4. Adjustment RV203 so that the waveform is as shown in the picture below. (focus gain adjustment)

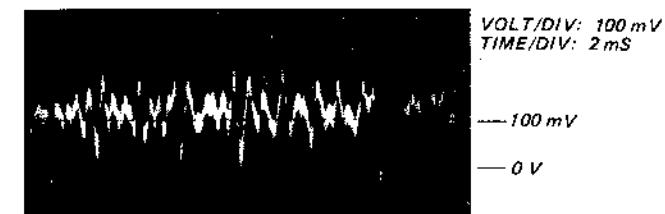

- Incorrect Examples (DC level is quite different from the adjusted waveform) (below)

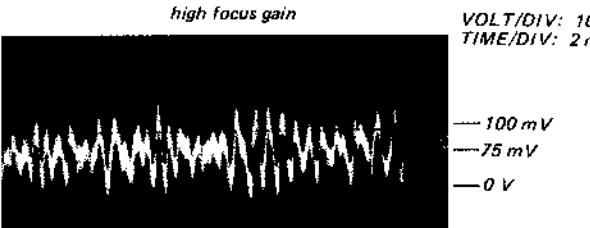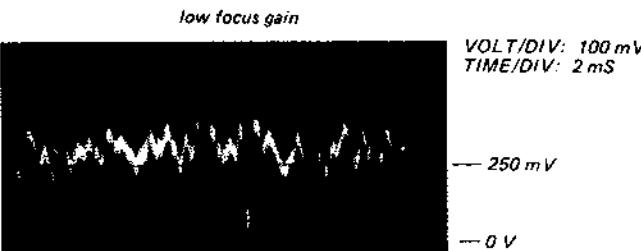


5. Connect the oscilloscope to TP (TEI), TP (TEO).


6. Adjust RV204 so that the waveform is as shown in the picture below. (tracking gain adjustment)




- Incorrect Examples (fundamental wave appears)

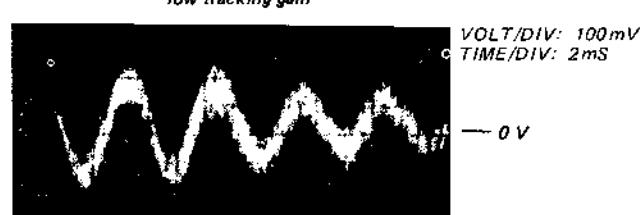

high tracking gain
(higher frequency of the fundamental wave than above)

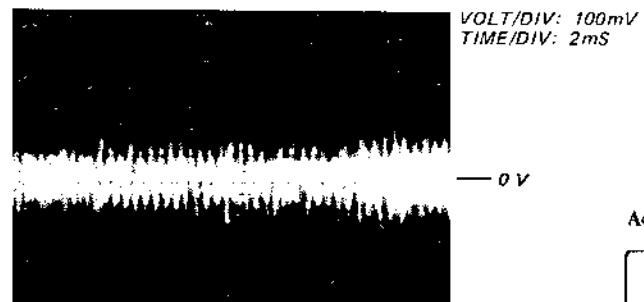

Adjustment Location: main board

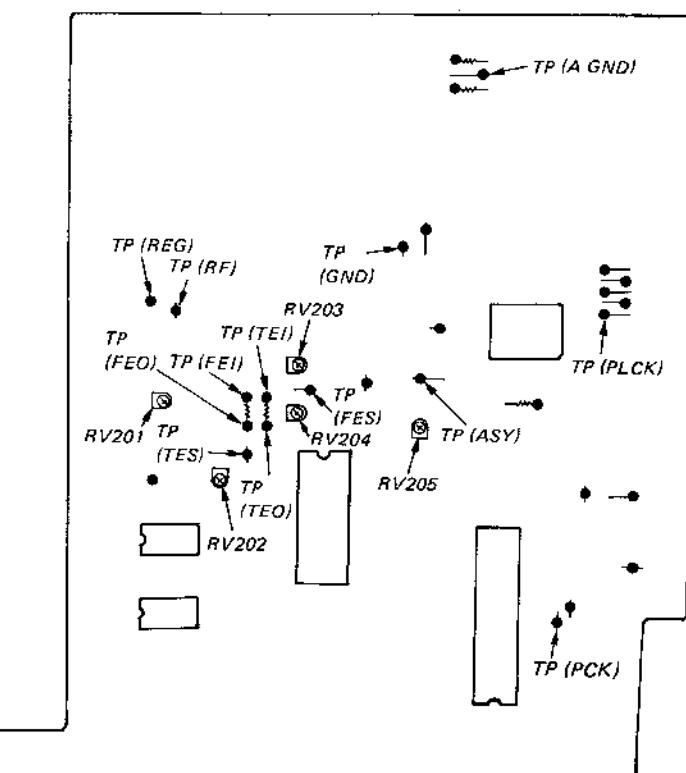

— Component Side —


SECTION 3 DIAGRAMS

3-1. SEMICONDUCTOR LEAD LAYOUTS


GP1U52 2SB1068-K





2SB1068-K

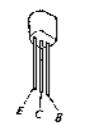

BA1L4M 2SK381-C

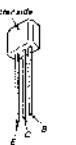


2SK381-C

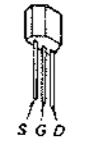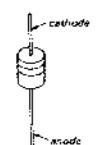DTC114ES RD6.8ES-B2
1SS202-1RD6.8ES-B2
1SS202-1

10E2




10E2

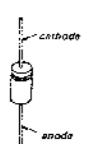


SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location
D1	E-10	I6	I-5
D3	J-9	I7	E-4
D4	J-9	I8	D-5
D5	J-9	I9	D-3
D6	D-7	I10	C-3
D7	D-7	I11	B-4
D8	D-8	I12	C-7
D9	D-8	I13	J-12
D10	C-7	-	-
-	-	O1	B-7
IC1	C-6	O2	G-9
IC2	F-8	O3	G-6
IC3	H-7	O4	G-5
IC4	H-9	O5	H-5
IC5	I-9	O6	H-3

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Jumper wire connected to the ground pattern on the component side.

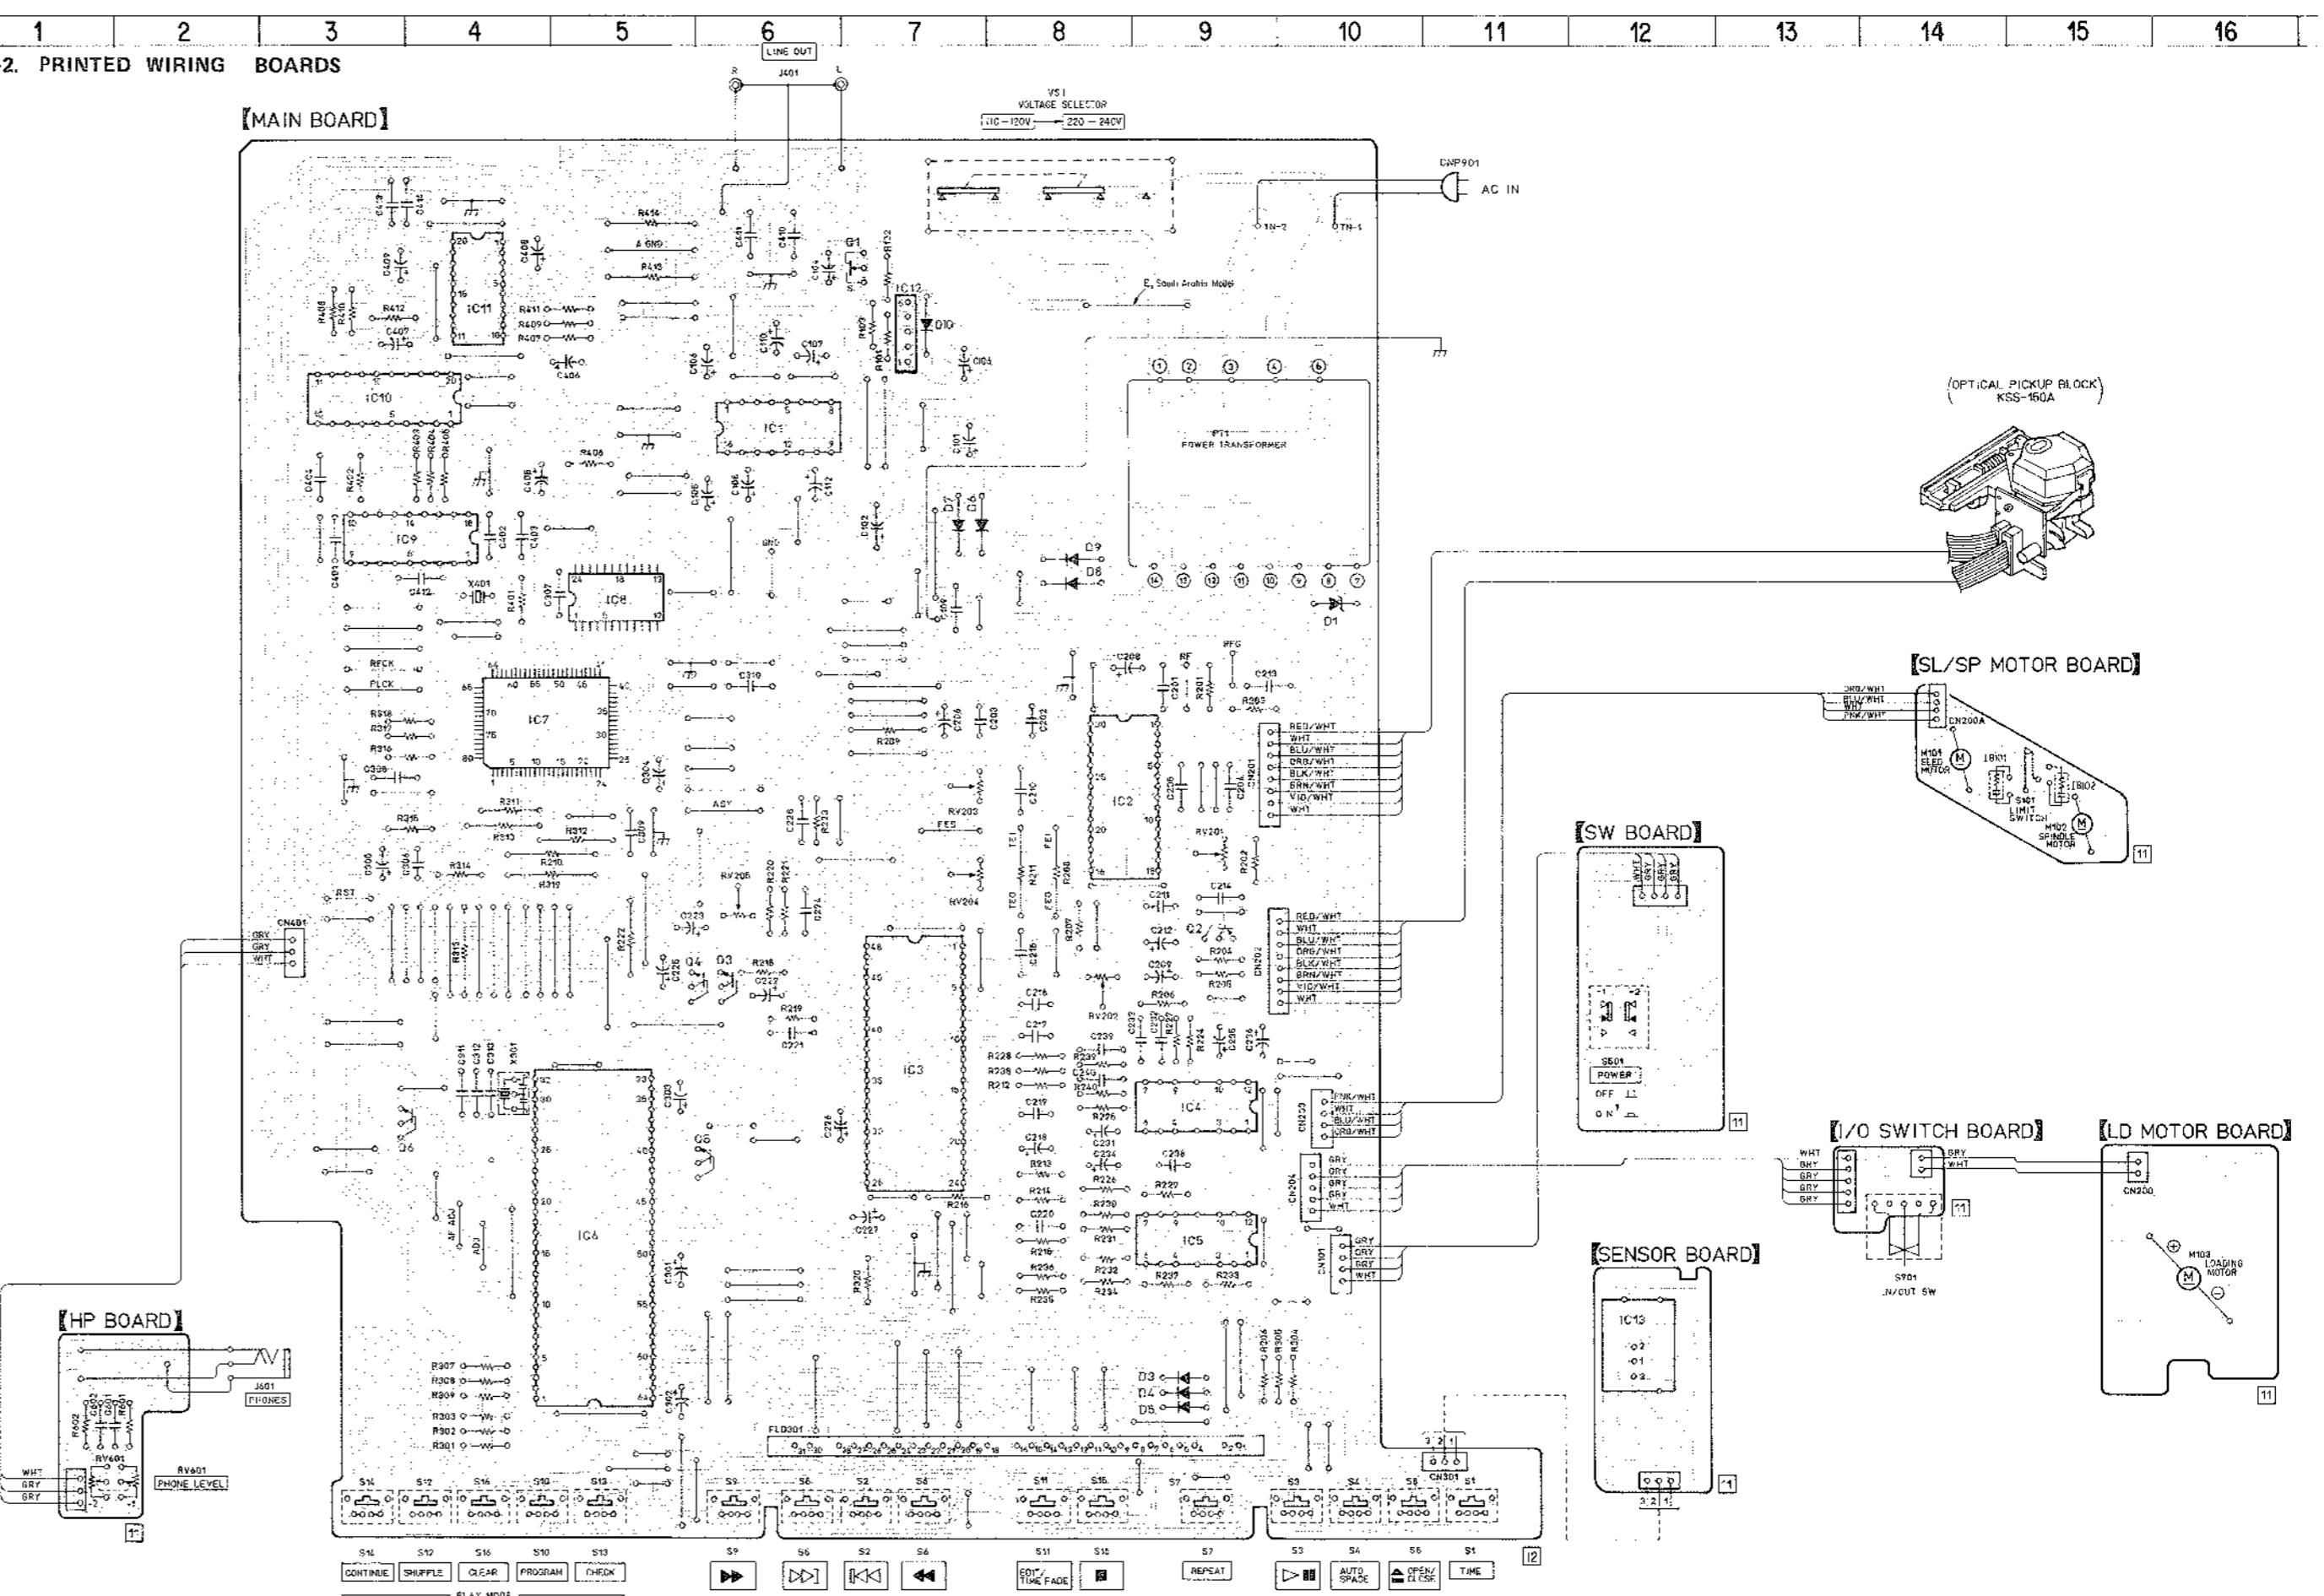


-3. SCHEMATIC DIAGRAM

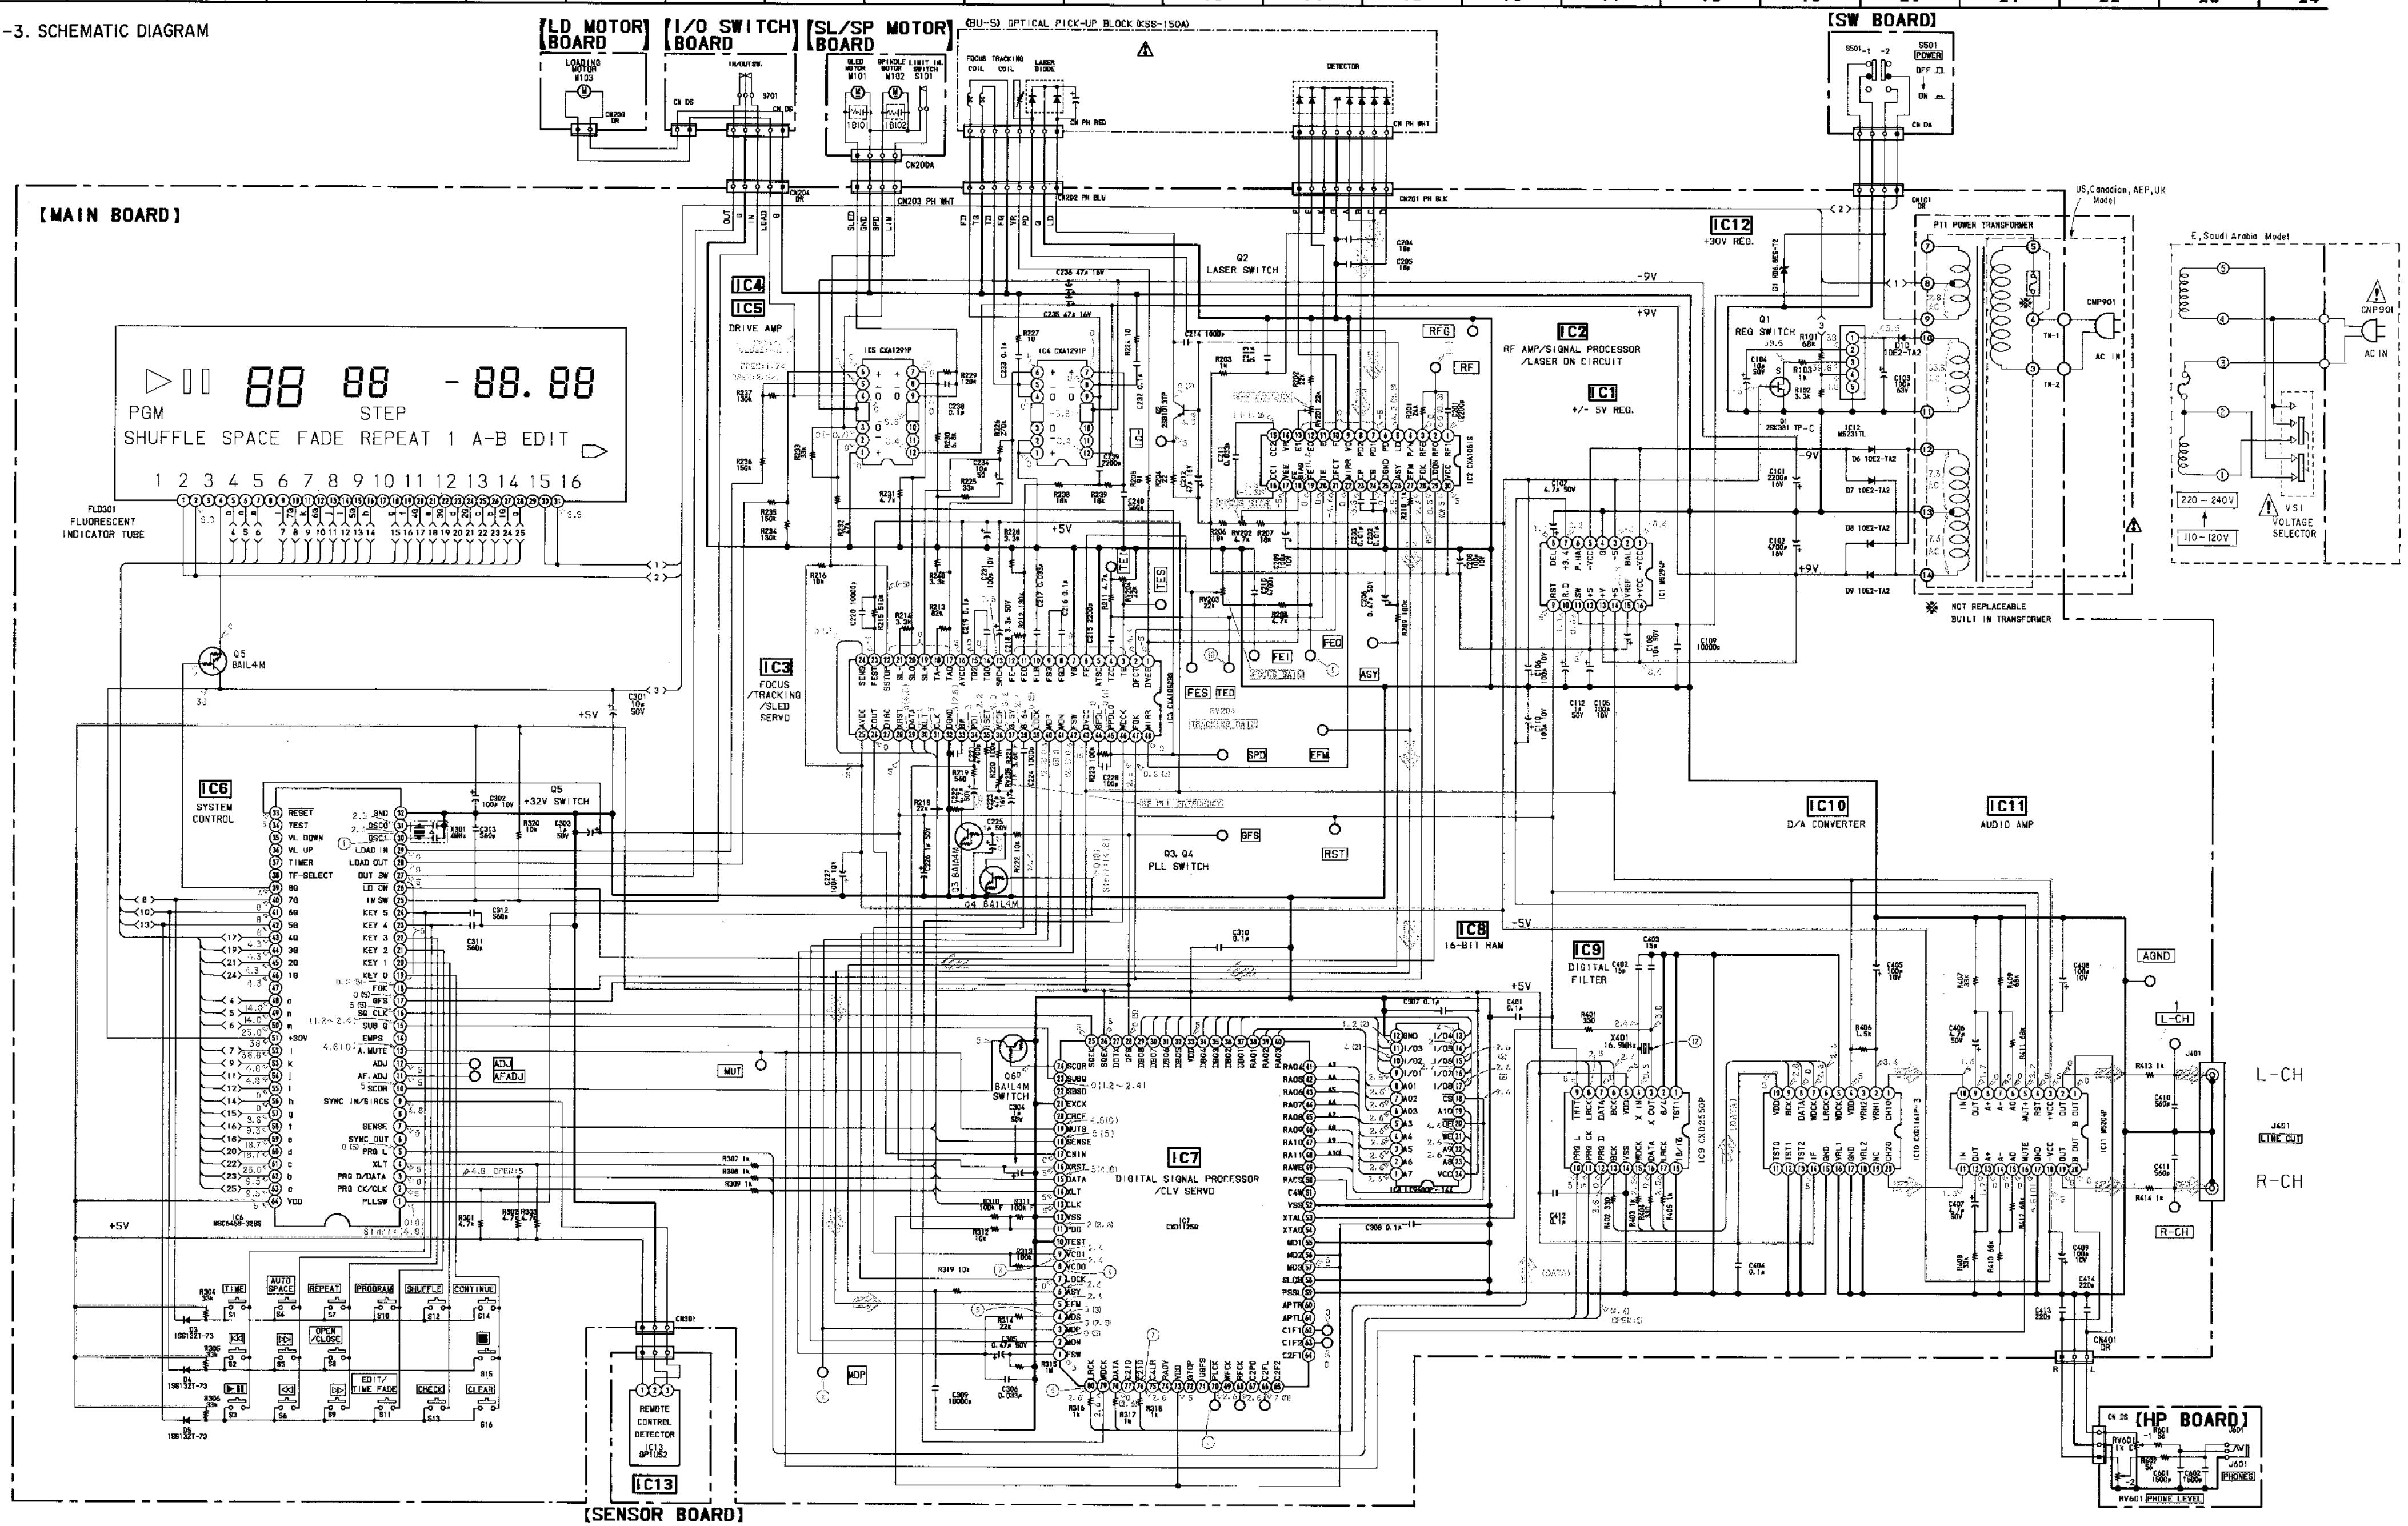


3-4. IC BLOCK DIAGRAMS


IC2 CXA1081S

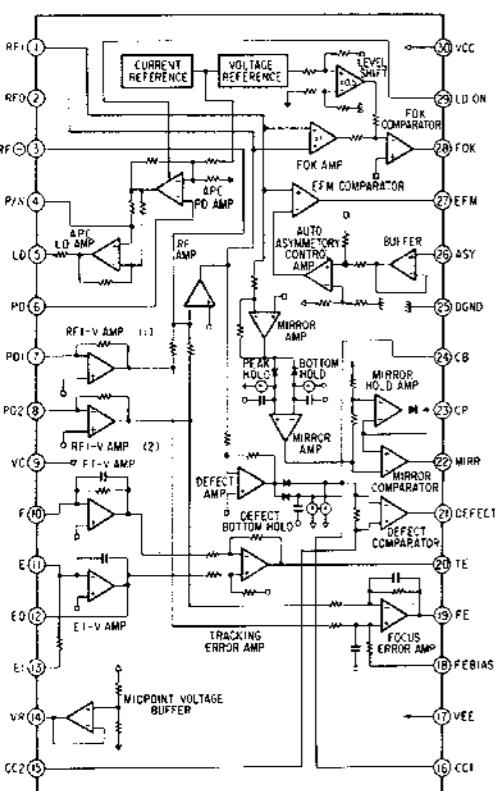


IC3 CXA1082BS

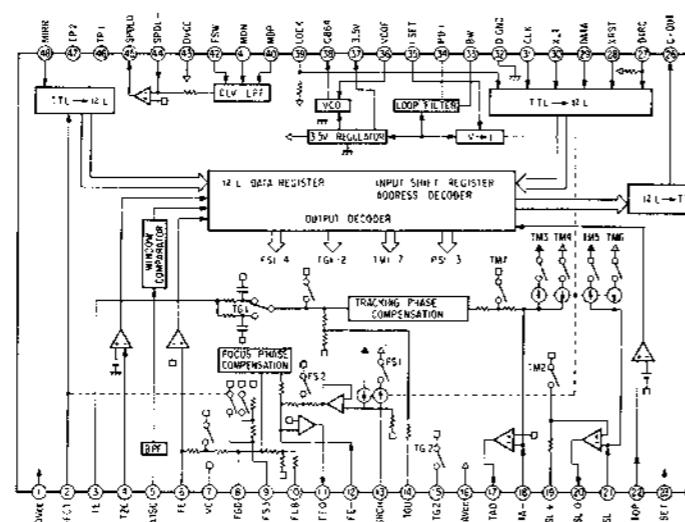


IC8 CXK5816M-12L

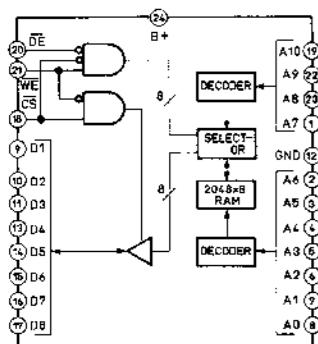


IC9 CXD2550P

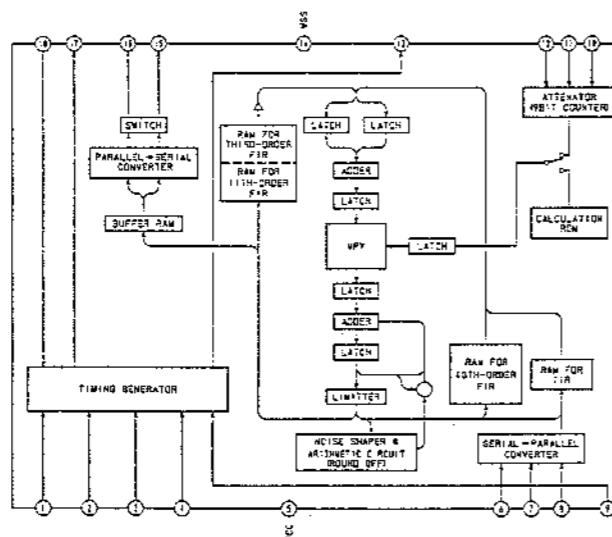


IC10 CXD1161P-3

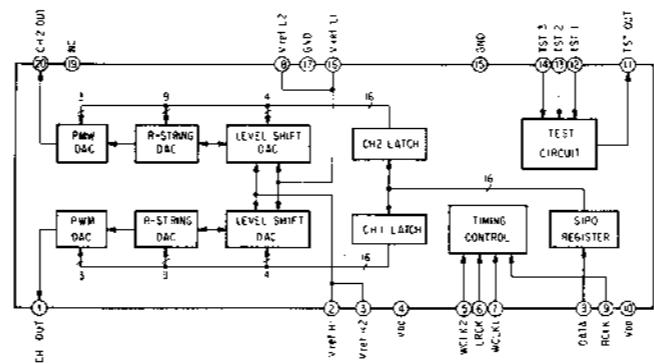

IC4, 5 CXA1291P

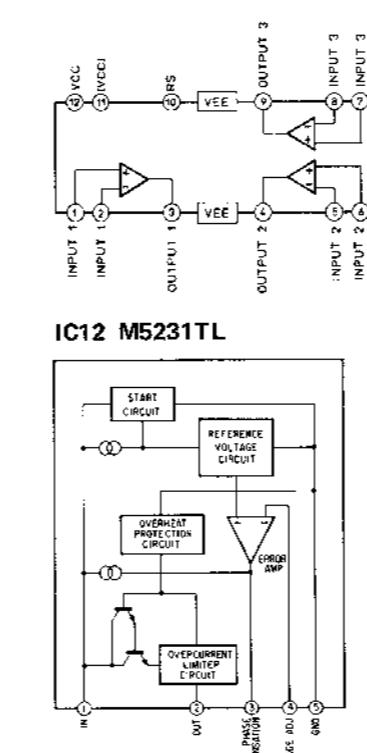

3-5. WAVEFORMS

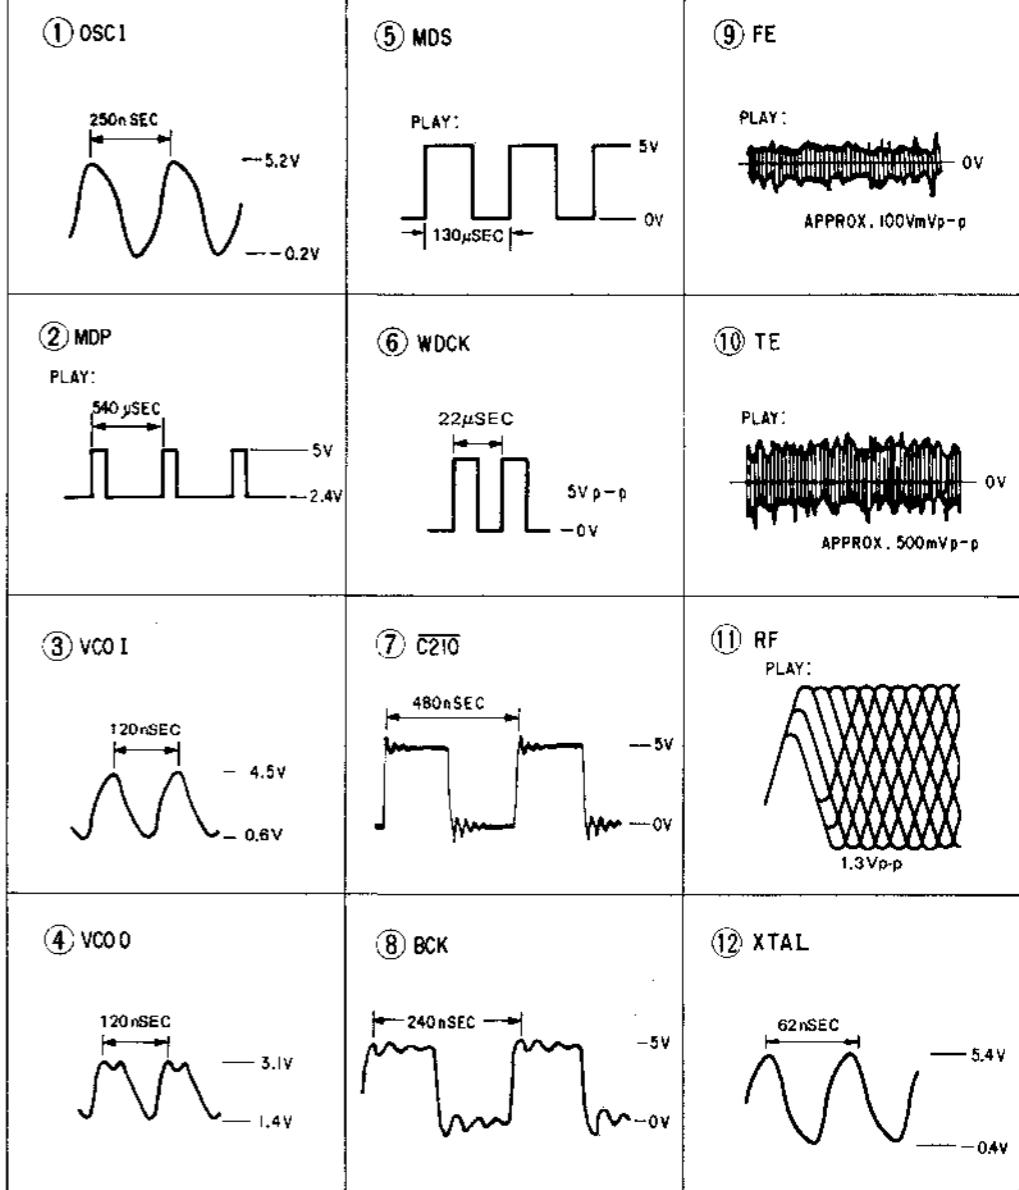

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- \triangle : internal component.
- $\text{---} \triangle$: B+ line
- $\text{---} \triangle$: B- line
- $\text{---} \triangle$: adjustment for repair
- Signs' path:
- $\text{---} \triangle$: CD
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- no mark: STOP Mode
- (): PLAY

- Voltages are taken with a VOM. (Input impedance 10M Ω) Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscil scope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.

Note:
The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 4

EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
 - The construction parts of an assembled part are indicated with a collation number in the remark column.
 - Items marked “★” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
 - Color Indication of Appearance Parts

Example:
(RED) ... KNOB, BALANCE (WHITE)
↑ ↑
Cabinet's Color Parts' Color

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. GENERAL

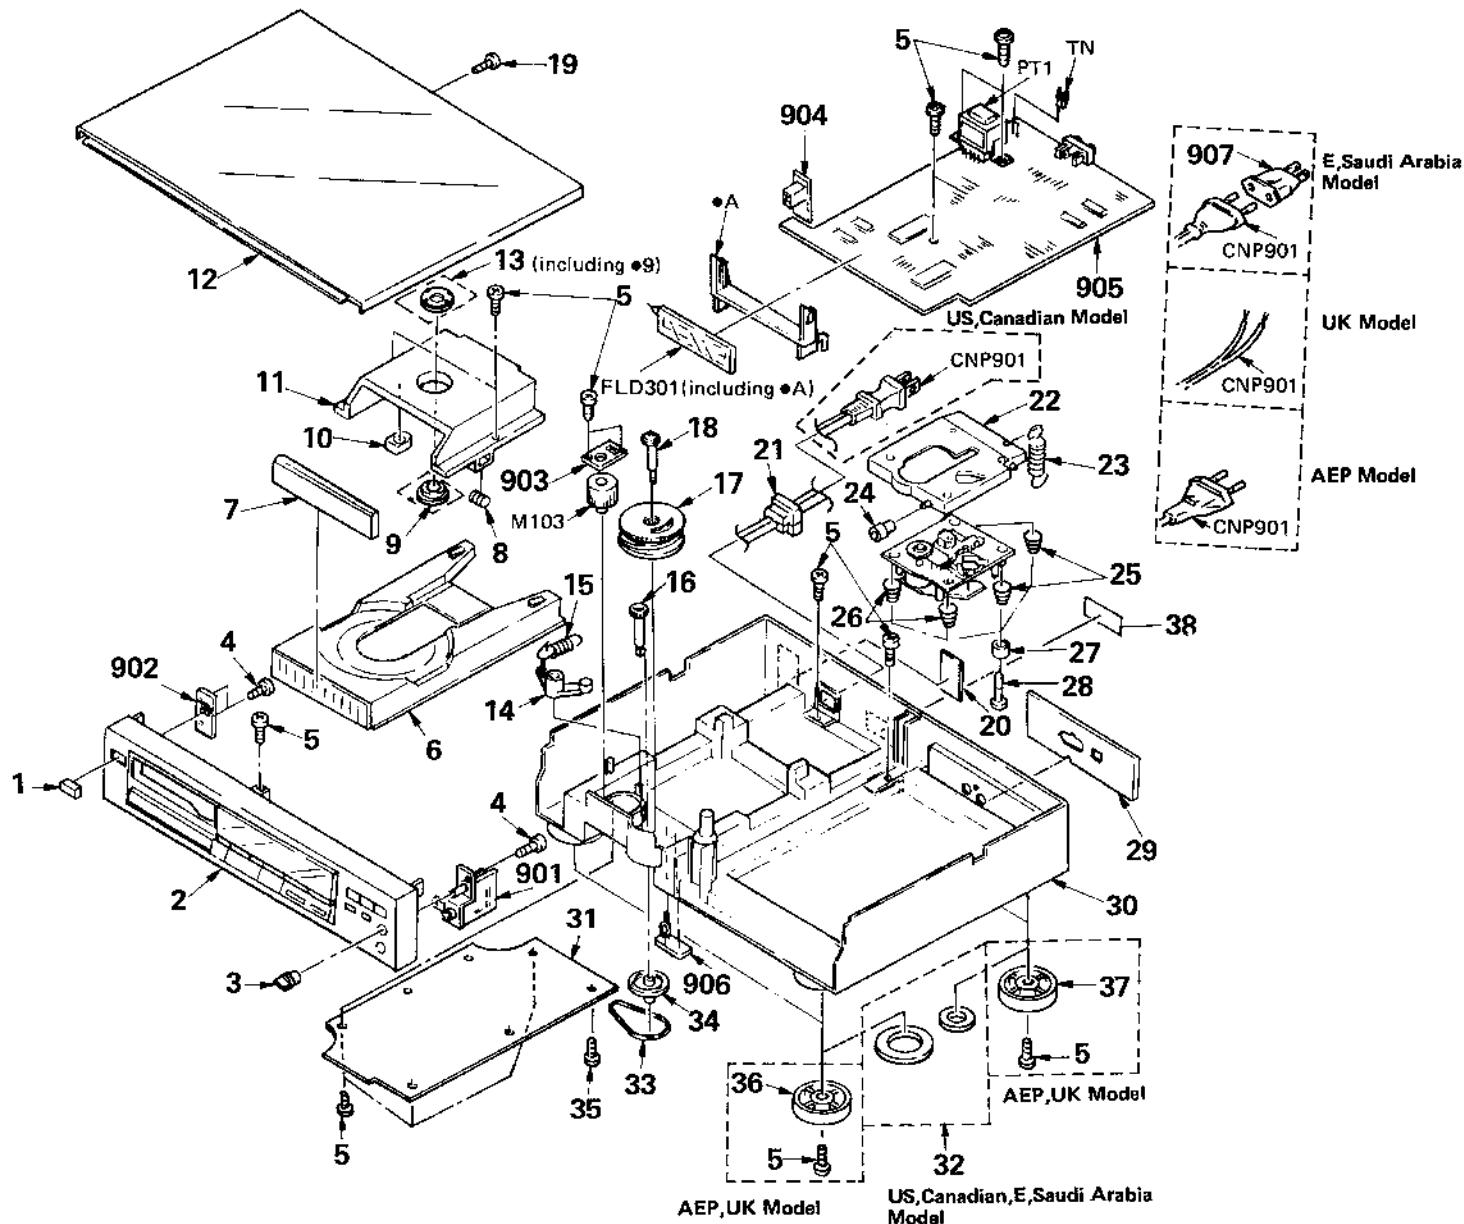


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	4-922-921-01	BUTTON (POWER)		29	*4-927-301-51	(470:US) ...PLATE (O/P TERMINAL), INDICATION	
2	X-4922-555-1	(270:US,Canadian)...PANEL ASSY, FRONT			*4-927-301-61	(470:Canadian) ...PLATE (O/P TERMINAL), INDICATION	
	X-4922-556-1	(270:AEP).....PANEL ASSY, FRONT			*4-927-301-71	(470:AEP) ...PLATE (O/P TERMINAL), INDICATION	
	X-4922-557-1	(270:Saudi Arabia)...PANEL ASSY, FRONT			*4-927-301-81	(470:E) ...PLATE (O/P TERMINAL), INDICATION	
	X-4922-564-1	(470:E).....PANEL ASSY, FRONT			*4-929-054-01	(470:UK) ...PLATE (O/P TERMINAL), INDICATION	
	X-4922-565-1	(470:AEP,UK).....PANEL ASSY, FRONT					
	X-4922-566-1	(470:US,Canadian)...PANEL ASSY, FRONT					
3	4-923-522-12	KNOB (B.TYP), LOV					
4	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S			*4-927-302-51	(270:US).....PLATE, INDICATION	
5	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S			*4-927-302-61	(270:Canadian).....PLATE, INDICATION	
6	*4-925-307-01	TABLE, DISK			*4-927-302-71	(270:AEP).....PLATE, INDICATION	
7	4-925-343-21	(270:Saudi Arabia/470)...PANEL, LOADING			*4-927-302-81	(270:Saudi Arabia)...PLATE, INDICATION	
	4-925-343-31	(270:US,Canadian,AEP)...PANEL, LOADING					
8	4-925-335-01	SPRING, COMPRESSION		30	*4-925-346-01	CHASSIS	
9	*4-918-679-04	PULLEY, PRESS		31	*4-929-049-01	PLATE (H), BOTTOM	
10	*4-922-529-01	DAMPER		32	4-922-942-01	(US,Canadian,E,Saudi Arabia)..FOOT (FELT)	
11	*4-925-345-01	HOLDER (MG)		33	4-917-522-02	BELT	
12	4-925-348-01	CASE					
13	A-4665-024-A	MAGNET ASSY		34	4-922-512-01	PULLEY	
14	4-917-519-01	LEVER, SET		35	7-685-879-01	SCREW +BVTP 3X30 (S)	
15	4-917-514-01	SPRING, TENSION		36	X-4922-917-1	(AEP,UK)...FOOT ASSY (F)	
16	4-922-508-01	GEAR (DRIVING)		37	X-4922-918-1	(AEP,UK)...FOOT ASSY (R)	
17	4-925-306-01	GEAR (LOADING)		38	*4-885-838-00	(AEP,UK,E,Saudi Arabia)...LABEL, CLASS 1	
18	7-685-152-19	SCREW, STEP					
19	7-685-650-79	SCREW (2), TAPPING		901	*1-628-122-11	PC BOARD, H.P	
20	*3-704-217-01	(US,Canadian)...LABEL		902	*1-628-123-11	PC BOARD, SW	
21	*3-703-244-00	(EXCEPT E)...BUSHING (2104), CORD		903	*1-628-124-11	PC BOARD, LD MOTOR	
	*3-703-571-11	(E).....BUSHING (S)(4516), CORD		904	*1-628-120-11	PC BOARD, SENSOR	
22	*4-922-514-01	BRACKET (BU-5)		905	*A-4651-236-A	(E,Saudi Arabia).....MOUNTED PCB, MAIN	
23	4-917-526-01	SPRING, TENSION			*A-4651-237-A	(US,Canadian,AEP,UK)...MOUNTED PCB, MAIN	
24	4-917-515-01	ROLLER		906	*1-628-125-11	PC BOARD, IO SWITCH	
25	4-917-507-01	SPRING (H)		907	▲1-526-565-00	(E)...AC PLUG, ADAPTOR	
26	4-917-541-01	SPRING (B)			▲1-506-401-11	(Saudi Arabia)...ADAPTOR, CONVERSION	
27	4-917-508-01	HOLDER, SP					
28	7-685-535-11	SCREW +BTP 2.6X10 TYPE2 N-S		▲CNP901.1-551-188-XX	(E).....CORD, POWER		
				▲CNP901.1-555-795-00	(AEP,Saudi Arabia)...CORD, EULO PLUG		
				▲CNP901.1-556-035-00	(UK).....CORD, POWER		
				▲CNP901.1-557-577-11	(US,Canadian)...CORD, POWER		
				FLD301 1-519-479-21	INDICATOR TUBE, FLUORESCENT		
				M103 A-4608-346-A	MOTOR ASSY, LOADING		
				PT1 ▲1-449-024-11	(US,Canadian,UK)...TRANSFORMER, POWER		
				PT1 ▲1-449-025-11	(AEP).....TRANSFORMER, POWER		
				PT1 ▲1-449-026-11	(E,Saudi Arabia)...TRANSFORMER, POWER		
				TN *1-535-688-11	TERMINAL		

Note:
The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-2. BU-5C

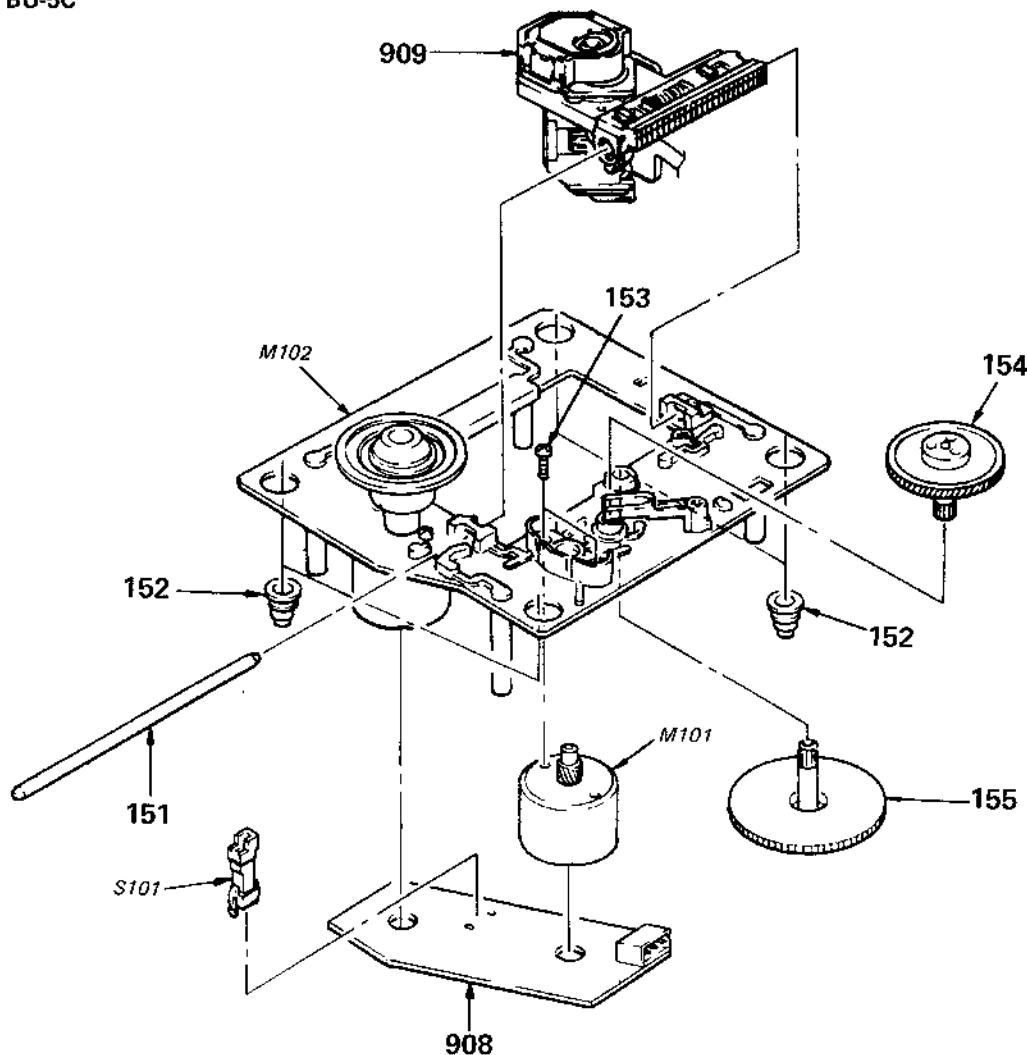

Note:
The components identified by mark or dotted line with mark are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
151	4-917-565-01	SHAFT, SLED		908	*1-626-304-11	PC BOARD, SL/SP MOTOR	
152	4-917-562-01	INSULATOR		909	8-848-062-01	DEVICE, OPTICAL KSS-150A(H)	
153	7-621-255-15	SCREW +P 2X3		M101	X-4917-504-1	MOTOR ASSY (SLED)	
154	4-917-567-01	GEAR (M)		M102	X-4917-523-1	MOTOR ASSY (SPINDLE)	
155	4-917-564-01	GEAR (P), FLATNESS		S101	1-571-274-11	SWITCH, LEAF	

SECTION 5

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “★” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:MF: μ F, PF: μ PF.**RESISTORS**

- All resistors are in ohms.
- F: nonflammable

COILS

- MMH: mH, UH: μ H

SEMICONDUCTORS

In each case, U: μ , for example:
 UA...: μ A..., UPA...: μ PA...,
 UPC...: μ PC, UPD...: μ PD...

The components identified by mark or dotted line with mark are critical for safety.
 Replace only with part number specified.

Les composants identifiés par une marque sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description				Ref.No.	Part No.	Description			
901	*1-628-122-11	PC BOARD, H.P				C227	1-124-443-00	ELECT	100MF	20%	10V
902	*1-628-123-11	PC BOARD, SW				C228	1-162-282-31	CERAMIC	100PF	10%	50V
903	*1-628-124-11	PC BOARD, LD MOTOR				C231	1-124-443-00	ELECT	100MF	20%	10V
904	*1-628-120-11	PC BOARD, SENSOR				C232	1-164-159-11	CERAMIC	0.1MF		50V
905	*A-4651-236-A	(E,Saudi Arabia)...MOUNTED PCB, MAIN				C233	1-164-159-11	CERAMIC	0.1MF		50V
	*A-4651-237-A	(US,Canadian,AEP,UK) ...MOUNTED PCB, MAIN				C234	1-123-875-11	ELECT	10MF	20%	50V
906	*1-628-125-11	PC BOARD, IO SWITCH				C235	1-124-477-11	ELECT	47MF	20%	16V
907	1-526-565-00	(E)...AC PLUG, ADAPTOR				C236	1-124-477-11	ELECT	47MF	20%	16V
908	*1-626-304-11	PC BOARD, SL/SP MOTOR				C238	1-136-165-00	FILM	0.1MF	5%	50V
909	8-848-062-01	DEVICE, OPTICAL KSS-150A(H)				C239	1-161-375-00	CERAMIC	0.0022MF	30%	16V
C101	1-124-556-11	ELECT	2200MF	20%	16V	C240	1-162-291-31	CERAMIC	560PF	10%	50V
C102	1-124-898-11	ELECT	4700MF	20%	16V	C301	1-123-875-11	ELECT	10MF	20%	50V
C103	1-124-572-11	ELECT	100MF	20%	63V	C302	1-124-443-00	ELECT	100MF	20%	10V
C104	1-123-875-11	ELECT	10MF	20%	50V	C303	1-124-499-11	ELECT	1MF	20%	50V
C105	1-124-443-00	ELECT	100MF	20%	10V	C304	1-124-499-11	ELECT	1MF	20%	50V
C106	1-124-443-00	ELECT	100MF	20%	10V	C305	1-124-902-00	ELECT	0.47MF	20%	50V
C107	1-124-927-11	ELECT	4.7MF	20%	50V	C306	1-136-159-00	FILM	0.033MF	5%	50V
C108	1-123-875-11	ELECT	10MF	20%	50V	C307	1-164-159-11	CERAMIC	0.1MF		50V
C109	1-161-379-00	CERAMIC	0.01MF	20%	16V	C308	1-164-159-11	CERAMIC	0.1MF		50V
C110	1-124-443-00	ELECT	100MF	20%	10V	C309	1-161-379-00	CERAMIC	0.01MF	20%	16V
C112	1-124-499-11	ELECT	1MF	20%	50V	C310	1-164-159-11	CERAMIC	0.1MF		50V
C201	1-161-375-00	CERAMIC	0.0022MF	30%	16V	C311	1-162-291-31	CERAMIC	560PF	10%	50V
C202	1-136-153-00	FILM	0.01MF	5%	50V	C312	1-162-291-31	CERAMIC	560PF	10%	50V
C203	1-136-153-00	FILM	0.01MF	5%	50V	C313	1-162-291-31	CERAMIC	560PF	10%	50V
C204	1-162-205-31	CERAMIC	18PF	5%	50V	C401	1-164-159-11	CERAMIC	0.1MF		50V
C205	1-162-205-31	CERAMIC	18PF	5%	50V	C402	1-162-203-31	CERAMIC	15PF	5%	50V
C206	1-124-902-00	ELECT	0.47MF	20%	50V	C403	1-162-203-31	CERAMIC	15PF	5%	50V
C208	1-124-443-00	ELECT	100MF	20%	10V	C404	1-164-159-11	CERAMIC	0.1MF		50V
C209	1-124-443-00	ELECT	100MF	20%	10V	C405	1-124-443-00	ELECT	100MF	20%	10V
C210	1-161-377-00	CERAMIC	0.0047MF	20%	16V	C406	1-124-927-11	ELECT	4.7MF	20%	50V
C211	1-136-159-00	FILM	0.033MF	5%	50V	C407	1-124-927-11	ELECT	4.7MF	20%	50V
C212	1-124-477-11	ELECT	47MF	20%	16V	C408	1-124-443-00	ELECT	100MF	20%	10V
C213	1-164-159-11	CERAMIC	0.1MF			C409	1-124-443-00	ELECT	100MF	20%	10V
C214	1-162-294-31	CERAMIC	0.001MF	10%	50V	C410	1-162-291-31	CERAMIC	560PF	10%	50V
C215	1-161-375-00	CERAMIC	0.0022MF	30%	16V	C411	1-162-291-31	CERAMIC	560PF	10%	50V
C216	1-136-165-00	FILM	0.1MF	5%	50V	C412	1-164-159-11	CERAMIC	0.1MF		50V
C217	1-136-159-00	FILM	0.033MF	5%	50V	C413	1-162-286-31	CERAMIC	220PF	10%	50V
C218	1-123-382-00	ELECT	3.3MF	20%	50V	C414	1-162-286-31	CERAMIC	220PF	10%	50V
C219	1-136-165-00	FILM	0.1MF	5%	50V	C601	1-161-374-11	CERAMIC	0.0015MF	30%	16V
C220	1-161-379-00	CERAMIC	0.01MF	20%	16V	C602	1-161-374-11	CERAMIC	0.0015MF	30%	16V
C221	1-161-377-00	CERAMIC	0.0047MF	20%	16V	CN101	*1-564-338-00	PIN, CONNECTOR 4P			
C222	1-124-927-11	ELECT	4.7MF	20%	50V	CN200	*1-564-495-11	PIN, CONNECTOR 2P			
C223	1-124-477-11	ELECT	47MF	20%	16V	CN200A	*1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P			
C224	1-162-294-31	CERAMIC	0.001MF	10%	50V	CN202	*1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P			
C225	1-124-499-11	ELECT	1MF	20%	50V	CN203	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			
C226	1-124-499-11	ELECT	1MF	20%	50V	CN204	*1-564-339-00	PIN, CONNECTOR 5P			

Ref.No.	Part No.	Description
CN301	*1-566-165-11	CONNECTOR, BOARD TO BOARD 3P
CN401	*1-564-337-00	PIN, CONNECTOR 3P
△CNP901.1-551-188-XX	(E).....	CORD, POWER
△CNP901.1-555-795-00	(AEP,Saudi Arabia)...	CORD, EUO PLUG
△CNP901.1-556-035-00	(UK).....	CORD, POWER
△CNP901.1-557-577-11	(US,Canadian)...	CORD, POWER
D1	8-719-109-97	DIODE RD6-BES-B2
D3	8-719-107-94	DIODE ISS202-1
D4	8-719-107-94	DIODE ISS202-1
D5	8-719-107-94	DIODE ISS202-1
D6	8-719-200-02	DIODE 10E2
D7	8-719-200-02	DIODE 10E2
D8	8-719-200-02	DIODE 10E2
D9	8-719-200-02	DIODE 10E2
D10	8-719-200-02	DIODE 10E2
FLD301	1-519-479-21	INDICATOR TUBE, FLUORESCENT
IC1	8-759-631-40	IC M6294P
IC2	8-752-034-00	IC CXA1081S
IC3	8-752-032-30	IC CXA1082BS
IC4	8-759-035-28	IC CXA1291P
IC5	8-759-035-28	IC CXA1291P
IC6	8-759-978-34	IC MSC6458-32SS
IC7	8-752-328-62	IC CXD1125Q
IC8	8-752-323-54	IC CXK5816M-12L
IC9	8-752-328-72	IC CXD2550P
IC10	8-759-805-36	IC CXD1161P-3
IC11	8-759-631-39	IC M5204P
IC12	8-759-605-43	IC M5231TL
IC13	8-749-920-03	IC GP1U52
IB101	1-233-171-11	COMPOSITION CIRCUIT BLOCK
IB102	1-233-171-11	COMPOSITION CIRCUIT BLOCK
J401	*1-562-999-21	JACK, PIN 2P (LINE OUT)
J601	1-566-936-61	JACK, LARGE TYPE (PHONES)
M101	X-4917-504-1	MOTOR ASSY (SLED)
M102	X-4917-523-1	MOTOR ASSY (SPINDLE)
M103	A-4608-346-A	MOTOR ASSY, LOADING
PT1	△1-449-024-11	(US,Canadian,UK)...TRANSFORMER, POWER
PT1	△1-449-025-11	(AEP).....TRANSFORMER, POWER
PT1	△1-449-026-11	(E,Saudi Arabia)...TRANSFORMER, POWER
Q1	8-729-600-94	TRANSISTOR 2SK381-C
Q2	8-729-116-57	TRANSISTOR 2S81068-K
Q3	8-729-900-80	TRANSISTOR DTC114ES
Q4	8-729-115-77	TRANSISTOR BA1L4M
Q5	8-729-115-77	TRANSISTOR BA1L4M
Q6	8-729-115-77	TRANSISTOR BA1L4M

Ref.No.	Part No.	Description
R101	1-249-439-11	CARBON
R102	1-249-423-11	CARBON
R103	1-249-417-11	CARBON
R201	1-247-864-11	CARBON
R202	1-249-433-11	CARBON
R203	1-249-417-11	CARBON
R204	1-249-397-11	CARBON
R205	1-247-806-11	CARBON
R206	1-249-432-11	CARBON
R207	1-249-432-11	CARBON
R208	1-249-425-11	CARBON
R209	1-249-441-11	CARBON
R210	1-249-417-11	CARBON
R211	1-249-425-11	CARBON
R212	1-247-882-11	CARBON
R213	1-249-440-11	CARBON
R214	1-249-423-11	CARBON
R215	1-247-896-11	CARBON
R216	1-249-429-11	CARBON
R218	1-249-433-11	CARBON
R219	1-249-414-11	CARBON
R220	1-249-441-11	CARBON
R221	1-215-434-00	METAL
R222	1-249-429-11	CARBON
R223	1-249-441-11	CARBON
R224	1-249-393-11	CARBON
R225	1-249-435-11	CARBON
R226	1-247-889-00	CARBON
R227	1-249-393-11	CARBON
R228	1-249-423-11	CARBON
R229	1-247-881-00	CARBON
R230	1-249-427-11	CARBON
R231	1-249-425-11	CARBON
R232	1-249-437-11	CARBON
R233	1-249-435-11	CARBON
R234	1-247-882-11	CARBON
R235	1-247-883-00	CARBON
R236	1-247-883-00	CARBON
R237	1-247-882-11	CARBON
R238	1-249-432-11	CARBON
R239	1-249-432-11	CARBON
R240	1-249-423-11	CARBON
R301	1-249-425-11	CARBON
R302	1-249-425-11	CARBON
R303	1-249-425-11	CARBON

Note:
The components identified by mark or dotted line with mark are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SONY® SERVICE MANUAL

*US Model
Canadian Model
AEP Model
E Model
CDP-270*

*US Model
Canadian Model
AEP Model
UK Model
E Model
CDP-470*

SUPPLEMENT-1

File this supplement with the service manual.

This SUPPLEMENT-1 is for the model made in France.
Refer to the CDP-270/470 SERVICE MANUAL for related
information not contained in this SUPPLEMENT-1.

[MODEL IDENTIFICATION]

SONY	MODEL NO.	CDP-270
COMPACT DISC PLAYER		CDP-470
SERIAL NO.		LABEL. MODEL NUMBER
MADE IN FRANCE		

Identify the set with the indication of "MADE IN FRANCE" here.

The following parts are not used in the CDP-270/470 (US, Canadian,
UK, E MODEL), but used in the CDP-270/470 made in FRANCE only.

ELECTRICAL PARTS LIST

Page	Ref No.	Part No.	Description
21	901	*1-630-126-11	PC BOARD, HP
21	902	*1-630-127-11	PC BOARD, SW
21	903	*1-624-793-11	PC BOARD, LOADING MOTOR
21	905	*A-4617-039-A	MOUNTED PCB, MAIN
21	908	*1-629-464-11	PC BOARD, SL/SP MOTOR
21	909	△.8-848-062-01	DEVICE, OPTICAL KSS-150A (H)

MAIN BOARD

Page	Ref No.	Part No.	Description
21	C202,203	1-130-483-00	MYLAR 0.01MF 5% 50V
21	C211,217	1-130-489-00	MYLAR 0.033MF 5% 50V
21	C238	1-136-162-00	FILM 0.056MF 5% 50V
21	C306.	1-130-489-00	MYLAR 0.033MF 5% 50V
21	C402	1-162-202-31	CERAMIC 13PF 5% 50V
22	CN101	*1-564-706-11	PIN. CONNECTOR (SMALL TYPE) 4P
22	CN204	*1-564-707-11	PIN. CONNECTOR (SMALL TYPE) 5P
22	CN401	*1-564-705-11	PIN. CONNECTOR (SMALL TYPE) 3P
22	CNP901	△.J-574-127-11	CORD, POWER
22	IC4,5	8-759-805-18	IC LA6520
22	IC6	8-759-988-85	IC MSC6458-38SS


The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• PRINTED WIRING BOARDS

- The following PC BOARDS are used in the model made in France only.

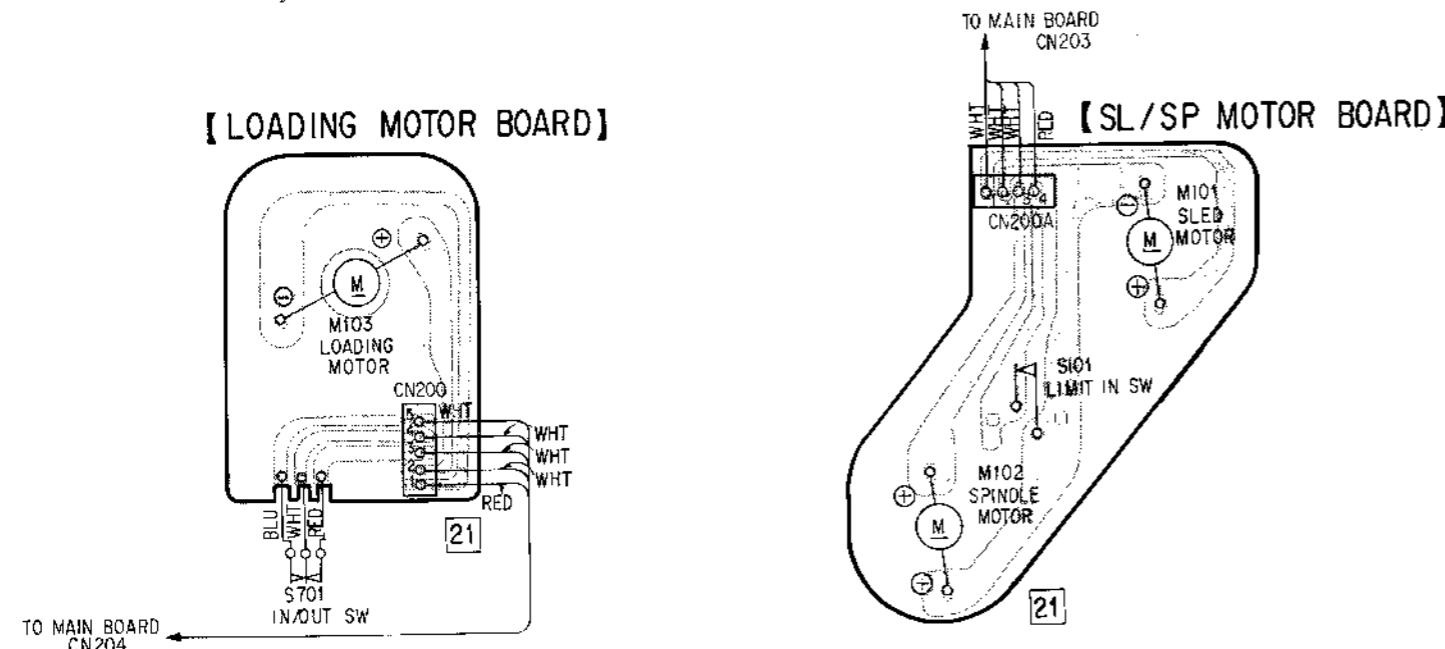

22	IC8	8-752-323-64	IC LC9600P-144
22	IC10	8-759-821-24	IC LC7881-C
22	R229	1-249-440-00	CARBON 82K 5% 1/4W
22	R234, 237	1-249-883-00	CARBON 150K 5% 1/4W
23	S1	1-554-088-00	SWITCH, KEY BOARD
23	S2, 3	1-571-810-11	SWITCH, KEY BOARD
23	S4	1-554-088-00	SWITCH, KEY BOARD
23	S5	1-571-810-11	SWITCH, KEY BOARD
23	S6, 7	1-554-088-00	SWITCH, KEY BOARD
23	S8	1-571-810-11	SWITCH, KEY BOARD
23	S9-14	1-554-088-00	SWITCH, KEY BOARD
23	S15	1-571-810-11	SWITCH, KEY BOARD
23	S16	1-554-088-00	SWITCH, KEY BOARD
23	X301	1-567-686-11	VIBRATOR, CERAMIC
23	X401	1-577-328-11	VIBRATOR, CRYSTAL

I/O SWITCH BOARD (Not MADE IN FRANCE)

Page	Ref No.	Part No.	Description
12.21	906	_____	PC BOARD, I/O SWITCH
12.21	S701	_____	SWITCH, ROTARY (IN/OUT)
12.21	CONNECTOR	_____	CONNECTOR 2P, 5P

LD MOTOR BOARD (Not MADE IN FRANCE)

Page	Ref No.	Part No.	Description
12.21	903	_____	PC BOARD, LD MOTOR
12.21	CN200	_____	PIN, CONNECTOR 2P
12.21	M103	_____	LOADING MOTOR

LOADING MOTOR BOARD

Page	Ref No.	Part No.	Description
12.21	CN200	*1-564-721-11	PIN, CONNECTOR (SMALL TYPE) 5P
12.21	M103	X-2641-336-1	LOADING MOTOR
12.21	S701	1-571-312-11	SWITCH, LEAF (IN/OUT)

SL/SP MOTOR BOARD

Page	Ref No.	Part No.	Description
12.22	S101	1-570-822-22	LIMIT IN SWITCH
12.22	M101	X-2641-344-1	SLED MOTOR
12.22	M102	X-2641-350-1	SPINDLE MOTOR
12.22	CN200A	*1-564-720-11	PIN, CONNECTR (SMALL TYPE) 4P

ACCESSORY & PACKING MATERIAL

Page	Part No.	Description
23	3-750-022-51	MANUAL, INSTRUCTION
23	3-750-022-61	MANUAL, INSTRUCTION
23	*4-929-507-21	(CDP-470) ... INDIVIDUAL CARTON
23	*4-929-507-31	(CDP-270) ... INDIVIDUAL CARTON
23	*4-929-058-01	(CDP-270) ... LABEL, MODEL NUMBER
23	*4-929-059-01	(CDP-470) ... LABEL, MODEL NUMBER


NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts Example:
(RED) ... KNOB, BALANCE (WHITE)
↑ Cabinet's Color ↑ Parts Color


The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.
Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

1. CABINET SECTION (MADE IN FRANCE TYPE)

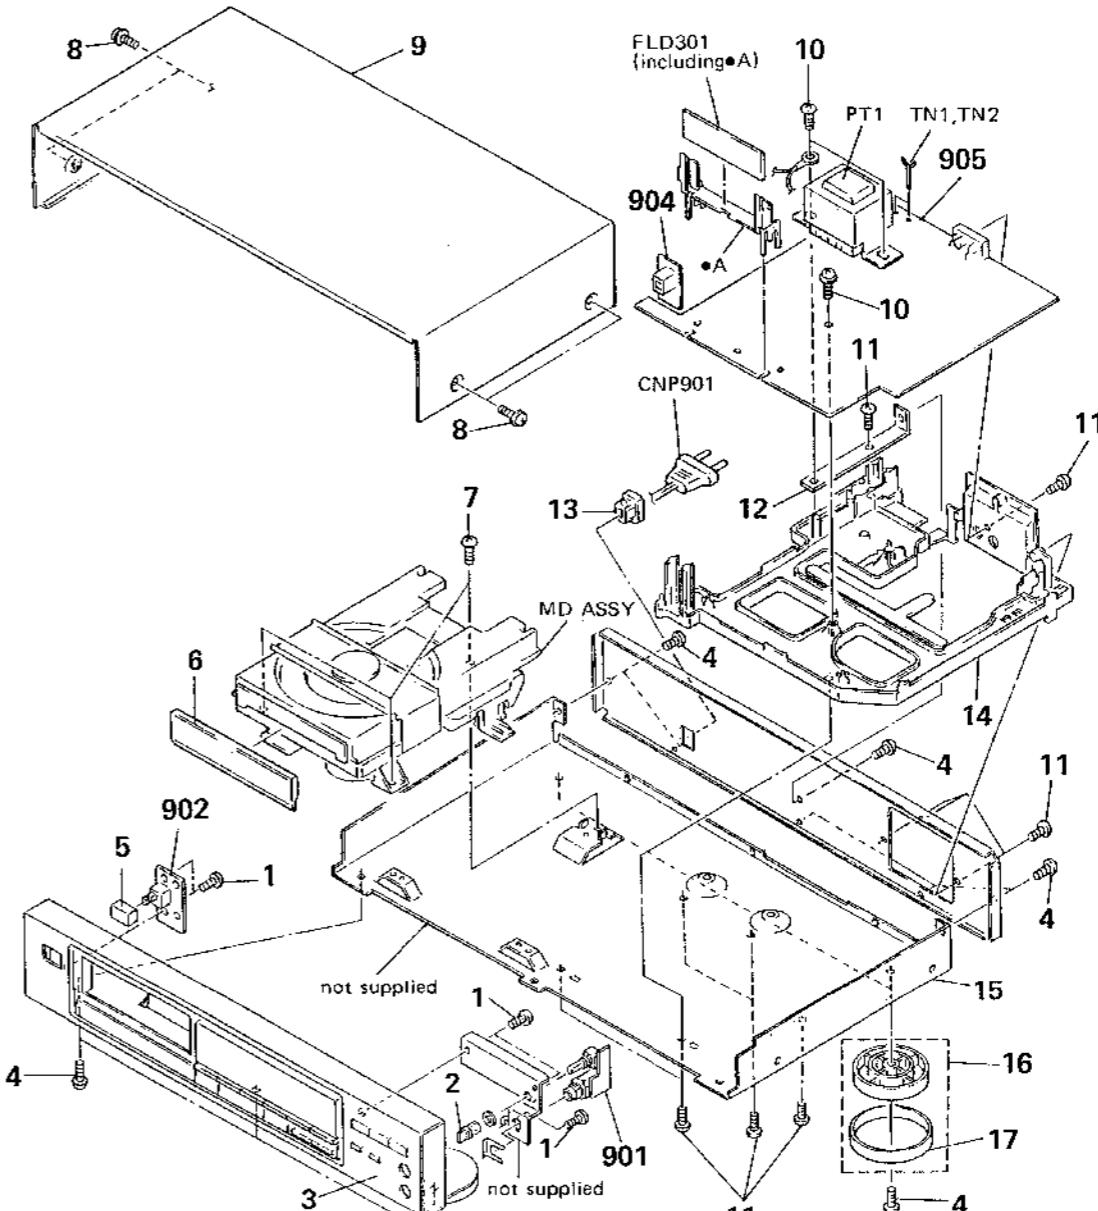


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S		13	*3-703-244-00	BUSHING (2104), CORD	
2	4-923-522-12	KNOB (B.TYP), VOL (PHONE LEVEL)		14	*4-929-034-01	HOLDER (MAIN PC BOARD)	
3	X-4922-561-3	(CDP-270) ... PANEL ASSY, FRONT		15	*4-929-024-01	PANEL, BACK	
	X-4922-562-3	(CDP-470) ... PANEL ASSY, FRONT		16	4-929-030-11	RING (DIA.58A), ORNAMENTAL	
4	7-685-872-09	SCREW +BTP 3X8 (S)		17	X-4885-905-1	FOOT ASSY	
5	4-922-921-01	BUTTON (POWER)					
6	4-929-026-11	(CDP-270) ... PANEL, LOADING		901	*1-630-126-11	PC BOARD, HP	
	4-929-026-21	(CDP-470) ... PANEL, LOADING		902	*1-630-127-11	PC BOARD, SW	
7	7-685-548-04	SCREW, S TIGHT, (+) PTWH (3X8)		905	*4-4167-039-A	MONTEED PCB, MAIN	
8	3-704-366-31	SCREW (CASE) (M3X6)					
9	4-929-035-11	CASE		FLD301	1-519-479-21	CORD, POWER	
10	7-685-647-79	SCREW, TAPPING		PT1	1-449-025-11	INDICATOR TUBE, FLUORESCENT	
11	7-685-647-79	SCREW +BTP 3X10 TYPE2 N-S		TN1	*1-535-688-11	TRANSFORMER, POWER	
12	*4-929-029-01	BRACKET (TRANSFORMER)		TN2	*1-535-688-11	TERMINAL	

2. BU-5C (1) (MADE IN FRANCE TYPE)

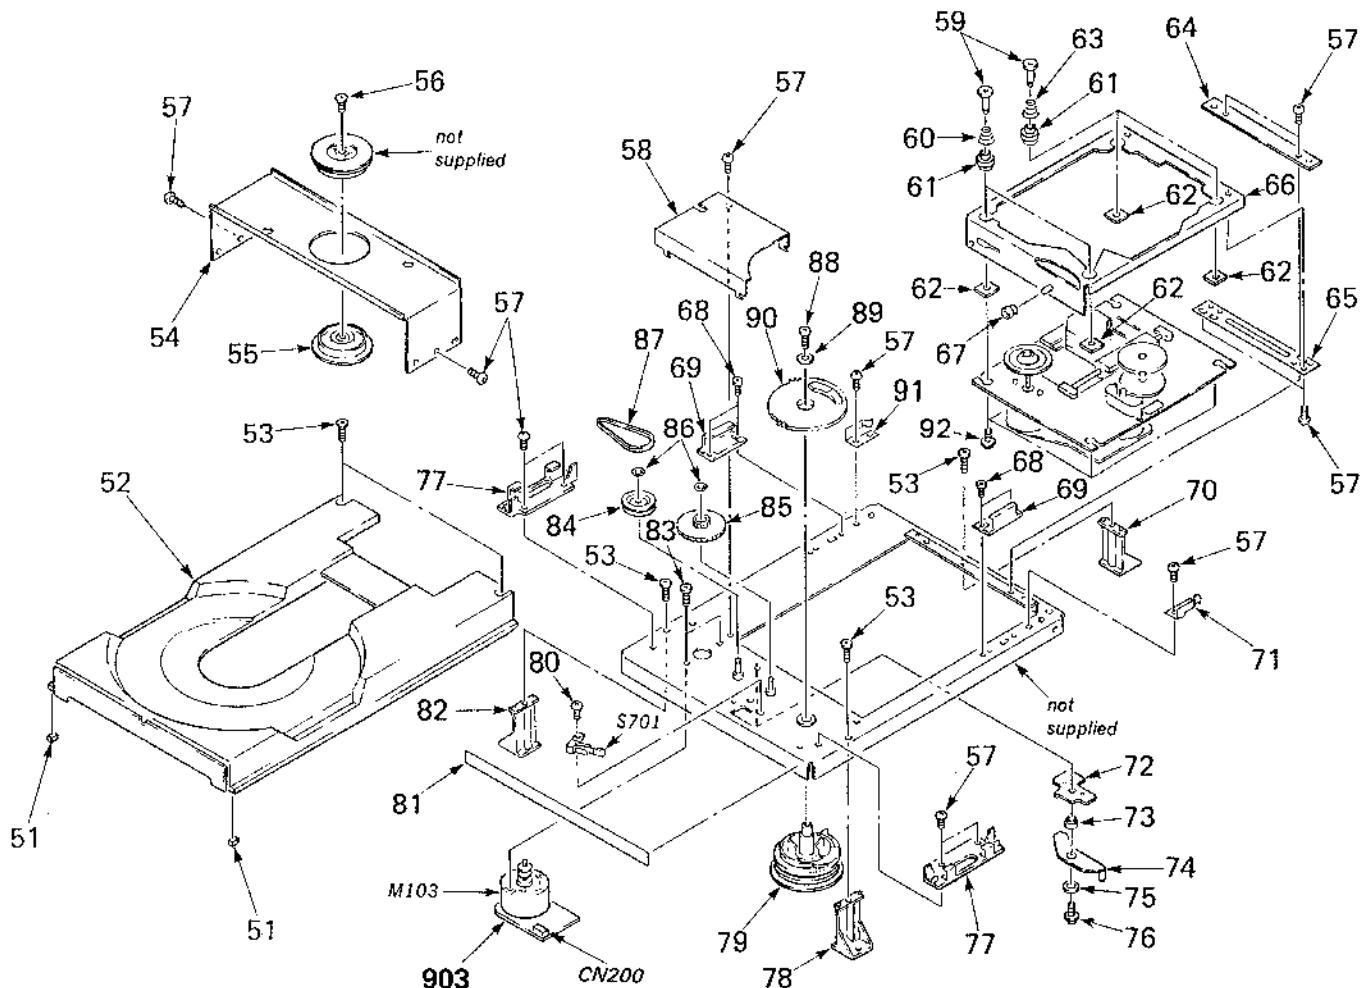

Ref.No	Part No.	Description	Remarks	Ref.No	Part No.	Description	Remarks
51	*2-642-125-01	DAMPER		74	*X-2642-109-1	LINK ASSY (AU), STOPPER	
52	2-642-156-01	TRAY (SP)		75	*2-642-172-01	SPACER (SP)	
53	7-685-647-79	SCREW + BTP 3X10 TYPE2 N-S		76	7-685-134-19	SCREW (+ PTPWH) (2.6X8)	
54	*2-642-165-01	CHASSIS (SP), CHUCK		77	2-642-161-01	HOLDER (FRONT) (SP), TRAY	
55	2-642-432-01	PULLEY, CHUCKING		78	*2-642-510-01	BOSS (RIGHT), MD FITTING	
56	7-585-132-19	SCREW + BTP 2.6X5 TYPE2 N-S		79	2-642-153-01	CAM (SP), CONTROL	
57	7-621-770-67	SCREW + BVTT 2.6X6 (S)		80	7-621-255-25	SCREW +BVTT 2X4 (S)	
58	*2-642-149-02	COVER (SP), GEAR		81	*2-642-157-03	TAPE, FRONT	
59	2-642-160-01	SHAFT (T) (SP)		82	*2-642-511-01	BOSS (LEFT), MD FITTING	
60	2-642-139-01	SPRING (A)		83	7-621-775-00	SCREW +B 2.6X3	
61	2-642-158-01	INSULATOR (C)		84	4-913-731-01	PULLEY, ROADING	
62	2-642-159-01	PLATE (T) (SP)		85	2-642-148-01	GEAR (SP), MIDWAY	
63	2-642-137-01	SPRING (B)		86	3-558-708-21	WASHER, STOPPER	
64	*2-642-170-01	RETAINER (SP), HINGE		87	3-653-387-00	BELT, LM	
65	*2-642-164-01	HINGE (SP)		88	7-685-135-19	SCREW +BTP 2.6X10 TYPE2 N-S	
66	*X-2642-105-2	CHASSIS ASSY (SP), SUB		89	4-812-554-00	WASHER	
67	2-642-169-01	ROLLER (SP)		90	2-642-154-03	GEAR (SP), DRIVE	
68	7-621-255-25	SCREW + PTT 2X4 (S)		91	*2-642-147-01	GUIDE (LEFT) (SP), TRAY	
69	2-642-162-01	HOLDER (REAR) (SP), TRAY		92	2-642-142-01	SCREW	
70	*2-642-512-01	BOSS (REAR), MD FITTING		903	1-624-793-21	PC BOARD, LOADING MOTOR	
71	*2-642-146-01	GUIDE (RIGHT) (SP), TRAY		CN200	1-564-721-11	PIN CONNECTOR (SMALL TYPE) 5P	
72	2-642-173-01	PLATE (SP), LINK		M103	X-2641-336-1	MOTOR ASSY (LOADING)	
73	*2-642-133-02	BOSS		S701	1-571-312-11	SWITCH, LEAF (IN/OUT SW)	

3. BU-5C (2) (MADE IN FRANCE TYPE)

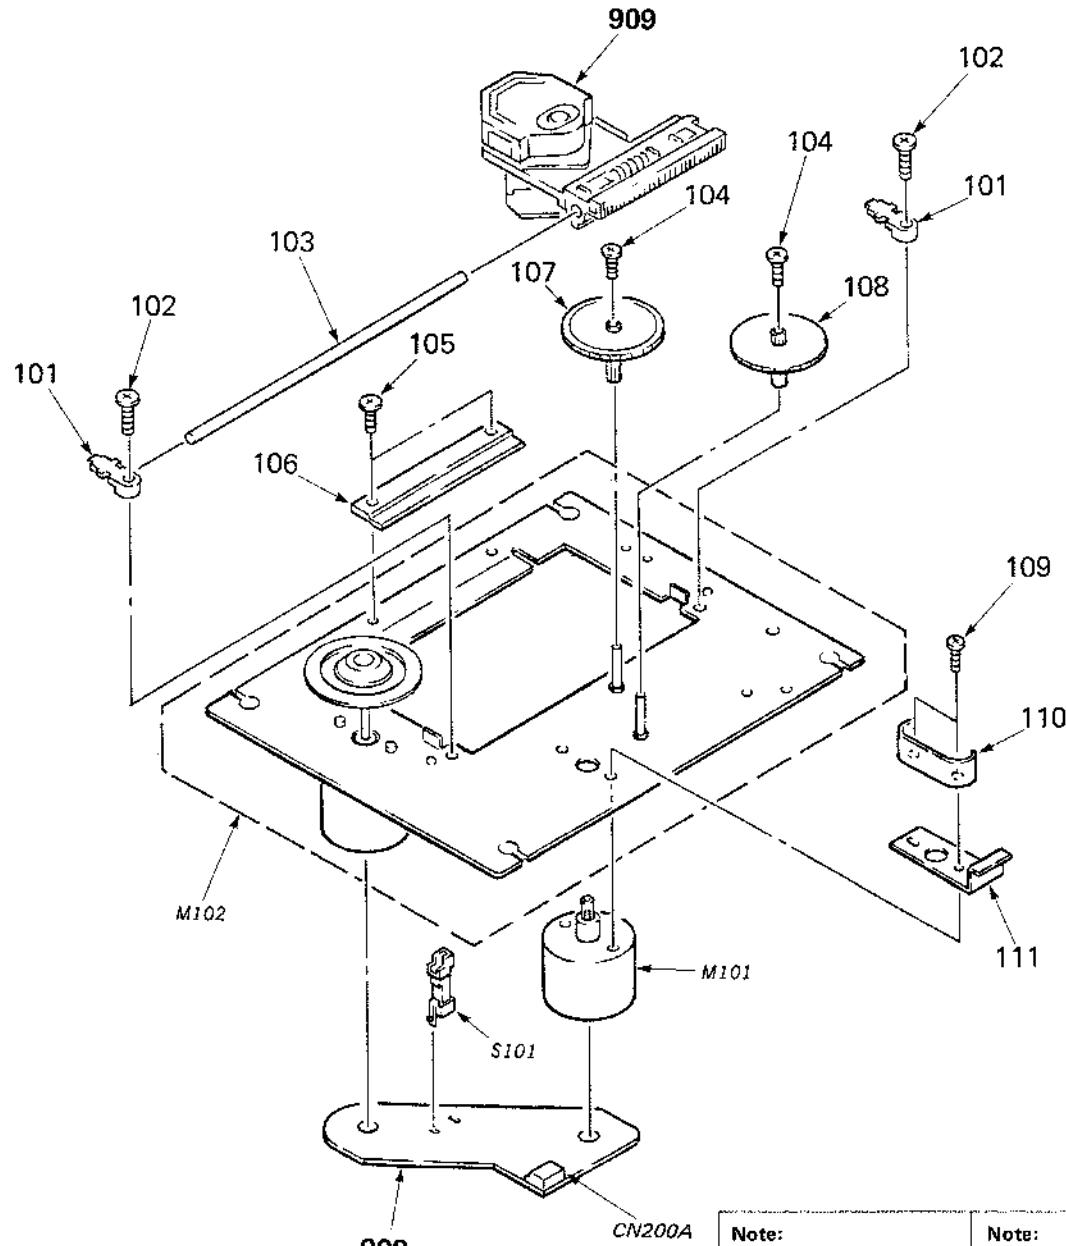


Note:
The components identified by mark or dotted line with mark are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description	Remarks
101	2-641-448-02	CLAMP, SHAFT	
102	2-641-447-01	SCREW (2.6X8), +STP	
103	*4-910-431-01	SHAFT, SLIDE	
104	3-303-809-31	SCREW (M1.7X3.0), SPECIAL HEAD	
105	2-641-386-01	SCREW (2X5), TAPPING (S)	
106	2-641-439-11	HOLDER, SLIDE	
107	2-641-404-02	GEAR (A)	
108	2-641-403-06	GEAR (B)	
109	7-621-255-35	SCREW, +P 2X5	

Ref.No	Part No.	Description	Remarks
110	2-641-434-01	COVER, GEAR	
111	*2-641-371-01	STOPPER	
908	*1-629-484-11	PC BOARD, SL/SP MOTOR	
909	8-848-062-01	DEVICE, OPTICAL KSS-150A (H)	
CN200A	*1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
M101	X-2641-344-1	SLED MOTOR	
M102	X-2641-350-1	SPINDLE MOTOR	
S101	1-570-822-22	SWITCH, LEAF (LIMIT IN)	

● SCHEMATIC DIAGRAM

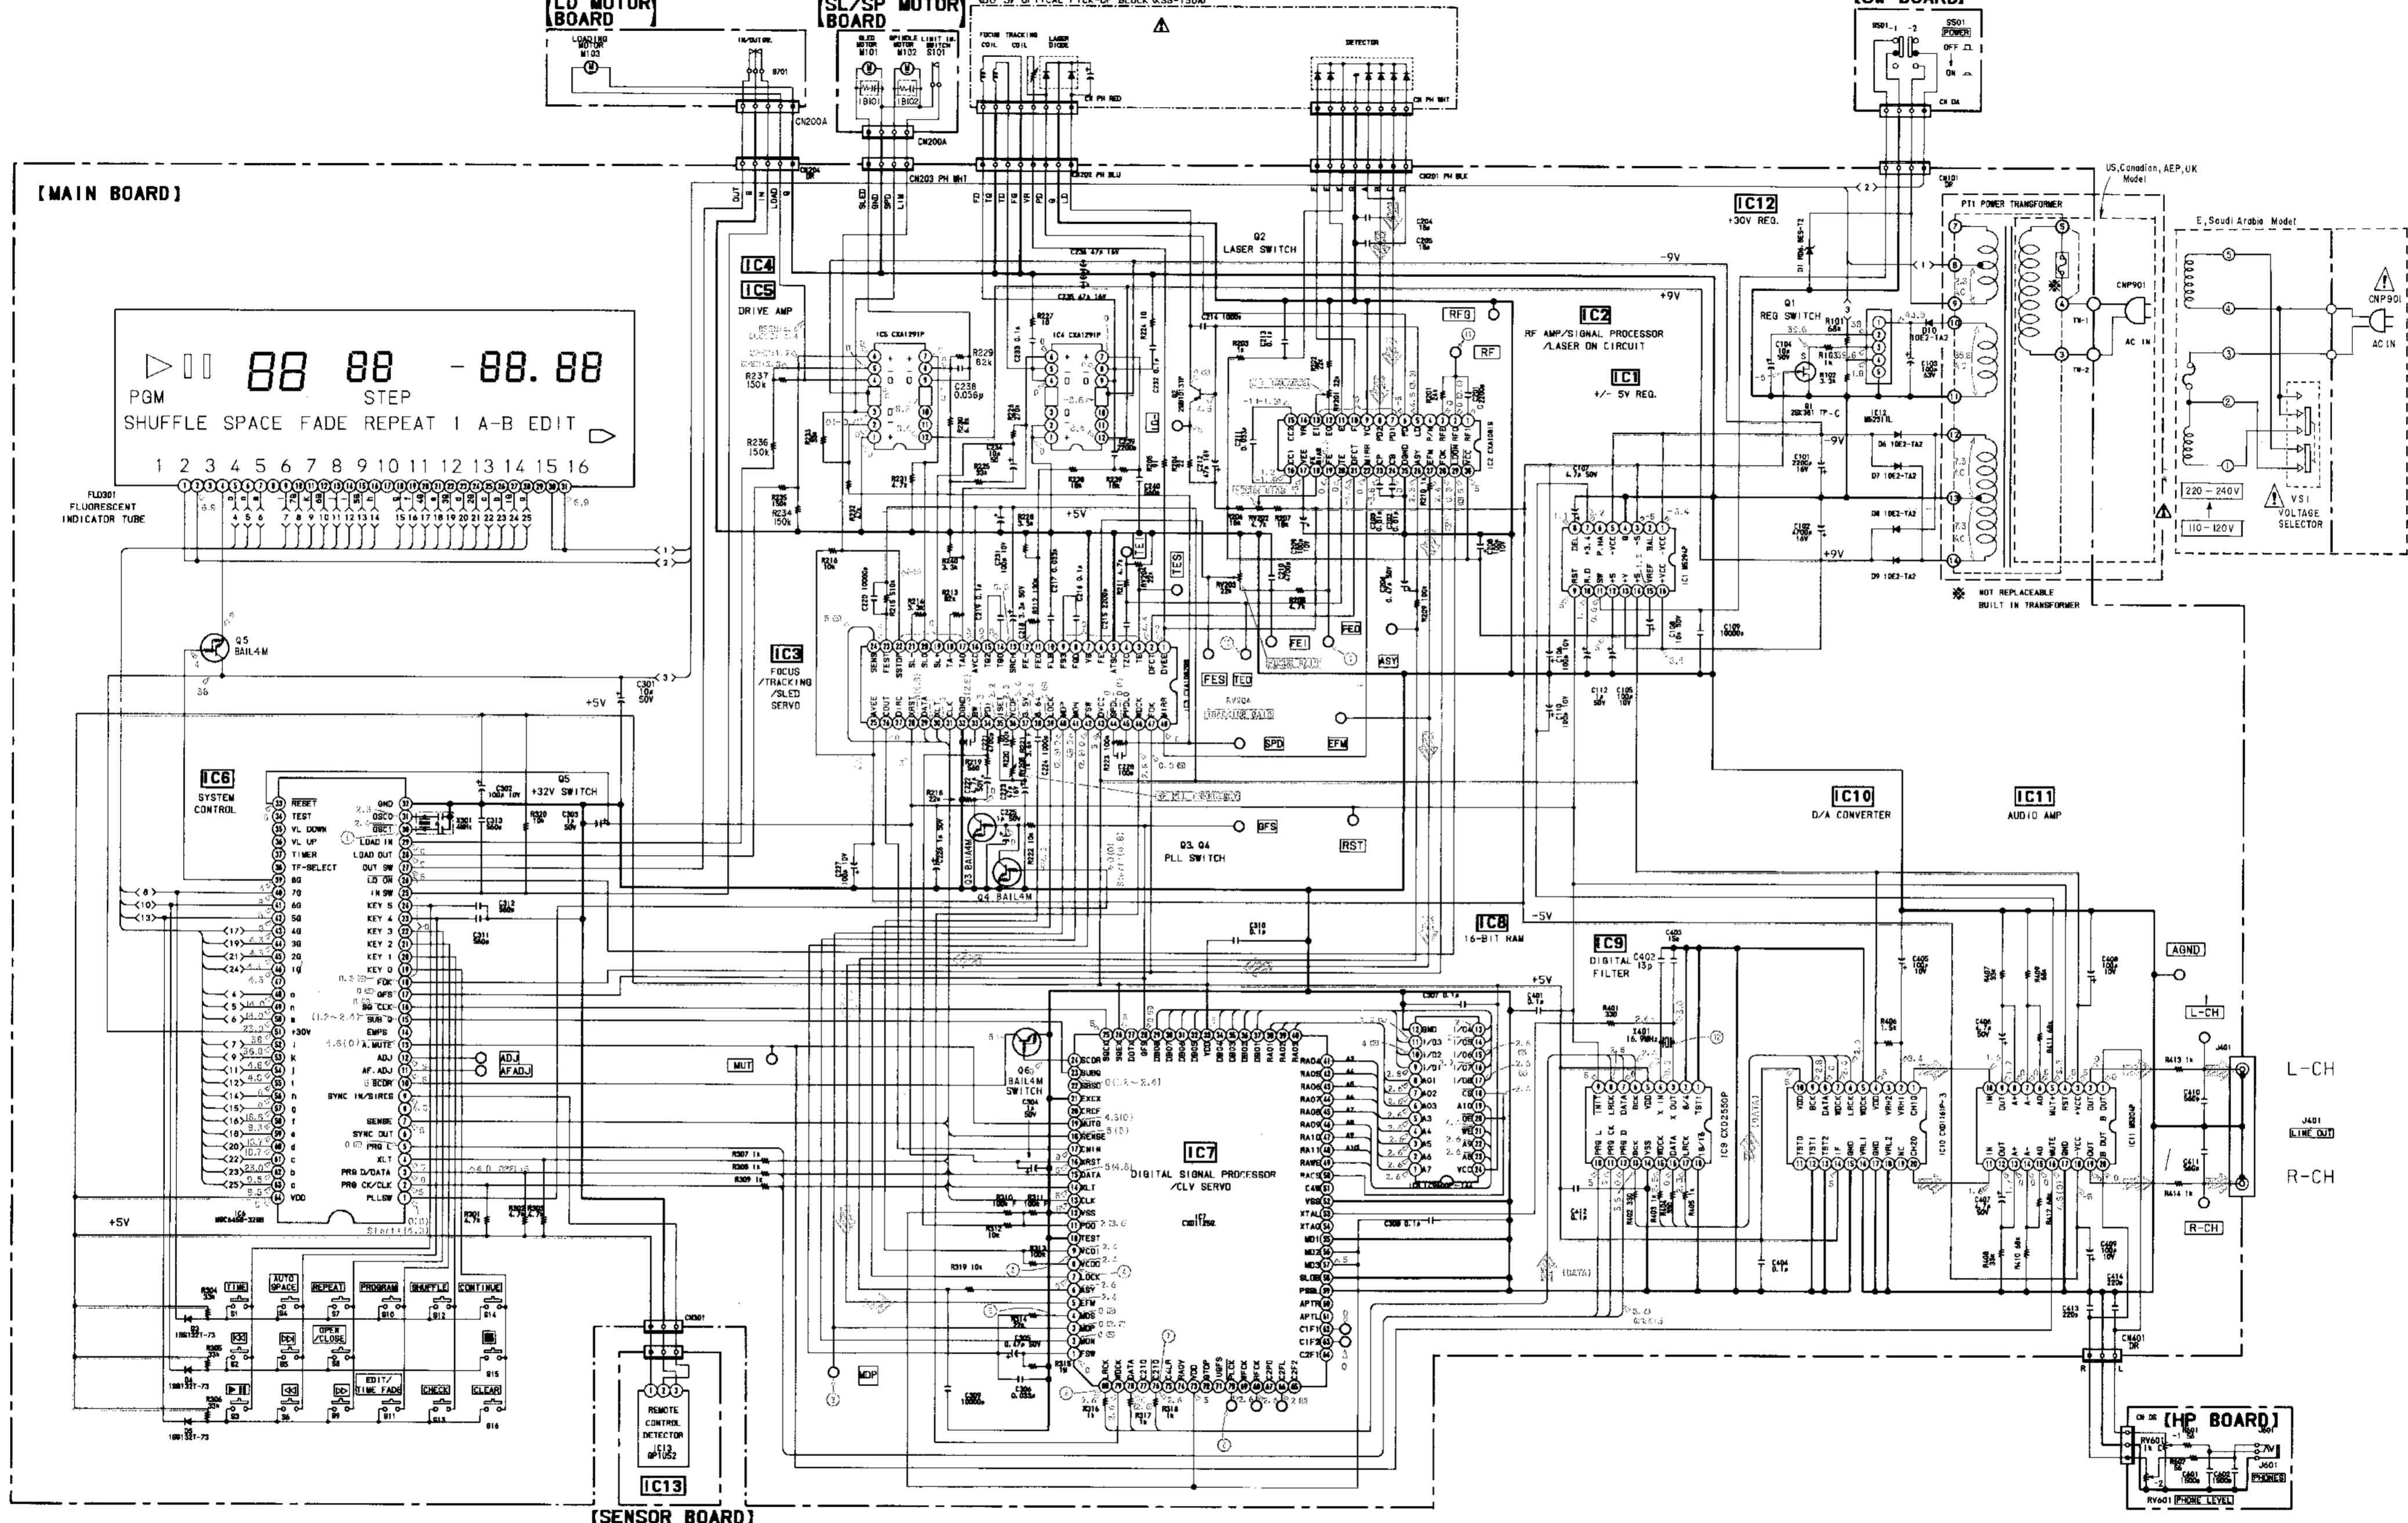

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μ 50WV or less are not indicated except for electrolytic and tantalums.
 - All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
 - Δ : internal component.

~~o~~ ~~_____~~ : B + line

- o marker : B - line
 - o  : adjustment for repair
 - o Signal path:
 -  : CD
 - o Voltage and waveforms are dc with respect to ground under no signal conditions.
 - no mark : STOP Mode
 - () : PLAY

- Voltages are taken with a VOM, (input impedance $10M\Omega$)
Voltage variations may be noted due to normal production tolerances.

- Waveforms are taken with a oscilloscope.
 - Voltage variations may be noted due to normal production tolerances.
 - Circled numbers refer to waveforms.

Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

9-953-699-12
(with 9-953-699-81)

Sony Corporation
Audio Group

—42—

Published by Customer Relations and Service Group

English

90D0620-1 (2)

Printed in Japan

©1989.3