


# CDP-X339ES

## SERVICE MANUAL

*US Model  
Canadian Model  
AEP Model  
UK Model*

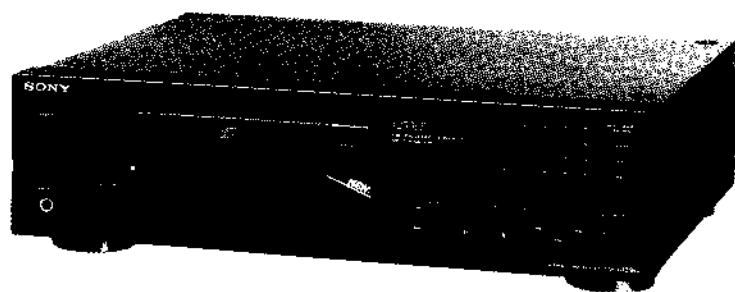

COMPACT  
DISC  
DIGITAL AUDIO

### SPECIFICATIONS

**Compact disc player**

Laser	Semiconductor laser ( $\lambda = 780 \text{ nm}$ ) Emission duration: continuous
Laser output	Max. $44.6\mu\text{W}$ This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.
Frequency response	2 Hz ~ 20 kHz $\pm 0.3$ dB
Signal to noise ratio	More than 116 dB
Dynamic range	More than 100 dB
Harmonic distortion	Less than 0.0018%
Channel separation	More than 110 dB

**Outputs**

LINE OUT (FIXED) (phono jacks)	Output level 2V (at 50 kilohms) Load impedance over 10 kilohms
LINE OUT (VARIABLE) (phono jacks)	Output level max. 2V (at 50 kilohms) Load impedance over 50 kilohms
DIGITAL OUT (OPTICAL) (optical output connector)	Wave length 660 nm
HEADPHONES (Stereo phone jack)	Output level -18 dBm Output level max. 28 mW Load impedance 32 ohms

**General**

Power requirements	AEP model: 220~230 V AC, 50/60 Hz UK model: 240 V AC, 50/60 Hz US, Canadian model: 120 V AC, 60 Hz
--------------------	---

Model Name Using Similar Mechanism	NEW
CD Transport Mechanism Type	CDM19E-6H50
Optical Pick-up Block Type	BU-6H

Power consumption	23 W
Dimension (approx., including projections)	AEP, UK model: Approx. 430×125×375 mm (w/h/d) (17×5×14 7/8 inches) US, Canadian model: Approx. 470×125×375 mm (w/h/d) (18 5/8×5×14 7/8 inches)
Weight	AEP, UK model: Approx. 11 kg (24 lbs 4 oz) US, Canadian model: Approx. 12 kg (26 lbs 7.3 oz)

**Remote commander (RM-D991)**

Remote control system	Infrared control
Power requirements	3V DC with two batteries size AA (IEC designation R6)
Dimensions	Approx. 62×18×175 mm (w/h/d) (2 1/2×23/32×7 inches)
Weight	Approx. 130 g (4.6 oz) Including batteries

**Supplied accessories**

Connecting cord	1 (2 phono plugs→2 phono plugs)
Remote commander	1
Sony SUM-3(NS) batteries	2
Screws	8 (US, Canadian model)

Design and specifications are subject to change without notice.

**COMPACT DISC PLAYER**  
**SONY®**

## SAFETY CHECK-OUT (US Model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:  
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)


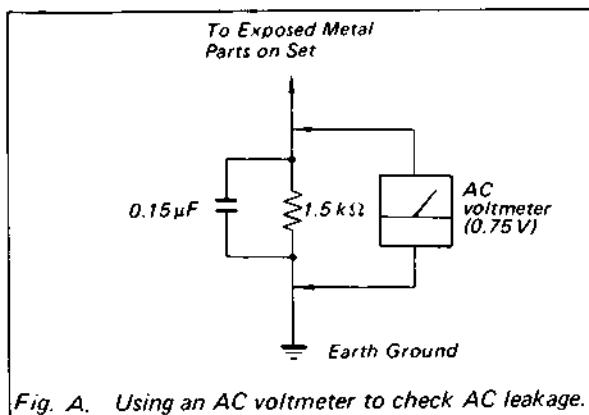


Fig. A. Using an AC voltmeter to check AC leakage.

### SAFETY-RELATED COMPONENT WARNING!!

**COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.**

For the United Kingdom and European countries

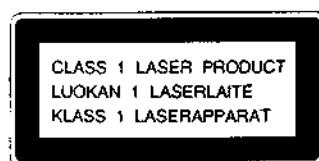

This Compact Disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the rear exterior.

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.


The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30cm away from the objective lens.

### MODEL IDENTIFICATION

—Model Number Label—

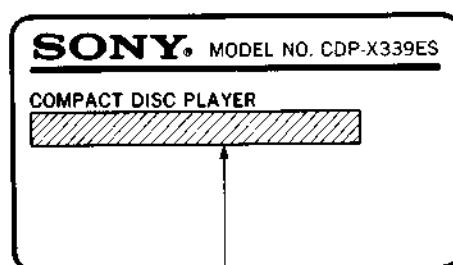

US, CND model: AC: 120V 60Hz 23W  
AEP model: AC: 220~230V~50/60Hz  
UK model: AC: 240V~50/60Hz


CND : Canadian model

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## 1-1. IDENTIFYING THE PARTS

3

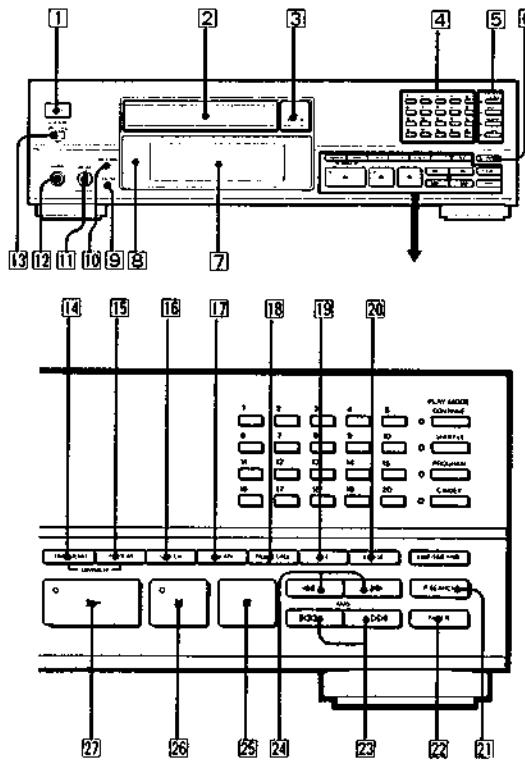


### Front Panel

Refer to the pages indicated in ( ) for details.

- [1] POWER switch (22)
- [2] Disc tray (22)
- [3] ▲ OPEN/CLOSE button (22)
- [4] Numeric buttons (26)
- [5] PLAY MODE buttons  
CONTINUE button and indicator (22)  
SHUFFLE button and indicator (32)  
PROGRAM button and indicator (46)  
C. (custom) INDEX button and indicator (92)
- [6] EDIT/TIME FADE button (70)
- [7] Display window (24)
- [8] Remote sensor
- [9] LEVEL FILE button (98)
- [10] DISPLAY MODE button (24)
- [11] LINE OUT/PHONE LEVEL control (22)
- [12] PHONES jack (22)
- [13] TIMER switch (100)
- [14] TIME/MEMO button (24)
- [15] REPEAT button (42)
- [16] CHECK (program check) button (46)
- [17] CLEAR (program clear) button (36, 46)
- [18] FILE RECALL button (78)
- [19] FILE (custom file) button (78)
- [20] ERASE (memory erase) button (78)
- [21] P. (peak) SEARCH button (74)
- [22] FADER (fader/in/fader out) button (72)
- [23] ▷◀AMS\* buttons (26)
- [24] ▲◀▶ (manual search) buttons (26)
- [25] ■ (stop) button (22)
- [26] □ (pause) button and indicator (22)
- [27] ▶ (play) button and indicator (22)

\* AMS is the abbreviation of Automatic Music Sensor.

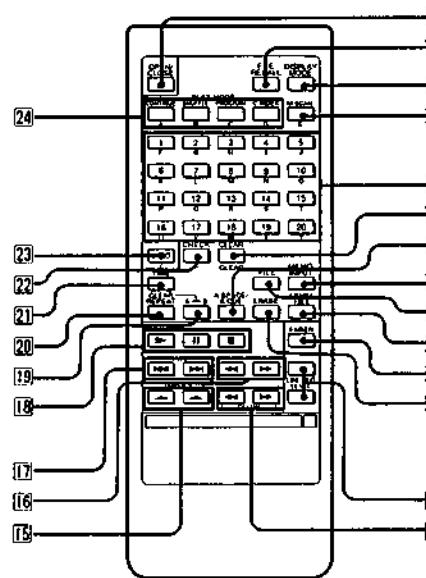

### Remote Commander

Refer to the pages indicated in ( ) for details.

- [1] ▲ OPEN/CLOSE button (22)
- [2] FILE RECALL button (78)
- [3] DISPLAY MODE button (24)
- [4] M. SCAN button (38)
- [5] Numeric buttons (26)
- [6] CLEAR button (36, 46)
- [7] A. SPACE (auto space)/A.CUE (auto cue) button (30, 72)
- [8] MEMO INPUT button (80)
- [9] FILE (custom file) button (78)
- [10] LEVEL FILE button (98)
- [11] FADER (fade in/fade out) button (72)
- [12] ERASE button (78)
- [13] LINE OUT LEVEL (line out/headphones level) buttons (22)
- [14] ▲◀▶ SLOW (low speed manual search) buttons (28)
- [15] — INDEX buttons (28)
- [16] ▲◀▶ (manual search) buttons (28)
- [17] ▷◀AMS\* buttons (26)
- [18] ■ (stop) button (22)
- [19] □ (pause) button (22)
- [20] ▶ (play) button (22)
- [21] A + B repeat button (44)
- [22] REPEAT (repeat/A-B repeat clear) button (42)
- [23] TIME button (24)
- [24] CHECK button (46)
- [25] > 20 (over 20) button (26)
- [26] PLAY MODE buttons  
CONTINUE button (22)  
SHUFFLE button (32)  
PROGRAM button (46)  
C. INDEX button (92)


Buttons with orange letters (A, B, ----) are for writing a disc memo (page 80).

\* AMS is the abbreviation of Automatic Music Sensor.

## SECTION 1 GENERAL

This section is extracted from instruction manual.

## 1-2. HOOKING UP THE SYSTEM

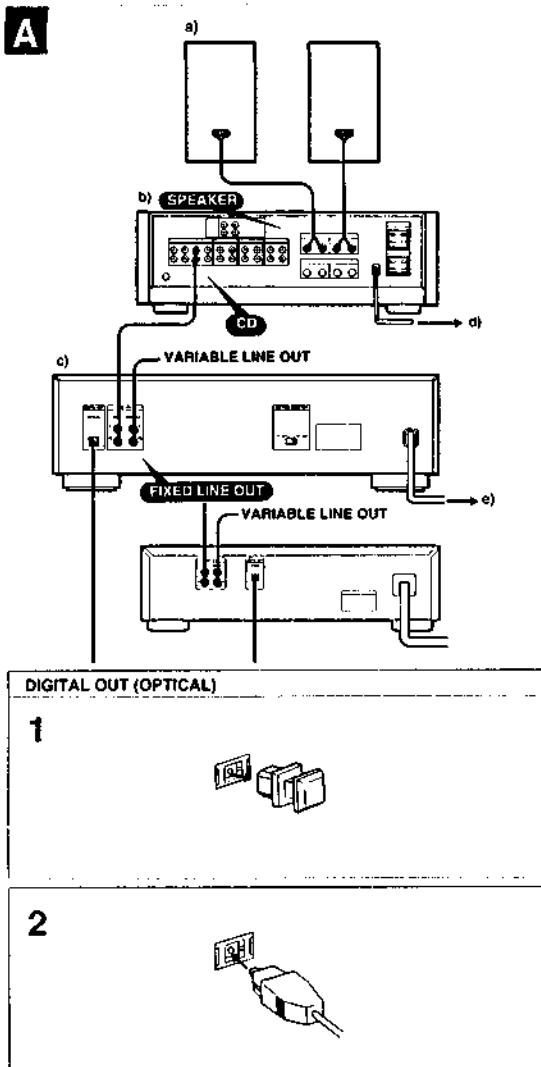

You can connect the player with analog or digital signal depending on your amplifier or D/A converter.

### Before hooking up the player:

- Turn off the power of each unit before making connections.
- Connect the AC power cord last. For the model supplied with the plug adaptor, use it if the plug of the power cord does not match your wall outlet.
- Be sure to insert the plugs firmly into the jacks. Loose connection may cause hum and noise.
- Leave a little slack in the connecting cord to allow for inadvertent shock or vibration.
- Cord plugs and jacks are color coded: Red plugs and jacks are for the right channel (R) and white ones for the left channel (L).

### Connecting Directly to an Amplifier

Proceed as shown in Fig. **B**.

- a) Speaker system
- b) Amplifier
- c) Player
- d) to a wall outlet
- e) to an AC outlet

#### Note on LINE OUT

- FIXED:** The output level is fixed.  
**VARIABLE:** The output level can be adjusted with the LINE OUT/PHONE LEVEL control or LINE OUT LEVEL on the remote commander.
- Connect your system to the VARIABLE output when using Level files.
  - Note, if the LINE OUT/PHONE LEVEL control or the LINE OUT LEVEL on the remote commander is turned while recording, the recording level will change even when it is preset on the tape deck.

#### Amplifier or D/A converter

When connecting to an amplifier or D/A converter with OPTICAL IN, use DIGITAL OUT (OPTICAL) instead of LINE OUT. See the figures on the left.

- 1 Take off the cap.
- 2 Plug in firmly.

#### Note on DIGITAL OUT (OPTICAL)


When connecting with DIGITAL OUT (OPTICAL), use the POC-15 audio optical connecting cord (not supplied). Please note that when the digital out is connected, fade out, fade in, time fade and level fader functions cannot be used.

## SECTION 2


### ELECTRICAL BLOCK CHECKING

**Note :**

1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than  $10M\Omega$  impedance.
4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

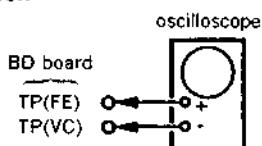
**S Curve Check****Procedure :**

1. Connect oscilloscope to test point TP (FE) on BD board.
2. Connect between test point TP (FE) and TP (VC) with lead wire.
3. Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within  $3 \pm 1V_{p-p}$ .

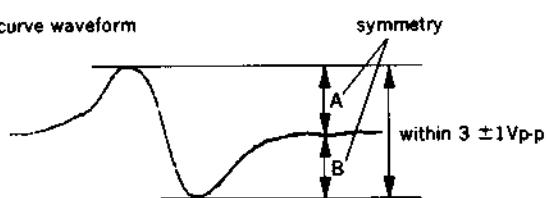**S curve waveform**

5. After check, remove the lead wire connected in step 2.

**Note :** • Try to mesure several times to make sure that the ratio of A : B or B : A is more than 10 : 7.  
• Take sweep time as long as possible and light up the brightness to obtain best waveform.

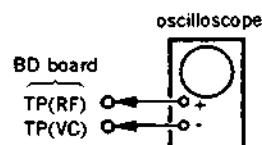**RF Level Check****Procedure :**



1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

**Note :**


Clear RF signal waveform means that the shape "◇" can be clearly distinguished at the center of the waveform.

**RF signal waveform**

VOLT/DIV: 200mV  
TIME/DIV: 500nS

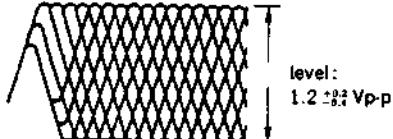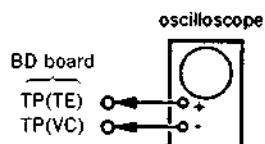**E-F Balance Check****Procedure :**

1. Connect test point TP (ADJ) to ground and TP (TEI) to TP (VC) with lead wires.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the osilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

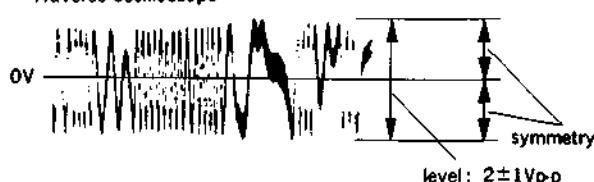
**Traverse oscilloscope**

6. Remove the lead wires connected in step 1.

## RF PLL Free-run Frequency Check

### Procedure :

1. Connect frequency counter to test point TP (PLCK) with lead wire.

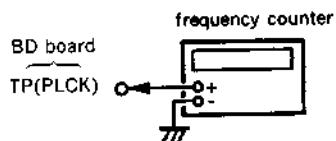

2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that reading on frequency counter is 4.3218MHz.

## Focus/Tracking Gain


This gain has a margin, so even if it is slightly off.

There is no problem.

Therefore, do not perform this adjustment.


Please note that it should be fixed to mechanical center position when you moved and do not know original position.


## Check Point Location : BD board - side A -

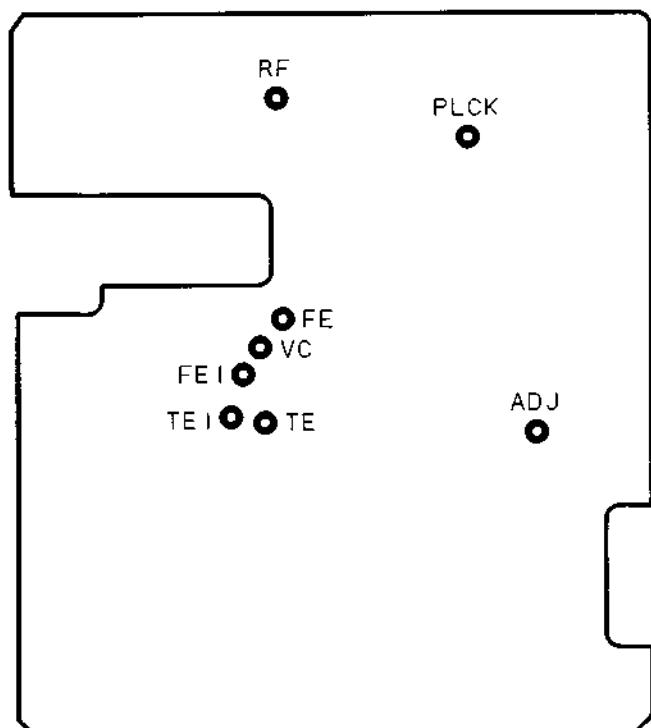


## SECTION 3 DIAGRAMS


### 3-1. BLOCK DIAGRAM

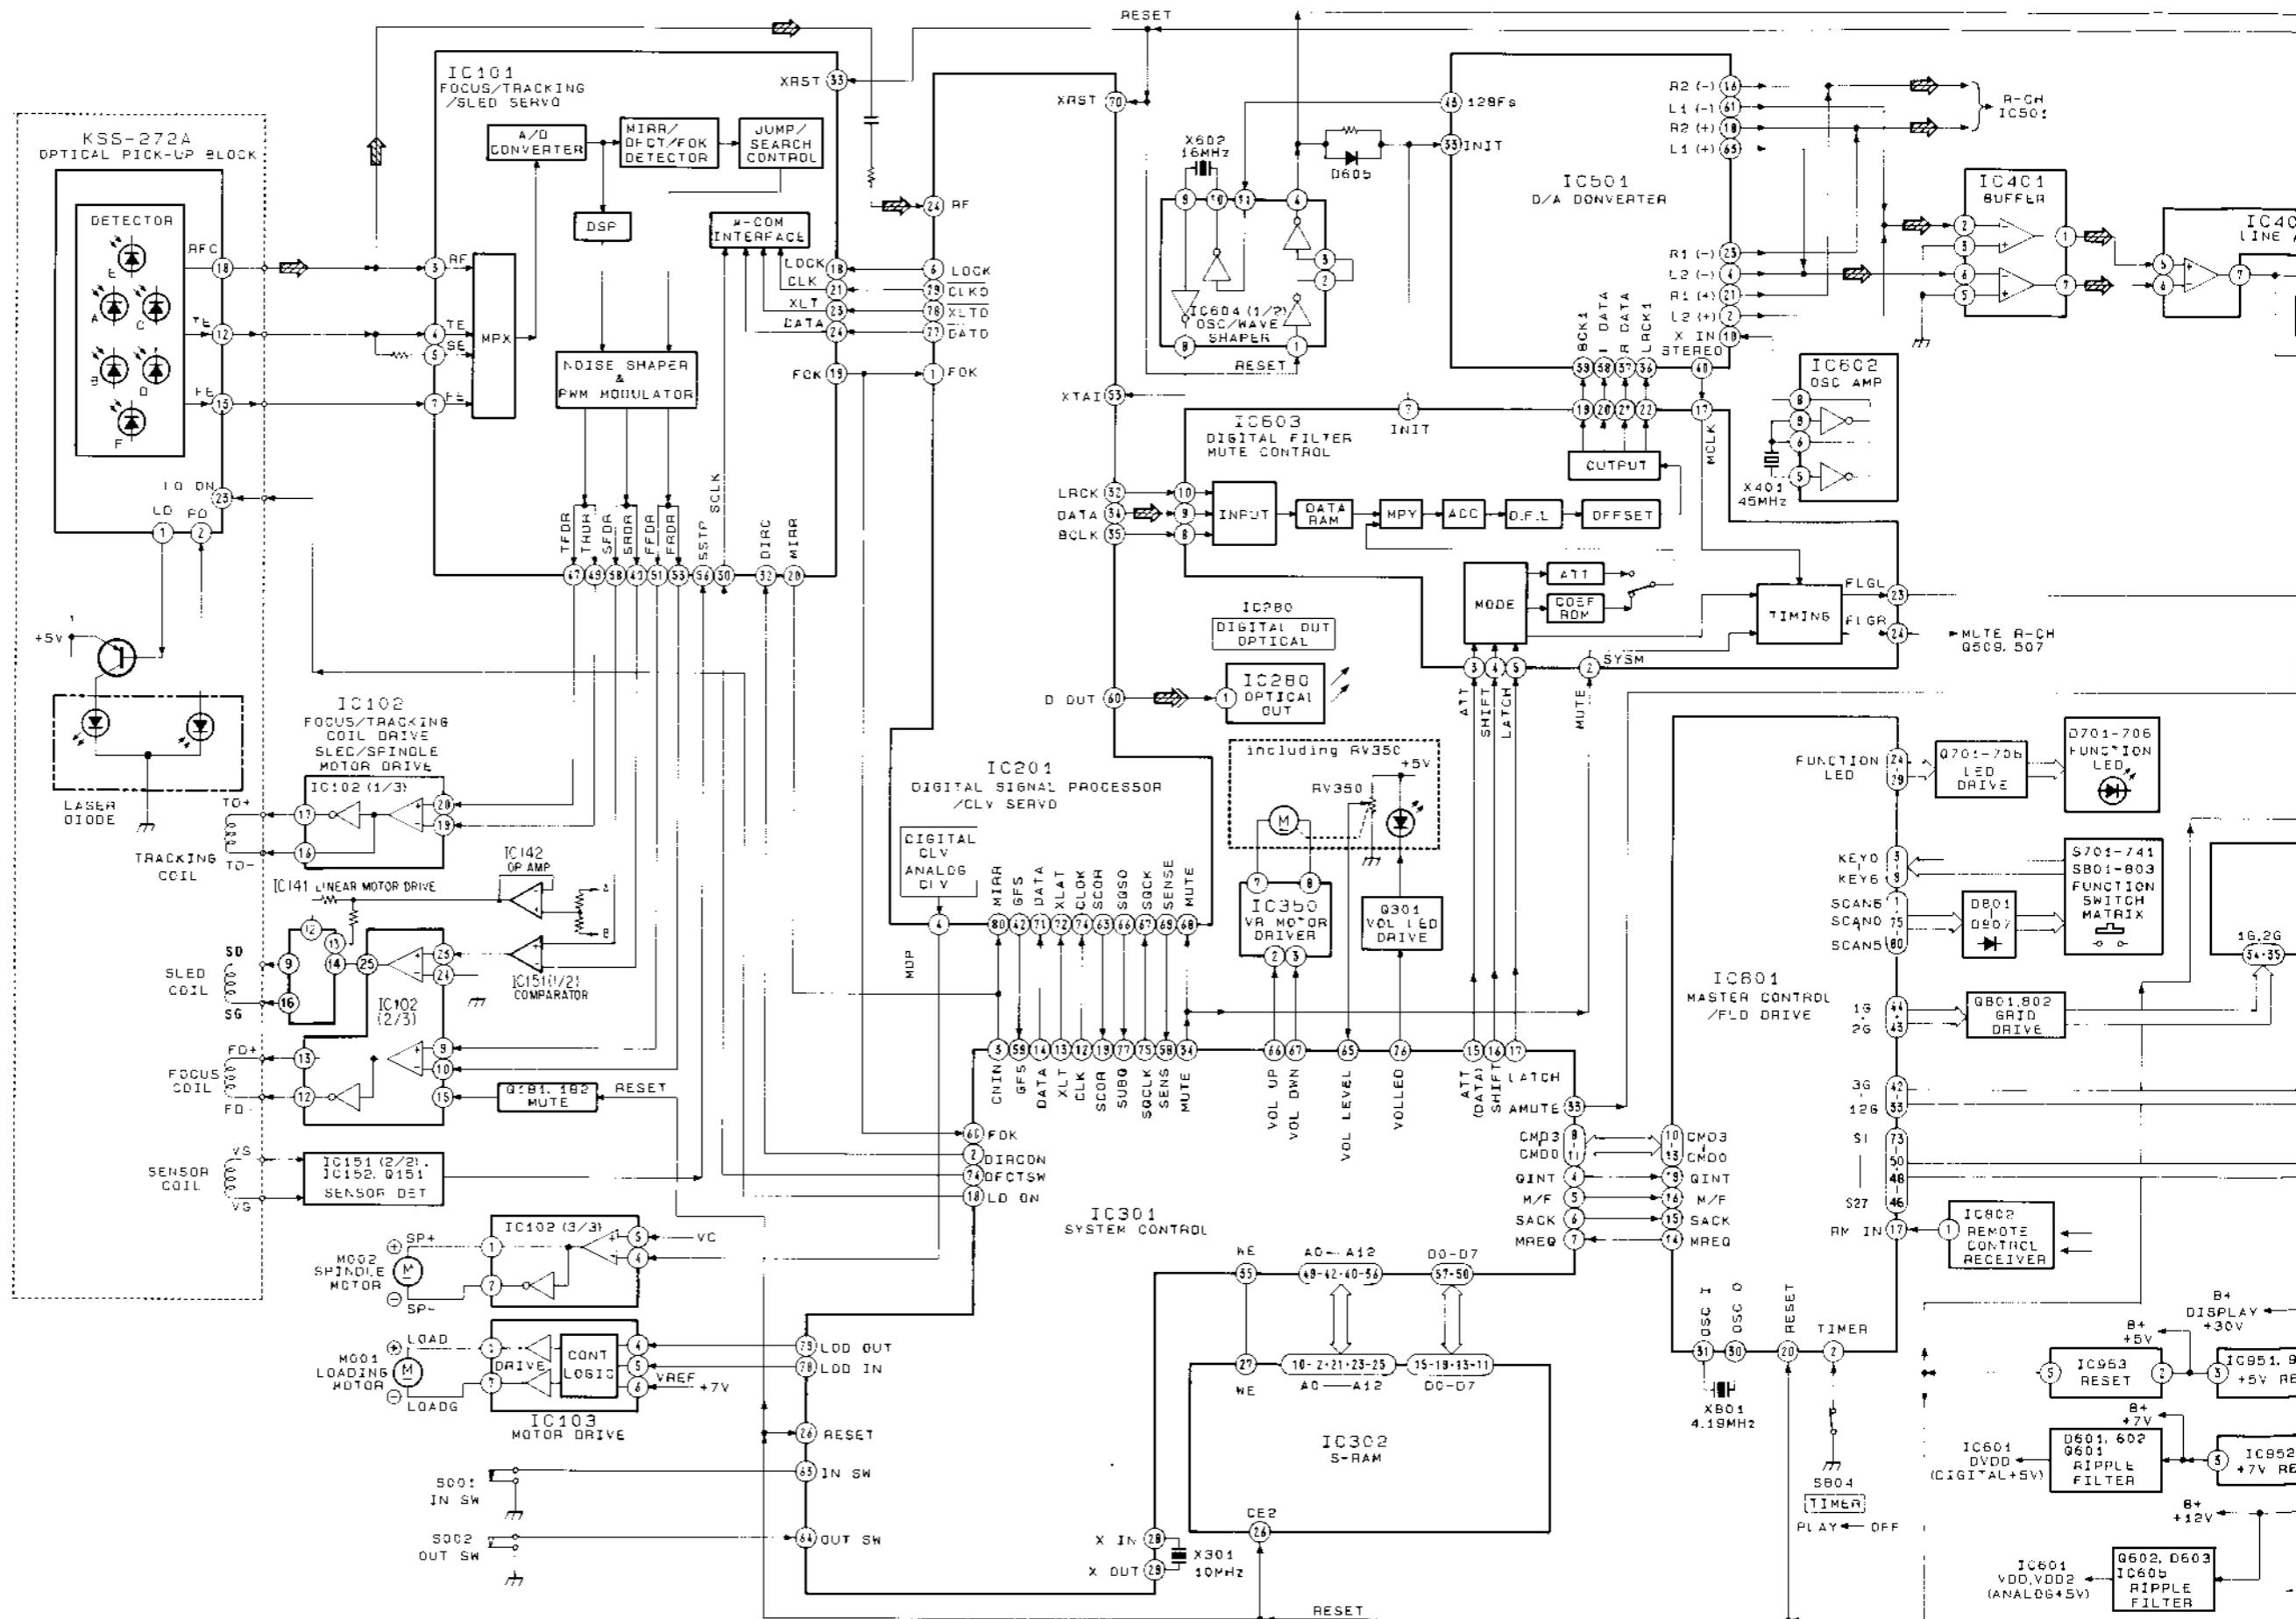

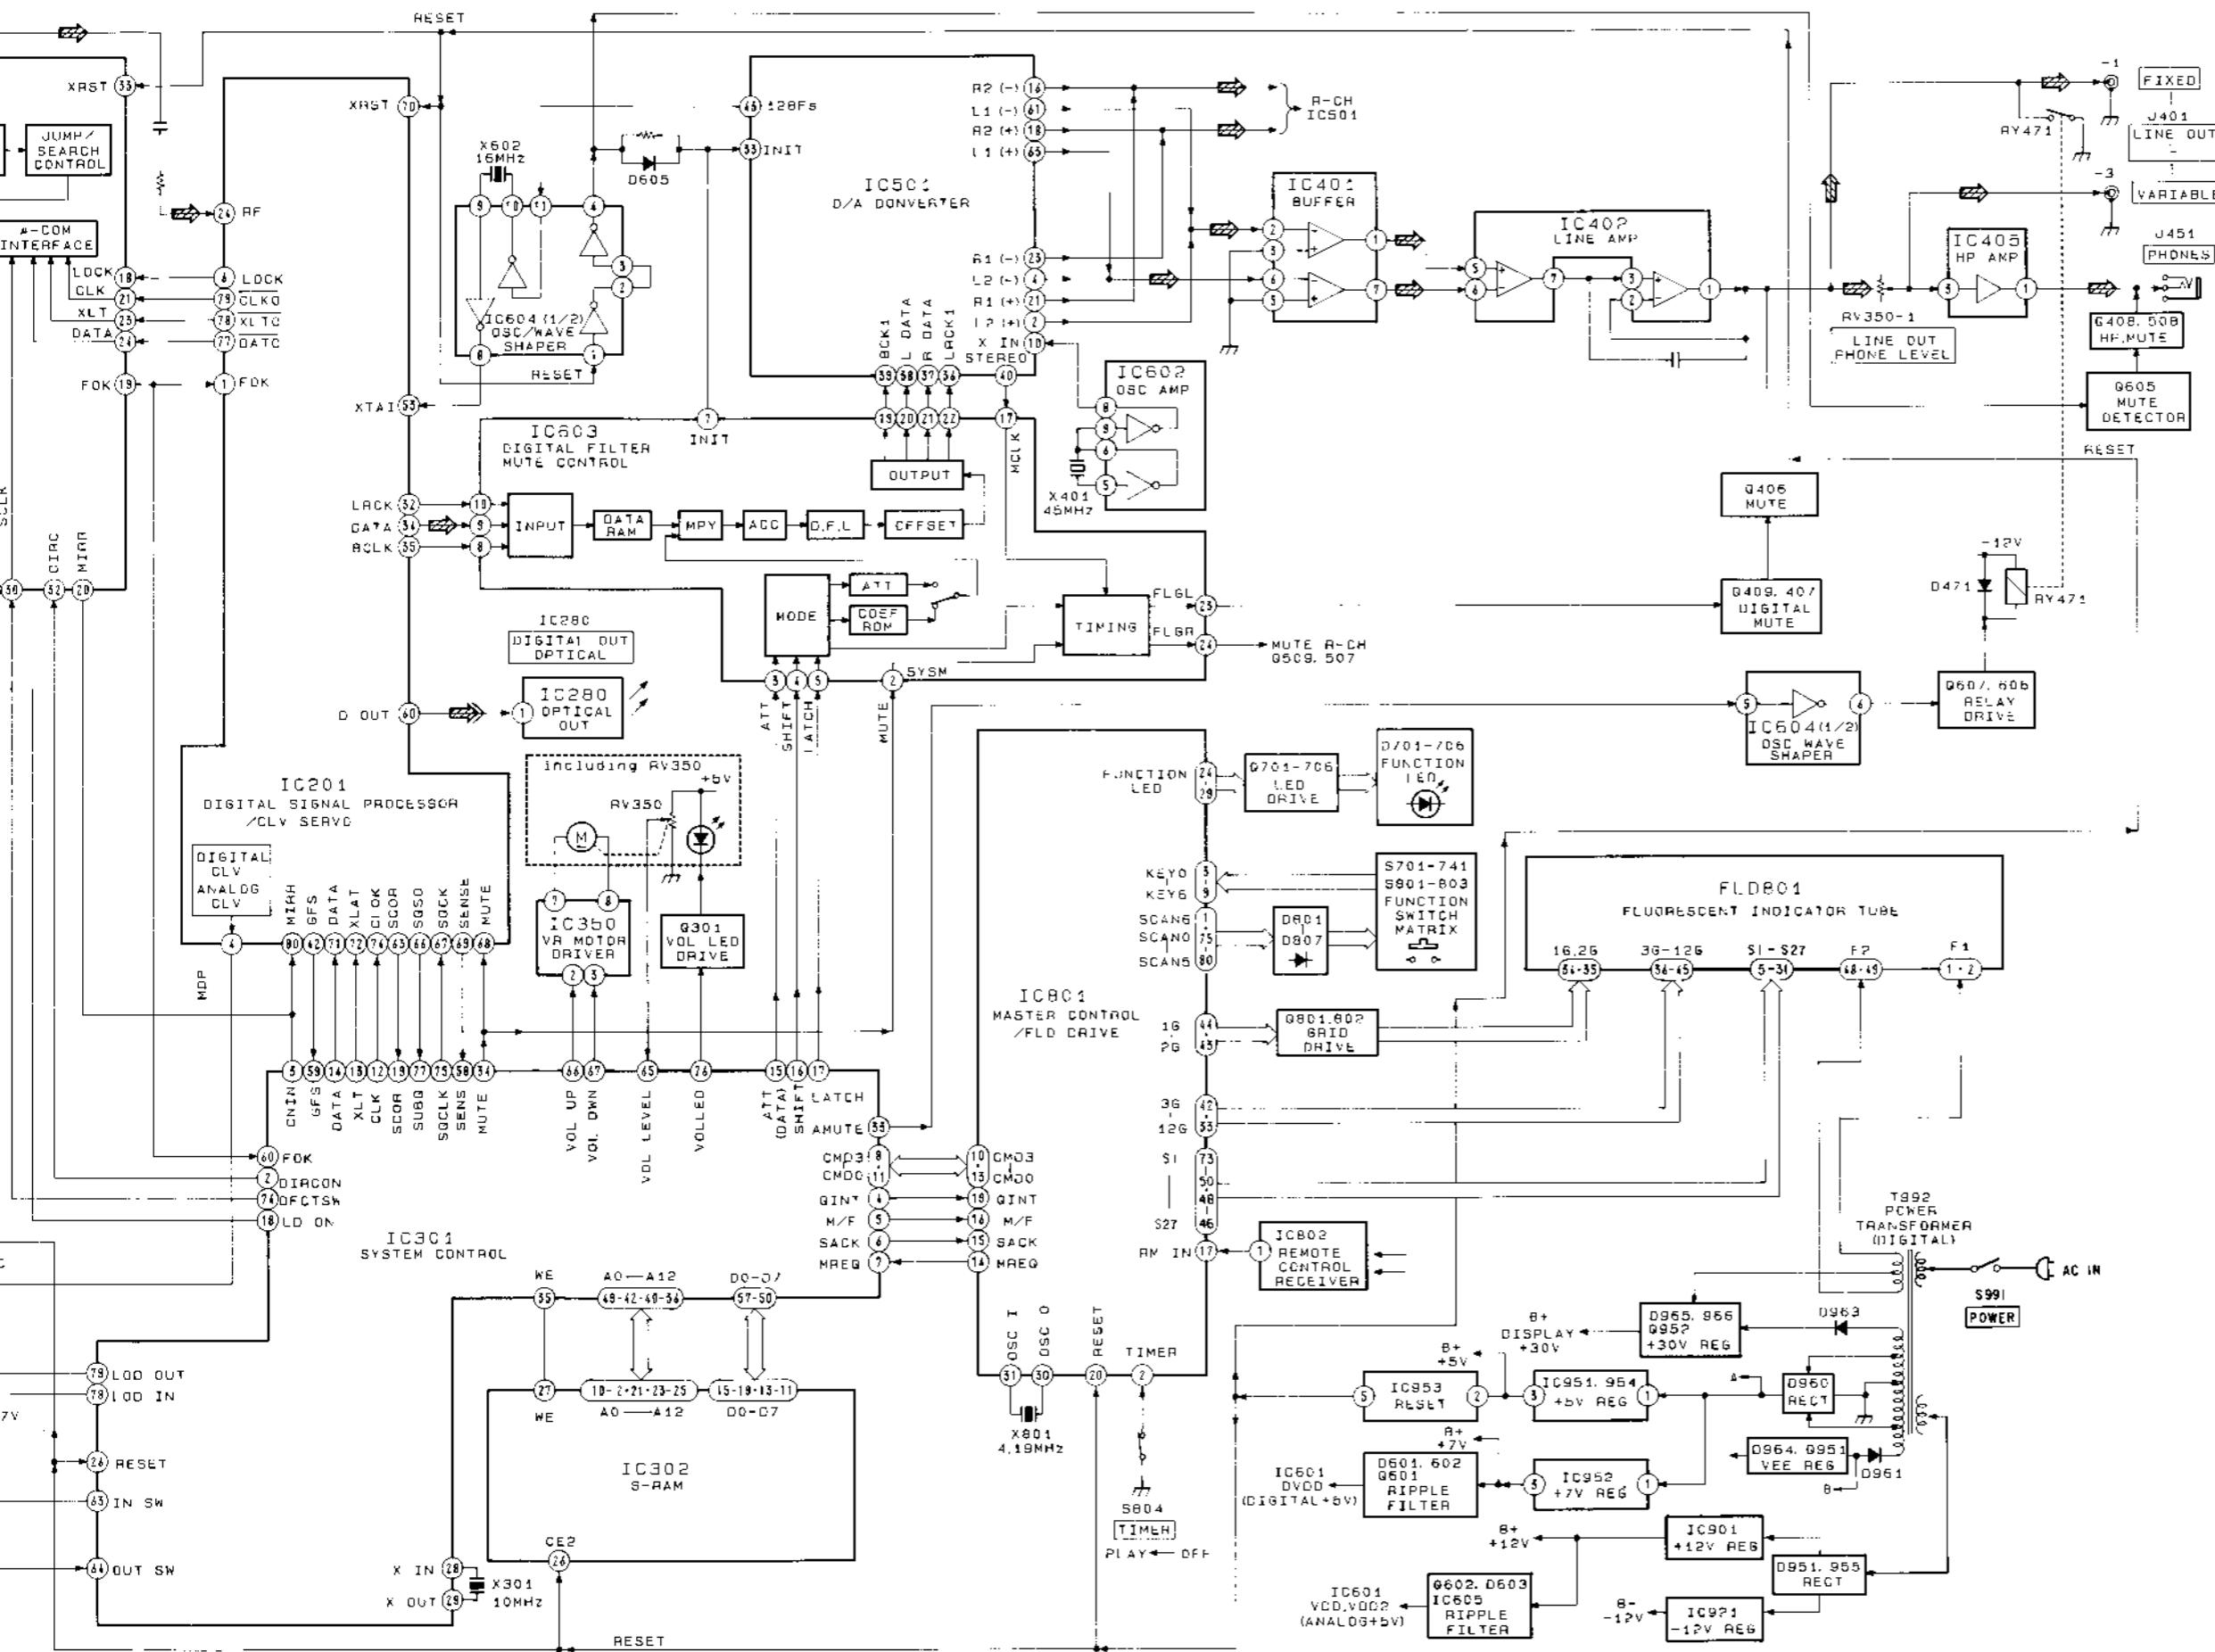

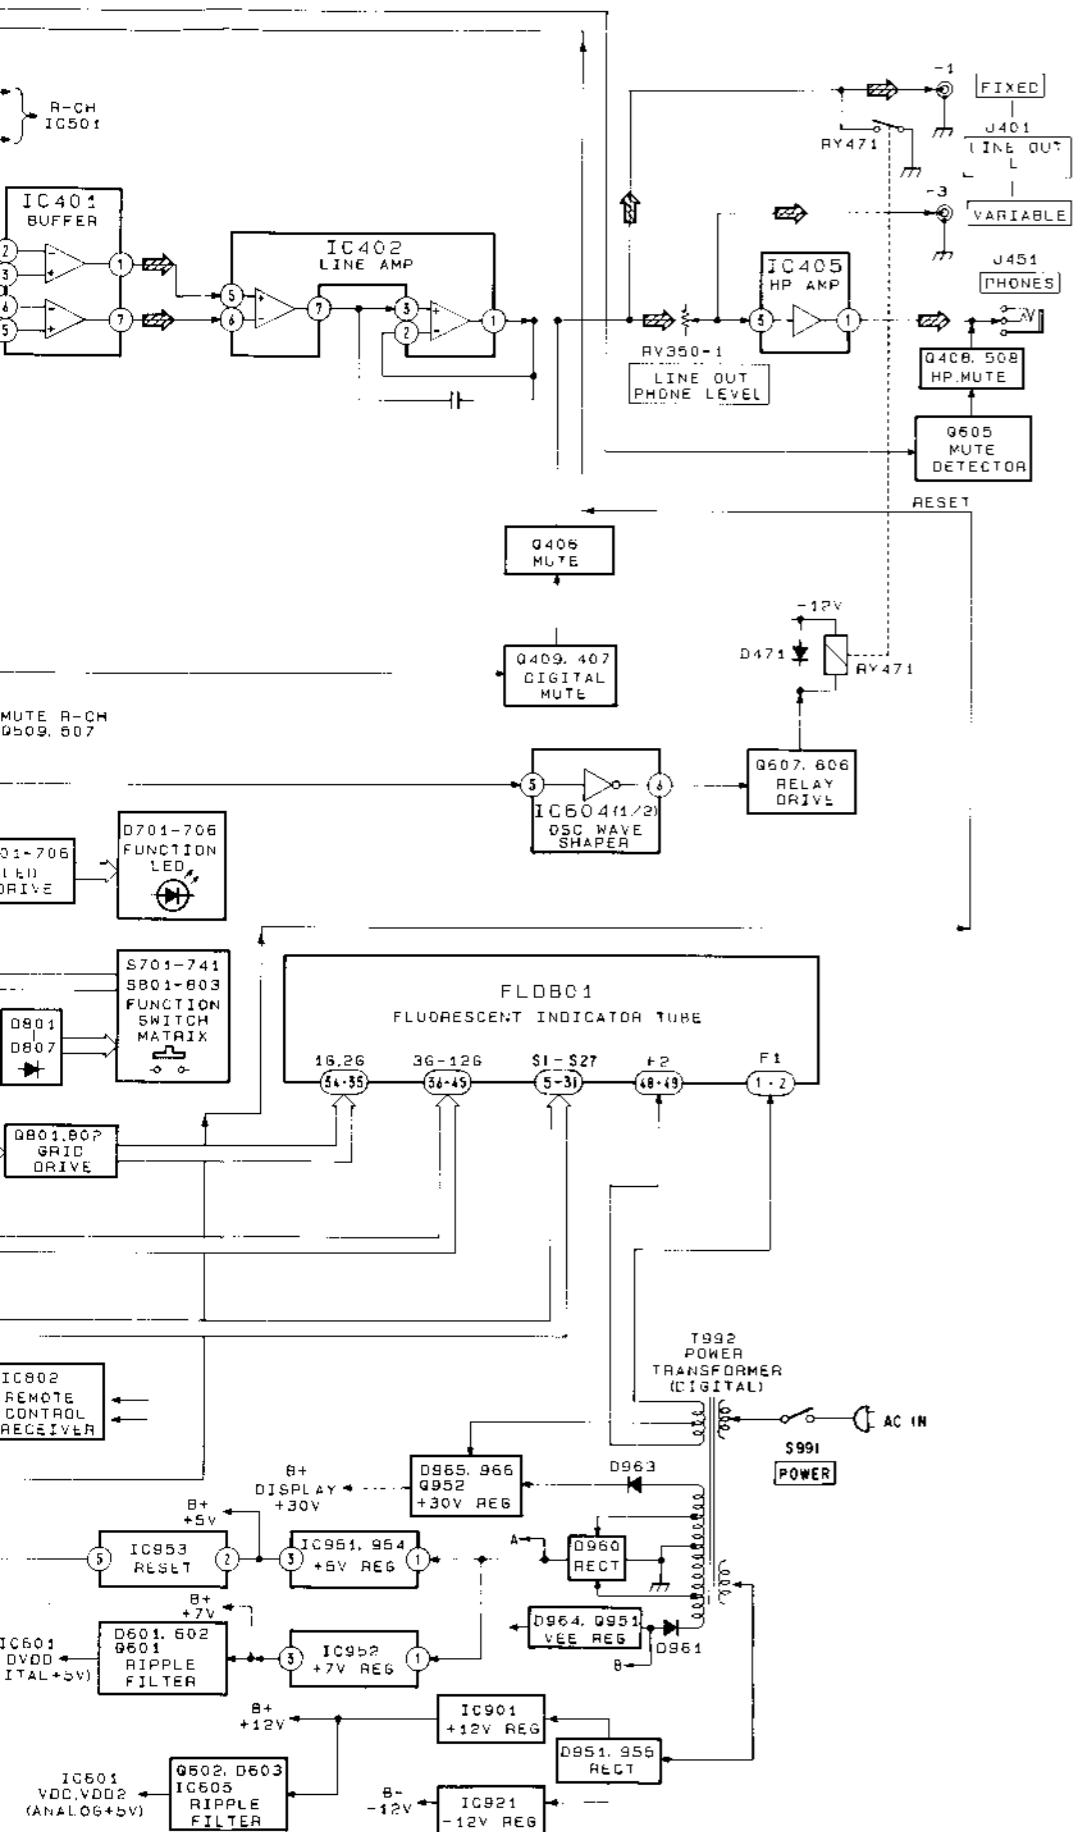

### **3-2. CIRCUIT BOARDS LOCATION**

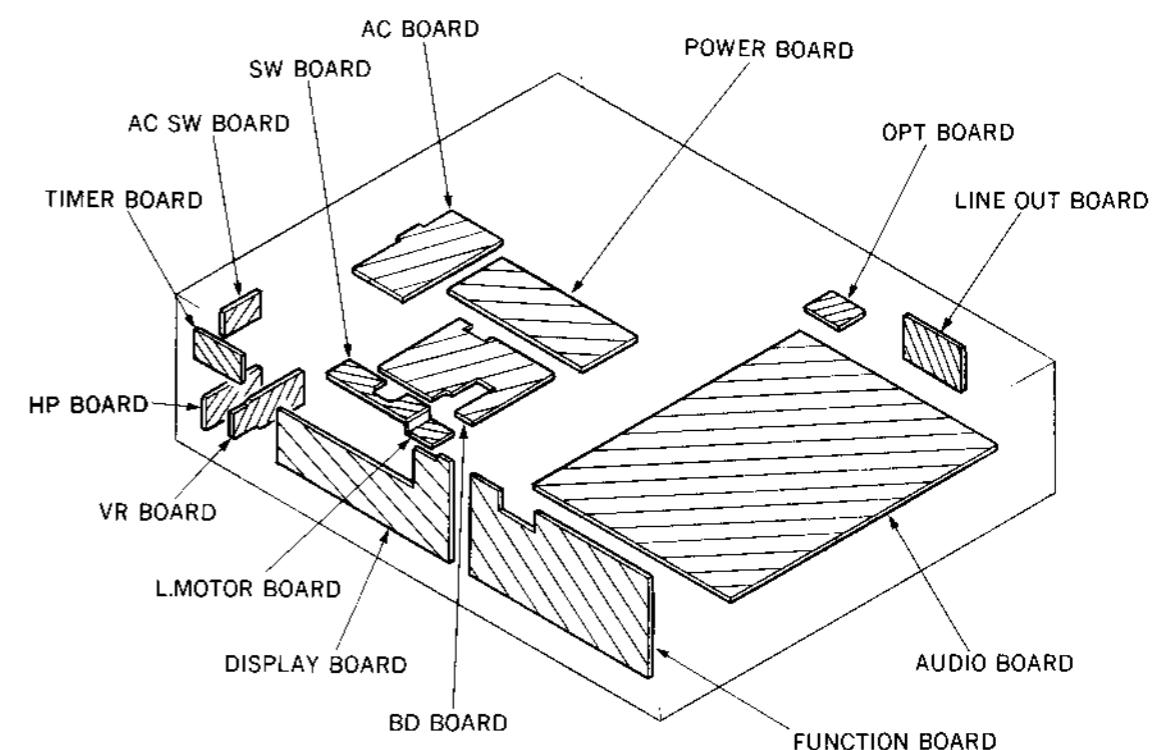


## • Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D301	I-3	IC405	I-23
D471	E-12	IC501	J-18
D601	E-20	IC502	I-18
D602	E-20	IC601	G-21
D603	F-19	IC602	H-20
D604	I-22	IC603	G-22
D605	F-23	IC604	F-22
D606	G-23	IC605	F-20
D701	B-26	IC801	J-28
D702	B-27	IC802	K-31
D703	D-31	IC901	F-15
D704	D-31	IC921	I-15
D705	D-31	IC951	C-5
D706	C-31	IC952	B-5
D801	J-29	IC953	B-3
D802	J-29	IC954	B-5
D803	J-30	Q151	I-9
D805	J-30	Q181	J-3
D806	J-30	Q182	J-3
D807	J-30	Q350	J-12
D951	B-8	Q406	G-16
D955	B-8	Q407	J-20
D960	B-7	Q408	I-22
D961	C-7	Q409	I-20
D963	C-9	Q506	H-16
D964	B-4	Q507	J-21
D965	C-8	Q508	I-23
D966	C-8	Q509	I-21
IC101	I-4	Q601	F-21
IC102	J-8	Q602	G-19
IC103	J-10	Q605	I-22
IC141	I-7	Q606	E-21
IC142	I-7	Q607	E-21
IC151	J-4	Q701	D-25
IC152	J-4	Q702	D-25
IC201	G-3	Q703	C-25
IC280	C-2	Q704	C-26
IC301	H-10	Q705	C-26
IC302	H-3	Q706	C-27
IC350	K-12	Q801	K-27
IC401	E-18	Q802	J-27
IC402	F-18	Q951	A-5
		Q952	C-9

## Note:


- — : parts extracted from the component side.
- ● : Through hole.
- - : Pattern on the side which is seen.
- : Pattern of the rear side.
- CND : Canadian model

## 3-3. PRINTED WIRING BOARDS • Refer to page 21 for Semiconductor Lead Layouts.

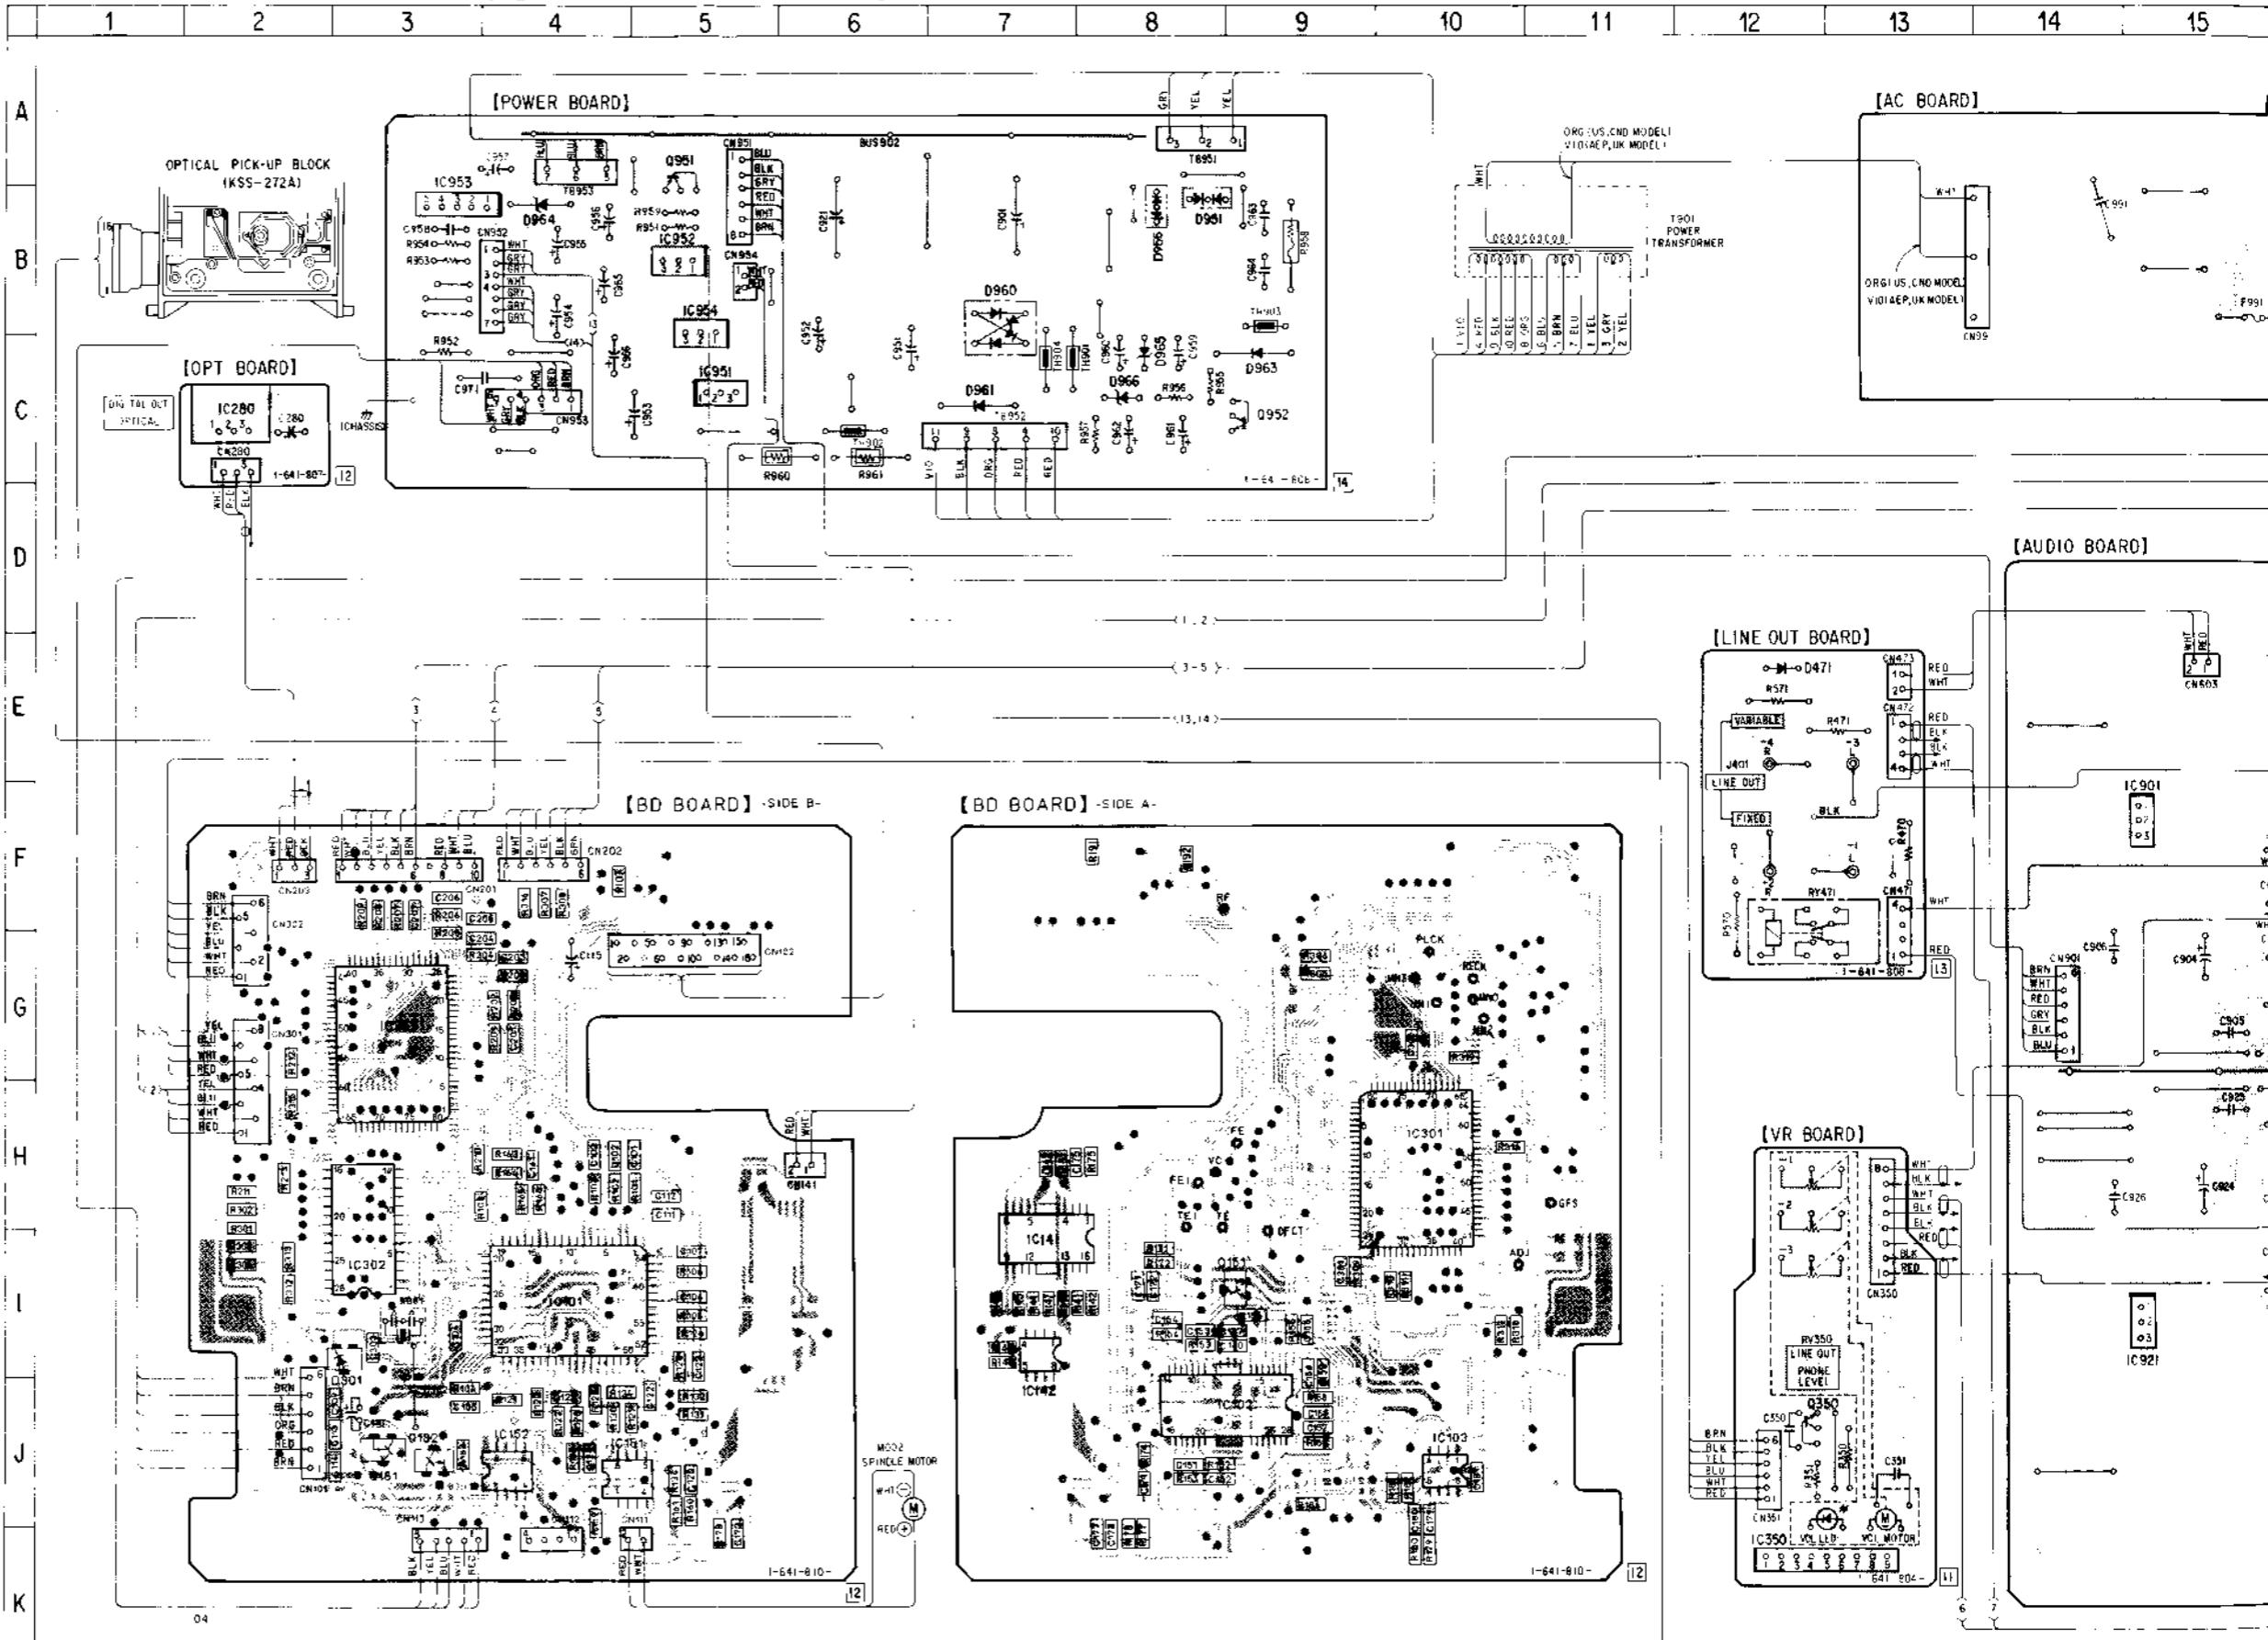


● Refer to page 21 for Semiconductor Lead Layouts.

3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

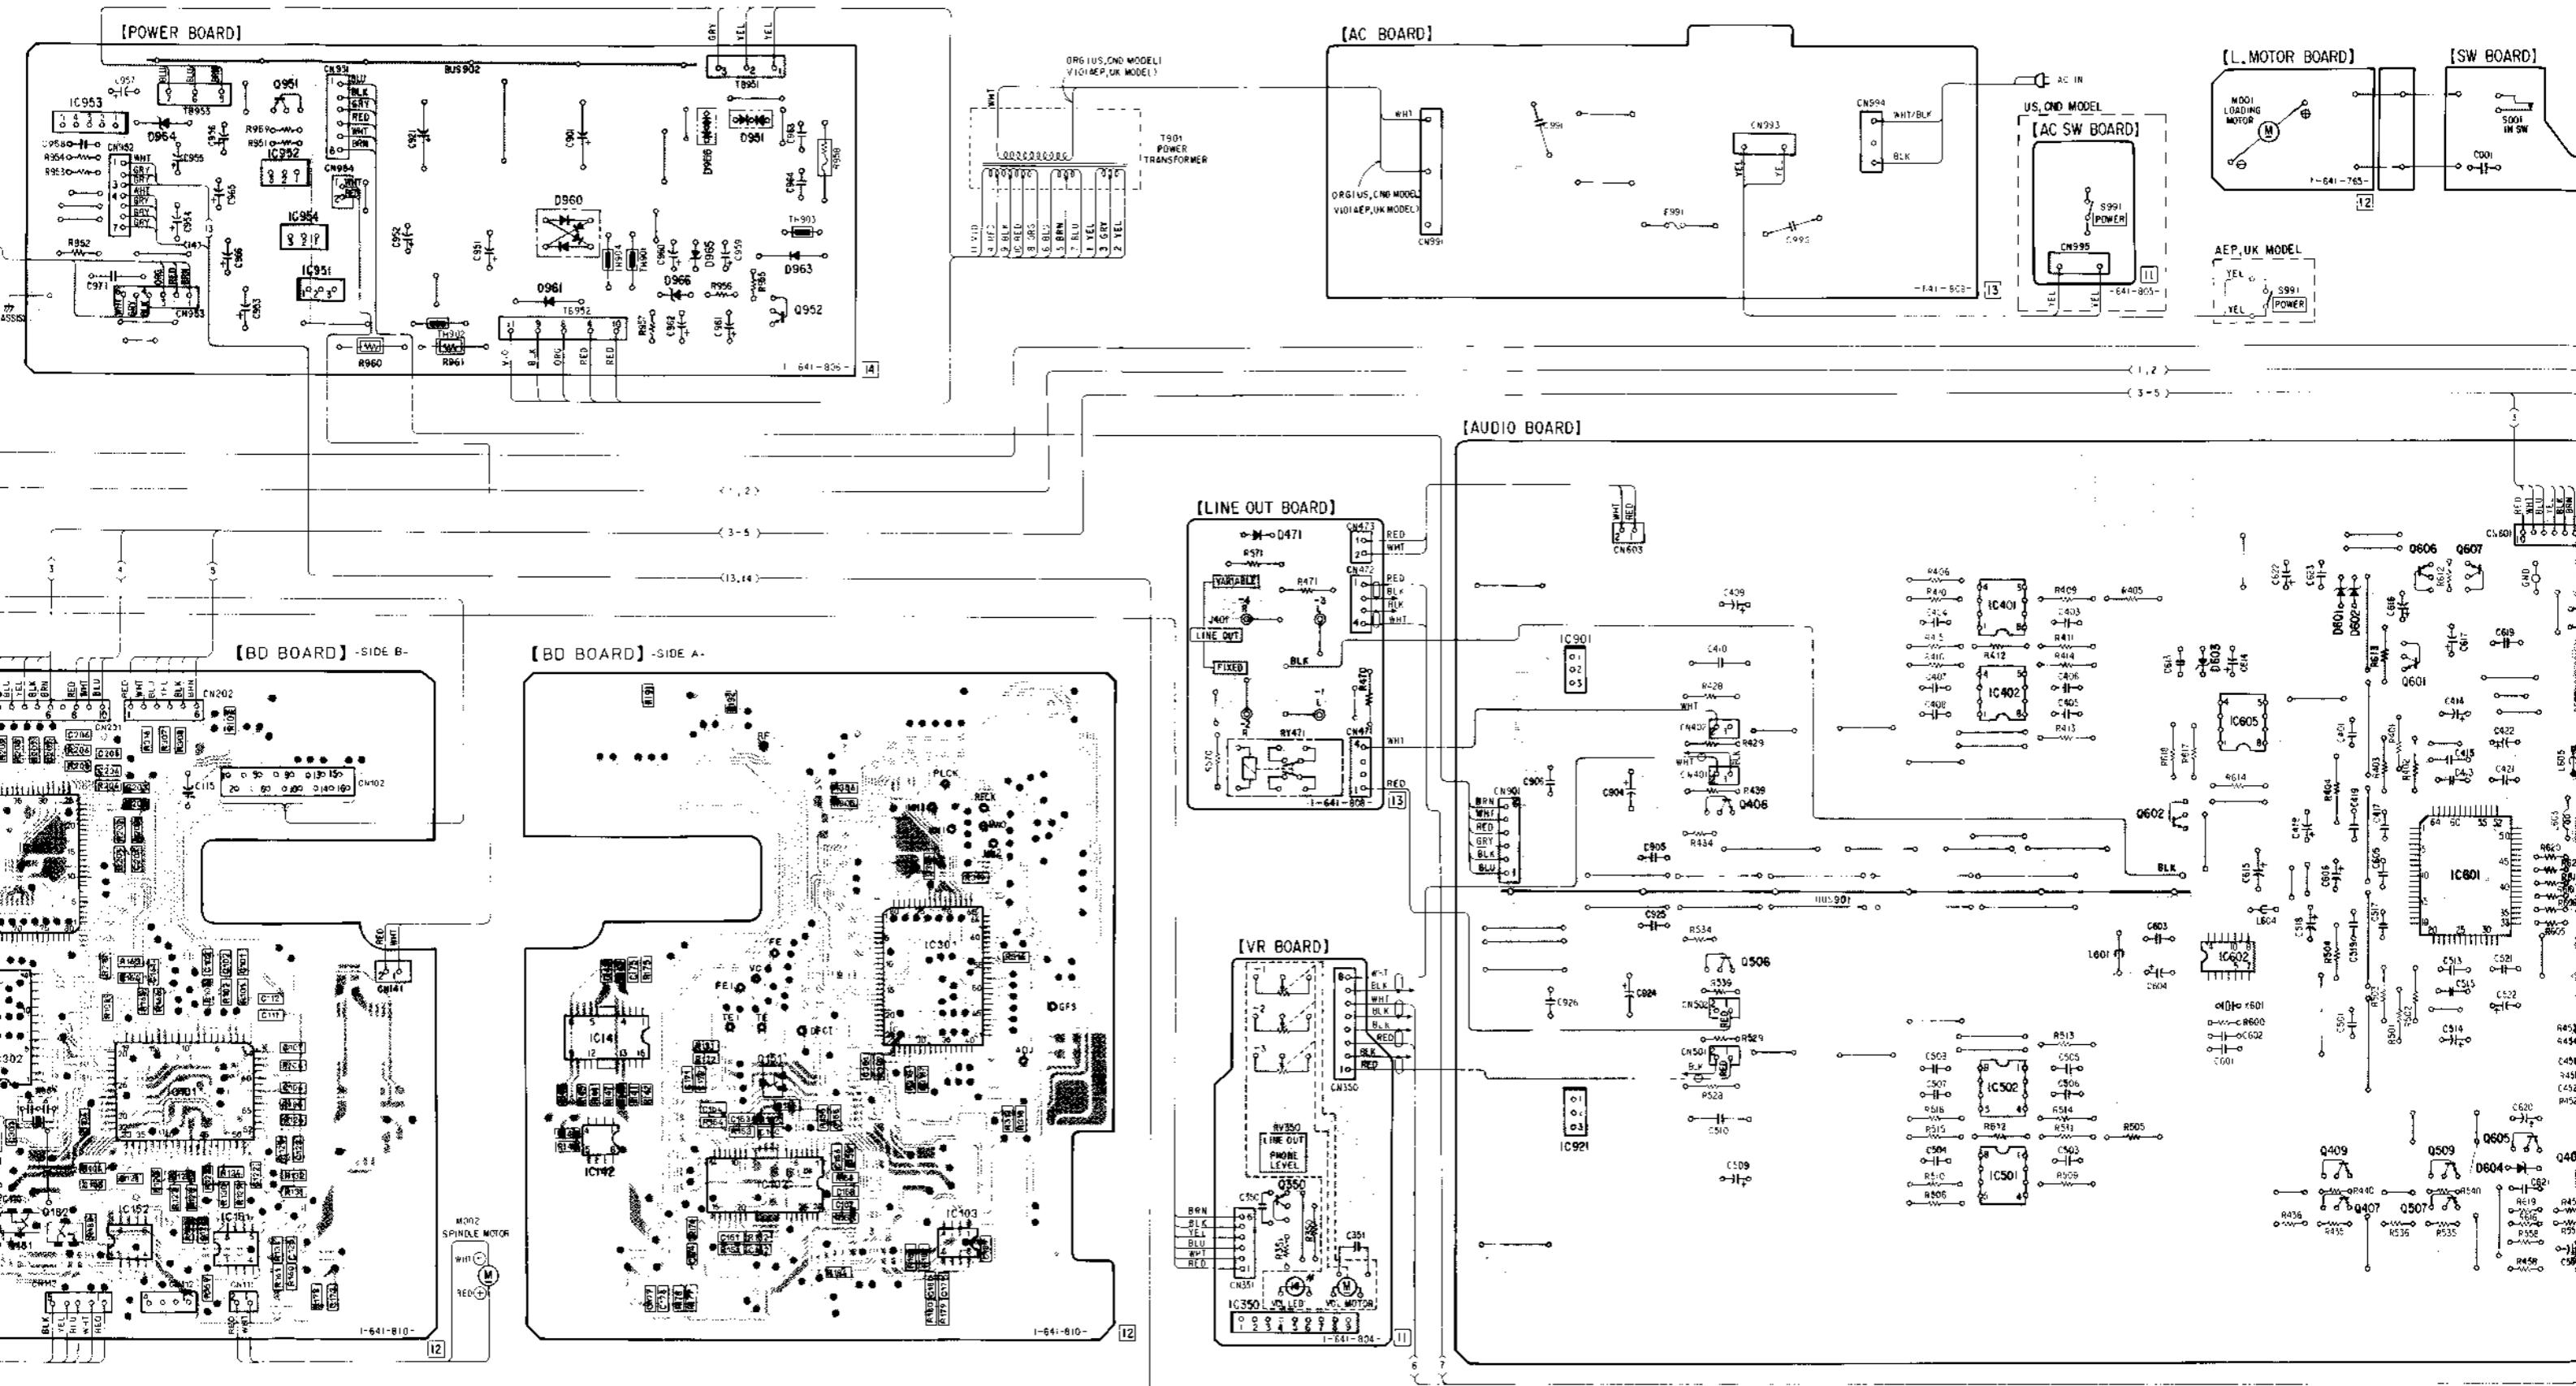


14      15      16      17      18      19      20      21      22      23      24      25      26      27      28      29      30      31      32


BOARD]

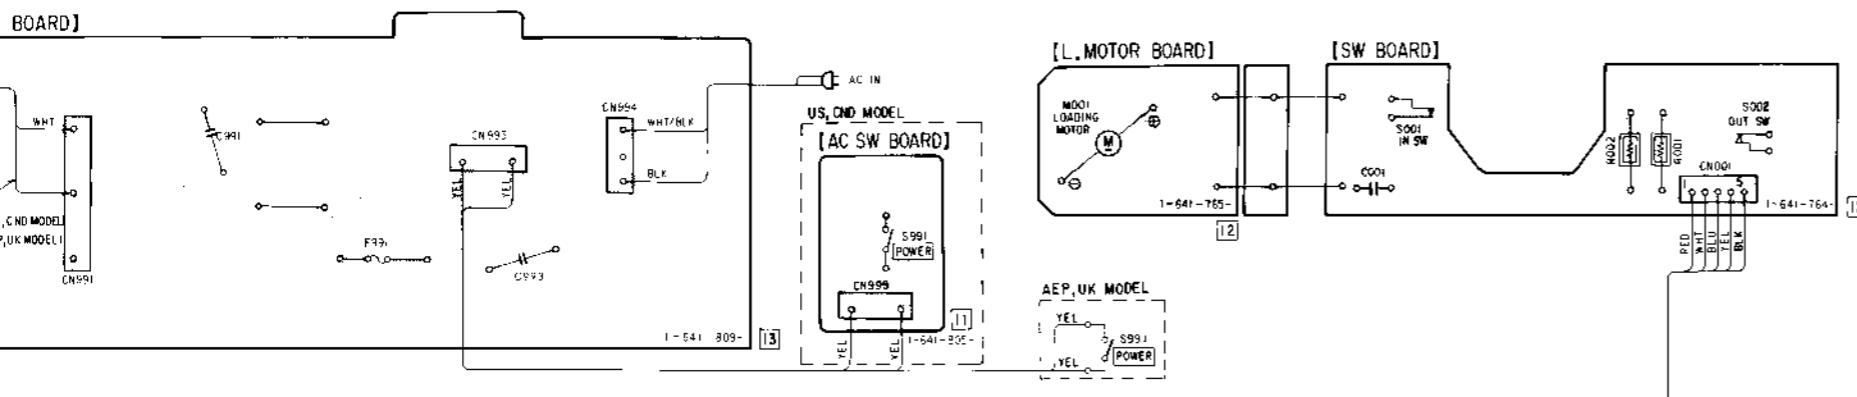

[AUDIO BOARD]

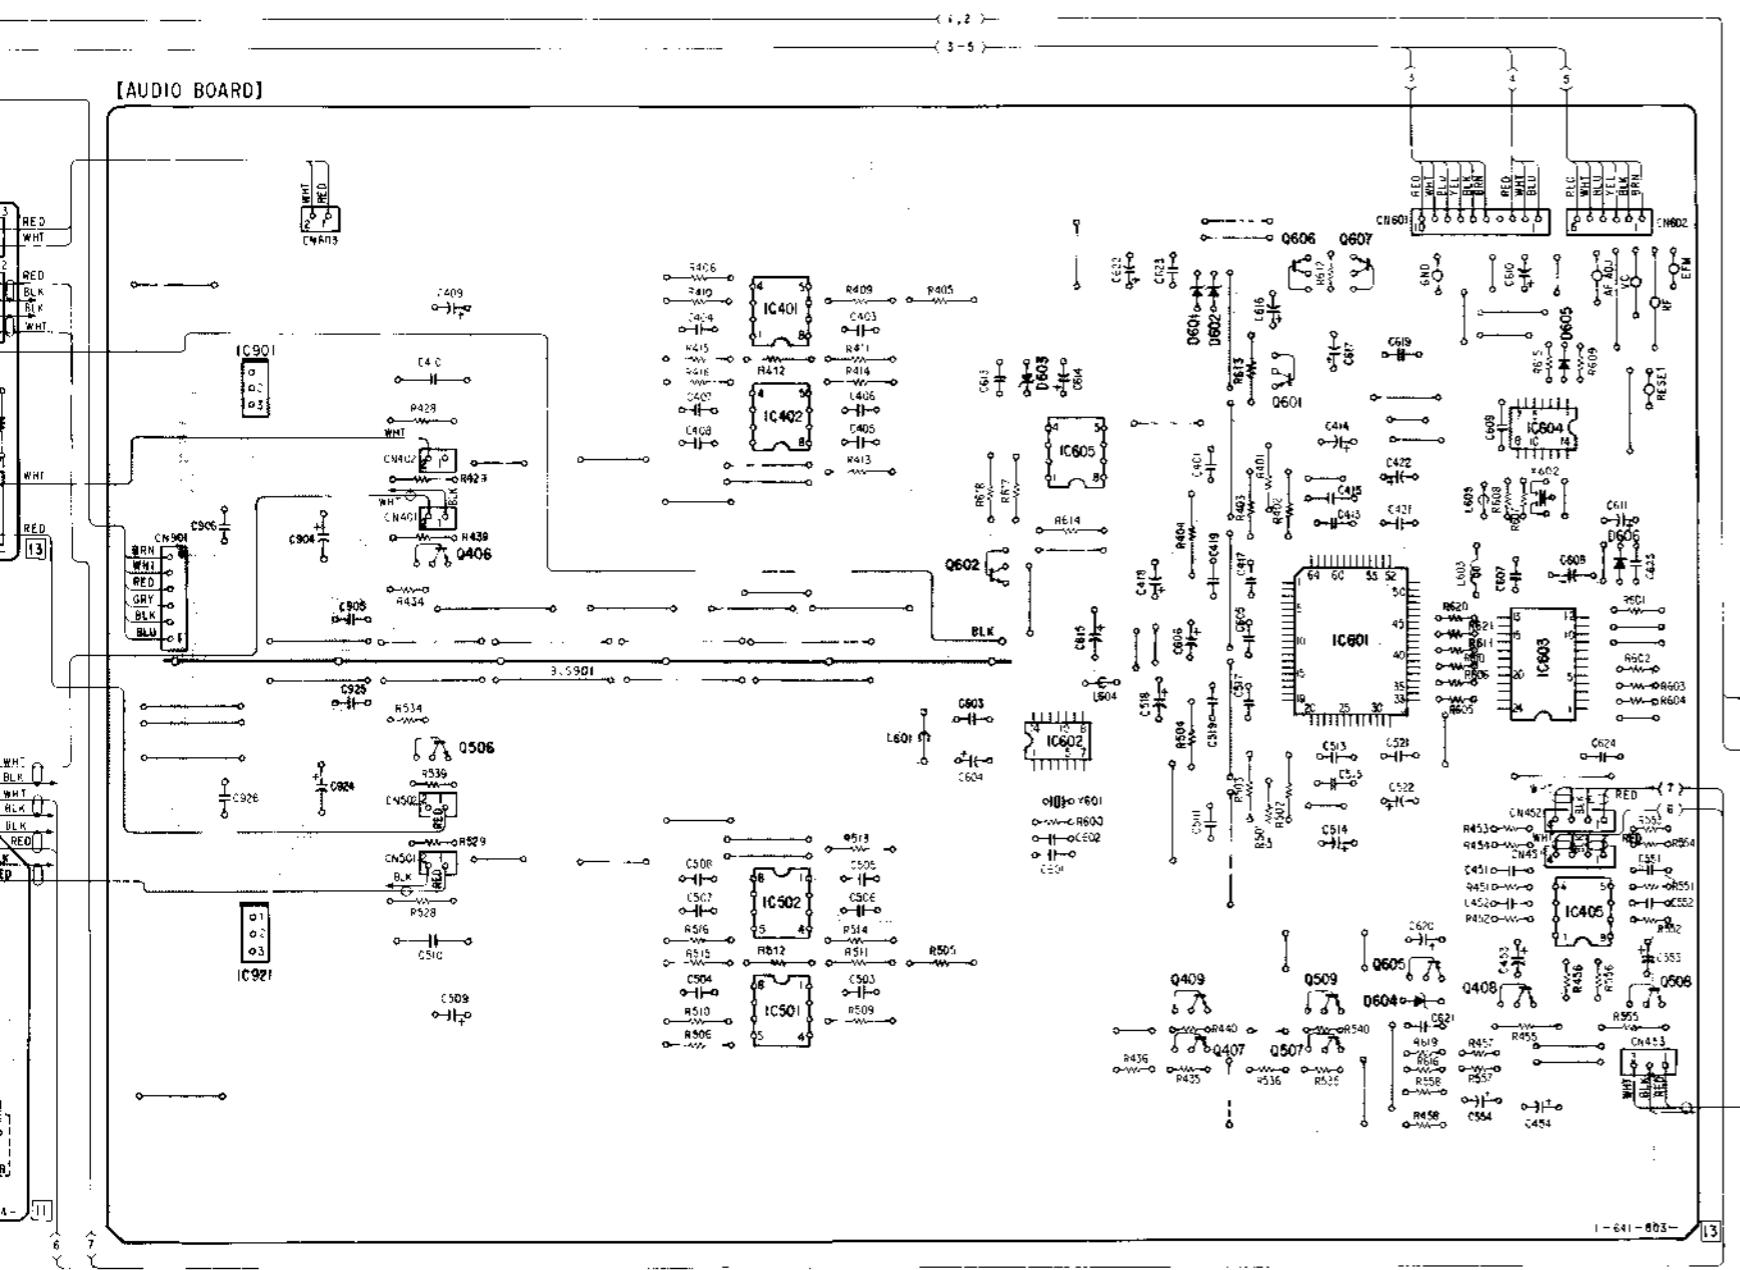


[FUNCTION BOARD]

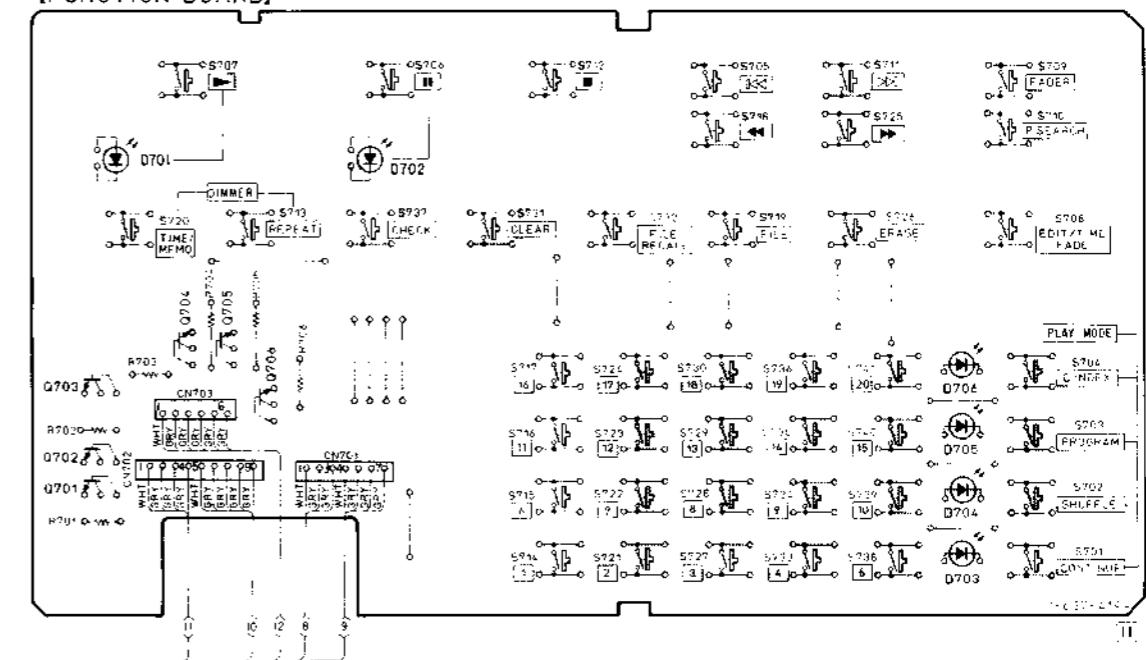


**FLO821 FLUORESCENT INDICATOR TUBE**


## [DISPLAY BOARD]

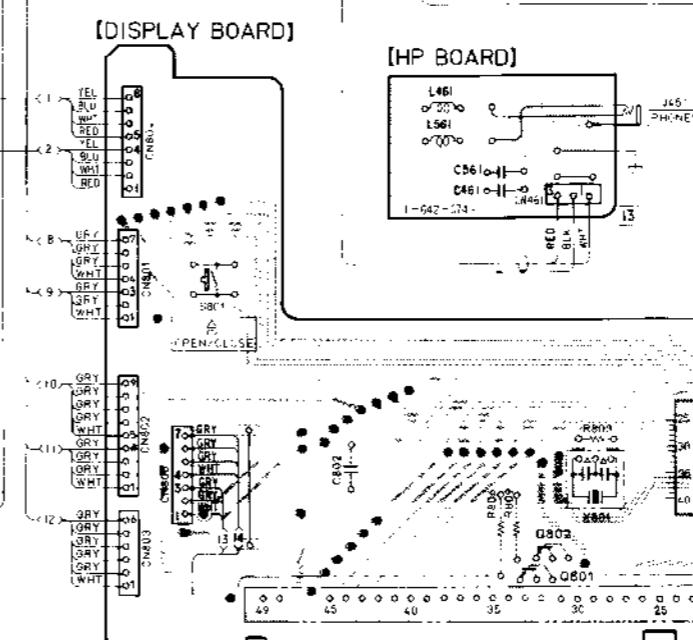



[TIMER BOARD]

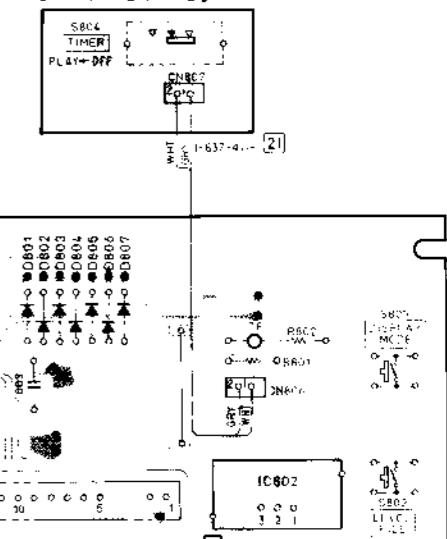


**3-4. SCHEMATIC DIAGRAM** • Refer to page 19 for IC Block Diagrams.

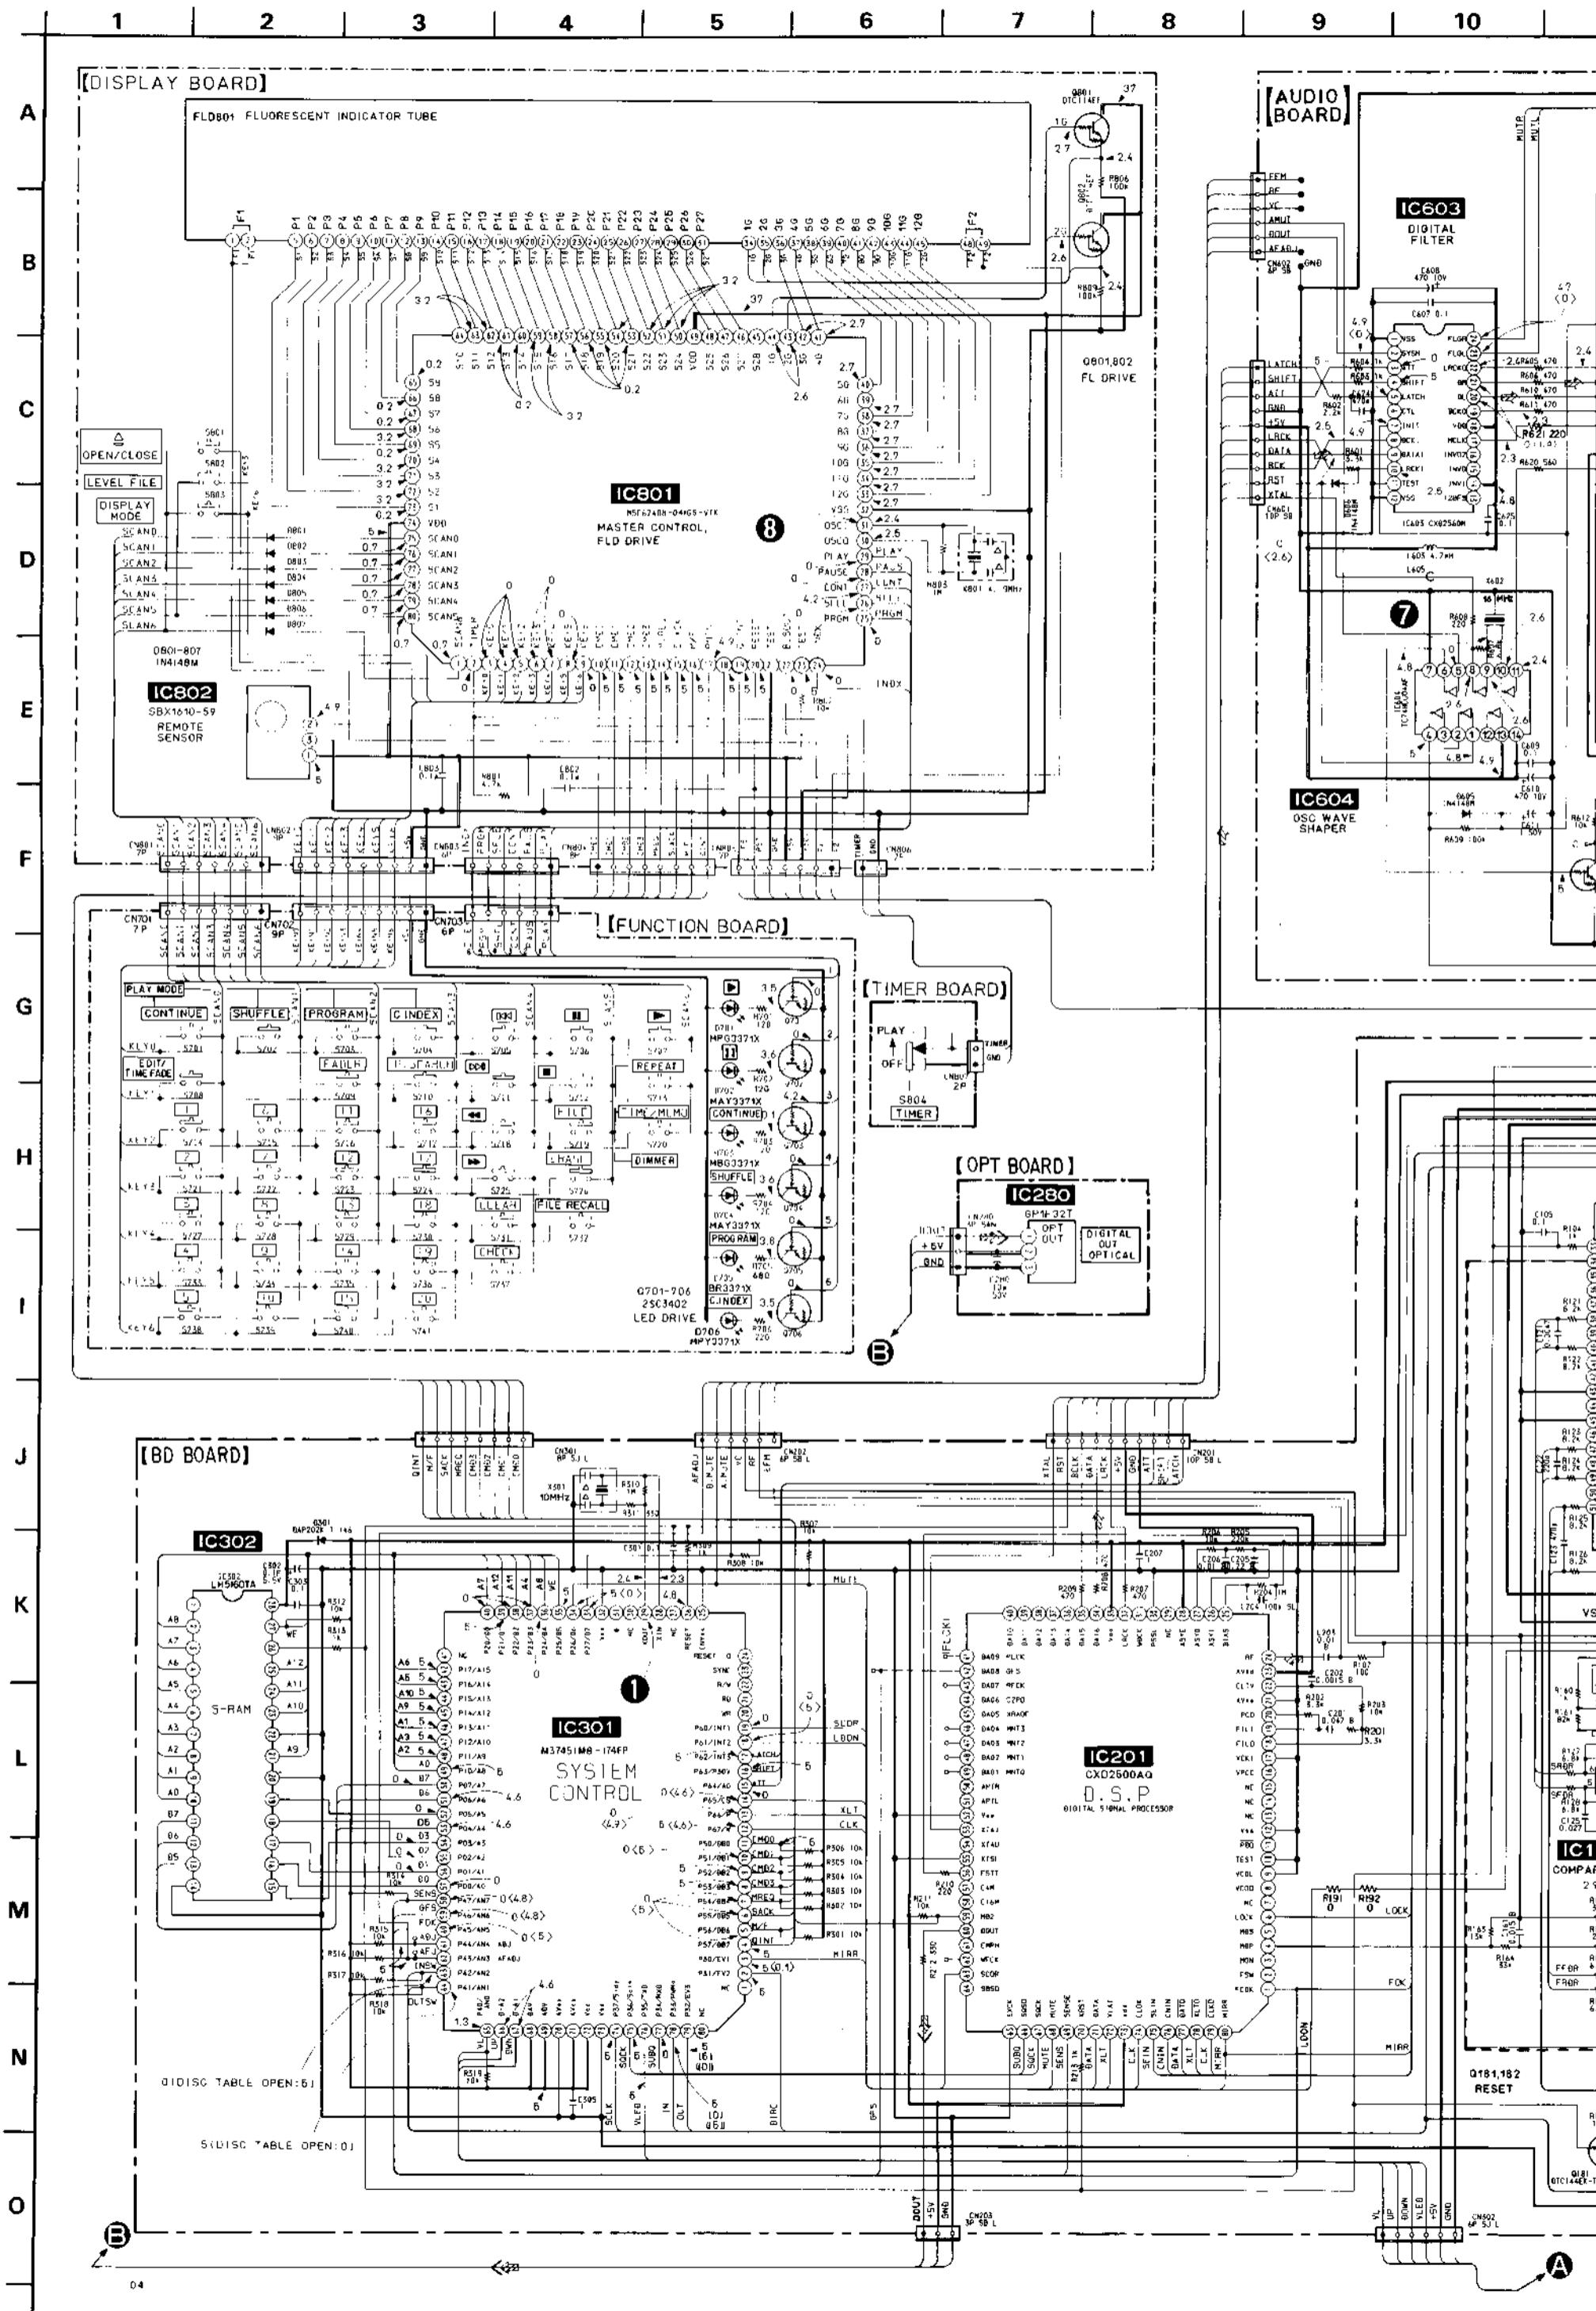

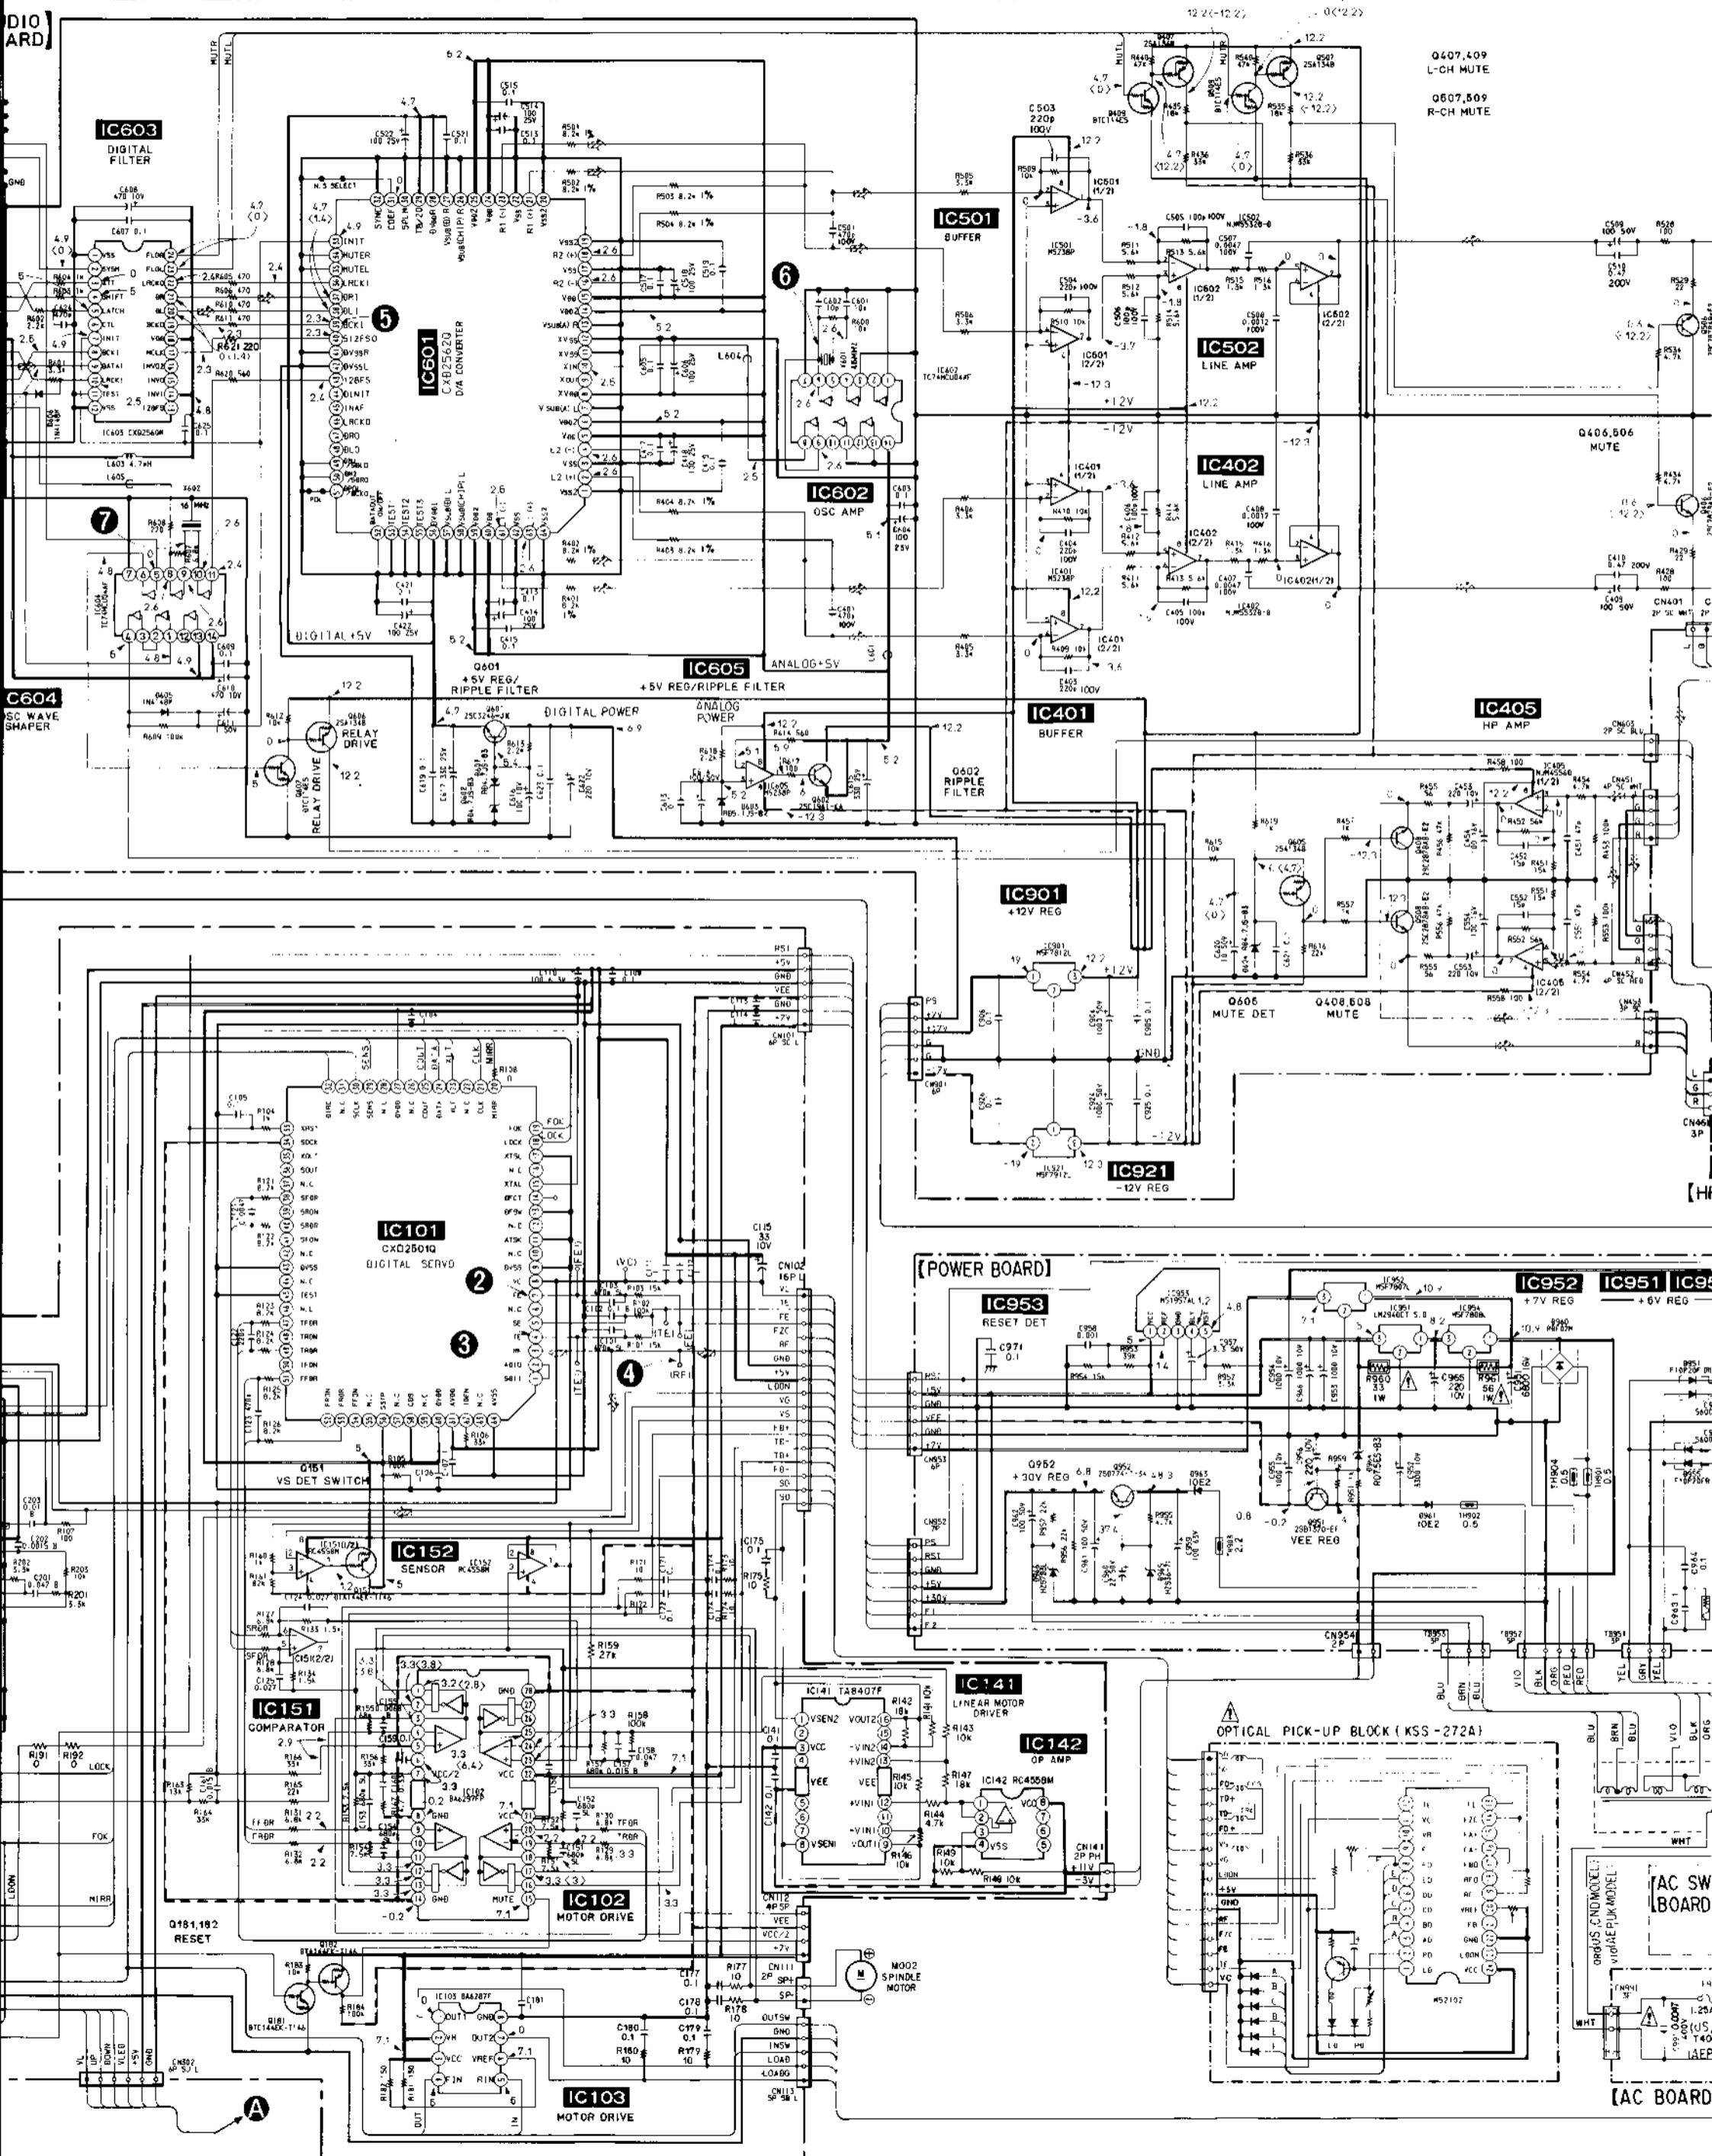

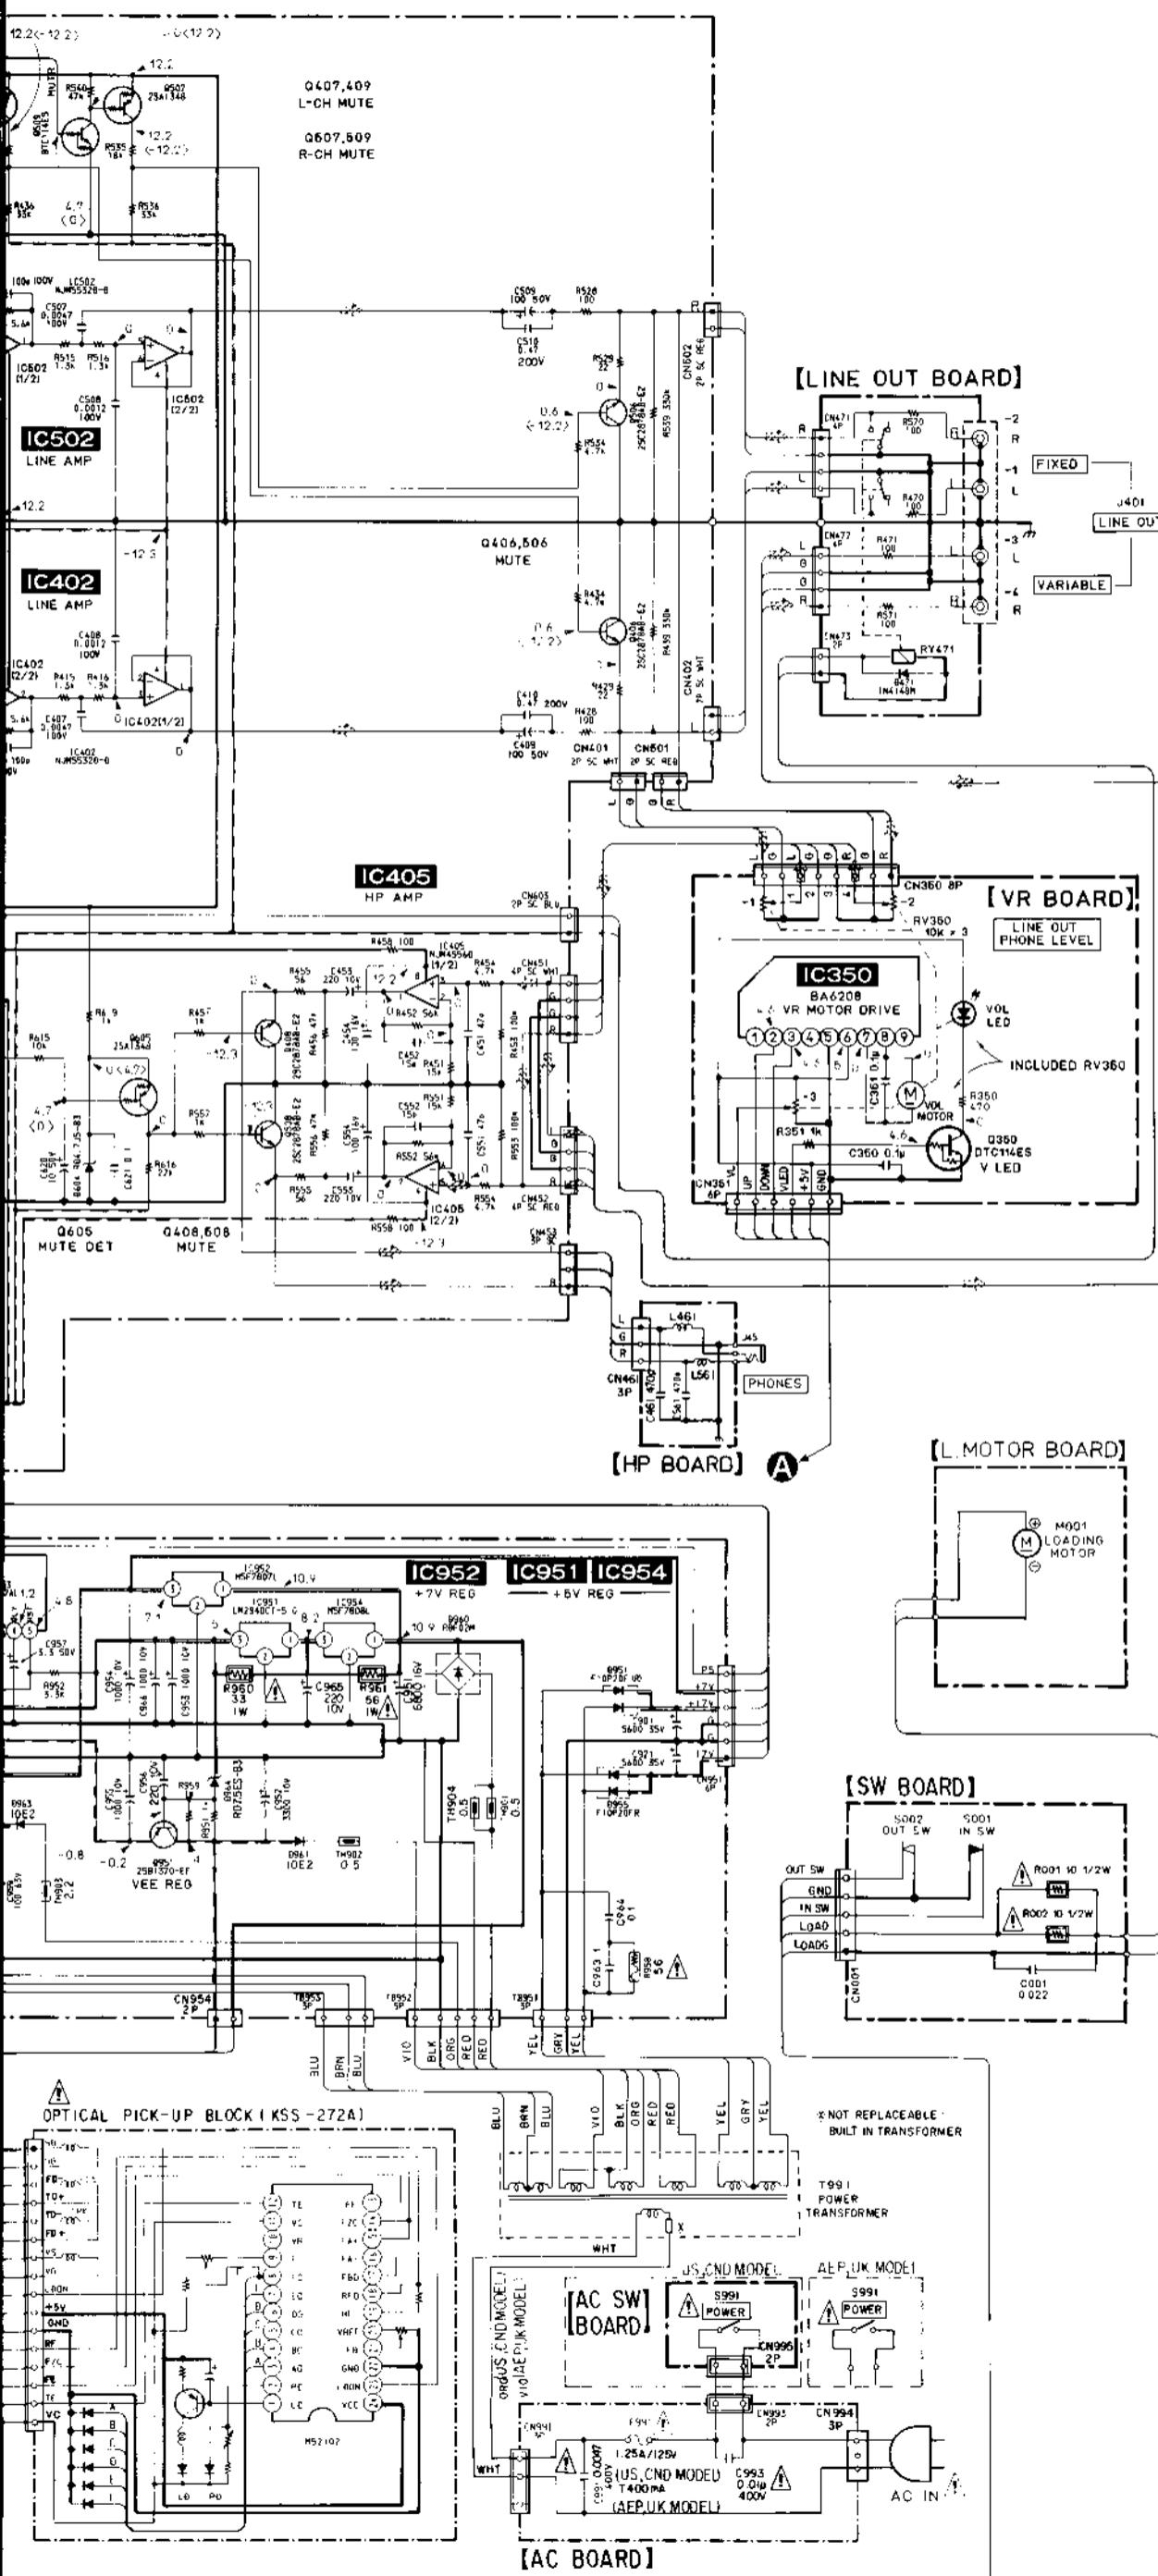

● Waveforms

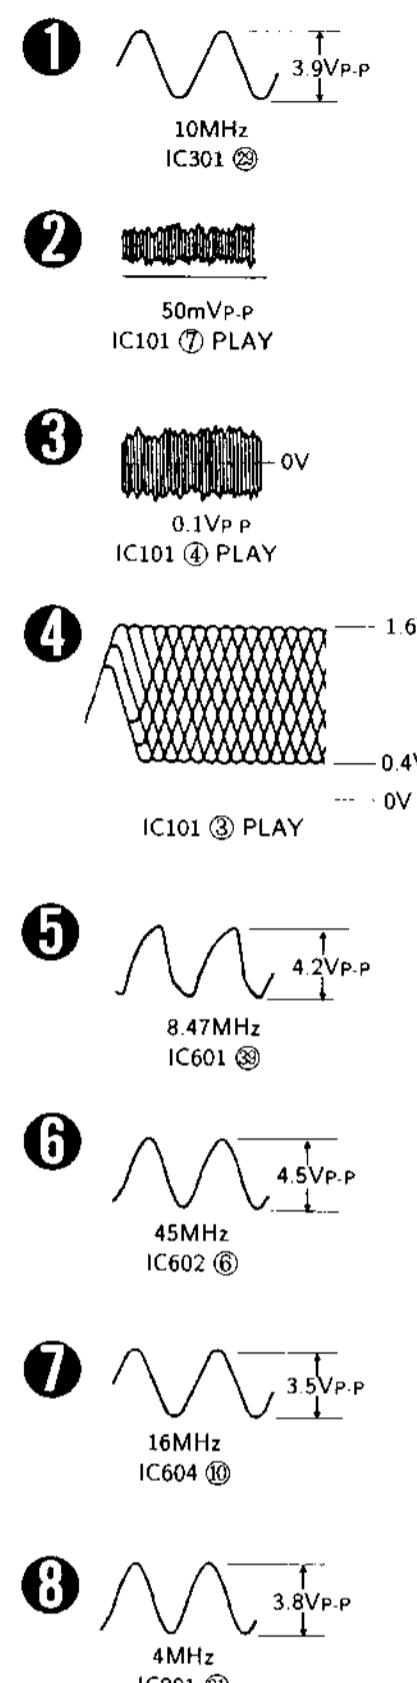

Note:

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\mu\text{F}$
- 50W or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/2\text{W}$  or less unless otherwise specified.
- $\triangle$ : internal component.
- $\square$ : nonflammable resistor.
- $\text{---}$ : fusible resistor.


**Note:**  
The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.


- B+ Line
- - - B- Line
- Voltage and waveforms are dc with respect to ground under no signal (detuned) conditions
- (S) : STOP
- (G) : GND OUT MOVING
- (D) : GND IN MOVING
- PLAY
- Voltages are taken with a VOM input Impedance 10M $\Omega$ . Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms
- Signal path.
- CD
- digital out
- CND Canadian model

● IC Block Diagrams


**IC101 CXD2501Q**

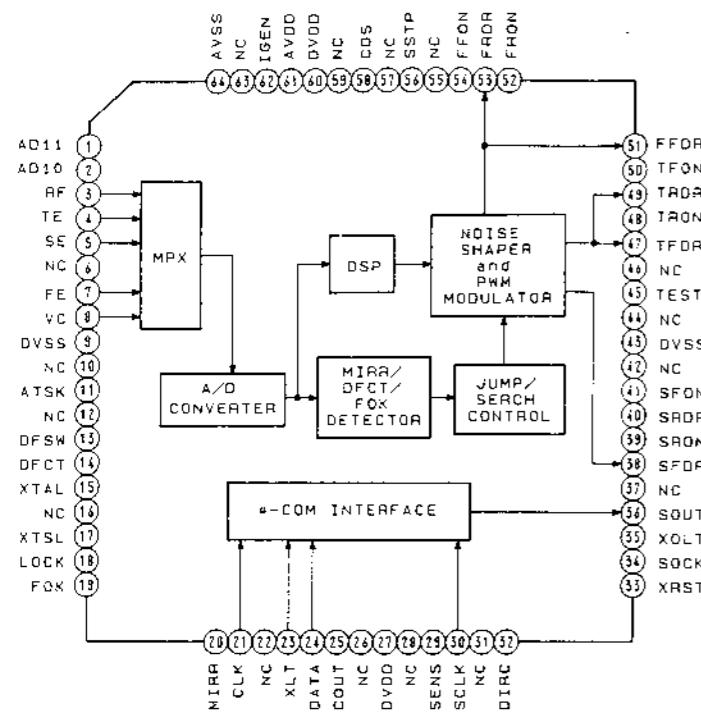


**IC201 CXD2500AQ**

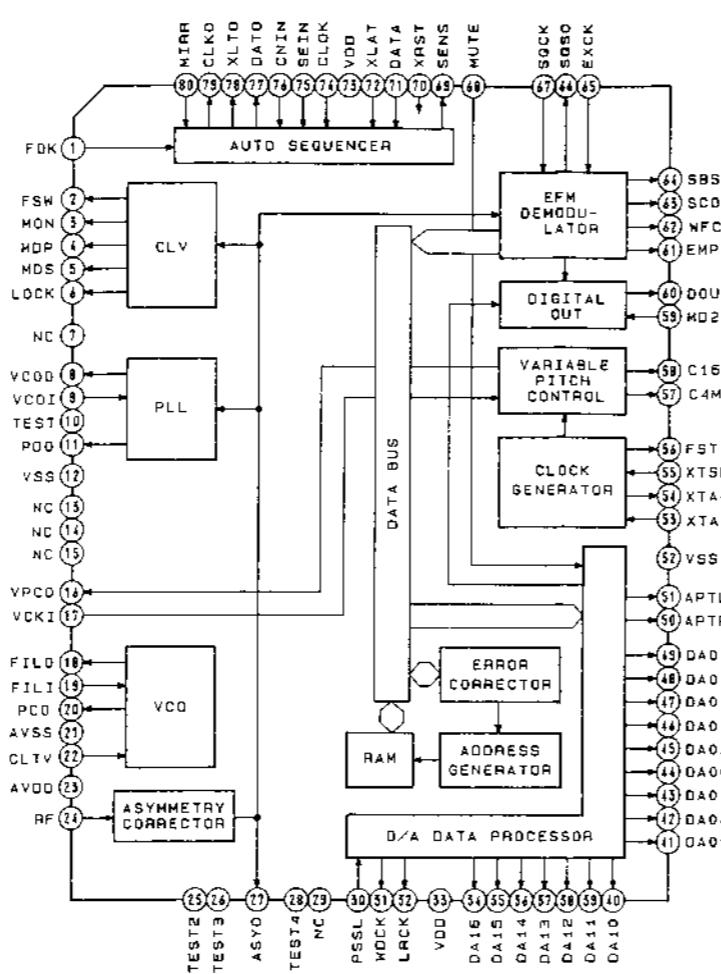


**IC603 CXD2560M**

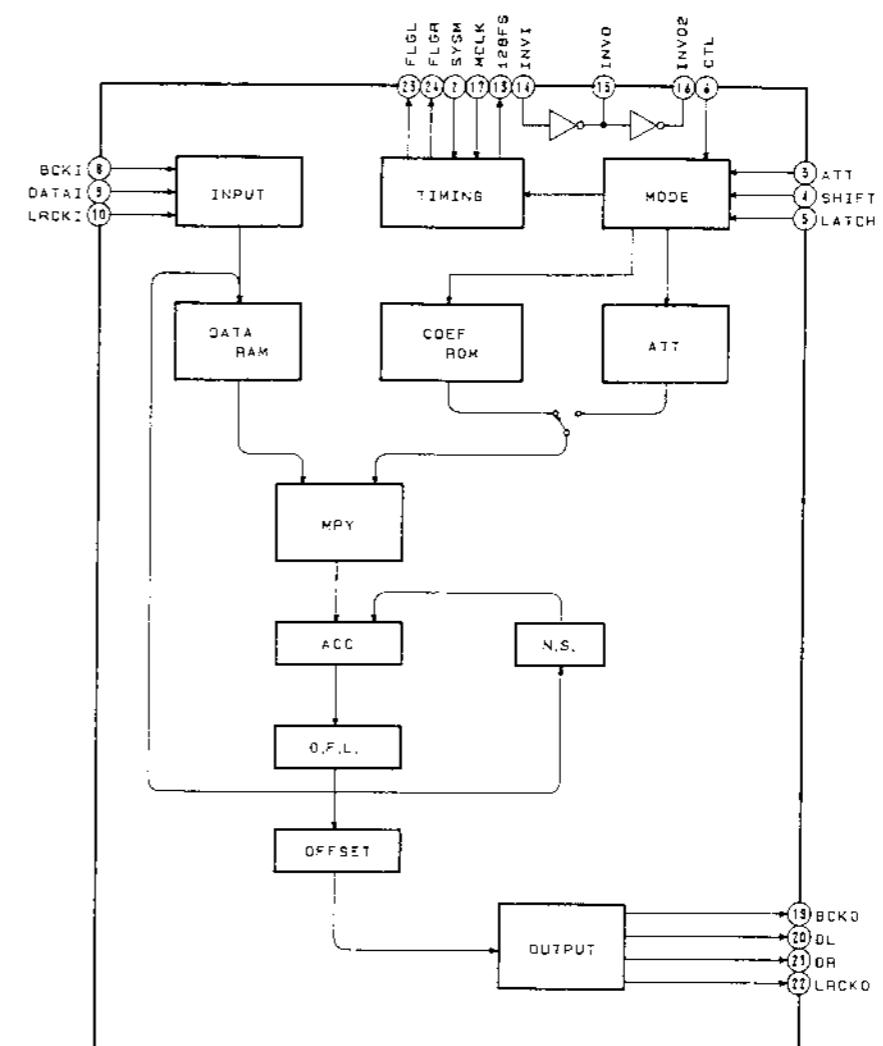

**IC102 BA6297FP**

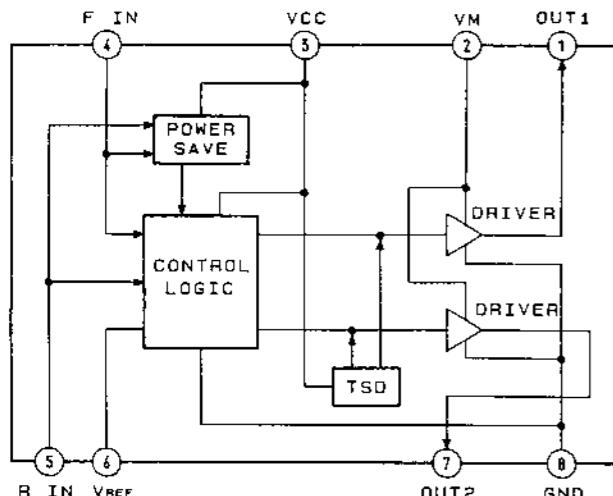


**IC953 M51957AL**

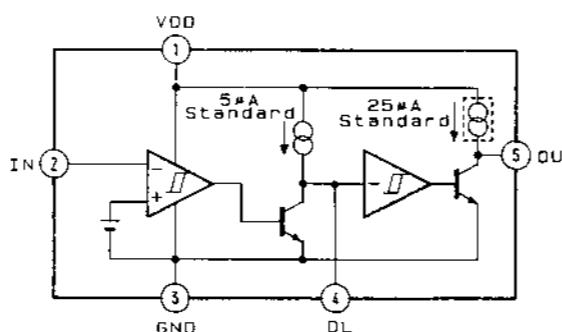

## SECTION 4 EXPLODED VIEWS

### 3-5. SEMICONDUCTOR LEAD LAYOUTS

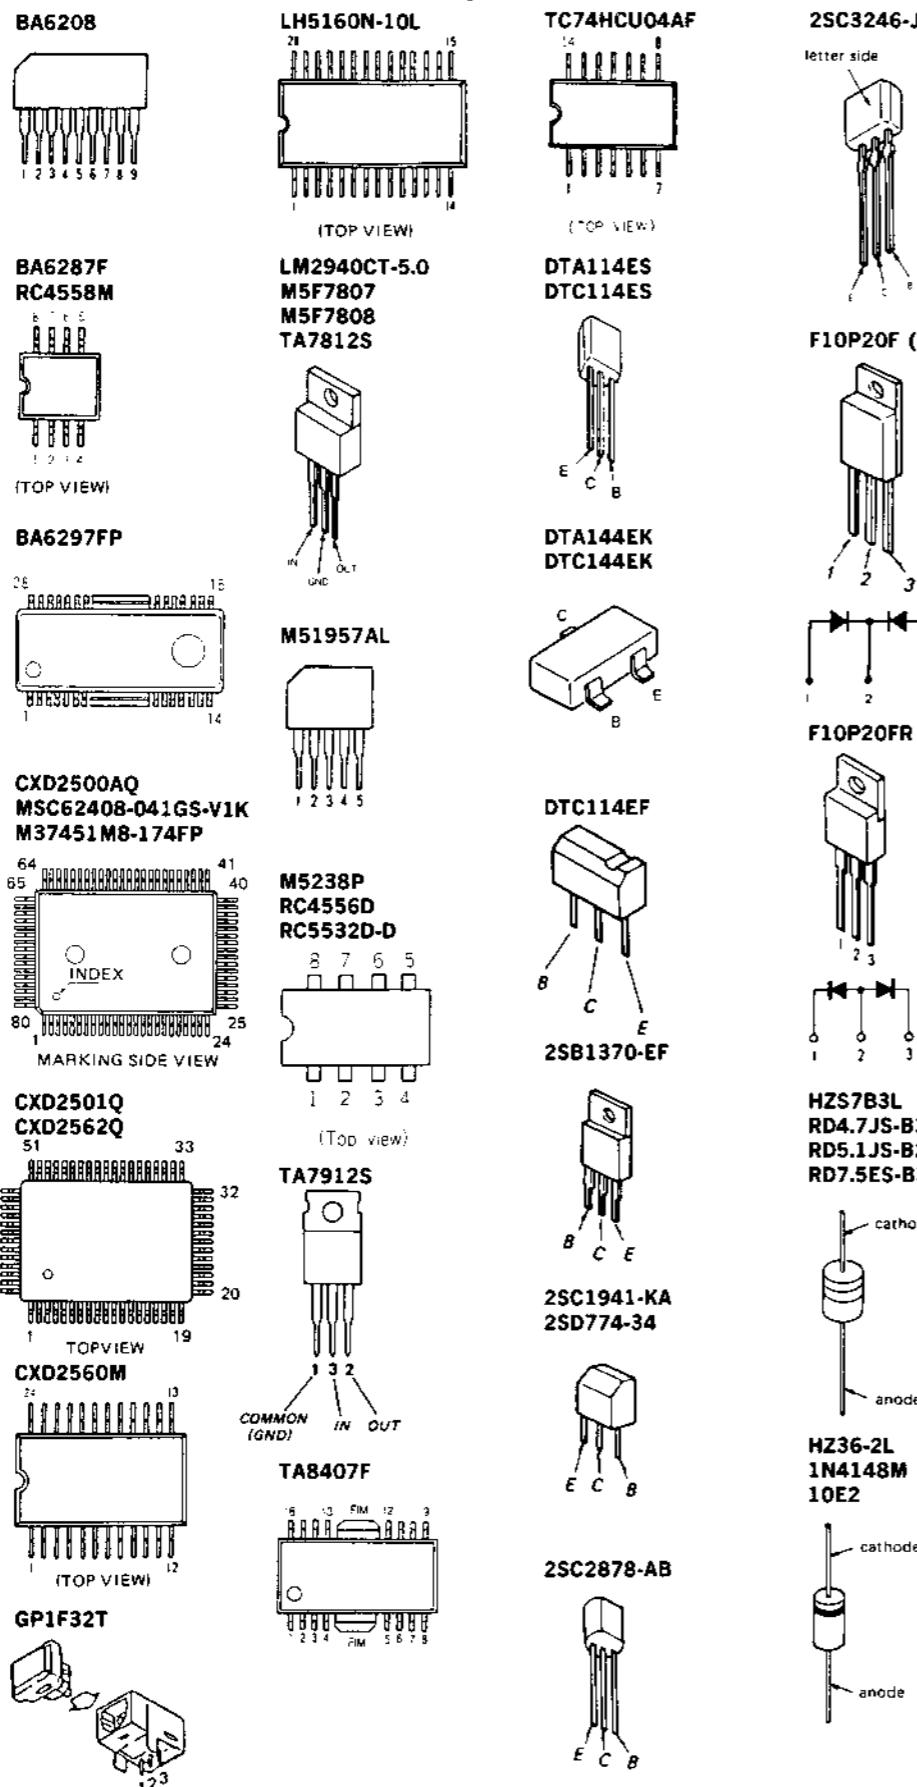

### NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts  
Example:  
KNOB, BALANCE (WHITE)...(RED)  
Parts Color Cabinet's Color

\* Hardware (# mark) list is given at the last of this parts list.

The components identified by a triangle or dotted line with mark are critical for safety. Replace only with part number specified.


Les composants identifiés par un triangle ou une ligne pointillée avec une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

### 4-1. CABINET SECTION

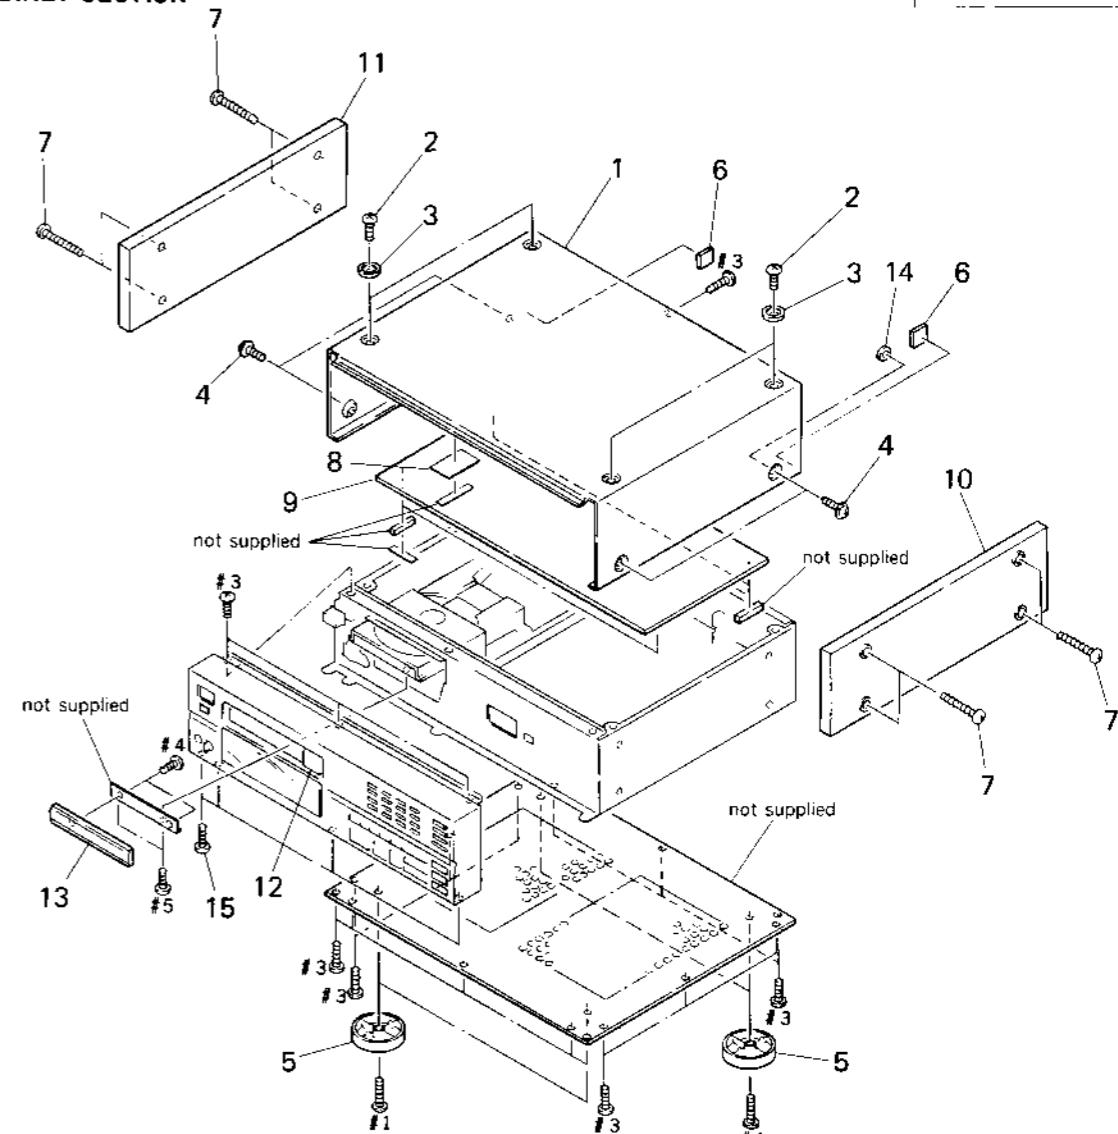

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-934-043-01	CASE (UK)		* 8	4-923-563-11	CUSHION	
* 1	4-934-043-41	CASE (US, Canadian, AEP)		9	A-4675-309-A	REINFORCEMENT (TOP PLATE) ASSY	
2	4-924-242-11	SCREW (M3X6), FLAT HEAD		10	X-4928-002-1	PLATE (RIGHT) ASSY, SIDE (US, Canadian)	
3	4-928-025-11	ESCUTCHEON (TOP PLATE)		11	X-4928-001-1	PLATE (LEFT) ASSY, SIDE (US, Canadian)	
4	4-847-802-00	SCREW (AEP, UK)		12	X-4941-988-1	BUTTON (OPEN/CLOSE) ASSY	
5	X-4941-014-1	FOOT ASSY (AEP, UK)		13	X-4941-991-1	PANEL ASSY, LOADING	
5	X-4941-550-1	FOOT ASSY (US, Canadian)		14	4-935-917-01	WASHER (CASE)	
* 6	4-929-007-01	CUSHION (CASE)		15	4-929-074-01	SCREW (3X8)	
7	4-885-979-11	SCREW (4X25) (US, Canadian)					


## 4-2. FRONT PANEL SECTION

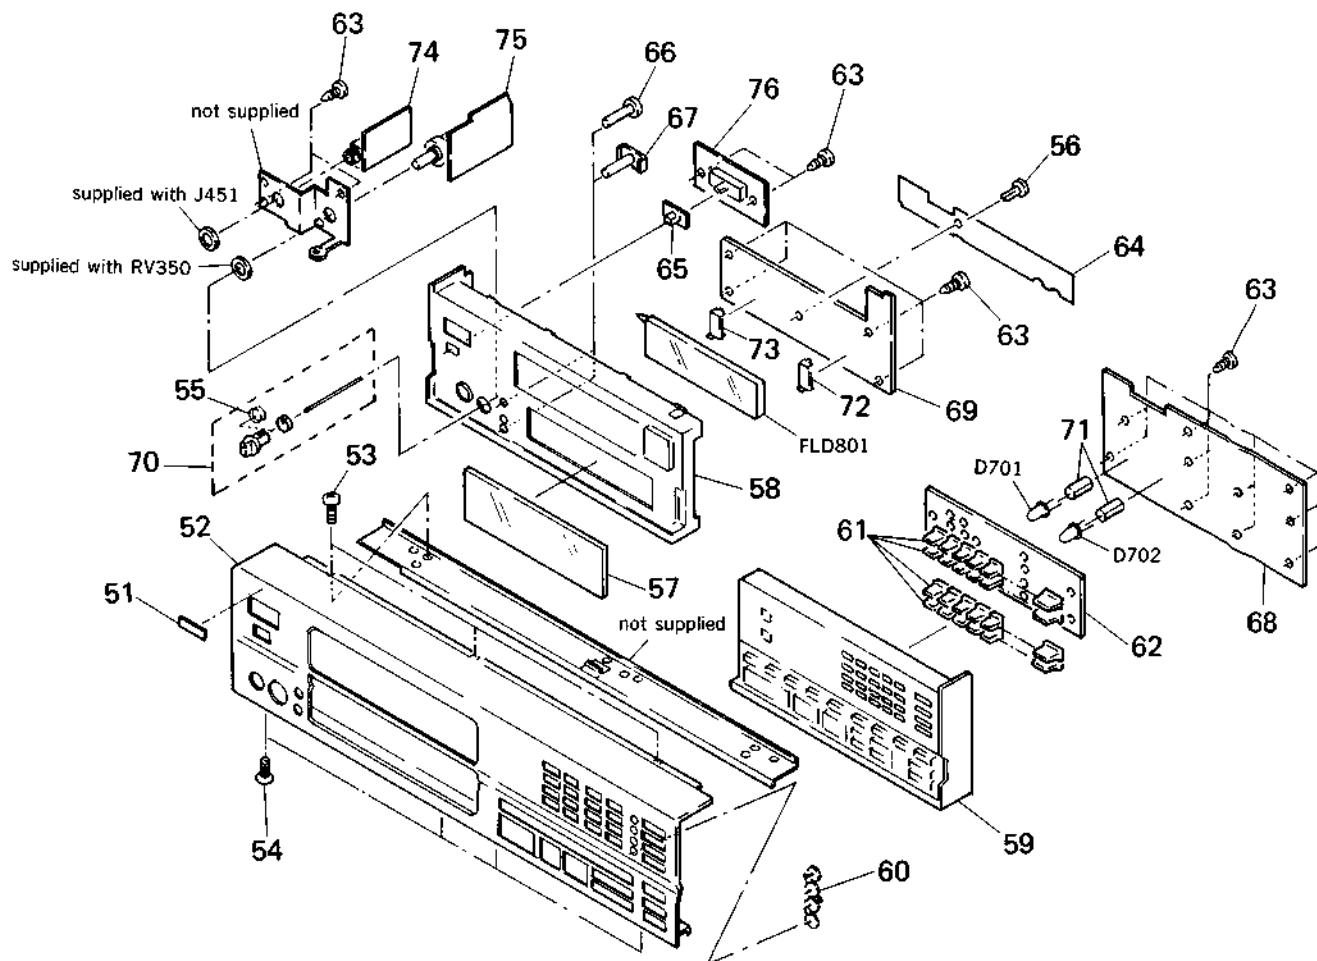


Ref. No.	Part No.	Description	Remark
51	4-908-848-01	EMBLEM, SONY	
52	4-948-008-01	PANEL (FRONT)	
53	3-703-685-21	SCREW (+BV 3X8)	
54	4-929-074-01	SCREW (3X8)	
55	4-948-469-01	SPRING, RING	
56	3-531-576-11	RIVET	
57	4-941-087-01	PLATE, INDICATION	
58	X-4941-990-1	PANEL (L) ASSY	
59	X-4941-013-1	PANEL (R) ASSY	
60	4-941-093-01	INDICATOR	
61	4-941-079-01	BUTTON (20 KEY)	
* 62	4-941-092-01	ABSORBENT (20 KEY). VIBRATION	
63	4-951-620-01	SCREW (2, 6X8), +BVTP	
* 64	4-941-220-01	COVER (CABLE)	
65	4-922-518-11	KNOB (TIMER)	

Ref. No.	Part No.	Description	Remark
66	4-941-084-01	BUTTON (DISPLAY MODE)	
67	4-941-085-01	BUTTON (LEVEL FILE)	
* 68	1-637-419-11	FUNCTION BOARD	
* 69	1-637-410-11	DISPLAY BOARD	
70	A-4604-901-A	KNOB (LINE OUT/PHONE LEVEL) ASY	
* 71	4-923-532-21	SPACER, LED	
* 72	4-928-052-01	HOLDER (RIGHT)	
* 73	4-928-053-01	HOLDER (LEFT)	
* 74	1-642-074-11	HP BOARD	
* 75	1-641-804-11	VR BOARD	
* 76	1-637-411-11	TIMER BOARD	
D701	8-719-970-07	LED MPG3371X-150 (▶)	
D702	8-719-971-52	LED MAY3371X-M-177 (■)	
FLD801	I-519-622-11	INDICATOR TUBE, FLUORESCENT	

## 4-3. CHASSIS SECTION

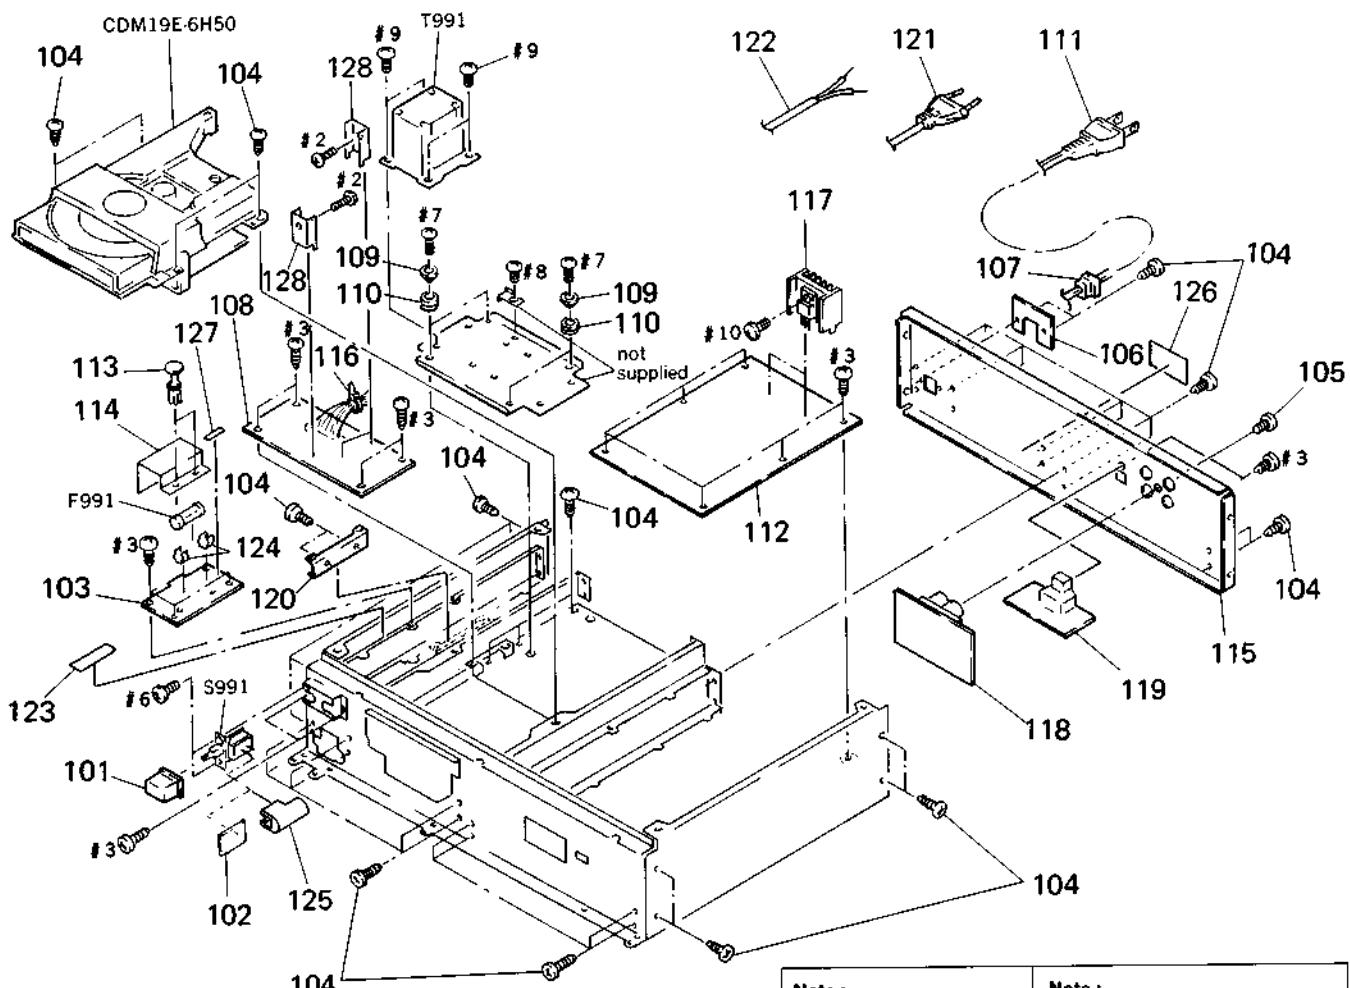


**4-4. CD MECHANISM BLOCK SECTION  
(CDM19E-6H50)**

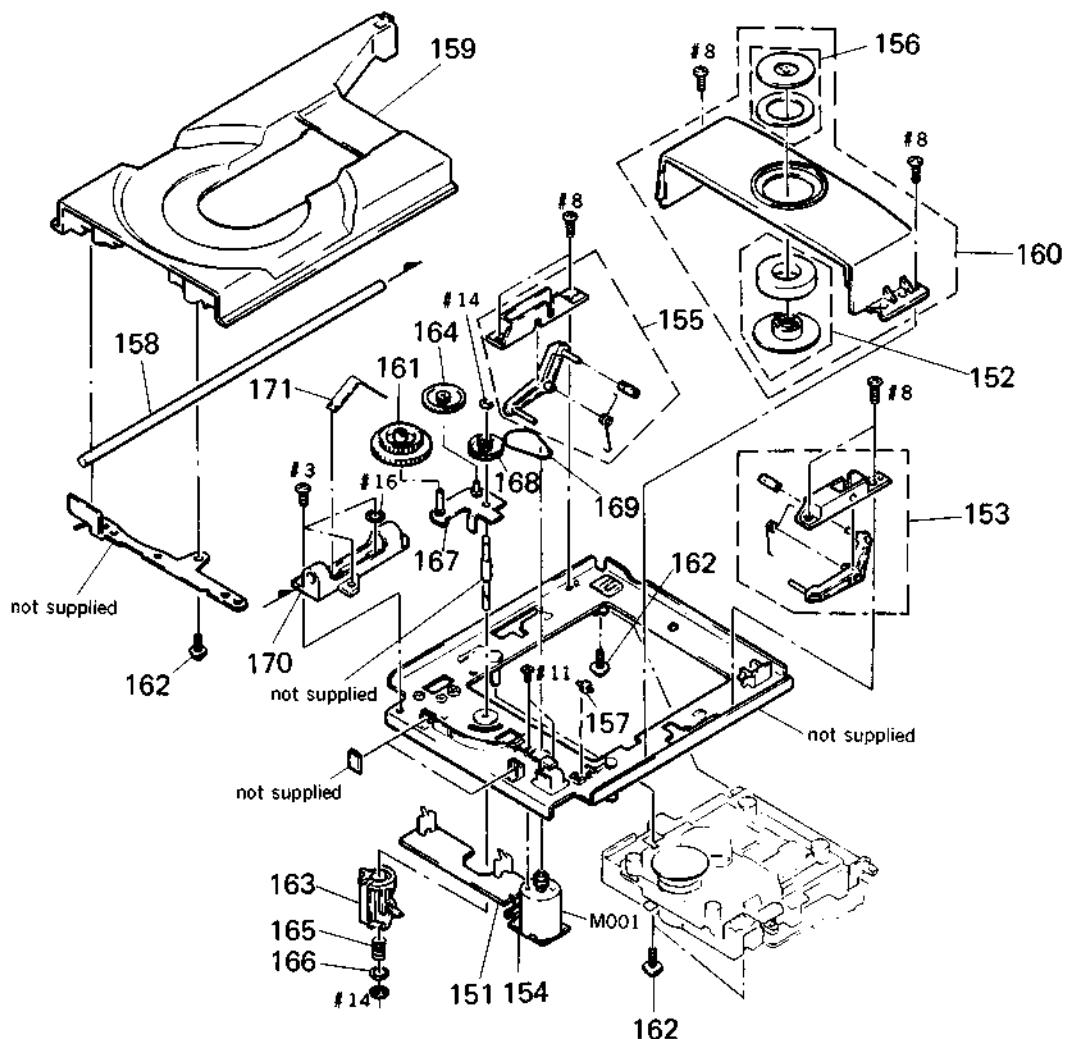

Ref. No.	Part No.	Description	Remark
* 151	1-641-764-11	SW BOARD	
* 152	4-918-679-04	PULLEY, PRESS	
153	A-4604-914-A	LOCK (R) ASSY, STABLE	
* 154	1-641-765-11	L. MOTOR BOARD	
155	A-4604-913-A	LOCK (L) ASSY, STABLE	
156	A-4665-024-A	MAGNET ASSY	
157	4-927-627-01	ROLLER (S.G)	
* 158	4-948-368-01	BAR (MAIN), GUIDE	
159	4-948-353-01	TABLE, DISK	
160	A-4604-911-A	HOLDER (A.P.) ASSY	
161	4-927-620-01	GEAR (P)	

Ref. No.	Part No.	Description	Remark
* 162	4-917-583-21	BRACKET, YOKE	
* 163	4-948-371-01	CAM (BU)	
164	4-927-628-01	GEAR (C)	
165	3-659-338-00	SPRING, COMPRESSION	
166	4-927-654-01	WASHER (LIMITER)	
167	X-4927-608-1	ARM ASSY, SWING	
168	4-929-724-01	PULLEY (B)	
169	4-927-649-01	BELT	
* 170	4-948-360-01	BEARING, LOADING	
* 171	4-927-648-01	SLIDER (GROUND)	
M001	A-4604-347-A	MOTOR (L) ASSY	

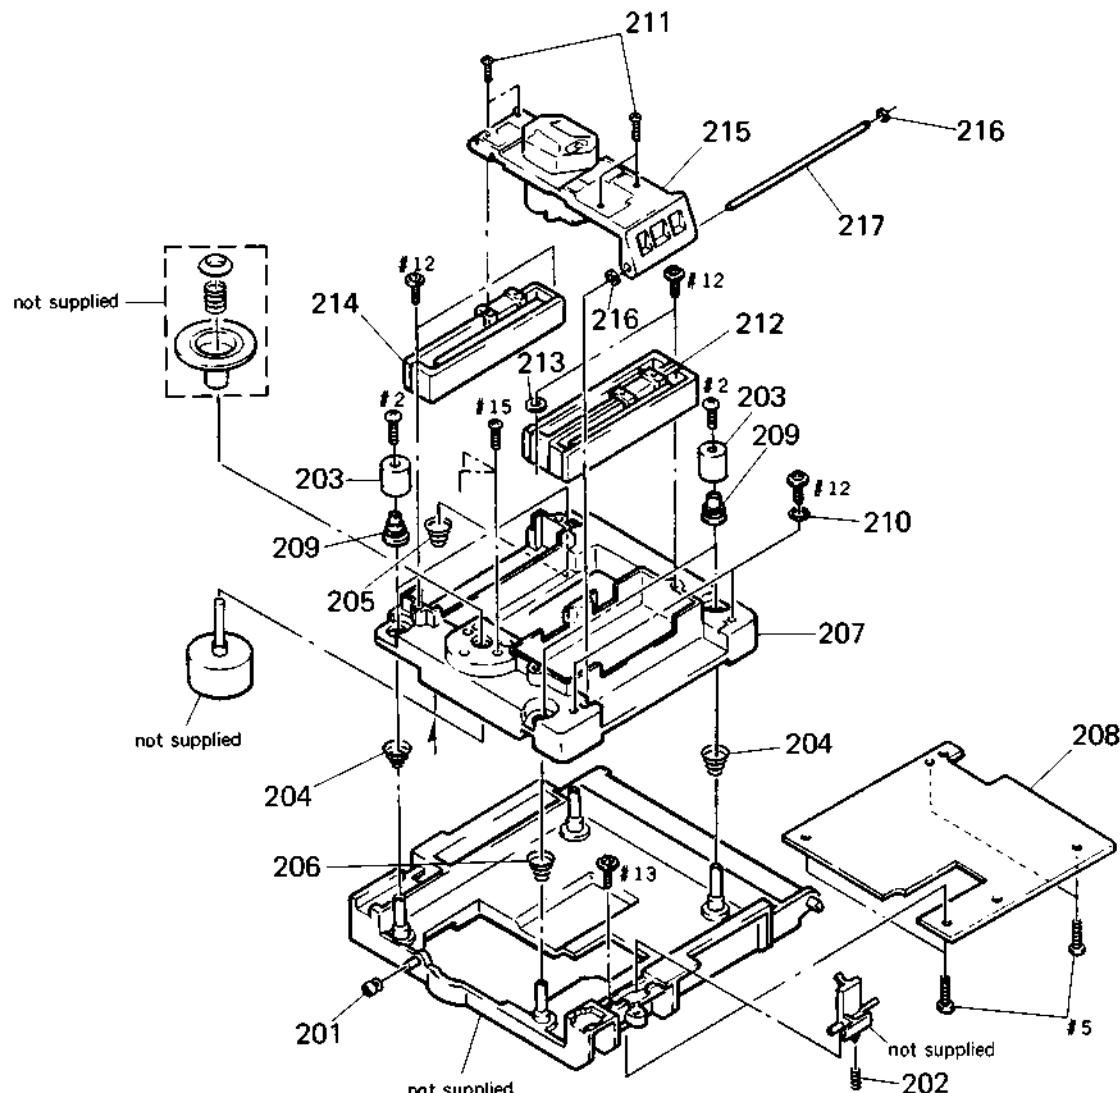**4-5. BASE UNIT SECTION  
(BU-6H)**


**Note :**  
The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

**Note :**  
Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
201	4-927-631-01	ROLLER (L)	
202	3-305-423-00	SPRING, COMPRESSION	
203	4-927-634-01	HOLDER (SP)	
204	4-917-572-01	SPRING (B)	
205	4-917-571-01	SPRING (A)	
206	4-917-573-01	SPRING (E)	
207	4-922-671-02	MECHANISM BASE (M.6)	
* 208	A-4649-007-A	BD BOARD, COMPLETE	
* 209	4-917-584-11	INSULATOR	

Ref. No.	Part No.	Description	Remark
210	4-927-318-01	WASHER	
211	3-318-203-61	SCREW (B1.7X4), TAPPING	
212	A-4608-335-A	MOTOR ASSY, LINEAR (INCLUDING M002)	
213	4-927-669-01	WASHER (BU)	
214	A-4638-084-A	SENSOR ASSY, SPEED	
215	8-848-244-11	DEVICE, OPTICAL KSS-272A	
* 216	4-917-582-01	CUSHION, SLIDE	
* 217	4-910-431-01	SHAFT, SLIDE	

## SECTION 5 ELECTRICAL PARTS LIST

**AC****AC SW****AUDIO****NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- **RESISTORS**  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- **SEMICONDUCTORS**  
In each case, u:  $\mu$ , for example:  
uA :  $\mu$ A . . . uPA :  $\mu$ PA . . .  
uPB :  $\mu$ PB . . . uPC :  $\mu$ PC . . . uPD :  $\mu$ PD . . .
- **CAPACITORS**  
uF:  $\mu$ F
- **COILS**  
uH:  $\mu$ H

When indicating parts by reference number, please include the board.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark		Ref. No.	Part No.	Description	Remark	
*	1-641-809-11	AC BOARD	*****		C415	1-130-495-00	MYLAR	0.1uF	5% 50V
					C417	1-130-495-00	MYLAR	0.1uF	5% 50V
	1-533-183-11	HOLDER, FUSE			C418	1-124-122-11	ELECT	100uF	20% 50V
			< CAPACITOR >		C419	1-130-495-00	MYLAR	0.1uF	5% 50V
					C421	1-136-165-00	FILM	0.1uF	5% 50V
$\Delta$ C991	1-162-599-12	CERAMIC	0.0047uF	400V	C422	1-124-122-11	ELECT	100uF	20% 50V
$\Delta$ C993	1-161-744-00	CERAMIC	0.01uF	400V	C451	1-162-215-31	CERAMIC	47PF	5% 50V
			< CONNECTOR >		C452	1-162-203-31	CERAMIC	15PF	5% 50V
					C453	1-124-995-11	ELECT	220uF	20% 10V
					C454	1-126-023-11	ELECT	100uF	20% 16V
*	CN991	1-535-140-00	BASE POST 22MM (10MM PITCH) 3P		C501	1-136-812-11	FILM	470PF	5% 100V
	CN993	1-564-321-00	PIN, CONNECTOR 2P		C503	1-136-810-11	FILM	220PF	5% 100V
*	CN994	1-580-230-11	PIN, CONNECTOR (PC BOARD) 3P		C504	1-136-810-11	FILM	220PF	5% 100V
			*****		C505	1-136-808-11	FILM	100PF	5% 100V
					C506	1-136-808-11	FILM	100PF	5% 100V
*	1-641-805-11	AC SW BOARD (US, Canadian)	*****		C507	1-136-233-11	FILM	0.0047uF	2% 100V
					C508	1-136-228-11	FILM	0.0012uF	2% 100V
			< SWITCH >		C509	1-124-572-11	ELECT	100uF	20% 63V
$\Delta$ S991	1-570-156-11	SWITCH, PUSH (AC POWER) (1 KEY) (POWER)			C510	1-136-580-11	FILM	0.47uF	10% 200V
			*****		C513	1-130-495-00	MYLAR	0.1uF	5% 50V
					C514	1-124-122-11	ELECT	100uF	20% 50V
*	A-4649-345-A	AUDIO BOARD, COMPLETE	*****		C515	1-130-495-00	MYLAR	0.1uF	5% 50V
					C517	1-130-495-00	MYLAR	0.1uF	5% 50V
					C518	1-124-122-11	ELECT	100uF	20% 50V
					C519	1-130-495-00	MYLAR	0.1uF	5% 50V
		7-682-147-15	SCREW, TR		C521	1-136-165-00	FILM	0.1uF	5% 50V
*	4-363-146-00	HEAT SINK, V. OUT			C522	1-124-122-11	ELECT	100uF	20% 50V
			< CAPACITOR >		C551	1-162-215-31	CERAMIC	47PF	5% 50V
C401	1-136-812-11	FILM	470PF	5% 100V	C552	1-162-203-31	CERAMIC	15PF	5% 50V
C403	1-136-810-11	FILM	220PF	5% 100V	C553	1-124-995-11	ELECT	220uF	20% 10V
C404	1-136-810-11	FILM	220PF	5% 100V	C554	1-126-023-11	ELECT	100uF	20% 16V
C405	1-136-808-11	FILM	100PF	5% 100V	C601	1-162-199-31	CERAMIC	10PF	5% 50V
C406	1-136-808-11	FILM	100PF	5% 100V	C602	1-162-199-31	CERAMIC	10PF	5% 50V
C407	1-136-233-11	FILM	0.0047uF	2% 100V	C603	1-162-806-11	CERAMIC	0.1uF	10% 50V
C408	1-136-228-11	FILM	0.0012uF	2% 100V	C604	1-124-122-11	ELECT	100uF	20% 50V
C409	1-124-572-11	ELECT	100uF	20% 63V	C605	1-162-806-11	CERAMIC	0.1uF	10% 50V
C410	1-136-580-11	FILM	0.47uF	10% 200V	C606	1-124-122-11	ELECT	100uF	20% 50V
C413	1-130-495-00	MYLAR	0.1uF	5% 50V	C607	1-136-165-00	FILM	0.1uF	5% 50V
C414	1-124-122-11	ELECT	100uF	20% 50V	C608	1-124-997-11	ELECT	470uF	20% 10V
					C609	1-164-159-11	CERAMIC	0.1uF	50V

## AUDIO

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark
C610	1-124-997-11	ELECT	470uF	20%	10V	IC601	8-759-044-10	IC CXD2562Q	
C611	1-126-301-11	ELECT	1uF	20%	50V	IC602	8-759-233-64	IC TC74HCU04AF	
C613	1-130-495-00	MYLAR	0.1uF	5%	50V	IC603	8-752-342-65	IC CXD2560M	
C614	1-124-122-11	ELECT	100uF	20%	50V	IC604	8-759-233-64	IC TC74HCU04AF	
C615	1-126-025-11	ELECT	330uF	20%	25V	IC605	8-759-602-83	IC M5238P	
C616	1-126-101-11	ELECT	100uF	20%	16V	IC901	8-759-231-58	IC TA7812S	
C617	1-126-025-11	ELECT	330uF	20%	25V	IC921	8-759-245-86	IC TA7912S	
C619	1-136-165-00	FILM	0.1uF	5%	50V			< COIL >	
C620	1-126-059-11	ELECT	10uF	20%	50V	L601	1-410-397-21	FERRITE BEAD INDUCTOR	
C621	1-136-165-00	FILM	0.1uF	5%	50V	L603	1-410-969-11	INDUCTOR 4.7uH	
C622	1-126-335-11	ELECT	220uF	20%	10V	L604	1-410-397-21	FERRITE BEAD INDUCTOR	
C623	1-136-165-00	FILM	0.1uF	5%	50V	L605	1-410-397-21	FERRITE BEAD INDUCTOR	
C624	1-162-290-31	CERAMIC	470PF	10%	50V			< TRANSISTOR >	
C625	1-164-159-11	CERAMIC	0.1uF		50V	Q406	8-729-231-55	TRANSISTOR 2SC2878-AB	
C904	1-126-170-11	ELECT	1000uF	20%	50V	Q407	8-729-900-61	TRANSISTOR DTA114ES	
C905	1-162-806-11	CERAMIC	0.1uF	10%	50V	Q408	8-729-231-55	TRANSISTOR 2SC2878-AB	
C906	1-162-806-11	CERAMIC	0.1uF	10%	50V	Q409	8-729-900-80	TRANSISTOR DTC114ES	
C924	1-126-170-11	ELECT	1000uF	20%	50V	Q506	8-729-231-55	TRANSISTOR 2SC2878-AB	
C925	1-162-806-11	CERAMIC	0.1uF	10%	50V	Q507	8-729-900-61	TRANSISTOR DTA114ES	
C926	1-162-806-11	CERAMIC	0.1uF	10%	50V	Q508	8-729-231-55	TRANSISTOR 2SC2878-AB	
						Q509	8-729-900-80	TRANSISTOR DTC114ES	
						Q601	8-729-620-23	TRANSISTOR 2SC3246-JK	
						Q602	8-729-194-13	TRANSISTOR 2SC1941-KA	
						Q605	8-729-900-61	TRANSISTOR DTA114ES	
						Q606	8-729-900-61	TRANSISTOR DTA114ES	
						Q607	8-729-900-80	TRANSISTOR DTC114ES	
< CONNECTOR >									
* CN401	1-573-261-11	PIN, CONNECTOR 2P							
* CN402	1-573-261-11	PIN, CONNECTOR 2P							
* CN451	1-573-263-11	PIN, CONNECTOR 4P							
* CN452	1-573-263-21	PIN, CONNECTOR 4P							
* CN453	1-573-262-11	PIN, CONNECTOR 3P							
* CN501	1-573-261-21	PIN, CONNECTOR 2P							
* CN502	1-573-261-21	PIN, CONNECTOR 2P							
* CN601	1-569-997-11	PIN, CONNECTOR (PC BOARD) 10P							
* CN602	1-569-993-11	PIN, CONNECTOR (PC BOARD) 6P							
* CN603	1-573-261-31	PIN, CONNECTOR 2P							
* CN901	1-573-865-21	PIN, CONNECTOR (PC BOARD) 6P							
< DIODE >									
D601	8-719-114-27	DIODE RD4.7JS-B3				R401	1-249-945-11	CARBON 8.2K 1% 1/4W	
D602	8-719-114-27	DIODE RD4.7JS-B3				R402	1-249-945-11	CARBON 8.2K 1% 1/4W	
D603	8-719-114-30	DIODE RD5.1JS-B2				R403	1-249-945-11	CARBON 8.2K 1% 1/4W	
D604	8-719-114-27	DIODE RD4.7JS-B3				R404	1-249-945-11	CARBON 8.2K 1% 1/4W	
D605	8-719-987-63	DIODE 1N4148M				R405	1-247-719-11	CARBON 3.3K 5% 1/4W	
D606	8-719-987-63	DIODE 1N4148M				R406	1-247-719-11	CARBON 3.3K 5% 1/4W	
< IC >									
IC401	8-759-602-83	IC M5238P				R409	1-247-725-11	CARBON 10K 5% 1/4W	
IC402	8-759-982-03	IC RC5532D-D				R410	1-247-725-11	CARBON 10K 5% 1/4W	
IC405	8-759-981-85	IC RC4556D				R411	1-247-722-11	CARBON 5.6K 5% 1/4W	
IC501	8-759-602-83	IC M5238P				R412	1-247-722-11	CARBON 5.6K 5% 1/4W	
IC502	8-759-982-03	IC RC5532D-D				R413	1-247-722-11	CARBON 5.6K 5% 1/4W	
						R414	1-247-722-11	CARBON 5.6K 5% 1/4W	
						R415	1-249-926-11	CARBON 1.3K 5% 1/4W	
						R416	1-249-926-11	CARBON 1.3K 5% 1/4W	
						R428	1-247-700-11	CARBON 100 5% 1/4W	
						R429	1-249-512-11	CARBON 22 5% 1/4W	
						R434	1-259-444-11	CARBON 4.7K 5% 1/6W	
						R435	1-259-458-11	CARBON 18K 5% 1/6W	
						R436	1-259-464-11	CARBON 33K 5% 1/6W	

**AUDIO**    **BD**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R439	1-247-891-00	CARBON	330K 5% 1/4W	R610	1-259-420-11	CARBON	470 5% 1/6W
R440	1-259-468-11	CARBON	47K 5% 1/6W	R611	1-259-420-11	CARBON	470 5% 1/6W
R451	1-259-456-11	CARBON	15K 5% 1/6W	R612	1-249-429-11	CARBON	10K 5% 1/4W
R452	1-259-470-11	CARBON	56K 5% 1/6W	R613	1-247-717-11	CARBON	2.2K 5% 1/4W
R453	1-259-476-11	CARBON	100K 5% 1/6W	R614	1-247-710-11	CARBON	560 5% 1/4W
R454	1-259-444-11	CARBON	4.7K 5% 1/6W	R615	1-259-452-11	CARBON	10K 5% 1/6W
R455	1-259-398-11	CARBON	56 5% 1/6W	R616	1-259-460-11	CARBON	22K 5% 1/6W
R456	1-259-468-11	CARBON	47K 5% 1/6W	R617	1-247-700-11	CARBON	100 5% 1/4W
R457	1-259-428-11	CARBON	1K 5% 1/6W	R618	1-247-717-11	CARBON	2.2K 5% 1/4W
R458	1-259-404-11	CARBON	100 5% 1/6W	R619	1-259-428-11	CARBON	1K 5% 1/6W
R501	1-249-945-11	CARBON	8.2K 1% 1/4W	R620	1-259-422-11	CARBON	560 5% 1/6W
R502	1-249-945-11	CARBON	8.2K 1% 1/4W	R621	1-259-412-11	CARBON	220 5% 1/6W
R503	1-249-945-11	CARBON	8.2K 1% 1/4W	< VIBRATOR >			
R504	1-249-945-11	CARBON	8.2K 1% 1/4W	X601	1-577-686-11	VIBRATOR, CRYSTAL (45MHz)	
R505	1-247-719-11	CARBON	3.3K 5% 1/4W	X602	1-577-685-11	FILTER, CERAMIC (16MHz)	
R506	1-247-719-11	CARBON	3.3K 5% 1/4W	*****			
R509	1-247-725-11	CARBON	10K 5% 1/4W	*			
R510	1-247-725-11	CARBON	10K 5% 1/4W	A-4649-007-A BD BOARD, COMPLETE			
R511	1-247-722-11	CARBON	5.6K 5% 1/4W	*****			
R512	1-247-722-11	CARBON	5.6K 5% 1/4W	< CAPACITOR >			
R513	1-247-722-11	CARBON	5.6K 5% 1/4W	C101	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
R514	1-247-722-11	CARBON	5.6K 5% 1/4W	C102	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
R515	1-249-926-11	CARBON	1.3K 5% 1/4W	C103	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
R516	1-249-926-11	CARBON	1.3K 5% 1/4W	C104	1-164-346-11	CERAMIC CHIP	1uF 16V
R528	1-247-700-11	CARBON	100 5% 1/4W	C105	1-163-038-00	CERAMIC CHIP	0.1uF 25V
R529	1-249-512-11	CARBON	22 5% 1/4W	C106	1-164-346-11	CERAMIC CHIP	1uF 16V
R534	1-259-444-11	CARBON	4.7K 5% 1/6W	C107	1-164-346-11	CERAMIC CHIP	1uF 16V
R535	1-259-458-11	CARBON	18K 5% 1/6W	C109	1-163-038-00	CERAMIC CHIP	0.1uF 25V
R536	1-259-464-11	CARBON	33K 5% 1/6W	C110	1-124-584-00	ELECT	100uF 20% 10V
R539	1-247-891-00	CARBON	330K 5% 1/4W	C111	1-164-346-11	CERAMIC CHIP	1uF 16V
R540	1-259-468-11	CARBON	47K 5% 1/6W	C112	1-164-346-11	CERAMIC CHIP	1uF 16V
R551	1-259-456-11	CARBON	15K 5% 1/6W	C113	1-164-346-11	CERAMIC CHIP	1uF 16V
R552	1-259-470-11	CARBON	56K 5% 1/6W	C114	1-164-346-11	CERAMIC CHIP	1uF 16V
R553	1-259-476-11	CARBON	100K 5% 1/6W	C115	1-131-374-00	TANTALUM	33uF 10% 16V
R554	1-259-444-11	CARBON	4.7K 5% 1/6W	C121	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
R555	1-259-398-11	CARBON	56 5% 1/6W	C122	1-163-001-11	CERAMIC CHIP	220PF 10% 50V
R556	1-259-468-11	CARBON	47K 5% 1/6W	C123	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
R557	1-259-428-11	CARBON	1K 5% 1/6W	C124	1-163-986-00	CERAMIC CHIP	0.027uF 10% 25V
R558	1-259-404-11	CARBON	100 5% 1/6W	C125	1-163-986-00	CERAMIC CHIP	0.027uF 10% 25V
R600	1-259-452-11	CARBON	10K 5% 1/6W	C141	1-163-038-00	CERAMIC CHIP	0.1uF 25V
R601	1-249-423-11	CARBON	3.3K 5% 1/4W	C142	1-163-038-00	CERAMIC CHIP	0.1uF 25V
R602	1-249-421-11	CARBON	2.2K 5% 1/4W	C151	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
R603	1-249-417-11	CARBON	1K 5% 1/4W	C152	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
R604	1-249-417-11	CARBON	1K 5% 1/4W	C153	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
R605	1-259-420-11	CARBON	470 5% 1/6W	C154	1-163-137-00	CERAMIC CHIP	680PF 5% 50V
R606	1-259-420-11	CARBON	470 5% 1/6W	C155	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
R607	1-249-427-11	CARBON	6.8K 5% 1/4W	C156	1-164-346-11	CERAMIC CHIP	1uF 16V
R608	1-249-409-11	CARBON	220 5% 1/4W				
R609	1-249-441-11	CARBON	100K 5% 1/4W				

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark
C157	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V	IC142	8-759-981-92	IC RC4558M	
C158	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	IC151	8-759-981-92	IC RC4558M	
C159	1-163-038-00	CERAMIC CHIP	0.1uF		25V	IC152	8-759-981-92	IC RC4558M	
C160	1-164-336-11	CERAMIC CHIP	0.33uF		25V	IC201	8-752-337-26	IC CXD2500AQ	
C161	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V	IC301	8-759-069-47	IC M37451M8-174FP	
C171	1-163-038-00	CERAMIC CHIP	0.1uF		25V	IC302	8-759-512-81	IC LH5160N-10L	
C172	1-163-038-00	CERAMIC CHIP	0.1uF		25V	< TRANSISTOR >			
C173	1-163-038-00	CERAMIC CHIP	0.1uF		25V	Q151	8-729-901-06	TRANSISTOR DTA144EK	
C174	1-163-038-00	CERAMIC CHIP	0.1uF		25V	Q181	8-729-901-01	TRANSISTOR DTC144EK	
C175	1-163-038-00	CERAMIC CHIP	0.1uF		25V	Q182	8-729-901-06	TRANSISTOR DTA144EK	
C177	1-163-038-00	CERAMIC CHIP	0.1uF		25V	< RESISTOR >			
C178	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R101	1-216-077-00	METAL CHIP 15K	5% 1/10W
C179	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R102	1-216-097-00	METAL CHIP 100K	5% 1/10W
C180	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R103	1-216-077-00	METAL CHIP 15K	5% 1/10W
C181	1-164-346-11	CERAMIC CHIP	1uF		16V	R104	1-216-049-00	METAL CHIP 1K	5% 1/10W
C201	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	R105	1-216-097-00	METAL CHIP 100K	5% 1/10W
C202	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V	R106	1-216-085-00	METAL CHIP 33K	5% 1/10W
C203	1-164-232-11	CERAMIC CHIP	0.01uF		50V	R107	1-216-025-00	METAL CHIP 100	5% 1/10W
C204	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	R108	1-216-295-00	METAL CHIP 0	5% 1/10W
C205	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	R121	1-216-071-00	METAL CHIP 8.2K	5% 1/10W
C206	1-164-232-11	CERAMIC CHIP	0.01uF		50V	R122	1-216-071-00	METAL CHIP 8.2K	5% 1/10W
C207	1-164-346-11	CERAMIC CHIP	1uF		16V	R123	1-216-071-00	METAL CHIP 8.2K	5% 1/10W
C301	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R124	1-216-071-00	METAL CHIP 8.2K	5% 1/10W
C302	1-125-622-11	CAP. DOUBLE LAYERS 0.1F			5.5V	R125	1-216-071-00	METAL CHIP 8.2K	5% 1/10W
C303	1-163-038-00	CERAMIC CHIP	0.1uF		25V	R126	1-216-071-00	METAL CHIP 8.2K	5% 1/10W
C305	1-164-346-11	CERAMIC CHIP	1uF		16V	R127	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
< CONNECTOR >									
* CN101	1-573-276-11	PIN, CONNECTOR 6P				R128	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
CN102	1-568-799-11	SOCKET, CONNECTOR 16P				R129	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
* CN111	1-569-998-11	PIN, CONNECTOR (PC BOARD) 2P				R130	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
* CN112	1-580-001-11	PIN, CONNECTOR (PC BOARD) 4P				R131	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
* CN113	1-580-002-11	PIN, CONNECTOR (PC BOARD) 5P				R132	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
* CN141	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P				R133	1-216-053-00	METAL CHIP 1.5K	5% 1/10W
* CN201	1-580-007-11	PIN, CONNECTOR (PC BOARD) 10P				R134	1-216-053-00	METAL CHIP 1.5K	5% 1/10W
* CN202	1-580-003-11	PIN, CONNECTOR (PC BOARD) 6P				R141	1-216-073-00	METAL CHIP 10K	5% 1/10W
* CN203	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P				R142	1-216-079-00	METAL CHIP 18K	5% 1/10W
* CN301	1-691-464-11	PIN, CONNECTOR 8P				R143	1-216-073-00	METAL CHIP 10K	5% 1/10W
* CN302	1-691-462-11	PIN, CONNECTOR 6P				R144	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
< DIODE >									
D301	8-719-104-34	DIODE IS2836				R145	1-216-073-00	METAL CHIP 10K	5% 1/10W
< IC >									
IC101	8-752-344-48	IC CXD2501Q				R146	1-216-073-00	METAL CHIP 7.5K	5% 1/10W
IC102	8-759-040-80	IC BA6297FP				R147	1-216-079-00	METAL CHIP 7.5K	5% 1/10W
IC103	8-759-040-83	IC BA6287F				R148	1-216-073-00	METAL CHIP 7.5K	5% 1/10W
IC141	8-759-055-78	IC TA8407F				R149	1-216-073-00	METAL CHIP 10K	5% 1/10W
						R151	1-216-070-00	METAL CHIP 7.5K	5% 1/10W
						R152	1-216-070-00	METAL CHIP 7.5K	5% 1/10W
						R153	1-216-070-00	METAL CHIP 7.5K	5% 1/10W
						R154	1-216-070-00	METAL CHIP 7.5K	5% 1/10W

**BD**    **DISPLAY**    **FUNCTION**    **TIMER**

Ref. No.	Part No.	Description	Remark
R155	1-216-093-00	METAL CHIP	68K 5% 1/10W
R156	1-216-085-00	METAL CHIP	33K 5% 1/10W
R157	1-216-117-00	METAL CHIP	680K 5% 1/10W
R158	1-216-097-00	METAL CHIP	100K 5% 1/10W
R159	1-216-083-00	METAL CHIP	27K 5% 1/10W
R160	1-216-049-00	METAL CHIP	1K 5% 1/10W
R161	1-216-095-00	METAL CHIP	82K 5% 1/10W
R163	1-216-076-00	METAL CHIP	13K 5% 1/10W
R164	1-216-085-00	METAL CHIP	33K 5% 1/10W
R165	1-216-081-00	METAL CHIP	22K 5% 1/10W
R166	1-216-085-00	METAL CHIP	33K 5% 1/10W
R167	1-216-308-00	METAL CHIP	4.7 5% 1/10W
R171	1-216-001-00	METAL CHIP	10 5% 1/10W
R172	1-216-001-00	METAL CHIP	10 5% 1/10W
R173	1-216-001-00	METAL CHIP	10 5% 1/10W
R174	1-216-001-00	METAL CHIP	10 5% 1/10W
R175	1-216-001-00	METAL CHIP	10 5% 1/10W
R177	1-216-001-00	METAL CHIP	10 5% 1/10W
R178	1-216-001-00	METAL CHIP	10 5% 1/10W
R179	1-216-001-00	METAL CHIP	10 5% 1/10W
R180	1-216-001-00	METAL CHIP	10 5% 1/10W
R181	1-216-029-00	METAL CHIP	150 5% 1/10W
R182	1-216-029-00	METAL CHIP	150 5% 1/10W
R183	1-216-073-00	METAL CHIP	10K 5% 1/10W
R184	1-216-097-00	METAL CHIP	100K 5% 1/10W
R191	1-216-295-00	METAL CHIP	0 5% 1/10W
R192	1-216-295-00	METAL CHIP	0 5% 1/10W
R201	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R202	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R203	1-216-073-00	METAL CHIP	10K 5% 1/10W
R204	1-216-121-00	METAL CHIP	1M 5% 1/10W
R205	1-216-105-00	METAL CHIP	220K 5% 1/10W
R206	1-216-073-00	METAL CHIP	10K 5% 1/10W
R207	1-216-041-00	METAL CHIP	470 5% 1/10W
R208	1-216-041-00	METAL CHIP	470 5% 1/10W
R209	1-216-041-00	METAL CHIP	470 5% 1/10W
R210	1-216-033-00	METAL CHIP	220 5% 1/10W
R211	1-216-073-00	METAL CHIP	10K 5% 1/10W
R212	1-216-037-00	METAL CHIP	330 5% 1/10W
R213	1-216-049-00	METAL CHIP	1K 5% 1/10W
R301	1-216-073-00	METAL CHIP	10K 5% 1/10W
R302	1-216-073-00	METAL CHIP	10K 5% 1/10W
R303	1-216-073-00	METAL CHIP	10K 5% 1/10W
R304	1-216-073-00	METAL CHIP	10K 5% 1/10W
R305	1-216-073-00	METAL CHIP	10K 5% 1/10W
R306	1-216-073-00	METAL CHIP	10K 5% 1/10W
R307	1-216-073-00	METAL CHIP	10K 5% 1/10W
R308	1-216-073-00	METAL CHIP	10K 5% 1/10W
R309	1-216-049-00	METAL CHIP	1K 5% 1/10W

Ref. No.	Part No.	Description	Remark
R310	1-216-121-00	METAL CHIP	1M 5% 1/10W
R311	1-216-037-00	METAL CHIP	330 5% 1/10W
R312	1-216-073-00	METAL CHIP	10K 5% 1/10W
R313	1-216-049-00	METAL CHIP	1K 5% 1/10W
R314	1-216-073-00	METAL CHIP	10K 5% 1/10W
R315	1-216-073-00	METAL CHIP	10K 5% 1/10W
R316	1-216-073-00	METAL CHIP	10K 5% 1/10W
R317	1-216-073-00	METAL CHIP	10K 5% 1/10W
R318	1-216-073-00	METAL CHIP	10K 5% 1/10W
R319	1-216-073-00	METAL CHIP	10K 5% 1/10W
< VIBRATOR >			
X301	1-577-377-11	VIBRATOR, CERAMIC (10MHz)	
*****			
*	1-637-410-11	DISPLAY BOARD	*****
*	1-637-419-11	FUNCTION BOARD	*****
*	1-637-411-11	TIMER BOARD	*****
< CAPACITOR >			
C802	1-164-159-11	CERAMIC	0.1uF 50V
C803	1-164-159-11	CERAMIC	0.1uF 50V
< CONNECTOR >			
*	CN801	1-564-341-11 PIN, CONNECTOR 7P	
*	CN802	1-506-503-11 PIN, CONNECTOR 9P	
*	CN803	1-564-340-00 PIN, CONNECTOR 6P	
< DIODE >			
D701	8-719-970-07	LED	MPG3371X-150 (►)
D702	8-719-971-52	LED	MAY3371X-M-177 (II)
D703	8-719-971-50	LED	MBG3371X (CONTINUE)
D704	8-719-971-52	LED	MAY3371X-M-177 (SHUFFLE)
D705	8-719-987-97	LED	BR3371X (PROGRAM)
D706	8-719-970-98	LED	MPY3371X-177 (C. INDEX)
D801	8-719-987-63	DIODE	1N4148M
D802	8-719-987-63	DIODE	1N4148M
D803	8-719-987-63	DIODE	1N4148M
D804	8-719-987-63	DIODE	1N4148M
D805	8-719-987-63	DIODE	1N4148M
D806	8-719-987-63	DIODE	1N4148M
D807	8-719-987-63	DIODE	1N4148M

DISPLAY

FUNCTION

TIMER

HP

Ref. No.	Part No.	Description	Remark		
< FLUORESCENT INDICATOR >					
FLD801	1-519-622-11	INDICATOR TUBE, FLUORESCENT			
< IC >					
IC801	8-759-074-98	IC MSC62408-041GS-V1K			
IC802	8-741-100-48	IC SBX1610-59			
< TRANSISTOR >					
Q701	8-729-900-80	TRANSISTOR DTC114ES			
Q702	8-729-900-80	TRANSISTOR DTC114ES			
Q703	8-729-900-80	TRANSISTOR DTC114ES			
Q704	8-729-900-80	TRANSISTOR DTC114ES			
Q705	8-729-900-80	TRANSISTOR DTC114ES			
Q706	8-729-900-80	TRANSISTOR DTC114ES			
Q801	8-729-900-45	TRANSISTOR DTC114EF			
Q802	8-729-900-45	TRANSISTOR DTC114EF			
< RESISTOR >					
R701	1-249-406-11	CARBON 120 5% 1/4W			
R702	1-249-406-11	CARBON 120 5% 1/4W			
R703	1-249-406-11	CARBON 120 5% 1/4W			
R704	1-249-406-11	CARBON 120 5% 1/4W			
R705	1-249-415-11	CARBON 680 5% 1/4W			
R706	1-249-409-11	CARBON 220 5% 1/4W			
R801	1-249-425-11	CARBON 4.7K 5% 1/4W			
R802	1-249-429-11	CARBON 10K 5% 1/4W			
R803	1-247-903-00	CARBON 1M 5% 1/4W			
R806	1-249-441-11	CARBON 100K 5% 1/4W			
R809	1-249-441-11	CARBON 100K 5% 1/4W			
< SWITCH >					
S701	1-554-937-11	SWITCH, KEY BOARD (PLAY MODE CONTINUE)			
S702	1-554-937-11	SWITCH, KEY BOARD (PLAY MODE SHUFFLE)			
S703	1-554-937-11	SWITCH, KEY BOARD (PLAY MODE PROGRAM)			
S704	1-554-937-11	SWITCH, KEY BOARD (PLAY MODE C. INDEX)			
S705	1-554-937-11	SWITCH, KEY BOARD (◀)			
S706	1-554-937-11	SWITCH, KEY BOARD (III)			
S707	1-554-937-11	SWITCH, KEY BOARD (▶)			
S708	1-554-937-11	SWITCH, KEY BOARD (EDIT/TIME FADE)			
S709	1-554-937-11	SWITCH, KEY BOARD (FADER)			
S710	1-554-937-11	SWITCH, KEY BOARD (P. SEARCH)			
S711	1-554-937-11	SWITCH, KEY BOARD (▷)			
S712	1-554-937-11	SWITCH, KEY BOARD (■)			
S713	1-554-937-11	SWITCH, KEY BOARD (DIMMER REPORT)			
S714	1-554-937-11	SWITCH, KEY BOARD (1)			
S715	1-554-937-11	SWITCH, KEY BOARD (6)			
S716	1-554-937-11	SWITCH, KEY BOARD (11)			

Ref. No.	Part No.	Description	Remark					
< SWITCH >								
S717	1-554-937-11	SWITCH, KEY BOARD (16)						
S718	1-554-937-11	SWITCH, KEY BOARD (◀)						
S719	1-554-937-11	SWITCH, KEY BOARD (FILE)						
S720	1-554-937-11	SWITCH, KEY BOARD (DIMMER TIME/MEMO)						
S721	1-554-937-11	SWITCH, KEY BOARD (2)						
S722	1-554-937-11	SWITCH, KEY BOARD (7)						
S723	1-554-937-11	SWITCH, KEY BOARD (12)						
S724	1-554-937-11	SWITCH, KEY BOARD (17)						
S725	1-554-937-11	SWITCH, KEY BOARD (▶)						
S726	1-554-937-11	SWITCH, KEY BOARD (ERASE)						
S727	1-554-937-11	SWITCH, KEY BOARD (3)						
S728	1-554-937-11	SWITCH, KEY BOARD (8)						
S729	1-554-937-11	SWITCH, KEY BOARD (13)						
S730	1-554-937-11	SWITCH, KEY BOARD (18)						
S731	1-554-937-11	SWITCH, KEY BOARD (CLEAR)						
S732	1-554-937-11	SWITCH, KEY BOARD (FILE RECALL)						
S733	1-554-937-11	SWITCH, KEY BOARD (4)						
S734	1-554-937-11	SWITCH, KEY BOARD (9)						
S735	1-554-937-11	SWITCH, KEY BOARD (14)						
S736	1-554-937-11	SWITCH, KEY BOARD (19)						
S737	1-554-937-11	SWITCH, KEY BOARD (CHECK)						
S738	1-554-937-11	SWITCH, KEY BOARD (5)						
S739	1-554-937-11	SWITCH, KEY BOARD (10)						
S740	1-554-937-11	SWITCH, KEY BOARD (15)						
S741	1-554-937-11	SWITCH, KEY BOARD (20)						
S801	1-554-937-11	SWITCH, KEY BOARD (OPEN/CLOSE)						
S802	1-554-937-11	SWITCH, KEY BOARD (LEVEL FILE)						
S803	1-554-937-11	SWITCH, KEY BOARD (DISPLAY MODE)						
S804	1-570-157-51	SWITCH, SLIDE (TIMER)						
< VIBRATOR >								
X801	1-577-359-21	VIBRATOR, CERAMIC (4.19MHz)						
*****								
*	1-642-074-11	HP BOARD						
*****								
< CAPACITOR >								
C461	1-162-290-31	CERAMIC	470PF	10%	50V			
C561	1-162-290-31	CERAMIC	470PF	10%	50V			
< JACK >								
J451	1-568-519-31	JACK, LARGE TYPE (PHONES)						
< COIL >								
L461	1-424-090-11	COIL, LINE FILTER						
L561	1-424-090-11	COIL, LINE FILTER						
*****								

L.MOTOR	LINE OUT	OPT	POWER
---------	----------	-----	-------

Ref. No.	Part No.	Description	Remark		
*	1-641-765-11	L. MOTOR BOARD	*****		
*****					
*	1-641-808-11	LINE OUT BOARD	*****		
*****					
		< DIODE >			
D471	8-719-987-63	DIODE 1N4148M			
		< JACK >			
J401	1-568-101-11	JACK, PIN 4P (LINE OUT)			
		< RESISTOR >			
R470	1-247-700-11	CARBON 100 5% 1/4W			
R471	1-247-700-11	CARBON 100 5% 1/4W			
R570	1-247-700-11	CARBON 100 5% 1/4W			
R571	1-247-700-11	CARBON 100 5% 1/4W			
		< RELAY >			
RY471	1-515-727-11	RELAY			
*****					
*	1-641-807-11	OPT BOARD	*****		
		< CAPACITOR >			
C280	1-126-059-11	ELECT 10uF 20% 50V			
		< CONNECTOR >			
* CN280	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
		< IC >			
IC280	8-749-921-12	IC GP1F32T (DIGITAL OUT OPTICAL)			
*****					
*	A-4649-346-A	POWER BOARD, COMPLETE	*****		
		< SCREW >			
*	7-682-147-15	SCREW, TR			
*	4-941-237-01	HEAT SINK			
*	7-682-545-09	SCREW + B 3X4			
		< BUS BAR >			
* BUS902	1-566-940-11	BUS BAR 6P			
		< CAPACITOR >			
C901	1-126-982-11	ELECT 5600uF 20% 35V			

Ref. No.	Part No.	Description	Remark		
C921	1-126-982-11	ELECT	5600uF	20%	35V
C951	1-126-017-11	ELECT	6800uF	20%	16V
C952	1-126-832-51	ELECT	3300uF	20%	10V
C953	1-126-797-51	ELECT	1000uF	20%	10V
C954	1-126-797-51	ELECT	1000uF	20%	10V
C955	1-126-797-51	ELECT	1000uF	20%	10V
C956	1-126-335-11	ELECT	220uF	20%	10V
C957	1-126-162-11	ELECT	3.3uF	20%	50V
C958	1-162-294-31	CERAMIC	0.001uF	10%	50V
C959	1-124-572-11	ELECT	100uF	20%	63V
C960	1-126-233-11	ELECT	22uF	20%	50V
C961	1-124-122-11	ELECT	100uF	20%	50V
C962	1-124-122-11	ELECT	100uF	20%	50V
C963	1-136-177-00	FILM	1uF	5%	50V
C964	1-136-165-00	FILM	0.1uF	5%	50V
C965	1-126-335-11	ELECT	220uF	20%	10V
C966	1-126-797-51	ELECT	1000uF	20%	10V
C971	1-164-159-11	CERAMIC	0.1uF		50V
< CONNECTOR >					
* CN952	1-564-341-11	PIN, CONNECTOR 7P			
* CN953	1-573-265-11	PIN, CONNECTOR 6P			
< DIODE >					
D951	8-719-210-30	DIODE	F10P20F(R)		
D955	8-719-210-38	DIODE	F10P20FR		
D960	8-719-937-49	DIODE	RDF02M		
D961	8-719-200-02	DIODE	10E2		
D963	8-719-200-02	DIODE	10E2		
D964	8-719-110-04	DIODE	RD7.5ES-B3		
D965	8-719-913-62	DIODE	HZ36-2L		
D966	8-719-933-48	DIODE	HZS7B3L		
< IC >					
IC951	8-759-925-54	IC	LM2940CT-5.0		
IC952	8-759-604-86	IC	M5F7807		
IC953	8-759-636-16	IC	M51957AL		
IC954	8-759-604-30	IC	M5F7808		
< TRANSISTOR >					
Q951	8-729-924-90	TRANSISTOR	2SB1370-EF		
Q952	8-729-140-96	TRANSISTOR	2SD774-34		
< RESISTOR >					
R951	1-249-417-11	CARBON	1K 5%	1/4W	
R952	1-249-423-11	CARBON	3.3K 5%	1/4W	
R953	1-249-436-11	CARBON	39K 5%	1/4W	
R954	1-249-431-11	CARBON	15K 5%	1/4W	
R955	1-249-425-11	CARBON	4.7K 5%	1/4W	

POWER SW VR

Ref. No.	Part No.	Description	Remark
R956	1-249-433-11	CARBON	22K 5% 1/4W
R957	1-249-433-11	CARBON	22K 5% 1/4W
△R958	1-212-875-00	FUSIBLE	56 5% 1/4W F
R959	1-249-417-11	CARBON	1K 5% 1/4W
△R960	1-215-860-11	METAL OXIDE	33 5% 1W F
△R961	1-216-425-11	METAL OXIDE	56 5% 1W F

## &lt; TERMINAL &gt;

- \* TB951 1-535-116-00 TERMINAL 3P
- \* TB952 1-535-118-00 TERMINAL 5P
- \* TB953 1-535-116-00 TERMINAL 3P

## &lt; THERMISTOR &gt;

- TH901 1-808-065-11 THERMISTOR, POSITIVE 0.5
- TH902 1-808-065-11 THERMISTOR, POSITIVE 0.5
- TH903 1-806-882-11 THERMISTOR, POSITIVE 2.2
- TH904 1-808-065-11 THERMISTOR, POSITIVE 0.5

\*\*\*\*\*

- \* 1-641-764-11 SW BOARD

\*\*\*\*\*

## &lt; CAPACITOR &gt;

- C001 1-161-494-00 CERAMIC 0.022uF 25V

## &lt; RESISTOR &gt;

- △R001 1-247-727-11 CARBON 10 5% 1/2W F
- △R002 1-247-727-11 CARBON 10 5% 1/2W F

## &lt; SWITCH &gt;

- S001 1-571-300-21 SWITCH, ROTARY (IN SW)
- S002 1-571-300-21 SWITCH, ROTARY (OUT SW)

\*\*\*\*\*

- \* 1-641-804-11 VR BOARD

\*\*\*\*\*

## &lt; CAPACITOR &gt;

- C350 1-164-159-11 CERAMIC 0.1uF 50V
- C351 1-164-159-11 CERAMIC 0.1uF 50V

## &lt; IC &gt;

- IC350 8-759-962-08 IC BA6208

## &lt; TRANSISTOR &gt;

- Q350 8-729-900-80 TRANSISTOR DTC114ES

## Ref. No. Part No. Description Remark

## &lt; RESISTOR &gt;

- R350 1-249-413-11 CARBON 470 5% 1/4W
- R351 1-249-417-11 CARBON 1K 5% 1/4W

## &lt; VARIABLE RESISTOR &gt;

- RV350 1-241-321-11 RES, VAR, CARBON 10KΩ (LINE OUT/PHONE LEVEL) (INCLUDING VOL MOTOR AND VOL LED)

## \*\*\*\*\*

## MISCELLANEOUS

- △A111 1-559-583-21 CORD, POWER (US, Canadian)
- △A121 1-558-568-21 CORD, POWER (AEP)
- △A122 1-559-555-21 CORD, POWER (UK)
- △A215 8-848-244-11 DEVICE, OPTICAL KSS-272A
- △F991 1-532-066-00 FUSE, TIME-LAG (T400mA) (AEP, UK)

- △F991 1-532-741-11 FUSE, GLASS TUBE (1.25A/125V) (US, Canadian)

- M001 A-4604-347-A MOTOR (L) ASSY
- △S991 1-570-156-11 SWITCH, PUSH (AC POWER) (1 KEY) (POWER) (AEP, UK)
- △T991 1-450-891-11 TRANSFORMER, POWER (US, Canadian)
- △T991 1-450-892-11 TRANSFORMER, POWER (AEP, UK)

## \*\*\*\*\*

## ACCESSORIES &amp; PACKING MATERIALS

- 1-465-593-11 COMMANDER, REMOTE (RM-D991) (INCLUDING #1)
- 1-558-271-11 CORD, CONNECTION
- 1-590-925-31 CORD, CONNECTION

- 3-707-584-01 COVER, BATTERY (#1)
- 3-754-118-11 MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, PORTUGUESE) (Canadian, AEP, UK)
- 3-754-118-21 MANUAL, INSTRUCTION (ENGLISH) (US)
- 3-754-118-41 MANUAL, INSTRUCTION (GERMAN, DUTCH, SWEDISH, ITALIAN) (AEP)

- 4-847-802-00 SCREW (US, Canadian)

- \* 4-942-314-01 CUSHION (UPPER)
- \* 4-942-315-01 CUSHION (LOWER)
- \* 4-951-266-01 INDIVIDUAL CARTON (AEP, UK)
- \* 4-951-876-01 INDIVIDUAL CARTON (US, Canadian)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

\*\*\*\*\*  
**HARDWARE LIST**  
\*\*\*\*\*

- |     |              |                          |  |
|-----|--------------|--------------------------|--|
| #1  | 7-682-561-09 | SCREW +B 4X8             |  |
| #2  | 7-682-545-09 | SCREW +B 3X4             |  |
| #3  | 7-682-548-09 | SCREW +BVTT 3X8 (S)      |  |
| #4  | 7-685-544-19 | SCREW, TAPPING +B 3X5    |  |
| #5  | 7-685-647-79 | SCREW +P 3X10 TYPE2 SLIT |  |
| #6  | 7-682-547-09 | SCREW +BVTT 3X6 (S)      |  |
| #7  | 7-682-549-09 | SCREW +BVTT 3X10 (S)     |  |
| #8  | 7-682-547-04 | SCREW +BVTT 3X6 (S)      |  |
| #9  | 7-682-560-04 | SCREW +BVTT 4X6 (S)      |  |
| #10 | 7-682-147-15 | SCREW, TR                |  |
| #11 | 7-682-544-04 | SCREW +P 3X3             |  |
| #12 | 7-685-646-79 | SCREW, TAPPING           |  |
| #13 | 7-685-132-19 | + PTPWH (2.6X5)          |  |
| #14 | 7-624-105-04 | STOP RING 2.3, TYPE -E   |  |
| #15 | 7-621-255-25 | SCREW +P 2X4             |  |
| #16 | 7-688-003-12 | W 3, MIDDLE              |  |