
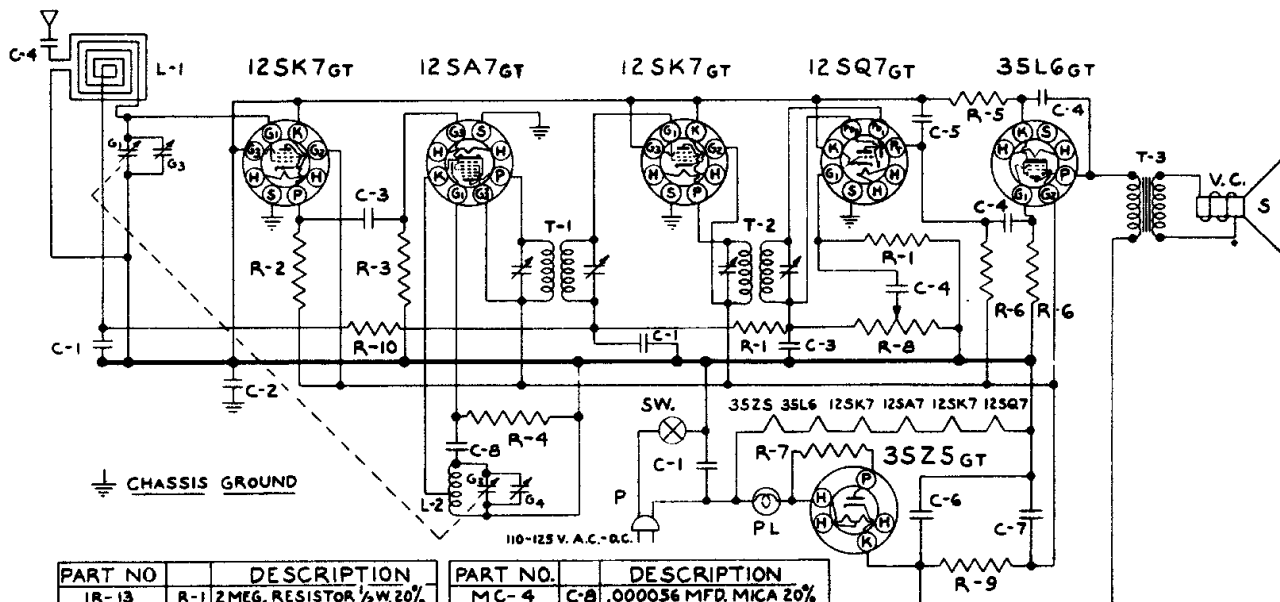


The receiver volume control should be turned to maximum during the I.F. and all subsequent alignments to keep the AVC from working and giving false readings. Keep the generator output as low as possible to prevent overloading.

FIRST STEP: Connect the hot lead from the generator to the ANT. section of the gang condenser, through a .1 MFD condenser. The ground lead from the generator must be connected to the metal frame of the gang condenser. Turn the gang condenser to complete minimum capacity. Adjust the generator to 455 KC and adjust the trimmers of the 1st and 2nd I.F. transformers until a maximum reading is noted on the output meter.

SECOND STEP: With the leads from the generator still connected in the same manner, adjust the Signal Generator to 1720 KC. The OSC. trimmer is located on the front of the chassis between the volume and tuning controls. Adjust this trimmer until the 1720 KC signal is tuned in.

THIRD STEP: Remove the hot lead of the generator from the ANT. section of the gang condenser. Connect this lead to the antenna lead wire that projects from the back of the loop antenna through a 200 MMFD condenser. Adjust the Signal Generator to 1400 KC. Rotate the tuning control until this signal is tuned in. The ANT. trimmer is located on the back of the loop antenna. Adjust this trimmer until a maximum reading is noted on the output meter. No further adjustment should be necessary, unless the set has been damaged, as the coils and condenser in this receiver have been specially handled at the factory to insure proper alignment at the lower frequencies.

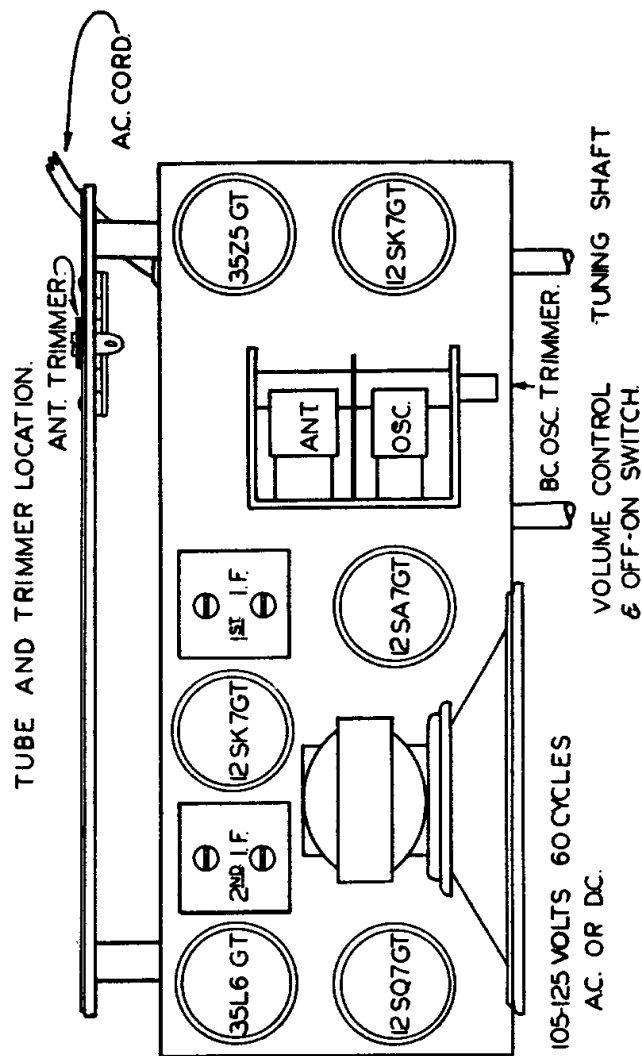

PART NO	DESCRIPTION
IR-13	R-1 2MEG. RESISTOR 1/2 W. 20%
IR-7	R-2 2200 A
IR-10	R-3 47000 A
IR-16	R-4 33,000 A
IR-5	R-5 220 A
IR-11	R-6 470 M A
IR-4	R-7 47 A
VC-3	R-8 1MEG VOLUME CONTROL
IR-15	R-9 2200 A RESISTOR 1/2 W. 20%
IR-12	R-10 1 MEG.
PC-5	C-1 .05 MFD. COND. 400 V.
PC-8	C-2 .1 MFD. COND. 400 V.
MC-2	C-3 .0001 MFD. MICA 20%
PC-7	C-4 .01 MFD. COND. 400 V.
MC-5	C-5 .0005 MFD. MICA 20%
EC-3	C-6 40 MFD 150 V. ELECTROLYTIC
	C-7 20 MFD 150 V. ELECTROLYTIC

PART NO	DESCRIPTION
MC-4	C-8 .000036 MFD. MICA 20%
LL-1	L-1 LOOP ANTENNA
LO-2	L-2 OSC. COIL
LI-1	T-1 INPUT I.F. TRANSFORMER
LI-2	T-2 OUTPUT I.F. "
	T-3 OUTPUT SPK. "
SPK-4	V.C. VOICE COIL
PB-1	S P.M. SPEAKER
GC-2	*47 PILOT BULB
TC-7	GANG COND.
TC-6	ANT. TRIMMER COND.
CO-1	OSC. TRIMMER COND.
TU-4	LINE CORD
	12SK7GT 12SA7GT 12SK7GT
	12SA7GT 35L6GT 35Z5GT

TRAV-LER RADIO CORP.

Model 5002