


8 mm Video MECHANICAL ADJUSTMENT MANUAL IV

A MECHANISM

Video 8

File with the SERVICE MANUAL

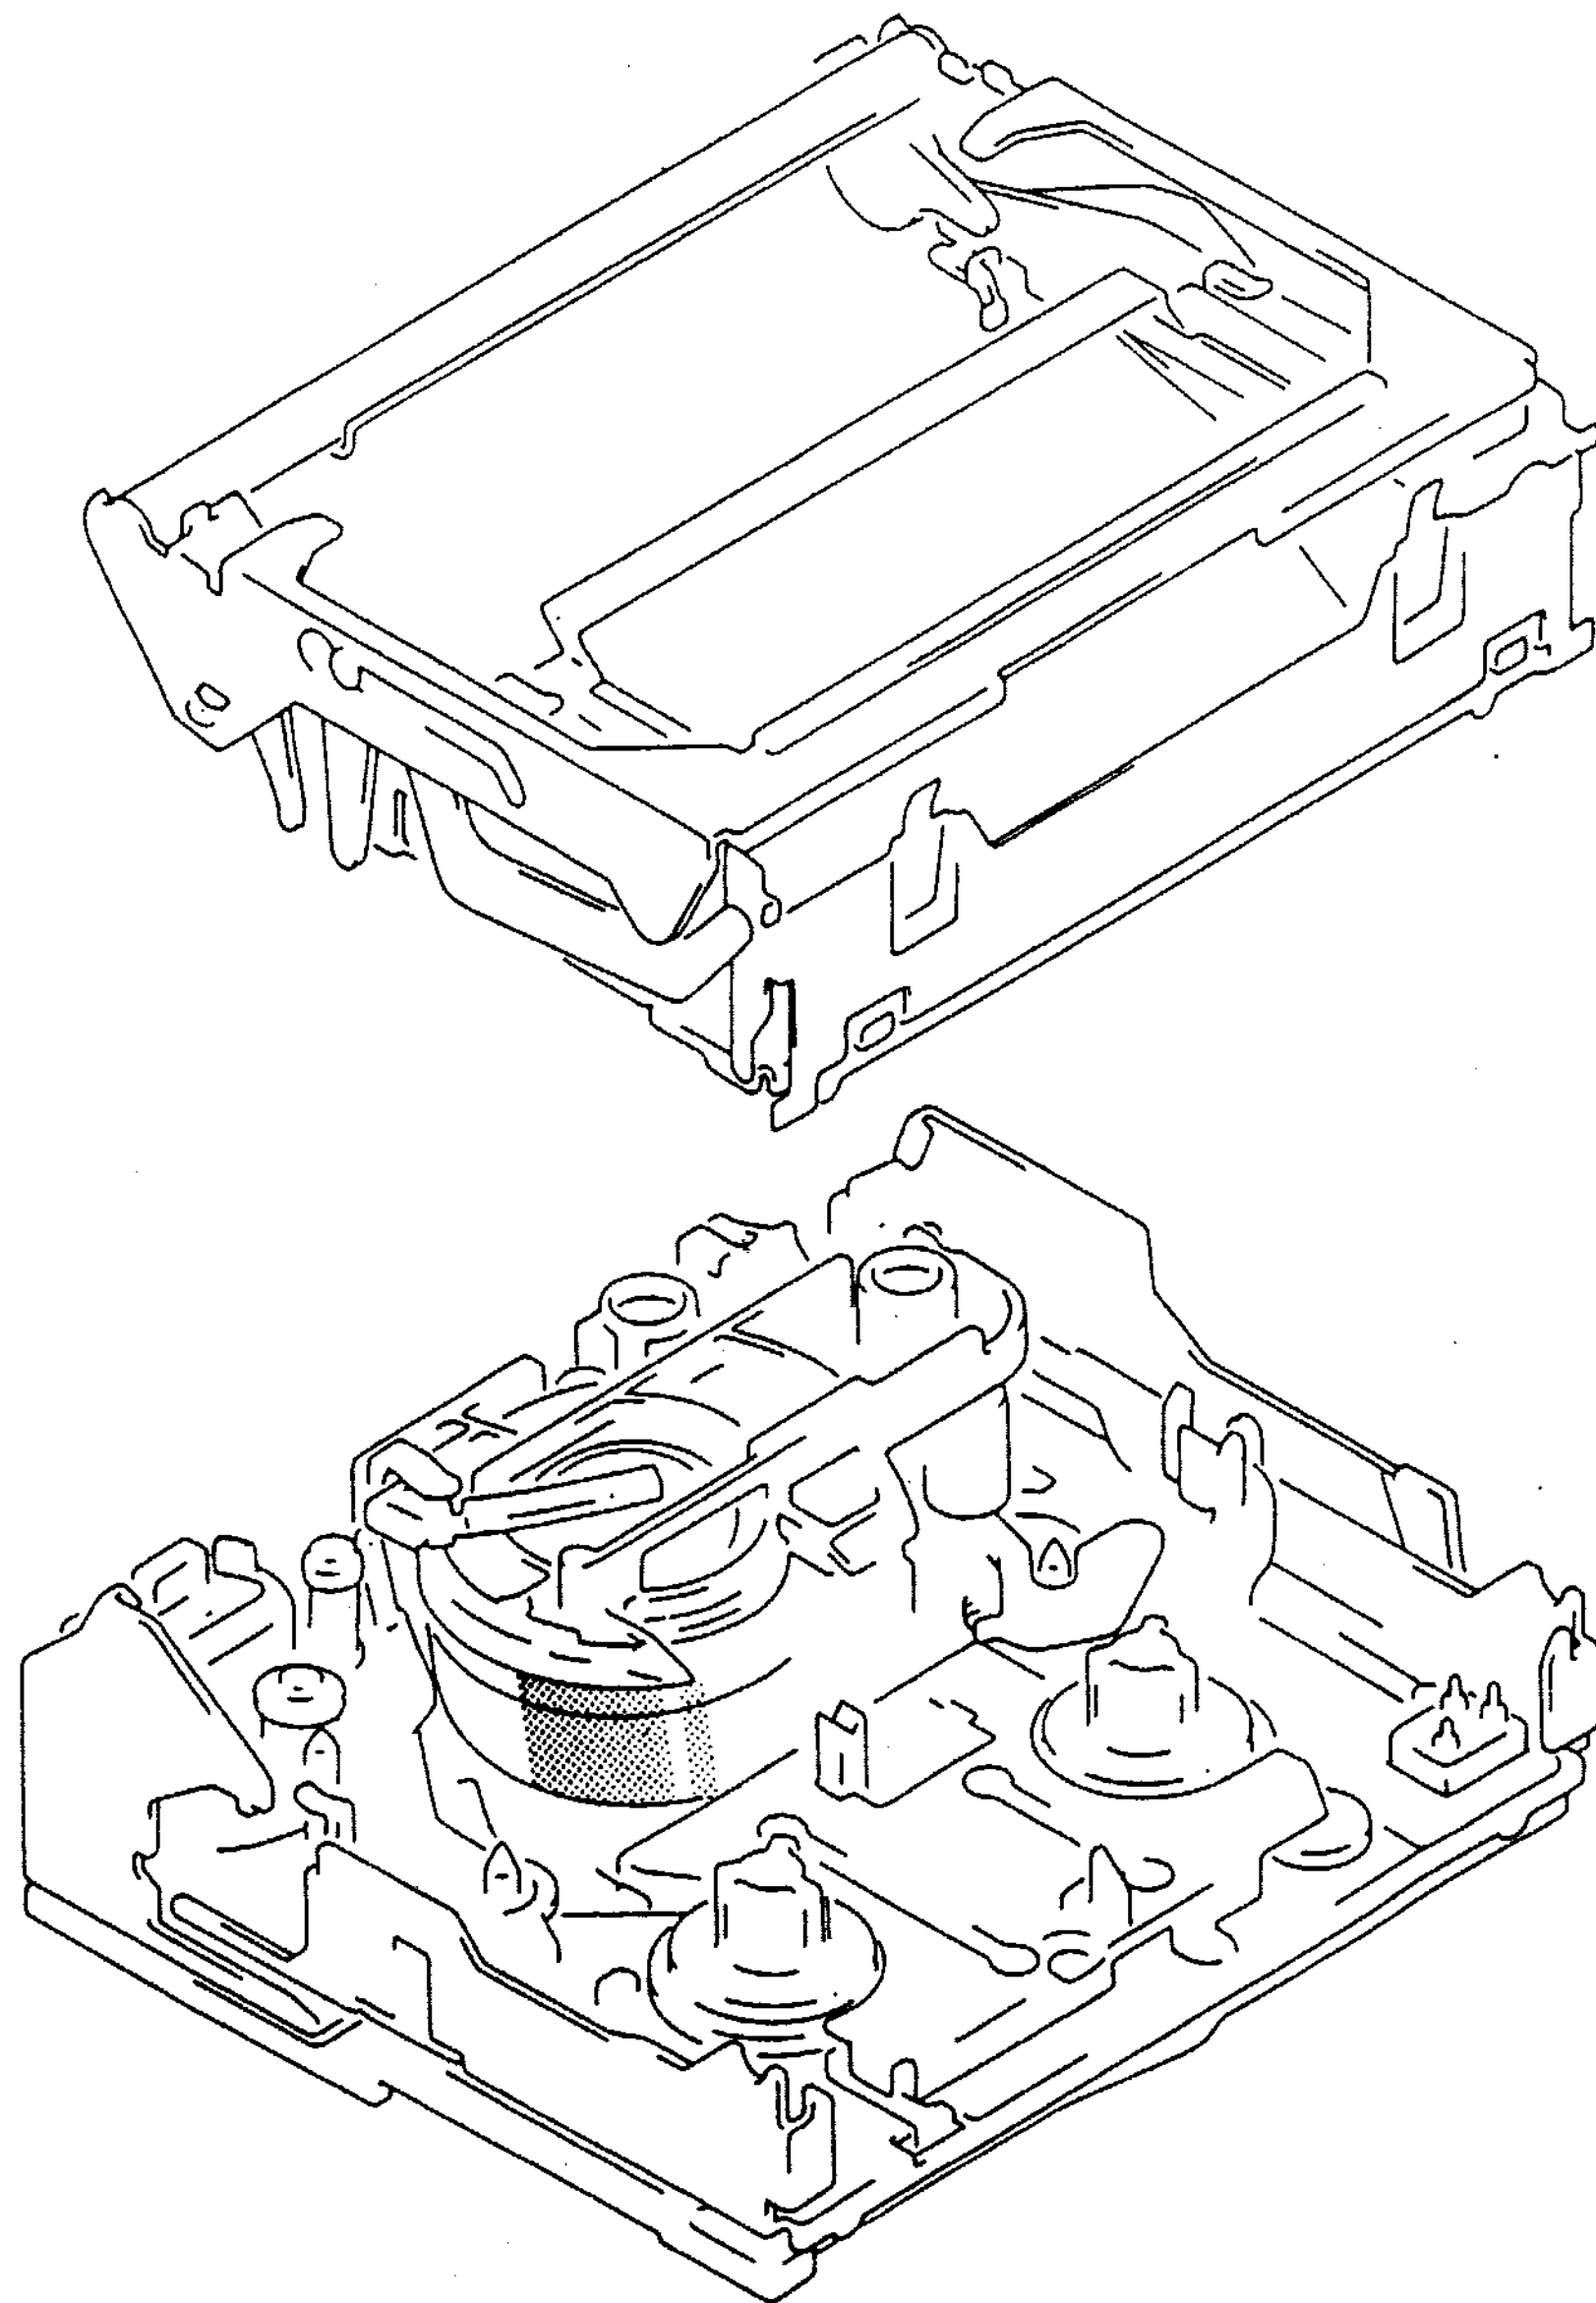

8 VIDEO RECORDER
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. PREPARATION FOR MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT					
1-1.	Cassette compartment Assembly -----	3	3-10.	Supply Reel Table Assembly and TG-1 Arm Assembly -----	23
1-2.	Operation with Cassette compartment Assembly Removed -----	5	3-11.	TG-2 Roller Assembly -----	24
1-3.	Handling of Mode Selector -----	6	3-12.	TG-7 Arm Assembly -----	25
1-4.	Mode Selector Schematic Diagram -----	7	3-13.	LM Motor Assembly -----	26
1-5.	Mode Selector Parts List -----	7	3-14.	LS Arm -----	27
2. PERIODIC CHECK AND MAINTENANCE			3-15.	M Slider Assembly -----	28
2-1.	Cleaning of Rotaly Drum Assembly -----	8	3-16.	Pinch Press Arm Assembly -----	29
2-2.	Cleaning of Tape Path -----	8	3-17.	Cam -----	30
2-3.	Periodic Check Items -----	9	3-18.	GL Arm Assembly -----	31
2-4.	Service Jigs List -----	10	3-19.	L Gear A and L Gear B -----	32
3. MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT			3-20.	Relay Pulley and Change Gear Assembly -----	33
3-1.	Retainer, Gooseneck Assembly -----	12	3-21.	Rotary Upper Drum Replacement -----	34
3-2.	Protector Base Assembly -----	13	3-22.	Adjustment of Tension Regulator Position -----	35
3-3.	Drum Assembly -----	14	3-23.	FWD Back Tension Adjustment -----	35
3-4.	Capstan Motor Assembly -----	15	3-24.	Reel Torque Check -----	35
3-5.	Take-UP Reel Assembly and T-Soft Assembly -----	16	4. TAPE PATH ADJUSTMENT		
3-6.	Pinch Arm Assembly -----	17	4-1.	Preparation for Adjustment -----	37
3-7.	LS Chassis Assembly -----	18	4-2.	Tracking Adjustment -----	38
3-8.	Guide Base T Assembly and Guide Base S Assembly -----	20	4-3.	No.2 Guide (TG-2) Adjustment -----	38
3-9.	Guide Arm T Assembly and Guide Arm S Assembly -----	22	4-3-1.	No.2 Guide (TG-2) Height Presetting -----	38
			4-3-2.	No.2 Guide (TG-2) Adjustment -----	39
			4-4.	No.7 Guide (TG-7) Adjustment -----	39
			4-5.	CUE and REW Waveform Check -----	39
			4-6.	Check After Adjustment -----	40
			4-6-1.	Tracking Check -----	40
			4-6-2.	Rising Check -----	40
			4-6-3.	Tape Path Check -----	40

[Zoom lens]

This unit employs three types of lens.
 Note that the lenses are interchangeable, however their components are not.

Differentiating the lens

 : difference point

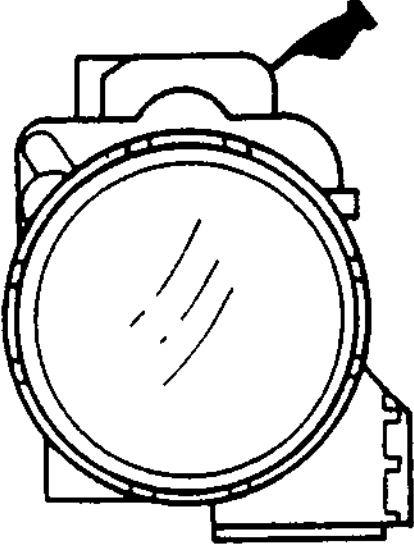
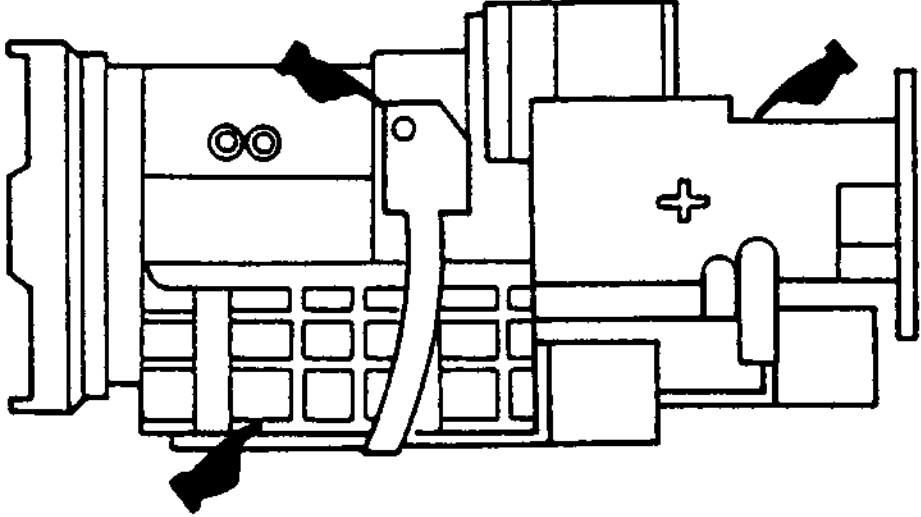
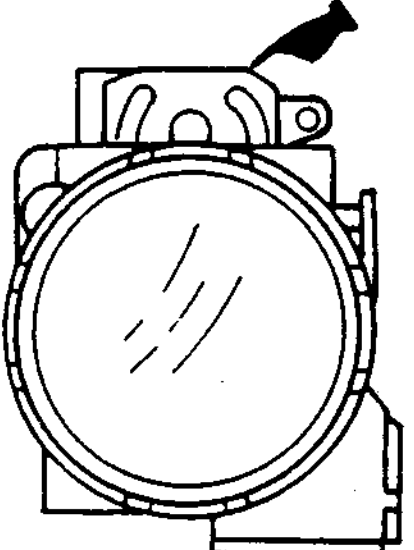
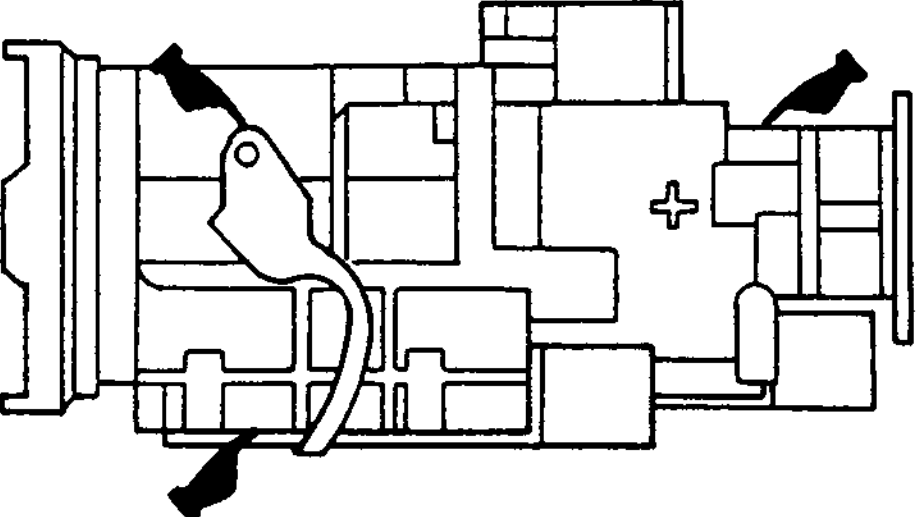
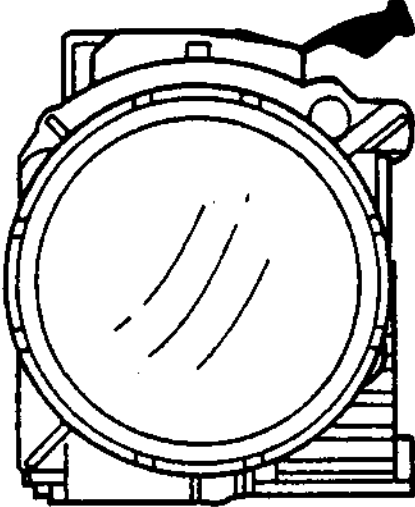
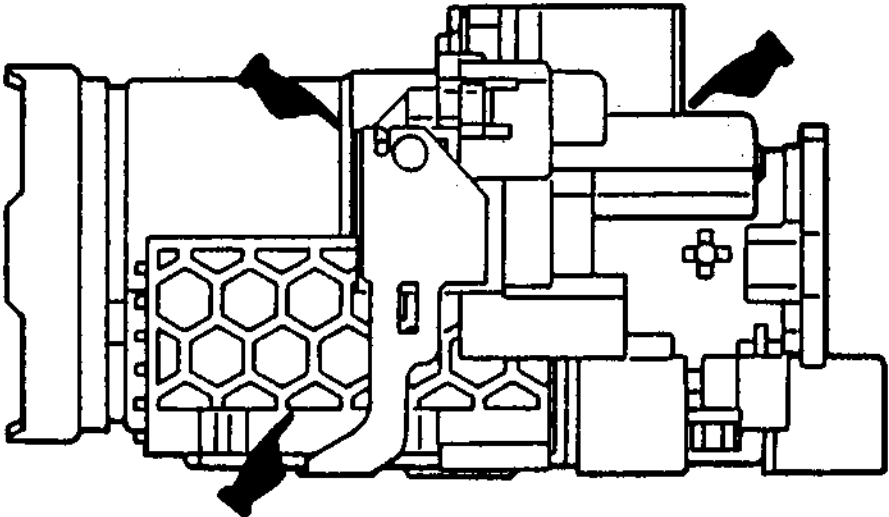
TYPE I (LSV-140A)	TYPE II (VCL-5412WA)
<p>From the front of the lens</p>  <p>From the right side of the lens (as seen from the front)</p> 	<p>From the front of the lens</p>  <p>From the right side of the lens (as seen from the front)</p> 
TYPE III (VCL-5412WB)	
<p>From the front of the lens</p>  <p>From the right side of the lens (as seen from the front)</p> 	

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
SERVICE NOTE			3. BLOCK DIAGRAMS		
	Attach Address Display Location of Actual Size.....	7	3-1.	Overall Block Diagram	3-1
	Semiconductor Location.....	7	3-2.	Camera Block Diagram	3-5
	Head Cleaning.....	7	3-3.	Video (1) Block Diagram	3-9
1. GENERAL			3-4.	Video (2) Block Diagram	3-13
	Checking Your Model Number.....	1-1	3-5.	Servo Block Diagram.....	3-14
	Checking Supplied Accessories.....	1-1	3-6.	System Control Block Diagram	3-17
	Charging and Installing the Battery Pack.....	1-2	3-7.	Audio Block Diagram	3-21
	Inserting a Cassette	1-3	3-8.	B/W EVF Block Diagram (CCD-FX240)	3-23
	Adjusting the Viewfinder Lens	1-4	3-9.	Color EVF Block Diagram (CCD-FX340).....	3-25
	Camera Recording.....	1-4	3-10.	Power Block Diagram	3-29
	Hints for Better Shooting	1-6	4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS		
	Checking the Recorded Picture	1-6	4-1.	Frame Schematic Diagram	4-1
	Connections for Playback.....	1-7	4-2.	Printed Wiring Boards and Schematic Diagrams.....	4-4
	Playing Back a Tape	1-7		• CD-137 Board.....	4-5
	Using Alternative Power Sources	1-8		• VC-159 (Camera, Lens Drive) Board.....	4-7
	Recording with the Date or Time	1-9		• VC-159 (Camera) Board	4-9
	Recording with the Age.....	1-9		• VC-159 (Camera) Board	4-13
	Shooting with Backlighting.....	1-11		• VC-159 (Lens Drive) Board.....	4-17
	Using the PROGRAM AE Function.....	1-11		• VS-123 (REC/PB Head Amplifier, Y/C Process, Electric Volume, Servo/System Control, Signal I/O) Board	4-22
	Fade-in and Fade-out.....	1-12		• VS-123 (REC/PB Head Amplifier) Board.....	4-27
	Changing the Mode Settings	1-12		• VS-123 (Y/C Process) Board.....	4-30
	Editing onto Another Tape.....	1-13		• VS-123 (Electric Volume) Board	4-33
	Changing the Lithium Battery	1-14		• VS-123 (Servo/System Control)	4-36
	Resetting the Date or Time	1-14		• VS-123 (Signal I/O) Board	4-39
	Playback Modes.....	1-15		• ZB-2 Board	4-42
	Tips for Using the Battery Pack.....	1-15		• SL-38 Board	4-43
	Maintenance Information and Precautions	1-16		• AU-182 Board.....	4-47
	Using Your Camcorder Abroad.....	1-18		• MA-230 Board	4-51
	Identifying the Parts	1-19		• VF-44 Board (CCD-FX240).....	4-53
	Indicators in the Viewfinder.....	1-22		• FF-75 (CCD-FX340), VF-68 (CCD-FX340), VF-69 (CCD-FX340) Board.....	4-57
2. DISASSEMBLY				• DD-76 Board	4-66
2-1.	Removal of Microphone (SL) Block.....	2-1	5. REPAIR PARTS LIST		
2-2.	Removal of Front Case Block	2-1	5-1.	Exploded Views.....	5-1
2-3.	Removal of Cassette Lid Assembly.....	2-2	5-1-1.	Front Case Block Assembly.....	5-1
2-4.	Removal of Cabinet (L) Block Assembly	2-2	5-1-2.	Cabinet (L) Block Assembly.....	5-2
2-5.	Removal of Cabinet (R) Assembly.....	2-3	5-1-3.	Cabinet (R) Block Assembly	5-3
2-6.	Removal of EVF Assembly (FX240) (VF-44 Board).....	2-3	5-1-4.	EVF Block Assembly (FX240)	5-4
2-6.	Removal of EVF Assembly (FX340) (VF-68/69 Board).....	2-3	5-1-5.	Color EVF Block Assembly (FX340)	5-5
2-7.	Removal of DD-76 Board	2-4	5-1-6.	Main Boards Assembly.....	5-6
2-8.	Removal of Control Switch Block (FK).....	2-4	5-1-7.	CCD Block Assembly	5-7
2-9.	Removal of VC-159 Board.....	2-5	5-1-8.	Zoom Lens Assemblies (LSV-140A) (VCL-5412WA) (VCL-5412WB)	5-8
2-10.	Removal of VS-123 and AU-182 Board	2-5	5-1-9.	Cassette Compartment Assembly	5-9
2-11.	Removal of Zoom Lens Block Assembly	2-6	5-1-10.	LS Chassis Assembly.....	5-10
2-12.	Internal Views	2-7	5-1-11.	Mechanism Chassis Assembly (1).....	5-11
2-13.	Circuit Boards Location	2-8	5-1-12.	Mechanism Chassis Assembly (2).....	5-12
			5-2.	Electrical Parts List.....	5-13
				HARDWARE LIST	5-30

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
6.	INTERFACES • IC PIN FUNCTIONS		1-4.	Color Electronic Viewfinder System Adjustments (CCD-FX340)	7-22
6-1.	Camera Control Micro Processor Pin Function (VC-159 Board IC602: SC424614 MC68HC11MA8FU)	6-1	1.	Current consumption adjustment (VF-69 board)	7-23
6-2.	Camera Core Pin Function (VC-159 Board IC609: CXD2150R-T6)	6-2	2.	Power supply voltage check (VF-68 Board)	7-23
6-3.	Mechanism Control Micro Processor Pin Function (VS-123 Board IC505: CXP87132-009R)	6-3	3.	VCO adjustment (VF-68 Board)	7-23
6-4.	Mode Control Micro Processor Pin Functions (VS-123 Board IC503: MB89098PFV-G-107-BND)	6-5	4.	LC COM voltage check (VF-68 Board)	7-24
6-5.	Interface	6-6	5.	BRIGHT adjustment (VF-69 Board)	7-24
6-5-1.	System Control – Video/Audio Block Interface (VS-123 Board)	6-6	6.	CONTRAST check (VF-68 Board)	7-25
6-5-2.	System Control – Servo Block Interface (VS-123 Board)	6-7	7.	SUB BRIGHT R preset adjustment (VF-68 Board)	7-25
			8.	SUB BRIGHT B preset adjustment (VF-68 Board)	7-26
			9.	White balance adjustment (VF-68 Board)	7-26
			1-5.	Arrangement Diagram for Adjustment Parts	7-28
7.	ADJUSTMENTS		7-2.	MECHANICAL SECTION ADJUSTMENTS	7-33
7-1.	CAMERA SECTION ADJUSTMENTS	7-1	2-1.	Operating without a Cassette	7-33
1-1.	Preparations Before Adjustment (Camera Section)	7-1	2-2.	Tape Path Adjustment	7-33
1-1-1.	List of Service Tools	7-1			
1-1-2.	Preparations	7-2	7-3.	VIDEO SECTION ADJUSTMENTS	7-34
1-1-3.	Precautions	7-4	3-1.	Preparations Before Adjustment	7-34
1.	Switch settings	7-4	3-1-1.	Equipments to be Used	7-34
2.	Adjusting Procedure	7-4	3-1-2.	Adjusting Precautions	7-34
3.	Subject	7-4	3-1-3.	Connecting the Equipments	7-35
1-1-4.	Adjusting Remote Commander	7-5	3-1-4.	How to Set the REC Mode	7-36
1.	Using the adjusting remote commander	7-5	3-1-5.	Checking the Input Signals	7-37
2.	Precautions upon using the adjusting remote commander	7-5	1.	CAMERA input	7-37
1-1-5.	Page F Address List	7-6	2.	VIDEO input	7-37
1-1-6.	Data Processing	7-9	3-1-6.	Alignment Tape	7-38
1-2.	Camera System Adjustment	7-10	3-1-7.	Output Level and Impedance	7-38
1.	Power Supply Voltage Check (DD-76 board)	7-10	3-1-8.	Service Mode	7-39
2.	Page F Data Initialization	7-10	1.	Test mode setting	7-39
3.	Page F Data Modification 1	7-10	2.	Emergency code	7-39
4.	28 MHz Original Oscillation Adjustment (VC-159 board)	7-11	3.	Emergency mode	7-40
5.	V SUB Adjustment	7-11	4.	Bit value discrimination	7-40
6.	VRG Adjustment	7-11	5.	Battery voltage check	7-41
7.	HALL Adjustment	7-12	6.	Mechanism controller input/output check	7-42
8.	Flange Back Adjustment	7-13	7.	Mode switch and CC DOWN switch check	7-43
9.	Flange Back Check	7-13	8.	Tape top/end sensor check	7-44
10.	Picture Frame Setting	7-14	9.	Version of mechanical control microprocessor	7-44
11.	Color Reproduction Adjustment	7-15	10.	Page D address list	7-45
12.	IRIS IN/OUT Adjustment	7-16	3-2.	Power System Adjustments	7-48
13.	MAX GAIN Adjustment	7-16	1.	Power Voltage Check (DD-76 board)	7-48
14.	Auto White Balance Standard Data Input	7-17	3-3.	System Control System Adjustments	7-48
15.	Auto White Balance Adjustment	7-17	1.	Page D Initial Value Input	7-48
16.	White Balance Check	7-18	2.	Battery End Adjustment	7-49
17.	VIDEO OUT Level Check	7-19	3.	Battery Down Check	7-49
1-3.	Electronic Viewfinder System Adjustment (CCD-FX240)	7-20	3-4.	Servo System Adjustments	7-50
1-3-1.	Horizontal Tilt Adjustment	7-20	1.	Switching Position Adjustment (VS-123 board)	7-50
1-3-2.	Centering Adjustment	7-20	3-5.	Video Adjustments	7-50
1-3-3.	Horizontal Amplitude Adjustment (VF-44 Board)	7-21	1.	Playback Frequency Characteristic Adjustment (VS-123 board)	7-51
1-3-4.	Vertical Amplitude Adjustment (VF-44 Board)	7-21	2.	Flying Erase Check (VS-123 board)	7-51
1-3-5.	Focus Adjustment (VF-44 Board)	7-21	3.	VXO Oscillation Frequency Check (VS-123 board)	7-51
1-3-6.	Brightness, Contrast Adjustments (VF-44 Board)	7-21	4.	SYNC AGC Level Adjustment (VS-123 board)	7-52
			5.	Comb Filter Adjustment (VS-123 board)	7-52
			6.	Emphasis Input Level Adjustment (VS-123 board)	7-53
			7.	DE EMPH Level Adjustment (VS-123 board)	7-54
			8.	PB Y OUT Level Adjustment	7-54

<u>Section</u>	<u>Title</u>	<u>Page</u>
9.	Y FM Carrier Frequency Adjustment (VS-123 board)	7-55
10.	Y FM Deviation Adjustment (VS-123 board)	7-55
11.	Chroma Emphasis Adjustment 1 (VS-123 board) ..	7-56
12.	Chroma Emphasis Adjustment 2 (VS-123 board) ..	7-56
13.	Comb Filter Fine Adjustment (VS-123 board)	7-57
14.	REC Y Level Adjustment (VS-123 board)	7-57
15.	REC L Adjustment (VS-123 board)	7-58
16.	REC CHROMA Level Adjustment (VS-123 board)	7-59
17.	REC ATF Level Check (VS-123 board)	7-59
3-6.	Audio System Adjustment	7-60
1.	E-E Output Level Check (AU-182 board)	7-60
2.	IR Adjustment	7-60
3.	Deviation Adjustment	7-60
4.	Carrier Frequency Check (AU-182 board)	7-61
5.	Carrier Level Check (AU-182 board)	7-61
6.	Overall Level Characteristic, Distortion Check (AU-182 board)	7-61
7.	Overall Noise Level Check (AU-182 board)	7-61
3-7.	Arrangement Diagram for Adjustment Parts	7-62

There is the color reproduction standard frame at the back of the book.


SERVICE NOTE

[ATTACH ADDRESS DISPLAY LOCATION OF ACTUAL SIZE]

In this manual, the mounted locations of all electrical parts in boards are mentioned in blank space of the printed wiring boards. The location display of actual size is attached under the color reproduction frame at the end of this service manual. It will be available if you take a copy of this to a clear sheet.

[SEMICONDUCTOR LOCATION]

In this service manual, the mounted locations of the semiconductors (IC, transistor, diodes) are indicated in red in schematic diagrams. This enables to find the location on the board easily when servicing.

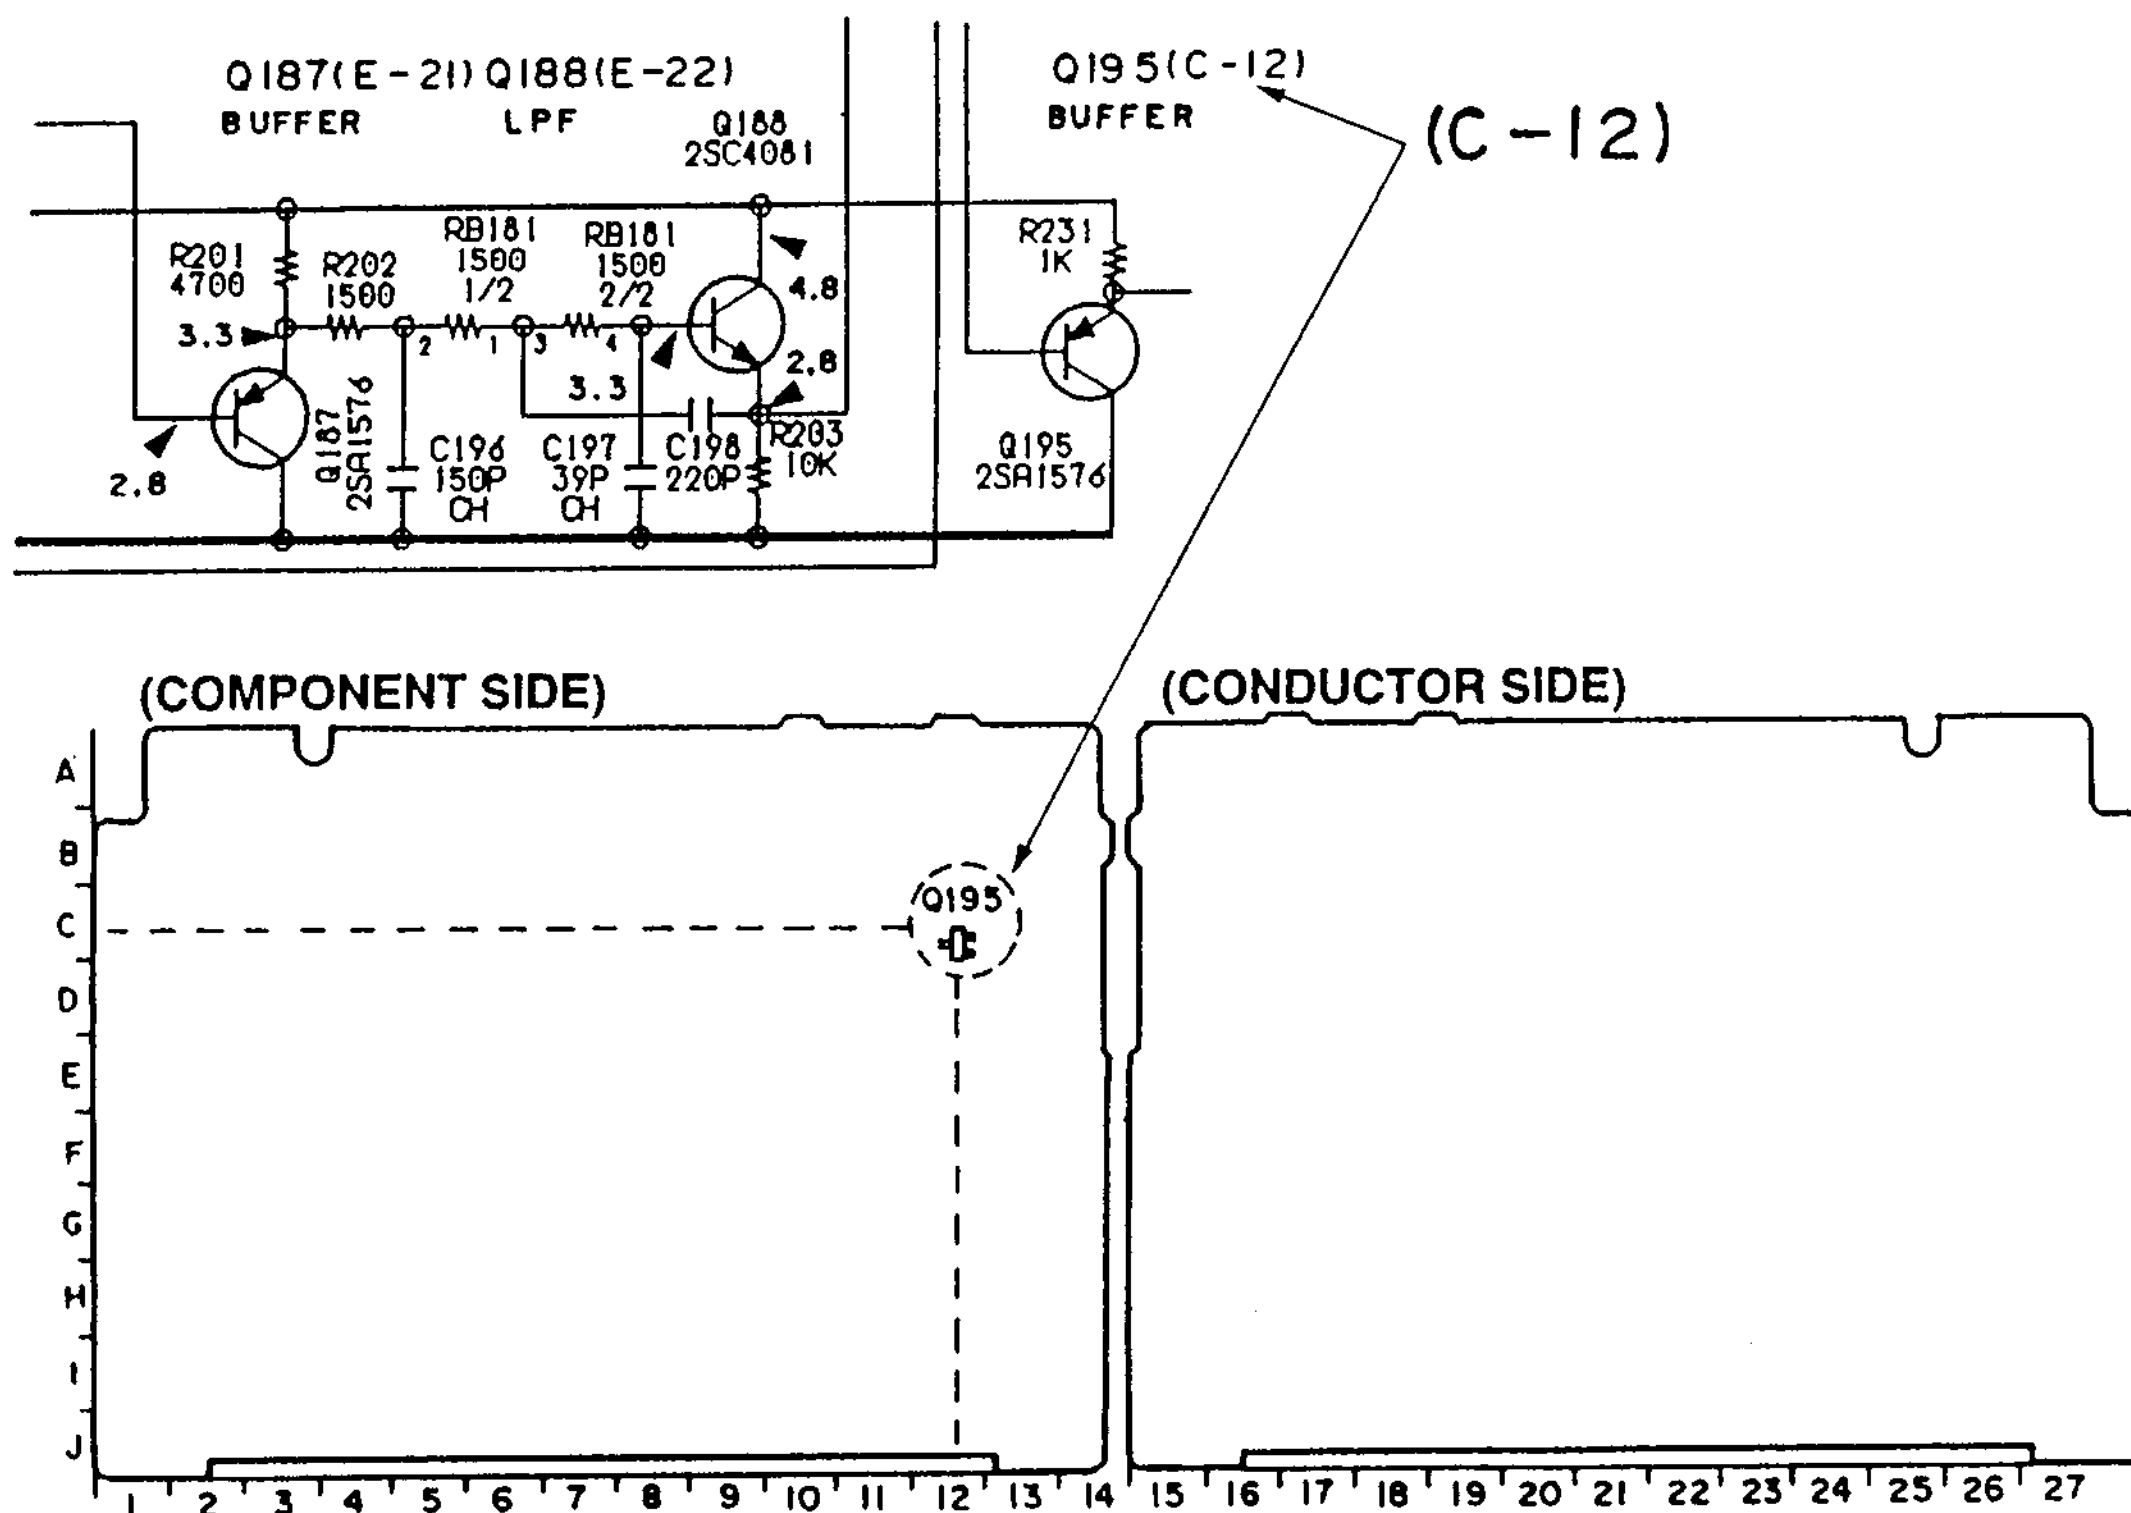

[HEAD CLEANING]

After an extended period of use the video image may become indistinct or may not appear at all during playback of a tape. The cause of this usually are dirty video heads. For remedy, cleaning of the heads is required.

Check for Head Clogs During Recording

- ① Use a blank tape, record a short section, then press the stop button to stop.
- ② Set to recording mode again.
- ③ If the [⊗] mark is flashing in the viewfinder at this time, head clogs are occurred.

Check During Playback of a Tape


- ① Play back a pre-recorded tape and display the image on a TV screen.
- ② If there is no sound and the image is unstable, no image appears on the screen, or tape transport is unstable, head clogs are occurred.

Remedy

[Cleaning method using a cleaning tape]

- Use the Cleaning Tape. (Please follow the instructions attached to the cleaning tape.)

Take a copy of CAMERA COLOR REPRODUCTION FRAME and Parts reference sheets with a clear sheet for use.

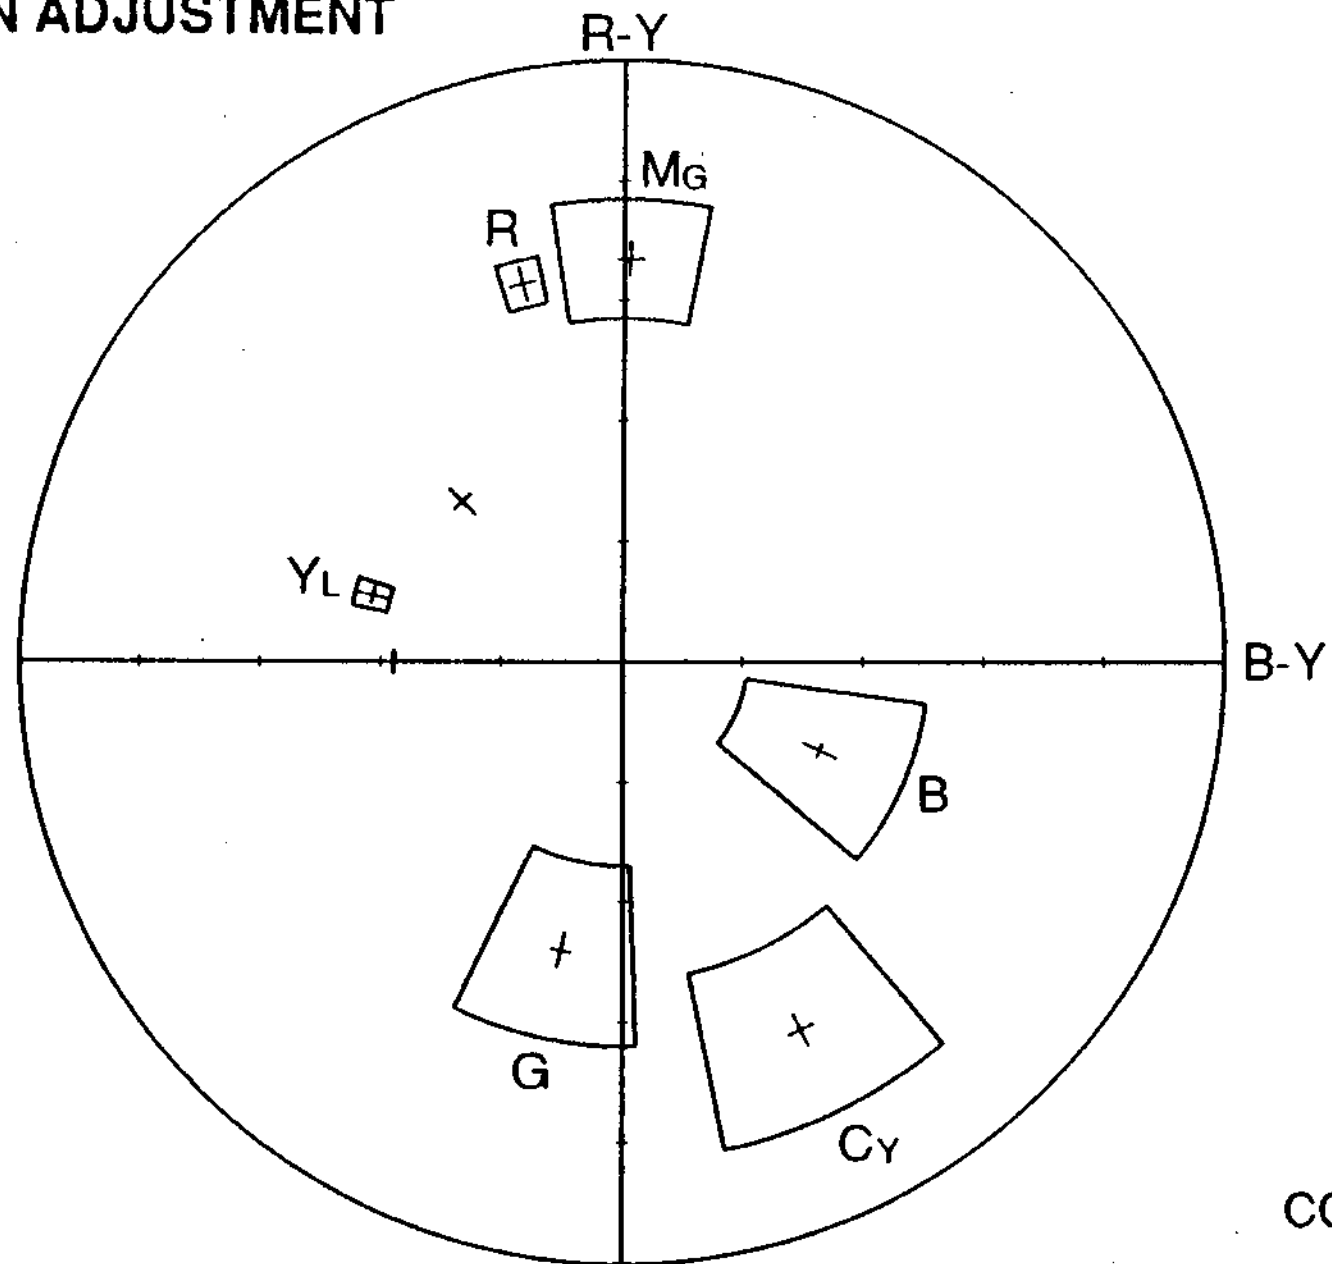


CCD-FX240/FX340

VC-159 BOARD (CONDUCTOR SIDE)

<PARTS REFERENCE SHEET>


You can find the parts position of mount locations applying to boards of a set.

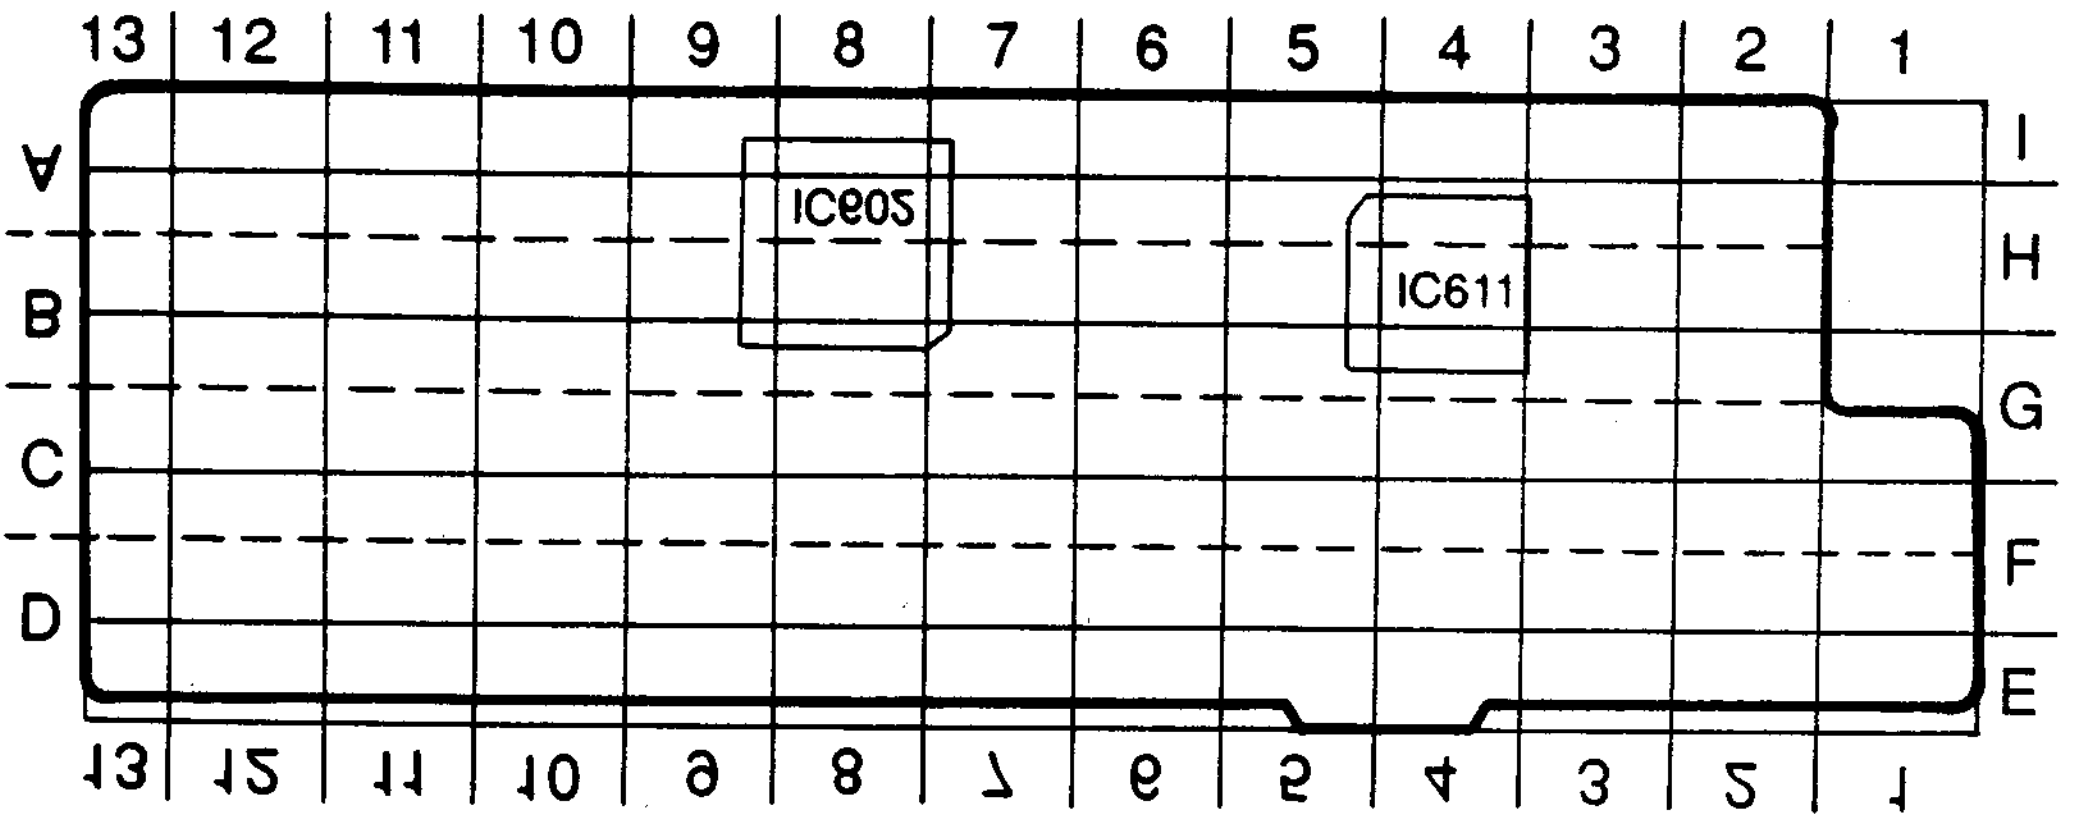

VC-128 BOARD (COMPONENT SIDE)

CCD-FX240/FX340

VS-123 BOARD (COMPONENT SIDE)

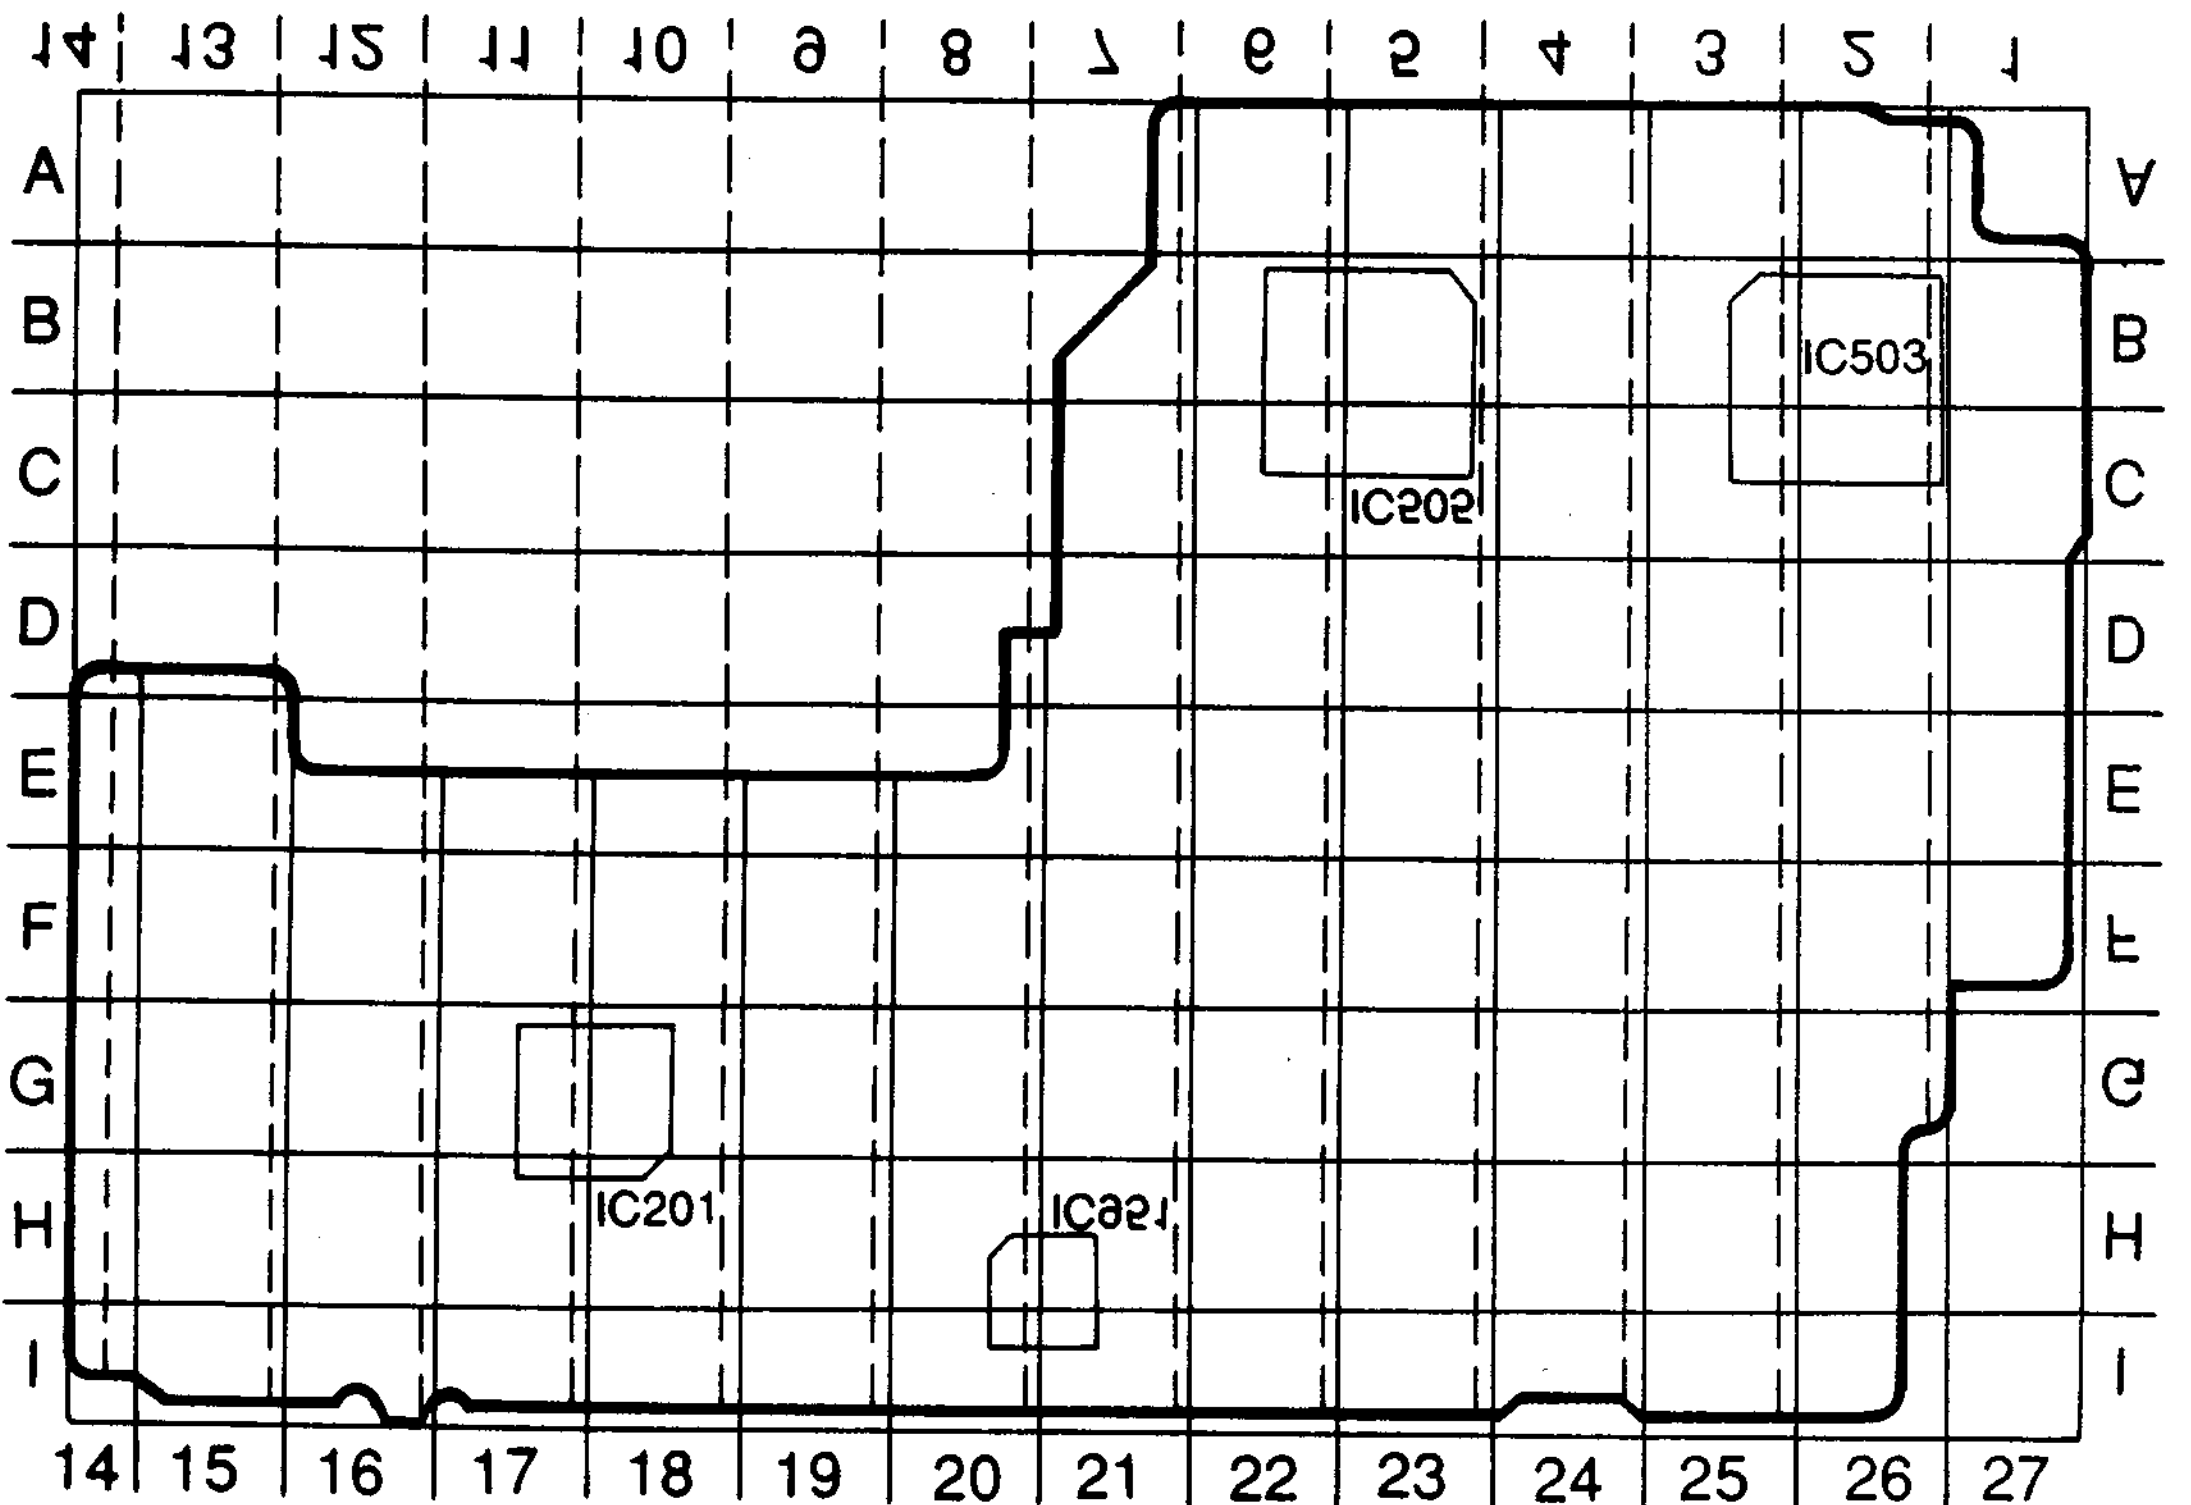

VS-123 BOARD (CONDUCTOR SIDE)

CCD-FX240/FX340

Before You Begin

Checking Your Model Number

The instructions in this manual are for the two models listed below. Before you start reading this manual and operating the unit, check your model number by looking at the bottom of your camcorder. The CCD-FX240 is the model used for illustration purposes. Otherwise, the model name is indicated in the illustrations. Any differences in operation are clearly indicated in the text, for example, "CCD-FX340 only." As you read through this manual, buttons and settings on the camcorder are shown in capital letters. e.g. "Set the POWER switch to CAMERA."

Types of differences

Model number	Viewfinder	
	Monochrome	Color
CCD-FX240	•	
CCD-FX340		•

Note on TV Color Systems


TV color systems differ from country to country. To view your recordings on a TV, you need an NTSC system-based TV. When you want to use a PAL-M system-based TV, you will need an NTSC/PAL-M transcoder (as this is an NTSC system based camcorder). Please check the list on page 39 to find out the TV color system used in your country.

Precaution on Copyright

Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.


Precautions on Camcorder Care

- Do not let sand get into the camcorder. When you use the camcorder on a sandy beach or dusty place, protect it from the sand or dust. Sand or dust may cause the unit to malfunction and sometimes the malfunction cannot be repaired [a].
- Do not let the camcorder get wet. Keep the camcorder away from rain and sea water. Letting the camcorder get wet may cause the unit to malfunction and sometimes the malfunction cannot be repaired [b].
- Never leave the camcorder exposed to temperatures above 140°F (60°C), such as in a car parked in the sun or under direct sunlight [c].

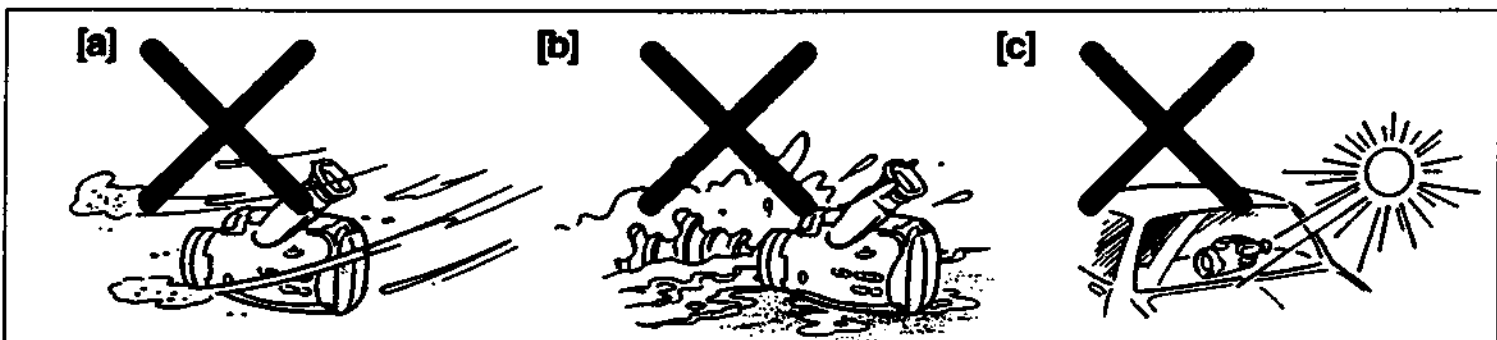

Checking Supplied Accessories


Check that the following accessories are supplied with your camcorder.

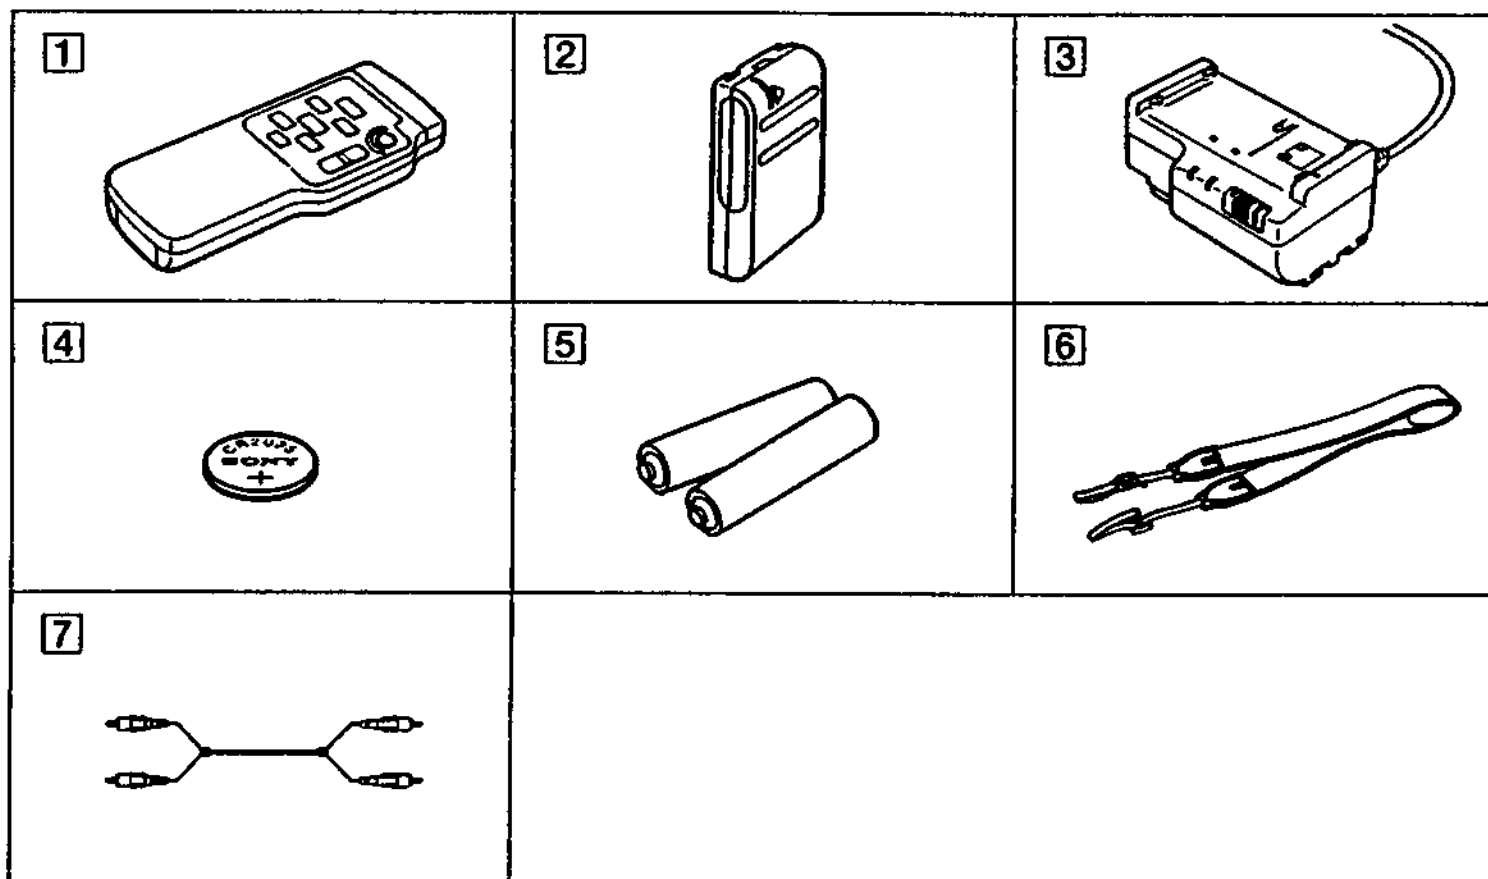

- 1 Wireless Remote Commander (1) (p. 49)
- 2 NP-55 Battery pack (1) (p. 6)
- 3 AC-V25A/V25B/V25C AC power adaptor (1) (p. 6, 19)
- 4 CR2025 Lithium Battery (1) (p. 30)
(The lithium battery is already installed in your camcorder.)
- 5 Size AA (R6) battery for Remote Commander (2) (p. 49)
- 6 Shoulder strap (1) (p. 47)
- 7 A/V connecting cable (1) (p. 16)

After Taking the Camcorder out of the Box

Turn the viewfinder barrel in the direction of the arrow [a]. When storing your camcorder, turn the viewfinder barrel in the direction of the arrow [b].

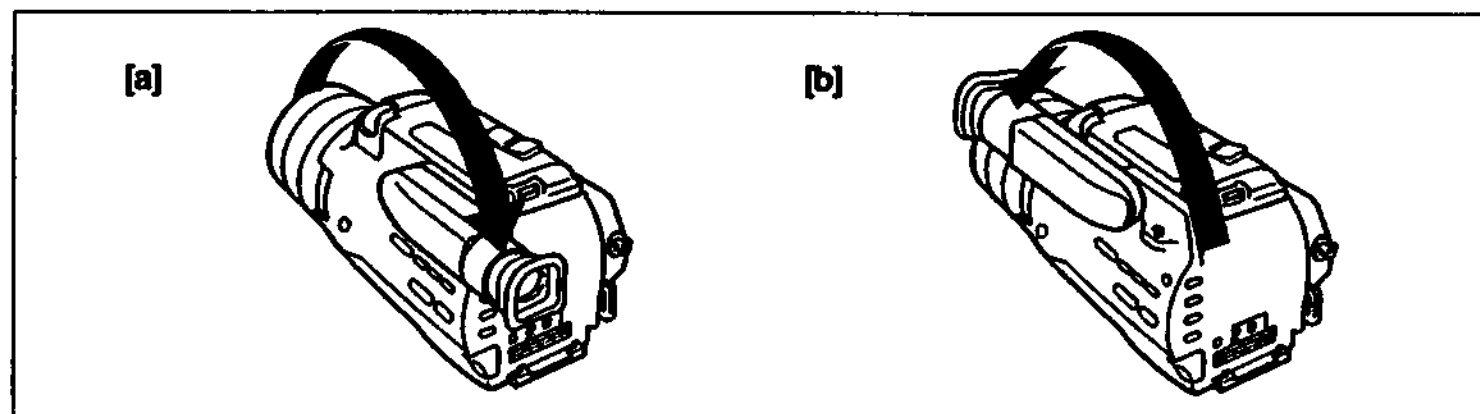

Before You Begin

This section is extracted from instruction manual.

Getting Started


Charging and Installing the Battery Pack

Before using your camcorder, you first need to charge and install the battery pack. To charge the battery pack, use the supplied AC-V25A/V25B/V25C AC power adaptor.

Charging the Battery Pack

Charge the battery pack on a flat surface without vibration.

- (1) Connect the power cord to a wall outlet.
- (2) Align the right side of the battery pack with the line on the AC power adaptor, then slide the battery pack in the direction of the arrow.
- (3) Set the selector to CHARGE. The CHARGE lamp (orange) lights up. Charging begins. When charging is completed, the CHARGE lamp goes out. Set the selector to the center position and unplug the unit from the wall outlet. Then remove the battery pack and install it on the camcorder. To stop charging, set the selector to the center position.

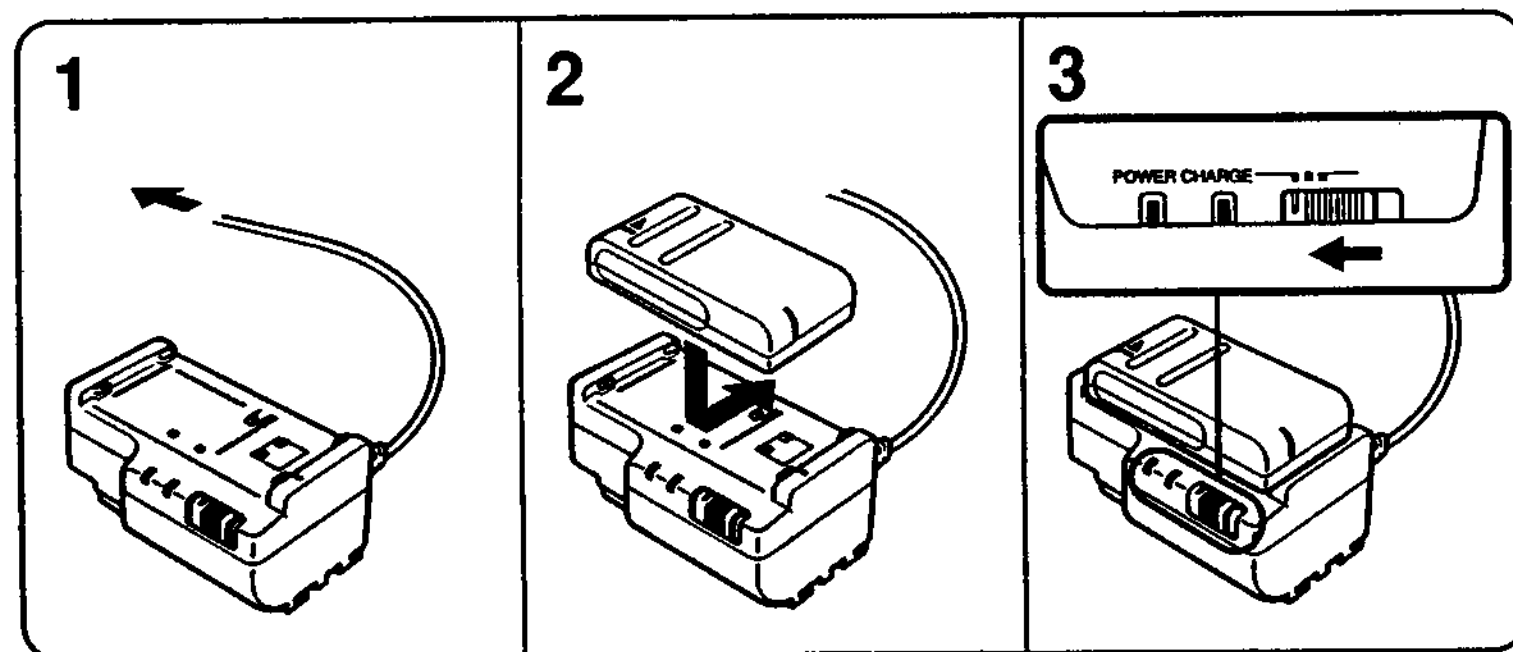

Charging Time

Battery pack	NP-55 (supplied)	NP-80 NP-80D	NP-77H	NP-68	NP-C65	NP-60D
Charging time*	70	190	170	125	105	90

* Approximate minutes to charge an empty battery pack using the AC-V25A/V25B/V25C (Lower temperatures require a longer charging time.)

Battery Life

CCD-FX240

Battery pack	NP-55 (supplied)	NP-80 NP-80D	NP-77H	NP-68	NP-C65	NP-60D
Typical recording time**	30	90	85	60	50	45
Continuous recording time***	65	170	165	120	90	80

CCD-FX340

Battery pack	NP-55 (supplied)	NP-80 NP-80D	NP-77H	NP-68	NP-C65	NP-60D
Typical recording time**	30	85	80	60	45	40
Continuous recording time***	60	165	155	115	90	80

** Approximate minutes when recording while you repeat recording start/stop or zooming and turning the power on/off. The actual battery life may be shorter.

*** Approximate continuous recording time indoors.

Important!


Use the battery completely before re-charging!

Before you recharge the battery pack, make sure the battery has been used up (discharged) completely. Repeated charging while some capacity remains causes a lowering of battery capacity. However, the original battery capacity can be recovered if you use the battery completely and charge it fully again.

To use up the battery, remove the cassette and slide the POWER switch to CAMERA with the battery pack attached, and leave the camcorder until the indicator flashes and the red lamp flashes rapidly in the viewfinder.

Removing the Battery Pack

Slide the battery pack in the direction of the arrow (see drawing).

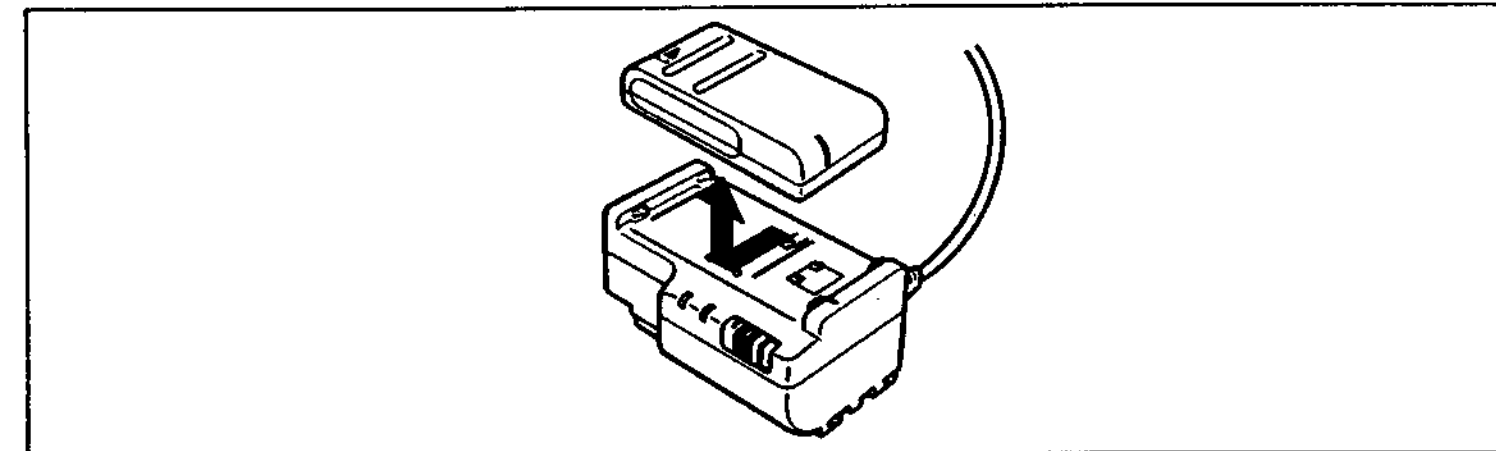


Note on charging the battery pack

- The POWER lamp will remain lit for a while even if the battery pack is removed and the power cord is unplugged after charging the battery pack. This is normal.
- If the POWER lamp does not light, set the selector to the center position and disconnect the power cord. After about one minute, reconnect the power cord and set the selector to CHARGE again.
- You cannot operate the camcorder using the AC power adaptor while charging the battery pack.

Charging and Installing the Battery Pack


Installing the Battery Pack

- (1) Lift up the viewfinder.
- (2) Align the right side of the battery pack with the white line on the camcorder, and slide the battery pack to the right.

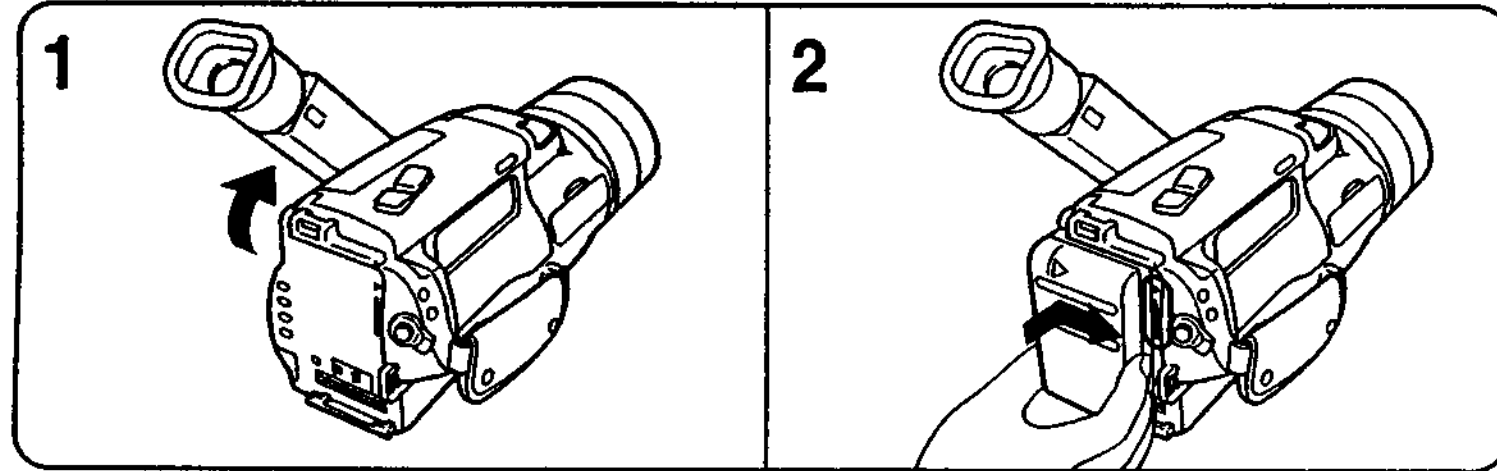

Removing the Battery Pack


- (1) Lift up the viewfinder.
- (2) While pressing BATT, slide the battery pack to the left.

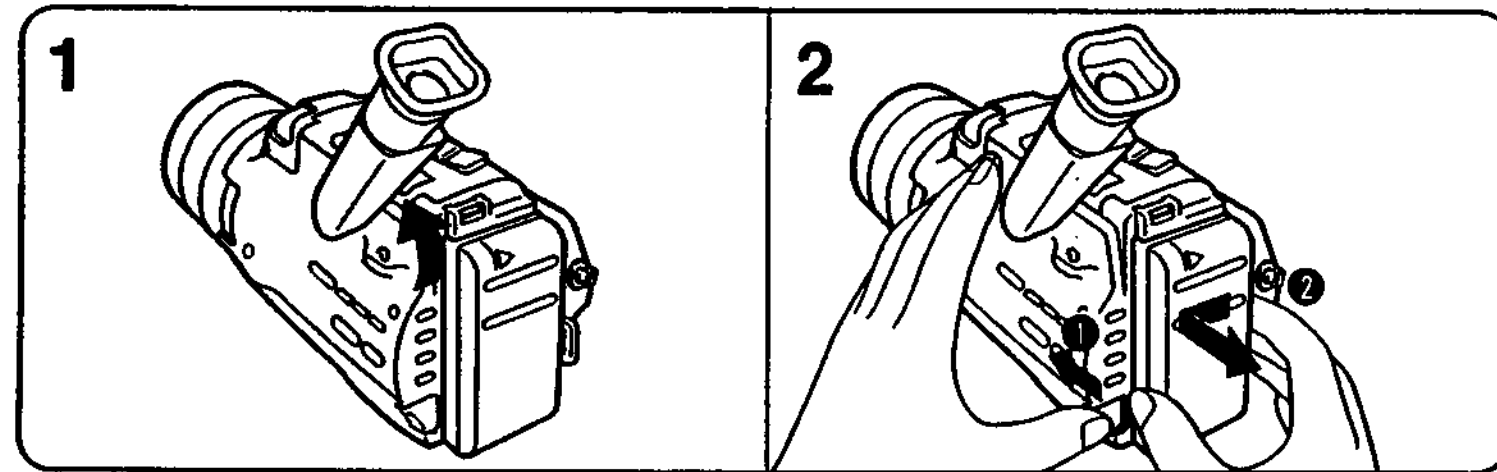

Inserting a Cassette

Make sure that the power source is installed.


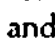
- (1) While sliding the lid lock in the direction of the arrow, lift up the lid.
- (2) Press EJECT. The cassette compartment automatically lifts up and opens.
- (3) Insert a cassette with the window facing out.
- (4) Close the cassette compartment by pressing the "PUSH" mark on the cassette compartment.
- (5) Close the lid.

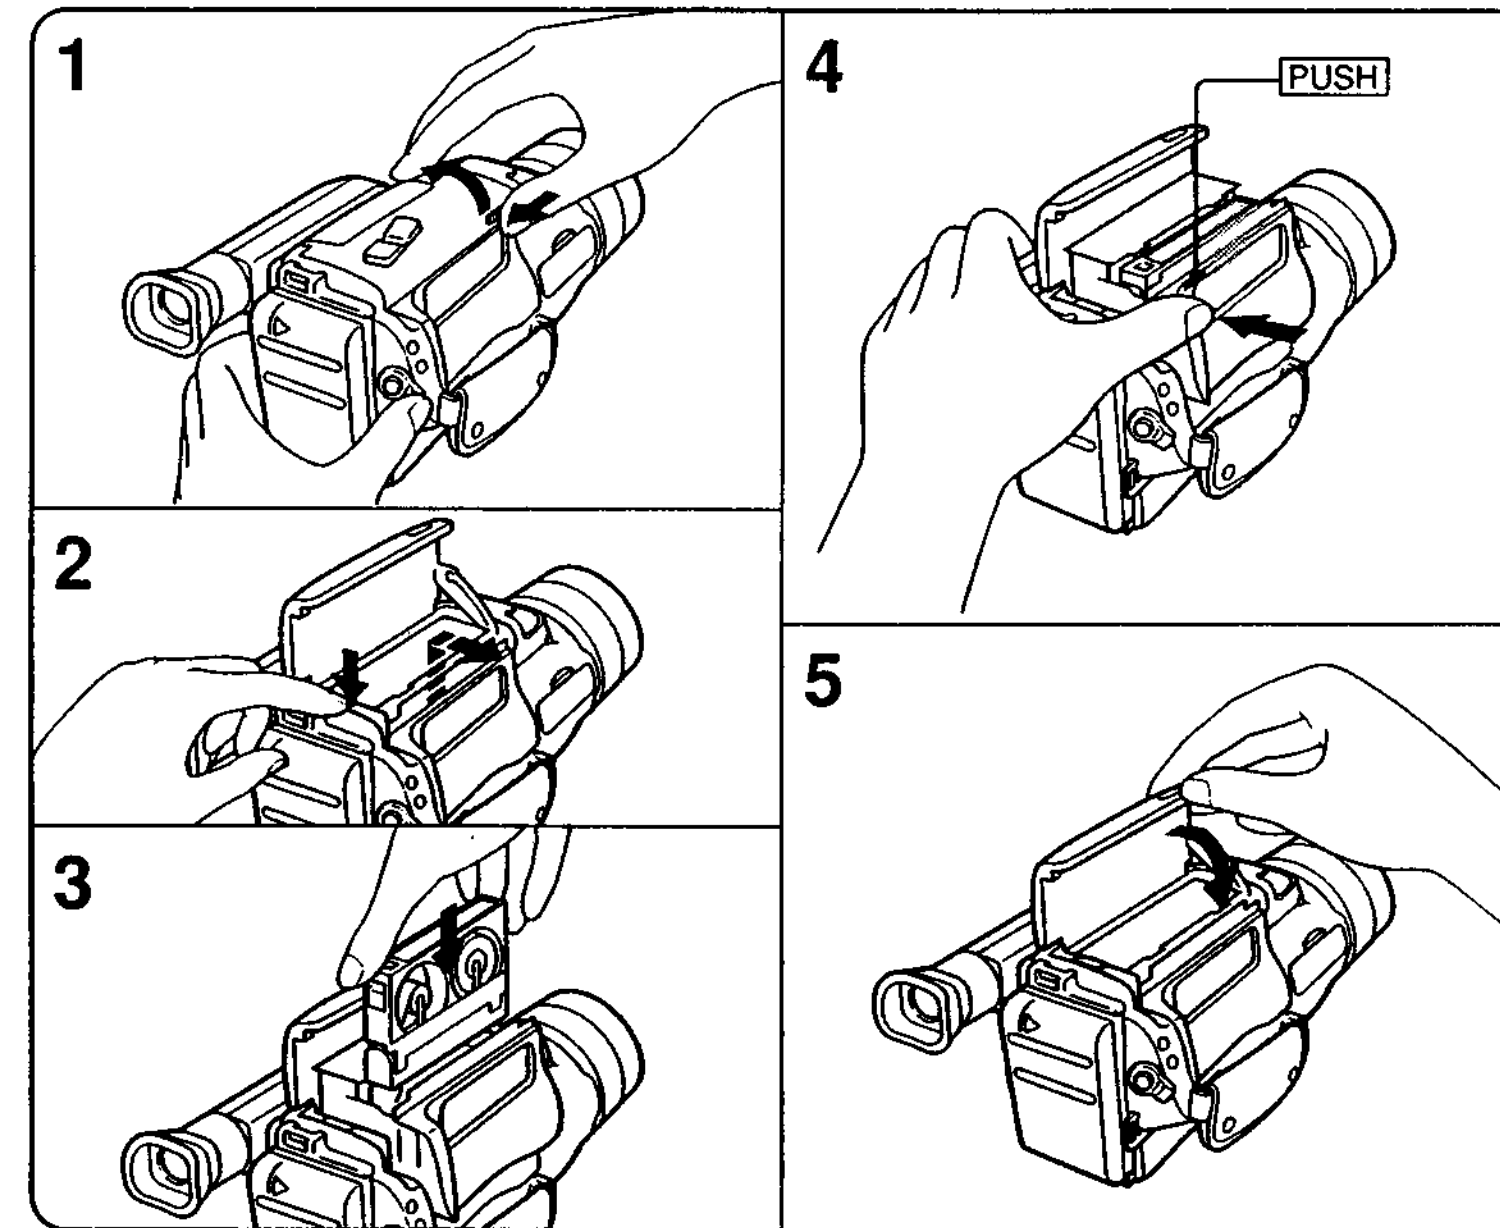


To Eject the Cassette

While sliding the lid lock in the direction of the arrow, lift up the lid of the cassette holder and press EJECT.

Preventing Accidental Erasure

To prevent accidental erasure, slide the tab on the cassette to expose the red mark. If you try to record with the red mark exposed, the  and  indicators flash in the viewfinder, and you cannot record.


To re-record on this tape, slide the tab back out covering the red mark.

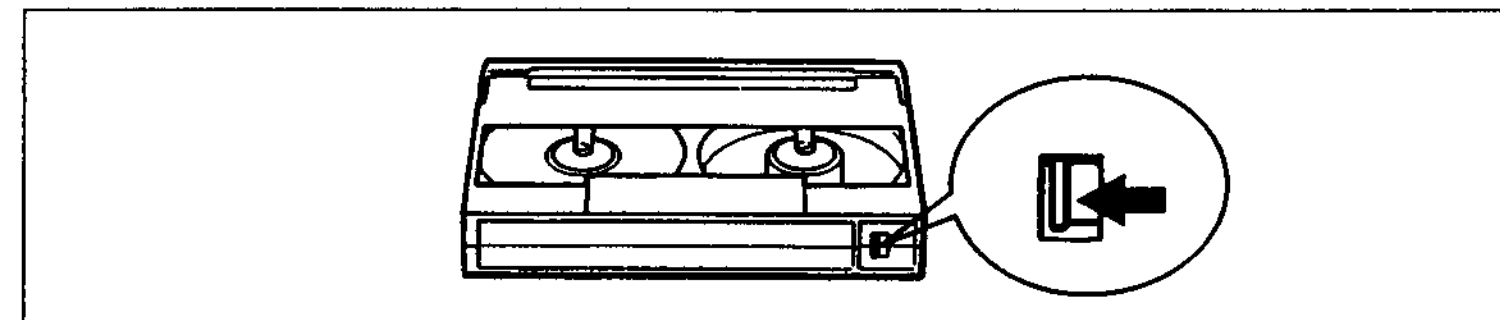

Adjusting the Viewfinder Lens

Before you use the camcorder for the first time or after someone else has used it, focus the viewfinder lens. Make sure that the power source is attached to the camcorder.


- (1) While pressing the small green button on the POWER switch, slide it to CAMERA. The lens cover opens.
- (2) Turn STANDBY up.
- (3) Focus on the indicators: **[a]** When using a monochrome viewfinder, turn the viewfinder lens adjustment ring so that the indicators in the viewfinder come into sharp focus. **[b]** When using a color viewfinder, move the viewfinder lens adjustment lever so that the indicators in the viewfinder come into sharp focus.

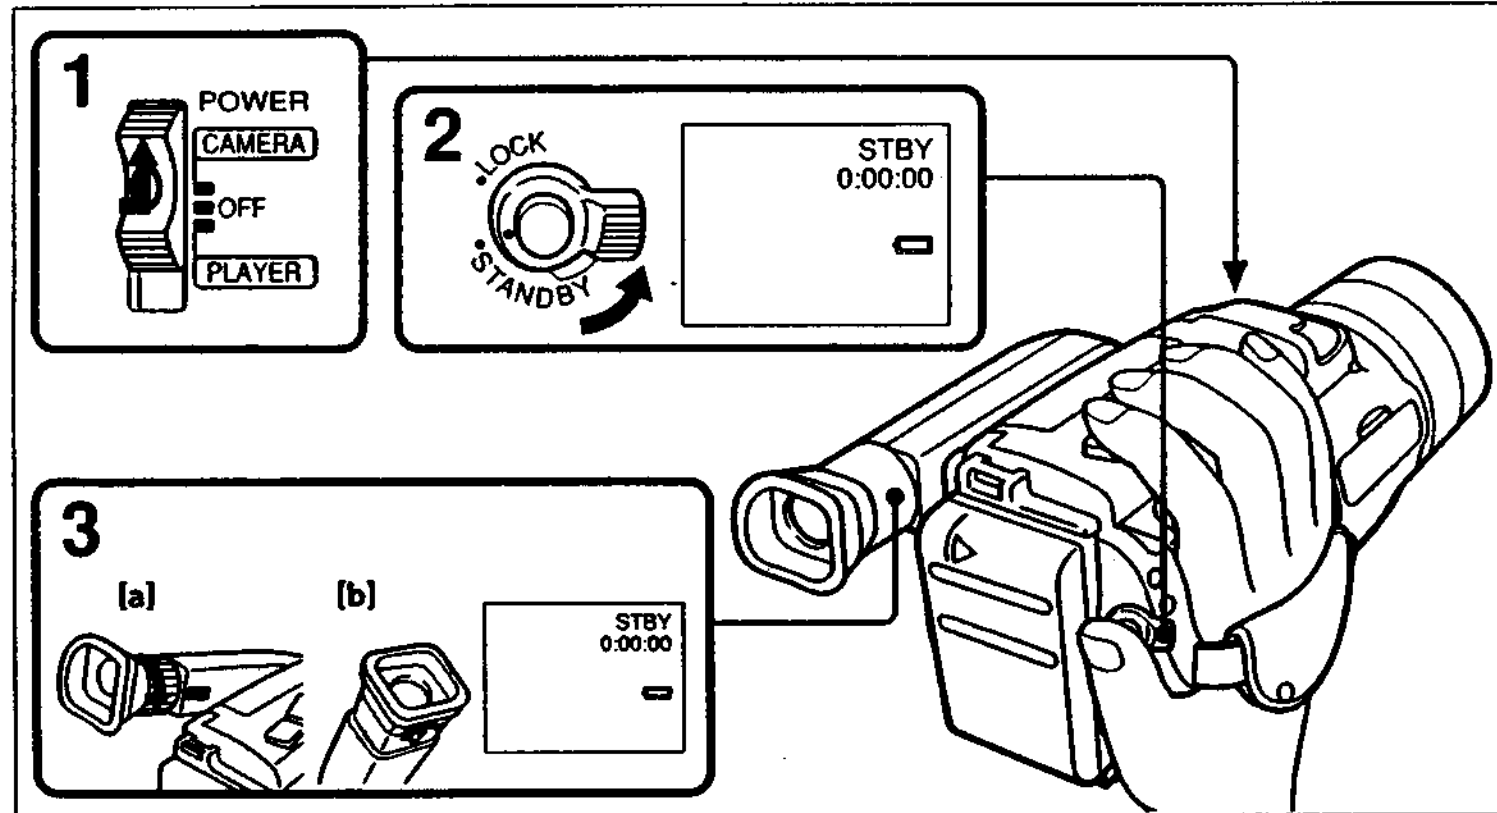

When Using a Color Viewfinder — For CCD-FX340 only

To adjust the picture quality

If you want to change hue, color and brightness of the picture displayed on the viewfinder screen, turn the screws on the viewfinder slowly using a screwdriver (not supplied). You do not need to adjust them in everyday operation.

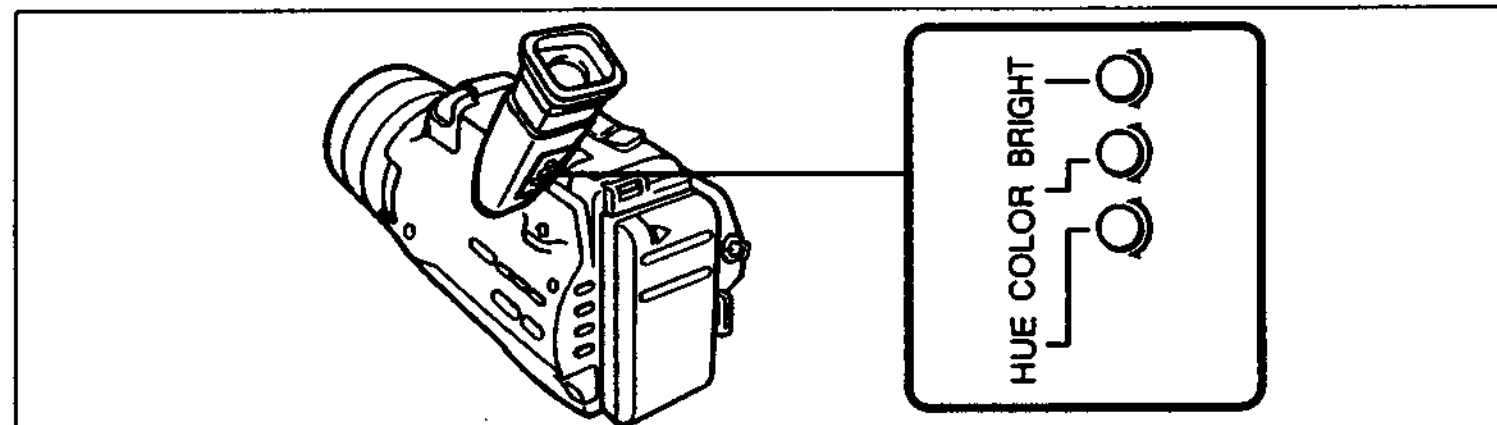


	Turn clockwise	Turn counterclockwise
BRIGHT	More brightness	Less brightness
COLOR	More color intensity	Less color intensity
HUE	Greenish skin tones	Reddish skin tones

Basic Operations Camera Recording

Make sure that the power source is installed and a cassette is inserted. The date is automatically recorded for 10 seconds after you start recording (AUTO DATE feature). This feature works only once a day.

Before you record one-time events, you may want to make a trial recording to make sure that the camcorder is working correctly.

- (1) While pressing the small green button on the POWER switch, slide it to CAMERA.
- (2) Turn STANDBY up.
- (3) Press START/STOP. The camcorder starts recording. The "REC" indicator appears and the red lamp lights up in the viewfinder. The camera recording/battery lamp on the viewfinder barrel also lights up.

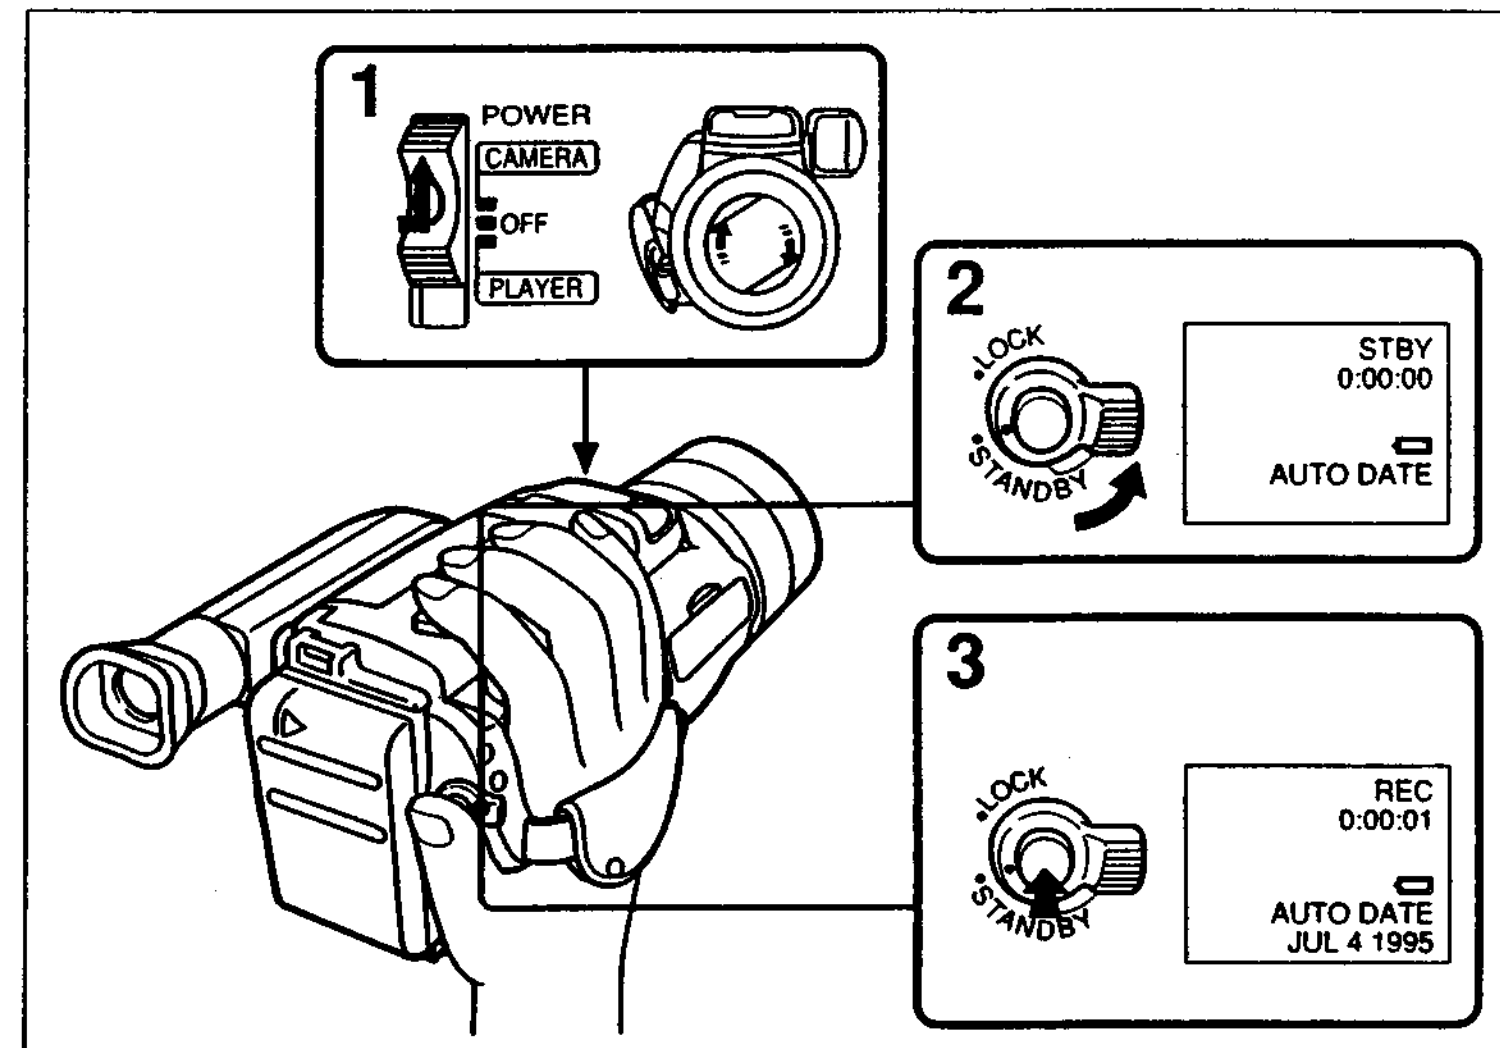


To Stop Recording Momentarily **[a]**

Press START/STOP again. The "STBY" indicator appears in the viewfinder (Standby mode).

To Finish Recording **[b]**

Press START/STOP again. Turn STANDBY down and slide the POWER switch to OFF. The lens cover closes. Then, eject the cassette (p. 9).

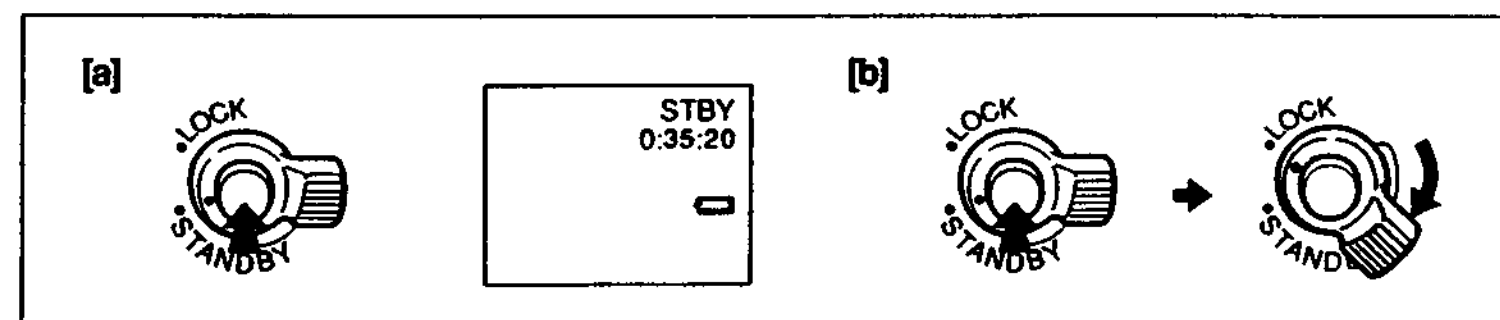

Camera Recording

Note on Standby mode

If you leave the camcorder in Standby mode for 5 minutes while the cassette is inserted, the camcorder turns off automatically. This prevents wearing down the battery and wearing out the tape. To resume Standby mode, turn STANDBY down once and turn it up again. To start recording, press START/STOP.

Note on recording

When you record from the beginning of a tape, run the tape for about 15 seconds before starting the actual recording. This will ensure that you won't miss any start-up scenes when you play back the tape.

You can record tapes in SP (standard play) mode only.

Note on the tape counter

The tape counter indicates the recording or playback time. Use it as a guide. There will be a time lag of several seconds from the actual time. To set the counter to zero, press COUNTER RESET.

Note on the AUTO DATE feature

The clock is set to the East Coast Standard Time at the factory, but you can reset the clock in the menu system (p. 31). You can change the AUTO DATE settings by selecting ON or OFF in the menu system.

The AUTO DATE feature works once a day. However, the date may automatically appear more than once a day when:

- you reset the date and time.
- you eject and insert the tape again.
- you stop recording within 10 seconds.
- you set AUTO DATE to OFF once and set to ON again in the menu system.

When moving from indoors to outdoors (or vice versa)

Turn STANDBY up and point the camcorder at a white object for about 15 seconds so that the white balance is properly adjusted.


Using the Zoom Feature

Zooming is a recording technique that lets you change the size of the subject in the scene.

For more professional-looking recordings, use the zoom function sparingly.

"T" side: for telephoto (subject appears closer)

"W" side: for wide-angle (subject appears farther away)

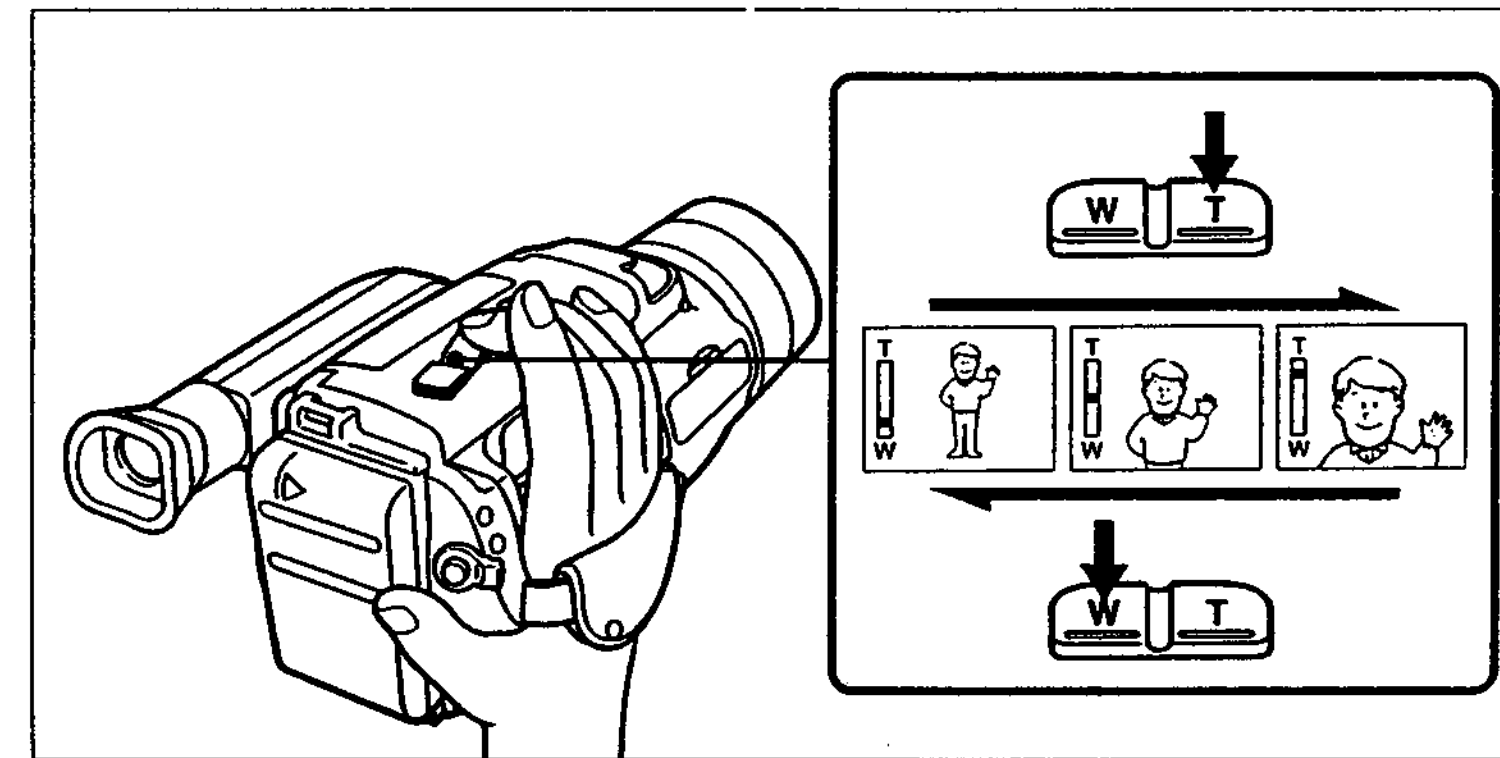

Zooming Speed (Dual speed zooming)


Press the power zoom button firmly for a high-speed zoom, press it softly for a relatively slow zoom.

When you shoot a subject using a telephoto zoom.

If you cannot get a sharp focus while in extreme telephoto zoom, press the "W" side of the power zoom button until the focus is sharp. You can shoot a subject that is at least about 3 1/4 feet (100 cm) away from the lens surface in the telephoto position, or about 1/2 inches (1 cm) in the wide-angle position.

Hints for Better Shooting

For hand-held shots, you'll get better results by holding the camcorder according to the following suggestions:

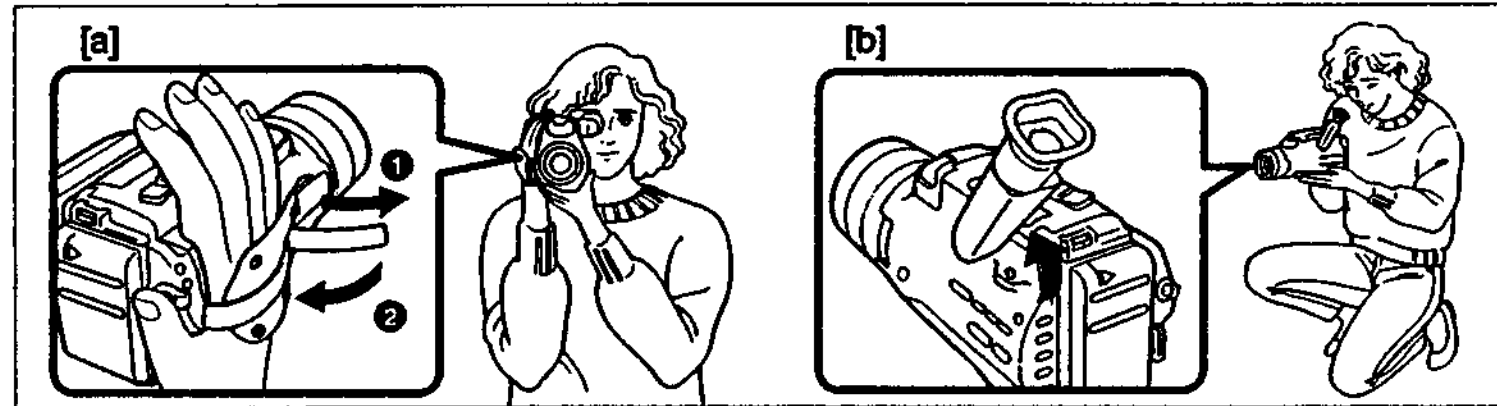

- Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the controls with your thumb [a].
- Place your right elbow against your side.
- Place your left hand under the camcorder to support it.
- Place your eye firmly against the viewfinder eyecup.
- Use the viewfinder frame as a guide to determine the horizontal plane.
- You can also record in a low position to get an interesting recording angle. Lift the viewfinder up for recording from a low position. (You can turn it to 180 degrees.) [b]

Place the camcorder on a flat surface or use a tripod

Try placing the camcorder on a table top or any other flat surface of suitable height. If you have a tripod for a still camera, you can also use it with the camcorder (p. 46). When attaching a non-Sony tripod, make sure that the length of the tripod screw is less than 9/32 in (6.5 mm). Otherwise, the screw may damage the inner parts of the camcorder.

Using the Viewfinder as a Sports Finder — CCD-FX240 only


With the Sports Finder, you can monitor the picture while your eyes are at a distance from the eyecup. You can shoot scenes while moving around.

When using the viewfinder as a Sports Finder, turn the viewfinder lens adjustment ring clockwise until it stops [c].

When returning to the normal viewfinder position, turn the viewfinder lens adjustment ring counterclockwise until the indicators in the viewfinder come into sharp focus.

Cautions on the viewfinder

- Do not pick up the camcorder by the viewfinder [d].
- Do not place the camcorder so as to point the viewfinder toward the sun. The inside of the viewfinder may be deformed. Be careful when placing the camcorder under sunlight or by the window [e].

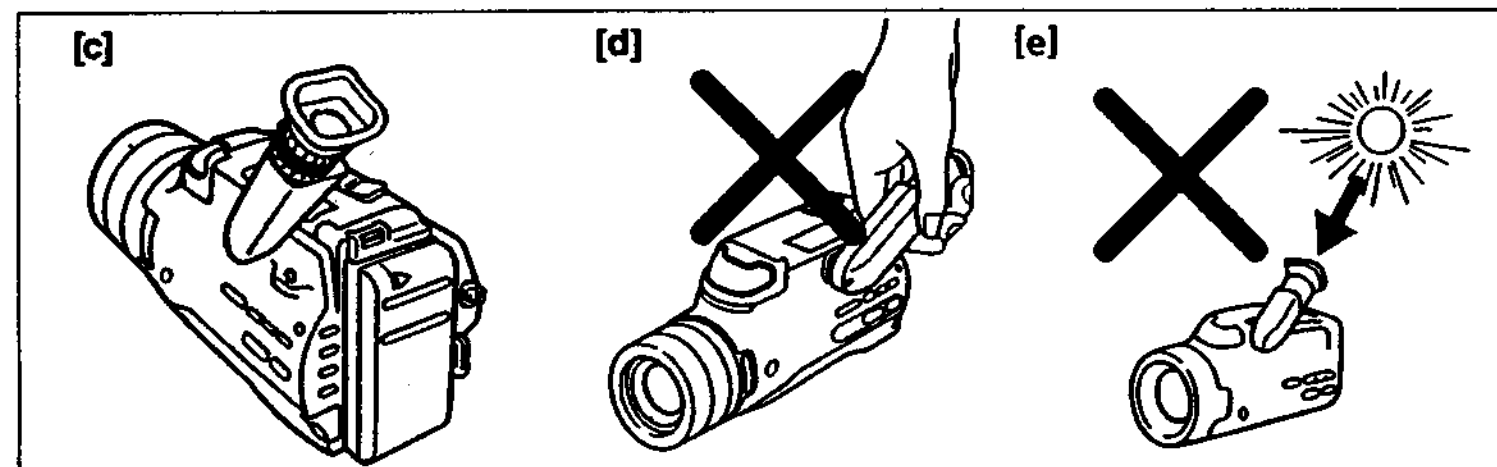


Checking the Recorded Picture

Using EDITSEARCH, you can review the last recorded scene or check the recorded picture in the viewfinder.

- (1) While pressing the small green button on the POWER switch, slide it to CAMERA.
- (2) Turn STANDBY up.
- (3) Press the - (⊖) side of EDITSEARCH momentarily; the last few seconds of the recorded portion plays back (Rec Review).

You can also monitor the sound by using an earphone (not supplied).

Hold down the - side of EDITSEARCH until the camcorder goes back to the scene you want. The last recorded portion is played back. To go forward, hold down the + side (Edit Search).

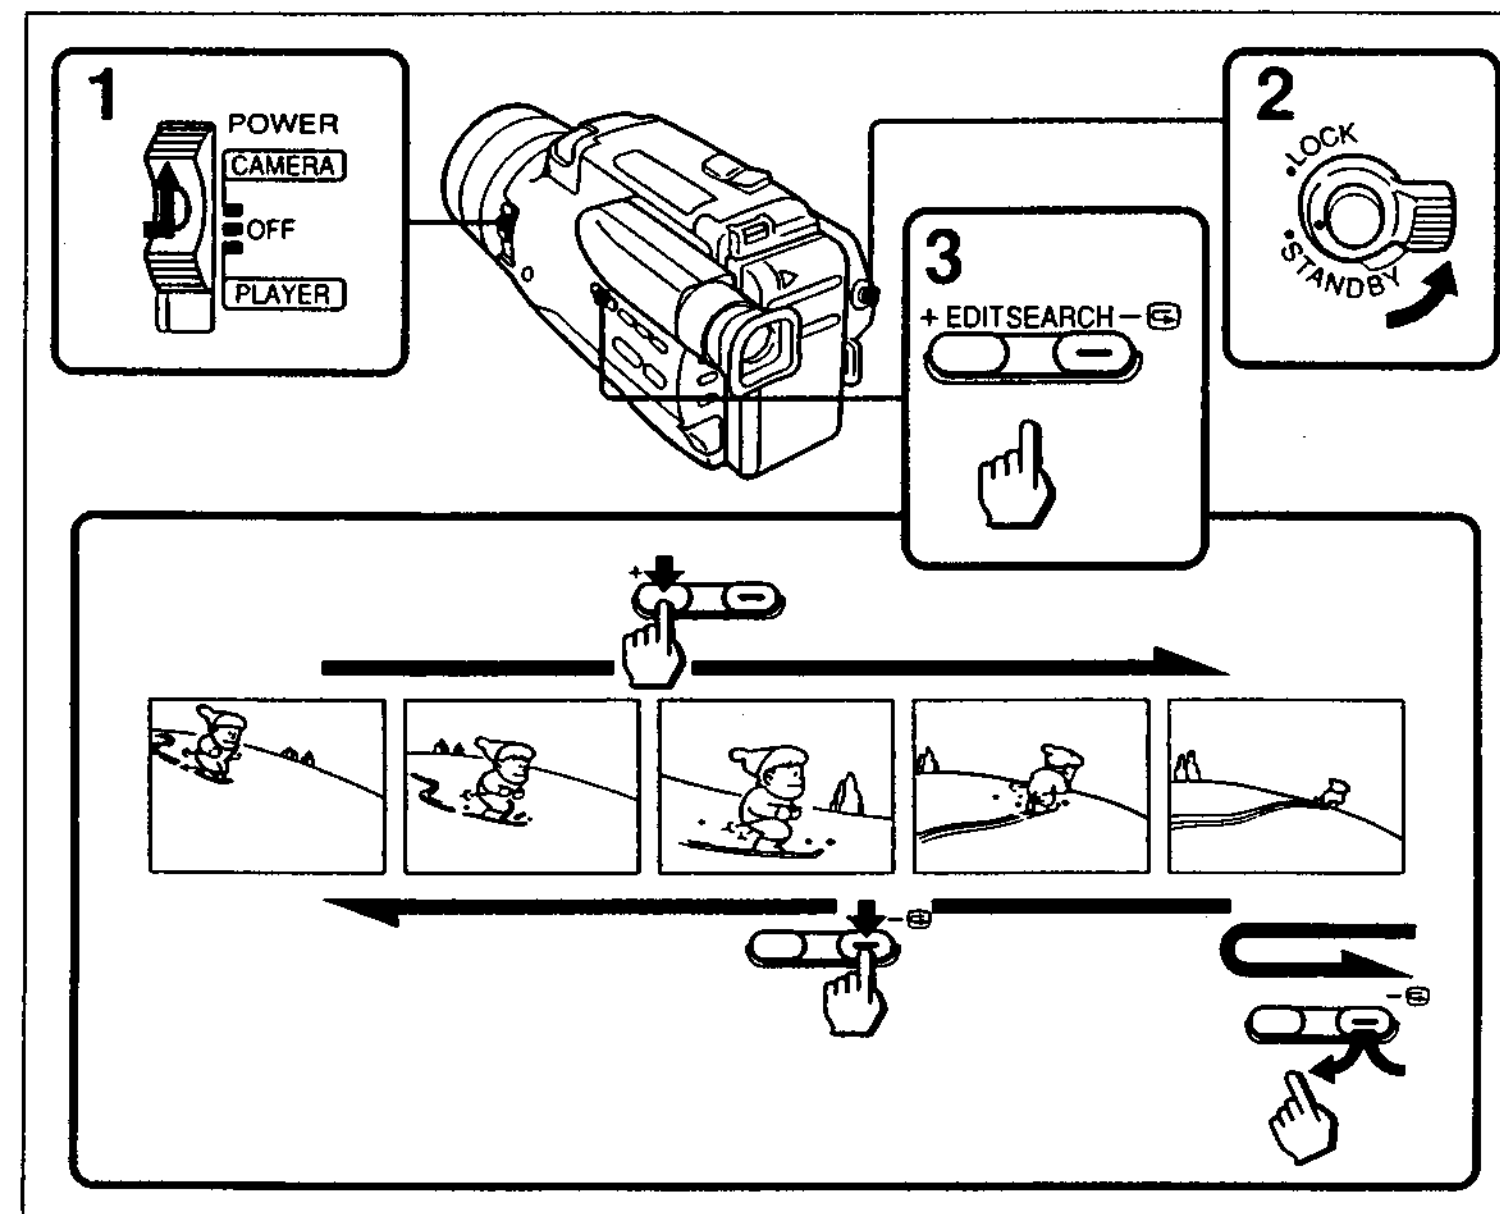

To Begin Re-recording


Press START/STOP. Re-recording begins from the point you released EDITSEARCH. Provided you do not eject the tape, the transition between the last scene you recorded and the next scene you record will be smooth.

Connections for Playback

You can use the camcorder as a VCR. Connect the camcorder to the TV by using the supplied A/V connecting cable. There are two ways to connect the camcorder to your TV. When monitoring the playback picture by connecting the camcorder to your TV, we recommend you use house current for the power source (p. 19).


If your VCR is already connected to a TV

Connect the camcorder to the LINE IN inputs on the VCR by using the supplied A/V connecting cable. Set the input selector on the VCR to LINE. Set the TV/VCR selector on the TV to VCR.

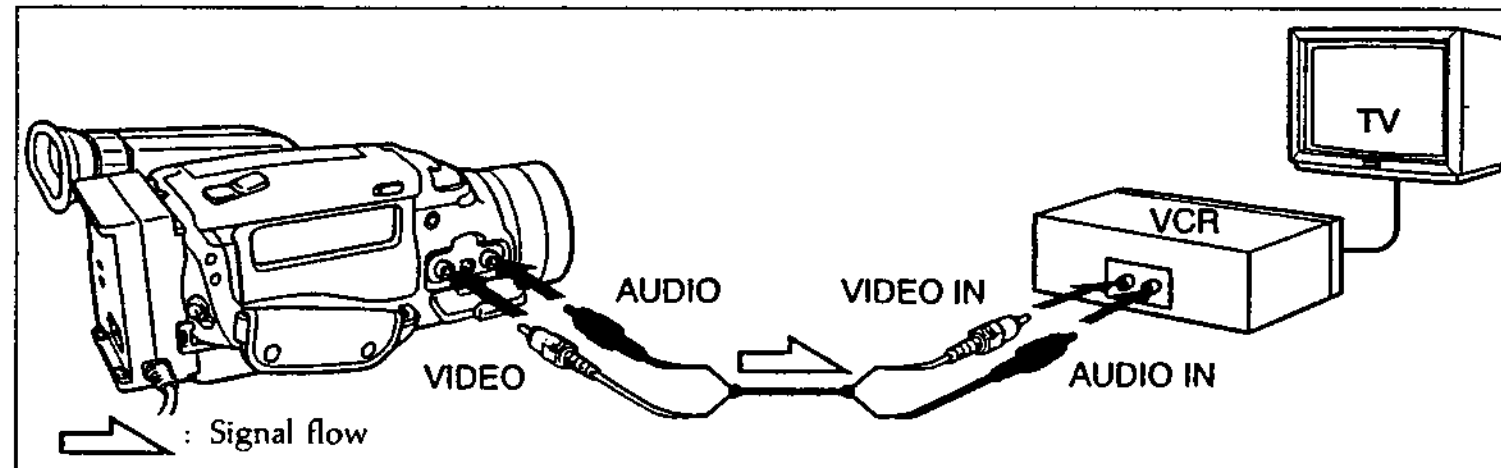

Connecting directly to a TV

Connect the camcorder to the inputs on the TV by using the supplied A/V connecting cable. Set the TV/VCR selector on the TV to VCR.

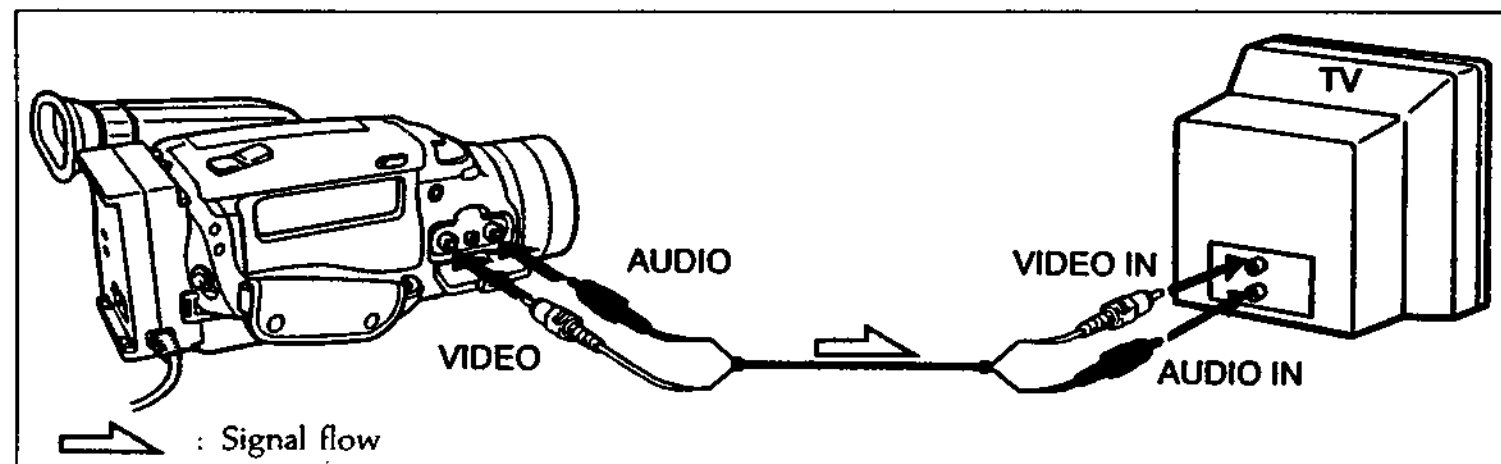


To connect a TV or a VCR without audio/video input jacks

Use the RFU-95UC RFU adaptor (not supplied).

Playing Back a Tape

You can monitor the playback picture in the viewfinder. You can also monitor the picture on a TV screen, after connecting the camcorder to a TV or VCR (p. 16). You can use the supplied Remote Commander to control playback.

- (1) While pressing the small green button on the POWER switch, slide it to PLAYER.
- (2) Insert the recorded tape with the window facing out.
- (3) Press ►. Playback starts.

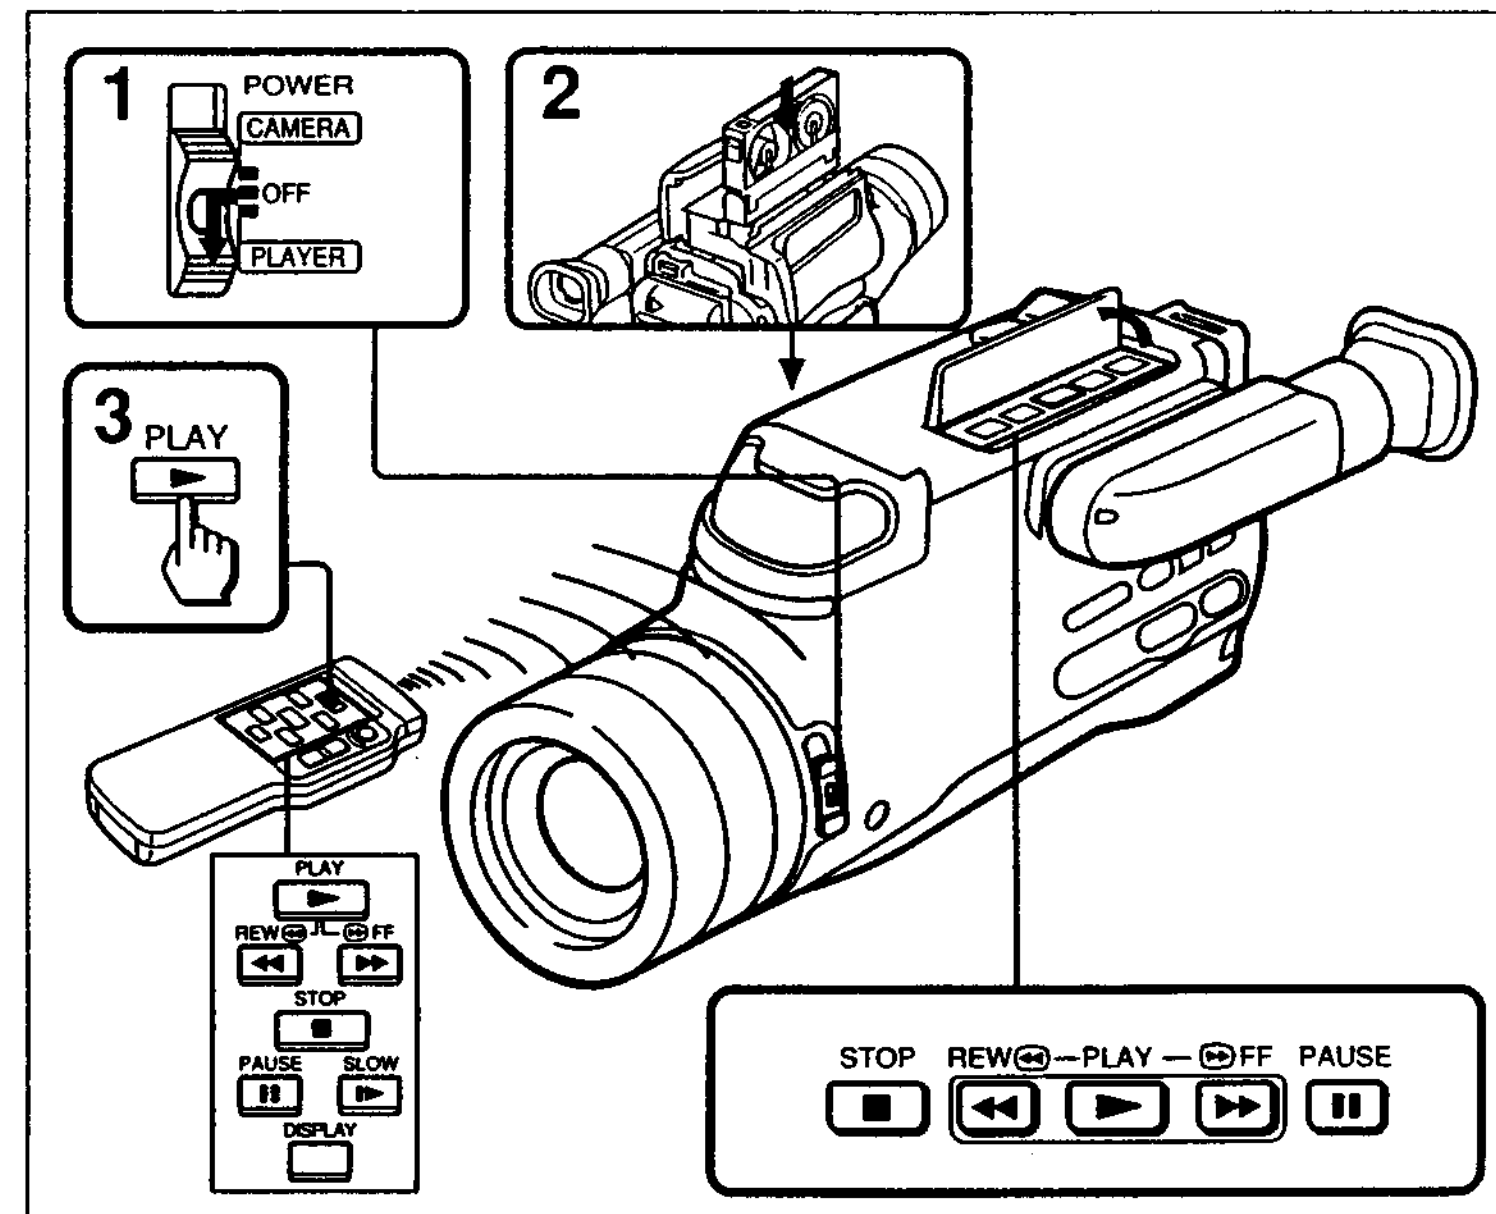

To stop playback, press ■.

To rewind the tape, press ◀◀.

To advance the tape rapidly, press ▶▶.

Playing Back a Tape

Various Playback Modes

To view a still picture (Playback pause)

Press **||** during playback. To resume playback, press **||** or **▶**.

To locate a scene (Picture search)

Keep pressing **◀◀** or **▶▶** during playback. To resume normal playback, release the button.

To monitor the high-speed picture while advancing the tape or rewinding (Skip scan)

Keep pressing **◀◀** while rewinding or **▶▶** while advancing the tape. To resume normal playback, press **▶**.

To view the picture in a sequence of stop-motion images

Press **EDITSEARCH** in Playback pause mode. If you keep pressing **EDITSEARCH**, you can view the picture play back in the forward (+) or reverse (-) direction.

To view the picture at 1/5 speed (Slow Playback) (only with the Remote Commander)

Press **▶** on the Remote Commander during playback. To resume normal playback, press **▶**. If slow playback lasts for about 1 minute, it shifts to normal speed automatically.

Note on playback

- Streaks appear and the sound is muted in the various playback modes.
- When Playback pause mode lasts for 5 minutes, the camcorder automatically enters stop mode.

To display the viewfinder screen indicators on the TV

Press **DISPLAY** on the Remote Commander. To erase the indicators, press **DISPLAY** again.

Advanced Operations

Using Alternative Power Sources

You can choose any of the following power sources for your camcorder: battery pack (p. 6), house current, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	House current	AC power adaptor AC-V25A/V25B/V25C (supplied), AC-S10, AC-V55
Outdoors	Battery pack	Battery pack NP-55 (supplied), NP-80/80D, NP-77H, NP-68, NP-C65, NP-60D
In the car	12 V or 24 V car battery	DC pack DCP-77


Note on power sources

Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape. If this happens, restore the power supply again immediately.

Using House Current

To use the supplied AC-V25A/V25B/V25C AC power adaptor:

- (1) Lift up the viewfinder.
- (2) Connect the AC power cord to a wall outlet. Connect the bottom of the AC power adaptor to the battery mounting surface of the camcorder.
- (3) Set the selector to VTR (DC OUT).

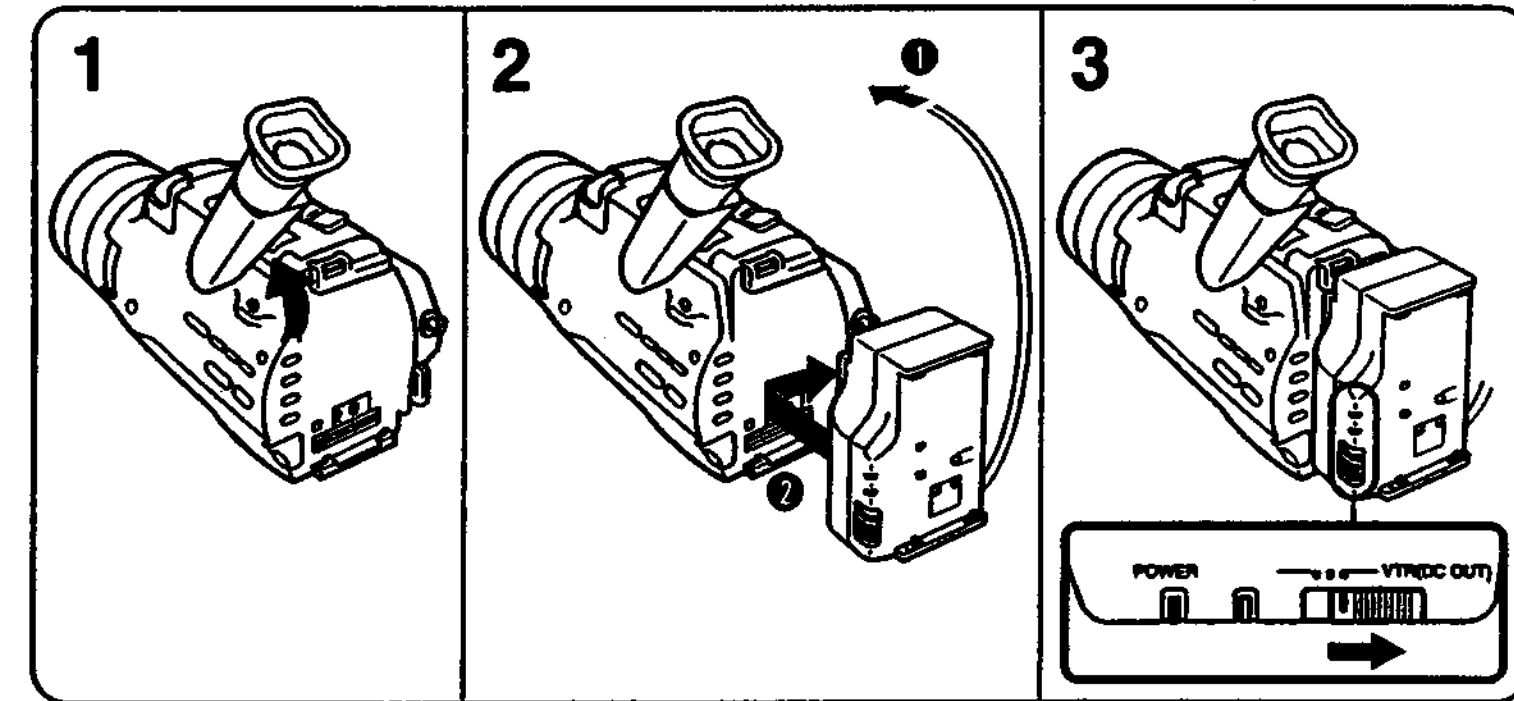

Notes on the POWER lamp

- The POWER lamp will remain lit for a while even if the unit is unplugged after use. This is normal.
- If the POWER lamp does not light, set the selector to the center position and disconnect the power cord. After about one minute, reconnect the power cord and set the selector to VTR (DC OUT) again.

To remove the adaptor

The adaptor is removed in the same way as the battery pack (p. 8).

Using Alternative Power Sources

Using a Car Battery


Use the DCP-77 DC pack (not supplied). Connect the cord of the DC pack to the cigarette lighter socket of the car (12 V or 24 V). Connect the DC pack to the battery mounting surface of the camcorder.

To remove the DC pack

The DC pack is removed in the same way as the battery pack (p. 8).


Options for Charging the Battery Pack

- AC-S10 AC power adaptor:
You can charge a battery pack whether it is used up or not with this adaptor because it has a discharging function.
- BC-S10 portable battery charger (ideal for travel):
You can charge a battery pack on 100 — 240 V AC current.

 This mark indicates that this product is a genuine product related our 8mm video equipment. When purchasing our 8mm video equipment, we recommend that you purchase related 8mm video products provided with the same mark or products provided with our logotype mark.

Recording with the Date or Time

Before you start recording, press DATE (+) or TIME (NEXT). You can record the date or time displayed in the viewfinder with the picture. You cannot record the date and time at the same time. Except for the date, time or age indicator, no indicator in the viewfinder is recorded. The clock is set to the East Coast Standard Time at the factory, but you can reset the clock in the menu system (p. 31).

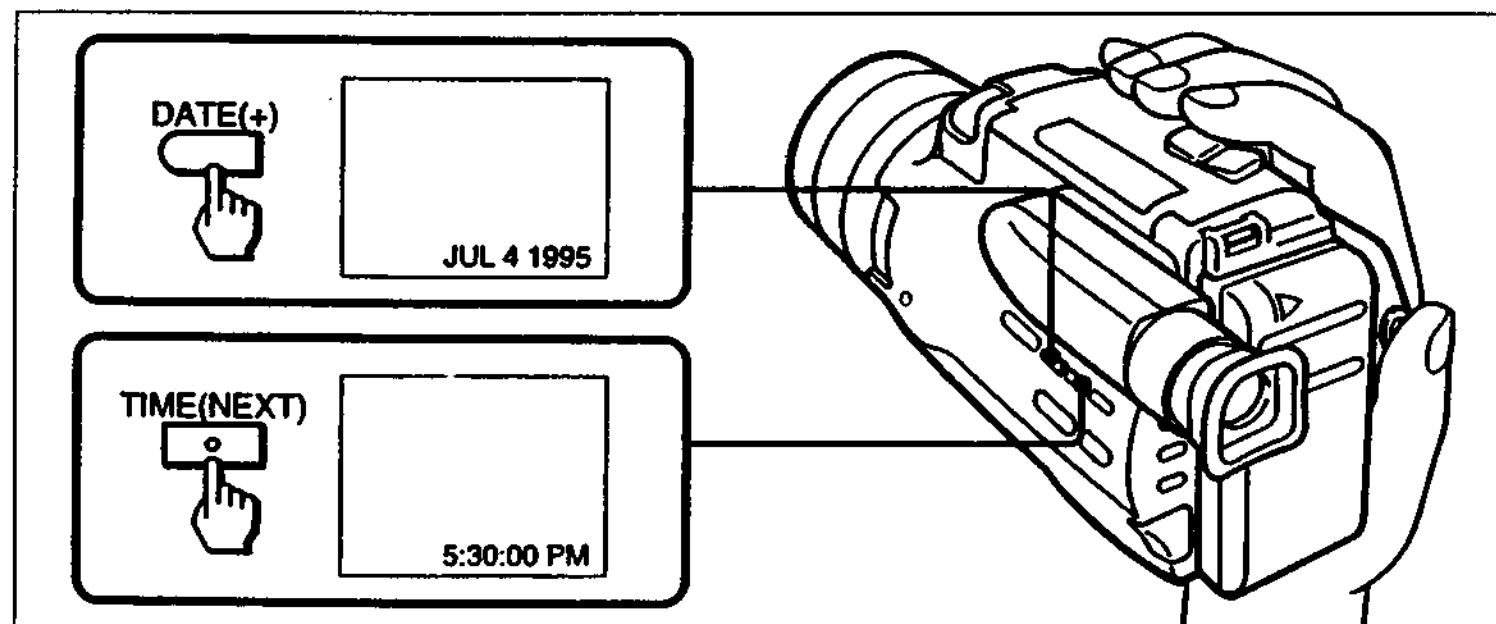

To Stop Recording with the Date or Time

Press DATE (+) or TIME (NEXT) again. The date or time indicator disappears. The recording continues.


Recording with the Age

Storing a Birth Date in Your Camcorder

By presetting your child's birth date in your camcorder, you can record your child's age in years and months on your tape. Once you enter the birth date of your child, the camcorder's clock will automatically update the age of your child. You can preset up to three birth dates or events in the camcorder's memory.

Before storing a birth date, make sure a power source and the lithium battery are installed, and the date setting is correct. The following procedure stores "Aug. 3 1987" in memory 2 as an example.

- (1) While pressing the small green button on the POWER switch, slide it to CAMERA.
- (2) Turn STANDBY up.
- (3) Press TIME (NEXT) and AGE/EVENT simultaneously for a few seconds until the "1 BIRTHDAY--- --1900" indicator appears in the viewfinder.
- (4) Press DATE (+) to select "2 BIRTHDAY."
- (5) Press TIME (NEXT). The "1900" indicator flashes.
- (6) Enter the birth date by adjusting the flashing indicators of the year, month and day by pressing DATE (+) and TIME (NEXT). Note that when you keep DATE (+) pressed, the digits advance faster.

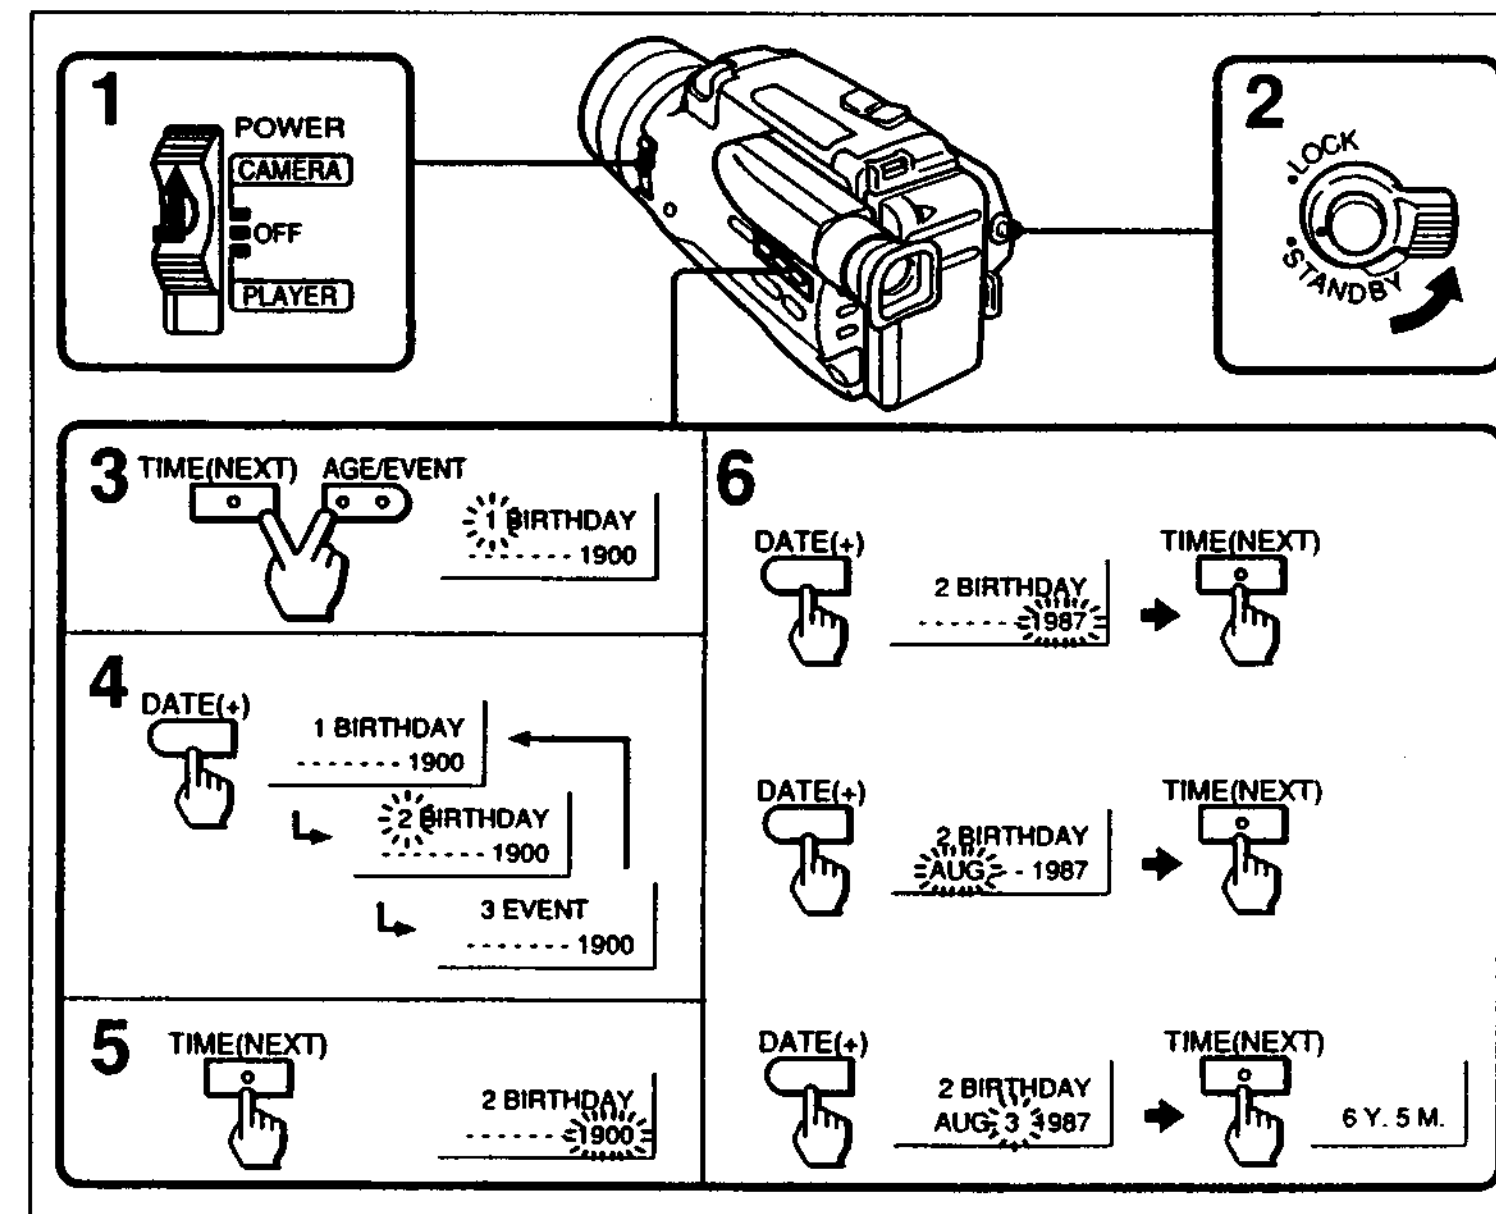

Note on the birth or event dates indicators

Each time you press DATE (+), the display in the viewfinder changes from "1 BIRTHDAY" to "2 BIRTHDAY," "3 EVENT" and comes back to "1 BIRTHDAY."

Recording with the Age

Erasing the Age Indicator in the Viewfinder

Press AGE/EVENT repeatedly until no indicator appears.

If You Missed the Correct Number with DATE (+)

Keep pressing DATE (+). The indicator changes as follows:

Year: "1900" → "1901" → ... → Current year

↑ Current year minus 99 ↓

Month: "JAN." → "FEB." → ... → "DEC." → "----"

Day: "1" → "2" → ... → "31"

To Correct the Setting

Repeat steps from 3 to 6.

To Preset the Year before 1900

- (1) After step 5, keep pressing DATE (+) until the current year is displayed.
- (2) Press DATE (+) again. The year goes back 99 years.
- (3) Go to step 6.

When in 2000


"---- 1901" is displayed in step 3. After that, it advances every year as "1902, 1903"

To Cancel the Stored Birth Date

- (1) Press AGE/EVENT and TIME (NEXT) simultaneously to make 1 BIRTHDAY appear in the viewfinder. Press DATE (+) to select a birth date to cancel.
- (2) Press TIME (NEXT) twice. The month indicator flashes.
- (3) Press DATE (+) repeatedly until "----" appears.
- (4) Press TIME (NEXT). The selected birth date is canceled from the memory and is not displayed when you press AGE/EVENT.

Recording with the Age

Make sure the age is set. While recording, press AGE/EVENT to select memory 1, 2 or 3. You can record the time elapsed since the date set, for example, your child's birthday. Except for the age, date or time (p. 20) indicator, no indicator in the viewfinder is recorded.

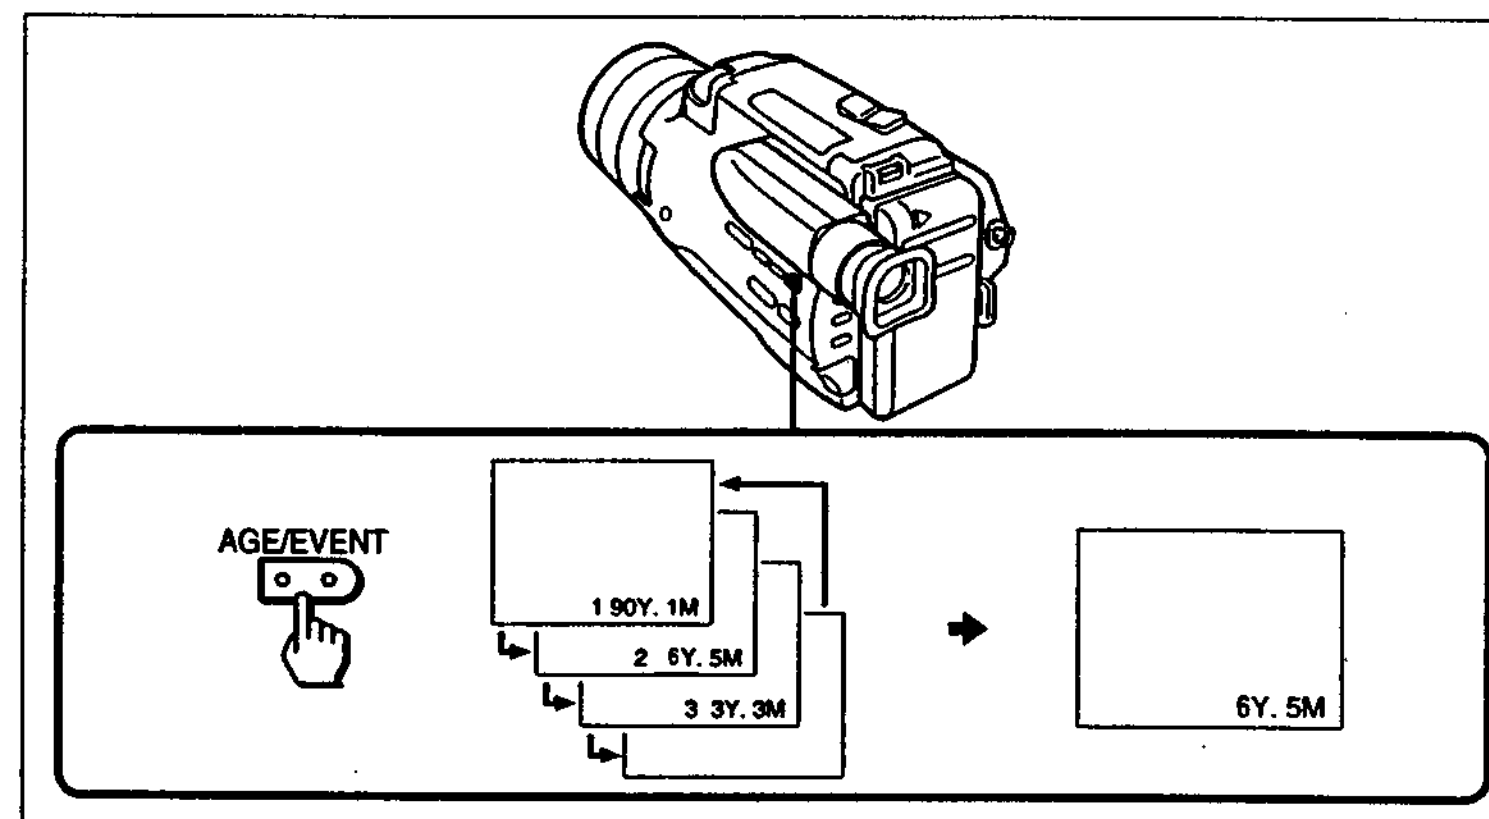

Note on the age indicator

Each time you press AGE/EVENT, the indicator changes from 1 "The first age" to 2 "The second age," 3 "The third age" and back to no indicator. Items for which no setting has been made will be skipped. The 1, 2 or 3 indicator disappears after one second.

To Stop Recording with the Age

Press AGE/EVENT repeatedly until the age indicator disappears.

To Correct the Age Settings while Recording

Press AGE/EVENT repeatedly until the desired age appears. The recording starts after the 1, 2 or 3 indicator disappears.


When the camcorder is connected to a TV

The age indicator appears on the TV screen after the 1, 2 or 3 indicator disappears in the viewfinder screen.

Shooting with Backlighting

When you shoot a subject with the light source behind the subject or a subject with a light background, use the BACK LIGHT function.


Press BACK LIGHT. The  indicator appears in the viewfinder.

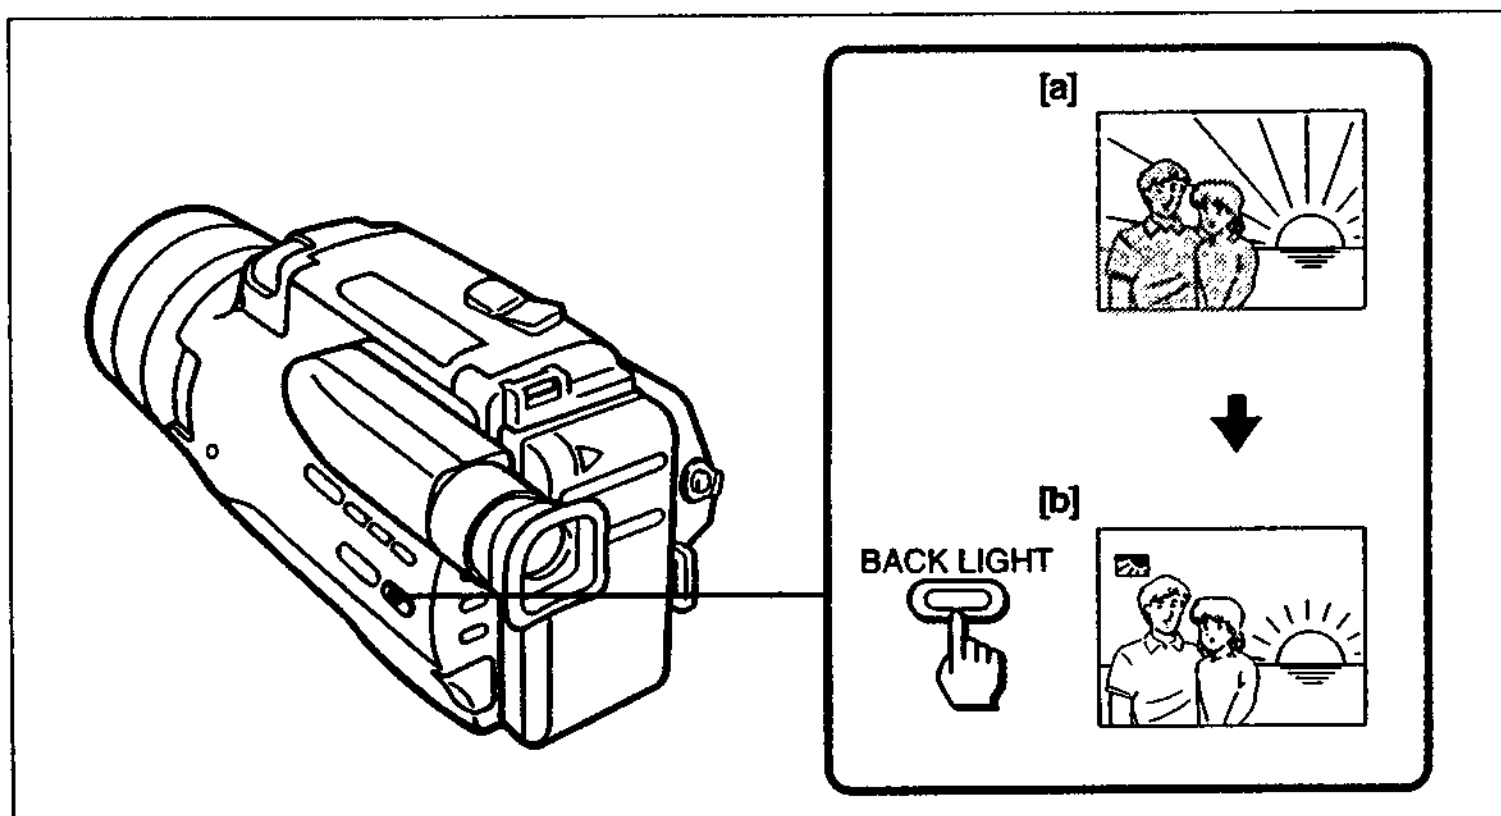

[a] Subject is too dark because of backlight.

[b] Subject becomes bright with backlight compensation.

After shooting

Be sure to release this adjustment condition by pressing BACK LIGHT again. The  indicator in the viewfinder disappears. Otherwise, the picture will be too bright under normal lighting condition.

This function is also effective under the following conditions:

- On snow, e.g. at a ski resort
- At the beach under strong sunshine
- A subject with a light source nearby or a mirror reflecting light
- A white subject against a white background. Especially when you shoot a person wearing shiny clothes made of silk or synthetic fiber, his or her face tends to become dark if you do not use this function.

Using the PROGRAM AE Function

You can select from four PROGRAM AE (Auto Exposure) modes to suit your shooting situation. When you use PROGRAM AE, you can get a Portrait effect (the subject is in focus and the background is out of focus), capture high-speed action, or record night views.

Selecting the Best Mode

Select one of four modes, referring to the following.



Portrait mode

- A still subject such as a person or a flower
- Zooming in on a subject in the telephoto mode
- A subject behind an obstacle such as a net

Sports mode

- Outdoor sports scenes such as football, tennis, golf or skiing
- A landscape from a moving car

High-speed shutter mode


- A golf swing or a tennis match in fine weather with the ball captured clearly
- Playing back certain scenes with high-speed movements in a clear, sharp picture

Twilight mode

- Recording night views, neon signs or fireworks

Using the PROGRAM AE Function

Press PROGRAM AE. The indicator of the selected PROGRAM AE mode appears in the viewfinder.

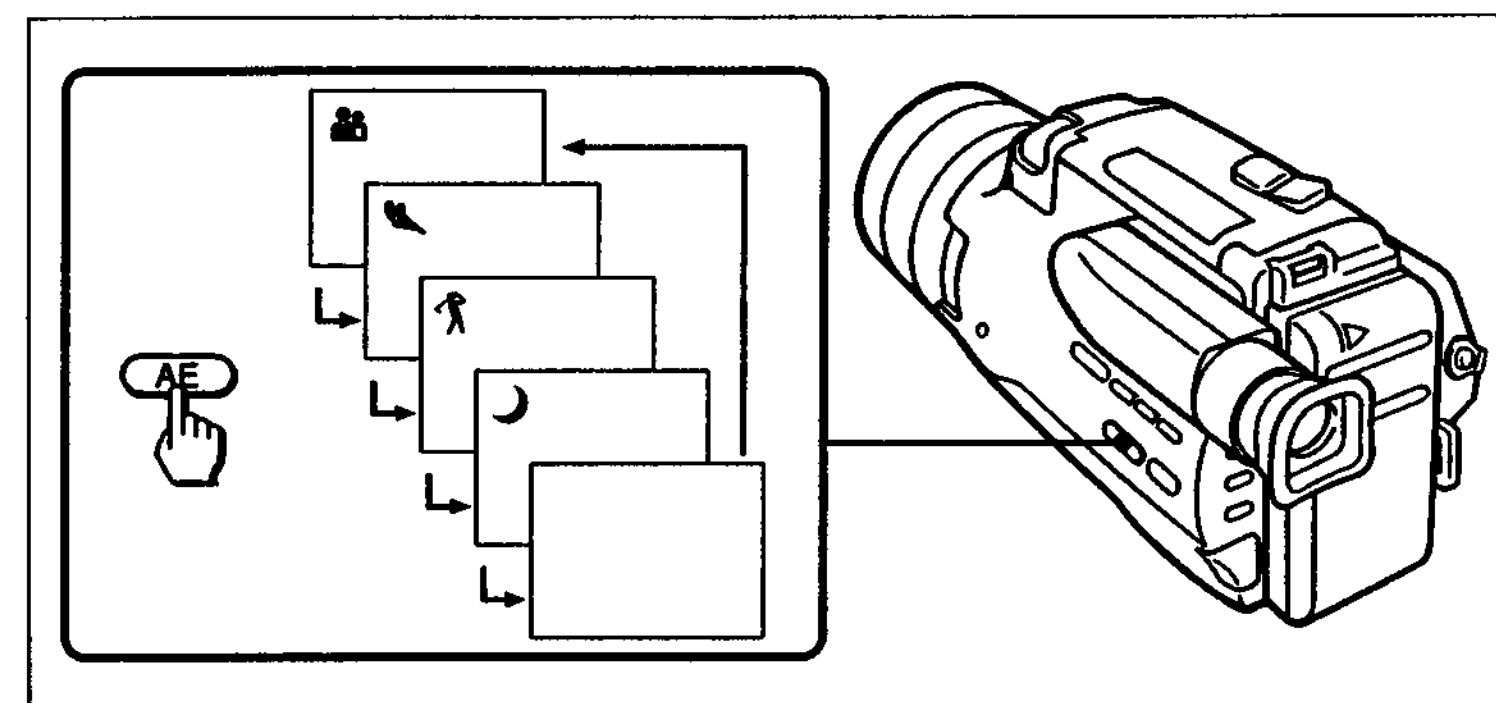

Note on shutter speed

The shutter speed in each PROGRAM AE mode is as follows:

Portrait mode — between 1/60 to 1/2000

Twilight mode — 1/60

Sports mode — between 1/60 to 1/500

Normal mode — 1/60

High-speed shutter mode — 1/4000

Fade-in and Fade-out


You can fade in or out to give your recording a professional appearance. When fading in, the picture gradually fades in from black or mosaic while the sound increases. When fading out, the picture gradually fades to black or mosaic while the sound decreases.

When Fading in [a]

- (1) While the camcorder is in Standby mode, press FADER. The fade indicator starts flashing.
- (2) Press START/STOP to start recording. The fade indicator stops flashing.

When Fading out [b]

- (1) During recording, press FADER. The fade indicator starts flashing.
- (2) Press START/STOP to stop recording. The fade indicator stops flashing, and then recording stops.

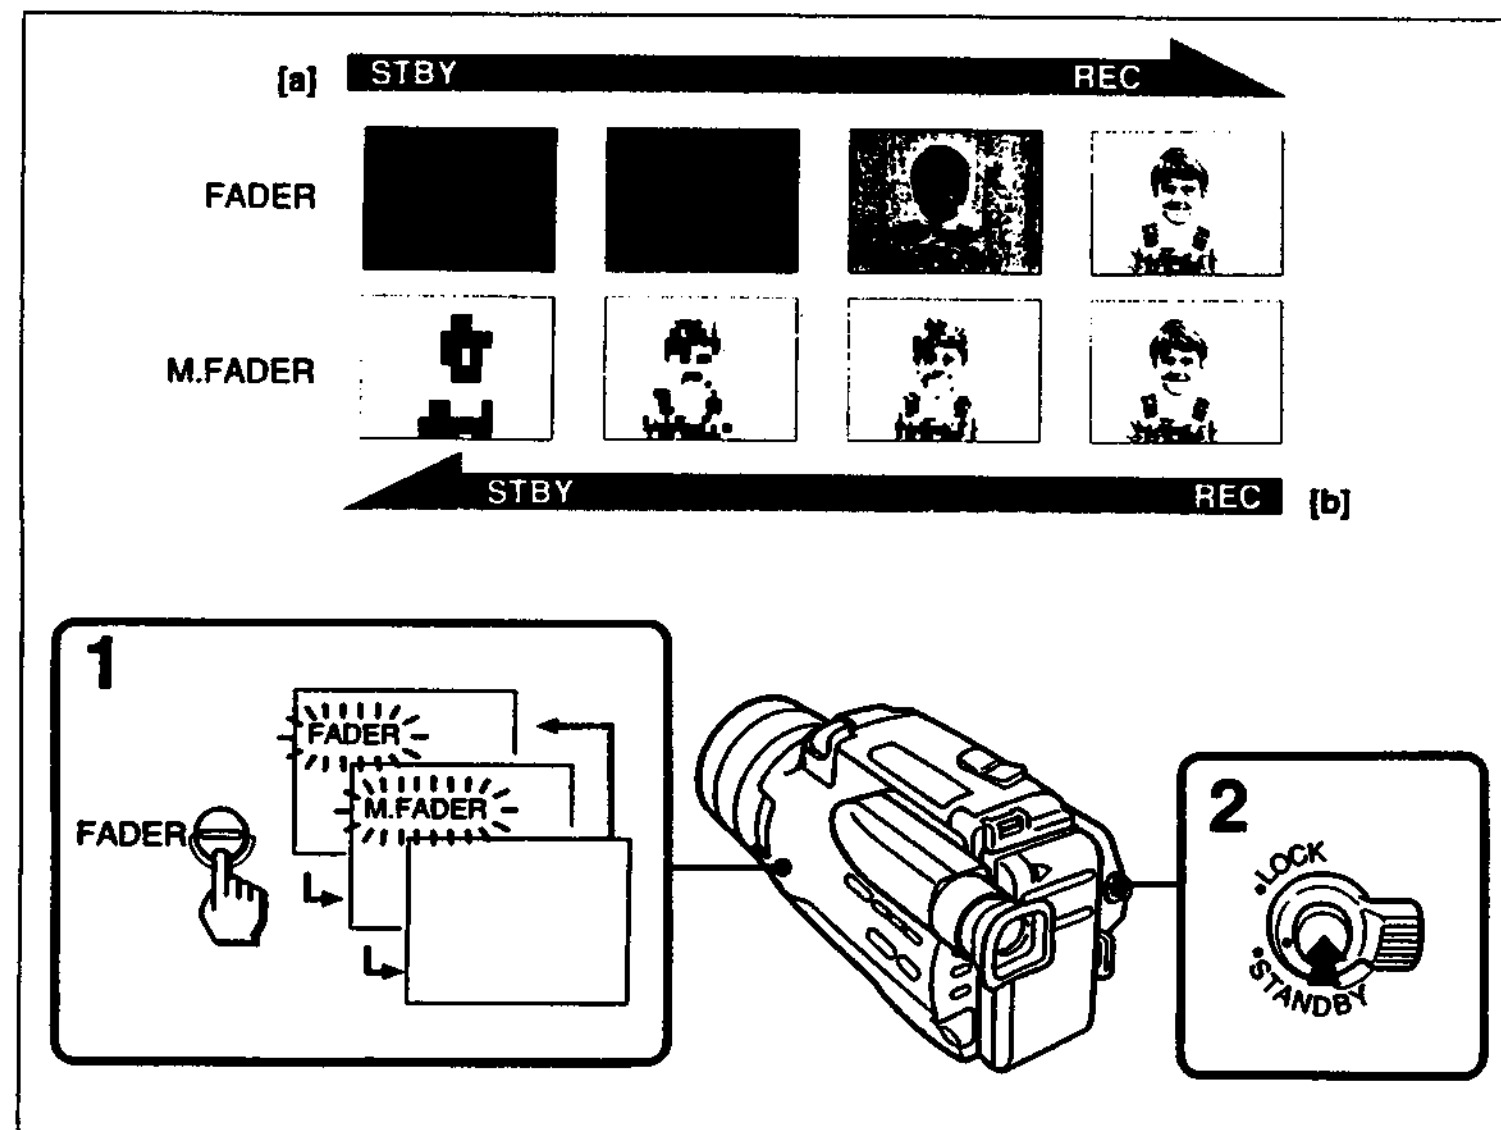

To Cancel the Fade-in/Fade-out Function

Before pressing START/STOP, press FADER until the fade indicator disappears.


When the date/time or age indicator is displayed

The date/time or age indicator does not fade in nor fade out.

Changing the Mode Settings

You can change the mode settings in the menu system to further enjoy the features and functions of the camcorder.

- (1) Press MENU to display the menu in the viewfinder.
- (2) Press \uparrow or \downarrow to select the desired item, then press EXECUTE.
- (3) Press \uparrow or \downarrow to set the desired mode, then press EXECUTE. If you want to change the other modes, repeat steps 2 and 3.
- (4) Press MENU to erase the menu display.

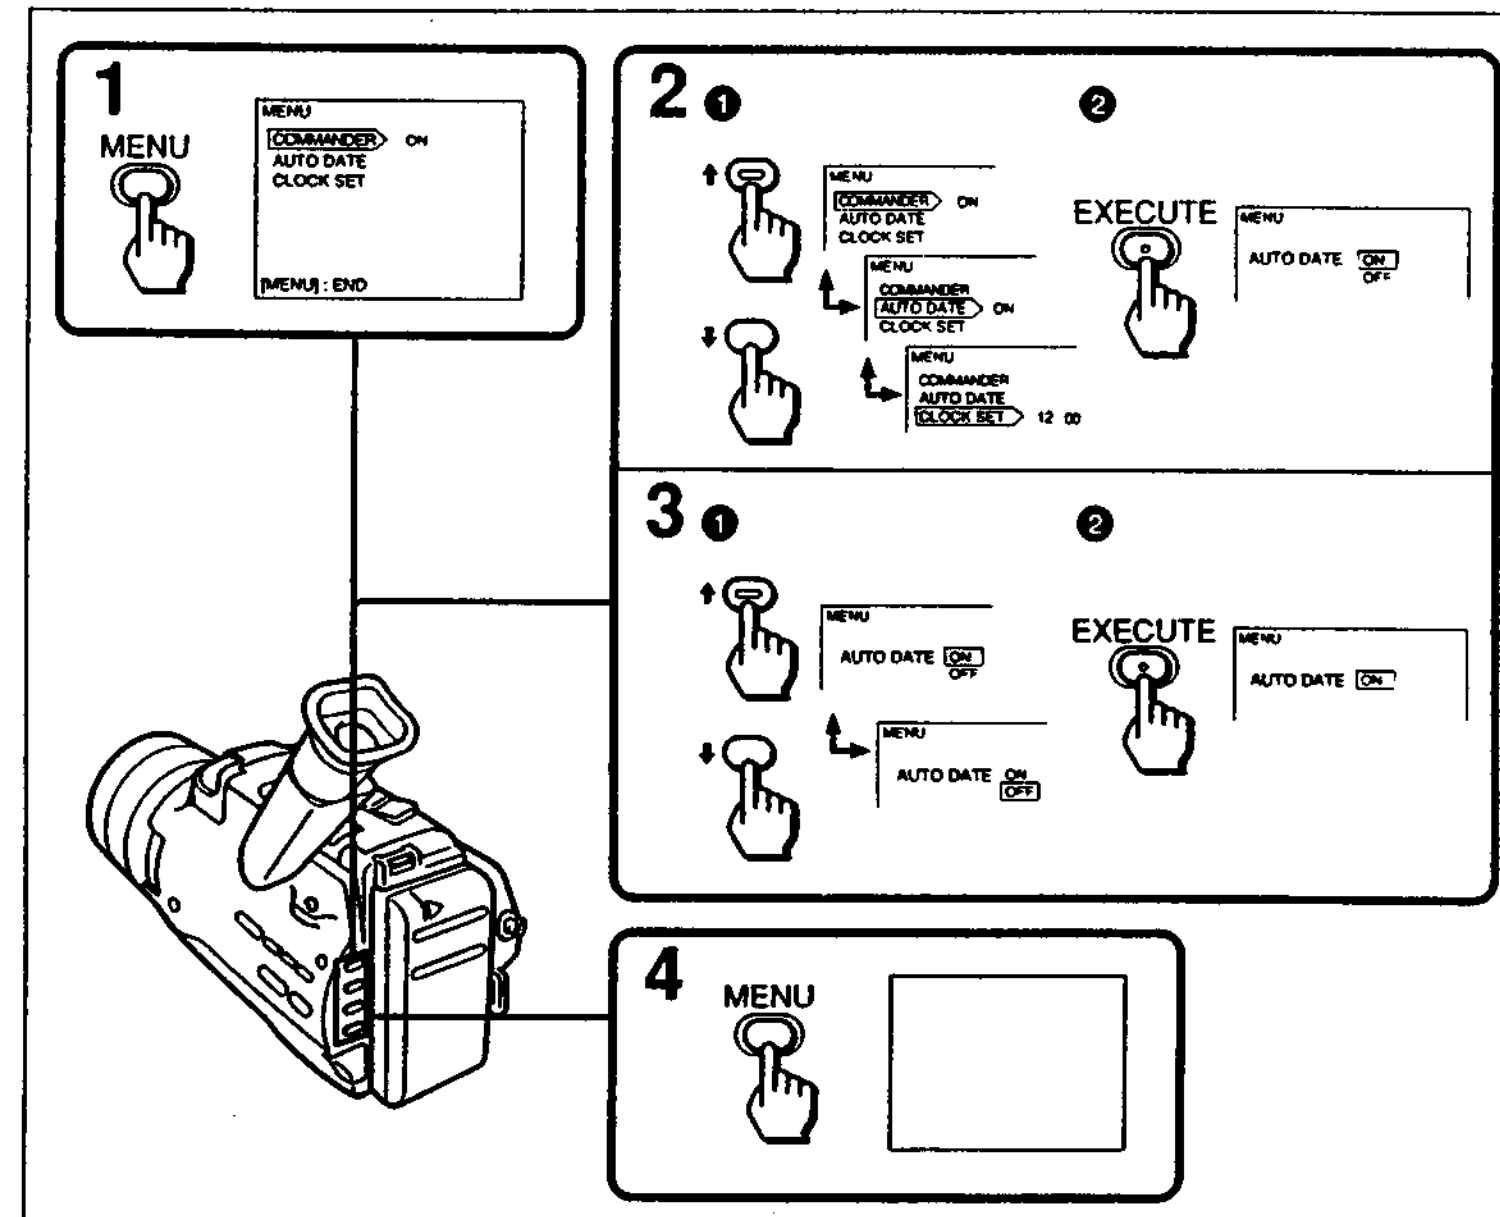

Note on BACK UP

When the BACK UP indicator appears on the menu display, the settings are retained even when the battery is removed, as long as the lithium battery is in place.

Selecting the Mode Setting of Each Item

Item for both PLAYER and CAMERA Mode

COMMANDER <ON/OFF>

- Select ON when using the supplied Remote Commander for the camcorder.
- Select OFF when not using the Remote Commander.

(to be continued)

Changing the Mode Settings

Items for CAMERA Mode only

AUTO DATE <ON/OFF>

- Select ON to record the date for 10 seconds after recording has started.
- Select OFF to not record the date.

CLOCK SET

- Select this item to reset the date or time.

Items for PLAYER Mode only

EDIT <ON/OFF>

- Select ON to minimize picture deterioration when editing.
- Normally select OFF.

Editing onto Another Tape


You can create your own video program by editing with any other 8 mm, Hi8, Hi8V, Hi8V Hi8, VHS, VHS S-VHS, VHS-C, VHS-C S-VHSC, S-VHS, S-VHSC, Betamax or ED Beta ED Betamax VCR that has audio/video inputs.

Before Editing

Connect the camcorder to the VCR using the supplied A/V connecting cable (p. 16).

Set the input selector on the VCR to LINE, if available.

- (1) Set the POWER switch to PLAYER.
- (2) Set EDIT to ON in the menu system (p. 28).

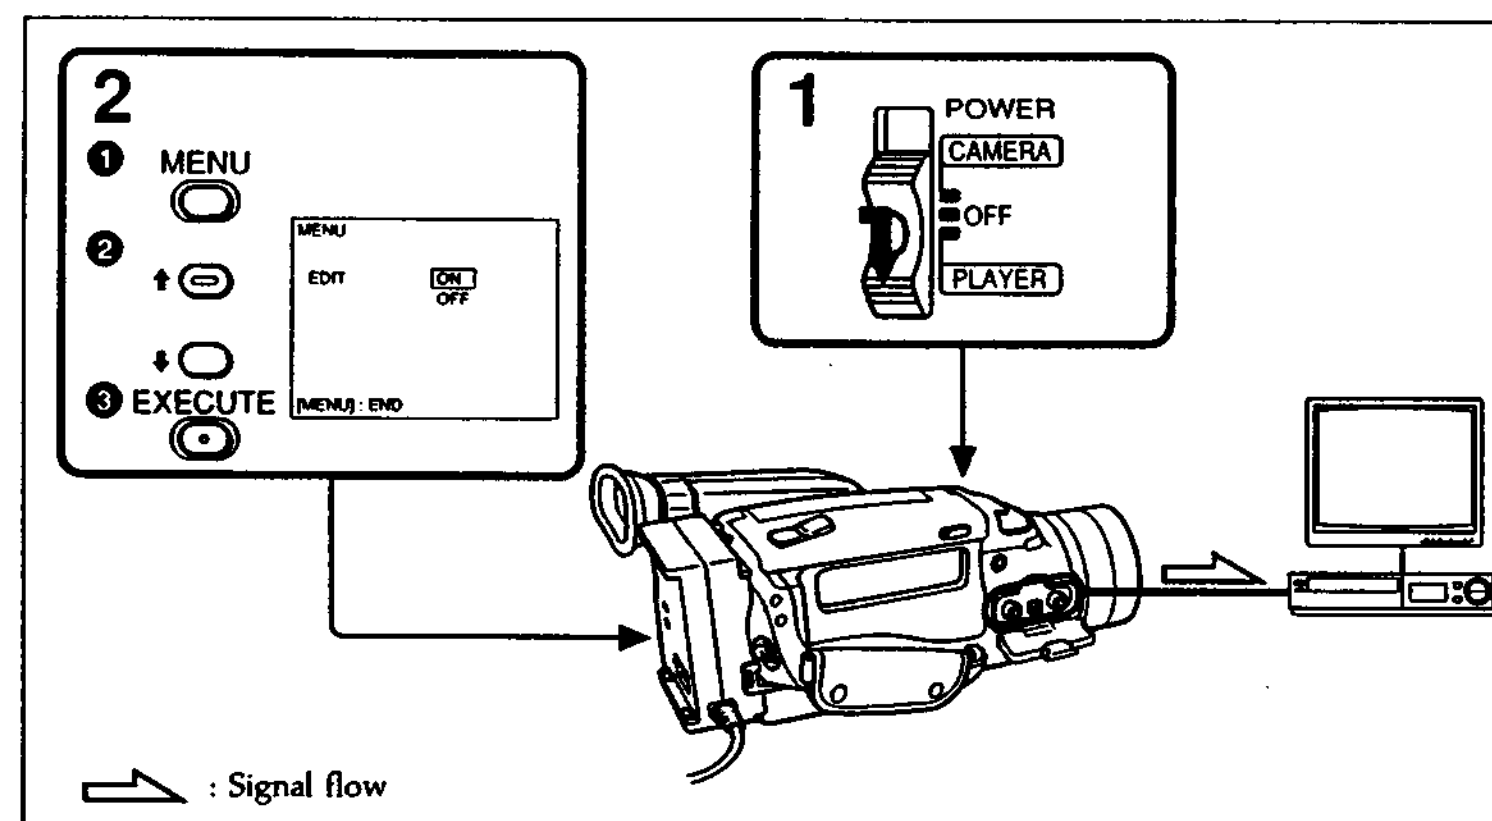

Starting Editing

- (1) Insert a blank tape (or a tape you want to record over) into the VCR, insert your recorded tape into the camcorder.
- (2) Play back the recorded tape on the camcorder until you locate the point where you want to start editing, then set the camcorder in the Playback pause mode.
- (3) On the VCR, locate the recording start point and set the VCR in the recording pause mode.
- (4) Press **||** on the camcorder and VCR simultaneously to start editing.

To Edit More Scenes

Repeat steps 2 to 4.

To Stop Editing

Press **■** on both the camcorder and the VCR.

Use of the EDITSEARCH button


You can play back the tape in normal/reverse direction by holding down EDITSEARCH during Playback pause mode. You can also play back still pictures successively at specific intervals by pressing EDITSEARCH intermittently.


Note on the DISPLAY function

If you have displayed the viewfinder screen indicators on the TV, erase the indicators by pressing DISPLAY on the Remote Commander so that they will not be superimposed on the edited tape.

Additional Information


Changing the Lithium Battery

Your camcorder is supplied with a lithium battery installed. The lithium battery for the camcorder lasts for about 1 year under normal operation. When the battery becomes weak or dead, the  indicator flashes in the viewfinder for about 5 seconds when you set the POWER switch to CAMERA. In this case, replace the battery with a Sony CR2025 or Duracell DL-2025 lithium battery. Use of any other battery may present a risk of fire or explosion.

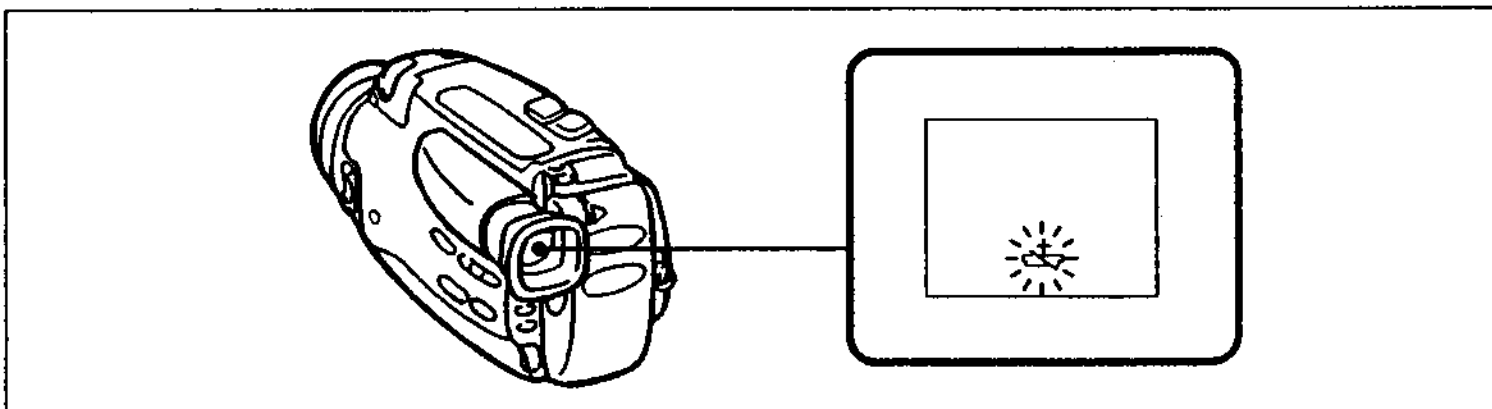

Note on Lithium Battery

The lithium battery has a positive (+) side and a negative (-) side as illustrated. Be sure to insert the lithium battery with the positive side facing out.

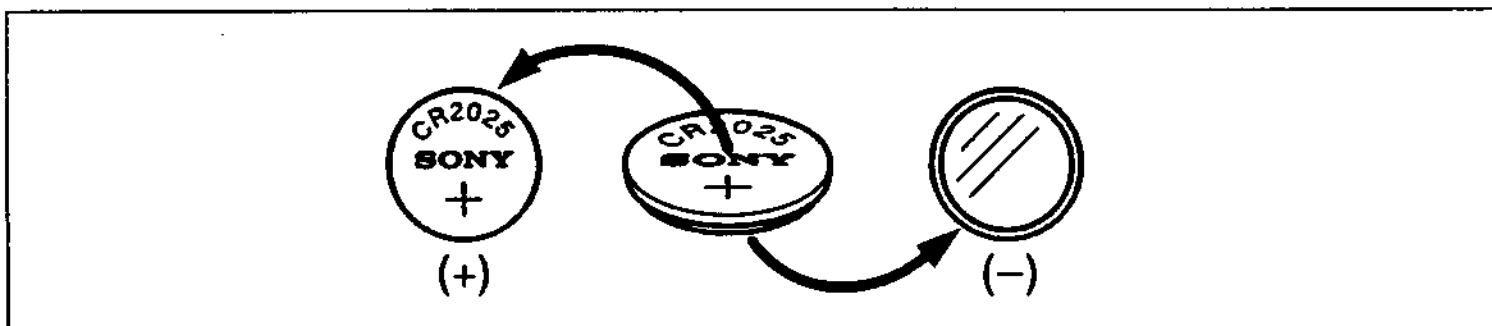

WARNING

The battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.


Caution

Keep the lithium battery out of the reach of children. Should the battery be swallowed, consult a doctor immediately.

Changing the Lithium Battery

When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date, time, age and other BACK UP items in the menu system.


- (1) Open the lid of lithium battery compartment under the grip strap of the camcorder.
- (2) Push the battery down once and pull it out from the holder.
- (3) Install the lithium battery with the positive (+) side facing out. Close the lid.

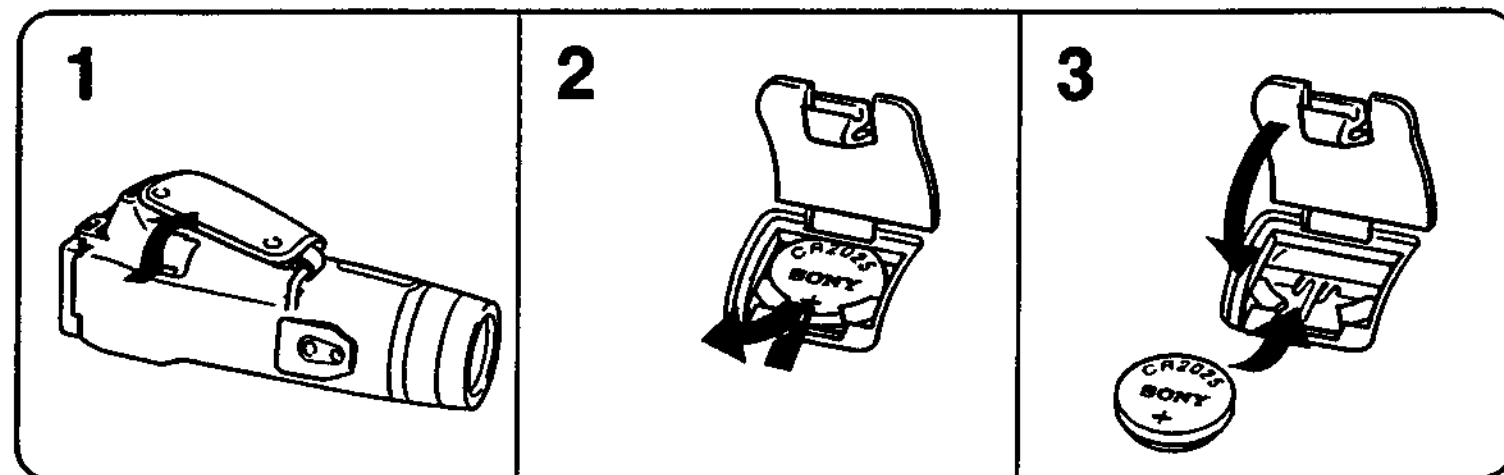

Resetting the Date or Time

You can reset the date or time in the menu system.

- (1) Press MENU to display the menu in the viewfinder.
- (2) Select CLOCK SET, then press EXECUTE.
- (3) Press \uparrow or \downarrow to adjust the year, and then press EXECUTE.
- (4) Press \uparrow or \downarrow to adjust the month, day, hour and minutes, and then press EXECUTE. Note that when you keep \uparrow or \downarrow pressed, the indications in the menu display advance faster.
- (5) Press MENU to erase the menu display.

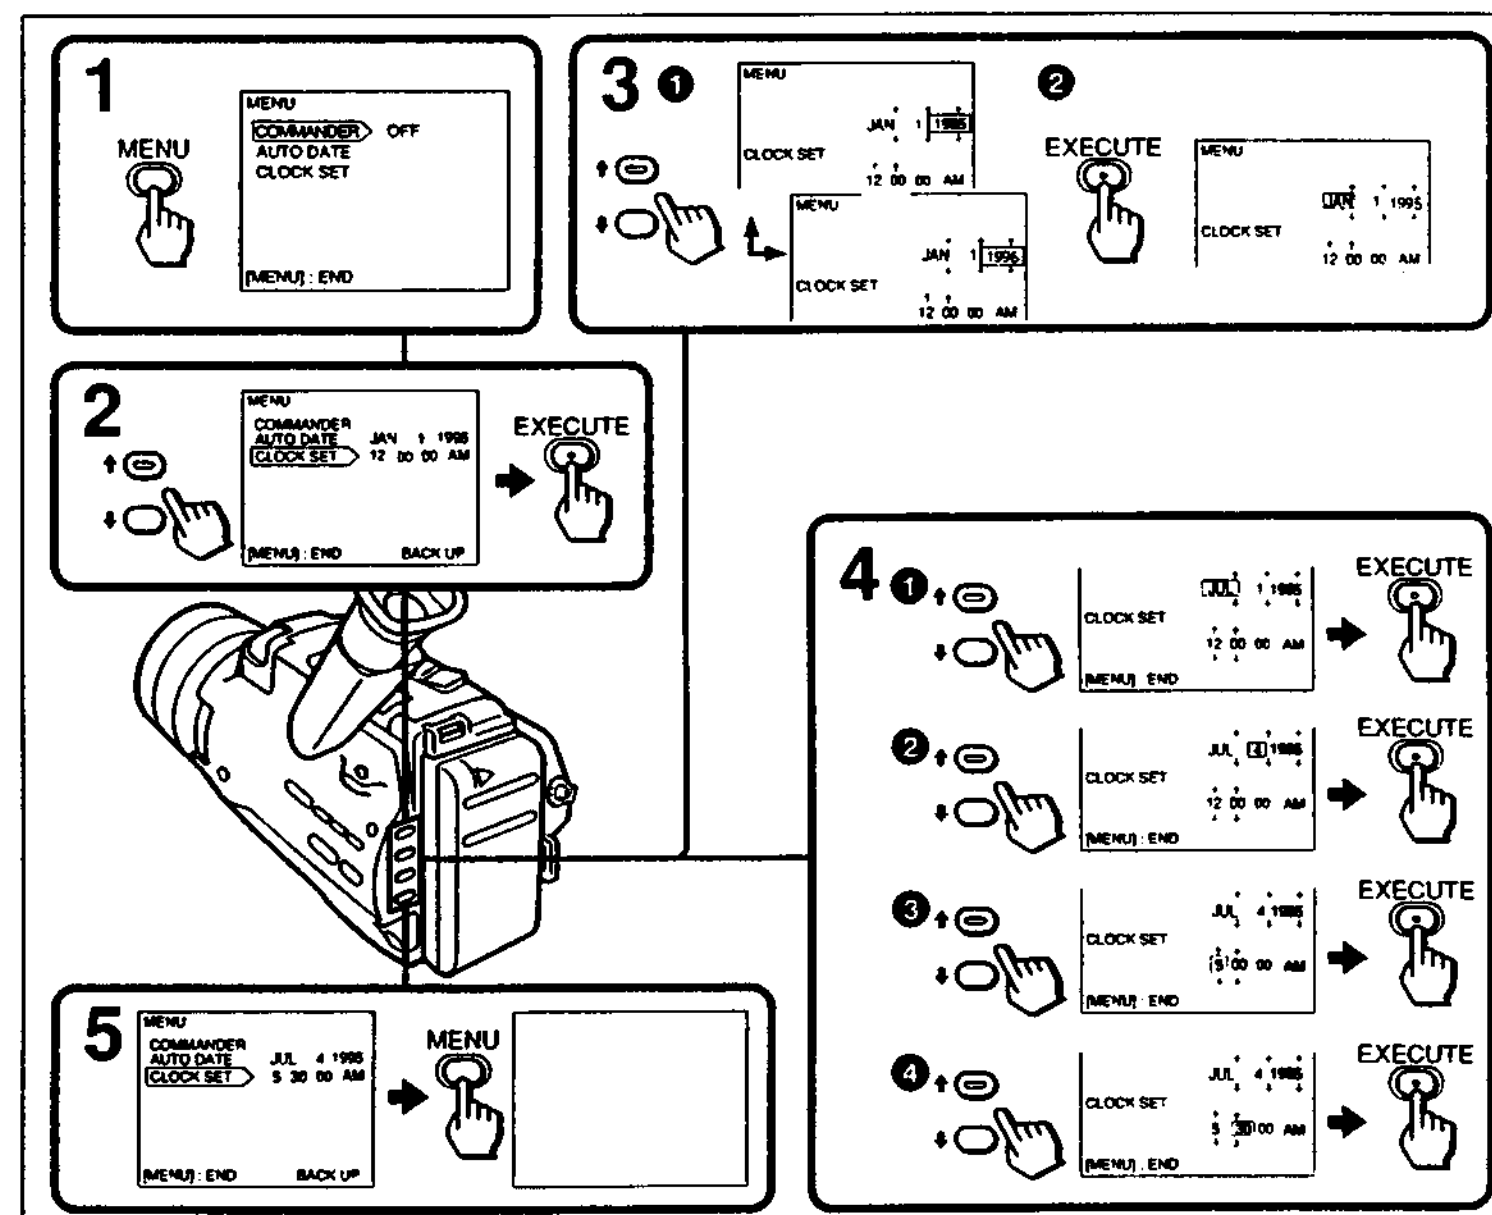

To Check the Preset Date and Time

Press DATE (+) to display the date indicator in the viewfinder.

Press TIME (NEXT) to display the time indicator. When you press the same button again, the indicator goes off.

Note on the setting of the year

When you set the year, each time you press DATE (+) the digits change as follows.

1995 → 1996 → ----- → 2024

Note on the time indicator

The internal clock of this camcorder operates on a 12-hour cycle.

12:00 AM stands for midnight.

12:00 PM stands for noon.

Playback Modes

The playback mode (SP or LP) is selected automatically according to the format in which the tape has been recorded. The quality of the recorded picture in LP mode, however, will not be as good as that in SP mode.

LP (long play) mode

When you play back a tape recorded in LP mode, the LP indicator lights up in the viewfinder. This camcorder cannot record a tape in LP mode.

Foreign 8 mm video

You cannot play back software recorded on a different TV color system. Because the TV color systems differ from country to country, you may not be able to play back foreign pre-recorded software. Refer to page 39 to check the TV color system of foreign countries.

Tips for Using the Battery Pack

This section shows you how you can get the most out of your battery pack.

Preparing the Battery Pack

Always Carry Additional Batteries

Have sufficient battery pack power to do 2 to 3 times as much recording as you have planned.

Battery Life is Shorter in Cold Environment

Battery efficiency is decreased and the battery will be used up more quickly if you are recording in a cold environment.

To Save Battery Power

Turn STANDBY on the camcorder down when not recording to save battery power (p. 34) [a].

A smooth transition between scenes can be made even if recording is stopped and started again.


While you are positioning the subject, selecting an angle, or looking through the viewfinder lens, the lens moves automatically and the battery is used. The battery is also used when a tape is inserted or removed.


Tips for Using the Battery Pack

When to Replace the Battery Pack

While you are using your camcorder, the remaining battery indicator in the viewfinder decreases gradually as battery power is used up.

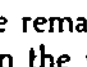

When the remaining battery indicator reaches the lowest point, the  indicator appears and starts flashing in the viewfinder (p. 34) [b].

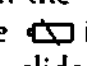When the  indicator in the viewfinder changes from slow flashing to rapid flashing while you are recording, slide the POWER switch to OFF on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain a smooth transition between scenes after the battery pack is replaced.

Note on the remaining battery indicator

The remaining battery indicator of the camcorder may indicate a different remaining capacity from that of the battery pack with its own indicator (not supplied). The indicator on the battery pack is more accurate.

Notes on the Rechargeable Battery Pack

The Battery Pack Heats Up

During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack. This is not cause for concern.

Battery Pack Care

- Remove the battery pack from the camcorder after using the battery pack, and keep it in a cool place. When the battery pack is attached to the camcorder, a small amount of current flows to the camcorder even if the POWER switch is set to OFF, which shortens battery life.
- The battery pack is always discharging even when it is not in use after charging. Therefore, you should charge the battery pack right before using the camcorder.

How to Use the Switch on the Battery Pack

This switch is provided so that you can mark the charged battery pack. Set the switch to the "no mark" position when charging is completed. Set the switch to the "red mark" position when the battery is used up (or in whichever direction you want to remind yourself) (p. 34) [c].

The Life of the Battery Pack

The battery pack can be fully charged and discharged about 500 times under normal temperatures. If the battery indicator flashes rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

Charging Temperature

You should charge batteries at temperatures from 50°F to 86°F (from 10°C to 30°C). Lower temperature require a longer charging time.

Sony Batteries are Recommended

Use of non-Sony batteries may damage your Handycam camcorder.


Tips for Using the Battery Pack

Notes on Charging

A Brand-new Battery Pack

A brand-new battery pack is not charged. Before using the battery pack, charge it completely.

Before Recharging a Used Battery Pack

- Make sure to use up the battery before recharging.
- If recording is completed before the  indicator appears in the viewfinder, you should remove the tape, slide the POWER switch to CAMERA, turn STANDBY up, and leave the camcorder until the battery indicator flashes rapidly.
- When you use the AC-S10 power adaptor or the BC-S10 portable battery charger, you can use the discharging function.
- **Charging a usable battery pack causes a lowering of battery capacity. Battery capacity can be recovered if you fully discharge and charge the battery pack again.**

After Long Storage


Recharge the battery pack after a long period of storage. If the battery pack is charged fully but not used for a long time (about 1 year), it becomes discharged. Charge it again, but in this case the battery life will be shorter than normal. After several charging and discharging cycles, the battery life will recover its original capacity.

Notes on the Terminals

If the terminals (metal parts on the back) are not clean, the battery duration will be shortened. When the terminals are not clean or when the battery pack has not been used for a long time, repeatedly install and remove the battery pack. This improves the contact condition. Also, wipe the + and - terminals with a soft cloth or paper.

Be Sure to Observe the Following

- To prevent an accident caused by a short circuit, do not allow metal objects such as a necklace to touch the battery terminals. When carrying the battery pack, attach the terminal cover [d].
- Keep the battery pack away from fire.
- Keep the battery pack dry.
- Do not open nor convert the battery pack.
- Do not expose the battery pack to any mechanical shock.

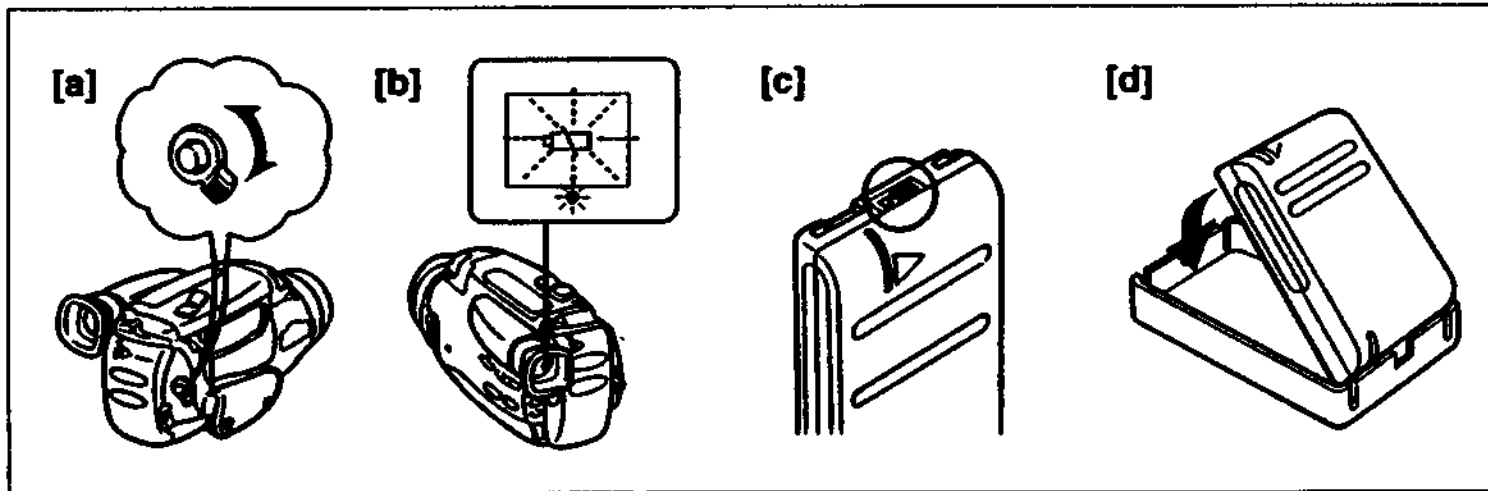




Maintenance Information and Precautions


Moisture Condensation

If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the unit may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with moisture sensors. However, take the following precautions.



Inside the Camcorder

When the  and  indicators flash in the viewfinder, moisture has condensed inside the camcorder. If this happens, no other functions except for tape ejection will work.


Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least one hour. The camcorder can be used again if the  indicator does not appear when the power is turned on again.

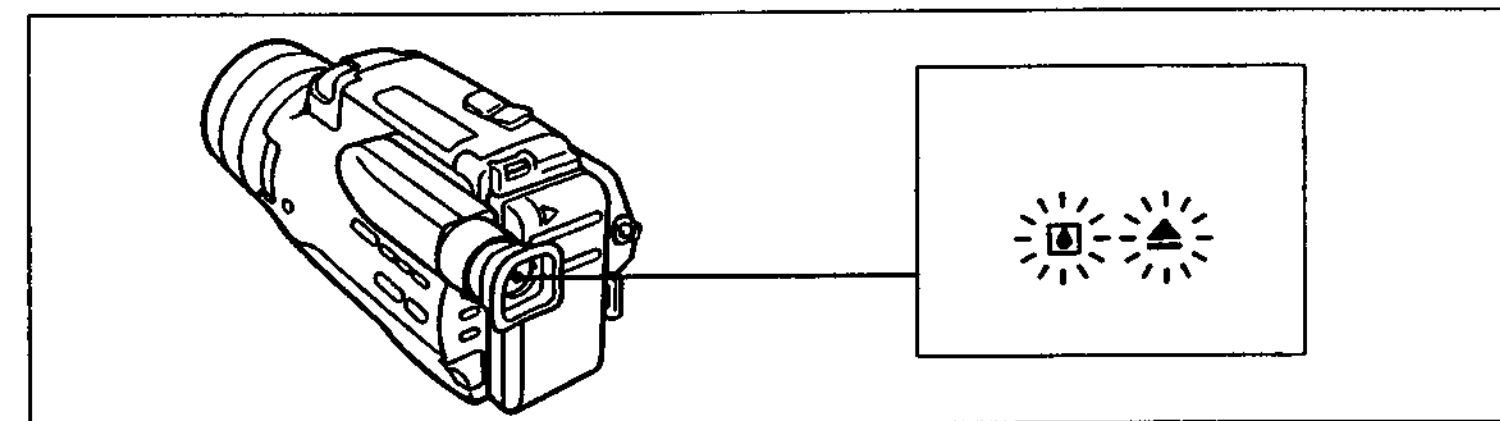

On the Surface of the Tape

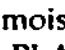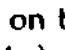If there is moisture on the surface of the tape, when you insert the cassette and press a tape transport button ( PLAY, etc.), the  indicator in the viewfinder flashes.

In this case, no other functions except for tape ejection will work.

Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least one hour. The camcorder can be used again if the  indicator does not appear when you insert the cassette and press one of the tape transport buttons.

On the Lens

If moisture condenses on the lens, no indicator appears, but the picture becomes dim. Turn off the power and do not use the camcorder for about one hour.

How to Prevent Moisture Condensation

When bringing the camcorder from a cold place to a warm place, put the camcorder in a plastic bag and allow it to adapt to room conditions over a period of time.


(1) Be sure to tightly seal the plastic bag containing the camcorder.

(2) Remove the bag when the air temperature inside it has reached the temperature surrounding it (after about 1 hour).

Maintenance Information and Precautions

Video Head Cleaning

To ensure normal recording and clear pictures, clean the video heads often. When the \otimes indicator in the viewfinder flashes or playback pictures are "noisy" or hardly visible, the video heads may be dirty.

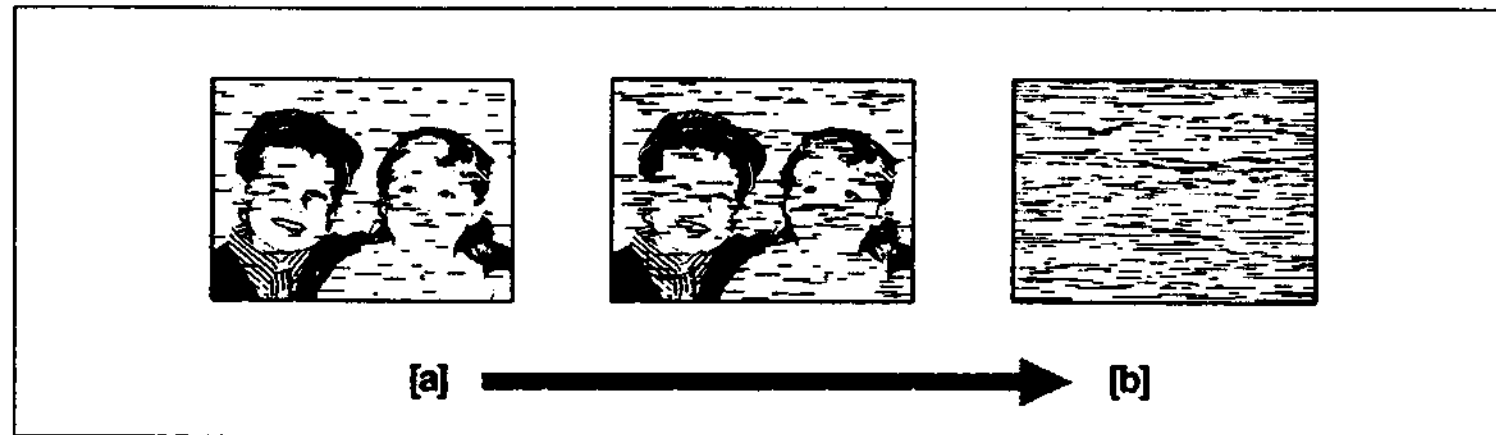

[a] Slightly dirty
[b] Very dirty

If this happens, clean the video heads with the Sony V8-25CLH cleaning cassette (not supplied). After checking the picture, if it is still "noisy," repeat the cleaning. (Do not repeat cleaning more than 5 times.)

Caution

Do not use a commercially available wet-type cleaning cassette. It may damage the video heads.


Note

If the V8-25CLH cleaning cassette is not available in your area, consult your nearest Sony dealer.

Removing Dust from Inside the Viewfinder


When Using a Monochrome Viewfinder — For CCD-FX240

- (1) While holding down the switch on the viewfinder barrel, turn the eyecup in the direction of the arrow and pull it out.
- (2) Remove the small lens from inside the viewfinder.
- (3) Clean the surface with a commercially available blower.

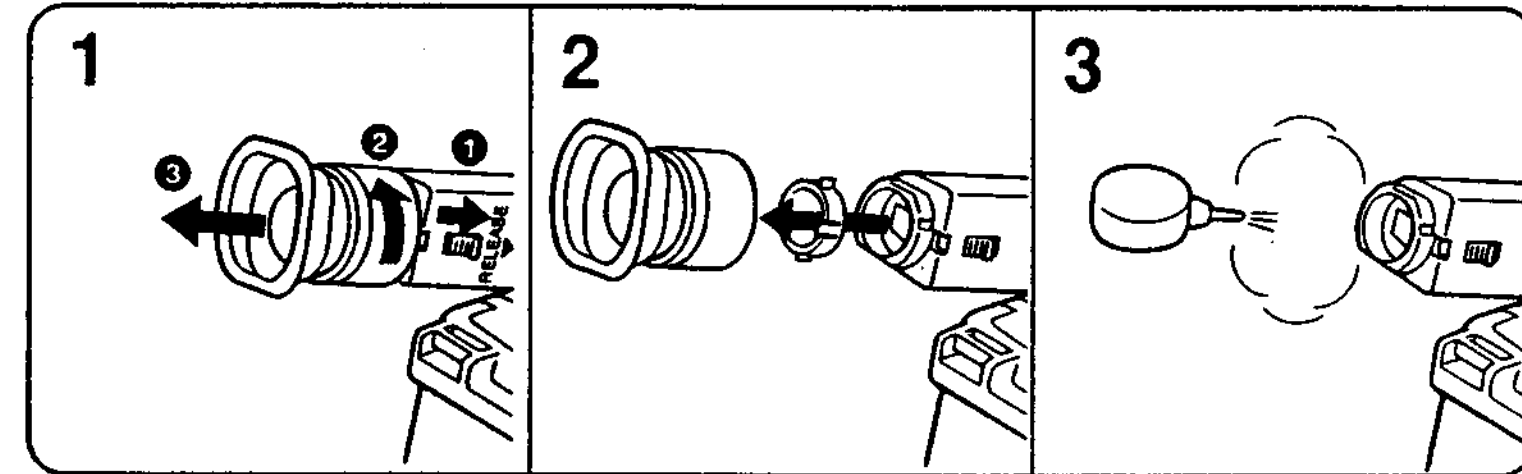


To Reattach the Eyecup

- (1) Replace the small lens inside the viewfinder. Be sure to replace it with the correct side.
- (2) Align the groove on the eyecup with the \bullet mark on the barrel.
- (3) Turn the eyecup clockwise.

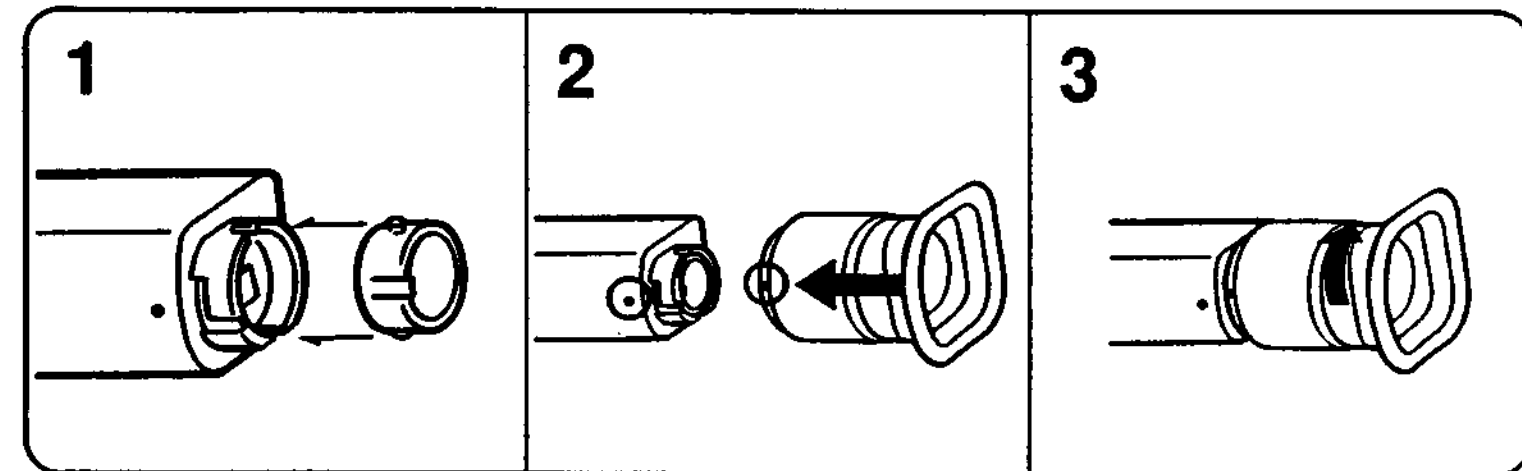

When Using a Color Viewfinder — For CCD-FX340

- (1) While pressing down the hook, slide the viewfinder barrel in the direction of the arrow and remove it from the viewfinder.
- (2) Clean the surface with a commercially available blower.

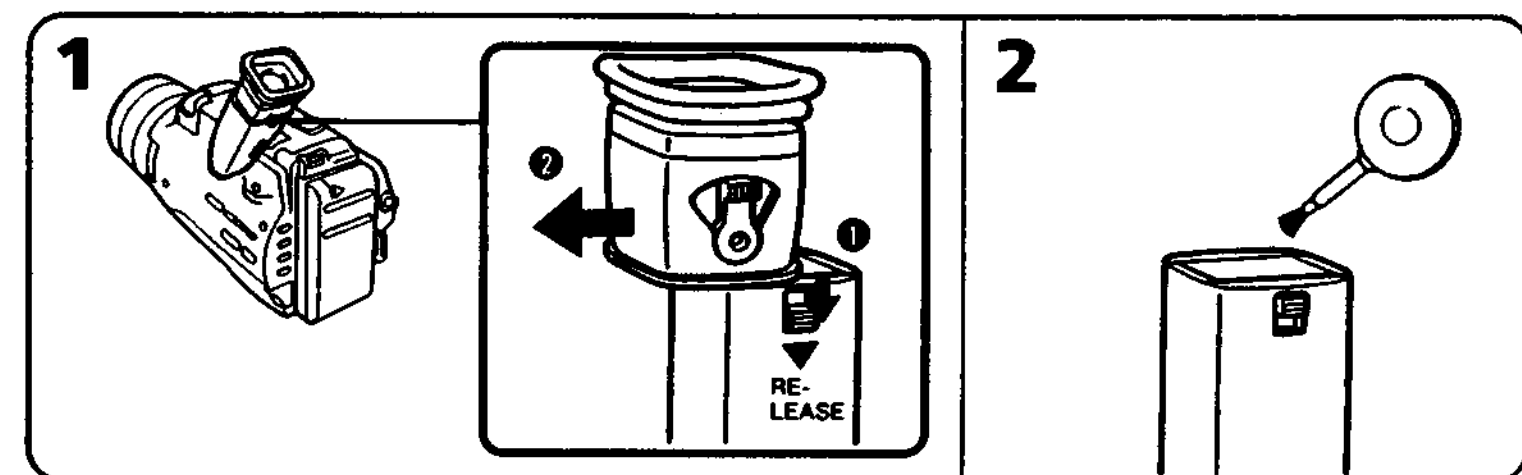

To reattach the viewfinder barrel

Slide the viewfinder barrel in the opposite direction of the arrow in the above illustration.

Maintenance Information and Precautions

Precautions

Camcorder Operation

- Operate the camcorder on 6.0 V (battery pack) or 7.5 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this manual.
- Should any solid object or liquid get inside the casing, unplug the camcorder and have it checked by Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch set to OFF when not using the camcorder.
- Do not wrap up the camcorder and operate it since heat may build up internally.
- Keep the camcorder away from strong magnetic fields or mechanical vibration.

On Handling Tapes

Do not insert anything in the small holes on the rear of the cassette. These holes are used to sense the type, thickness of tape, if the tab is out or in, etc.

Camcorder Care

- When the camcorder is not to be used for a long time, disconnect the power source and remove the tape. Periodically turn on the power, operate the camera and player sections and play back a tape for about 3 minutes.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on it, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.

AC Power Adaptor

Charging

- **Repeated charging while some capacity remains causes a lowering of battery capacity. However, the original battery capacity can be recovered if you use the battery completely and charge it fully again.**
- Charge the battery pack on a flat surface without vibration.
- The battery pack will get hot during charging. This is normal.

Others

- Model for the USA and Canada: One blade of the plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- Unplug the unit from the wall (mains) outlet when not in use for a long time. To disconnect the cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Do not bend the AC power cord forcibly, or put a heavy object on it. This will damage the cord and may cause a fire or an electrical shock.
- Be sure that nothing metallic comes into contact with the metal parts of the connecting plate. If this happens, a short may occur and the unit may be damaged.
- Always keep the metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.
- The unit becomes warm while in use. This is normal.
- Do not place the unit in locations that are:
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Vibrating

If any difficulty should arise, unplug the unit and contact your nearest Sony dealer.


Using Your Camcorder Abroad

Each country has its own electric and TV color systems. Before using your camcorder abroad, check the following points.

Power Sources

You can use your camcorder in any country with the supplied AC power adaptor within 110 V to 240 V AC, 50/60 Hz.

Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet [b].

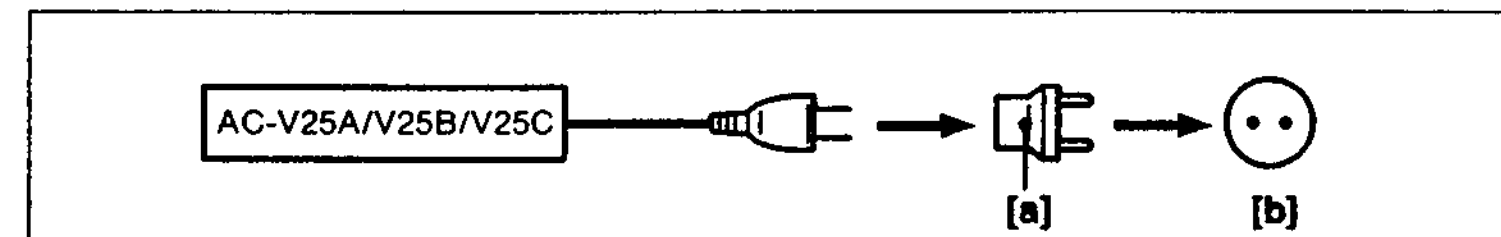

Difference in Color Systems

This camcorder is an NTSC system based camcorder. If you want to view the playback picture on a TV, it must be an NTSC system based TV or a PAL-M system based TV with an NTSC/PAL-M transcoder.

Check the following list.

NTSC system countries

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

PAL system countries

Australia, Austria, Belgium, China, Denmark, Finland, former West Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Spain, Sweden, Switzerland, Thailand, etc.

PAL-M system country

Brazil


PAL-N system countries

Argentina, Paraguay, Uruguay

SECAM system countries


Bulgaria, France, Guiana, Hungary, Iran, Iraq, Monaco, Poland, former Soviet Union, etc.

Identifying the Parts

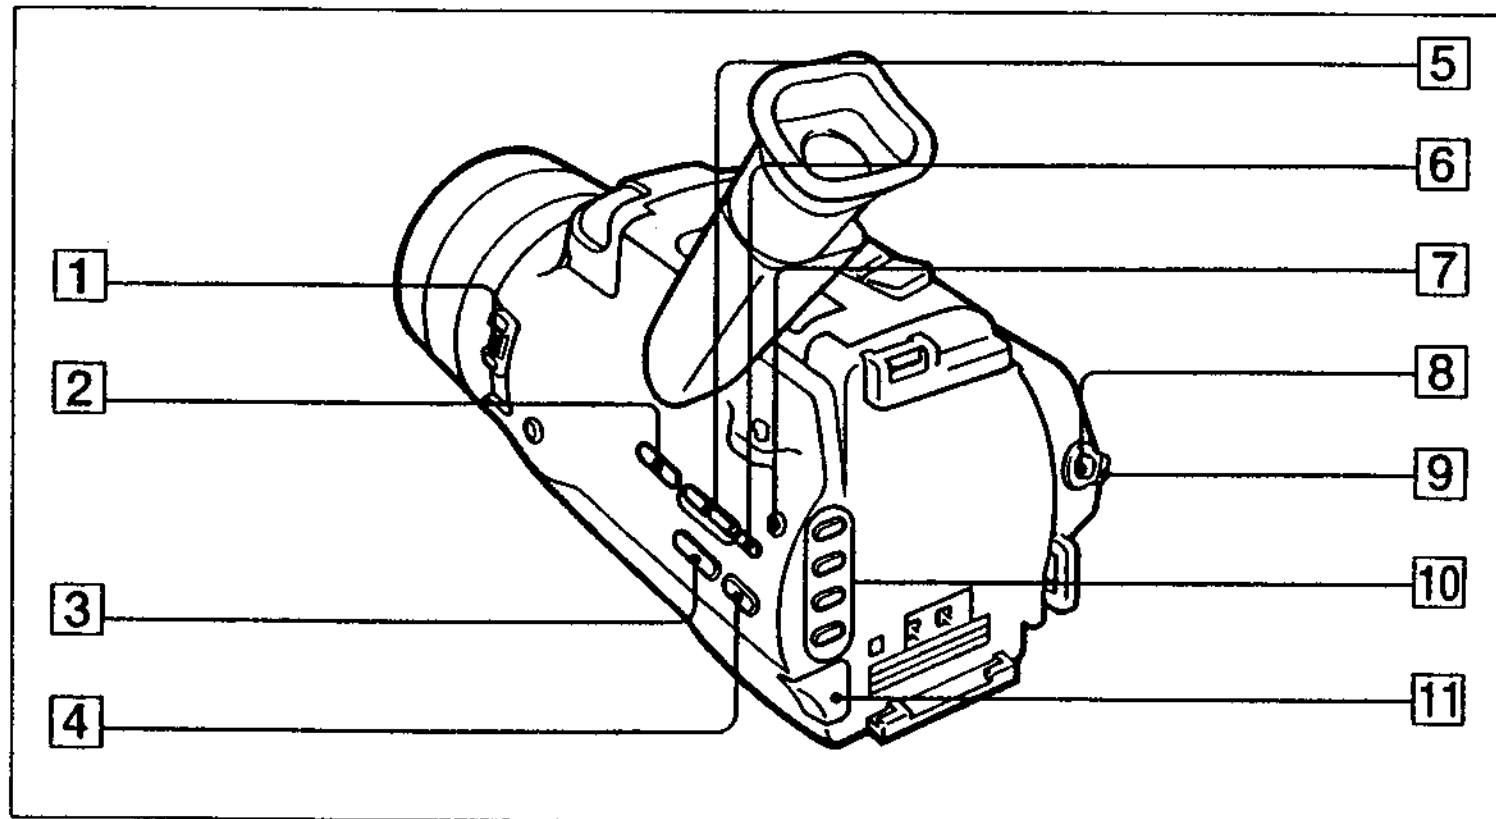


- | | |
|---------------------------------------------------|--------------------------------------------|
| 1 POWER switch (p. 11, 17) | 6 AGE/EVENT button (p. 21) |
| 2 EDITSEARCH button (p. 15) | 7 COUNTER RESET button (p. 12) |
| 3 PROGRAM AE button (p. 25) | 8 START/STOP button (p. 11) |
| 4 BACK LIGHT button (p. 24) | 9 STANDBY switch (p. 11) |
| 5 DATE (+) and TIME (NEXT) buttons (p. 20) | 10 Menu operation buttons (p. 27) |
| | 11 BATT (battery eject) knob (p. 8) |

Identifying the Parts

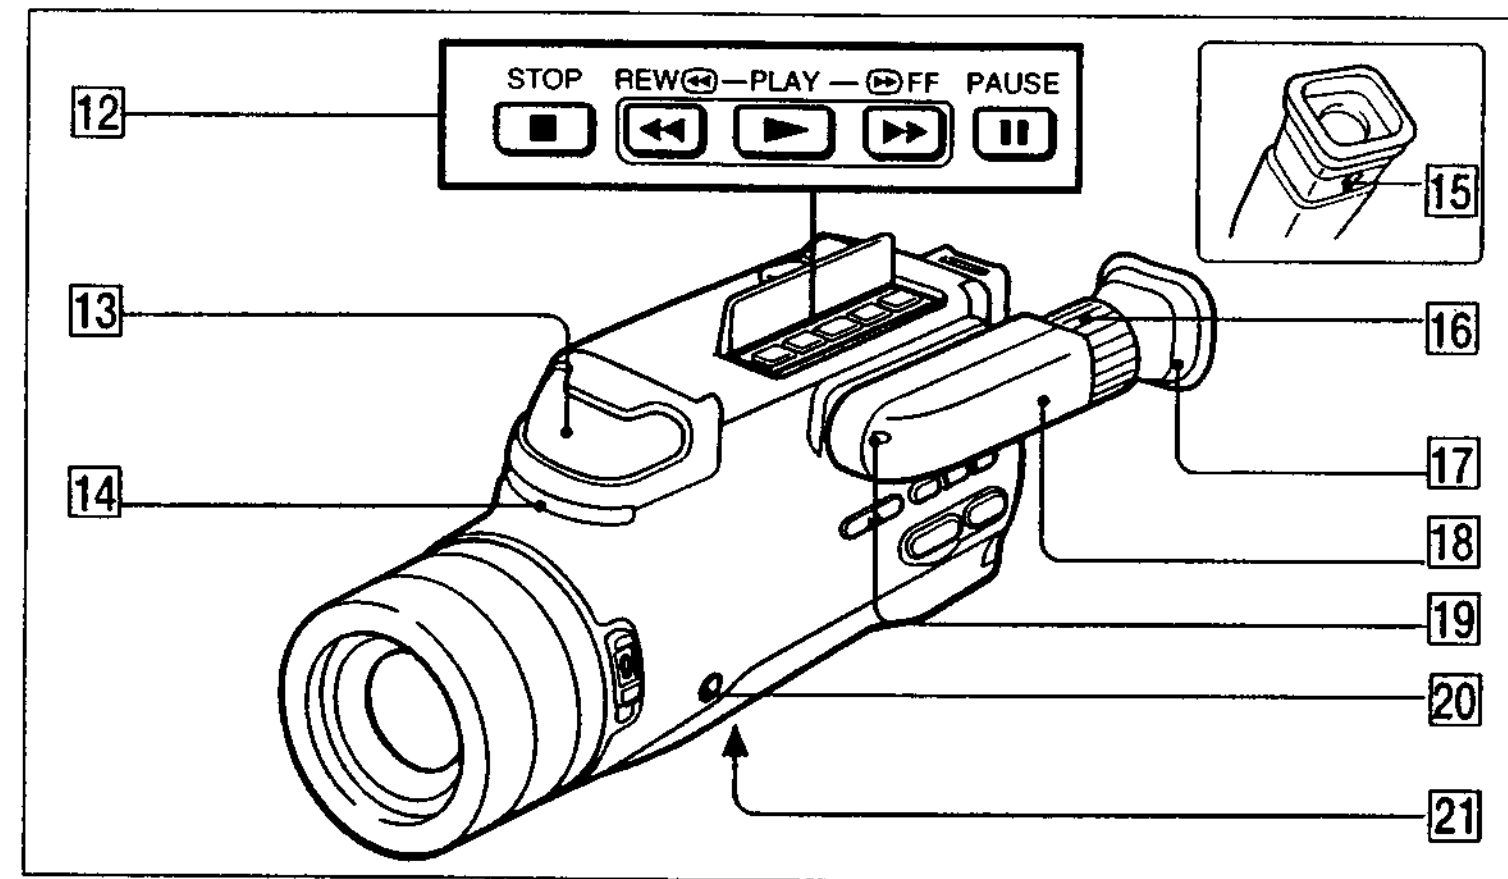

- | | |
|----------------------------------------------------------------|---------------------------------------------------------------|
| 12 Tape transport buttons (p. 17) | 16 Viewfinder lens adjustment ring (CCD-FX240) (p. 10) |
| ■ (stop) | 17 Eyecup |
| ◀ REW (rewind) | 18 Viewfinder (p. 10) |
| ▶ (playback) | 19 Camera recording/battery lamp |
| ▶▶ FF (fastforward) | 20 FADER button (p. 26) |
| PAUSE | 21 Tripod receptacle (p. 14) |
| 13 Built-in microphone | |
| 14 Remote sensor (p. 50) | |
| Aim the Remote Commander here for remote control. | |
| 15 Viewfinder lens adjustment lever (CCD-FX340) (p. 10) | |


Additional Information

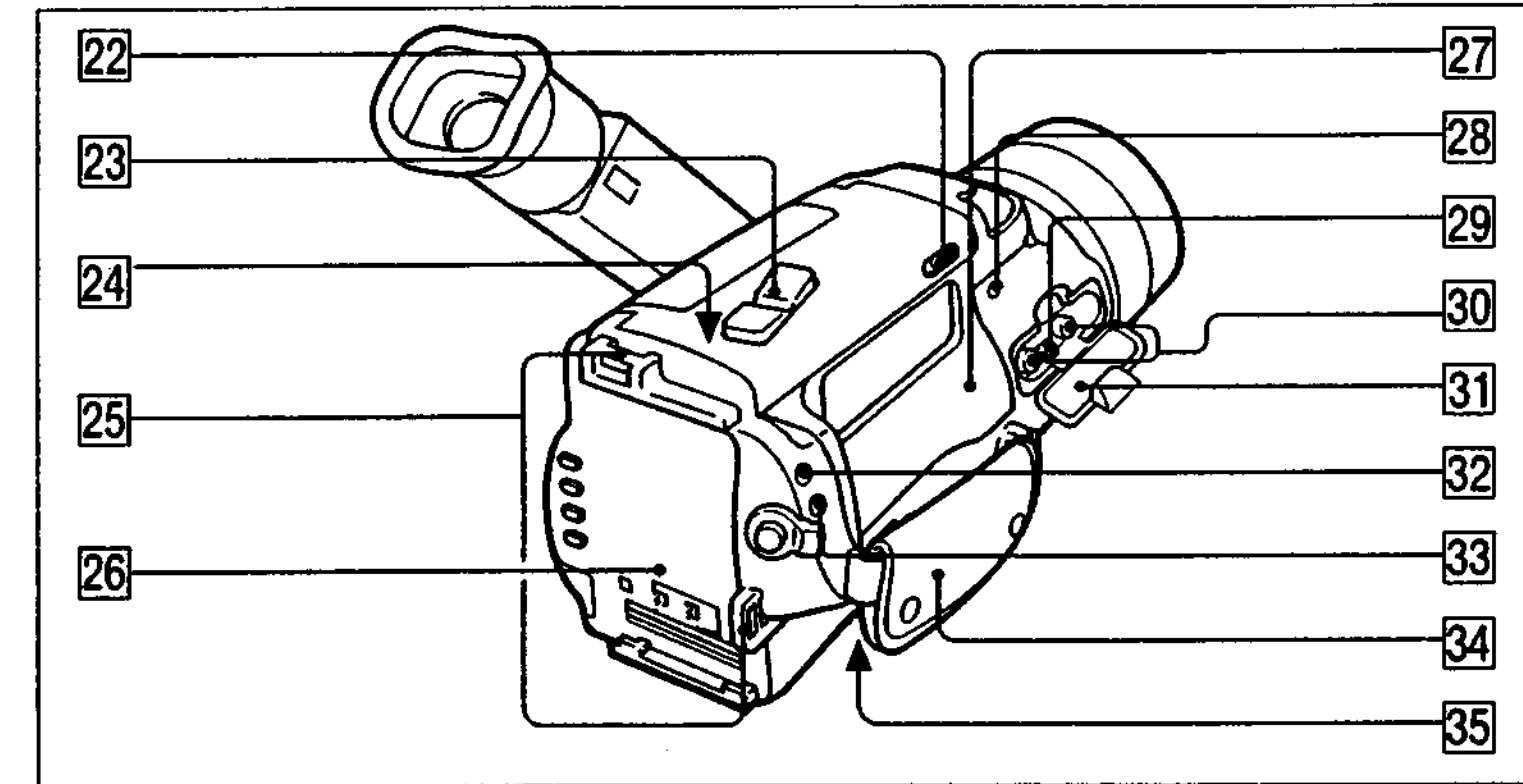

- | | |
|-------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 22 Lid lock (p. 9) | 30 Audio/Video output jacks (p. 16) |
| 23 Power zoom button (p. 13) | 31 Jack cover |
| 24 Eject button (under the cover) (p. 9) | 32 LANC control jack
<small> stands for Local Application Control Bus System. The control jack is used for controlling the tape transport of video equipment and peripherals connected to it. This jack has the same function as the jack indicated as CONTROL L or REMOTE.</small> |
| 25 Hooks for shoulder strap (See below.) | 33 (Earphone) jack |
| 26 Battery mounting surface (p. 8) | 34 Grip strap (p. 14) |
| 27 Cassette compartment (p. 9) | 35 Lithium battery compartment (p. 30) |
| 28 MIC jack (PLUG IN POWER)
Connect an optional external microphone. This jack also accepts a "plug-in-power" microphone. | |
| 29 RFU DC OUT (RFU adaptor DC output) jack (p. 16) | |

Attaching the Shoulder Strap


Attach the supplied shoulder strap to the hooks for the shoulder strap (**25**).

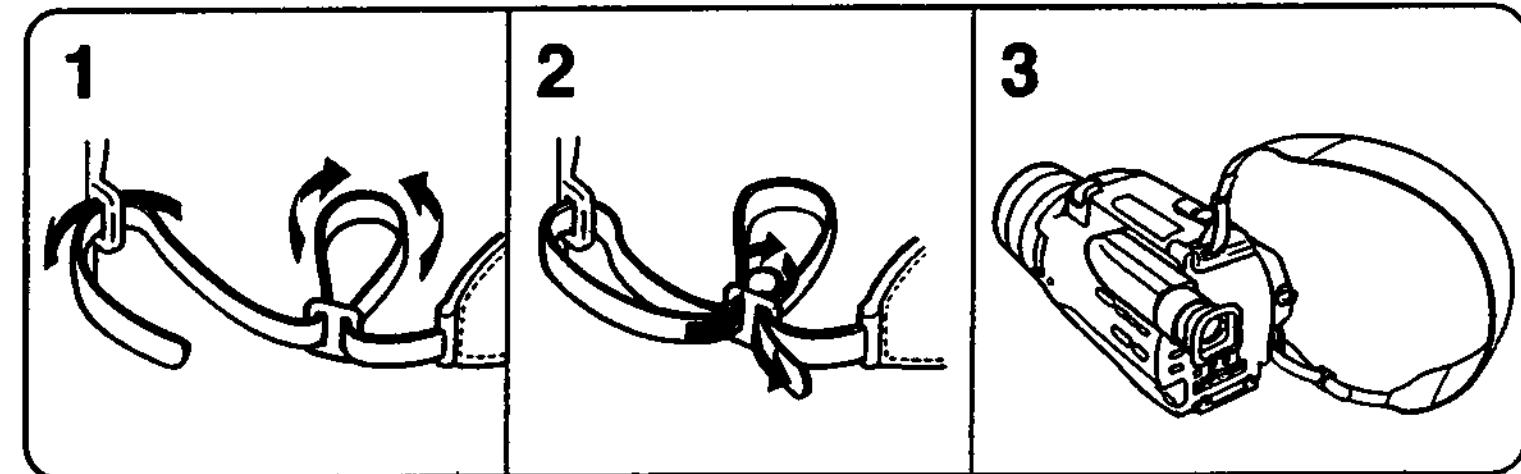

Identifying the Parts

Operation Indicators

For details on each indicator, refer to the pages indicated in the parentheses.

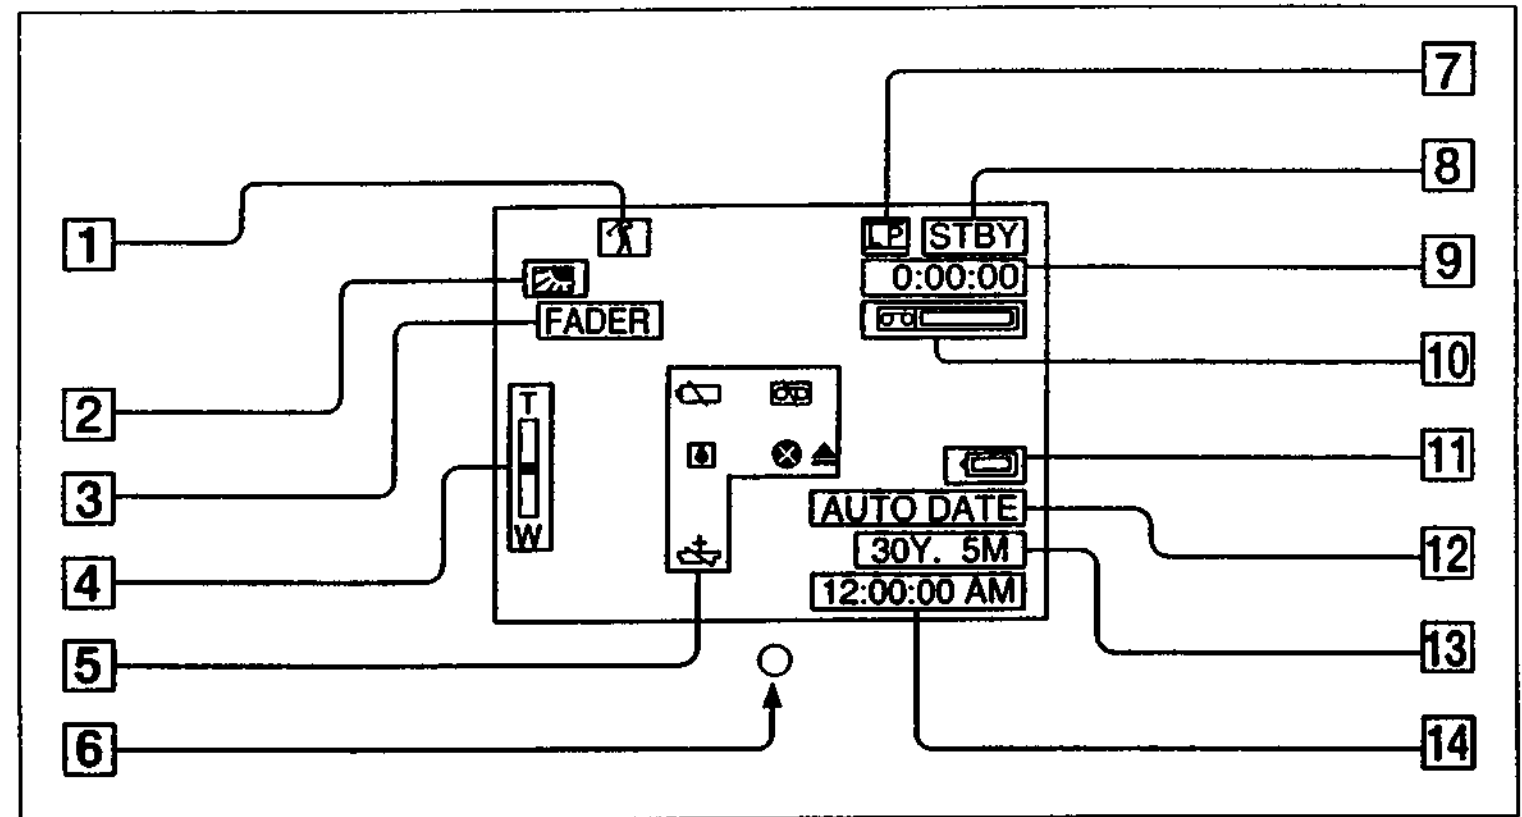


- | | |
|------------------------------------------------------------------|-------------------------------------------------------|
| 1 PROGRAM AE indicator (p. 25) | 9 Tape counter (p. 12) |
| 2 Back Light indicator (p. 24) | 10 Remaining tape indicator
 |
| 3 FADER indicator (p. 26) | 11 Remaining battery indicator (p. 33, 51)
 |
| 4 Power zoom indicator (p. 13) | 12 AUTO DATE indicator (p. 11, 12) |
| 5 Warning indicators (p. 51) | 13 AGE/EVENT indicator (p. 21) |
| 6 Recording lamp/Battery lamp | 14 Date or Time (p. 20) |
| 7 Lights up when playing back a tape recorded in LP mode. | |
| 8 Tape transport mode (p. 11) | |

Additional Information

Remote Commander

The buttons that have the same name on the Remote Commander as on the camcorder function identically.

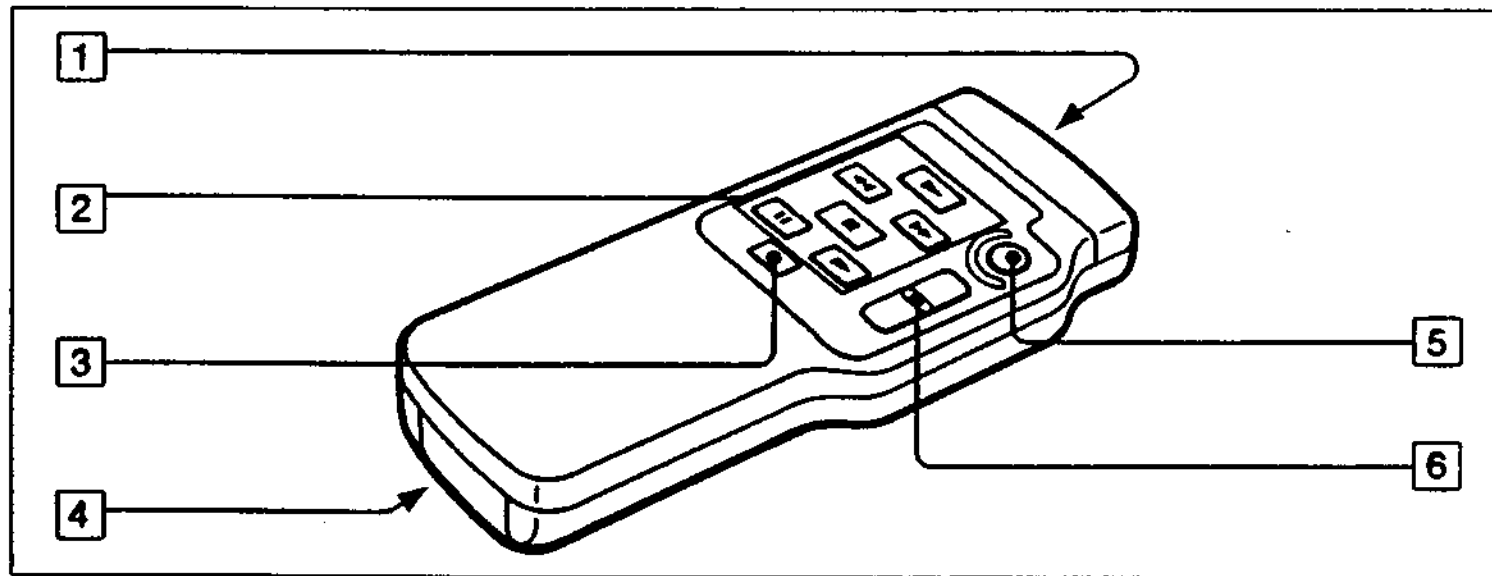


- | | |
|-------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| 1 Transmitter
Point toward the remote sensor to control the camcorder after turning on the POWER switch on the camcorder. | 4 Size AA (R6) battery holder |
| 2 Tape transport buttons | 5 START/STOP button |
| 3 DISPLAY button | 6 Power zoom button
The zooming speed is unchangeable in the Remote Commander. |

Preparing the Remote Commander

To use the Remote Commander, you must insert two size AA (R6) batteries. Use the supplied size AA (R6) batteries.

- (1) Remove the battery cover from the Remote Commander.
- (2) Insert both of the size AA (R6) batteries with correct polarity.
- (3) Put the battery cover back onto the Remote Commander.

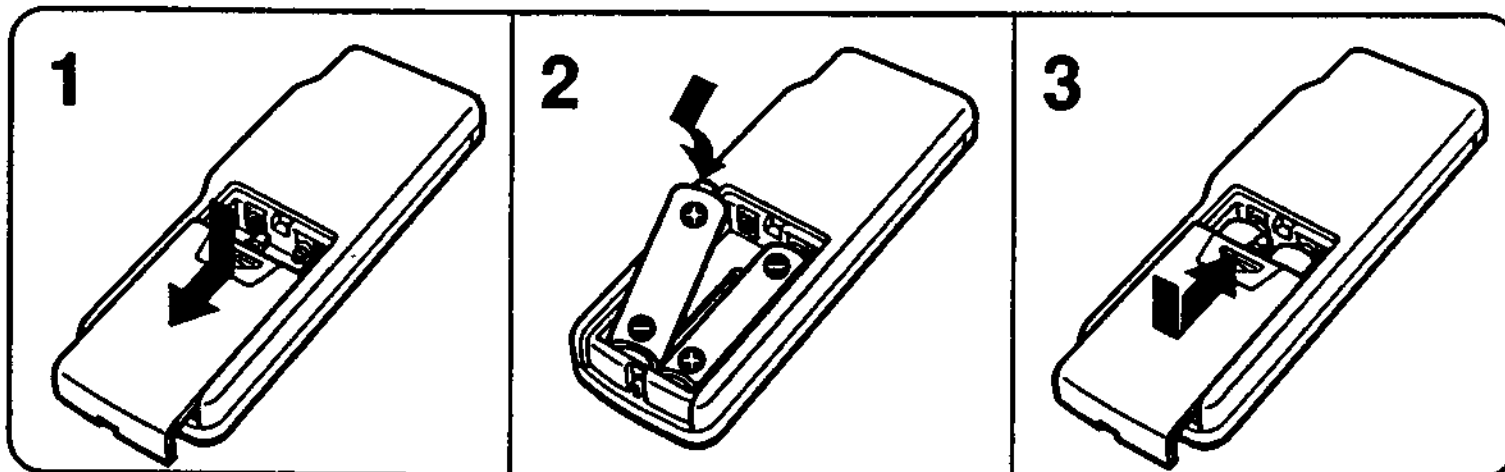

Note on battery life

The batteries for the Remote Commander last about 6 months under normal operation. When the batteries become weak or dead, the Remote Commander does not work.

To avoid damage from possible battery leakage


Remove the batteries when you will not use the Remote Commander for a long time.

Additional Information


Identifying the Parts

Using the Remote Commander

Make sure that the COMMANDER mode is set to ON in the menu system.

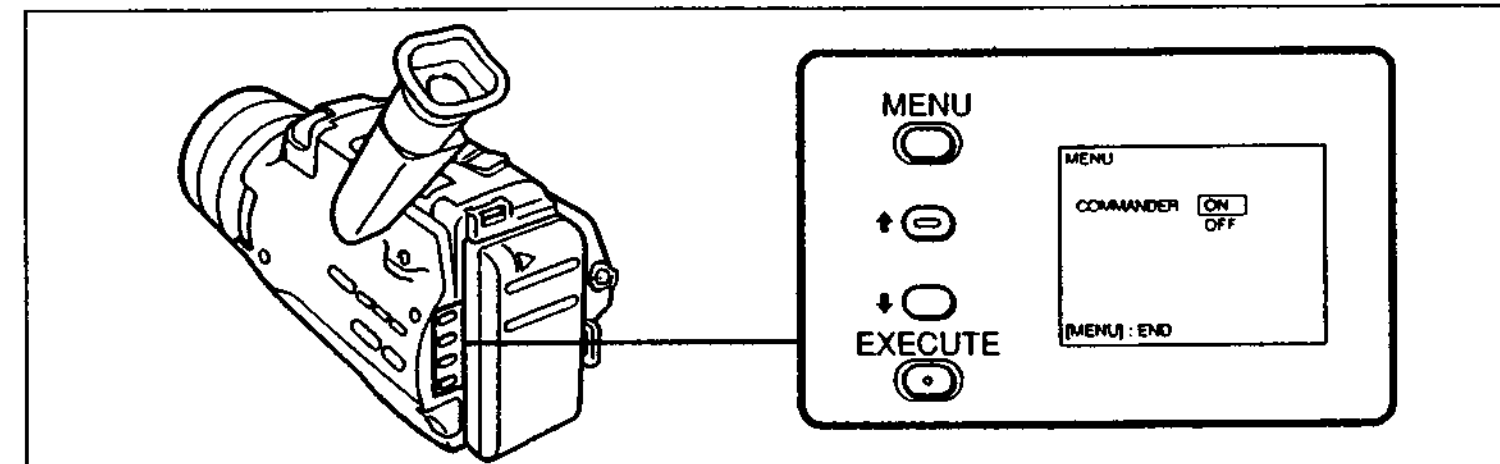

Remote Control Direction

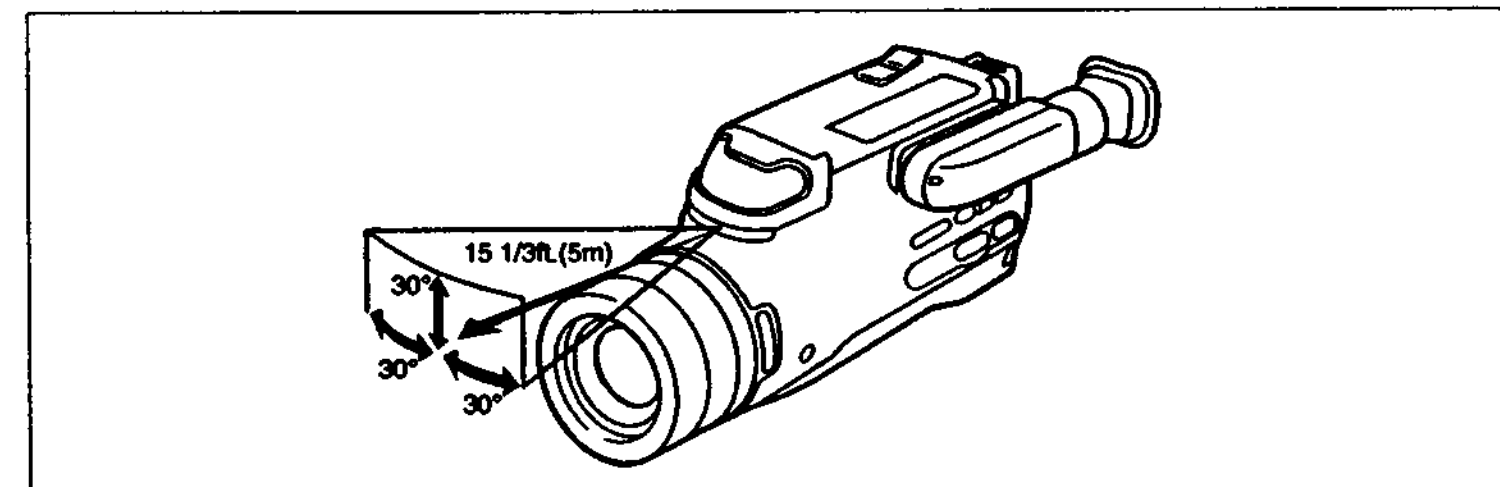


Notes on the Remote Commander

- Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be effective.
- Be sure that there is no obstacle between the remote sensor and the Remote Commander.
- This camcorder works at commander mode VTR 2. The commander modes (1, 2 and 3) are used to distinguish this camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR at commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VCR with black paper.

Indicators in the Viewfinder

Warning Indicators


If indicators flash in the viewfinder or a caution lamp on the camcorder flashes, check the following:

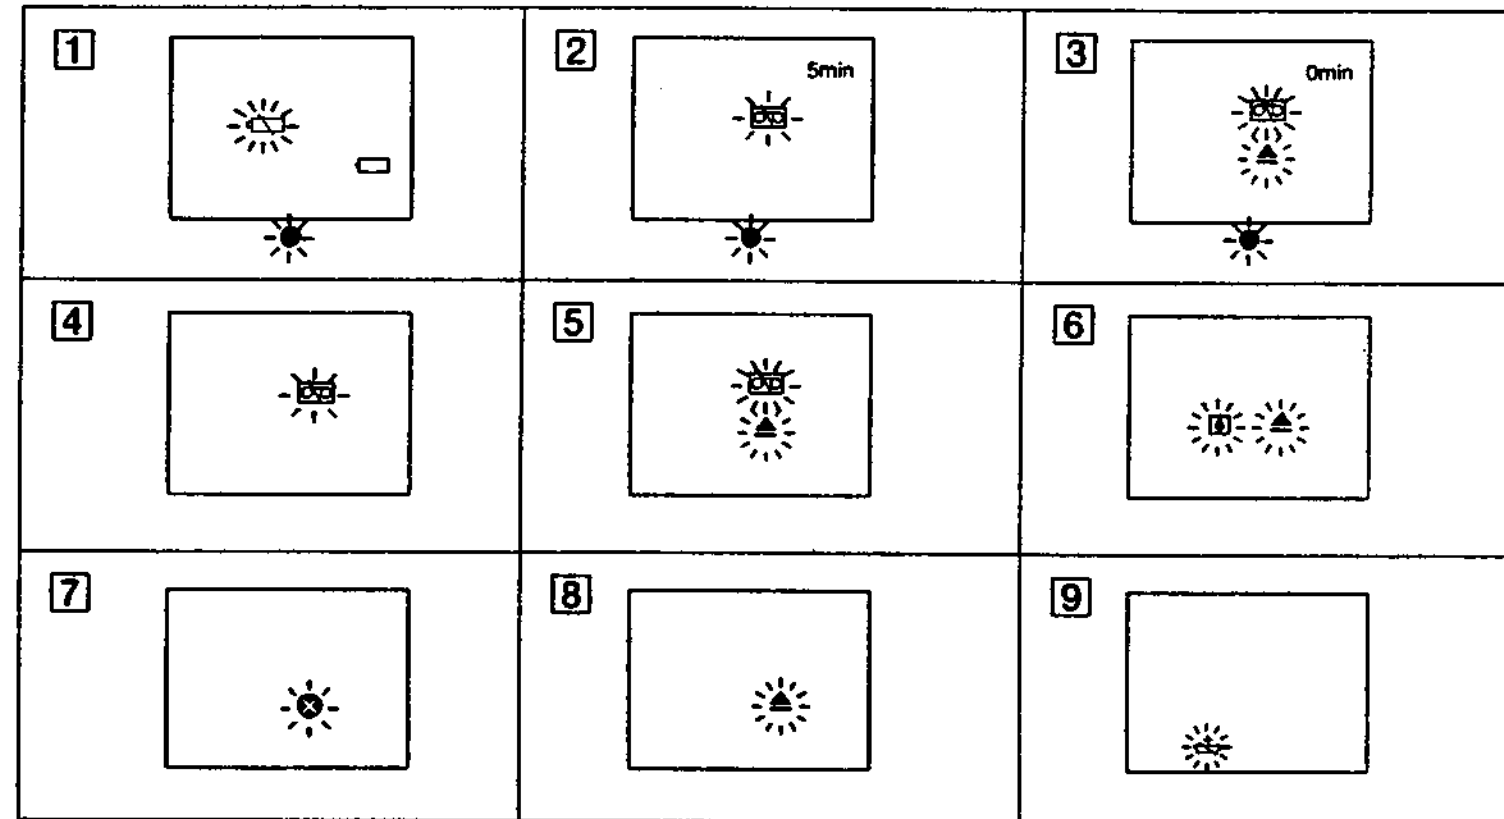


- 1 **The battery is weak or dead.**
Slow flashing: The battery is weak.
Fast flashing: The battery is dead.
- 2 **The tape is near the end.**
The flashing is slow.
- 3 **The tape has run out.**
The flashing becomes rapid.
- 4 **No tape has been inserted.**
- 5 **The tab on the tape is out (red).**
- 6 **Moisture condensation has occurred.** (p. 35)
- 7 **The video heads may be contaminated.** (p. 36)
- 8 **Some other trouble has occurred.**
Disconnect the power source and contact your Sony dealer or local authorized facility.
- 9 **The lithium battery is weak or is not installed.** (p. 30)

SECTION 2 DISASSEMBLY


2-1. REMOVAL OF MICROPHONE (SL) BLOCK

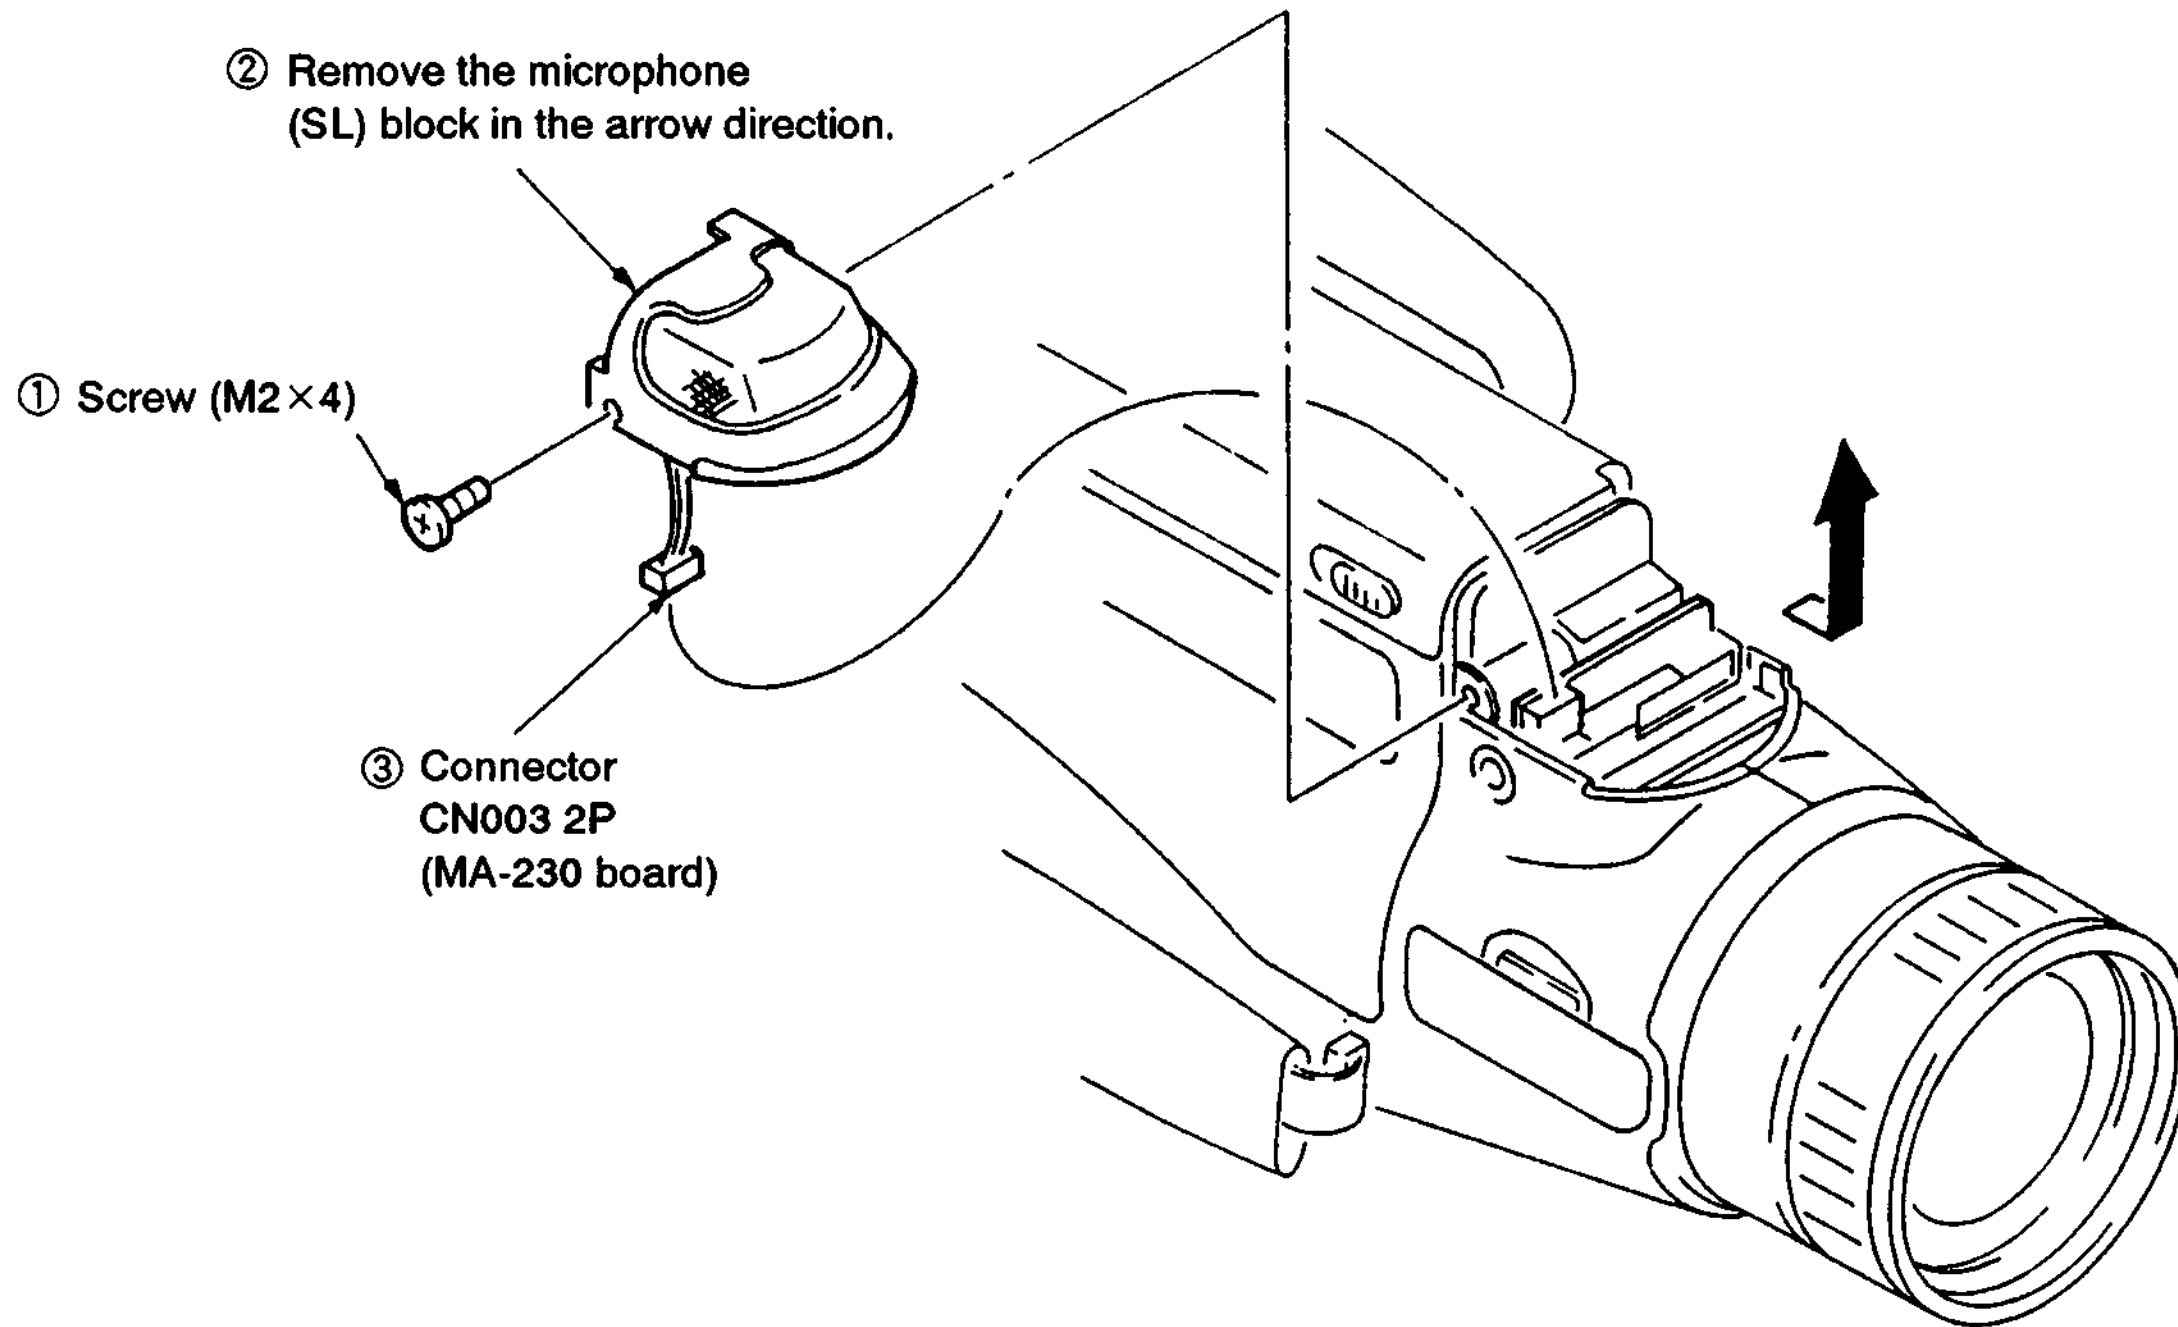

2-2. REMOVAL OF FRONT CASE BLOCK

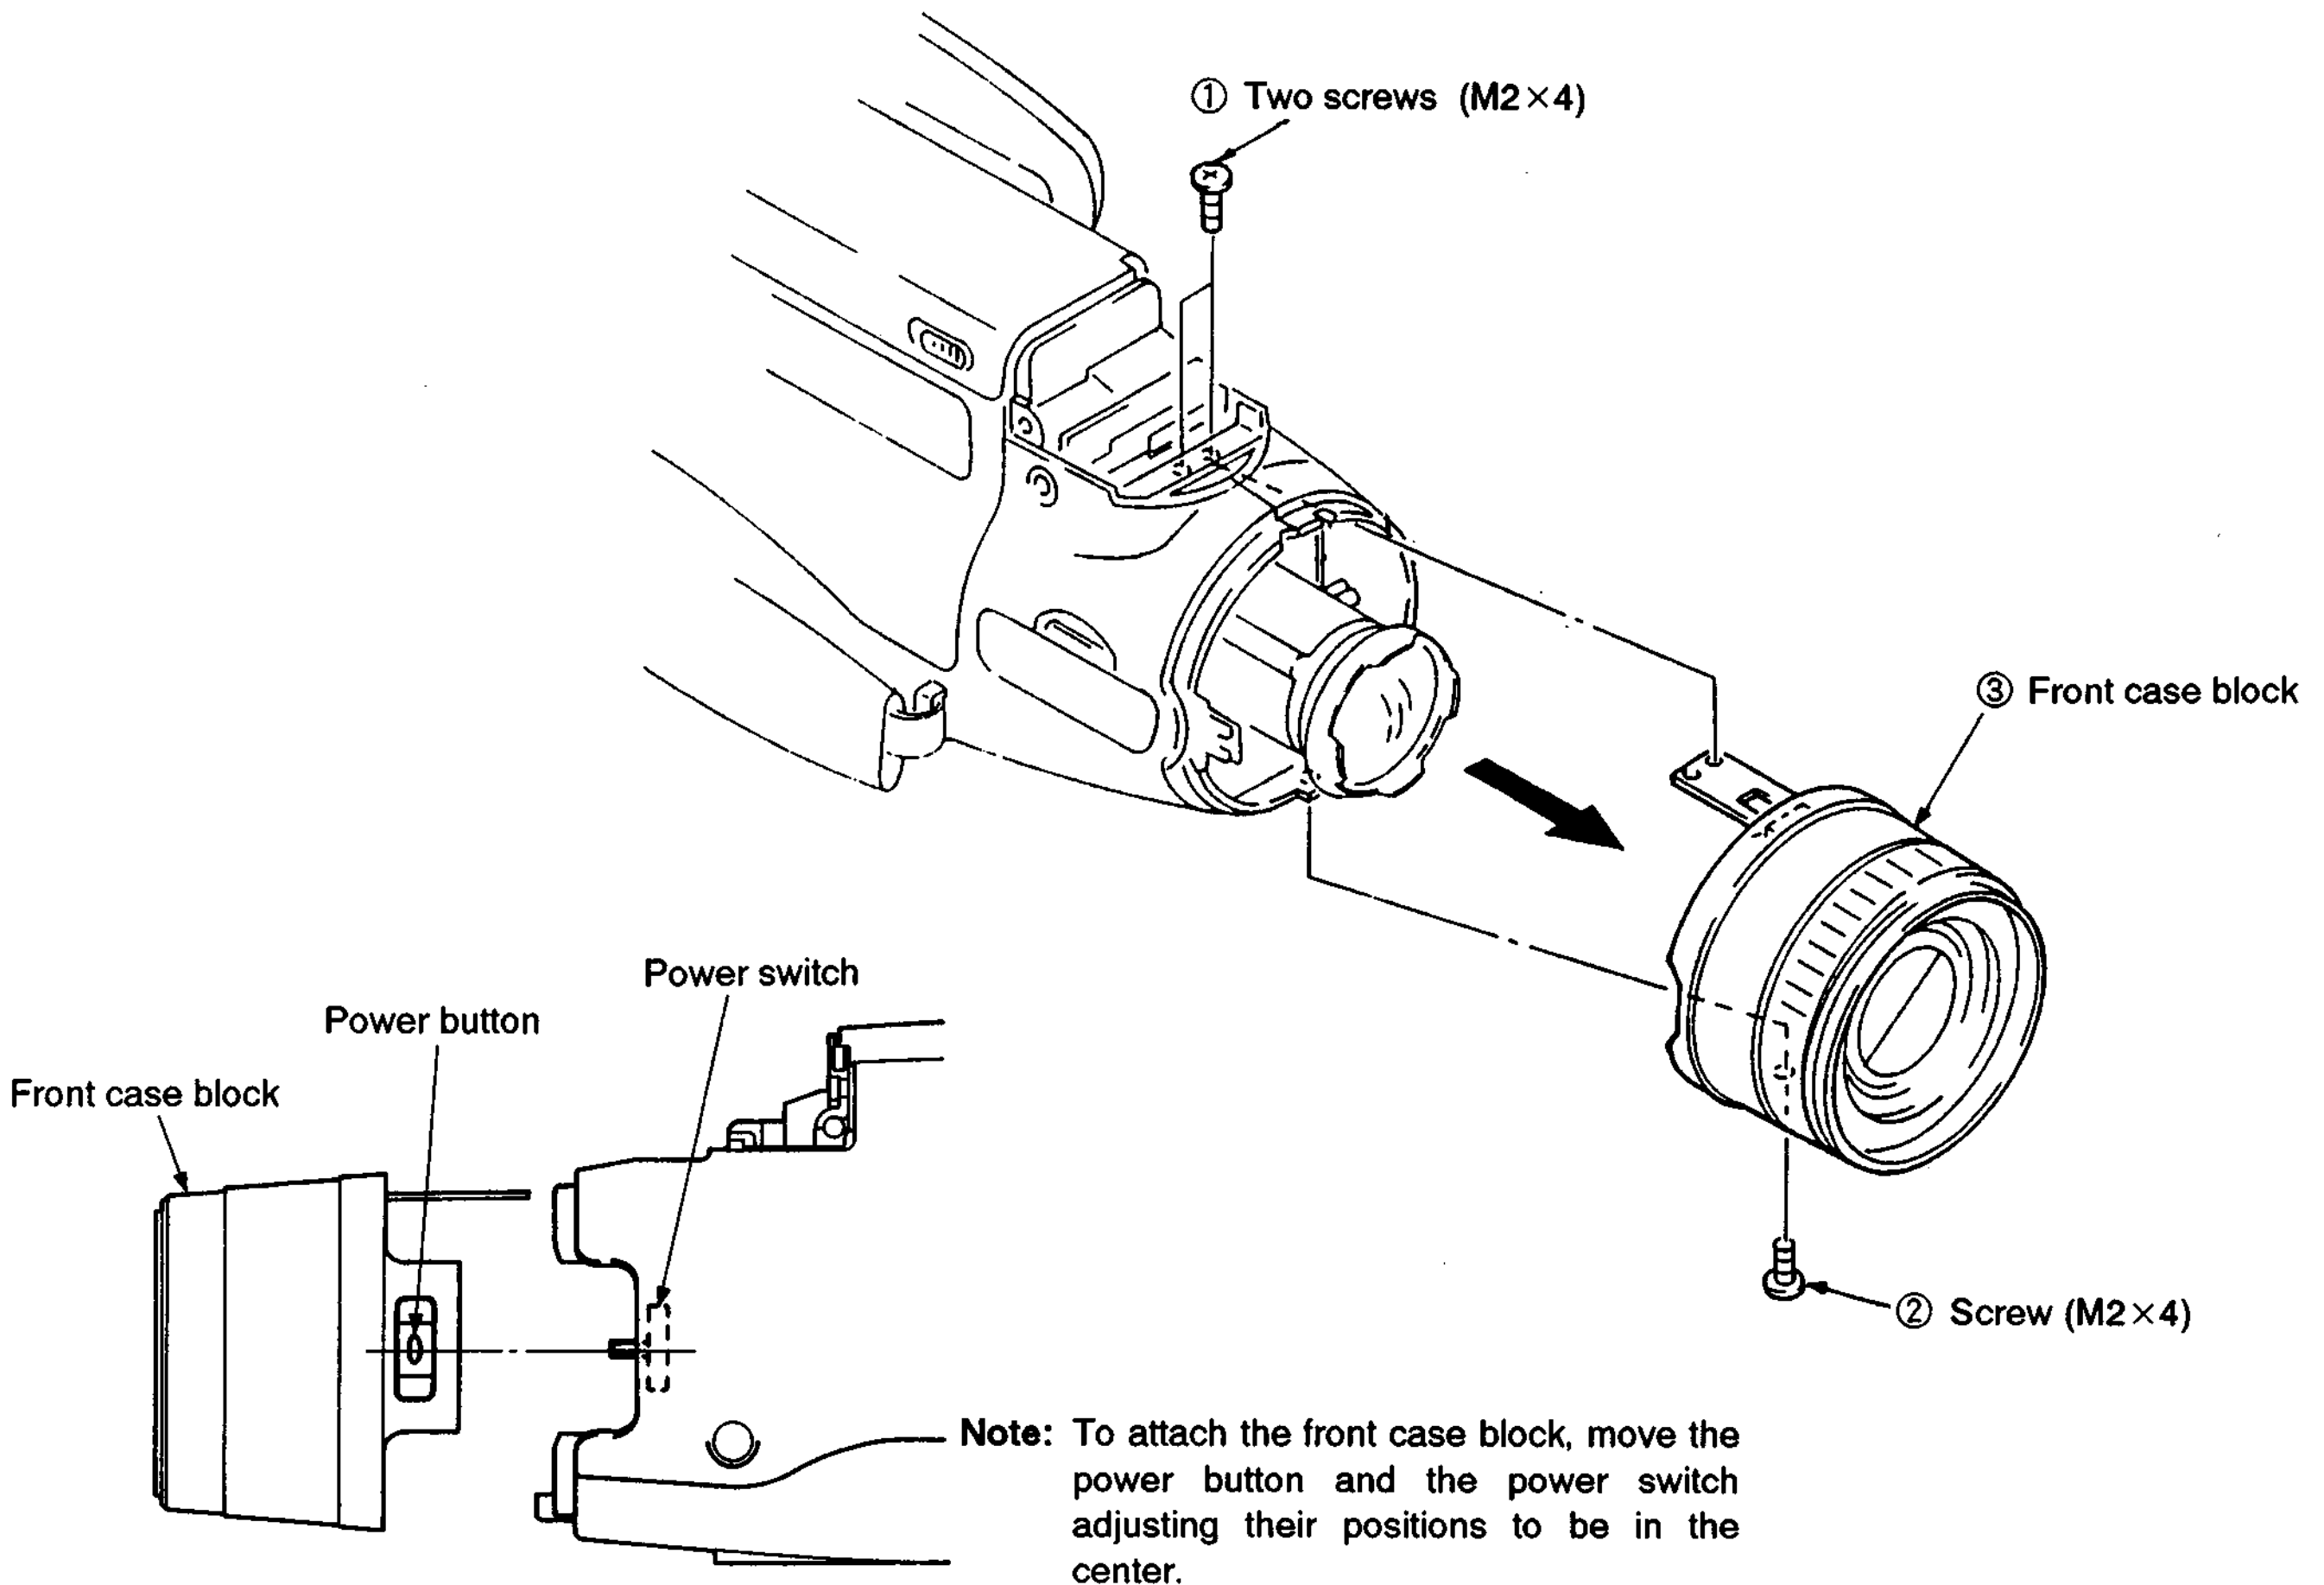


2-3. REMOVAL OF CASSETTE LID ASSEMBLY

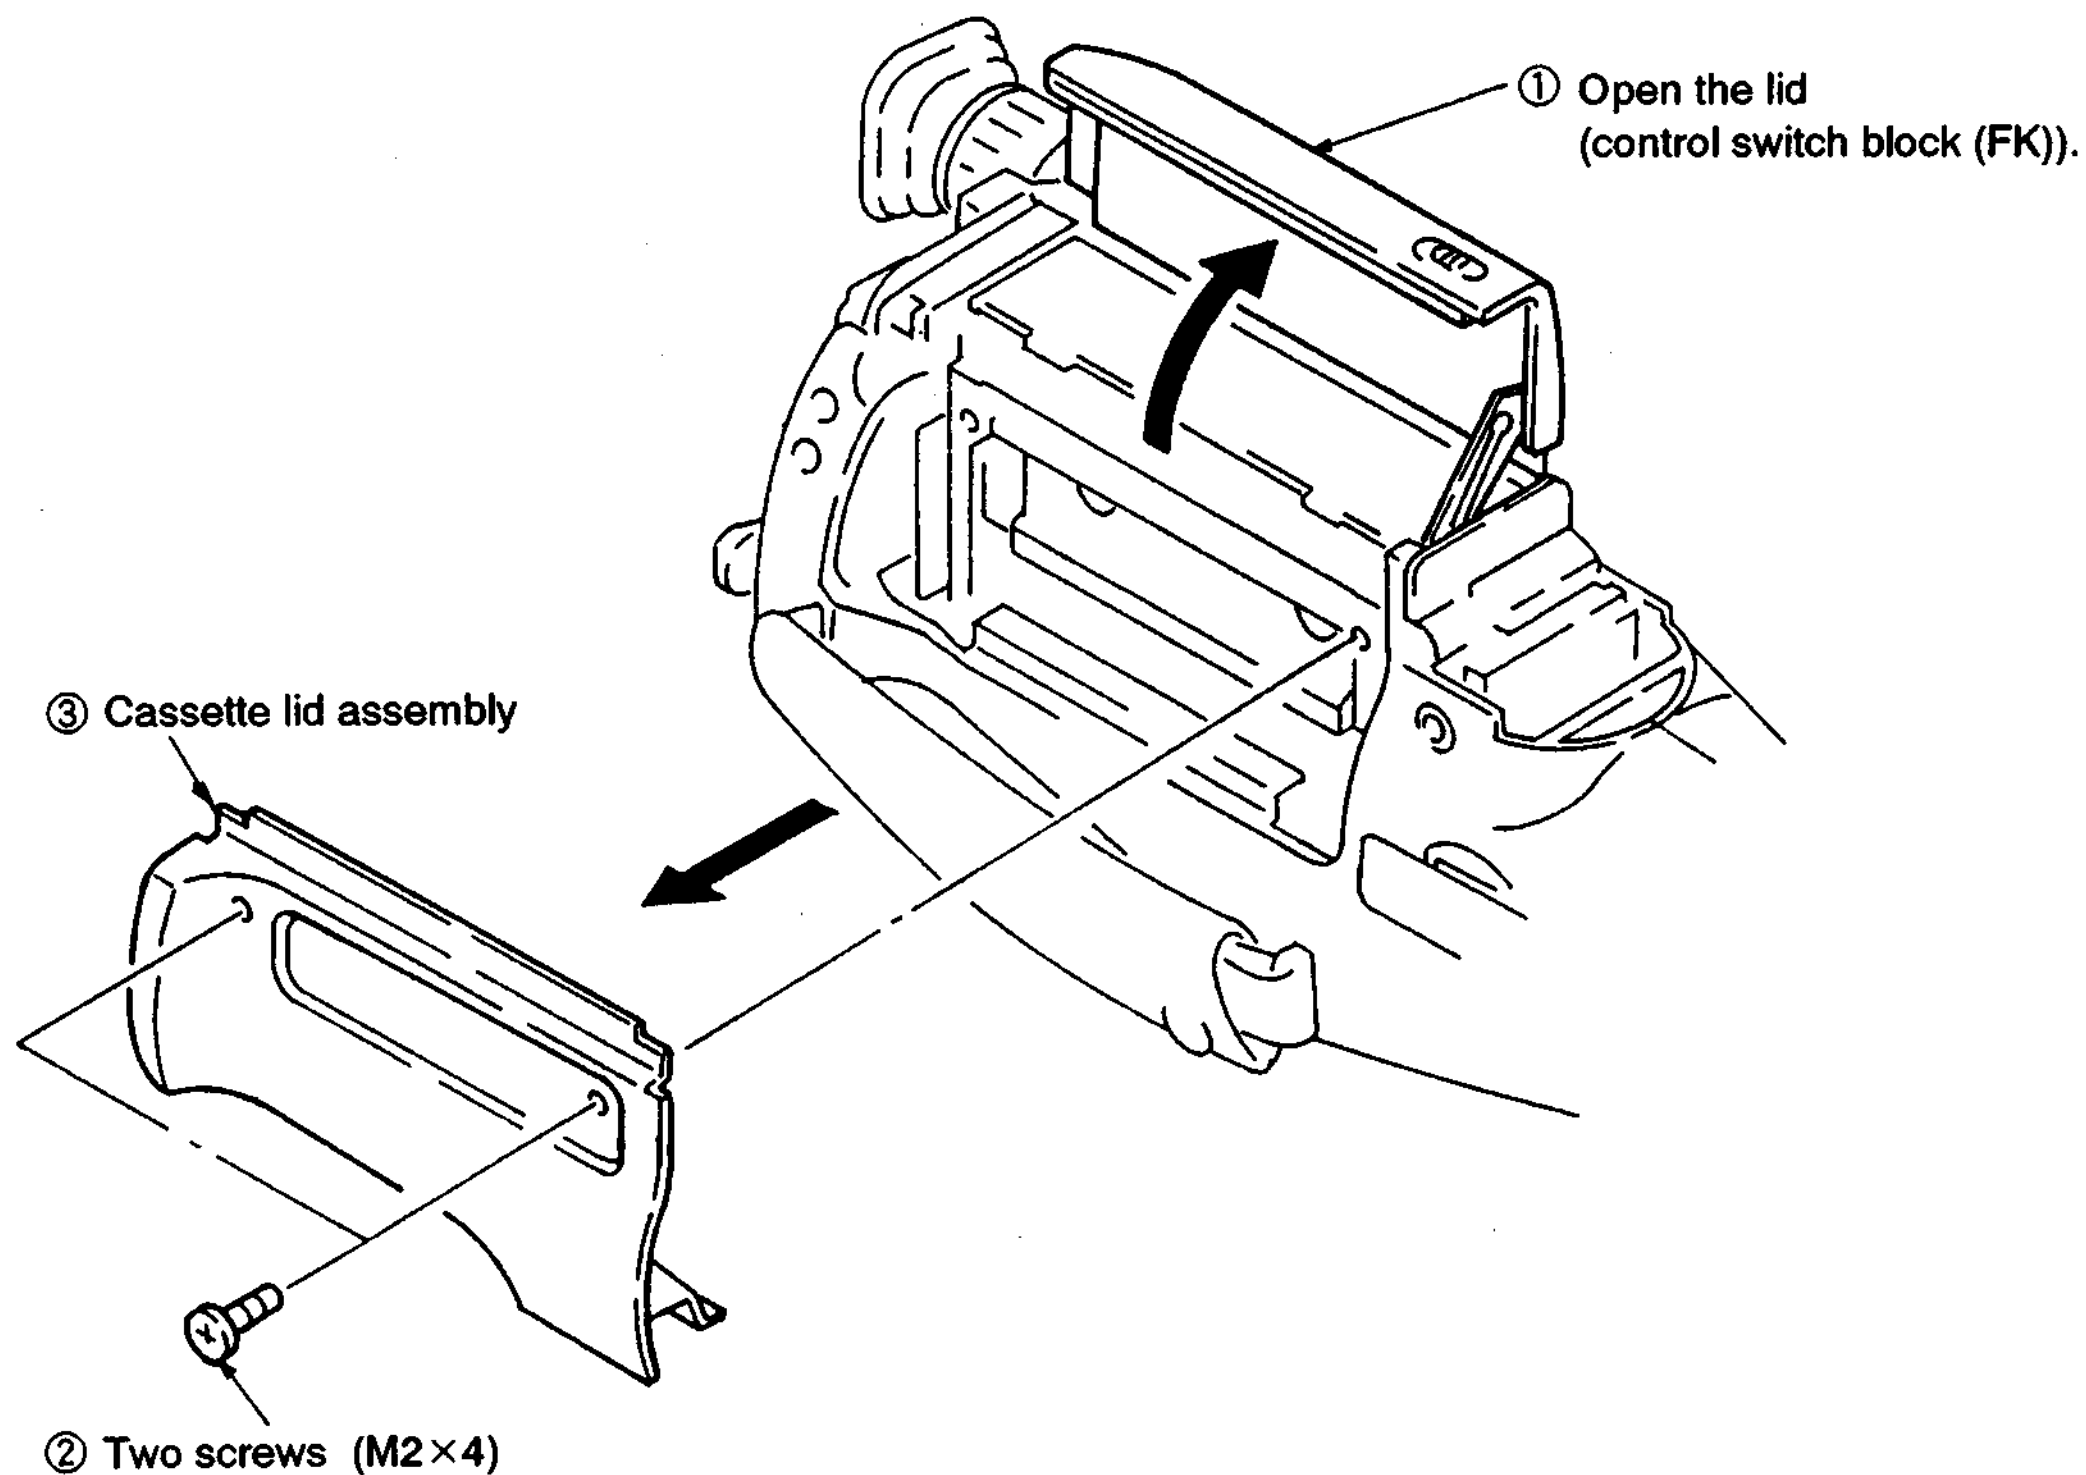


2-4. REMOVAL OF CABINET (L) BLOCK ASSEMBLY


Note: When incorporating the cabinet (L) block assembly, be sure to remove the lithium battery first or the cabinet (L) will not fit properly.

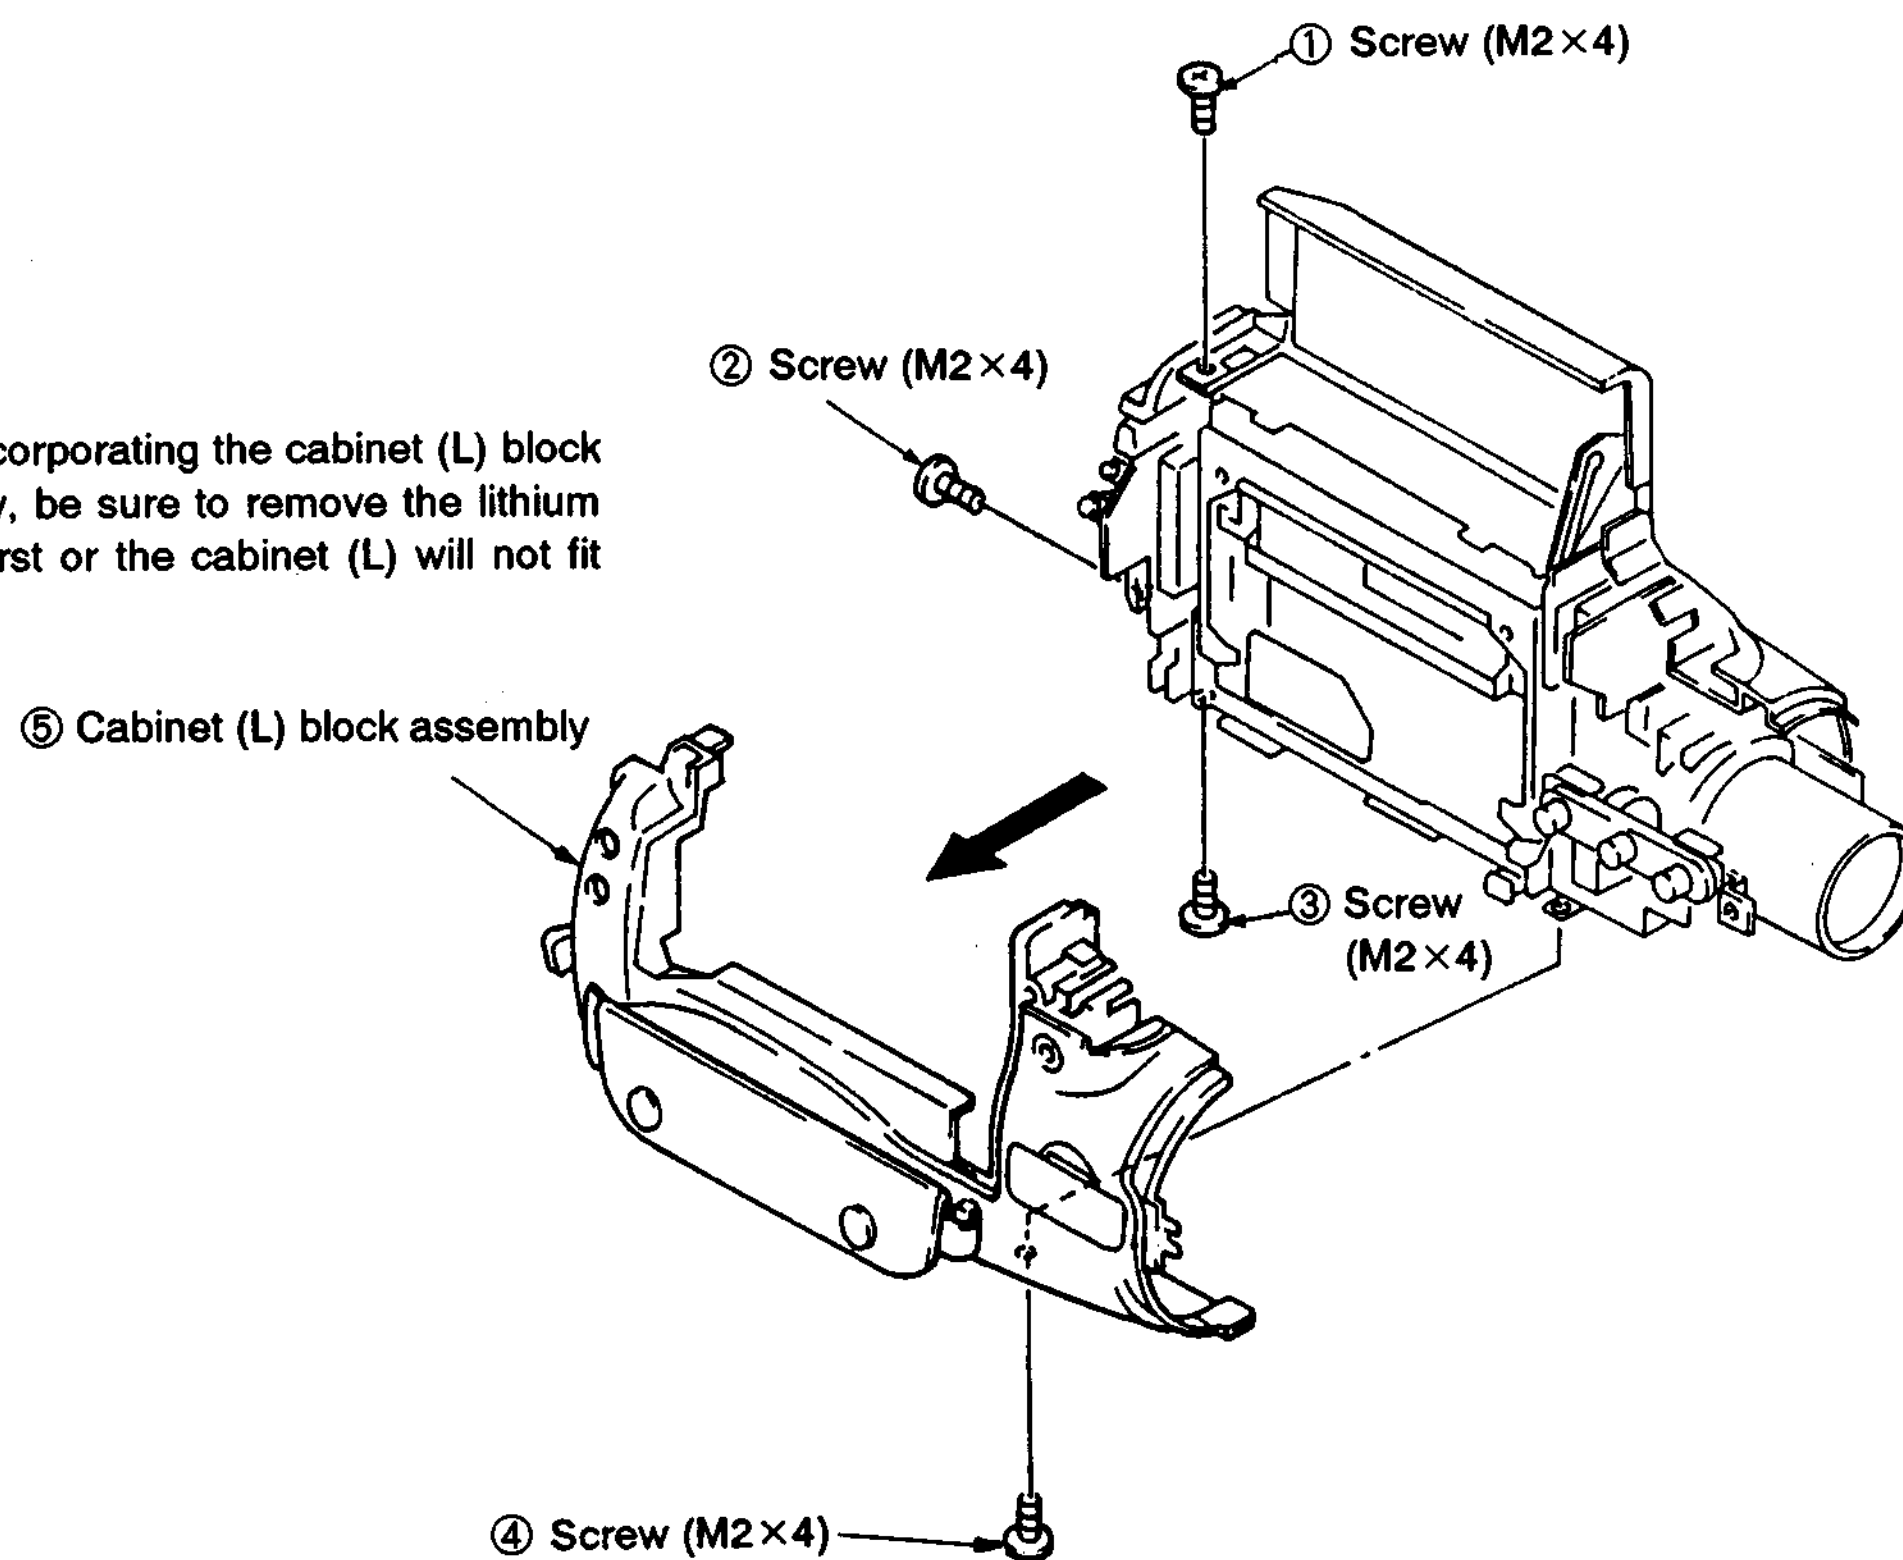


2-5. REMOVAL OF CABINET (R) ASSEMBLY

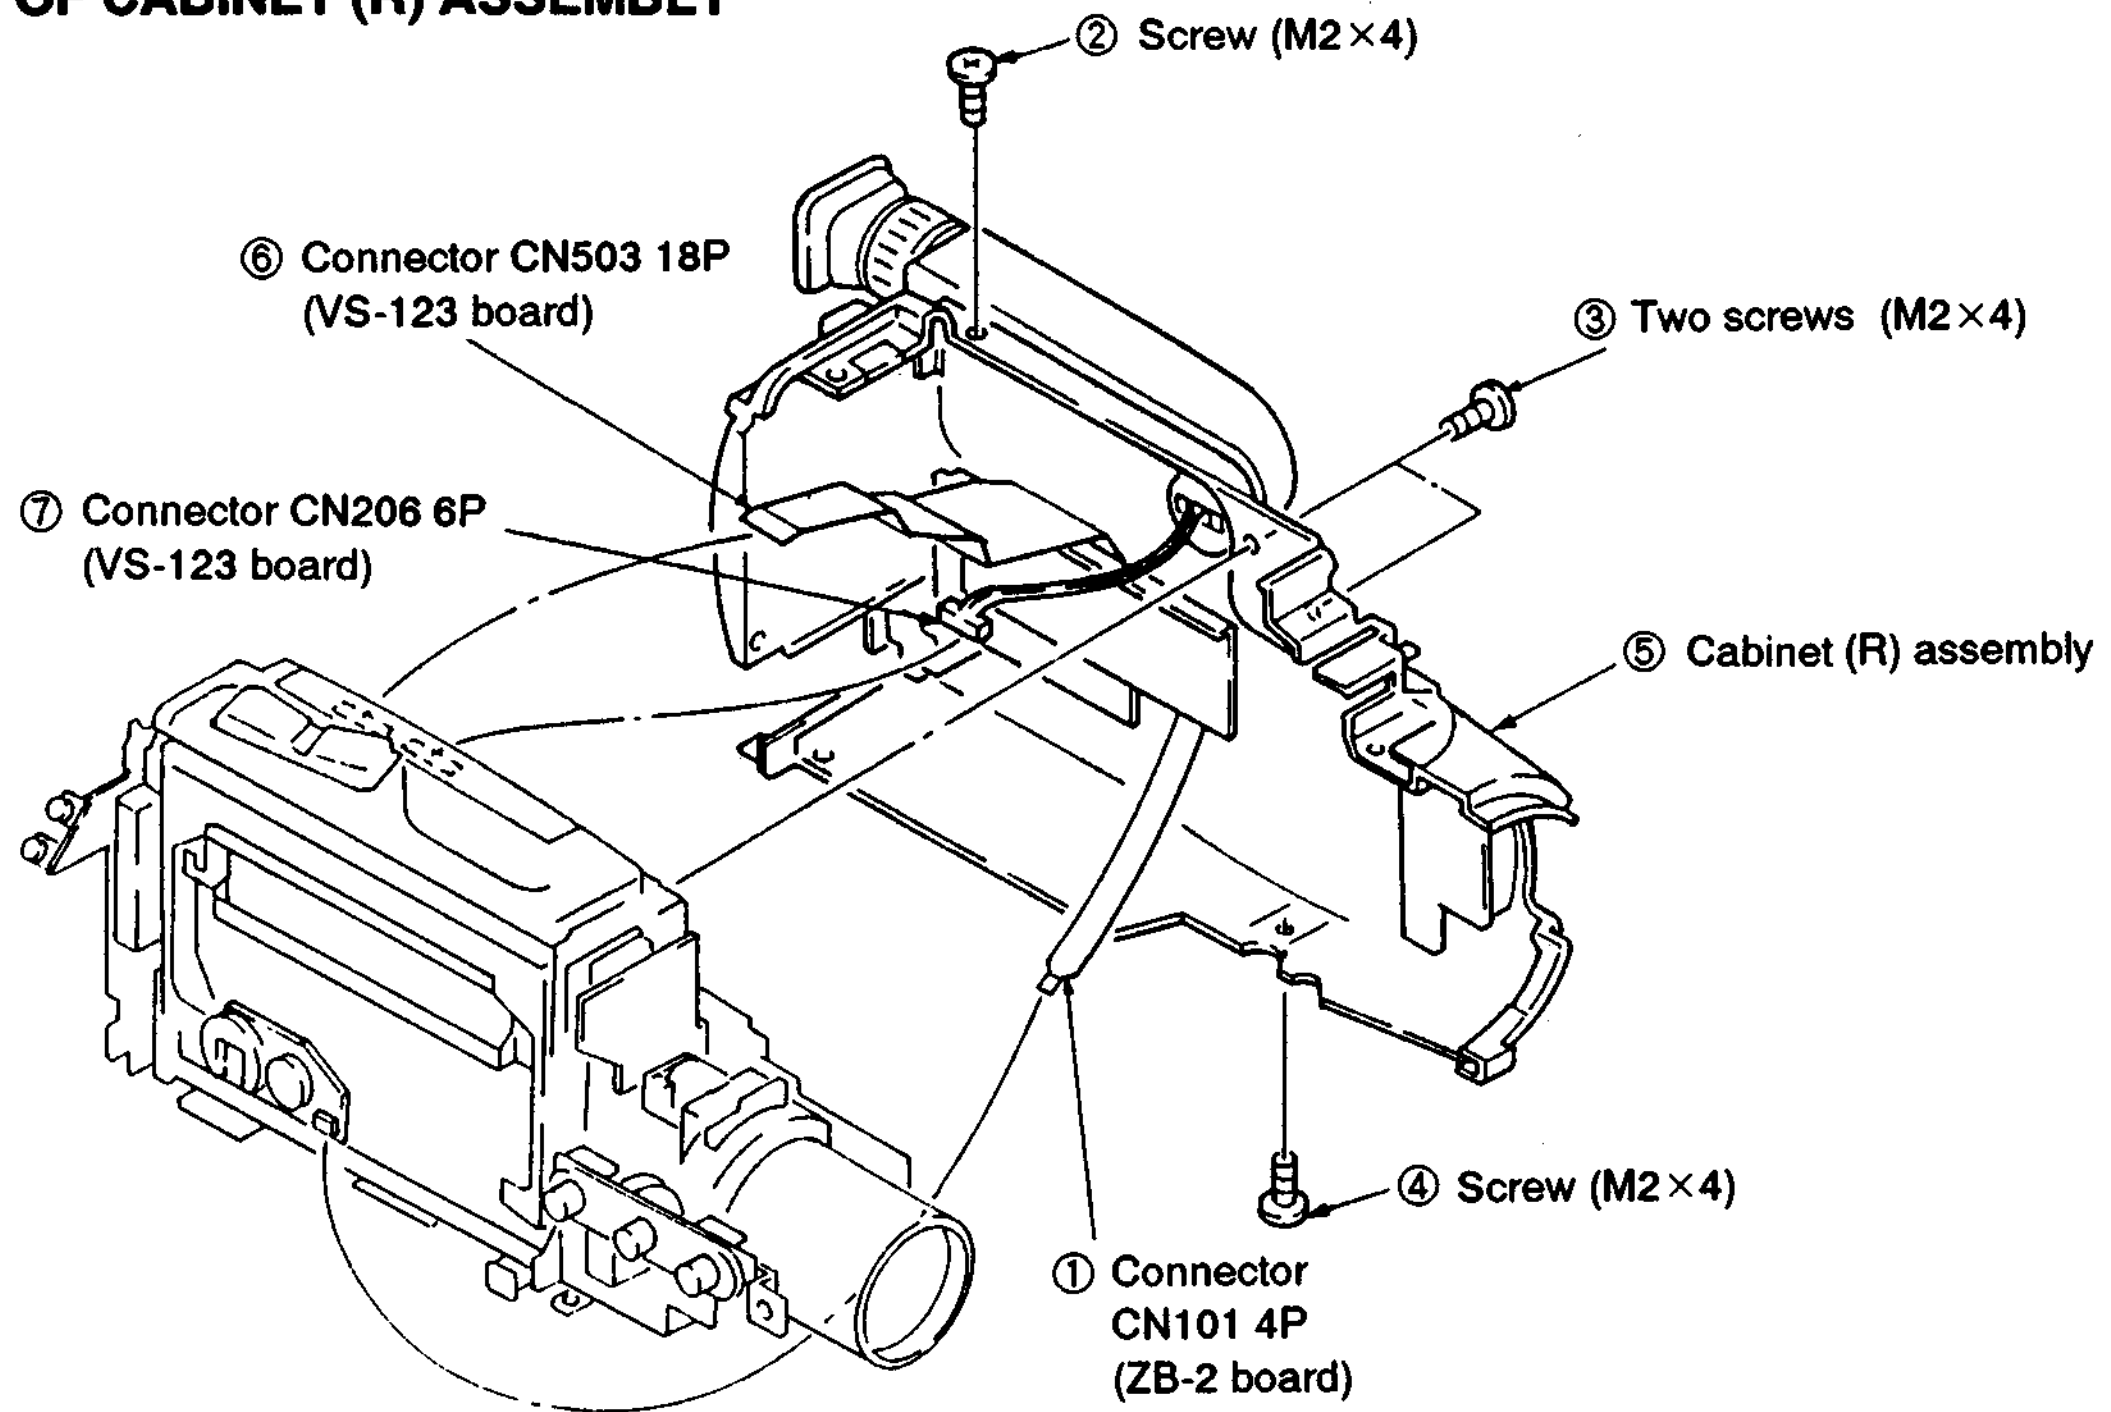


2-6. REMOVAL OF EVF ASSEMBLY (FX240) (VF-44 BOARD)

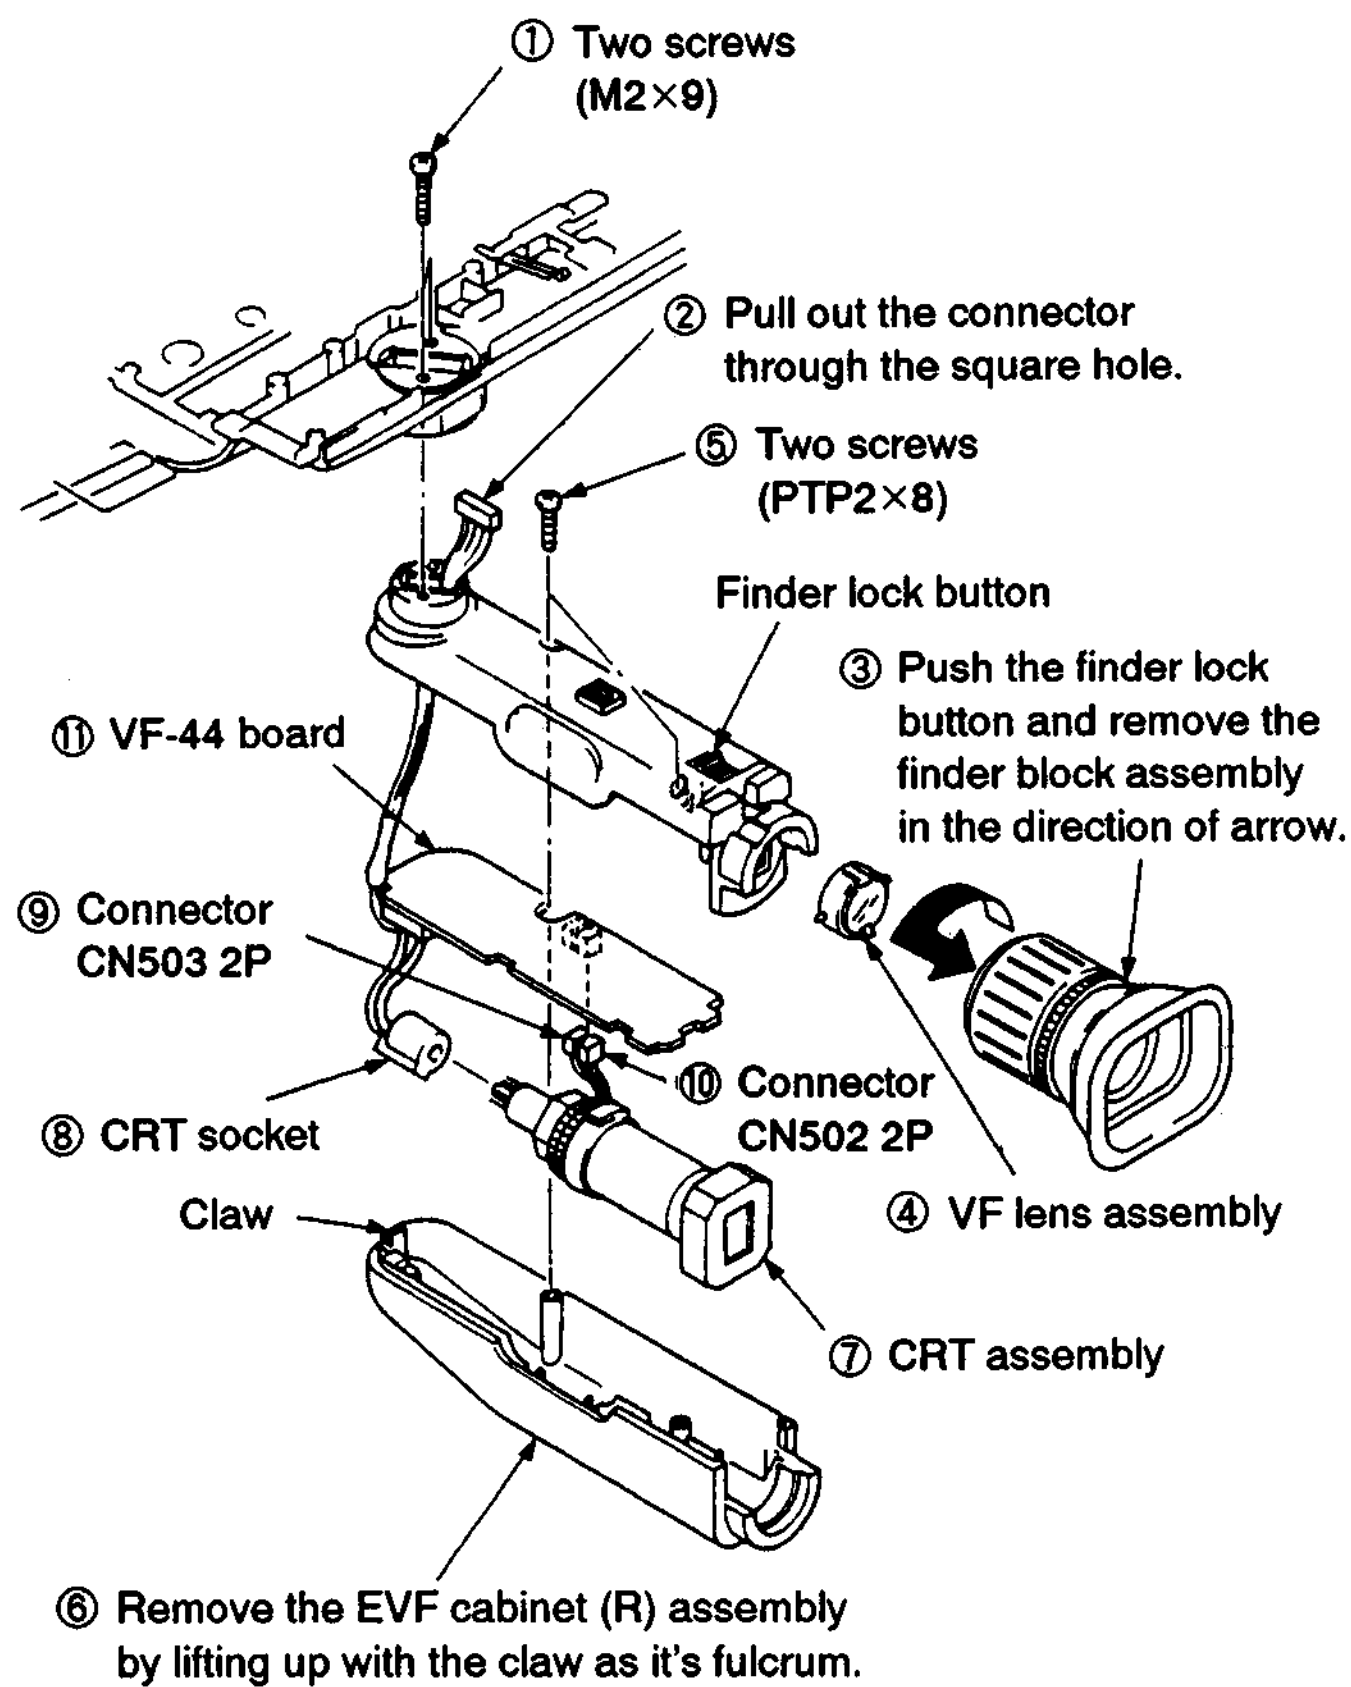

2-6. REMOVAL OF EVF ASSEMBLY (FX340) (VF-68/69 BOARD)

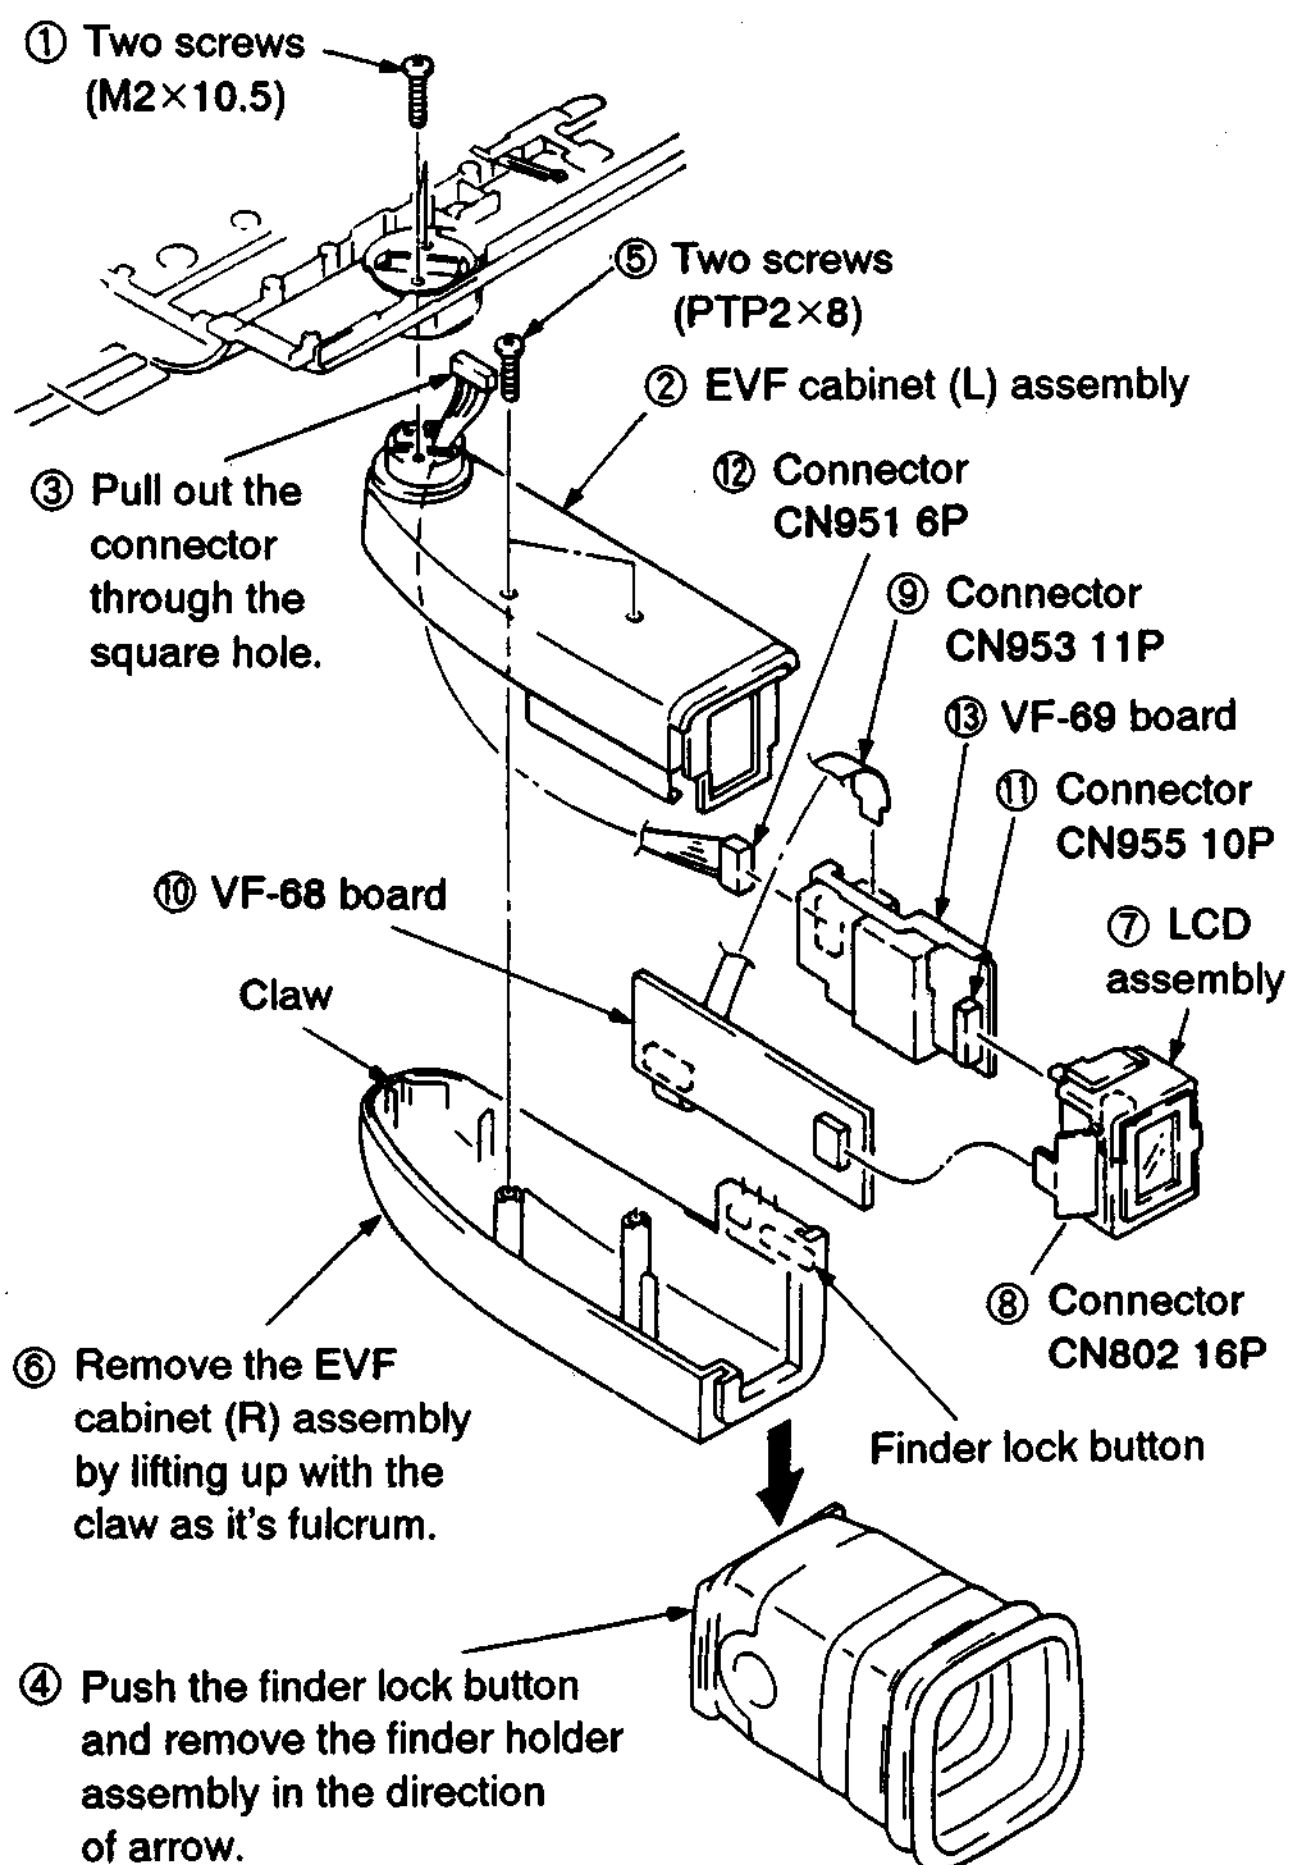


2-7. REMOVAL OF DD-76 BOARD

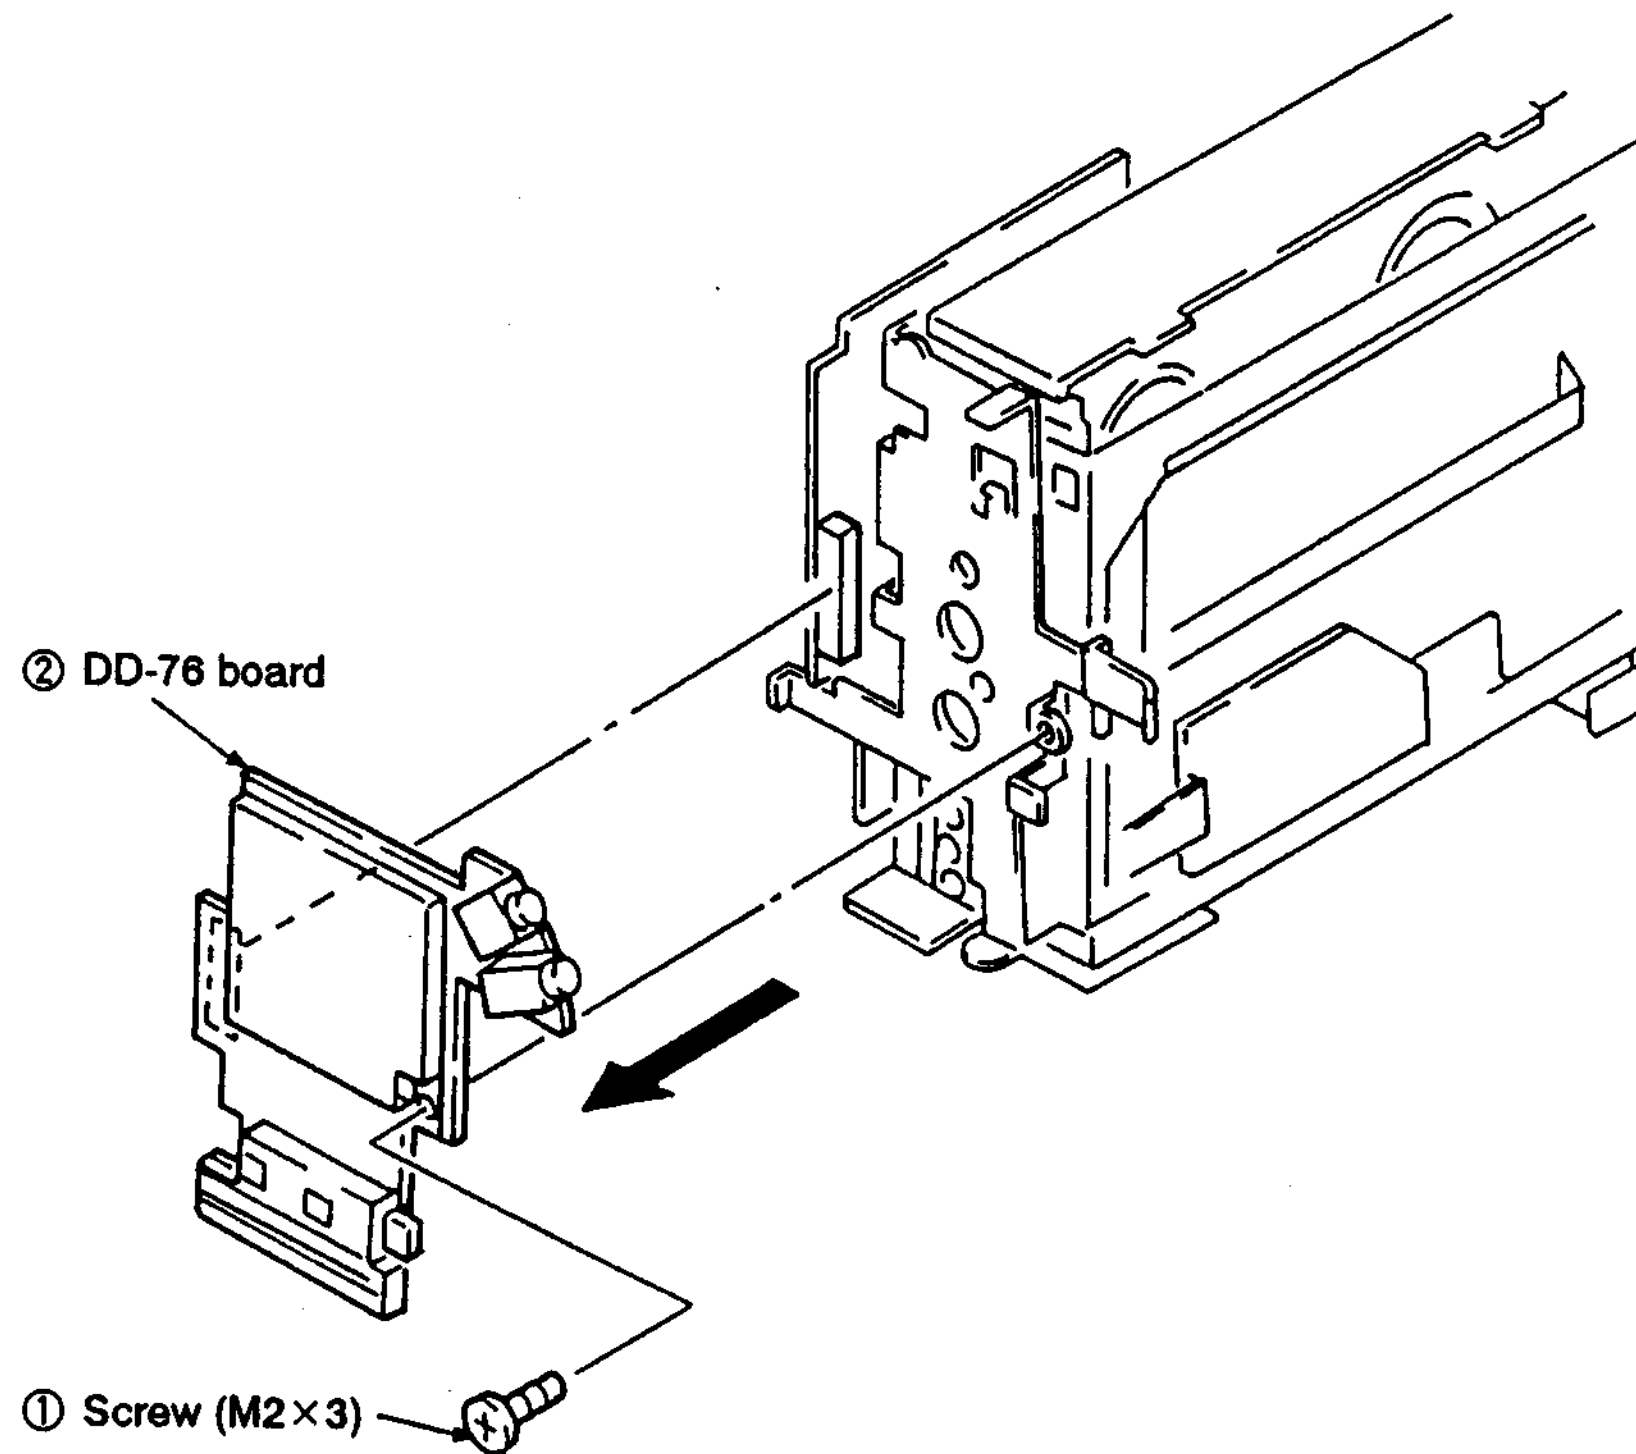


2-8. REMOVAL OF CONTROL SWITCH BLOCK (FK)


Note: ① Refer to 2-7 and remove the DD-76 board.

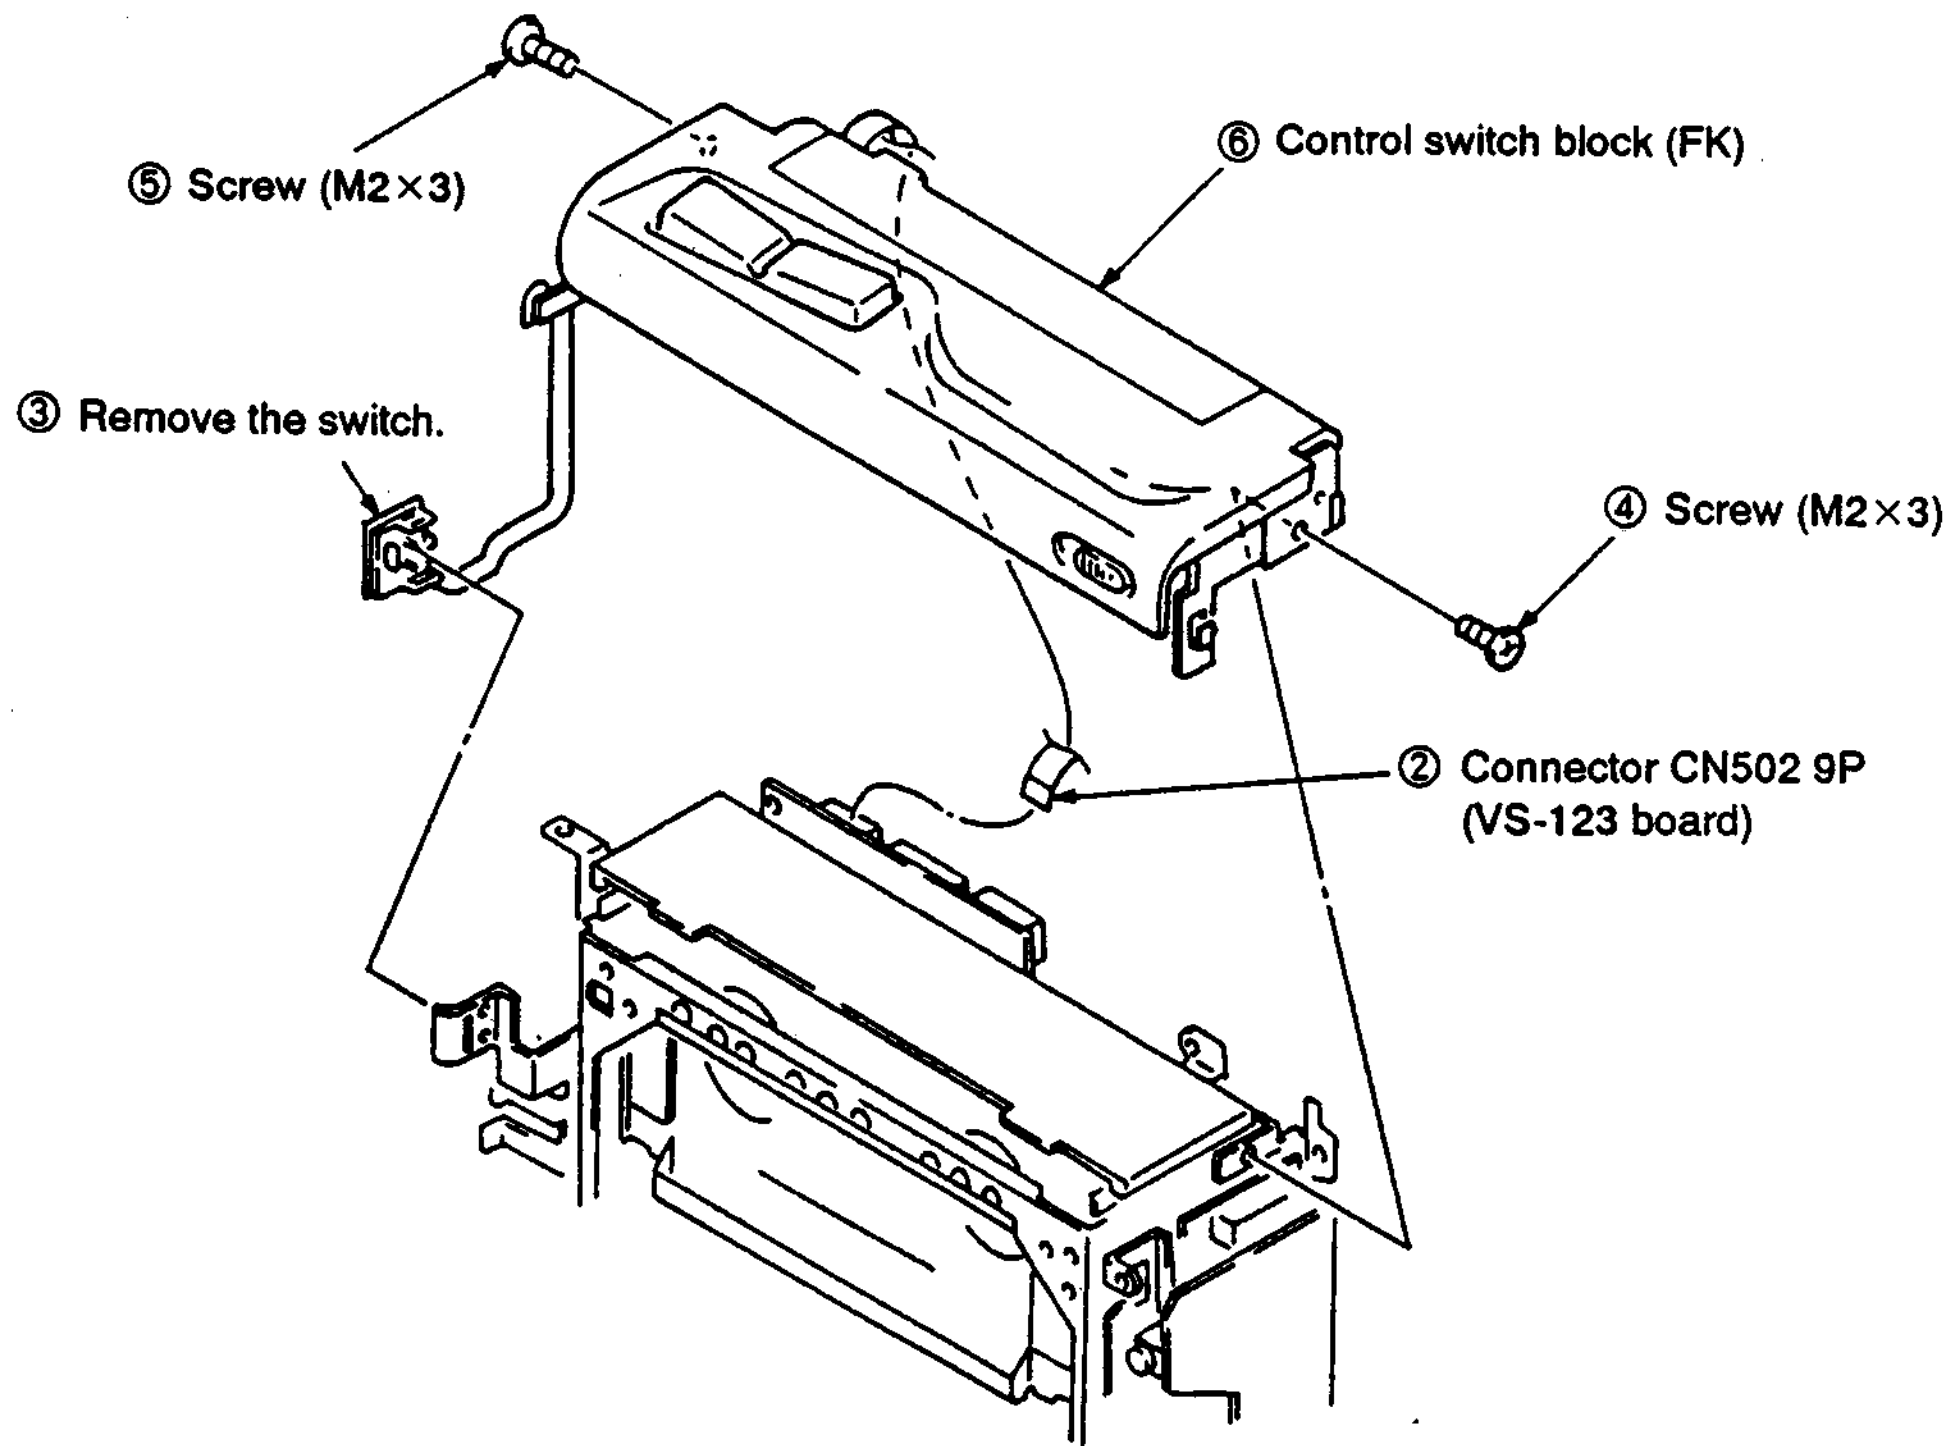


2-9. REMOVAL OF VC-159 BOARD

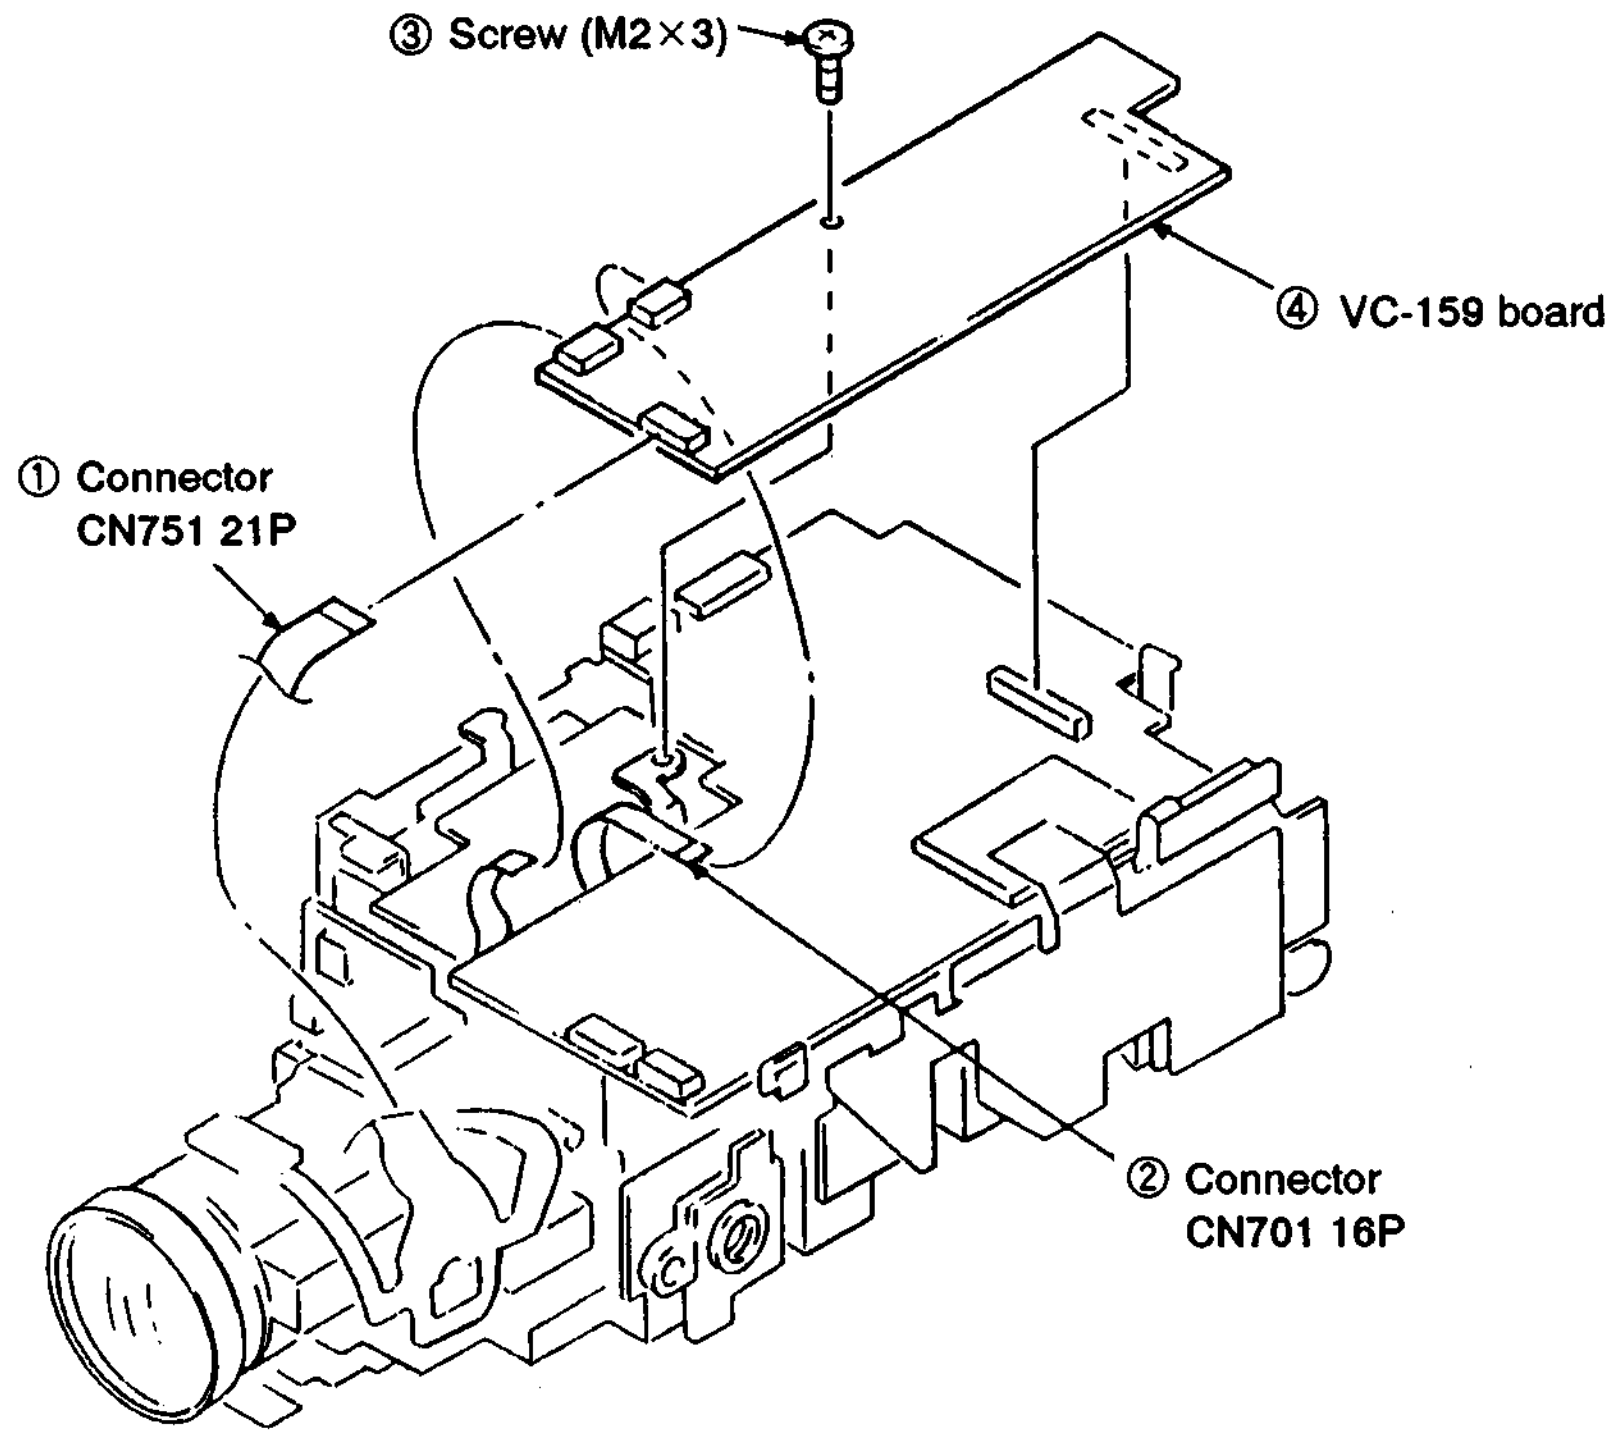

2-10. REMOVAL OF VS-123 AND AU-182 BOARD

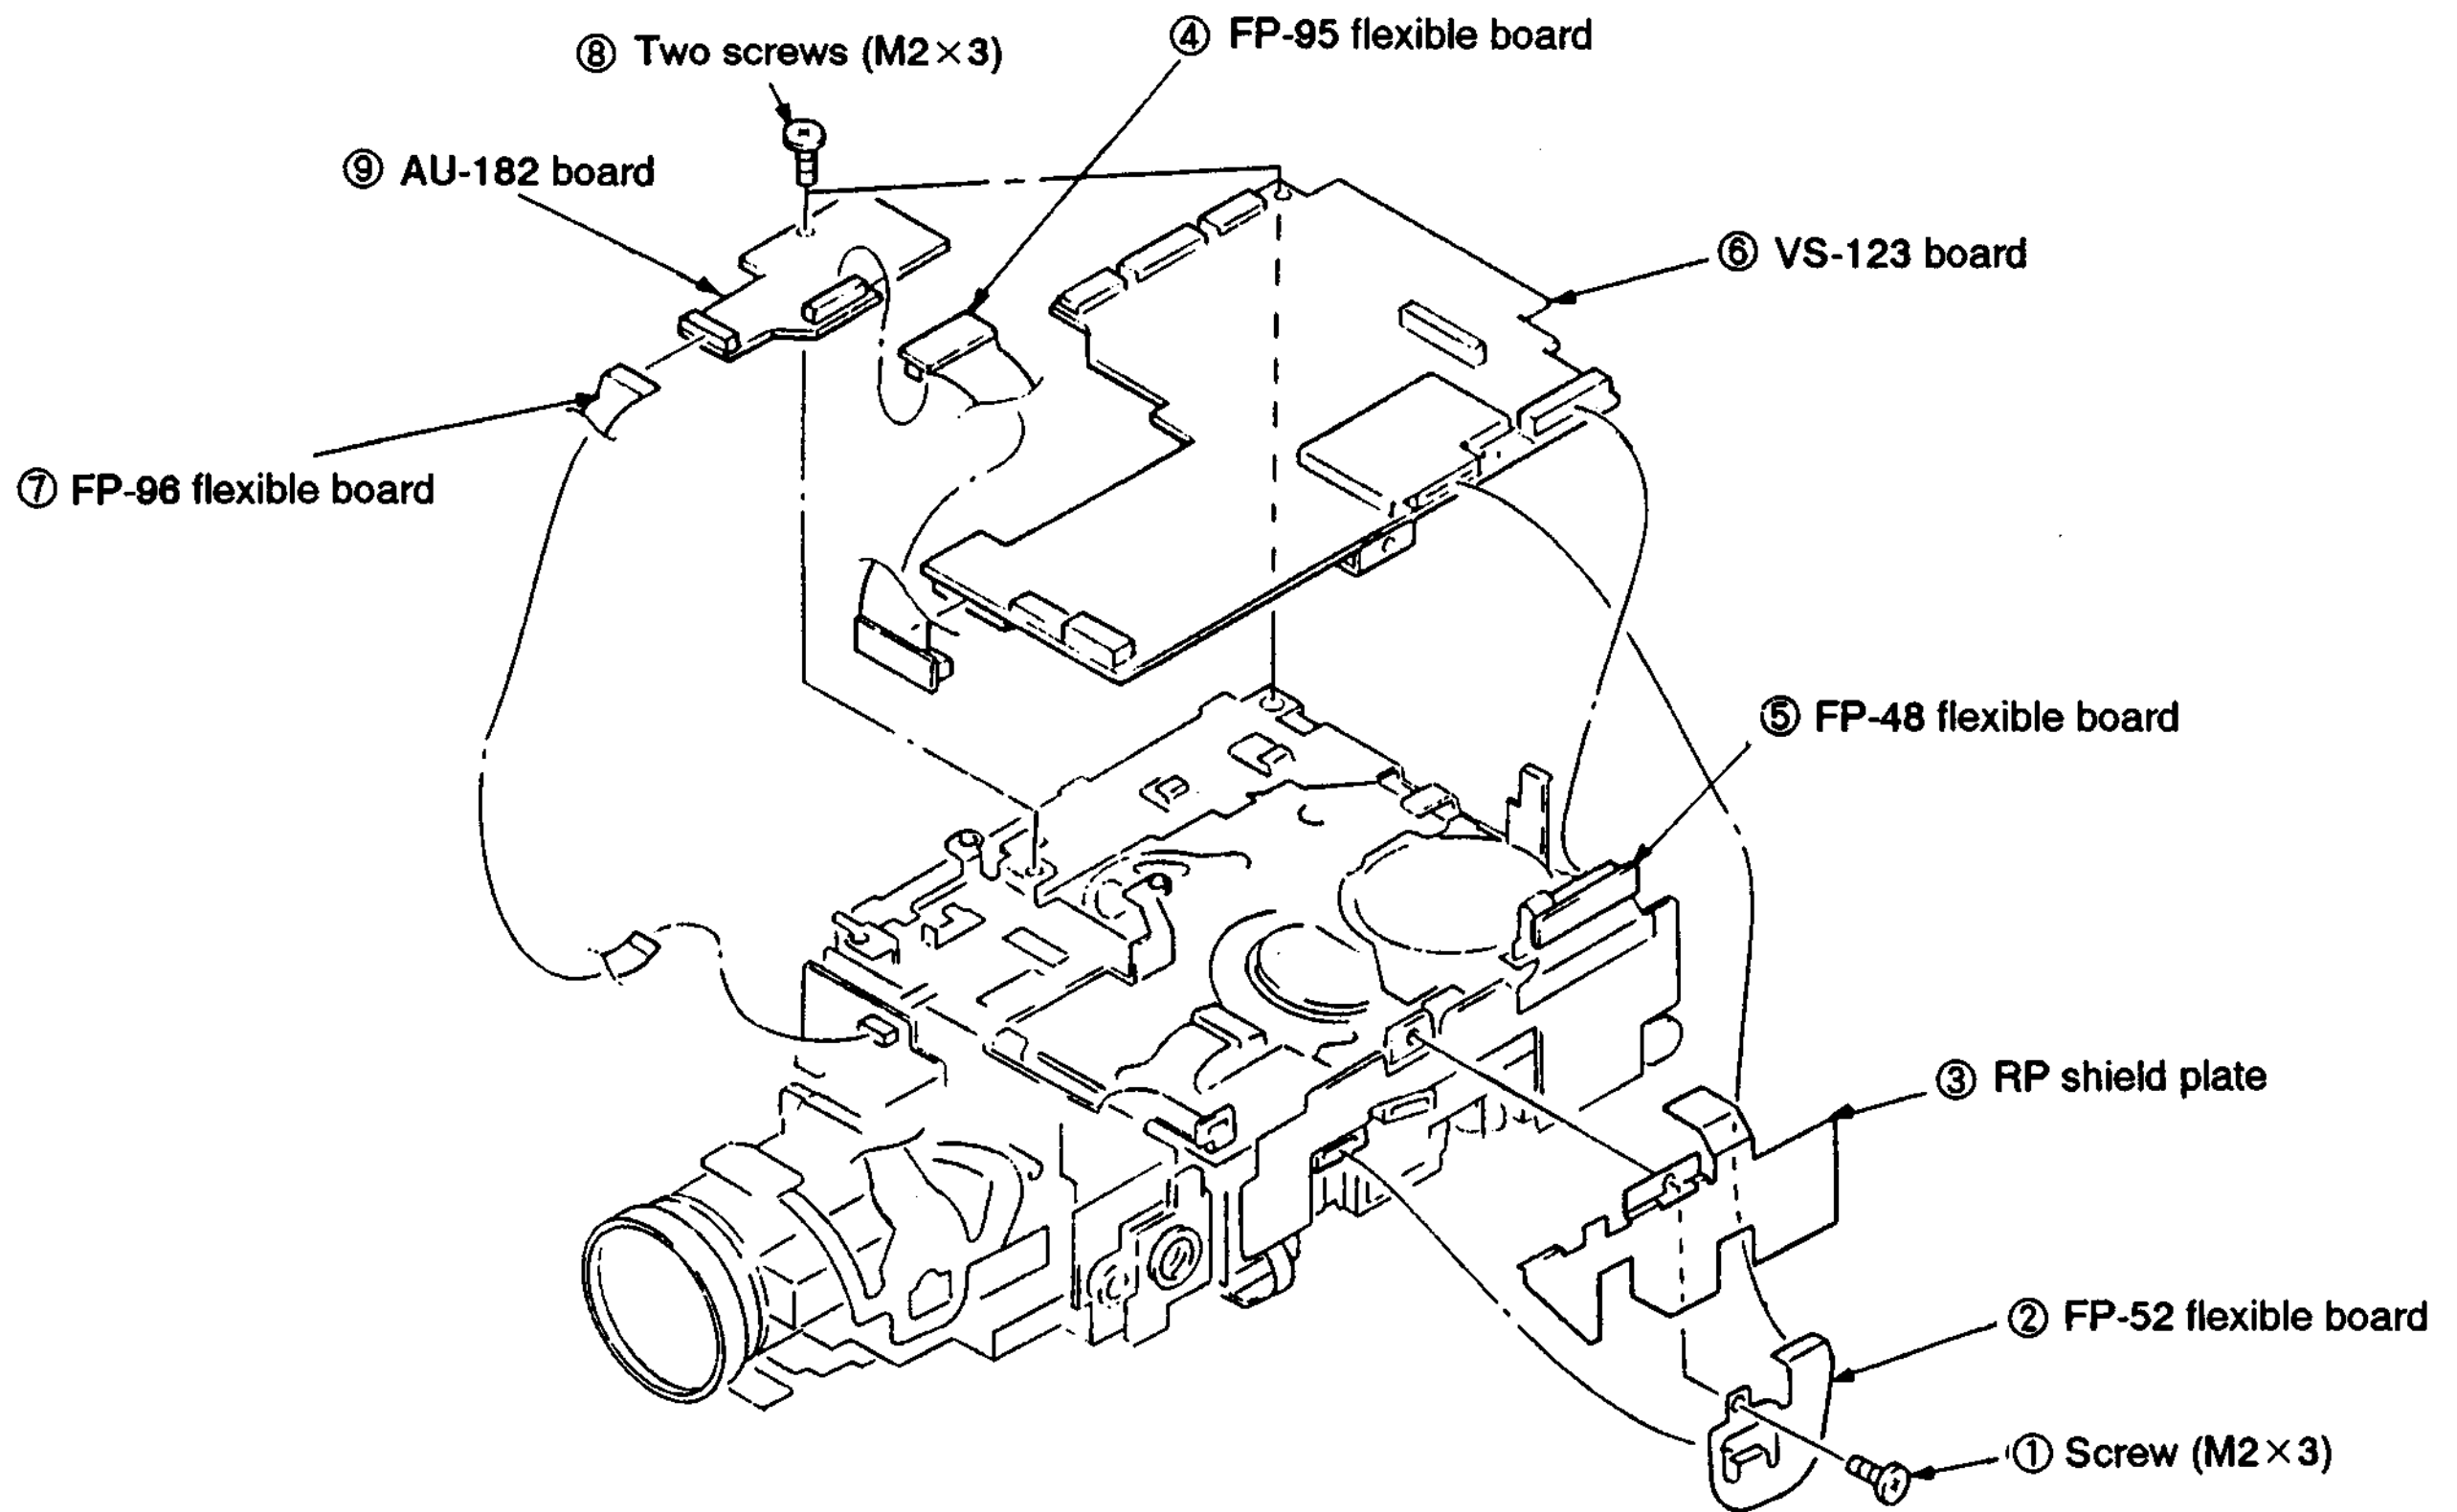


2-11. REMOVAL OF ZOOM LENS BLOCK ASSEMBLY

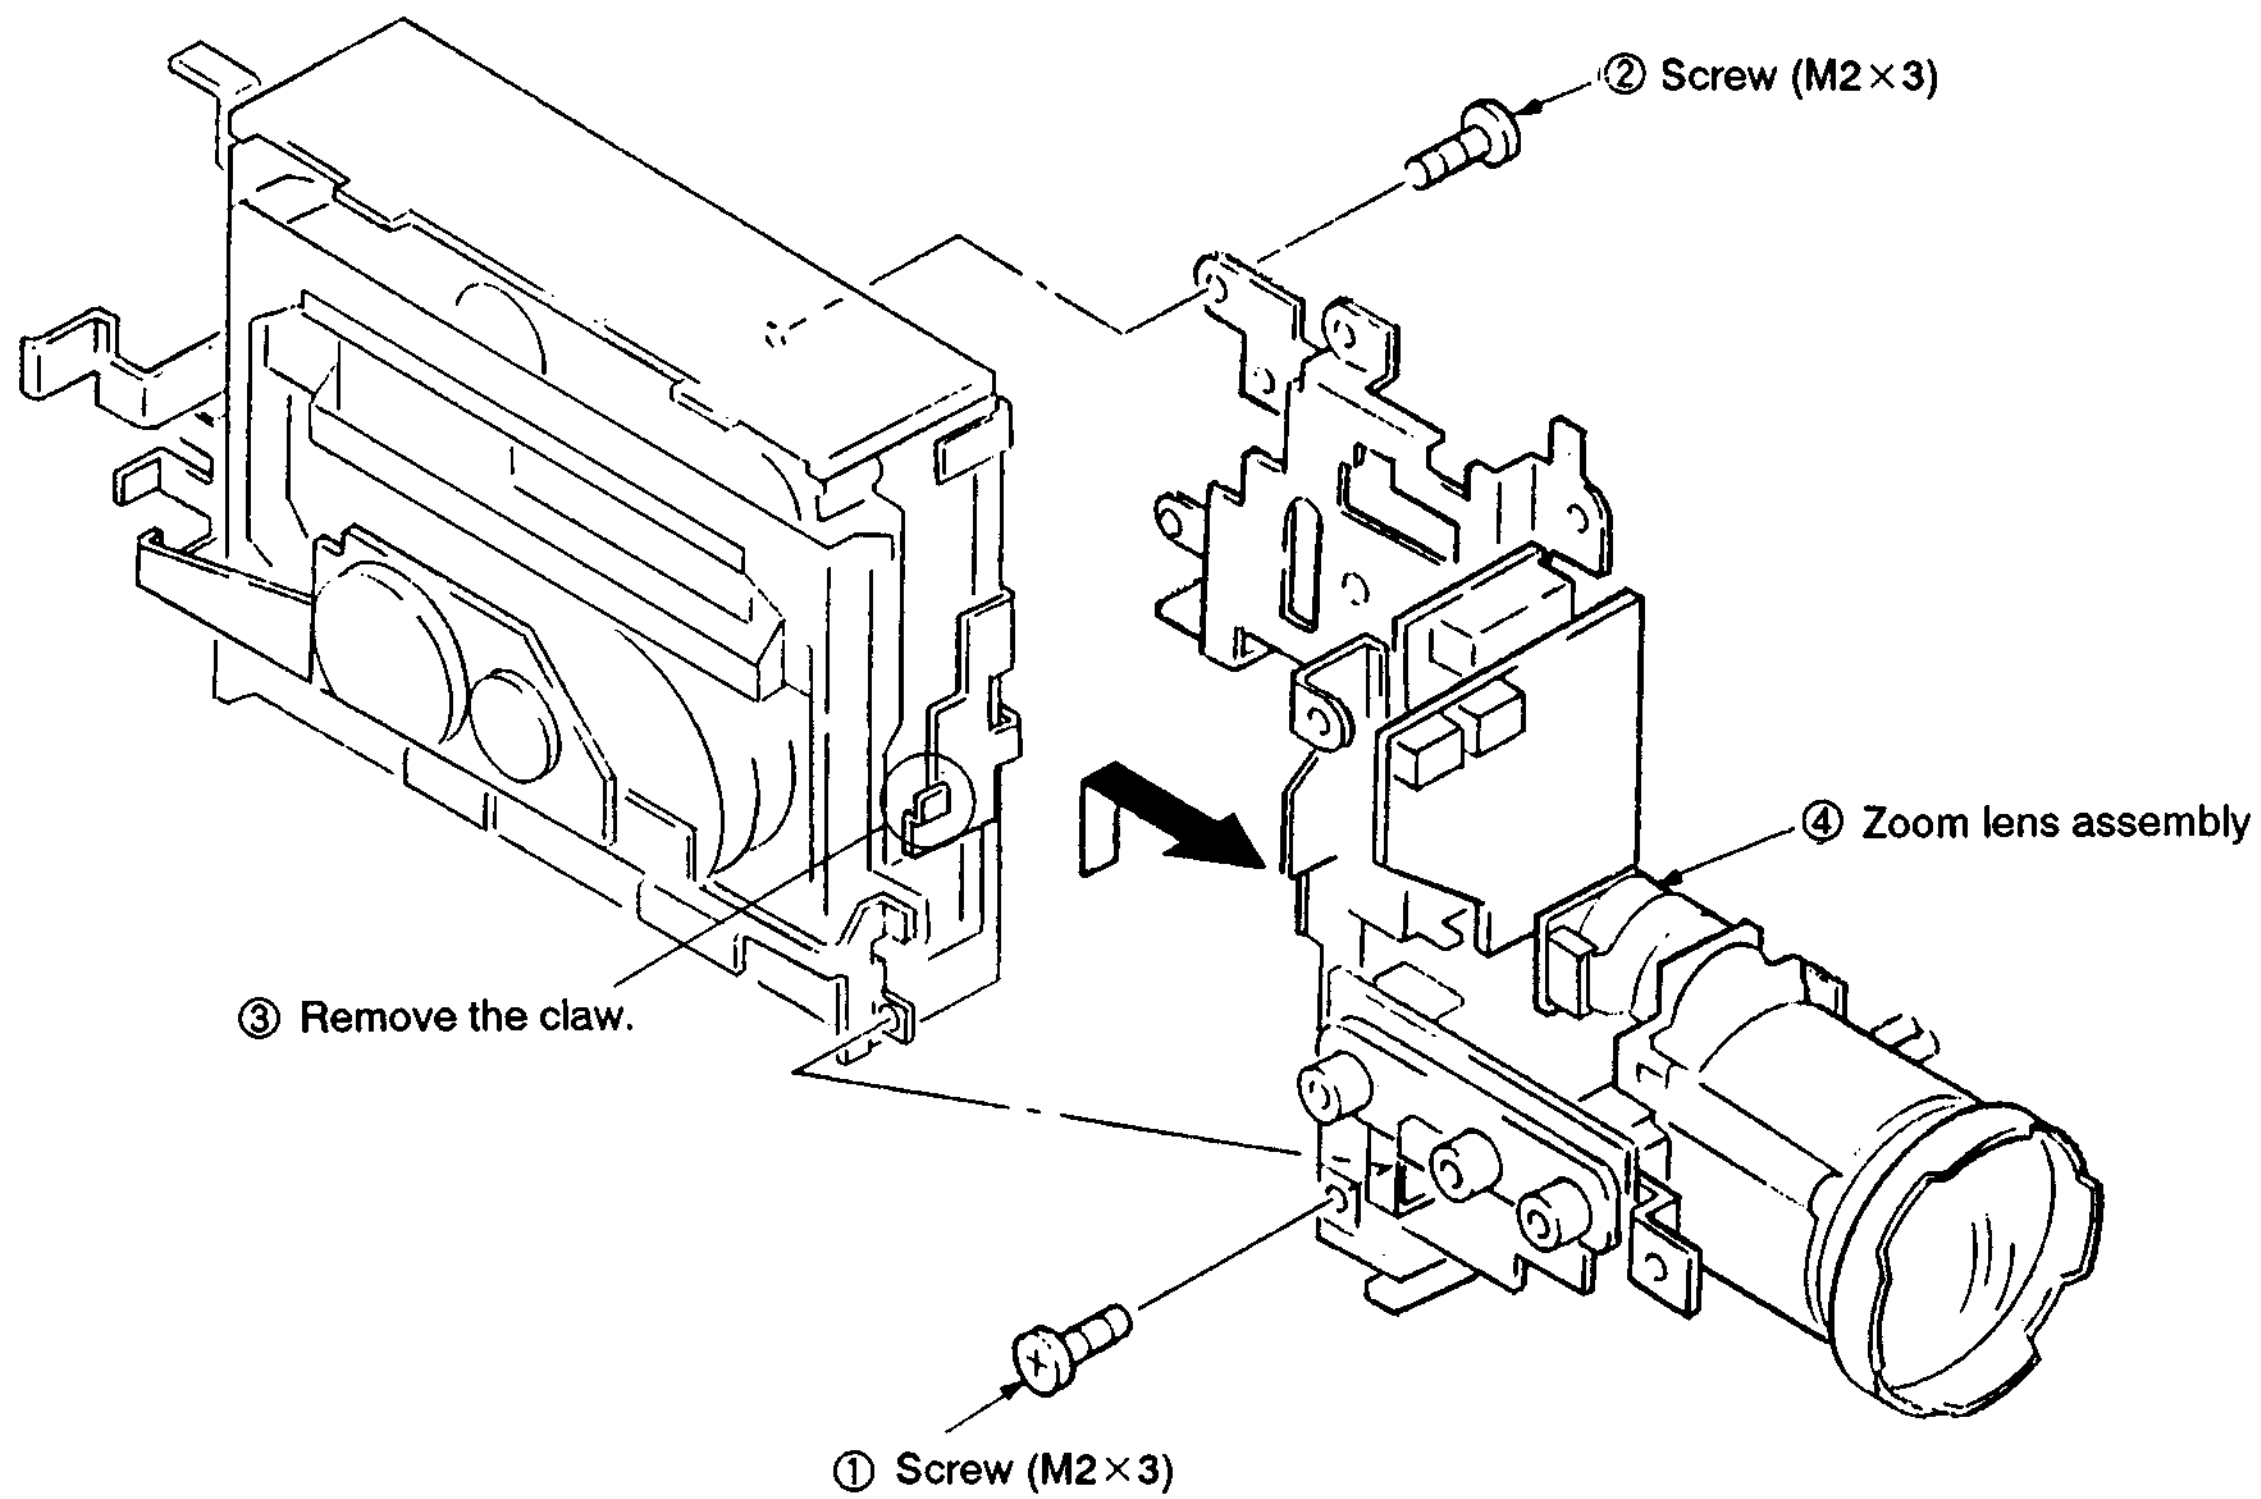


2-12. INTERNAL VIEWS


— Right side —

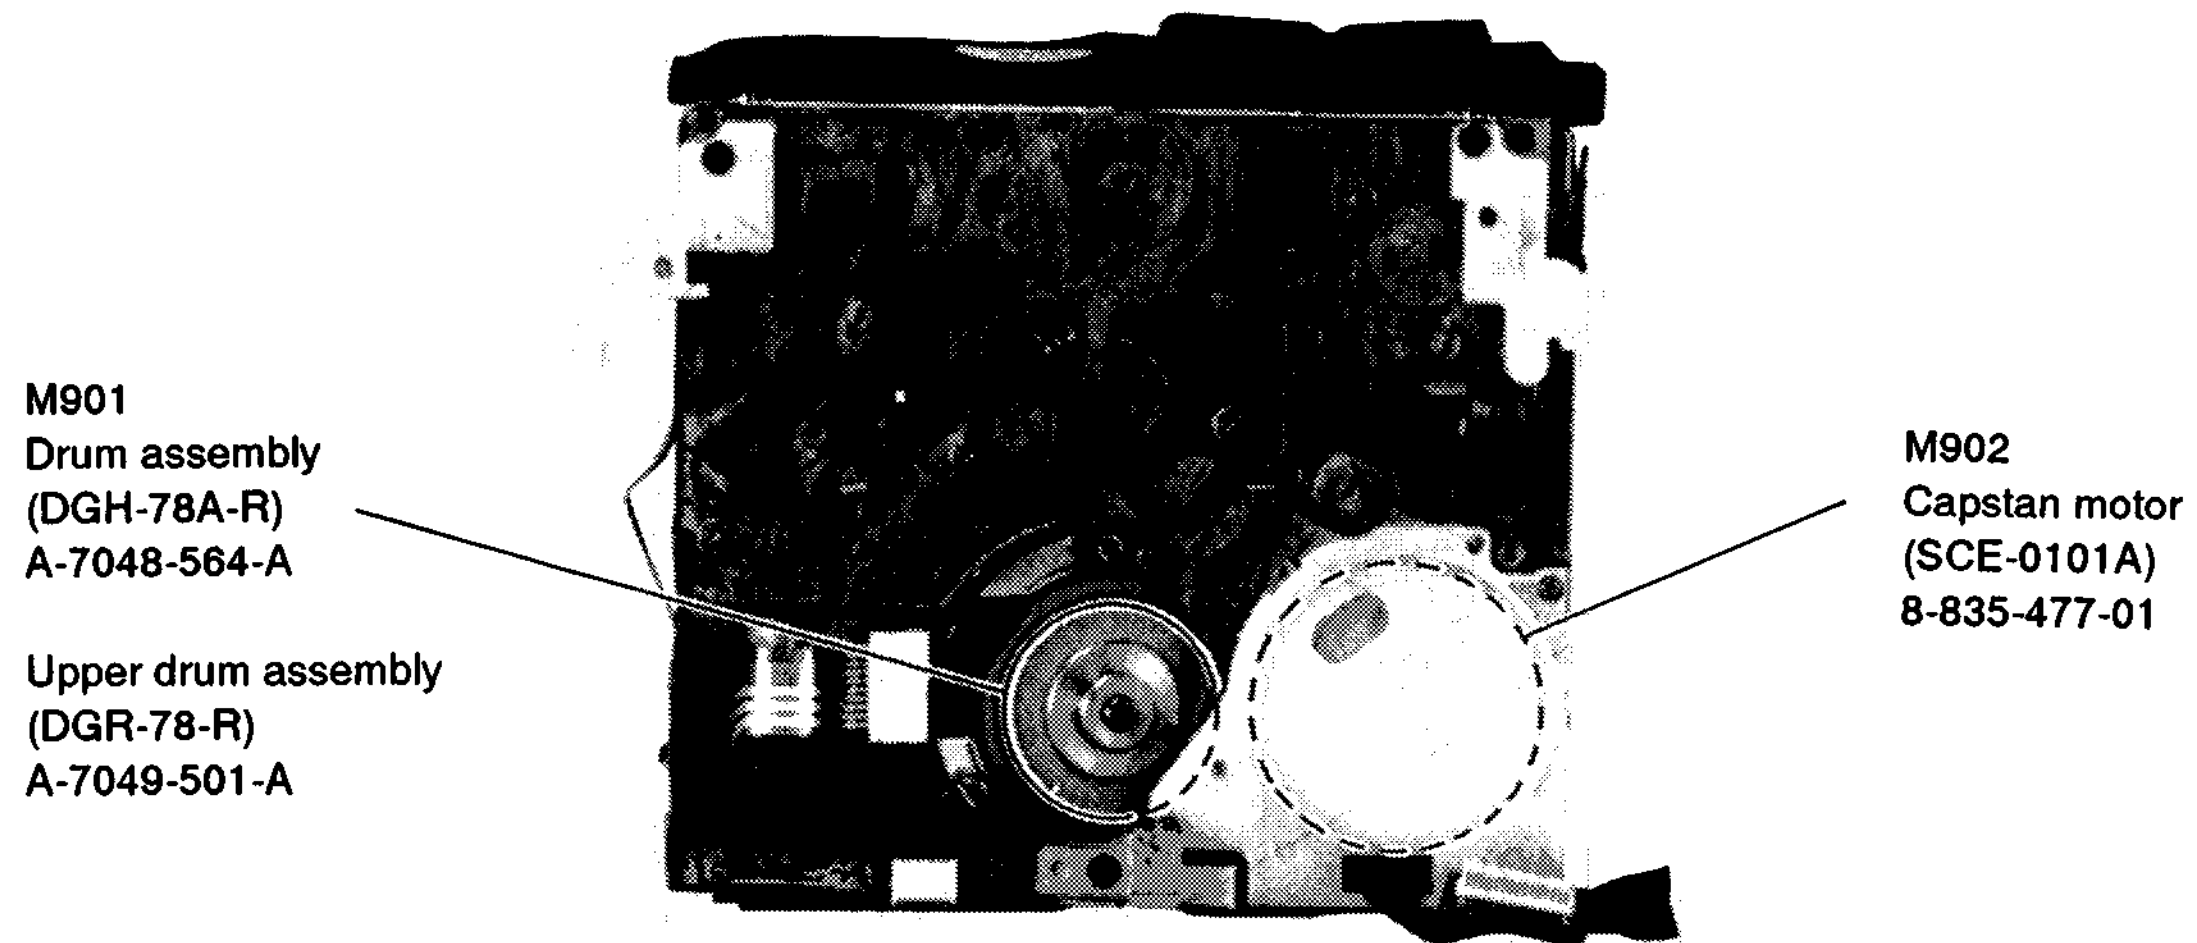

— Left side —

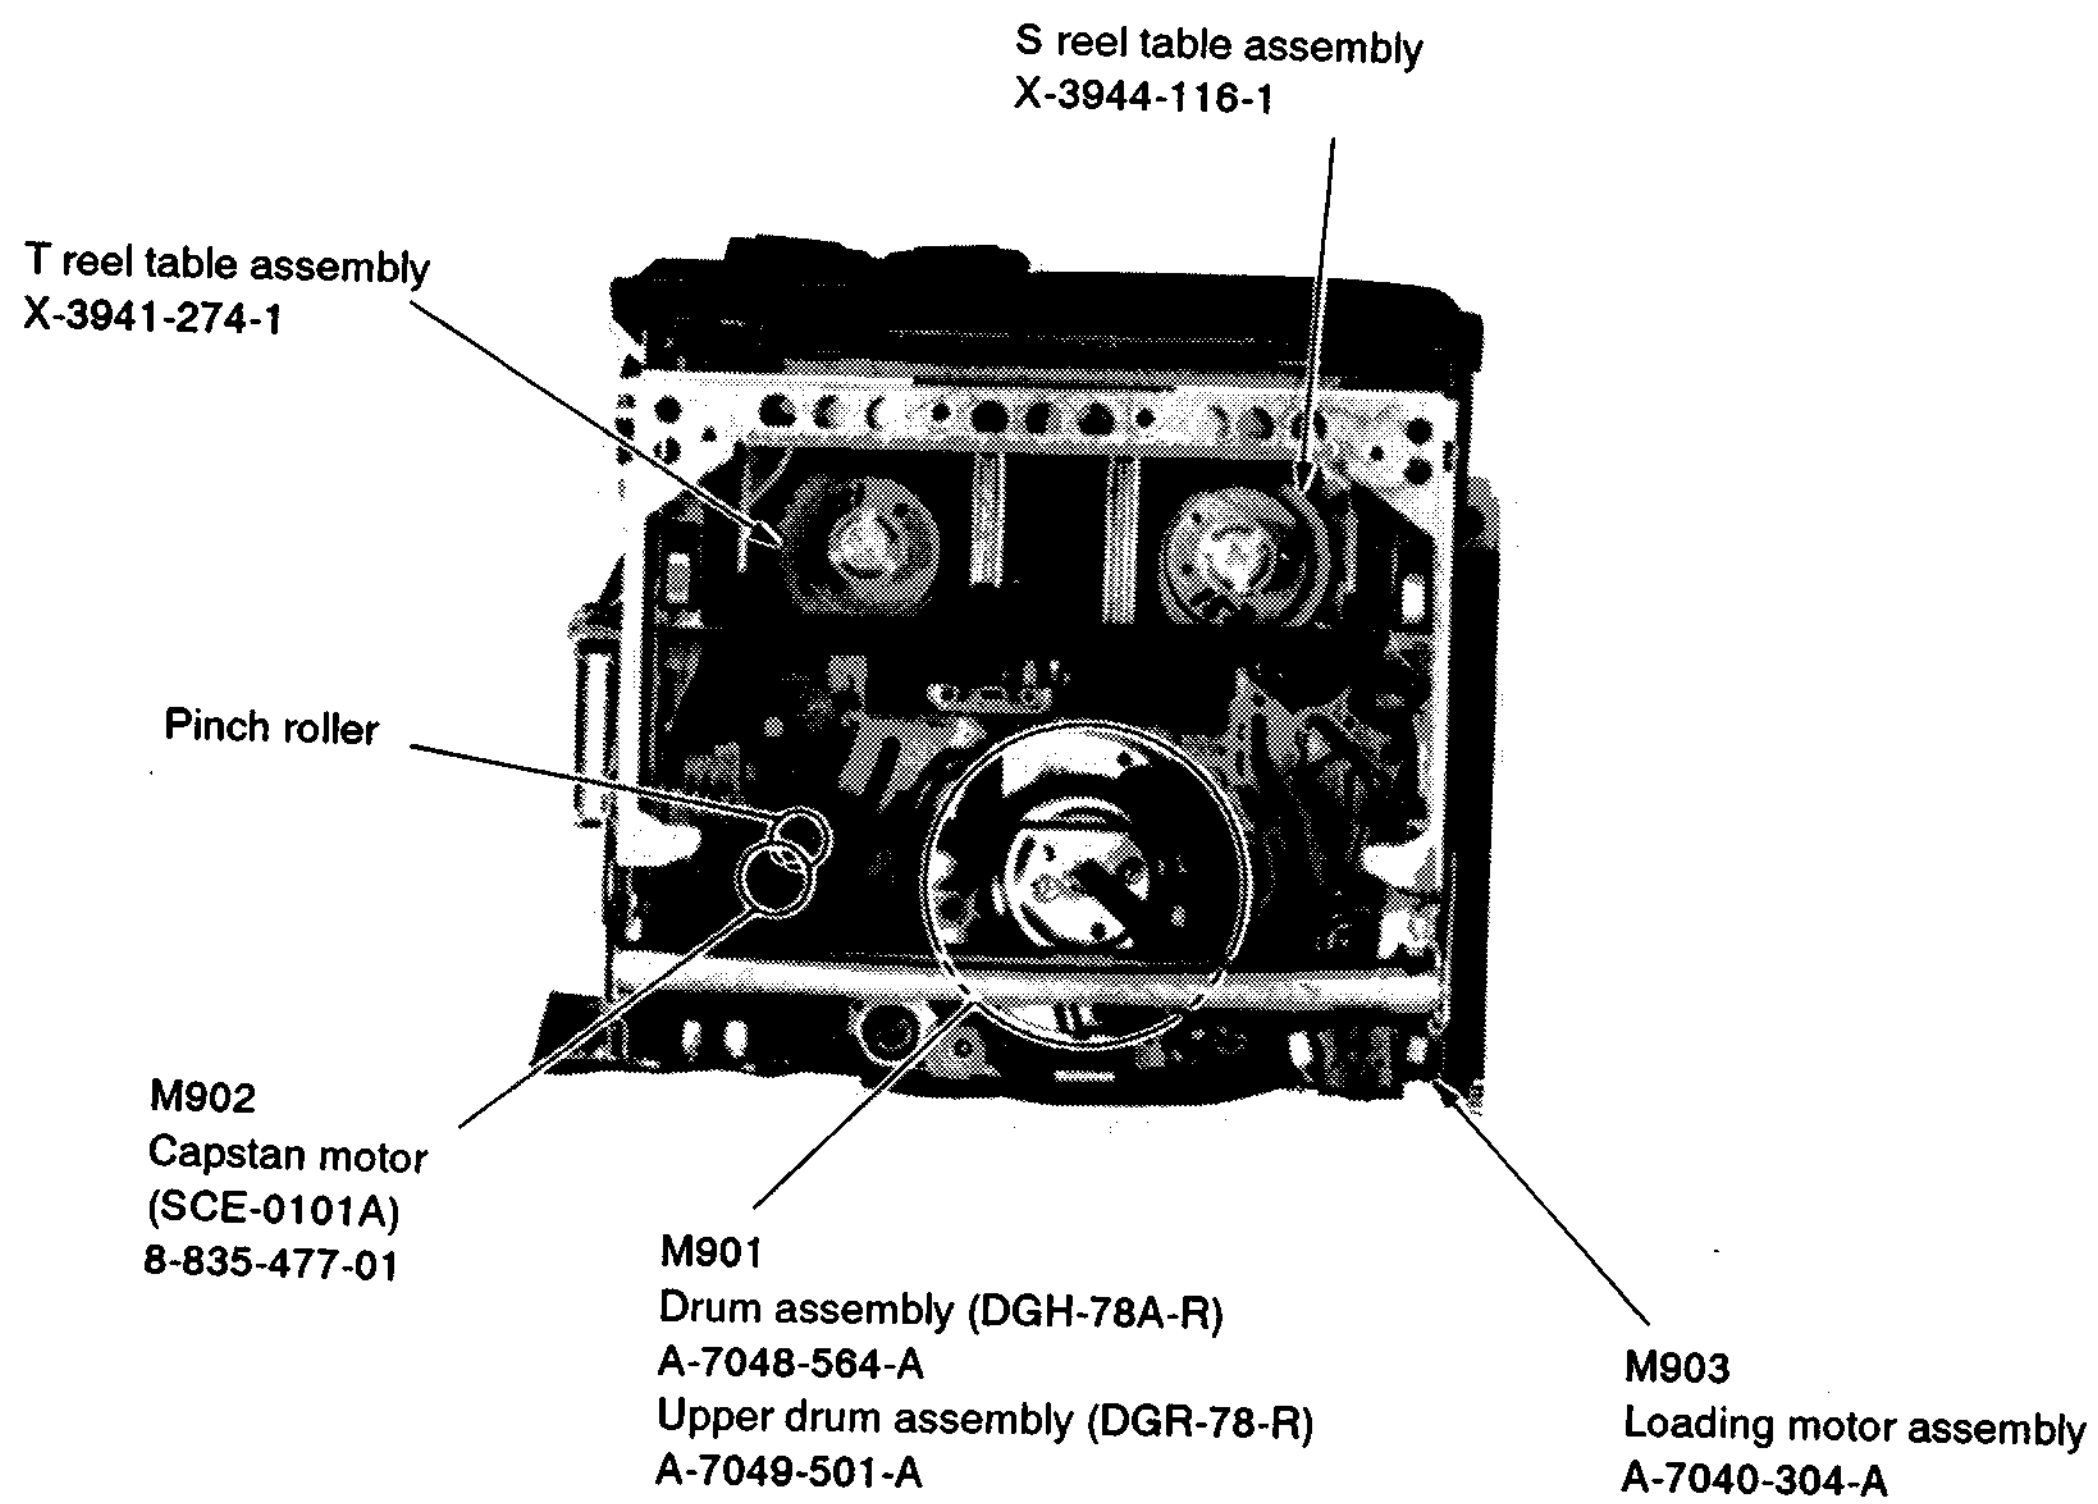

2-13. CIRCUIT BOARDS LOCATION

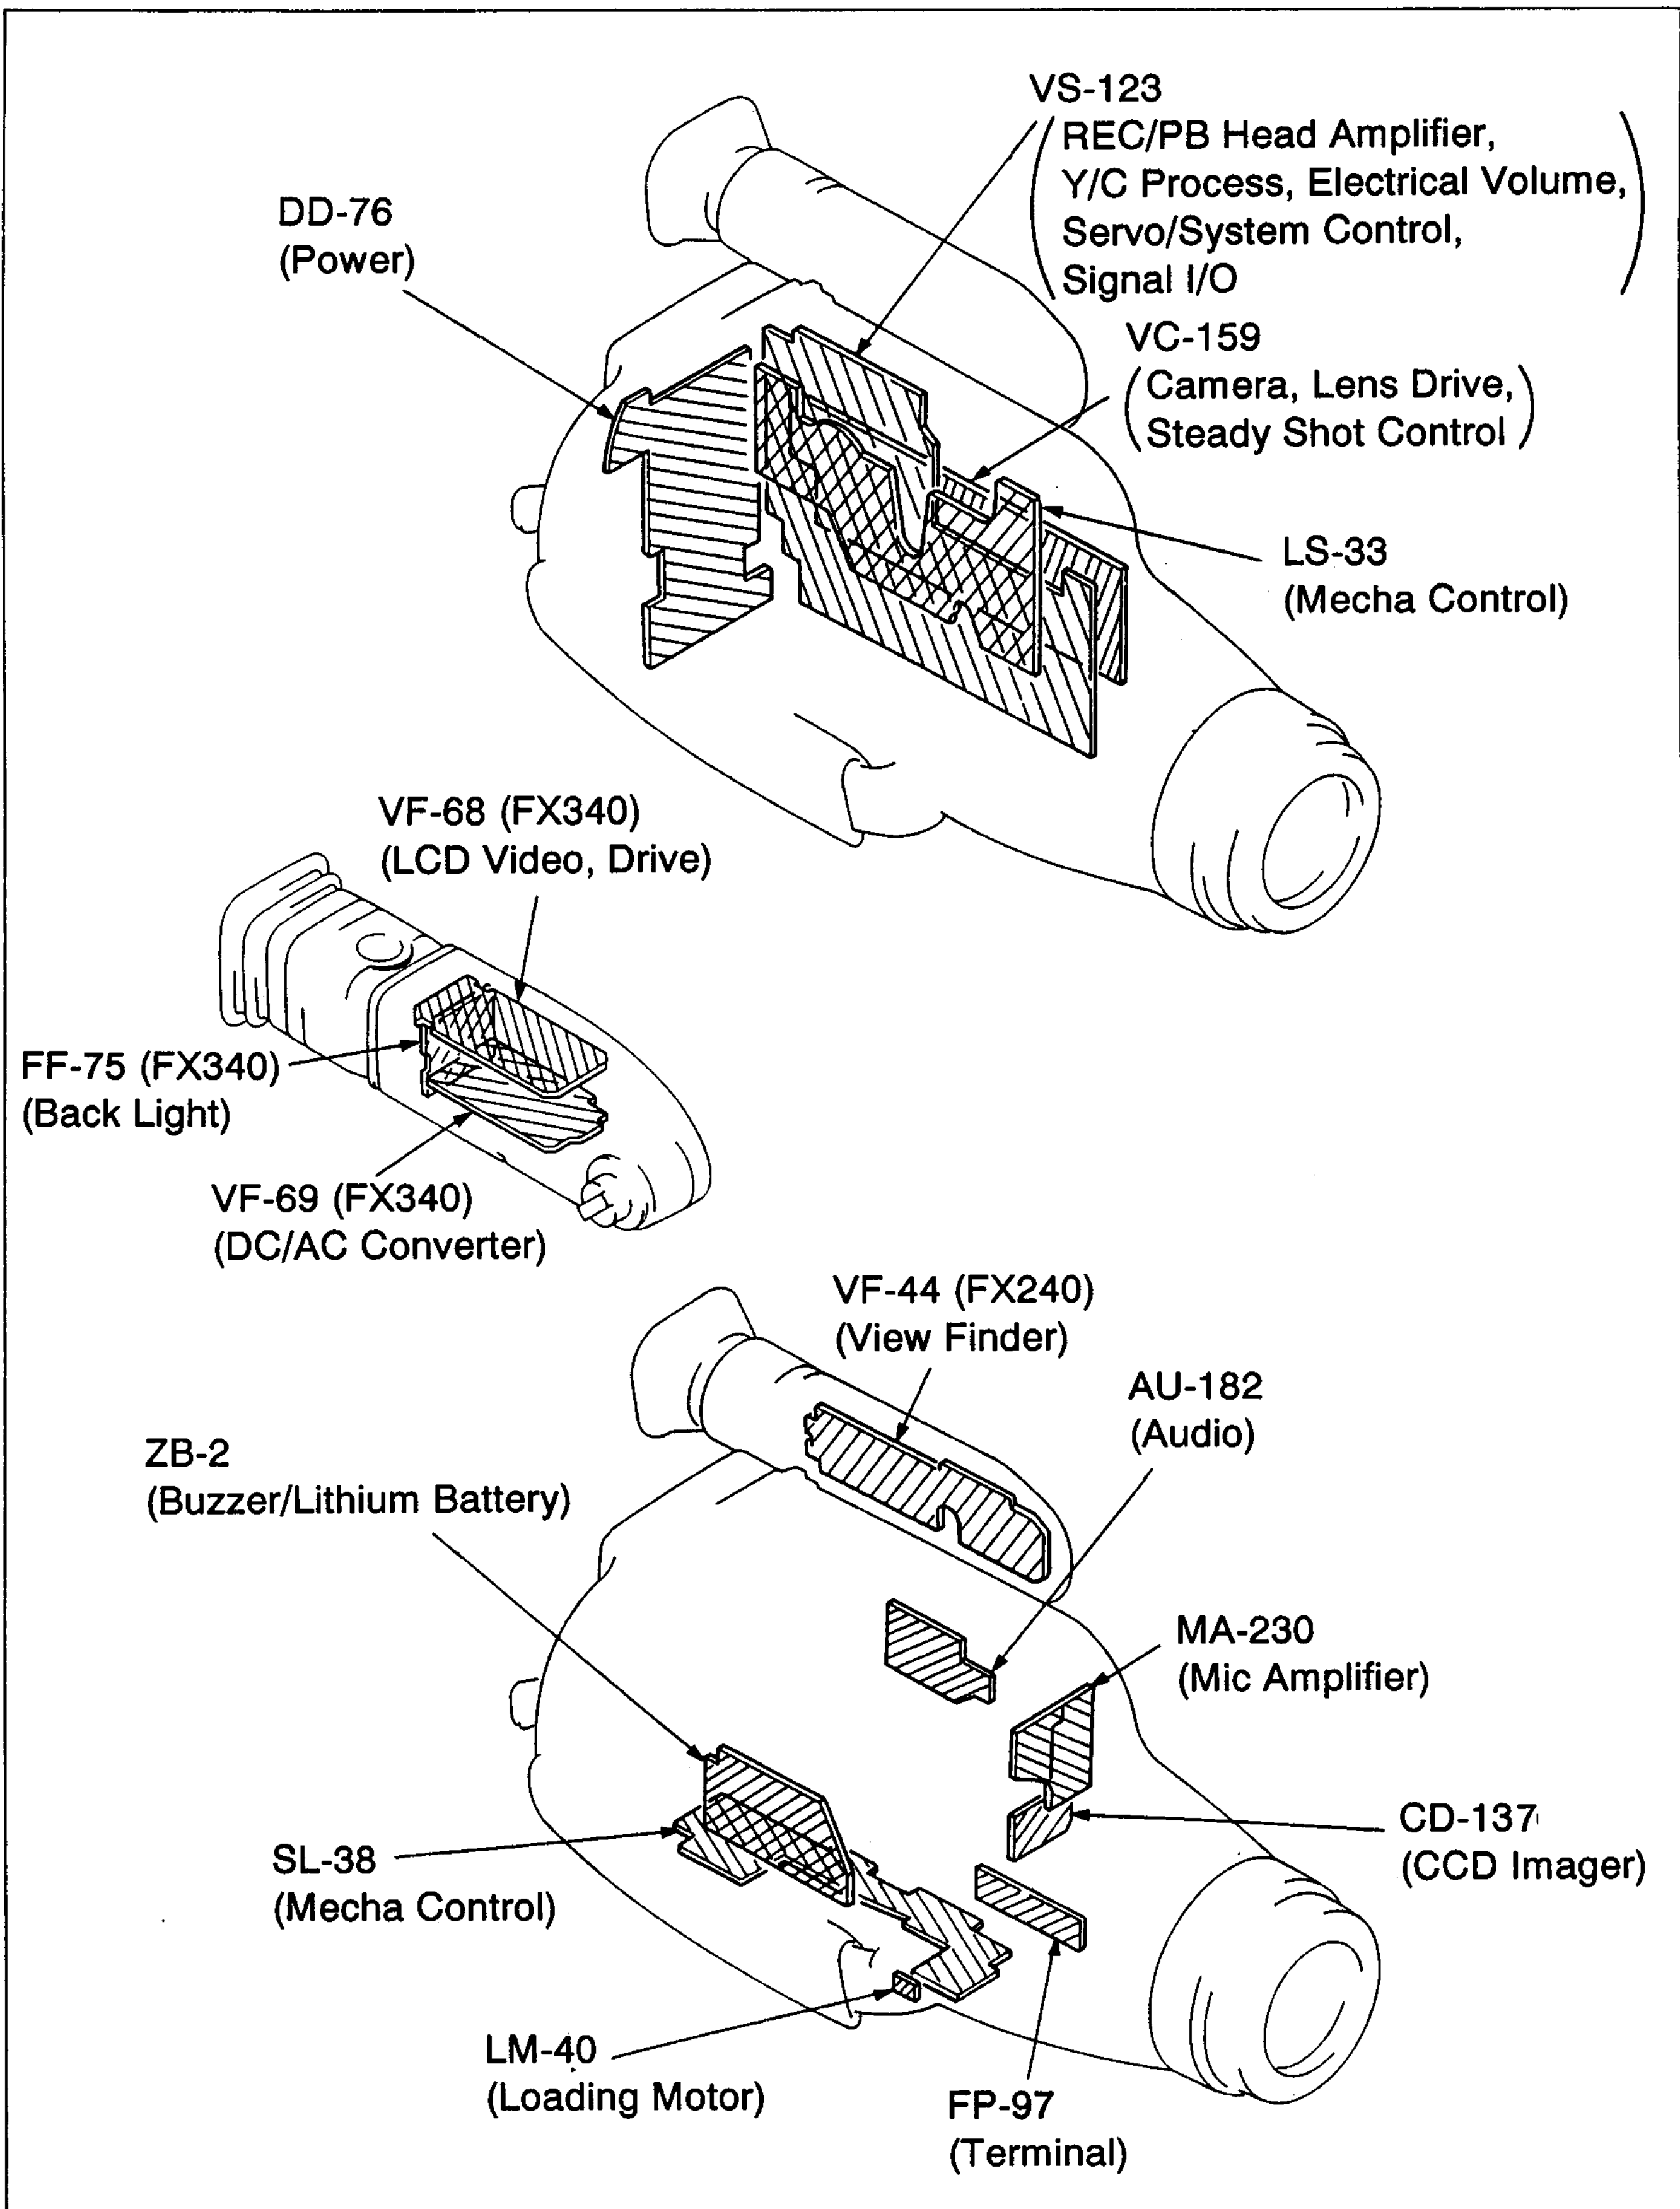

SECTION 5 REPAIR PARTS LIST

5-1. EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Hardware (# mark) list is given in the last of this parts list.


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

5-1-1. FRONT CASE BLOCK ASSEMBLY

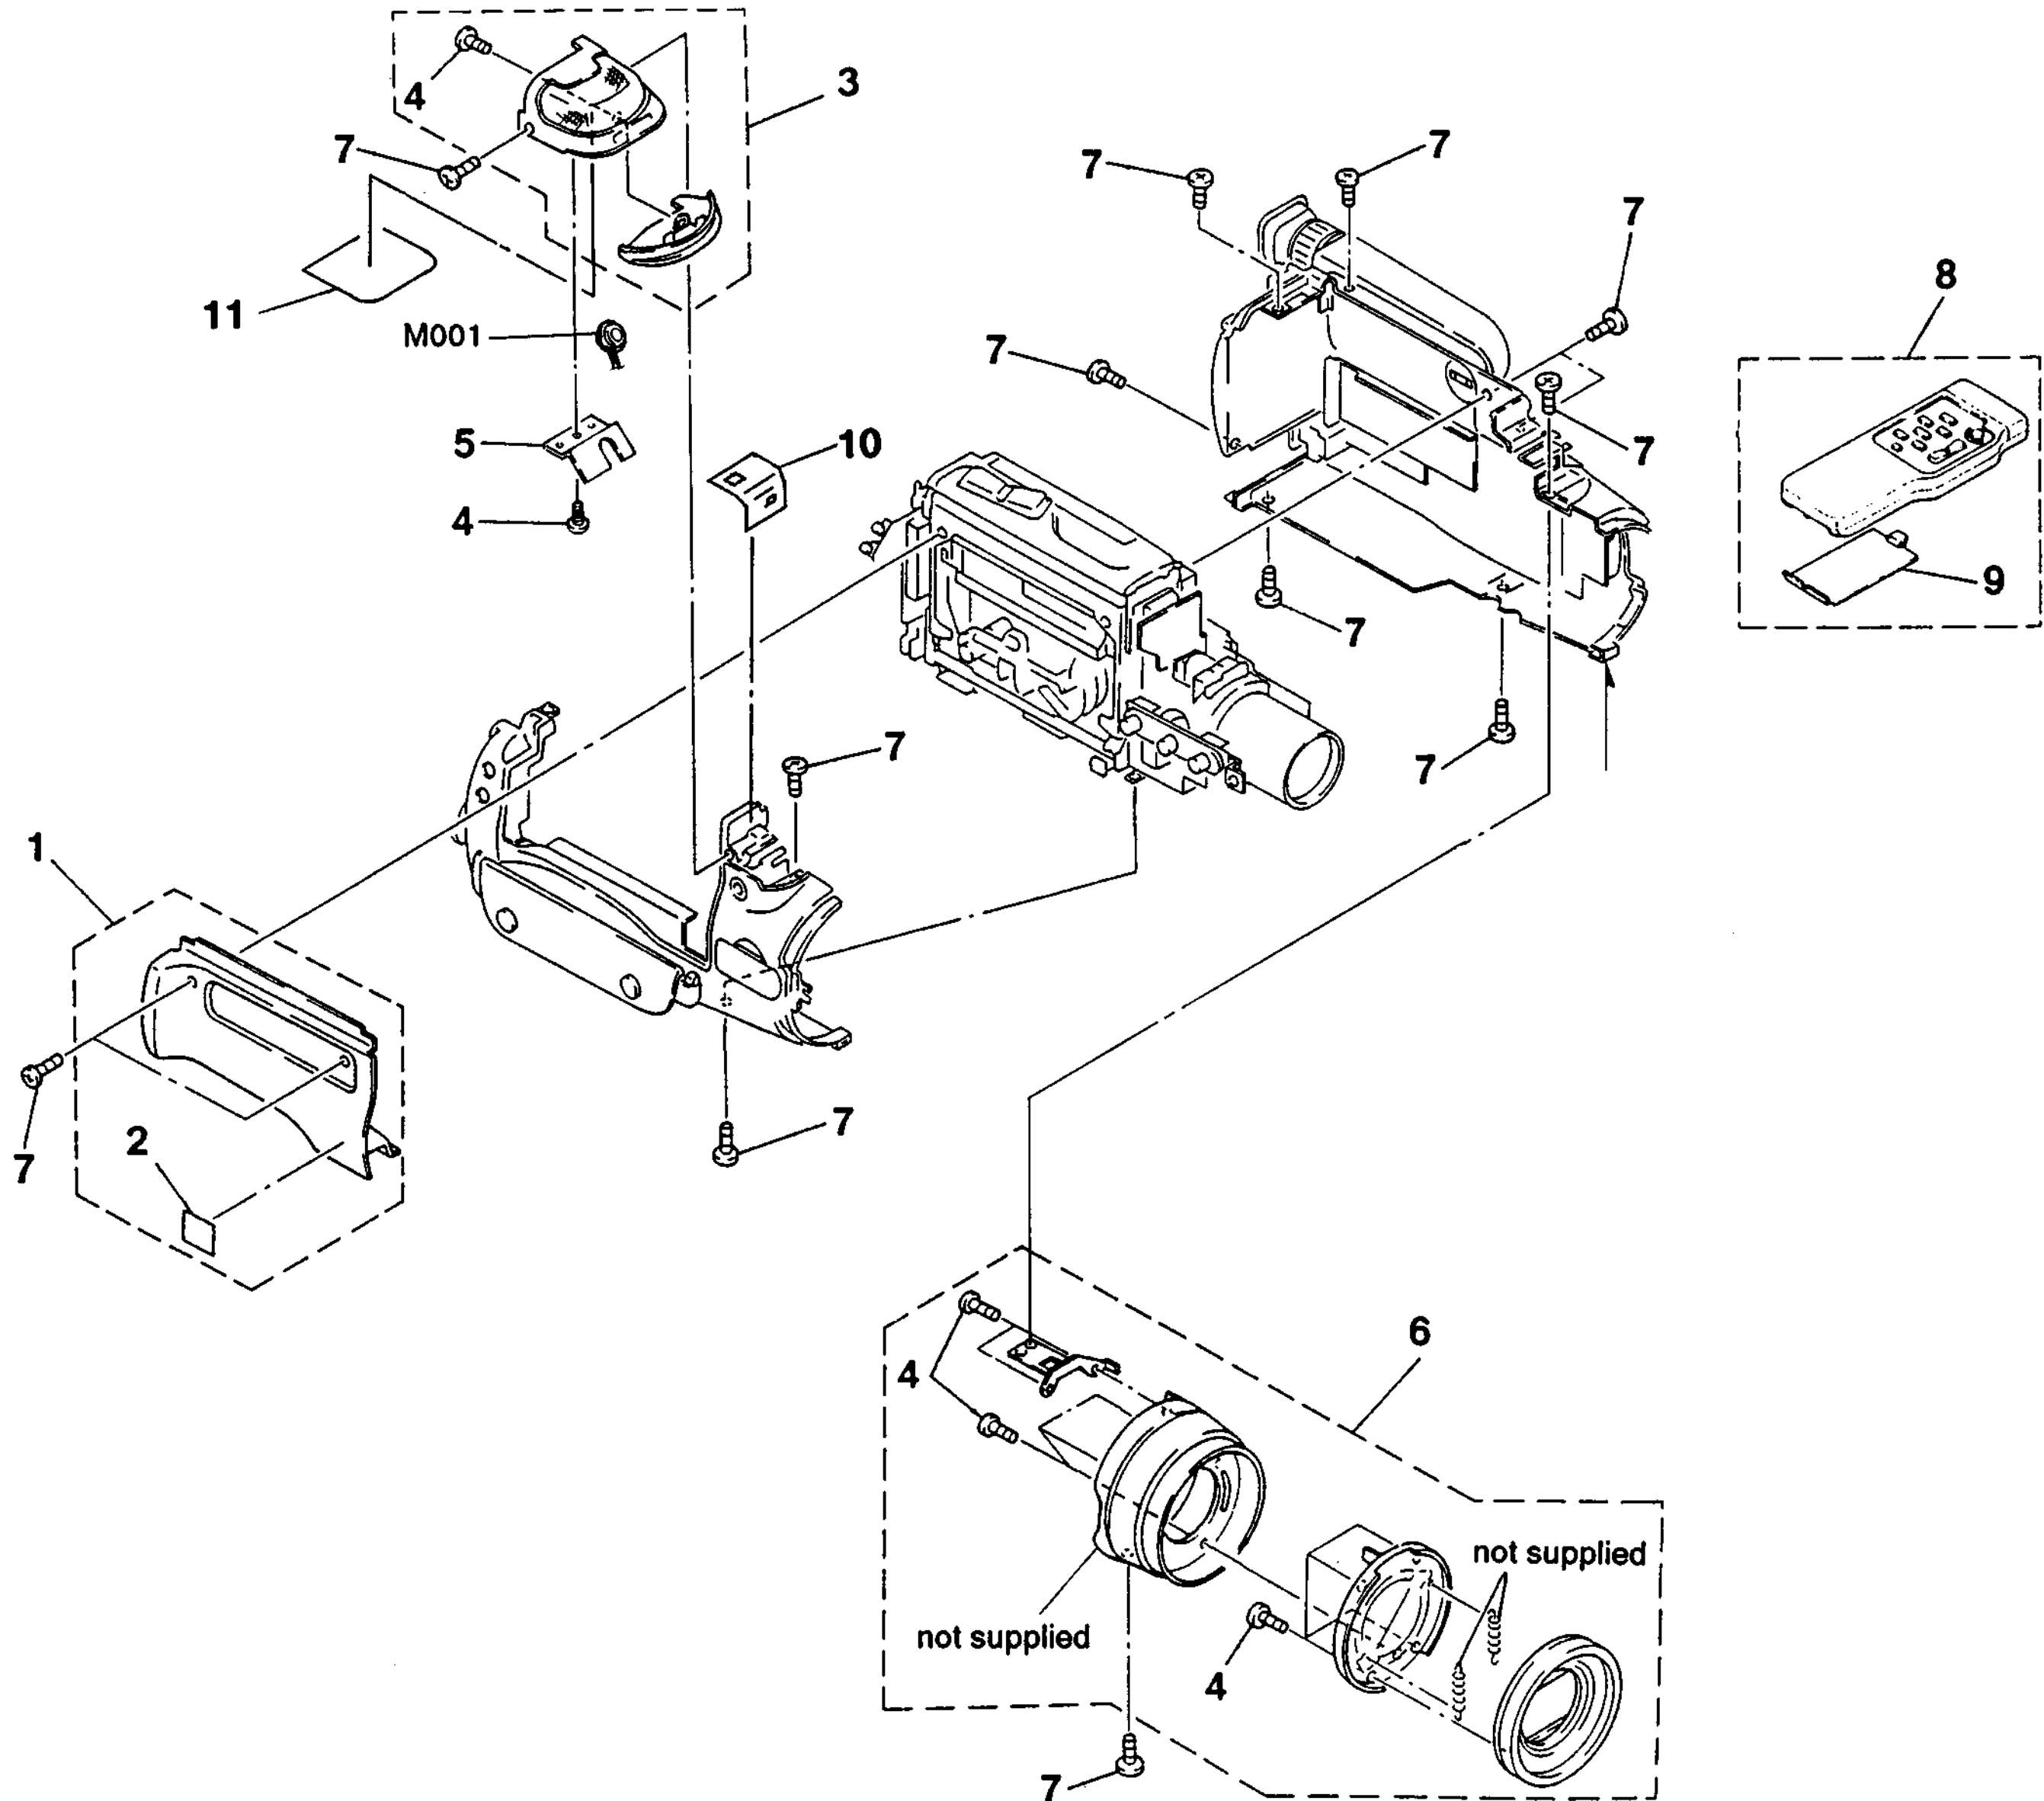


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-3944-867-1	LID ASSY, CASSETTE		7	3-719-381-01	SCREW (M2X4)	
2	3-703-710-41	STICKER, SONY SYMBOL (12)		8	1-467-574-21	REMOTE COMMANDER (RMT-708)	
3	X-3944-866-1	HOLDER (M) ASSY, MICROPHONE		9	3-958-131-01	LID, BATTERY CASE (for RMT-708)	
4	3-948-339-01	SCREW, TAPPING		10	3-964-036-01	CUSHION (I), MN	
* 5	3-958-672-01	PLATE, FIXED (W), MICROPHONE		11	3-963-089-01	CUSHION (I), HOLDER	
6	A-7082-608-A	CASE (L) BLOCK ASSY, FRONT		M001	1-542-162-11	MICROPHONE, CAP	

5-1-2. CABINET (L) BLOCK ASSEMBLY

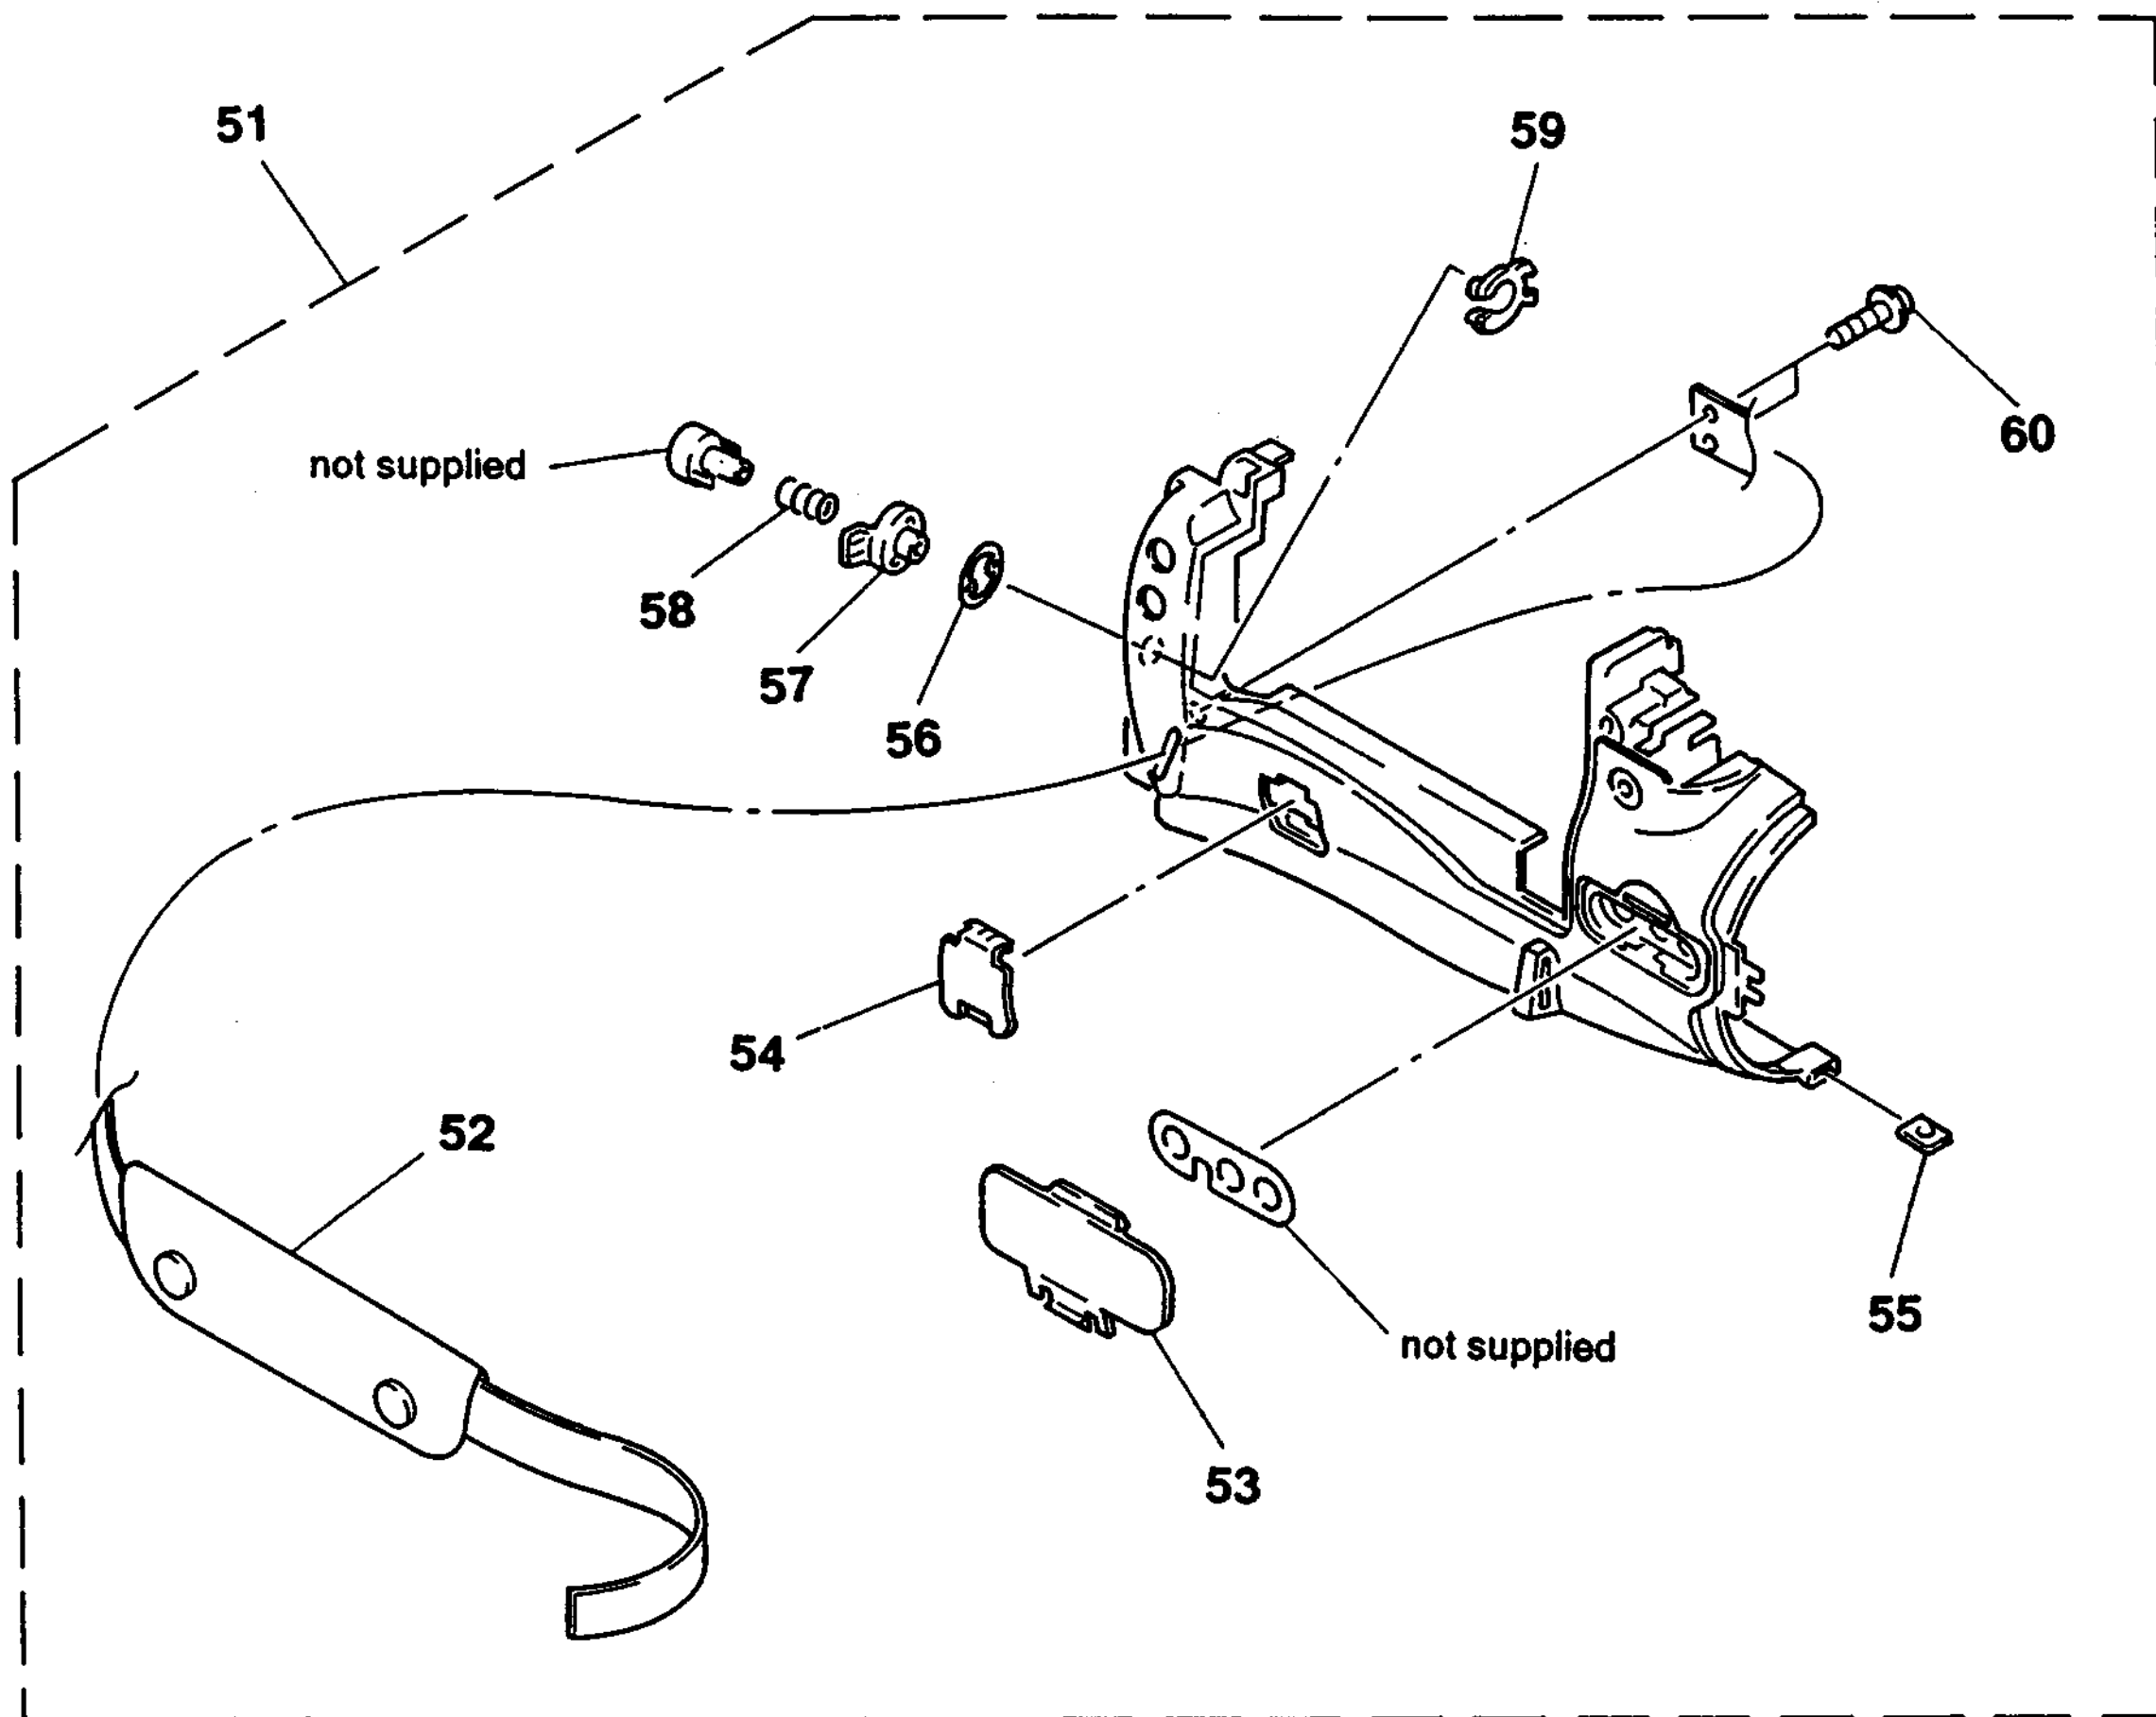


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
51	A-7082-803-A	CABINET (L) BLOCK ASSY (L)		56	3-736-364-01	SPRING	
52	3-960-626-01	BELT, GRIP		57	3-942-985-01	KNOB, STAND-BY	
53	3-958-335-01	COVER, JACK		58	3-578-221-00	SPRING, COMPRESSION	
54	3-958-334-01	LID, BATTERY CASE, LITHIUM		59	3-942-953-01	HOLDER, STAND-BY KNOB	
55	3-718-233-01	NUT, PLATE		60	3-669-480-21	+ PTPWH 2	

5-1-3. CABINET (R) BLOCK ASSEMBLY

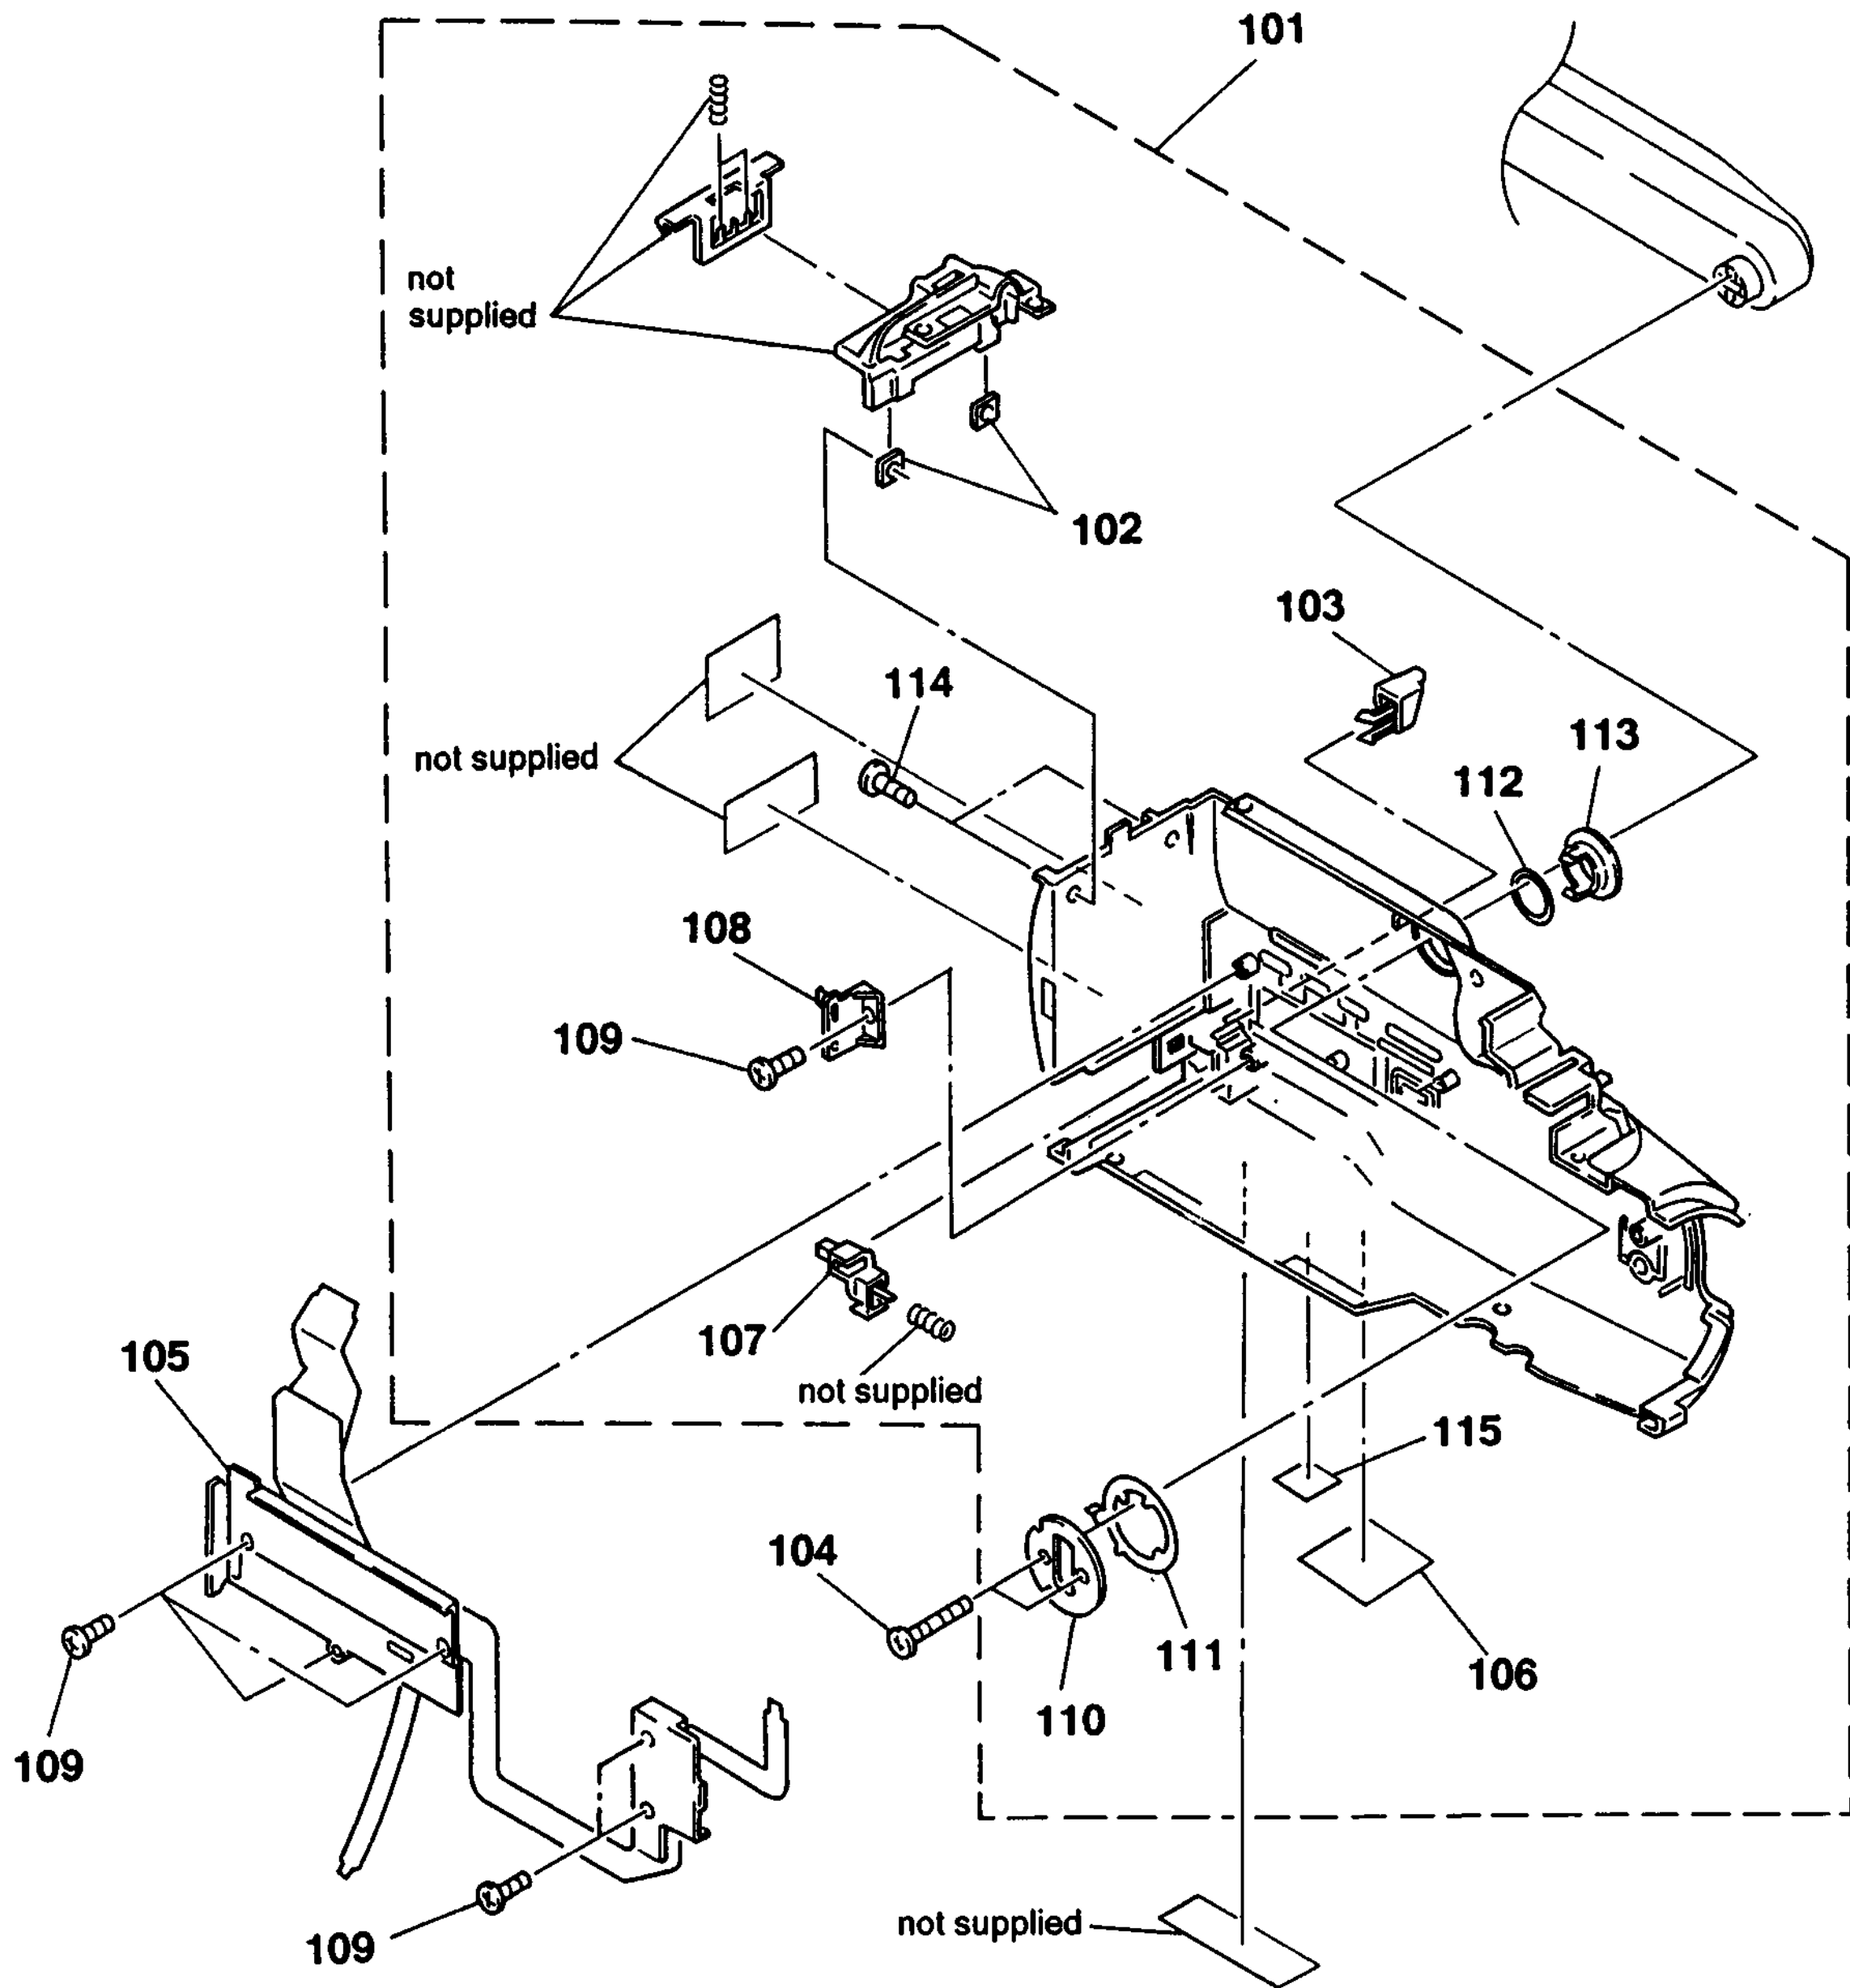

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	X-3944-865-1	CABINET (R) ASSY (FX340)		108	3-958-322-01	HOLDER, BATTERY LOCK	
101	X-3944-884-1	CABINET (R) ASSY (FX240)		109	3-948-339-01	SCREW, TAPPING	
102	3-718-233-01	NUT, PLATE		* 110	3-958-297-01	PLATE, LOCK, TILT	
103	3-958-320-01	BUTTON, BATTERY RELEASE		* 111	3-958-296-01	SPRING, PLATE, TILT	
104	3-740-546-51	SCREW (M2X9) (FX240)		112	3-747-112-01	RING, TILT	
104	3-740-546-61	SCREW (M2X10.5) (FX340)		113	3-747-109-01	SLEEVE, EVF	
105	1-467-648-21	SWITCH BLOCK, CONTROL (CK)		114	3-719-381-01	SCREW (M2X4)	
106	3-957-897-01	LABEL, FAROUDJA RECYCLE FCC		115	3-704-256-01	LABEL, CAUTION	
107	3-958-321-01	CLAW (LOWER), BATTERY LOCK					

5-1-4. EVF BLOCK ASSEMBLY (FX240)

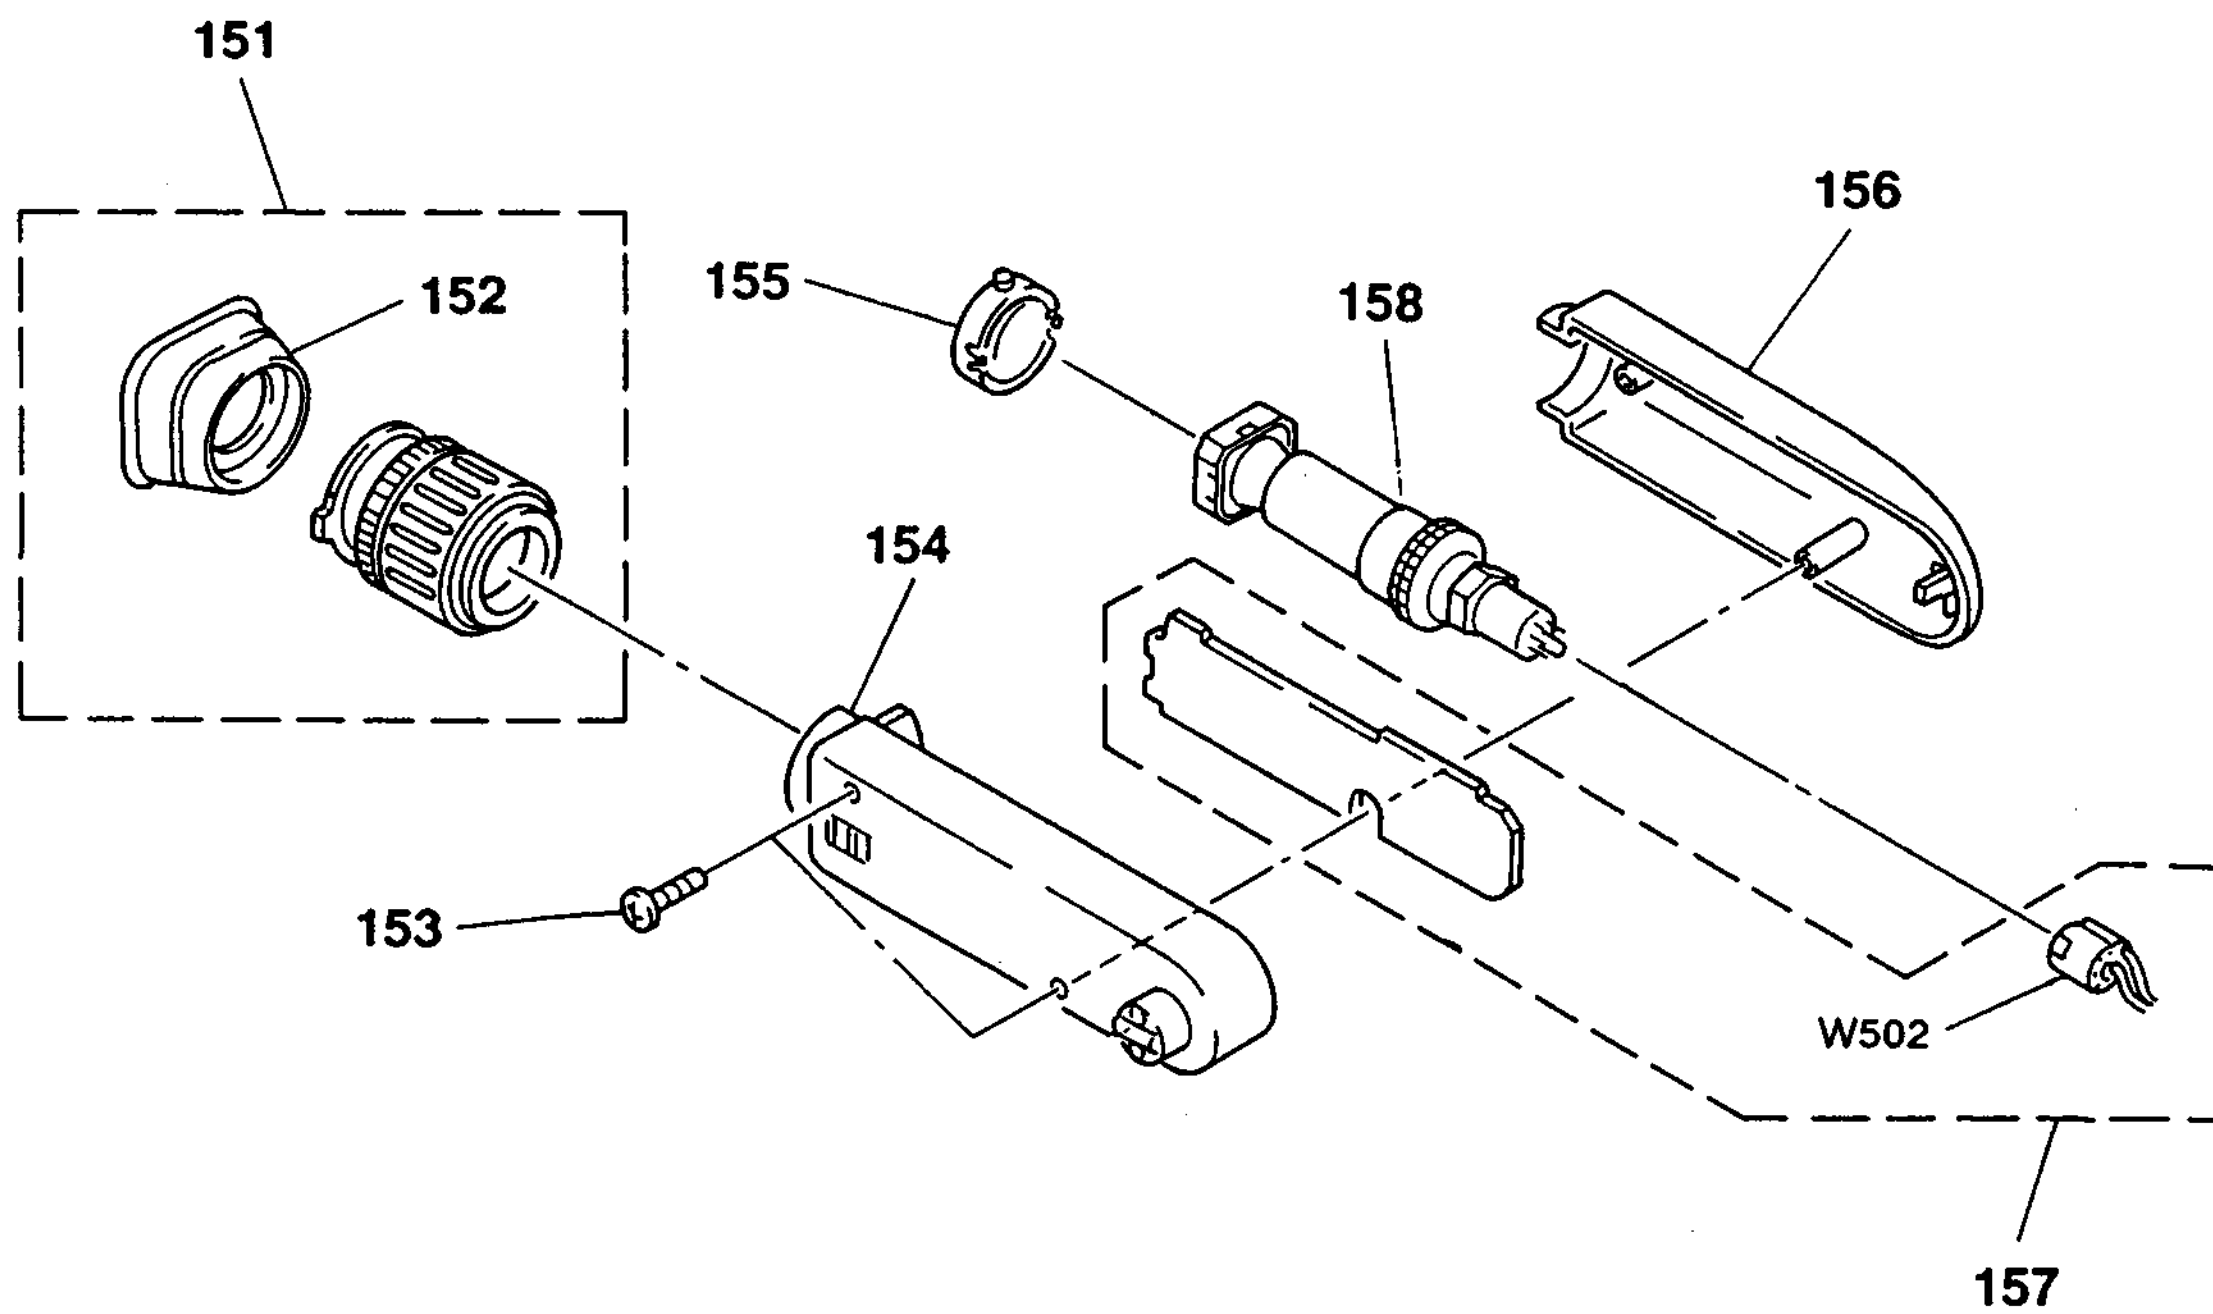


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description
151	A-7081-897-C	HOLDER BLOCK ASSY, FINDER
152	3-946-212-01	EYE CUP
153	3-713-790-31	SCREW (M2X8), TAPPING, P3
154	X-3943-848-1	CABINET(L) ASSY, EVF
155	A-7081-905-E	LENS ASSY, VF


Remark	Ref. No.	Part No.	Description	Remark
	156	X-3943-844-1	CABINET(R) ASSY, EVF	
	* 157	A-7063-947-A	VF-44 BOARD, COMPLETE	
	\triangle 158	1-452-566-11	CRT ASSY (M01KKX07WB10)	
	W502	1-526-978-51	SOCKET ASSY, CRT	

5-1-5. COLOR EVF BLOCK ASSEMBLY (FX340)

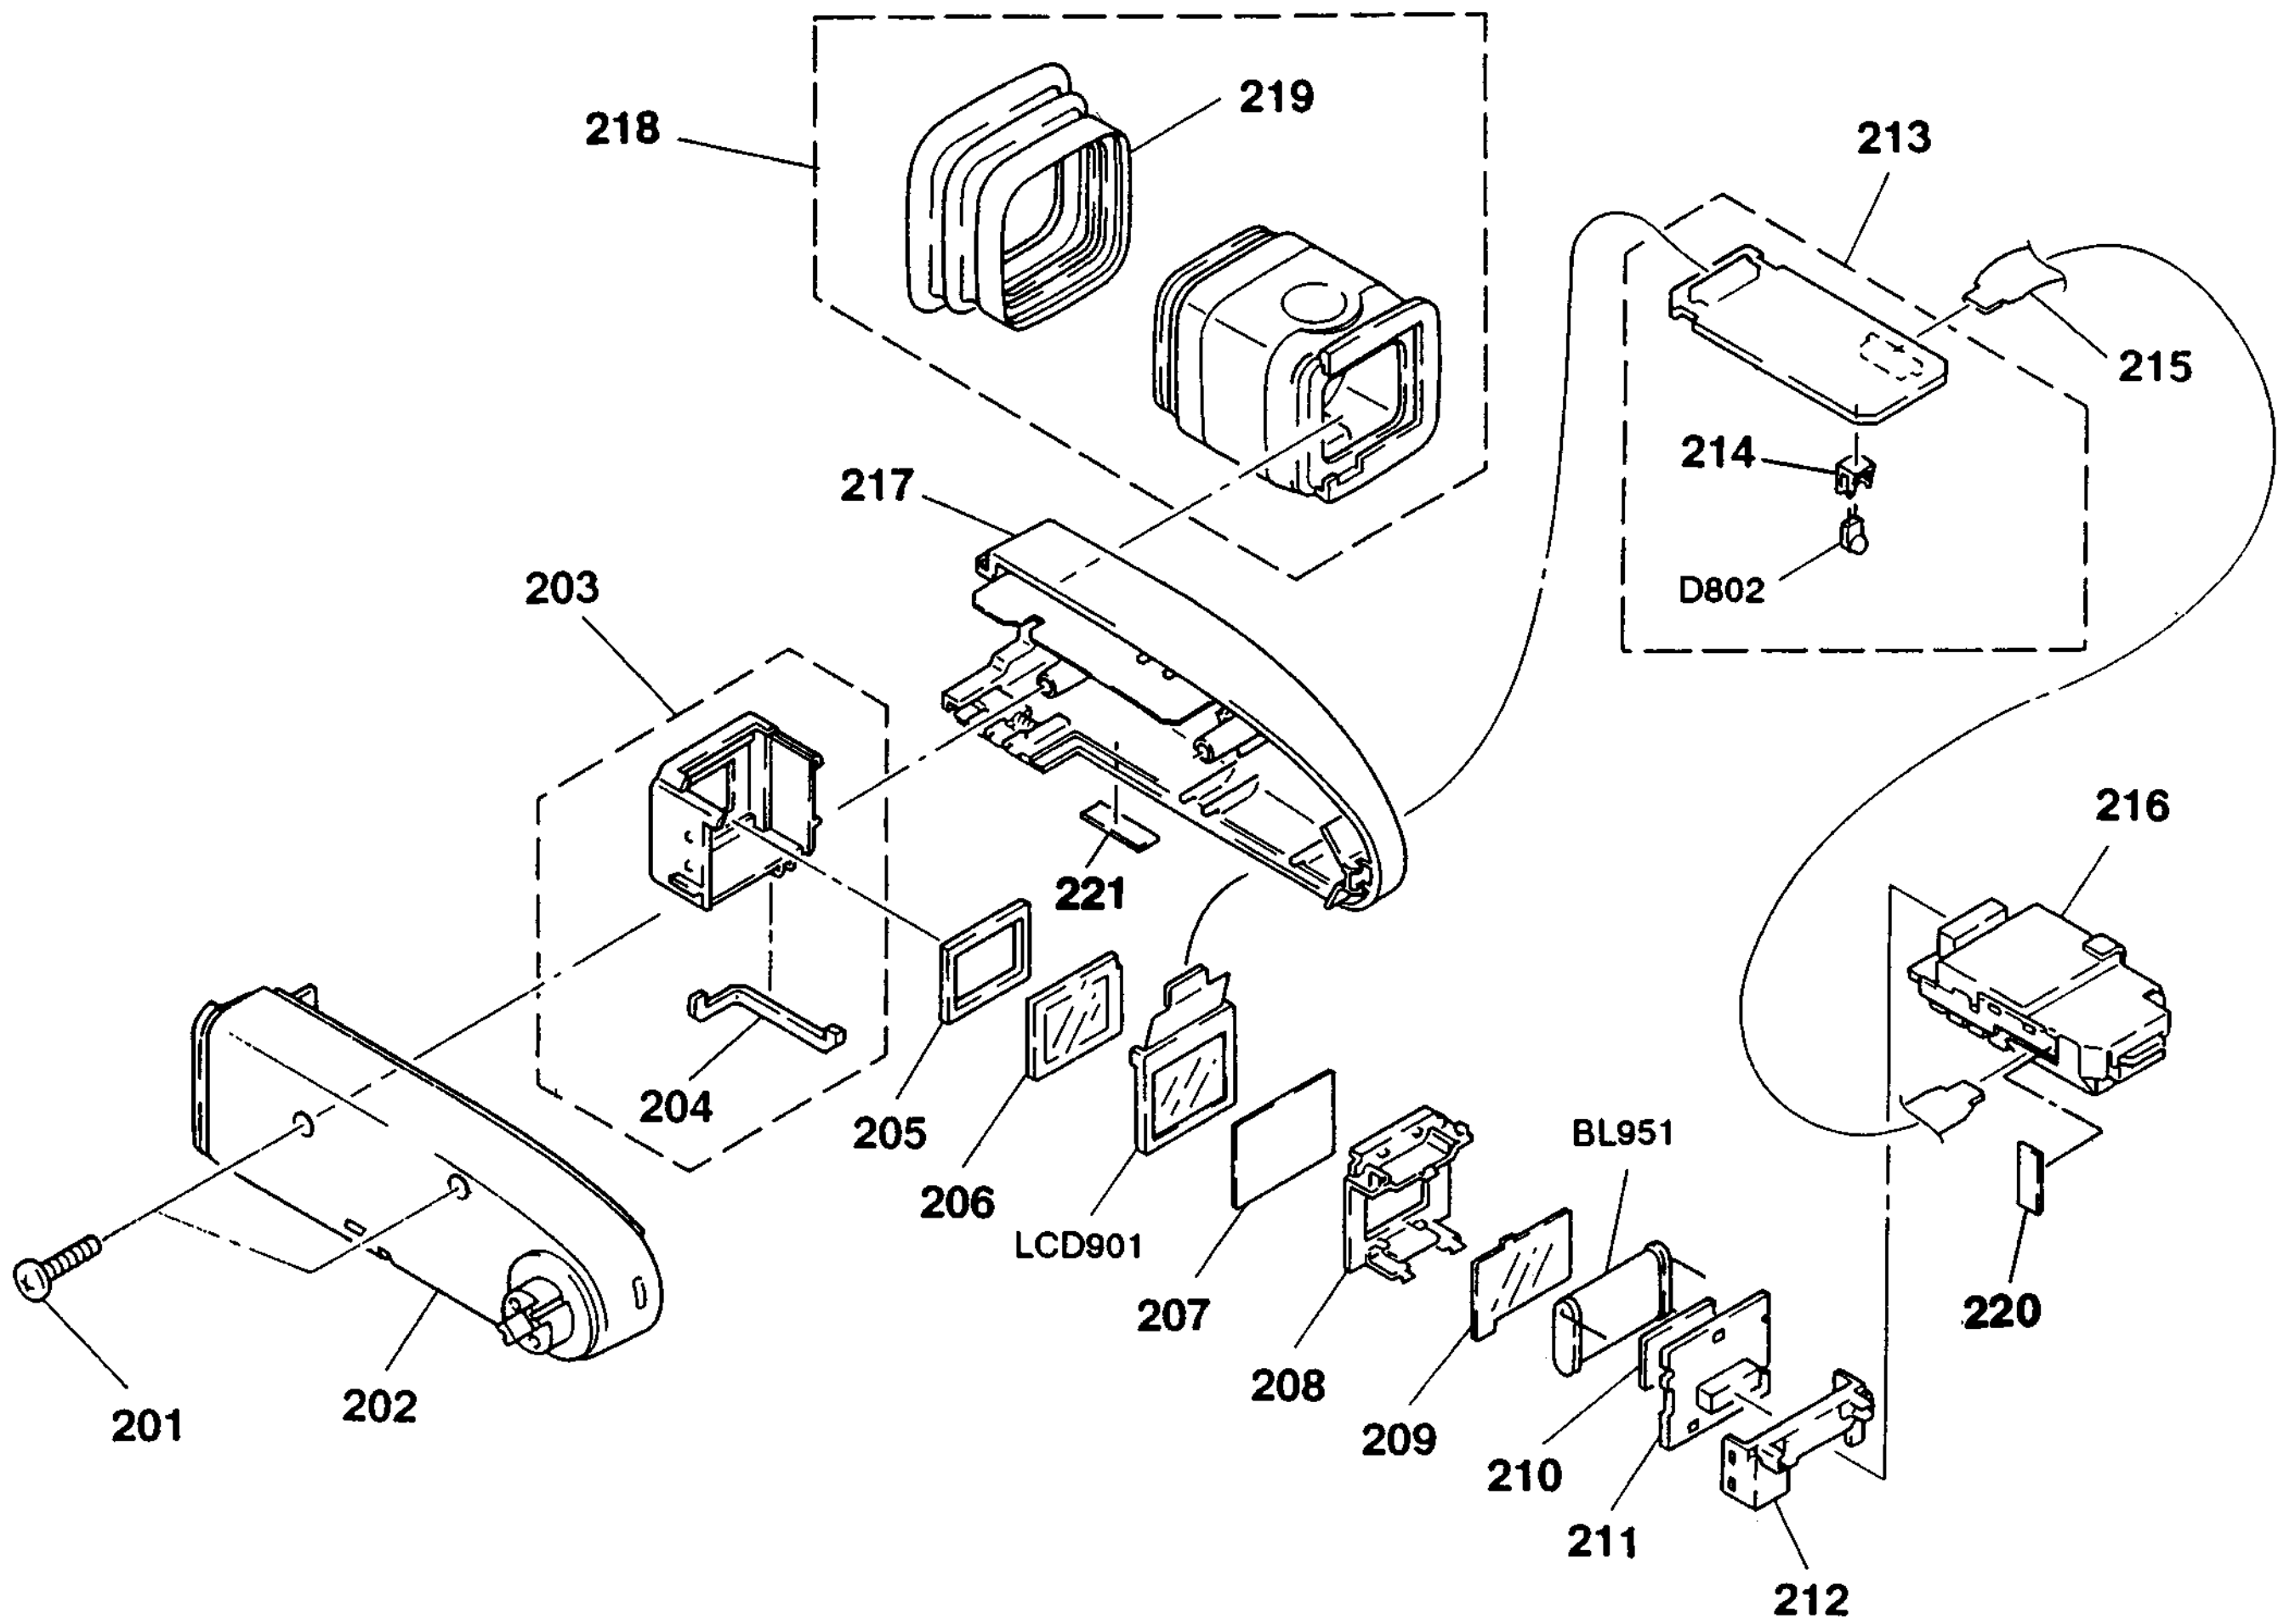


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-713-790-31	SCREW (M2X8), TAPPING, P3		* 213	A-7063-779-A	VF-68 BOARD, COMPLETE	
202	X-3943-366-1	CABINET (L) ASSY, EVF		214	3-942-888-01	HOLDER, LED	
203	X-3943-368-1	HOLDER ASSY, LCD		215	1-643-806-11	FP-539 FLEXIBLE BOARD	
* 204	3-947-711-01	GUIDE, LIGHT, INNER TALLY		* 216	A-7063-780-A	VF-69 BOARD, COMPLETE	
* 205	3-955-339-11	SPACER, LCD		217	X-3943-367-1	CABINET (R) ASSY, EVF	
* 206	3-955-340-01	FILTER, LCD		218	X-3943-369-1	HOLDER ASSY, FINDER	
207	3-958-280-01	ILLUMINATOR, BL		219	3-948-162-01	EYE CUP	
208	X-3943-227-1	HOLDER ASSY, BL		220	3-831-441-XX	SPACER, KNOB	
* 209	3-955-570-01	PLATE, CONDENSE, BL		221	3-948-291-01	LABEL (3), EVF	
* 210	3-955-573-01	SPACER (E), BL		BL951	1-519-746-21	TUBE, FLUORESCENT (0.7 INCH)	
* 211	A-7071-913-A	FF-75 BOARD, COMPLETE		D802	8-719-984-02	LED BR4371F (TALLY)	
212	3-947-714-11	HOLDER (R), LCD		LCD901	8-753-011-00	LCX003BK-1	

5-1-6. MAIN BOARDS ASSEMBLY

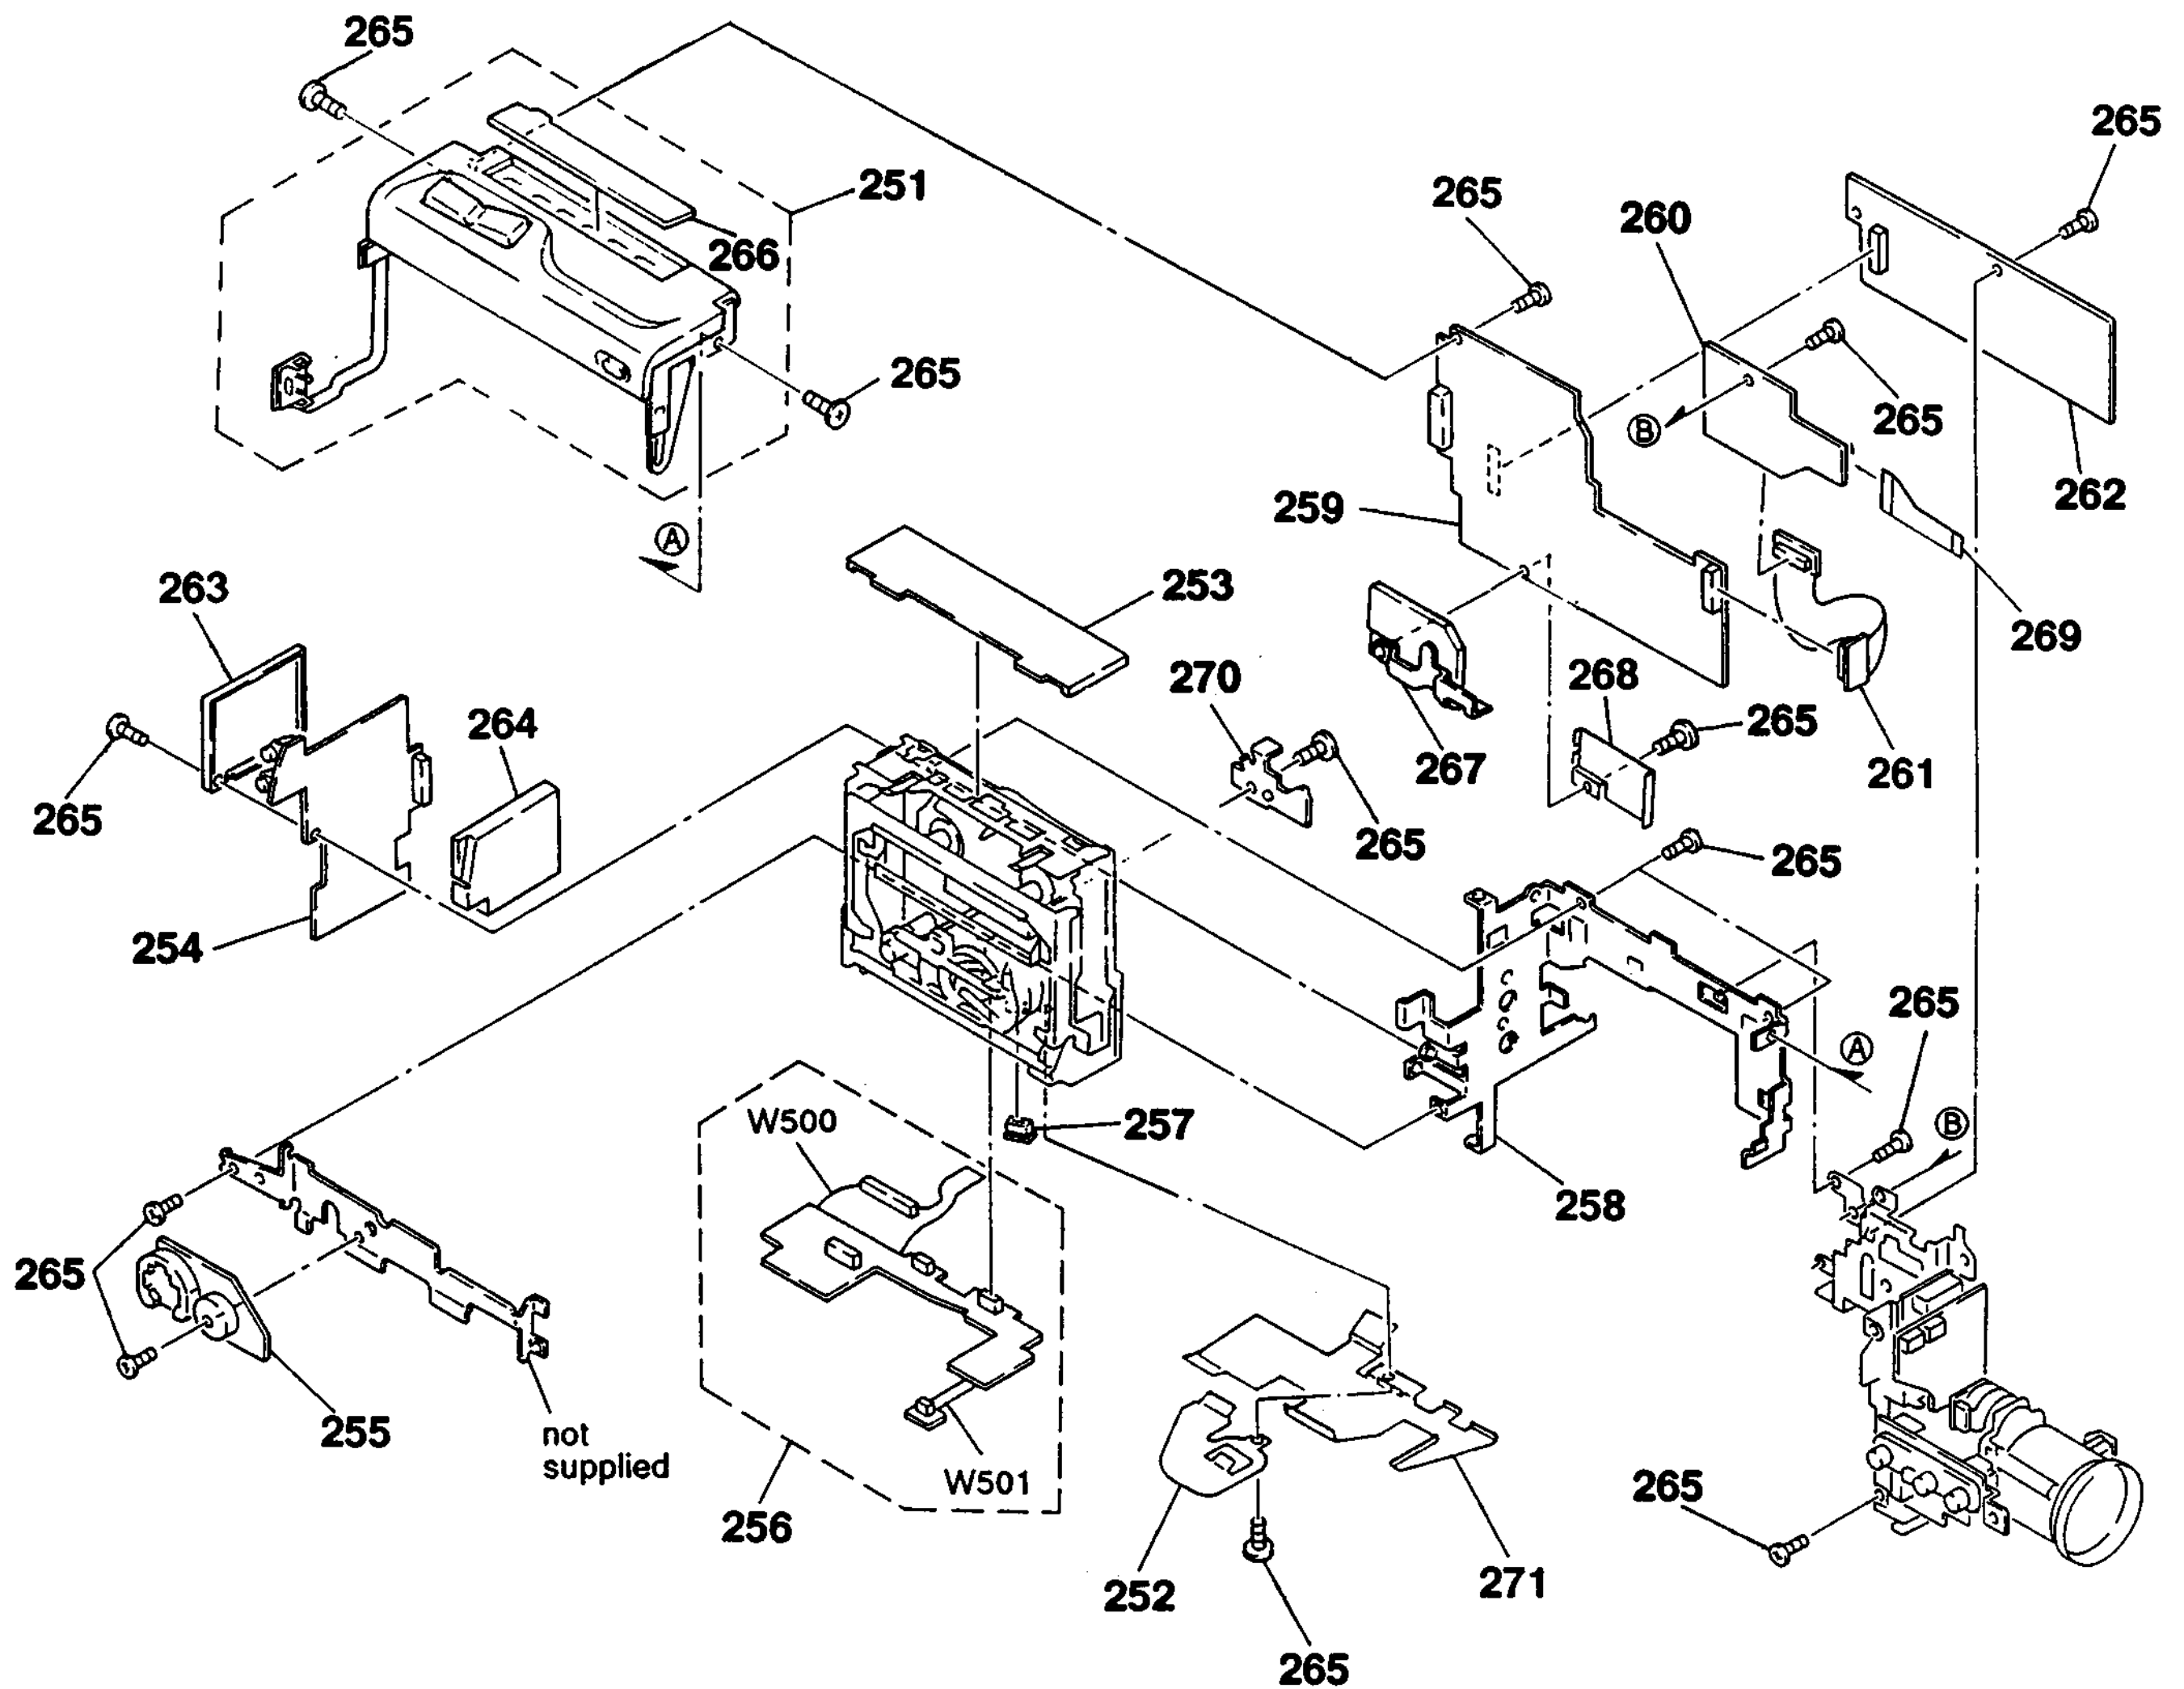

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	1-467-649-11	SWITCH BLOCK, CONTROL (FK) (FX340)		* 262	A-7066-309-A	VC-159 (SL) BOARD, COMPLETE	
251	1-467-649-81	SWITCH BLOCK, CONTROL (FK) (FX240)		* 263	3-958-925-01	CASE (MAIN), SHIELD, DD	
252	1-651-891-11	FP-52 FLEXIBLE BOARD		* 264	X-3944-169-1	SHIELD (LID) ASSY, DD	
253	3-958-341-01	COVER, LS		265	3-713-786-21	SCREW (M2X3)	
* 254	A-7066-308-A	DD-76 (SL) BOARD, COMPLETE		266	3-958-720-01	LID	
* 255	A-7072-173-A	ZB-2 (SL) BOARD, COMPLETE		* 267	X-3943-976-1	SHIELD (MAIN) ASSY, RP	
* 256	A-7072-174-A	SL-38 (SL) BOARD, COMPLETE		* 268	3-958-924-01	CASE (LID), SHIELD, RP	
257	1-691-471-11	CONNECTOR, TRANSLATION 11P		269	1-651-936-11	FP-96 FLEXIBLE BOARD	
* 258	3-958-345-01	FRAME (U)		* 270	3-958-667-01	FRAME (B)	
* 259	A-7066-318-A	VS-123 (SLC) BOARD, COMPLETE (FX340)		* 271	3-958-928-01	PLATE, SHIELD, RP	
* 259	A-7066-310-A	VS-123 (SL) BOARD, COMPLETE (FX240)		W500	1-651-889-11	FP-48 FLEXIBLE BOARD	
* 260	A-7066-307-A	AU-182 BOARD, COMPLETE		W501	1-642-186-11	FP-437 FLEXIBLE BOARD	
261	1-651-935-11	FP-95 FLEXIBLE BOARD					

5-1-7. CCD BLOCK ASSEMBLY

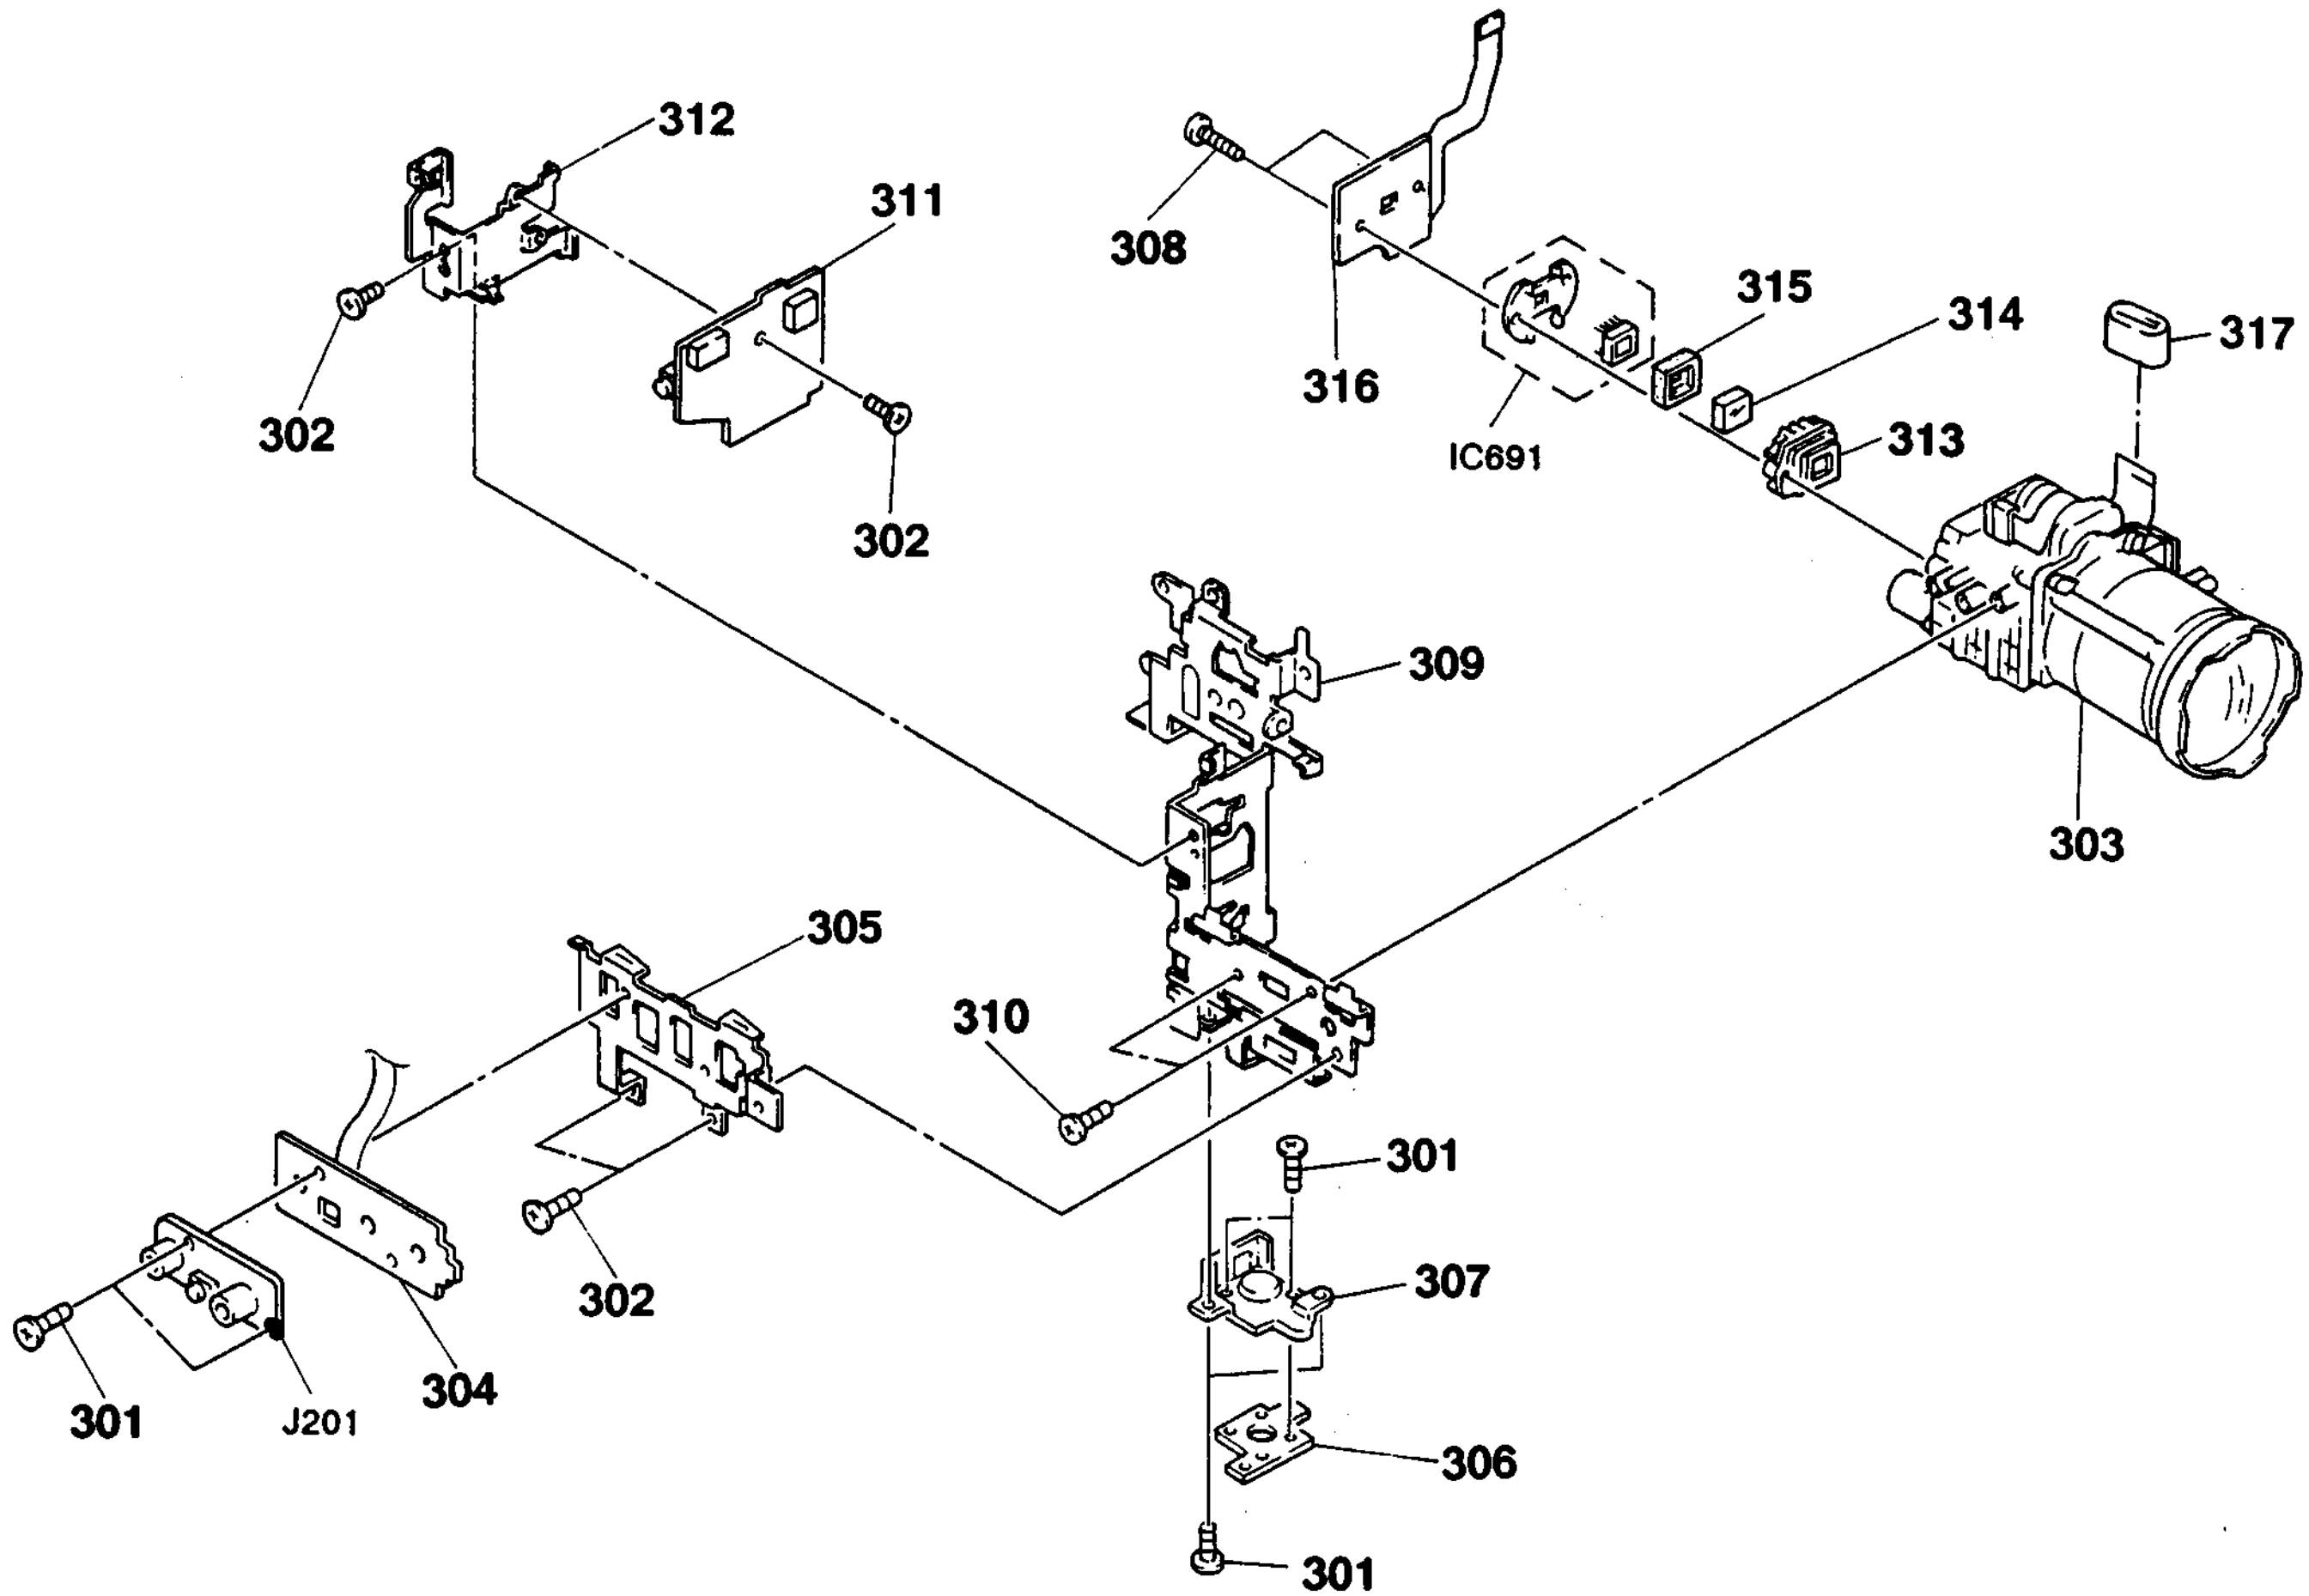


Be sure to read "Note on the CCD Imager replacement" on page 4-5 when changing the CCD imager.

Ref. No.	Part No.	Description
301	3-719-381-01	SCREW (M2X4)
302	3-713-786-21	SCREW (M2X3)
303	1-547-716-11	LENS, ZOOM (VCL-5412WA) (TYPE II)
303	1-547-739-11	LENS, ZOOM (VCL-5412WB) (TYPE III)
303	8-848-704-01	DEVICE, LENS LSV-140A (TYPE I)
304	1-651-904-81	FP-97 FLEXIBLE BOARD
* 305	3-958-333-01	FRAME (PJ)
306	3-958-286-01	SHEET METAL, TRIPOD
307	3-958-310-01	HOLDER, TRIPOD
308	3-947-268-01	SCREW (P TIGHT) (2), TAPPING, +B
* 309	X-3944-147-1	FRAME (L) ASSY

Remark	Ref. No.	Part No.	Description	Remark
	310	3-948-339-01	SCREW, TAPPING	
	* 311	A-7066-306-A	MA-230 BOARD, COMPLETE	
	* 312	3-958-328-01	FRAME (MA)	
	313	3-946-856-01	ADAPTOR (H), CCD FITTING	
	314	1-547-558-21	FILTER BLOCK, OPTICAL	
	315	3-946-857-01	RUBBER (S), SEAL	
	* 316	A-7072-137-A	CD-137 (D) BOARD, COMPLETE	
	317	1-500-226-11	BEAD, FERRITE	
	IC691	A-7030-368-A	CCD BLOCK ASSY (054 SERVICE) (CCD IMAGER)	
	J201	1-537-726-11	TERMINAL BOARD	

5-1-8. ZOOM LENS ASSEMBLIES (LSV-140A) (VCL-5412WA) (VCL-5412WB)

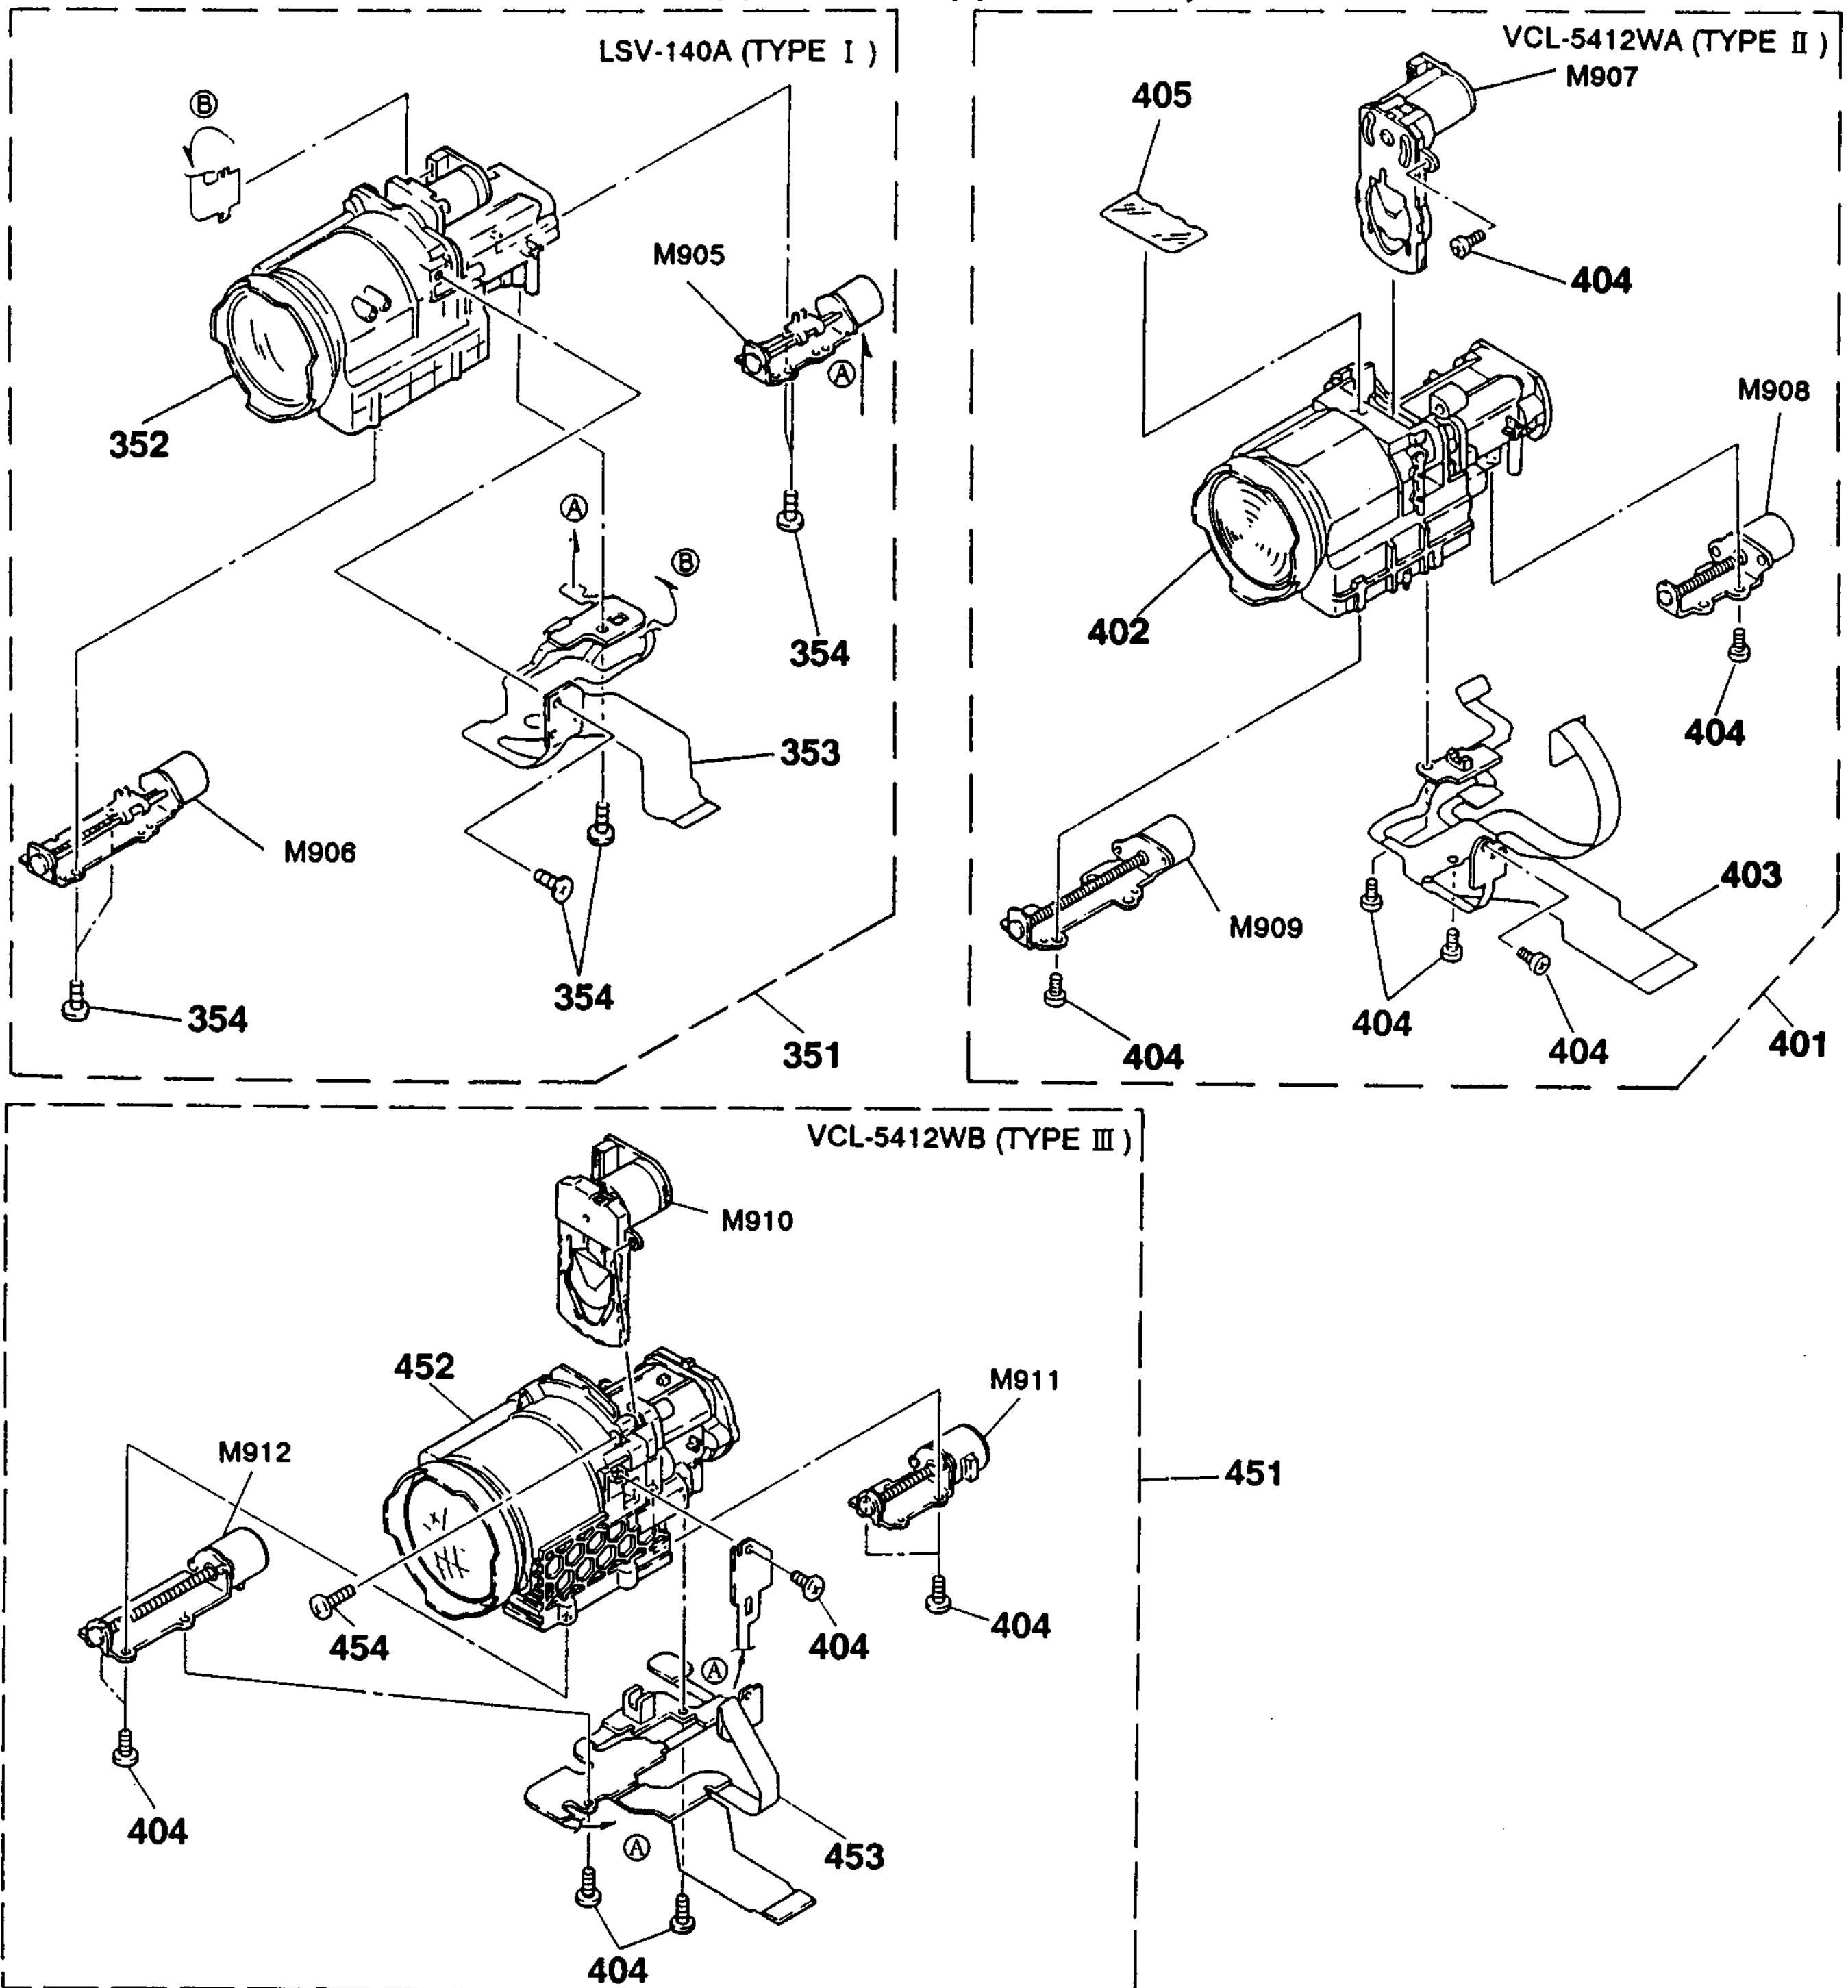

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

351	8-848-704-01	DEVICE, LENS LSV-140A (TYPE I)	
352	A-4910-598-A	DEVICE ASSY, LSV-140A (RP)	
353	A-4915-338-A	FLEXIBLE MOUNT	
354	3-713-791-41	SCREW (M1.7X5), TAPPING, P2	
M905	1-698-364-01	MOTOR ASSY, FOCUS	


M906	1-698-363-01	MOTOR ASSY, ZOOM	
401	1-547-716-11	LENS, ZOOM (VCL-5412WA) (TYPE II)	
402	3-708-891-01	TUBE, MIRROR ASSY	
403	3-708-890-01	FLEXIBLE, MAIN	
404	3-708-302-01	SCREW (BT3 P1.7X4C)	
405	3-708-886-01	COVER, IG	

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

M907	3-708-888-01	METER, IG (IRIS)	
M908	3-708-889-01	MOTOR ASSY, FOCUS	
M909	3-708-887-01	MOTOR ASSY, ZOOM	
451	1-547-739-11	LENS, ZOOM (VCL-5412WB) (TYPE III)	


452	3-708-900-01	TUBE, MIRROR ASSY	
453	3-708-899-01	PC BOARD ASSY, FLEXIBLE	
454	3-708-617-01	SCREW (BT3 P1.7X7C)	
M910	3-708-898-01	IRIS ASSY	
M911	3-708-897-01	MOTOR ASSY, FOCUS	
M912	3-708-896-01	MOTOR ASSY, ZOOM	

5-1-9. CASSETTE COMPARTMENT ASSEMBLY

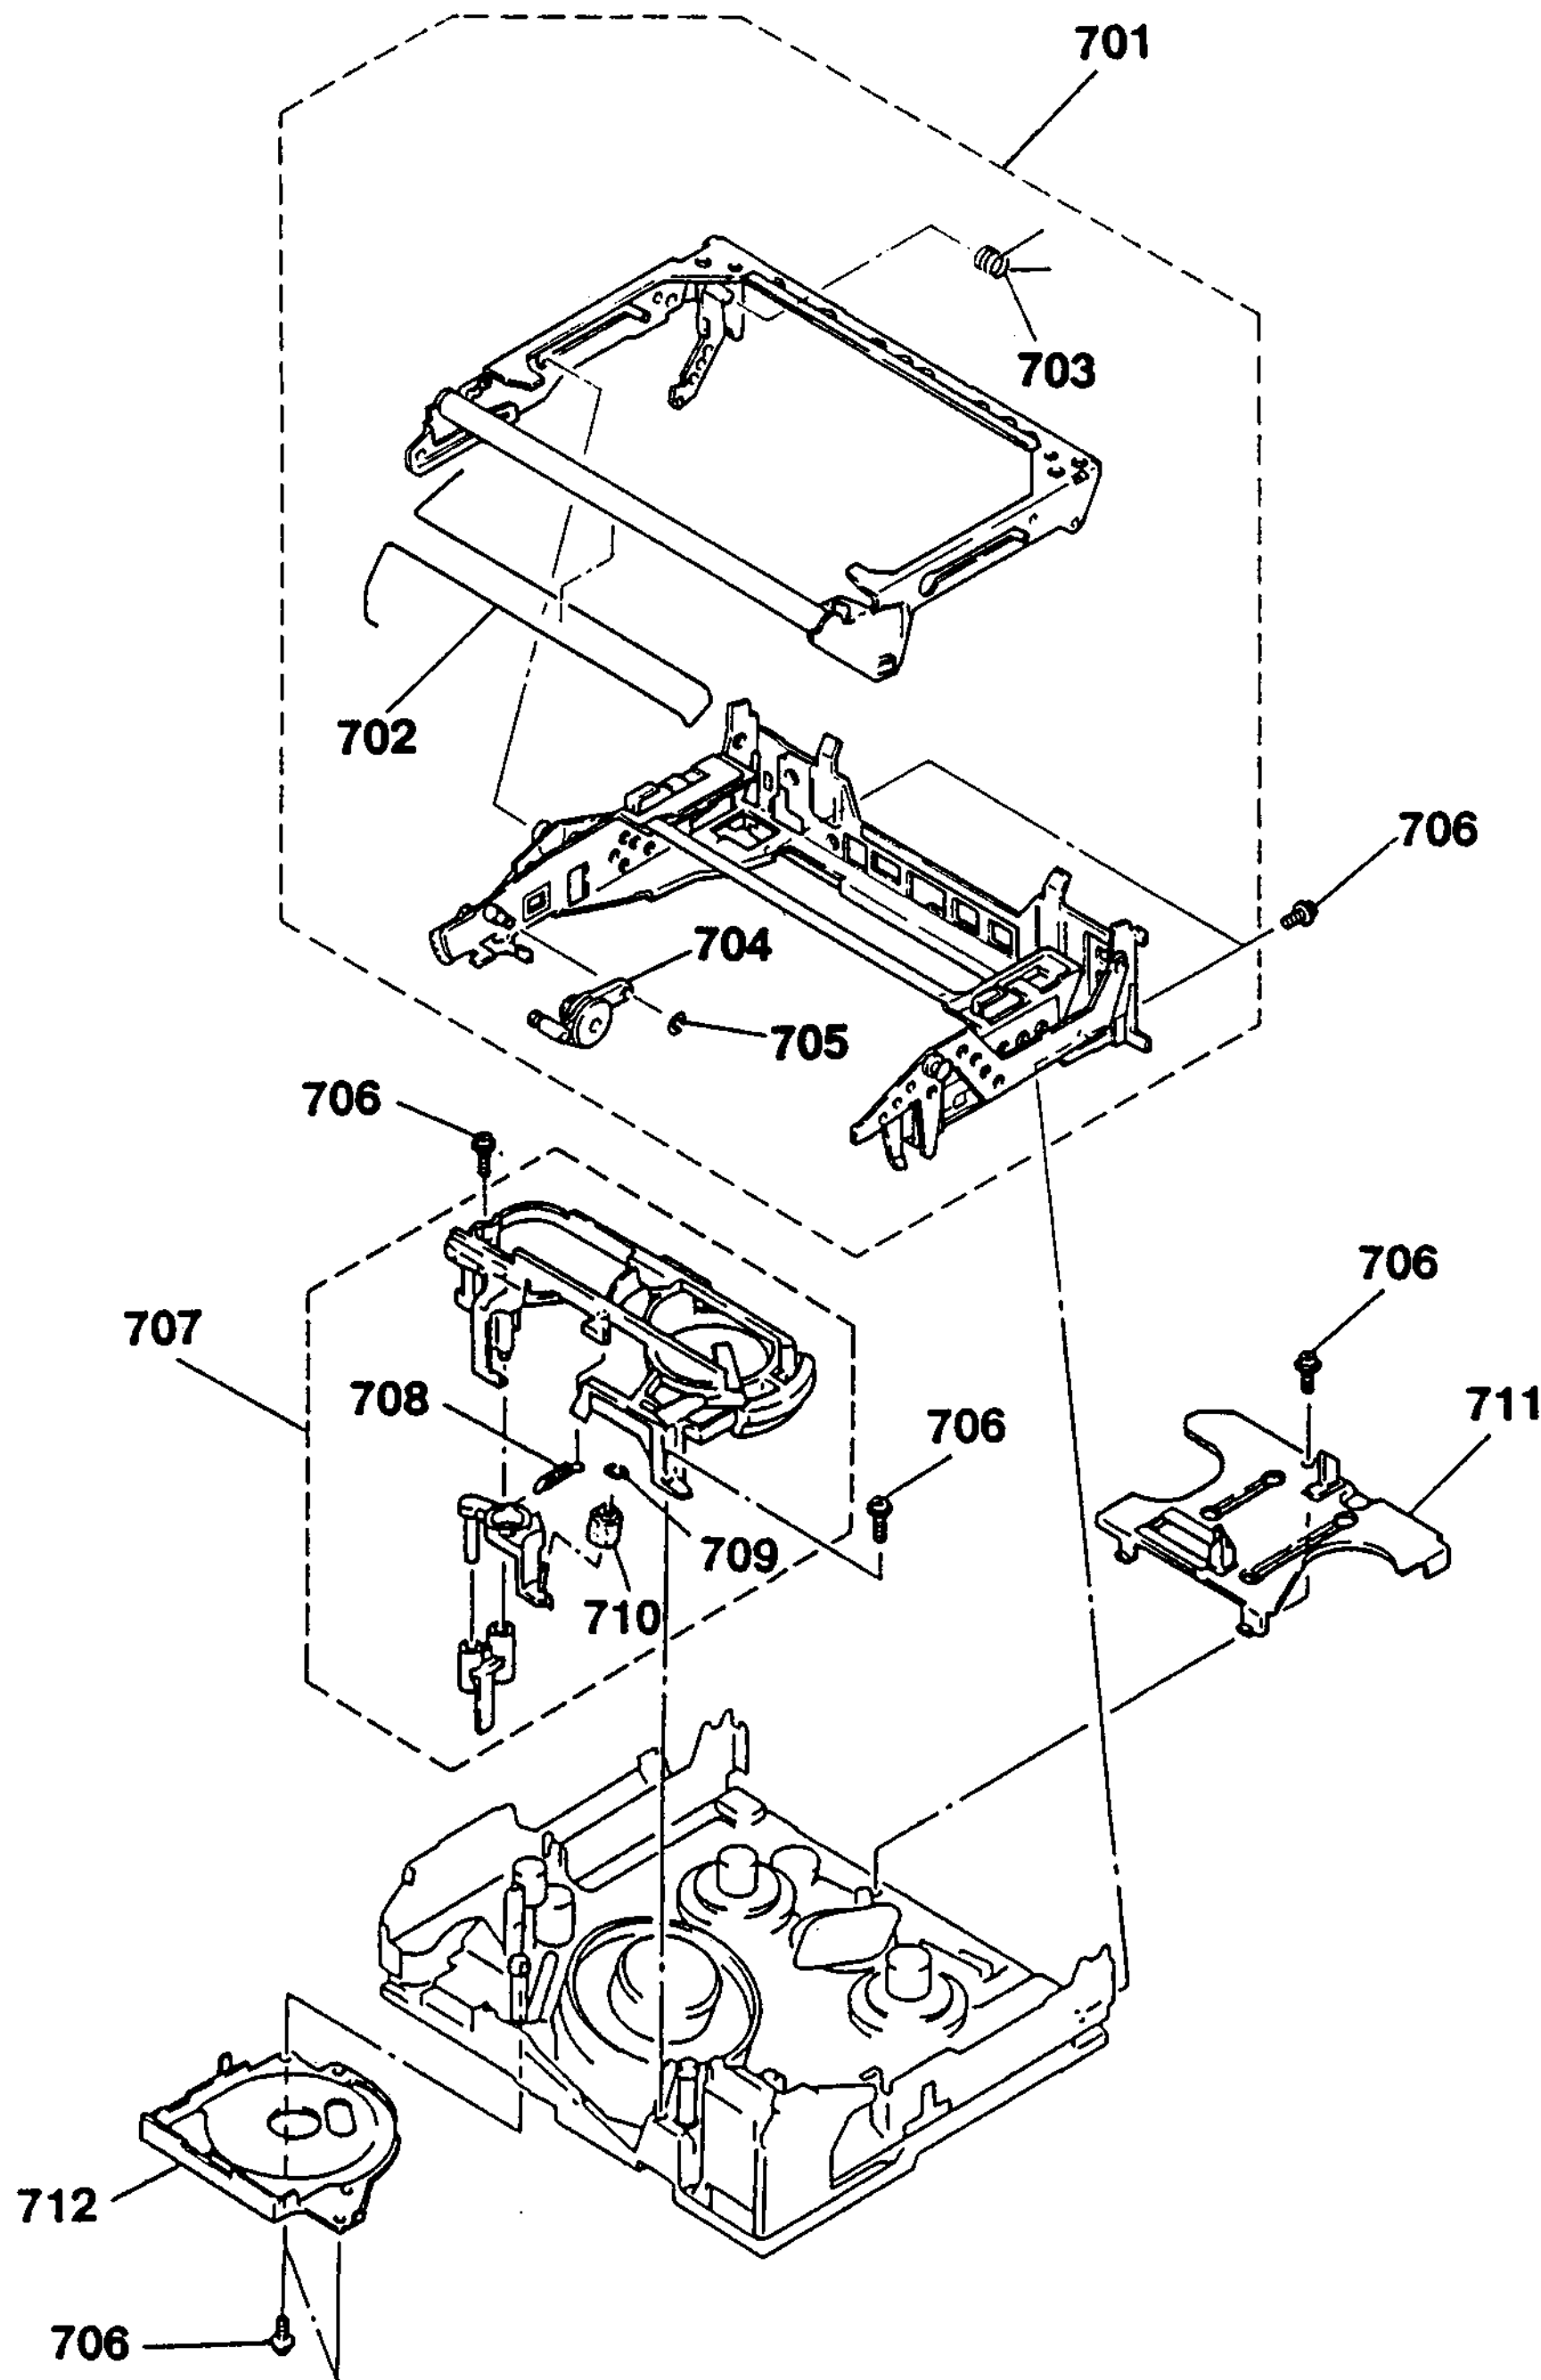

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
701	A-7040-312-K	CASSETTE COMPARTMENT BLOCK ASSY		707	A-7040-309-A	PROTECT (BASE) BLOCK ASSY	
702	3-945-773-01	BAR, TORSION		708	3-945-760-01	SPRING, TENSION	
703	3-945-771-01	SPRING, TORSION		709	3-321-393-01	WASHER, STOPPER	
704	X-3941-287-2	DAMPER ASSY		710	X-3166-813-1	ROLLER ASSY, HC	
705	3-315-384-31	WASHER, STOPPER		711	X-3941-280-1	RETAINER ASSY, GOOSENECK	
706	3-947-503-01	SCREW (M1. 4X2. 5)		712	3-945-733-01	COVER, CAPSTAN	


5-1-10. LS CHASSIS ASSEMBLY

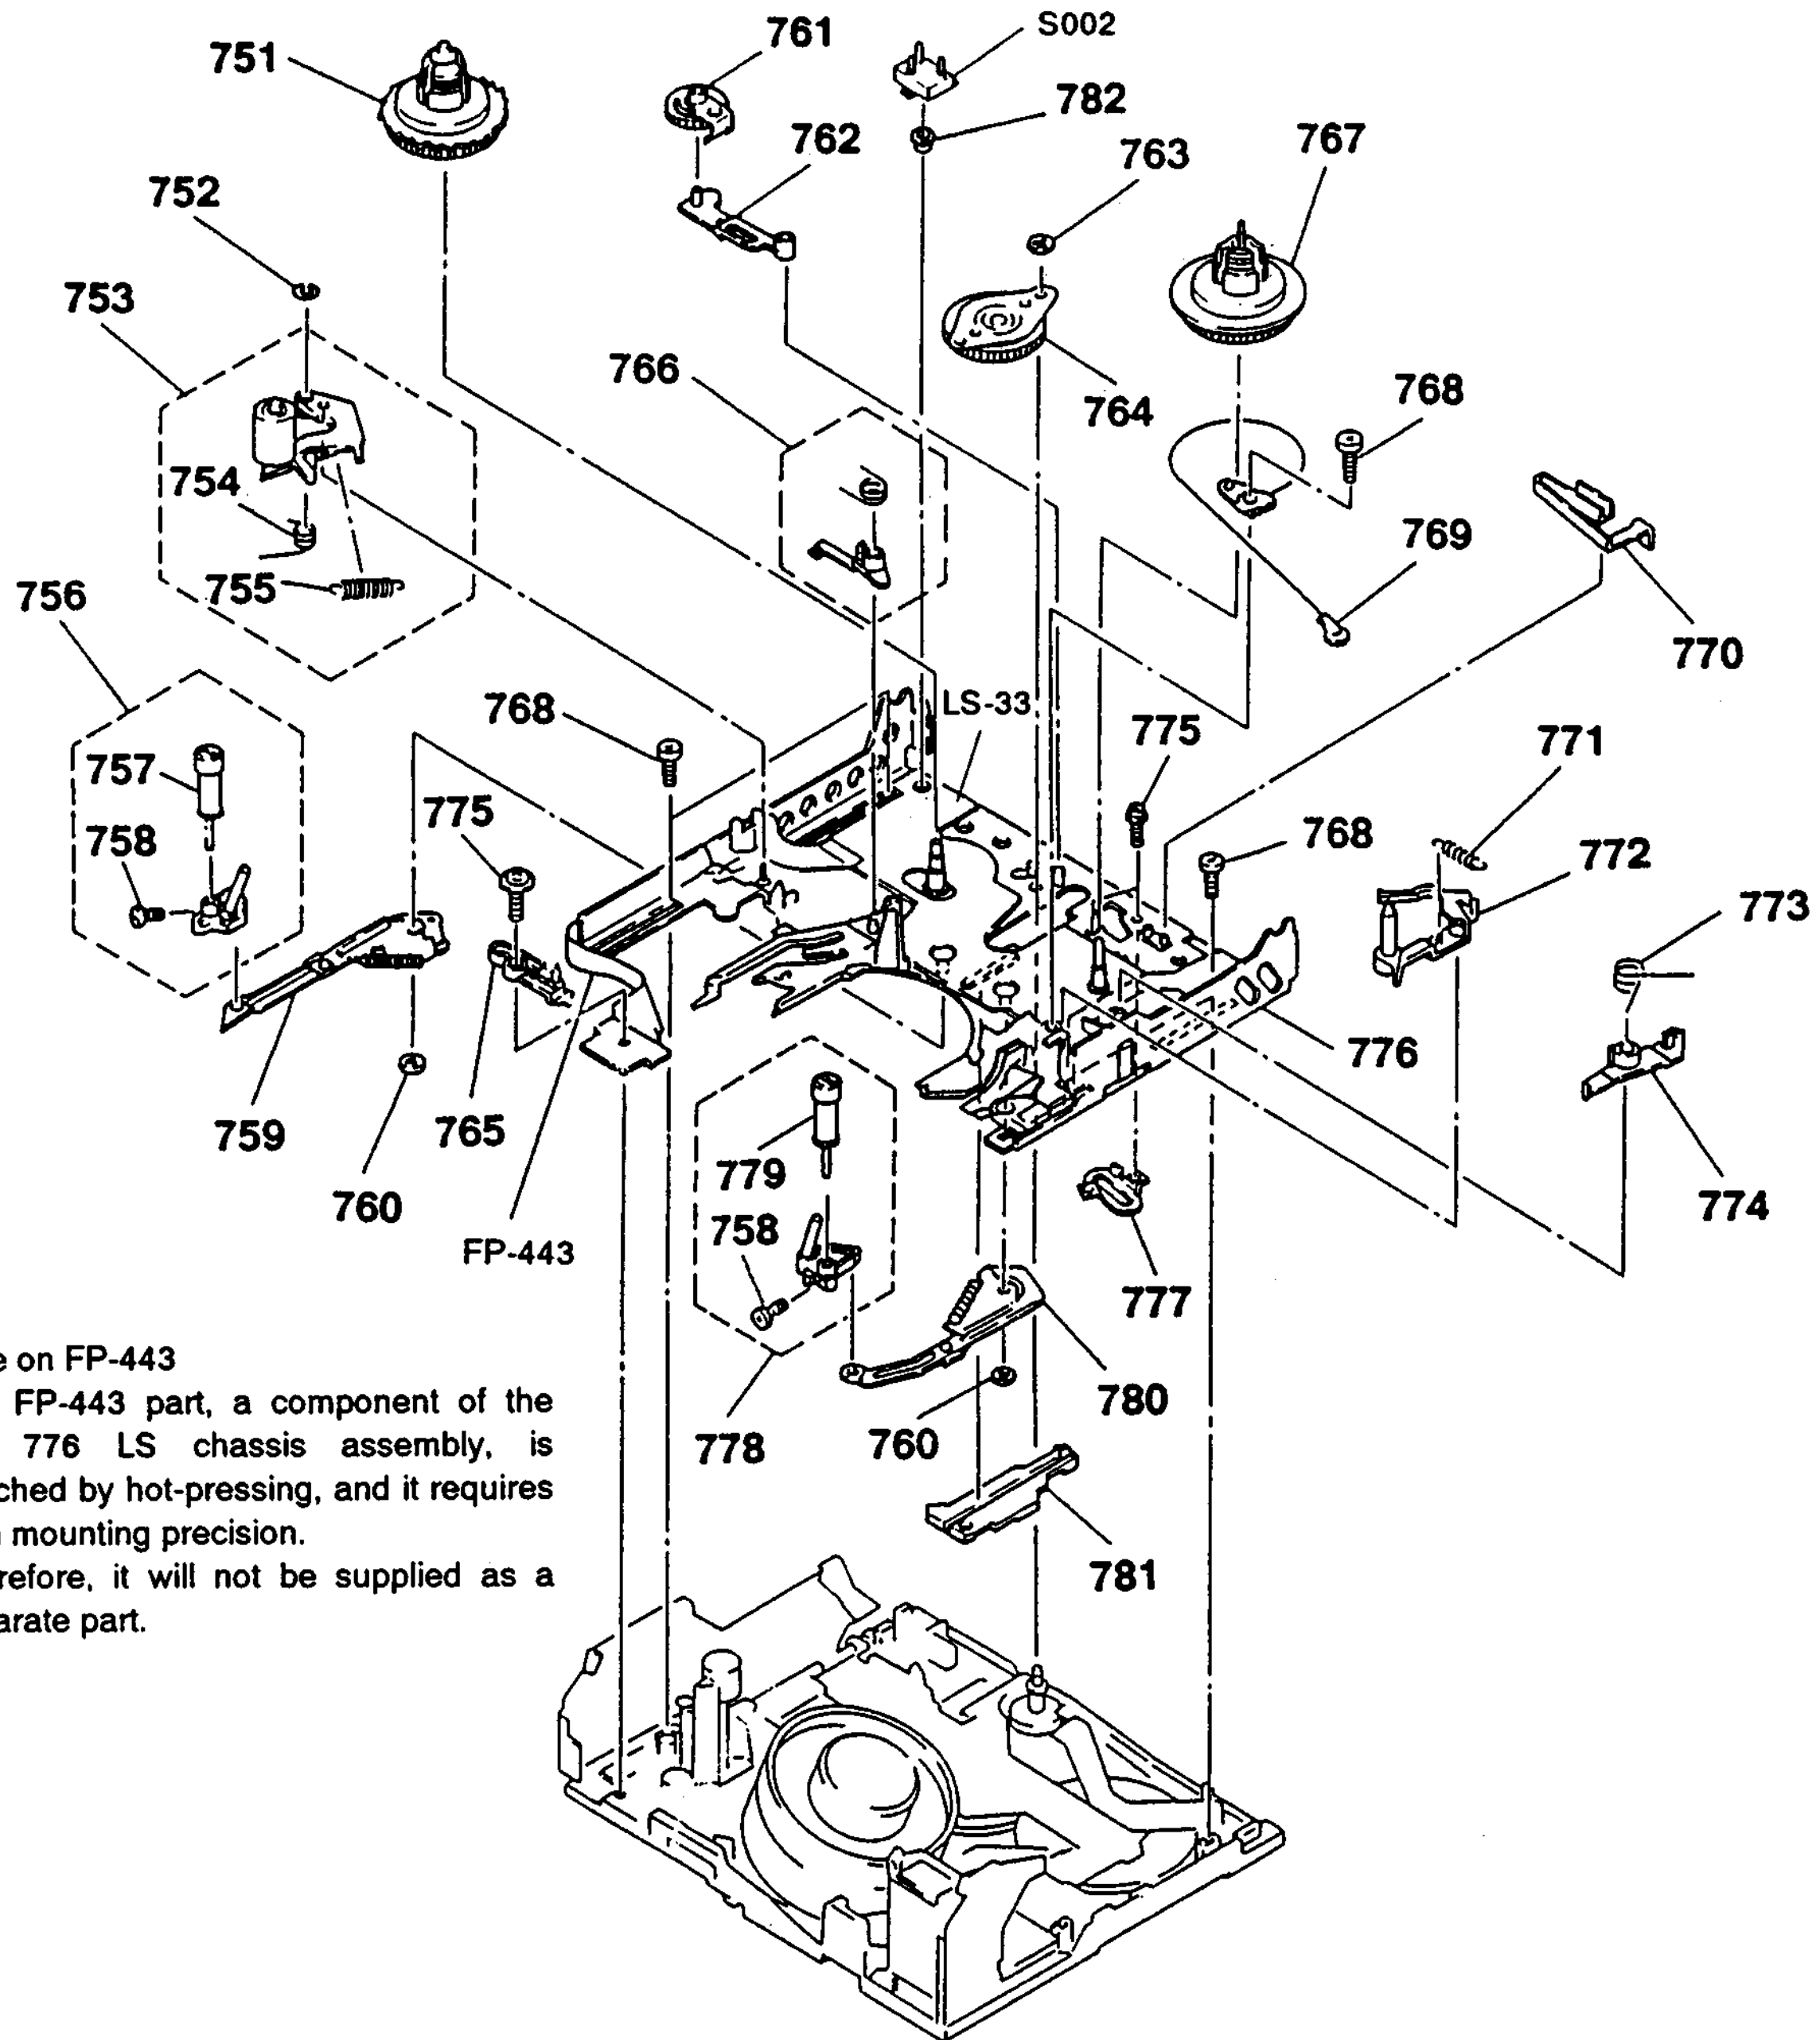

Note on FP-443
 The FP-443 part, a component of the No. 776 LS chassis assembly, is attached by hot-pressing, and it requires high mounting precision. Therefore, it will not be supplied as a separate part.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
751	X-3941-274-1	TABLE ASSY, REEL, T		768	3-945-756-01	SCREW (M1. 4X3)	
752	3-331-007-21	WASHER		769	X-3941-277-1	STRING BLOCK ASSY	
753	X-3941-271-5	ARM ASSY, PINCH		770	3-945-801-01	BRAKE, S SOFT	
754	3-945-743-01	SPRING, TORSION		771	3-954-327-01	SPRING, TENSION	
755	3-945-783-01	SPRING, TENSION		772	X-3941-276-1	TG1 ASSY	
756	A-7040-307-A	GUIDE (BASE)(T) BLOCK ASSY		773	3-945-752-01	SPRING, TORSION	
757	X-3941-424-1	ROLLER ASSY, TG6		774	3-945-799-01	BRAKE, S HARD	
758	3-947-504-01	SCREW (M1. 2X2)		775	3-947-503-01	SCREW (M1. 4X2. 5)	
759	X-3941-267-1	ARM (T) ASSY, GUIDE		776	X-3943-307-1	CHASSIS ASSY, LS	
760	3-669-465-00	WASHER (1. 5), STOPPER		777	3-945-784-01	PLATE, CAM, LS	
761	X-3941-273-1	SOFT ASSY, T		778	A-7040-306-A	GUIDE (BASE)(S) BLOCK ASSY	
762	3-945-753-01	ARM, T SOFT		779	X-3941-269-1	ROLLER ASSY, TG3	
763	3-726-829-01	WASHER, STOPPER		780	X-3941-266-1	ARM (S) ASSY, GUIDE	
764	X-3941-279-5	GEAR ASSY, GOOSENECK		781	3-945-837-01	SLIDER, GL	
765	3-947-644-01	RETAINER, TG5 (BASE)		782	3-949-881-01	SLEEVE	
766	A-7040-321-A	CLAW BLOCK ASSY, T HARD		S002	1-572-987-11	SWITCH, PUSH (3 KEY)	
767	X-3944-116-1	TABLE ASSY, S REEL				(REC PROOF, ME/MP, MP/MP-HG)	

5-1-11. MECHANISM CHASSIS ASSEMBLY (1)

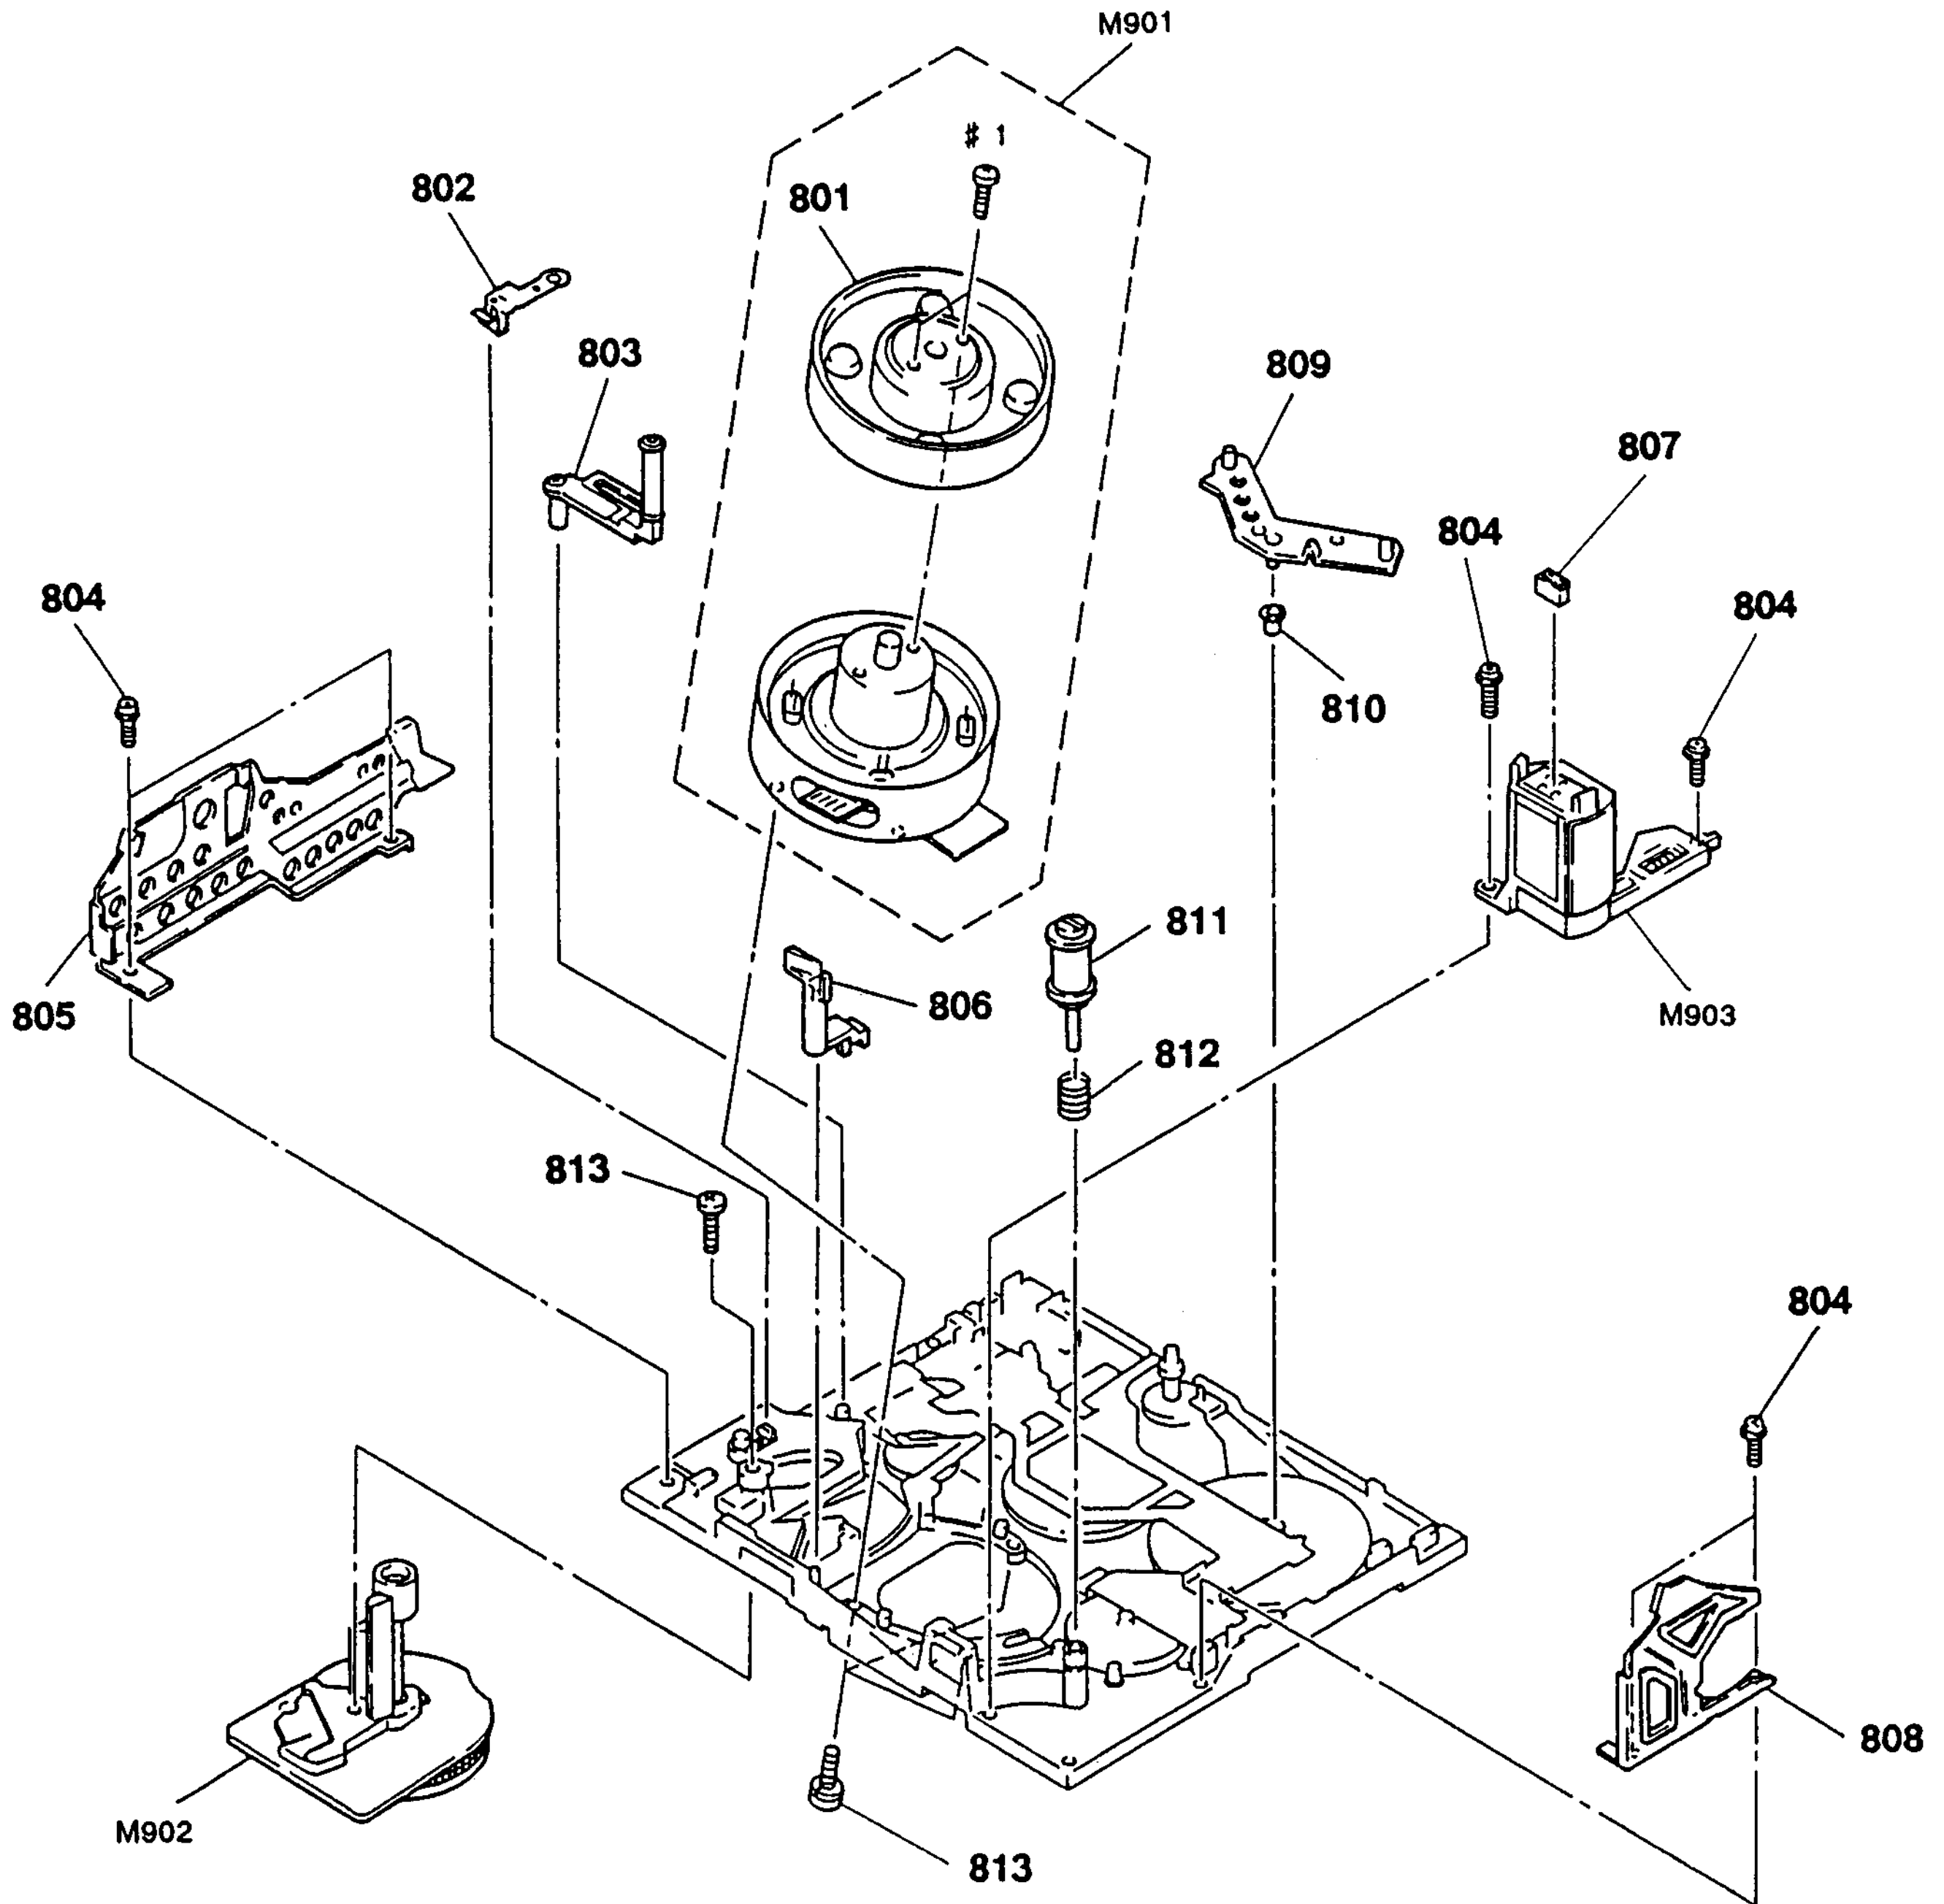

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
801	A-7049-501-A	DRUM ASSY, UPPER (DGR-78-R)		810	3-945-702-01	ROLLER, LS	
802	3-945-822-01	SPRING, LEAF, TG7 ARM		811	X-3941-262-1	ROLLER ASSY, TG2	
803	A-7040-305-A	ARM BLOCK ASSY, TG7		812	3-956-651-01	SPRING, COMPRESSION	
804	3-947-503-01	SCREW (M1.4X2.5)		813	3-686-493-01	SCREW (M2X5), P1	
805	X-3941-255-1	PLATE (T) ASSY, SIDE		M901	A-7048-564-A	DRUM ASSY (DGH-78A-R)	
806	3-945-735-01	ARM, HC CONVERSION		M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)	
807	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P		M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)	
808	3-945-691-01	PLATE (S), SIDE					
809	3-945-701-01	ARM, LS					

5-1-12. MECHANISM CHASSIS ASSEMBLY (2)

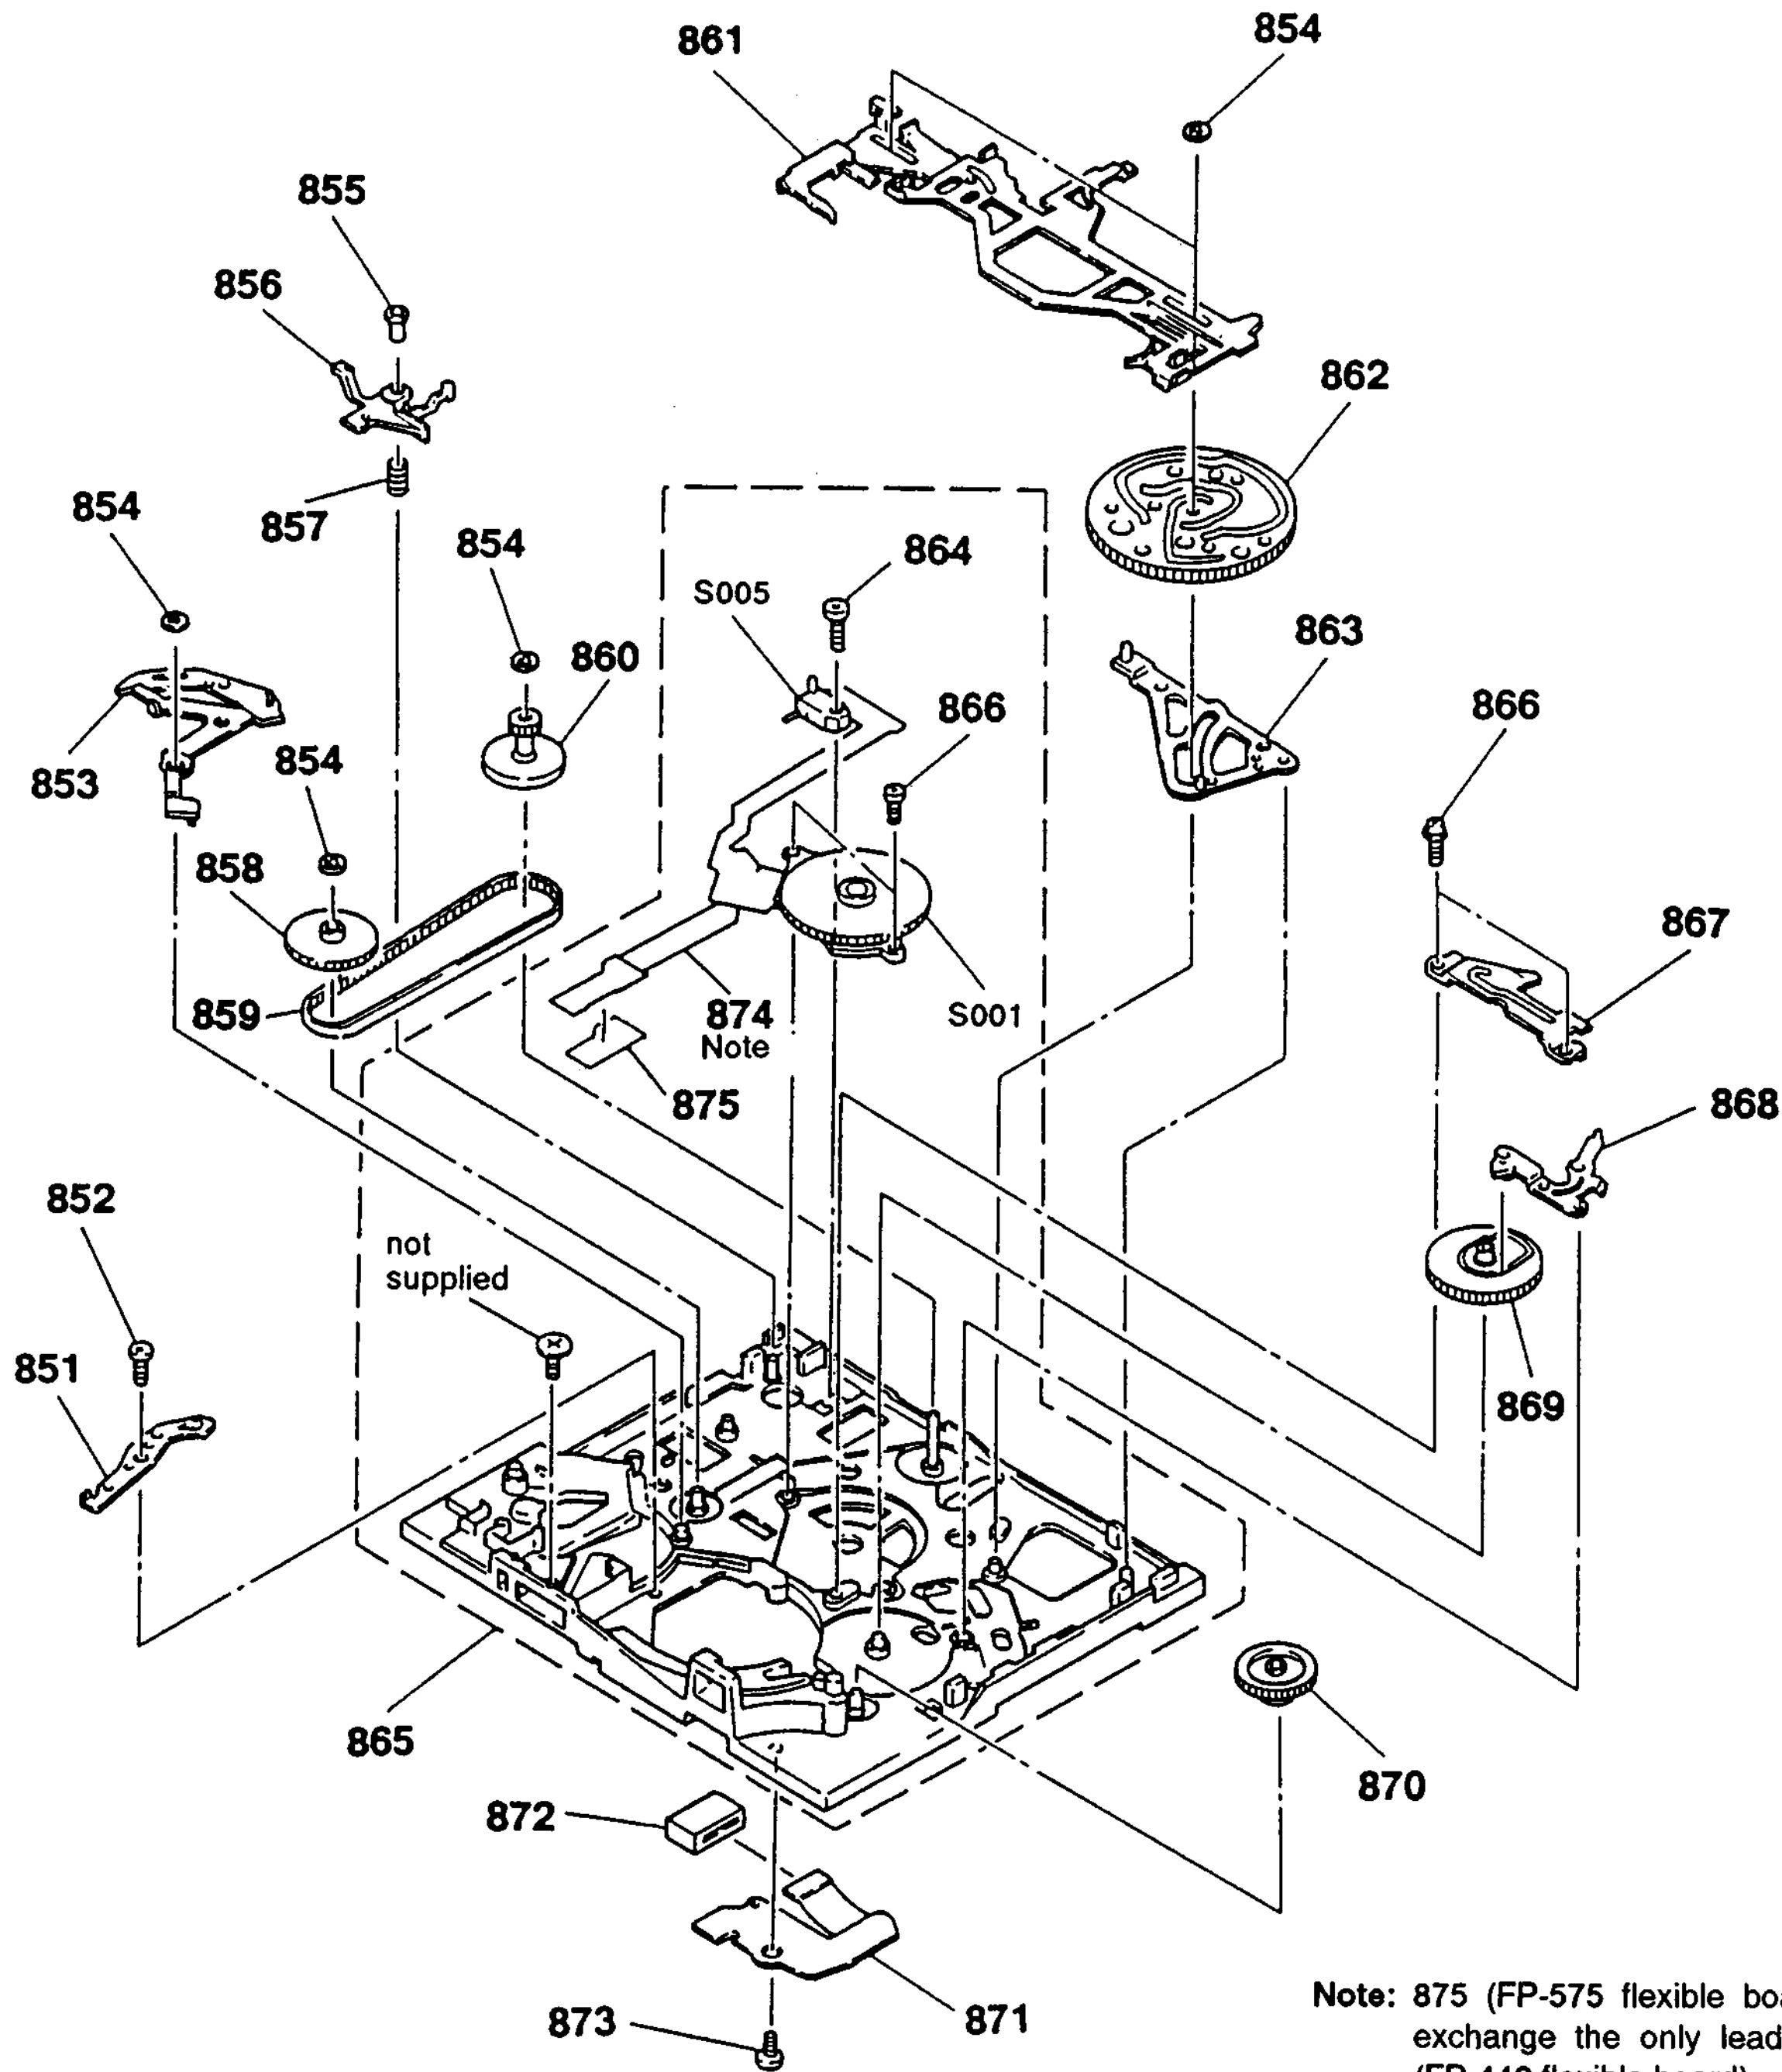

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
851	3-945-734-01	ARM, HC DRIVING		865	A-7040-303-A	CHASSIS ASSY, MECHANICAL	
852	3-728-103-11	SCREW (M1. 4X1.6), SPECIAL HEAD		866	3-947-503-01	SCREW (M1. 4X2.5)	
853	X-3941-259-1	ARM ASSY, PINCH PRESS		867	3-945-722-01	RETAINER, GEAR	
854	3-726-829-01	WASHER, STOPPER		868	X-3941-257-1	ARM ASSY, FF	
855	3-945-730-01	SLEEVE, EJECT		869	3-945-697-01	GEAR (B), L	
856	3-945-706-01	LEVER, EJECT		870	3-945-700-01	GEAR (A), L	
857	3-945-729-01	SPRING, COMPRESSION		871	1-641-643-12	FP-444 FLEXIBLE BOARD	
858	X-3941-256-1	GEAR ASSY, CHANGE		872	1-691-254-13	CONNECTOR, TRANSLATION 10P	
859	3-944-539-01	BELT, RELAY		873	3-945-756-01	SCREW (M1. 4X3)	
860	3-945-695-01	PULLEY, RELAY		874	1-641-639-13	FP-442 FLEXIBLE BOARD	
861	X-3941-260-1	SLIDER ASSY, M		875	1-645-271-11	FP-575 FLEXIBLE BOARD	
862	3-945-696-02	CAM		S001	1-572-986-11	SWITCH, ROTARY (ENCODER)	
863	X-3941-258-3	ARM ASSY, GL		S005	1-570-771-21	SWITCH (C DOWN)	
864	3-713-786-71	SCREW (M2X5)					

5-2. ELECTRICAL PARTS LIST

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Hardware (# mark) list is given in the last of this parts list.

- **RESISTORS**
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable
- **SEMICONDUCTORS**
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- **CAPACITORS**
uF : μ F
- **COILS**
uH : μ H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-7066-307-A	AU-182 BOARD, COMPLETE ***** (Ref. No. 3,000 Series)				< CONNECTOR >	
		< CAPACITOR >				< IC >	
C402	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	CN401	1-691-516-11	CONNECTOR, BOARD TO BOARD 24P	
C403	1-164-222-11	CERAMIC CHIP	0.22uF 25V	CN402	1-691-487-21	CONNECTOR, FFC/FPC 8P	
C404	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V			< IC >	
C405	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V	IC401	8-759-823-19	IC CXA1488R	
C407	1-162-957-11	CERAMIC CHIP	220PF 5% 50V			< COIL >	
C408	1-164-232-11	CERAMIC CHIP	0.01uF 50V	L401	1-412-954-11	INDUCTOR 18uH	
C409	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V			< TRANSISTOR >	
C411	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	Q404	8-729-402-81	TRANSISTOR XN4501	
C412	1-126-205-11	ELECT CHIP	47uF 20% 6.3V			< RESISTOR >	
C413	1-126-209-11	ELECT	100uF 20% 4V	R401	1-216-849-11	METAL CHIP 220K 5% 1/16W	
C414	1-128-006-11	ELECT CHIP	4.7uF 20% 25V	R403	1-216-859-11	METAL GLAZE 1.5M 5% 1/16W	
C415	1-128-004-11	ELECT CHIP	10uF 20% 16V	R404	1-216-851-11	METAL CHIP 330K 5% 1/16W	
C416	1-162-925-11	CERAMIC CHIP	68PF 5% 50V	R407	1-216-837-11	METAL CHIP 22K 5% 1/16W	
C419	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	R409	1-216-833-11	METAL CHIP 10K 5% 1/16W	
C421	1-162-974-11	CERAMIC CHIP	0.01uF 50V	R411	1-216-833-11	METAL CHIP 10K 5% 1/16W	
C422	1-216-864-11	METAL CHIP	0 5% 1/16W	R412	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C424	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	R415	1-216-849-11	METAL CHIP 220K 5% 1/16W	
C425	1-164-346-11	CERAMIC CHIP	1uF 16V	R416	1-216-864-11	METAL CHIP 0 5% 1/16W	
C426	1-162-957-11	CERAMIC CHIP	220PF 5% 50V	R418	1-216-851-11	METAL CHIP 330K 5% 1/16W	
C427	1-128-004-11	ELECT CHIP	10uF 20% 16V	R420	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	
C428	1-128-006-11	ELECT CHIP	4.7uF 20% 25V	R423	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C429	1-128-013-11	ELECT CHIP	1uF 20% 50V	R424	1-216-833-11	METAL CHIP 10K 5% 1/16W	
C430	1-128-004-11	ELECT CHIP	10uF 20% 16V	R425	1-216-810-11	METAL CHIP 120 5% 1/16W	
C431	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V	R429	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
C432	1-164-674-11	CERAMIC CHIP	1800PF 5% 16V	R430	1-216-841-11	METAL CHIP 47K 5% 1/16W	
C433	1-164-346-11	CERAMIC CHIP	1uF 16V	R431	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
C434	1-128-003-11	ELECT CHIP	22uF 20% 4V	R432	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
C435	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	R433	1-216-817-11	METAL CHIP 470 5% 1/16W	
C436	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	R434	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C437	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	R435	1-216-836-11	METAL CHIP 18K 5% 1/16W	
C438	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	R436	1-216-837-11	METAL CHIP 22K 5% 1/16W	
C439	1-128-004-11	ELECT CHIP	10uF 20% 16V	R442	1-216-817-11	METAL CHIP 470 5% 1/16W	
C440	1-162-974-11	CERAMIC CHIP	0.01uF 50V			*****	
C441	1-126-205-11	ELECT CHIP	47uF 20% 6.3V				
C442	1-162-974-11	CERAMIC CHIP	0.01uF 50V				
C443	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V				

CD-137 **DD-76**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-7072-137-A	CD-137 D BOARD, COMPLETE ***** (Ref. No. 1,000 Series)		C912	1-128-530-11	ELECT CHIP 33uF 20% 10V	
		< CAPACITOR >		C913	1-128-004-11	ELECT CHIP 10uF 20% 16V	
C691	1-135-214-21	TANTAL. CHIP 4.7uF 20% 20V		C914	1-128-004-11	ELECT CHIP 10uF 20% 16V	
C692	1-135-210-11	TANTALUM CHIP 4.7uF 20% 10V		C915	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C694	1-164-346-11	CERAMIC CHIP 1uF 16V		C917	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C695	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C918	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C696	1-104-908-11	TANTAL. CHIP 47uF 20% 4V		C920	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
		< IC >		C921	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
IC691	A-7030-368-A	CCD BLOCK ASSY (054 SERVICE) (CCD IMAGER)		C923	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
		< COIL >		C924	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
L691	1-412-963-11	INDUCTOR 100uH		C925	1-164-506-11	CERAMIC CHIP 4.7uF 16V	
		< TRANSISTOR >		C926	1-164-337-11	CERAMIC CHIP 2.2uF 16V	
Q691	8-729-232-86	TRANSISTOR 2SK1875-BL/V		C927	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
Q692	8-729-117-73	TRANSISTOR 2SC4178-F14		C928	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
		< RESISTOR >		C929	1-135-216-11	TANTALUM CHIP 10uF 20% 10V	
R692	1-216-065-00	METAL CHIP 4.7K 5% 1/10W		C930	1-107-418-11	ELECT CHIP 10uF 20% 35V	
R693	1-216-839-11	METAL CHIP 33K 5% 1/16W		C931	1-128-004-11	ELECT CHIP 10uF 20% 16V	
R694	1-216-045-00	METAL CHIP 680 5% 1/10W		C932	1-128-004-11	ELECT CHIP 10uF 20% 16V	
R695	1-216-849-11	METAL CHIP 220K 5% 1/16W		C934	1-128-004-11	ELECT CHIP 10uF 20% 16V	
R696	1-216-809-11	METAL CHIP 100 5% 1/16W		C936	1-128-004-11	ELECT CHIP 10uF 20% 16V	
R697	1-216-073-00	METAL CHIP 10K 5% 1/10W		C938	1-128-004-11	ELECT CHIP 10uF 20% 16V	
		< FLEXIBLE BOARD >		C939	1-163-023-00	CERAMIC CHIP 0.015uF 5% 50V	
W691	1-654-850-11	FP-276 FLEXIBLE BOARD		C940	1-163-023-00	CERAMIC CHIP 0.015uF 5% 50V	
W692	1-654-850-11	FP-276 FLEXIBLE BOARD		C941	1-163-019-00	CERAMIC CHIP 0.0068uF 10% 50V	
		*****		C942	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
*	A-7066-308-A	DD-76 (SL) BOARD, COMPLETE ***** (Ref. No. 5,000 Series)		C943	1-163-019-00	CERAMIC CHIP 0.0068uF 10% 50V	
		< CAPACITOR >		C944	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
C901	1-164-492-11	CERAMIC CHIP 0.15uF 10% 16V		C945	1-128-530-11	ELECT CHIP 33uF 20% 10V	
C902	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		C946	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C903	1-163-121-00	CERAMIC CHIP 150PF 5% 50V		C950	1-128-004-11	ELECT CHIP 10uF 20% 16V	
C904	1-163-121-00	CERAMIC CHIP 150PF 5% 50V				< CONNECTOR >	
C906	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V		CN901	1-695-324-11	CONNECTOR, BOARD TO BOARD 42P	
C907	1-162-963-11	CERAMIC CHIP 680PF 10% 50V				< DIODE >	
C908	1-162-963-11	CERAMIC CHIP 680PF 10% 50V		D901	8-719-027-77	DIODE MA796	
C909	1-162-963-11	CERAMIC CHIP 680PF 10% 50V		D909	8-719-404-49	DIODE MA111	
C910	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		D910	8-719-404-49	DIODE MA111	
C911	1-162-963-11	CERAMIC CHIP 680PF 10% 50V				< FUSE >	
				△F450	1-576-213-11	FUSE, CHIP (1.6A 125V)	
				△F451	1-576-213-11	FUSE, CHIP (1.6A 125V)	
				△F452	1-576-213-11	FUSE, CHIP (1.6A 125V)	
						< IC >	
				IC901	8-759-295-31	IC MB3799-03PFV-G-BND-ER	
						< JACK >	
				J901	1-537-281-11	TERMINAL BOARD (BATTERY TERMINAL)	
				J902	1-565-276-21	JACK, ULTRA SMALL 1P (LANC)	

Be sure to read "Note on the CCD Imager replacement" on page 4-5 when changing the CCD imager.

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
J903	1-568-027-11	JACK, SMALL TYPE 1P (2)	
		< COIL >	
L901	1-424-653-11	COIL, CHOKE 10uH	
L902	1-424-653-11	COIL, CHOKE 10uH	
L903	1-424-653-11	COIL, CHOKE 10uH	
L904	1-409-556-11	COIL, CHOKE 47uH	
L905	1-424-674-11	COIL, CHOKE 22uH	
L906	1-409-556-11	COIL, CHOKE 47uH	
L907	1-424-674-11	COIL, CHOKE 22uH	
L908	1-424-674-11	COIL, CHOKE 22uH	
L909	1-412-056-11	INDUCTOR CHIP 4.7uH	
L910	1-412-056-11	INDUCTOR CHIP 4.7uH	
L912	1-412-056-11	INDUCTOR CHIP 4.7uH	
L914	1-412-064-11	INDUCTOR CHIP 100uH	
L915	1-412-064-11	INDUCTOR CHIP 100uH	
L916	1-412-056-11	INDUCTOR CHIP 4.7uH	
L917	1-412-056-11	INDUCTOR CHIP 4.7uH	
L918	1-216-296-00	METAL CHIP 0 5% 1/8W	
L919	1-216-296-00	METAL CHIP 0 5% 1/8W	
		< TRANSISTOR >	
Q901	8-729-420-12	TRANSISTOR XN4213	
Q902	8-729-804-41	TRANSISTOR 2SB1122-S	
Q903	8-729-823-82	TRANSISTOR FP101	
Q904	8-729-823-84	TRANSISTOR FP102	
Q905	8-729-823-82	TRANSISTOR FP101	
Q906	8-729-823-82	TRANSISTOR FP101	
Q907	8-729-823-82	TRANSISTOR FP101	
Q909	8-729-805-25	TRANSISTOR 2SB1121	
Q914	8-729-402-42	TRANSISTOR UN5213	
Q915	8-729-402-42	TRANSISTOR UN5213	
		< RESISTOR >	
R901	1-218-872-11	METAL CHIP 11K 0.50% 1/16W	
R902	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R903	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R904	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R905	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R906	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R907	1-216-035-00	METAL CHIP 270 5% 1/10W	
R908	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R909	1-216-031-00	METAL CHIP 180 5% 1/10W	
R910	1-216-029-00	METAL CHIP 150 5% 1/10W	
R911	1-216-029-00	METAL CHIP 150 5% 1/10W	
R912	1-216-029-00	METAL CHIP 150 5% 1/10W	
R913	1-216-041-00	METAL CHIP 470 5% 1/10W	
R916	1-216-864-11	METAL CHIP 0 5% 1/16W	
R917	1-216-864-11	METAL CHIP 0 5% 1/16W	
R918	1-216-819-11	METAL CHIP 680 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R919	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R920	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R922	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R924	1-216-864-11	METAL CHIP 0 5% 1/16W	
R925	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R927	1-216-864-11	METAL CHIP 0 5% 1/16W	
R928	1-216-852-11	METAL CHIP 390K 5% 1/16W	
R932	1-216-864-11	METAL CHIP 0 5% 1/16W	
R936	1-216-864-11	METAL CHIP 0 5% 1/16W	
R937	1-216-864-11	METAL CHIP 0 5% 1/16W	
R938	1-216-864-11	METAL CHIP 0 5% 1/16W	
R940	1-216-864-11	METAL CHIP 0 5% 1/16W	
R941	1-218-849-11	METAL CHIP 1.2K 0.50% 1/16W	
R944	1-216-864-11	METAL CHIP 0 5% 1/16W	
R945	1-218-847-11	METAL CHIP 1K 0.50% 1/16W	
		< TRANSFORMER >	
T901	1-426-938-11	TRANSFORMER, DC/DC CONVERTER	

*	A-7071-913-A	FF-75 BOARD, COMPLETE (FX340)	

		(Ref. No. 4,000 Series)	
		< FLUORESCENT TUBE >	
△BL951	1-519-746-21	TUBE, FLUORESCENT (0.7 INCH)	
		< CONNECTOR >	
CN954	1-580-248-31	CONNECTOR, BOARD TO BOARD 20P	

		LS-33 BOARD (Ref. No. 6,000 Series)	

		< DIODE >	
D001	8-719-989-52	DIODE GL4600S	
		< HALL ELEMENT >	
H001	8-719-987-62	DIODE LT140SAZ	
H002	8-719-987-62	DIODE LT140SAZ	
		< TRANSISTOR >	
Q001	8-729-012-46	TRANSISTOR PT4600FS	
Q002	8-729-012-46	TRANSISTOR PT4600FS	
		< RESISTOR >	
R003	1-216-033-00	METAL CHIP 220 5% 1/10W	
R004	1-216-033-00	METAL CHIP 220 5% 1/10W	

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
R010	1-216-033-00	METAL CHIP	220 5% 1/10W	R033	1-216-838-11	METAL CHIP	27K 5% 1/16W
R011	1-216-033-00	METAL CHIP	220 5% 1/10W	R044	1-216-853-11	METAL CHIP	470K 5% 1/16W
		< SWITCH >		R045	1-216-834-11	METAL CHIP	12K 5% 1/16W
S002	1-572-987-11	SWITCH, PUSH (3 KEY) (TAPE SELECT)		*****			
*****				*	A-7072-174-A	SL-38 (SL) BOARD, COMPLETE	
*****						*****	
*	A-7066-306-A	MA-230 BOARD, COMPLETE	(Ref. No. 3,000 Series)			(Ref. No. 3,000 Series)	
		< CAPACITOR >		< CAPACITOR >			
C014	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C543	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C015	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C544	1-163-059-91	CERAMIC CHIP	0.01uF 10% 50V
C032	1-164-346-11	CERAMIC CHIP	1uF 16V	C545	1-163-059-91	CERAMIC CHIP	0.01uF 10% 50V
C033	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C546	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C034	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C547	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C035	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C551	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C036	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	C553	1-164-361-11	CERAMIC CHIP	0.047uF 16V
C037	1-164-346-11	CERAMIC CHIP	1uF 16V	C554	1-107-682-11	CERAMIC CHIP	1uF 10% 16V
C040	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	C555	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C041	1-163-023-00	CERAMIC CHIP	0.015uF 5% 50V	C556	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C043	1-128-004-11	ELECT CHIP	10uF 20% 16V	C557	1-135-149-21	TANTALUM CHIP	2.2uF 20% 10V
C045	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C558	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
		< CONNECTOR >		< CONNECTOR >			
* CN001	1-764-517-11	CONNECTOR, FFC/FPC (ZIF) 7P		CN500	1-691-473-21	CONNECTOR, FFC/FPC 7P	
* CN003	1-580-055-21	PIN, CONNECTOR 2P		CN501	1-691-472-21	CONNECTOR, FFC/FPC 6P	
		< IC >		CN502	1-691-482-21	CONNECTOR, FFC/FPC 15P	
IC002	8-749-923-29	IC RS-20E-T		< IC >			
IC003	8-759-822-37	IC LA7293M		IC507	8-759-165-47	IC MPC1780VFUEB	
		< JACK >		< COIL >			
J001	1-568-027-11	JACK, SMALL TYPE 1P (MIC)		L505	1-216-295-91	CONDCTOR, CHIP (2012)	
		< COIL >		< TRANSISTOR >			
L002	1-216-295-91	CONDCTOR, CHIP (2012)		Q560	8-729-805-25	TRANSISTOR 2SB1121	
L003	1-216-295-91	CONDCTOR, CHIP (2012)		Q561	8-729-425-50	TRANSISTOR 2SB1462Q	
		< TRANSISTOR >		Q562	8-729-402-81	TRANSISTOR XN4501	
Q002	8-729-420-24	TRANSISTOR 2SB1218A-QRS		< RESISTOR >			
		< RESISTOR >		R562	1-218-879-11	METAL CHIP	22K 0.50% 1/16W
R028	1-216-822-11	METAL CHIP	1.2K 5% 1/16W	R563	1-218-879-11	METAL CHIP	22K 0.50% 1/16W
R029	1-216-821-11	METAL CHIP	1K 5% 1/16W	R564	1-216-864-11	METAL CHIP	0 5% 1/16W
R030	1-216-833-11	METAL CHIP	10K 5% 1/16W	R565	1-216-833-11	METAL CHIP	10K 5% 1/16W
R031	1-216-838-11	METAL CHIP	27K 5% 1/16W	R566	1-218-857-11	METAL CHIP	2.7K 0.50% 1/16W
R032	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	R567	1-216-295-91	CONDCTOR, CHIP (2012)	
				R568	1-216-168-00	METAL GLAZE	56 5% 1/8W
				R569	1-218-879-11	METAL CHIP	22K 0.50% 1/16W
				R570	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
				R571	1-218-879-11	METAL CHIP	22K 0.50% 1/16W

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R572	1-216-841-11	METAL CHIP	47K 5% 1/16W	C706	1-164-360-11	CERAMIC CHIP	0.1uF 16V
R590	1-216-833-11	METAL CHIP	10K 5% 1/16W	C708	1-164-360-11	CERAMIC CHIP	0.1uF 16V
R591	1-216-832-11	METAL CHIP	8.2K 5% 1/16W	C709	1-163-077-91	CERAMIC CHIP	0.1uF 50V
< FLEXIBLE BOARD >				C710	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
W500	1-651-889-11	FP-48 FLEXIBLE BOARD		C711	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
W501	1-642-186-11	FP-437 FLEXIBLE BOARD		C712	1-164-360-11	CERAMIC CHIP	0.1uF 16V
*****				C713	1-104-752-11	TANTAL. CHIP	33uF 20% 6.3V
*	A-7066-309-A	VC-159 (SL) BOARD, COMPLETE	(Ref. No. 2,000 Series)	C715	1-162-974-11	CERAMIC CHIP	0.01uF 50V
*****				C716	1-164-360-11	CERAMIC CHIP	0.1uF 16V
< CAPACITOR >				C717	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C601	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C718	1-162-637-11	CERAMIC CHIP	0.47uF 16V
C604	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C719	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C606	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C721	1-162-917-11	CERAMIC CHIP	15PF 5% 50V
C607	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C725	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C608	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C726	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C610	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C727	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C611	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C728	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C613	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C729	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C614	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C730	1-164-298-11	CERAMIC CHIP	0.15uF 10% 25V
C616	1-107-682-11	CERAMIC CHIP	1uF 10% 16V	C731	1-135-145-11	TANTALUM CHIP	0.47uF 10% 35V
C617	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C732	1-162-638-11	CERAMIC CHIP	1uF 16V
C618	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	C733	1-162-638-11	CERAMIC CHIP	1uF 16V
C619	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C734	1-135-145-11	TANTALUM CHIP	0.47uF 10% 35V
C620	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C735	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C621	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C739	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C622	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C743	1-162-638-11	CERAMIC CHIP	1uF 16V
C623	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C745	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C624	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C746	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C627	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C747	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C628	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C748	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C629	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C750	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C630	1-162-946-11	CERAMIC CHIP	27PF 5% 50V	C751	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C632	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C752	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C633	1-162-921-11	CERAMIC CHIP	33PF 5% 50V	C753	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C637	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C754	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C638	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C755	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C641	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C756	1-104-752-11	TANTAL. CHIP	33uF 20% 6.3V
C642	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C757	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C643	1-164-360-11	CERAMIC CHIP	0.1uF 16V	< CONNECTOR >			
C696	1-164-360-11	CERAMIC CHIP	0.1uF 16V	* CN601	1-764-395-21	CONNECTOR, BOARD TO BOARD	42P
C701	1-163-059-91	CERAMIC CHIP	0.01uF 10% 50V	* CN701	1-573-356-11	CONNECTOR, FFC/FPC	16P
C702	1-162-638-11	CERAMIC CHIP	1uF 16V	CN751	1-573-361-11	CONNECTOR, FFC/FPC	21P
C703	1-164-360-11	CERAMIC CHIP	0.1uF 16V	< TRIMMER >			
C704	1-164-360-11	CERAMIC CHIP	0.1uF 16V	CT701	1-141-356-11	CAP, ADJ	
C705	1-135-145-11	TANTALUM CHIP	0.47uF 10% 35V	< DIODE >			
				D701	8-719-404-46	DIODE	MA110
				D702	8-719-404-46	DIODE	MA110

VC-159

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D703	8-719-404-46	DIODE MA110		R606	1-216-847-11	METAL CHIP 150K 5% 1/16W	
D705	8-719-404-46	DIODE MA110		R607	1-216-839-11	METAL CHIP 33K 5% 1/16W	
		< FILTER >		R608	1-216-864-11	METAL CHIP 0 5% 1/16W	
FL601	1-239-766-11	FILTER, LOW PASS		R609	1-216-838-11	METAL CHIP 27K 5% 1/16W	
		< IC >		R610	1-216-839-11	METAL CHIP 33K 5% 1/16W	
IC601	8-759-278-57	IC AK6420HF		R611	1-216-838-11	METAL CHIP 27K 5% 1/16W	
IC602	8-759-332-94	IC SC424614MC68HC11MA8FU		R612	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
IC603	8-759-064-36	IC MB88346BPFV		R613	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
IC604	8-759-710-29	IC NJM2235M		R619	1-216-803-11	METAL CHIP 33 5% 1/16W	
IC609	8-752-369-23	IC CXD2150AR		R620	1-216-841-11	METAL CHIP 47K 5% 1/16W	
IC610	8-752-365-72	IC CXD2151R		R621	1-216-841-11	METAL CHIP 47K 5% 1/16W	
IC611	8-759-262-36	IC CXD2133BR		R624	1-216-864-11	METAL CHIP 0 5% 1/16W	
IC614	8-759-255-09	IC uPD6461GS-802-GLG-E2		R626	1-216-841-11	METAL CHIP 47K 5% 1/16W	
IC701	8-752-355-07	IC CXD1267N		R627	1-216-841-11	METAL CHIP 47K 5% 1/16W	
IC702	8-752-365-74	IC CXD1266R		R628	1-216-837-11	METAL CHIP 22K 5% 1/16W	
IC703	8-752-069-21	IC CXA1690Q		R629	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
IC704	8-759-070-51	IC SN74HCU04ADB		R630	1-216-834-11	METAL CHIP 12K 5% 1/16W	
IC705	8-752-375-12	IC CXD2407BR		R631	1-216-864-11	METAL CHIP 0 5% 1/16W	
IC751	8-759-701-24	IC NJM3414M		R634	1-216-821-11	METAL CHIP 1K 5% 1/16W	
IC752	8-759-058-52	IC XRA10324AF		R635	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
IC753	8-752-365-65	IC CXD2126N		R636	1-216-845-11	METAL CHIP 100K 5% 1/16W	
IC754	8-759-247-07	IC MPC17A34VMEL		R637	1-216-837-11	METAL CHIP 22K 5% 1/16W	
IC755	8-759-031-58	IC SC7SU04F		R638	1-216-839-11	METAL CHIP 33K 5% 1/16W	
		< COIL >		R640	1-216-815-11	METAL CHIP 330 5% 1/16W	
L601	1-412-058-11	INDUCTOR CHIP 10uH		R642	1-216-834-11	METAL CHIP 12K 5% 1/16W	
L604	1-414-078-11	INDUCTOR 10uH		R643	1-216-833-11	METAL CHIP 10K 5% 1/16W	
L605	1-410-391-11	INDUCTOR CHIP 68uH		R645	1-216-834-11	METAL CHIP 12K 5% 1/16W	
L608	1-412-006-31	INDUCTOR CHIP 10uH		R646	1-216-818-11	METAL CHIP 560 5% 1/16W	
L704	1-412-058-11	INDUCTOR CHIP 10uH		R647	1-216-834-11	METAL CHIP 12K 5% 1/16W	
L751	1-412-062-11	INDUCTOR CHIP 47uH		R648	1-216-818-11	METAL CHIP 560 5% 1/16W	
		< TRANSISTOR >		R649	1-216-841-11	METAL CHIP 47K 5% 1/16W	
Q604	8-729-420-24	TRANSISTOR 2SB1218A-QRS		R650	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
Q605	8-729-420-24	TRANSISTOR 2SB1218A-QRS		R651	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
Q606	8-729-602-21	TRANSISTOR 2SC4154		R652	1-216-841-11	METAL CHIP 47K 5% 1/16W	
Q607	8-729-602-21	TRANSISTOR 2SC4154		R654	1-216-864-11	METAL CHIP 0 5% 1/16W	
Q701	8-729-403-27	TRANSISTOR XN4401		R656	1-216-864-11	METAL CHIP 0 5% 1/16W	
Q751	8-729-602-21	TRANSISTOR 2SC4154		R658	1-216-864-11	METAL CHIP 0 5% 1/16W	
Q752	8-729-013-88	TRANSISTOR RN1302		R659	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
		< RESISTOR >		R661	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R601	1-216-851-11	METAL CHIP 330K 5% 1/16W		R662	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R602	1-216-833-11	METAL CHIP 10K 5% 1/16W		R663	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R603	1-216-857-11	METAL CHIP 1M 5% 1/16W		R664	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R604	1-216-833-11	METAL CHIP 10K 5% 1/16W		R665	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R605	1-216-864-11	METAL CHIP 0 5% 1/16W		R666	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
				R667	1-216-820-11	METAL CHIP 820 5% 1/16W	
				R668	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	
				R669	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
				R670	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
				R671	1-216-296-00	METAL CHIP 0 5% 1/8W	
				R701	1-216-857-11	METAL CHIP 1M 5% 1/16W	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R702	1-216-833-11	METAL CHIP	10K 5% 1/16W	*	A-7063-947-A	VF-44 BOARD, COMPLETE (FX240)	
R703	1-216-845-11	METAL CHIP	100K 5% 1/16W			*****	
R705	1-216-827-11	METAL CHIP	3. 3K 5% 1/16W			(Ref. No. 4,000 Series)	
R709	1-216-845-11	METAL CHIP	100K 5% 1/16W			< CAPACITOR >	
R710	1-216-864-11	METAL CHIP	0 5% 1/16W				
R712	1-216-864-11	METAL CHIP	0 5% 1/16W	C501	1-163-113-00	CERAMIC CHIP 68PF 5% 50V	
R713	1-216-807-11	METAL CHIP	68 5% 1/16W	C502	1-126-176-11	ELECT 220uF 20% 10V	
R714	1-216-864-11	METAL CHIP	0 5% 1/16W	C503	1-163-077-91	CERAMIC CHIP 0. 1uF 50V	
R716	1-218-847-11	METAL CHIP	1K 0. 50% 1/16W	C504	1-163-009-11	CERAMIC CHIP 0. 001uF 10% 50V	
R718	1-216-864-11	METAL CHIP	0 5% 1/16W	△C505	1-162-625-11	CERAMIC CHIP 0. 0047uF 5% 50V	
R719	1-218-876-11	METAL CHIP	16K 0. 50% 1/16W	△C506	1-164-758-11	CERAMIC CHIP 0. 0039uF 5% 50V	
R724	1-216-864-11	METAL CHIP	0 5% 1/16W	C508	1-127-515-11	ELECT(SOLID) 47uF 20% 6. 3V	
R725	1-216-841-11	METAL CHIP	47K 5% 1/16W	C509	1-126-090-11	ELECT 82uF 20% 10V	
R728	1-216-864-11	METAL CHIP	0 5% 1/16W	C510	1-164-611-11	CERAMIC CHIP 0. 001uF 10% 500V	
R729	1-216-864-11	METAL CHIP	0 5% 1/16W	C511	1-124-257-00	ELECT 2. 2uF 20% 50V	
R731	1-216-864-11	METAL CHIP	0 5% 1/16W	C512	1-163-037-11	CERAMIC CHIP 0. 022uF 10% 25V	
R740	1-216-864-11	METAL CHIP	0 5% 1/16W	C513	1-137-306-11	FILM CHIP 0. 1uF 5% 16V	
R741	1-218-855-11	METAL CHIP	2. 2K 0. 50% 1/16W	C514	1-162-638-11	CERAMIC CHIP 1uF 16V	
R742	1-218-865-11	METAL CHIP	5. 6K 0. 50% 1/16W	C515	1-131-381-00	TANTALUM 47uF 10% 10V	
R743	1-216-833-11	METAL CHIP	10K 5% 1/16W	C516	1-163-011-11	CERAMIC CHIP 0. 0015uF 10% 50V	
R744	1-216-827-11	METAL CHIP	3. 3K 5% 1/16W	C517	1-135-091-91	TANTAL. CHIP 1uF 20% 16V	
R745	1-216-837-11	METAL CHIP	22K 5% 1/16W			< CONNECTOR >	
R746	1-216-837-11	METAL CHIP	22K 5% 1/16W	CN501	1-953-265-11	HARNESS (VF-64)	
R747	1-216-820-11	METAL CHIP	820 5% 1/16W	* CN502	1-566-195-11	PIN, CONNECTOR (PC BOARD) 2P	
R748	1-216-828-11	METAL CHIP	3. 9K 5% 1/16W	* CN503	1-566-195-11	PIN, CONNECTOR (PC BOARD) 2P	
R749	1-216-851-11	METAL CHIP	330K 5% 1/16W			< DIODE >	
R750	1-216-841-11	METAL CHIP	47K 5% 1/16W	D501	8-719-024-87	DIODE LN1261CAL (TALLY)	
R751	1-216-809-11	METAL CHIP	100 5% 1/16W	D502	8-719-024-87	DIODE LN1261CAL (TALLY)	
R752	1-216-821-11	METAL CHIP	1K 5% 1/16W	D503	8-719-400-20	DIODE MA152WA	
R753	1-216-845-11	METAL CHIP	100K 5% 1/16W			< IC >	
R754	1-216-848-11	METAL CHIP	180K 5% 1/16W	IC501	8-759-196-14	IC BA7149F	
R755	1-216-855-11	METAL CHIP	680K 5% 1/16W			< COIL >	
R756	1-216-848-11	METAL CHIP	180K 5% 1/16W	L501	1-412-031-11	INDUCTOR CHIP 47uH	
R757	1-216-833-11	METAL CHIP	10K 5% 1/16W	L502	1-410-385-11	INDUCTOR CHIP 22uH	
R758	1-216-837-11	METAL CHIP	22K 5% 1/16W	△L503	1-459-876-41	COIL, FERRITE (HLC)	
R759	1-216-837-11	METAL CHIP	22K 5% 1/16W			< TRANSISTOR >	
R760	1-216-826-11	METAL CHIP	2. 7K 5% 1/16W	Q501	8-729-216-31	TRANSISTOR 2SA1163-G	
R761	1-216-842-11	METAL CHIP	56K 5% 1/16W	Q502	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
R762	1-216-842-11	METAL CHIP	56K 5% 1/16W	Q503	8-729-106-68	TRANSISTOR 2SD1615A-GP	
R764	1-216-828-11	METAL CHIP	3. 9K 5% 1/16W			< RESISTOR >	
R798	1-216-296-00	METAL CHIP	0 5% 1/8W	R501	1-216-063-00	METAL CHIP 3. 9K 5% 1/10W	
R799	1-216-296-00	METAL CHIP	0 5% 1/8W	R502	1-216-059-00	METAL CHIP 2. 7K 5% 1/10W	
		< VIBRATOR >		R503	1-216-063-00	METAL CHIP 3. 9K 5% 1/10W	
X601	1-760-081-21	VIBRATOR, CERAMIC (24MHz)		R504	1-216-041-00	METAL CHIP 470 5% 1/10W	
X701	1-760-320-11	VIBRATOR, CRYSTAL (28. 6363MHz)					

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R505	1-216-041-00	METAL CHIP	470 5% 1/10W	C808	1-135-145-11	TANTALUM CHIP 0.47uF 10% 35V	
R506	1-216-073-00	METAL CHIP	10K 5% 1/10W	C809	1-135-091-91	TANTAL. CHIP 1uF 20% 16V	
R507	1-216-051-00	METAL CHIP	1.2K 5% 1/10W	C810	1-135-091-91	TANTAL. CHIP 1uF 20% 16V	
R508	1-216-005-00	METAL CHIP	15 5% 1/10W	C811	1-135-091-91	TANTAL. CHIP 1uF 20% 16V	
R509	1-216-870-11	METAL CHIP	180K 1% 1/10W	C812	1-135-179-21	TANTAL. CHIP 2.2uF 20% 16V	
R510	1-216-077-00	METAL CHIP	15K 5% 1/10W	C813	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
R511	1-216-129-00	METAL CHIP	2.2M 5% 1/10W	C814	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
R512	1-216-133-00	METAL CHIP	3.3M 5% 1/10W	C815	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
R513	1-216-125-00	METAL CHIP	1.5M 5% 1/10W	C816	1-164-699-11	CERAMIC CHIP 0.0033uF 5% 50V	
R514	1-216-121-00	METAL CHIP	1M 5% 1/10W	C817	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V	
R515	1-216-055-00	METAL CHIP	1.8K 5% 1/10W	C818	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
R516	1-216-025-00	METAL CHIP	100 5% 1/10W	C819	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
R517	1-216-308-00	METAL CHIP	4.7 5% 1/10W	C820	1-164-357-11	CERAMIC CHIP 1000PF 5% 50V	
R518	1-216-683-11	METAL CHIP	22K 0.5% 1/10W	C821	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
R519	1-208-824-11	METAL CHIP	56K 0.50% 1/10W	C822	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
R520	1-216-121-00	METAL CHIP	1M 5% 1/10W	C823	1-164-346-11	CERAMIC CHIP 1uF 16V	
R521	1-216-160-00	METAL GLAZE	27 5% 1/8W	C824	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
R522	1-216-073-00	METAL CHIP	10K 5% 1/10W	C825	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
R523	1-216-111-00	METAL CHIP	390K 5% 1/10W	C828	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
R524	1-216-097-00	METAL CHIP	100K 5% 1/10W	C829	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
R525	1-216-031-00	METAL CHIP	180 5% 1/10W	C830	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
R526	1-216-689-11	METAL CHIP	39K 0.5% 1/10W	C832	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
R528	1-216-077-00	METAL CHIP	15K 5% 1/10W	C833	1-164-361-11	CERAMIC CHIP 0.047uF 16V	
< VARIABLE RESISTOR >				C834	1-164-361-11	CERAMIC CHIP 0.047uF 16V	
RV501	1-238-088-11	RES, ADJ, CERMET	2.2K	C835	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
RV502	1-223-565-11	RES, VAR, CARBON (4 TYPE)		C838	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
RV503	1-238-096-11	RES, ADJ CERMET	1M	C839	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
RV505	1-238-086-11	RES, ADJ, CERMET	470	C840	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
< TRANSFORMER >				C842	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
△T501	1-439-525-11	TRANSFORMER ASSY, FLYBACK		C844	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
< THERMISTOR >				C845	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
TH501	1-809-350-21	THERMISTOR, NTC (2125)		C846	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
< SOCKET >				C847	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
△W502	1-526-978-51	SOCKET ASSY, CRT		C848	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
*****				C849	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
*	A-7063-779-A	VF-68 BOARD, COMPLETE (FX340)		C850	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
*****				C851	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
(Ref. No. 4,000 Series)				C852	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
< CAPACITOR >				C853	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C804	1-164-505-11	CERAMIC CHIP	2.2uF 16V	C862	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C805	1-135-091-91	TANTAL. CHIP	1uF 20% 16V	C863	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C806	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V	C864	1-135-179-21	TANTAL. CHIP 2.2uF 20% 16V	
C807	1-164-505-11	CERAMIC CHIP	2.2uF 16V	C865	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C866	1-162-921-11	CERAMIC CHIP 33PF 5% 50V	
				C867	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C868	1-164-346-11	CERAMIC CHIP 1uF 16V	
				C872	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C873	1-164-005-11	CERAMIC CHIP 0.47uF 25V	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN801	1-573-990-21	CONNECTOR, BOARD TO BOARD 10P	
* CN802	1-573-356-11	CONNECTOR, FFC/FPC 16P	
CN803	1-573-351-11	CONNECTOR, FFC/FPC 11P	
< DIODE >			
D801	8-719-025-91	DIODE MA365	
D802	8-719-984-02	DIODE BR4371F (TALLY)	
< IC >			
IC801	8-752-058-96	IC CXA1585Q	
IC802	8-752-058-95	IC CXA1515Q	
IC803	8-752-362-78	IC CXD2403R	
< COIL >			
L801	1-414-078-11	INDUCTOR 10uH	
L803	1-414-078-11	INDUCTOR 10uH	
L805	1-412-962-11	INDUCTOR 82uH	
L806	1-412-962-11	INDUCTOR 82uH	
L807	1-412-962-11	INDUCTOR 82uH	
L808	1-412-950-11	INDUCTOR 8.2uH	
L809	1-412-962-11	INDUCTOR 82uH	
L810	1-410-192-51	INDUCTOR CHIP 1uH	
< TRANSISTOR >			
Q801	8-729-427-74	TRANSISTOR XP4601	
Q802	8-729-425-64	TRANSISTOR 2SD2216Q	
< RESISTOR >			
R801	1-218-958-11	METAL GLAZE 2.7K 5%	1/16W
R802	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R803	1-218-955-11	METAL GLAZE 1.5K 5%	1/16W
R805	1-218-962-11	METAL GLAZE 5.6K 5%	1/16W
R806	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R807	1-218-970-11	METAL GLAZE 27K 5%	1/16W
R808	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R809	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R810	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R811	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R812	1-218-966-11	METAL GLAZE 12K 5%	1/16W
R813	1-218-973-11	METAL GLAZE 47K 5%	1/16W
R814	1-218-989-11	METAL GLAZE 1M 5%	1/16W
R815	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R816	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R817	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R818	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R819	1-218-980-11	METAL GLAZE 180K 5%	1/16W
R820	1-218-970-11	METAL GLAZE 27K 5%	1/16W
R821	1-218-969-11	METAL GLAZE 22K 5%	1/16W

Ref. No.	Part No.	Description	Remark
R822	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R823	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R824	1-218-990-11	CONDCTOR, CHIP (1005)	
R825	1-218-989-11	METAL GLAZE 1M 5%	1/16W
R826	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R827	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R828	1-218-984-11	METAL GLAZE 390K 5%	1/16W
R829	1-218-984-11	METAL GLAZE 390K 5%	1/16W
R830	1-218-984-11	METAL GLAZE 390K 5%	1/16W
R831	1-218-944-11	METAL GLAZE 180 5%	1/16W
R833	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R834	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R835	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R836	1-218-976-11	METAL GLAZE 82K 5%	1/16W
R837	1-218-990-11	CONDCTOR, CHIP (1005)	
R838	1-218-973-11	METAL GLAZE 47K 5%	1/16W
R839	1-218-990-11	CONDCTOR, CHIP (1005)	
R840	1-218-973-11	METAL GLAZE 47K 5%	1/16W
R841	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R842	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R843	1-218-971-11	METAL GLAZE 33K 5%	1/16W
R849	1-218-965-11	METAL GLAZE 10K 5%	1/16W
R850	1-216-835-11	METAL CHIP 15K 5%	1/16W
R856	1-218-990-11	CONDCTOR, CHIP (1005)	
R861	1-218-873-11	METAL CHIP 12K 0.50%	1/16W
R862	1-218-905-11	METAL CHIP 270K 0.50%	1/16W
R863	1-218-969-11	METAL GLAZE 22K 5%	1/16W
R864	1-218-981-11	METAL GLAZE 220K 5%	1/16W
R865	1-218-953-11	METAL GLAZE 1K 5%	1/16W
R866	1-218-952-11	METAL GLAZE 820 5%	1/16W
R867	1-218-967-11	METAL GLAZE 15K 5%	1/16W
R868	1-218-966-11	METAL GLAZE 12K 5%	1/16W
< VARIABLE RESISTOR >			
RV802	1-241-480-11	RES, ADJ, CERMET 47K	
RV803	1-241-480-11	RES, ADJ, CERMET 47K	
RV804	1-241-480-11	RES, ADJ, CERMET 47K	
< VIBRATOR >			
X801	1-579-466-11	VIBRATOR, CRYSTAL (3.58MHz)	

⚠	A-7063-780-A	VF-69 BOARD, COMPLETE (FX340)	

(Ref. No. 4,000 Series)			
< CAPACITOR >			
C951	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C954	1-164-346-11	CERAMIC CHIP 1uF	16V
C955	1-164-676-11	CERAMIC CHIP 2200PF 5%	16V

VF-69

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C957	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	△Q953	8-729-024-60	TRANSISTOR MTD6N15T4	
C958	1-104-916-11	TANTAL. CHIP	6.8uF 20% 20V	Q954	8-729-928-54	TRANSISTOR DTA123JE	
C959	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V			< RESISTOR >	
C960	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	R951	1-218-971-11	METAL GLAZE 33K 5% 1/16W	
C961	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R953	1-218-981-11	METAL GLAZE 220K 5% 1/16W	
C963	1-104-913-11	TANTAL. CHIP	10uF 20% 16V	R954	1-218-975-11	METAL GLAZE 68K 5% 1/16W	
C964	1-164-836-11	CERAMIC CHIP	6.8uF 16V	R957	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
C966	1-165-128-11	CERAMIC CHIP	0.22uF 16V	R958	1-218-965-11	METAL GLAZE 10K 5% 1/16W	
C969	1-163-018-00	CERAMIC CHIP	0.0056uF 5% 50V	R959	1-218-899-11	METAL CHIP 150K 0.50% 1/16W	
C970	1-163-018-00	CERAMIC CHIP	0.0056uF 5% 50V	R960	1-218-901-11	METAL CHIP 180K 0.50% 1/16W	
C971	1-163-038-91	CERAMIC CHIP	0.1uF 25V	R961	1-218-982-11	METAL GLAZE 270K 5% 1/16W	
C972	1-135-177-21	TANTALUM CHIP	1uF 20% 20V	R962	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
C973	1-162-921-11	CERAMIC CHIP	33PF 5% 50V	R963	1-218-970-11	METAL GLAZE 27K 5% 1/16W	
C974	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R965	1-218-975-11	METAL GLAZE 68K 5% 1/16W	
C975	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	R966	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
C976	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R967	1-218-903-11	METAL CHIP 220K 0.50% 1/16W	
C977	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R968	1-218-899-11	METAL CHIP 150K 0.50% 1/16W	
C978	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R970	1-218-980-11	METAL GLAZE 180K 5% 1/16W	
C979	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R971	1-218-970-11	METAL GLAZE 27K 5% 1/16W	
C980	1-164-505-11	CERAMIC CHIP	2.2uF 16V	R973	1-216-833-11	METAL CHIP 10K 5% 1/16W	
C981	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	R974	1-216-849-11	METAL CHIP 220K 5% 1/16W	
		< CONNECTOR >		R975	1-216-846-11	METAL CHIP 120K 5% 1/16W	
CN951	1-580-789-21	PIN, CONNECTOR (SMD) 6P		R978	1-218-969-11	METAL GLAZE 22K 5% 1/16W	
CN953	1-573-351-11	CONNECTOR, FFC/FPC 11P		R979	1-218-961-11	METAL GLAZE 4.7K 5% 1/16W	
* CN955	1-580-267-11	CONNECTOR, BOARD TO BOARD 20P		R980	1-218-936-11	METAL GLAZE 39 5% 1/16W	
		< DIODE >		R981	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
D951	8-719-043-70	DIODE MA6S121		R982	1-216-834-11	METAL CHIP 12K 5% 1/16W	
D952	8-719-404-19	DIODE LN1251C (TALLY)		R983	1-216-835-11	METAL CHIP 15K 5% 1/16W	
D954	8-719-802-36	DIODE 1SS250		R984	1-216-835-11	METAL CHIP 15K 5% 1/16W	
D955	8-719-820-41	DIODE 1SS302		R985	1-216-833-11	METAL CHIP 10K 5% 1/16W	
D956	8-719-027-45	DIODE MA740		R986	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
D957	8-719-027-45	DIODE MA740		R987	1-216-295-91	CONDCTOR, CHIP (2012)	
D958	8-719-420-14	DIODE MA8082-M		R991	1-216-296-00	METAL CHIP 0 5% 1/8W	
D959	8-719-420-14	DIODE MA8082-M		R997	1-218-973-11	METAL GLAZE 47K 5% 1/16W	
D960	8-719-420-14	DIODE MA8082-M		R998	1-218-977-11	METAL GLAZE 100K 5% 1/16W	
		< IC >				< VARIABLE RESISTOR >	
IC951	8-759-097-75	IC MB3789PFV-G-BND-ER		RV951	1-241-480-11	RES, ADJ, CERMET 47K	
IC952	8-759-070-51	IC SN74HCU04ADB		RV953	1-230-523-11	RES, ADJ, METAL 10K (BRIGHT)	
IC954	8-759-998-98	IC LM358D		RV954	1-230-523-11	RES, ADJ, METAL 10K (COLOR)	
		< COIL >		RV955	1-230-523-11	RES, ADJ, METAL 10K (HUE)	
L951	1-414-080-11	INDUCTOR 22uH				< TRANSFORMER >	
L952	1-412-029-11	INDUCTOR CHIP 10uH		△T951	1-423-813-11	TRANSFORMER, INVERTER	
L953	1-412-030-11	INDUCTOR CHIP 22uH				*****	
		< TRANSISTOR >					
Q951	8-729-929-24	TRANSISTOR DTC143TE					

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-7066-310-A	VS-123 (SL) BOARD, COMPLETE (FX240) *****		C164	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
*	A-7066-318-A	VS-123 (SLC) BOARD, COMPLETE (FX340) ***** (Ref. No. 10,000 Series) < CAPACITOR >		C165	1-162-956-11	CERAMIC CHIP 180PF 5% 50V	
C101	1-162-921-11	CERAMIC CHIP 33PF 5% 50V		C166	1-162-958-11	CERAMIC CHIP 270PF 5% 50V	
C102	1-162-922-11	CERAMIC CHIP 39PF 5% 50V		C167	1-164-382-11	CERAMIC CHIP 91PF 5% 50V	
C106	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V		C168	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C107	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		C169	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
C108	1-162-926-11	CERAMIC CHIP 82PF 5% 50V		C172	1-162-921-11	CERAMIC CHIP 33PF 5% 50V	
C109	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		C179	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C110	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		C190	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C111	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C204	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C112	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		C205	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C113	1-164-217-11	CERAMIC CHIP 150PF 5% 50V		C206	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V	
C114	1-164-360-11	CERAMIC CHIP 0.1uF 16V		C207	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C115	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C208	1-128-007-11	ELECT CHIP 2.2uF 20% 35V	
C116	1-164-360-11	CERAMIC CHIP 0.1uF 16V		C209	1-126-246-11	ELECT CHIP 220uF 20% 4V	
C117	1-104-852-11	TANTAL. CHIP 22uF 20% 6.3V		C210	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C118	1-104-852-11	TANTAL. CHIP 22uF 20% 6.3V		C211	1-128-013-11	ELECT CHIP 1uF 20% 50V	
C119	1-162-961-11	CERAMIC CHIP 330PF 10% 50V		C212	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C120	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C213	1-135-176-21	TANTALUM CHIP 0.68uF 10% 20V	
C121	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V		C214	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C122	1-162-961-11	CERAMIC CHIP 330PF 10% 50V		C215	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C123	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C216	1-135-201-11	TANTALUM CHIP 10uF 20% 4V	
C124	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V		C217	1-128-013-11	ELECT CHIP 1uF 20% 50V	
C128	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C218	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C131	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C219	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C134	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C220	1-135-201-11	TANTALUM CHIP 10uF 20% 4V	
C136	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C222	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C137	1-162-919-11	CERAMIC CHIP 22PF 5% 50V		C225	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C143	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V		C226	1-162-926-11	CERAMIC CHIP 82PF 5% 50V	
C144	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		C227	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C145	1-104-852-11	TANTAL. CHIP 22uF 20% 6.3V		C228	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C146	1-164-360-11	CERAMIC CHIP 0.1uF 16V		C229	1-135-201-11	TANTALUM CHIP 10uF 20% 4V	
C147	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C230	1-135-180-21	TANTALUM CHIP 3.3uF 20% 6.3V	
C148	1-162-958-11	CERAMIC CHIP 270PF 5% 50V		C231	1-164-005-11	CERAMIC CHIP 0.47uF 25V	
C149	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C232	1-162-959-11	CERAMIC CHIP 330PF 5% 50V	
C150	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C234	1-162-957-11	CERAMIC CHIP 220PF 5% 50V	
C151	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		C235	1-126-207-11	ELECT CHIP 33uF 20% 4V	
C152	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C238	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C154	1-162-919-11	CERAMIC CHIP 22PF 5% 50V		C239	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C157	1-162-916-11	CERAMIC CHIP 12PF 5% 50V		C240	1-164-392-11	CERAMIC CHIP 390PF 5% 50V	
C158	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		C241	1-135-201-11	TANTALUM CHIP 10uF 20% 4V	
C159	1-162-922-11	CERAMIC CHIP 39PF 5% 50V		C242	1-135-201-11	TANTALUM CHIP 10uF 20% 4V	
C160	1-162-946-11	CERAMIC CHIP 27PF 5% 50V		C243	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C161	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		C244	1-162-959-11	CERAMIC CHIP 330PF 5% 50V	
C163	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C245	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
				C247	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C251	1-162-956-11	CERAMIC CHIP 180PF 5% 50V	
				C258	1-164-346-11	CERAMIC CHIP 1uF 16V	
				C262	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
				C263	1-162-974-11	CERAMIC CHIP 0.01uF 50V	

VS-123

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C264	1-107-682-11	CERAMIC CHIP	1uF 10% 16V	C524	1-164-492-11	CERAMIC CHIP	0.15uF 10% 16V
C268	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C525	1-164-217-11	CERAMIC CHIP	150PF 5% 50V
C271	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C526	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C273	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C527	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C274	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C528	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C275	1-162-955-11	CERAMIC CHIP	150PF 5% 50V	C529	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
C276	1-162-944-11	CERAMIC CHIP	18PF 5% 50V	C530	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C278	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C531	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C279	1-164-145-11	CERAMIC CHIP	390PF 5% 50V	C532	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C281	1-162-954-11	CERAMIC CHIP	120PF 5% 50V	C533	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C282	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C534	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C284	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C535	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V
C285	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C536	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V
C286	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C537	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C287	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C539	1-107-682-11	CERAMIC CHIP	1uF 10% 16V
C289	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C540	1-162-913-11	CERAMIC CHIP	8PF 0.5PF 50V
C290	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C541	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C291	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C543	1-162-913-11	CERAMIC CHIP	8PF 0.5PF 50V
C299	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C544	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C301	1-128-004-11	ELECT CHIP	10uF 20% 16V	C545	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C305	1-107-682-11	CERAMIC CHIP	1uF 10% 16V	C546	1-164-346-11	CERAMIC CHIP	1uF 16V
C307	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C547	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C310	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C548	1-128-004-11	ELECT CHIP	10uF 20% 16V
C312	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C550	1-128-530-11	ELECT CHIP	33uF 20% 10V
C319	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C559	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C320	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C560	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C328	1-164-361-11	CERAMIC CHIP	0.047uF 16V	C561	1-128-004-11	ELECT CHIP	10uF 20% 16V
C331	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C562	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C334	1-162-935-11	CERAMIC CHIP	4PF 0.25PF 50V	C563	1-164-816-11	CERAMIC CHIP	220PF 2% 50V
C500	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C564	1-164-816-11	CERAMIC CHIP	220PF 2% 50V
C501	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C565	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C502	1-164-361-11	CERAMIC CHIP	0.047uF 16V	C566	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C503	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	C567	1-164-173-11	CERAMIC CHIP	0.0039uF 10% 50V
C504	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C568	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C506	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	C569	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C507	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	C570	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C508	1-162-918-11	CERAMIC CHIP	18PF 5% 50V	C571	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C509	1-162-974-11	CERAMIC CHIP	0.01uF 50V	C573	1-162-909-11	CERAMIC CHIP	4PF 0.25PF 50V
C510	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C951	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C511	1-164-361-11	CERAMIC CHIP	0.047uF 16V	C955	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C512	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C957	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C513	1-164-361-11	CERAMIC CHIP	0.047uF 16V	C958	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C514	1-162-974-11	CERAMIC CHIP	0.01uF 50V				(FX340)
C515	1-162-974-11	CERAMIC CHIP	0.01uF 50V				16V
C516	1-164-361-11	CERAMIC CHIP	0.047uF 16V				(FX340)
C518	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C959	1-135-201-11	TANTALUM CHIP	10uF 20% 4V
C519	1-164-346-11	CERAMIC CHIP	1uF 16V				(FX340)
C521	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C967	1-165-128-11	CERAMIC CHIP	0.22uF 16V
C522	1-164-361-11	CERAMIC CHIP	0.047uF 16V				
C523	1-164-492-11	CERAMIC CHIP	0.15uF 10% 16V				
						< CONNECTOR >	
				CN101	1-691-492-21	CONNECTOR, FFC/FPC 13P	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN102	1-580-789-21	PIN, CONNECTOR (SMD) 6P		L115	1-412-280-31	INDUCTOR 330uH	
CN201	1-573-353-11	CONNECTOR, FFC/FPC 13P		L116	1-410-657-21	INDUCTOR CHIP 180uH	
CN202	1-691-536-11	CONNECTOR, BOARD TO BOARD 24P		L118	1-410-655-31	INDUCTOR CHIP 120uH	
* CN203	1-764-396-21	CONNECTOR, BOARD TO BOARD 42P		L120	1-412-951-11	INDUCTOR 10uH	
CN206	1-580-789-21	PIN, CONNECTOR (SMD) 6P		L203	1-412-955-11	INDUCTOR 22uH	
CN502	1-764-708-11	CONNECTOR, FFC/FPC (LIF) 9P		L204	1-412-963-11	INDUCTOR 100uH	
CN503	1-764-717-11	CONNECTOR, FFC/FPC (LIF) 18P		L207	1-412-945-11	INDUCTOR 3.3uH	
CN504	1-695-325-11	CONNECTOR, BOARD TO BOARD 42P		L209	1-412-960-21	INDUCTOR 56uH	
* CN505	1-764-397-21	CONNECTOR, BOARD TO BOARD 42P		L213	1-412-953-11	INDUCTOR 15uH	
		< DIODE >		L214	1-412-962-11	INDUCTOR 82uH	
D101	8-719-800-76	DIODE 1SS226		L503	1-412-961-11	INDUCTOR 68uH	
D102	8-719-404-49	DIODE MA111				< IC LINK >	
D201	8-719-027-50	DIODE MA142WK		△PS500	1-576-122-21	LINK, IC (CCP2E10 0.4A)	
D204	8-719-027-50	DIODE MA142WK		△PS501	1-576-122-21	LINK, IC (CCP2E10 0.4A)	
D212	8-719-404-49	DIODE MA111				< TRANSISTOR >	
D218	8-719-800-76	DIODE 1SS226		Q101	8-729-905-23	TRANSISTOR 2SA1576-R	
D321	8-719-045-87	DIODE MA4Z082WA		Q102	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
△D501	8-719-421-27	DIODE MA728		Q103	8-729-216-22	TRANSISTOR 2SA1162	
D504	8-719-404-49	DIODE MA111		Q104	8-729-230-63	TRANSISTOR 2SC4116-YG	
D505	8-719-404-49	DIODE MA111		Q105	8-729-402-42	TRANSISTOR UN5213	
		< FILTER >		Q106	8-729-402-42	TRANSISTOR UN5213	
FL201	1-236-757-21	FILTER, LOW PASS (C)		Q109	8-729-230-63	TRANSISTOR 2SC4116-YG	
		< IC >		Q111	8-729-015-74	TRANSISTOR UN5111	
IC102	8-752-069-78	IC CXA1704R		Q112	8-729-117-73	TRANSISTOR 2SC4178-F14	
IC201	8-752-068-58	IC CXA1700R		Q113	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
IC203	8-752-351-22	IC CXL5502N		Q114	8-729-230-63	TRANSISTOR 2SC4116-YG	
IC205	8-752-053-21	IC CXA1211M		Q115	8-729-012-50	TRANSISTOR 2SC4400-3/4/5	
IC501	8-759-278-57	IC AK6420HF-E2		Q117	8-729-230-63	TRANSISTOR 2SC4116-YG	
IC502	8-759-295-62	IC S-8423DFS-T2		Q119	8-729-230-63	TRANSISTOR 2SC4116-YG	
IC503	8-759-267-67	IC MB89098PFV-G-107-BND		Q126	8-729-230-63	TRANSISTOR 2SC4116-YG	
IC505	8-752-851-37	IC CXP87132-009R		Q129	8-729-230-63	TRANSISTOR 2SC4116-YG	
IC506	8-759-169-11	IC CXA1575M-E2		Q132	8-729-230-63	TRANSISTOR 2SC4116-YG	
IC508	8-759-195-09	IC XR1083CQ-E2		Q133	8-729-012-50	TRANSISTOR 2SC4400-3/4/5	
IC951	8-759-169-02	IC MB88344BPFV-G-BND-ER		Q134	8-729-402-48	TRANSISTOR UN521E	
IC953	8-759-710-29	IC NJM2235M (FX340)		Q135	8-729-402-48	TRANSISTOR UN521E	
		< COIL >		Q202	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
L103	1-412-066-21	INDUCTOR CHIP 220uH		Q204	8-729-402-42	TRANSISTOR UN5213	
L104	1-412-951-11	INDUCTOR 10uH		Q216	8-729-402-42	TRANSISTOR UN5213	
L105	1-412-066-21	INDUCTOR CHIP 220uH		Q217	8-729-420-12	TRANSISTOR XN4213	
L108	1-412-060-11	INDUCTOR CHIP 22uH		Q219	8-729-230-63	TRANSISTOR 2SC4116-YG	
L109	1-412-957-11	INDUCTOR 33uH		Q225	8-729-015-76	TRANSISTOR UN5211	
L110	1-410-657-21	INDUCTOR CHIP 180uH		Q232	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
L111	1-412-950-11	INDUCTOR 8.2uH		Q234	8-729-230-63	TRANSISTOR 2SC4116-YG	
L112	1-412-280-31	INDUCTOR 330uH		Q235	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
L113	1-412-957-11	INDUCTOR 33uH		Q236	8-729-230-63	TRANSISTOR 2SC4116-YG	
L114	1-412-282-41	INDUCTOR 470uH		Q237	8-729-402-81	TRANSISTOR XN4501	
				Q238	8-729-420-50	TRANSISTOR UN5215	
				Q240	8-729-230-63	TRANSISTOR 2SC4116-YG	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

VS-123

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q242	8-729-420-24	TRANSISTOR	2SB1218A-QRS	R123	1-216-836-11	METAL CHIP	18K 5% 1/16W
Q244	8-729-402-42	TRANSISTOR	UN5213	R124	1-216-864-11	METAL CHIP	0 5% 1/16W
Q246	8-729-402-81	TRANSISTOR	XN4501	R126	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q247	8-729-402-42	TRANSISTOR	UN5213	R127	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q252	8-729-230-63	TRANSISTOR	2SC4116-YG	R128	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
Q253	8-729-420-56	TRANSISTOR	UN511E	R130	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
Q254	8-729-403-35	TRANSISTOR	UN5113	R132	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
Q256	8-729-230-63	TRANSISTOR	2SC4116-YG	R133	1-216-819-11	METAL CHIP	680 5% 1/16W
Q257	8-729-230-63	TRANSISTOR	2SC4116-YG	R134	1-216-834-11	METAL CHIP	12K 5% 1/16W
Q258	8-729-420-24	TRANSISTOR	2SB1218A-QRS	R135	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q259	8-729-230-63	TRANSISTOR	2SC4116-YG	R136	1-216-820-11	METAL CHIP	820 5% 1/16W
Q260	8-729-230-63	TRANSISTOR	2SC4116-YG	R137	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q261	8-729-402-42	TRANSISTOR	UN5213	R140	1-216-813-11	METAL CHIP	220 5% 1/16W
Q262	8-729-230-63	TRANSISTOR	2SC4116-YG	R141	1-216-817-11	METAL CHIP	470 5% 1/16W
Q263	8-729-230-63	TRANSISTOR	2SC4116-YG	R142	1-216-818-11	METAL CHIP	560 5% 1/16W
Q264	8-729-230-63	TRANSISTOR	2SC4116-YG	R143	1-216-808-11	METAL CHIP	82 5% 1/16W
Q266	8-729-402-42	TRANSISTOR	UN5213	R144	1-216-818-11	METAL CHIP	560 5% 1/16W
Q267	8-729-230-63	TRANSISTOR	2SC4116-YG	R146	1-216-809-11	METAL CHIP	100 5% 1/16W
Q268	8-729-230-63	TRANSISTOR	2SC4116-YG	R147	1-216-864-11	METAL CHIP	0 5% 1/16W
Q501	8-729-403-27	TRANSISTOR	XN4401	R148	1-216-813-11	METAL CHIP	220 5% 1/16W
Q503	8-729-402-81	TRANSISTOR	XN4501	R149	1-216-813-11	METAL CHIP	220 5% 1/16W
Q504	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R150	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
Q506	8-729-402-42	TRANSISTOR	UN5213	R151	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
Q507	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R152	1-216-824-11	METAL CHIP	1.8K 5% 1/16W
Q511	8-729-420-20	TRANSISTOR	XN4312	R153	1-216-830-11	METAL CHIP	5.6K 5% 1/16W
Q951	8-729-101-07	TRANSISTOR	2SB798-DL	R154	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q952	8-729-230-63	TRANSISTOR	2SC4116-YG	R158	1-216-836-11	METAL CHIP	18K 5% 1/16W
Q954	8-729-230-63	TRANSISTOR	2SC4116-YG	R159	1-216-836-11	METAL CHIP	18K 5% 1/16W
Q955	8-729-230-63	TRANSISTOR	2SC4116-YG (FX340)	R160	1-216-818-11	METAL CHIP	560 5% 1/16W
Q956	8-729-230-63	TRANSISTOR	2SC4116-YG	R162	1-216-818-11	METAL CHIP	560 5% 1/16W
Q958	8-729-230-63	TRANSISTOR	2SC4116-YG	R163	1-216-821-11	METAL CHIP	1K 5% 1/16W
< RESISTOR >				R164	1-216-864-11	METAL CHIP	0 5% 1/16W
R101	1-216-864-11	METAL CHIP	0 5% 1/16W	R165	1-216-821-11	METAL CHIP	1K 5% 1/16W
R102	1-216-837-11	METAL CHIP	22K 5% 1/16W	R166	1-216-816-11	METAL CHIP	390 5% 1/16W
R103	1-216-839-11	METAL CHIP	33K 5% 1/16W	R171	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
R104	1-216-819-11	METAL CHIP	680 5% 1/16W	R173	1-216-864-11	METAL CHIP	0 5% 1/16W
R105	1-216-819-11	METAL CHIP	680 5% 1/16W	R174	1-216-864-11	METAL CHIP	0 5% 1/16W
R106	1-216-814-11	METAL CHIP	270 5% 1/16W	R175	1-216-821-11	METAL CHIP	1K 5% 1/16W
R107	1-216-813-11	METAL CHIP	220 5% 1/16W	R178	1-216-809-11	METAL CHIP	100 5% 1/16W
R108	1-216-800-11	METAL GLAZE	18 5% 1/16W	R179	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R109	1-216-804-11	METAL CHIP	39 5% 1/16W	R180	1-216-809-11	METAL CHIP	100 5% 1/16W
R110	1-216-818-11	METAL CHIP	560 5% 1/16W	R181	1-216-821-11	METAL CHIP	1K 5% 1/16W
R111	1-218-875-11	METAL CHIP	15K 0.50% 1/16W	R185	1-216-847-11	METAL CHIP	150K 5% 1/16W
R112	1-216-836-11	METAL CHIP	18K 5% 1/16W	R186	1-216-837-11	METAL CHIP	22K 5% 1/16W
R114	1-216-828-11	METAL CHIP	3.9K 5% 1/16W	R187	1-216-837-11	METAL CHIP	22K 5% 1/16W
R118	1-216-836-11	METAL CHIP	18K 5% 1/16W	R188	1-216-837-11	METAL CHIP	22K 5% 1/16W
R119	1-216-864-11	METAL CHIP	0 5% 1/16W	R189	1-216-837-11	METAL CHIP	22K 5% 1/16W
R120	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	R193	1-216-815-11	METAL CHIP	330 5% 1/16W
R122	1-216-853-11	METAL CHIP	470K 5% 1/16W	R194	1-216-818-11	METAL CHIP	560 5% 1/16W
				R195	1-216-839-11	METAL CHIP	33K 5% 1/16W

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R196	1-216-836-11	METAL CHIP	18K 5% 1/16W	R286	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R197	1-216-864-11	METAL CHIP	0 5% 1/16W	R288	1-216-844-11	METAL CHIP	82K 5% 1/16W
R201	1-216-829-11	METAL CHIP	4. 7K 5% 1/16W	R289	1-216-821-11	METAL CHIP	1K 5% 1/16W
R202	1-216-832-11	METAL CHIP	8. 2K 5% 1/16W	R290	1-216-864-11	METAL CHIP	0 5% 1/16W
R203	1-216-829-11	METAL CHIP	4. 7K 5% 1/16W	R291	1-216-833-11	METAL CHIP	10K 5% 1/16W
R204	1-216-864-11	METAL CHIP	0 5% 1/16W	R295	1-216-864-11	METAL CHIP	0 5% 1/16W
R205	1-216-864-11	METAL CHIP	0 5% 1/16W	R296	1-216-815-11	METAL CHIP	330 5% 1/16W
R207	1-216-804-11	METAL CHIP	39 5% 1/16W	R297	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R209	1-216-814-11	METAL CHIP	270 5% 1/16W	R300	1-216-817-11	METAL CHIP	470 5% 1/16W
R210	1-216-821-11	METAL CHIP	1K 5% 1/16W	R302	1-216-864-11	METAL CHIP	0 5% 1/16W
R211	1-216-803-11	METAL CHIP	33 5% 1/16W	R303	1-216-810-11	METAL CHIP	120 5% 1/16W
R212	1-216-864-11	METAL CHIP	0 5% 1/16W	R304	1-216-833-11	METAL CHIP	10K 5% 1/16W
R213	1-216-833-11	METAL CHIP	10K 5% 1/16W	R305	1-216-820-11	METAL CHIP	820 5% 1/16W
R214	1-216-828-11	METAL CHIP	3. 9K 5% 1/16W	R307	1-216-813-11	METAL CHIP	220 5% 1/16W
R215	1-216-819-11	METAL CHIP	680 5% 1/16W	R308	1-216-842-11	METAL CHIP	56K 5% 1/16W
R216	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W	R309	1-216-839-11	METAL CHIP	33K 5% 1/16W
R218	1-216-821-11	METAL CHIP	1K 5% 1/16W	R311	1-216-864-11	METAL CHIP	0 5% 1/16W
R219	1-216-831-11	METAL CHIP	6. 8K 5% 1/16W	R312	1-216-821-11	METAL CHIP	1K 5% 1/16W
R220	1-216-828-11	METAL CHIP	3. 9K 5% 1/16W (FX340)	R313	1-216-817-11	METAL CHIP	470 5% 1/16W
R221	1-216-837-11	METAL CHIP	22K 5% 1/16W	R314	1-216-864-11	METAL CHIP	0 5% 1/16W
R222	1-216-826-11	METAL CHIP	2. 7K 5% 1/16W (FX340)	R315	1-216-821-11	METAL CHIP	1K 5% 1/16W
R223	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W	R316	1-216-815-11	METAL CHIP	330 5% 1/16W
R224	1-216-829-11	METAL CHIP	4. 7K 5% 1/16W	R317	1-216-820-11	METAL CHIP	820 5% 1/16W
R226	1-216-831-11	METAL CHIP	6. 8K 5% 1/16W	R318	1-216-820-11	METAL CHIP	820 5% 1/16W
R228	1-216-833-11	METAL CHIP	10K 5% 1/16W	R319	1-216-818-11	METAL CHIP	560 5% 1/16W
R229	1-216-864-11	METAL CHIP	0 5% 1/16W	R321	1-216-813-11	METAL CHIP	220 5% 1/16W
R230	1-216-830-11	METAL CHIP	5. 6K 5% 1/16W	R322	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R231	1-216-833-11	METAL CHIP	10K 5% 1/16W	R323	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R232	1-216-830-11	METAL CHIP	5. 6K 5% 1/16W	R324	1-216-821-11	METAL CHIP	1K 5% 1/16W
R233	1-216-809-11	METAL CHIP	100 5% 1/16W	R325	1-216-821-11	METAL CHIP	1K 5% 1/16W
R234	1-216-821-11	METAL CHIP	1K 5% 1/16W	R328	1-216-820-11	METAL CHIP	820 5% 1/16W
R235	1-218-877-11	METAL CHIP	18K 0. 50% 1/16W	R331	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R236	1-216-845-11	METAL CHIP	100K 5% 1/16W	R332	1-216-864-11	METAL CHIP	0 5% 1/16W
R241	1-216-833-11	METAL CHIP	10K 5% 1/16W	R333	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R245	1-216-829-11	METAL CHIP	4. 7K 5% 1/16W	R334	1-216-815-11	METAL CHIP	330 5% 1/16W
R246	1-216-819-11	METAL CHIP	680 5% 1/16W	R338	1-216-812-11	METAL CHIP	180 5% 1/16W
R247	1-216-815-11	METAL CHIP	330 5% 1/16W	R339	1-216-827-11	METAL CHIP	3. 3K 5% 1/16W
R253	1-218-849-11	METAL CHIP	1. 2K 0. 50% 1/16W	R342	1-216-831-11	METAL CHIP	6. 8K 5% 1/16W
R255	1-216-821-11	METAL CHIP	1K 5% 1/16W	R347	1-216-837-11	METAL CHIP	22K 5% 1/16W
R256	1-216-821-11	METAL CHIP	1K 5% 1/16W	R348	1-216-839-11	METAL CHIP	33K 5% 1/16W
R259	1-218-859-11	METAL CHIP	3. 3K 0. 50% 1/16W	R349	1-216-864-11	METAL CHIP	0 5% 1/16W
R261	1-216-821-11	METAL CHIP	1K 5% 1/16W	R354	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R263	1-218-839-11	METAL GLAZE	470 0. 50% 1/16W	R357	1-216-829-11	METAL CHIP	4. 7K 5% 1/16W
R265	1-216-818-11	METAL CHIP	560 5% 1/16W	R364	1-216-864-11	METAL CHIP	0 5% 1/16W
R272	1-216-826-11	METAL CHIP	2. 7K 5% 1/16W	R366	1-216-864-11	METAL CHIP	0 5% 1/16W
R273	1-216-830-11	METAL CHIP	5. 6K 5% 1/16W	R368	1-216-829-11	METAL CHIP	4. 7K 5% 1/16W
R274	1-216-864-11	METAL CHIP	0 5% 1/16W	R373	1-216-833-11	METAL CHIP	10K 5% 1/16W
R279	1-216-832-11	METAL CHIP	8. 2K 5% 1/16W	R383	1-216-842-11	METAL CHIP	56K 5% 1/16W
R283	1-216-864-11	METAL CHIP	0 5% 1/16W	R387	1-216-825-11	METAL CHIP	2. 2K 5% 1/16W
R285	1-216-857-11	METAL CHIP	1M 5% 1/16W	R395	1-216-864-11	METAL CHIP	0 5% 1/16W

VS-123

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R398	1-216-821-11	METAL CHIP	1K 5% 1/16W	R556	1-216-841-11	METAL CHIP	47K 5% 1/16W
R399	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R558	1-216-841-11	METAL CHIP	47K 5% 1/16W
R500	1-216-841-11	METAL CHIP	47K 5% 1/16W	R560	1-216-296-00	METAL CHIP	0 5% 1/8W
R501	1-216-833-11	METAL CHIP	10K 5% 1/16W	R561	1-216-833-11	METAL CHIP	10K 5% 1/16W
R502	1-216-295-91	CONDUCTOR, CHIP (2012)		R562	1-216-851-11	METAL CHIP	330K 5% 1/16W
R503	1-216-841-11	METAL CHIP	47K 5% 1/16W	R563	1-216-841-11	METAL CHIP	47K 5% 1/16W
R505	1-216-864-11	METAL CHIP	0 5% 1/16W	R565	1-216-841-11	METAL CHIP	47K 5% 1/16W
R506	1-216-841-11	METAL CHIP	47K 5% 1/16W	R566	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R507	1-216-857-11	METAL CHIP	1M 5% 1/16W	R567	1-216-821-11	METAL CHIP	1K 5% 1/16W
R508	1-216-821-11	METAL CHIP	1K 5% 1/16W	R569	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R509	1-216-851-11	METAL CHIP	330K 5% 1/16W	R570	1-216-821-11	METAL CHIP	1K 5% 1/16W
R510	1-216-841-11	METAL CHIP	47K 5% 1/16W	R572	1-216-841-11	METAL CHIP	47K 5% 1/16W
R511	1-216-839-11	METAL CHIP	33K 5% 1/16W	R573	1-216-845-11	METAL CHIP	100K 5% 1/16W
R512	1-216-837-11	METAL CHIP	22K 5% 1/16W	R577	1-216-845-11	METAL CHIP	100K 5% 1/16W
R513	1-216-839-11	METAL CHIP	33K 5% 1/16W	R578	1-216-845-11	METAL CHIP	100K 5% 1/16W
R514	1-216-845-11	METAL CHIP	100K 5% 1/16W	R579	1-216-845-11	METAL CHIP	100K 5% 1/16W
R515	1-216-853-11	METAL CHIP	470K 5% 1/16W	R580	1-216-845-11	METAL CHIP	100K 5% 1/16W
R516	1-216-845-11	METAL CHIP	100K 5% 1/16W	R581	1-216-821-11	METAL CHIP	1K 5% 1/16W
R517	1-216-821-11	METAL CHIP	1K 5% 1/16W	R582	1-216-821-11	METAL CHIP	1K 5% 1/16W
R518	1-216-857-11	METAL CHIP	1M 5% 1/16W	R583	1-216-853-11	METAL CHIP	470K 5% 1/16W
R519	1-216-817-11	METAL CHIP	470 5% 1/16W	R584	1-216-864-11	METAL CHIP	0 5% 1/16W
R520	1-216-845-11	METAL CHIP	100K 5% 1/16W	R585	1-216-821-11	METAL CHIP	1K 5% 1/16W
R522	1-216-841-11	METAL CHIP	47K 5% 1/16W	R586	1-216-849-11	METAL CHIP	220K 5% 1/16W
R523	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	R587	1-216-853-11	METAL CHIP	470K 5% 1/16W
R525	1-216-857-11	METAL CHIP	1M 5% 1/16W	R588	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R526	1-216-841-11	METAL CHIP	47K 5% 1/16W	R589	1-216-864-11	METAL CHIP	0 5% 1/16W
R527	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R590	1-216-845-11	METAL CHIP	100K 5% 1/16W
R528	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R591	1-216-821-11	METAL CHIP	1K 5% 1/16W
R529	1-216-845-11	METAL CHIP	100K 5% 1/16W	R592	1-216-853-11	METAL CHIP	470K 5% 1/16W
R530	1-216-019-00	METAL CHIP	56 5% 1/10W	R593	1-216-845-11	METAL CHIP	100K 5% 1/16W
R531	1-216-845-11	METAL CHIP	100K 5% 1/16W	R594	1-216-845-11	METAL CHIP	100K 5% 1/16W
R532	1-216-845-11	METAL CHIP	100K 5% 1/16W	R595	1-216-845-11	METAL CHIP	100K 5% 1/16W
R533	1-217-671-11	METAL CHIP	1 5% 1/10W	R596	1-216-857-11	METAL CHIP	1M 5% 1/16W
R534	1-217-671-11	METAL CHIP	1 5% 1/10W	R597	1-216-821-11	METAL CHIP	1K 5% 1/16W
R535	1-217-671-11	METAL CHIP	1 5% 1/10W	R599	1-216-857-11	METAL CHIP	1M 5% 1/16W
R536	1-217-671-11	METAL CHIP	1 5% 1/10W	R951	1-216-864-11	METAL CHIP	0 5% 1/16W
R537	1-216-836-11	METAL CHIP	18K 5% 1/16W	R952	1-216-864-11	METAL CHIP	0 5% 1/16W
R538	1-216-821-11	METAL CHIP	1K 5% 1/16W	R954	1-216-138-00	METAL CHIP	3.3 5% 1/8W
R539	1-216-841-11	METAL CHIP	47K 5% 1/16W	R955	1-216-830-11	METAL CHIP	5.6K 5% 1/16W
R540	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R956	1-216-836-11	METAL CHIP	18K 5% 1/16W
R541	1-216-821-11	METAL CHIP	1K 5% 1/16W	R957	1-216-820-11	METAL CHIP	820 5% 1/16W
R542	1-216-864-11	METAL CHIP	0 5% 1/16W	R960	1-216-821-11	METAL CHIP	1K 5% 1/16W
R543	1-216-864-11	METAL CHIP	0 5% 1/16W	R962	1-216-840-11	METAL CHIP	39K 5% 1/16W (FX340)
R544	1-216-833-11	METAL CHIP	10K 5% 1/16W	R963	1-216-839-11	METAL CHIP	33K 5% 1/16W (FX340)
R546	1-216-833-11	METAL CHIP	10K 5% 1/16W	R964	1-216-839-11	METAL CHIP	33K 5% 1/16W (FX340)
R548	1-216-845-11	METAL CHIP	100K 5% 1/16W	R965	1-216-840-11	METAL CHIP	39K 5% 1/16W (FX340)
R549	1-216-821-11	METAL CHIP	1K 5% 1/16W	R966	1-216-864-11	METAL CHIP	0 5% 1/16W (FX240)
R552	1-216-833-11	METAL CHIP	10K 5% 1/16W	R967	1-216-847-11	METAL CHIP	150K 5% 1/16W (FX340)
R553	1-216-821-11	METAL CHIP	1K 5% 1/16W	R968	1-216-823-11	METAL CHIP	1.5K 5% 1/16W (FX340)
R555	1-216-841-11	METAL CHIP	47K 5% 1/16W	R988	1-216-821-11	METAL CHIP	1K 5% 1/16W (FX340)

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R989	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	RB544	1-236-412-11	NETWORK, RES 1.0K	
R990	1-216-837-11	METAL CHIP	22K 5% 1/16W	RB549	1-236-971-11	NETWORK, RES 0	
R991	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	RB550	1-236-971-11	NETWORK, RES 0	
R992	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	RB552	1-236-412-11	NETWORK, RES 1.0K	
R993	1-216-821-11	METAL CHIP	1K 5% 1/16W	RB554	1-236-971-11	NETWORK, RES 0	
R994	1-216-834-11	METAL CHIP	12K 5% 1/16W	RB555	1-236-971-11	NETWORK, RES 0	
R995	1-216-817-11	METAL CHIP	470 5% 1/16W			< VARIABLE RESISTOR >	
R996	1-216-843-11	METAL CHIP	68K 5% 1/16W (FX240)	RV202	1-238-086-11	RES, ADJ, CERMET 470	
R1400	1-216-864-11	METAL CHIP	0 5% 1/16W			< VIBRATOR >	
R1401	1-216-864-11	METAL CHIP	0 5% 1/16W	X201	1-579-365-21	VIBRATOR, CRYSTAL (3.58MHz)	
R1403	1-216-845-11	METAL CHIP	100K 5% 1/16W	X501	1-579-049-21	VIBRATOR, CRYSTAL (32kHz)	
R1404	1-216-857-11	METAL CHIP	1M 5% 1/16W	X502	1-760-314-11	VIBRATOR, CRYSTAL (11.895MHz)	
R1406	1-216-864-11	METAL CHIP	0 5% 1/16W			< VIBRAOTR >	
R1408	1-216-857-11	METAL CHIP	1M 5% 1/16W	XTL501	1-579-369-21	VIBRATOR (10MHz)	
R1412	1-216-864-11	METAL CHIP	0 5% 1/16W			*****	
R1413	1-216-864-11	METAL CHIP	0 5% 1/16W			* A-7072-173-A ZB-2 (SL) BOARD, COMPLETE	
R1414	1-216-864-11	METAL CHIP	0 5% 1/16W			*****	
R1415	1-216-864-11	METAL CHIP	0 5% 1/16W			(Ref. No. 3,000 Series)	
R2009	1-216-864-11	METAL CHIP	0 5% 1/16W (FX340)			< CONNECTOR >	
		< COMPOSITION CIRCUIT BLOCK >		CN101	1-691-483-21	CONNECTOR, FFC/FPC 4P	
RB501	1-236-432-11	NETWORK, RES 47K				< BATTERY HOLDER >	
RB502	1-236-971-11	NETWORK, RES 0		LI101	1-550-104-11	HOLDER, BATTERY	
RB503	1-236-432-11	NETWORK, RES 47K				*****	
RB504	1-236-412-11	NETWORK, RES 1.0K				MISCELLANEOUS	
RB505	1-236-412-11	NETWORK, RES 1.0K				*****	
RB506	1-236-412-11	NETWORK, RES 1.0K		105	1-467-648-21	SWITCH BLOCK, CONTROL (CK)	
RB510	1-236-412-11	NETWORK, RES 1.0K		△158	1-452-566-11	CRT ASSY (M01KKX07WB10) (FX240)	
RB512	1-236-412-11	NETWORK, RES 1.0K		215	1-643-806-11	FP-539 FLEXIBLE BOARD (FX340)	
RB513	1-236-971-11	NETWORK, RES 0		251	1-467-649-11	SWITCH BLOCK, CONTROL (FK) (FX340)	
RB515	1-236-904-11	NETWORK, RES 1K		251	1-467-649-81	SWITCH BLOCK, CONTROL (FK) (FX240)	
RB516	1-236-904-11	NETWORK, RES 1K		257	1-691-471-11	CONNECTOR, TRANSLATION 11P	
RB518	1-236-971-11	NETWORK, RES 0		261	1-651-935-11	FP-95 FLEXIBLE BOARD	
RB519	1-236-971-11	NETWORK, RES 0		269	1-651-936-11	FP-96 FLEXIBLE BOARD	
RB520	1-236-904-11	NETWORK, RES 10K		303	1-547-716-11	LENS, ZOOM (VCL-5412WA) (TYPE II)	
RB523	1-236-432-11	NETWORK, RES 47K		303	1-547-739-11	LENS, ZOOM (VCL-5412WB) (TYPE III)	
RB524	1-236-908-11	NETWORK, RES 10K		303	8-848-704-01	DEVICE, LENS LSV-140A (TYPE I)	
RB525	1-236-424-11	NETWORK, RES 10K		304	1-651-904-81	FP-97 FLEXIBLE BOARD	
RB526	1-236-908-11	NETWORK, RES 10K		314	1-547-558-21	FILTER BLOCK, OPTICAL	
RB527	1-236-424-11	NETWORK, RES 10K		351	8-848-704-01	DEVICE, LENS LSV-140A (TYPE I)	
RB528	1-236-424-11	NETWORK, RES 10K		401	1-547-716-11	LENS, ZOOM (VCL-5412WA) (TYPE II)	
RB529	1-236-424-11	NETWORK, RES 10K		451	1-547-739-11	LENS, ZOOM (VCL-5412WB) (TYPE III)	
RB530	1-236-424-11	NETWORK, RES 10K					
RB531	1-236-424-11	NETWORK, RES 10K					
RB532	1-236-424-11	NETWORK, RES 10K					
RB535	1-236-908-11	NETWORK, RES 10K					
RB536	1-236-412-11	NETWORK, RES 1.0K					
RB537	1-236-412-11	NETWORK, RES 1.0K					
RB542	1-236-412-11	NETWORK, RES 1.0K					
RB543	1-236-412-11	NETWORK, RES 1.0K					

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
801	A-7049-501-A	DRUM ASSY, UPPER (DGR-78-R)		*****			
807	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P					
871	1-641-643-12	FP-444 FLEXIBLE BOARD				*****	
872	1-691-254-13	CONNECTOR, TRANSLATION 10P				HARDWARE LIST	

874	1-641-639-13	FP-442 FLEXIBLE BOARD					
875	1-645-271-11	FP-575 FLEXIBLE BOARD		#1	7-627-553-47	PRECISION SCREW +P 2X4 TYPE 3	
BL951	1-519-746-21	TUBE, FLUORESCENT (0.7 INCH) (FX340)					
D802	8-719-984-02	LED BR4371F (TALLY) (FX340)					
IC691	A-7030-368-A	CCD BLOCK ASSY (054 SERVICE) (CCD IMAGER)					
J201	1-537-726-11	TERMINAL BOARD					
LCD901	8-753-011-00	LCX003BK-1 (FX340)					
M001	1-542-162-11	MICROPHONE, CAP					
M901	A-7048-564-A	DRUM ASSY (DGH-78A-R)					
M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)					
M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)					
M905	1-698-364-01	MOTOR ASSY, FOCUS					
M906	1-698-363-01	MOTOR ASSY, ZOOM					
M907	3-708-888-01	METER, IG (IRIS)					
M908	3-708-889-01	MOTOR ASSY, FOCUS					
M909	3-708-887-01	MOTOR ASSY, ZOOM					
M910	3-708-898-01	IRIS ASSY					
M911	3-708-897-01	MOTOR ASSY, FOCUS					
M912	3-708-896-01	MOTOR ASSY, ZOOM					
S001	1-572-986-11	SWITCH, ROTARY (ENCODER)					
S002	1-572-987-11	SWITCH, PUSH (3 KEY) (REC PROOF, ME/MP, MP/MP-HG)					
S005	1-570-771-21	SWITCH (C DOWN)					
W500	1-651-889-11	FP-48 FLEXIBLE BOARD					
W501	1-642-186-11	FP-437 FLEXIBLE BOARD					
W502	1-526-978-51	SOCKET ASSY, CRT (FX240)					

ACCESSORIES & PACKING MATERIALS							

	1-467-574-21	REMOTE COMMANDER (RMT-708)					
	1-574-039-11	CORD CONNECTION (A/V connecting cable) (monaural) (1.5m)					
	3-798-592-21	MANUAL INSTRUCTION (ENGLISH)					
	3-896-108-01	BAG, PROTECTION					
	3-947-969-21	BELT (S), SHOULDER					
	3-958-131-01	LID, BATTERY CASE (for RMT-708)					
*	3-958-571-01	CUSHION, LOWER					
*	3-958-572-01	CUSHION, ACC					
*	3-962-863-01	INDIVIDUAL CARTON (FX240)					
*	3-962-863-11	INDIVIDUAL CARTON (FX340)					
**	AC-V25A/25B/25C	AC POWER ADAPTOR					
***	NP-55	BATTERY PACK					
<u>Note.</u>							
**	MARK PARTS IS AVAILABLE FOR REPAIR SERVICE.						
***	MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORY.						

Be sure to read "Note on the CCD Imager replacement" on page 4-5 when changing the CCD imager.

6-1. CAMERA CONTROL MICRO PROCESSOR PIN FUNCTION (VC-159 BOARD IC602: SC424614 MC68HC11MA8FU)

Pin No.	Signal Name	I/O	Function
1	VTR SO	I	Serial data input from mode control microprocessor (VS board IC503).
2	VTR SCK	I	Serial data transfer clock from/to mode control microprocessor.
3	CAM CS	I	Chip select signal from mode control microprocessor.
4			} Not used.
5			
6			
7			
8			
9	PBV	I	V sync signal from servo/mechanism control microprocessor (VS board IC505).
10			} Not used (connected to +3.6V).
11			
12	VDD		+3.6V power supply.
13	VSS		GND
14	CS TG	O	Chip select signal to timing generator (IC702).
15			Not used (connected to +3.6V).
16	START	O	Operation signal of IC705. Normally "L". "H" during operation.
17	WEN	I	Write enable signal from timing generator (IC702). Normally "H".
18			} Not used.
19			
20	CS CORE	O	Chip select signal to camera core (IC609).
21	EEPROM BUSY	I	BUSY signal from EEPROM (IC601). Normally "H". "L" during data read/write.
22			Not used.
23	IRIS PWM	O	Iris control signal.
24			} Not used.
25			
26	TESTX	O	Test signal of IC705. "H": Camera mode, "L": Test/VTR mode.
27	LENS RST LED	O	Lens reset sensor LED ON/OFF. "H": ON, "L": OFF.
28	FC RST	I	Lens focus reset sensor signal input.
29	ZM RST	I	Lens zoom reset sensor signal input.
30	XIRQ		Connected to +3.6V.
31	VDD		+3.6V power supply.
32	VSS		GND
33			} Not used.
34			
35			
36	CAM SCK	O	Serial data transfer clock.
37	CAM SO	O	Serial data output.
38	CAM SI	I	Serial data input.
39			} Not used.
40			

Pin No.	Signal Name	I/O	Function
41	VDD		+3.6V power supply.
42	GENERAL A/D	I	Camera core (IC609) discrimination signal input.
43	LENS TYPE	I	Lens type discrimination signal input.
44	ZOOM SW	I	Zoom key signal input. When not pressed: 1.8V, TELE 1: 2.7V, TELE 2: 3.6V, WIDE 1: 0.9V, WIDE 2: 0V.
45			} Not used.
46			
47			} Not used. Connected to GND.
48			
49	HALL A/D	I	Hall voltage. Approx. 1V (iris opened) to approx. 3.5V (iris closed).
50	VRL	I	Connected to GND.
51	VRH	I	Connected to +3.6V.
52	VSS		GND
53	CS EEPROM	O	Chip select signal to EEPROM (IC601).
54	CS CAM OPD	O	Chip select signal to OPD (IC611).
55	D/A STB	O	Strobe signal to camera EVR (IC603).
56	EEPROM RESET	O	EEPROM (IC601) write disable signal. Normally "H".
57	CS AF OPD	O	Chip select signal to AF OPD (IC611).
58	CS PDR	O	Chip select signal to pre-driver (IC753).
59	CAM ON	O	A/D converter (IC704) ON/OFF signal. Normally "H".
60	NTSC	O	"L": NTSC, "H": PAL.
61	IRQ	I	Connected to +3.6V.
62			} Not used.
63			
64	PDR RST	O	Reset signal to zoom/focus pre-driver (IC753). "H": Camera mode, "L": VTR mode.
65	NRML/VST	O	"H": Steady shot operation, "L": Normal operation.
66	VST/CORE RST	O	Reset signal to camera core (IC609). Normally "H". "L": Reset.
67	OPD RST	O	Reset signal to IC611 and IC705. "H": Camera mode, "L": VTR mode.
68			} Not used. Connected to GND.
69			
70	VSS		GND
71	VDD		+3.6V power supply.
72			Not used.
73	EXTAL	I	} 24 MHz clock oscillation circuit.
74	XTAL	O	
75	RESET	I	Reset signal from mode control microprocessor (VS board IC503). Normally "H". "L": Reset.
76	MODB		Connected to +3.6V.
77	MODA		Connected to GND.
78	RXD		} Not used.
79	TXD		
80	VTR SO	O	Serial data output to mode control microprocessor (VS board IC503).

6-2. CAMERA CORE PIN FUNCTION (VC-159 BOARD IC609: CXD2150R-T6)

Pin No.	Signal Name	I/O	Function
1	OPD6	O	OPD (IC611) data output.
2	OPD5	O	OPD data output.
3	OPD4	O	OPD data output.
4	OPD3	O	OPD data output.
5	OPD2	O	OPD data output.
6	OPD1	O	OPD data output.
7	OPD0	O	OPD data output, LSB.
8	OPDID	O	OPD line discrimination signal.
9	VDD	-	Power supply (+3.6V).
10	CO3	O	Not used.
11	CO2	O	
12	CO1	O	
13	CO0	O	
14	VSS	-	GND
15	CI3	I	Not used.
16	CI2	I	
17	CI1	I	
18	CI0	I	
19	NRB	O	C signal. Color discrimination signal.
20	VDD	-	+3.6V power supply.
21	VBC		Connected to GND via 0.1 μ F capacitor.
22	AVSC		GND
23	IREFC		Connected to GND via 12 k Ω resistor.
24	VREFC	I	Full scale output value setting voltage.
25	VGC		Connected to +3.6V power supply via 0.1 μ F capacitor.
26	AVDC		+3.6V power supply.
27	IOC	O	Chroma signal output (Current output).
28	VDD	-	Y I/F power supply (+3.6V).
29	DICK	O	Not used.
30	CDIS	O	
31	YO7	O	
32	YO6	O	
33	YO5	O	
34	YO4	O	
35	YO3	O	
36	YO2	O	
37	YO1	O	
38	YO0	O	
39	DATS	I	DA test pin. (Normally fixed at "L".)
40	YI7	I	Not used.

Pin No.	Signal Name	I/O	Function
41	YI6	I	Not used.
42	YI5	I	
43	YI4	I	
44	YI3	I	
45	YI2	I	
46	YI1	I	
47	YI0	I	
48	VSS	-	GND
49	IOY	O	Y signal output (current output).
50	AVDY		+3.6V power supply.
51	VGY		Connected to +3.6V power supply via 0.1 μ F capacitor.
52	VRFY	I	Full scale output value setting voltage.
53	IRFY		Connected to GND via 12 k Ω resistor.
54	AVSY		GND
55	VBY		Connected to GND via 0.1 μ F capacitor.
56	VDD	-	+3.6V power supply
57	BIN	I	Not used.
58	GIN	I	Not used.
59	RIN	I	Not used.
60	TIKEY	I	Not used.
61	WKEY	I	Wide ID signal input.
62	VCK	I	PAL 4 fsc modulation clock.
63	VHLD	I	Mosaic processing vertical hold control signal.
64	HHLD	I	Mosaic processing horizontal hold control signal.
65	CSYN	I	Sync signal (SYNC) input.
66	LALT	I	PAL line modulation inverted signal input.
67	CBK	I	Blanking signal (CBLK) input.
68	BF	I	Burst added signal input.
69	HD	I	Horizontal sync signal (HD) input.
70	VD	I	Vertical sync signal (VD) input.
71	AJST	I	Data sampling pulse input.
72	VDD	-	+3.6V power supply.
73	SCK	I	Serial interface clock input from camera microprocessor (IC602).
74	SI	I	Serial interface data input from camera microprocessor.
75	XCE	I	Serial interface enable input from camera microprocessor.
76	SO	O	Serial interface data output to camera microprocessor.
77	VSS	-	GND
78	CLK	I	Clock input.
79	DEF	I	Defect compensation position pulse.
80	ID	I	Color line discrimination signal.

6-3. MECHANISM CONTROL MICRO PROCESSOR PIN FUNCTION (VS-123 BOARD IC505: CXP87132-009R)

Pin No.	Signal Name	I/O	Function
81	MCK	I	Main clock input.
82	VDD	-	+3.6V power supply.
83	XCLR	I	All clear input.
84	VDD	-	AD I/F power supply (+3.6V).
85	ADCK	O	AD converter clock output. Not used.
86	VSS	-	GND
87	AD0	I	AD data input from A/D converter (IC704), MSB.
88	AD1	I	AD data input from A/D converter.
89	AD2	I	AD data input from A/D converter.
90	AD3	I	AD data input from A/D converter.
91	AD4	I	AD data input from A/D converter.
92	AD5	I	AD data input from A/D converter.
93	AD6	I	AD data input from A/D converter.
94	AD7	I	AD data input from A/D converter.
95	AD8	I	AD data input from A/D converter.
96	AD9	I	AD data input from A/D converter, LSB.
97	VDD	-	+3.6V power supply.
98	OPD9	O	OPD (IC611) data output, MSB.
99	OPD8	O	OPD data output.
100	OPD7	O	OPD data output.

Pin No.	Signal Name	I/O	Function																																								
1	RP PB MODE	O	REC/PB switching signal of REC/PB amplifier (VS board IC102) and ATF servo IC (VS board IC508). "H": PB.																																								
2	FE ON	O	Flying erase oscillation on/off control signal. "L": Oscillation.																																								
3	JOG VD	O	False VD signal inserted in playback video signal during variable speed playback.																																								
4	JOG	O	Variable speed playback/normal playback switching signal of video circuit. "H": Variable speed playback.																																								
5	S JACK IN	I																																									
6	PB 1.7M DET	I	} Not used.																																								
7	JACK MON/ST DET	I																																									
8	INT VD	O	Internal VD signal.																																								
9	SYSTEM SYNC (PBV)	O	System synchronizing signal.																																								
10	SYNC DET	O	Sync detect output. "L" when sync is detect.																																								
11	E/L DET	I	} Not used.																																								
12	MIC MONO	I																																									
13	MODE SW 0	I	Mode switch input.																																								
14	MODE SW 1	I																																									
15	MODE SW 2	I																																									
				<table border="1"> <thead> <tr> <th></th> <th>BL</th> <th>END</th> <th>EJECT</th> <th>USE</th> <th>LOAD</th> <th>READY</th> <th>TURN</th> <th>REC/PB</th> <th>FF</th> </tr> </thead> <tbody> <tr> <td>M SW 0</td> <td>H</td> <td>L</td> <td>L</td> <td>H</td> <td>L</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> </tr> <tr> <td>M SW 1</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> <td>H</td> <td>L</td> </tr> <tr> <td>M SW 2</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>L</td> </tr> </tbody> </table>		BL	END	EJECT	USE	LOAD	READY	TURN	REC/PB	FF	M SW 0	H	L	L	H	L	H	H	L	L	M SW 1	H	H	L	L	L	L	H	H	L	M SW 2	H	H	H	H	H	L	L	L
	BL	END	EJECT	USE	LOAD	READY	TURN	REC/PB	FF																																		
M SW 0	H	L	L	H	L	H	H	L	L																																		
M SW 1	H	H	L	L	L	L	H	H	L																																		
M SW 2	H	H	H	H	H	L	L	L	L																																		
16	CC DOWN SW	I	Cassette compartment down switch input. "L": down																																								
17	REC PROOF SW	I	Recording-proof switch input. "H": REC prohibition.																																								
18	ME/MP SW	I	ME/MP switch input. "L": MP, "H": ME.																																								
19	Hi8 MP SW	I	Hi8 MP switch input. "H": Hi8 MP, "L": Normal MP or ME.																																								
20	LM LIM ON	O	Loading motor limiter on detection signal. Normally "H": "L" when limiter is on.																																								
21	LINE MIX	O	} Not used.																																								
22	MX SEL 1	O																																									
23	MX SEL 2	O																																									
24	MX ON/OFF	O																																									
25	COMP REC	O																																									
26	CAM/LINE	O	Camera input/line input switching signal. "H": Camera input. Normally "H".																																								
27	WIND	O	} Not used.																																								
28	N.C.																																										
29	UNLOAD	O	Loading motor control signal. When unloading: "H" or "H" pulse.																																								
30	LOAD	O	Loading motor control signal. When loading: "H" or "H" pulse.																																								
31	LM LIM CONT	O	Loading motor limiter control signal. Momentarily "H" when loading.																																								
32	DRUM ON	O	Drum motor on/off signal. "H" (Approx. 1.3V): Drum on.																																								
33	DRUM RVS	O	Drum rotation direction control signal. Normally "L".																																								
34	N.C.		Not used. (open)																																								
35	EDIT	O	} Not used.																																								
36	E/L OUT	O																																									
37	MP		Connected to GND.																																								
38	RESET	I	Reset signal from mode control micro processor (VS board IC503). When reset: "L". Normally "H".																																								
39	VSS		GND																																								

Pin No.	Signal Name	I/O	Function
40	XTAL	O	11.89 MHz clock oscillation circuit.
41	EXTAL	I	
42	MECHA CON CS	I	Chip select signal from mode control micro processor (VS board IC503).
43	DATA TO SLAVE	I	Serial data input from mode control micro processor.
44	DATA TO MASTER	O	Serial data output to mode control micro processor.
45	MODECON SCK	I	Serial clock input from mode control micro processor.
46	AUDIO MUTE	O	Audio output mute signal. "H": Mute.
47	VIDEO MUTE	O	Video output mute signal. "H": Mute.
48	MONO REC (1.7M ON/OFF)	O	Not used.
49	N.C.		
50	AVSS		A/D converter system GND.
51	AVREF		A/D converter system reference voltage. Connected to SS3.6V.
52	AVDD		A/D converter system power supply. Connected to SS3.6V.
53	EXT MIC	I	External microphone discrimination input. Not used.
54	TAPE END SENS	I	Tape end detection signal. Normally: "L", "H" pulse at tape end.
55	TAPE TOP SENS	I	Tape top detection signal. Normally: "L", "H" pulse at tape top.
56	DEW DET	I	Condensation detection signal. "L" when condensation present.
57	N.C.		Not used. Connected to GND.
58	ATF ERROR	I	ATF error input.
59	S REEL FG	I	S reel FG signal input.
60	T REEL FG	I	T reel FG signal input.
61	NC		Not used. Connected to GND.
62	CAM VD	I	VD signal from camera circuit sync generator (VC board IC610). V cycle pulse.
63	FLD	I	FIELD signal from camera circuit sync generator.
64	VTR SYNC	I	Composite sync signal separated from recording/playback Y signal.
65		I	Connected to GND.
66	DRUM PG	I	Drum PG signal input. For drum phase servo. 33.3 msec. cycle "H" pulse.
67	DRUM FG	I	Drum FG signal input. For drum speed servo. 2.8 msec. cycle pulse.
68	CAP FG	I	Capstan FG signal input.
69	N.C.	O	Not used.
70	T/E LED ON	O	TAPE LED on/off signal. 200 msec. cycle "H" pulse during REC/PB.
71	SP/LP	O	SP/LP switching signal. "L": LP.
72	ME/MP OUT	O	Recording current switching signal. "H": ME tape.
73	CAP PWM	O	Capstan error signal output. PWM signal.
74	DRUM PWM	O	Drum error signal output. PWM signal.
75	CFG HMS	I	Capstan FG signal input.
76	5.9M ATF CLK	O	Clock signal for ATF servo IC (IC508).
77	CS TO ATF	O	Chip select signal for ATF servo IC.
78	DATA TO ATF	O	Serial data output to ATF servo IC.
79	ATF SCK	O	Serial clock output to ATF servo IC.
80	ATF STBY	O	Standby signal for ATF servo IC.

Pin No.	Signal Name	I/O	Function
81	SP/LP DET	I	Discriminates recording mode.
82	CLOG DET	I	Head clog detection signal. "L": Normal.
83	REF PILOT	O	Reference pilot signal for ATF servo.
84	N.C.		} Not used. Connected to GND.
85	N.C.	I	
86	VSS		GND
87	VDD		} Connected to SSSV.
88	VPP		
89	DRUM ACC	O	Not used.
90	DRUM BLK	O	Drum motor brake signal. Normally: "L".
91	N.C.		} Not used. (open)
92	N.C.	O	
93	VIDEO IN/OUT	O	Video input/output switching signal. "H": Video output.
94	AUDIO IN/OUT	O	Audio input/output switching signal. "H": Audio output.
95	VA PB MODE	O	REC/PB switching signal of video; audio circuit. "H": PB.
96	VI SWP	O	RF switching pulse signal for video circuit.
97	RF SWP	O	RF switching pulse signal for REC/PB amp and audio circuit.
98	HEAD CHG	O	Not used.
99	CAP ON	O	Capstan driver on/off control signal. "H": Capstan on.
100	CAP FWD/RVS	O	Capstan rotation direction control signal. "H": FWD. "L": RVS.

6-4. MODE CONTROL MICRO PROCESSOR PIN FUNCTIONS (VS-123 BOARD IC503: MB89098PFV-G-107-BND)

Pin No.	Signal Name	I/O	Function
1	TEST MODE 0	I	Connected to GND.
2	TEST MODE 1	I	Connected to GND.
3	X0	I	} 10 MHz clock oscillation circuit.
4	X1	O	
5	VSS		GND
6	RESET	I	Reset input.
7	DATA SW	I	Date (+) key (CK board S221) input. Normally "H". "L" when key is pressed.
8	TIME SW	I	Time key (CK board S222) input. Normally "H". "L" when key is pressed.
9	EJECT SW	I	Cassette eject switch (FK board S103) input. Normally "H". "L" when switch is pressed.
10	VTR MODE SW	I	Power supply switch (CK board S223) input. "L" when power supply switch is at "Video".
11	AGE SW	I	AGE switch (CK board S200) input. "L" when key is pressed.
12	START/STOP SW	I	Start/stop key (FK board S102) input. "L" when key is pressed.
13	CC DOWN SW	I	CCDOWN switch (mechanism section) input. "L" when cassette compartment is locked.
14	CAM+STBY SW	I	Power supply switch (CK board S223), stand-by switch (FK board S101) input. "L" when power supply switch is at "Camera" and stand-by switch at "Standby".
15	BATT IN	I	Main battery detection input. "H" when main battery is loaded or external power supply is connected.
16	PB V	I	System sync signal from mechanism control micro processor (VS board IC505).
17	RFSWP	I	RF switching pulse.
18	LANC POWER ON	I	Power on signal input from wired remote commander. "L" when power switch of remote commander is pressed.
19	LI PRE END	I	Lithium battery end detection input. "L" when lithium battery has worn out or has not been loaded.
20	EEPROM WE	O	EEPROM (VS board IC502) writing enable signal. "L" when writing data.
21			} Not used.
22			
23	TALLY LED	O	Tally LED on/off signal.
24	SYSTEM RESET	O	Reset signal of all systems. Normally "H". "L" when reset.
25	N.C.	O	Not used.
26	CLK 10M/32K	I	
27	DATA TO MOC		} Not used.
28	N.C.		
29	N.C.		
30	SIRCS SIG	I	Infrared remote commander signal input.
31	N.C.		} Not used.
32			
33	CS EEPROM	O	Chip select signal to EEPROM (VS board IC501).
34	CS VIDEO	O	Chip select signal to video IC (VS board IC201).
35	EVF DA STB	O	Not used.
36	CS SG	O	Chip select signal to SYNC generator (VC board IC610).
37	CS DA	O	Strobe signal to DA (VS board IC951).
38	CS CAM	O	Chip select signal to camera micro processor (VC board IC602).
39	N.C.	O	} Not used.
40	N.C.	O	

Pin No.	Signal Name	I/O	Function
41	N.C.		} Not used.
42	N.C.		
43	SEG19	O	} Not used.
44	SEG18	O	
45	SEG17	O	
46	SEG16	O	
47	VCC		+3.6V power supply (+3V power supply during backup).
48	SEG15	O	} Not used.
49	SEG14	O	
50	SEG13	O	
51	SEG12	O	
52	SEG11	O	
53	SEG10	O	
54	SEG09	O	
55	SEG08	O	
56			GND
57	SEG07	O	} Not used.
58	SEG06	O	
59	SEG05	O	
60	SEG04	O	
61	SEG03	O	
62	SEG02	O	
63	SEG01	O	
64	SEG00	O	
65	V3	I	3.6V
66	V2	I	2.4V
67	V1	I	1.2V
68	V0	I	0V
69	COM0	O	} Not used.
70	COM1	O	
71	COM2	O	
72	COM3	O	
73	CS OSD	O	Chip select signal to character generator (VC board IC614).
74	CS MECHA	O	Chip select signal to mechanism control micro processor (VS board IC505).
75	DATA TO MASTER	I	Serial data input signal.
76	DATA TO SLAVE	O	Serial data output signal.
77	MODECON SCR	O	Serial data transfer clock.
78	N.C.	O	Not used.
79	VTR DD ON	O	VTR DC-DC converter control signal. "H" when power switch is at "Player" or "Camera".
80	CAM DD ON	O	CAMERA DC-DC converter control signal.
81	AVSS		A/D port GND.

Pin No.	Signal Name	I/O	Function
82	K AD IN 0	I	Key input. A/D port. FF key (FK board S105) REC key (FK board S100, 106) STOP key (FK board S104)
83	K AD IN 1	I	Key input. A/D port. PLAY key (FK board S111) REW key (FK board S110) PAUSE key (FK board S109)
84	K AD IN 2	I	Key input. A/D port. SET key (CK board S204) SELECT (-) key (CK board S203) SELECT (+) key (CK board S202) MENU key (CK board S201)
85	K AD IN 3	I	Key input. A/D port. FADER key (CK board S208) BACK LIGHT key (CK board S207) PROGRAM AE key (CK board S205)
86	K AD IN 4	I	Key input. A/D port. EDIT SEARCH (-) key (CK board) EDIT SEARCH (+) key (CK board) COUNTER RESET key (CK board)
87	N.C.		} Not used.
88	N.C.		
89	N.C.		
90	AVCC		A/D port power supply (+3.6V).
91	BATT SENS	I	For main battery voltage input. (Voltage divided into 1/3.14 by R586, R587).
92	N.C.	I	} Not used.
93	BRIGHA B	I	
94	BRIGHT B	I	
95	LANC IN	I	LANC serial data input.
96	LANC OUT	O	LANC serial data output.
97	BUZZER	O	Not used.
98	VCC		+3.6V power supply.
99	CL1	O	} 32 kHz clock oscillation circuit (for clock).
100	CL0	I	

6-5. INTERFACE

6-5-1. System Control -- Video/Audio Block Interface (VS-123 BOARD)

NAME	I/O	No.	VTR MODE				CAMERA MODE	
			STOP	FF	REW	PB	STAND BY	REC
SP/LP	O	IC505 ⑦	H	H	H	*2	H	H
VA PB MODE	O	IC505 ⑤	L	L	L	H	L	L
AUDIO MUTE *13	O	IC505 ④	L	L	L	L	L	L
VIDEO MUTE	O	IC505 ⑦	L	*14	*14	*15	L	L
CAM/LINE	O	IC505 ⑥	L	L	L	L	H	H
JOG VD	O	IC505 ③	L	L	L	L	L	L
RP PB MODE	O	IC505 ①	H	H	H	H	H	L
FE ON	O	IC505 ②	H	H	H	H	H	L
RF SWP	O	IC505 ⑨	L	*7	*7	*7	*7	*7
JOG	O	IC505 ④	L	L	L	L	L	L
CS VIDEO	O	IC503 ③	V period "L" pulse					
CS DA	O	IC503 ③	V period "H" pulse					
DATA TO SLVE	O	IC503 ⑦	V period pulse train					
MODECON SCK	I	IC503 ⑦	V period pulse train					
SP/LP DET	I	IC505 ⑧	L	*10	*10	L	H	H
CLOG DET	I	IC505 ⑧	L	*11	*11	*11	*11	H
VTR SYNC	I	IC505 ⑥	L	*12	*12	*12	*12	*12
COMP REC	O	IC505 ⑤	L	H	H	L	L	L

*2. Outputs discrimination result of the playback tape.
"H": SP mode, "L": LP mode.

*7. 30 Hz duty 50% pulse (synchronized with drum rotation)

*10. "H": SP recording area on tape. "L": LP recording area.

*11. "H": no recording area.

*12. Composite sync signal.

*14. "L" when external input (video) present.

*15. "H" when tape no signal.

6-5-2. System Control – Servo Block Interface (VS-123 BOARD)

NAME	I/O	No.	VTR MODE				CAMERA MODE	
			STOP	FF	REW	PB	STAND BY	REC
T.REEL FG	I	IC505 60	-	*1	*1	*1	-	*1
S.REEL FG	I	IC505 59	-	*1	*1	*1	-	*1
ATF ERROR	I	IC505 58	-	*2	*2	*2	*2	*2
DRUM PG	I	IC505 66	-	*3	*3	*3	*3	*3
DRUM FG	I	IC505 67	-	*4	*4	*4	*4	*4
CAP FG/CFG HMS	I	IC505 68, 75	-	*5	*5	*5	*5	*5
CAP ON	O	IC505 99	L	H	H	H	L	H
REF PILOT	O	IC505 83	*7	*6	*6	*6	*6	*6
RP PB MODE	O	IC505 1	H	H	H	H	H	L
DRUM RVS *10	O	IC505 33	H	H	H	H	H	H
CAP FWD/RVS	O	IC505 100	L	H	L	H	L	H
DRUM PWM	O	IC505 74	L	*9	*9	*9	*9	*9
CAP PWM	O	IC505 73	L	*9	*9	*9	L	*9
LM LIM CONT *11	O	IC505 31	L	L	L	L	L	L
DRUM ON *14	O	IC505 32	L	H	H	H	H	H
DRUM BRK	O	IC505 90	L	L	L	L	L	L

- *1. Inputting waveform.
- *2. ATF error voltage input.
- *3. One PG pulse input.
- *4. FG pulses input.
- *5. FG pulses input.
- *6. Four frequencies.
- *7. f1 (102.54 kHz) or f3 (165.21 kHz) output

- *9. PWM signal.
- *10. Normally "H".
Temporary "L" when load (drum reverse rotation).
- *11. Temporary "H" when cassette loading
(finger catch protection).
- *14. "H": approx. 1.3 Vdc.

SECTION 7 ADJUSTMENTS

7-1. CAMERA SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 7-28.

1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

1-1-1. List of Service Tools

- Oscilloscope
- Adjusting driver
- Regulated power supply
- Color monitor
- Vectorscope
- Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.3	J-6080-818-A	White balance check
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjusting remote commander (RM-95-remodeled partly) ^{Note 1}	J-6082-053-A	
J-6	Siemens star	J-6080-875-A	For checking the flange back
J-7	Extension cable (42P, 0.8 mm)	J-6082-285-A	For extension between the VC-159 board (CN601) and VS-123 board (CN203)
J-8	Extension cable (9P, 0.8 mm)	J-6082-288-A	For extension between the FK board and VS-123 board (CN502)
	Extension cable (18P, 0.8 mm)	J-6080-289-A	For extension between the CK board and VS-123 board (CN503)

Note 1: If the micro processor IC in the adjusting remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

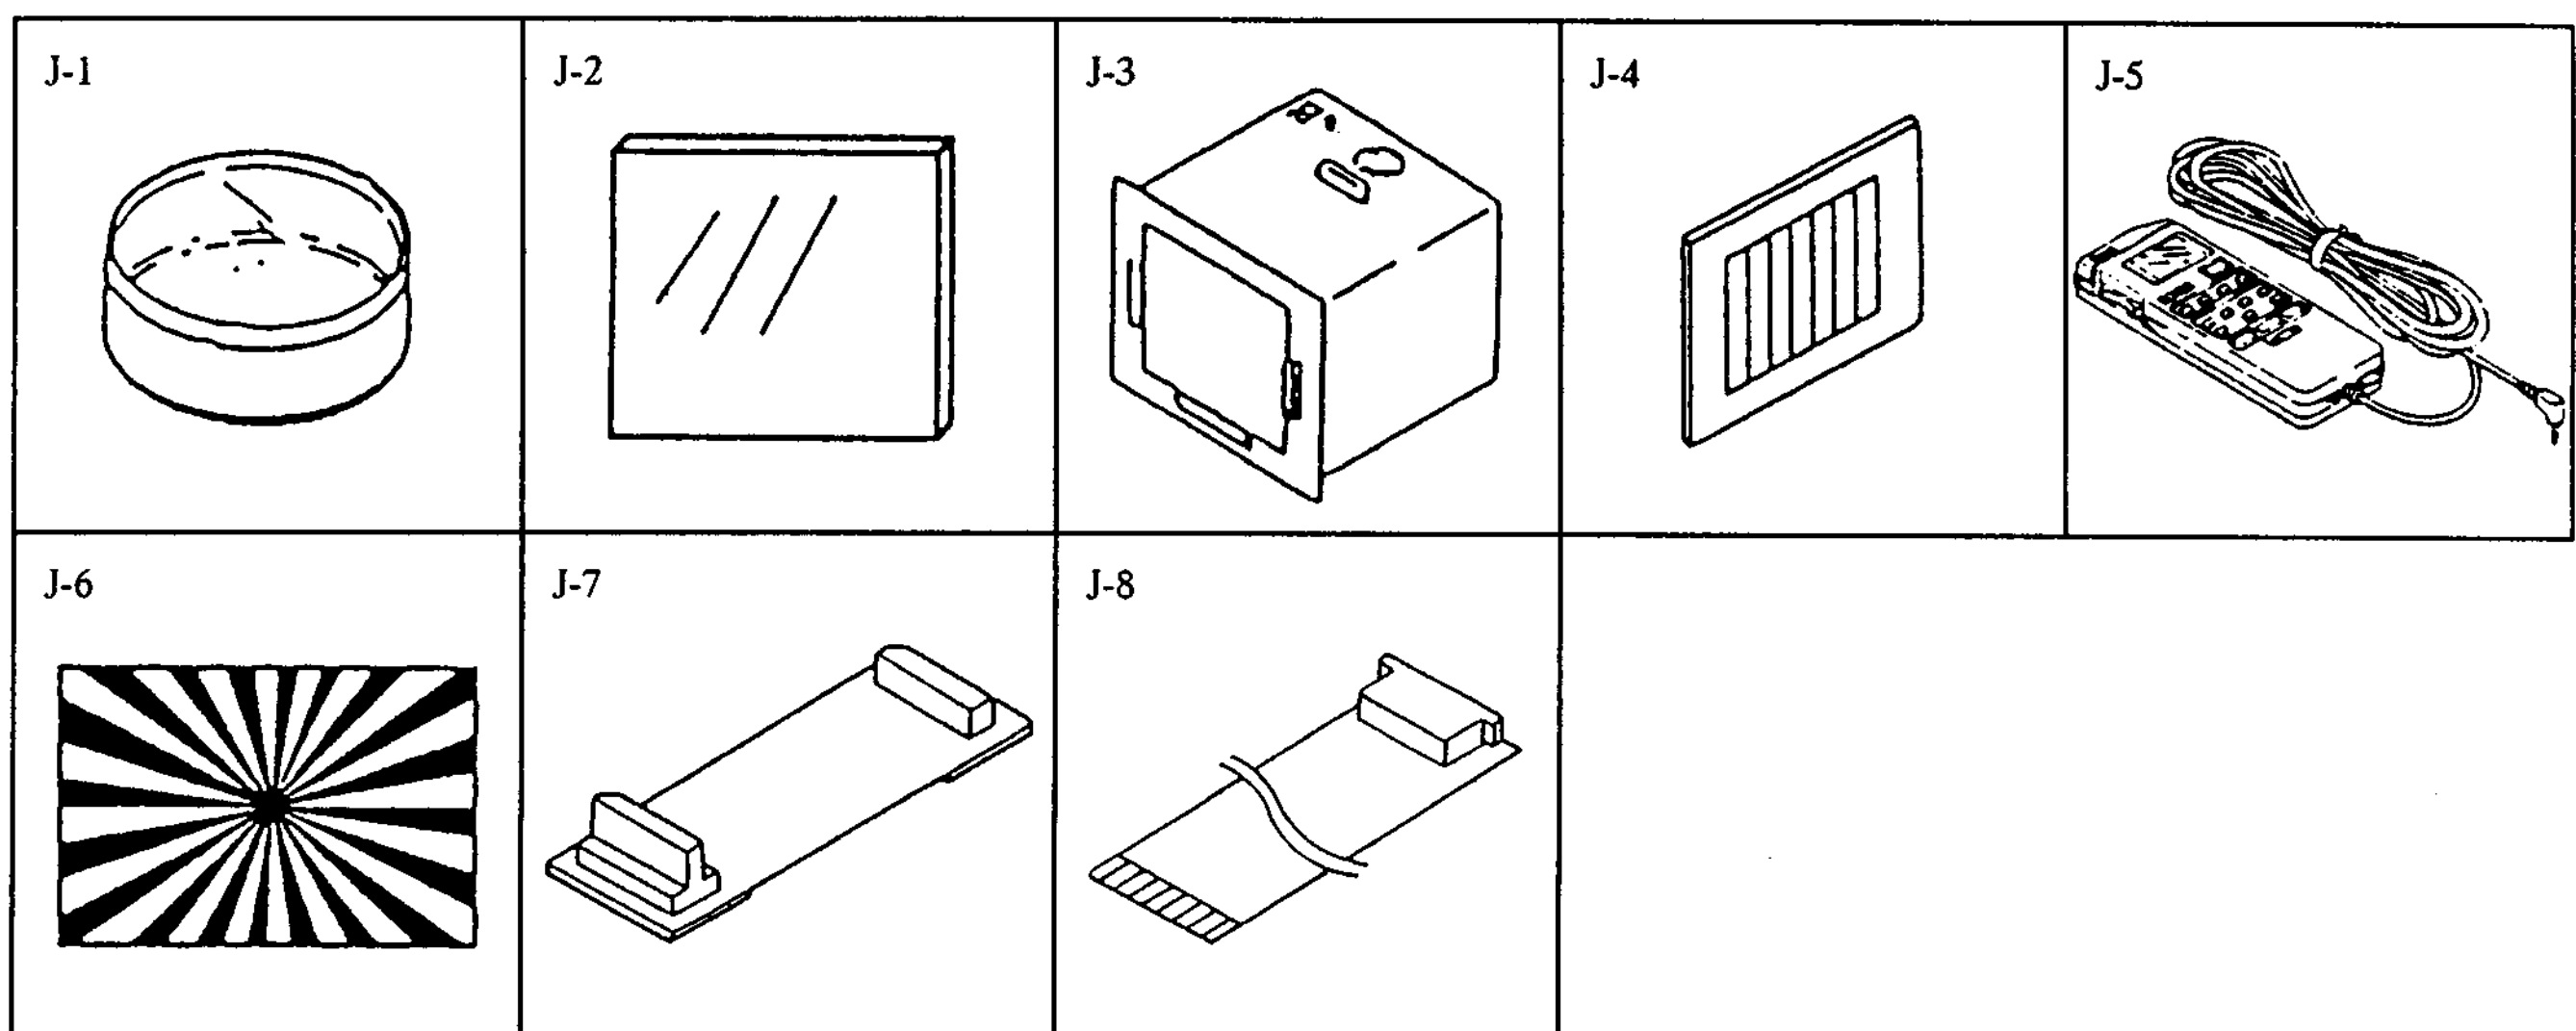


Fig. 7-1-1.

1-1-2. Preparations

Note 1: For further details of how to remove the cabinet and each board, refer to "2. Disassembly".

Note 2: When adjusting only, the lens block and VC-159 board need not be taken apart.

- 1) Connect the equipments for adjusting as shown in Fig. 7-1-3.
- 2) The F panel block (microphone board) is not required in adjustments. Remove the following connector.
 1. CN003 of the MA-230 board
- 3) If remove the cabinet (R) (Power switch, camera function switch and electronic view-finder), set to the camera power supply ON mode (Note 1), and disconnect the following connectors.
 1. CN503 of VS-123 board
 2. CN206 of VS-123 board
 3. CN101 of ZB-2 boardBe sure to exit this mode after completing the adjustment. (Note 2)
- 4) Turning OFF the Auto Focus Using the Adjusting Remote Commander
 1. Set data: 01 to page: 6, address: 25.
(The auto focus will turn OFF. The focus can be adjusted using the focus button on the adjusting remote commander. But the HOLD switch must be set to OFF.)
 2. After completing the adjustment/operation check, set data: 00 to page: 6, address: 25.

Note 1: Setting the Forced Camera Power Supply ON Mode

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 21 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
By carrying out the above, the camera can be operated even if the cabinet (R) has been removed. Be sure to exit the forced camera power ON mode after completing the adjustment.

Note 2: Exiting the Forced Camera Power Supply ON Mode

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 00 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 3) Set data: 00 to page: 1, address: 00.

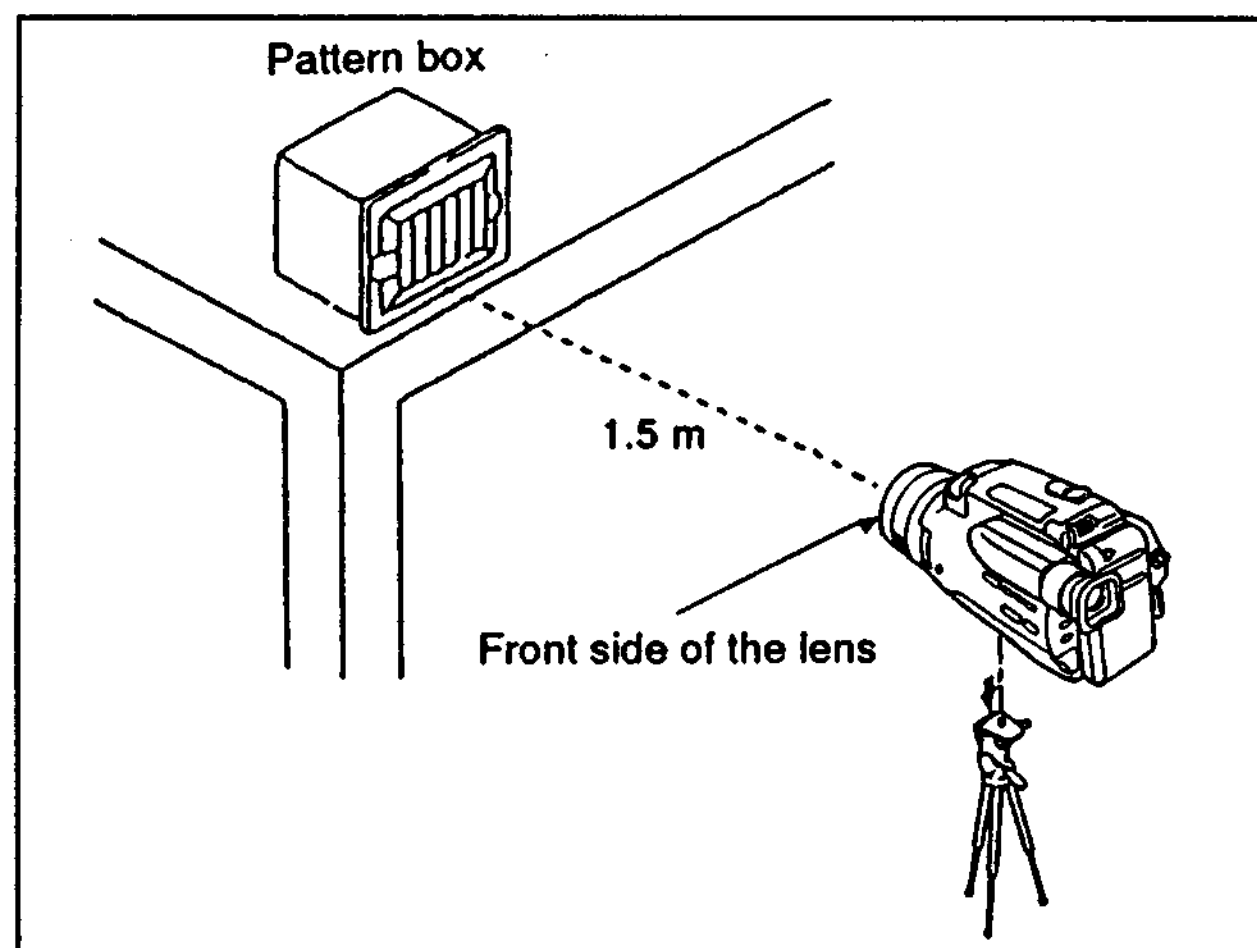


Fig. 7-1-2.

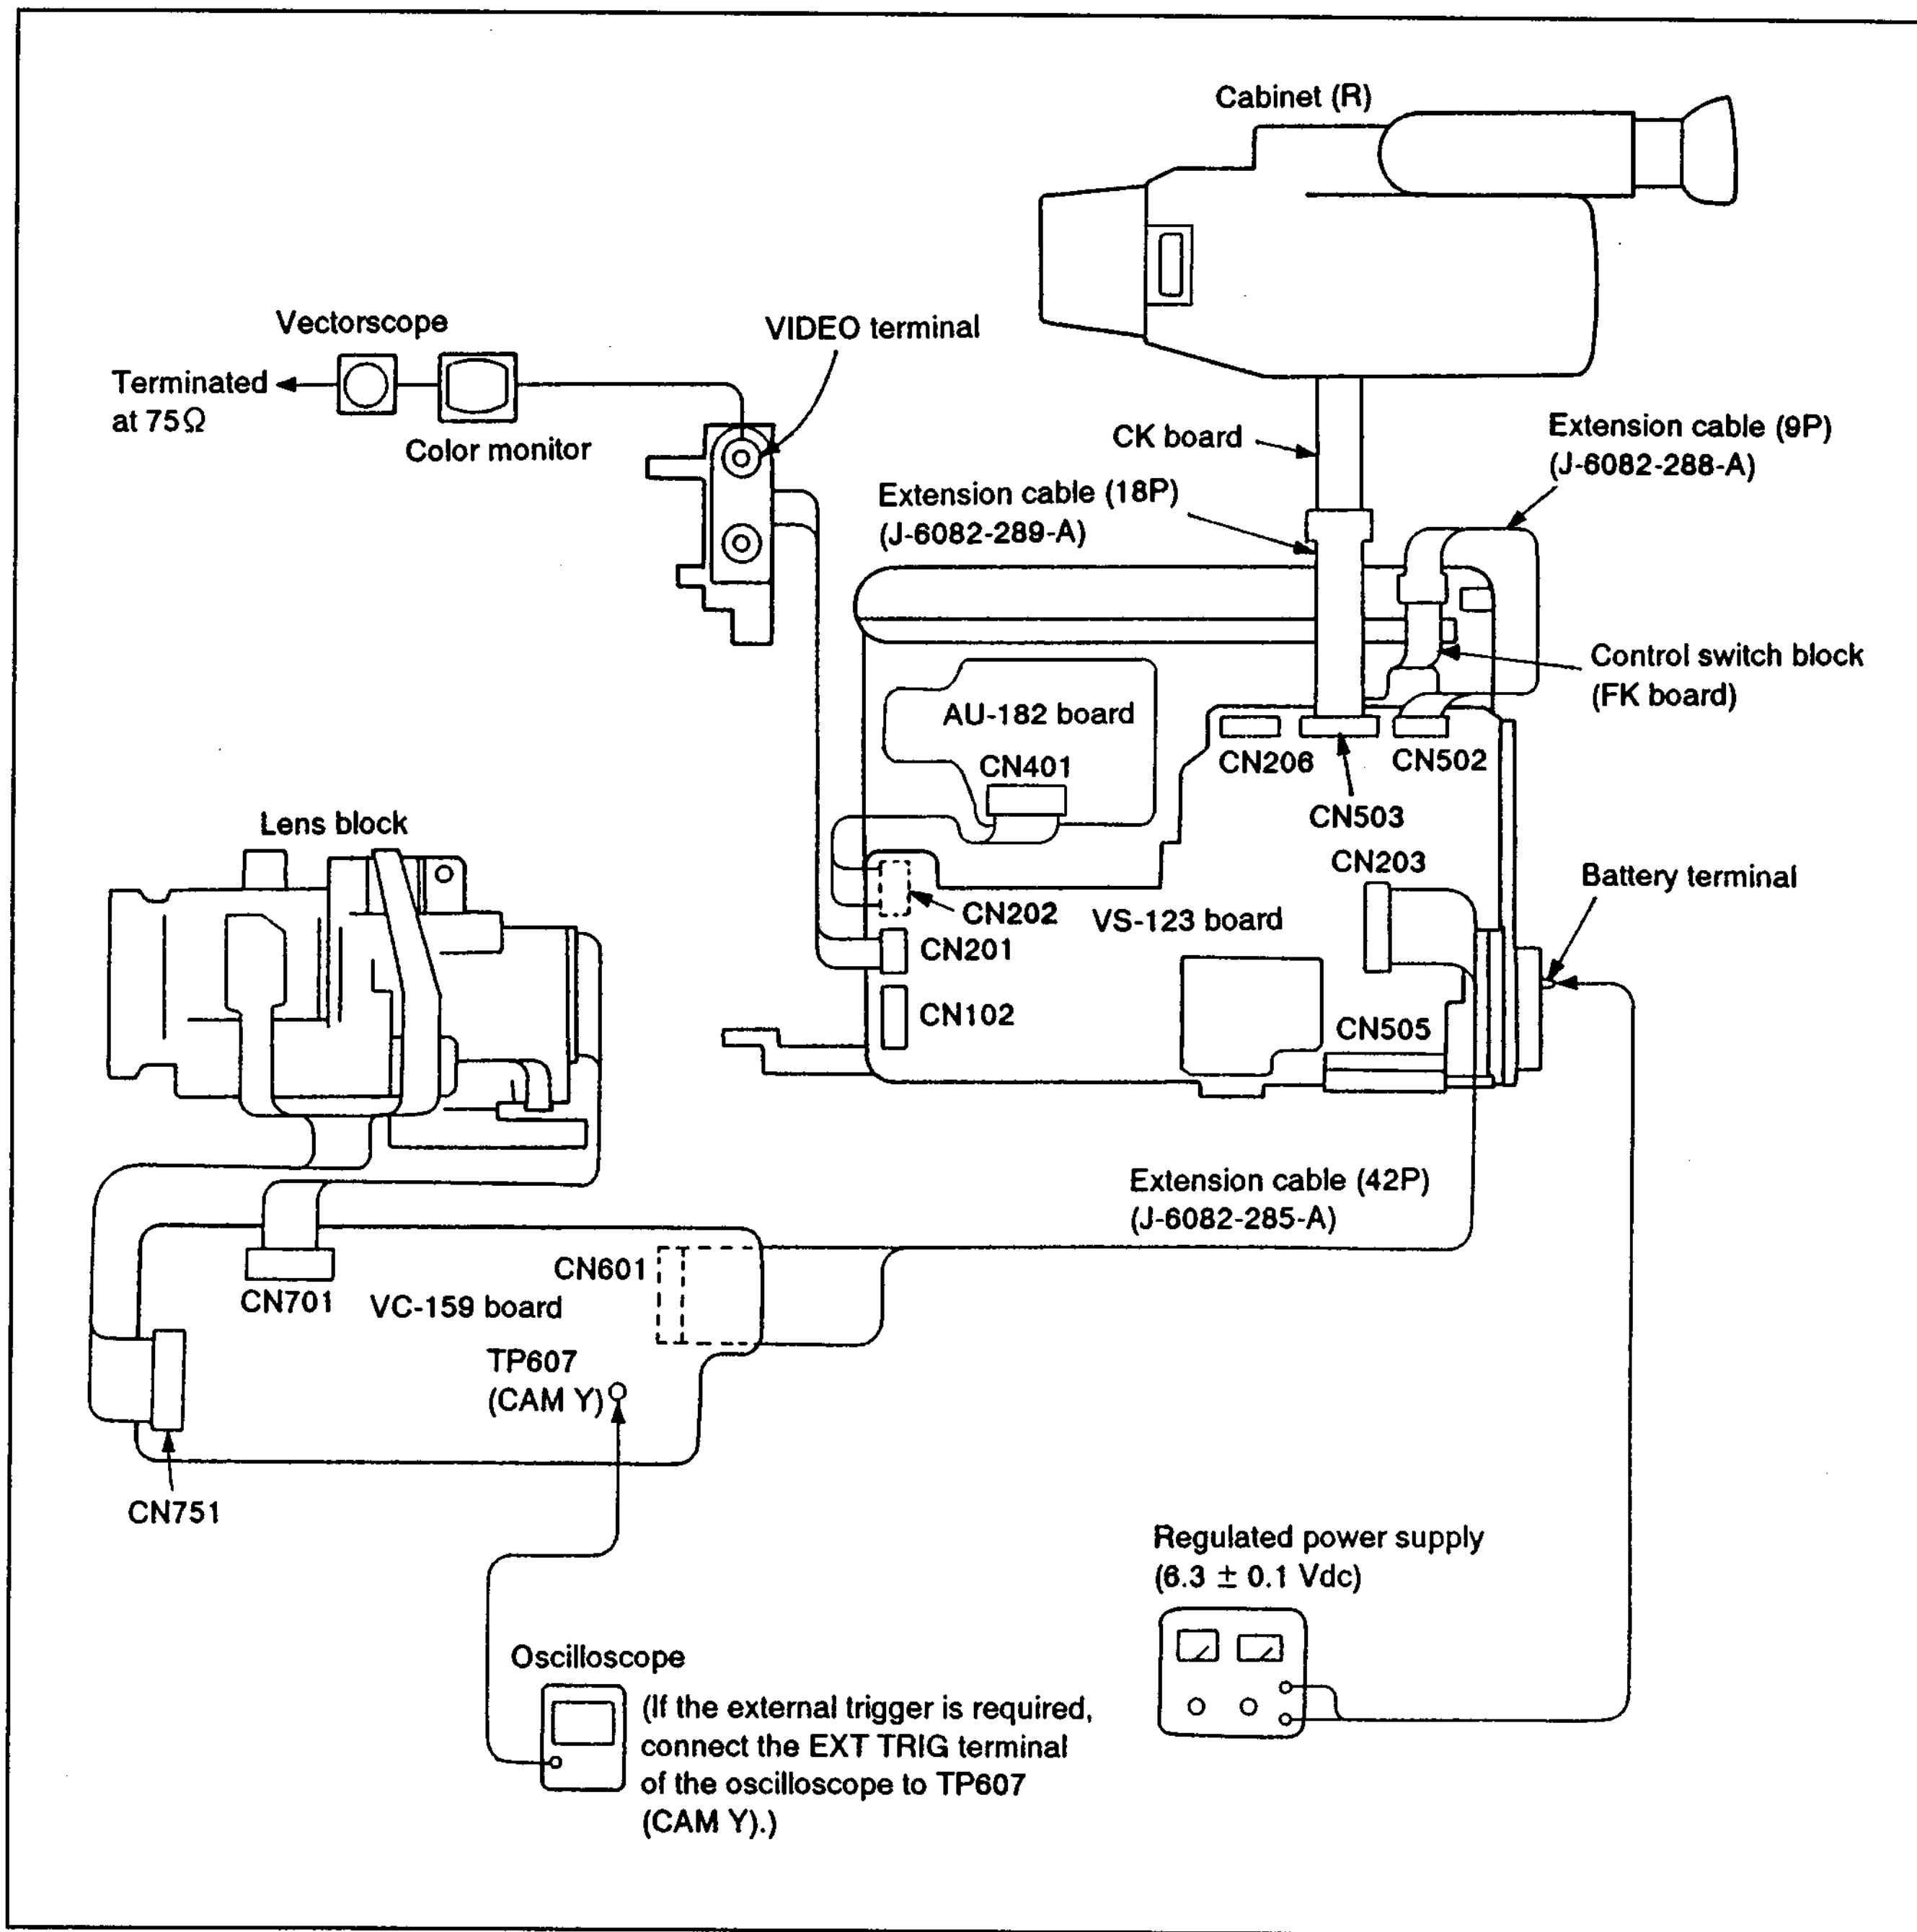


Fig. 7-1-3.

1-1-3. Precautions

1. Switch settings

Adjust the switches to the following positions, and adjust without loading the cassette tape, unless specified otherwise.

1. Camera/player power switch
(Control switch block (CK board)).....Camera
2. Standby switch (Control switch block (FK board)) .. Standby
3. PROGRAM AE button (Control switch block (CK board))
.....Off
4. BACK LIGHT button (Control switch block (CK board))
.....Off

2. Adjusting Procedure

Adjust in the given order.

3. Subject

- 1) Color bar chart (Standard picture frame)
Adjust the picture frame as shown in Fig. 7-1-4. if adjustments are performed using the color bar chart.
(Standard picture frame)
- 2) White pattern (Standard picture frame)
Remove the color bar chart from the pattern box, and so that the white pattern will be displayed.
(Don't touch the zoom switch)

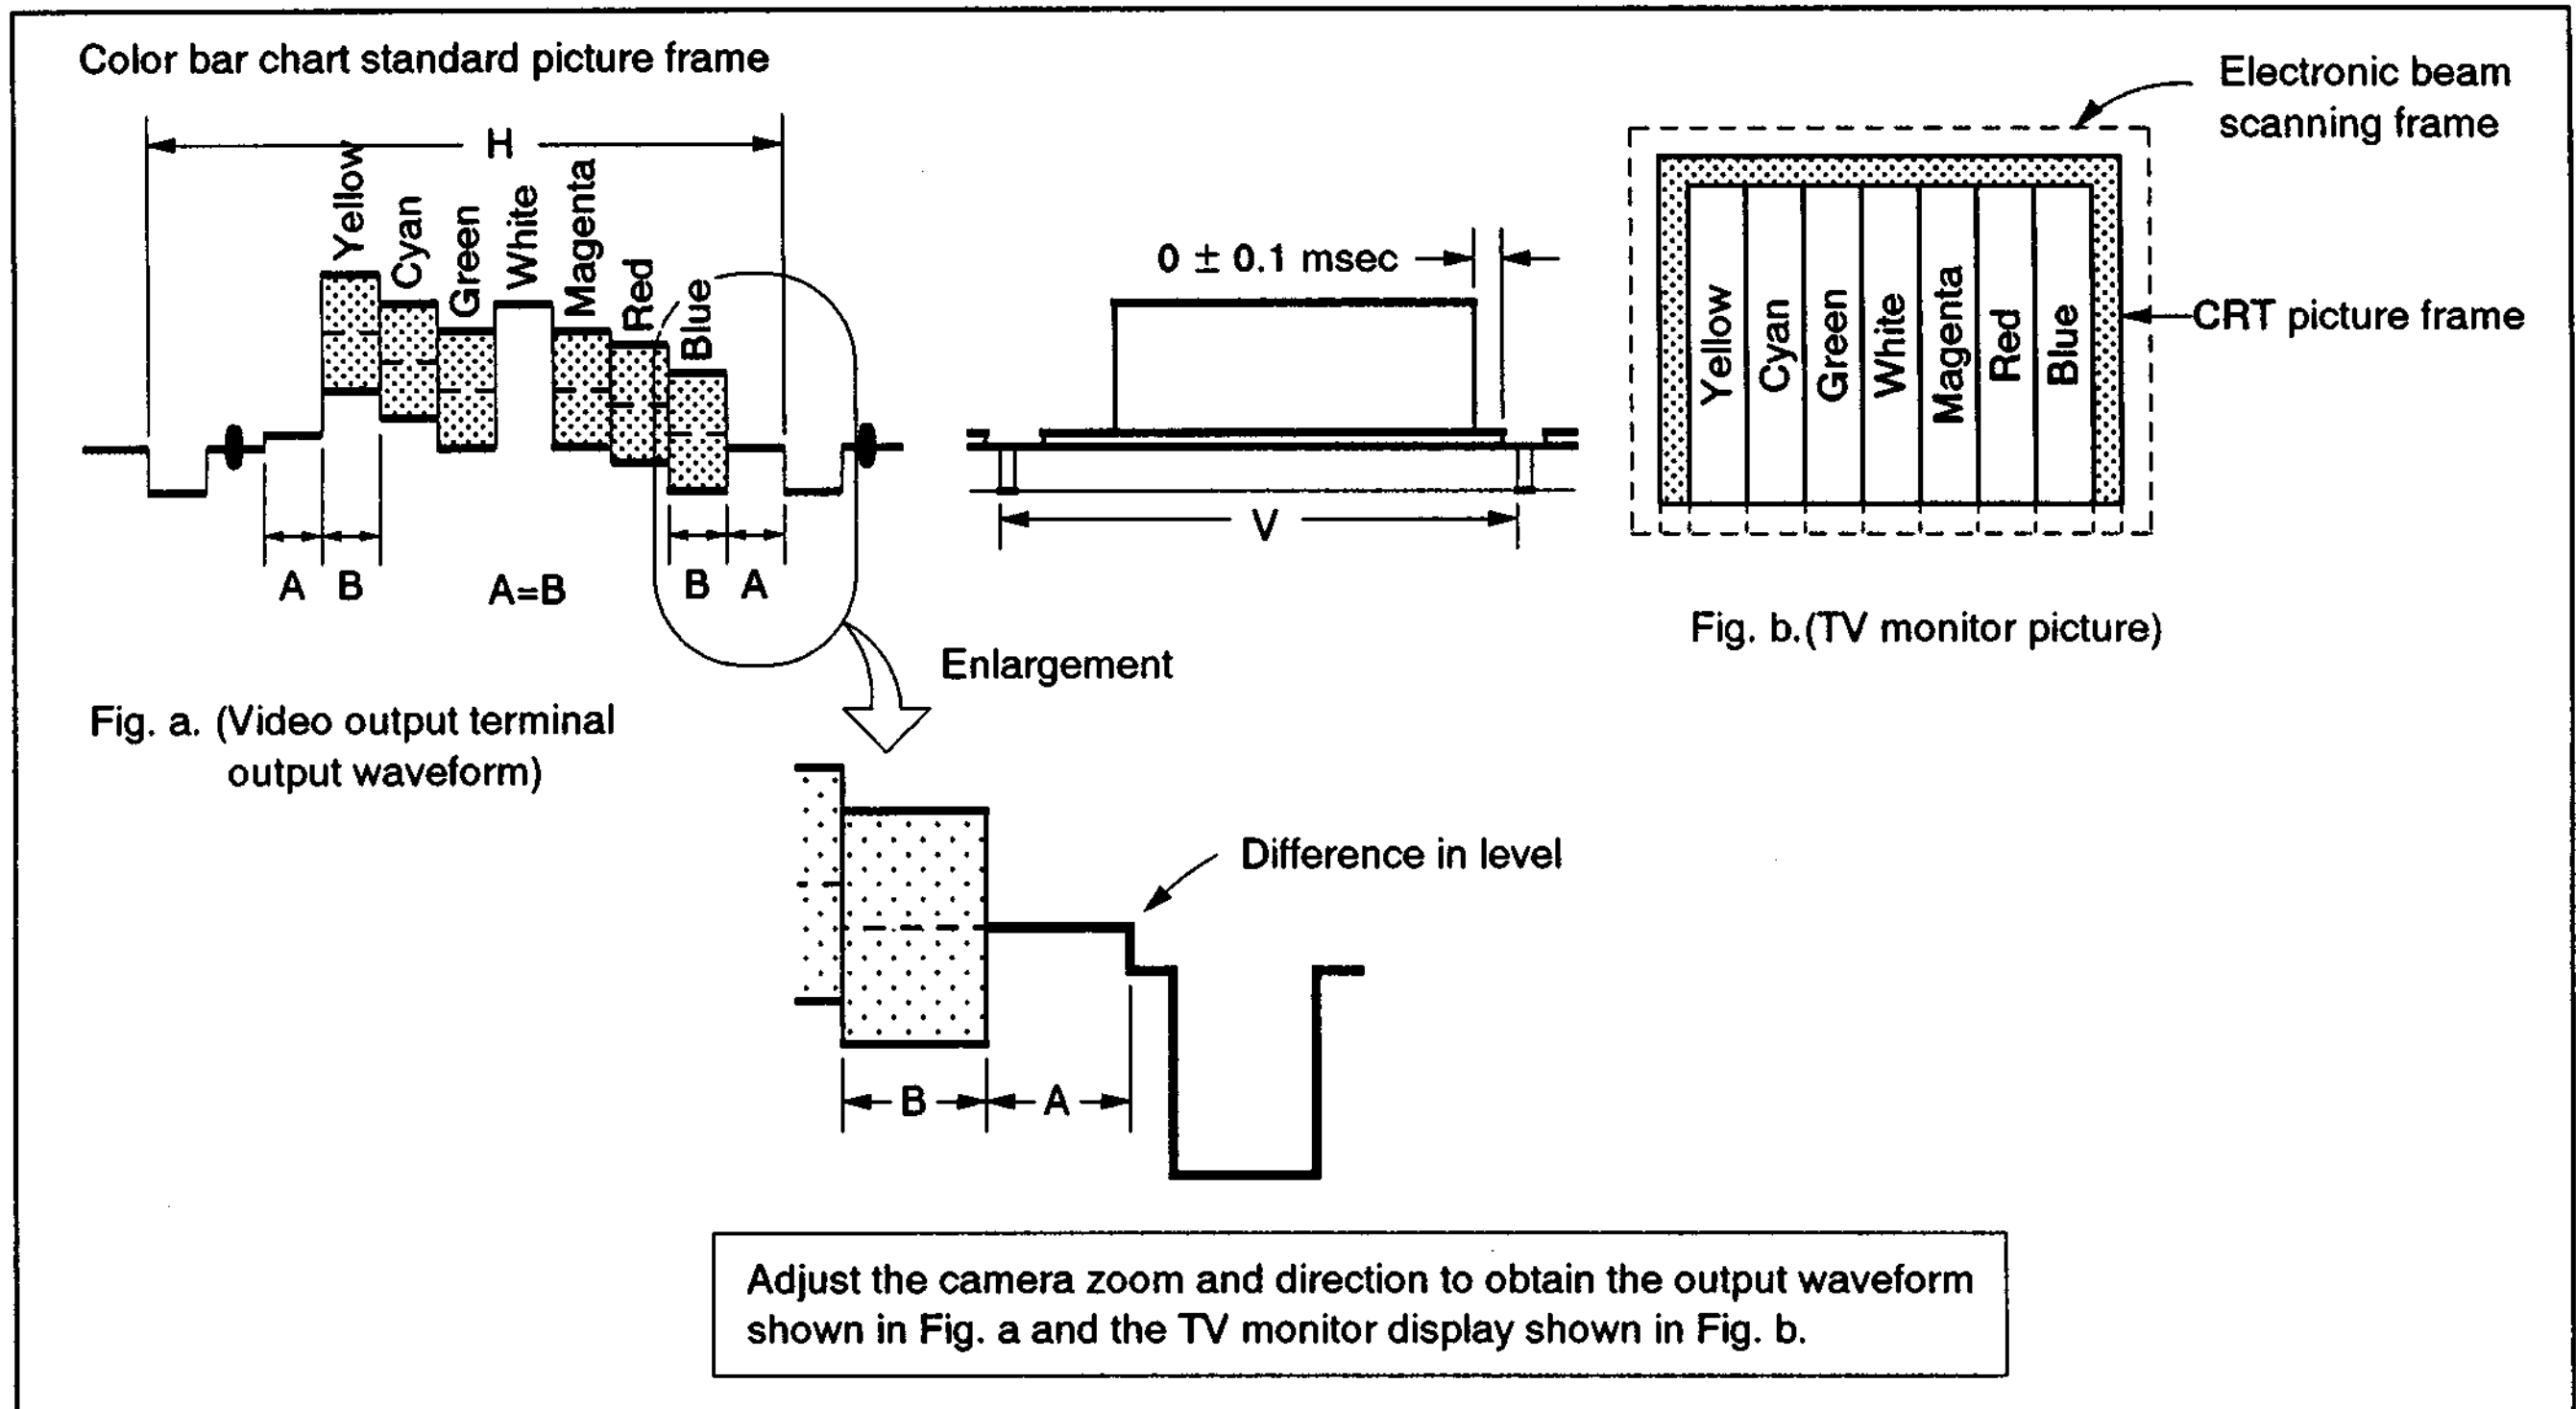


Fig. 7-1-4.

3) Chart for flange back adjustment

Combine a white A0 size (1189 mm × 841 mm) paper to a black one, and make the chart shown in Fig. 7-1-5.

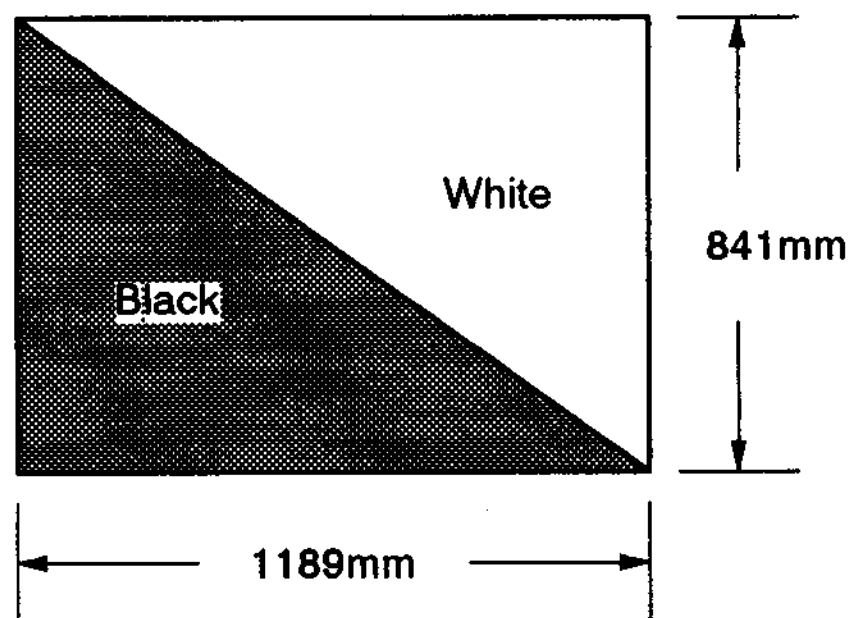


Fig. 7-1-5.

Note: Use the non-reflecting and non-glazing vellum paper whose size is more than A0, and make the boundary between white and black to be smoothly flat.

1-1-4. Adjusting Remote Commander

Use the adjusting remote commander to change the coefficient of the digital signal processing or the EVR data.

The adjusting remote commander uses the remote commander signal line (LANC) to perform the bidirectional communication with the camera microprocessor. The effect data of the bidirectional communication must be written in the nonvolatile memory.

1. Using the adjusting remote commander

- 1) Connect the adjusting remote commander to the remote terminal.
- 2) Adjust the HOLD switch of the adjusting remote commander to "HOLD" (SERVICE position).

If it has been properly connected, the LCD on the adjusting remote commander will display as shown in Fig. 7-1-6.

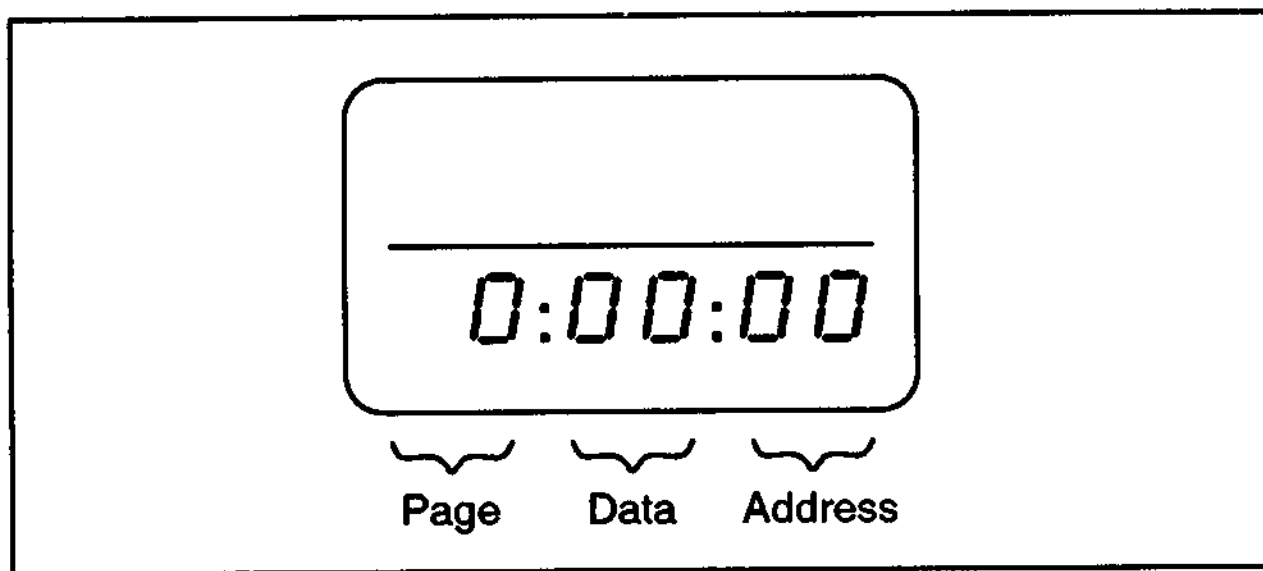


Fig. 7-1-6.

- 3) Operate the adjusting remote commander as follows.

- Changing the page

The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH- button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0 1 2 3 4 5 6 7 8 9 A B C D E F
LCD Display	0 1 2 3 4 5 6 7 8 9 A b c d E F
Decimal notation conversion value	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Table 7-1-1.

- Changing the address

The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.

- Changing the data (Data setting)

The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed.

There are altogether 256 data, from 00 to FF.

- Writing the adjustment data

The PAUSE button must be pressed to write the adjustment data (F page) in the nonvolatile memory.

(The new adjustment data will not be recorded in the nonvolatile memory if this step is not performed.)

- 4) Select page: 6, address: 00, and adjust the data to 01. Page F, and enables the camera section (Addresses 01 to BF of page F) to be adjusted.
- 5) After completing all adjustments, turn off the main power supply (6.3V) once.

2. Precautions upon using the adjusting remote commander

Mishandling of the adjusting remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

1-1-5. Page F Address List

Note 1: The data already listed in the adjustment data memo column are fixed values.

Note 2: The adjustment data initial values are values just after executing "Page F Data Initialization" and "Page F Data Modification". They are different from the values after executing all adjustments.

Note 3: In some cases, data have been input to the page F addresses C0 to FF. This has no relation to the adjustments.

Address	Adjustment data	
	Initial value	Memo column
00	7E	7E
01	0A	0A
02	00	00
03	00	00
04	80	
05	80	
06	80	
07	80	
08	2D	
09	26	
0A	FA	
0B	F1	
0C	30	
0D	00	
0E	58	
0F	00	
10	E0	E0
11	8F	
12	6C	
13	36	
14	3C	
15	60	
16	0D	
17	A3	
18	12	
19	8E	
1A	10	
1B	E2	
1C	0E	0E
1D	00	00
1E	80	80
1F	80	80
20	79	79
21	79	79
22	00	00

Table 7-1-2 (1).

Address	Adjustment data	
	Initial value	Memo column
23	59	59
24	43	43
25	A5	A5
26	23	23
27	3F	3F
28	23	23
29	0B	0B
2A	10	10
2B	48	48
2C	FF	FF
2D	44	44
2E	17	17
2F	22	22
30	00	00
31	00	00
32	50	50
33	68	68
34	02	02
35	35	35
36	02	02
37	FD	FD
38	63	63
39	6A	6A
3A	50	50
3B	20	20
3C	C0	C0
3D	00	00
3E	00	
3F	00	
40	00	
41	00	
42	00	
43	00	
44	00	
45	00	
46	00	
47	00	
48	00	
49	00	
4A	00	
4B	00	
4C	00	
4D	00	

Table 7-1-2 (2).

Address	Adjustment data	
	Initial value	Memo column
4E	00	00
4F	20	20
50	07	07
51	02	02
52	66	66
53	18	18
54	66	66
55	9F	9F
56	66	66
57	66	66
58	59	59
59	83	83
5A	67	67
5B	5C	5C
5C	5C	5C
5D	4A	4A
5E	1E	1E
5F	5C	5C
60	3A	3A
61	33	33
62	0C	0C
63	26	26
64	24	24
65	02	02
66	04	04
67	05	05
68	00	00
69	00	00
6A	04	04
6B	00	00
6C	04	04
6D	00	00
6E	02	02
6F	33	33
70	B0	B0
71	18	18
72	0F	0F
73	0F	0F
74	02	02
75	63	63
76	1B	1B
77	F0	F0
78	A0	A0
79	30	30

Table 7-1-2 (3).

Address	Adjustment data	
	Initial value	Memo column
7A	10	10
7B	50	50
7C	58	58
7D	88	88
7E	66	66
7F	46	46
80	18	18
81	00	00
82	20	20
83	18	18
84	02	02
85	08	08
86	40	40
87	20	20
88	40	40
89	30	30
8A	50	50
8B	60	60
8C	80	80
8D	1D	1D
8E	50	50
8F	00	00
90	00	00
91	77	77
92	00	00
93	FB	FB
94	02	02
95	32	32
96	6B	6B
97	8D	8D
98	A1	A1
99	30	30
9A	30	30
9B	21	21
9C	91	91
9D	72	72
9E	00	00
9F	00	00
A0	00	00
A1	00	00
A2	00	00
A3	00	00
A4	02	02
A5	80	80

Table 7-1-2 (4).

Address	Adjustment data	
	Initial value	Memo column
A6	00	00
A7	80	80
A8	00	00
A9	80	80
AA	00	00
AB	80	80
AC	00	00
AD	00	00
AE	02	02
AF	44	44
B0	3D	3D
B1	1B	1B
B2	3D	3D
B3	25	25
B4	12	12
B5	4B	4B
B6	00	00
B7	20	20
B8	00	00
B9	05	05
BA	00	00
BB	20	20
BC	80	80
BD	00	00
BE	00	00
BF	00	00
C0 to EF		
F0		
F1		
F2		
F3		
F4		
F5		
F6		
F7		
F8		
F9		
FA		
FB		
FC		
FD		
FE		
FF		

Table 7-1-2 (5).

1-1-6. Data Processing

The calculation of the DDS display and the adjusting remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Table 7-1-3. indicates the hexadecimal notation-the decimal notation calculation table.

Hexadecimal notation-Decimal notation

The lower digits of the hexadecimal notation The upper digits of the hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A (<i>R</i>)	B (<i>b</i>)	C (<i>c</i>)	D (<i>d</i>)	E (<i>E</i>)	F (<i>F</i>)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
5	80	80	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (<i>R</i>)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
B (<i>b</i>)	176	177	178	179	180	180	182	183	184	185	186	187	188	189	190	191
C (<i>c</i>)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (<i>d</i>)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (<i>E</i>)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (<i>F</i>)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

Note: () indicate the adjusting remote control unit display.

(Example) In the case that the DDS display and the adjusting remote control unit display are BD (*b d*).
As the upper digit of the hexadecimal notation is B (*b*), and the lower digit is D (*d*), the intersection "189" of the ① and ② in the above table is the decimal notation to be calculated.

Table 7-1-3.

1-2. CAMERA SYSTEM ADJUSTMENT

1. Power Supply Voltage Check (DD-76 board)

Subject	Option
Measuring instrument	Digital voltmeter
D5V check	
Measurement point	Pins ⑳ of CN901
Specified value	4.9 ± 0.1 Vdc
D3.6V check	
Measurement point	Pins ㉑ and ㉒ of CN901
Specified value	3.6 ± 0.1 Vdc
CAM 5V check	
Measurement point	Pins ㉓ and ㉔ of CN901
Specified value	4.85 ± 0.1 Vdc
CAM 15V check	
Measurement point	Pin ㉕ of CN901
Specified value	15 ± 0.3 Vdc
CAM -9V check	
Measurement point	Pin ㉖ of CN901
Specified value	$-8.5^{+0.25}_{-0.4}$ Vdc

Checking method:

- 1) Check that each power supply voltage satisfies the specified value.

2. Page F Data Initialization

Note: It is necessary to perform all adjustments of the camera section from the beginning again if the data of page F has been initialized.

Initializing method:

- 1) Set data: 01 to page: 6, address: 00.
- 2) Check that the data of page: 6, address: 11 is 00.
- 3) Set data: 2D to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 4) Check that the data of page: 6, address: 11 is 01.
- 5) Set data: 00 to page: 6, address: 01. and press the PAUSE button of the adjusting remote commander.
- 6) After performing "Page F data modification", perform all the adjustments of the camera section (page F).

3. Page F Data Modification 1

When the page F data is initialized, change the data by manual input.

Note 1: When changing the data, to write the data to the non-volatile memory, press the PAUSE button of the adjusting remote commander every time the new data is set.

Note 2: When changing address: 00, set the data of page: 6, address: 00 to 80.

Address	Data
00	7E
01	0A
03	00
1C	0E
25	A5
27	3F
2A	10
2B	48
2D	44
2E	17
2F	22
30	00
32	50
34	02
35	35
37	FD
38	63
50	07
54	66
57	66
58	59
5E	1E
60	3A
66	04
67	05
6A	04
6C	04
6E	02
6F	33
70	B0
71	18
74	02
77	F0
83	18

Table 7-1-4.

4. 28 MHz Original Oscillation Adjustment (VC-159 board)

Adjust the 28 MHz oscillation of the synchronization clock.
If the oscillation is not 28 MHz, the period will be inaccurate or the image will not be in color.

Subject	Not required
Measurement Point	Pin ⑧ of IC753 (JL708)
Measuring Instrument	Frequency counter
Adjusting Element	CT701
Specified Value	14318181 ± 71 Hz

Adjusting method:

- 1) Use CT701 to adjust the oscillation frequency to 14318181 ± 71 Hz.

5. V SUB Adjustment

Set the CCD imager V SUB voltage to the voltage specified for the imager.

Subject	Not required
Adjustment Page	F
Adjustment Address	04

Adjusting Method:

- 1) Read the V SUB voltage code of the CCD imager.
Obtain the corresponding V SUB data from the following table.
- 2) Set data: 01 to page: 6, address: 00.
- 3) Set the V SUB data to page: F, address: 04.
- 4) Press the PAUSE button of the adjusting remote command-er.

V SUB			V SUB		
Voltage Code	Data	Voltage (Vdc) *1	Voltage Code	Data	Voltage (Vdc) *1
e	71	9.0	q	AD	14.0
f	77	9.5	r	B3	14.5
g	7D	10.0	s	B9	15.0
h	83	10.5	t	BF	15.5
j	89	11.0	u	C5	16.0
k	8F	11.5	v	CB	16.5
l	95	12.0	w	D1	17.0
m	9B	12.5	x	D7	17.5
n	A1	13.0	y	DD	18.0
p	A7	13.5	z	E2	18.5

*1: The V SUB voltages (TP703) given are reference values.

6. VRG Adjustment

Set the CCD imager V RG voltage to the voltage specified for the imager.


Subject	Not required
Adjustment Page	F
Adjustment Address	05

Adjusting Method:

- 1) Read the VRG voltage code of the CCD imager.
Obtain the corresponding VRG data from the following table.
- 2) Set data: 01 to page: 6, address: 00.
- 3) Set the VRG data to page: F, address: 05.
- 4) Press the PAUSE button of the adjusting remote command-er.

VRG		
Voltage Code	Data	Voltage (Vdc) *2
1	33	1.0
2	4E	1.5
3	69	2.0
4	84	2.5
5	9F	3.0
6	BA	3.5
7	D5	4.0

*2: The VRG voltages (TP707) given are reference values.

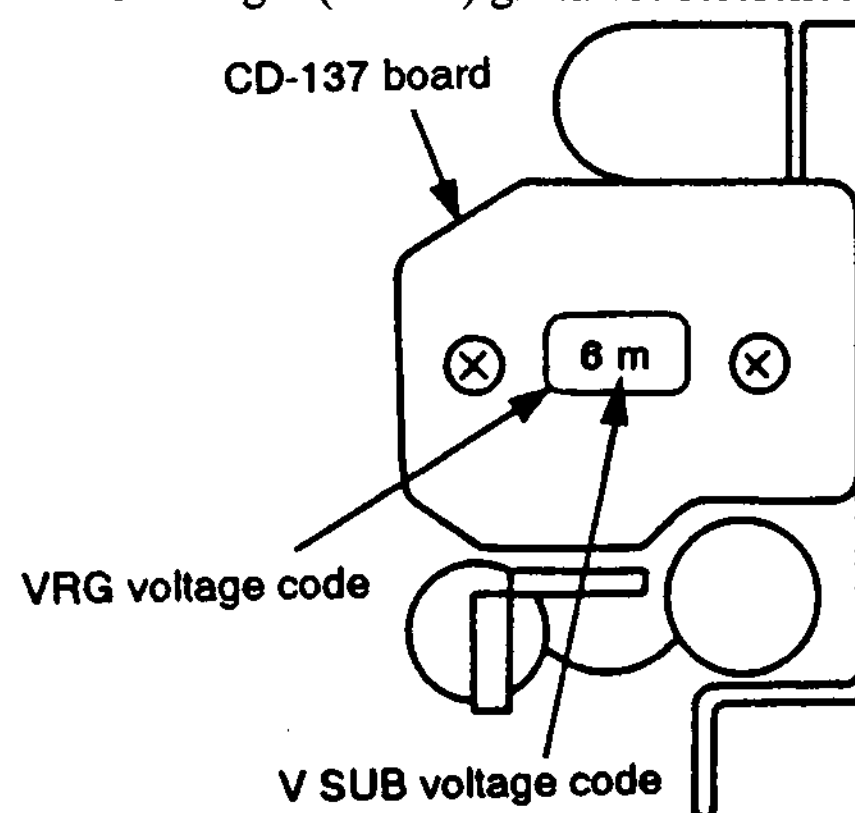

(Example) When "6m" is displayed:
The V SUB voltage code is "m" and therefore the V SUB data will be "9A".
The VRG voltage code is "6" and therefore the VRG data will be "BA".

Fig. 7-1-7.

7. HALL Adjustment

For detecting the position of the lens iris, adjust the hall AMP gain and hall offset.

Subject	Not required
Measurement Point	DDS display of LCD or monitor TV
Measuring Instrument	
Adjustment Page	F
Adjustment Address	06, 07
Specified Value	32 to 36 during IRIS OPEN B4 to B8 during IRIS CLOSE

Adjusting method:

- 1) Set data: 01 to page: 6, address: 00.
- 2) Set data: 01 to page: 1, address: 00.
- 3) Set data: 21 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 03 to page: 6, address: 02.
- 5) Set data: 03 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 6) Set data: 80 to page: F, address: 07, and press the PAUSE button of the adjusting remote commander.
- 7) Set data: 40 to page: F, address: 06, and press the PAUSE button of the adjusting remote commander.
- 8) Read the DDS display data (the bottom two digits of the display data at the bottom right of the EVF or the monitor TV display), and set to W₂.
- 9) Set data: 30 to page: F, address: 06, and press the PAUSE button of the adjusting remote commander.
- 10) Read the DDS display data, and set to W₁.
- 11) Set data: 01 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 12) Read the DDS display data, and set to K₁.
- 13) Set data: 40 to page: F, address: 06, and press the PAUSE button.
- 14) Read the DDS display data, and set to K₂.
- 15) Convert W₁, W₂, K₁, K₂ to decimal notation, and obtain W₁', W₂', K₁', K₂'. (Refer to Table 7-1-3. "Hexadecimal notation-decimal notation conversion table".)
- 16) Calculate X₁' using the following equations (decimal notation calculation).

$$A' = W_2' + K_1' - W_1' - K_2' \dots \dots \dots \text{Equation 1}$$

$$B' = W_1' - K_1' \dots \dots \dots \text{Equation 2}$$

$$X_1' = \frac{2080 + (48 \times A') - (16 \times B')}{A'} \dots \dots \dots \text{Equation 3}$$

- 17) Convert X₁' to hexadecimal notation, and obtain X₁. (Round off to one decimal place)
- 18) Set data: X₁ to page: F, address: 06, and press the PAUSE button of the adjusting remote commander.
- 19) Change the data of page: F, address: 07, and adjust the DDS display data to "34".
- 20) Press the PAUSE button of the adjusting remote commander.
- 21) Set data: 03 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 22) Read the DDS display data, and set to W₀. If W₀ lies within the "B4" to "B8" range, perform "Processing after completing adjustments". If it lies outside the range, perform the following adjustments.
- 23) Convert W₀ to hexadecimal notation, and obtain W₀'.
- 24) Calculate X₂' using the following equations (decimal notation calculation).

$$C' = W_0' - B' - 52 \dots \dots \dots \text{Equation 4}$$

$$X_2' = \frac{(130 - B') \times (X_1' - 48) + 48 \times C'}{C'} \dots \dots \dots \text{Equation 5}$$

(X₁' and B' are values obtained from equations 2 and 3)
- 25) Convert X₂' to hexadecimal notation and obtain X₂. (Round off to one decimal place)
- 26) Set data X₂ to page: F, address: 06, and press the PAUSE button of the adjusting remote commander.
- 27) Change the data of page: F, address: 07, and adjust the DDS display data to "B6".
- 28) Press the PAUSE button of the adjusting remote commander.
- 29) Set data: 01 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 30) Check that the DDS display data lies within the "32" to "36" range.

Processing after Completing Adjustments

- 1) Set data: 00 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 2) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 3) Set data: 00 to page: 1, address: 00.

8. Flange Back Adjustment

The flange back adjustment for the inner focus lens is performed automatically.

Subject	Chart for flange back adjustment (2000 ± 5 mm from the front side of the lens) (Luminance: 300 ± 50 lux)
Measurement Point	Check the operations on the TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	16, 17, 18, 19, 1A, 1B

Adjusting method:

- 1) Check that the flange back adjustment chart center and the exposure display center coincide at both zoom lens TELE end and WIDE end.
- 2) Set data: 01 to page: 6, address: 00.
- 3) Check that the data of page: 6, address: 21 is 00.
- 4) Check that the page: F, address: 16 to 1B data is at the initial value. (Refer to Table 7-1-4. "Page F address list")
- 5) Set data: 13 to page: 6, address: 01 and press the PAUSE button of the adjusting remote commander.
- 6) Set data: 15 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
(The adjustment data is automatically input to page: F, addresses: 16 to 1B.)
- 7) Check that the data of page: 6, address: 21 is 01.
(Display indicating flange back adjustment completion)

Processing after completing adjustments

- 1) Turn off the main power supply (6.3V).

9. Flange Back Check


Subject	Siemens star (2m from the front of the lens)
Measurement Point	DDS display of EVF or TV monitor
Measuring Instrument	
Specified Value	Focused at the TELE end and WIDE end.

Checking method:

- 1) Place the Siemens star 2m from the front of the lens.
- 2) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appears on the image.
- 3) Shoot the siemens star with the zoom TELE end.
- 4) Check that the lens is focused. (Note 2)
- 5) Set data: 01 to page: 6, address: 25.
- 6) Shoot the siemens star with the zoom WIDE end.
- 7) Check that the lens is focused.

Note: When the auto focus is ON, the lens can be checked if it is focused or not by observing the data on page A of the adjusting remote commander.

- 1) Set data: 0C to page: 6, address: 02.
- 2) Page A shows the state of the focus.

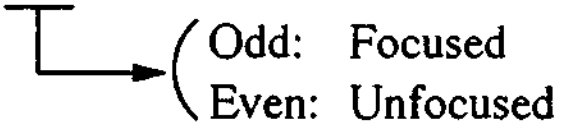A : 00 : XX

 (Odd: Focused
Even: Unfocused)

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 02.
- 2) Set data: 00 to page: 6, address: 25.

10. Picture Frame Setting


Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor.
Specified Value	A=B, C=D, $t=0 \pm 0.1$ msec

Setting method:

- 1) Adjust the zoom and the camera direction, and set to the specified position.
- 2) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "color bar chart standard picture frame".

Check on the oscilloscope

1. horizontal period

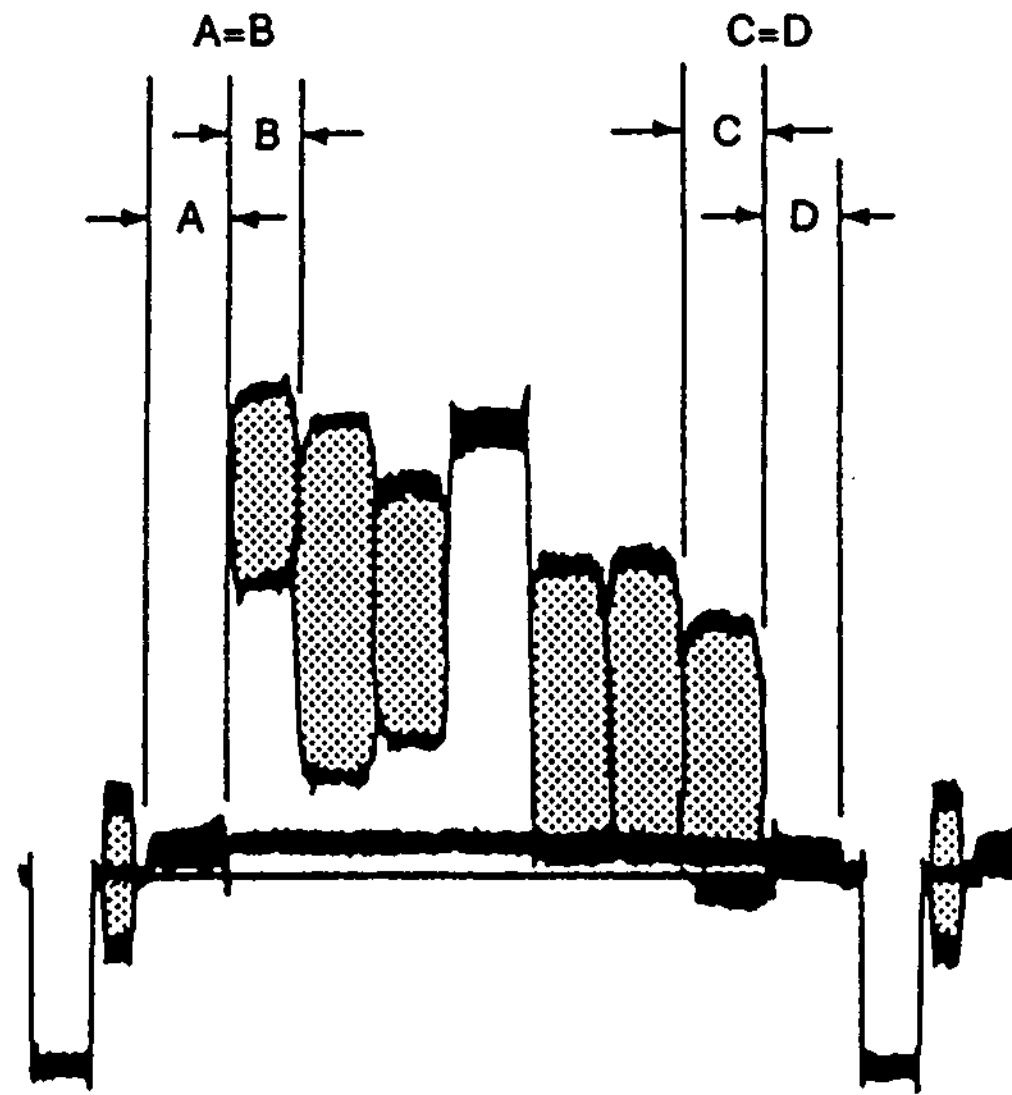

2. Vertical period

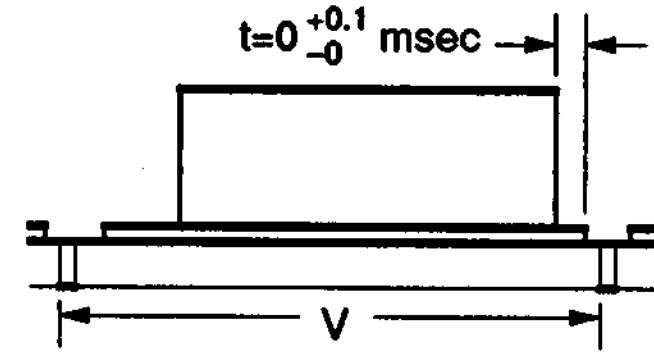


Fig. 7-1-8.

Check on the TV monitor

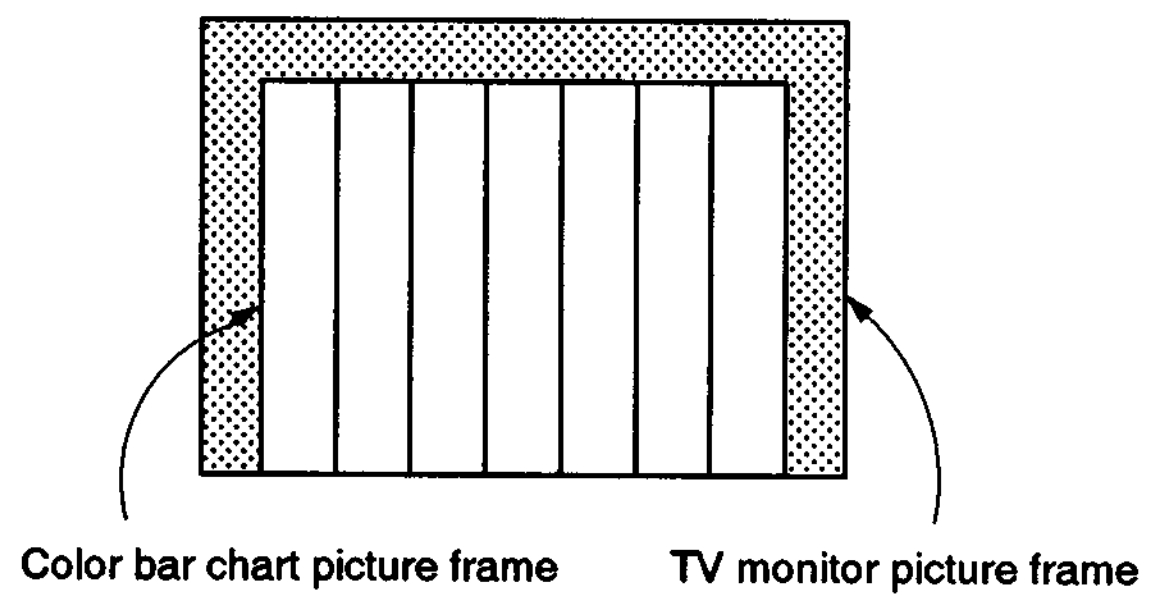


Fig. 7-1-9.

11. Color Reproduction Adjustment

Adjust the color separation matrix coefficient so that the proper color reproduction is produced.

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	08, 09, 0A, 0B
Specified Value	All color luminance points should settle within each color reproduction frame.

Adjusting method:

- 1) Set data: 01 to page: 6, address: 00.
- 2) Set data: 00 to page: 6, address: 03.
- 3) Set data: F1 to page: F, address: 10, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 02 to page: F, address: 50, and press the PAUSE button of the adjusting remote commander.
- 5) Set data: C6 to page: F, address: 63, and press the PAUSE button of the adjusting remote commander.
- 6) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
- 7) Change the data of addresses 08, 09, 0A and 0B of page: F, and settle each color luminance point in each color reproduction frame.

Note 1: Be sure to press the PAUSE button of the adjusting remote commander before changing the addresses.

If not, the new data will not be written to the memory.

- 8) Press the PAUSE button of the adjusting remote commander.

Processing after completing adjustments

- 1) Set data: E0 to page: F, address: 10 and press the PAUSE button of the adjusting remote commander.
- 2) Set data: 07 to page: F, address: 50, and press the PAUSE button of the adjusting remote commander.
- 3) Set data: 26 to page: F, address: 63, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 10 to page: 6, address: 03.

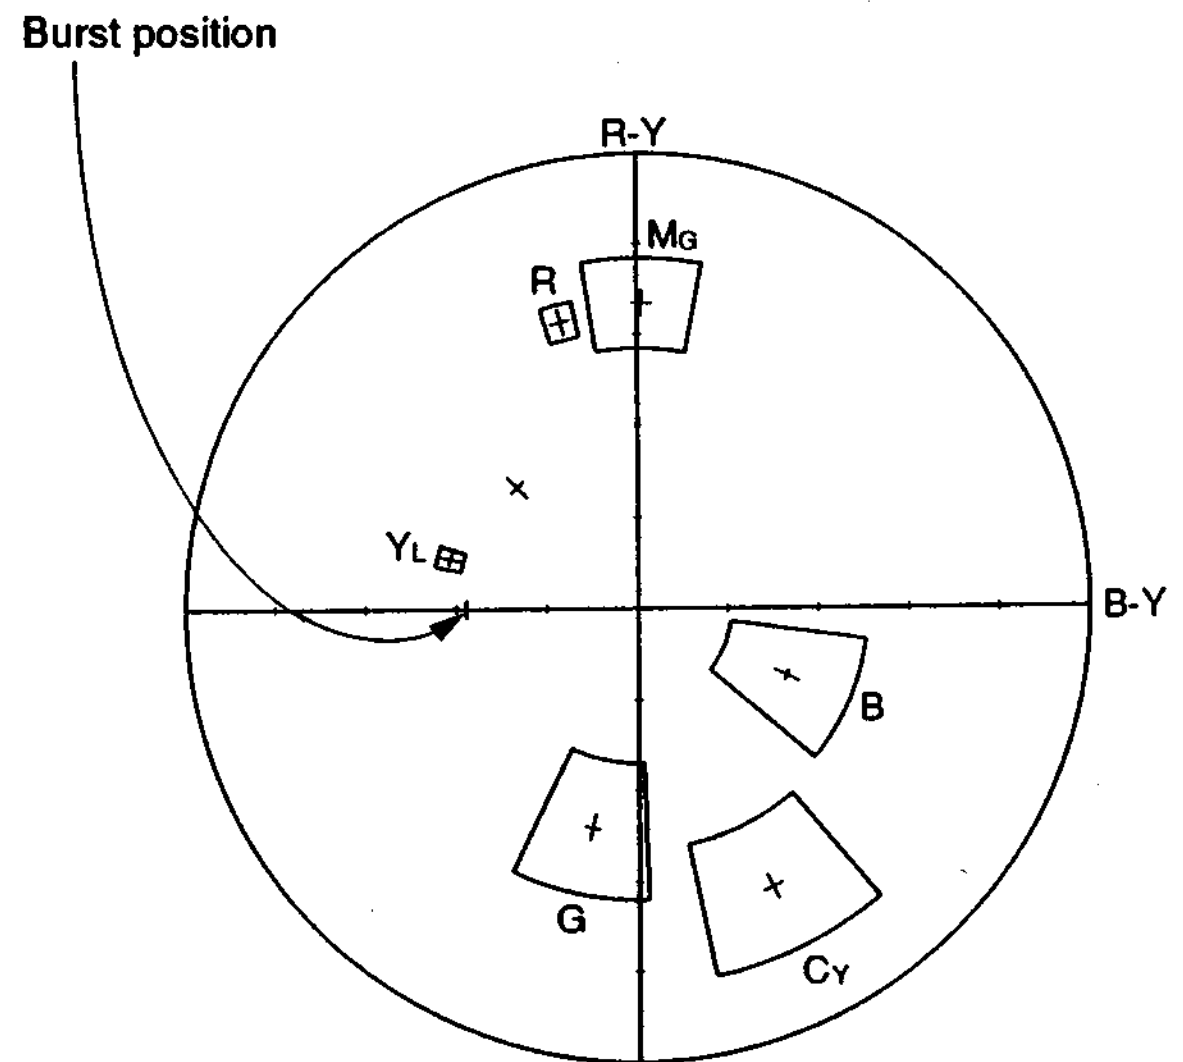


Fig. 7-1-10.

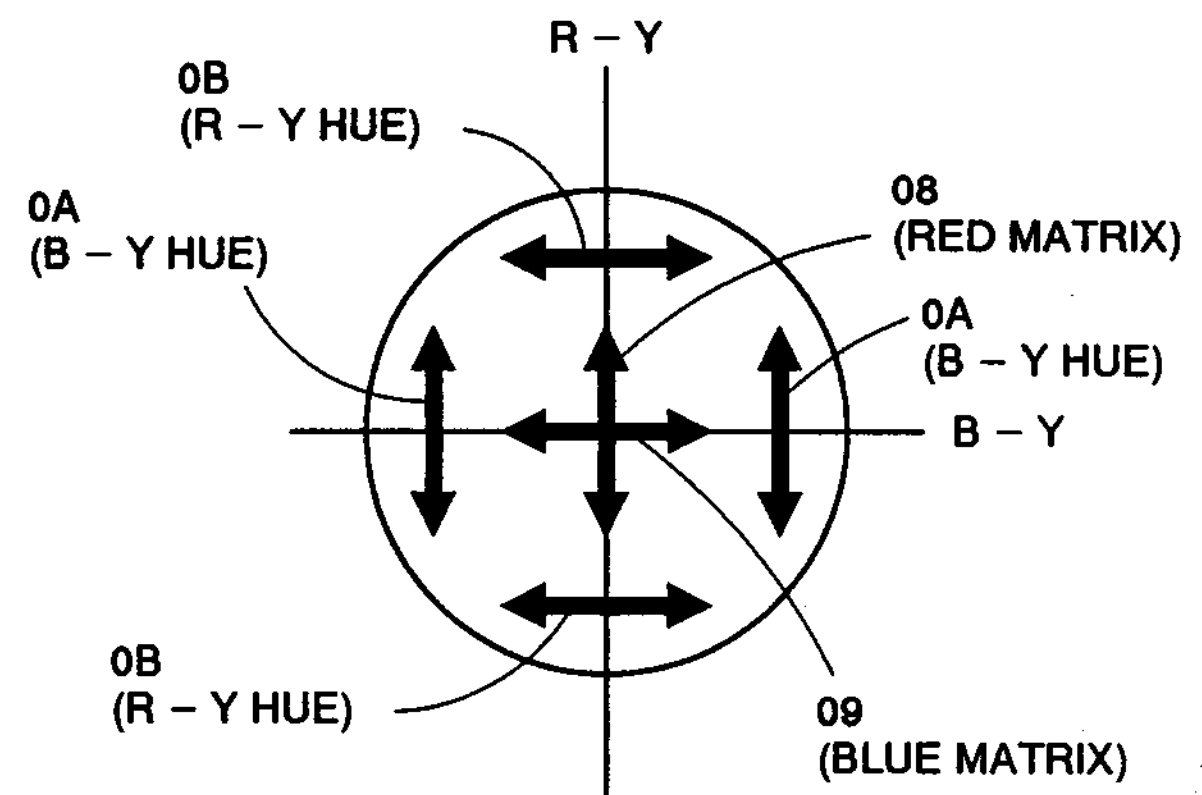


Fig. 7-1-11. Direction of the Movements of the Adjustment Address and Luminance Point

12. IRIS IN/OUT Adjustment

For the unit to judge if the white balance is indoors or outdoors, measure the light level and write it in the EEPROM.

If the level is not correct, the white balance will not be accurate.

Subject	White pattern
Measurement Point	DDS display of EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	13, 14

Adjusting method:

- 1) Set data: 01 to page: 6, address: 00
- 2) Set data: 01 to page: 1, address: 00
- 3) Set data: 21 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 0E to page: 6, address: 02.
- 5) Set data: 0B to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 6) Read the DDS display data (Note 1), and take the upper two digits as D1 and the lower two as D2.
- 7) Convert D1 to a decimal number and obtain D1'. (Refer to Table 7-1-3. "Hexadecimal Notation-Decimal Notation Conversion Table".)
- 8) Calculate D3' using the following equations.
(Equations 1 and 2 are for decimal notation calculation)
When $D2 \geq D0$
 $D3' = D1' - 21$ Equation 1
When $D2 < D0$
 $D3' = D1' - 22$ Equation 2
- 9) Convert D3' to a hexadecimal number and obtain D3.
- 10) Set D3 to page: F, address: 13, and press the PAUSE button of the adjusting remote commander.
- 11) Set data: 09 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 12) Read the DDS display data (Note 1), and take the upper two digits as D4 and the lower two as D5.
- 13) Convert D4 to a decimal number and obtain D4'. (Refer to Table 7-1-3. "Hexadecimal Notation-Decimal Notation Conversion Table".)
- 14) Calculate D6' using the following equations.
(Equations 3 and 4 are for decimal notation calculation)
When $D5 \geq F0$
 $D6' = D4' - 13$ Equation 3
When $D5 < F0$
 $D6' = D4' - 14$ Equation 4
- 15) Convert D6' to a hexadecimal number and obtain D6.
- 16) Set D6 to page: F, address: 14, and press the PAUSE button of the adjusting remote commander.

Note 1: The right four digits of the display data at the right bottom side of the EVF and monitor TV is the LIGHT LEVEL data. If the lower digits change severely and cannot be read, record it on a tape once, play it back by frame feeding, and obtain the average value.

Processing after Completing Adjustments

- 1) Set data: 00 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 2) Set data: 00 to page: 1, address: 00.
- 3) Set data: 00 to page: 6, address: 00, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 00 to page: 6, address: 02.

13. MAX GAIN Adjustment

Setting the minimum illumination.

If it is not consistent, the image level required for taking subjects in low illuminance will not be produced (dark).

Subject	White pattern standard picture frame
Measurement Point	DDS display of EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	15
Specified Value	C4 to CC

Adjusting method:

- 1) Set data: 01 to page: 6, address: 00.
- 2) Set data: 01 to page: 1, address: 00.
- 3) Set data: 21 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 01 to page: 2, address: 00.
- 5) Set data: 01 to page: 2, address: 42.
- 6) Set data: 5A to page: 2, address: 40.
- 7) Set data: 54 to page: 2, address: 41.
- 8) Set data: 01 to page: 6, address: 02.
- 9) Set data: 19 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 10) Change the data of page: F, address: 15 and adjust so that the DDS display data lies within the "C4" to "CC".
- 11) Press the PAUSE button of the adjusting remote commander.

Processing after completing adjustments

- 1) Set data: 00 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 2) Set data: 00 to page: 1, address: 00.
- 3) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 00 to page: 6, address: 02.
- 5) Set data: 01 to page: 2, address: 00.
- 6) Set data: 00 to page: 2, address: 40.
- 7) Set data: 00 to page: 2, address: 41.
- 8) Set data: 00 to page: 2, address: 42.
- 9) Set data: 00 to page: 2, address: 00.

14. Auto White Balance Standard Data Input

Subject	White pattern standard picture frame
Adjustment Page	F
Adjustment Address	0C, 0D, 0E, 0F

Adjusting method:

- 1) Turn the power of the unit OFF/ON.
- 2) Set data: 01 to page: 6, address: 00.
- 3) Check that the data of page: 6, address: 11 is 00.
- 4) Check that the data of page: 6, address: 03 is 10.
- 5) Wait for 2 seconds.
- 6) Set data: 11 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 7) Set data: 0D to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
(When the standard data is taken in, the data will be automatically input to addresses 0C to 0F of page F.)
- 8) Check that the data of page: 6, address: 11 is 01.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.

15. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.

If it is not correct, auto white balance and color reproducibility will be poor.

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction
Measurement Point	Check with the DDS display on the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	11, 12
Specified Value	R ratio: 2A40 to 2AC0 B ratio: 5E00 to 5F00

Adjusting method:

- 1) Place the C14 filter for color temperature correction on the lens.
- 2) Set data: 01 to page: 1, address: 00.
- 3) Set data: 21 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 01 to page: 6, address: 00.
- 5) Set data: D0 to page: F, address: 10, and press the PAUSE button of the adjusting remote commander.
- 6) Set data: 04 to page: 6, address: 02.
- 7) Change the data of page: F, address: 11, and adjust the average value of the DDS display data (the display data at the bottom right of the EVF or the TV monitor) to the R ratio specified value.
- 8) Press the PAUSE button of the adjusting remote commander.
- 9) Set data: 05 to page: 6, address: 02.
- 10) Change the data of page: F, address: 12, and adjust the average value of the DDS display data to the B ratio specified value.
- 11) Press the PAUSE button of the adjusting remote commander.

Processing after completing adjustments

- 1) Set data: E0 to page: F, address: 10, and press the PAUSE button of the adjusting remote commander.
- 2) Set data: 00 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 3) Set data: 00 to page: 6, address: 02.
- 4) Set data: 00 to page: 1, address: 00.

16. White Balance Check

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.3
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 7-1-12. A to C

Checking method:

- 1) Check that the lens is not covered with either filter.
- 2) Set data: 01 to page: 6, address: 00.
- 3) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 4) Check that the center of the white luminance point is within the circle shown in Fig. 7-1-12.A.
- 5) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 6) Set data: 23 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 7) Place the C14 filter on the lens.
- 8) Check that the center of the white luminance point settles in the circle shown in Fig. 7-1-12. B.
- 9) Remove the C14 filter, and place the ND filter 1.3 (1.0+0.3) on the lens.
- 10) Check that the center of the white luminance point settles in the circle shown in Fig. 7-1-12. C.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote commander.
- 2) Set data: 00 to page: 6, address: 00, and press the PAUSE button.

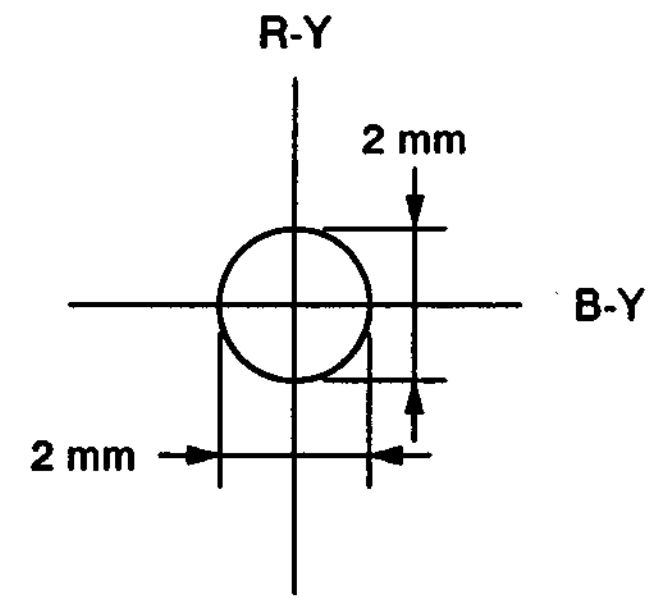


Fig. 7-1-12. A

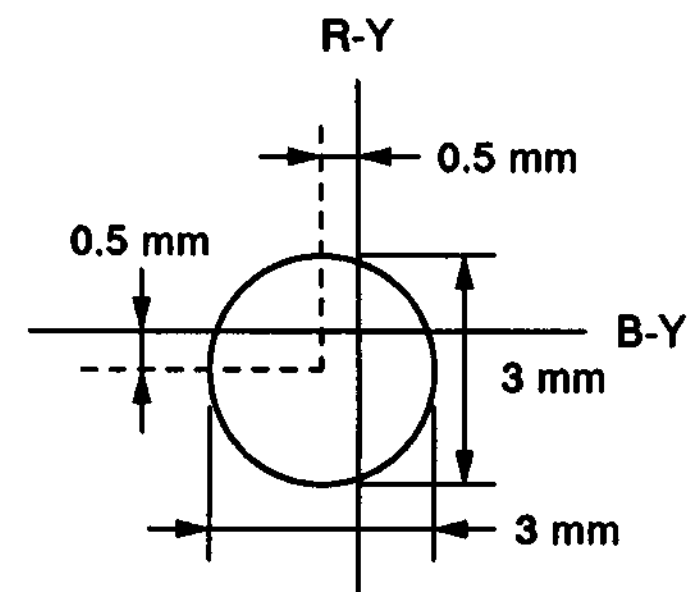


Fig. 7-1-12. B

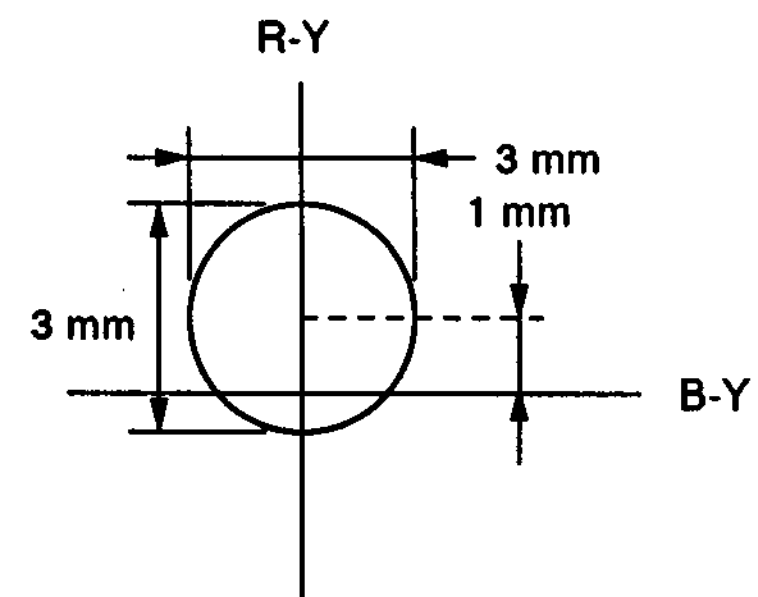


Fig. 7-1-12. C

17. VIDEO OUT Level Check

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal (Terminated at 75Ω)
Measuring Instrument	Oscilloscope
Specified Value	Y level= 680 ± 40 mV SYNC level= 285 ± 20 mV BURST level= 285 ± 30 mV

Checking method:

- 1) Check that the Y level, SYNC level and BURST level satisfy the specified values.

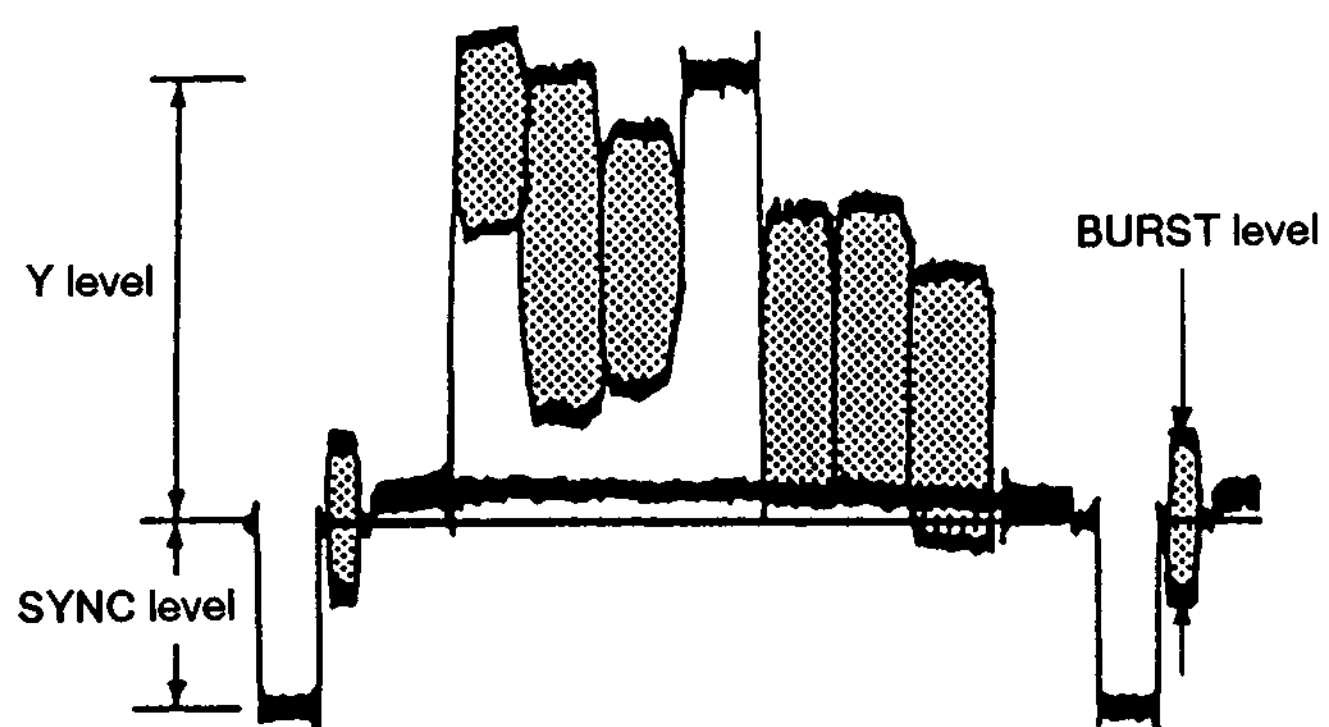


Fig. 7-1-13.

1-3. ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT (CCD-FX240)

1-3-1. Horizontal Tilt Adjustment

Mode	Playback
Signal	Alignment tape for checking operation (WR5-5NSP) Monoscope portion
Specified Value	See Fig. 7-1-15.

Adjustment method:

- 1) Adjust RV503 (BRIGHT) for appropriate brightness on CRT screen.
- 2) Loosen the DY (deflection yoke) tightening nut. (See Fig. 7-1-14.)
- 3) Make a picture horizontal by turning the DY.
- 4) Retighten the nut. (Do not tighten excessively.)


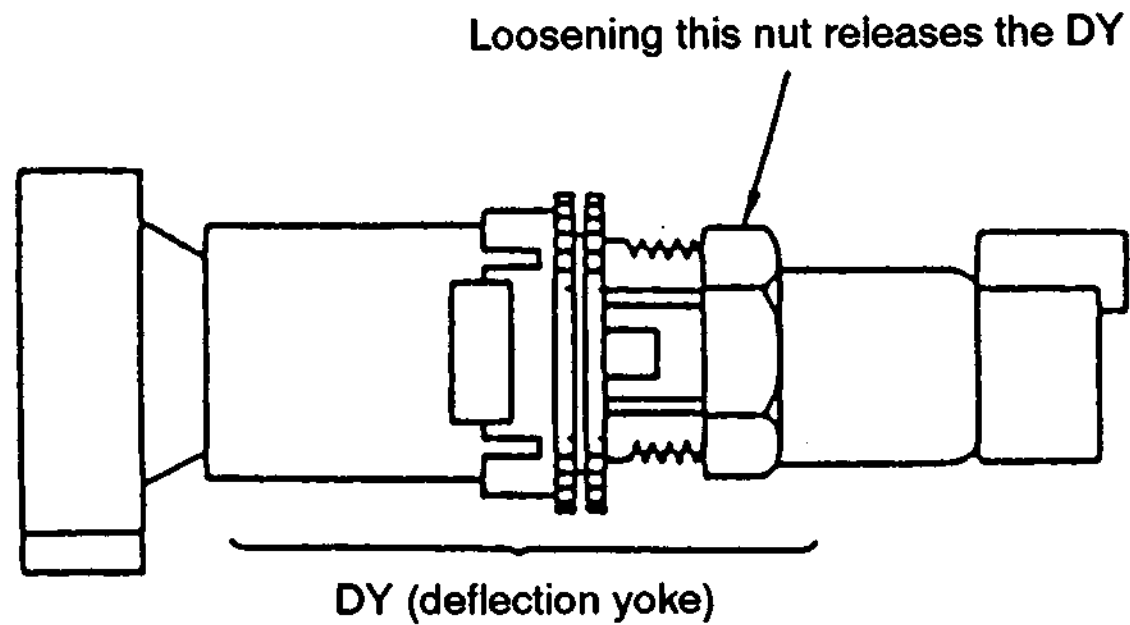


Fig. 7-1-14.

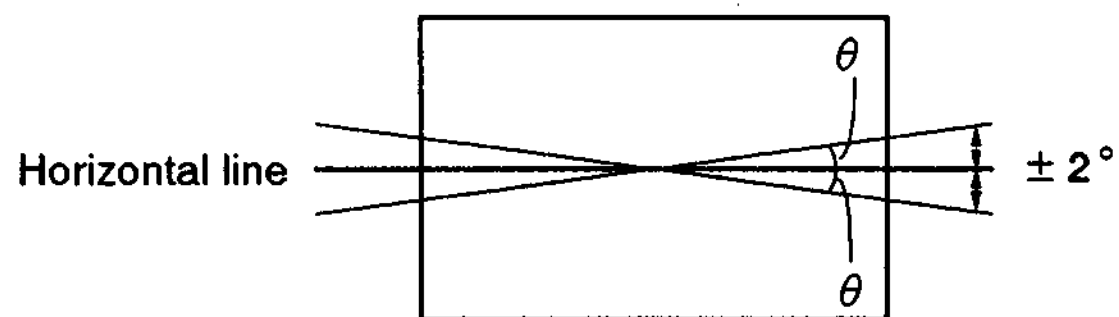

Specified value: Image orientation within $\pm 2^\circ$ of horizontal line.

Fig. 7-1-15.

1-3-2. Centering Adjustment

Mode	Playback
Signal	Alignment tape for checking operation (WR5-5NSP) Monoscope portion
Specified Value	See Fig. 7-1-17.

Adjustment method:

- 1) Turn the centering adjustment rings to provide an image with even right, left, upper and lower margins. (See Fig. 7-1-16.)

Note: Since the centering position is affected by the earth magnetism, turn the equipment over 360° horizontally, and make adjustments at the orientation which exhibits median displacements of the image.

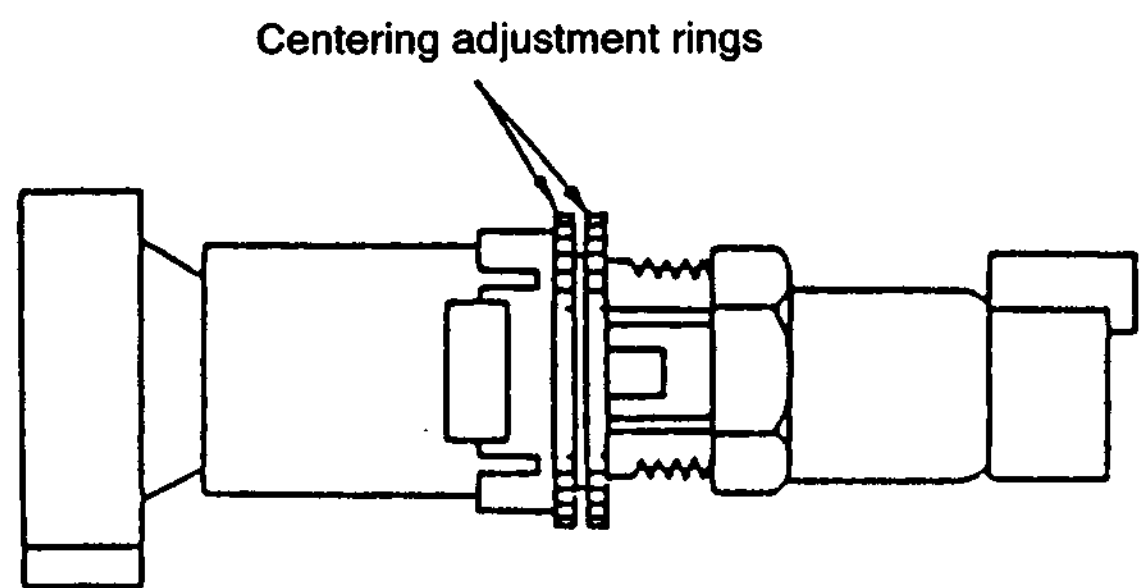


Fig. 7-1-16.

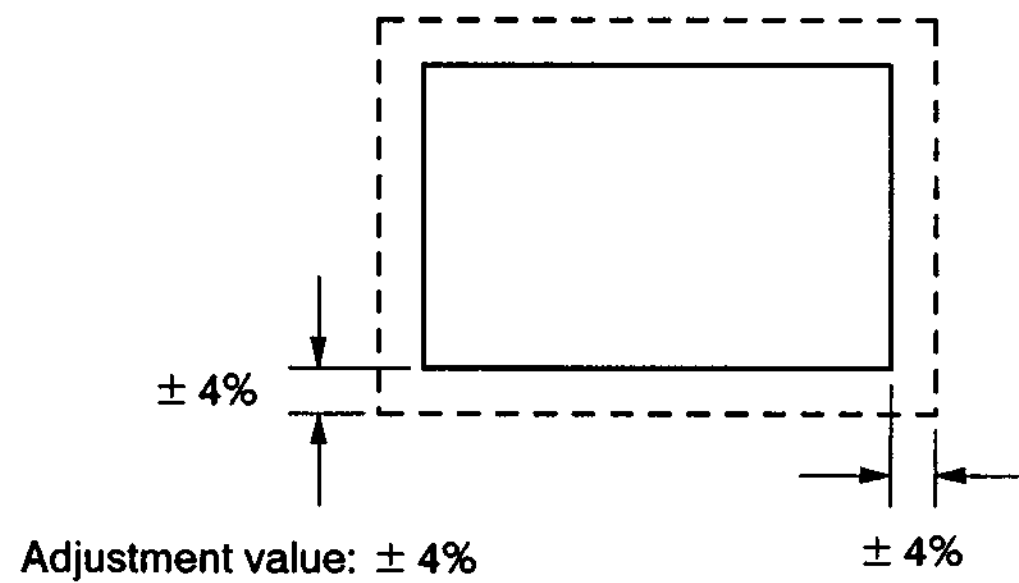


Fig. 7-1-17.

1-3-3. Horizontal Amplitude Adjustment (VF-44 Board)

Mode	Playback
Signal	Alignment tape for checking operation (WR5-5NSP) Monoscope portion
Adjustment Element	C504
Specified Value	$6 \pm 3\%$

Adjustment method:

- 1) Line up the upper and lower sections of the monoscope image with the upper and lower edges of the screen by RV505 (V SIZE).
- 2) Rotate RV503 (BRIGHT) to set the brightness to the normal level.
- 3) Short or open the pattern **A** of the H size adjustment capacitor (C504) to provide horizontal overscans of $6 \pm 3\%$ (total of left and right). (See Fig. 7-1-19.)


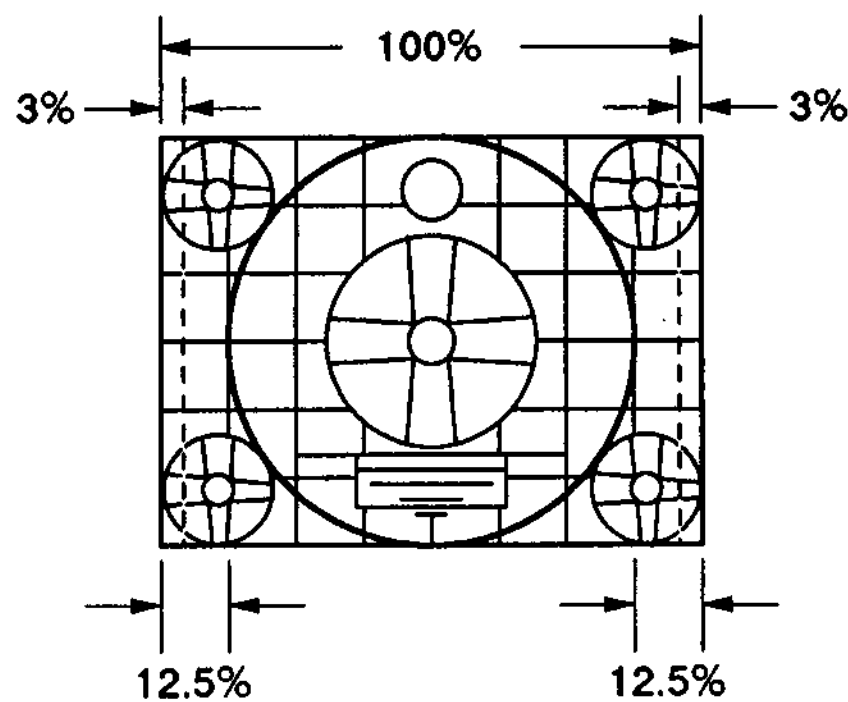


Fig. 7-1-18.

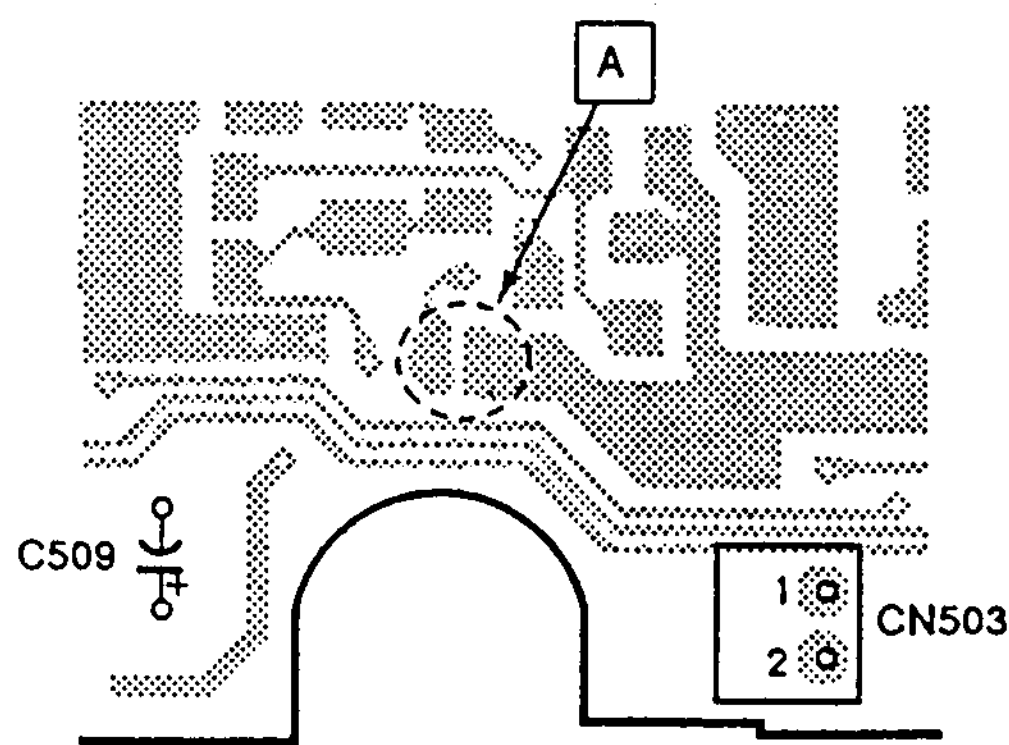

VF- VF-44 BOARD (COMPONENT SIDE)

A section	H size
Short	Large
Open	Small

Fig. 7-1-19.

1-3-4. Vertical Amplitude Adjustment (VF-44 Board)

Mode	Playback
Signal	Alignment tape for checking operation (WR5-5NSP) Monoscope portion
Adjustment Element	RV505 (V SIZE)
Specified Value	$5 \pm 3\%$

Adjustment method:

- 1) By turning RV505 (V SIZE), adjust vertical overscan to $5 \pm 3\%$ (upper and lower total).

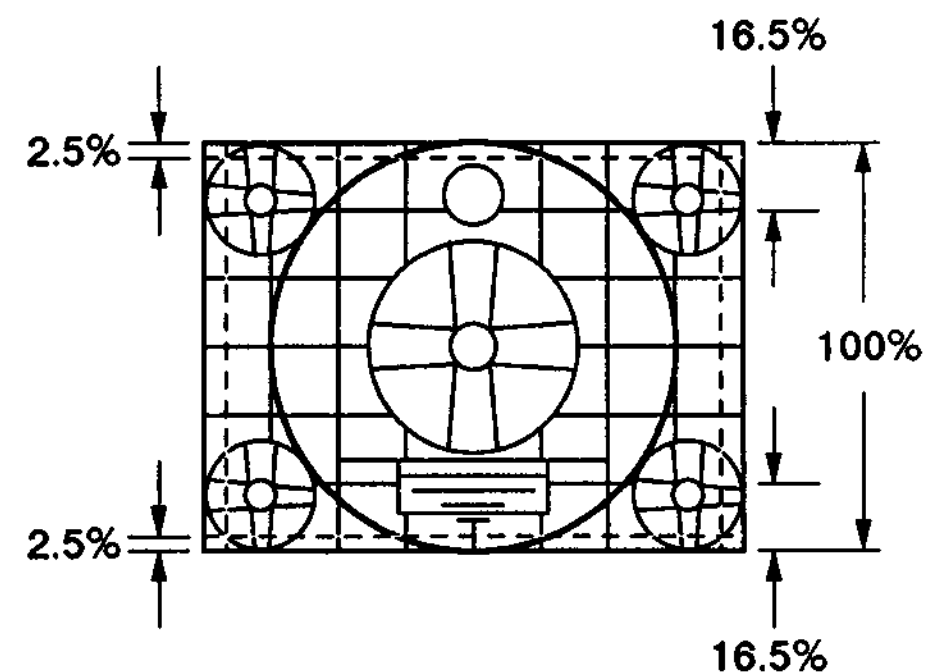


Fig. 7-1-20.

1-3-5. Focus Adjustment (VF-44 Board)

Mode	Playback
Signal	Alignment tape for checking operation (WR5-5NSP) Monoscope portion
Adjustment Element	RV502 (FOCUS)

Adjustment method:

- 1) Adjust to the best focus point with RV502.

1-3-6. Brightness, Contrast Adjustments (VF-44 Board)

Mode	Playback
Signal	Alignment tape for checking operation (WR5-5NSP) Monoscope portion
Adjustment Element	Brightness: RV503 (BRIGHT) Contrast: RV501 (CONT)

Adjustment method:

- 1) Adjust RV503 (BRIGHT) and RV501 (CONT) alternately until the bright and dark areas of a gray scale are displayed correctly. (The bright areas should not be made too bright to avoid a fuzzy display of the cross-hatches in the monoscope circle, and the brightness of the dark areas should be such that discrimination between the darkest and second darkest area is possible.)

1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENTS (CCD-FX340)

Note 1: The backlight (fluorescent tube) is driven by a 800 Vp-p, 16 kHz AC power supply.

Therefore, be careful not to touch the backlight holder as you will receive an electric shock.

Note 2: When replacing the LCD unit, ensure there will be no damages by static electricity.

[Adjusting connector]

Most measuring points for adjusting the view-finder are concentrated at CN801 of the VF-68 board. Connect the measuring equipments via the measuring pin tool. The following table lists the pin numbers and signal names of CN801.

Pin No.	Signal Name	Pin No.	Signal Name
1	LC COM	2	EVF GND
3	G OUT	4	13.5V
5	SEFR	6	12V
7	R OUT	8	B OUT
9	BRIGHT	10	PCO

Table 7-1-5.

Measuring pin tool Parts Code: J-6082-192-A

[Positions of RVs during adjustments]

Unless specified otherwise, set RVs to the following positions and adjust.

RV953 (BRIGHT)..... Refer to "BRIGHT Adjustment"

RV954 (COLOR)..... Mechanical center

RV955 (HUE) · 20° ± 15° from the mechanical center in the counterclockwise (○).

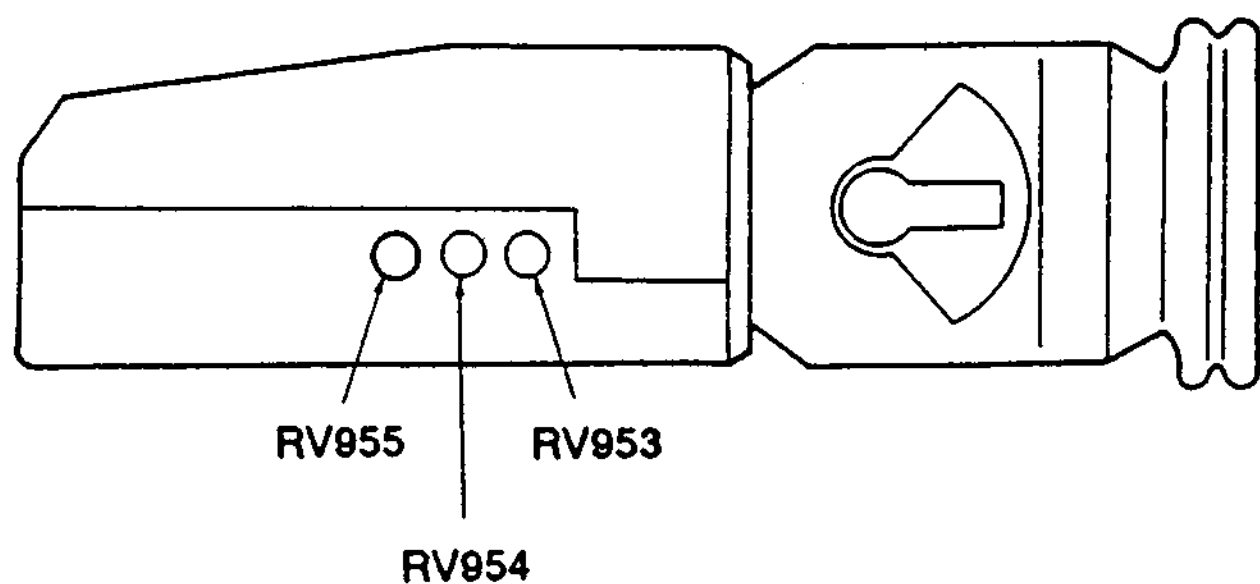


Fig. 7-1-21.

[Power Supply Voltage]

Adjust the power supply voltage for the battery pin so that Pin ① (EVF UNREG) of CN951 of the VF-69 board becomes 6.0 ± 0.1 Vdc.

[Connecting the Pattern Generator]

Connect the pattern generator as shown Fig. 7-1-22.

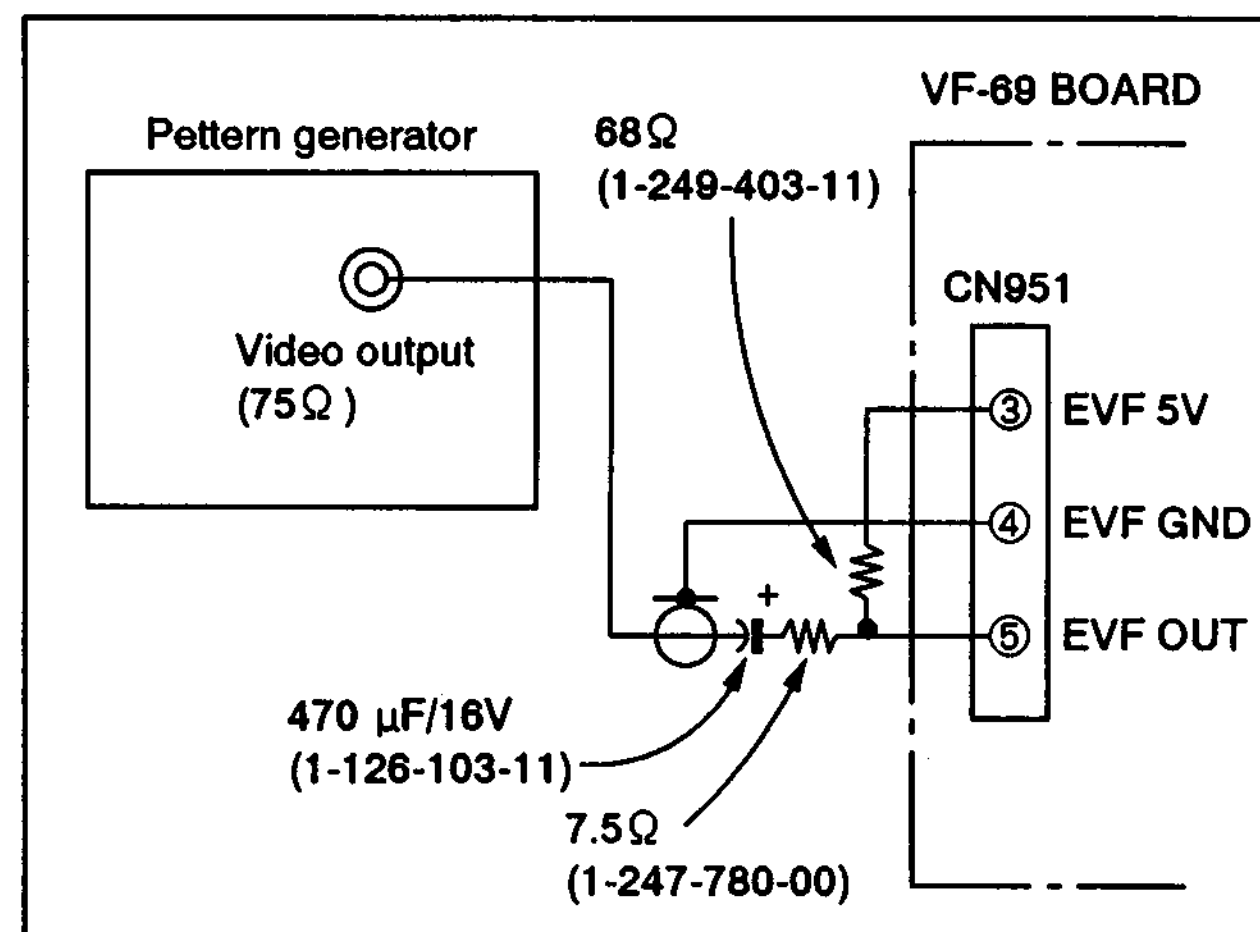


Fig. 7-1-22.

[Video Input Signal for Adjusting]

If the signal column specifies "Color bar signal whose chroma signal and burst signal are turned off", input a color bar signal whose chroma signal and burst signal have been turned off to the video input pin as the video input signal for adjusting. Check that the signal level of Pin ⑤ of CN951 of the VF-69 board is 0.9 ± 0.12 Vp-p before adjusting.

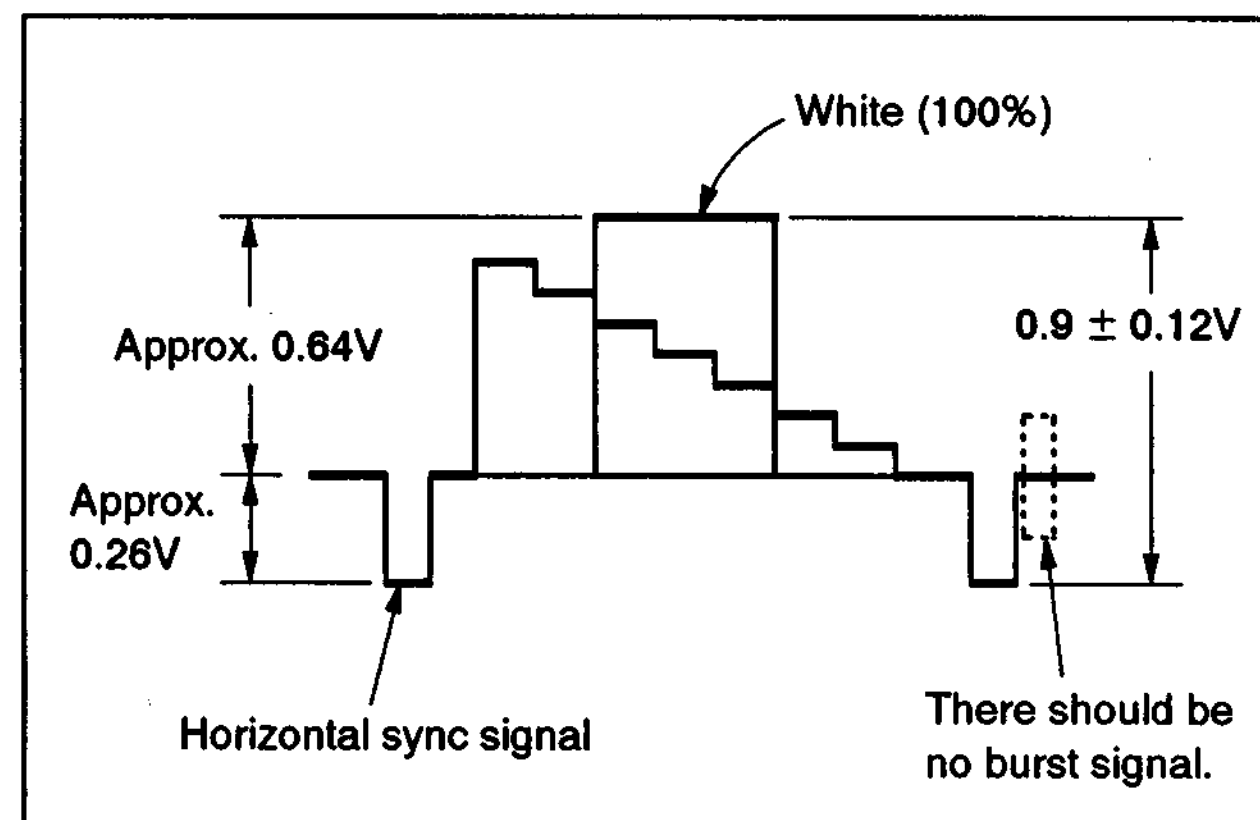


Fig. 7-1-23. Color bar signal turning off chroma and burst signals

1. Current consumption adjustment (VF-69 board)

Adjust the luminance and color temperature of the back light.
If these are not correct, the image will be brighter or darker than normal.

Mode	Stop
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	Remove L953 and measure +: Pin ① of CN951 -: ⊕ pin of C958
Measuring Instrument	Ammeter
Adjustment Element	RV951
Specified Value	85 ± 5 mA



Note 1: Adjust within 30 secs. after the power supply has been turned on.

Note 2: After adjusting, connect L953.

Adjusting method:

1. Check that the voltage of Pin ① of CN951 is 6.0 ± 0.1 Vdc.
2. Adjust the current consumption to 85 ± 5 mA with RV951.

VF-69 board Component side

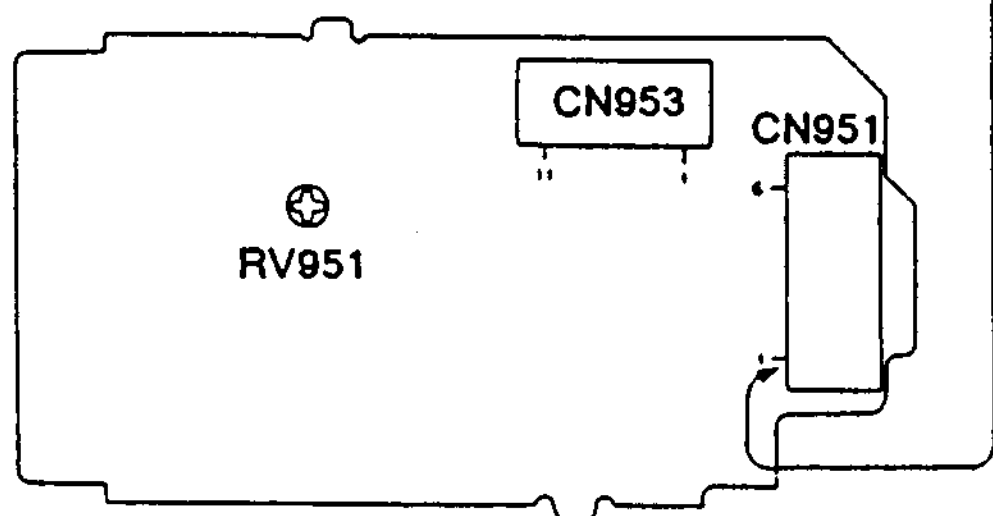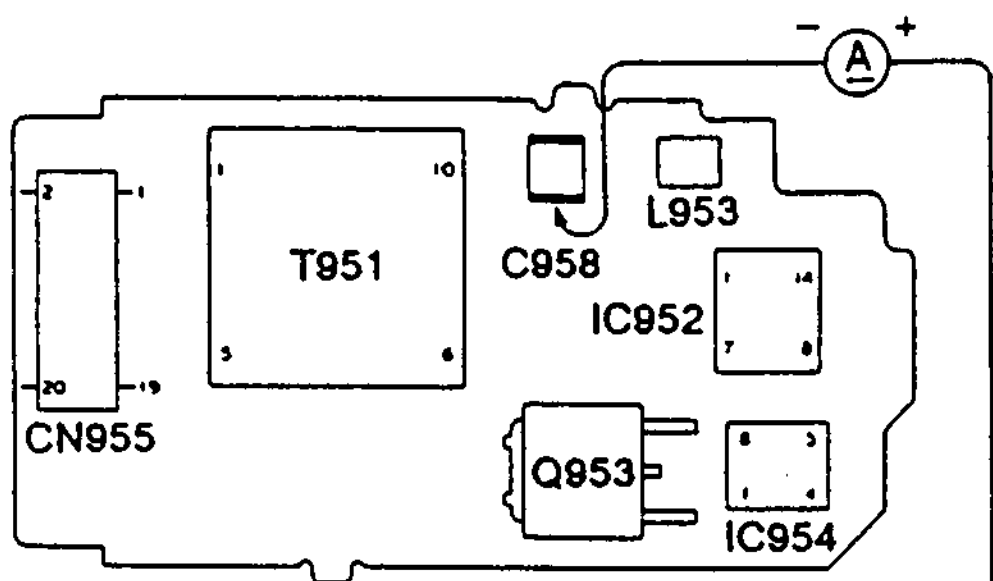

VF-69 board Conductor side

Fig. 7-1-24.

2. Power supply voltage check (VF-68 Board)

Mode	Stop
Measuring Instrument	Digital voltmeter
+12V check	
Measurement Point	Pin ⑥ of CN801 (12V)
Specified Value	$+11.6 \pm 0.2$ Vdc
+13.5V check	
Measurement Point	Pin ④ of CN801 (13.5V)
Specified Value	$+13.5 \pm 0.3$ Vdc

Checking Method:

1. Check that the UNREG power supply voltage (Pin ① of VF-69 board CN951) of CN951 is 6.0 ± 0.1 Vdc.
2. Check that each power supply voltage satisfies the specified value.

3. VCO adjustment (VF-68 Board)

Set the free running frequency of the VCO.

If it is not correct, the image will waver.

Mode	Stop
Signal	Color bar
Measurement Point	Pin ⑩ of CN801 (PCO)
Measuring Instrument	Oscilloscope (DC range)
Adjustment Element	RV804
Specified Value	$A=2.8 \pm 0.1V$

Adjusting method:

1. Check the GND level of the oscilloscope.
2. Adjust the PCO voltage (A) to the specified value with RV804.


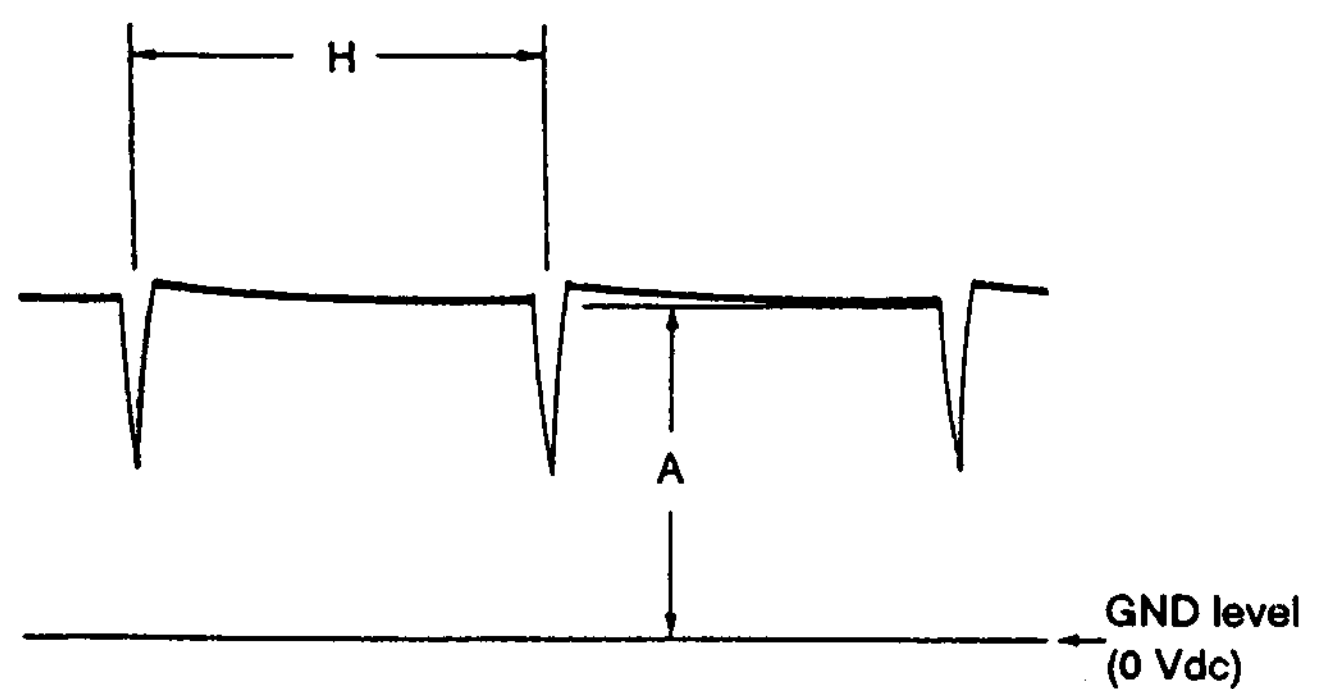


Fig. 7-1-25.

VF-68 BOARD (COMPONENT SIDE)

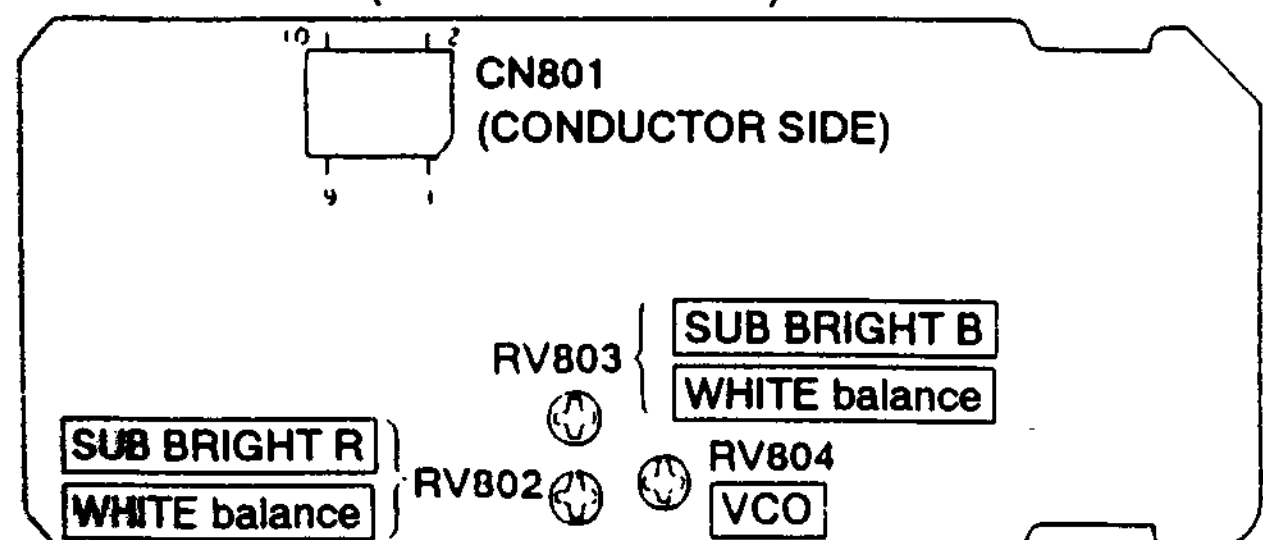


4. LC COM voltage check (VF-68 Board)

Mode	Stop
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	+ : Pin ③ of CN801 (G OUT) - : Pin ① of CN801 (LC COM)
Measuring Instrument	Digital voltmeter
Specified Value	$A = +0.35 \pm 0.1$ Vdc

Connection:


- 1) Connect the digital voltmeter as shown in the following figure.

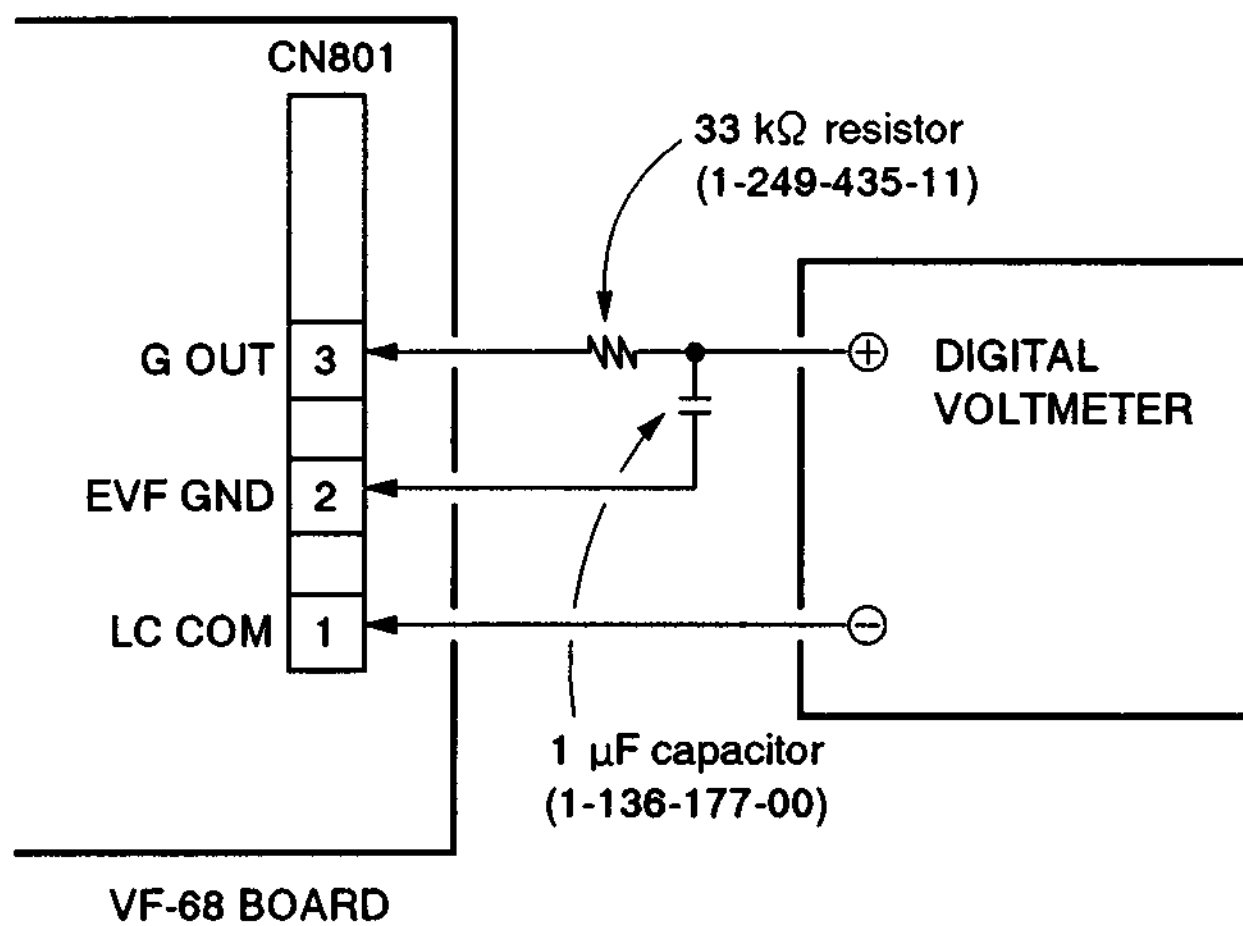

Checking method:

1. Check that the voltage difference (A) satisfies the specified value.

VF-68 BOARD (CONDUCTOR SIDE)

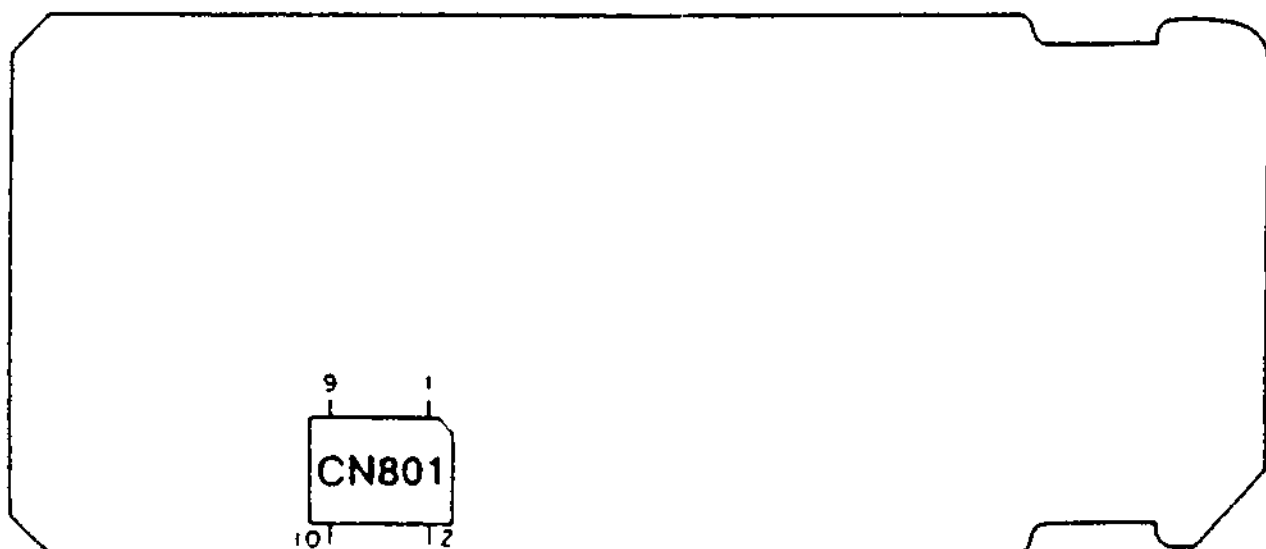

5. BRIGHT adjustment (VF-69 Board)

Adjust to the proper LCD panel driving video signal level.

If it is not correct, the image will be saturated (whitish) or blackish.

Mode	Stop
Signal	No signal
Measurement Point	Pin ③ of CN801 of VF-68 board (G OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV953
Specified Value	$A = 7.2 \pm 0.1$ V

Adjusting method:

1. Adjust the potential difference (A) between the reversed waveform pedestal and the non reversed waveform pedestal to the specified value with RV953.


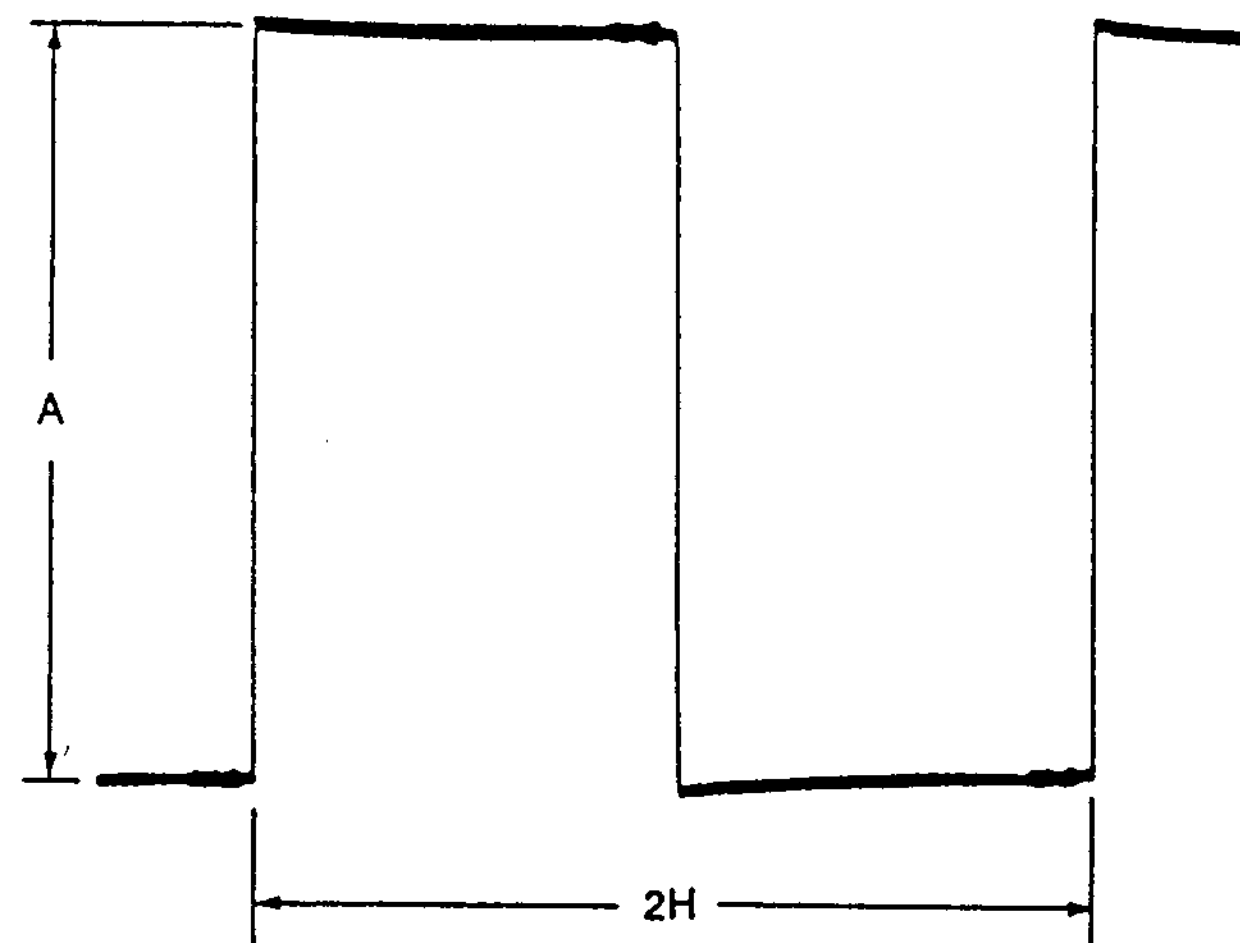


Fig. 7-1-26.

VF-69 BOARD (CONDUCTOR SIDE)

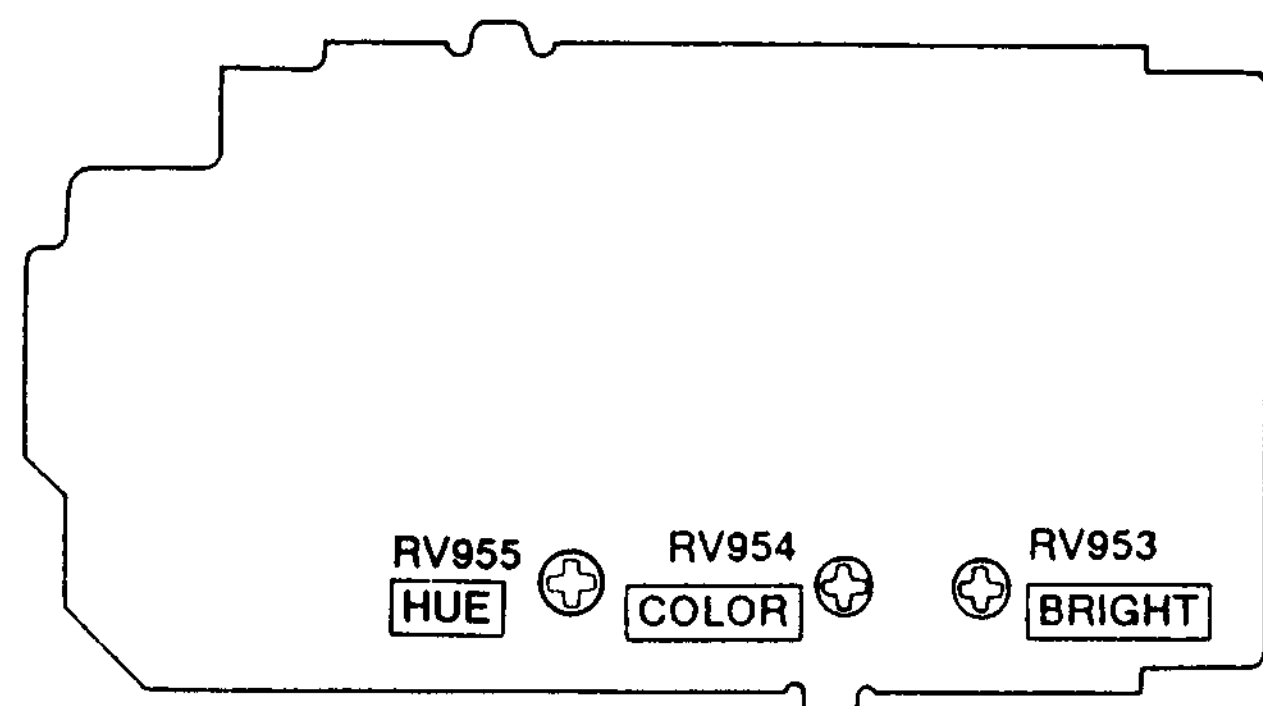

6. CONTRAST check (VF-68 Board)

Mode	Stop
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	Pin ③ of CN801 (G OUT)
Measuring Instrument	Oscilloscope
Specified Value	$A=2.3 \pm 0.15V$

Checking method:

1. Check that the white 100% level (A) is the specified value.

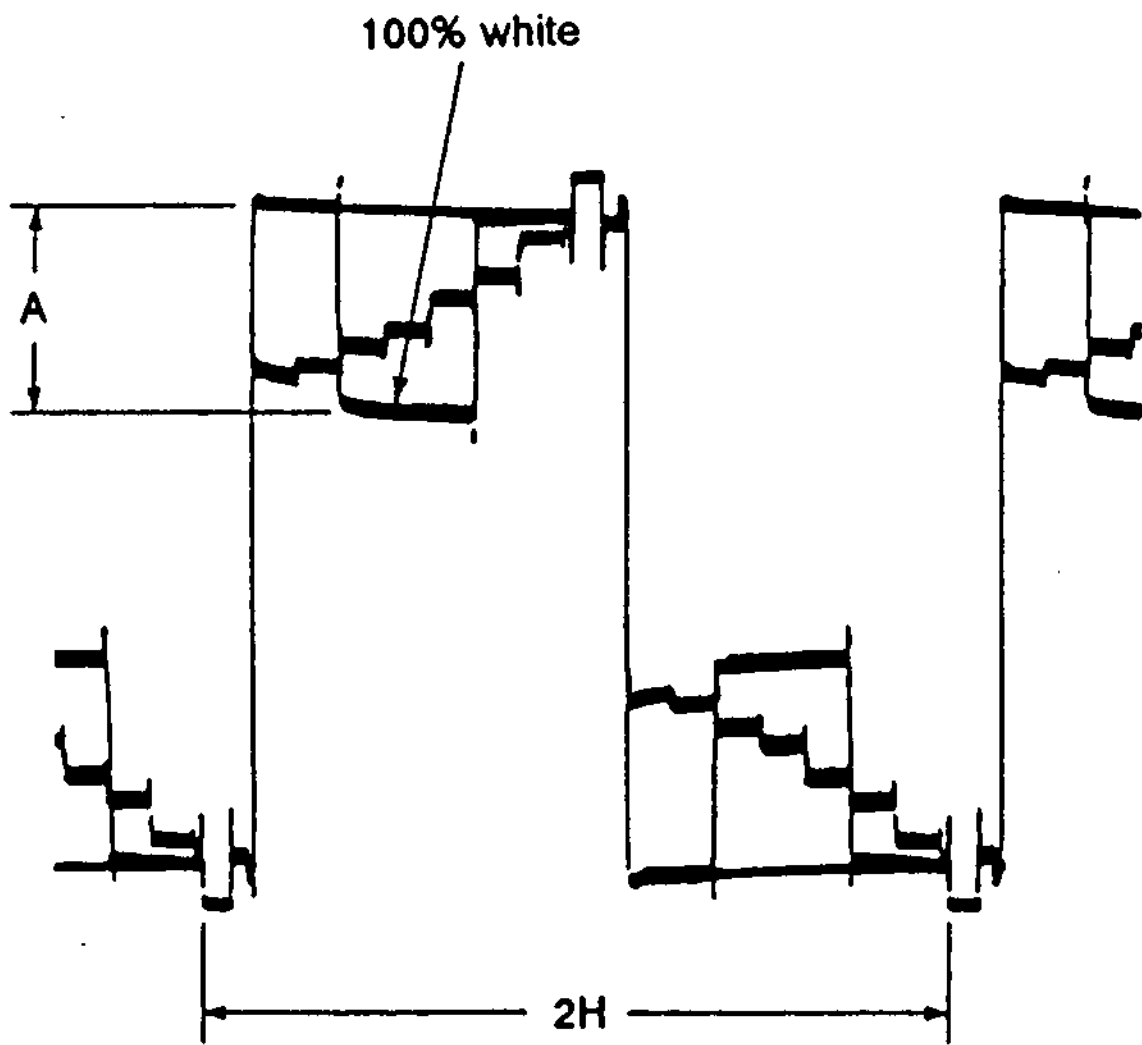


Fig. 7-1-27.

7. SUB BRIGHT R preset adjustment (VF-68 Board)

White balance rough adjustment (1).

Mode	Record
Signal	No signal
Measurement Point	Pin ⑦ of CN801 (R OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV802
Specified Value	$A=7.2 \pm 0.1V$

Adjusting method:

1. Adjust the potential difference (A) between the reversed waveform pedestal and the non reversed waveform pedestal to the specified value with RV802.



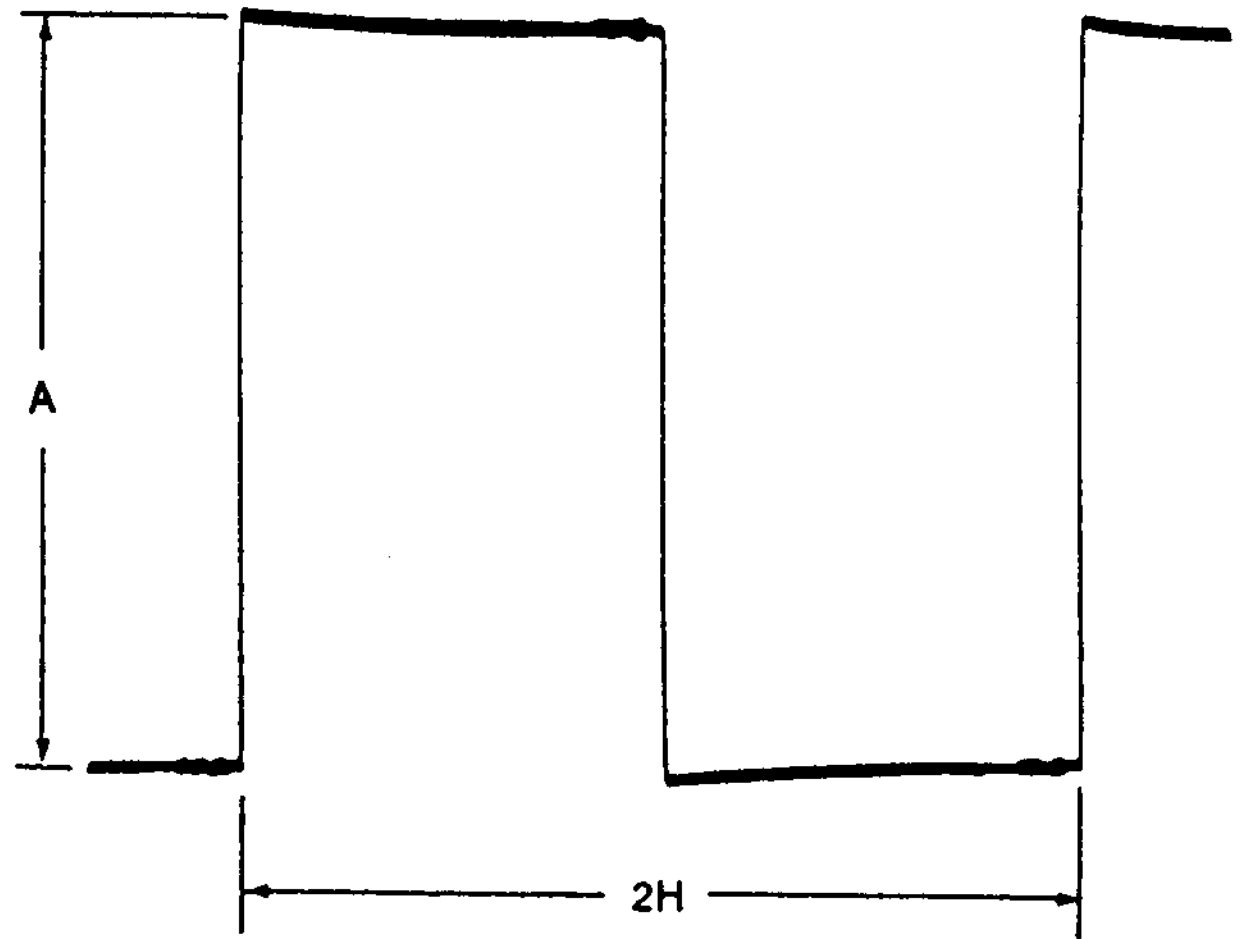


Fig. 7-1-28.

VF-68 BOARD (CONDUCTOR SIDE)

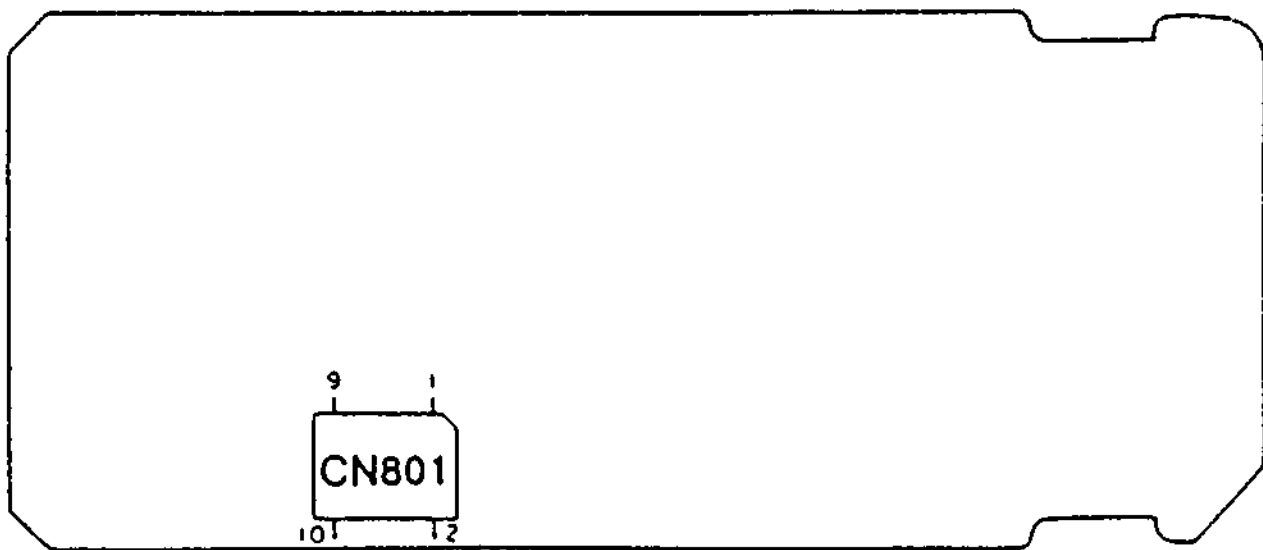

VF-68 BOARD (COMPONENT SIDE)

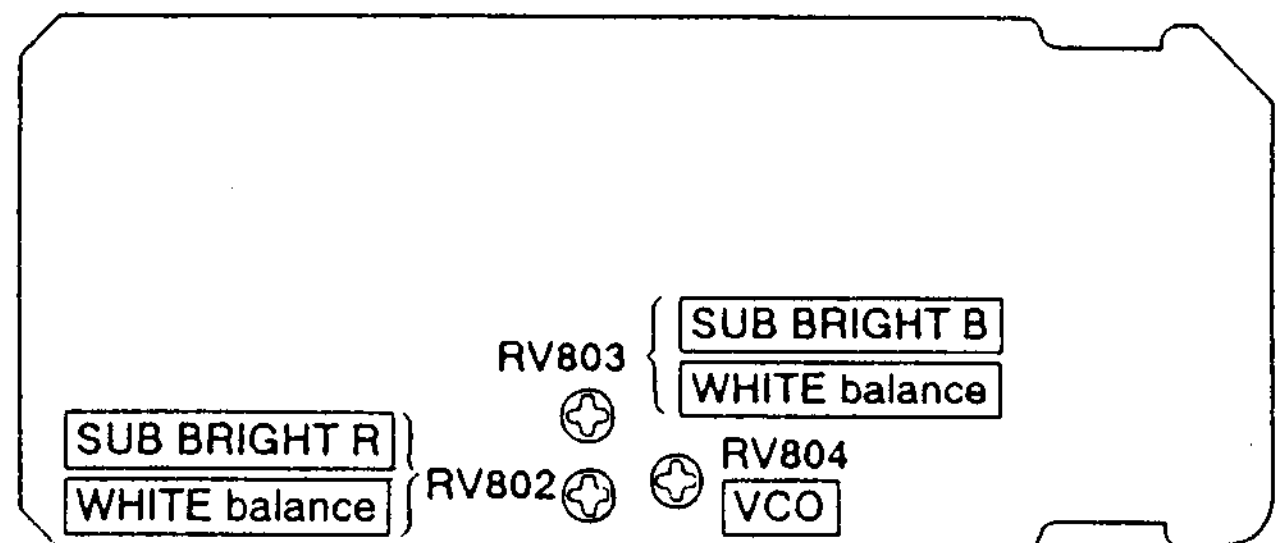

8. SUB BRIGHT B preset adjustment (VF-68 Board)

White balance rough adjustment (2).

Mode	Record
Signal	No signal
Measurement Point	Pin ⑧ of CN801 (B OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV803
Specified Value	$A=7.2 \pm 0.1V$

Adjusting method:

1. Adjust the potential difference (A) between the reversed waveform pedestal and the non reversed waveform pedestal to the specified value with RV803.

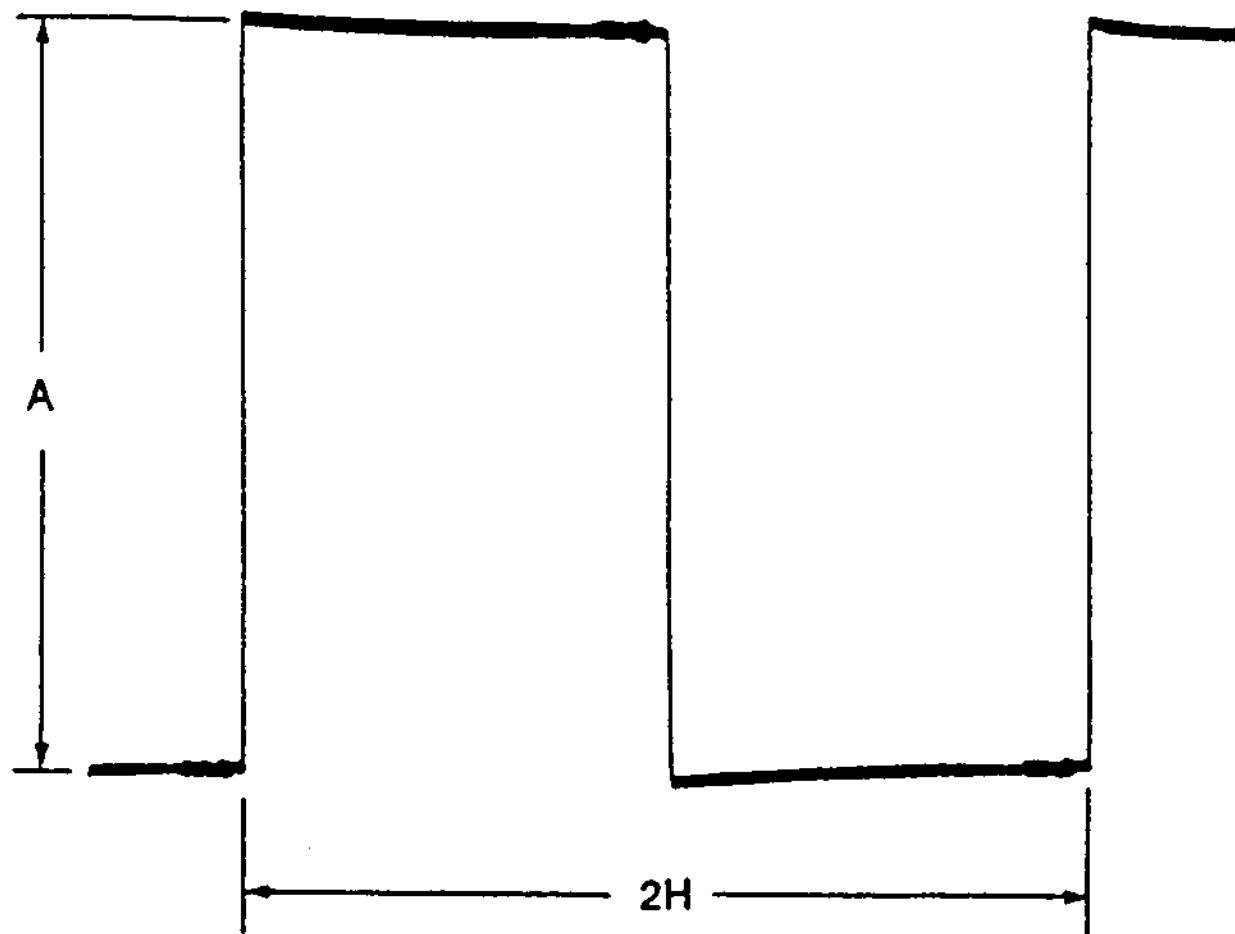


Fig. 7-1-29.

9. White balance adjustment (VF-68 Board)

Adjust to the proper white balance level.

If it is not correct, the color reproducibility of the LCD panel will be poor.


Mode	Record
Signal	Color bar signal whose chroma signal and burst signal are turned off
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Element	R: RV802 B: RV803
Specified Value	Picture should not be colored

Note: Turn on the power supply and adjust after more than one minute.


Adjusting method:

1. Check that the LCD display is not colored. If it is, adjust RV802 and RV803.

VF-68 BOARD (COMPONENT SIDE)

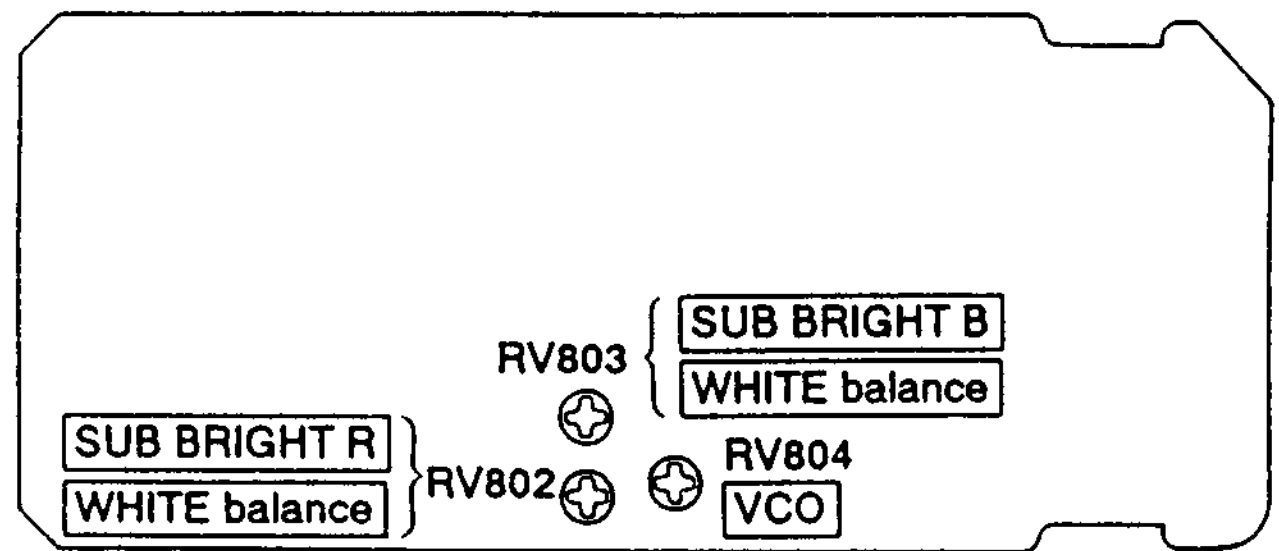

VF-68 BOARD (CONDUCTOR SIDE)

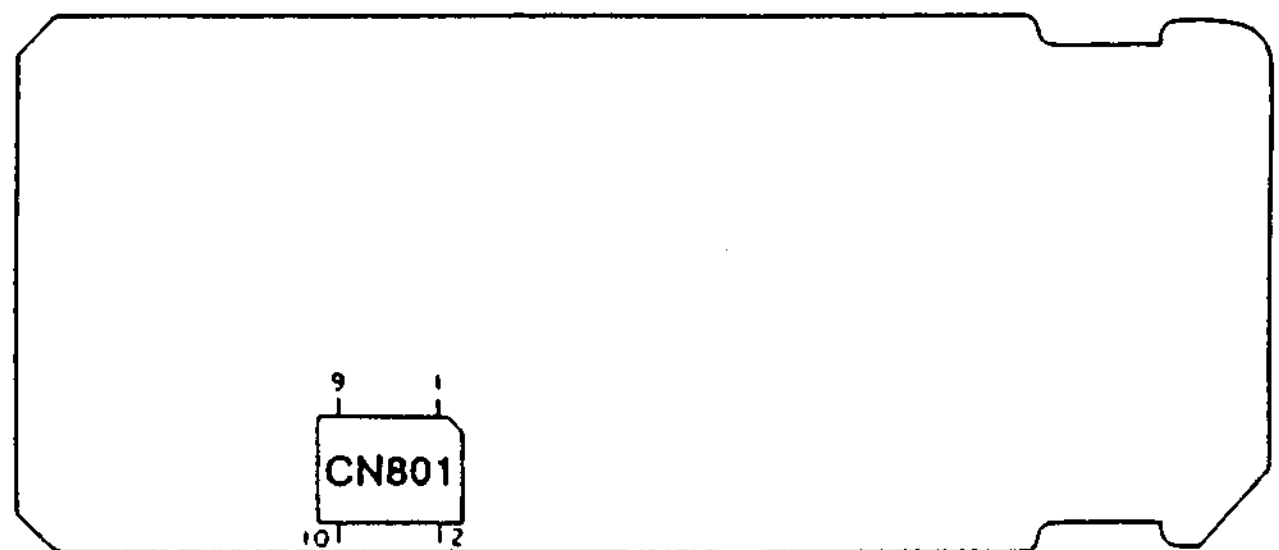

7-2. MECHANICAL SECTION ADJUSTMENTS

Mechanism Parts Adjustments

For details on the adjustments and checks of mechanical section and replacements of mechanism parts, refer to the separate volume—"8 mm Video Mechanism Adjustment Manual IV A Mechanism".

2-1. OPERATING WITHOUT A CASSETTE

- 1) Refer to "2. DISASSEMBLY" and supply the power with the cabinet removed. (So that the mechanical deck can be operated.)
- 2) Connect the adjusting remote commander to the remote terminal.
- 3) Turn on the HOLD switch of the adjusting remote commander.
- 4) Close the cassette compartment without loading a cassette and complete loading.
- 5) Set data: 01 to page: 1, address: 00.
- 6) Set data: 01 to page: D, address: 02, and press the PAUSE button of the adjusting remote commander.
- 7) Set data: 04 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.

By carrying out the above procedure, the unit can be operated without loading a cassette.

Be sure to carry out "Processing after Operations" after checking the operations.

Set the data of page: D, address: 03 to the following if the sensor ineffective mode, forced VTR power supply ON mode or forced camera power supply ON mode are to be used together.

Forced VTR power supply ON mode..... 06
 Forced camera power supply ON mode 05

[Processing after Operations]

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 00 to page D, address: 02, and press the PAUSE button of the adjusting remote commander.
- 3) Set data: 00 to page: D, address: 03, and press the PAUSE button of the adjusting remote commander.
- 4) Set data: 00 to page: 1, address: 00.
- 5) Disconnect the power supply of the unit.

2-2. TAPE PATH ADJUSTMENT

1. Preparations for adjustments

- 1) Clean the tape path face (tape guide, drum, capstan shaft, pinch roller).
- 2) Connect the adjusting remote commander to the remote terminal.
- 3) Turn on the HOLD switch of the adjusting remote commander.
- 4) Select page: 1, address: 00, and set data: 01.
- 5) Select page: D, address: 02, and set data: 03.
 (Perform "Processing after operations" after completing adjustments.)
- 6) Connect the oscilloscope.
 Channel 1-Pin ③ of CN102 of VS-123 board
 External trigger-Pin ④ of CN102 of VS-123 board
 (Connect the oscilloscope via the measuring pin tool for the video section (J-6082-140-A).)
- 7) Playback the alignment tape (WR5-1NP) for tracking.
- 8) Check that the RF waveform of the oscilloscope is flat at both the entrance and the exit.
 If not flat, perform necessary adjustment according to the separate 8 mm Video Mechanical Adjustment Manual IV (A Mechanism).
- 9) Perform "Processing after operations", after completing adjustments.

CN102 of VS-123 board

1	PB CH RF
2	PB PCM RF
3	PB RF
4	RF SWP
5	RP GND
6	REC 2

[Processing after operations]

- 1) Connect the adjusting remote commander, and turn on the HOLD switch.
- 2) Select page: 1, address: 00, and set data: 01.
- 3) Select page: D, address: 02, and set data: 00.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Remove the power supply from the unit.

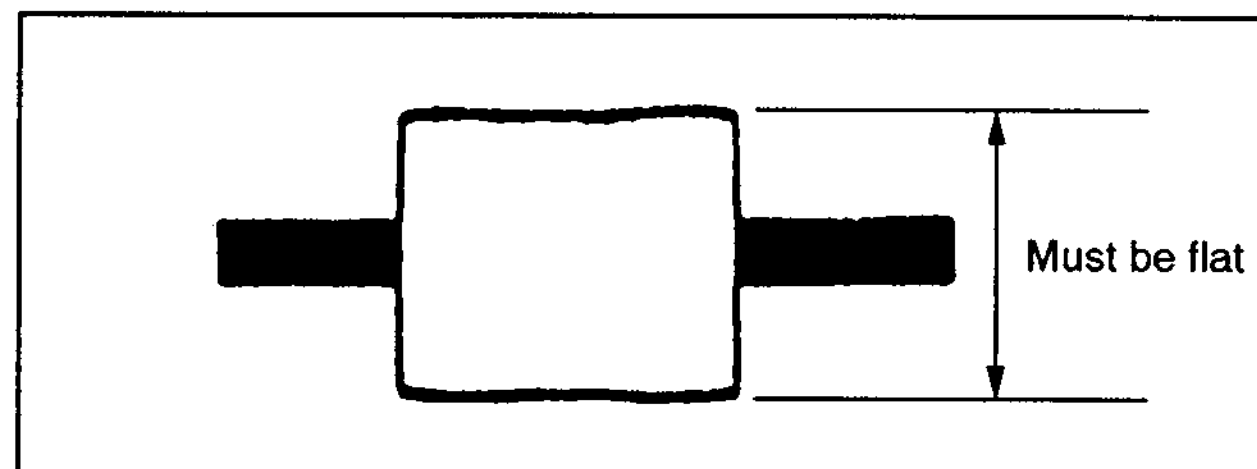


Fig. 7-2-1.

7-3. VIDEO SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 7-60.

3-1. PREPARATIONS BEFORE ADJUSTMENT

The following adjusting instruments are used for adjusting the video section.

3-1-1. Equipments to be Used

- 1) TV monitor
- 2) Oscilloscope: 2 phenomena, band 30 MHz or wider, with delay mode. (Use a 10:1 probe unless specified otherwise.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Regulated power supply
- 11) Alignment tape
 - For tracking adjustment (WR5-1NP)
Part Code: 8-967-995-02
 - For video frequency characteristics adjustment (WR5-6N)
Part Code: 8-967-995-12
 - For checking operations (WR5-4NL)^{Note 1}
Part Code: 8-967-995-51
 - (WR5-5NSP)^{Note 2}
Part Code: 8-967-995-42
- Note:** The following alignment tapes can also be used.
 - 1) WR5-3NL (8-967-995-31)
 - 2) WR5-4NSP (8-967-995-41)
- 12) Remote commander for adjustment (J-6082-053-A)
- 13) VC-159 board extension cord (42P, 0.8 mm)
Part Code: J-6082-285-A
- 14) Control switch block (FK board) extension cord (9P, 0.8 mm)
Part Code: J-6082-288-A
- 15) Control switch block (CK board) extension cord (18P, 0.8 mm)
Part Code: J-6082-289-A

3-1-2. Adjusting Precautions

- 1) The adjustment for this unit is performed using the VIDEO input (VIDEO terminal input) or the camera input. The camera input can be used for video adjustments only. Use the VIDEO input for the other adjustments.

When using the VIDEO input, set the power supply switch to "PLAYER" or set the "forcible VTR power supply ON mode" using the adjusting remote commander. (Note 1).

When using the camera input, set the power supply switch to "CAMERA" or set the "Forcible camera+VTR power supply ON mode" using the adjusting remote commander (Note 2).

After completing adjustments, be sure to exit the "forcible VTR power supply ON mode" or "forcible camera+VTR power supply ON mode" (Note 3).
- 2) The F panel block (microphone) is not used for video adjustments. Disconnect the following connector in these adjustments.
 1. CN003 of the MA-230 board (2P, 1.5 mm)
- 3) MA-230 board is required only for audio adjustments. When not using it, disconnect the following connector.
 1. CN402 of the AU-182 board (8P, 0.8 mm)
- 4) The view finder (VF board) is not used for video adjustments. Disconnect the following connector in these adjustments.
 1. CN206 of the VS-123 board (6P, 0.5 mm)
- 5) The cabinet (R) (CK board: Power supply switch, camera function switch) need not be connected if the "forcible VTR power supply ON mode" or "forcible camera+VTR power supply ON mode" is set. In this case, disconnect the following connectors.
 1. CN503 of the VS-123 board (18P, 0.8 mm)
 2. CN101 of the ZB-2 board (4P, 0.8 mm)

However, as disconnecting these connectors means disconnecting the 3V lithium power supply, data set by the user such as the date, time, and menu will be lost. After completing the adjustments, set these data again, and be sure to exit the "forcible VTR power supply ON mode" or "forcible camera+VTR power supply ON mode". (Note 3)

When connecting the cabinet (R) using the extension cord, use the following type.

 1. J-6080-289-A (18P, 0.8 mm)

6) The lens block and VC-159 board are not used for video adjustments. Disconnect the following connectors in these adjustments.

1. CN203 of the VS-123 board (42P, 0.8 mm)

Connect the following when removing the VC-159 board.

1. Connect Pin ② (REG H) and Pin ⑦ (D3.6V) of CN203 of the VS-123 board with a jumper wire.

When connecting the VC-159 board using the extension cord, use the following type.

1. J-6080-285-A (42P, 0.8 mm)

7) The audio board (AU-182 board) is required only for audio adjustments. When not using it, disconnect the following connector.

1. CN202 of the VS-123 board (24P, 0.8 mm)

8) When opening the VS-123 board, disconnect the following connectors.

1. CN502 of the VS-123 board (9P, 0.8 mm)

The VTR function keys will not work. Use the remote commander to perform operations other than EJECT.

When connecting the FK board and CN502 of VS-123 board using the extension cord, use the following type.

1. J-6080-288-A (9P, 0.8 mm)

Note 1: Setting the "forcible VTR power supply ON mode (VIDEO input mode)"

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 02 to page: D, address: 03 and press the PAUSE button of the adjusting remote commander.

By performing the above, the VTR can be operated with the cabinet (R) removed. After completing adjustments, be sure to exit the "forcible power supply ON mode".

Note 2: Setting the "forcible camera+VTR power supply ON mode (camera input mode)"

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 03 to page: D, address: 03 and press the PAUSE button of the adjusting remote commander.

By performing the above, the VTR can be operated with the cabinet (R) removed. After completing adjustments, be sure to exit the "forcible power supply ON mode".

Note 3: Exiting the "forcible power supply ON mode"

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 00 to page: D, address: 03 and press the PAUSE button of the adjusting remote commander.
- 3) Set data: 00 to page: 1, address: 00.


3-1-3. Connecting the Equipments

Connect the measuring instruments as shown in Fig. 7-3-1. according to the input terminal specifications (VIDEO input or CAMERA input), and perform the adjustments.

The input terminal is specified in the () in the signal column. Either input terminal can be used when there are no specifications.

Note 1: If the VIDEO input is used for the adjustments which specify for the CAMERA input to be used, the product specifications of the unit may not be satisfied in some cases. Be sure to perform according to the specifications.

Note 2: When adjustments are performed with the S video output terminal VTR as the signal source, the efficiencies of the unit may be affected by VTR. It is recommended that a pattern generator with a Y/C separation output terminal be used as much as possible.

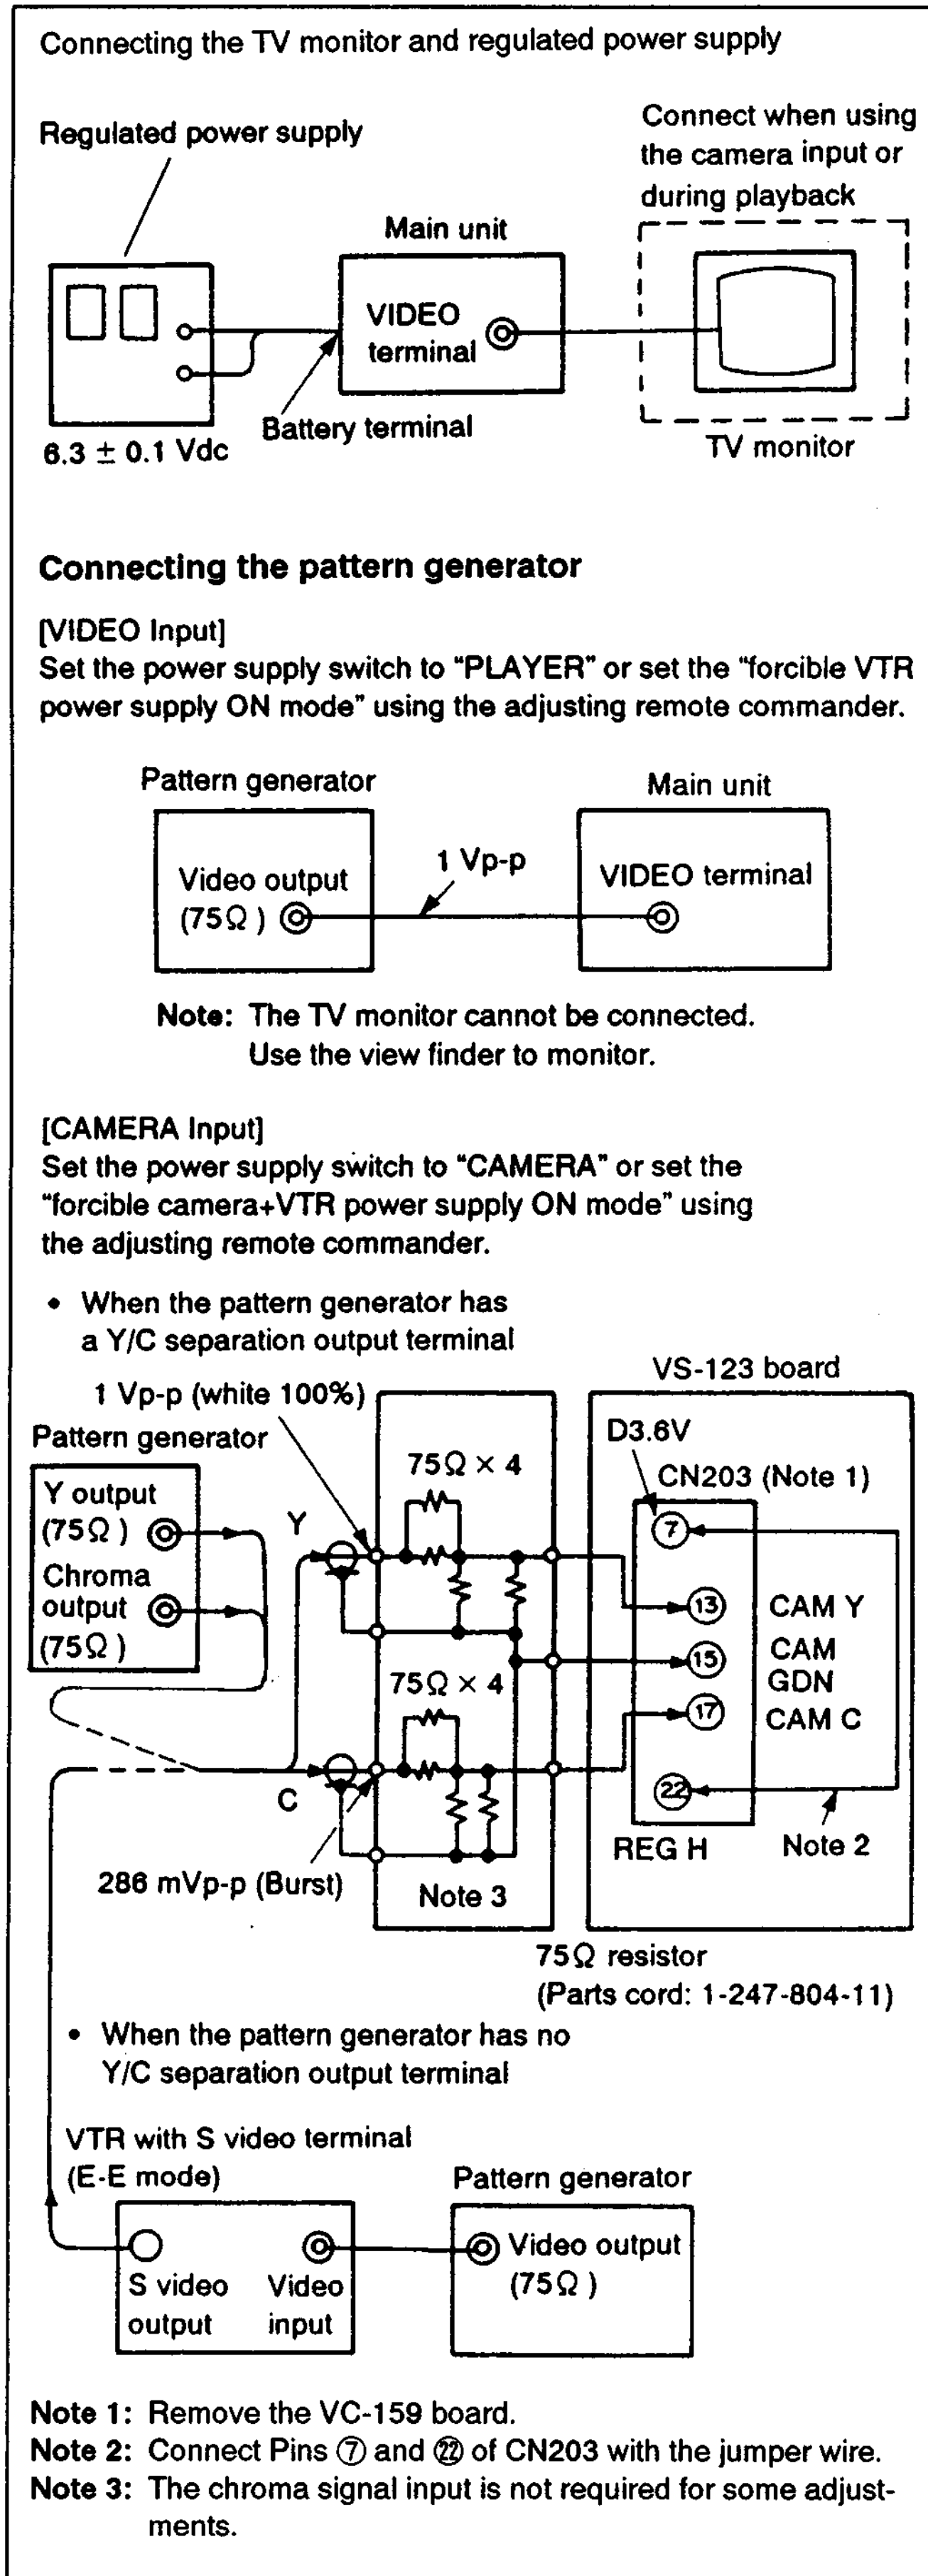

3-1-4. How to Set the REC Mode

- 1) REC key forbidden accept mode cancel
 1. Connect the adjusting remote commander to the remote terminal.
 2. Turn on the power.
 3. Turn on the HOLD switch of the adjusting remote commander.
 4. Select the page: 1 address: 00, and set the data to 01.
 5. Select the page: D address: 17, and set the data to 12.
 6. Press PAUSE button on the adjusting remote commander.

The REC key is accepted through the above procedure.

- 2) REC mode setting
 1. Turn off the HOLD switch of the adjusting remote commander.
 2. Press REC buttons of the adjusting remote commander.
 3. Perform "3. Procedure after completed the adjustment", after completing adjustment.
- 3) Procedure after completed the adjustment
Be sure to return the mode to REC key forbidden accept mode after adjustment.
 1. Connect the adjusting remoter controller.
 2. Turn on the power.
 3. Turn on HOLD switch of the adjusting remote commander.
 4. Select the page: 1 address: 00, and set the data to 01.
 5. Select the page: D address: 17, and set the data to 02.
 6. Press PAUSE button on the adjusting remote commander.
 7. Turn off the power.

Fig. 7-3-1.

3-1-5. Checking the Input Signals

Because the video signal obtained from the pattern generator is used as the adjustment signal for adjusting the VTR section, the video output signal must satisfy the given specifications.

1. CAMERA input

Connect the oscilloscope to Pin ⑬ of CN203 on VS-123 board, and check that the sync signal of the Y signal is approximately 0.143 Vp-p and that the amplitude of the video section is approximately 0.357 Vp-p. (When a VTR with the S VIDEO output terminal is used, also check that the chroma signal and burst signal have not remained.) Connect the oscilloscope to Pin ⑰ of CN203 on VS-123 board, and check that the burst signal amplitude of the chroma signal is approximately 0.143 Vp-p and flat, and that the amplitude ratio of the burst signal to the chroma signal is 0.30 : 0.66. The Y and chroma signals used in the adjustment are shown in Fig. 7-3-2.

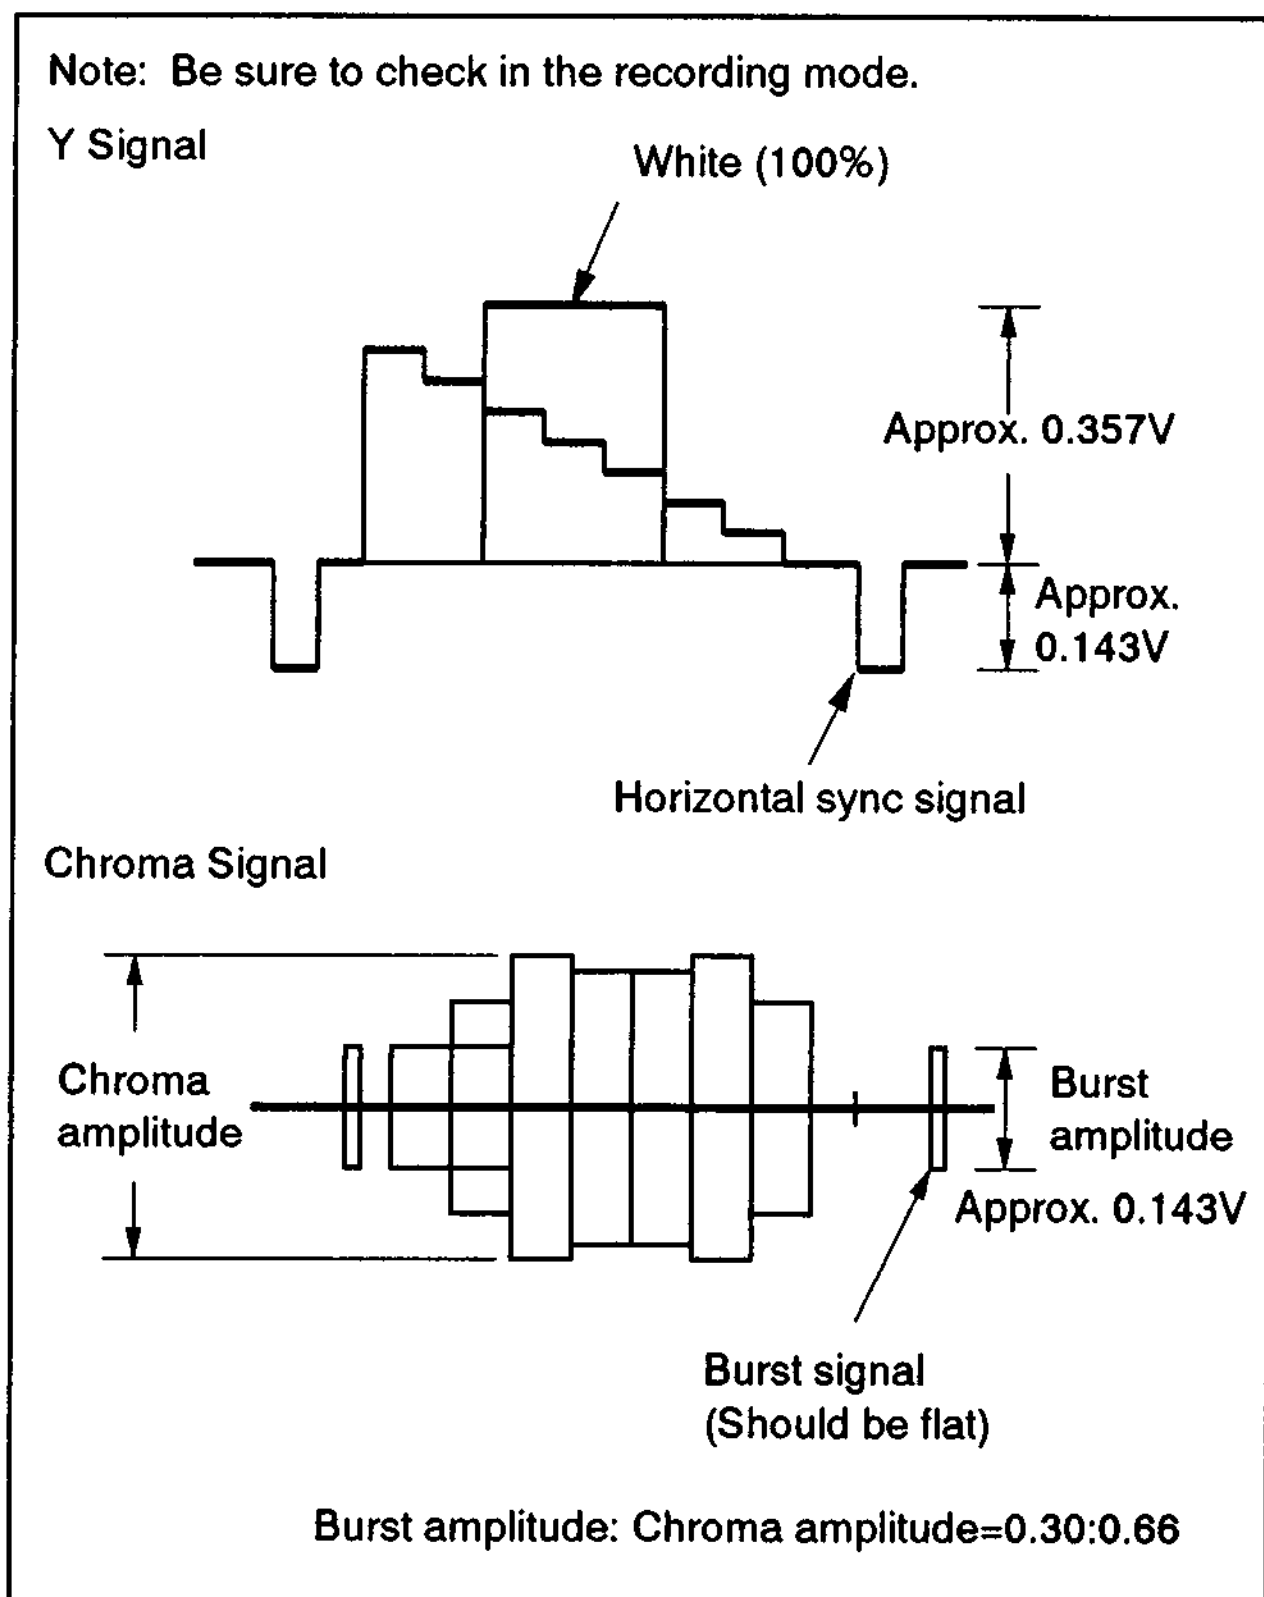


Fig. 7-3-2. Color bar signal of pattern generator

2. VIDEO input

Connect the oscilloscope to the video terminal, and check that the sync signal amplitude of the video signal is approximately 0.286V, the amplitude of the video section is approximately 0.714V, the amplitude of the burst signal is approximately 0.286V and flat, and that the level ratio of the burst signal to the "red" signal is 0.30 : 0.66.

The video signal (color bar) used for adjusting the VTR section is shown in Fig. 7-3-3.

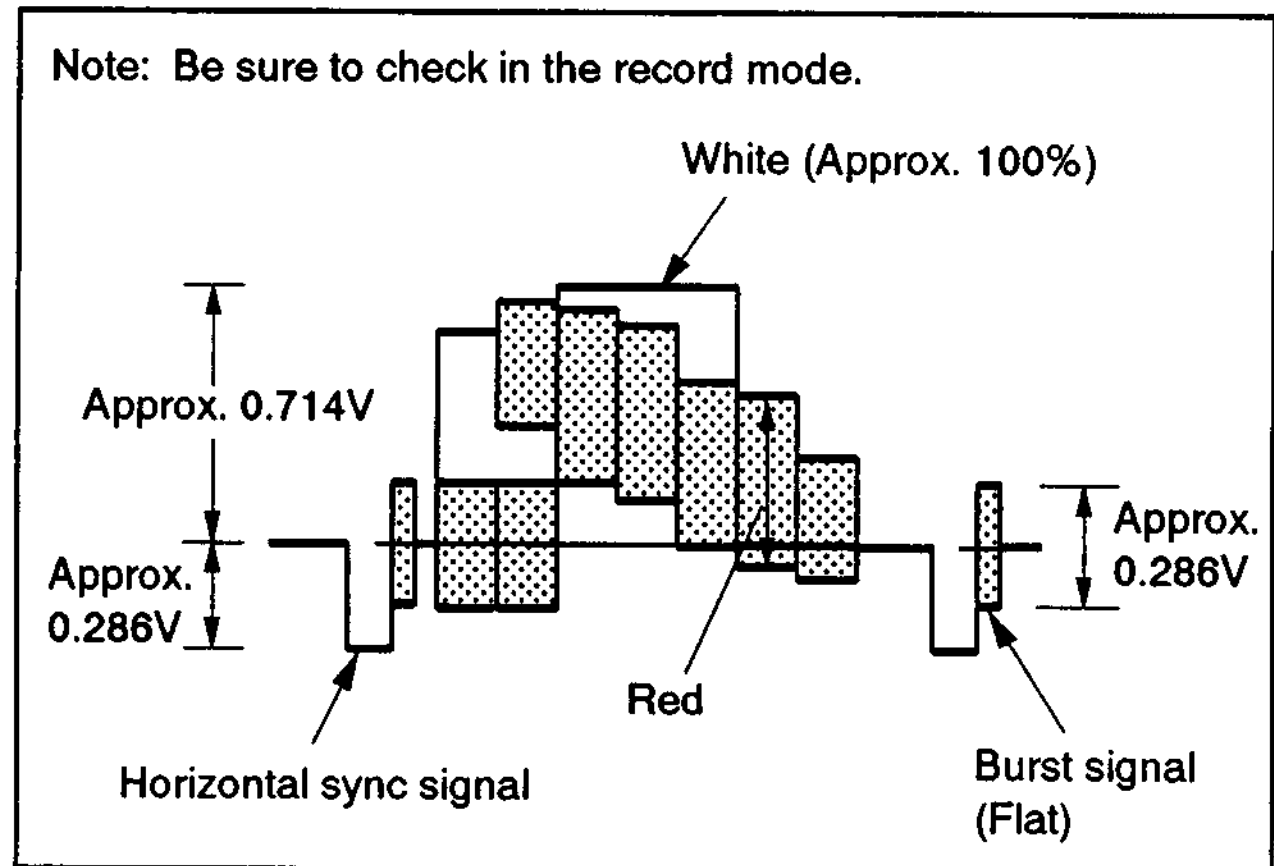


Fig. 7-3-3. Color Bar Signal of Pattern Generator

3-1-6. Alignment Tape

The following table lists alignment tapes which are available. Use the tape specified in the signal column for each adjustment.

If the type of tape to be used for checking operations is not specified, use whichever type.

Name	Recording mode	Tape type	Tape speed	Usage
Tracking WR5-1NP	Normal	MP	SP	Tape path adjustment Switching position adjustment
Video frequency characteristics WR5-6N	Normal	MP	SP	Frequency characteristics adjustment
Operation check (SP mode) WR5-5NSP	Normal	MP	SP	Checking operations
Operation check (LP mode) WR5-4NL	Normal	MP	LP	

Tape type

- MP..... Particle type metal tape
- ME..... Evaporated type metal tape

Table 7-3-1.

Fig. 7-3-4. shows the 75% color bar signals recorded on the alignment tape.

Note: Measure using the video output terminal (Terminated at 75 Ω)

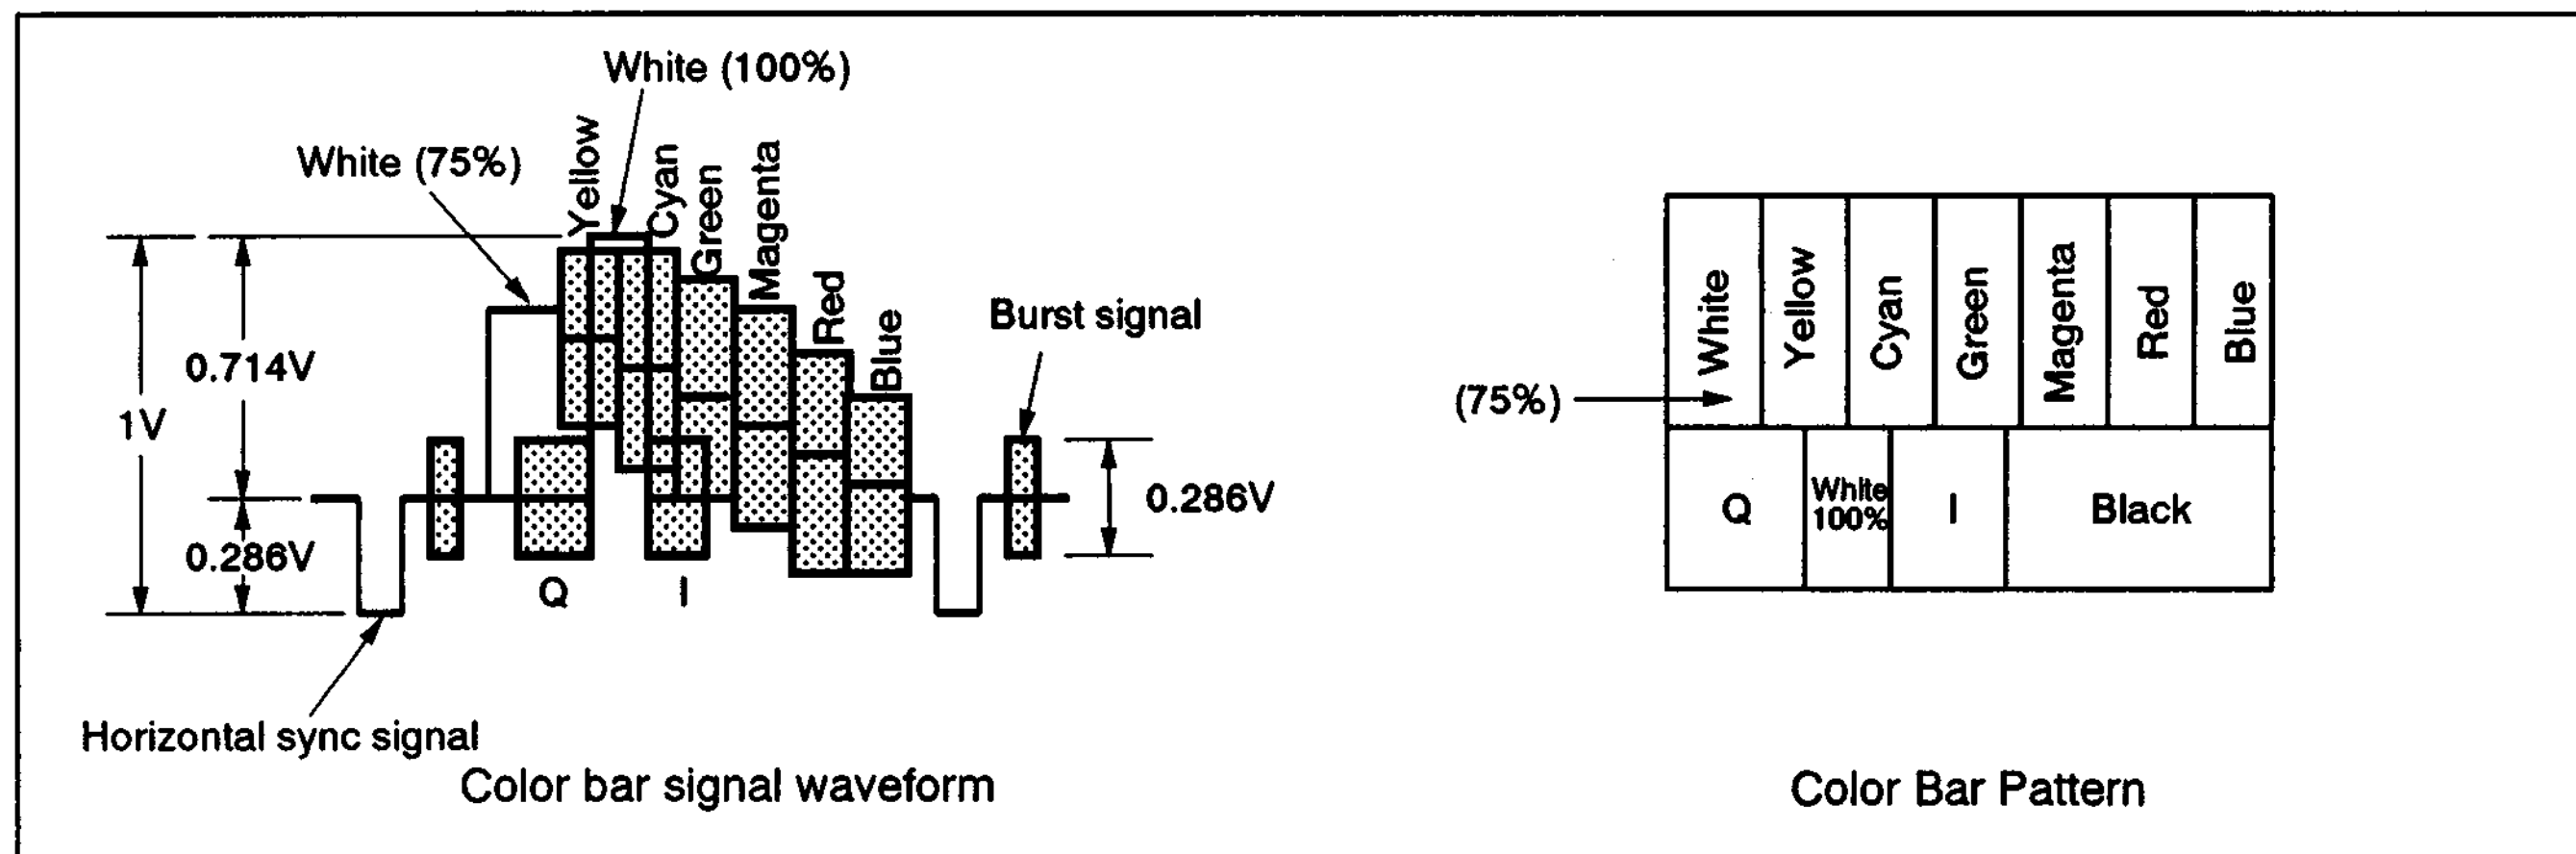


Fig. 7-3-4. Color Bar Signals of the Alignment Tape

3-1-7. Output Level and Impedance

- AV output Mini jack
- Video output Phono-jack, 1 Vp-p, 75Ω , unbalanced, sync negative
- Audio output Phono-jack, -7.5 dBs, (at load impedance 47 kΩ) impedance less than 2.2 kΩ

3-1-8. Service Mode

Note: After the completion of the all adjustments, cancel the service mode by either of the following ways.

- 1) Unplug the main power supply and remove the lithium battery. (In this case, date and time and menu setting have been set by users are canceled. Perform resetting.)
- 2) Return data of the address: 00 on page: 1 to 00. And when data on page: 2 is changed, return the data to the original condition.

1. Test mode setting

Set/release each test mode. Set data: 01 to page: 1, address: 00, before setting the data.

Page D	Address 02
--------	------------

Data	Function
00	Normal
01	Test mode 1 Various emergency prohibitions and releases Drum, capstan, loading motor, reel, tape top and end, DEW SP/LP automatic discrimination prohibition, manual switching, 5 minutes pause release prohibition Power off prohibition/release by battery end

Page D	Address 03
--------	------------

Data	Function
00	Normal
01	Camera power ON
02	VTR power ON
03	Camera + VTR power ON

- * For page D, the data set will be recorded in the nonvolatile memory by pressing the PAUSE button on the adjusting remote commander. Take note that, in this case, the test mode will not be released even if the main power has been turned off (6.3 Vdc).
- * Be sure to return this address data to 00 after completing adjustments/repairs and press the PAUSE button of the adjusting remote commander.

2. Emergency code

Fault (error) symptoms can be checked.

Page D	Address E4
--------	------------

Last emergency code

.....Last error code generated (This data will be renewed each time an error occurs.)

Page D	Address E8
--------	------------

2nd emergency code

.....2nd error code generated

Page D	Address EC
--------	------------

First emergency code

.....First error code generated

- * Be sure to rewrite the data of addresses E4, E8 and EC to 00 after repairs/adjustments.
- * When rewriting the data, be sure to press the PAUSE button of the remote commander after setting the data.

Code	Error Condition
00	No error
01	Loading motor error
02	Reel error during unloading
03	Reel errors at other times
04	Capstan error
05	FG error during drum start up
06	PG error during drum start up
07	FG error during normal drum conditions
08	PG error during normal drum conditions
09	Phase error during normal drum conditions

3. Emergency mode

The operation mode can be checked during faults.

Page D	Address E5
--------	------------

Last emergency mode

.....The operation mode when the last error is generated
(This data will be renewed each time an error occurs.)

Page D	Address E9
--------	------------

2nd emergency mode

.....The operation mode when the 2nd error is generated

Page D	Address ED
--------	------------

First emergency mode

.....The operation mode when the first error is generated


- * Be sure to rewrite the data of addresses E5, E9 and ED to 00 after repairs/adjustments.
- * When rewriting the data, be sure to press the PAUSE button of the adjusting remote commander after setting the data.

Code	Error Conditions
00	BEFOR INITIALIZE
01	EJECTED
02	NORMAL STOP
03	FF
04	NORMAL REC
06	NORMAL PB
07	PB PAUSE
12	LOADING
14	REC PAUSE
26	X1
27	1/5 SLOW
31	UNLOADING
46	CUE
56	REVIEW
62	STOP TAPE END
66	X2
67	FRAME
72	STOP TAPE TOP
83	REWIND
85	REC REVIEW (+)
95	REC REVIEW (-)
97	-PB PAUSE
A2	EMERGENCY LOADING
A5	EDIT SEARCH (+)
B1	EMERGENCY UNLOADING
B2	STOP EMERGENCY 1
B5	EDIT SEARCH (-)
C2	STOP EMERGENCY 2
E2	STOP NO CASSETTE
F5	EDIT PAUSE

4. Bit value discrimination

Bit values must be discriminated using the display data of the adjusting remote commander for the following items. Use the table below to discriminate if the bit value is "1" or "0".

Adjusting remote commander display

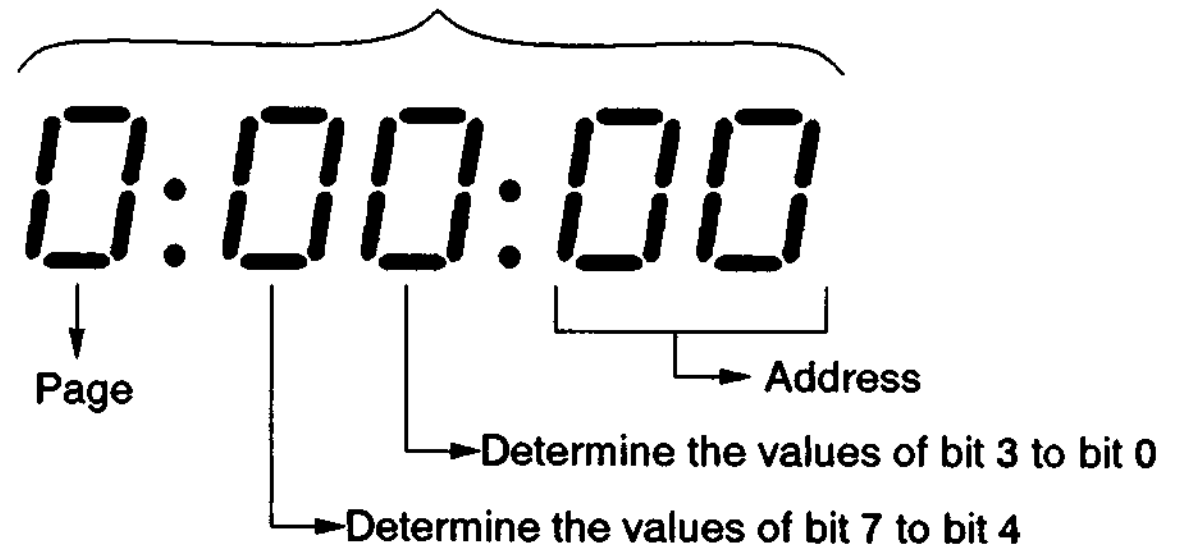

Remote controller display	Bit value			
	bit 3 or bit 7	bit 2 or bit 6	bit 1 or bit 5	bit 0 or bit 4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
Ⓐ → 8	1	0	0	0
9	1	0	0	1
A (A)	1	0	1	0
B (b)	1	0	1	1
C (c)	1	1	0	0
D (d)	1	1	0	1
Ⓑ → E (E)	1	1	1	0
F (F)	1	1	1	1

(Example) If the remote commander display data is "8E", bit values from bit7 to bit4 can be discriminated from column Ⓐ, and those from bit3 to bit0 from column Ⓑ.

5. Battery voltage check

Page 2	Address 47
--------	------------

Display Data	Battery Voltage
F0	Approx. 10.6 Vdc
E0	Approx. 9.9 Vdc
D0	Approx. 9.2 Vdc
C0	Approx. 8.5 Vdc
B0	Approx. 7.8 Vdc
A0	Approx. 7.1 Vdc
90	Approx. 6.4 Vdc
80	Approx. 5.7 Vdc
70	Approx. 5.0 Vdc

Using method:

Order	Page	Address	Data	Procedure
1	2	00	01	Preparation
2	2	47		The battery voltage can be discriminated by the display data.

* Voltage measurement accuracy is approx. $\pm 10\%$.

6. Mechanism controller input/output check

Page 2	Address 83
--------	------------

Bit	IN/OUT Signal	Condition
0		
1	E/L DET	"1"=Hi8, "0"=Normal
2	SP/LP DET	"1"=SP, "0"=LP
3	CLOG DET	"1"=Clog detected, "0"=Others
4	REC PROOF	"1"=Recording prohibited, "0"=Recording possible
5	TAPE PREEND	"1"=Tape preend, "0"=Others
6	DEW DET	"0"=Condensation occurred, "1"=Others
7	CASSETTE IN	"0"=No cassette

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Preparation
2	2	83		The condition of each input signal can be discriminated by differentiating the bit value of the display data.

Page 2	Address 84
--------	------------

Bit	IN/OUT Signal	Condition
0	VA PB MODE	"1"=PB, "0"=REC
1	RP PB MODE	"1"=PB, "0"=REC
2	JOG	"1"=Variable speed playback, "0"=Others
3	ME/MP SW	"1"=ME tape, "0"=Other tape
4	Hi8 MP SW	"1"=Hi8 MP tape, "0"=Other tape
5	SERVO OPERATION	"1"=SP mode, "0"=LP mode
6	VIDEO MUTE	"1"=Mute, "0"=Video output
7	AUDIO MUTE	"1"=Mute, "0"=Audio output

Using method:

Order	Page	Address	Data	Procedure
1	2	00	00	Preparation
2	2	84		The condition of each signal can be discriminated by differentiating the bit value of the display data.

7. Mode switch and CC DOWN switch check


The mode switch position (mechanical section condition) can be checked.

Page 3	Address E9
--------	------------

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
MSW 2	MSW 1	MSW 0	CC DOWN				

				DATA	POSITION	FUNCTION
0	0	0	0/1	E*/F*	BL	Interval of each position
0	1	1	1	7*	END	FULL END processing (T side lock removal)
0	0	1	1	3*	EJECT	Cassette compartment ejection
1	0	1	1	B*	USE	EJECTED (Unskate end)
0	0	1	0	2*	LOAD	LOADING (Skate in)
1	0	0	0	8*	READY	NORMAL STOP position
1	1	0	0	C*	TURN	OFF of pinch roller only with STOP ↔ FF/REW (oscillating position)
0	1	0	0	4*	RP	PB, REC, RVS, REV, CUE
0	0	0	0	0*	FF	FF/REW

*: Don't care

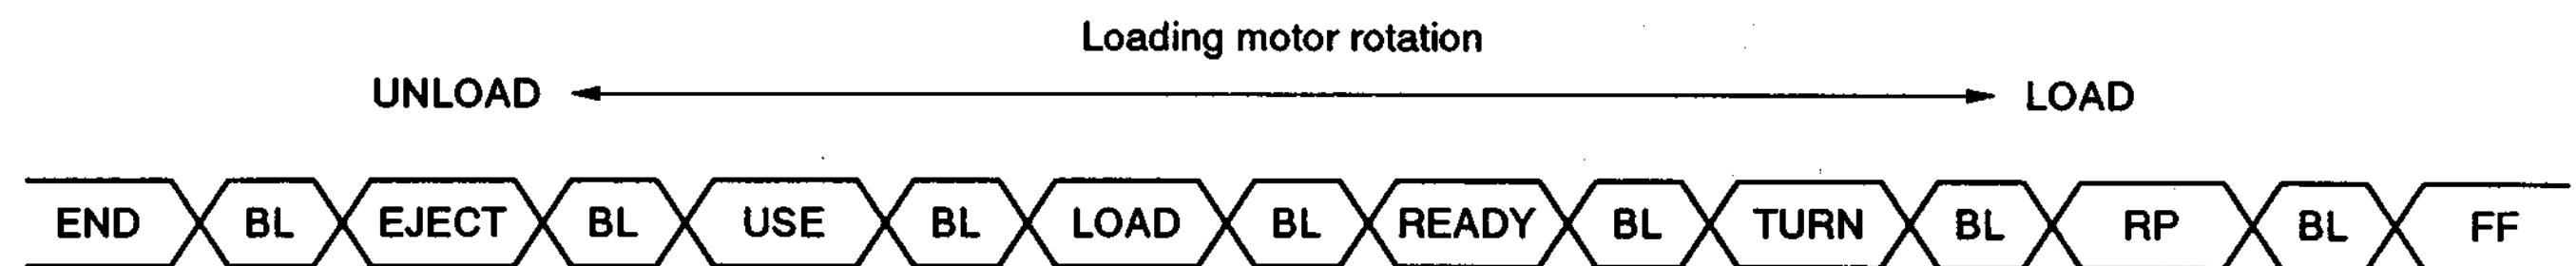


Using method:

Order	Page	Address	Data	Procedure
1	3	00	00	Preparation
2	3	E9		The mode switch position and CC DOWN switch condition can be discriminated by the display data.

8. Tape top/end sensor check

Page 3	Address 0A
--------	------------

Display Data	Tape Top/End Sensor Condition
00	Tape present (Middle of tape)
01	Tape end
10	Tape top
11	No tape

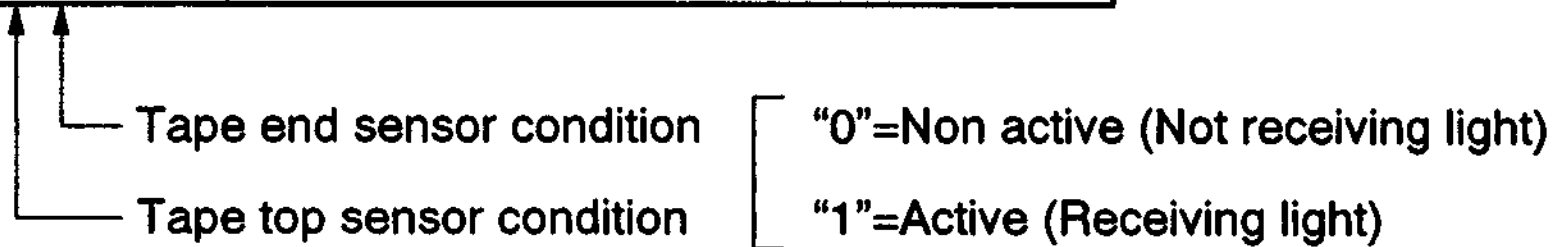

Using method:

Order	Page	Address	Data	Procedure
1	3	00	02	Preparation
2	3	0E	10	Preparation
3	3	0A		The condition of the tape top/end sensor can be discriminated by the display data.

9. Version of mechanical control microprocessor

Page 3	Address 0B
--------	------------

Display Data	Microprocessor version
01	Version 1

Using method:

Order	Page	Address	Data	Procedure
1	3	00	02	Preparation
2	3	0B		The microprocessor version can be discriminated by the display data.

10. Page D address list

Note 1: The adjustment data initial value is the data input before performing video section adjustments (Page D) if the Page D data has been erased due to some reason.

Note 2: The data written in the adjustment data memo column are fixed.

After adjusting, check that these data have not been rewritten by mistake.

Note 3: In some case, data have been input to the page D address 91 to D3 and F0 to FF. This has no relation to the adjustment.

Address	Adjustment data	
	Initial value	Memo column
00		
01		
02	00	00
03	00	00
04	80	
05	0B	
06	66	
07	7F	
08	84	
09	8A	
0A	8E	
0B	00	00
0C		
0D		
0E		
0F		
10	00	00
11	00	00
12	00	00
13	00	00
14	95	95
15	77	77
16	01	01
17	02	02
18	05	05
19	40	40
1A	48	48
1B	20	20
1C	00	00
1D	00	00
1E		
1F		

Table 7-3-2. (1)

Address	Adjustment data	
	Initial value	Memo column
20		
21		
22		
23	00	00
24	00	00
25	00	00
26	14	14
27	14	14
28	64	64
29	64	64
2A	6E	6E
2B	6E	6E
2C	64	64
2D	64	64
2E	6E	6E
2F	6E	6E
30	DC	DC
31	DC	DC
32	DC	
33	DC	
34	DC	DC
35	DC	DC
36	DC	
37	DC	
38	E4	
39	EB	
3A	E4	
3B	EB	
3C		
3D		
3E		
3F		
40	A9	
41	A9	
42	A9	
43	A9	
44	A9	
45	A9	
46	A9	
47	A9	
48		
49		

Table 7-3-2. (2)

Address	Adjustment data	
	Initial value	Memo column
4A		
4B		
4C		
4D		
4E		
4F		
50	A2	A2
51	A1	A1
52		
53		
54	00	00
55	00	00
56	90	90
57	00	00
58	00	00
59	75	75
5A	E6	E6
5B	E6	E6
5C	E6	E6
5D	E6	E6
5E	E6	
5F	E2	E2
60	E2	E2
61	E2	E2
62	E2	E2
63	E2	
64		
65		
66		
67		
68		
69	E6	E6
6A	E6	E6
6B	E6	E6
6C	E6	E6
6D	E6	E6
6E		
6F		
70	8E	
71	95	
72	B0	B0
73	B0	B0

Table 7-3-2. (3)

Address	Adjustment data	
	Initial value	Memo column
74	FF	FF
75	BB	
76	FF	FF
77	97	
78	00	00
79	00	00
7A	86	86
7B	86	86
7C	00	00
7D	00	00
7E	00	00
7F	00	00
80	99	
81	99	
82	A5	
83	A9	
84		
85	69	69
86	00	00
87	69	
88	B5	B5
89	B5	B5
8A	00	00
8B	48	48
8C	AF	
8D	AF	
8E	AF	
8F	AF	
90	60	60
91 to D3		
D4		
D5		
D6		
D7		
D8		
D9		
DA		
DB		
DC		
DD		
DE		
DF		

Table 7-3-2. (4)

Address	Adjustment data	
	Initial value	Memo column
E0		
E1		
E2		
E3		
E4	00	
E5	00	
E6	00	
E7	00	
E8	00	
E9	00	
EA	00	
EB	00	
EC	00	
ED	00	
EE	00	
EF	00	

Table 7-3-2. (5)

3-2. POWER SYSTEM ADJUSTMENTS

1. Power Voltage Check (DD-76 board)

Mode	Camera record
Subject	Arbitrary
Measuring Instrument	Digital voltmeter
D5V check	
Measurement Point	Pin ⑳ of CN901
Specified Value	4.9 ± 0.1 Vdc
EVF5V check	
Measurement Point	Pin ㉑ of CN901
Specified Value	4.9 ± 0.1 Vdc
VID 5V check	
Measurement Point	Pins ㉒ and ㉓ of CN901
Specified Value	4.9 ± 0.1 Vdc
AU 5V check	
Measurement Point	Pin ㉔ of CN901
Specified Value	4.9 ± 0.1 Vdc
RP 5V check	
Measurement Point	Pin ㉕ of CN901
Specified Value	4.9 ± 0.1 Vdc
CAM5V check	
Measurement Point	Pins ㉖ and ㉗ of CN901
Specified Value	4.85 ± 0.1 Vdc
SS 3.6V check	
Measurement Point	Pin ㉘ of CN901
Specified Value	3.6 ± 0.1 Vdc
D3.6V check	
Measurement Point	Pins ㉙ and ㉚ of CN901
Specified Value	3.6 ± 0.1 Vdc
CAM 15V check	
Measurement Point	Pin ㉛ of CN901
Specified Value	15 ± 0.3 Vdc
CAM -8.5V check	
Measurement Point	Pin ㉜ of CN901
Specified Value	$-8.5^{+0.25}_{-0.4}$ Vdc
MT 5V check	
Measurement Point	Pins ㉝, ㉞ and ㉟ of CN901
Specified Value	5.0 ± 0.1 Vdc

3-3. SYSTEM CONTROL SYSTEM ADJUSTMENTS

1. Page D Initial Value Input

If the page D data has been erased due to some cause, input the page D initial value before performing adjustments. For details on the initial value, refer to "Page D address list" in "3-1-8. Service Mode".

Mode	E-E
Signal	Arbitrary
Adjustment Page	D
Adjustment Address	00 to 90

Input method:

- 1) Set data: 01 to page: 1, address: 01.
- 2) Select page D, and input the initial value to each address. (After setting the data (initial value), be sure to press the PAUSE button of the adjusting remote commander before changing the address.)

2. Battery End Adjustment

Set the battery end voltage.

If the voltage is incorrect, the life of the battery will shorten.

The image at the battery end will also be rough.

Mode	Camera record
Signal	Arbitrary
Measurement Point	LCD display of the adjusting remote control unit
Measuring Instrument	LCD display of the adjusting remote control unit
Adjustment Page	D
Specified Value	06, 07, 08, 09, 0A

Connection:

- 1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 7-3-5.

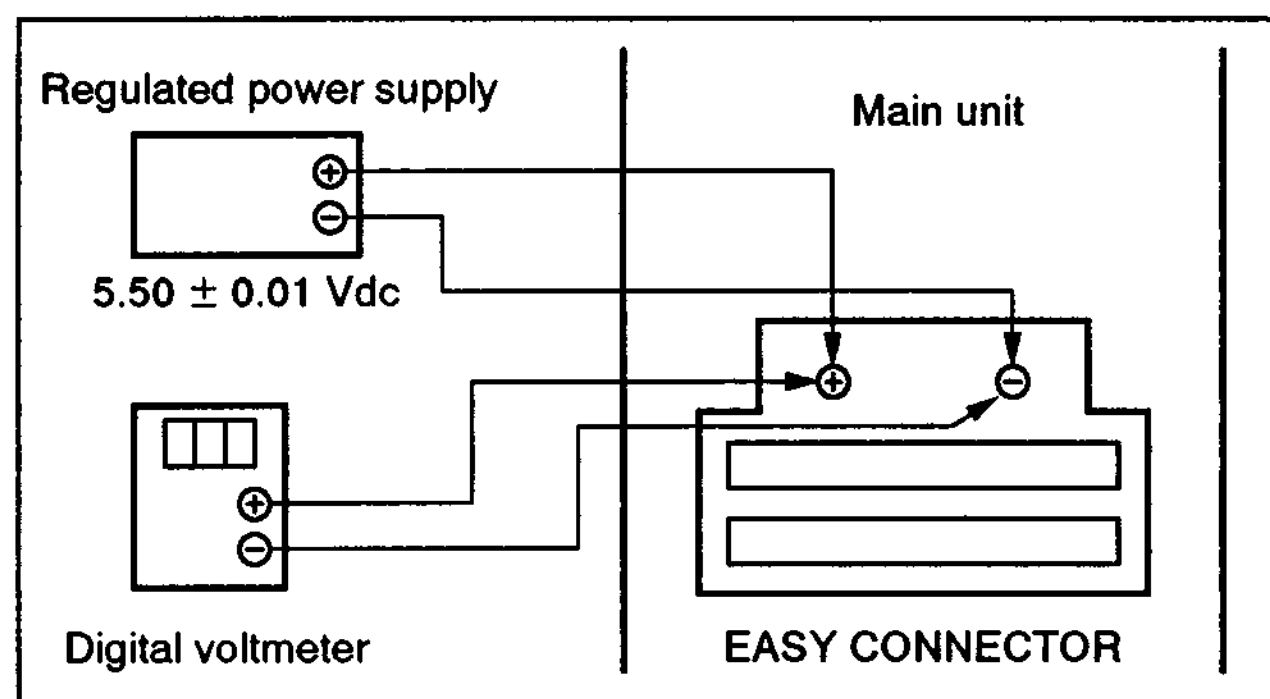


Fig. 7-3-5.

Adjusting method:

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is 6.3 ± 0.1 Vdc.
- 2) Set data: 01 to page: 1, address: 00.
- 3) Decrease the output voltage of the regulated power supply so that the digital voltmeter display is 5.50 ± 0.01 Vdc.
- 4) Set data: 01 to page: 2, address: 00.
- 5) Select page: 2, address: 49, read the adjusting remote commander display data, and set to D6.
- 6) Set data D6 to page: D, address: 06, and press the PAUSE button of the adjusting remote commander.
- 7) Convert D6 to decimal notation, and obtain D6'. (Refer to Table 7-1-3. "Hexadecimal notation–decimal notation conversion table")
- 8) Calculate D7', D8', D9' and DA' using following equations (decimal notation calculation).

$$D7' = D6' + 3$$

$$D8' = D6' + 8$$

$$D9' = D6' + 14$$

$$DA' = D6' + 18$$
- 9) Convert D7', D8', D9' and DA' to hexadecimal notation, and obtain D7, D8, D9 and DA.
- 10) Set data: D7' to page: D, address: 07, and press the PAUSE button of the adjusting remote commander.
- 11) Set data: D8' to page: D, address: 08, and press the PAUSE button.
- 12) Set data: D9' to page: D, address: 09, and press the PAUSE button.
- 13) Set data: DA to page: D, address: 0A, and press the PAUSE button.
- 14) Perform "Battery Down Check".

3. Battery Down Check

Mode	Camera record
Subject	Arbitrary

Connection

- 1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 7-3-5.

Checking method:

Remove the adjusting remote commander, and perform the following check. If the check is not satisfied, perform from the beginning again.

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display becomes 6.3 ± 0.1 Vdc.
- 2) Set to the camera recording mode.
- 3) Check that the \square mark on the EVF (viewfinder) display is not lighted up. (TALLY lamp lights up).
- 4) Decrease the the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.53 ± 0.01 Vdc.
- 5) Check that the \square mark on the EVF display and the TALLY lamp blinks every second.
- 6) Decrease the the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.47 ± 0.01 Vdc.
- 7) Check that the \square mark on the EVF display and the TALLY lamp are blinking faster.

3-4. SERVO SYSTEM ADJUSTMENTS

1. Switching Position Adjustment (VS-123 board)

If deviated in this case causes switching noise or jitter on the played back screen.

Mode	Playback
Signal	Alignment tape: For tracking adjustment (WR5-1NP)
Measurement Point	CH1: Pin ④ of CN102 (RF SWP) CH2: Pin ③ of CN102 (PB RF)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	04, 05
Specified Value	$t_1=0 \pm 10 \mu\text{sec}$

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Set data: 0B to page: D, address: 05.
- 3) Change the data of page: D, address: 05 and minimize "t1".
(Coarse adjustment)
- 4) Change the data of page: D, address: 04, and adjust so that the switching position (t1) becomes the specified value.
(Fine adjustment)
- 5) Press the PAUSE button of the adjusting remote command.

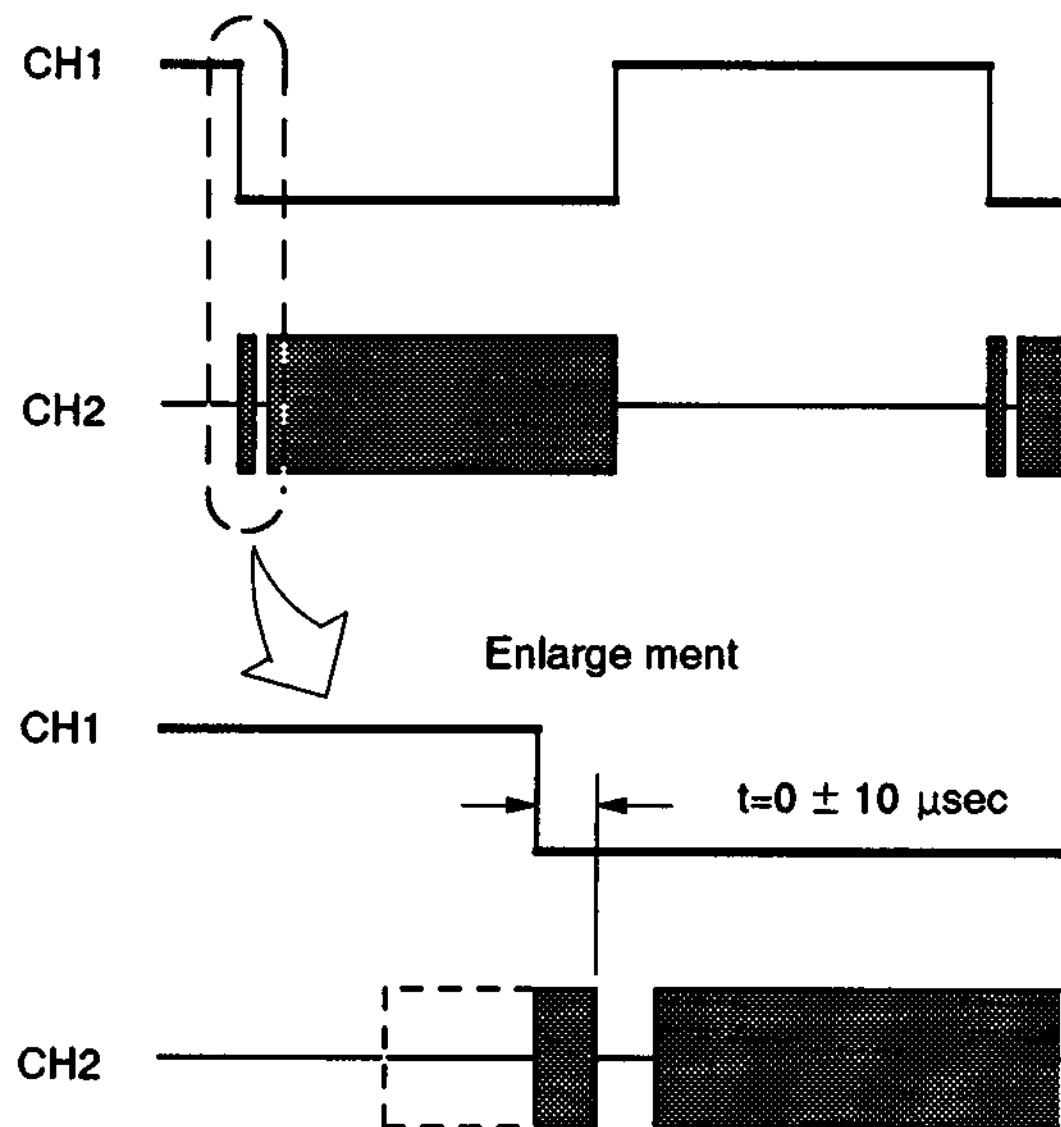


Fig. 7-3-6.

3-5. VIDEO ADJUSTMENTS

The adjustments of the video system must be performed according to the following adjustment procedure.

The color video signal supplied from the pattern generator is used as the video input signal for adjusting the video system in recording mode. Check that the sync signal and the color burst signal satisfy the specification specified during the adjustment set-up shown in Figs. 7-3-2. and 7-3-3.

[Adjusting procedure]

- 1) Playback frequency characteristics adjustment
- 2) Flying erase check
- 3) VXO oscillation frequency check
- 4) SYNC AGC level adjustment
- 5) Comb filter adjustment
- 6) Emphasis input level adjustment
- 7) DE EMPH level adjustment
- 8) PB Y out level adjustment
- 9) Y FM carrier frequency adjustment
- 10) Y FM deviation adjustment
- 11) Chroma emphasis adjustment 1
- 12) Chroma emphasis adjustment 2
- 13) Comb filter fine adjustment
- 14) REC Y level adjustment
- 15) REC L adjustment
- 16) REC CHROMA level adjustment
- 17) REC ATF level check

1. Playback Frequency Characteristic Adjustment (VS-123 board)

Eliminate the differences in the head characteristics of each channel. If there are differences, flickers and over modulation noises will be produced.

Note 1: The adjusting element for CH2 is shown in parentheses [].

Mode	Playback
Signal	Alignment tape: For frequency characteristic adjustment (WR5-6N)
Measurement Point	CH1: Pin ③ of CN102 (PB RF) EXT TRIG: Pin ④ of CN102 (RF SWP)
Measuring Instrument	Oscilloscope TRIG SLOPE: +, [-]
Adjustment Page	D
Adjustment Address	5E, [63]
Specified Value	3.58 MHz level: 5.5 MHz level= 4: (3 ± 0.3)

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of address: 5E [63] of page D, and adjust the level ratio of 3.58 MHz and 5.5 MHz of PB RF output waveform to the specified value.

Note 2: After each address adjustment, be sure to press the PAUSE button of the adjusting remote commander and memorize the data.

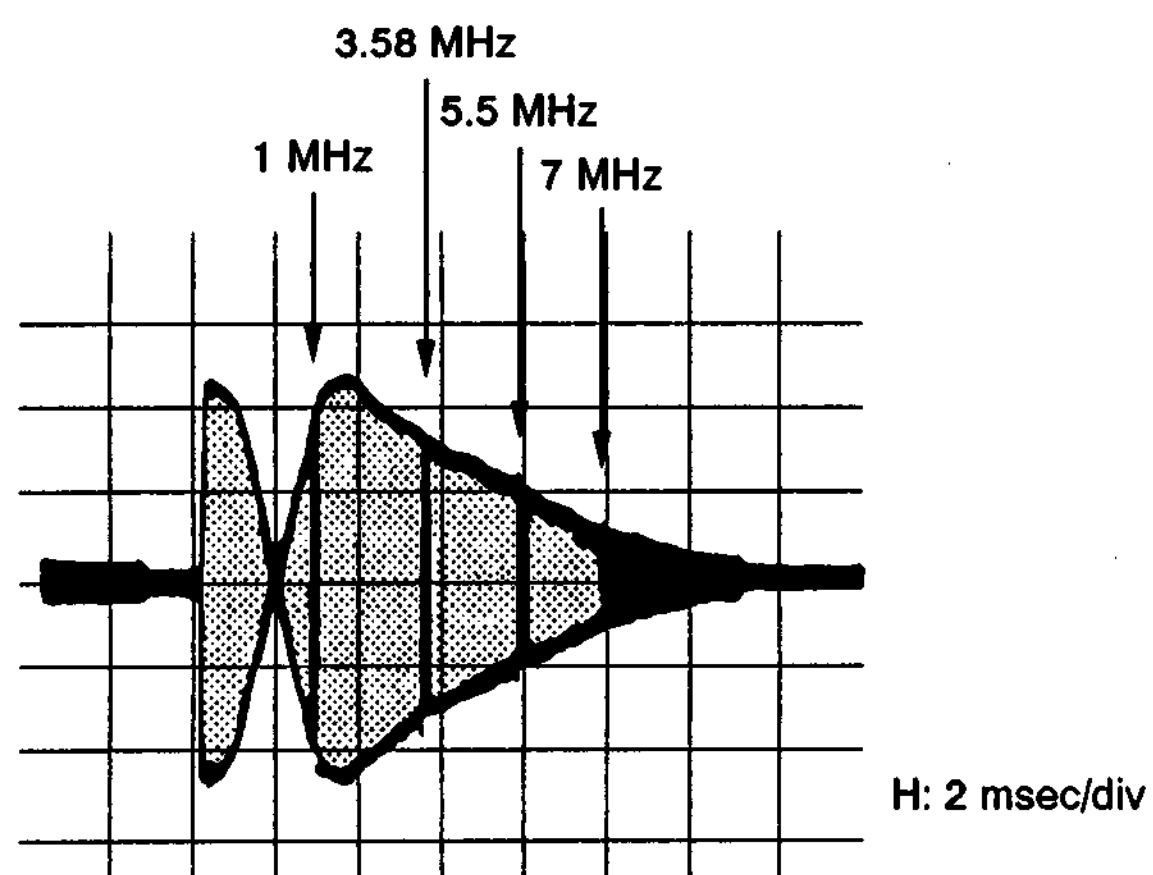


Fig. 7-3-7.

2. Flying Erase Check (VS-123 board)

Mode	Camera record
Signal	Arbitrary
Measurement Point	Pin ⑫ of CN101 (FE (X))
Measuring Instrument	Oscilloscope and frequency counter
Specified Value	Frequency: 8.0 ± 0.5 MHz Voltage: 6.0 ± 1 Vp-p (ME tape) Above 7.0 Vp-p (MP tape)

Checking method:

- 1) Check that the oscillation frequency and the oscillation voltage satisfies the specified value.

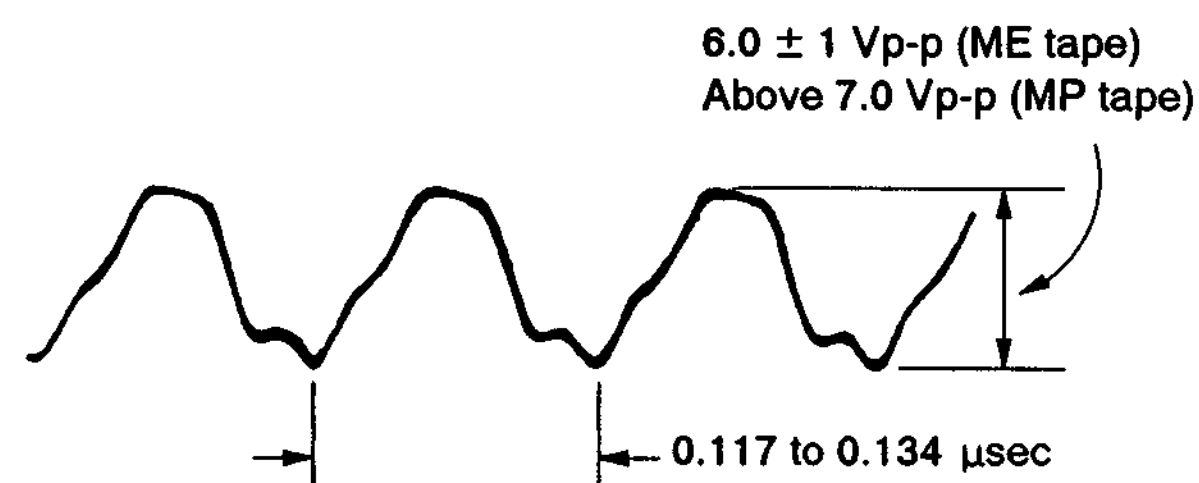


Fig. 7-3-8.

3. VXO Oscillation Frequency Check (VS-123 board)

Mode	Playback
Signal	Color bar
Measurement Point	Pin ⑥ of IC201 (CL227)
Measuring Instrument	Frequency counter
Specified Value	3579545 ± 50 Hz

Note: Connect the frequency counter via a high impedance (approximately $10 \text{ M}\Omega$) and low capacity (below 10 pF) buffer.

Adjusting method:

- 1) Check that the oscillation frequency of pin ⑥ of IC201 is 3579545 ± 50 Hz.

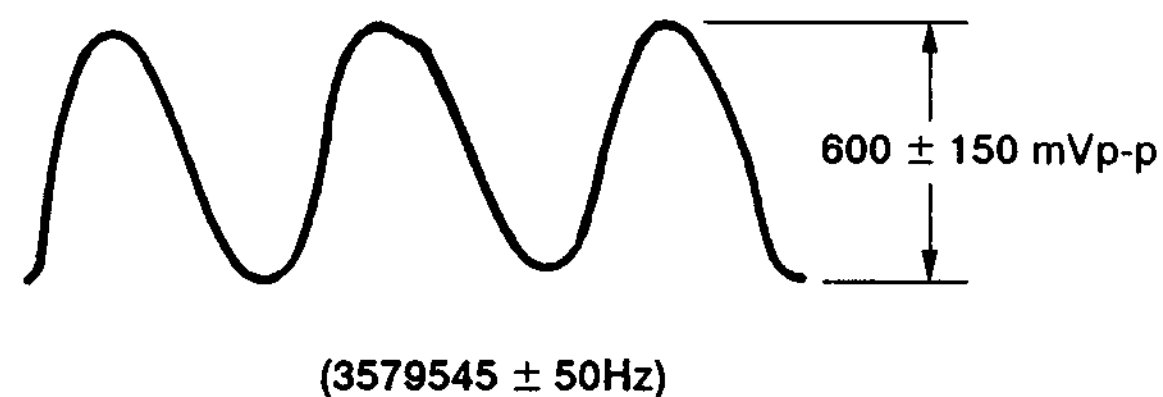


Fig. 7-3-9.

4. SYNC AGC Level Adjustment (VS-123 board)

Adjust so that the Y signal level to be recorded becomes consistent. If it is not consistent, the camera EE image and OA image will be brighter or darker than normal.

Mode	Camera record
Signal	Color bar (Camera input) Note 1
Measurement Point	Pin ⑥ of CN201 (VIDEO I/O) Note 2 (CL298)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	70
Specified Value	$A=1.00 \pm 0.025V$

Note 1: The chroma signal input is not required.

Note 2: Terminate the video out terminal at 75Ω .
 75Ω resistor (Part code: 1-247-804-11)

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 70, and adjust so that the Y signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote command.


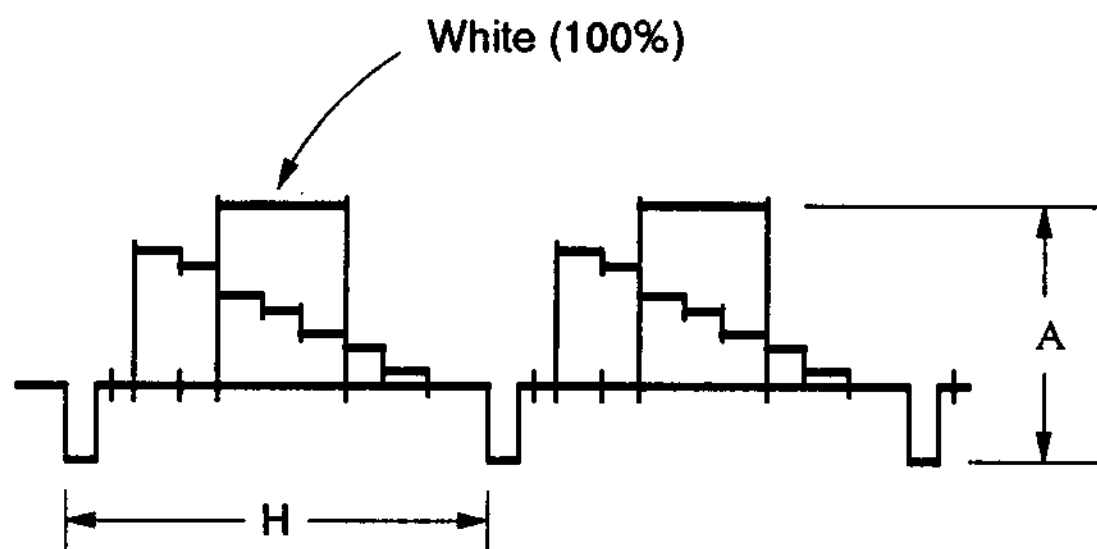


Fig. 7-3-10.

5. Comb Filter Adjustment (VS-123 board)

Mode	Record
Signal	Color bar (Note 1)
Measurement Point	Pin ⑭ of IC201 (Y COMB OUT)
Measuring Instrument	Oscilloscope
Adjusting Element	RV202 (PHASE)
Adjustment Page	D
Adjustment Address	71
Specified Value	Residual chroma component (A) is minimum.

Note 1: Connect the pattern generator as shown in the following figure.

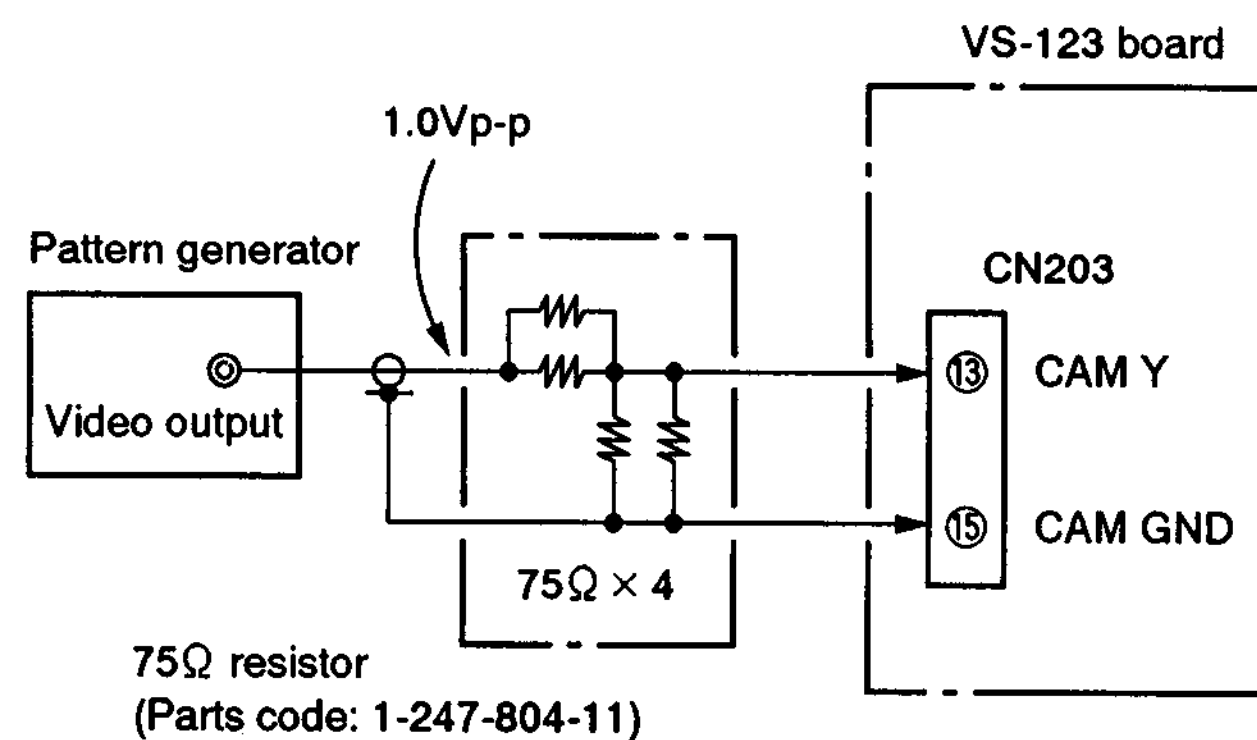

Adjusting method:

- 1) Set to the VIDEO input mode.
- 2) Set to the record mode.
- 3) Set data: 01 to page: 1, address: 00.
- 4) Set data: 00 to page: 2, address: 00.
- 5) Set data: 04 to page: 2, address: B0.
- 6) After memorizing the data of address: 9A of page: 2, set data: 10 to the address.
- 7) After memorizing the data of address: 9D of page: 2, set data: 30 to the address.
- 8) Change the data of page: D, address: 71, and adjust the residual chroma component (A) to minimum.
- 9) Adjust RV202 so that the residual chroma component becomes minimum.
- 10) Repeat 8) and 9).
- 11) Press the PAUSE button of the adjusting remote command.

Processing after completing adjustments

- 1) Set the data memorized at step 7) to address: 9D of page: 2.
- 2) Set the data memorized at step 6) to address: 9A of page: 2.
- 3) Set data: 00 to page: 2, address: B0.

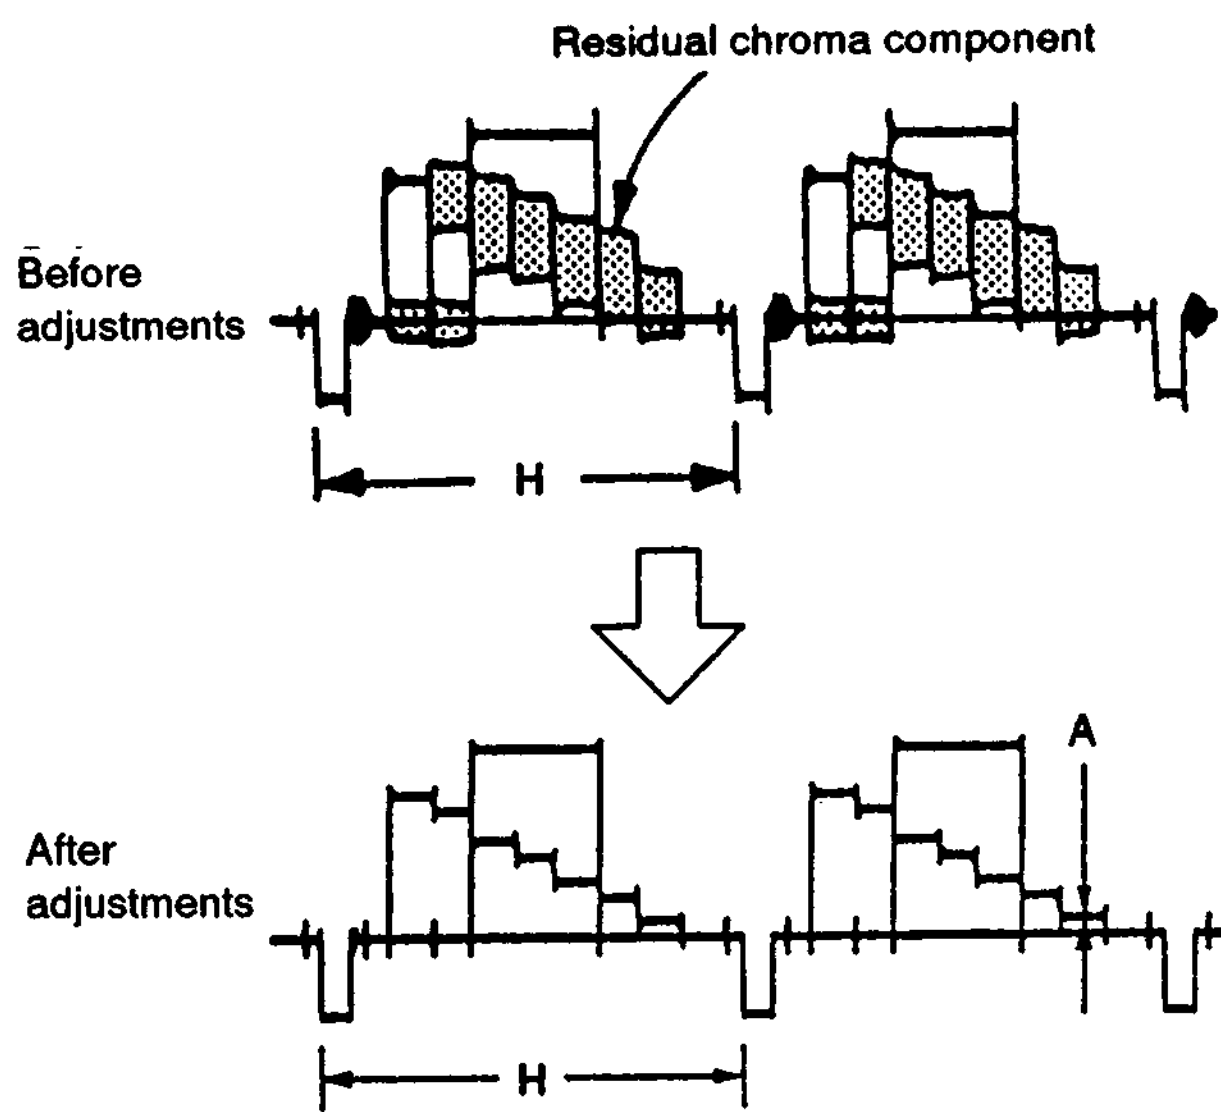


Fig. 7-3-11.

6. Emphasis Input Level Adjustment (VS-123 board)

Y level of emphasis circuit setting. If deviated, this causes too bright or too dark image during play back after recording.

Mode	Camera record
Signal	Color bar (CAMERA input)
Measurement Point	Pin ⑤ of IC201 (EMPH IN) or Pin ⑤ of IC205 (CL204)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	82
Specified Value	$A=0.50 \pm 0.01V$

Note 1: The chroma signal input is not required.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 82, and adjust so that the Y signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote commander.

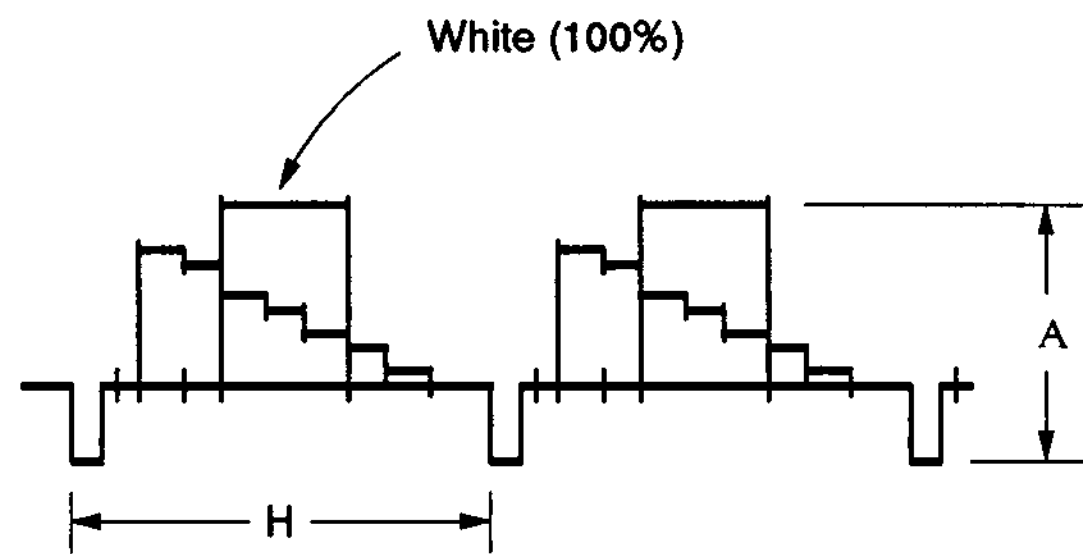


Fig. 7-3-12.

7. DE EMPH Level Adjustment (VS-123 board)

De-emphasis input level setting. If deviated, this causes excessive brightness or darkness.

Mode	Playback
Signal	Alignment tape: For checking operations Color bar section (WR5-5NSP)
Measurement Point	Pin ② of IC201 (DL IN 1) (CL215)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	87
Specified Value	$A=0.54 \pm 0.01V$

Note 1: The chroma signal input is not required.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 87, and adjust so that the Y signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote commander.
- 4) Perform "PB Y OUT Level Adjustment".

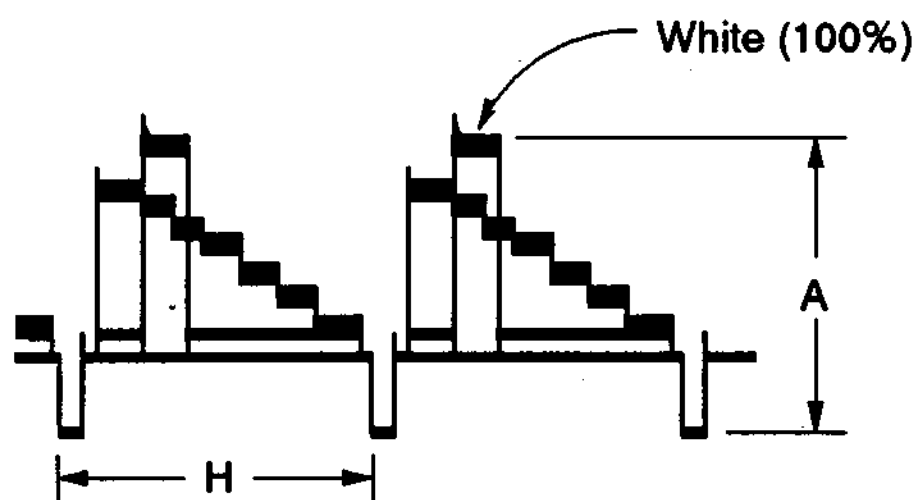


Fig. 7-3-13.

8. PB Y OUT Level Adjustment

PB LINE OUT Y level setting. If deviated, this causes too bright or too dark picture.

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP) Color bar section
Measurement Point	Pin ⑥ of CN201 (VIDEO I/O)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	83
Specified Value	$A=1.0 \pm 0.05V$

Note 1: Terminate the video out terminal at 75Ω .
 75Ω resistor (Part code: 1-247-804-11)

Note 2: The chroma signal input is not required.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 83, and adjust so that the video signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote commander.

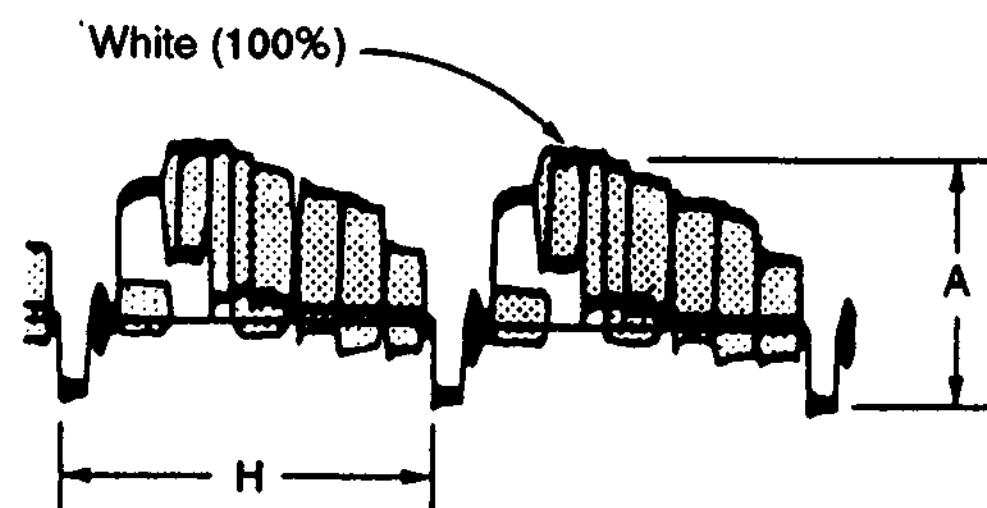


Fig. 7-3-14.

9. Y FM Carrier Frequency Adjustment (VS-123 board)

FM carrier frequency of REC Y setting. If deviated, this caused blurred played back picture or deteriorated resolution.

Mode	Record
Signal	No signal (CAMERA input)
Measurement Point	Pin ③ of IC201 (Y RF OUT) (CL304)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	75
Specified Value	4.39 ± 0.01 MHz

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 75, and adjust so that the Y FM carrier frequency becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote commander.

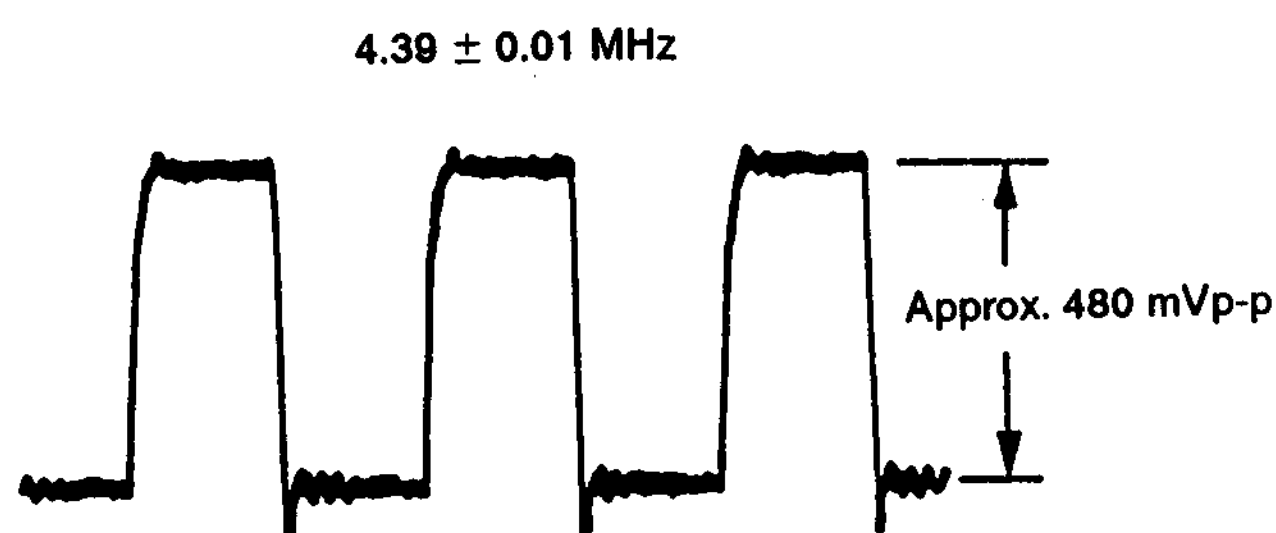


Fig. 7-3-15.

10. Y FM Deviation Adjustment (VS-123 board)

FM deviation of REC Y setting. If deviated, this causes too bright/dark image, or marked occurrence of black picture or deteriorated resolution.

Mode	Record and playback
Signal	Color bar (CAMERA input)
Measurement Point	Pin ② of IC201 (DL IN 1) (CL215)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	77
Specified Value	$A=0.54 \pm 0.01V$

Note 1: Check that "Emphasis Input Level Adjustment", have been completed.

Note 2: The chroma signal input is not required.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Record the color bar signal.
- 3) Playback the recorded signal.
- 4) Check the playback signal level (A).
Specification: $A=0.54 \pm 0.01V$
- 5) If the specification is not satisfied, change the data of page: D, address: 77, and repeat steps 2) to 4).

Playback signal level	Changing the data
When smaller than the specified value	Increase
When bigger than the specified value	Decrease

- 6) Press the PAUSE button of the adjusting remote commander.
- 7) Perform "Y FM Carrier Frequency Adjustment".

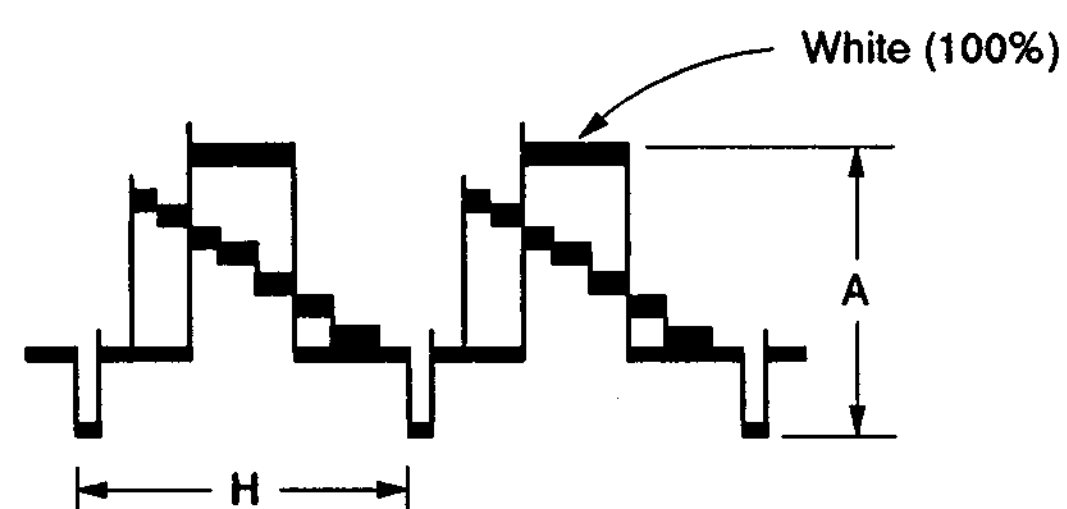


Fig. 7-3-16.

11. Chroma Emphasis Adjustment 1 (VS-123 board)

Emphasis center frequency setting. If deviated, this causes unnatural color.

Mode	Record
Signal	Color bar (CAMERA input)
Measurement Point	Pin ⑧ of IC201 (REC C OUT) (CL216)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	80 81
Specified Value	Minimum fo component

Adjusting method:

- 1) Set to the record mode.
- 2) Set data: 01 to page: 00, address: 01.
- 3) Set data: 00 to page: 2, address: 00.
- 4) Set data: 04 to page: 2, address: B0.
- 5) After memorizing the data of address: 9A of page: 2, set data: 02 to the address.
- 6) Change the data of page: D, address: 80, and adjust so that the amplitude of the latter section of the chroma signal (yellow section) becomes minimum.
- 7) Press the PAUSE button of the adjusting remote commander.
- 8) Set the same data as address: 80 of page: D to address: 81 of page D.
- 9) Press the PAUSE button of the adjusting remote commander.

Processing after completing adjustments

- 1) Set the memorized at step 5) to address: 9A of page: 2.
- 2) Set data: 00 to page: 2, address: B0.

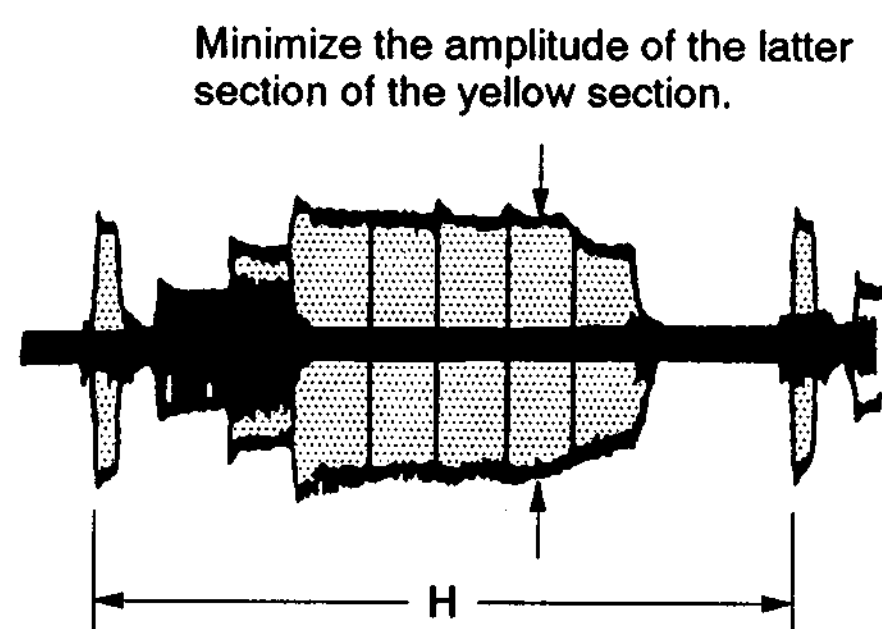


Fig. 7-3-17.

12. Chroma Emphasis Adjustment 2 (VS-123 board)

Emphasis center frequency setting. If deviated, this causes unnatural color.

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP) Color bar section
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	D
Adjustment Address	81 80
Specified Value	The path from the blue luminance point to black luminance point should be a straight line.

Adjusting method:

- 1) Set data: 01 to page: 00, address: 01.
- 2) Change the data of page: D, address: 81, and adjust so that the path from the blue luminance point to black luminance point becomes a straight line.
- 3) Press the PAUSE button of the adjusting remote commander.
- 4) Set the same data as address: 81 of page: D to address: 80 of page: D.
- 5) Press PAUSE button of the adjusting remote commander.

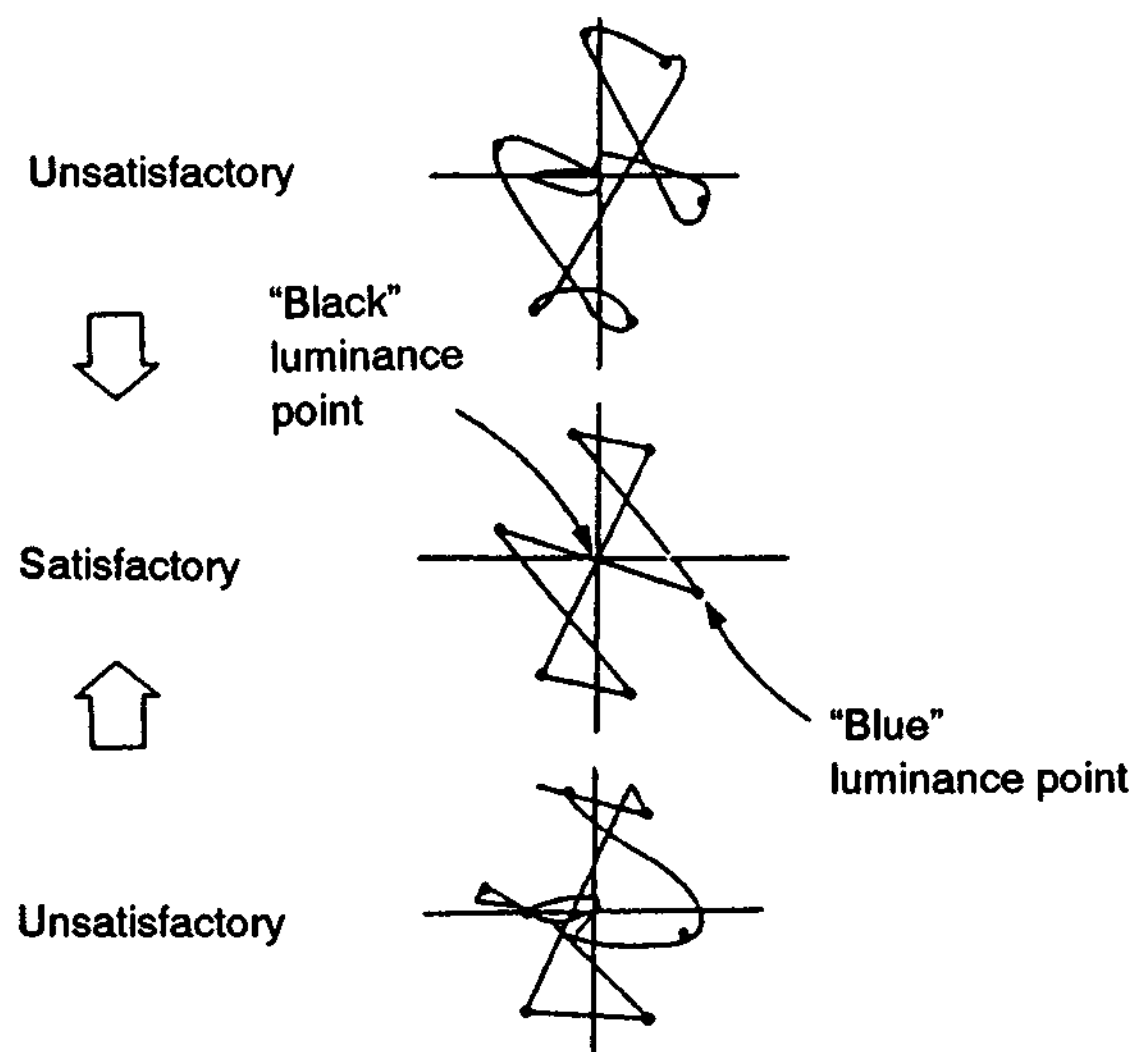


Fig. 7-3-18.

13. Comb Filter Fine Adjustment (VS-123 board)

Set the level and phase of the 1H delayed signal for the comb filter. If deviated, this causes marked occurrence of beats in played back picture.

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP) Color bar section
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjusting Element	RV202 (PHASE)
Adjustment Page	D
Adjustment Address	71
Specified Value	Minimum color luminance point movement when the "Edit" switch is turned on/off

Note 1: Turn the edit ON/OFF at the menu screen.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Minimize the movements of the color luminance point when the edit is on/off with RV202.
- 3) Change the data of page: D, address: 71 and minimize the movements of the color luminance point when the edit is on/off
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Repeat steps 2) to 4).

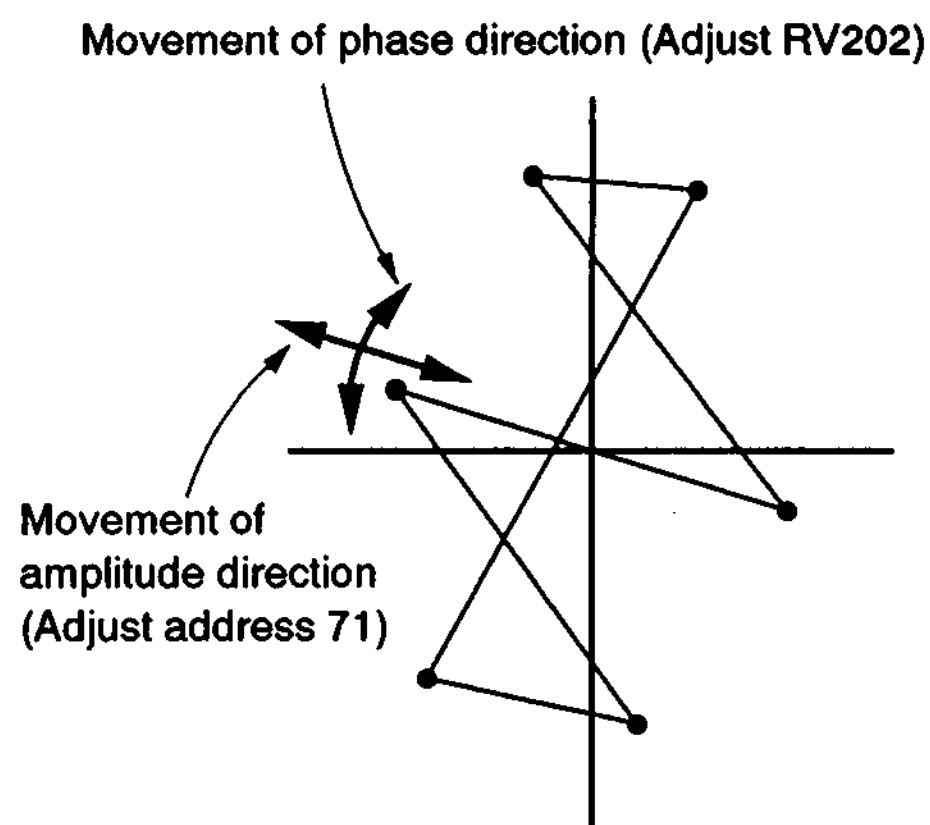


Fig. 7-3-19.

14. REC Y Level Adjustment (VS-123 board)

Recording level of luminance signal setting. If deviated, this causes black stretch over modulation noise or color shade.

Mode	Record
Signal	No signal
Measurement Point	Pin ⑥ of CN102 (REC 2)
Measuring Instrument	Oscilloscope Board width limit: 20 MHz
Adjustment Page	D
Adjustment Address	42, 43, 46, 47
Specified Value	A=145 ± 5 mVp-p

Note: Use a normal MP type tape.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 47, and adjust so that REC Y level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote commander.
- 4) Set data to address: 42, 43, 46 of page: D as shown in following table.

(Be sure to press the PAUSE button of the adjusting remote commander after setting each data.)

Address	Data
42	Same data as address: 47
43	Same data as address: 47
46	Same data as address: 47

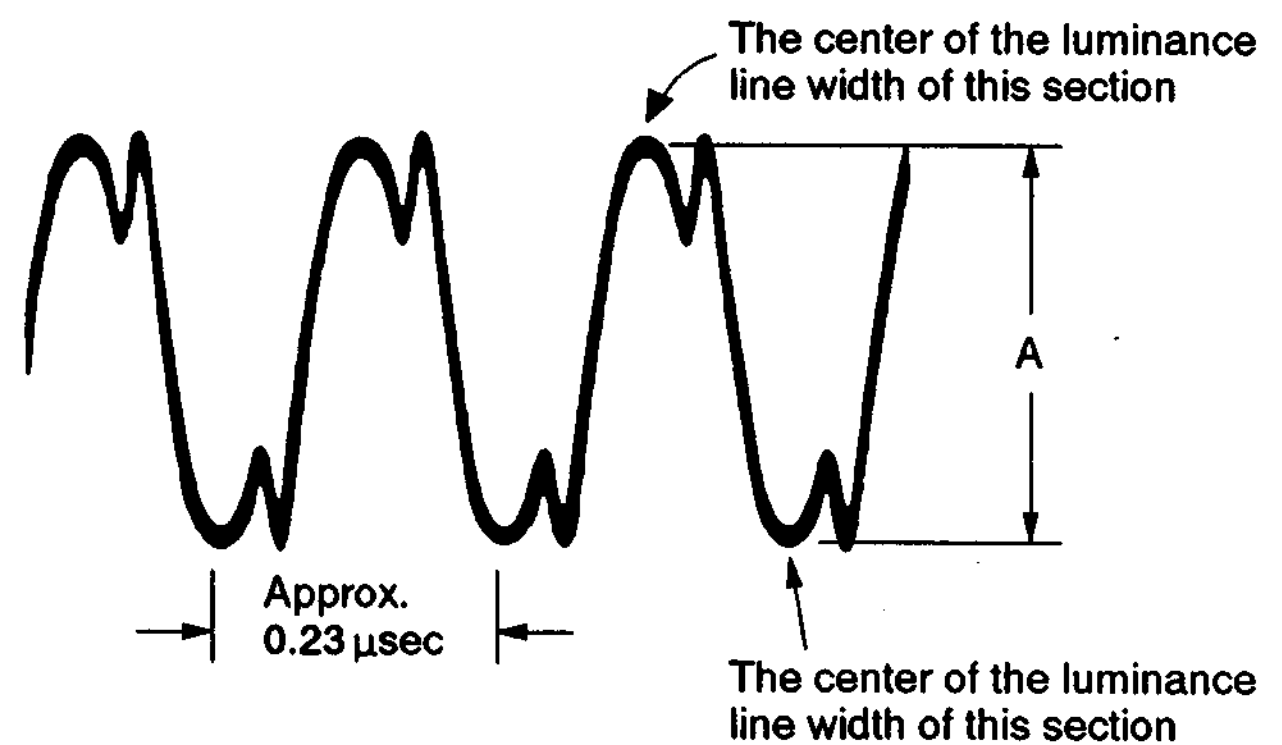


Fig. 7-3-20.

15. REC L Adjustment (VS-123 board)

Set the recording levels of the REC AFM signal and REC ATF signal. If the level is too low, the audio S/N will deteriorate, tracking will not be stable, or SP/LP will not be discriminated properly. If too high, color beats will be produced on the self-recording/playback image.

Mode	Record
Signal	No signal (VIDEO input)
Measurement Point	Pin ⑥ of CN102 (REC 2)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	38, 39, 3A, 3B
Specified Value	$A=8.4 \pm 1.0 \text{ mVp-p}$

Note 1: Use a MP type tape.

Note 2: AU-182 board is required for this adjustment.

Connection:

- 1) Connect Emitter of Q113 and GND with a jumper wire.
- 2) Connect Pin ⑤ of IC508 and GND with a $0.01 \mu\text{F}$ capacitor.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 3B, and adjust so that the REC AFM signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote command-er.
- 4) Read the data of page: D, address: 3B, and set to D3B.
- 5) Set data: D3B to address: 39 of page D.
- 6) Press the PAUSE button of the adjusting remote command-er.
- 7) Convert D3B to decimal notation, and obtain D3B'.
(Refer to Table 7-1-3. "Hexadecimal notation-decimal notation conversion table")
- 8) Calculate D3A' using following equation (decimal notation calculation).
$$D3A' = D3B' - 7$$
- 9) Convert D3A' to hexadecimal notation, and obtain D3A.
- 10) Set data: D3A to address: 3A of page D.
- 11) Press the PAUSE button of the adjusting remote command-er.
- 12) Set data: D3A to address: 38 of page D.
- 13) Press the PAUSE button of the adjusting remote command-er.
- 14) Perform "REC CHROMA Level Adjustment".

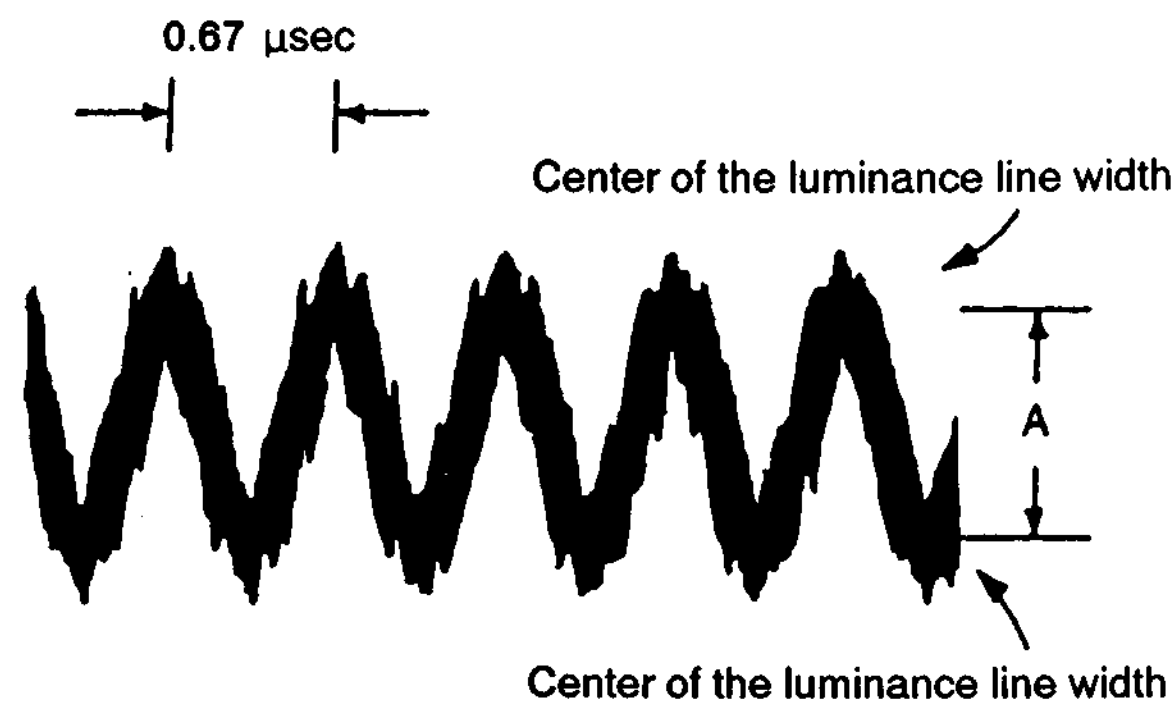


Fig. 7-3-21.

16. REC CHROMA Level Adjustment (VS-123 board)

Set REC CHROMA signal level. If it is lower than its normal level, chroma signal noise in played back picture will increase. If it is set higher, Y signal noises will increase and white modulation noises will be produced.

Mode	Record
Signal	Color bar (VIDEO input)
Measurement Point	Pin ⑥ of CN102 (REC 2)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	33, 32, 37, 36
Specified Value	A=26 ± 3 mVp-p

Note 1: Use a MP type tape.

Connection:

- 1) Connect Emitter of Q113 and GND with a jumper wire.
- 2) Connect Pin ⑤ of IC508 and GND with a 0.01 μF capacitor. (1-101-004-00)
- 3) Disconnect AU-182 board.

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 33, and adjust so that the REC CHROMA signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote command-er.
- 4) Read the data of page: D, address: 33, and set to D33.
- 5) Set data: D33 to address: 32 of page D.
- 6) Press the PAUSE button of the adjusting remote command-er.
- 7) Set data: D33 to address: 36 of page D.
- 8) Press the PAUSE button of the adjusting remote command-er.
- 9) Set data: D33 to address: 37 of page D.
- 10) Press the PAUSE button of the adjusting remote command-er.

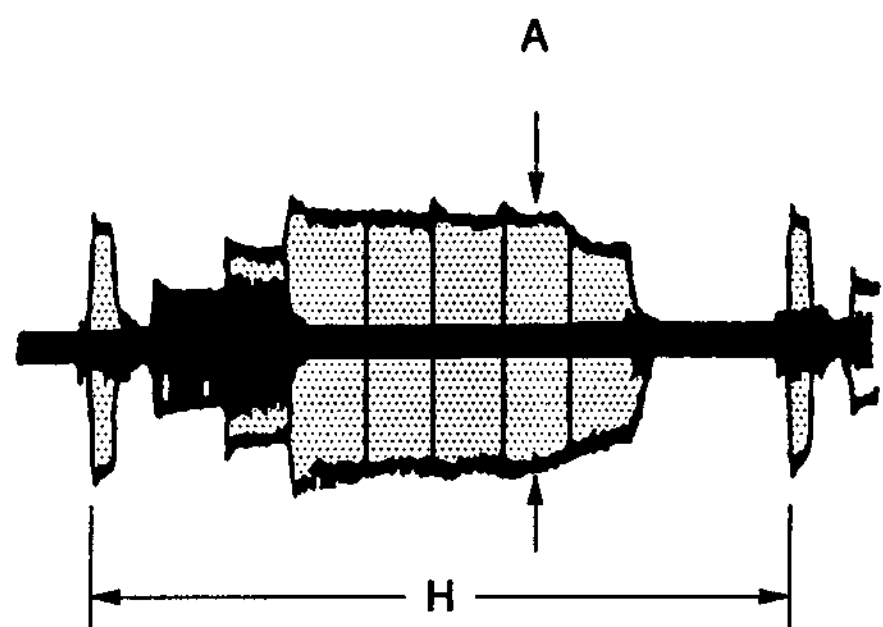


Fig. 7-3-22.

17. REC ATF Level Check (VS-123 board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑥ of CN102 (REC 2)
Measuring Instrument	Oscilloscope
Specified Value	A=6.4 ± 1.5 mVp-p

Note 1: Use a MP type tape.

Connection:

- 1) Connect Emitter of Q113 and GND with a jumper wire.
- 2) Disconnect AU-182 board.

Adjusting method:

- 1) Check that the REC ATF signal level (A) satisfies the specified value.

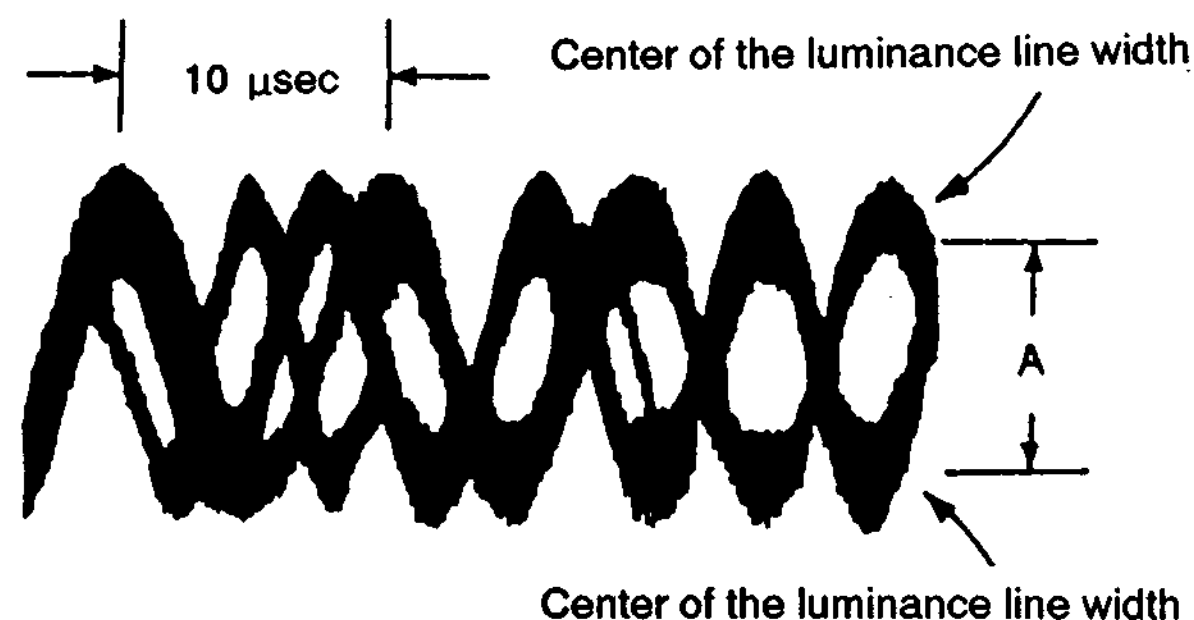


Fig. 7-3-23.

3-6. AUDIO SYSTEM ADJUSTMENT

[Connecting the measuring instruments for the audio]

Connect the audio system measuring instruments as shown in Fig. 7-3-24, and perform adjustments.

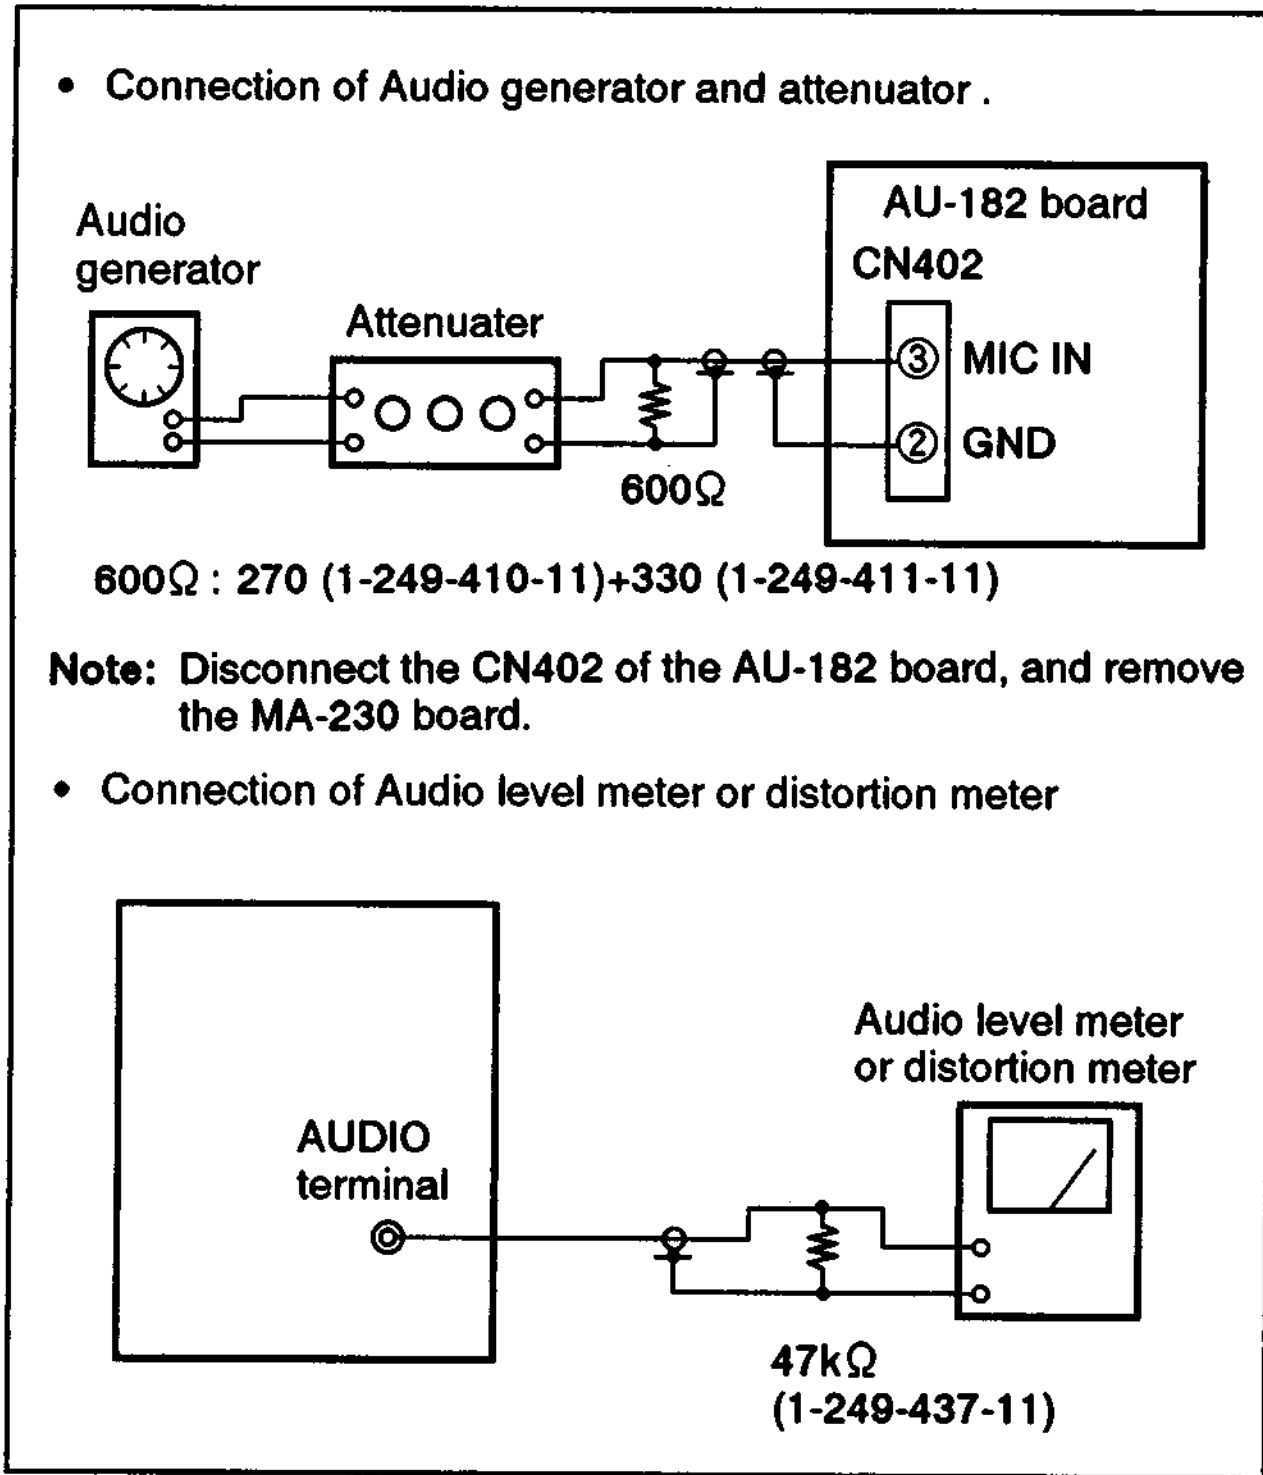


Fig. 7-3-24.

[Adjustment Procedure]

- 1) E-E output level check
- 2) IR adjustment
- 3) Deviation adjustment
- 4) Carrier frequency check
- 5) Carrier level check
- 6) Overall level characteristics, distortion check
- 7) Overall noise level check

1. E-E Output Level Check (AU-182 board)

Mode	Camera recording
Signal	400 Hz, -38.5 dBs, Pin ③ of CN402 (MIC IN)
Measurement Point	Audio output terminal
Measuring Instrument	Audio level meter
Specified Value	-7.5 ± 2 dBs

Checking method:

- 1) Check that the 400 Hz signal level satisfies the specified value.

2. IR Adjustment

Adjust to the optimum audio BPF characteristics of the IC.

If the characteristics is not correct, the distortion rate and S/N ratio will worsen.

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5NSP)
Measurement Point	Audio output terminal
Measuring Instrument	Distortion meter
Adjustment Page	D
Adjustment Address	8E
Specified Value	Minimum distortion

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 8E and adjust so that the distortion is minimum.
- 3) Press the PAUSE button of the adjusting remote command-er.

3. Deviation Adjustment

Adjust to the optimum audio FM signal deviation.

If the adjustment is not correct, its playback level will differ from that of other units.

Mode	Playback
Signal	Alignment tape: For checking the operation (WR5-5NSP)
Measurement Point	Audio output terminal
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	8F
Specified Value	-7.5 ± 0.5 dBs

Adjusting method:

- 1) Set data: 01 to page: 1, address: 00.
- 2) Change the data of page: D, address: 8F, and adjust so that the 400 Hz signal level becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote command-er.