


JVC

SERVICE MANUAL

VIDEO CASSETTE RECORDER VHS

HR-D542A(DK)

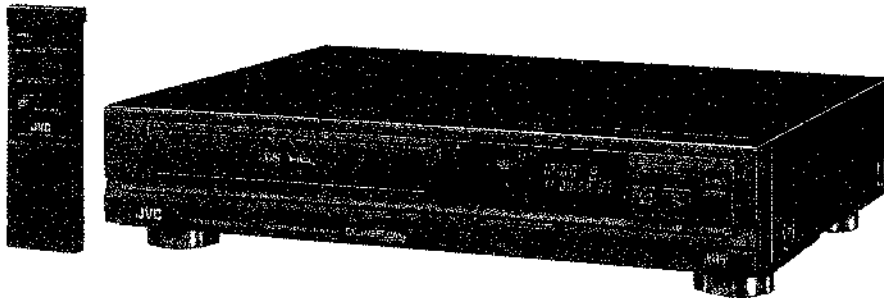

SPECIFICATIONS

GENERAL

Power requirement	: AC 110 — 240 V~, 50/60 Hz
Power consumption	: 21 W
Temperature	: 5°C to 40°C (Operating) : -20°C to 60°C (Storage)
Operating position	: Horizontal only
Dimensions (WxHxD)	: 435 x 94 x 322 mm
Weight	: 5.3 kg
Format	: VHS PAL standard
Tape width	: 12.65 mm
Tape speed	: 23.39 mm/sec
Maximum recording time	: 240 min. with E-240 video cassette

VIDEO

Signal system	: PAL colour and CCIR monochrome signals, 625 lines/50 fields (See "WARNING")
Recording system	: Rotary, slant azimuth two-head helical scan system
Input	: 0.5 to 2.0 Vp-p, 75 ohms, unbalanced
Output	: 1.0 Vp-p, 75 ohms, unbalanced
Signal-to-noise ratio	: 43 dB (Rohde & Schwarz noise meter)
Horizontal resolution	: 250 lines

AUDIO

Recording system	: Longitudinal track
Input	: Line: -8 dBs, 50 k-ohms, unbalanced
Output level	: -6 dBs, high impedance load
Output impedance	: Less than 1 k-ohm, unbalanced
Frequency range	: 70 Hz to 10,000 Hz

TUNER

Tuning system	: Voltage synthesized tuner
TV channel storage capacity	: 48 positions (+ AUX position "AU")
Channel coverage	: VHF 47 — 111 MHz 111 — 300 MHz UHF 470 — 862 MHz
Aerial output	: UHF channel 36 (adjustable 32 — 40)

TIMER

Clock reference	: Quartz-crystal
Programme capacity	: 1-year/8-programme timer
Memory back-up time	: 60 min.

ACCESSORIES

Provided accessories	: Aerial cable, Infrared remote control unit, "R6" battery x 2, Video cassette tape
----------------------	--

Design and specifications subject to change without notice.

NOTE: For a technical description, please refer to Technical Guide VTG82052 HR-D540/D580/D660 PAL.

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
Important Safety Precautions					
INSTRUCTIONS					
1. DISASSEMBLY AND MECHANISM ADJUSTMENTS					
1.1	DISASSEMBLY	1-1	3.11	SERVO SCHEMATIC DIAGRAM	3-21
1.1.1	Top cover	1-1	3.12	AUDIO SCHEMATIC DIAGRAM	3-23
1.1.2	Front panel assembly	1-1	3.13	SYSTEM CTL SCHEMATIC DIAGRAM	3-25
1.1.3	Bottom cover	1-1	3.14	DECK TERMINAL, MODE MOTOR, CAPSTAN MDA, C. HOUSING SCHEMATIC DIAGRAMS	3-27
1.1.4	Main board assembly	1-1	3.15	DECK TERMINAL, MODE MOTOR, C. HOUSING, A/C HEAD CIRCUIT BOARDS	3-28
1.1.5	Cassette housing	1-2	3.16	MAIN CIRCUIT BOARD	3-29
1.1.6	Cassette housing installation	1-2	3.17	VIDEO UNIT & VIDEO (MAIN) SCHEMATIC DIAGRAM	3-31
1.1.7	Cassette housing door	1-3	3.18	VIDEO UNIT CIRCUIT BOARD	3-33
1.1.8	Main-deck	1-3	3.19	IF & TNR CTL SCHEMATIC DIAGRAM	3-35
1.2	MECHANISM ADJUSTMENTS	1-4	3.20	IF & TNR CTL CIRCUIT BOARDS	3-37
1.2.1	Precautions	1-4	3.21	TIMER/DISP/SW SCHEMATIC DIAGRAM	3-39
1.2.2	Check without cassette housing	1-4	3.22	TIMER/DISP/SW CIRCUIT BOARD	3-41
1.2.3	Manually removing cassette tape	1-4	3.23	PRE/REC SCHEMATIC DIAGRAM	3-43
1.2.4	Test equipment	1-4	3.24	PRE/REC CIRCUIT BOARD	3-45
1.3	MAIN MECHANISM PARTS	1-5	3.25	REMOTE CONTROL SCHEMATIC DIAGRAM	3-47
1.4	INSPECTION AND MAINTENANCE	1-7	3.26	RF CONVERTER AND RF SWITCH SCHEMATIC DIAGRAM	3-48
1.4.1	Suggested servicing schedule for main components	1-7	4. EXPLODED VIEWS AND PARTS LIST		
1.5	MAIN PARTS REMOVAL AND REPLACEMENT	1-8	4.1	PACKING ASSEMBLY <M1>	4-1
2. ELECTRICAL ADJUSTMENTS			4.2	CABINET ASSEMBLY <M2>	4-2
2.1	PREPARATION	2-1	4.3	CABINET ASSEMBLY <M3>	4-3
2.1.1	Required test equipment	2-1	4.4	MECHANISM ASSEMBLY <M4>	4-4
2.1.2	Check and adjustment steps	2-2	5. ELECTRICAL PARTS LIST		
2.2	SWITCHING REGULATOR CIRCUIT	2-3	1.	POWER TRANS BOARD ASSY <01><02>	5-1
2.3	TIMER CIRCUIT	2-3	2.	MAIN BOARD ASSEMBLY <03>	5-3
2.4	SERVO CIRCUIT	2-4	3.	VIDEO UNIT BOARD ASSEMBLY <05>	5-7
2.5	VIDEO CIRCUIT	2-5	4.	IF BOARD ASSEMBLY <07>	5-8
2.6	AUDIO CIRCUIT	2-7	5.	TUNER CONTROL BOARD ASSEMBLY <08>	5-10
2.7	TUNER/IF CIRCUIT	2-7	6.	AUDIO CONTROL HEAD BOARD <12>	5-11
3. CHARTS AND DIAGRAMS			7.	TIMER/DISPLAY/SW BOARD ASSY <21>	5-11
3.1	CIRCUIT BOARD AND LOCATION	3-1	8.	UPPER DRUM BOARD <41>	5-12
3.2	GENERAL INFORMATION	3-2	9.	PRE/REC AMP BOARD ASSEMBLY <43>	5-12
3.2.1	Connections	3-2	10.	DECK TERMINAL BOARD ASSEMBLY <51>	5-13
3.2.2	Disconnecting the flatwire	3-2	11.	LOADING MDA BOARD ASSEMBLY <55>	5-13
3.2.3	Indications	3-2	12.	CASSETTE HOUSING BOARD <56>	5-13
3.2.4	Schematic diagram values	3-2	6. TECHNICAL INFORMATIONS		
3.2.5	Signal flow in the schematic	3-2	6.1	CIRCUIT CONTROL SYSTEM	6-1
3.2.6	Semiconductors	3-3			
3.2.7	Replacement of chip parts	3-3			
3.3	BOARD INTERCONNECTIONS	3-5			
3.4	VIDEO BLOCK DIAGRAM	3-7			
3.5	PRE/REC BLOCK DIAGRAM	3-9			
3.6	SERVO BLOCK DIAGRAM	3-11			
3.7	AUDIO BLOCK DIAGRAM	3-13			
3.8	SYSTEM CTL BLOCK DIAGRAM	3-15			
3.9	POWER TRANS, POWER TRANSISTOR & REGULATOR (MAIN) SCHEMATIC DIAGRAM	3-17			
3.10	SWITCHING REGULATOR CIRCUIT BOARD	3-19			

Important Safety Precautions

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

● Precautions during Servicing

1. Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.

2. Parts identified by the \triangle symbol and shaded (▨) parts are critical for safety.

Replace only with specified part numbers.

Note: Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.

3. Fuse replacement caution notice.

Caution for continued protection against fire hazard.
Replace only with same type and rated fuse(s) as specified.

4. Use specified internal wiring. Note especially:

- 1) Wires covered with PVC tubing
- 2) Double insulated wires
- 3) High voltage leads

5. Use specified insulating materials for hazardous live parts. Note especially:

- | | | |
|--------------------|--------------------------------------|------------|
| 1) Insulation Tape | 3) Spacers | 5) Barrier |
| 2) PVC tubing | 4) Insulation sheets for transistors | |

6. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.

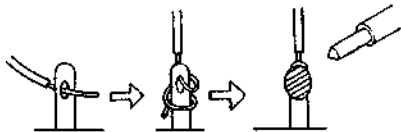


Fig. 1

7. Observe that wires do not contact heat producing parts (heat-sinks, oxide metal film resistors, fusible resistors, etc.)

8. Check that replaced wires do not contact sharp edged or pointed parts.

9. When a power cord has been replaced, check that 10–15 kg of force in any direction will not loosen it.

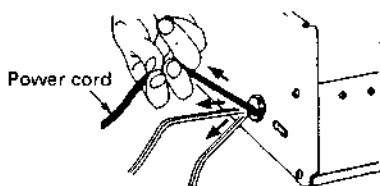


Fig. 2

10. Also check areas surrounding repaired locations.

11. Products using cathode ray tubes (CRTs)

In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray emission. Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.

12. Crimp type wire connector

In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.

1) **Connector part number** : E03830-001

2) **Required tool** : Connector crimping tool of the proper type which will not damage insulated parts.

3) **Replacement procedure**

(1) Remove the old connector by cutting the wires at a point close to the connector.

Important : Do not reuse a connector (discard it).



Fig. 3

(2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.




Fig. 4

(3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.

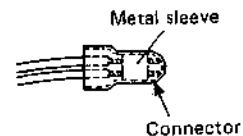


Fig. 5

(4) As shown in Fig. 6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

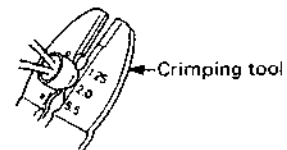


Fig. 6

(5) Check the four points noted in Fig. 7.

Not easily pulled free Crimped at approx. center of metal sleeve



Wire insulation recessed more than 4 mm

Fig. 7

● Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Insulation resistance test


Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

2. Dielectric strength test

Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

3. Clearance distance

When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See table 1 below.

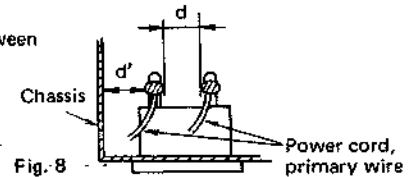


4. Leakage current test

Confirm specified or lower leakage current between earth ground/power cord plug prongs and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method: (Power ON)

Insert load Z between earth ground/power cord plug prongs and externally exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See figure 9 and following table 2.

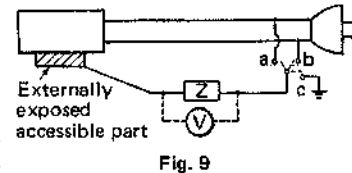


5. Grounding (Class I model only)

Confirm specified or lower grounding impedance between earth pin in AC inlet and externally exposed accessible parts (Video in, Video out, Audio in, Audio out or Fixing screw etc.).

Measuring Method:

Connect milli ohm meter between earth pin in AC inlet and exposed accessible parts. See figure 10 and grounding specifications.

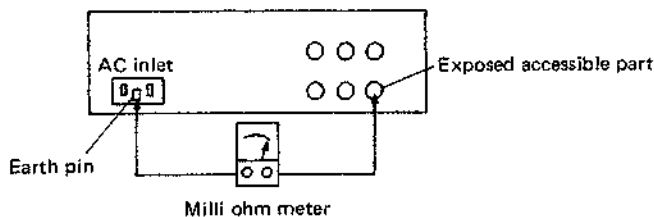

Grounding Specifications

Region	Grounding Impedance (Z)
USA & Canada	$Z \leq 0.1 \text{ ohm}$
Europe & Australia	$Z \leq 0.5 \text{ ohm}$

AC Line Voltage	Region	Insulation Resistance (R)	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$R \geq 1 \text{ M}\Omega / 500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3 \text{ mm}$
100 to 240 V			AC 1.5 kV 1 minute	$d, d' \geq 4 \text{ mm}$
110 to 130 V	USA & Canada	—	AC 900 V 1 minute	$d, d' \geq 3.2 \text{ mm}$
110 to 130 V	Europe & Australia	$R \geq 10 \text{ M}\Omega / 500 \text{ V DC}$	AC 3 kV 1 minute (Class II)	$d \geq 4 \text{ mm}$
200 to 240 V			AC 1.5 kV 1 minute (Class I)	$d' \geq 8 \text{ mm}$ (Power cord) $d' \geq 6 \text{ mm}$ (Primary wire)

Table 1 Specifications for each region

AC Line Voltage	Region	Load Z	Leakage Current (i)	a, b, c
100 V	Japan	1 kΩ	$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada	0.15 μF, 1.5 kΩ	$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe & Australia	2 kΩ	$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
		50 kΩ	$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals

Table 2 Leakage current specifications for each region

Note: These tables are unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

INSTRUCTIONS

SAFETY PRECAUTIONS

The rating plate and the safety caution are on the rear of the unit.


WARNING — DANGEROUS VOLTAGE INSIDE

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

IMPORTANT (In the United Kingdom) Mains Supply (240 V~, 50 Hz only)

IMPORTANT

Do not make any connection to the Larger Terminal coded E or Green. The wires in the mains lead are coloured in accordance with the following code:




If these colours do not correspond with the terminal identifications of your plug, connect as follows:
Blue wire to terminal coded N (Neutral) or coloured Black.
Brown wire to terminal coded L (Live) or coloured Red.
If in doubt — consult a competent electrician.

CAUTION

- When you are not using the recorder for a long period of time, it is recommended that you disconnect the power cord from the AC outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the AC outlet prior to connecting or disconnecting any signal lead or aerial.

WARNING

1. In addition to PAL B/G and PAL D/K colour television signals, this recorder can also receive SECAM B/G and SECAM D/K colour television signals. SECAM B/G and SECAM D/K colour television signals can be recorded and played back in colour as far as this same recorder is used for recording and playback.
2. SECAM B/G and SECAM D/K colour television signals recorded on this recorder produce monochrome pictures if played back on another PAL or SECAM recorder.
3. SECAM B/G and SECAM D/K colour television signals recorded on another PAL or SECAM recorder produce monochrome pictures if played back on this recorder.
4. This recorder cannot be used in France. Use in France a recorder which is capable of receiving SECAM L colour television signals.
5. SECAM L prerecorded cassettes or recordings made with a SECAM L video recorder produce monochrome pictures when played back on this recorder.



- Only cassettes marked "VHS" can be used with this video recorder.
- HQ VHS is compatible with existing VHS equipment.

Omkopplaren OPERATE på denna apparät är sekundärt kopplad och skiljer inte apparaten från nätet i läge OPERATE OFF.

The OPERATE button does not completely shut off mains power from the unit, but switches operating current on and off.

BEMÆRK: I stilling OFF er apparatet stadig forbundet med lysnettet. Hvis det ønskes fuldstændig afbrud skal netledningen trækkes ud.

This unit is produced to comply with Directives 76/889/EEC, 82/499/EEC, 87/308/EEC and Standard IEC Publ. 65.

Power SYSTEM

This set operates on voltage of AC 110 - 240 V~, 50/60 Hz with automatic switching.

IMPORTANT: It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

PRECAUTIONS

VIDEO RECORDER

Handling and storage

- Avoid using the recorder under the following conditions:
 - extremely hot, cold or humid places,
 - dusty places,
 - near appliances generating strong magnetic fields,
 - places subject to vibrations, and
 - poorly ventilated places.
- Be careful of moisture condensation.
- Avoid using the recorder immediately after moving from a cold place to a warm place. The water vapour in warm air will condense on the still-cold video head drum and tape guides and may cause damage to the tape and the recorder.
- Handle the recorder carefully
 - Do not block the ventilation openings.
 - Do not place anything heavy on the recorder.
 - Do not place anything which might spill and cause trouble on the top cover of the recorder.
 - Use in horizontal (flat) position only.
- In case of transportation,
 - Avoid violent shocks to the recorder during packing and transportation.
 - Before packing, be sure to remove the cassette from the recorder.

Moisture condensation

- If you pour a cold liquid into a glass, water vapour in the air will condense on the surface of the glass. This is called moisture condensation.
- Moisture condensation on the head drum, one of the most crucial parts of the video recorder, will cause damage to the tape.
- Moisture condensation is apt to occur under the following conditions:
 - when the recorder is moved from a cold place to a warm place, and
 - under extremely humid conditions.
- In conditions where moisture condensation may occur, keep the power cord plugged in an AC outlet and the power switched on; this will help prevent condensation from occurring. When condensation has occurred, it will evaporate quickly once the power is switched on. Wait a few hours for the recorder to become dry.

VIDEO CASSETTES


- Avoid exposing the cassettes to direct sunlight. Keep them away from heaters.
- Avoid extreme humidity, violent vibrations or shocks, strong magnetic fields (near a motor, transformer or magnet) and dusty places.
- Place the cassettes in cassette cases and position vertically.

REMOTE CONTROL UNIT

- Avoid violent shocks, especially take care not to drop the unit.
- Take care not to allow liquid to spill into the unit.
- Do not place heavy objects on the unit.
- Avoid leaving the unit in places subject to direct sunlight or extremely high temperatures.

CONTENTS

Features.....	3
Controls, indicators, and connectors	
Front panel.....	4
Rear panel.....	5
Remote control unit.....	5
Connections	
Aerial and RF connection.....	6
AV connection.....	6
Video channel setting.....	6
Clock setting.....	7
Operating the built-in tuner.....	8
Loading and unloading a video cassette.....	9
Usable cassettes and their recording time	
Accidental erasure prevention	
Playing back a video cassette.....	10
Digital Tracking system	
Convenient facilities related to playback.....	11
Memory play	
Repeat playback	
Special-effects playback.....	12
High-speed reverse search	
High-speed forward search	
Still playback, frame advance and slow motion	
Recording TV programmes.....	13
Recording one TV programme while watching another	
Convenient facilities related to recording.....	14
Realtime tape counter	
Elapsed recording time indication	
Counter memory function	
Remaining tape time indication	
Relax function	
Instant timer recording.....	15
24-Hour timer	
Off-timer	
Automatic timer recording.....	16
Local programming	
Direct remote programming	
Child Lock function.....	18
Recording from an external source.....	19
Editing to another video recorder	
Editing from a VideoMovie	
In case of difficulty.....	20
Head cleaning.....	21
Specifications.....	22

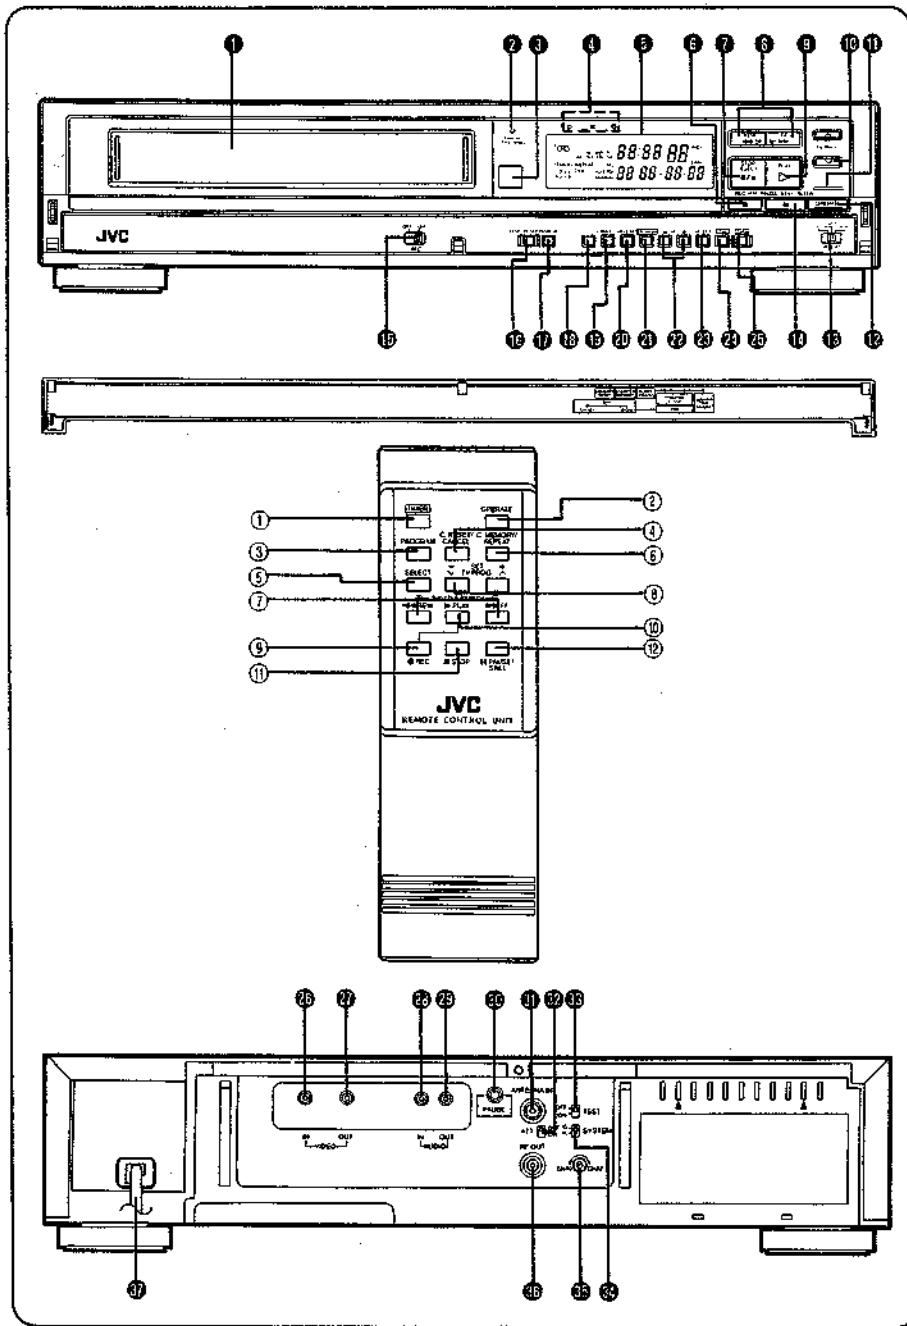

FEATURES

MAIN FEATURES, ADVANTAGES AND BENEFITS

Feature	Advantage	Benefit
Quick-Response Full-Loading Mechanism	<ul style="list-style-type: none"> ■ Quick response: 1.3 seconds from Stop to Play or Record. ■ Increased Rewind/Fast-Forward speed. 	<ul style="list-style-type: none"> ■ Immediate, no-frustration operation of VCR. ■ Faster Rewind/Fast-Forward saves time.
Digital Tracking	Microcomputer-controlled tracking system maintains constant optimal video tracking.	Best possible picture performance, even for rental videos, is always assured.
Automatic Repeat Playback (possible up to 5 times)	<ul style="list-style-type: none"> ■ Full Repeat: repeated playback of whole tape. ■ Index Repeat: repeated playback of segment located between two index codes. 	You can repeatedly view a favourite programme with ease.
Dual-system Flexibility	<ul style="list-style-type: none"> ■ PAL/MESECAM recording and playback. ■ Voltage synthesized wide-band dual tuner with automatic detection of B/G and D/K broadcasts (both PAL and SECAM) and 48-channel preset capacity; can receive VHF and UHF channels. ■ G/K dual-system RF converter. 	<ul style="list-style-type: none"> ■ Access to a wider range of programmes. ■ Increased television compatibility.


OTHER KEY FEATURES

- Flexible timer functions** — Timer programming flexibility thanks to 1-year/8-event timer, 24-hour instant timer, and "off" timer.
- Quartz clock** — Ensures accurate timekeeping/timer recording even in areas where power fluctuations occur.
- Instant "summer time" adjustment** — One-button adjustment of VCR's clock to and from daylight saving time.
- Child Lock system** — Temporarily disables VCR's controls to deter unwanted operation.
- Display OFF function** — Can switch off FDP to eliminate bothersome light and reduce chances of theft.
- Preroll-capable PAUSE remote control terminal** — For superior quality edits when used in an editing suite.
- Multi-voltage operation with automatic switching** — 110 to 240 V AC.

CONTROLS, INDICATORS AND CONNECTORS Refer to diagrams on the front foldout page.

Front panel

- ① **Cassette loading slot**
Insert a VHS cassette. The door will close and the "cassette loaded" indicator will appear on the FDP (fluorescent display panel).
- ② **DIGITAL TRACKING indicator**
Lights in the Digital Tracking mode. Blinks while adjusting.
- ③ **Infrared beam receiving window**
- ④ **Mode indicators**
 - ▷ : Play mode
 - ▷ ||| : Still/Slow-Motion mode
 - ▷ ○ : Record mode
 - ▷ ||| ○ : Record-Pause mode
- ⑤ **Fluorescent Display Panel (FDP)**

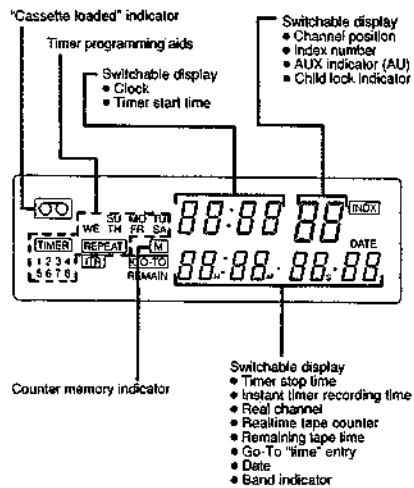

- ⑥ **REC/TR button**
 - Press once to start recording.
 - Press twice to engage the Instant Timer Recording mode.
 - Also use to set the required recording time in the 24-Hour Instant Timer Set mode.
- ⑦ **STOP/EJECT button**
 - Press while in the Stop mode to eject the cassette.
 - Press while in other modes to stop the tape.
- ⑧ **REW/FF/Shuttle Search buttons**
 - Press while in the Stop mode to rewind or fast-forward the tape.
 - Press while in the Play mode for Shuttle Search in the reverse or forward direction.
 - Press while in the Record-Pause mode to engage the Retake mode. (See page 14.)
- ⑨ **PLAY button**
 - Press to play back a tape.
 - Press to cancel the Pause/Still/Slow or Shuttle Search mode. (See page 12.)
 - Press to start recording from the Record-Pause mode.

- ⑩ **TV PROG. buttons**
Press either button to scan to a desired channel.
- ⑪ **OPERATE indicator**
- ⑫ **OPERATE button**
Press to apply operating power to the recorder. The indicator will light. Loading a cassette also turns the power on.
- ⑬ **REPEAT switch**
FULL REPEAT: To play back the entire tape repeatedly.
INDEX REPEAT: To play back a segment between two adjacent index codes. (See page 11.)
OFF: No repeat playback.
- ⑭ **PAUSE/STILL/SLOW button**
 - Press while in the Record mode to stop the tape temporarily to avoid recording of unwanted material.
 - Press while in the Play mode to view a still picture.
 - The still picture can be advanced each time this button is pressed.
 - Keep this button pressed for more than 2 seconds to obtain slow-motion playback.
 - Press again to view a still picture.
- ⑮ **Automatic Frequency Control switch (AFC)**
Normally set to ON.
- ⑯ **DISPLAY OFF button**
Press to make all indications on the FDP disappear when they are not required; the display will show "----". Press again to make the clock display reappear.
- ⑰ **DISPLAY button**
Press to switch the display among the realtime tape counter, remaining tape time and data. Also press to change the display from the Timer Set mode to the Clock mode.
- ⑱ **CH.SET button**
Press to engage the Real Channel mode.
- ⑲ **CANCEL/COUNTER RESET/SKIP button**
This is a triple-function button.
 - as a CANCEL button — press to cancel the programmed data in the Timer Set mode.
 - as a COUNTER RESET button — press to reset the realtime counter reading to "0H 00M 00S".
 - as a SKIP button — press to skip unnecessary channels in the Real Channel mode.
- ⑳ **REPEAT/COUNTER MEMORY/STORE button**
This is a triple-function button.
 - as a REPEAT button — press to enter the repeat command in the Timer Set mode.
 - as a COUNTER MEMORY button — press to engage the Counter Memory mode.
 - as a STORE button — press to store the tuned-in channel in the Real Channel mode.
- ㉑ **PROGRAM/CLOCK ADJUST button**
Press to change the recorder's mode in the following order: Clock mode, Timer Set mode, Clock Set mode, then return to the Clock mode.

- ㉒ **SET/TRACKING/V. LOCK/FINE buttons (-/+)**
These are quadruple-function buttons.
 - as SET buttons — press to set the correct data in the Clock Set or Timer Set mode.
 - as TRACKING buttons — press both to cancel the automatic Digital Tracking mode, then press either for manual tracking control. (See page 10.)
 - as V. LOCK buttons — press either to reduce vertical vibrations, if observed in the Still mode.
 - as FINE tuning buttons — press to shift the frequency in either direction to fine-tune in a specific station in the Real Channel mode.
- ㉓ **SELECT/SUMMER TIME ADJUST button**
This is a dual-function button.
 - as a SELECT button — press to select the item to be set in the Clock Set, Real Channel or Timer Set mode.
 - as a SUMMER TIME ADJUST button — press and quickly release to advance the clock by one hour, hold it pressed for 2 seconds to set the clock back by one hour. (See page 7.)
- ㉔ **START button**
Press to engage the 24-Hour Instant Timer Set mode. (See page 15.)
- ㉕ **TIMER button**
Press to engage the Timer Standby mode.

Rear Panel

- ㉖ **VIDEO IN connector**
Connect the video output of other video equipment such as another video tape recorder for recording video signals.
- ㉗ **VIDEO OUT connector**
Video signals being recorded or played back are available from this connector.
- ㉘ **AUDIO IN connector**
Connect an audio tape recorder or other audio sources for recording sound.
- ㉙ **AUDIO OUT connector**
Audio signals can be obtained from this connector.
- ㉚ **PAUSE terminal**
When using this recorder as the source player, connect to the PAUSE OUT terminal of a second VCR (if so-equipped) for synchronized preroll operation. This terminal can also be used for editing from a JVC VideoMovie camera/recorder using the Master Edit Control system.
- ㉛ **Aerial Input connector (ANTENNA IN)**
Connect an aerial to this connector.
- ㉜ **Attenuator switch (ATT.)**
Set to OFF to receive broadcasts from distant stations. Set to ON to receive broadcasts of high field strength.
- ㉝ **TEST signal switch**
Set to ON when tuning your TV receiver for the video channel. A test signal in the form of two vertical white bars will be available.
- ㉞ **SYSTEM select switch**
Set this switch to match the broadcast system of your television receiver (G or K). If the colour TV broadcast system in your area is PAL B/G or SECAM B/G, set it to "G"; if the colour TV broadcast system in your area is PAL D/K or SECAM D/K, set it to "K".
- ㉟ **RF converter frequency adjustment screw (CH40-CH32)**
(See page 6.)
- ㊱ **RF OUT connector**
Connect to the aerial terminal of a TV receiver through the aerial cable (provided).
- ㊲ **Power cord**

Remote Control Unit

- ① **TIMER button**
Press to engage the Timer Recording Standby mode.
- ② **OPERATE button**
Press to turn the recorder power on or off.
- ③ **PROGRAM button**
Press to programme the timer.
- ④ **C. RESET/CANCEL button**
 - Press to reset the realtime counter reading to "0H 00M 00S".
 - Press to cancel the preset programme in timer programming.
- ⑤ **SELECT button**
Press to select the item to be set in time programming.
- ⑥ **C. MEMORY/REPEAT button**
 - Press to engage the Counter Memory mode, "M" will appear on the FDP and the tape will stop automatically at the counter reading of "0H 00M 00S" when rewinding or fast-forwarding.
 - Press to enter the repeat command in timer programming.
- ⑦ **REW and FF (SHUTTLE SEARCH) buttons**
- ⑧ **SET (-/+)/TV PROG. (✓/∧) buttons**
Press to set to the correct date in timer programming or to select a desired channel.
- ⑨ **REC button**
Press together with the PLAY button ⑩ to start recording.
- ⑩ **PLAY button**
- ⑪ **STOP button**
- ⑫ **PAUSE/STILL button**



Operating distance for remote control unit

- The maximum operating distance is about 8 m.

Installing the batteries

- Insert two "R6"-size batteries (provided) into the battery compartment on the rear of the remote control unit, observing correct polarity.

CONNECTIONS

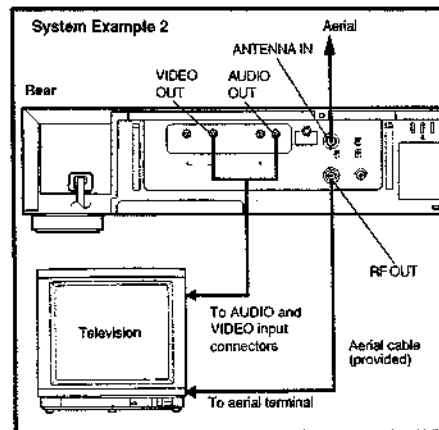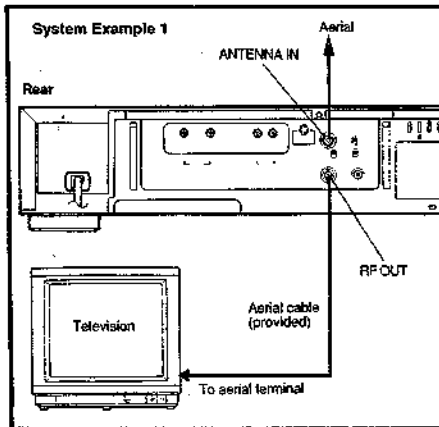

AERIAL AND RF CONNECTION

1. Remove the aerial cable from the television and reconnect it to the recorder's ANTENNA IN connector. The recorder is then ready to record off-air programmes.
2. Connect the recorder's RF OUT connector to the television's aerial terminal using the provided aerial cable. The television is then ready to receive broadcast programmes. When you are not using the recorder, the TV signals are fed to the television via this terminal.
3. Set the SYSTEM select switch **(S)** to the appropriate position according to your TV system. (Refer to the chart below.)

Switch position	Colour TV broadcast system	Major countries
G	PAL B/G	Singapore, Thailand, Malaysia
	SECAM B/G	Iran, Iraq, Saudi Arabia
K	PAL D/K	China, Mongolia
	SECAM D/K	Bulgaria, Czechoslovakia, Hungary, Poland, Rumania, U.S.S.R.

- If your television is equipped with the aerial terminal only, you view tape programmes also via this terminal. In this case, set the television to UHF channel 36 (or a UHF channel adjusted as the video channel). See "VIDEO CHANNEL SETTING" below.

AV CONNECTION

- If your television is equipped with AUDIO and VIDEO input connectors, connect the recorder's AUDIO OUT and VIDEO OUT connectors to the television's AUDIO and VIDEO input connectors.
- To view tape programmes via these connectors, set the television to the AV mode.

Note:


For switching the television's input mode, refer to the instruction manual of your television.

Notes:

- If some interference noise is seen on the screen because of broadcasts on neighbouring channels or if your preset broadcasts should be affected in picture quality, it is necessary to shift the RF converter output frequency from that of channel 36. Consult your JVC dealer for making this adjustment.
- Video channel setting is also possible using a prerecorded VHS video cassette. Play back the tape and tune the TV receiver to obtain clear pictures and sound while monitoring the playback picture on the TV screen.
- If your TV receiver is not provided with an AFC circuit, perform fine tuning of the TV receiver when you are actually viewing video cassettes.
- Set the SYSTEM select switch **(S)** to the appropriate position.


VIDEO CHANNEL SETTING

1. Press the OPERATE button **(O)** to turn the power on. Turn on the TV receiver.
2. Set the TEST switch **(T)** to ON.
3. Adjust your TV receiver in the vicinity of UHF channel 36 until you bring in the two white signal bars on the screen as illustrated. This is your VIDEO CHANNEL.
4. Reset the TEST switch to OFF.

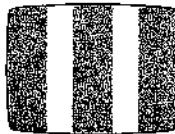


CLOCK SETTING

Plug the recorder into an AC outlet. The display shows a blinking 0:00.

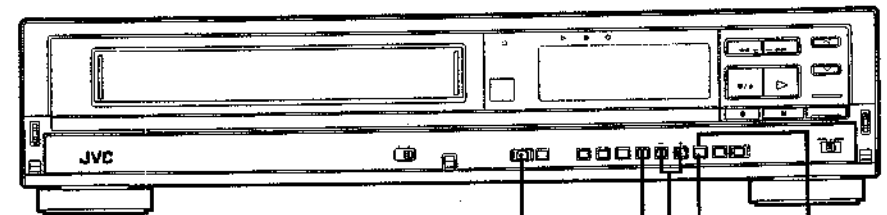

1. Press the CLOCK ADJUST button until the display shows the Clock Set mode with the hour indication blinking.
2. Set the hour and minute in that order by using the SELECT and SET buttons alternately.
 - The blinking position is ready for entry.
 - Press SET until the correct indication appears in each position.
3. Set the day, month and year in the same way.
 - In year setting, set only the last two digits of the year.
4. Press CLOCK ADJUST.
 - Press it at the exact instant of the time signal, and the clock will be set accurately to the present time.
 - The day-of-the-week indication will be displayed automatically.

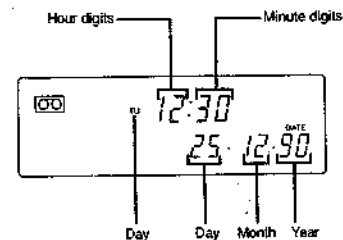

Notes:

- Clock setting is not possible in the timer recording standby mode. First check to see that the TIMER indicator on the FDP is not lit.
- Enter the data within 10 seconds after pressing the CLOCK ADJUST button.

SUMMER TIME ADJUST

This convenient feature is for quickly making the annual clock adjustment to the "summer time" (daylight saving time) setting, and back to regular time later.

1. Simply press and quickly release the SUMMER TIME ADJUST button in the Clock Set mode to set the clock forward by one hour.
2. Later in the year, to switch back to regular time, simply hold the SUMMER TIME ADJUST button pressed for 2 seconds to set the clock back by an hour.

DISPLAY OFF


Press the DISPLAY OFF button to make all indications on the FDP disappear when they are not required; the display will show "...". Press again to make the clock display reappear.

Power failure indicator

The blinking 0:00 (initial condition of the display) is also a power failure indicator, showing that there has been a power failure exceeding about 60 minutes. Readjusting the time restores the normal condition of the clock display.

OPERATING THE BUILT-IN TUNER

This recorder incorporates a voltage synthesized tuner with 48-channel preset capacity. Only channels stored can be called up with the TV PROG. buttons in modes other than Channel Set. In the Channel Set mode, all channel numbers including skipped ones are successively displayed so that they can be stored or skipped.

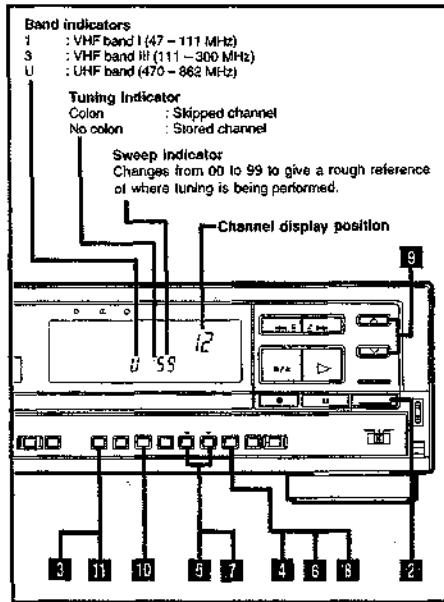

Storing channels

- Turn on the TV receiver and adjust it to your video channel.
- Turn on the recorder.
- Press CH. SET.
- Press SELECT.
 - The band indicator will blink.
- Press SET until the correct band indication appears.
- Press SELECT.
- Press SET until the desired broadcast signal is detected; use either the "-" or "+" button depending on the direction of search.
 - The sweep indicator will count down or up.
- Press SELECT.
 - The channel position display will blink.
- Press the TV PROG. buttons \vee or \wedge to select the programme number you wish to use for the broadcast signal selected.
- Press STORE. The "colon" will disappear.
 - Repeat steps 1 through 8 for all necessary channels.
- Press CH. SET to disengage the Channel Set mode.
 - Stored channels will be called up during up/down scanning with the TV PROG. buttons.

Skipping channels

- Press TV PROG. to select the channel to be skipped.
- Press CH. SET.
 - The band indicator and the sweep indicator corresponding to the broadcast stored in that channel will appear.
- Press SKIP Ⓢ . The "colon" will appear.
- Press CH. SET to disengage the Channel Set mode.
 - The skipped channel will not appear on the channel display during up/down scanning with the TV PROG. buttons.

Available channels in each band

Band indicator	Frequency	Channels
1	VHF band I (47 - 111 MHz)	E2 - E4 (Common European channels) S1 - S3, M1 (Belgium) X, Y, Z, S1 (Switzerland) R1 - R5 (Czechoslovakia, Hungary, Poland, U.S.S.R.)
3	VHF band III (111 - 300 MHz)	M2 - M10 (Belgium) S2 - S10 (West Germany, Switzerland) E5 - E12 (Common European channels) U1 - U10 (Belgium) S11 - S20 (West Germany, Switzerland) R6 - R12 (Czechoslovakia, Hungary, Poland, U.S.S.R.)
U	UHF band (470 - 862 MHz)	E21 - E69 (Common European channels) R21 - R69 (Czechoslovakia, Hungary, Poland, U.S.S.R.)

LOADING AND UNLOADING A CASSETTE

Motorized Loading System

- The cassette can be loaded even when the power has not been turned on. Inserting a cassette into the loading slot turns the power on automatically.
- The cassette can be unloaded even when the power has been turned off. If a cassette is inside, pressing the EJECT button turns the power on automatically and, after ejection of the cassette, shuts it off automatically.


Auto-Play System

- Inserting a cassette, with its safety tab removed, turns the recorder on and playback of the cassette begins automatically.

LOADING

Insert a cassette as illustrated with its labelled side facing you.

- With a cassette inserted, the "C" indicator appears on the FDP.
- The counter resets automatically when a cassette is inserted.

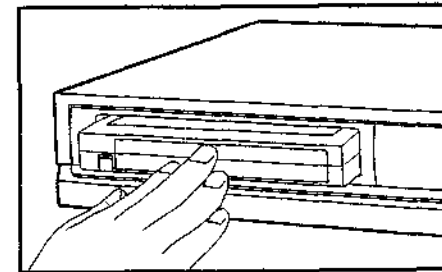

Notes:

- Be sure to insert the cassette firmly into the slot; otherwise it will be automatically ejected.
- The automatic loading mechanism will operate only when the cassette is inserted correctly.

UNLOADING

Press the STOP/EJECT button Ⓢ in the Stop mode.

Caution

- If unloading of a cassette is not possible, check to see whether the TIMER indicator is lit. If so, press the TIMER button so the TIMER indicator extinguishes.
- Do not attempt to pull out the cassette once automatic loading has started.

WARNING

- Do not insert fingers or any foreign object beyond the door flap of the cassette loading slot, as this could lead to injury or damage to the mechanism. Show special caution with children.

USABLE CASSETTES AND THEIR RECORDING TIME


Both regular VHS and S-VHS cassettes can be used with this video recorder for recording. However, only regular VHS recordings can be made and played back on this video recorder. S-VHS recordings can neither be made nor played back on this video recorder.

Type of Cassette	Recording/Playback Time
E-30	30 minutes
E-60	1 hour
E-90	1 hour, 30 minutes
E-120	2 hours
E-180	3 hours
E-240	4 hours

ACCIDENTAL ERASURE PREVENTION


- Video cassettes are equipped with a safety tab to prevent accidental erasure. When the tab is removed, recording cannot be performed. If you wish to record on a cassette whose tab has already been removed, use adhesive tape to block the hole.

VHS Cassette

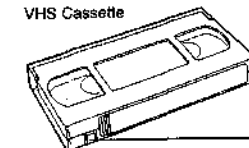

Safety tab

PLAYING BACK A VIDEO CASSETTE

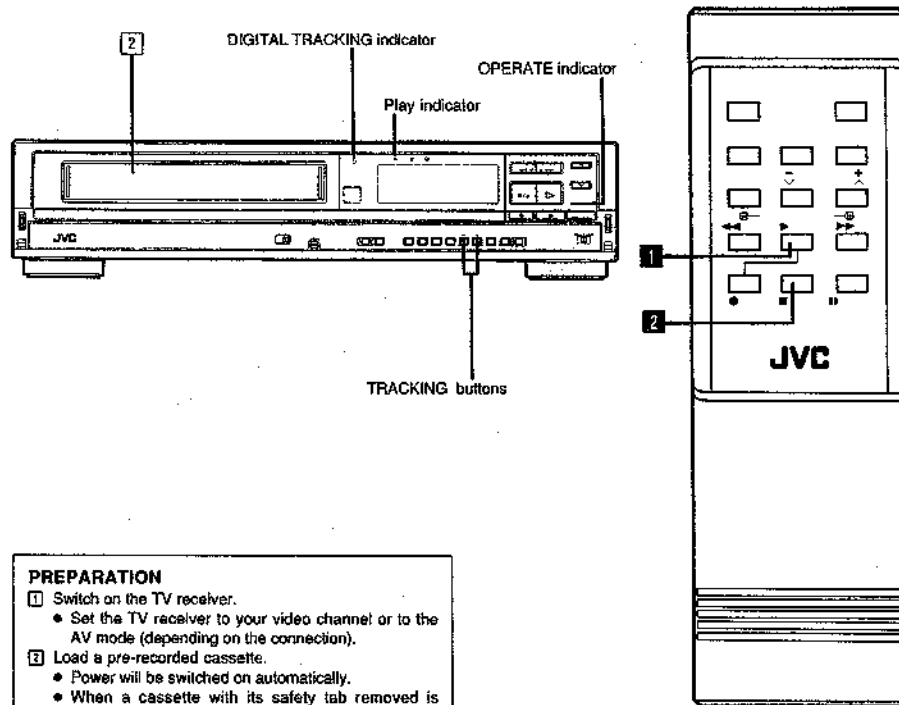

PREPARATION

- 1 Switch on the TV receiver.
 - Set the TV receiver to your video channel or to the AV mode (depending on the connection).
- 2 Load a pre-recorded cassette.
 - Power will be switched on automatically.
 - When a cassette with its safety tab removed is loaded, playback starts automatically.

DIGITAL TRACKING SYSTEM

This recorder incorporates a digital tracking system for automatic tracking adjustment. In most cases you do not have to adjust the tracking.

- When you start playback after inserting a tape, the digital tracking system automatically adjusts the tape path relative to the heads to obtain the best possible pictures.
- This automatic tracking adjustment also takes place when the playback output level reduces below a certain level.
- The DIGITAL TRACKING indicator blinks while the system is searching for optimum tracking, and remains lit as long as the automatic tracking mode continues.

If automatic tracking fails, and some noise bars are visible on the screen, use the manual tracking mode.

- Press both TRACKING buttons simultaneously to cancel the automatic mode, then press either button to move noise bars out of the screen.
- To return to the automatic mode, press both buttons simultaneously.

OPERATING PROCEDURE

- 1 Press the ► button.
- 2 Press the ■ button at the end of the programme.

Notes:

- For various convenience facilities and special-effects features available during playback, see the next two pages.
- The tape-end auto-rewind mechanism functions in the Play, Fast Forward and Forward Search modes.

CONVENIENT FACILITIES RELATED TO PLAYBACK

MEMORY PLAY

If you want to watch the tape from its beginning after rewinding, you do not have to wait for completion of rewind to press the ► button.

- Press the ◀◀ button and then ► button within 2 seconds. Playback will start automatically at the beginning of the tape. (Check to see that the counter memory indicator is off).

If you want to watch the tape from the counter reading of "0h 00m 00s", press the C. MEMORY button to obtain . Then, press the ◀◀ (or ▶▶) button and then ►.



- While the tape is being rewound, the Play (▶) indicator is blinking. To cancel the Memory Play mode and go to another mode, press the corresponding button (, ▶, ▶▶, ◀◀).

MEMORY POWER OFF

If you are going to turn the power off after rewinding the tape, press the OPERATE button within 2 seconds after pressing the ◀◀ button.

REPEAT PLAYBACK — FULL REPEAT OR INDEX REPEAT


This function allows you to set the video recorder for repeated playback (5 times) of the entire tape ("FULL REPEAT") or repeated playback (5 times) of a segment of the tape from one index mark to the next ("INDEX REPEAT"). An index mark is recorded automatically on the tape at the beginning of each recording.

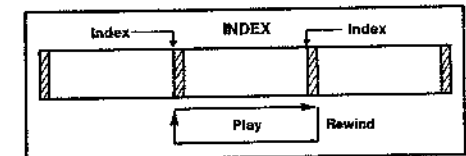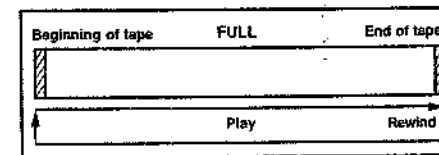

- Set the REPEAT switch as required. With the switch in the INDEX REPEAT position, when the tape reaches the nearest index mark during playback, it rewinds to the previous index mark and playback is repeated between these two index marks.

Note:
After repeat playback, be sure to reset the REPEAT switch to "OFF".

SPECIAL-EFFECTS PLAYBACK

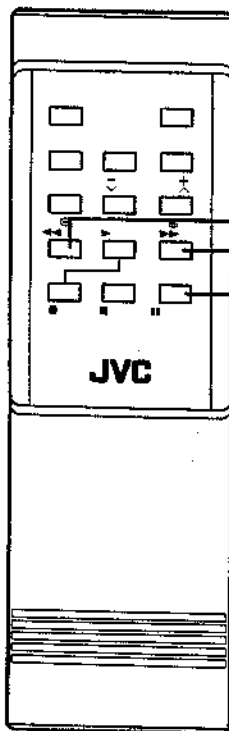

HIGH-SPEED REVERSE SEARCH

- ◀◀ button
- To rewind the tape, press this button in the Stop mode.
- To shuttle search the tape in the reverse direction, press this button in the Play mode.
- The shuttling speed is about 9 times normal.
- Press the ▶▶ button to return to normal playback.
- For briefer scanning, keep the ◀◀ button pressed for more than 2 seconds; when you release the button, the Search mode will be cancelled.

HIGH-SPEED FORWARD SEARCH

- ▶▶ button
- To fast forward the tape, press this button in the Stop mode.
- To shuttle search the tape in the forward direction, press this button in the Play mode.
- The shuttling speed is about 9 times normal.
- Press the ▶▶ button to return to normal playback.
- For briefer scanning, keep the button pressed for more than 2 seconds; when you release the ▶▶ button, the Search mode will be cancelled.

STILL PLAYBACK, FRAME ADVANCE AND SLOW MOTION


- ⏸ button
- To view a still picture, press this button in the Play mode.
- To advance the picture frame by frame, press this button again.
- To obtain slow-motion playback, keep this button pressed for more than 2 seconds.
- To return to the Still mode, press this button again.
- To return to normal playback, press the ▶▶ button.
- When the Still mode continues for longer than about 5 minutes, the Stop mode will be entered automatically.

Notes:

- With some televisions, the still picture may be unstable. If vertical vibration of the picture is observed, attempt to correct it by pressing the V.LOCK buttons.
- If noise bars are visible in the Still, Slow, or Frame-by-Frame mode, attempt to correct it in the manual tracking mode as described on page 10.

- No audio is available during any special-effects playback mode.

RECORDING TV PROGRAMMES

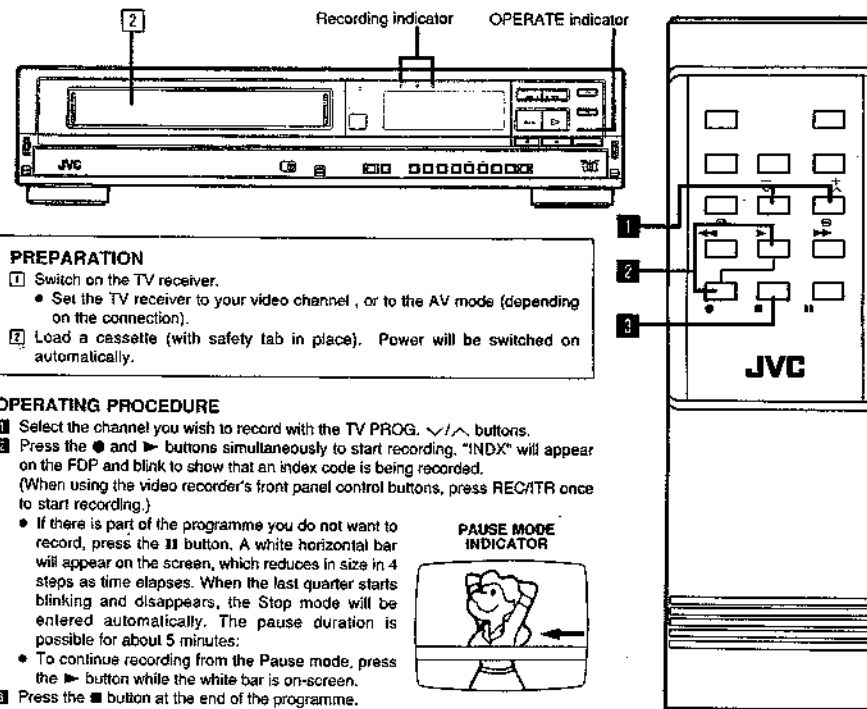

PREPARATION

- Switch on the TV receiver.
 - Set the TV receiver to your video channel, or to the AV mode (depending on the connection).
- Load a cassette (with safety tab in place). Power will be switched on automatically.

OPERATING PROCEDURE

- Select the channel you wish to record with the TV PROG. √/∧ buttons.
- Press the ● and ▶ buttons simultaneously to start recording. "INDX" will appear on the FDP and blink to show that an index code is being recorded. (When using the video recorder's front panel control buttons, press REC/ITR once to start recording.)
 - If there is part of the programme you do not want to record, press the ⏸ button. A white horizontal bar will appear on the screen, which reduces in size in 4 steps as time elapses. When the last quarter starts blinking and disappears, the Stop mode will be entered automatically. The pause duration is possible for about 5 minutes.
 - To continue recording from the Pause mode, press the ▶ button while the white bar is on-screen.
- Press the ■ button at the end of the programme.

RECORDING ONE TV PROGRAMME WHILE WATCHING ANOTHER

A programme not being viewed can be recorded while you enjoy viewing another programme. This permits the recorded programme to be played back later at your convenience.

The key points to remember are:

- Select the channel you wish to record with the recorder's channel selector.
- Select the channel you wish to view with the TV receiver's channel selector.

Notes:

- If the REC/ITR button is pressed more than once, the Instant Timer Recording mode will be entered (see page 15). To return to ordinary recording, repeatedly press the REC/ITR button until the ITR indicator on the FDP extinguishes.
- When recording is restarted from the Record-Pause mode, assemble recording is performed so that the playback picture will not distort at the edit point. A few frames recorded before the pause may be erased due to overlap of the new recording. This is not due to any defect of the unit.

- If the ● button cannot be engaged, check to see if the cassette safety tab has been removed. (See page 9).
- When the end of the tape is reached during recording, the tape is automatically rewound to the beginning and stops.
- The built-in tuner's automatic channel lock mechanism prevents the selected channel from being altered during recording. Therefore, if you wish to change the channel during recording, first engage the Record-Pause mode and then select a different channel.


CONVENIENT FACILITIES RELATED TO RECORDING

REALTIME TAPE COUNTER

Unlike usual tape counters which show tape locations in numbers, this realtime tape counter shows tape time precisely in hours, minutes and seconds in all modes. The counter resets automatically when a cassette is inserted.

ELAPSED RECORDING TIME INDICATION

When you need to know the exact time of a recording, press the C. RESET button before starting recording or playback. The counter will be reset to "0H 00M 00s" and show the exact elapsed time as the tape runs.



COUNTER MEMORY FUNCTION

- Press the C. RESET button at a point which you may wish to locate later.
 - The counter will read "0H 00M 00s".
- Press the C. MEMORY button. **M** will appear on the FDP.
- Press the **◀** (or **▶**) button when you need to return to the designated point.
 - The tape will rewind (or fast forward) and stop at about "0H 00M 00s" automatically.
 - The Counter Memory function can also be used in conjunction with the Memory Play function (page 11).


REMAINING TAPE TIME INDICATION

The tape counter can be switched to display the remaining tape time.

- Press the DISPLAY button **D** to obtain the REMAIN tape time indication in hours and minutes on the FDP.


Note:

- The indicated remaining time is approximate.



RETAKE FUNCTION

While in the Record-Pause mode, pressing the **▶▶** or **◀◀** button initiates normal-speed search in the corresponding direction. Releasing the button engages the Record-Pause mode. If you have recorded unnecessary material because of having engaged the Record-Pause mode too late, use this function to return to the position where you want the next recording to start. Then, simply press the **▶** button when you want to re-start recording.

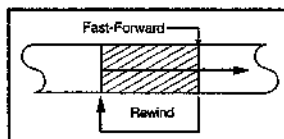

Note:

- Rainbow noise may occur in the rewound and re-recorded section.

INSTANT TIMER RECORDING

24-HOUR TIMER


The 24-Hour Timer Recording feature allows unattended automatic starting and stopping of the recording of a single programme which starts within a 24-hour period.

Preparation

- Insert a cassette with its safety tab in place. The recorder turns on automatically.
- Select the channel you wish to record from.

Setting the timer

- Press the START button **S** to engage the 24-Hour Instant Timer Set mode. The following appears on the FDP with the current time.
 - Each pressing delays the START time by 30 minutes
 - For a more precise time setting, use the SELECT and SET buttons.
- After reaching the desired START time, press the REC/ITR button the required number of times to set the desired length of recording time.
 - For a more precise time setting, use the SELECT and SET buttons.

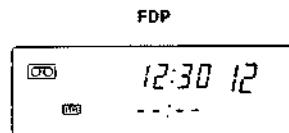

- After confirming the START time and recording length, press the OPERATE button.
 - "ITR" remains on the FDP and the 24-Hour Instant Timer Standby mode will automatically engaged.
 - If the programme has not been correctly preset, the "ITR" indicator will blink for about 10 seconds when the OPERATE button is pressed. Recheck the programmed data.

Notes:


- At each step of the timer setting procedure, if no data is entered within 10 seconds, the 24-Hour Timer Set mode is cancelled, and the current time is displayed.
- To cancel the 24-Hour Timer Set mode, press the CANCEL button once or twice depending on the setting status.
- 24-Hour Timer Recording has priority over other timer programme settings; therefore, no other programmes, set for timer recording, will be recorded until 24-Hour Timer Recording has been executed.

OFF-TIMER

- Start recording as described on page 13.

After you start recording, the recorder can be set to stop automatically after a certain period of time. Use this facility for starting a recording before you go to bed or leave home.

- Press the REC/ITR button while recording (or twice if in the Stop mode).
 - The following indication will appear on the FDP, to show that the recorder is recording in the Instant Timer Recording mode and power will switch off after 30 minutes.

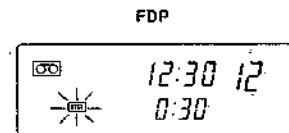

Notes:

- While recording is in progress, the displayed time counts down; when 0:00 is reached, the Record mode is released after 10 seconds and the power is switched off.
- If you want to stop recording after having started recording in the Instant Timer Record mode, press the STOP/EJECT button.
- If instant timer recording is engaged while the unit is in the Pause mode, the timer will count down normally, but recording will not begin until the PLAY button is pressed.
- When the Instant Timer Record-Pause mode continues for longer than 5 minutes, the mode is released and power is switched off.
- If you want to check the elapsed time (Realtime Counter reading) on the FDP while performing Instant Timer Recording, press the DISPLAY button to obtain the desired indication. After about 5 seconds, the indicator will return to the ITR mode and the remaining time indication will reappear automatically.

- Each time the REC/ITR button is pressed, recording time increases by 30 minutes to a maximum of 4 hours. If the REC/ITR button is pressed again, the Normal Recording mode will be entered.
 - For a more precise time setting, use the SELECT and SET buttons to set to the exact time required (possible up to 4 hours and 59 minutes).


AUTOMATIC TIMER RECORDING



First of all, load a cassette (with safety tab in place); power will be switched on automatically.

Two ways to perform timer programming


- A. Local programming:** Programme the timer using the recorder's controls while referring to the recorder's FDP.
- B. Direct remote programming:** Programme the timer using the remote control's buttons while referring to the recorder's FDP.

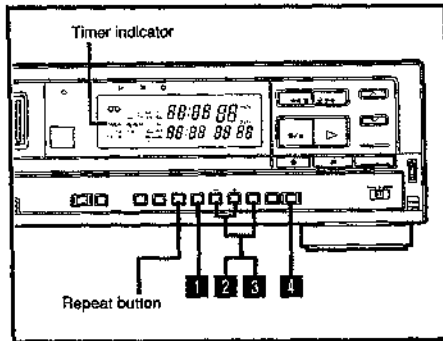

A. Local Programming

- 1 Press PROGRAM button .
 - The display will change to the Timer Set mode for programme number "1". To advance to programme number 2 - 8, press either SET button a required number of times.
- 2 Set the start time by using the SELECT button and the SET buttons alternately.
 - Select the item to be set with the SELECT button; the selected item will blink.
 - Set the desired data with the SET \rightarrow buttons.
 - To record a weekly serial, press the REPEAT button once.
 - To record a daily serial starting on a certain day, press REPEAT twice.

- 3 Set the stop time, date and channel in succession in the same way as for setting the start time.
 - To record a daily serial starting on the day of setting, there is no need to enter any date figure; simply advance to the next item.
 - For programming the timer to record an external source, while the channel position is blinking, press SET \rightarrow until the "AU" indicator appears in the channel display section on the FDP.

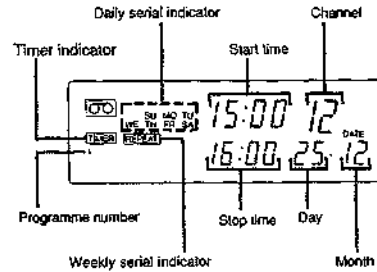

- 4 After making sure that the cassette is loaded, press the TIMER button .
 - The Timer Recording Standby mode will be engaged with the TIMER indicator and the preset programme number(s) illuminated and the power turned off.
 - With no cassette loaded, the TIMER and "cassette loaded" indicators will continue blinking.
 - A cassette whose safety tab has been removed will be ejected automatically.
 - If a preset programme contains errors, the programme number will not illuminate. Recheck the programmed data.

CONTINUED ON NEXT PAGE

B. Direct Remote Programming

Following the procedures on the previous page, use the remote control's buttons instead of the recorder's with the remote control directed toward the recorder's infrared beam receiving window .

Setting the date, start and stop times, and channel


- It is not possible to set the date, start and stop times unless the date and clock have previously been set.
- Enter the data while the digits are blinking.
- The stop time can be set within 24 hours of the start time.
- Non-applicable numbers (such as January 32, February 30 for dates, 24 or larger for hours, 60 or larger for minutes and 49 or larger for channels) will be rejected when keyed in.

Cancelling the preset data

- The preset programmes can be cancelled. First disengage the Timer Standby mode and engage the Timer Set mode for the programme number you wish to cancel and then press the CANCEL button or .
- An executed programme is automatically cleared.

Timer recording operation

- When the preset start time is reached, recording starts.
- After timer recording, the power is switched off. If the end of the tape is reached during timer recording, the cassette is automatically ejected and then the power is switched off.

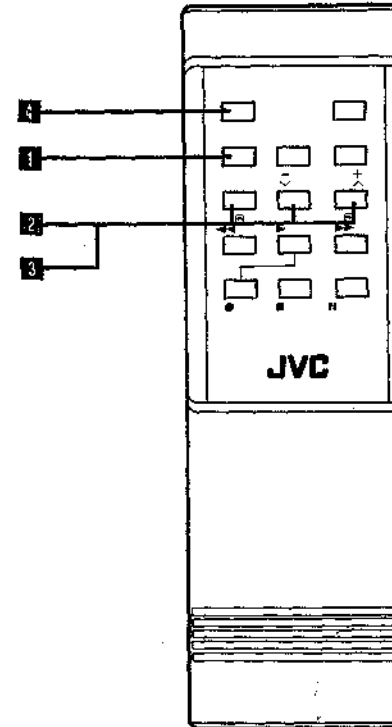


CHILD LOCK FUNCTION

The Child Lock function is for preventing accidental operation by young children, or other unwanted operation, such as playing back or recording over an important cassette you may have left inserted in the recorder. By engaging the Child Lock mode, the operation buttons on the recorder become ineffective, unless the remote control is used.

To engage the Child Lock mode

- Press the remote control's OPERATE button (1) to turn the recorder power off and keep this button pressed for about 2 seconds after the power LED indicator has gone off.
- The Child Lock indicator (-) will appear in the channel display section on the FDP to show that the recorder is now in the Child Lock mode.

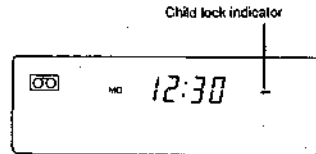

To disengage the Child Lock mode

- When the remote control's OPERATE button is pressed to turn the recorder power on, this disengages the Child Lock mode. The recorder will turn on and the corresponding display will appear with the channel number appearing where the child lock indicator appeared before.
- Pressing the TIMER button during timer recording also disengages the Child Lock mode.

Notes:

- While in the Child Lock mode, the recorder can receive timer programmed data from the remote control.
- Timer recording is possible also, even while in the Child Lock mode. After timer recording has been performed, the Child Lock mode remains in effect.
- Even after automatic cassette ejection at tape end, following timer recording, the Child Lock mode remains in effect.
- It is possible to insert a cassette while in the Child Lock mode. After inserting a cassette, the Child Lock mode remains in effect.

RECORDING FROM AN EXTERNAL SOURCE

By connecting an external video source (such as a 2nd video recorder, VideoMovie camera-recorder, etc.) to the VIDEO IN and AUDIO IN connectors, tape-to-tape transfer is possible.

- For connection of these units, an appropriate cable is necessary.

Connection


1. Connect the VIDEO IN (1) and AUDIO IN (2) connectors to the appropriate VIDEO and AUDIO output of the 2nd video recorder.
2. Connect a TV receiver to the recorder to monitor the picture while recording.

Operation

1. Turn the power on for all connected equipment.
2. Tune the TV receiver to your video channel.
3. Load a cassette with its safety tab in place.
4. Press either TV PROG. button (3) to obtain "AU" in the channel display section on the FDP.
5. Press the REC/TR button (4) and the PAUSE/STILL/SLOW button (5) to put the recorder in the Record-Pause mode.
6. Play back a tape on the source equipment to determine the segment to be recorded.
7. Press the PLAY button (6) to start recording.
8. To stop recording temporarily, press the PAUSE/STILL/SLOW button.
9. To end recording, press the STOP/EJECT button (7).

Note:

- For the operation of the source equipment, refer to the instruction manual of the relevant machine.

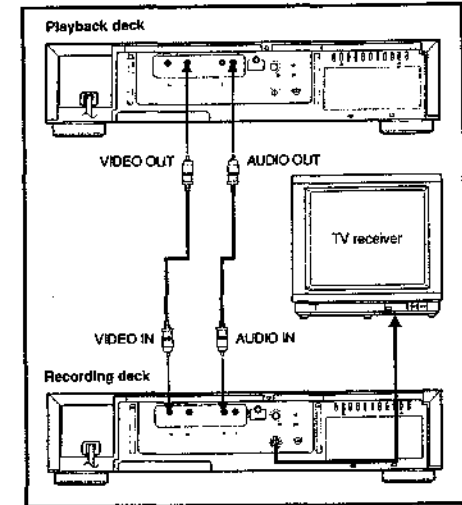


EDITING TO ANOTHER VIDEO RECORDER

This video recorder can also be used as the source player when editing tapes. This video recorder's remote PAUSE terminal is designed to accept a preroll command when used as a source player with a video deck which is preroll-capable and equipped with a Pause Control Output terminal. This combination makes possible synchronized preroll editing for high-quality editing results.

EDITING FROM A VIDEOMOVIE

- Connect the VideoMovie's AV OUT connector to the video recorder's VIDEO IN and AUDIO IN connectors.
- Connect the mini-plug of the AV output cable to the remote PAUSE terminal of the video recorder.
- When the recorder is connected to a VideoMovie which incorporates a Master Edit Control system*, you can control the recorder with the VideoMovie's controls for making edits free of transition-point gaps and distortion. Refer to the VideoMovie's instruction manual for detailed operating procedures for editing.
- With this connection, you can also use the VideoMovie as a video camera for direct recording onto the recorder's tape. Put the recorder in the Record-Pause mode and operate the VideoMovie's start/stop trigger to start and pause recording. (For direct recording with a separate video camera, a camera adapter is necessary.)

*JVC dedicated models only.

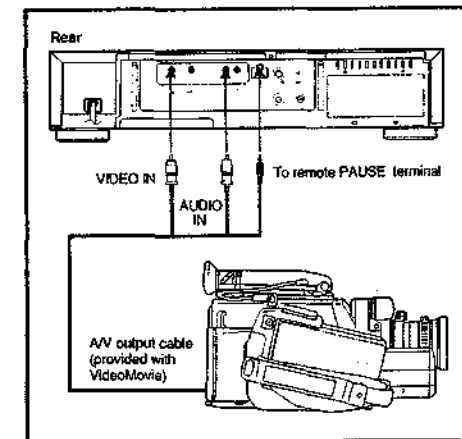

IN CASE OF DIFFICULTY

What may initially appear to be trouble is not always a real problem. Make sure first ...

POWER AND TAPE TRANSPORT PROBLEMS

Symptoms	Check points
No power is applied to the recorder.	<ul style="list-style-type: none"> Is the power cord disconnected? — Connect it.
Clock is functioning properly, but the recorder cannot be powered.	<ul style="list-style-type: none"> Is the TIMER indicator lit on the FDP? — Press TIMER to disengage the Timer Recording Standby mode.
Tape does not run during recording.	<ul style="list-style-type: none"> Is the PAUSE/STILL/SLOW button engaged? — Press the PLAY button.
Tape stops in the Rewind or Fast-Forward mode.	<ul style="list-style-type: none"> Is the COUNTER MEMORY switch set so that "M" appears on the FDP? — Press to make "M" disappear.
Tape will not rewind or fast forward.	<ul style="list-style-type: none"> Is the tape already fully rewound or fast forwarded? — Check the cassette.

RECORDING PROBLEMS

Symptoms	Check points
Recording cannot be started.	<ul style="list-style-type: none"> Is a cassette loaded? Is the safety tab on the cassette removed? — Reseal the slot with cellophane tape.
Camera recording is not possible.	<ul style="list-style-type: none"> Are the camera and the camera adapter correctly connected? Is the power switch of the camera adapter set to ON? Does the channel display indicate "AU"? — Press TV PROG. until "AU" appears in the channel display.
Timer recording is not possible.	<ul style="list-style-type: none"> Have you set the clock correctly and programmed the timer correctly? — Check once again. Is the TIMER indicator lit on the FDP? — Press TIMER.

PLAYBACK PROBLEMS

Symptoms	Check points
Playback picture does not appear while the tape is running	<ul style="list-style-type: none"> Is the TV receiver's channel selector set to the correct video channel? — Set it to the RF converter channel. (See page 6.) If you are using AV connection, is the television engaged in the AV mode? — Operate the television's mode.
Playback is repeated.	<ul style="list-style-type: none"> Is the REPEAT switch set to either "FULL REPEAT" or "INDEX REPEAT"? — Set it to "OFF".
Noise appears during playback.	<ul style="list-style-type: none"> Is the automatic tracking mode engaged? — Engage the manual tracking mode. (See page 10.)
Playback picture is blurred or interrupted while TV broadcasts are clear.	<ul style="list-style-type: none"> Video heads may be dirty. — Head cleaning is necessary. Consult your JVC dealer.
Picture is normal but no sound.	<ul style="list-style-type: none"> Is the SYSTEM select switch set to the appropriate position? — Set to G or K depending on the system of your television receiver.

OTHERS

Symptoms	Check points
Whistling or howling is heard from TV.	<ul style="list-style-type: none"> Move camera or microphone away from TV or reduce TV sound volume.
Some channels are skipped over when selecting a channel.	<ul style="list-style-type: none"> Those channels are preset to be skipped over. If you need them, restore them.
Channel cannot be switched.	<ul style="list-style-type: none"> Is recording in progress? — Press PAUSE/STILL/SLOW, select a desired channel and press PLAY.
The recorder cannot be operated with the remote control.	<ul style="list-style-type: none"> Batteries are discharged. — Replace with new one.

This recorder contains microcomputers. External electronic noise or interference could cause malfunctioning. In such cases, switch the power off and unplug the power cord. Then plug it in again and switch on. Take out the cassette. After checking the cassette, operate the unit as usual.

HEAD CLEANING

- Picture playback may become blurred or interrupted while the TV programme received is clear. This does not mean that the recorded programme has been erased.
- Dirt accumulated on the video heads after long periods of use causes such problems. In this case, head cleaning requiring highly technical care is necessary.

For head cleaning, consult the nearest JVC dealer.



SPECIFICATIONS

GENERAL

Power requirement	: AC 110 — 240 V~, 50/60 Hz
Power consumption	: 21 W
Temperature	: 5°C to 40°C (Operating) : -20°C to 60°C (Storage)
Operating position	: Horizontal only
Dimensions (WxHxD)	: 435 x 94 x 322 mm
Weight	: 5.3 kg
Format	: VHS PAL standard
Tape width	: 12.65 mm
Tape speed	: 23.39 mm/sec
Maximum recording time	: 240 min. with E-240 video cassette

VIDEO

Signal system	: PAL colour and CCIR monochrome signals, 625 lines/50 fields (See "WARNING")
Recording system	: Rotary, slant azimuth two-head helical scan system
Input	: 0.5 to 2.0 V _{p-p} , 75 ohms, unbalanced
Output	: 1.0 V _{p-p} , 75 ohms, unbalanced
Signal-to-noise ratio	: 43 dB (Rohde & Schwarz noise meter)
Horizontal resolution	: 250 lines

AUDIO

Recording system	: Longitudinal track
Input	: Line: -8 dBs, 50 k-ohms, unbalanced
Output level	: -6 dBs, high impedance load
Output impedance	: Less than 1 k-ohm, unbalanced
Frequency range	: 70 Hz to 10,000 Hz

TUNER

Tuning system	: Voltage synthesized tuner
TV channel storage capacity	: 48 positions (+ AUX position "AU")
Channel coverage	: VHF 47 — 111 MHz 111 — 300 MHz UHF 470 — 862 MHz
Aerial output	: UHF channel 36 (adjustable 32 — 40)

TIMER

Clock reference	: Quartz-crystal
Programme capacity	: 1-year/8-programme timer
Memory back-up time	: 60 min.

ACCESSORIES

Provided accessories	: Aerial cable, Infrared remote control unit, "R6" battery x 2, Video cassette tape
----------------------	--

Design and specifications subject to change without notice.

WARNING

1. In addition to PAL B/G and PAL D/K colour television signals, this recorder can also receive SECAM B/G and SECAM D/K colour television signals. SECAM B/G and SECAM D/K colour television signals can be recorded and played back in colour as far as this same recorder is used for recording and playback.
2. SECAM B/G and SECAM D/K colour television signals recorded on this recorder produce monochrome pictures if played back on another PAL or SECAM recorder.
3. SECAM B/G and SECAM D/K colour television signals recorded on another PAL or SECAM recorder produce monochrome pictures if played back on this recorder.
4. This recorder cannot be used in France. Use in France a recorder which is capable of receiving SECAM L colour television signals.
5. SECAM L prerecorded cassettes or recordings made with a SECAM L video recorder produce monochrome pictures when played back on this recorder.

SECTION 1 DISASSEMBLY AND MECHANISM ADJUSTMENTS

1.1 DISASSEMBLY

1.1.1 Top cover

1. Refer to Fig. 1-1-1 and set for the EJECT (Stop) mode and disconnect VCR from AC power.
2. Take out 4 screws (A) and 1 screw (B). To remove the top cover, slide it in the direction of the arrow and lift it away.

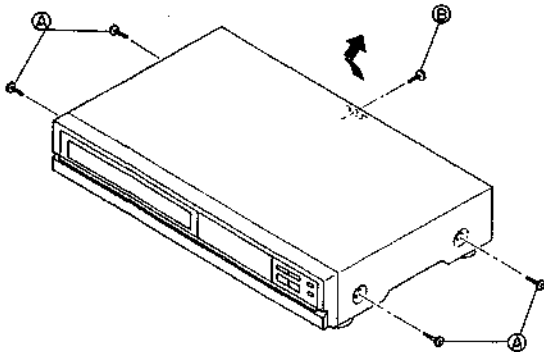


Fig. 1-1-1

1.1.3 Bottom cover

1. Remove the top cover.
2. Refer to Fig. 1-1-3 and take out 4 screws (E) and 2 screws (F) from the bottom of the chassis.
3. Disengage the bottom cover from 5 claws (G) on the bottom of the chassis.

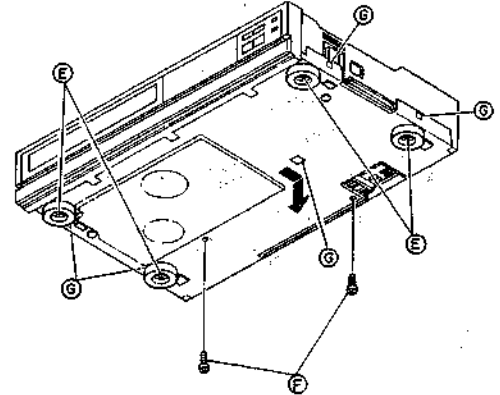


Fig. 1-1-3

1.1.2 Front panel assembly

1. Remove the top cover.
2. Carefully disengage 3 tabs (C) of the front panel assembly from the upper side of the chassis.
3. Refer to Fig. 1-1-2 and pull the front panel assembly forward you to disengage 3 tabs (D) of the front panel assembly from the bottom side of the chassis, then remove the front panel assembly.

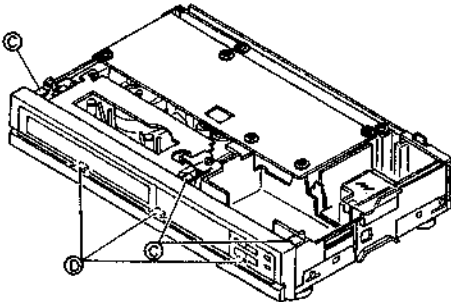


Fig. 1-1-2

1.1.4 Main board assembly

1. Remove the top cover.
2. Refer to Fig. 1-1-4 and take out 5 screws (H) and 1 screw (I) from main board assembly.

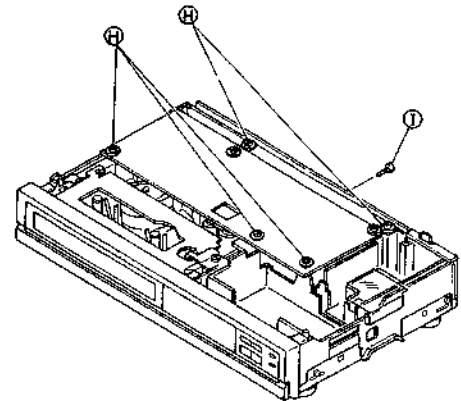


Fig. 1-1-4

1.1.5 Cassette housing

1. Remove the top cover and main board assembly.
2. Refer to Figs. 1-1-5 and 1-1-6.
Take out 4 screws (J) that secure the cassette housing. Disengage 3 tabs (K) of the front panel and pull the front panel forward where it does not interfere with removing the cassette housing.
Take out 2 screws (P) and remove the drum shield cover. Remove the cassette housing in the upward direction.

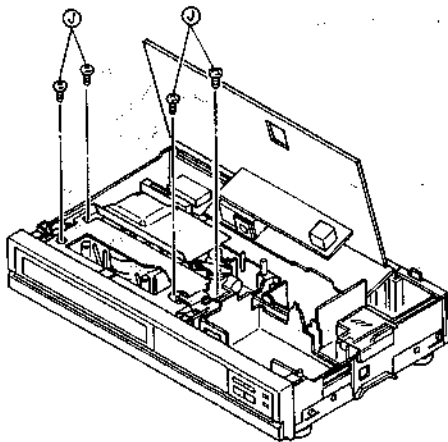


Fig. 1-1-5

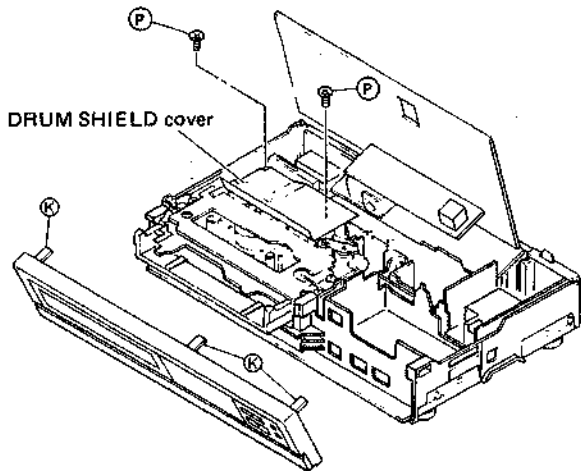


Fig. 1-1-6

1.1.6 Cassette housing installation

1. On the main deck, observe the positional relationships of the parts indicated in Fig. 1-1-7.
If necessary, turn the loading motor by hand to obtain these positions.

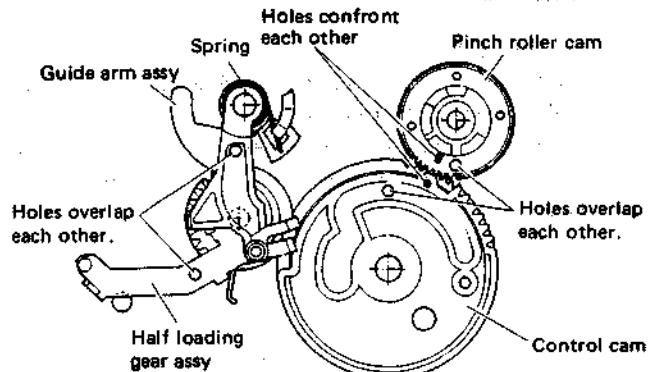


Fig. 1-1-7

2. Refer to Fig. 1-1-8 and confirm that the clutch is engaged.
If necessary, press the lever indicated by the arrow to where the clutch is locked.

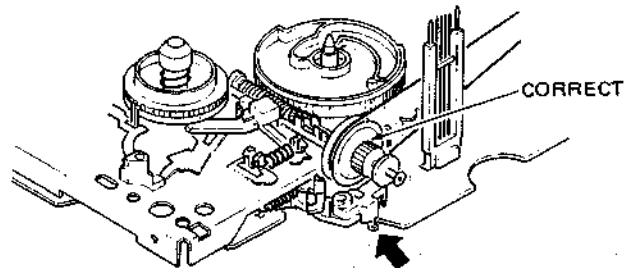


Fig. 1-1-8

3. Check that the cassette housing is in the eject state (internal holder of the cassette housing is locked in raised position).
Set the cassette housing into place and secure with 4 screws.
4. Install the front panel as shown in Fig. 1-1-9 and re-engage the tabs. Supply power and use a spare cassette to check for normal loading and eject operations.

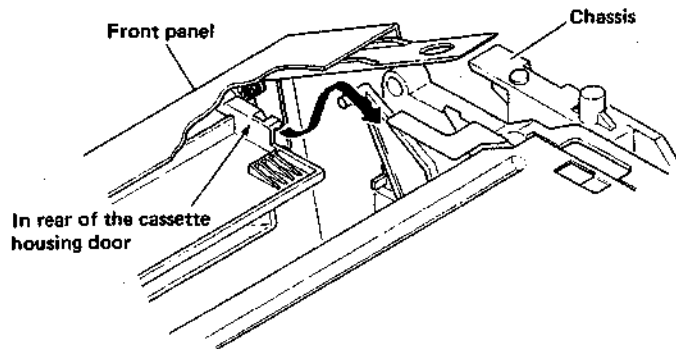


Fig. 1-1-9

5. Disconnect VCR from power, then reinstall the main board assembly and top cover.

1.1.7 Cassette housing door

1. Remove the top cover and front panel assembly.
2. Take out one screw (L) of the front panel assembly.
3. Refer to Fig. 1-1-10 and use care regarding the torsion spring, then pull out the left end of the cassette housing door to move it.

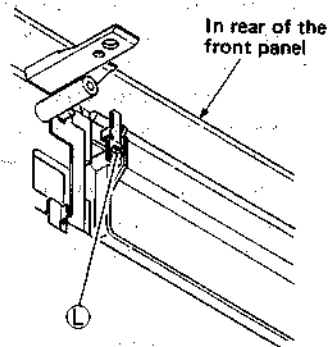


Fig. 1-1-10

1.1.8 Main-deck

1. Remove the top cover, front panel assembly and main board assembly.
2. Refer to Fig. 1-1-11 and take out 3 screws (M) from the main-deck assembly.
3. Remove the main-deck assembly in the upward direction and disconnect a connector of CN601 from the Main board, connectors of CN1, CN2 from the Pre/Rec board, connectors of CN1, CN2 from the A/C head board, a connector of CN1 from the Loading MDA board and a connector of CN1 from the Drum MDA board.

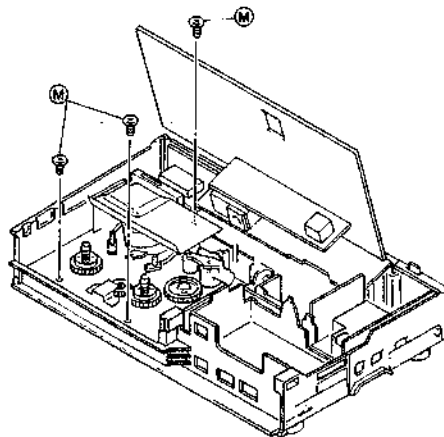


Fig. 1-1-11

1.2 MECHANISM ADJUSTMENTS

1.2.1 Precautions

1. Disconnect mainframe from AC power before soldering.
2. Avoid imparting stress to wires when disengaging connectors.
3. Determine and correct the cause of difficulty before proceeding to adjustments. Do not disturb settings unnecessarily.
4. Use care not to damage tabs, claws, etc. during repairs.
5. Install the cassette housing assembly only when the mechanism is in the Eject or Stop mode position. In the Eject mode, the internal holder of the housing is fully raised. This is fully lowered in the Stop mode.
6. When installing the front panel assembly, be sure to engage the housing door with the door lever of the cassette housing assembly. If this is omitted, the door will not open at Eject and the cassette cannot be removed.

1.2.2 Check without cassette housing

Mechanism operations can be observed easily by removing the cassette housing assembly. Note the following.

1. Disable the photo transistor sensor (END SENSOR) on the main-deck by applying an opaque cover.
2. Connect pins 2 and 3 of Main board connector CN601.
3. Select the desired modes with the operation buttons. However, notice that without tape, setting for the reverse direction modes produces the Stop mode after a few seconds due to absence of the reel sensor output.

1.2.3 Manually removing cassette tape

In event of electrical system failure that prevents the tape from being unloaded, the tape can be removed manually by the following procedure. Refer to Figs. 1-3-1, 1-3-2 and 1-3-3.

1. Disconnect power cord from AC outlet.
2. Turn the loading motor by hand so that the control cam rotates clockwise. This retracts the pole base assembly to the unloading position.
3. Continue turning to where the guide arm and half loading gear assemblies shift to beneath the cassette.
4. Turn the clutch assembly (capstan motor) at the rear of the deck to absorb slack tape within the cassette.
5. Again turn the loading motor in the same direction to raise the cassette and remove it.

1.2.4 Test equipment

The following special tools and fixtures are required for mechanism adjustment.

1. Alignment tape : MH-2
Stairstep signal is employed for interchangeability checks and adjustments.
2. Torque gauge : PUJ48075-2
Measures tape take-up torque.
3. Back tension cassette gauge : PUJ48076-2
Measures tape tension at the supply side.
4. A/C head positioning tool : PUJ47351-2
Shifts the head base for adjusting the control head position.
5. Roller driver : PTU94002
Turns the guide roller for adjusting FM linearity.

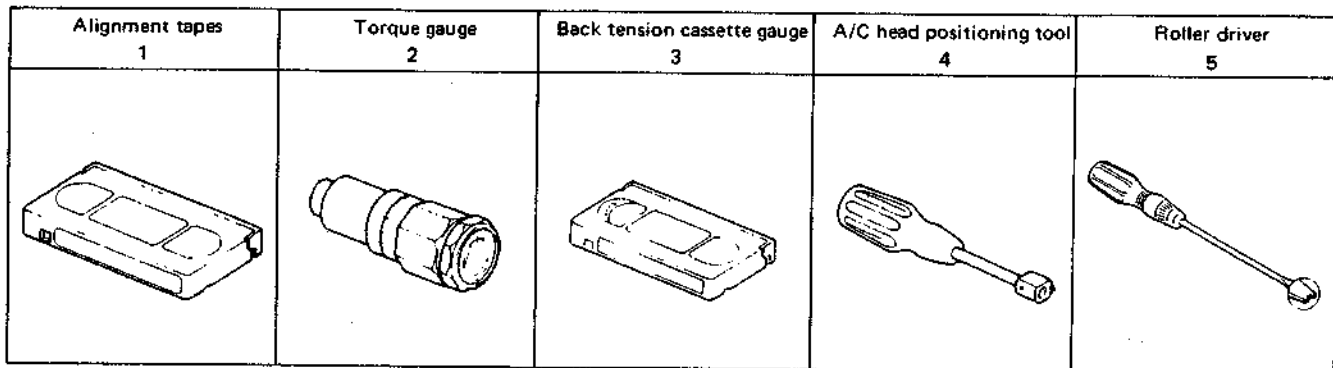


Fig. 1-2-4 Test equipment

1.3 MAIN MECHANISM PARTS

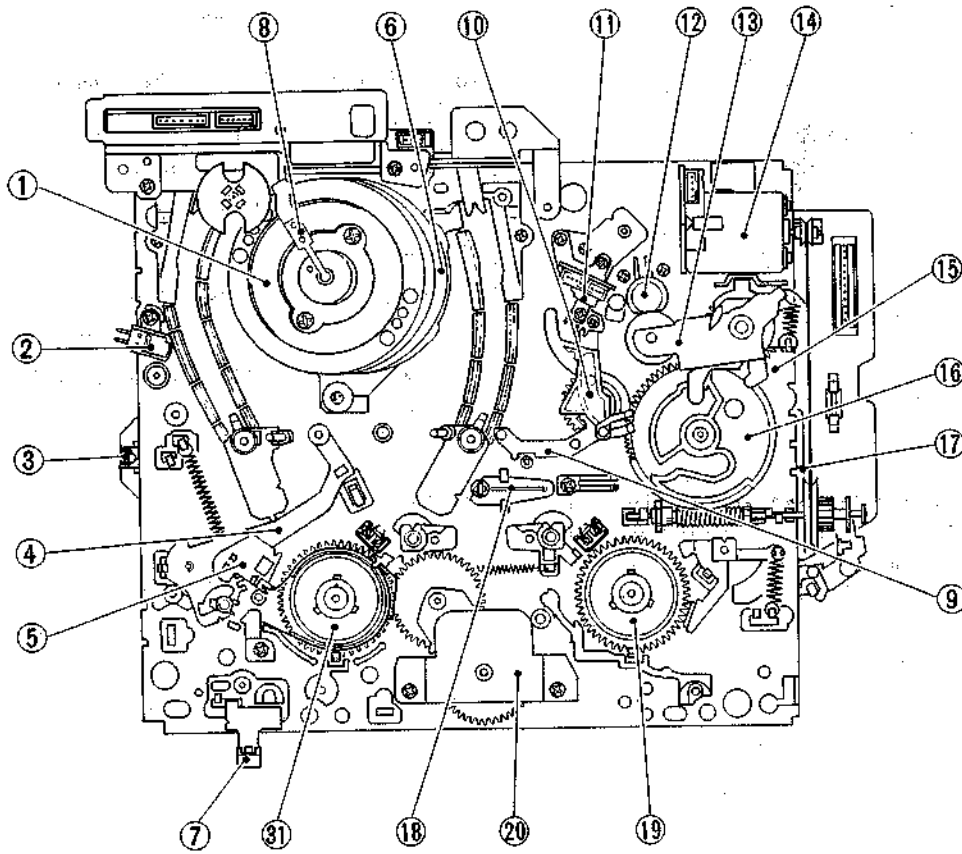


Fig. 1-3-1 Top view of main-deck

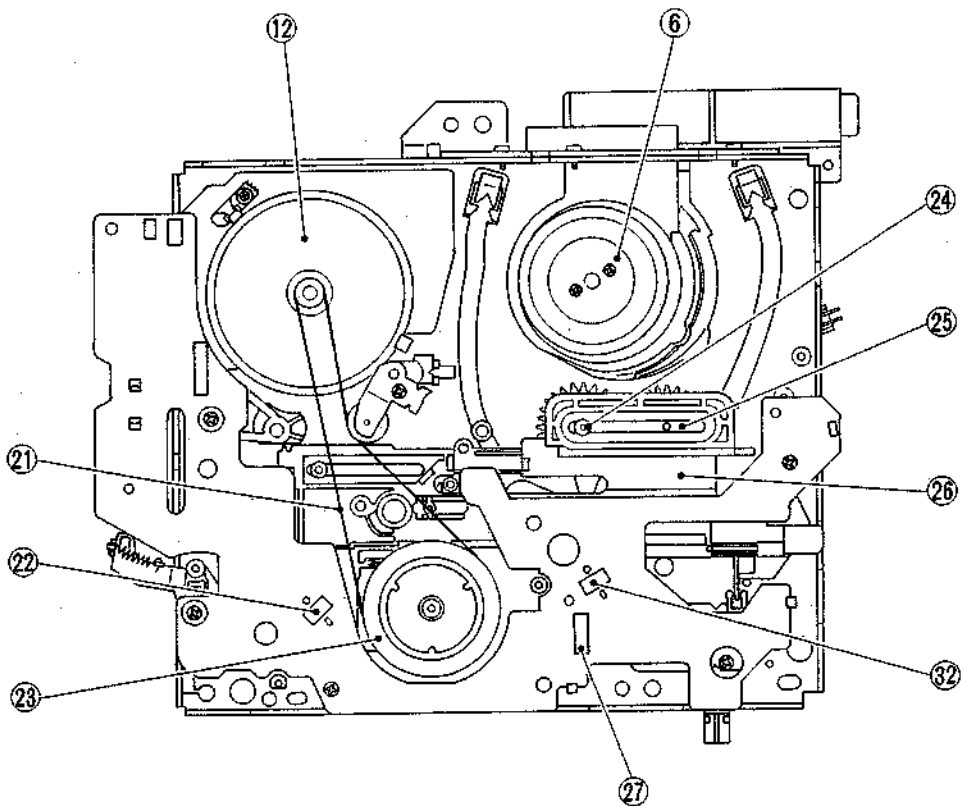


Fig. 1-3-2 Bottom view of main-deck

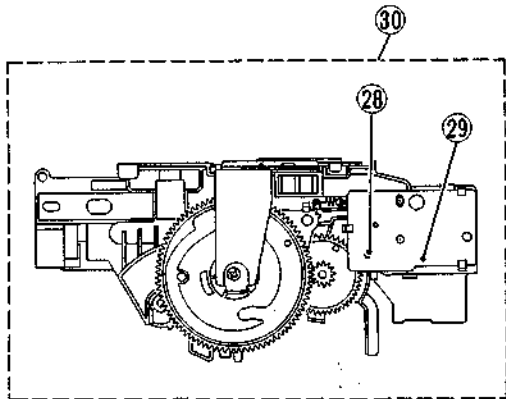


Fig. 1-3-3 Side view of cassette housing

C. Main mechanical parts

See Figs. 1-3-1, 1-3-2 and 1-3-3.

No.	Symbol	Parts Name	See Section
1	M32A	Upper drum assy	
2	M44	Full erase head	
3	51Q1	End sensor	
4	M41	Tension arm assy	1.5.4
5	M42	Tension band assy	1.5.4
6	M32C	Lower drum motor assy	1.5.2
7	M461	REC safety switch (S2)	
8	M32D	Brush assy	
9	M449	Half loading gear assy	1.5.5
10	M447	Guide arm assy	1.5.5
11	M48	A/C head	1.5.3
12	M422	Capstan motor	
13	M442	Pinch roller arm assy	
14	M434	Loading motor assy	
15	M446	Pinch roller cam	1.5.5
16	M438	Control cam	1.5.5
17	M437	Loading belt	
18	M460	LED holder (D1)	
19	M430	Reel disk (take-up)	
20	M424	Idler gear unit	
21	M429	Timing belt	
22	51PS1	Take up reel sensor (PS1)	
23	M426	Clutch unit	1.5.6
24	M433	Take up loading arm assy	1.5.7
25	M432	Supply loading arm assy	1.5.7
26	M439	Plate assy	1.5.7
27	M462	Slide switch (S3)	
28	56PHS3	Cassette sensor (PHS3)	
29	56Q2	Start sensor (Q2)	
30	M36	Cassette housing assy	
31	M470	Reel disk (supply)	
32	51PS2	Supply reel sensor (PS2)	

• Symbol interpretation example



A. Cleaning

Periodic cleaning of the tape transport system is desirable, but ordinarily not feasible in practice. Therefore, perform cleaning when a set is brought in for repairs or maintenance. Contamination of the video heads, tape guides and brushes can detract from playback picture quality and in extreme cases, even damage the tape. For cleaning, use a fine-mesh cotton cloth (about the texture of a white dress-shirt) moistened in alcohol.

- To clean the video heads, press the moistened cloth gently against the upper drum with fingertip and turn the drum by hand.
- Do not use a vertical stroke, as this may damage the heads.

B. Lubrication

Oil and grease do not normally require periodic replenishing. Apply only when replacing lubricated parts (also clean and replace lubrication of mating parts if soiled).

For parts and points to apply oil and grease, refer to the exploded views of the mechanism assembly.

Before oiling, clean with alcohol.

Apply one or two drops of oil. Avoid excess oil.

1. Table 1-1 indicates the oil and grease used in this set. Use these or recommended locally available equivalents.

Category	Part No.
Oil	COSMO-HV56
Grease	KANTO-G-31KAV

Table 1-1

2. Grease is not required for a replacement cassette housing assembly, as this has been applied at the factory.

Note: Stir grease that has been stored for an extended period.

1.4 INSPECTION AND MAINTENANCE

This product employs rotary and moving parts which wear out in the course of usage. Periodic inspection, cleaning, lubrication and maintenance are therefore important for ensuring maximum performance. Worn parts must also be replaced at when required.

1.4.1 Suggested servicing schedule for main components

The following table indicates the suggested period for such service measures as cleaning, lubrication and replacement. In practice, the indicated periods will vary widely according to environmental and usage conditions. However, the indicated components should be inspected when a set is brought for service and the maintenance work performed if necessary.

Also note that rubber parts may deform in time, even if the set is not used.

System	No.	Parts Name	Symbol No.	Periodic servicing schedule (operation hours)								Overhaul
				250	500	750	1000	1250	1500	1750	2000	
Tape Transport	1	Upper drum	M32A	★	★	☆	○	○	○	○	○	●
	11	A/C head	M48	★	★	★	○	○	○	○	○	●
	13	Pinch roller	M442	★	★	★	○	○	○	○	○	●
	2	Full erase head	M44	★	★	★	○	○	○	○	○	●
	4	Tension arm	M41									●
	6	Lower drum	M32C				○	○	○	○	○	●
	12	Capstan (shaft)	M422	★	★	★	★	★	★	★	★	●
	9	Half loading gear	M449									●
	10	Guide arm	M447									●
	Drive	12	Capstan motor	M422				○	○	○	○	○
17		Loading Belt	M437				○	○	○	○	○	●
21		Reel Belt	M424				○	○	○	○	○	●
19		Take-up reel disk	M430				○	○	○	○	○	●
31		Supply reel disk	M470				○	○	○	○	○	●
23		Clutch assy	M426								○	●
14		Loading motor	M434				○	○	○	○	○	●
26		Worm clutch assy	M436								△	●
Others	5	Tension band	M42				○				○	●
	8	Brush	M32D				○				○	●

★ : Cleaning

☆ : Cleaning (or Replacement if necessary)

△ : Lubrication

No: Refer to Main mechanical parts




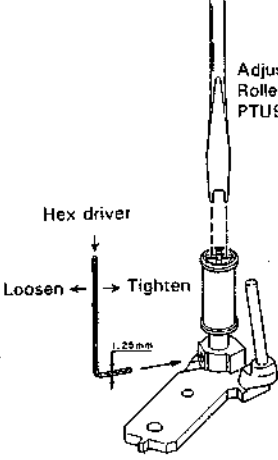
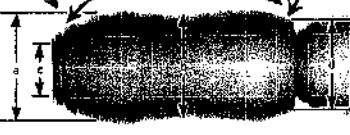
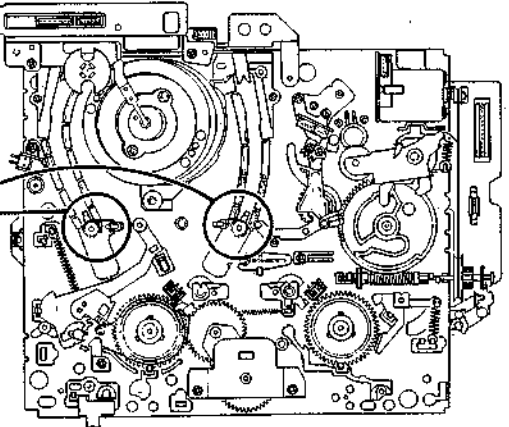
▲ : Lubrication (or Replacement if necessary)





● : Replacement




○ : Inspection or Replacement if necessary



Table 1-4-1 Approximate maintenance schedule



1.5 MAIN PARTS REMOVAL AND REPLACEMENT

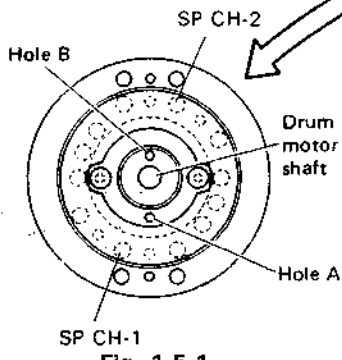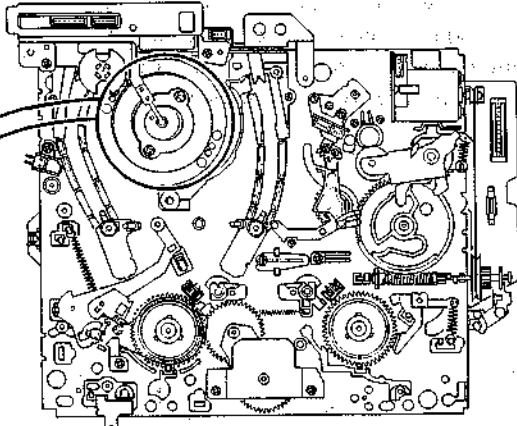No.	Item	Checkpoints	Adjustment and Checks
1	<p>Upper drum assembly</p> <ul style="list-style-type: none"> •Symptoms: FM signal absent, intermittent or weak on one channel; large difference in channel output levels •Cause: Worn or damaged video heads, poor response, etc.  <p>Fig. 1-5-1 DRUM TOP VIEW</p>	 <p>Fig. 1-5-2 Drum Position</p> <p>Mounting direction See Fig. 1-5-1. (Symptom: no picture)</p> <p>Axis wobble See Fig. 1-5-2. (Symptom: jitter, poor FM linearity) PB FM: Main board TP206 DRUM FF: Main board TP411</p>	<p>After replacing, observe that upper drum hole A is opposite the motor axis from lower drum hole B.</p> <p>Record and playback in SP mode. Confirm absence of large difference between channels. (Fig. 1-5-3)</p>  <p>Fig. 1-5-3 Axis wobble</p>
	 <p>Fig. 1-5-4 S.T. Pole base</p>	<p>FM linearity check See Fig. 1-5-5. (Symptom: vertical sync absent, picture noise) PB FM: Main board TP206 FF: Main board TP411</p>  <p>Fig. 1-5-5 FM linearity</p> <p>$\frac{b}{a} \approx 0.7, \frac{c}{a} \approx 0.65, \frac{d}{a} \approx 0.65$</p>	 <p>Fig. 1-5-6 S.T. Pole base position</p> <ol style="list-style-type: none"> 1) Play stairstep signal of the MH-2 Alignment Tape. Confirm absence of obvious FM waveform loss and that operating the Tracking yields the optimum point. 2) Refer to Fig. 1-5-4, adjust for loss at the left edge (drum entry) of the FM waveform by turning the guide roller of the supply pole base. Similarly, adjust for loss at the right edge (drum exit) by turning the guide roller of the take-up pole base. <p>Note: If FM loss occurs on both channels and cannot be corrected by adjusting the guide rollers, the lower drum needs replacement.</p>

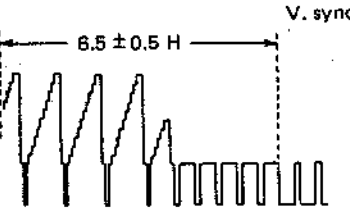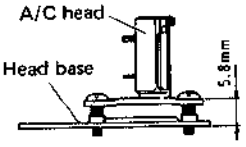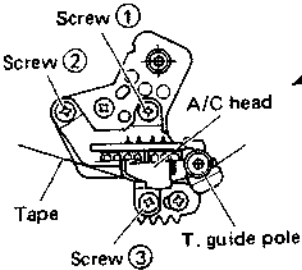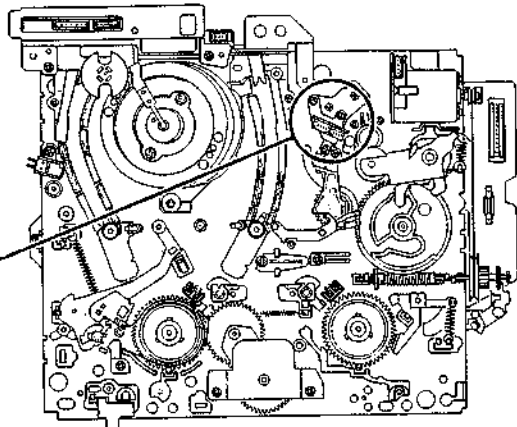No.	Item	Checkpoints	Adjustment and Checks
	PB switching point •Symptom: switching noise at picture bottom.	VIDEO OUT  Fig. 1-5-7 PB Switching Point	<ol style="list-style-type: none"> 1) Connect an oscilloscope to VIDEO OUT. 2) Set the MH-2 alignment tape into the cassette housing. Play back the stairstep segment of MH-2 alignment tape. 3) Trigger the oscilloscope externally (-slope) with the signal from TP411 (DRUM FF) of the main board. 4) Adjust R420 to position the trigger point $6.5 H \pm 0.5 H$ from V. sync as shown in Fig. 1-5-7.
2	Lower drum assembly •Symptoms: Poor FM linearity, noisy rotation, jitter •Cause: Lead and bearing wear	Check FM linearity and switching point. Check control head phase (X value) Symptom: tracking error PB FM: Main board TP206 DRUM FF: Main board TP411	See above upper drum assembly items. <ol style="list-style-type: none"> 1) Play stairstep signals of MH-2 Alignment Tape. Engage the Tracking Preset mode by pressing the + and - buttons simultaneously in the onscreen mode. Confirm that the same maximum FM waveform level is obtained as when the tracking is adjusted manually. 2) Refer to the A/C head adjustments.
3	A/C head  Fig. 1-5-8 Temporary height  Fig. 1-5-9 Inclination/Azimuth/ Height adj.	 Fig. 1-5-10 A/C HEAD position Temporarily set height as indicated in Fig. 1-5-8. Tilt (forward inclination) See Fig. 1-5-9. (Symptom: audio level varies greatly.) Azimuth See Fig. 1-5-9. (Symptoms: audio low level or noisy) Audio output: Main board AUDIO OUT	Set the height as indicated in Fig. 1-5-8 to facilitate tape transport checks and adjustments. <ol style="list-style-type: none"> 1) Run tape, turn screw ① counterclockwise to where slight curling of the tape occurs at the lower flange of the take-up guide roller. 2) Then slowly turn the screw clockwise to where the curling ceases. <ol style="list-style-type: none"> 1) Play stairstep signal (with audio 6 kHz) of the MH-2 Alignment Tape. Observe audio output signal with oscilloscope. 2) Turn screw ② and adjust for maximum audio output level.

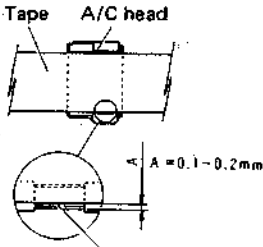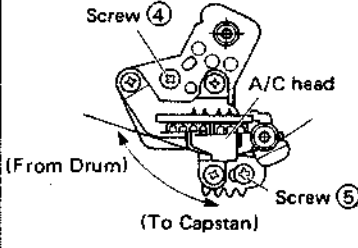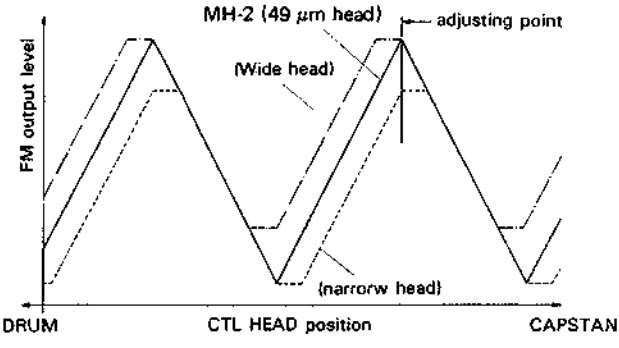No.	Item	Checkpoints	Adjustment and Checks
	 <p data-bbox="263 560 391 660"> Fig. 1-5-11 Height Adj </p>	<p data-bbox="518 280 869 414"> Height See Figs. 1-5-9 and 1-5-11. (Symptom: low audio and control signal levels) </p>	<p data-bbox="901 280 1412 414"> 1) Run tape and observe the control head area. 2) Turn screws ①, ② and ③ by small and equal amounts until 0.1 to 0.2 mm of the head core bottom can be seen. </p> <p data-bbox="901 414 1412 548"> Note: If difficult to observe, play <i>stairstep signal of MH-2 Alignment Tape</i> and adjust for maximum audio output and control pulse level. </p>
		<p data-bbox="518 571 646 604">FM linearity</p>	<p data-bbox="901 571 1412 638"> Refer to upper drum assembly items. If adjustment is major, again check the azimuth. </p>
	<p data-bbox="518 660 853 795"> Control head phase See Fig. 1-5-12 PB FM: Main board TP206 DRUM FF: Main board TP411 </p>  <p data-bbox="534 1064 853 1097"> Fig. 1-5-12 CTL head phase </p>  <p data-bbox="359 1467 694 1500"> Fig. 1-5-13 CTL head phase </p>	<p data-bbox="518 660 853 795"> Control head phase See Fig. 1-5-12 PB FM: Main board TP206 DRUM FF: Main board TP411 </p>	<p data-bbox="901 660 1412 817"> 1) Play stairstep signal of MH-2 Alignment Tape and observe the FM waveform. Set for Tracking Preset by pressing the + and - buttons simultaneously in the onscreen mode. </p> <p data-bbox="901 817 1412 907"> 2) Loosen screws ④ and ⑤. Set the A/C head positioning tool on screw ④, with the stud inserted into the nearby oblong hole. </p> <p data-bbox="901 907 1412 1064"> 3) Turn the tool first to position the A/C head fully toward the capstan. Then gradually return it toward the drum and stop at the position of maximum FM waveform output level as shown in Fig. 1-5-13. </p> <p data-bbox="901 1064 1412 1131"> 4) Tighten screw ⑤. Remove the tool and tighten screw ④. </p>
	<p data-bbox="159 1534 821 1590"> Note: Trigger the oscilloscope externally signal from TP411 (DRUM FF). Use (+) trigger for MH-2 alignment tape. </p>		

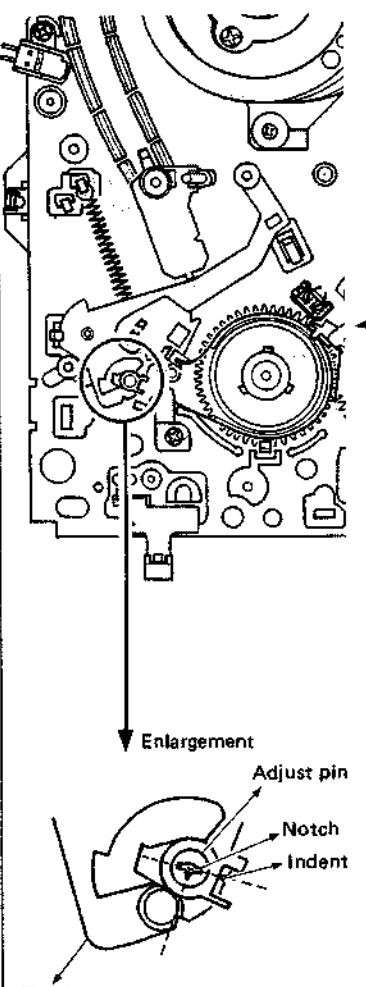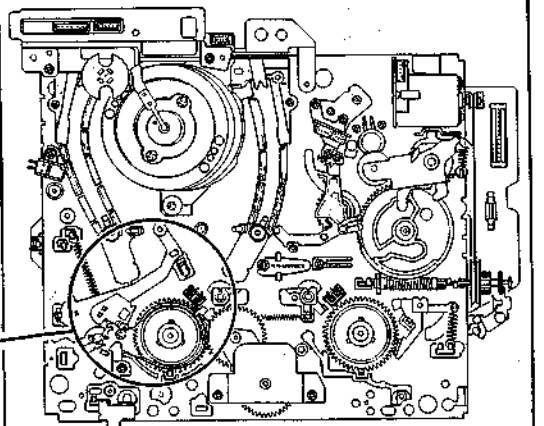No.	Item	Checkpoints	Adjustment and Checks
4	<p>Tension arm assembly Tension band assembly</p>  <p>Enlargement</p> <p>Adjust pin</p> <p>Notch</p> <p>Indent</p> <p>Tension arm</p> <p>Fig. 1-5-14 Tension arm assy</p>	<p>Tension pole position See Fig. 1-5-14. (Symptom: poor FM waveform response)</p>	 <p>Fig. 1-5-15 Tension arm position</p> <ol style="list-style-type: none"> 1) Check that the cassette housing is in the eject state (internal holder of the cassette housing is locked in raised position). 2) Turn the eccentric adjust pin to align the notch of the pin with the tension arm indent as shown in Fig. 1-5-14.
		<p>Back tension (Symptom: skew)</p>	<ol style="list-style-type: none"> 1) When the tension pole position is correctly adjusted, the back tension will assume the correct value. 2) Use the Back Tension Cassette Gauge and set for the playback mode. Confirm reading of 35 to 48. 3) Changing the tension pole position in order to vary the back tension will cause adverse effects elsewhere.

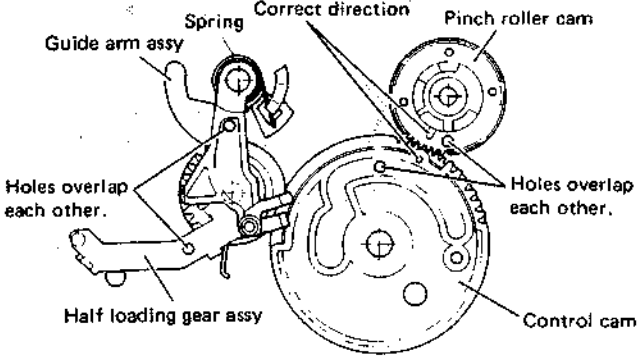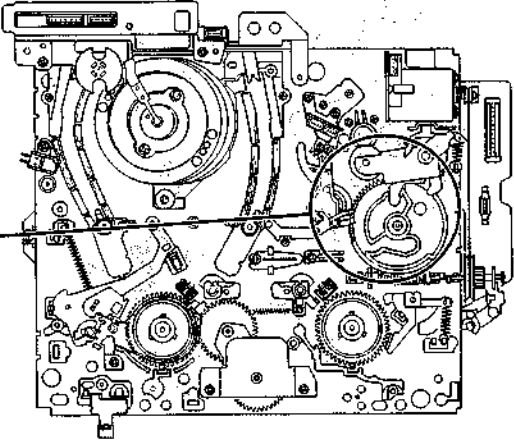No.	Item	Checkpoints	Adjustment and Checks
5	Pinch roller cam Control cam Half loading gear assembly Guide arm assembly  <p>Fig. 1-5-16 Control/Pinch roller cam</p>	<p>Important: Do not remove or disturb parts other than those mentioned. See Fig. 1-5-16.</p> <p>Cassette housing assembly</p>	<p>Set mechanism to Eject mode (internal holder of the cassette housing is locked in raised) position.</p>  <p>Fig. 1-5-17 Control cam position</p> <ol style="list-style-type: none"> 1) When installing the pinch roller cam, overlap the largest hole of the gear portion with the hole of the deck. 2) Set the control cam on the deck with the hole of the groove overlapped with the hole of the deck. Observe that the small hole of the control cam and the ridge of the pinch roller cam are aligned. (If the control cam does not fit readily, shift the rear plate assembly within the range of play.) 3) Install the half loading gear assembly with the hole overlapped with the hole of the deck. Secure with E-ring. 4) Install the guide assembly over the spring and with the hole overlapping that of the deck. Engage the spring correctly. <p>Install the cassette housing assembly with the mechanism in the Eject mode. Also observe that the inner holder of the housing is raised and locked.</p>
6	Clutch assembly	Take-up torque (Symptom: inadequate take-up torque)	<ol style="list-style-type: none"> 1) Remove cassette housing and set for play-back mode (see Section 1.2). 2) Set torque gauge on the take-up reel disk. Gradually relax your grip on the gauge and read the needle indication at the point the gauge begins to rotate with the disk. Confirm indication of 60 to 100.

No.	Item	Checkpoints	Adjustment and Checks
7	Take-up loading arm assembly Supply loading arm assembly Plate assembly		Note: <ul style="list-style-type: none"> • Set mechanism to the Eject or Stop mode before removing these parts. • The flange of the plastic rivet securing the loading arm assembly and the pole base assembly can be damaged by attempting to remove it directly. Press the loading arm assembly firmly to prevent motion. Then use a narrow-shafted tool to press the rivet from the shaft end to remove it.
		Mounting position alignment <ul style="list-style-type: none"> • Remove the tension arm assembly to facilitate operation. See Fig. 1-5-18.	<ol style="list-style-type: none"> 1) Set the supply and take-up loading arm assemblies so that the holes of the gear portions are aligned, then secure to the pole base assemblies with rivets. 2) Shift the plate assembly and install with the holes of the upper and lower components overlapped.
	Slide switch See Fig. 1-5-18.		Be sure to engage the slide switch slider with the edge of the plate assembly.

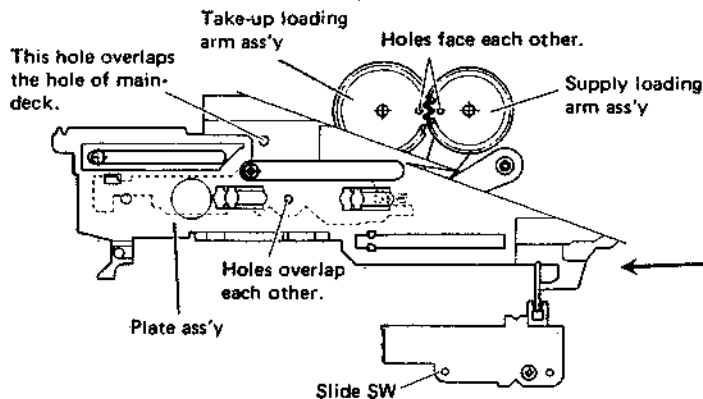


Fig. 1-5-18

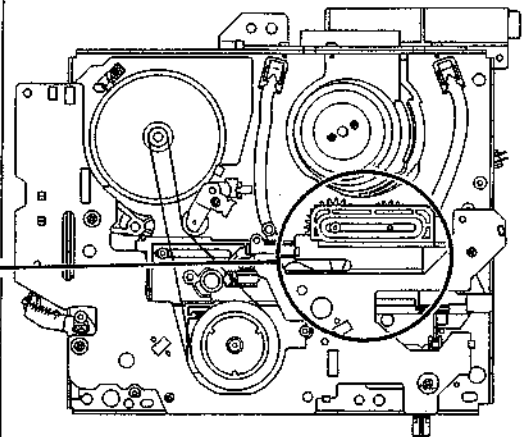


Fig. 1-5-19
T.S. Loading arm position

1947-1948

1949-1950

1951

1952

1947-1948
1949-1950
1951
1952

1947-1948
1949-1950
1951
1952

SECTION 2 ELECTRICAL ADJUSTMENTS

2.1 PREPARATION

Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

2.1.1 Required test equipment

1. Color television or monitor
2. Oscilloscope: wide-band, dual-trace, triggered delayed sweep
3. Frequency counter
4. Audio oscillator
5. Audio voltmeter
6. Digital voltmeter
7. Signal generator: RF/IF sweep/marker
8. Signal generator: PAL color bar, stairstep, video sweeper
9. Signal generator: Audio multiplex TV signal generator
10. Recording tape
11. Alignment tape: MH-2
12. Presetting unit (PTU94008)

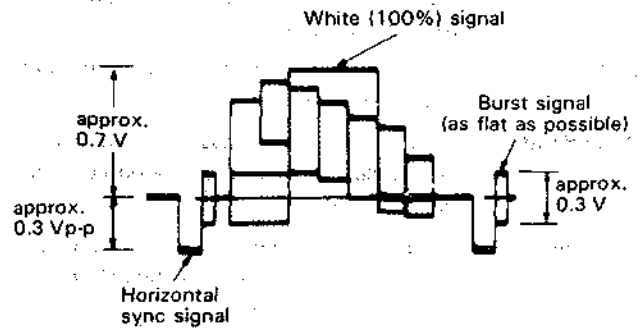
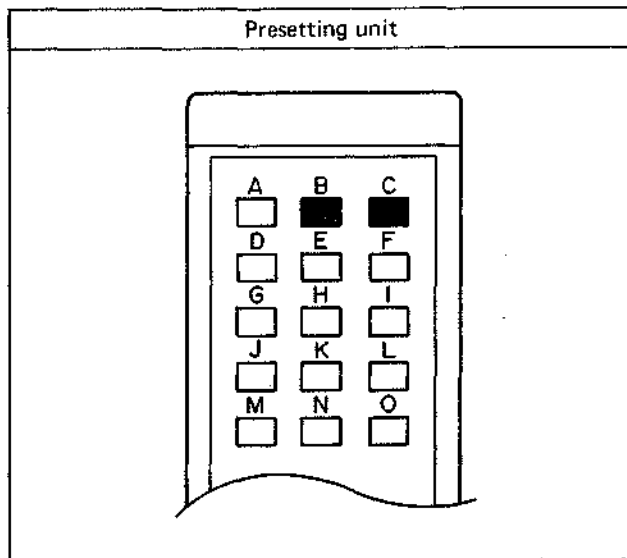


Fig. 2-1-1 Color bar signal of pattern generator

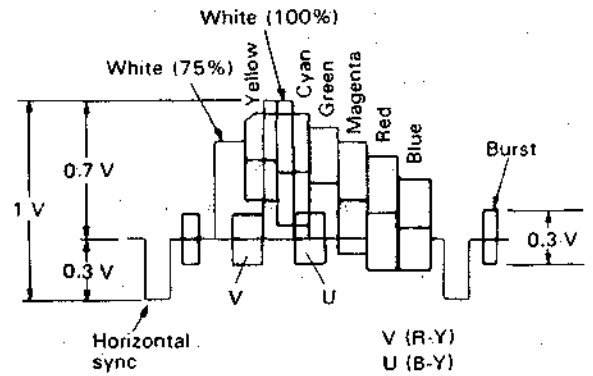


Fig. 2-1-2 Color bar signal waveform

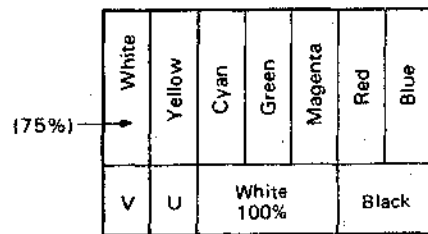


Fig. 2-1-3 Color bar pattern

2.1.2 Check and adjustment steps

The check and adjustment steps are provided in the following in the form of charts. For clarity, the nomenclature used in the charts is outlined below.

No.	Checks and adjustments are numbered in the recommended sequence in which they are to be performed.
Item	Name assigned to the particular check and adjustment step.
Check Point	Location to which measuring instrument (oscilloscope unless otherwise noted) is to be connected.
Adjustment Parts	Variable component (resistor, capacitor, etc.) to be adjusted in this step. Dash (—) indicates check only.
Signal & Mode	<ul style="list-style-type: none"> • Input signal required to perform adjustment. Dash (—) indicates that special signal is not required. • Equipment operating mode at time of check or adjustment.
Color bars	Color bars signal as video input.
Stairstep	Stairstep signal as video input.
1 kHz	1 kHz sinewave as audio input signal.
MH-2 color bars	Color bars segment of MH-2 alignment tape.
MH-2 stairstep	Stairstep segment of MH-2 alignment tape.
MH-2 1 kHz	1 kHz audio signal segment of MH-2 alignment tape.
MH-2 RF sweep	RF sweep segment of MH-2 alignment tape.
E-E	Power on and machine in Stop mode.
REC	Recording mode
PB	Playback mode
SEARCH	Search (FWDS and REVS) playback mode
SLOW	Slow motion playback mode
STILL	Pause during playback mode
SP mode	SP recording speed
Description	This column provides an explanation of the step, notes and adjustment values.

2.2 SWITCHING REGULATOR CIRCUIT

Note: Unless otherwise specified, all test points and adjustments are located on the SWITCHING REGULATOR board.

No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	5 V DC output voltage	TP1 TP3 (GND)	R37 (DC 5V)	•REC •SOURCE SEL: TUNER	1) Connect a digital voltmeter between TP1 and TP3 (GND). 2) Record in the TUNER mode, adjust R37 for 5.3 ± 0.05 V.



2.3 TIMER CIRCUIT

Note: Unless otherwise specified, all test points and adjustments are located on the TIMER board.

No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	Clock	IC1-16	C6 (Timer clock)	•E-E	Note: For below adjustments use 1 : 1 probe with input capacitance less than 100 pF. 1) Connect a frequency counter between IC1-16 and GND. 2) Short TP1 to GND, then short the leads of capacitor C3 once in order to reset IC1. All FDP Segments and power LED are on. 3) Adjust C6 for 2048.000 ± 0.002 Hz (488.2808 to 488.2818 μ s).


2.4 SERVO CIRCUIT

Note: Unless otherwise specified, all test points and adjustments are located on the MAIN board.

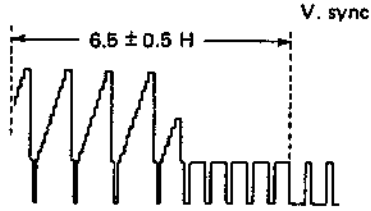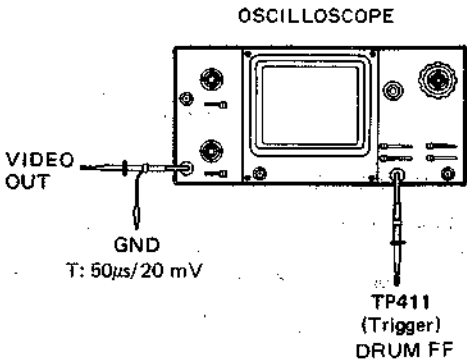No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	SP PB switching point	VIDEO OUT	R420 (SP SW point)	<ul style="list-style-type: none"> • PB • MH-2 (stairstep) • Trigger slope (-) • SP mode • AUTO TRACKING : OFF 	<p>1) Connect an oscilloscope to VIDEO OUT.</p> <p>2) Play back the stairstep segment of MH-2 alignment tape.</p> <p>3) Trigger the oscilloscope externally (- slope) with the signal from TP411.</p> <p>4) Adjust R420 to position the trigger point $6.5 \pm 0.5H$ from V. sync.</p>
					 <p>Fig. 2-4-1 Switching point</p>
					 <p>Fig. 2-4-2 Oscilloscope</p>
2	SP slow tracking preset	Monitor-TV	Presetting unit (PTU 94008)	<ul style="list-style-type: none"> • SP mode • REC then PB (slow) • AUTO TRACKING : OFF • SOURCE SEL : AUX 	<p>Note: Set VCR to A mode by remote controller.</p> <p>During playback press the PAUSE button for "more than 2 seconds" to begin a slow motion playback.</p> <p>1) Set recording video tape into the cassette housing.</p> <p>2) Receive a color broadcast on a VHF-HI channel or supply a color bar signal to VIDEO IN.</p> <p>3) Record a color broadcast or color bar signal in the SP mode.</p> <p>4) Play back recorded signal in the FWD slow mode and set the tracking control of the FRONT panel to the center position by simultaneously pressing the (+) and (-) tracking buttons.</p> <p>5) Observe the display on a monitor-TV and adjust for optimum noise condition (best tracking) by depressing "B (-)" or "C (+)" buttons of presetting unit as required.</p> <p>6) Depress the STOP button on the FRONT panel.</p> <p>7) Confirm that the bar noise is not visible on the monitor in the slow mode.</p>

2.5 VIDEO CIRCUIT

Note: 1. Unless otherwise specified, all test points and adjustment parts are located on the MAIN board.
 2. T indicates the time and volts division setting of the oscilloscope (Use 10 : 1 probe).

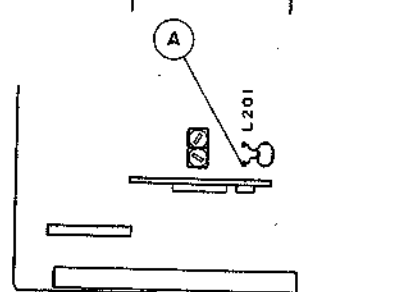No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	REC color level and ch balance	L201- (A) (VIDEO UNIT board)	R220 (SP REC color)	<ul style="list-style-type: none"> • PB mode • MH-2 color bar • SP mode 	<ol style="list-style-type: none"> 1) Connect an oscilloscope to L201- (A) (IC201-19) pin as shown in Fig. 2-5-1 and observe color signal level. 2) Set the MH-2 alignment tape into the cassette housing, play back the color bar segment of MH-2 alignment tape. 3) Set the tracking of the FRONT panel to the Auto tracking off position by simultaneously pressing the "+" and "-" tracking buttons. 4) Adjust by pressing the "+" and "-" tracking buttons of the Front panel for maximum level of the color waveform and make a note of the higher color level "A". 5) Press the STOP button on the FRONT panel and eject the MH-2 alignment tape.
					 <p>Fig. 2-5-1 Component view of VIDEO UNIT board</p>
2	YNR NC balance	TP21 (IC1-26) (VIDEO UNIT board)	R16 (NC BAL) (VIDEO UNIT board)	<ul style="list-style-type: none"> • E-E • SOURCE SEL: AUX • Color bar • SP mode • AUTO TRACKING : OFF 	<ol style="list-style-type: none"> 1) Supply a color bar signal to VIDEO IN and connect an oscilloscope to TP21 (IC1-26 pin). 2) Adjust R16 for minimum DC step difference. T: 2ms/5mV

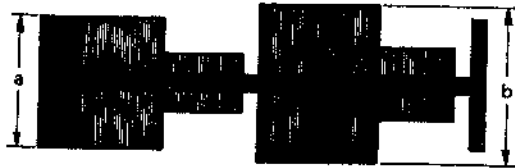


Fig. 2-5-2 REC color level

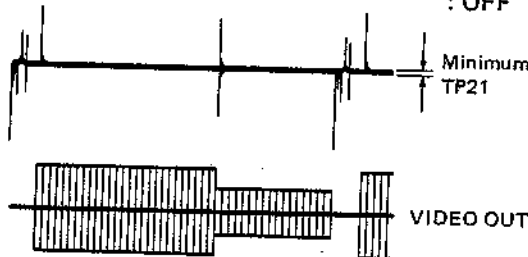
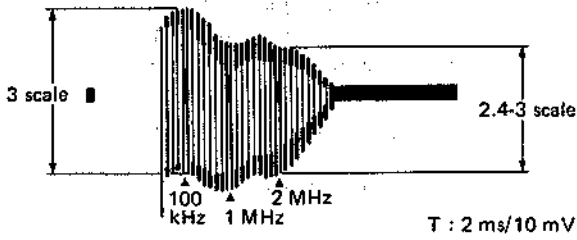
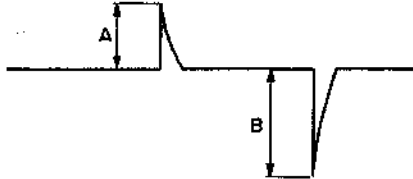


Fig. 2-5-3

No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
3	SP PB Frequency	VIDEO OUT (TP210)	R226 (SP FREQ)	<ul style="list-style-type: none"> • REC then PB • Video sweep • AUTO TRACKING : OFF • SOURCE SEL : AUX • SP mode 	<ol style="list-style-type: none"> 1) Terminate VIDEO OUT with monitor - TV (75 Ω load), supply a video sweep signal without burst to VIDEO IN. 2) Set recording video cassette into the cassette housing. Record a video sweep signal without burst in the SP mode. 3) Connect an oscilloscope to VIDEO OUT. Play back recorded video sweep signal in the SP mode, set the tracking of the Front panel to the Auto tracking off position by simultaneously pressing the (+) and (-) tracking buttons. 4) Use the control of the oscilloscope to position the 100 kHz region at graduation 3 (0 dB) of the oscilloscope scale. 5) Adjust R226 to position the 2 MHz of channel-1 portion at 2.4 - 3.0 (-1 ± 1 dB) of the oscilloscope graduations as shown in Fig. 2-5-4. At this time, confirm that the channel difference is within 3 dB.
 <p style="text-align: center;">Fig. 2-5-4 PB frequency</p>					<p>Alternate method</p> <ol style="list-style-type: none"> 1) Set recording video cassette into the cassette housing, receive a colour broadcast on a VHF channel. 2) Record a colour broadcast that shows a good depiction of human facial contours. 3) Play back recorded colour broadcast, set the tracking of the Front panel to the Auto tracking off position by simultaneously pressing the (+) and (-) tracking buttons. 4) Adjust R226 to obtain distinct facial features on the monitor. <p>Note: R226 nearly at centre position.</p>
4	SECAM DET.	IC251-18 (VIDEO UNIT board)	LC251 (SECAM DET) (VIDEO UNIT board)	<ul style="list-style-type: none"> • E-E • SECAM color bar 	<ol style="list-style-type: none"> 1) Connect an oscilloscope to pin 18 of IC251. 2) Adjust LC251 so that A and B are related as follows: $A : B = 3 : 4 = 0.84 \text{ Vp-p} : 1.11 \text{ Vp-p}$  <p style="text-align: center;">Fig. 2-5-5</p>



2.6 AUDIO CIRCUIT


Note: Unless otherwise specified, all test points and adjustments are located on the MAIN board.

No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
1	Audio Bias Level	TP31 (+) TP32 (-)	R11 (Bias adj)	<ul style="list-style-type: none"> • SOURCE SEL : AUX • SP mode • REC mode • No signal 	<ol style="list-style-type: none"> 1) Connect a millivoltmeter between TP31 and TP32. 2) Set for REC mode without incoming signal. 3) Adjust R11 for 1.9 mVrms.

2.7 TUNER/IF CIRCUIT

Note: Unless otherwise specified, all test points and adjustments are located on the IF board.

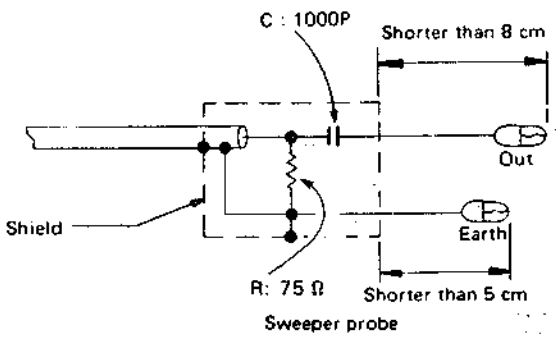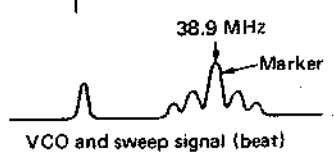
No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
<p>Equipment required:</p> <ol style="list-style-type: none"> 1. Oscilloscope 2. IF sweep signal generator with suitable markers (PIF, etc.) 3. Sweeper probe (sweep signal supply cable) as shown below. 					
 <p style="text-align: center;">Fig. 2-7-1</p>					
1	VCO	IC1-28	T2 (VCO)	<ul style="list-style-type: none"> • Sweep generator out: 70 dBμ (38.9 MHz) • Tuner mode without antenna IN 	<ol style="list-style-type: none"> 1) Use a sweeper probe as shown in Fig. 2-7-1 and connect the sweep generator output to pin 1 of SAW 1. Adjust the sweep gain so that the waveform does not distort as observed with the oscilloscope. Connect the oscilloscope to pin 28 of IC1 (VIDEO DET OUT) and adjust T2 to align the waveform with the frequency marker as shown in Fig. 2-7-2.
 <p style="text-align: center;">Fig. 2-7-2</p>					<p>Alternate method:</p> <ol style="list-style-type: none"> 1) Receive a color broadcast on a VHF-HI channel. 2) Adjust T2 to obtain a fine picture on the monitor.
				<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	

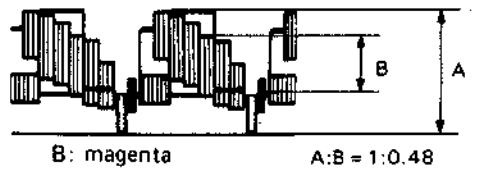No.	Item	Check Point	Adjustment Parts	Signal & Mode	Description
<p>● Before the following adjustments:</p> <ol style="list-style-type: none"> 1. Connect a cable to ANT IN and terminate TV OUT at 75 Ω. 2. Set a TV channel signal generator as follows. <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 5px auto;"> <p>Video : 65 dBμ/75 Ω, color bar 87.5% modulation Audio : 55 dBμ/75 Ω, 1 kHz ± 50 kHz deviation</p> </div>					
2	RF AGC	IF terminal of Front end	R21 (RF AGC)	<ul style="list-style-type: none"> • TV signal • Tuner mode 	<ol style="list-style-type: none"> 1. Connect the oscilloscope to IF terminal of UHF Tuner (Front end). Adjust R21 for maximum level, then again adjust R21 for -5 dB again.
		MONITOR	R21	<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	<p>Alternate method:</p> <p>Note: Adjust R21 (RF AGC) to correct for excess noise in the picture or when streaky cross interference occurs due to strong electrical fields.</p> <ol style="list-style-type: none"> 1. Adjust R21 to minimize noise or streaks on the TV screen. 2. Check for absence of abnormality on all channels.
3	AFC	IC1-16	T3 (AFC)	<ul style="list-style-type: none"> • TV broadcast • Tuner mode 	<ol style="list-style-type: none"> 1. Receive a color broadcast or signal generator on a VHF-HI channel. 2. Connect oscilloscope to pin 16 of IC1. 3. Set the oscilloscope to DC mode and adjust T3 to set the lower edge of the ripple waveform to 4.5 V.
4	Color Level	CN1-4 (VIDEO OUT) (TUNER CTL board)	R40 (Color level)	<ul style="list-style-type: none"> • TV signal • Tuner mode • Color bar 	<ol style="list-style-type: none"> 1. Receive a color bar signal. Set the Y level for 100% reference signal and then adjust R40 for a magenta level of 48% at pin 4 of CN1.
 <p>B: magenta A:B = 1:0.48</p>					
<p>Fig. 2-7-3</p>					

No.	Item	Check point	Adjustment Parts	Signal & Mode	Description
5	SOUND DET	CN1-7 (TUNER CTL board)	T4 (Sound det)	<ul style="list-style-type: none"> • TV signal • Tuner mode 	<ol style="list-style-type: none"> 1. Use a adjustment circuit as shown in Fig. 2-7-4, connect a distortion meter as shown in Fig. 2-7-4. 2. Adjust T4 for minimum distortion.
		<p>Fig. 2-7-4 Adjustment circuit</p>			

SECTION 3 CHARTS AND DIAGRAMS

3.1 CIRCUIT BOARD AND LOCATION

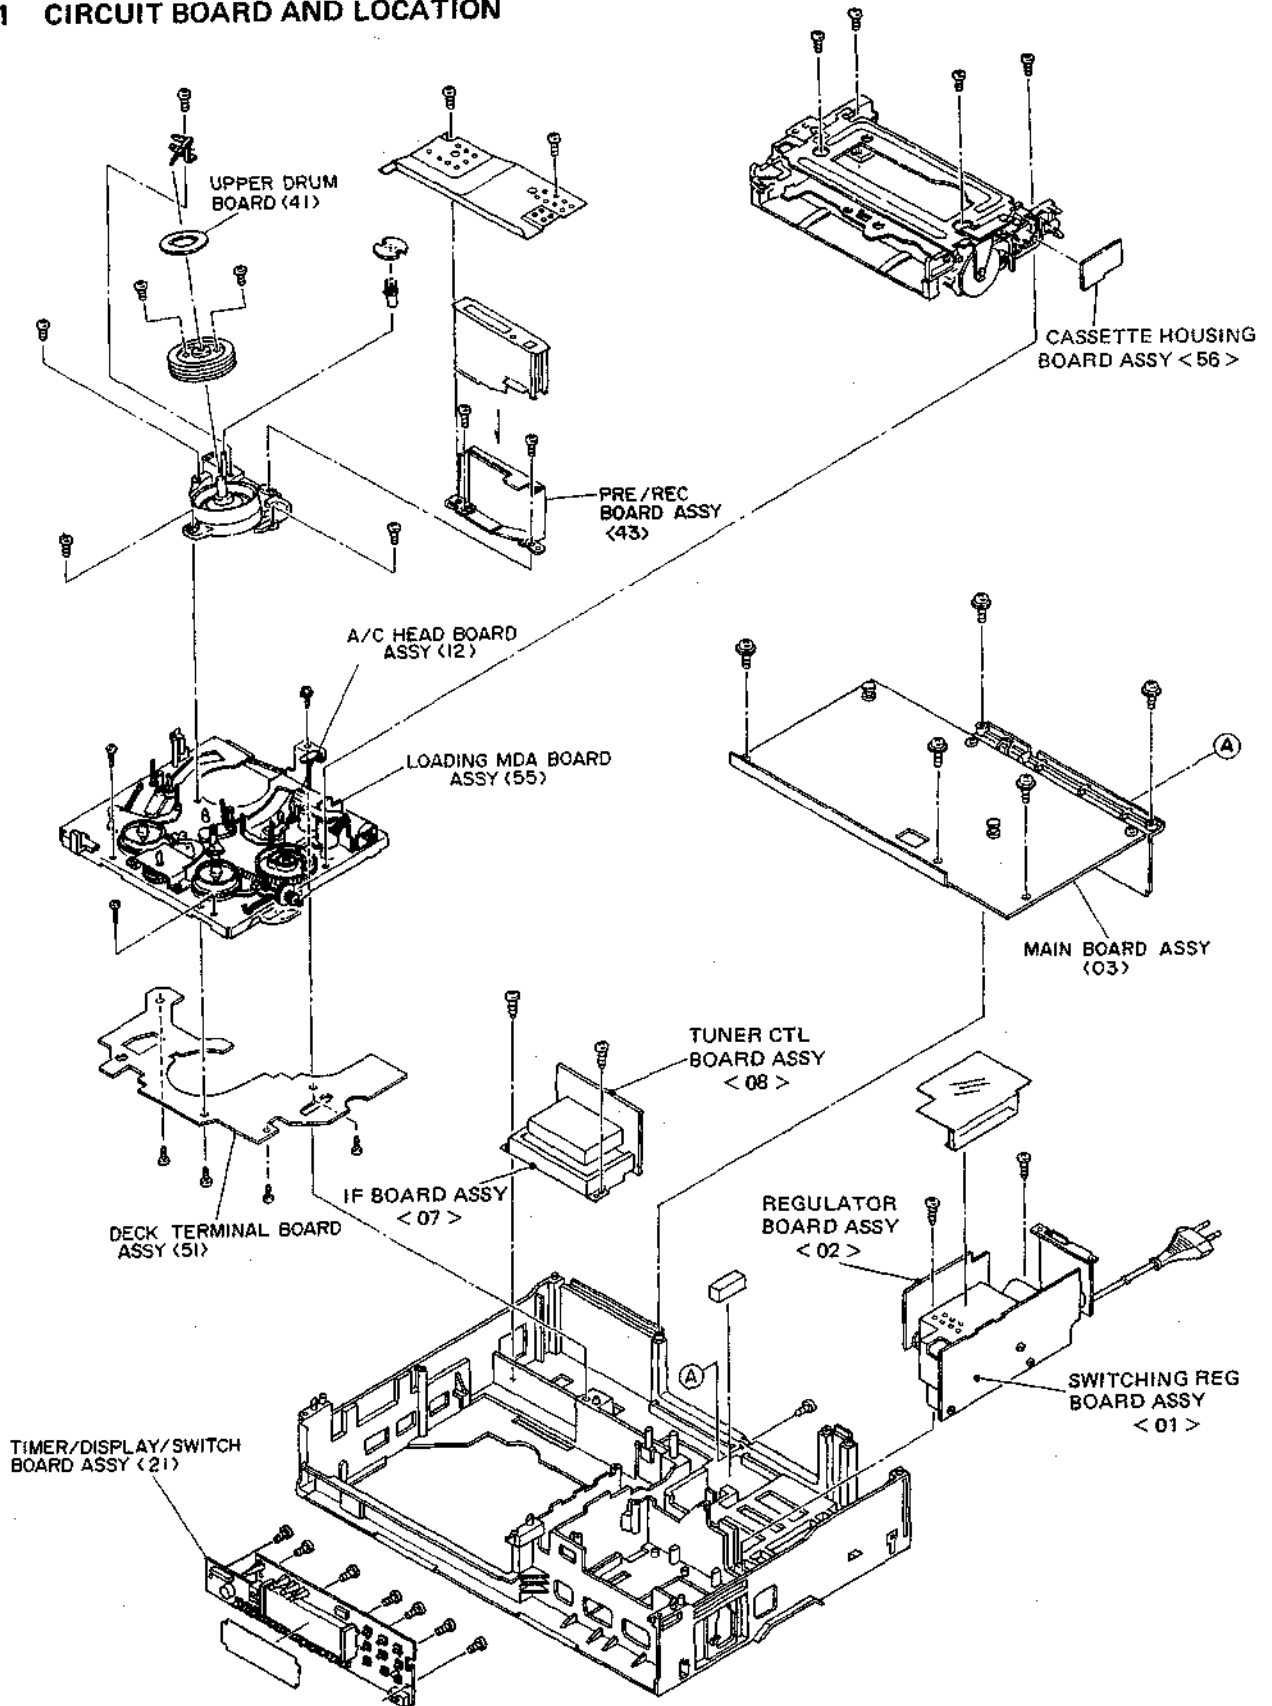




3.2 GENERAL INFORMATION

3.2.1 Connections

Note:

Unless otherwise specified, only signal input flow is indicated.

Connection arrows indicate only signal outputs.

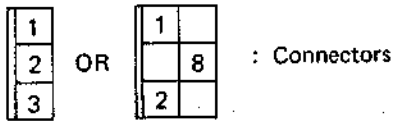

VS : Connected pattern in the board.


Abbreviations

V : Video M : Mechacon
S : Servo A : Audio


VS : Signal flow from video to servo.

3.2.2 Disconnecting the flatwire

1. Pull the connector structure upward to release the clamp when removing or inserting the flat wire cable.

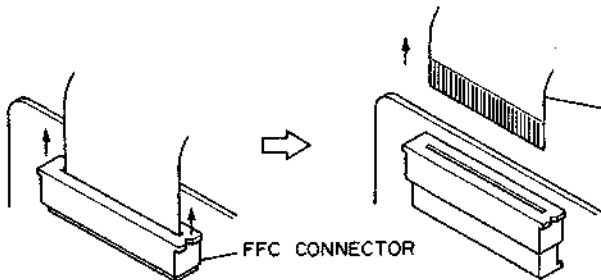

2. Depress the connector structure downward to release the clamp when removing or inserting the flat wire cable, as indicated below.

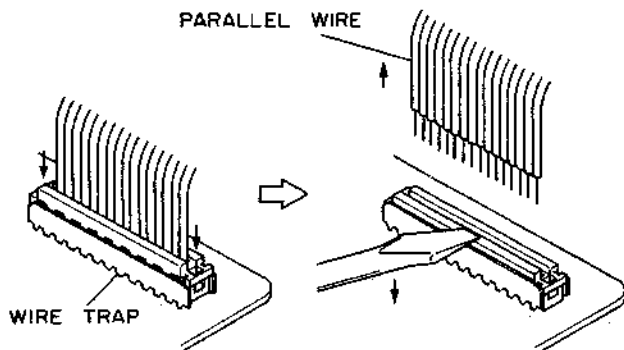









3.2.3 Indications

AUX : Active only at high.

$\overline{\text{AUX}}$: Active only at low.

$\overline{\text{AUX}}$: Active only at middle.

$\overline{\text{AUX}}$: Active only at open.




3.2.4 Schematic diagram values

Unless otherwise specified.


1. All resistance values are in ohms, 1/6 W, 1/8 W, (refer to parts list).
2. All capacitance values are in μF , (P; PF).
3. All inductance values are in μH , (m; mH).
4. All diodes are 1SS133 or MA165, (refer to parts list).
5. Voltages are DC-measured (reference to ground) with a digital voltmeter during recording (SP mode) and playback (SP mode) with alignment tape. Where voltages differ between recording and playback, the voltage during playback is shown in parentheses.
6. Waveforms (VIDEO System) are measured (reference to ground) with a color bar during recording (SP mode) and playback (SP mode) with alignment tape.
7. Waveforms (AUDIO System) are measured (reference to ground) with 1 kHz (-8 dBs) during recording and playback with alignment tape (1 kHz).
8. Shaded (▒) parts are critical for safety. Replace only with specified parts numbers.

3.2.5 Signal flow in the schematic

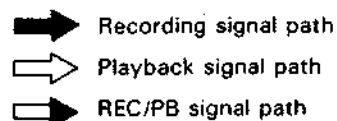


3.2.6 Semiconductors


1. Digital transistor

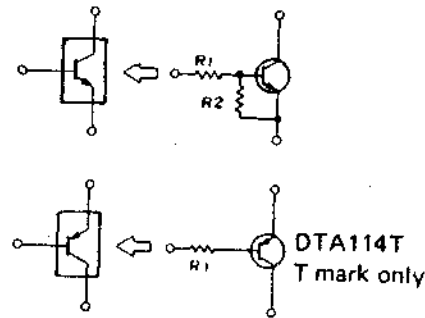

2. Chip transistor

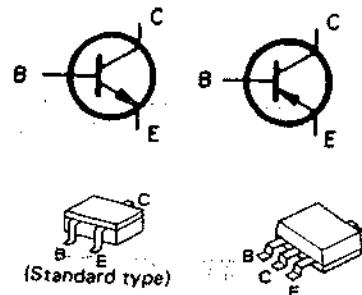

3. Chip diode

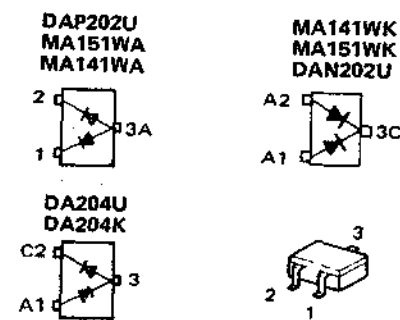

Note:
The digital transistor includes built in resistors. It features small size and high reliability. Both PNP and NPN types are available.

Uses:
Inverter, Interface, driver circuits.

3.2.7 Replacement of chip parts

For replacing chip parts, proceed it as follows.
Use a well insulated fine-tipped soldering iron (approx. 17 W, 130°C ~ 260°C in temp.).
In addition, it is recommended to use a soldering iron (55 W approx.) with solder absorber for convenience.

- Caution:**
- Do not apply heat for more than 3 seconds.
 - Do not rub electrodes.
 - Do not reuse chips removed once. Discard them.
 - Supplementary cementing is not required.

1. Soldered condition of chip parts

- Resistors, capacitors, etc.

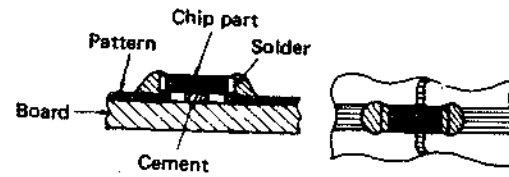


Fig. 3-2-1 Soldering condition-1

- Transistors, diodes, etc.

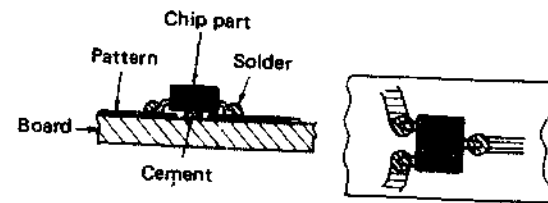


Fig. 3-2-2 Soldering condition-2

2. How to remove chip parts

- Resistors, capacitors, etc.

- 1) Set a chip parts replacing tool onto the chip parts to hold it down.
- 2) Unsolder at a side of the chip parts.

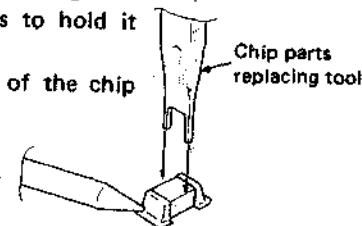


Fig. 3-2-3 R/C removal-1

- 3) Remove the chip parts by twisting and sliding it.

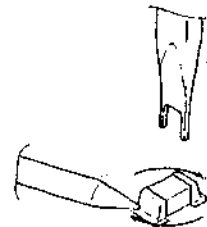


Fig. 3-2-4 R/C removal-2

3. How to remove transistors, diode.

- 1) Unsolder at the one-lead side of the chip parts.

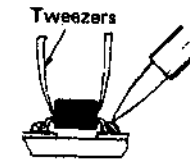


Fig. 3-2-5 Tr/Diode removal-1

- 2) Lift the unsoldered side upwards.

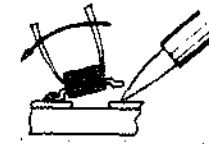


Fig. 3-2-6 Tr/Diode removal-2

- 3) Heat the other two leads simultaneously and remove the chip parts upwards.

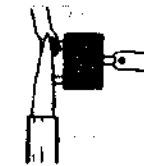


Fig. 3-2-7 Tr/Diode removal-3

4. Preheating and soldering

When setting new chip parts, especially capacitors, but except transistors, preheat them with hot air (150°C approx.) by use of a blower type of hair dryer for about 2 minutes just before soldering. For soldering, use a soldering iron of 30 watt approximately.

5. How to set and solder chip parts

- 1) Presolder the contact points of the circuit pattern to which the chip parts will be soldered.

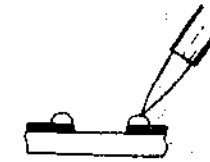


Fig. 3-2-8 Soldering-1

- 2) Holding down the chip parts with the chip parts replacing tool, solder it with a soldering iron.


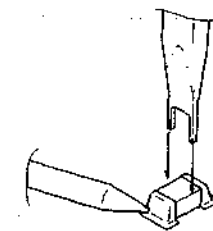


Fig. 3-2-9 Soldering-2


3.3 BOARD INTERCONNECTIONS

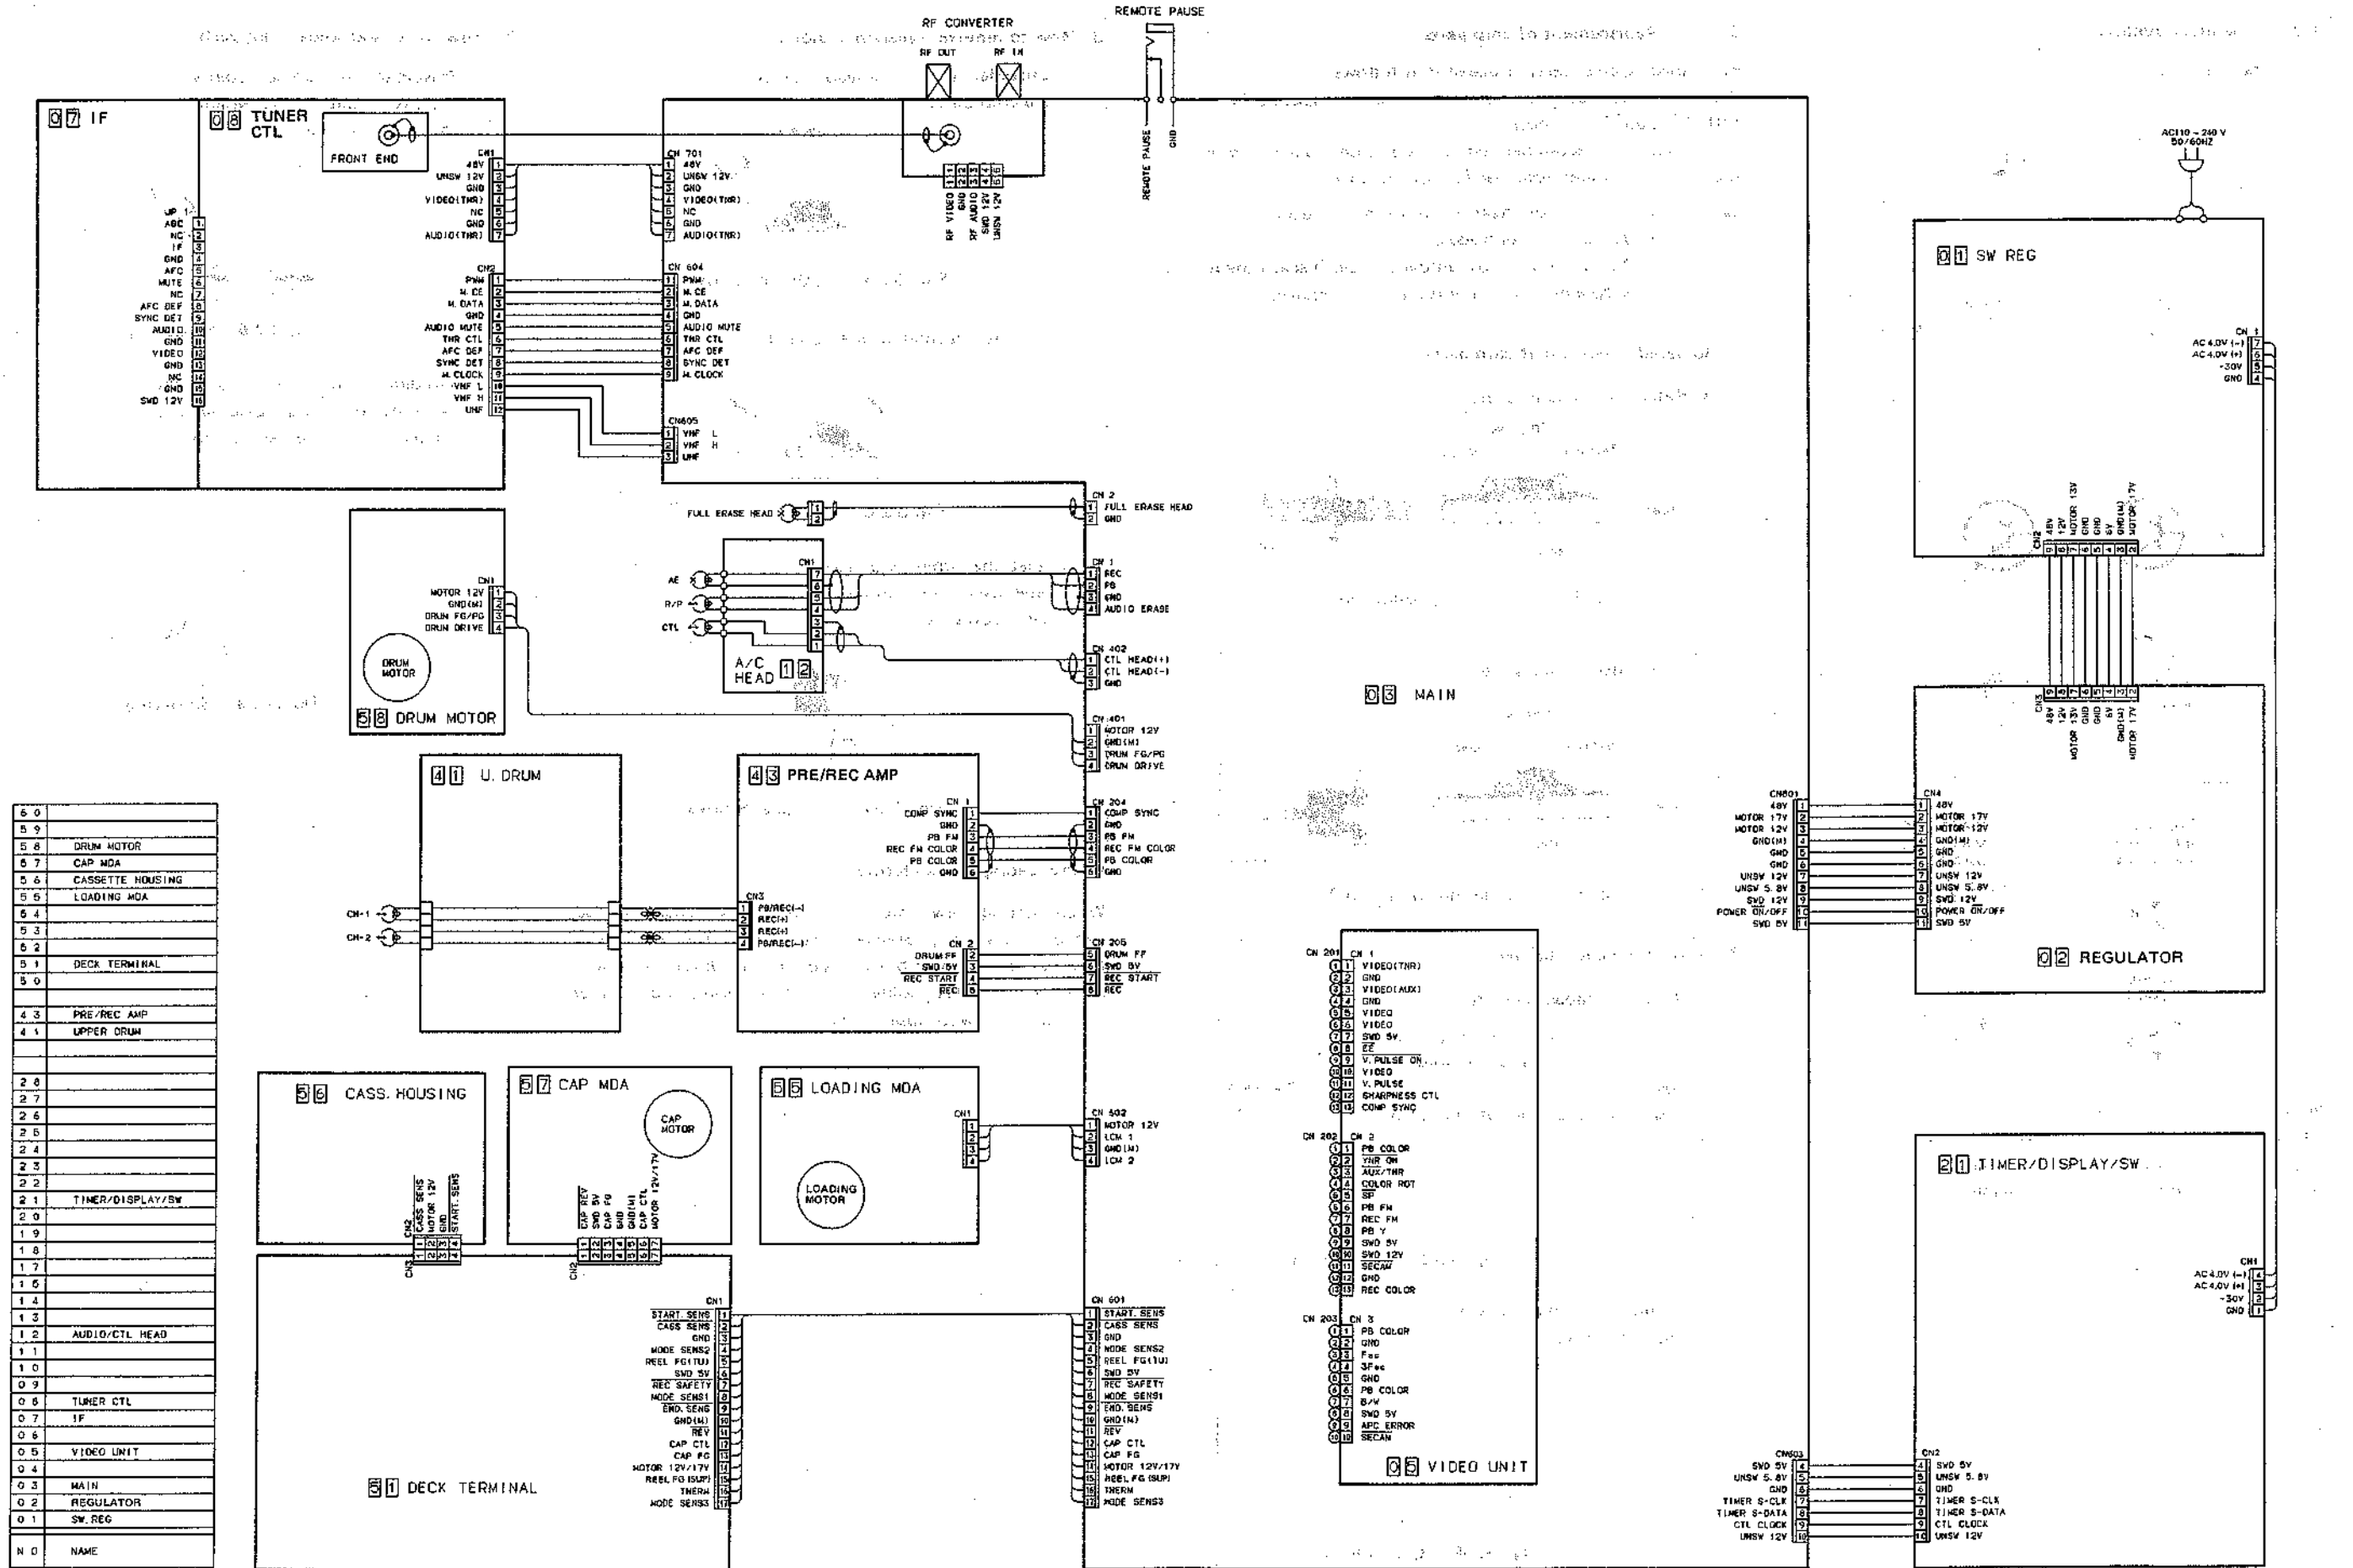

6 0	
5 9	
5 8	DRUM MOTOR
5 7	CAP MDA
5 6	CASSETTE HOUSING
5 5	LOADING MDA
5 4	
5 3	
5 2	
5 1	DECK TERMINAL
5 0	
4 3	PRE/REC AMP
4 1	UPPER DRUM
2 8	
2 7	
2 6	
2 5	
2 4	
2 3	
2 2	
2 1	TIMER/DISPLAY/SW
2 0	
1 9	
1 8	
1 7	
1 6	
1 4	
1 3	
1 2	AUDIO/CTL HEAD
1 1	
1 0	
0 9	
0 8	TUNER CTL
0 7	IF
0 6	
0 5	VIDEO UNIT
0 4	
0 3	MAIN
0 2	REGULATOR
0 1	SW. REG
N 0	NAME

3.4 VIDEO BLOCK DIAGRAM

RTM HEADLINE

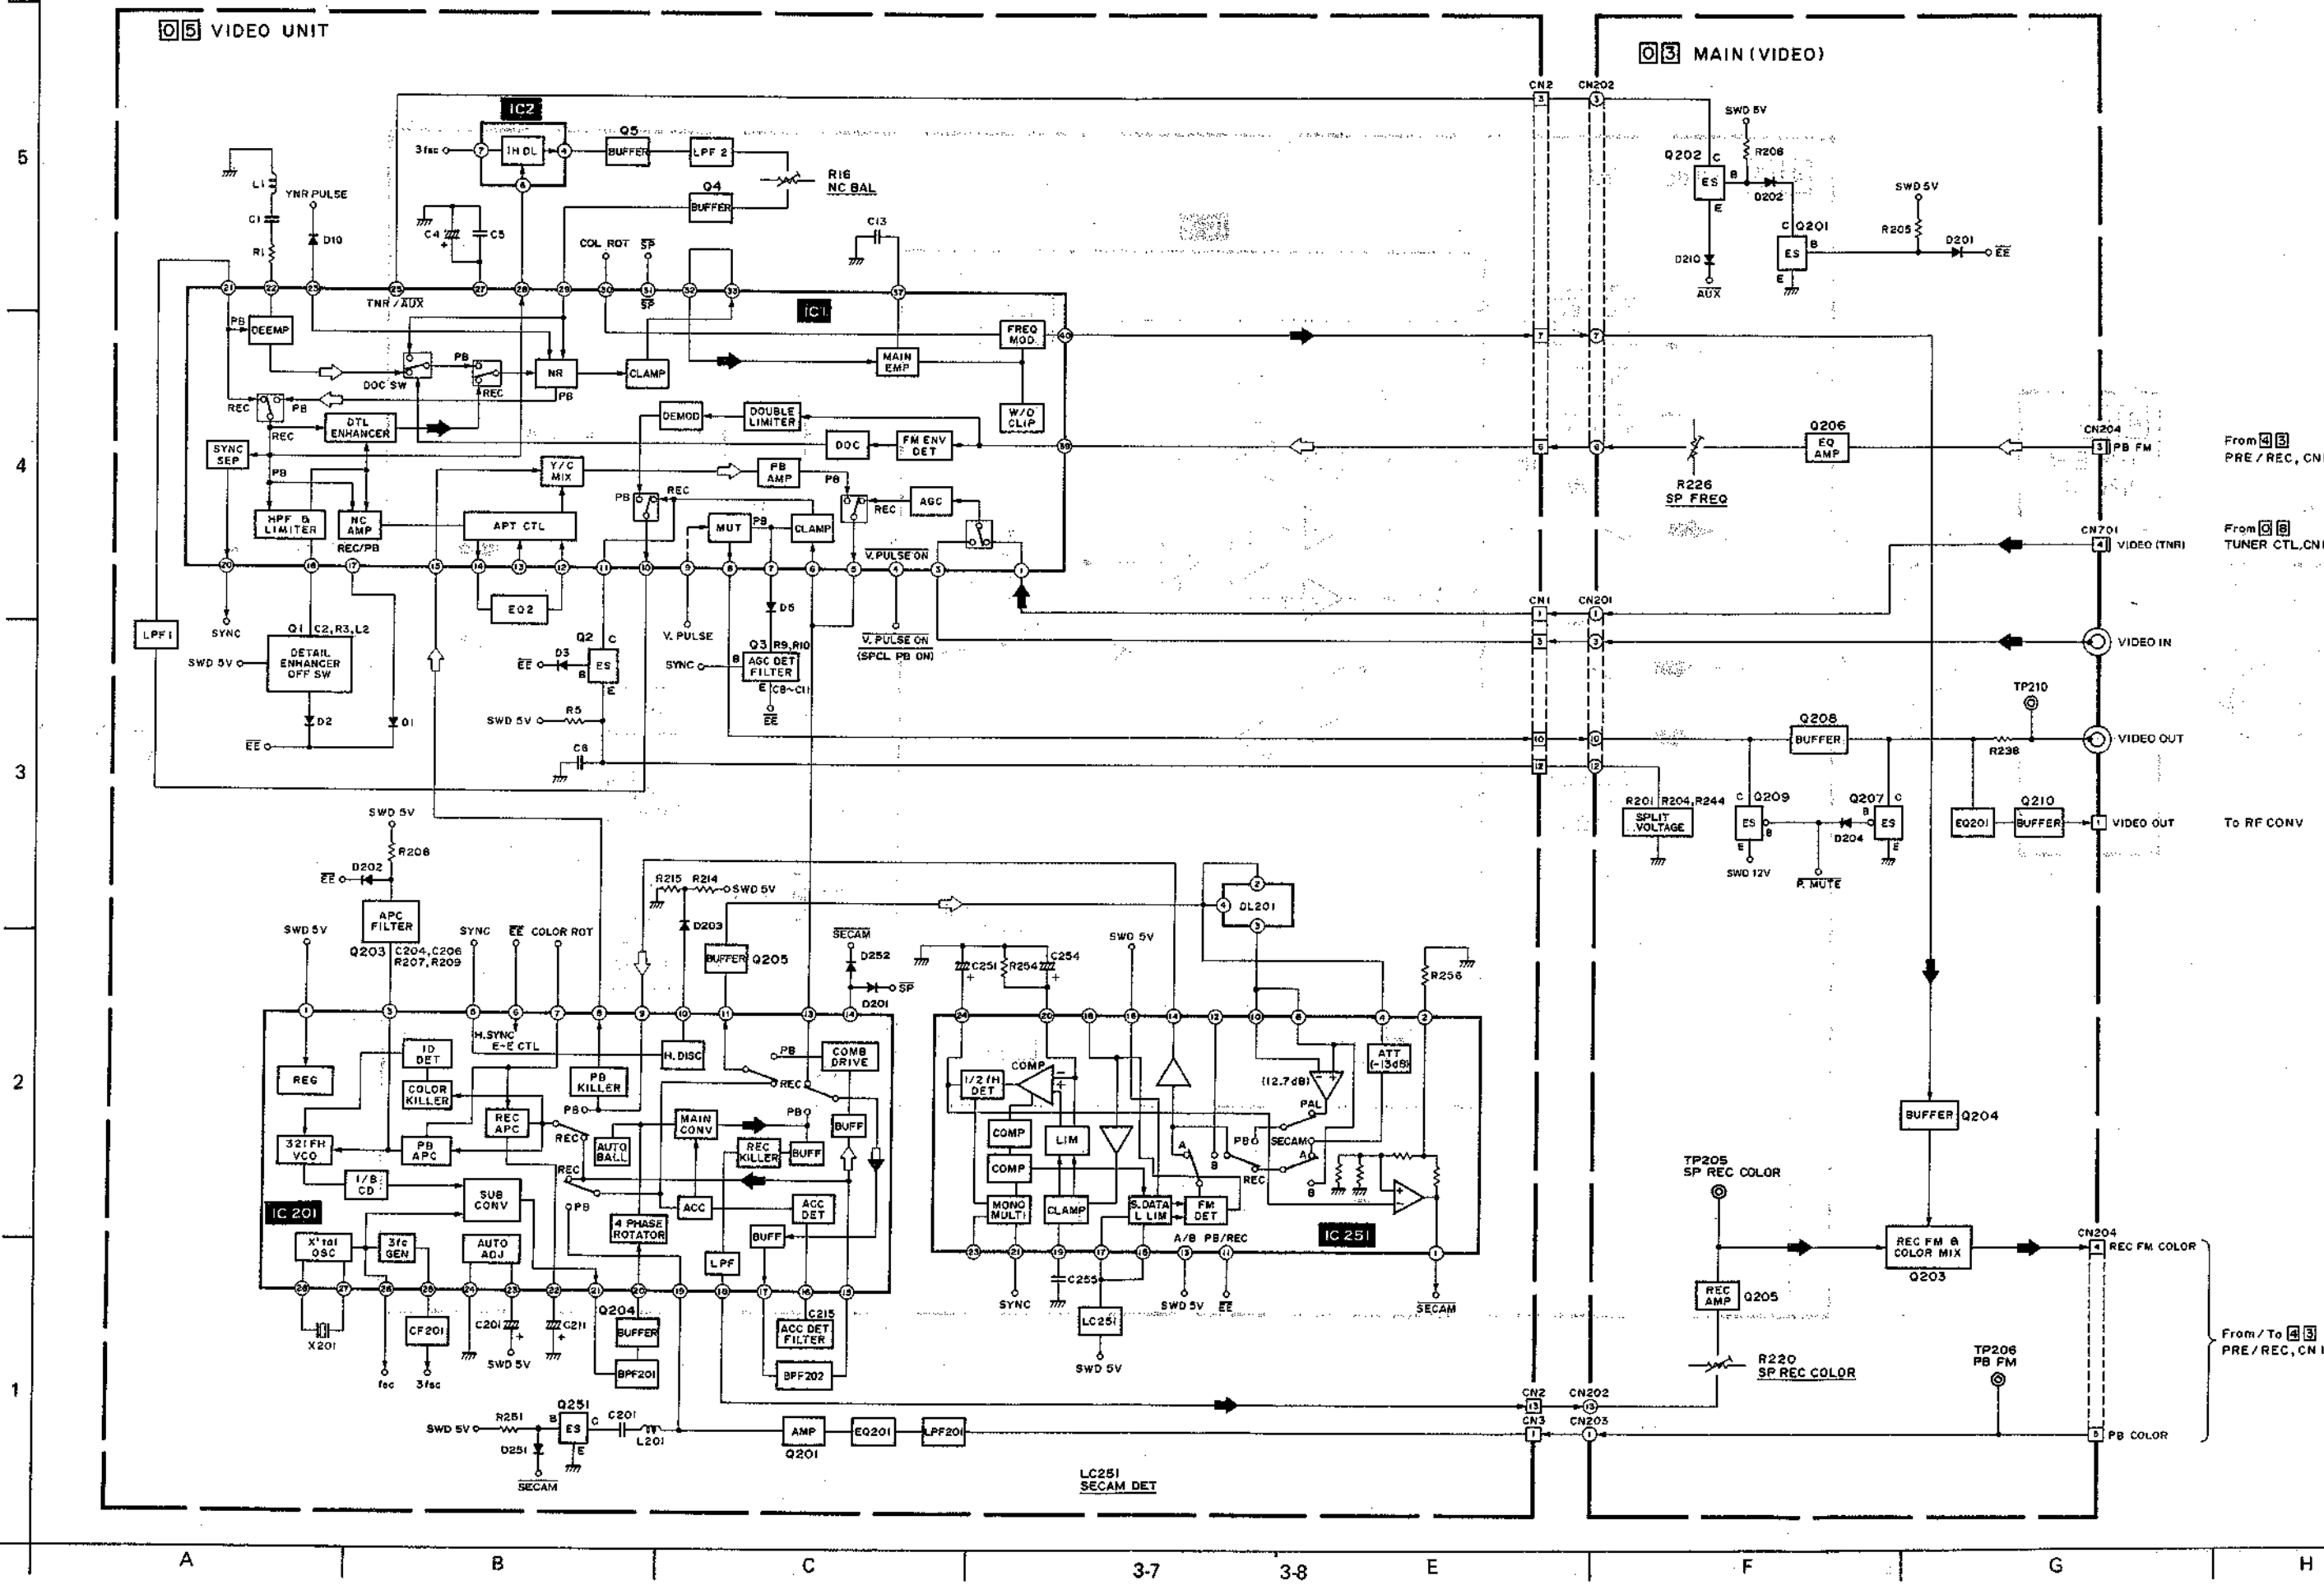


From 43 PRE/REC, CN1

From 43 TUNER CTL, CN1

To RF CONV


From/To 43 PRE/REC, CN1

3.5 PRE/REC BLOCK DIAGRAM

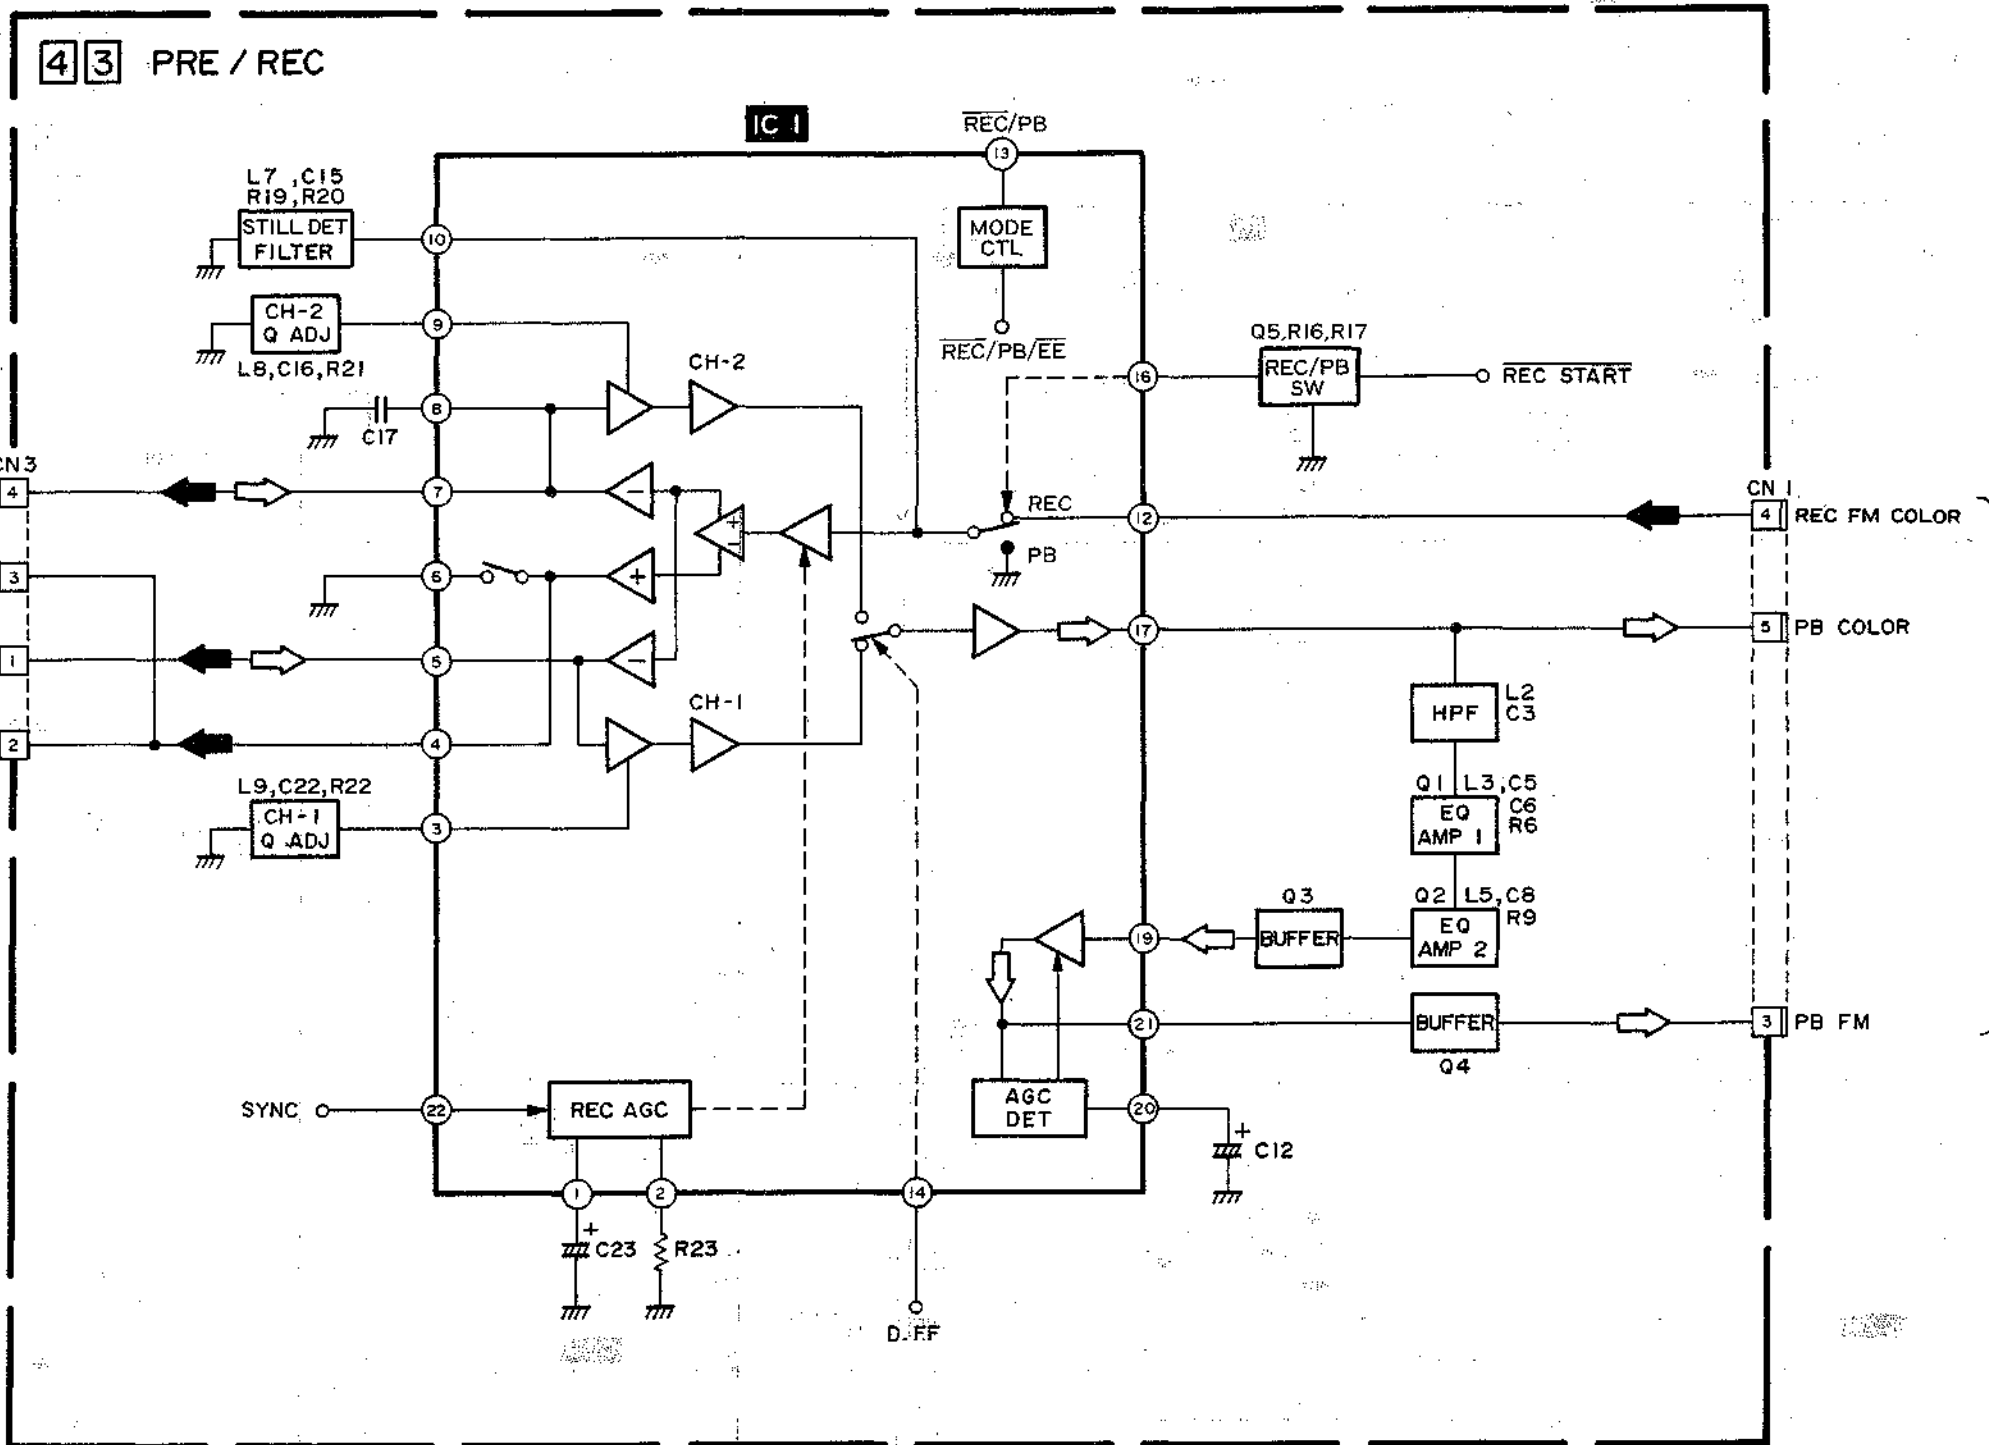


From/To 0 3
MAIN (VIDEO)
CN204


3.6 SERVO BLOCK DIAGRAM

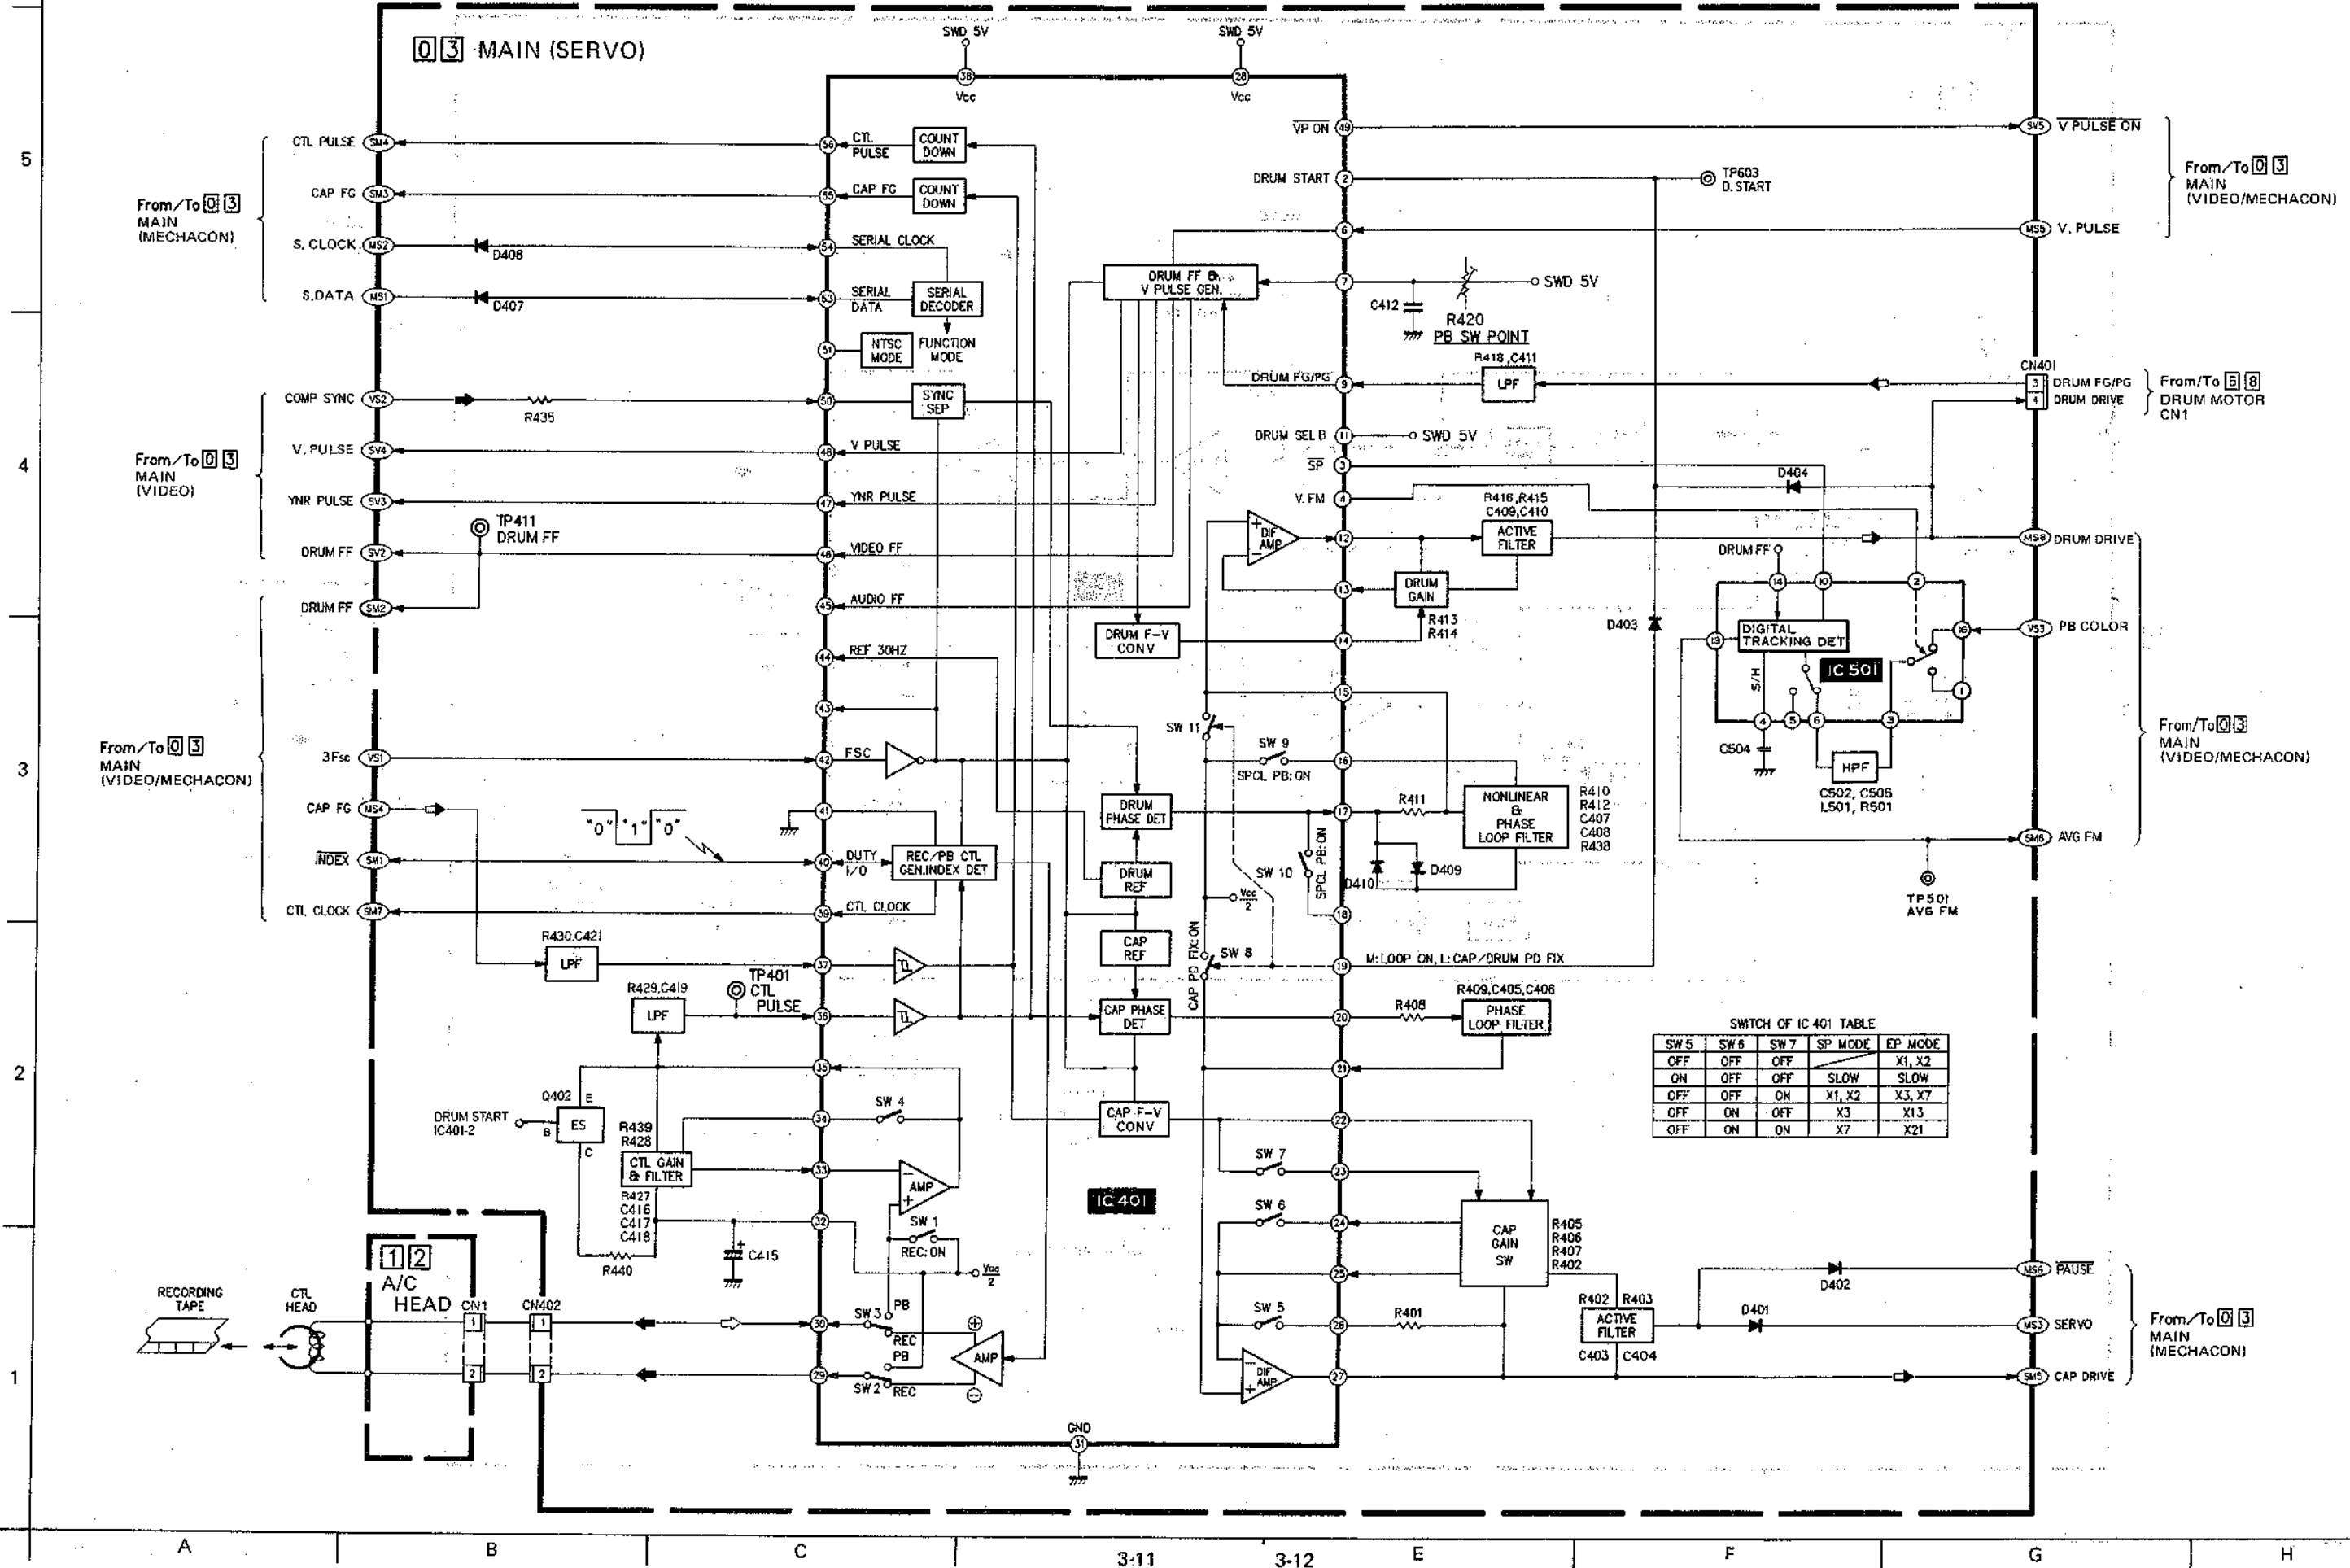

3.7 AUDIO BLOCK DIAGRAM

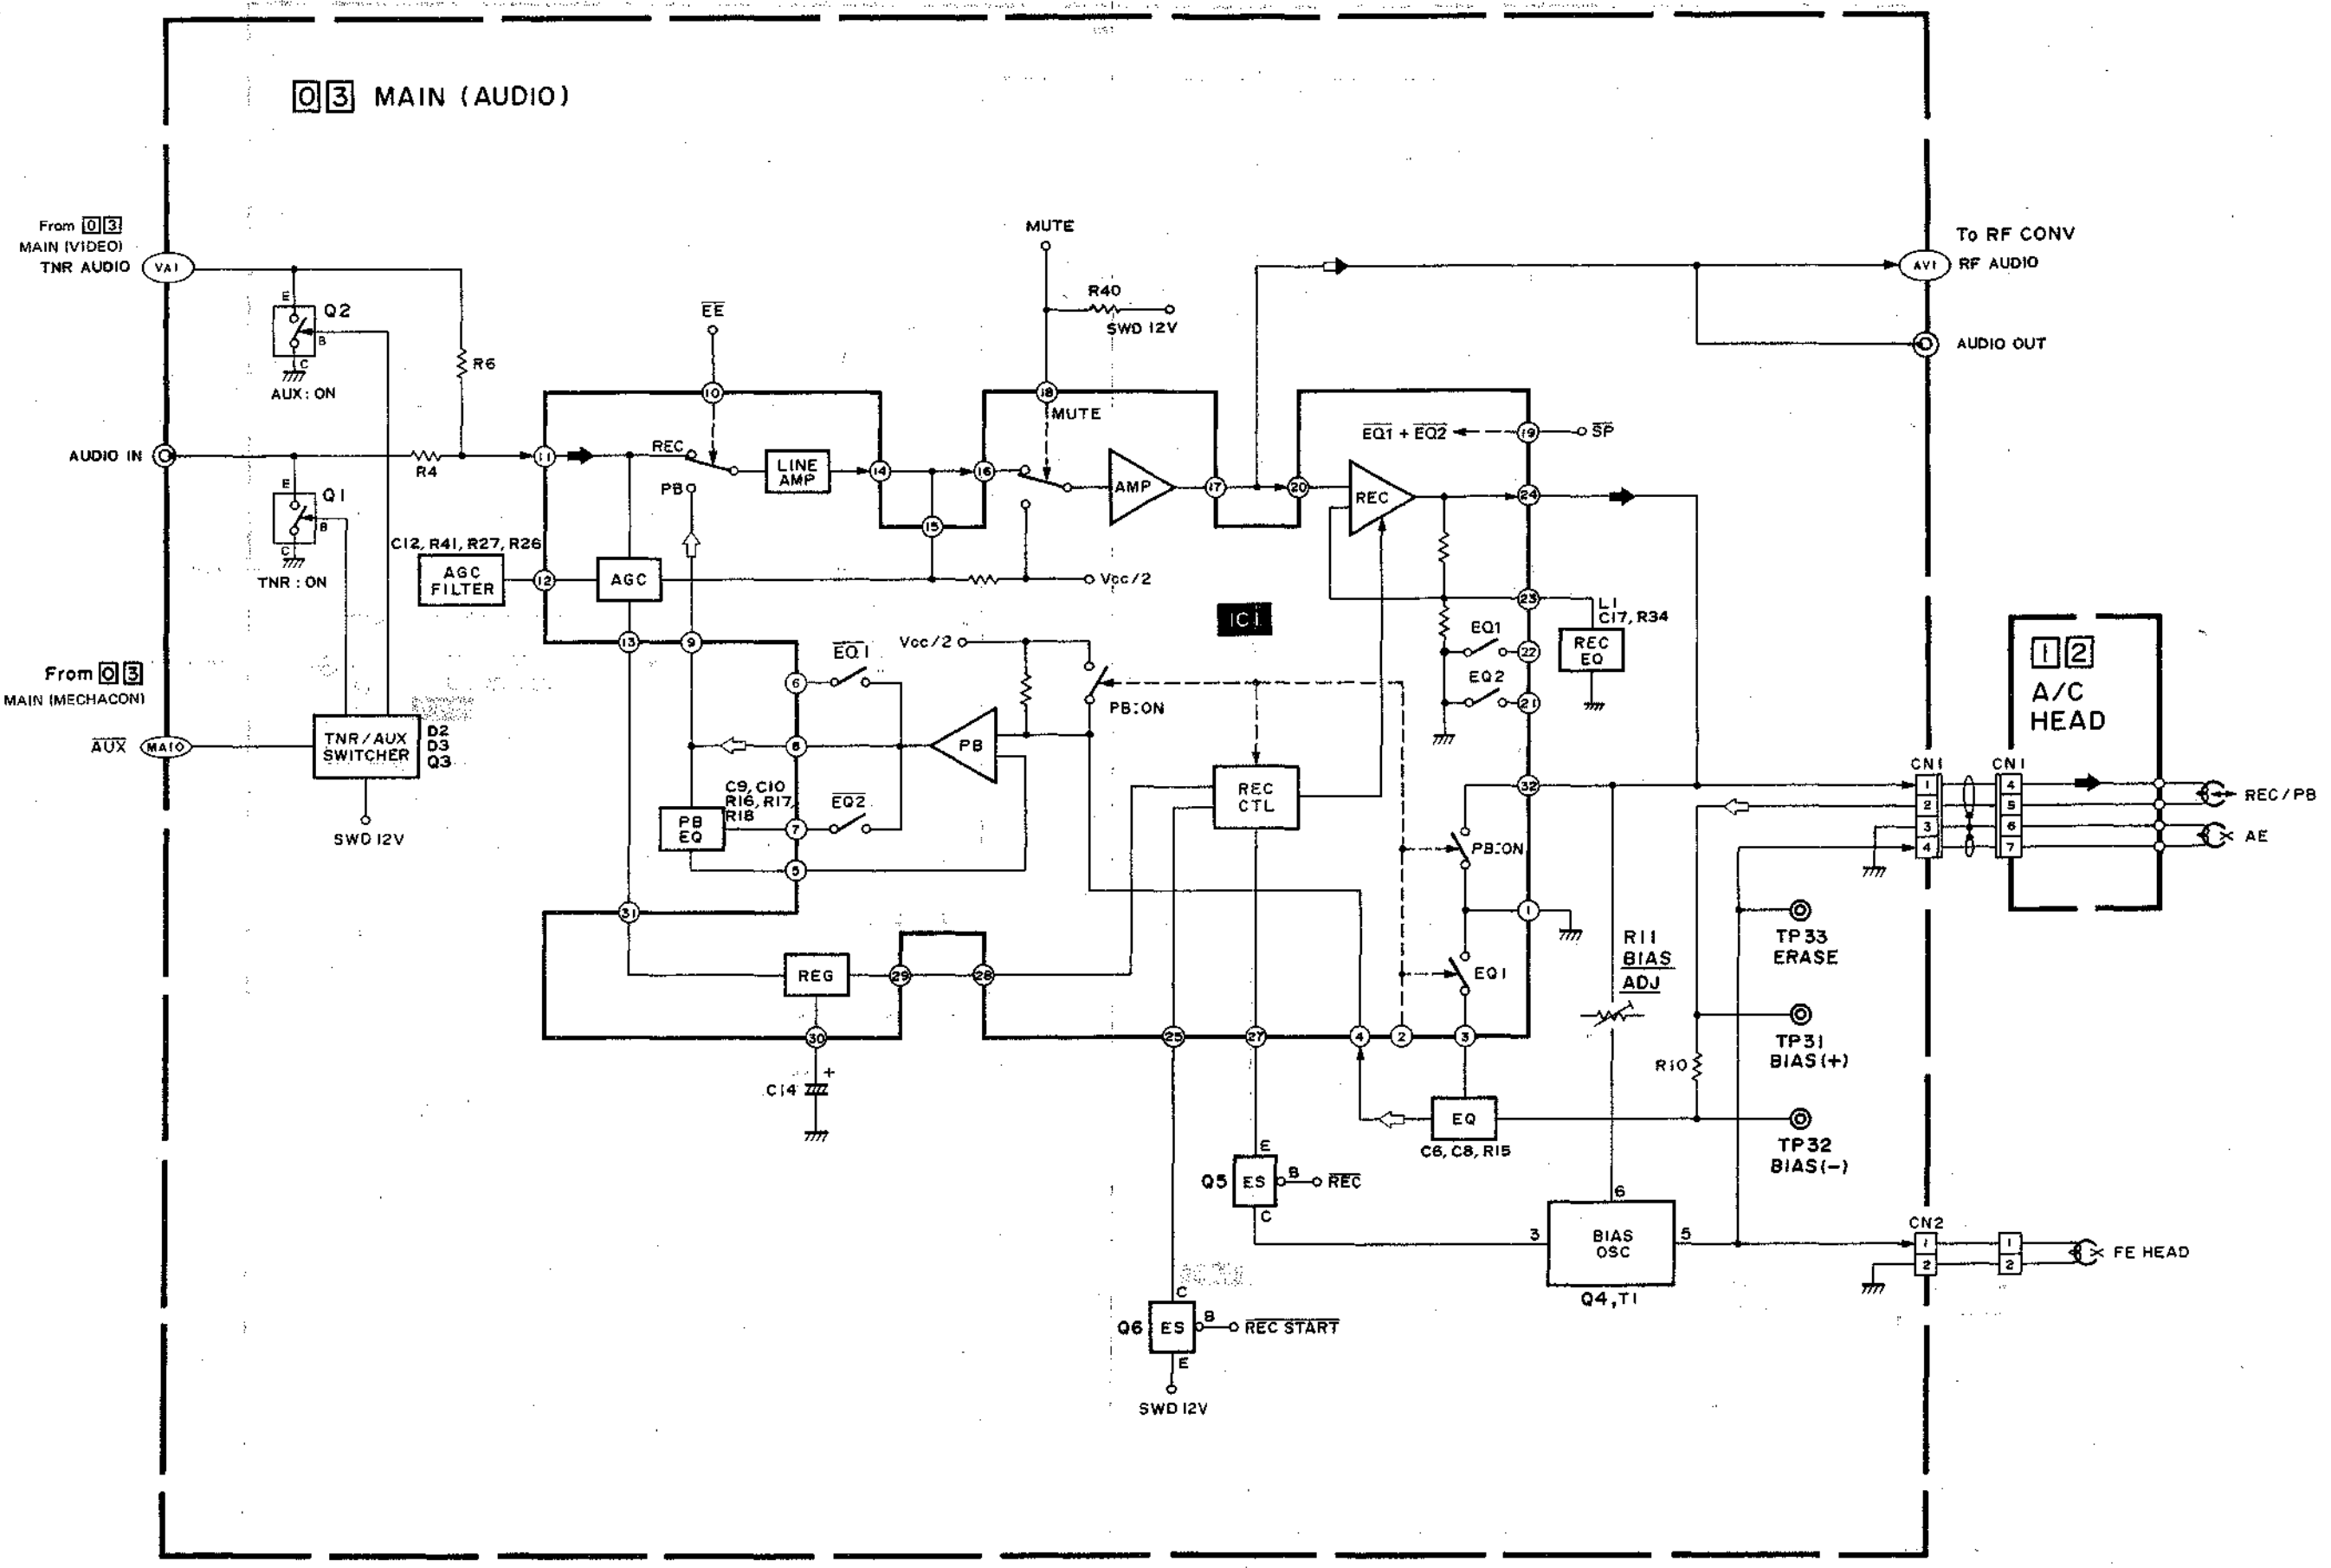

3.8 SYSTEM CTL BLOCK DIAGRAM

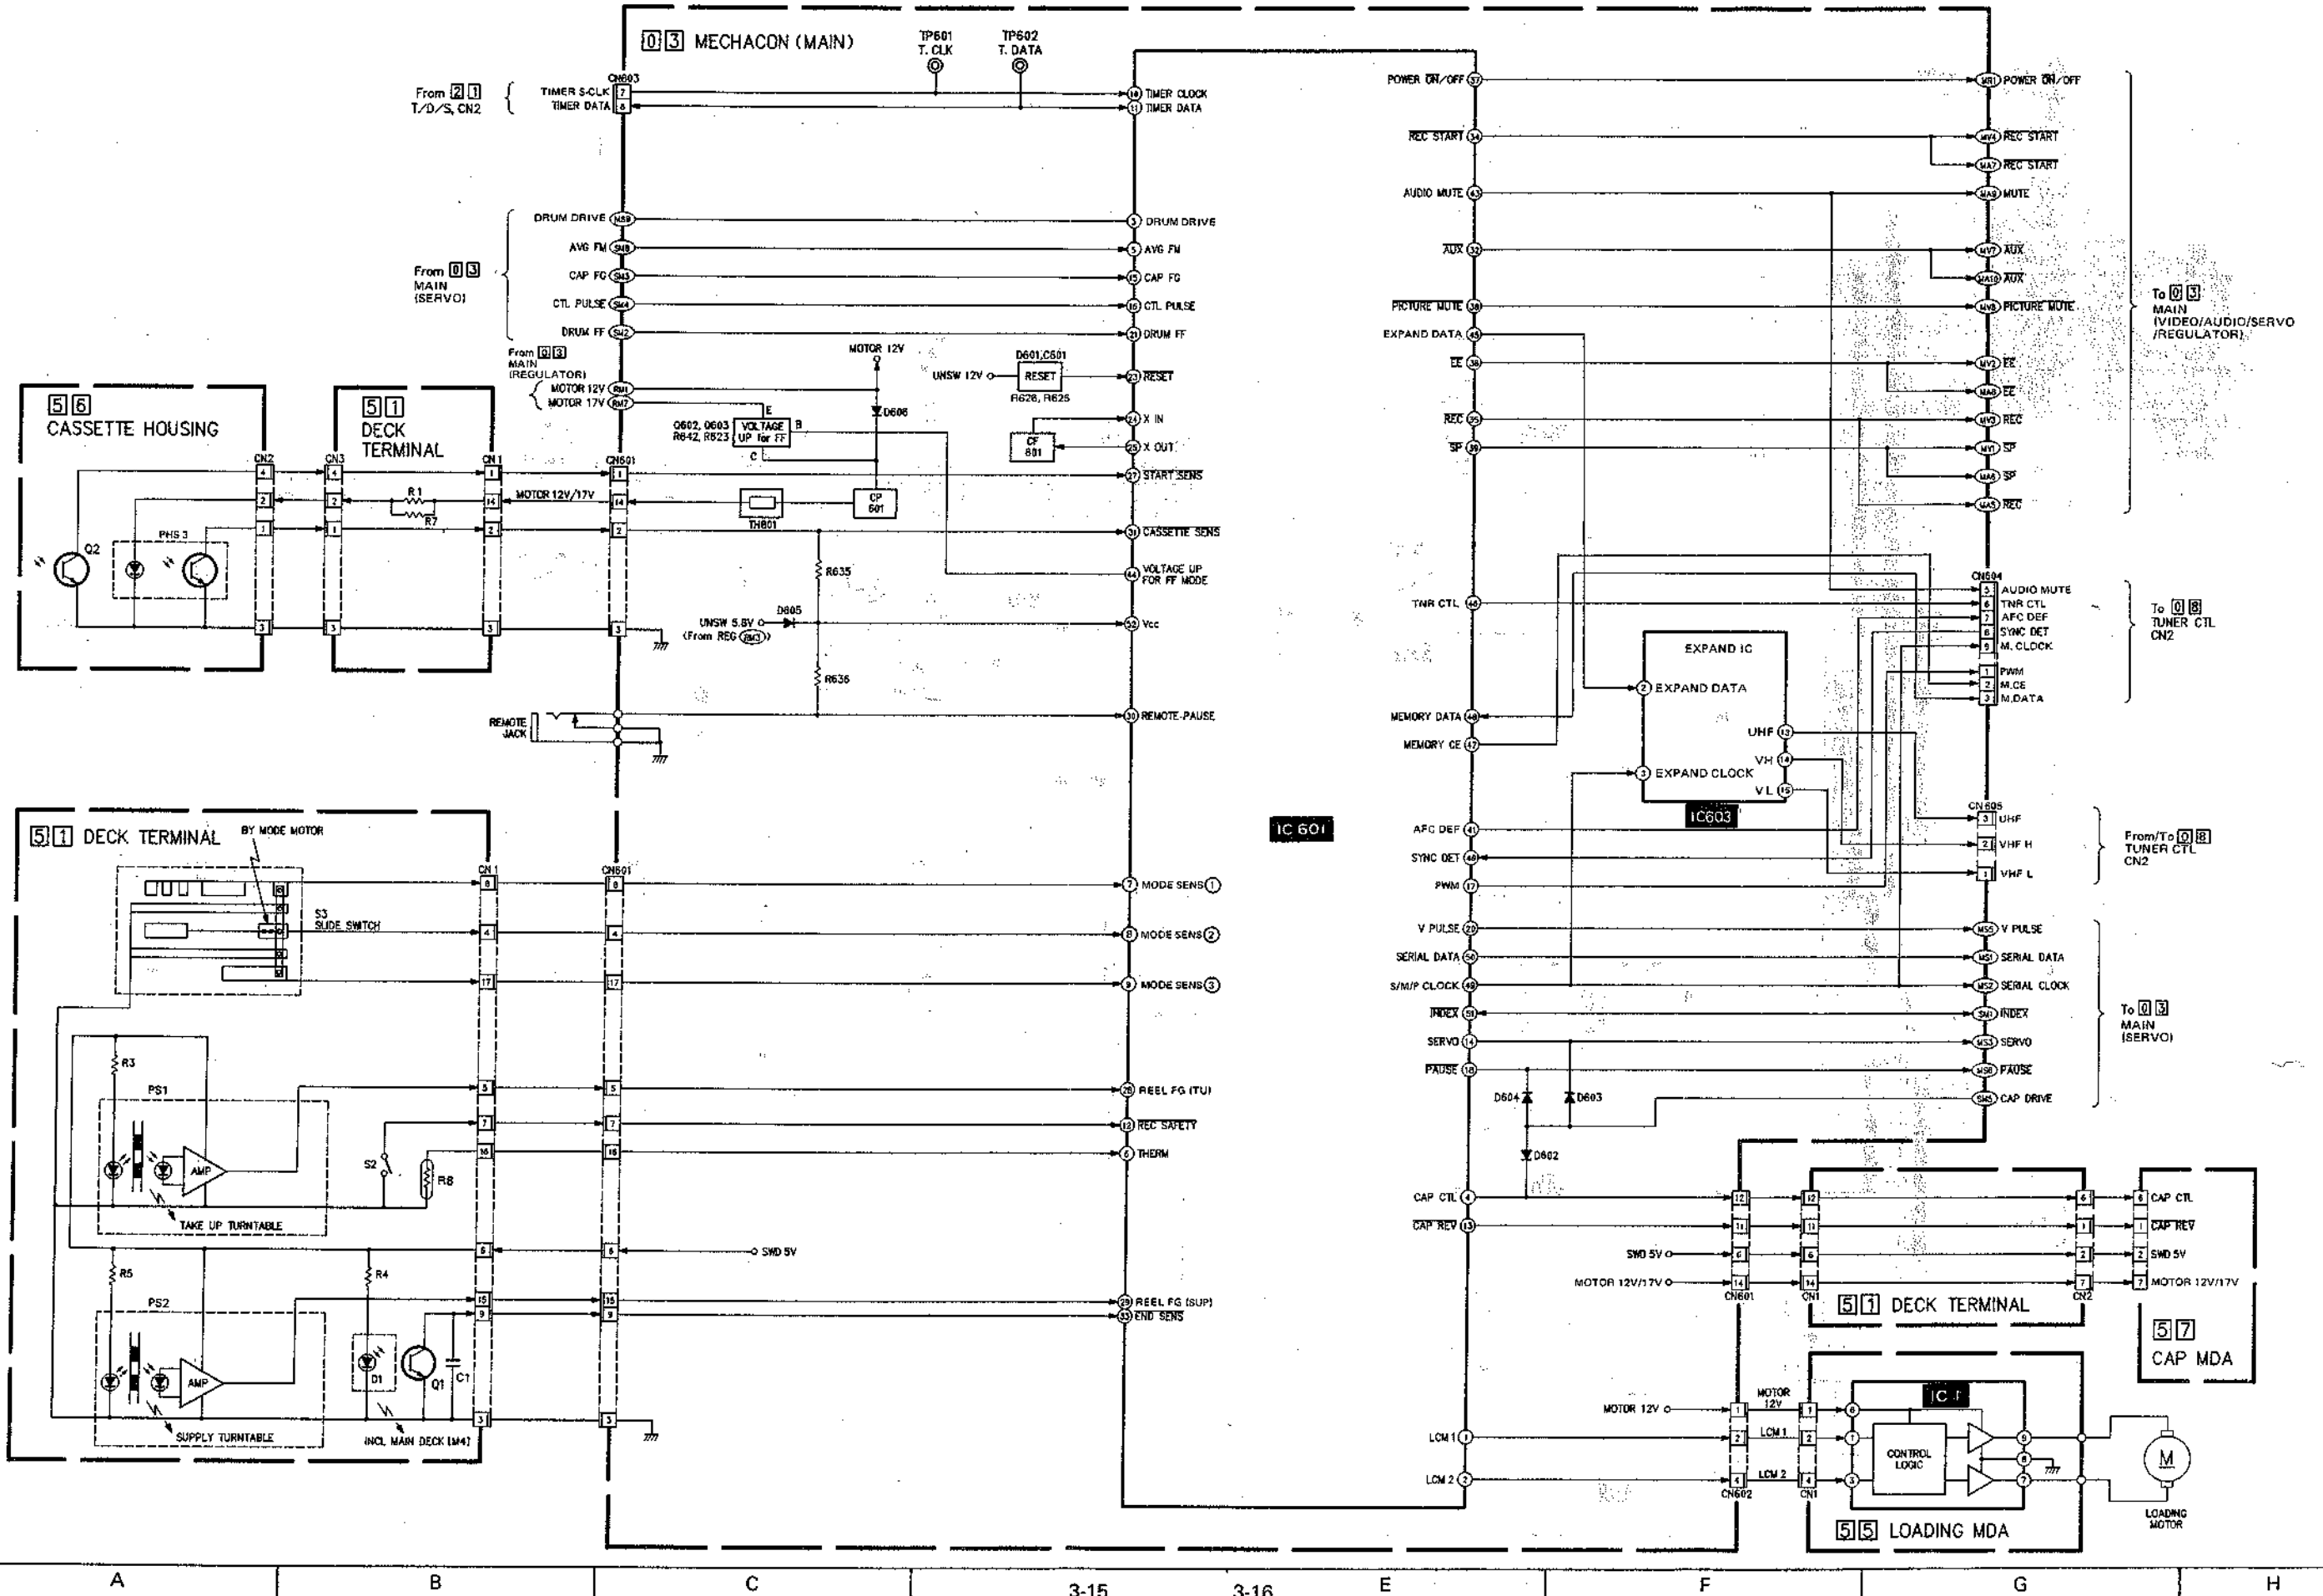

A

B

C

3-15

3-16


E

F

G

H



3.9 POWER TRANS, POWER TRANSISTOR & REGULATOR (MAIN) SCHEMATIC DIAGRAM

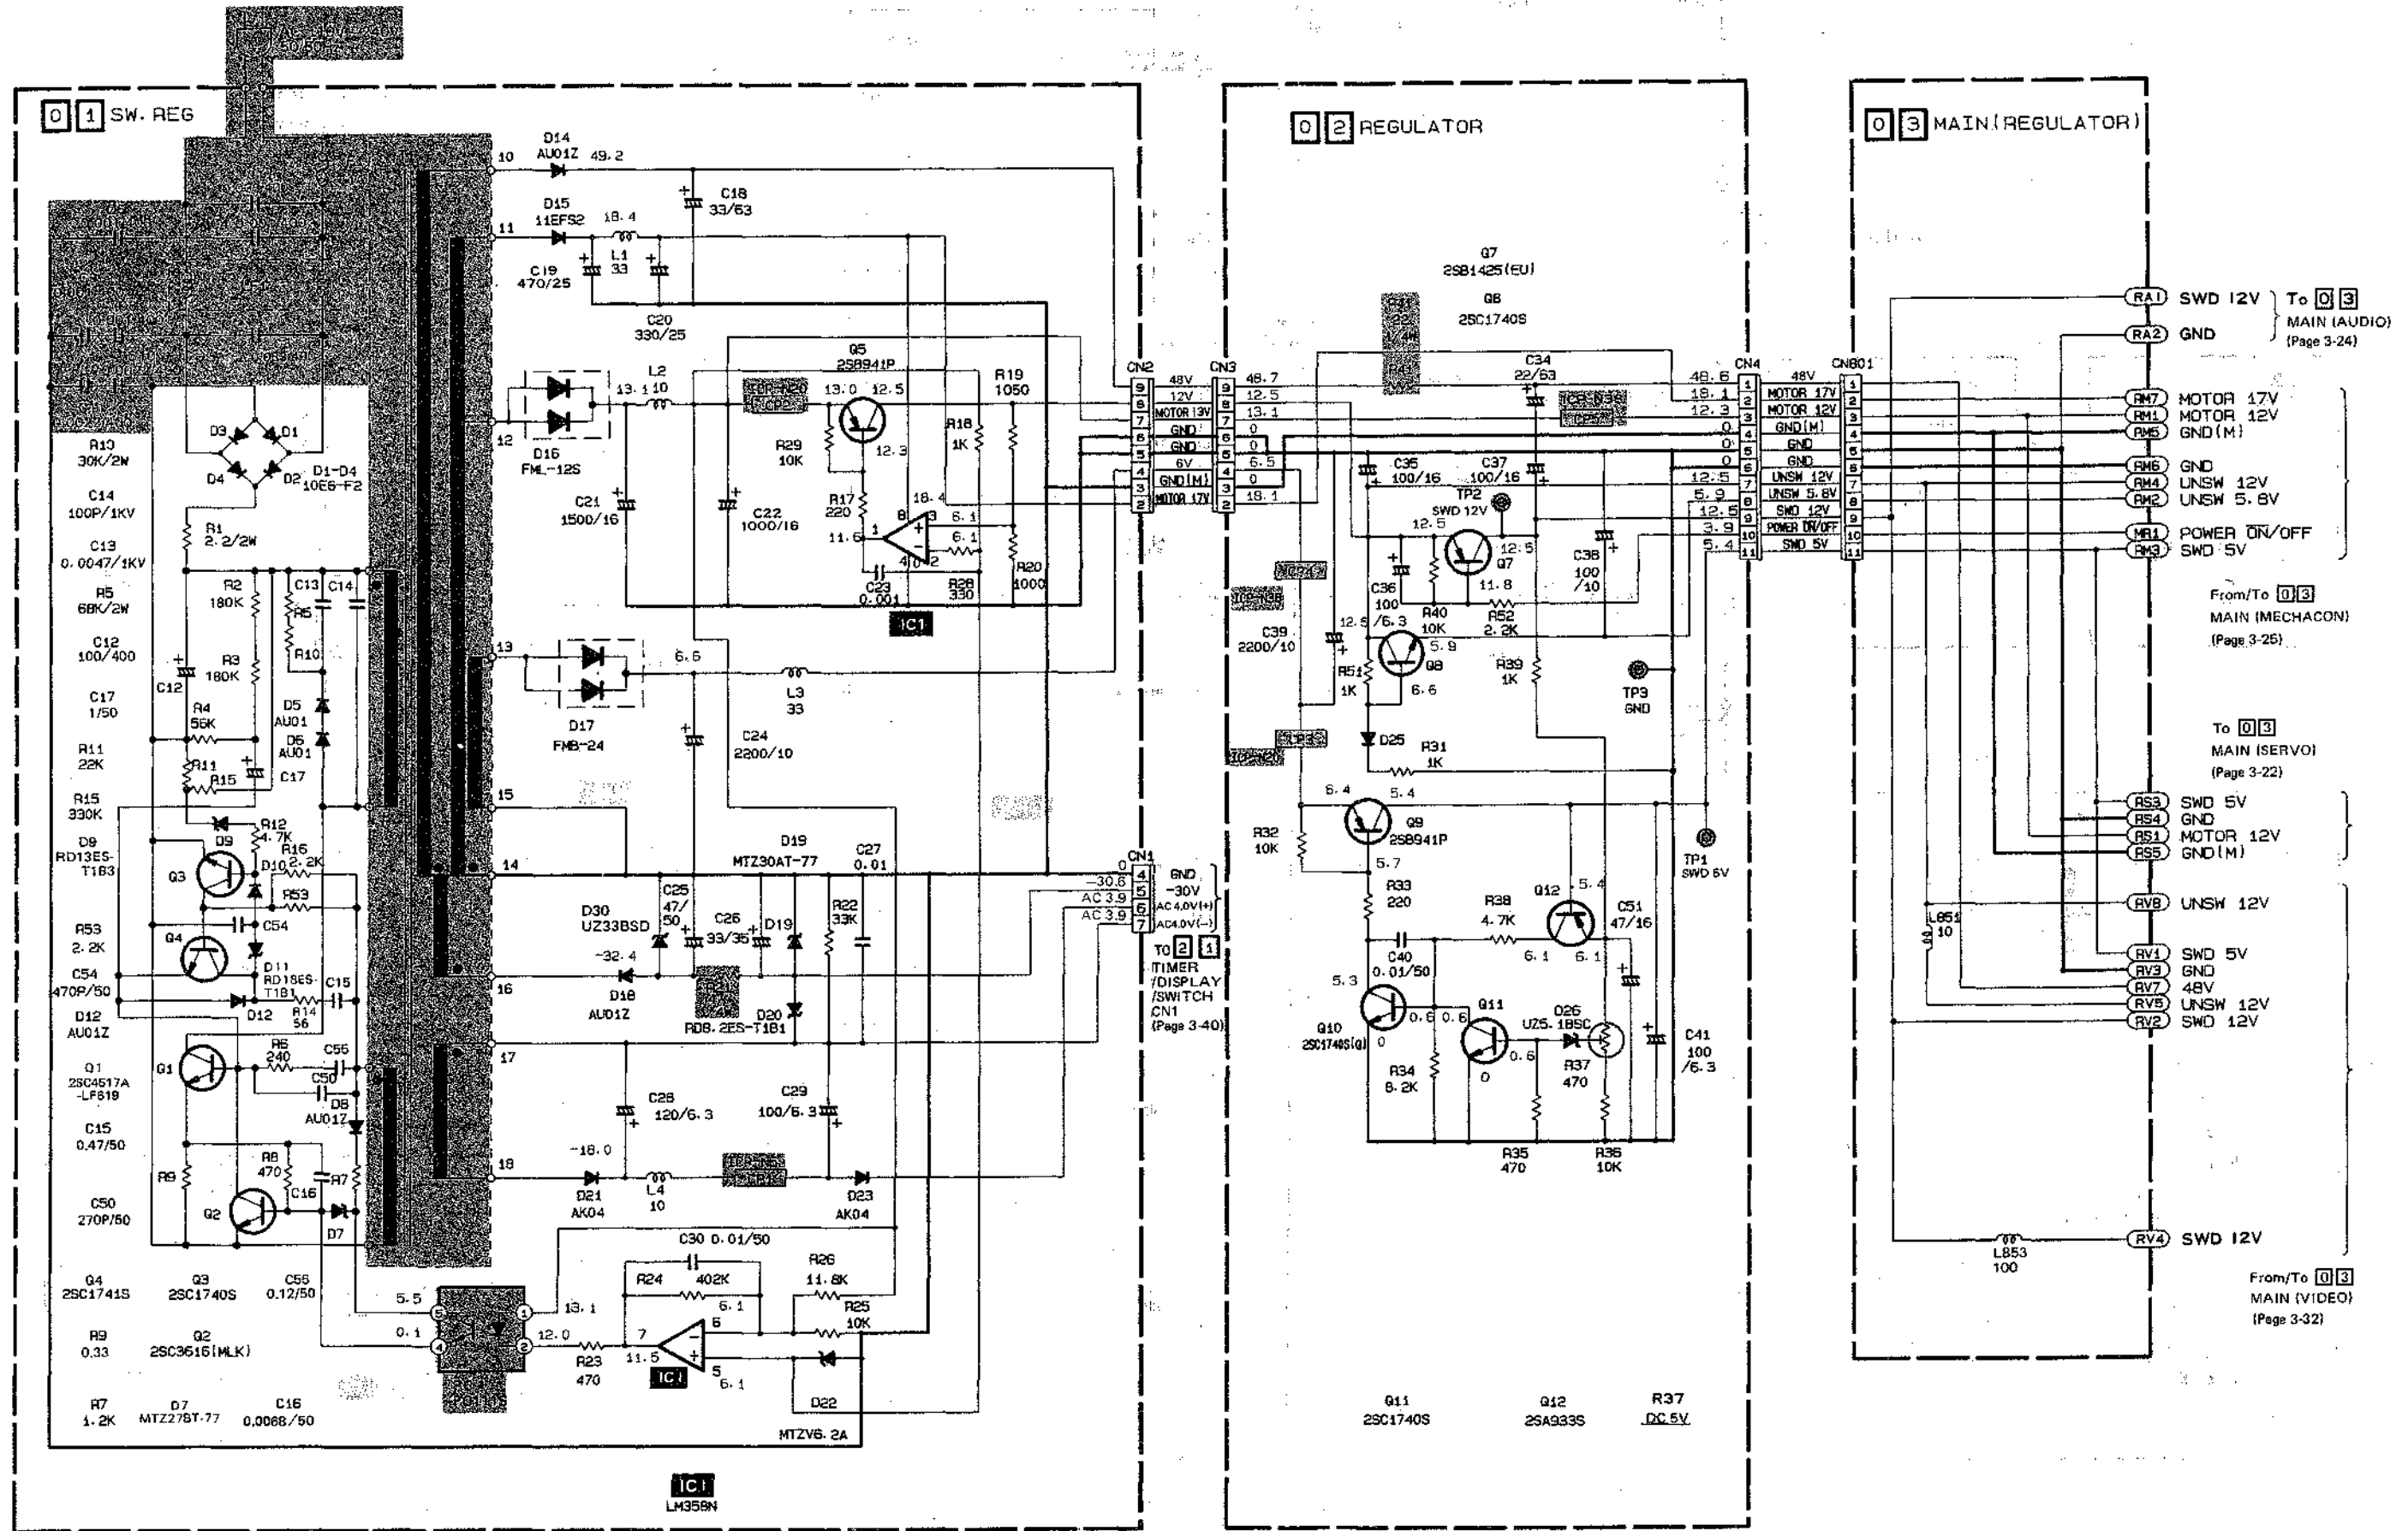


6
5
4
3
2
1
A B C 3-19 3-20 E F G H

3.10 SWITCHING REGULATOR CIRCUIT BOARD

MANDARIN TRANSFORMER (MVA3) 1711

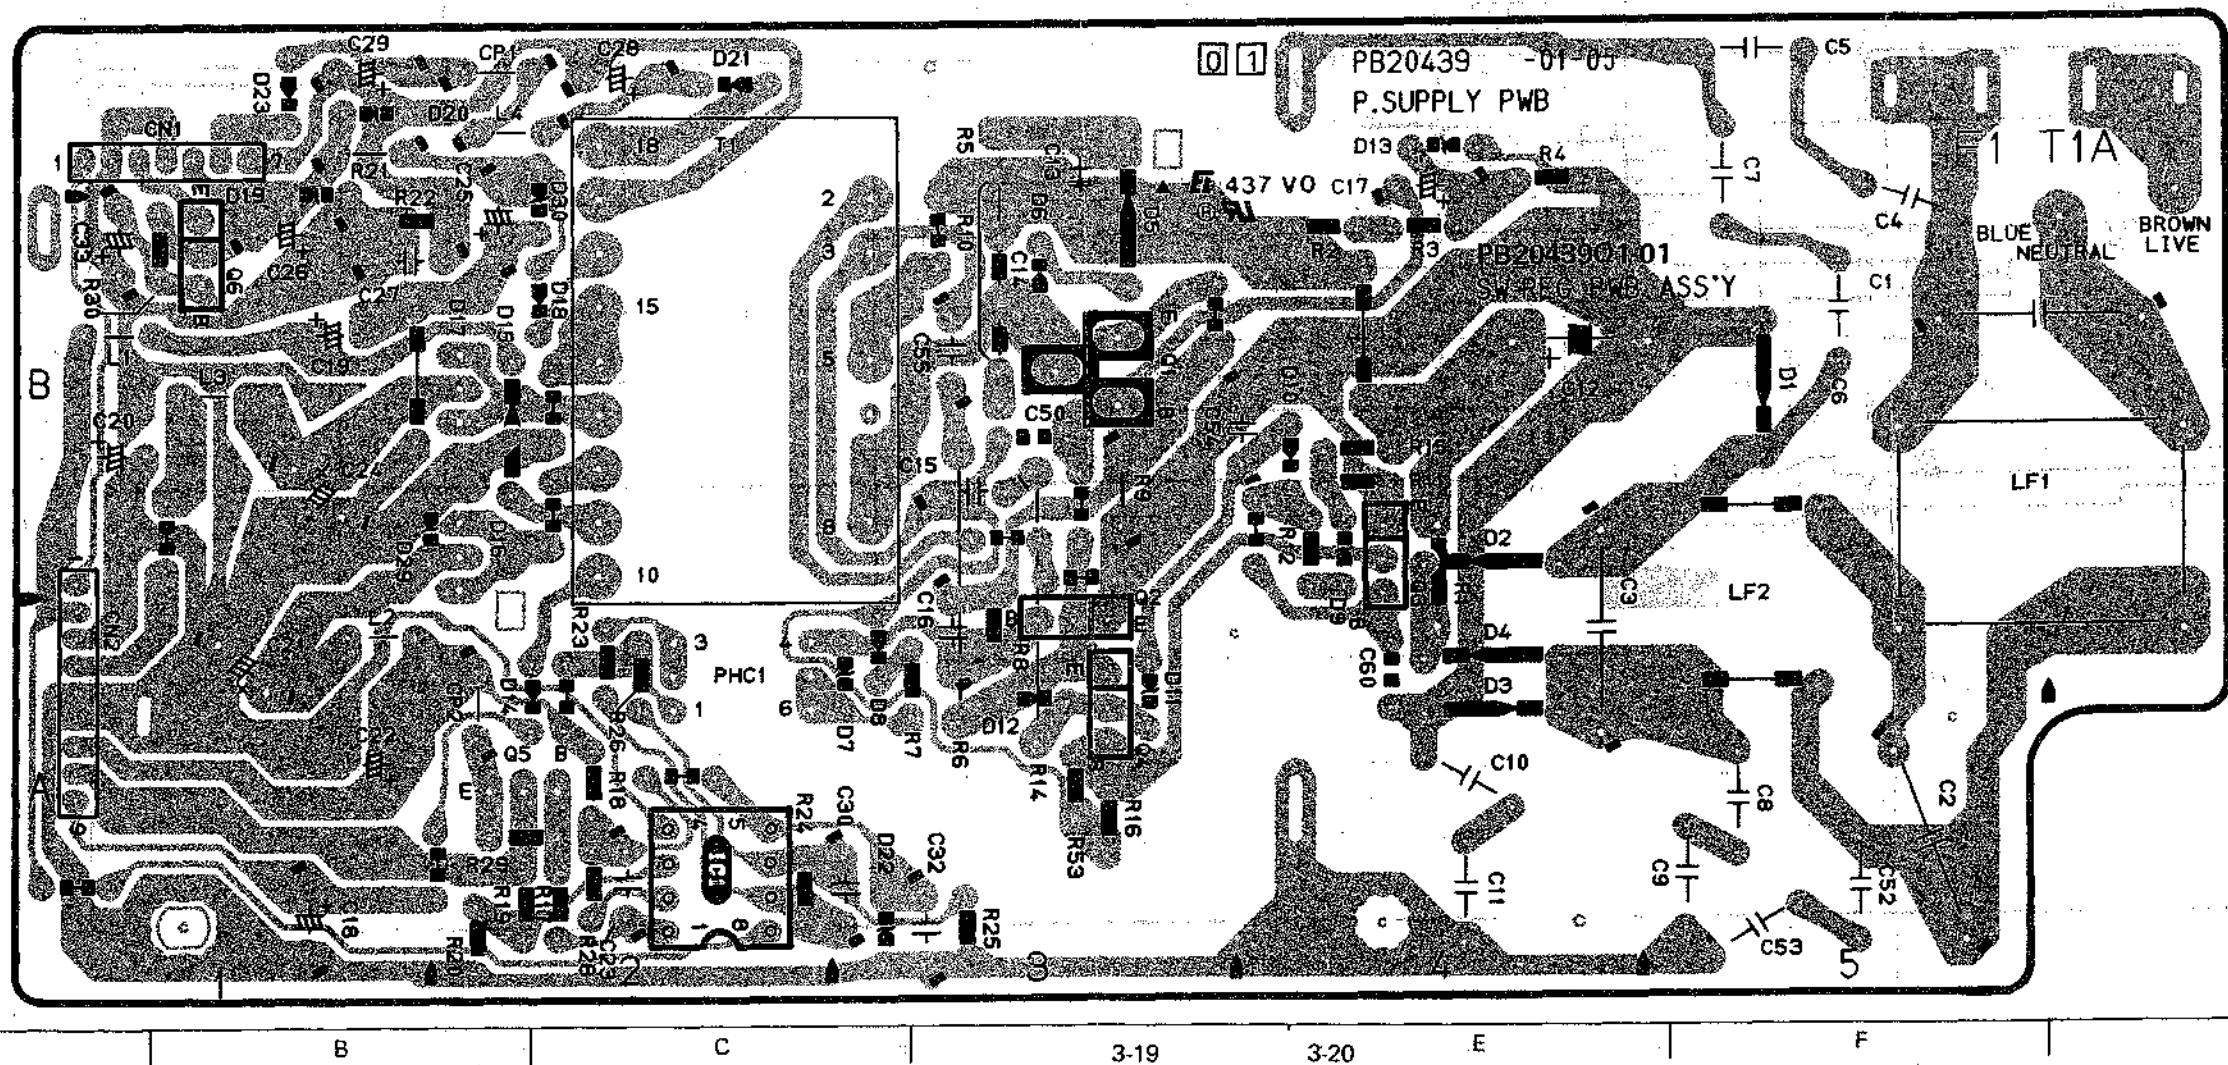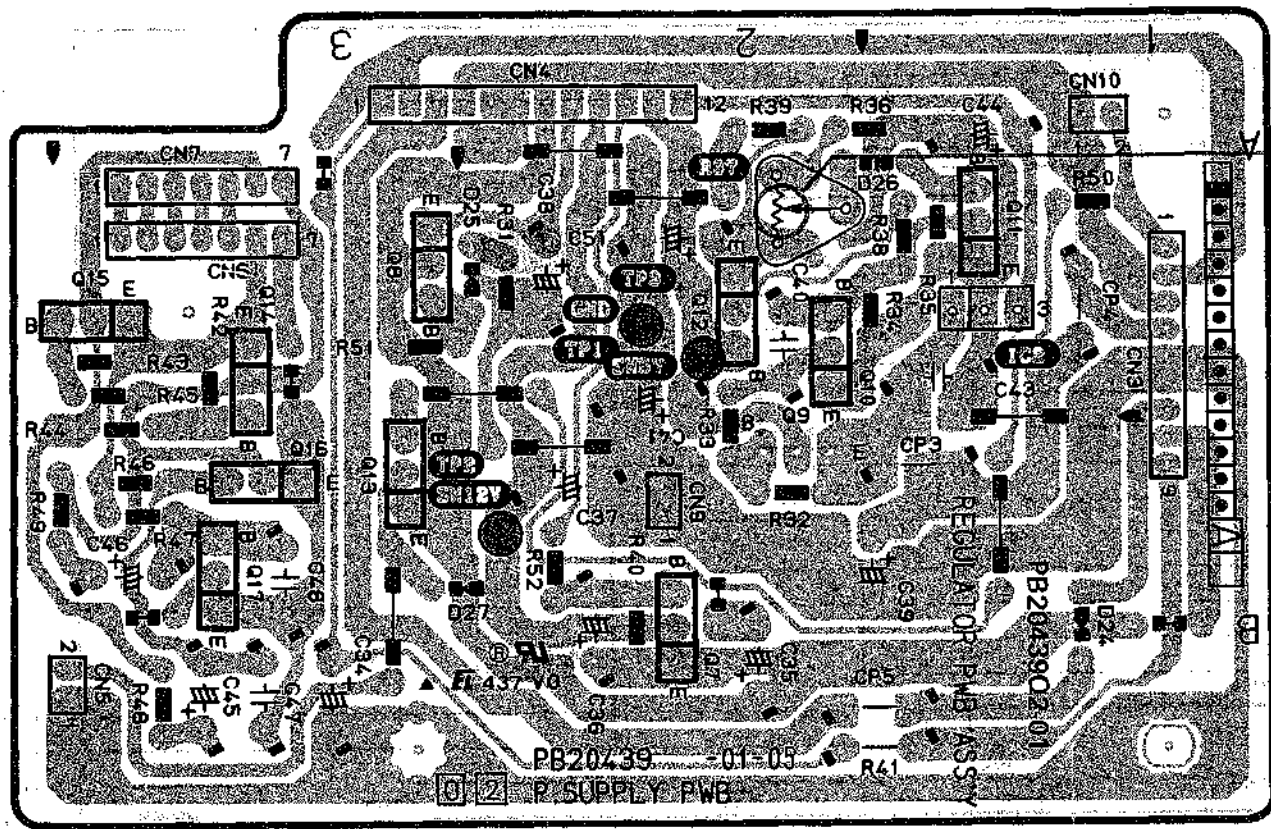

3.11 SERVO SCHEMATIC DIAGRAM

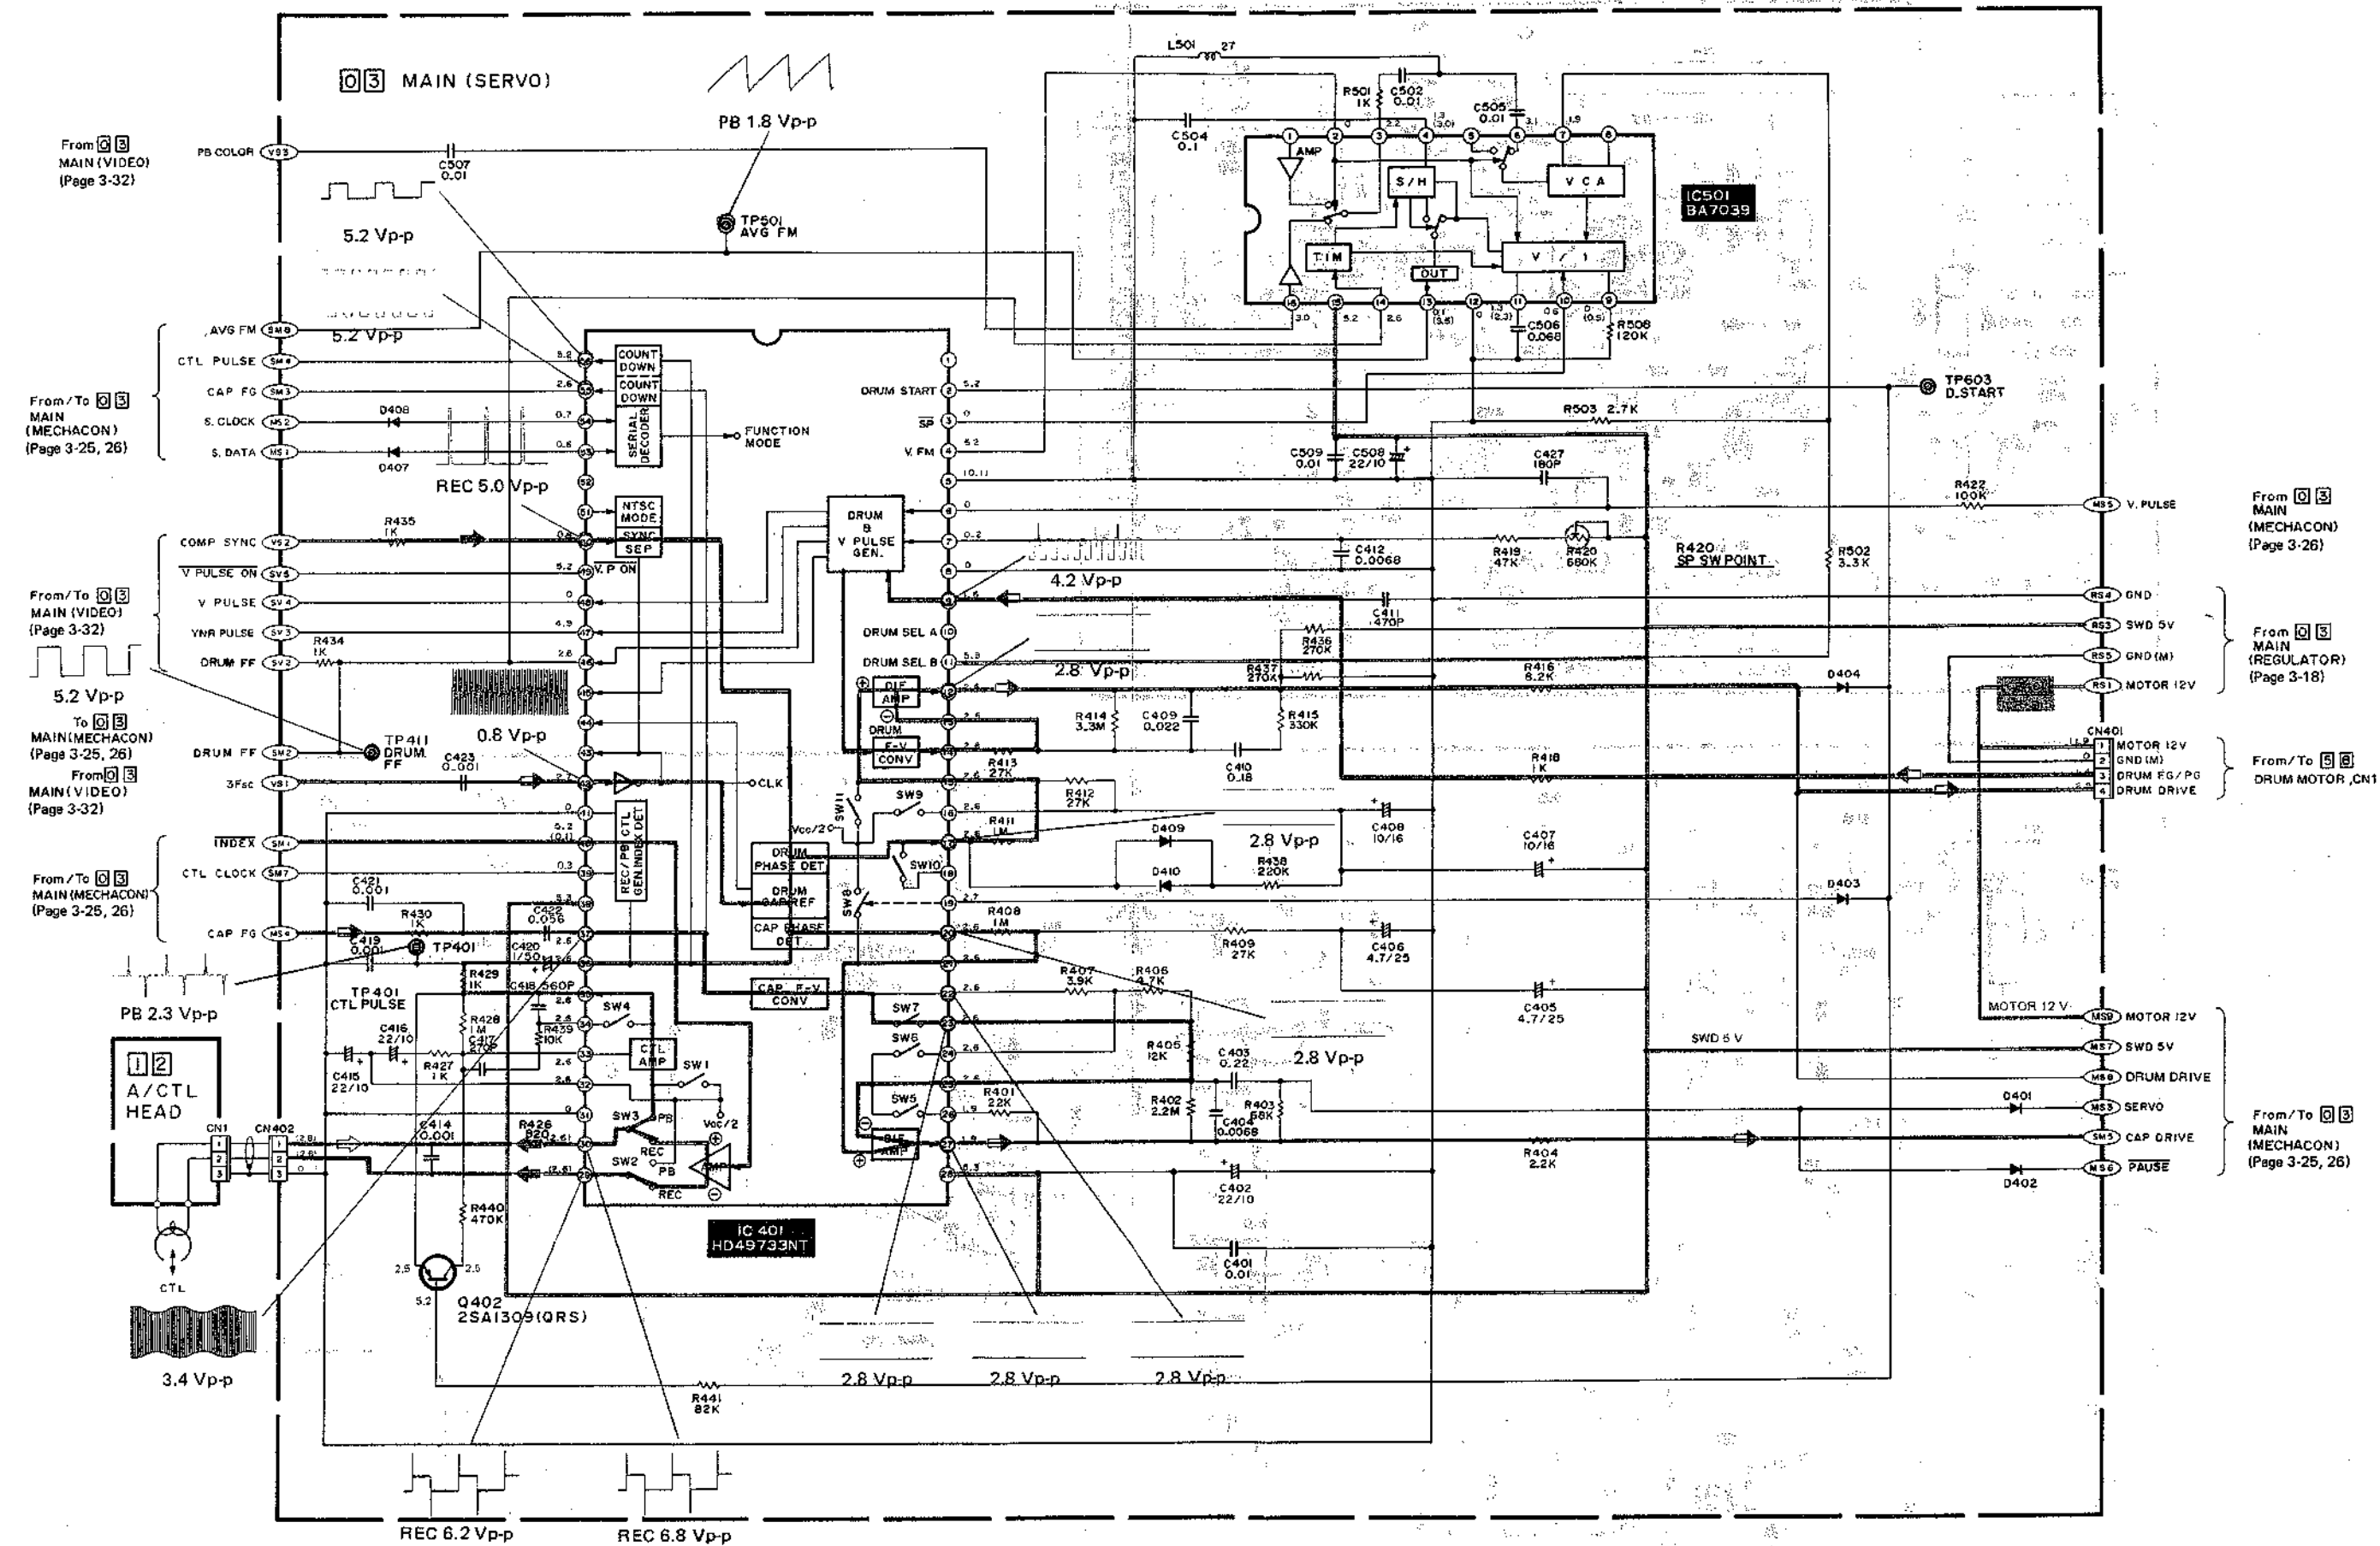

3.12 AUDIO SCHEMATIC DIAGRAM

6

5


4

3

2

1

03 MAIN (AUDIO)

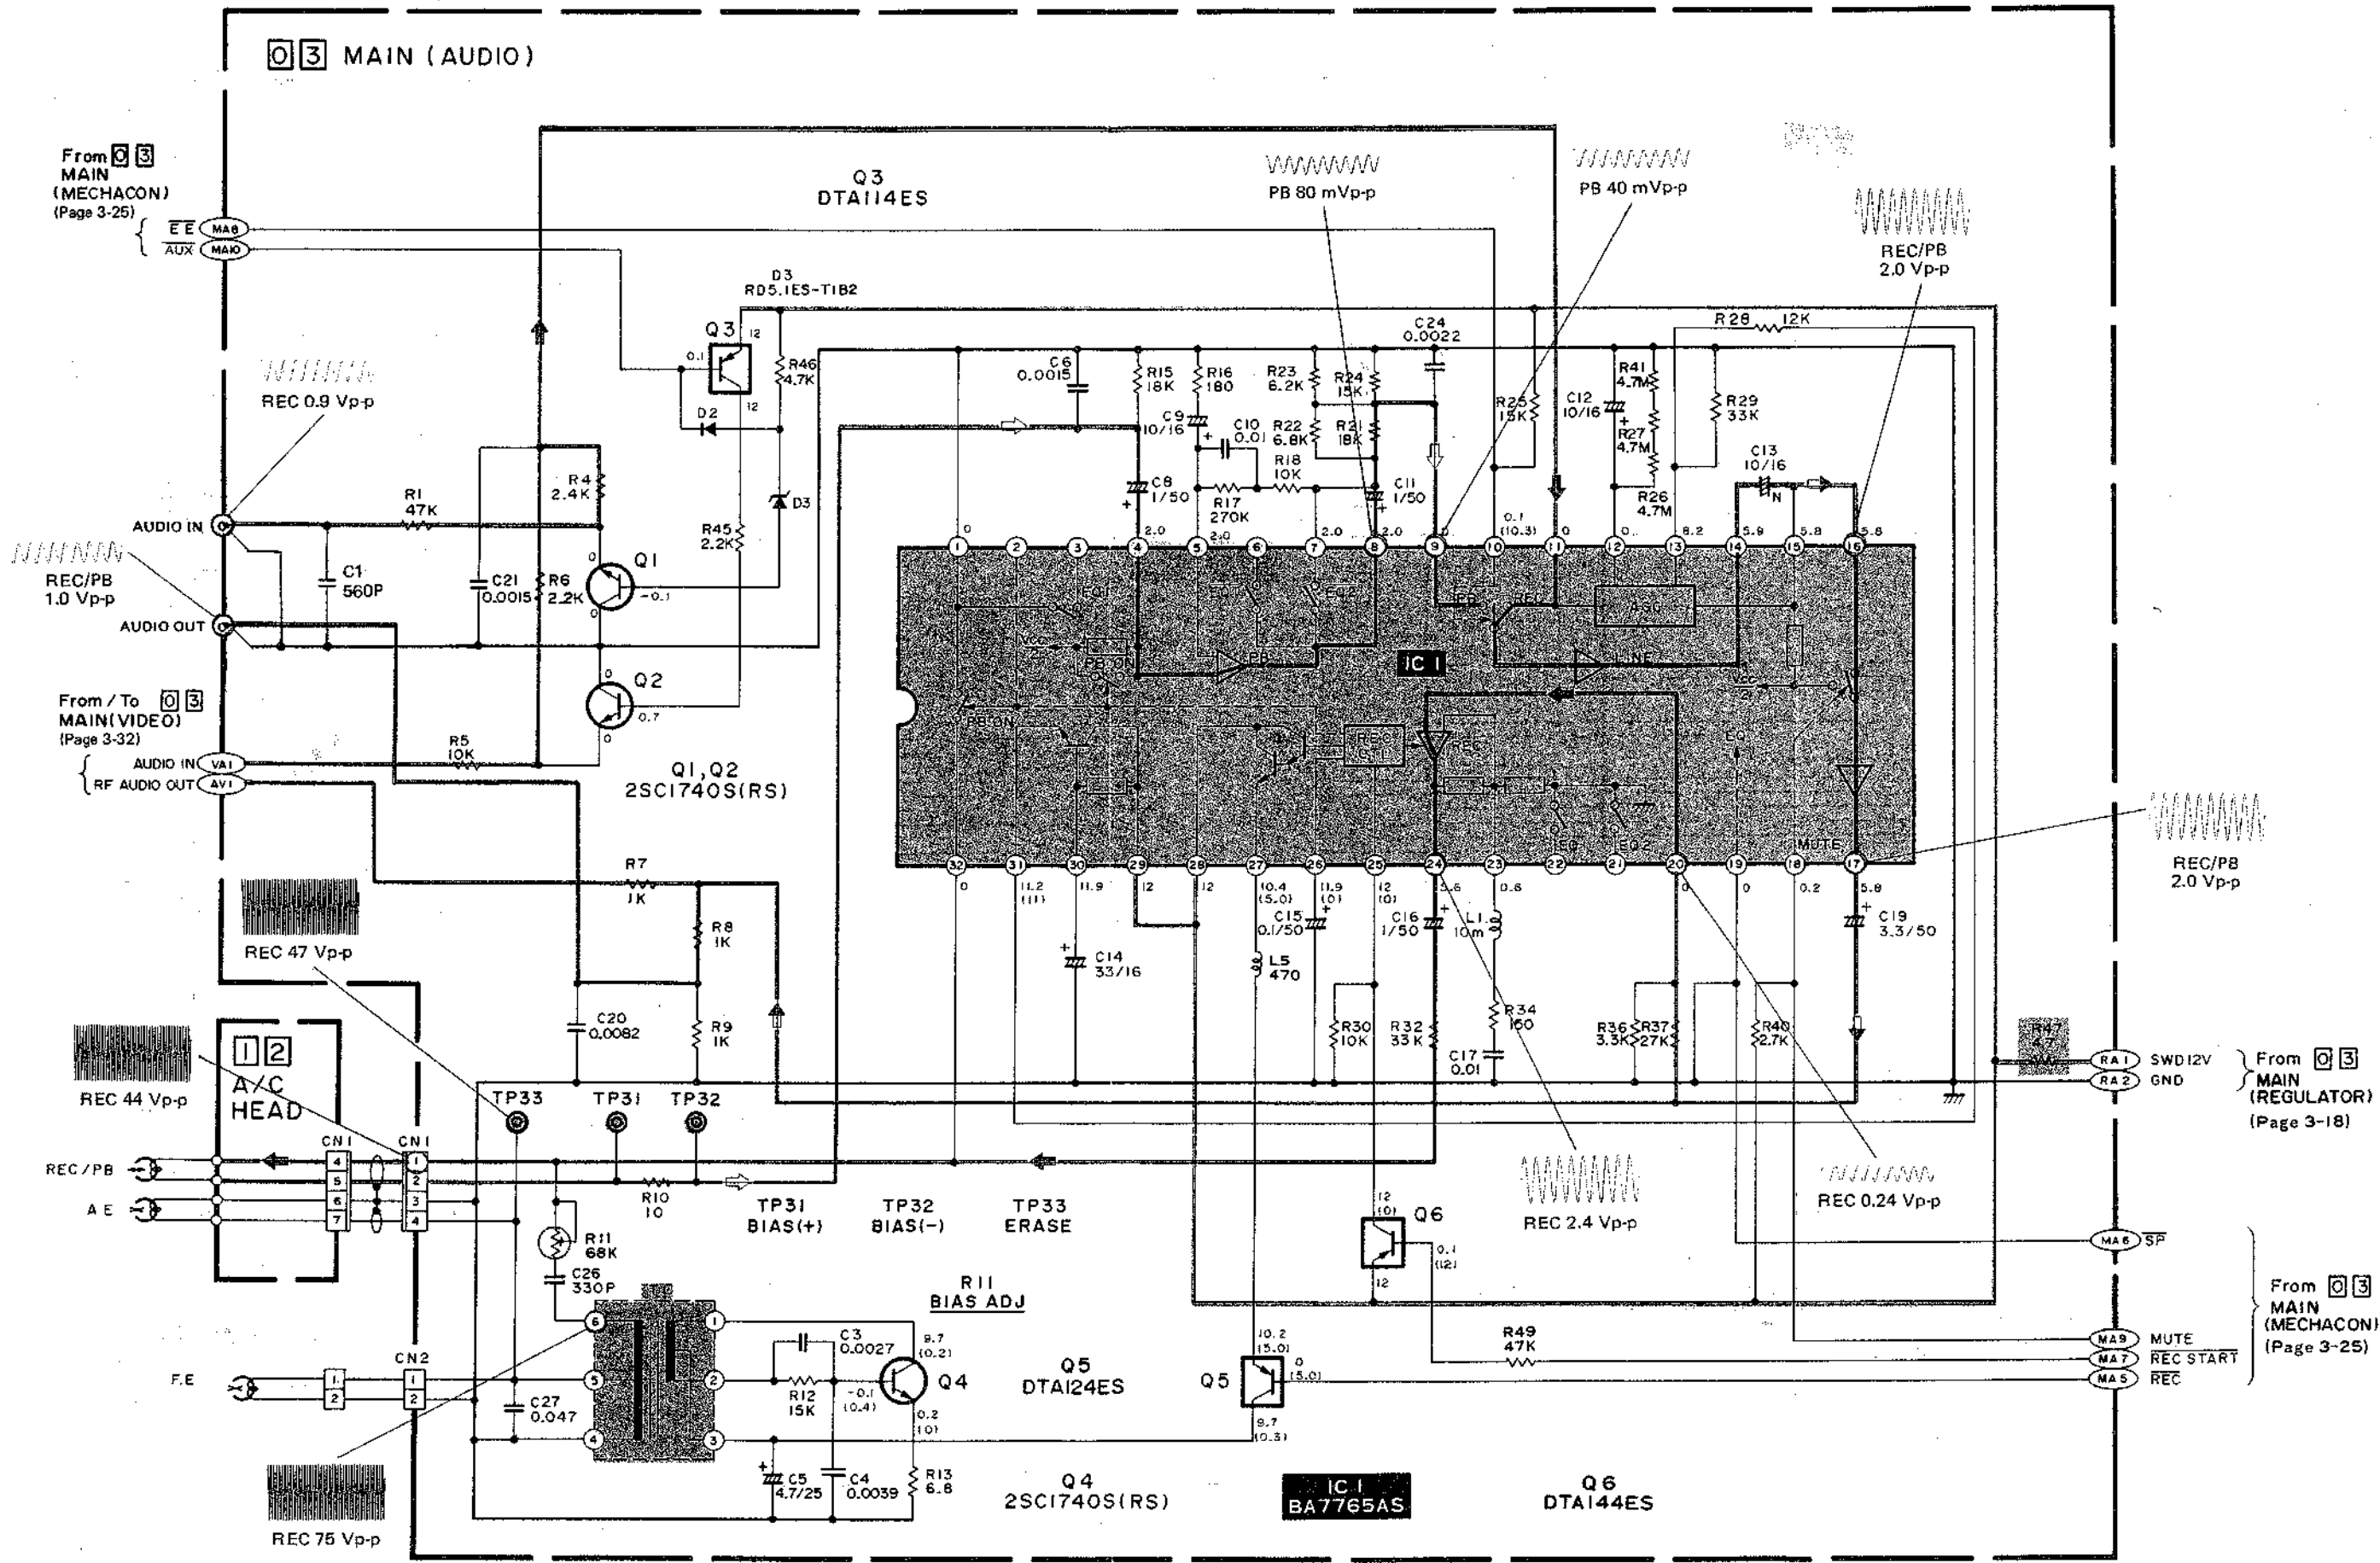


A B C 3-23 3-24 E F G H



From 03 MAIN (REGULATOR) (Page 3-18)

From 03 MAIN (MECHACON) (Page 3-25)

3.13 SYSTEM CTL SCHEMATIC DIAGRAM


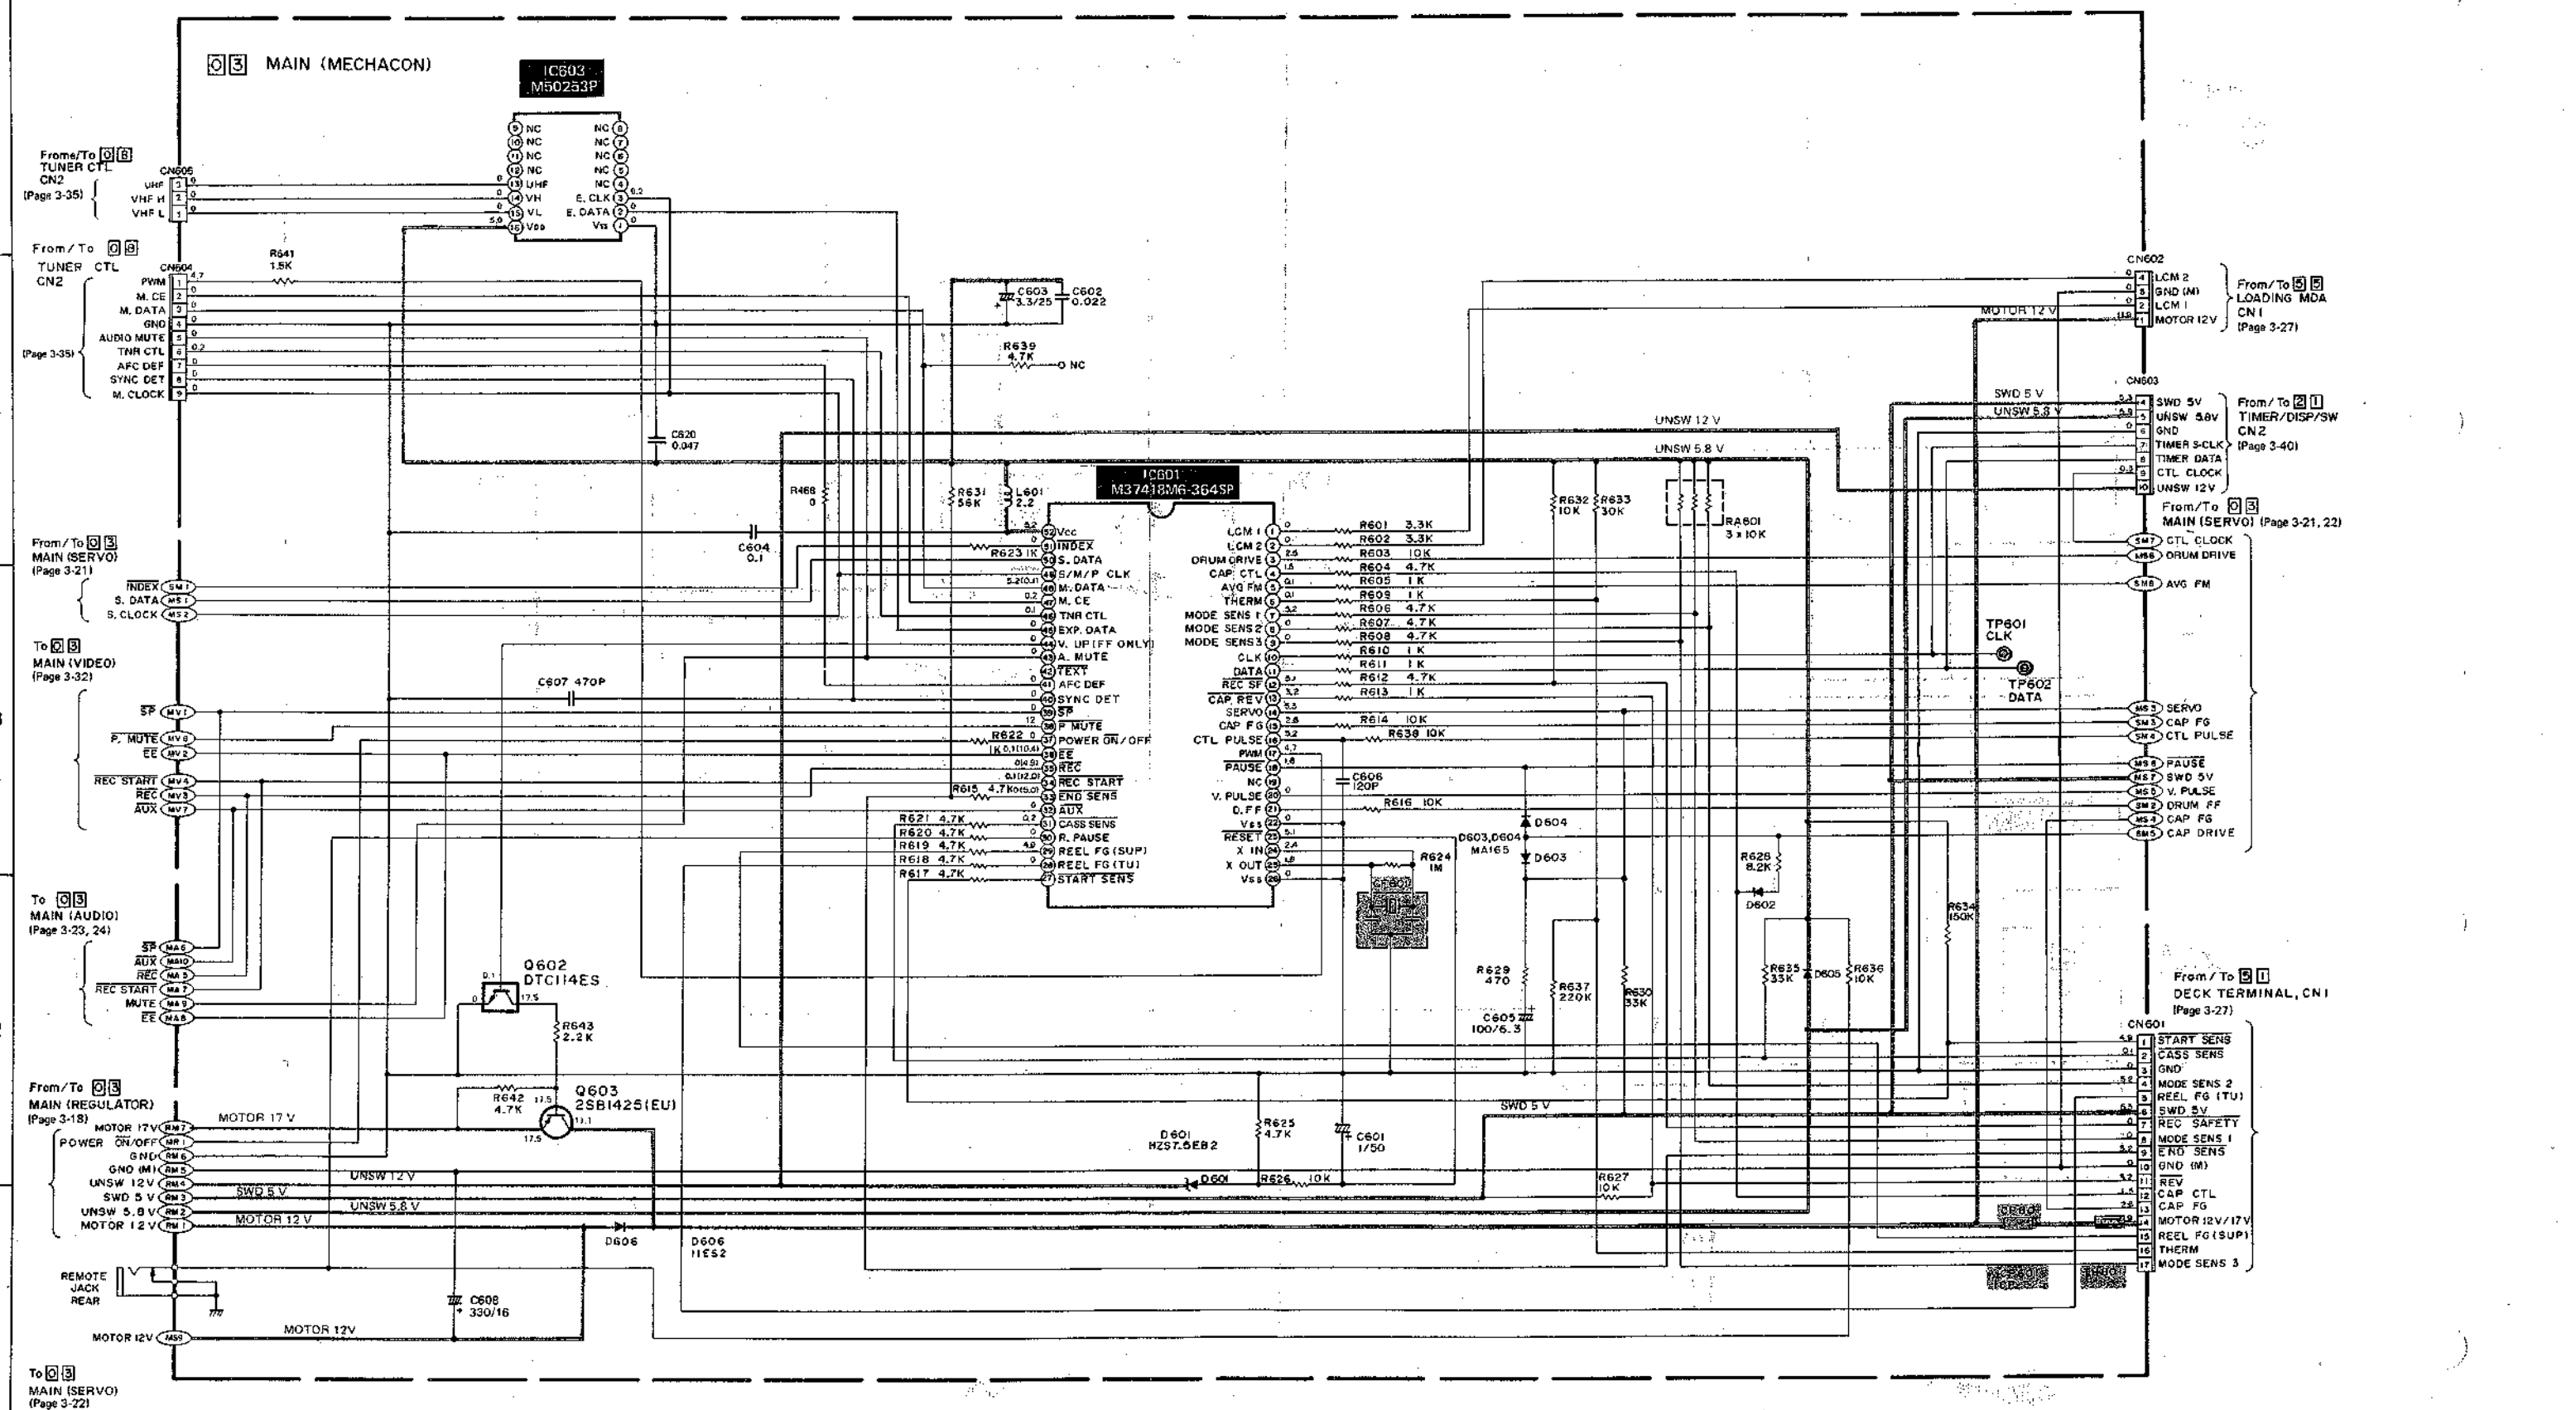


3.15 DECK TERMINAL, MODE MOTOR, C. HOUSING, A/C HEAD
CIRCUIT BOARDS

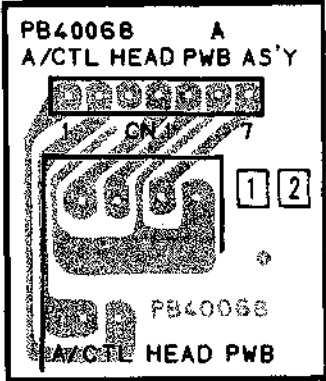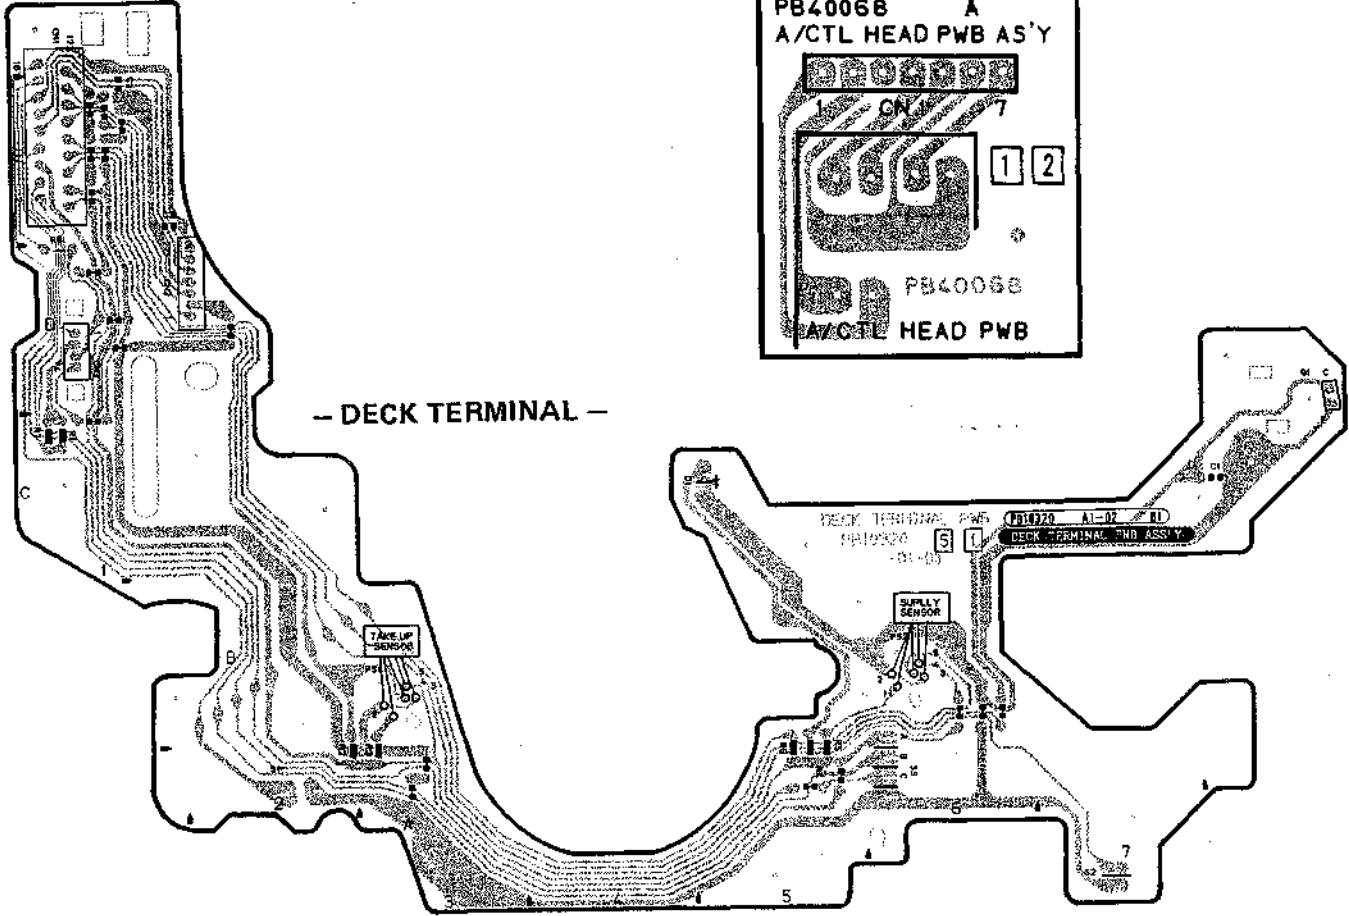

- DECK TERMINAL -



- CASSETTE HOUSING -

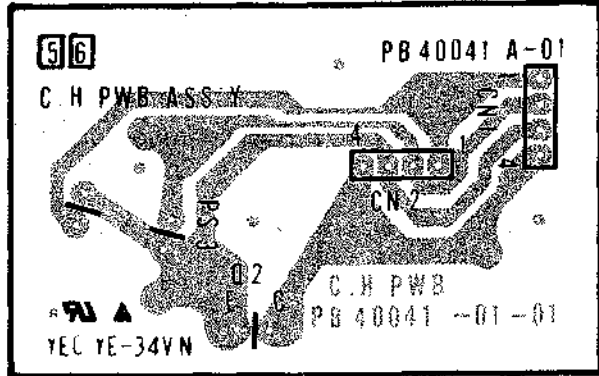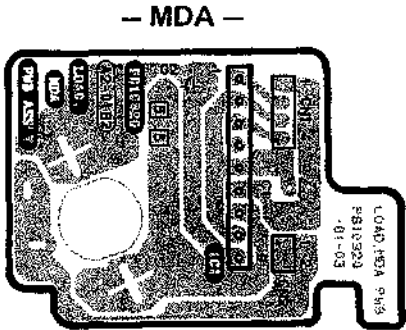

6


3.14 DECK TERMINAL, MODE MOTOR, CAPSTAN MDA, C. HOUSING SCHEMATIC DIAGRAMS

5

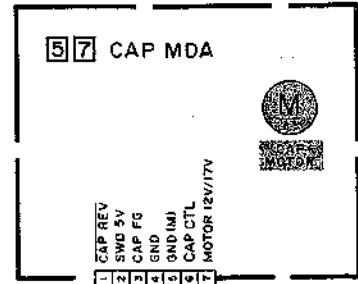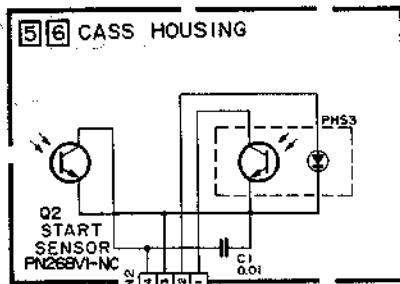


4

From/To **53**
MAIN (MECHACON)
CN601
(Page 3-26)

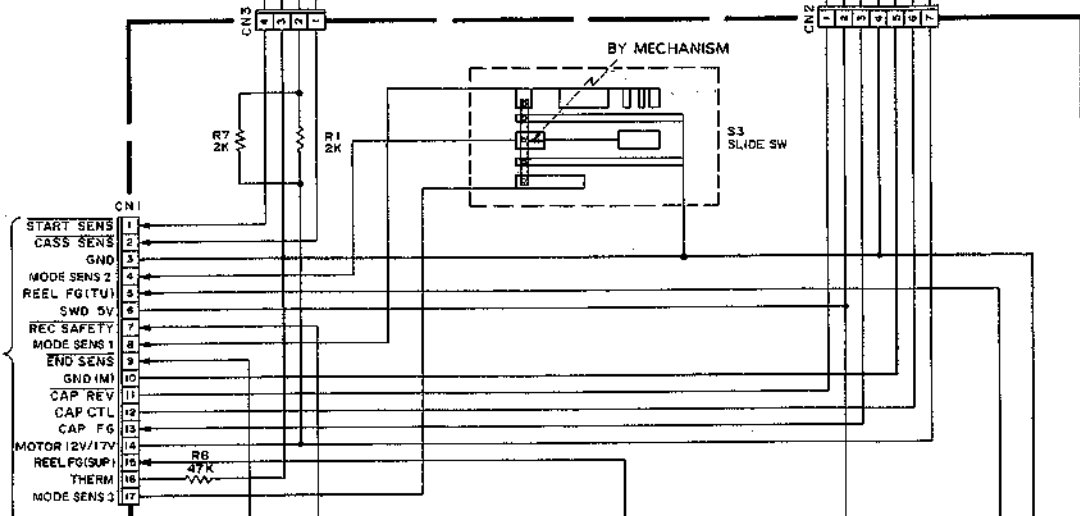

3


51 DECK TERMINAL

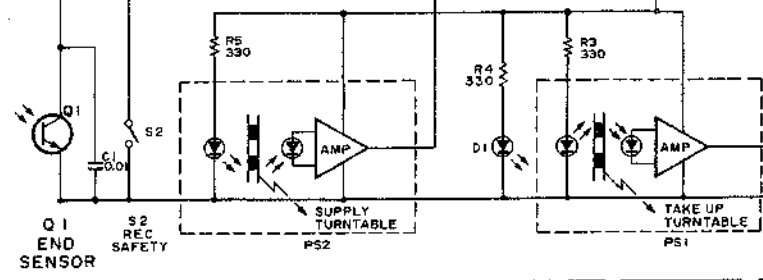

2

55 LOADING MDA

From/To **52**
MAIN (MECHACON)
CN602
(Page 3-26)

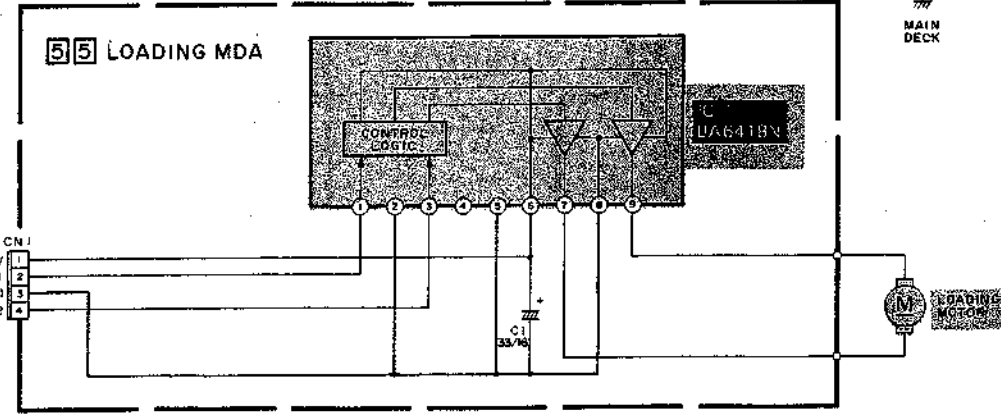

1

6

3.16 MAIN CIRCUIT BOARD


5

4

3

2

1

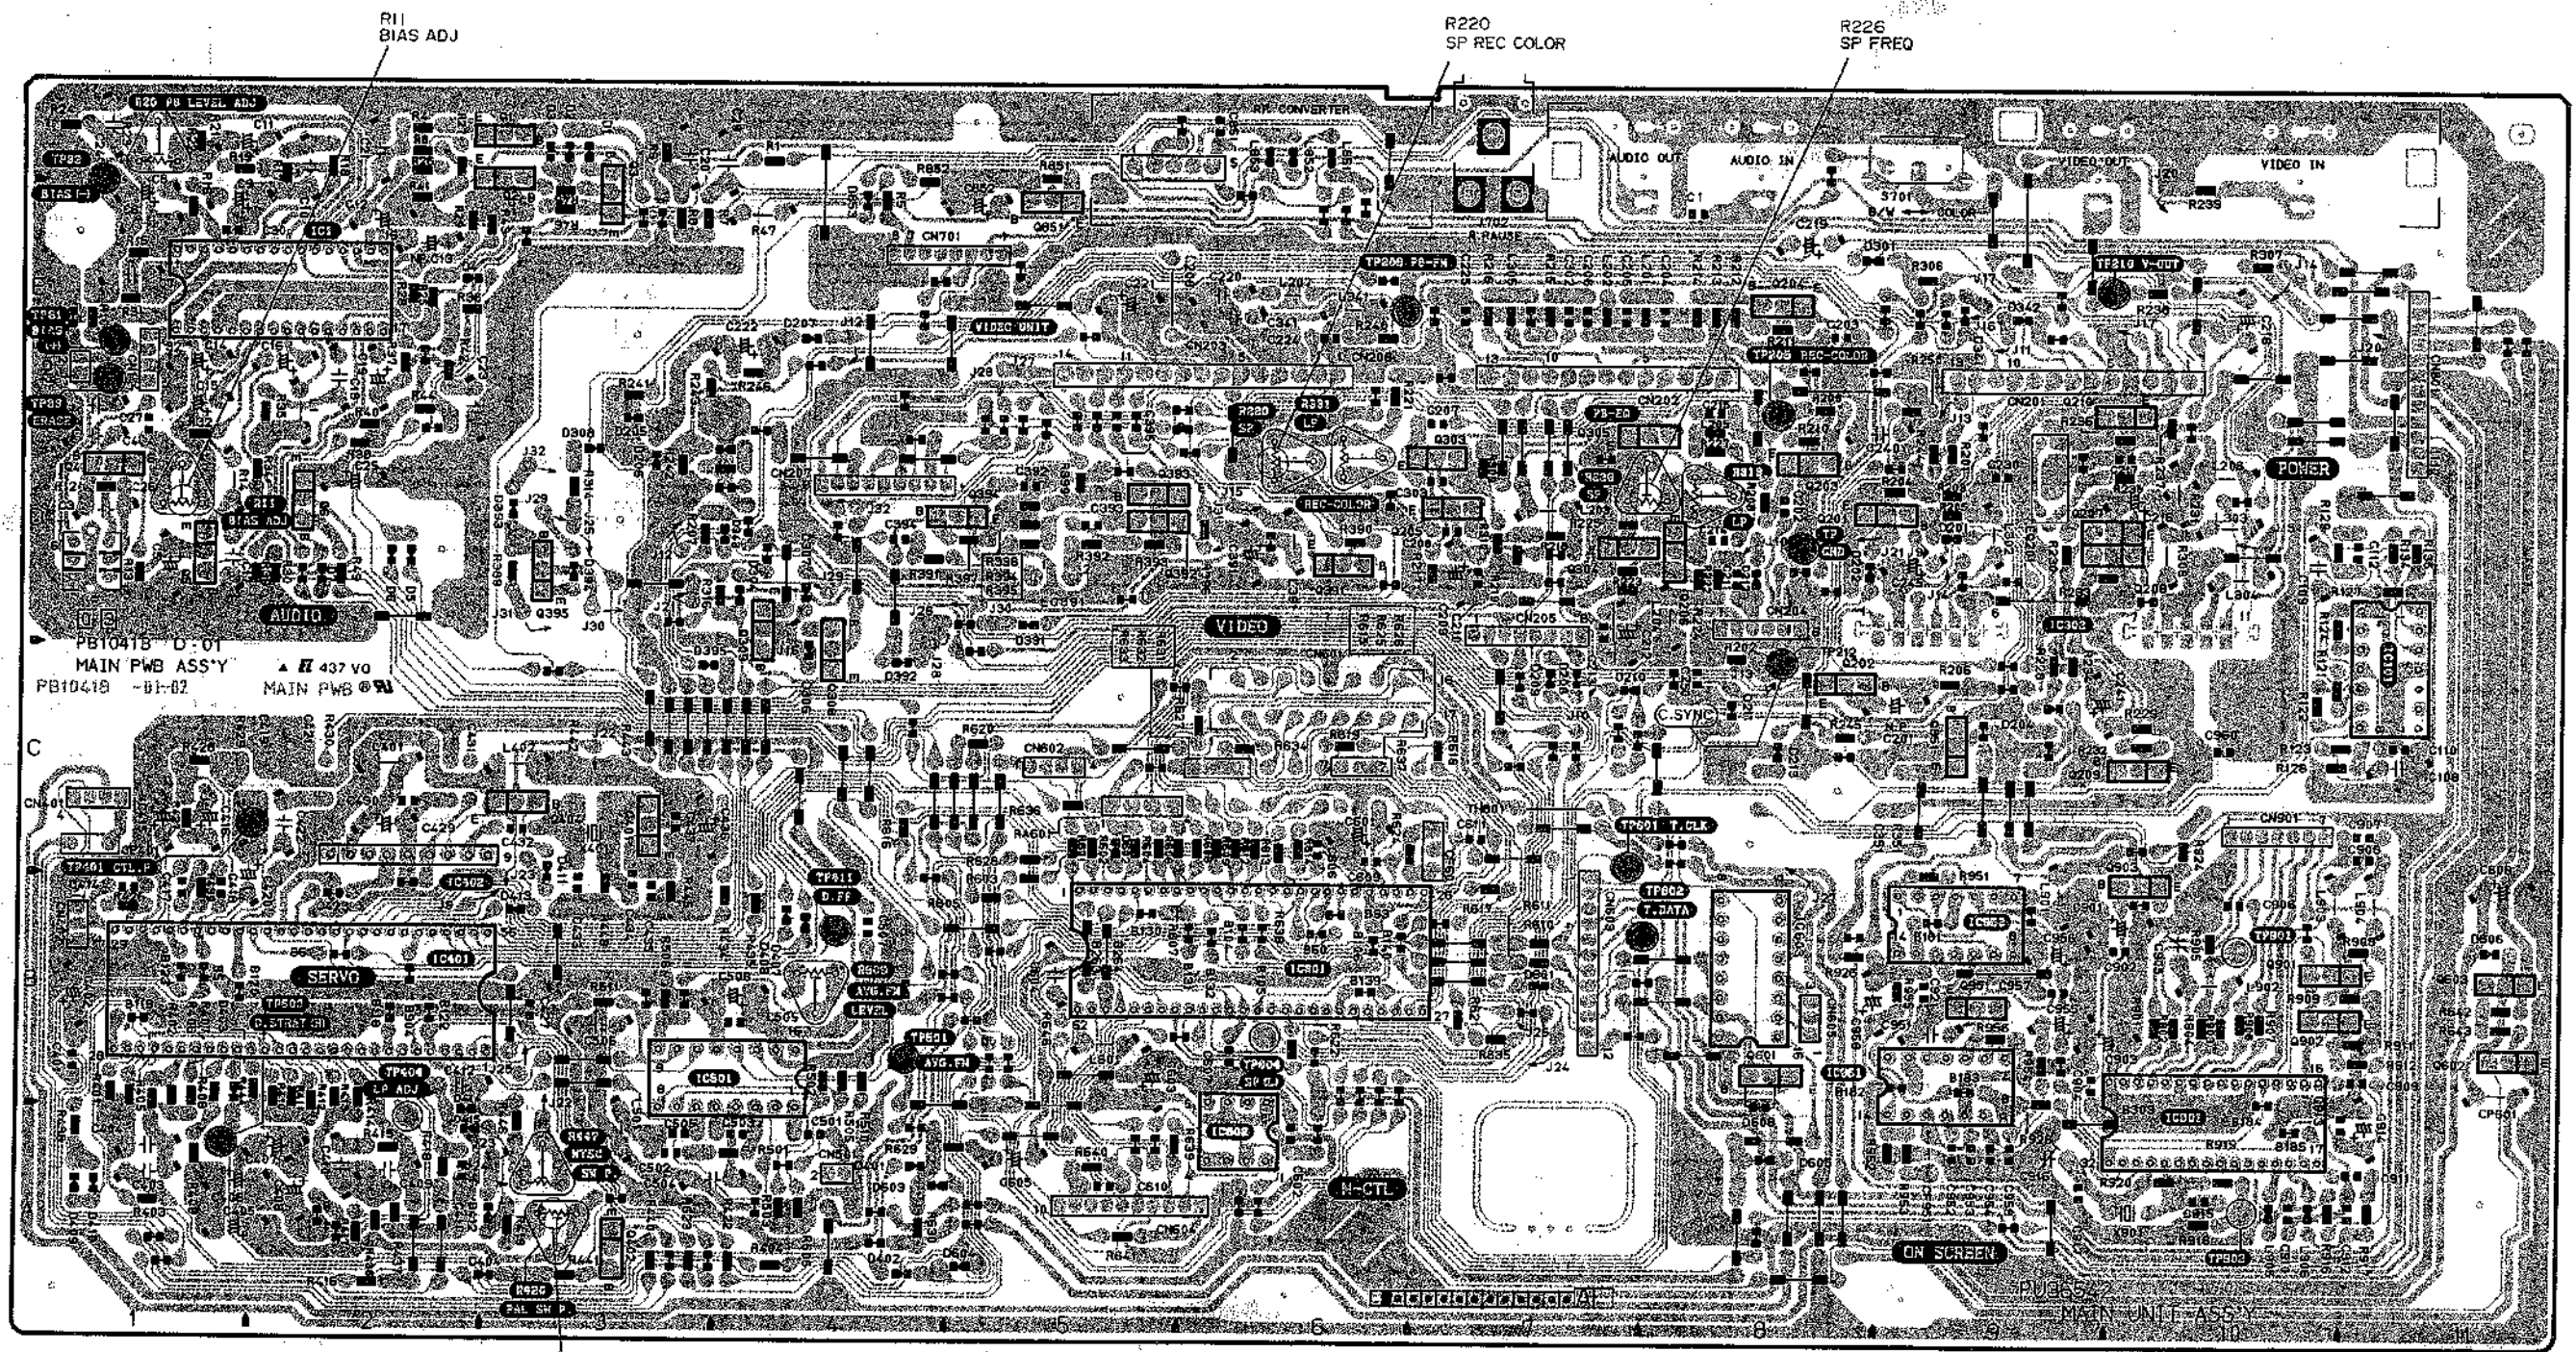

R11
BIAS ADJ

R220
SP REC COLOR

R226
SP FREQ

PB10418 D:01
MAIN PWB ASSY
PB10418 -B1-02 MAIN PWB

R420
SP SW POINT

A

B

C

3-29

3-30

E

F


G

H

3.17 VIDEO UNIT & VIDEO (MAIN) SCHEMATIC DIAGRAM

• Address of chip parts

10
Address

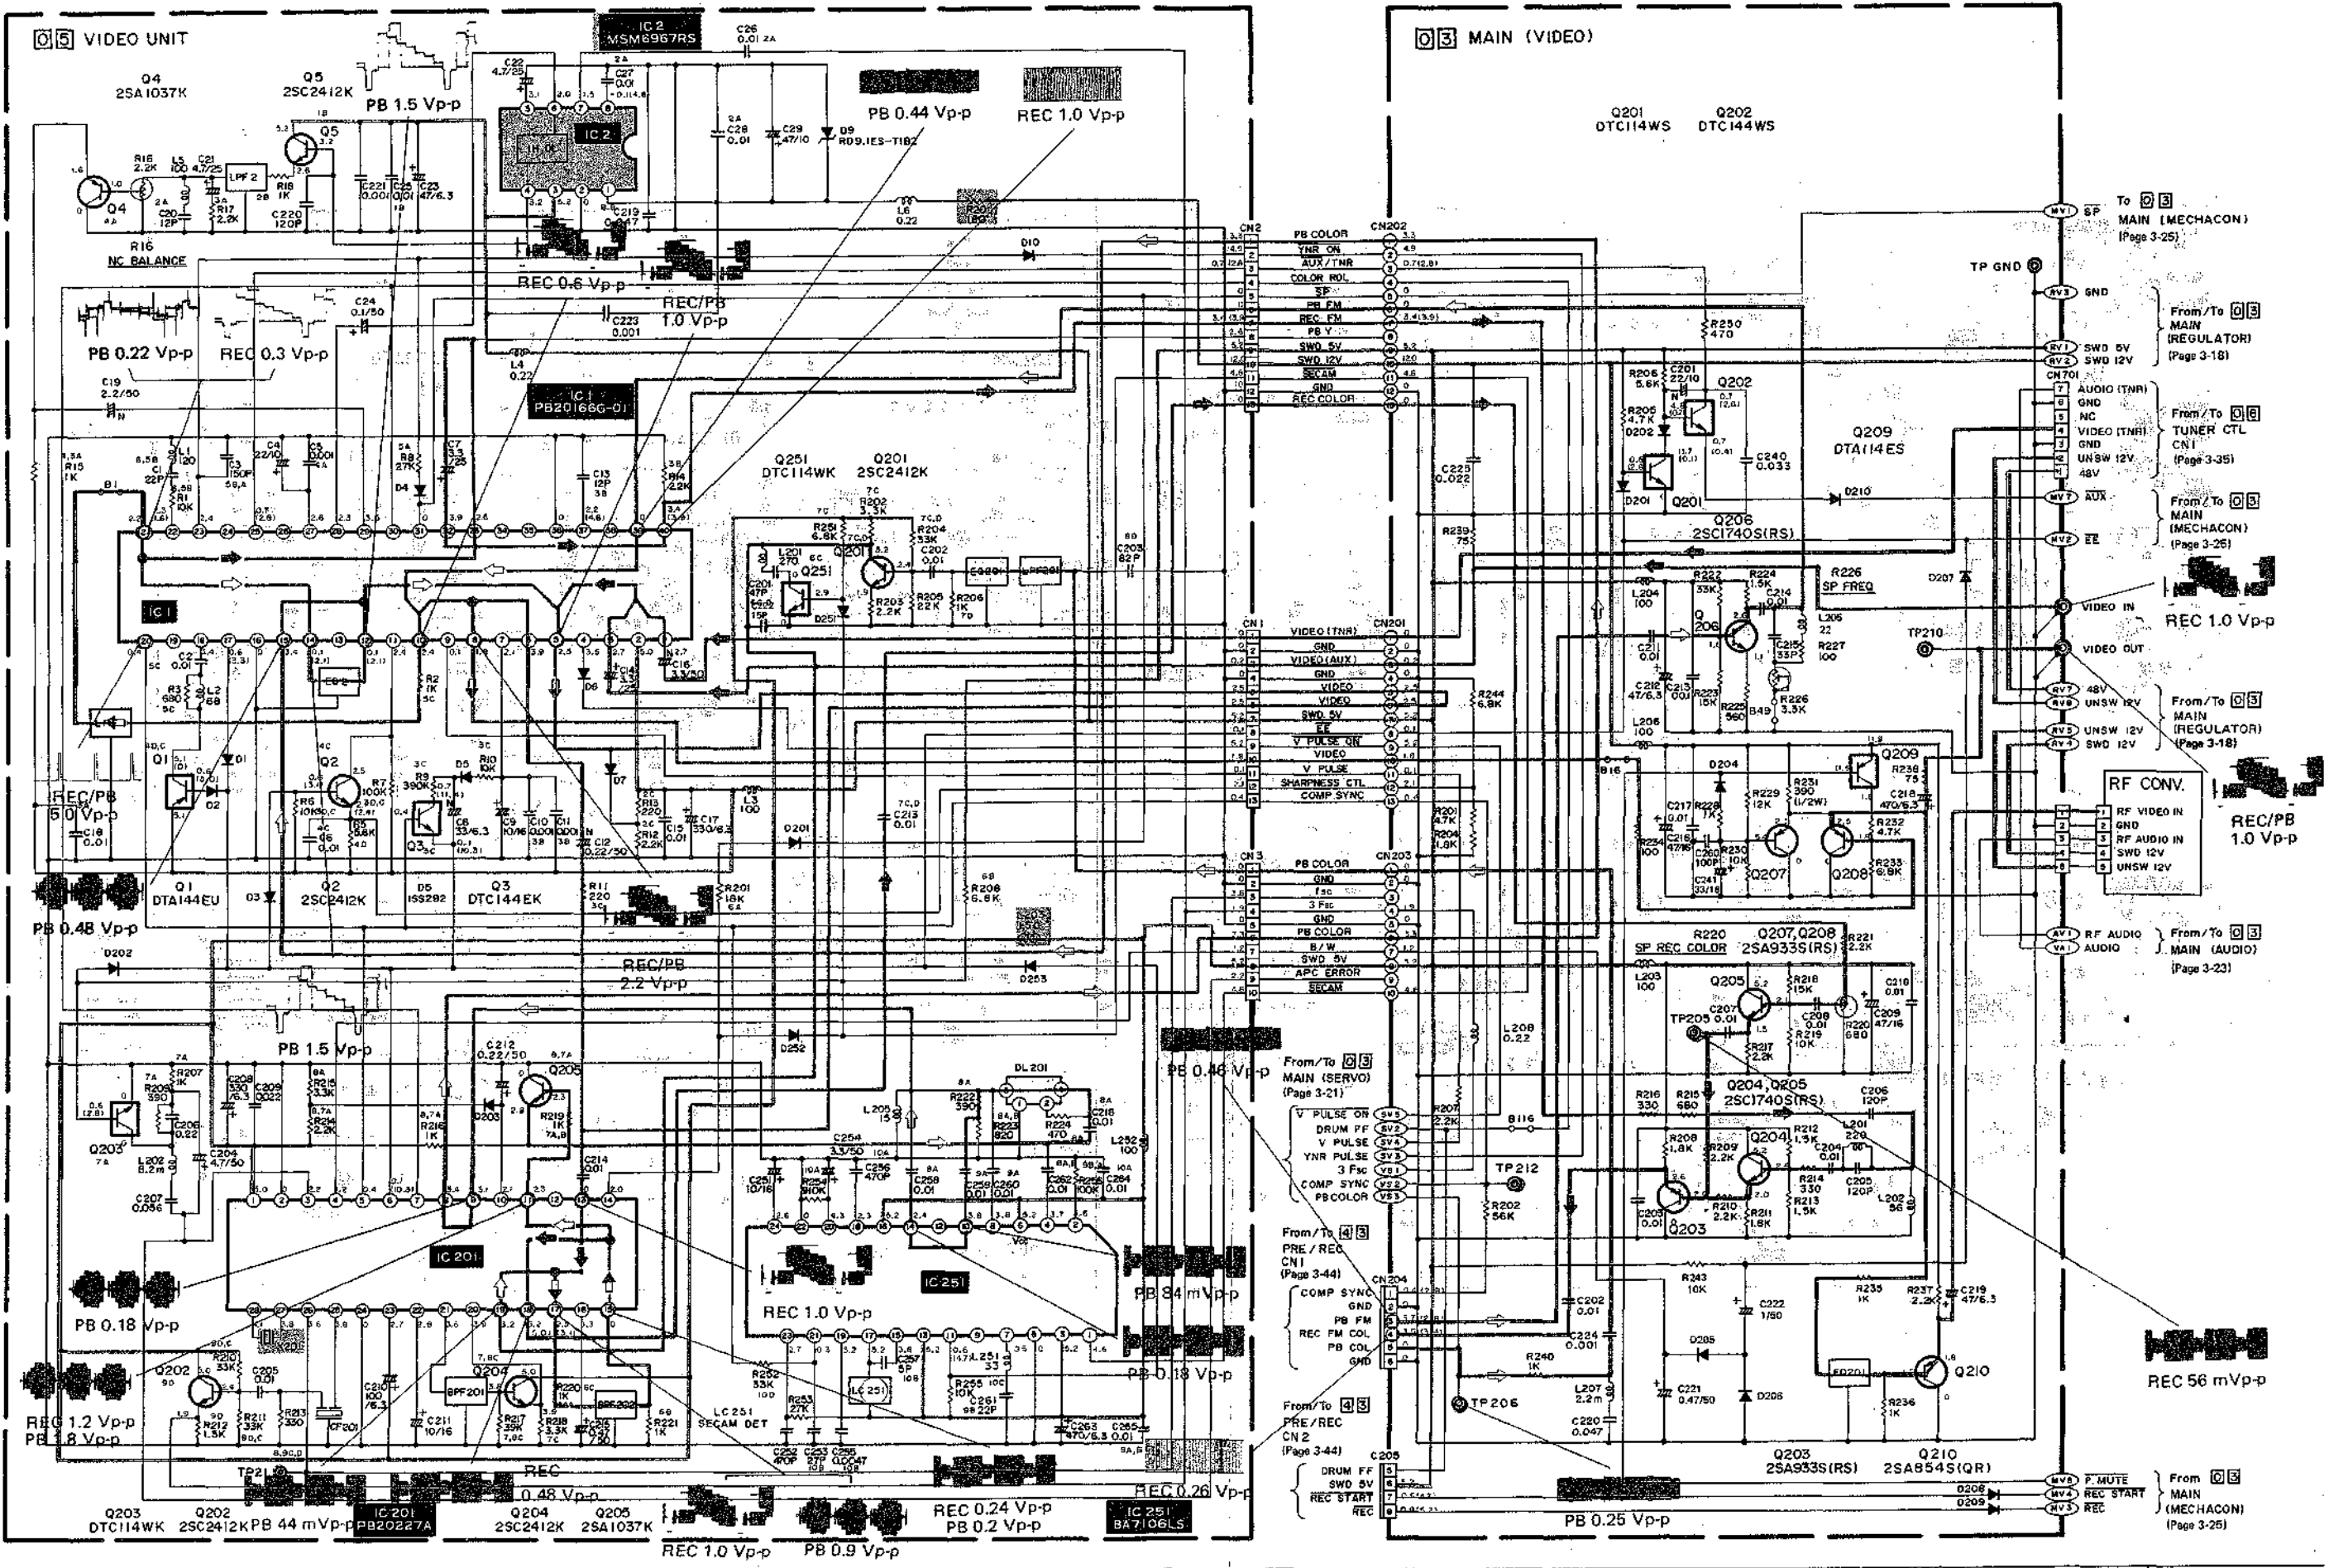

To 03
MAIN (MECHACON)
(Page 3-25)

From/To 03
MAIN
(REGULATOR)
(Page 3-18)

From/To 06
TUNER CTL
CN1
(Page 3-35)

From/To 05
MAIN
(MECHACON)
(Page 3-25)


From/To 05
MAIN
(REGULATOR)
(Page 3-18)

From/To 05
MAIN (AUDIO)
(Page 3-23)

From 03
MAIN
(MECHACON)
(Page 3-25)


3.18 VIDEO UNIT CIRCUIT BOARD

LC251
SECAM DET

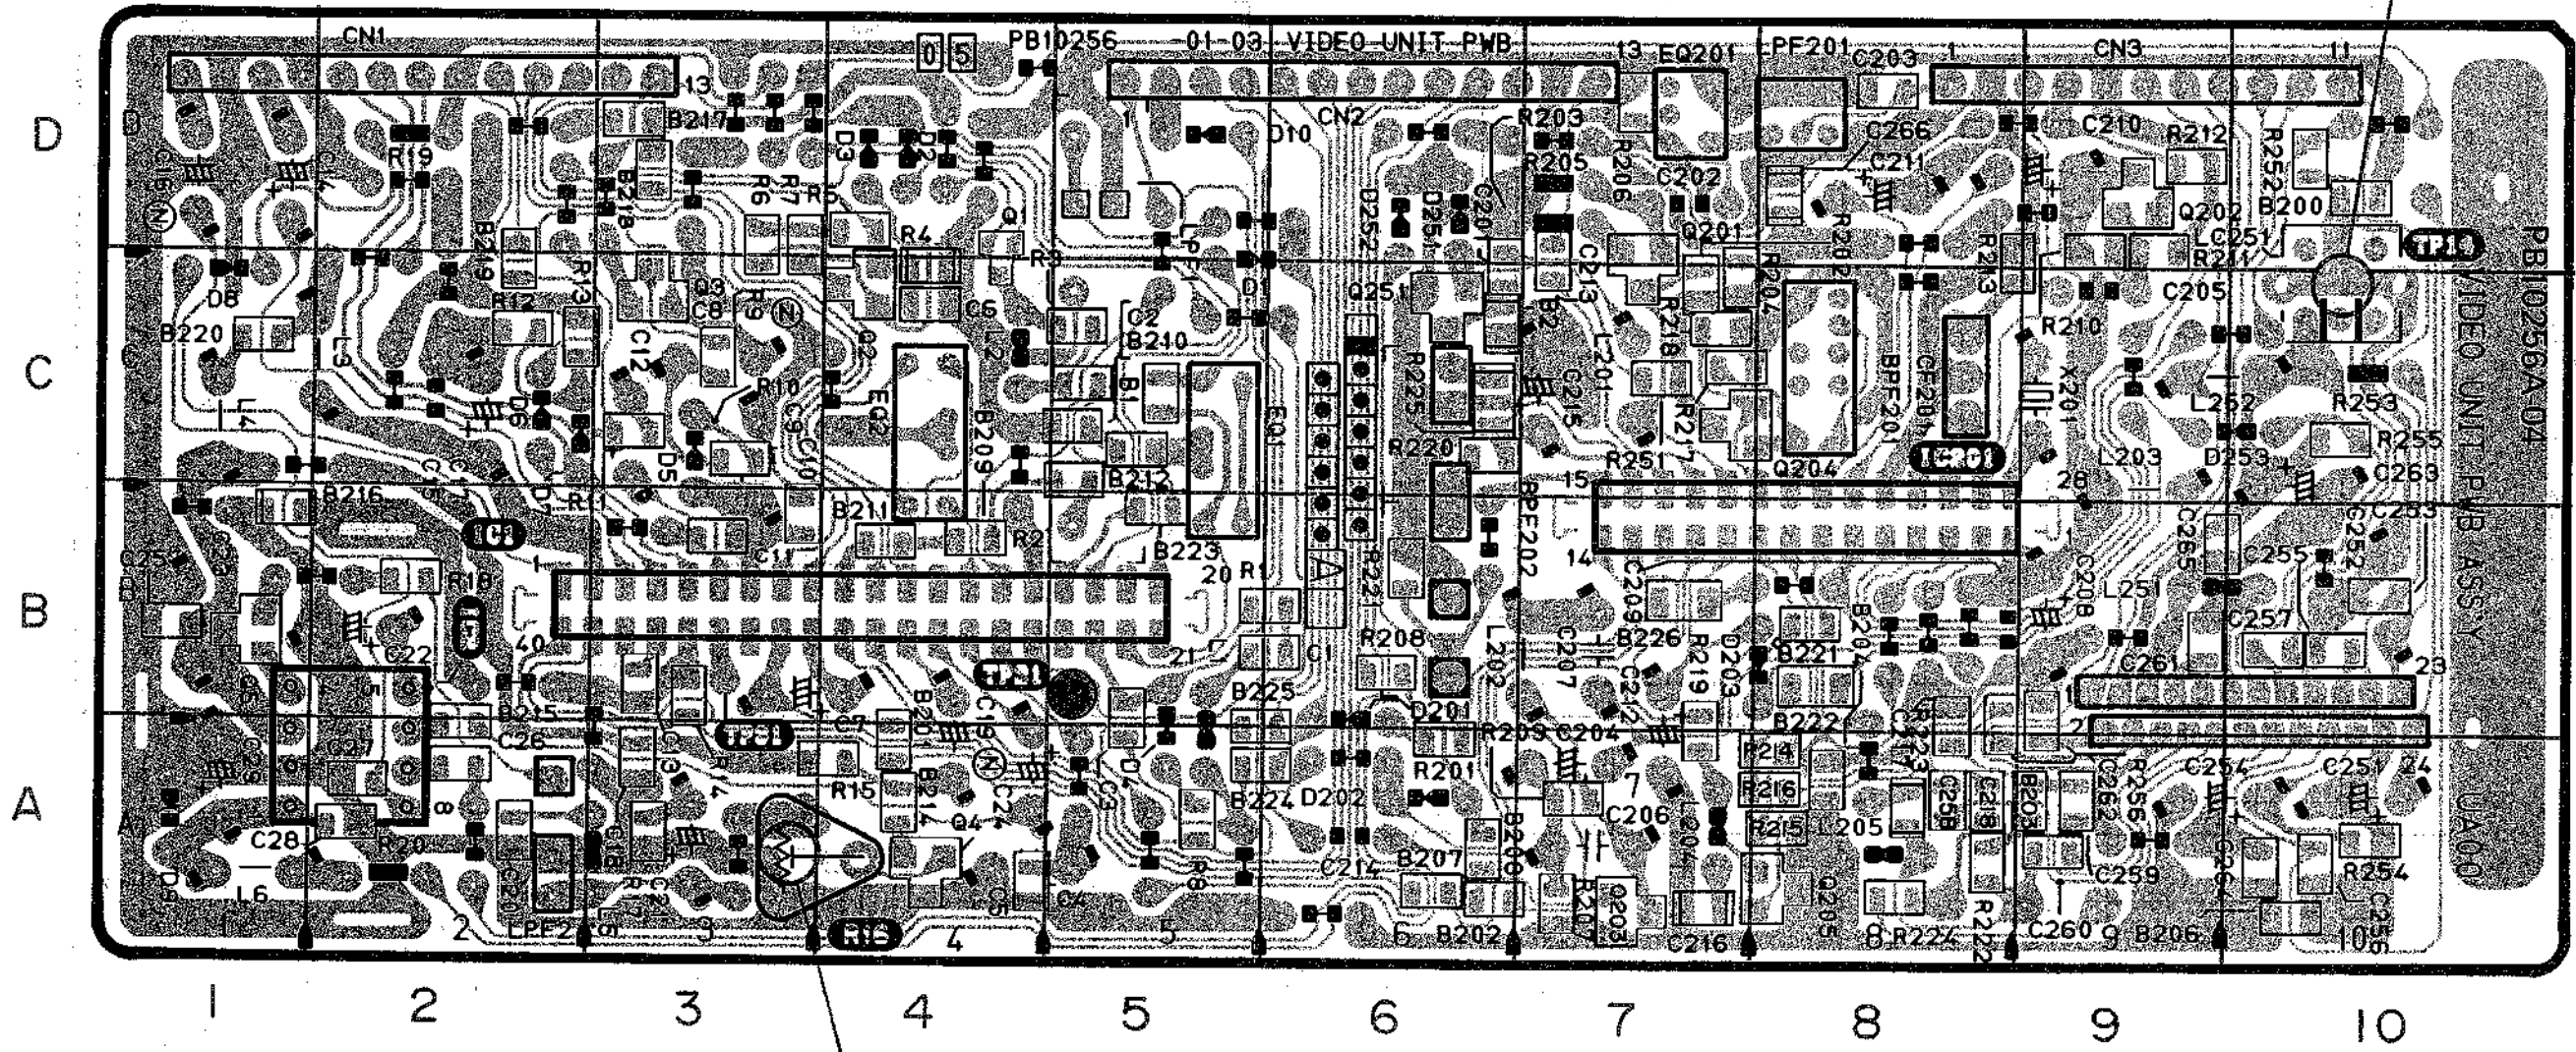

R16
NC BAL


Note: Double edging indicates not used in this model.
Examples; Resistor, Capacitor, Transistor, DIODE



3.19 IF & TNR CTL SCHEMATIC DIAGRAM


Note: Voltages are DC-measured with a digital voltmeter during stop and tuner mode.

● Address of chip parts
 1D Address

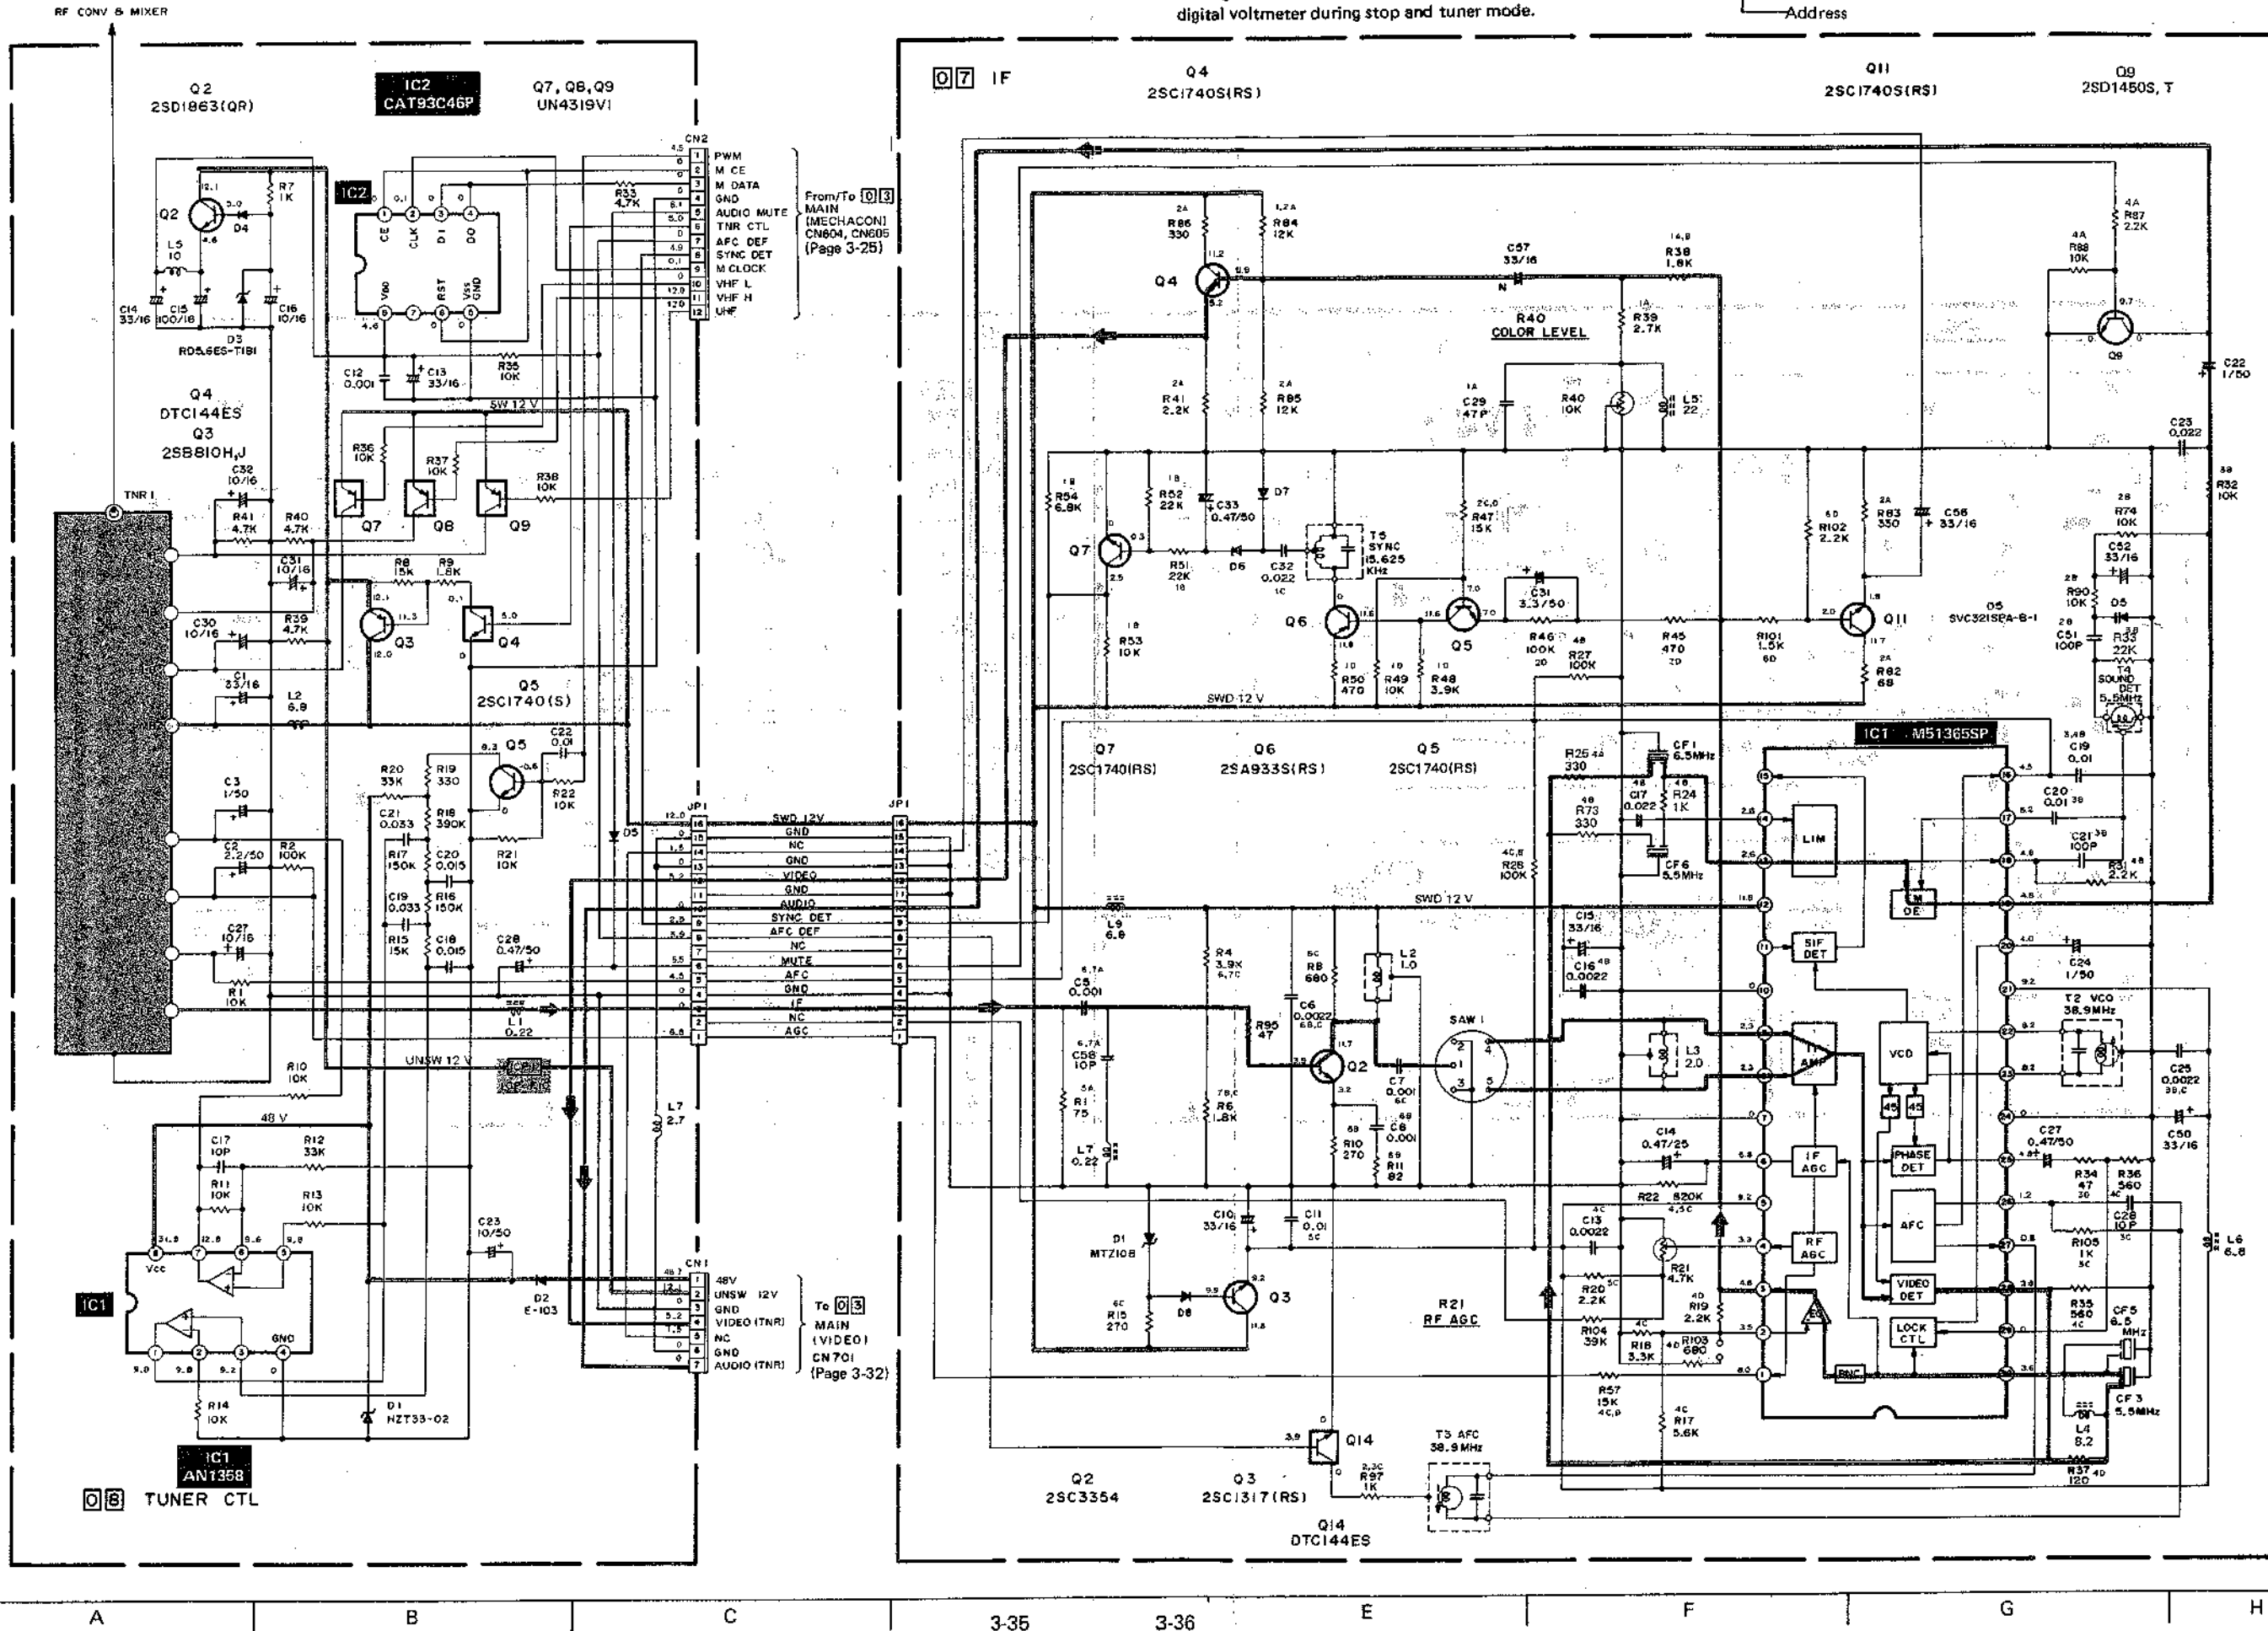

6

3.20 IF & TNR CTL CIRCUIT BOARDS

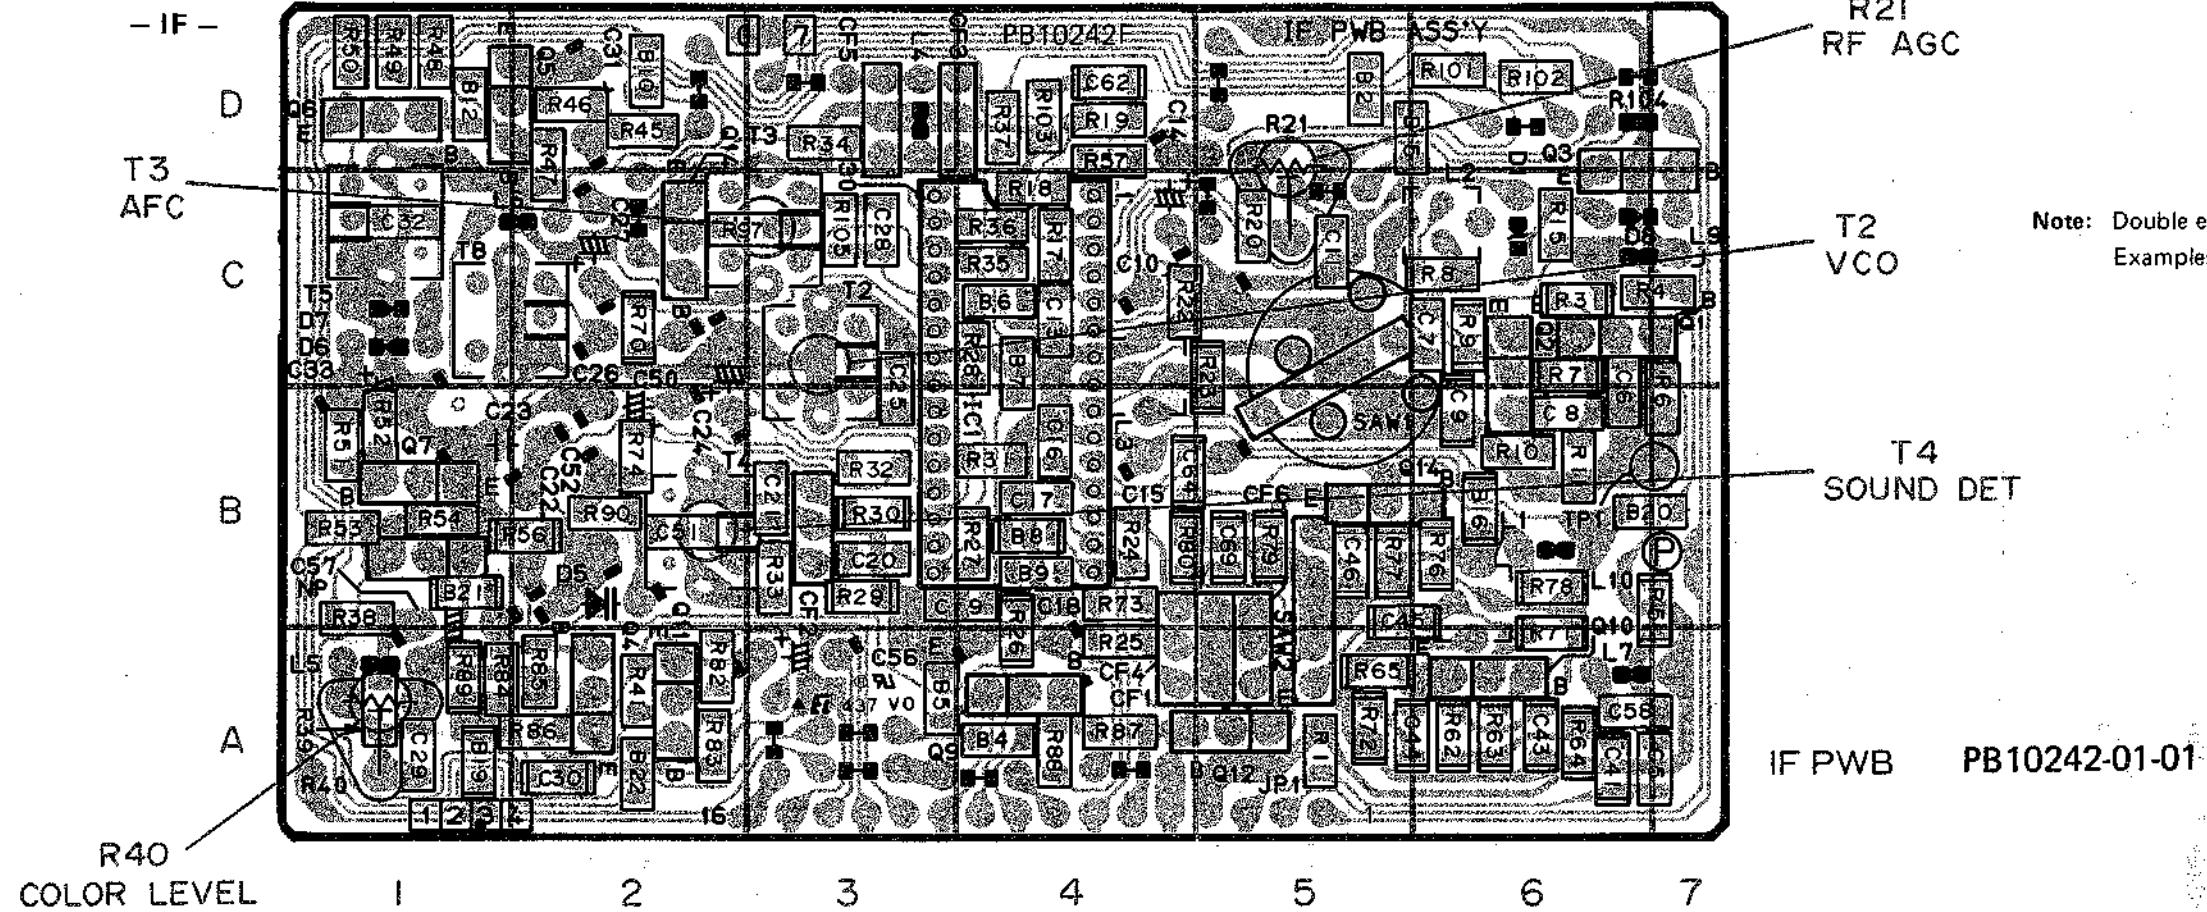


Note: Double edging indicates not used in this model.
Examples; Resistor, Capacitor, Transistor, DIODE



3

- TUNER CTL -

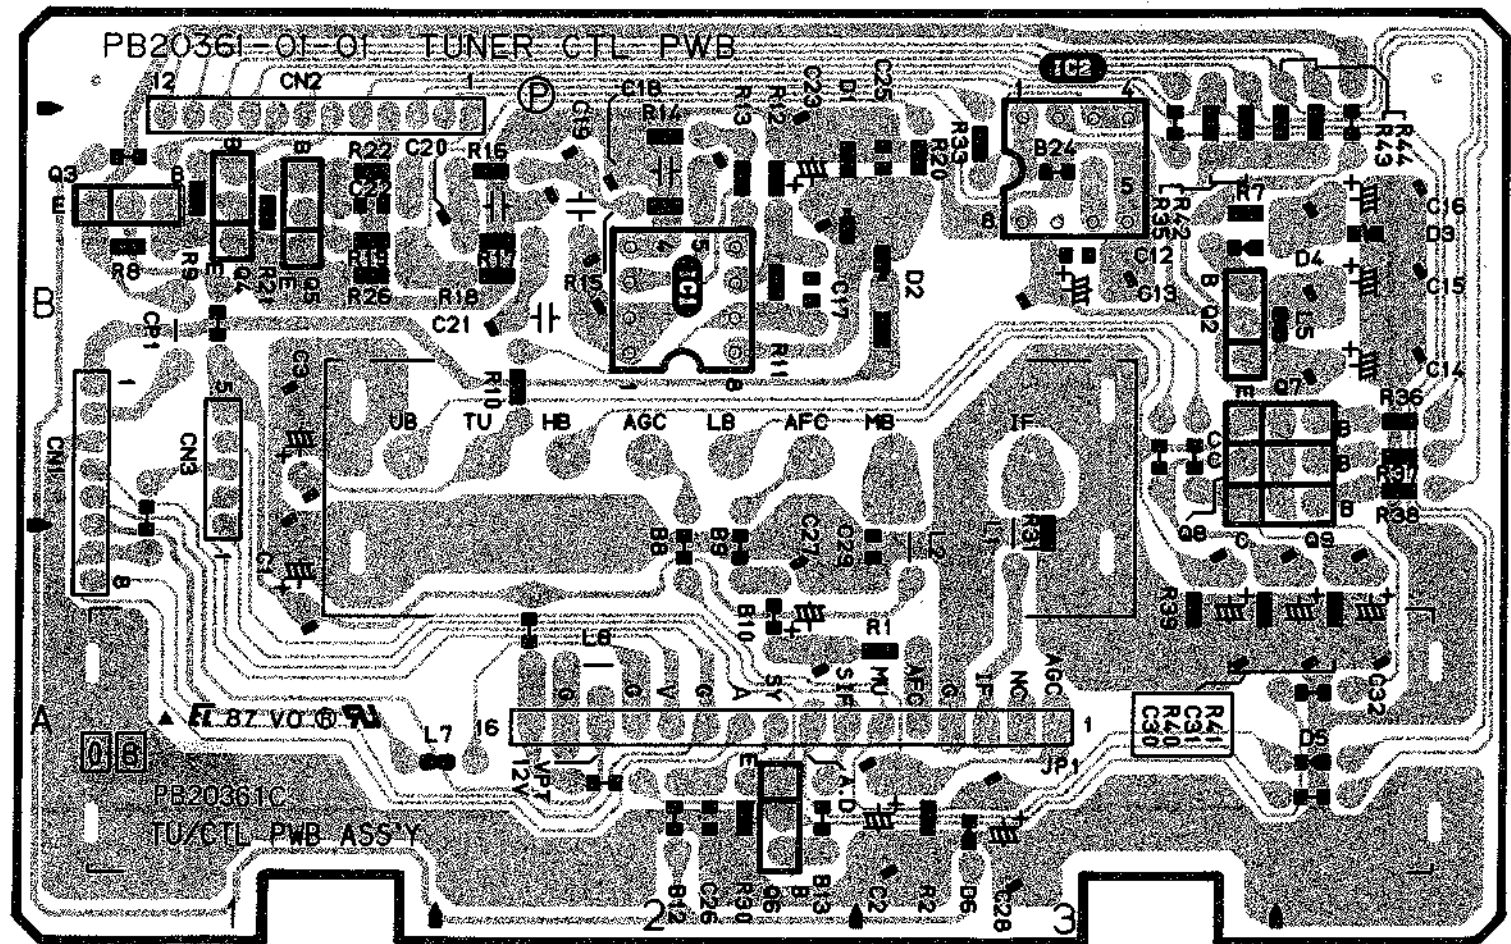

2

1

A

B

C

3-37

3-38


E

F

G

H

3.21 TIMER/DISP/SW SCHEMATIC DIAGRAM

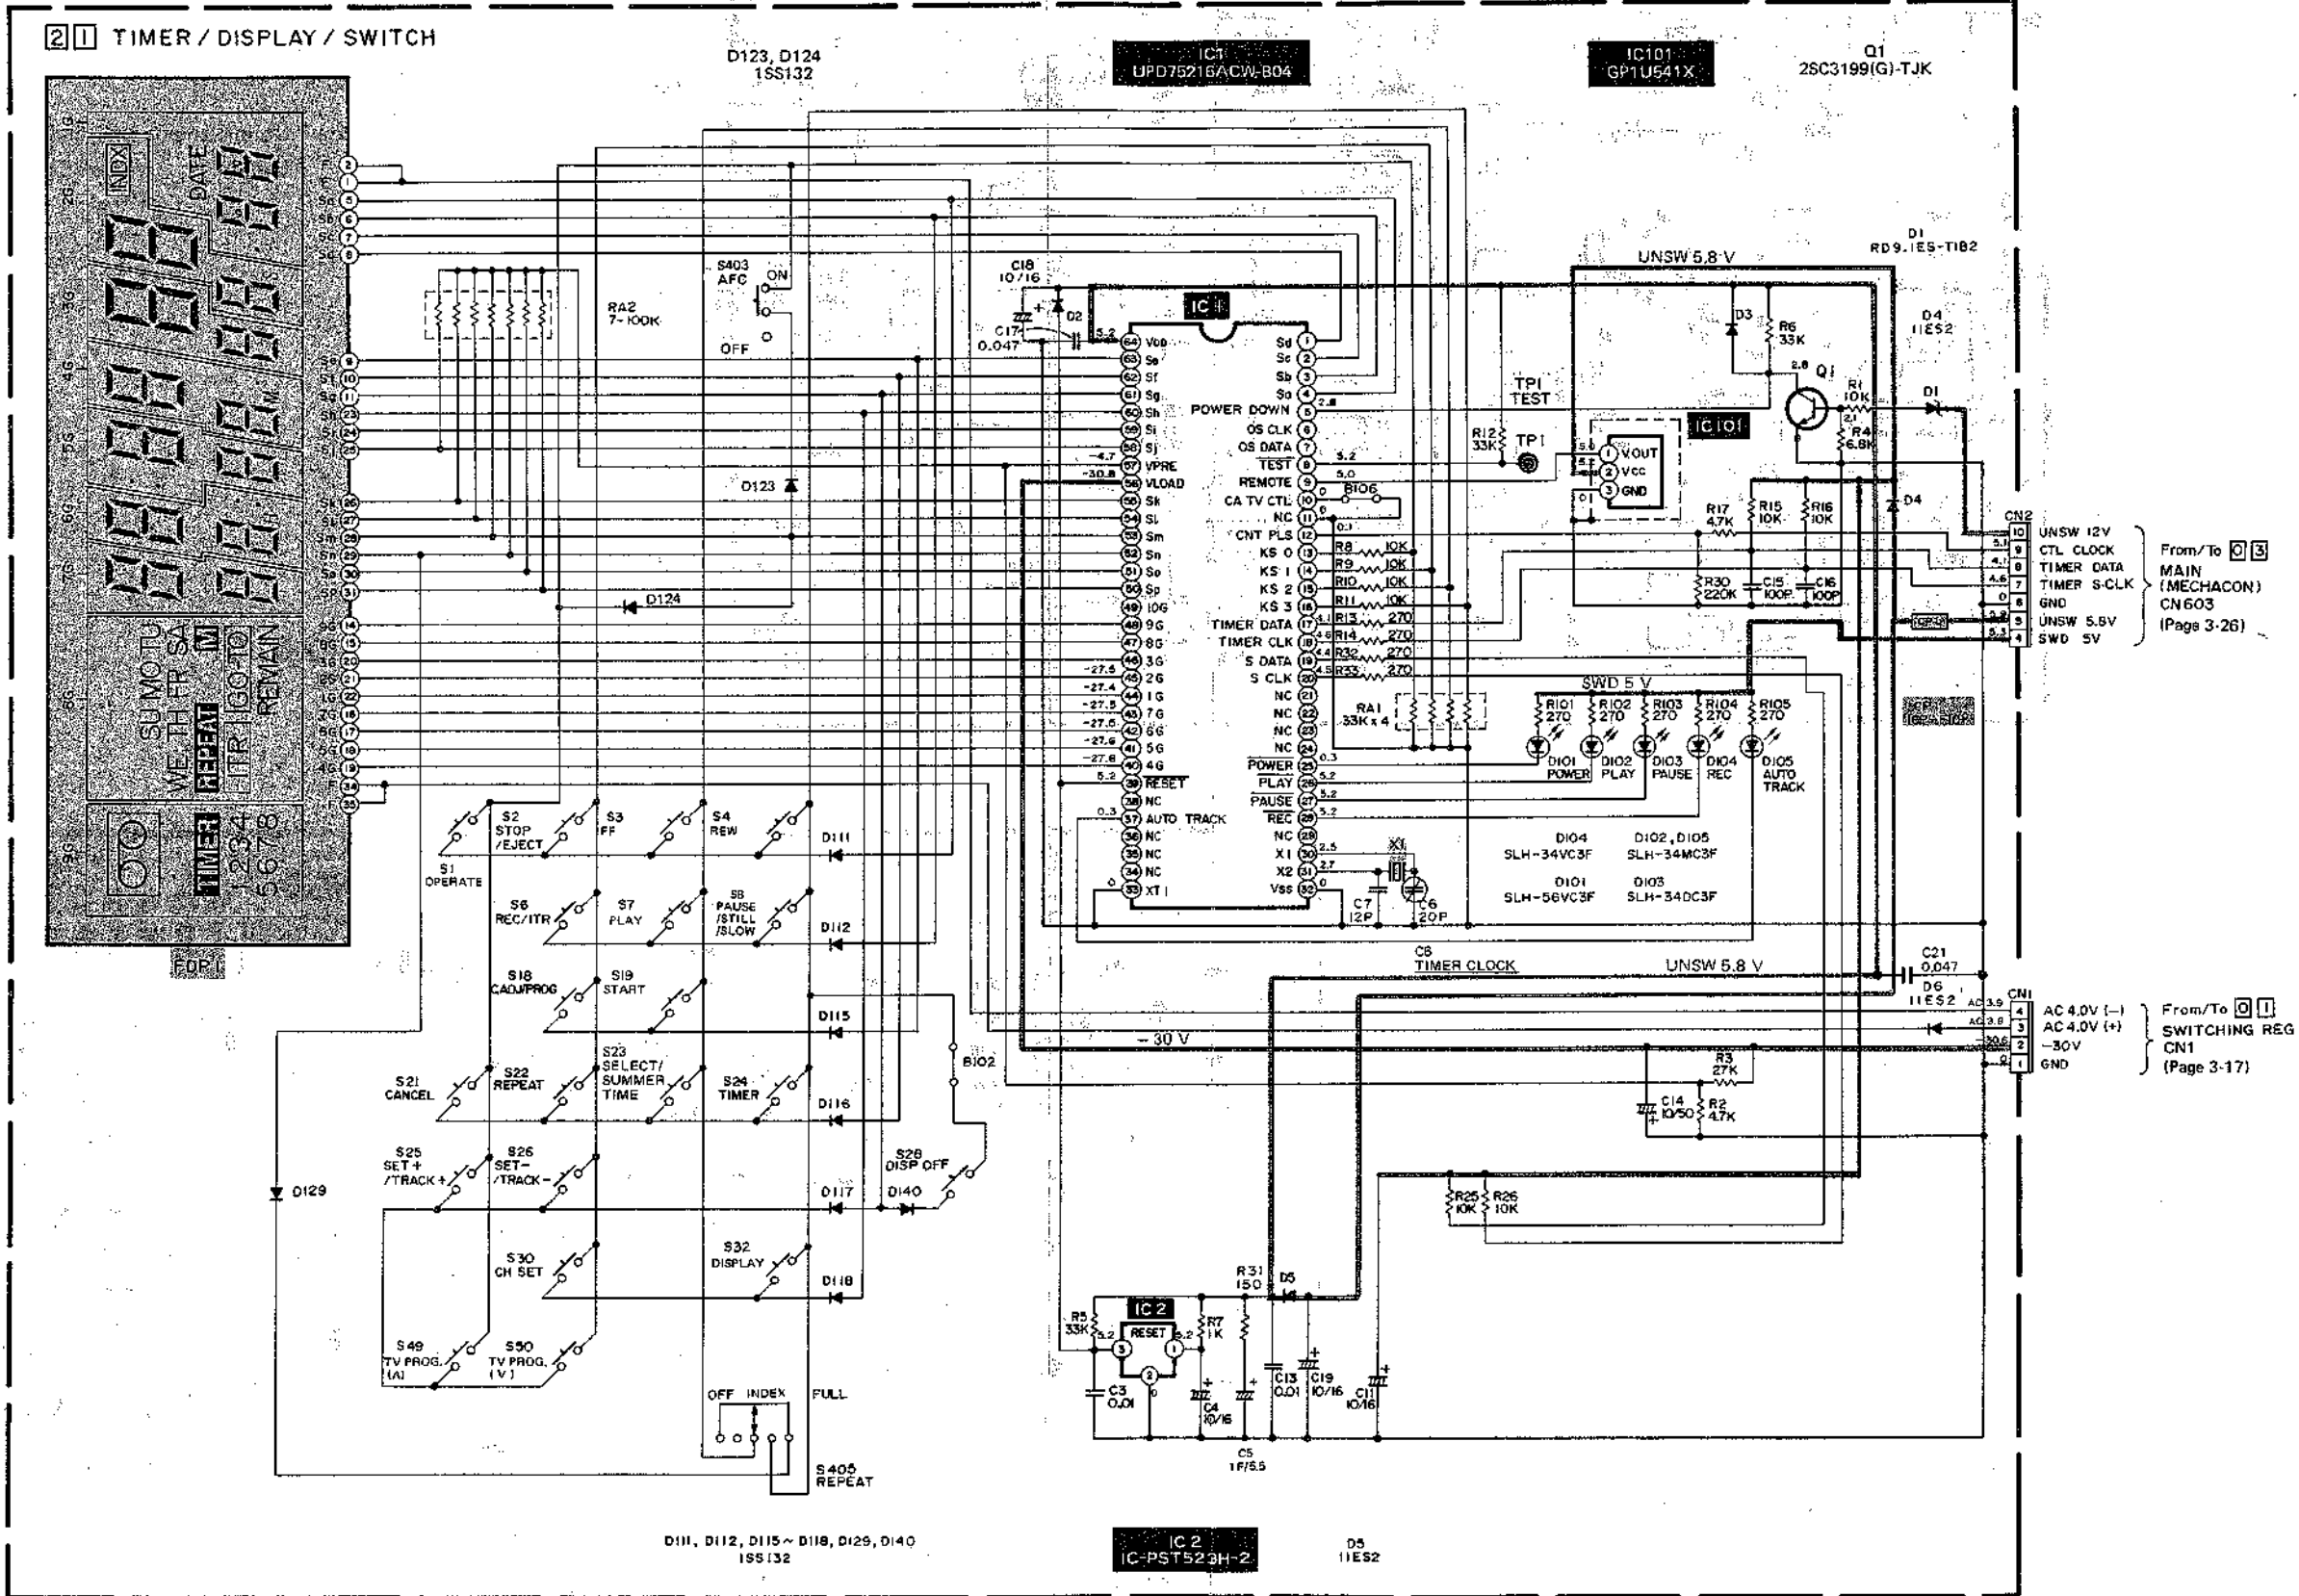

6

3.22 TIMER/DISP/SW CIRCUIT BOARD


5

4

3


2

1

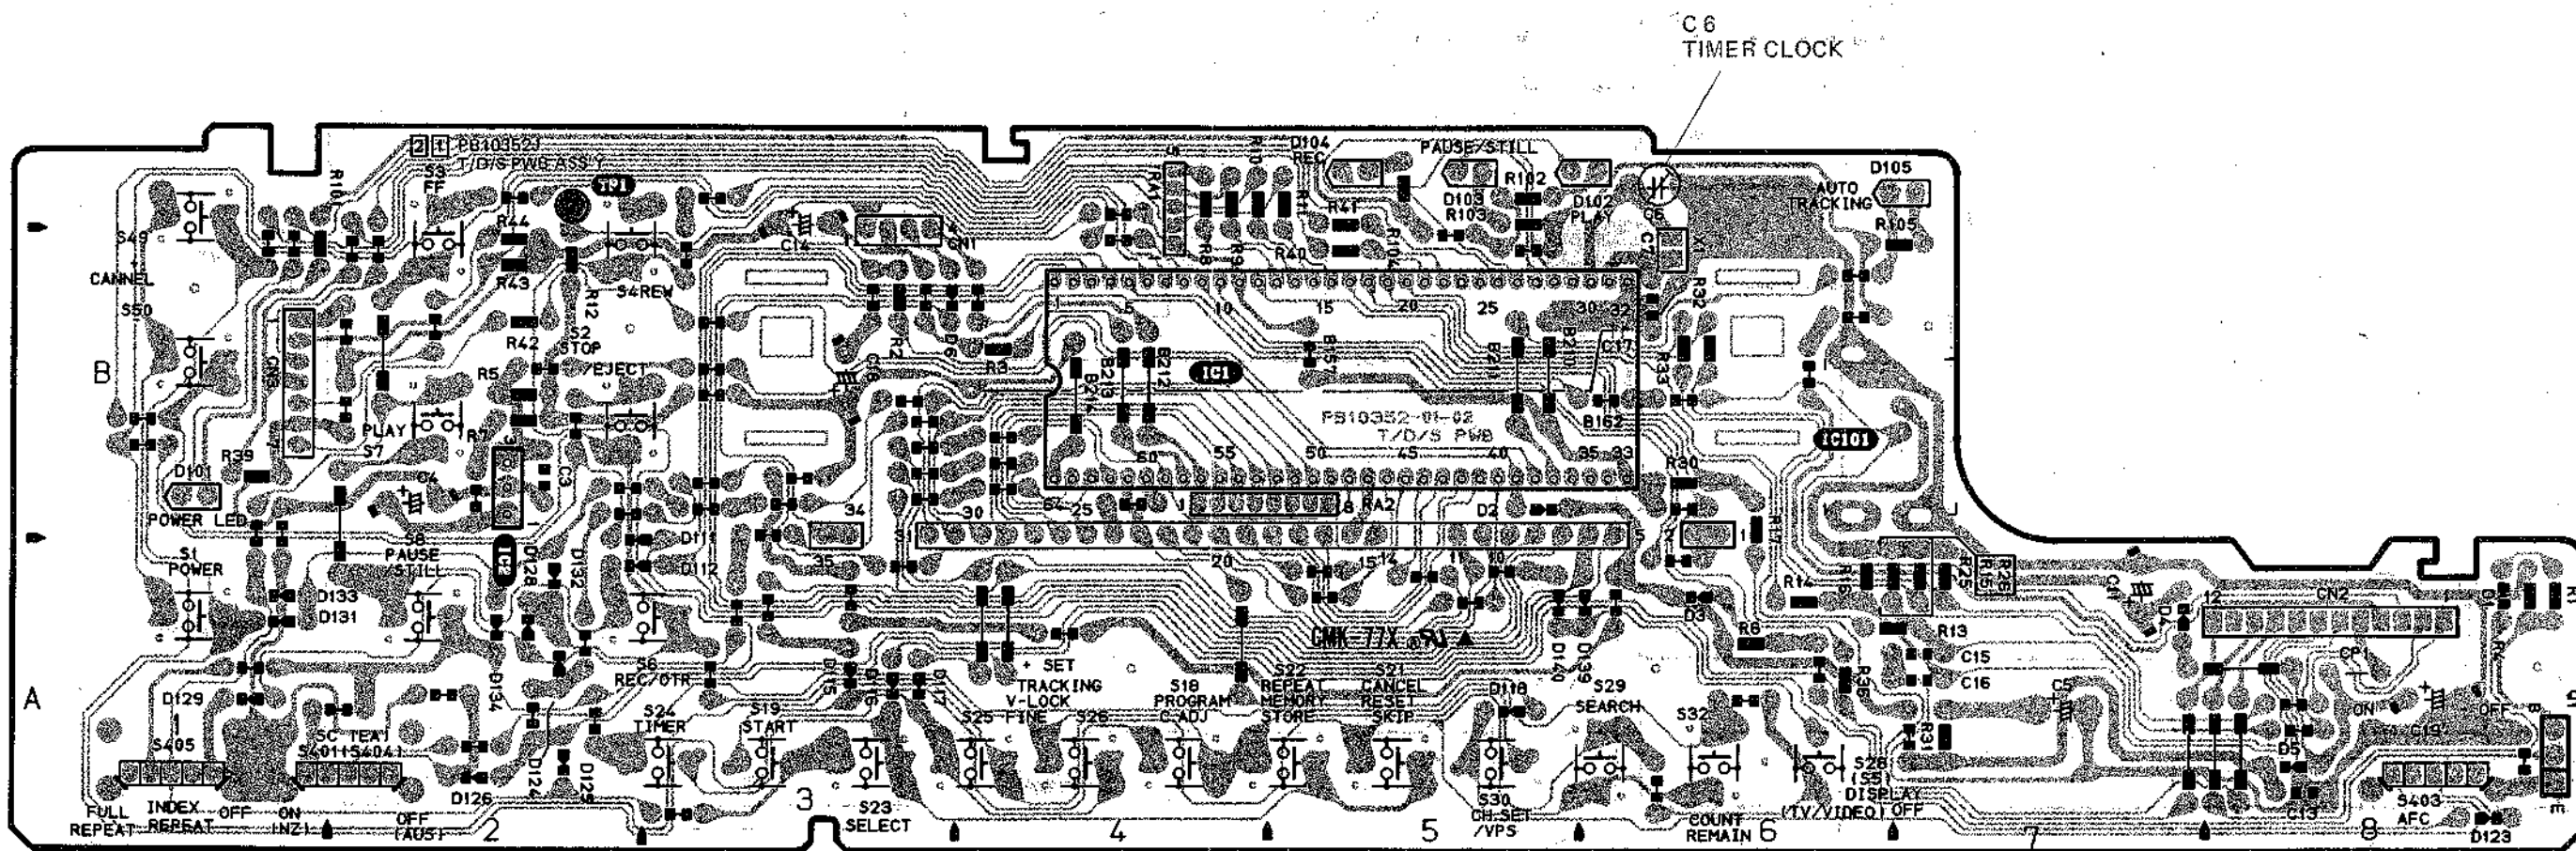

A B C 3-41 3-42 E F G H

3.23 PRE/REC SCHEMATIC DIAGRAM

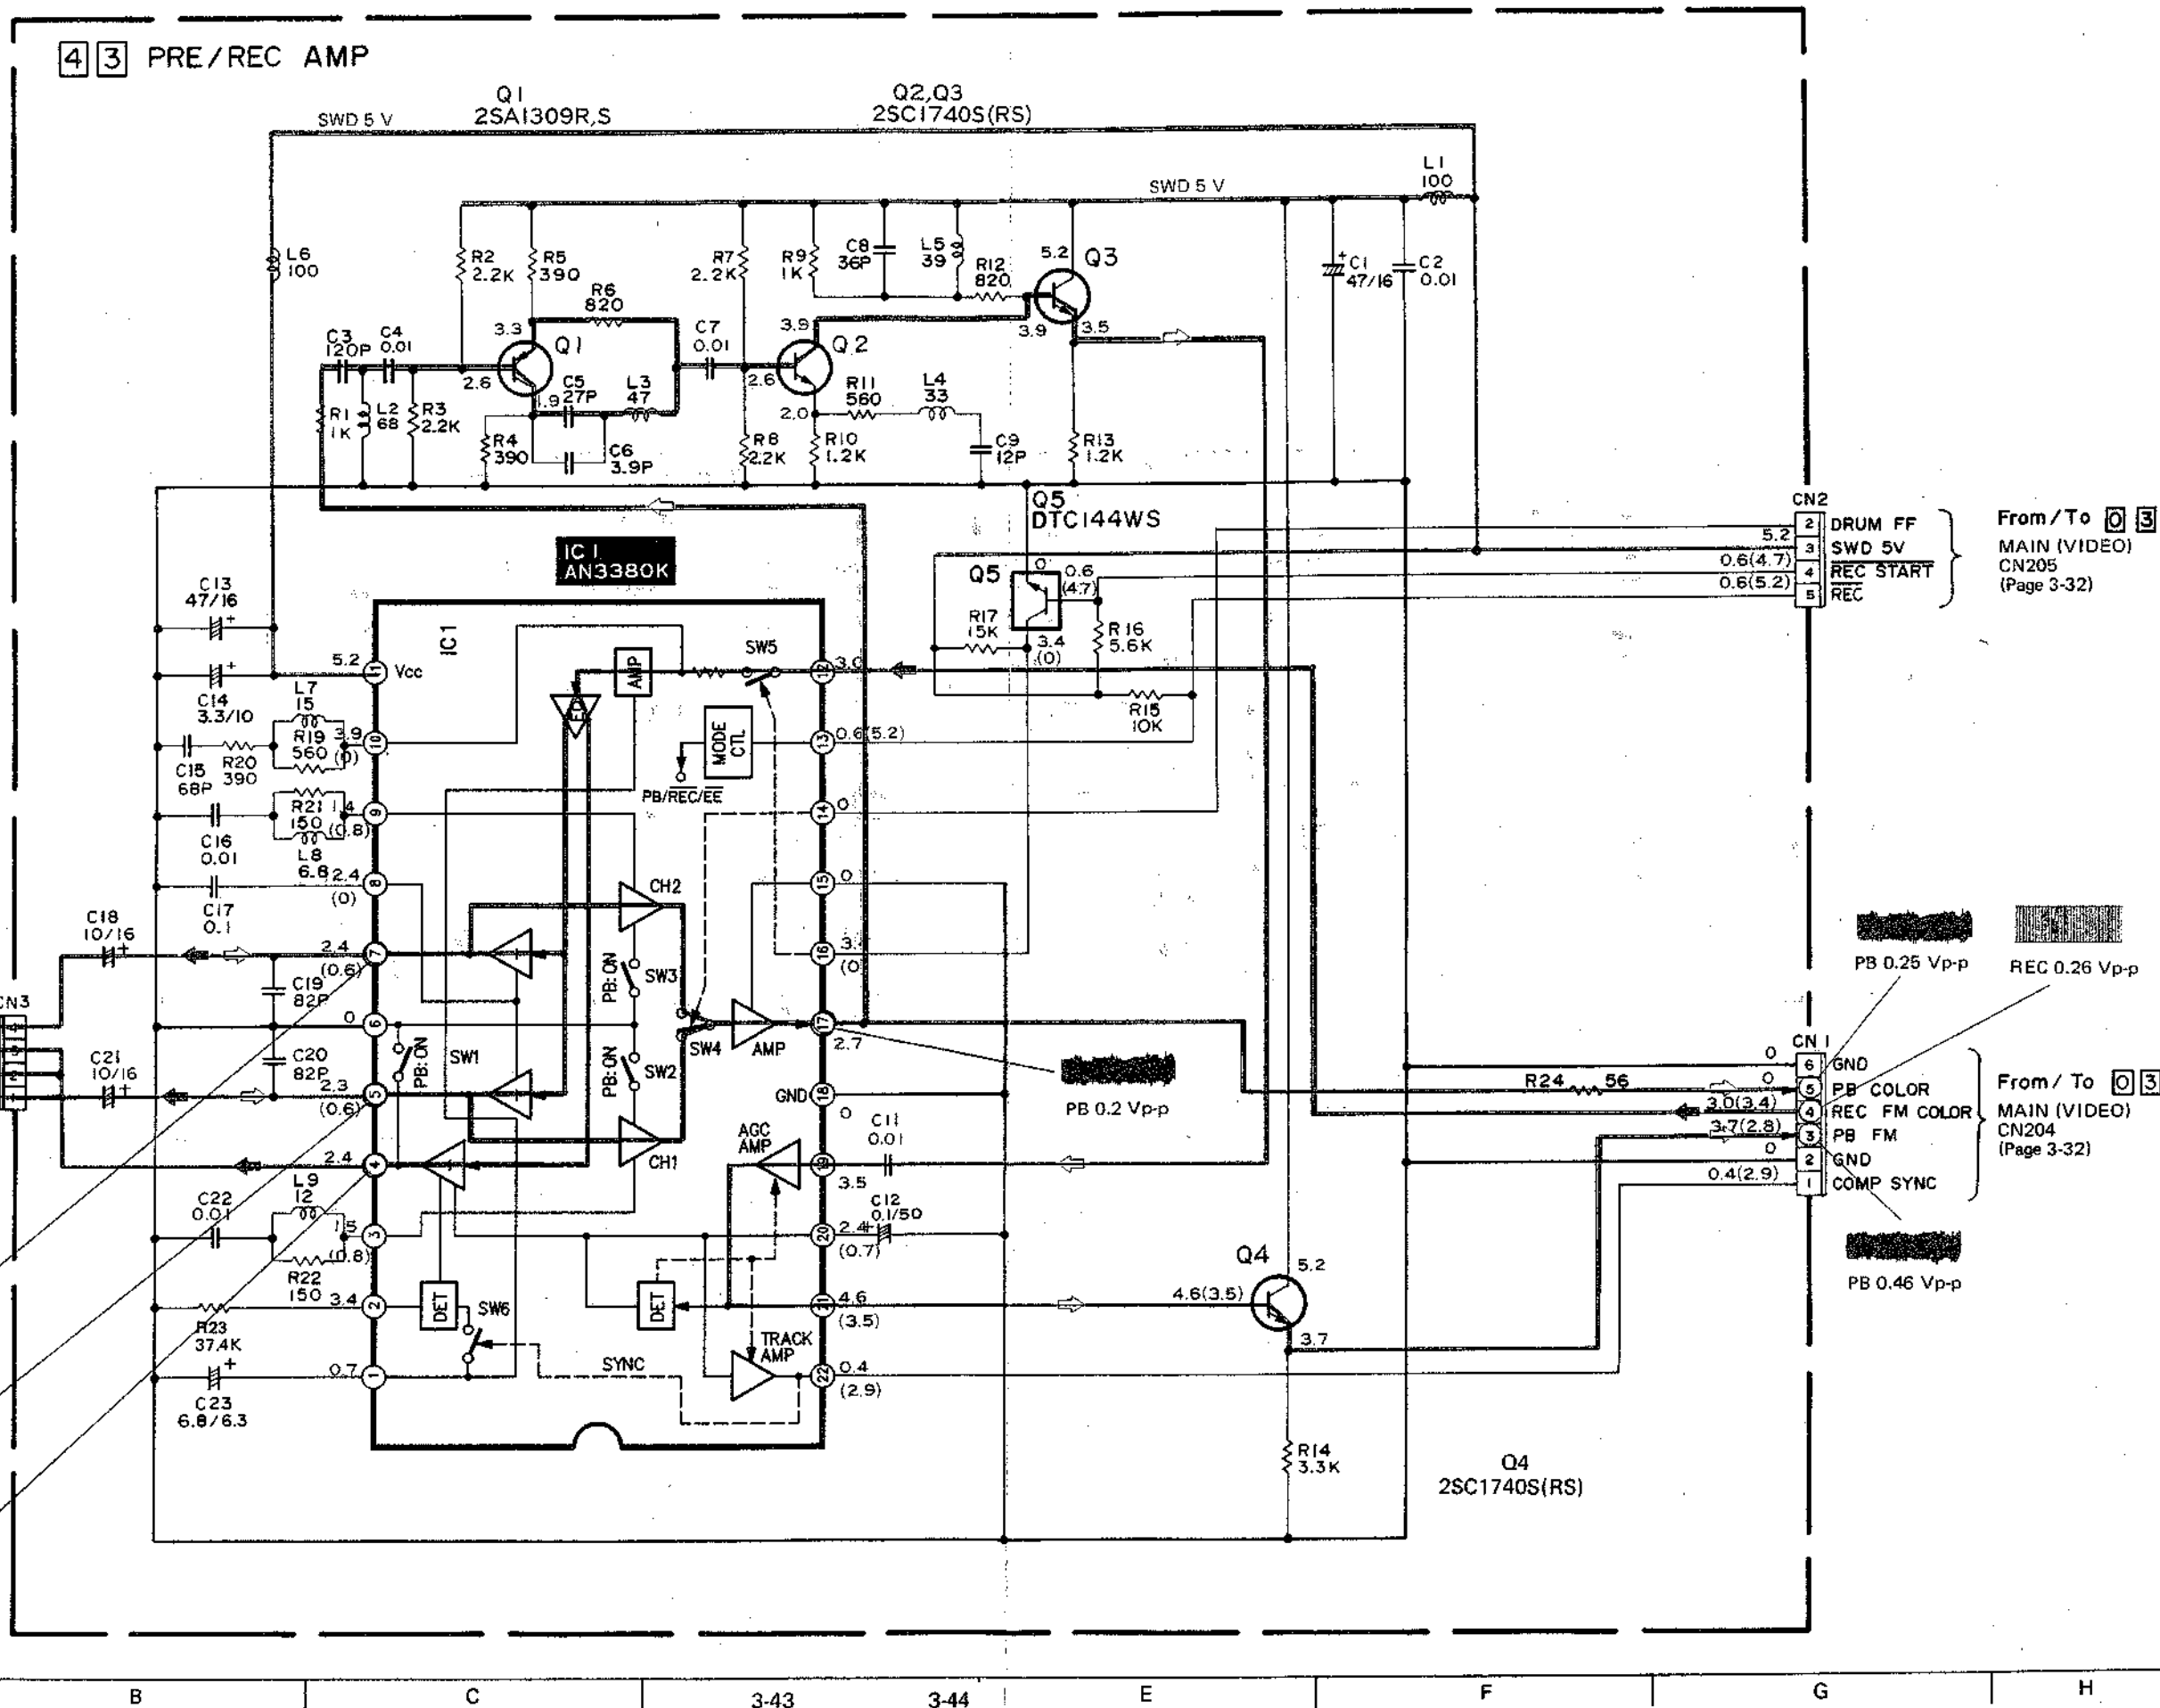

3.24 PRE/REC CIRCUIT BOARD

6


5

4

3

2

1

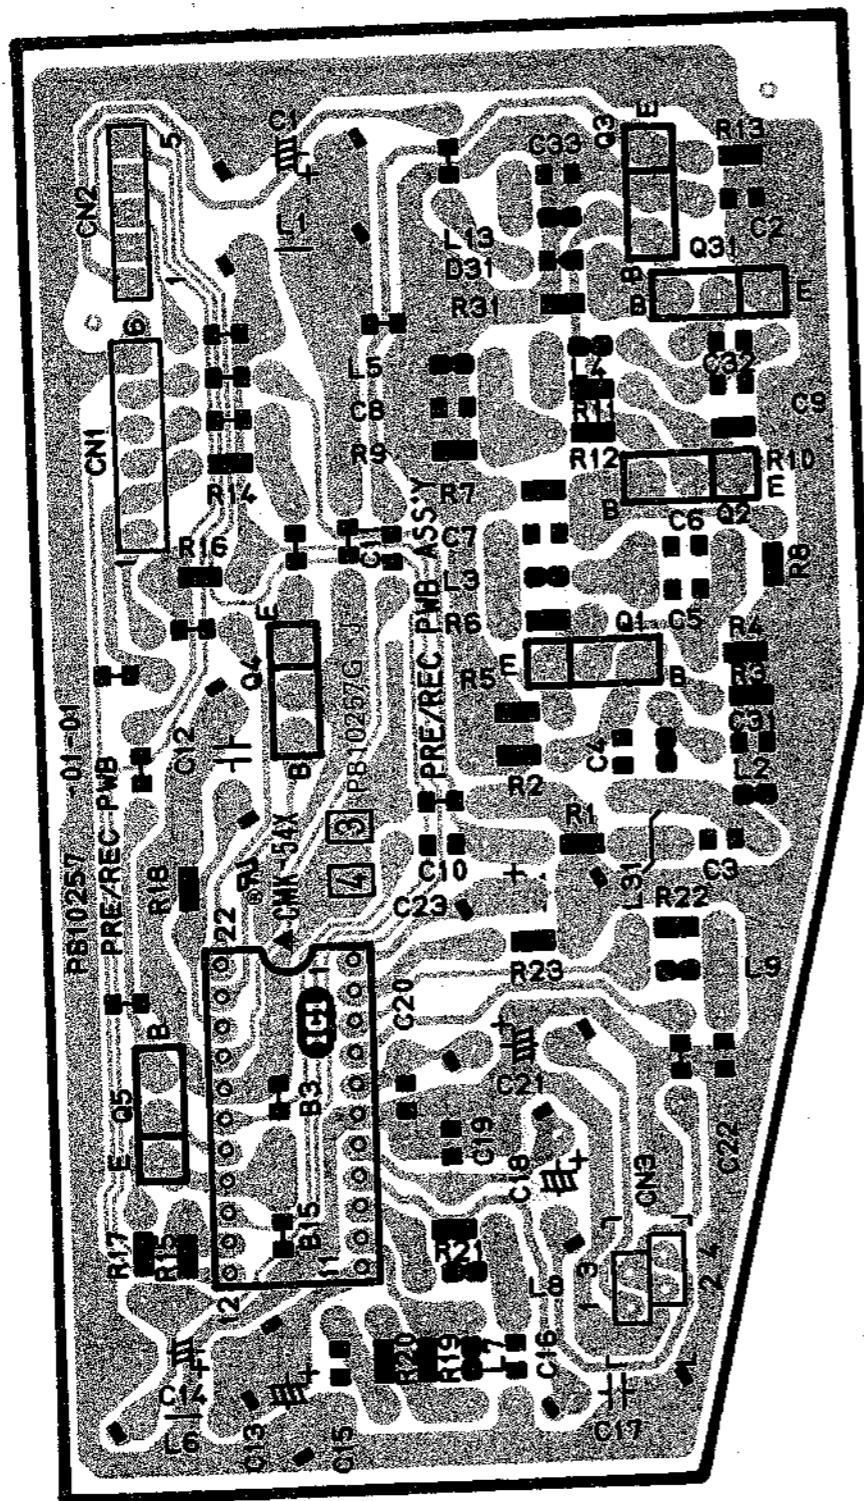

A

B

C

3-45

3-46

E


F

G

H


3.25 REMOTE CONTROL SCHEMATIC DIAGRAM

- NOTES: 1. All parts shown in this schematic are critical for safety.
 2. This schematic is only for reference.
 Avoid replacing individual parts.
 Replace the entire unit only.

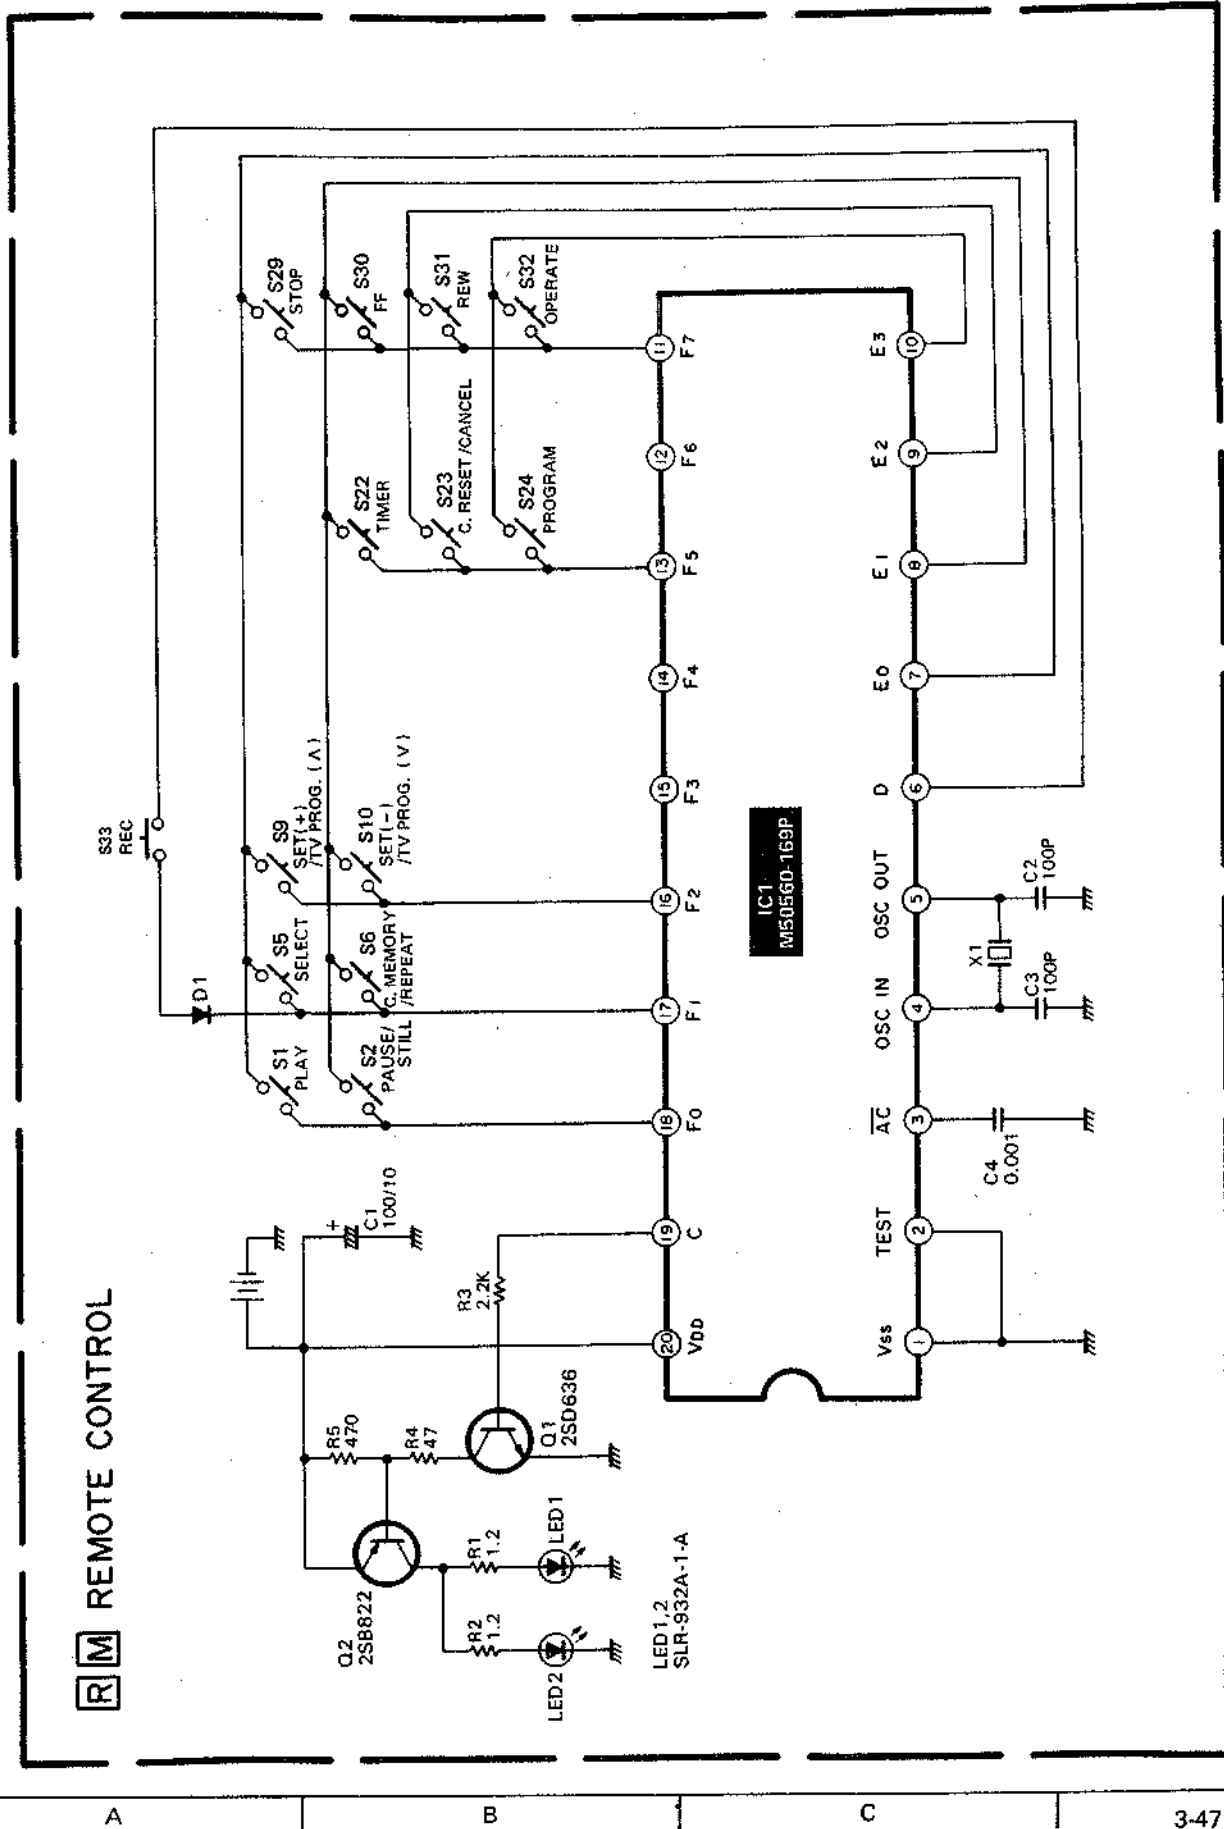

3.26 RF CONVERTER AND RF SWITCH SCHEMATIC DIAGRAM

- NOTES:
 1. All parts shown in this schematic are critical for safety.
 2. This schematic is only for reference.
 Avoid replacing individual parts.
 Replace the entire unit only.

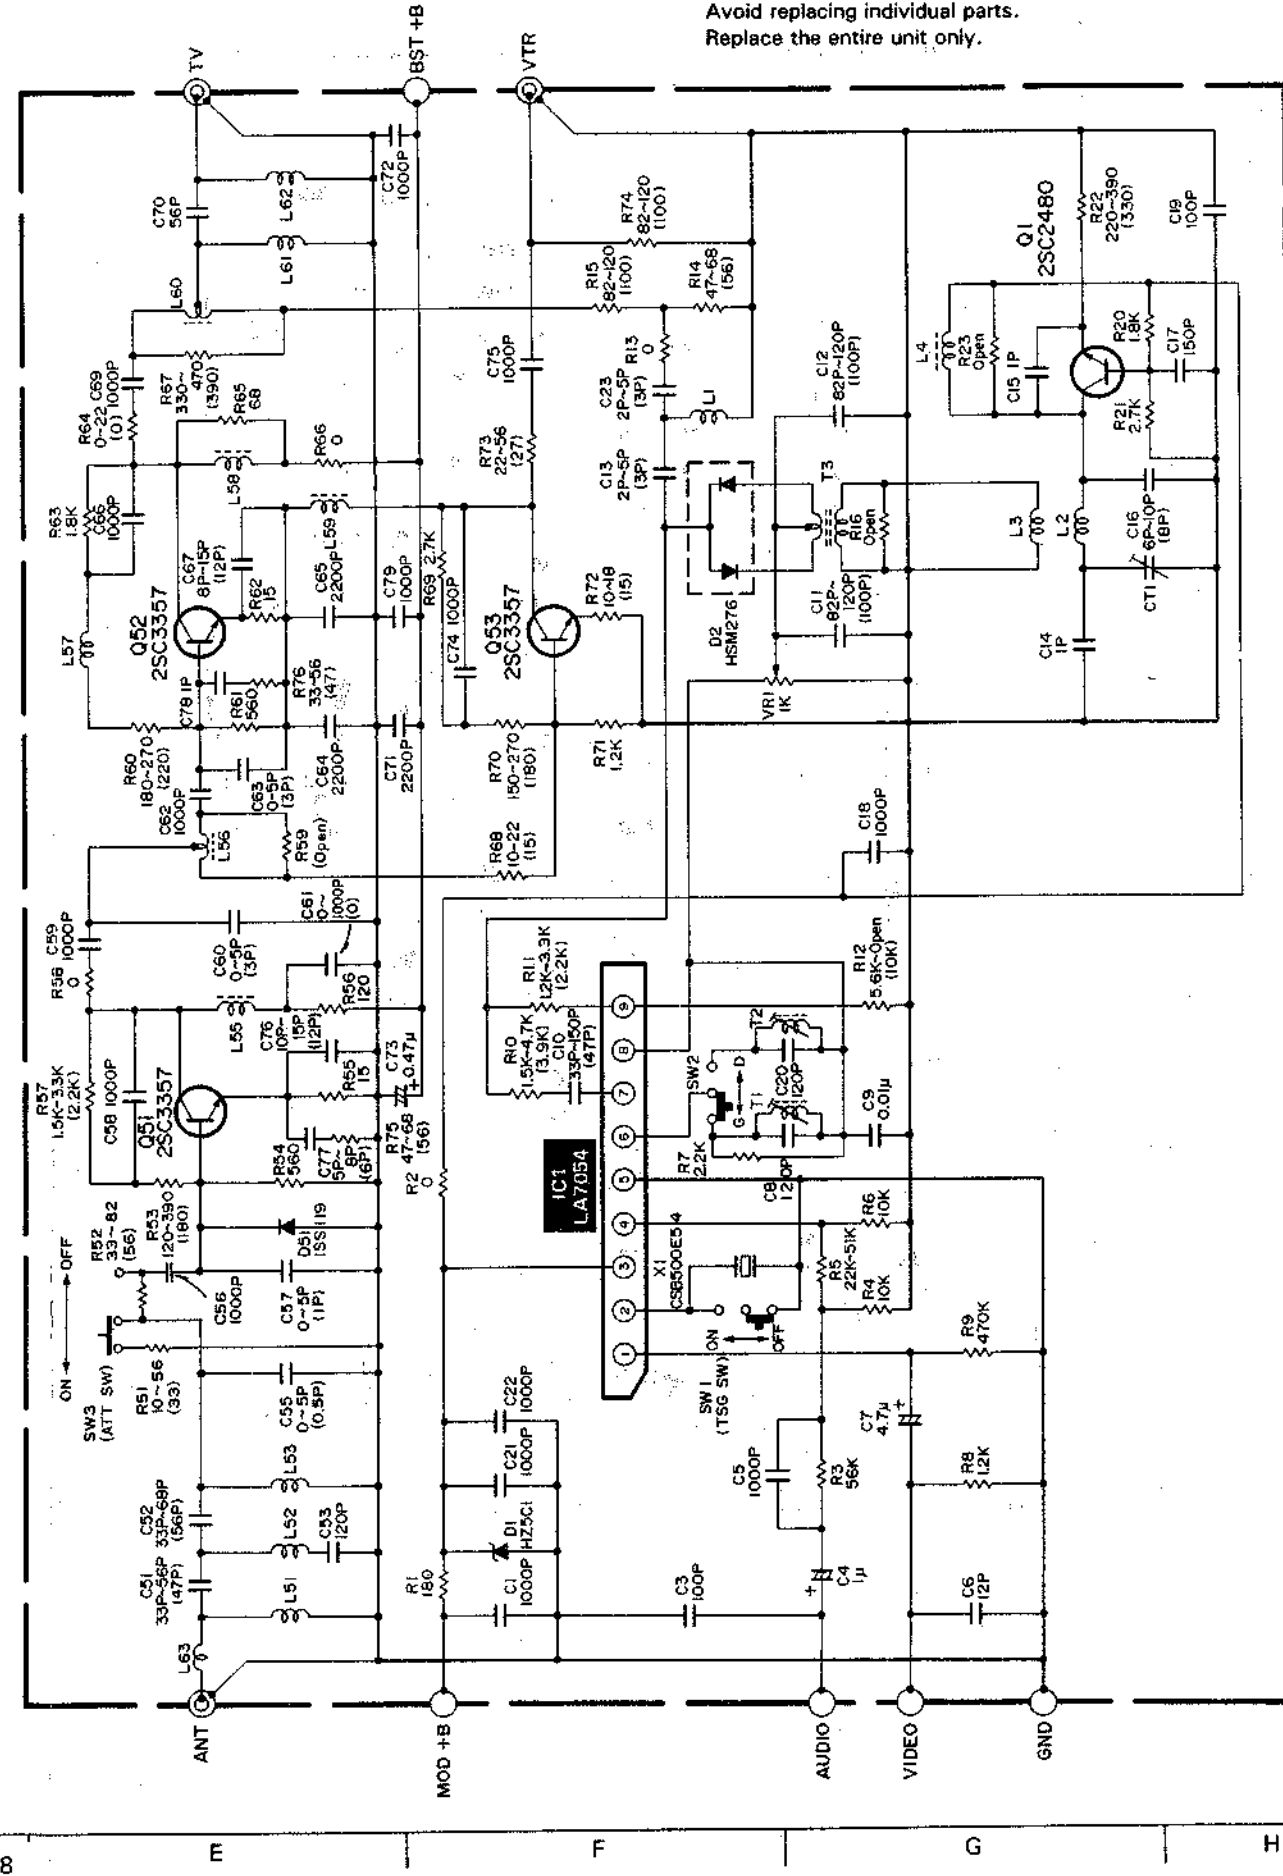

SECTION 4 EXPLODED VIEWS AND PARTS LIST


SAFETY PRECAUTION

Parts identified by the \triangle symbol are critical for safety. Replace only with specified parts numbers.

NOTE:


[M] indicates mechanical symbol number.

4.1 PACKING ASSEMBLY <M1>

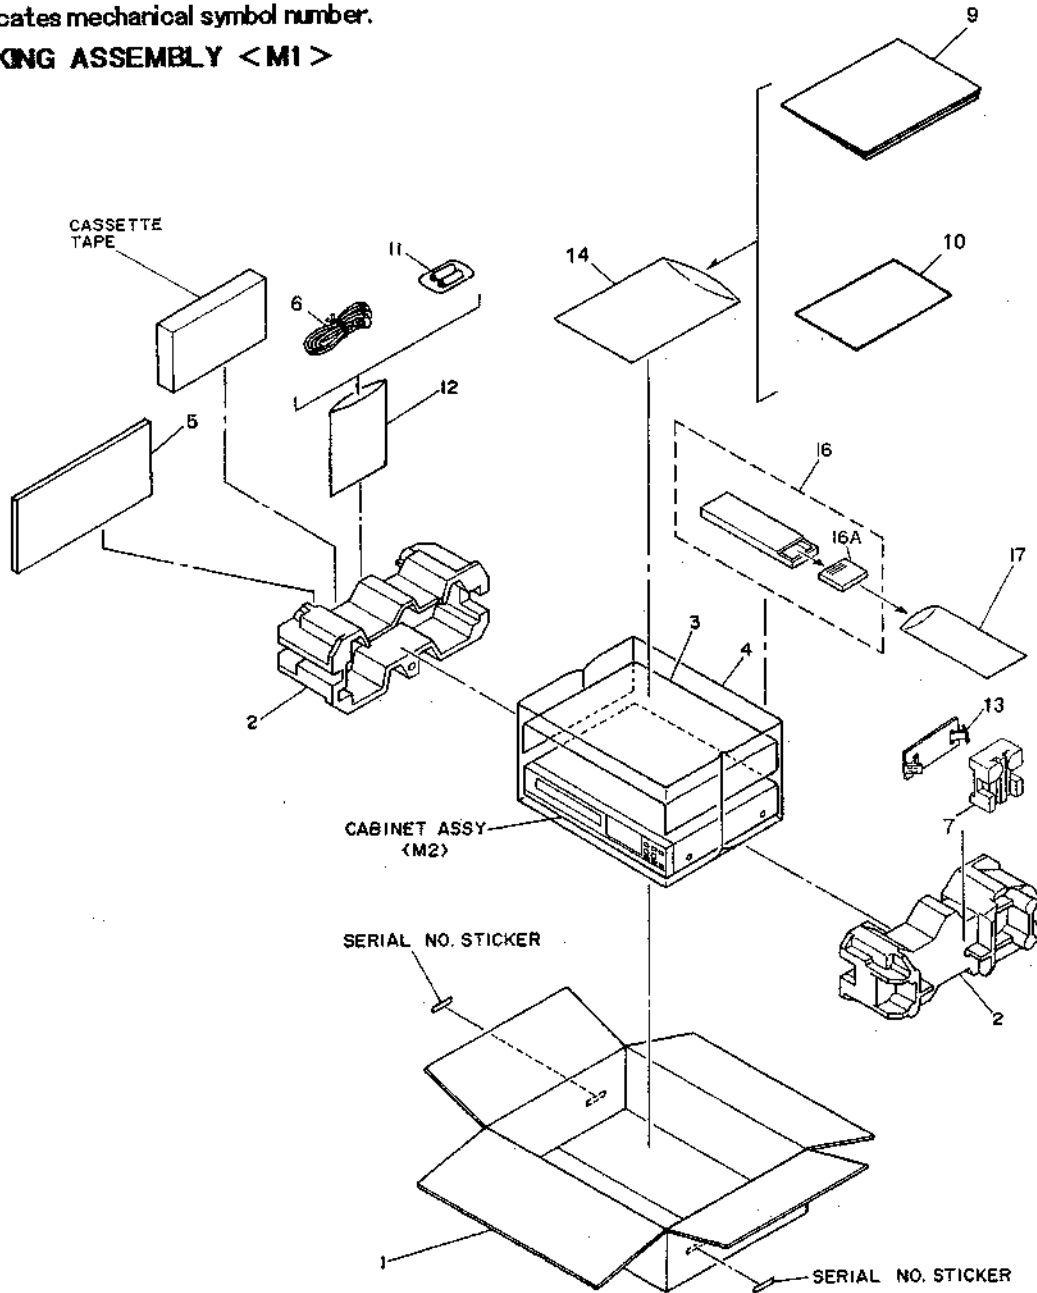

# \triangle REF No.	PART No.	PART NAME, DESCRIPTION	# \triangle REF No.	PART No.	PART NAME, DESCRIPTION
PACKING ASSEMBLY <M1>					
1	PQ33099-9-6	PACKING CASE	7	PQ33297	CUSHION
2	PQ33275A-2	CUSHION ASSY	\triangle 9	PU30425-1175	INSTRUCTIONS
3	PQ41026-20	PROTECT SHEET	10	TCN-3379	TAPE CATALOG
4	PQM30021-59-11	POLY BAG	11	UM-3DJ2P	BATTERY, X2
5	PQ42987-6	SHEET	12	QPGA020-02005	POLY BAG
6	PU59168-3	RF CABLE	13	PQ31424A	HANDLE ASSY
or	PU59167-3	RF CABLE	14	QPGA025-03505	POLY BAG
			\triangle 15	PQ10344CG	REMOTE CONTROLLER
			16A	PQ31323	BATTERY CAP
			17	PQ33533	POLY BAG

4.2 CABINET ASSEMBLY < M2 >

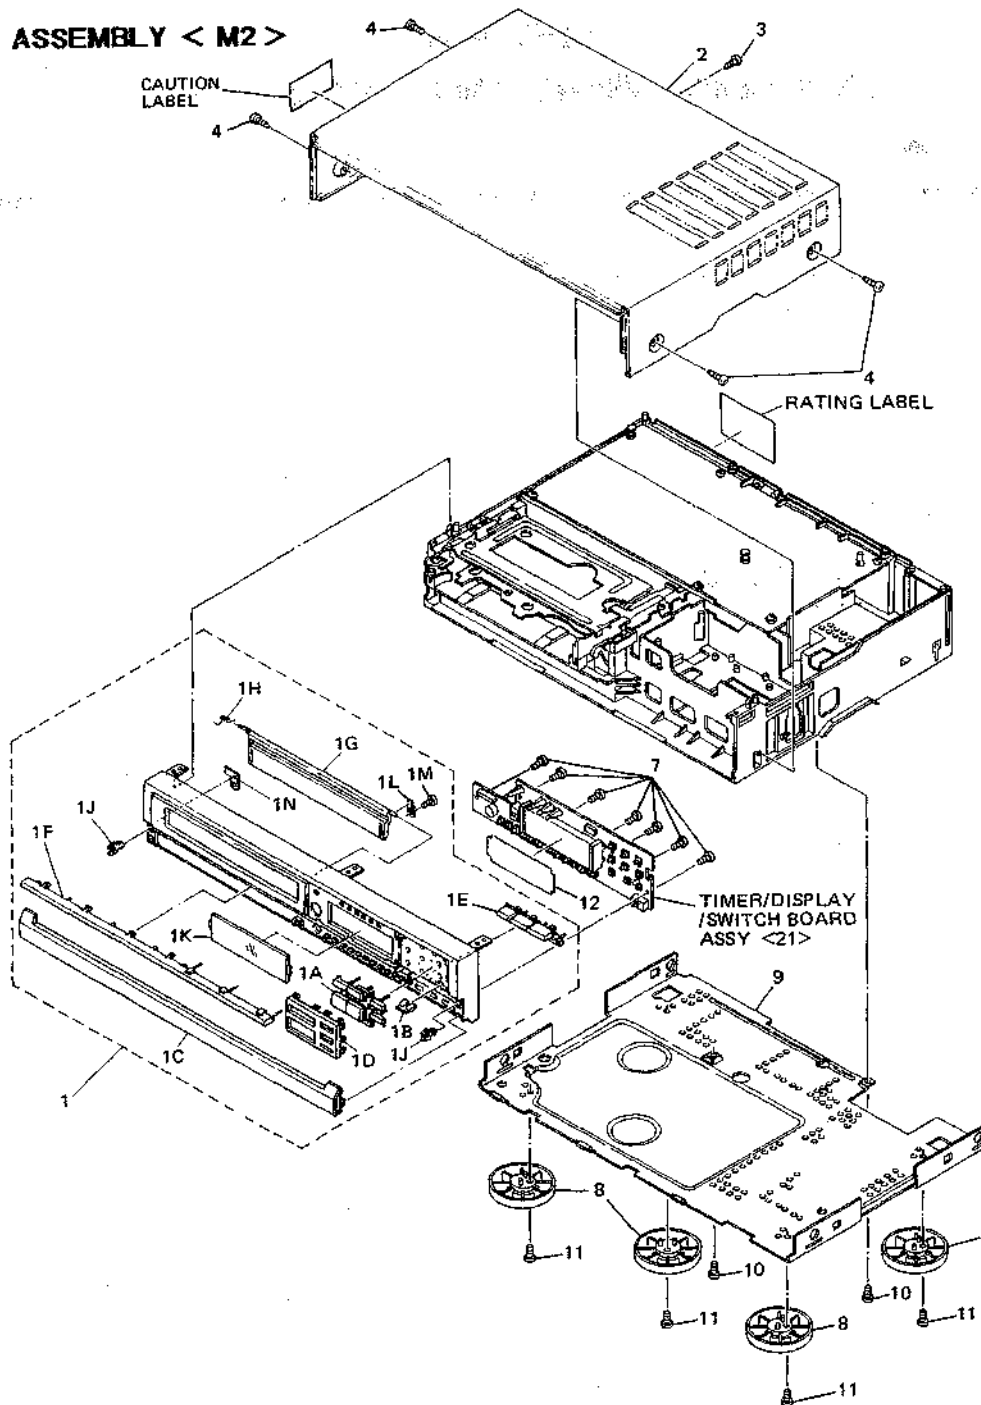

#△ REF No. PART No. PART NAME, DESCRIPTION

CABINET ASSEMBLY < M2 >

#△ REF No.	PART No.	PART NAME, DESCRIPTION
△ 1	PQ10889N	FRONT PANEL ASSY
1A	PQ32990-3	BUTTON (OPE.)
1B	PQ44062-1-2	INDICATOR
1C	PQ20892N	DOOR ASSY
1D	PQ32991-3	COVER (OPE.)
1E	PQ32993-3	HINGE (OPE.)
1F	PQ20888-2	COVER (I)
1G	PQ20890-7	CASSETTE HOUSING DOOR
1H	PQ43628-1-1	TORSION SPRING
1J	PU60109	CATCHER, X2
1K	PQ32992-3-3	DISPLAY WINDOW


#△ REF No. PART No. PART NAME, DESCRIPTION

#△ REF No.	PART No.	PART NAME, DESCRIPTION
1L	PQ44389	BRACKET
1M	SDSF2005Z	SCREW
1N	PQ32994-1-2	EARTH PLATE
△ 2	PQ10602-11	TOP COVER
3	SDSF3010M	SCREW, FOR TOP COVER
4	PQ43827	SPECIAL SCREW, X4 FOR TOP COVER
7	SDSF2608Z	SCREW, X7 FOR T/D/S BOARD
	or SPST2608Z	SCREW
8	PQ43456B-1	FOOT ASSY, X4
△ 9	PQ10712-1-5	BOTTOM COVER
10	SDSF3012Z	SCREW, X2, FOR BOTTOM COVER
11	SDSF3012Z	SCREW, X4 FOR FOOT
12	PQ43850-2-5	FILTER (FDP)

4.3 CABINET ASSEMBLY < M3 >


BEWARE OF BOGUS PARTS

Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.

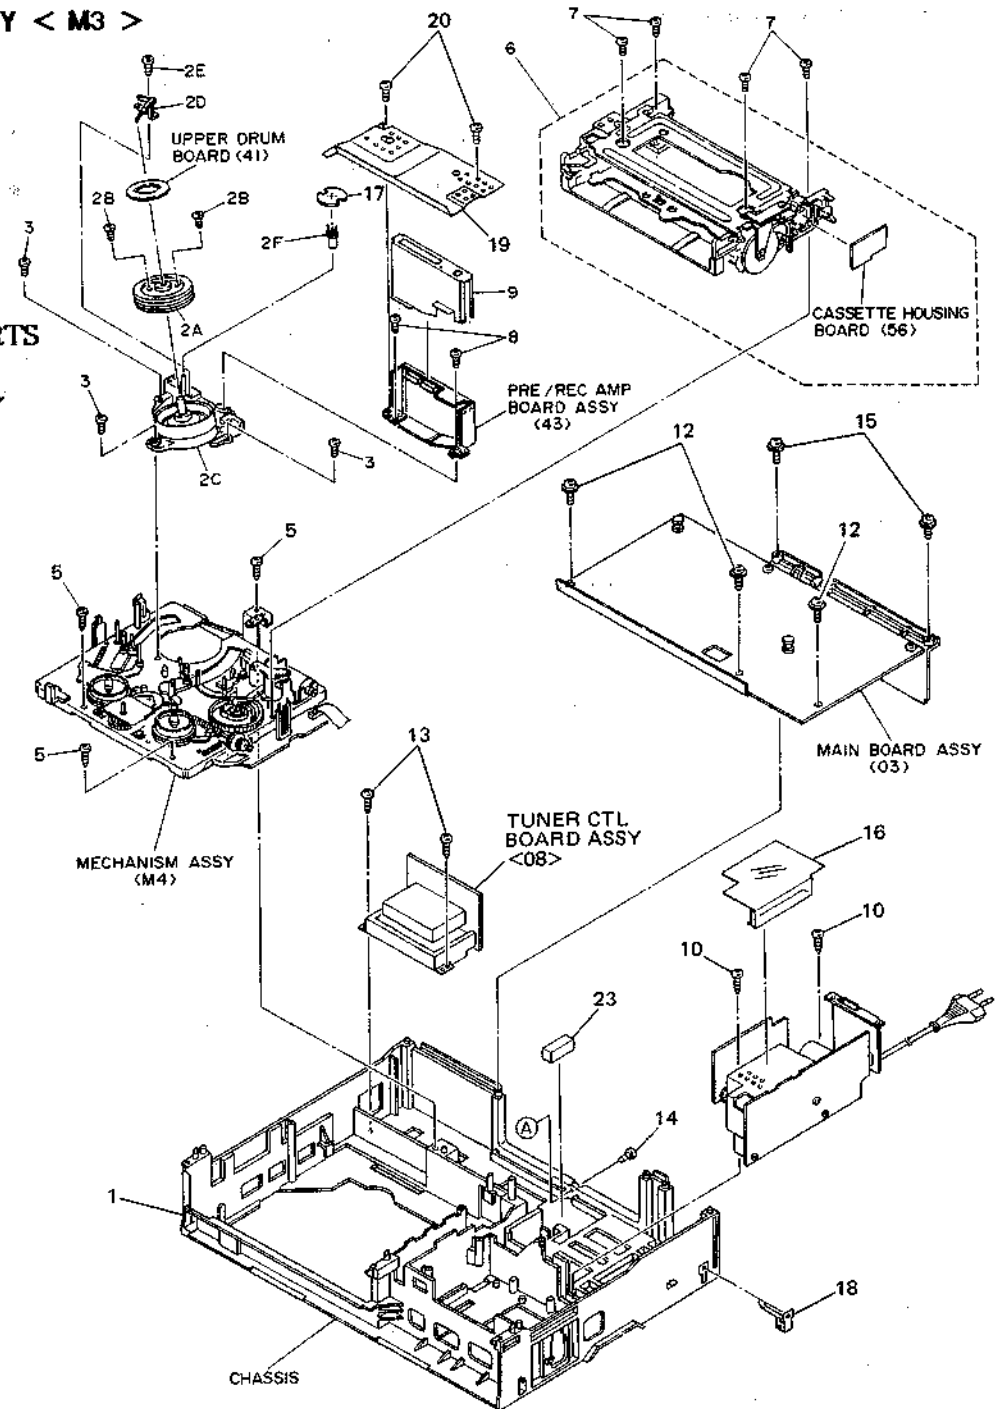

#△ REF No.	PART No.	PART NAME, DESCRIPTION	#△ REF No.	PART No.	PART NAME, DESCRIPTION
CHASSIS ASSEMBLY < M3 >			7	SDST2608Z	SCREW, X4, FOR CASSETTE HOUSING
△ 1	FQ10764-1-4	BOTTOM CHASSIS	8	SDSG2606Z	SCREW, X2, FOR PRE/REC
2A	PDM2008C-5	UPPER DRUM ASSEMBLY	9	FQ32217-1-1	SHIELD CASE (2), FOR PRE/REC
2B	PDM4165A	DRUM SCREW ASSEMBLY, X2	10	FQ43831	SPECIAL SCREW, X2, FOR P.TRANS
2C	PDM2139G	LOWER DRUM MOTOR ASSEMBLY	12	GPSF2610Z	SCREW, X3, FOR MAIN BOARD
2D	PDM4229A-1	BRUSH ASSEMBLY	13	SDSF3008Z	SCREW, X2, FOR TUNER UNIT
2E	SPSG2606Z	SCREW, FOR BRUSH ASSEMBLY	14	SDSF3010M	SCREW, FOR TEARMINAL BOARD
2F	PDM4226A	ROLLER ASSEMBLY	15	GPSF2610Z	SCREW, X2, FOR TEARMINAL BOARD
3	SPST2610Z	SCREW, X3, FOR DRUM	△ 16	FQ44631	AC COVER
5	or SDST2610Z	SCREW	17	FQ44230	INERTIA PLATE
6	FQ43831	SPECIAL SCREW, X3, FOR MAIN DECK	△ 18	FQ44679	EARTH PLATE
	PUS29183B-7	CASSETTE HOUSING ASSY	19	FQ32387-1-4	DRUM SHIELD
			20	SDST2608Z	SCREW, X2, FOR DRUM SHIELD
			23	FQM30029-127	SPACER, FOR CHASSIS

4.4 MECHANISM ASSEMBLY <M4>

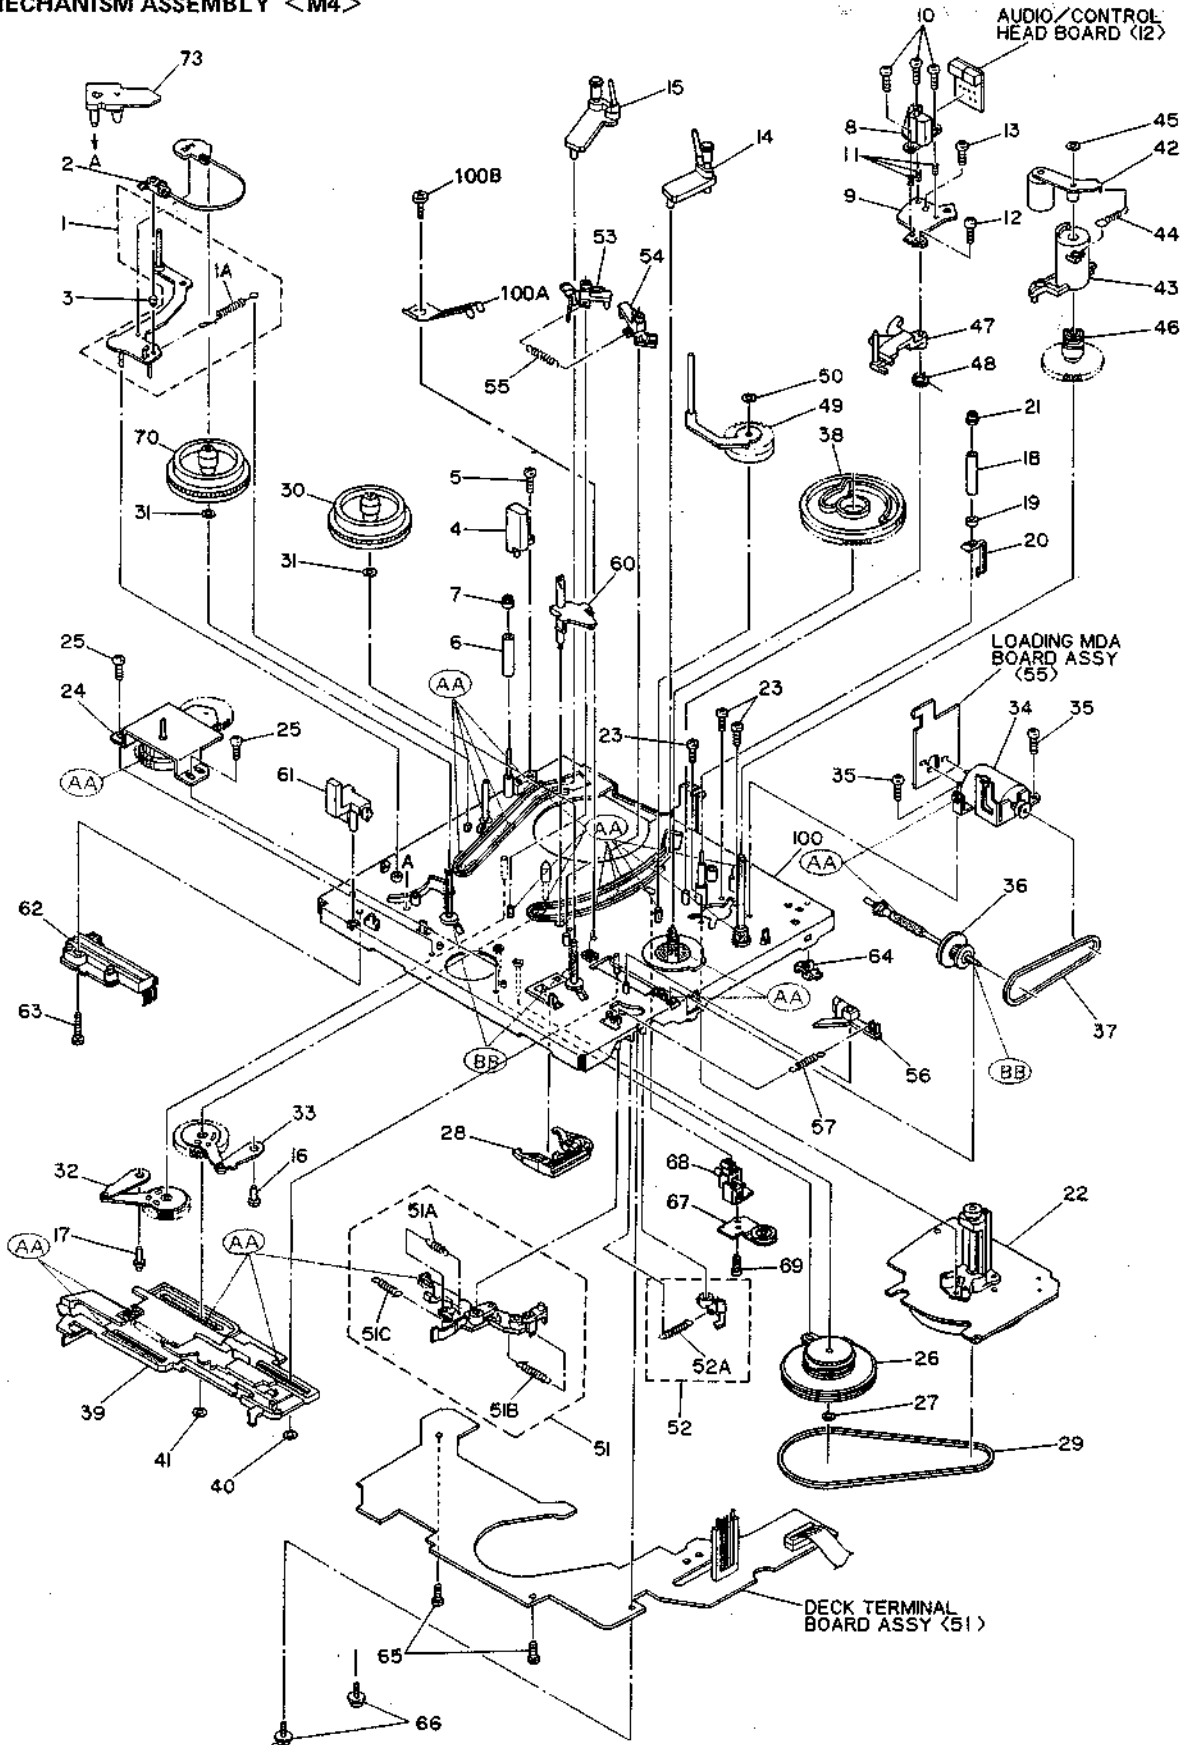

Category	Part number	MARK
Grease	KANTO-G-31KAV	(AA)
Oil	COSMO-HV56	(BB)

NOTE: The section marked in (AA) and (BB) indicate lubrication and greasing areas.

#△ REF No.	PART No.	PART NAME, DESCRIPTION	#△ REF No.	PART No.	PART NAME, DESCRIPTION
MECHANISM ASSEMBLY <M4>			38	PQ20822-2-4	CONTROL CAM
1	PQ43497E-8	TENSION ARM ASSY	39	PQ44326A-3	PLATE ASSY
1A	PQ43500	TENSION SPRING	40	PQM30017-12	SLIT WASHER
2	PQ43501B-11	TENSION BAND ASSY	41	PQM30017-8	SLIT WASHER
3	PQ43503-1-4	ADJUST PIN	42	PQ43921B-2	PINCH ROLLER ARM ASSY
4	PU60616	FULL ERASE HEAD	or	PQ43921D-2	PINCH ROLLER ARM ASSY
5	SDSF2614Z	SCREW	43	PQ32415	PINCH ROLLER PRESS LEVER
6	PQ43505-1-1	ROLLER	44	PQM30001-233	TENSION SPRING
7	PQ43506	GUIDE POLE CAP	45	PQM30017-12	SLIT WASHER
8	PU60617	AUDIO/CONTROL HEAD	46	PQ32416-2	PINCH ROLLER CAM
9	PQ43509	HEAD BASE	47	PQ43567A-8	GUIDE ARM ASSY
10	PQ43687A	SPECIAL SCREW, X3	48	PQ43569-1-3	TORSION SPRING
11	PQM30002-192	COMPRESSION SPRING, X3	49	PQ43570A	HALF LOADING GEAR ASSY
12	SPSP2606Z	SCREW	50	PQM30017-12	SLIT WASHER
13	SPSF2608M	SCREW	51	PQ43575A-5	CANCEL LEVER ASSY
14	PU61103-2	POLE BASE ASSY (TU)	51A	PQM30001-273	TENSION SPRING
15	PU61151-3	POLE BASE ASSY (SUPPLY)	51B	PQM30001-237	TENSION SPRING
16	PQ43524	STOPPER	51C	PQM30001-274	TENSION SPRING
17	PQ43525	STOPPER 2	52	PQ43578A-2	HOOK ASSY
18	PQ43526-1-3	TAPE GUIDE	52A	PQM30001-238	TENSION SPRING
19	PQ43670-1-1	GUIDE FLANGE	53	PQ43581A-6	MAIN BRAKE ASSY (SUPPLY)
20	PQ43675	TAPE GUARD	54	PQ43582A-2	MAIN BRAKE ASSY (TAKE-UP)
21	PQ43506	GUIDE POLE CAP	55	PQM30001-251	TENSION SPRING
△ 22	PU61003-1-2	CAPSTAN MOTOR	56	PQ43583A	SUB BRAKE ASSY (TAKE-UP)
23	SPSQ2608Z	SCREW, X3	57	PQM30001-298	TENSION SPRING
24	PU61004-1-3	IDLER GEAR UNIT	60	PU60621-1-2	LED HOLDER (INCL. LED; D1)
25	SPST2606Z	SCREW, X2	61	PU60624-1-4	REC SAFETY SWITCH (S2)
26	PU61005-1-4	CLUTCH UNIT	62	PU60973	SLIDE SWITCH (S3)
27	PQM30017-8	SLIT WASHER	63	SDSF2614Z	SCREW
28	PQ43532A-1	CHANGE LEVER ASSY	64	PQ32516	PWB HOLDER
29	PU61006	TIMING BELT	65	SDST2616Z	SCREW, X2
30	PU60858-1-4	REEL DISK (TAKE-UP)	66	GPSF2608Z	SCREW, X2
31	PQM30018-54	SPACER, X2	67	PQ43912A-5	PULLEY ARM ASSY
32	PQ43537A	LOADING ARM ASSY (SUPPLY)	68	PQ32882	PULLEY BASE
33	PQ43542B	LOADING ARM ASSY (TAKE-UP)	69	SDSF2608Z	SCREW
△ 34	PQ43676B-5	MODE MOTOR ASSY	70	PU60858-1-4	REEL DISK (SUPPLY)
or	PQ43676C	MODE MOTOR ASSY	73	PQ44246	TENSION BRACKET 3
35	SPST2606Z	SCREW, X2	100	PQ20650E-18	MAIN DECK ASSY
36	PQ43548A-3	WORM CLUTCH ASSY	or	PQ20753D	MAIN DECK ASSY
37	PQM30003-23	BELT (LOADING)	100A	PQ43849	EARTH PLATE
			100B	SPST2604Z	SCREW

SECTION 5 ELECTRICAL PARTS LIST

SAFETY PRECAUTION

Parts identified by the \triangle symbol are critical for safety. Replace only with specified parts numbers.

# \triangle REF No.	PART No.	PART NAME, DESCRIPTION	# \triangle REF No.	PART No.	PART NAME, DESCRIPTION	
1. POWER TRANS BOARD ASSY <01><02>			D14	AU01Z	FR DIODE	
	PWBA	PB20439Q-01		or ERA48-02	FR DIODE	
		POWER SUPPLY BOARD ASSEMBLY	D15	11EFS2	FR DIODE	
\triangle POC1	QMP3980-200	POWER CORD	D16	FML-12S	FR DIODE	
\triangle BKT1	PQ20971	TRANS BRACKET		or F6P20F	FR DIODE	
\triangle HD1	QHS3771-108	STRAIN RELIEF	D17	FMB-24	BARRIER DIODE	
	SCW1	SDST3006Z		or F5KQ40B	BARRIER DIODE	
		SCREW, X4	D18	AU01Z	FR DIODE	
	SLD1	PQ33261-1-1		or ERA48-02	FR DIODE	
	SLD2	PQ33262	D19	MTZ30AT-77	ZENER DIODE	
		SHIELD CASE (1)	D20	RD8.2ES-T1B1	ZENER DIODE	
		SHIELD CASE (2)		or UZ8.2BSA	ZENER DIODE	
- SWITCH REGULATOR BOARD ASSY <01> -			D21	AK04	DIODE	
	PWBA1	PB20439Q1-01	D22	MTZV6.2A	ZENER DIODE	
		SW REGULATOR BOARD ASSEMBLY	D23	AK04	DIODE	
IC1	LM358N	IC	D30	UZ33BSD	ZENER DIODE	
	or LM358P	IC		or MTZ33DT-77	ZENER DIODE	
	or BA10358	IC		or RD33ES-T1B4	ZENER DIODE	
Q1	2SC4517A-LF619	TRANSISTOR	R1	QRZ0078-2R2	W. W. RESISTOR	2.2 Ω
Q2	2SC3618(MLK)	TRANSISTOR	R2	QRD161J-184	RESISTOR	180K Ω , 1/6W
Q3	2SC1740S	TRANSISTOR	R3	QRD161J-184	RESISTOR	180K Ω , 1/6W
Q4	2SC1741S	TRANSISTOR	R4	QRD161J-563	RESISTOR	56K Ω , 1/6W
Q5	2SB941P	TRANSISTOR	R5	QRG029J-683G	OMF RESISTOR	68K Ω , 2W
D1	10E6-F2	DIODE	R6	QRG029J-241G	OMF RESISTOR	240 Ω , 2W
D2	10E6-F2	DIODE	R7	QRD161J-122	RESISTOR	1.2K Ω , 1/6W
D3	10E6-F2	DIODE	R8	QRD161J-471	RESISTOR	470 Ω , 1/6W
D4	10E6-F2	DIODE	R9	QRX014J-R33	MF RESISTOR	0.33 Ω , 1W
D5	AU01	FR DIODE	R10	QRG029J-303A	OMF RESISTOR	30K Ω , 2W
D6	AU01	FR DIODE	R11	QRD161J-223	RESISTOR	22K Ω , 1/6W
D7	MTZ27BT-77	ZENER DIODE	R12	QRD161J-472	RESISTOR	4.7K Ω , 1/6W
D8	AU01Z	FR DIODE	R14	QRG029J-560G	RESISTOR	56 Ω , 2W
	or ERA48-02	FR DIODE	R15	QRD161J-334	RESISTOR	330K Ω , 1/6W
D9	RD13ES-T1B3	DIODE	R16	QRD161J-222	RESISTOR	2.2K Ω , 1/6W
	or UZ13BSC	ZENER DIODE	R17	QRD161J-221	RESISTOR	220 Ω , 1/6W
D10	ISS133	DIODE	R18	QRD161J-102	RESISTOR	1.0K Ω , 1/6W
	or MA165	DIODE	R19	QRV144F-1051AY	CMF RESISTOR	1.05K Ω , 1/4W
D11	RD18ES-T1B1	ZENER DIODE	R20	QRV144F-1001A	CMF RESISTOR	1K Ω , 1/4W
	or UZ18BSA	ZENER DIODE	\triangle R21	QRZ0077-470X	FUSIBLE RESISTOR	47 Ω
D12	AU01Z	FR DIODE	R22	QRD161J-333	RESISTOR	33K Ω , 1/6W
	or ERA48-02	FR DIODE	R23	QRD161J-471	RESISTOR	470 Ω , 1/6W
			R24	QRV144F-4023A	RESISTOR	4.0K Ω , 1/4W
			R25	QRV144F-1002A	CMF RESISTOR	10.0K Ω , 1/4W
			R26	QRV144F-1182A	CMF RESISTOR	11.8K Ω , 1/4W
			R28	QRD161J-331	RESISTOR	330 Ω , 1/6W
			R29	QRD161J-103	RESISTOR	10K Ω , 1/6W
			R53	QRD161J-222	RESISTOR	2.2K Ω , 1/6W
			\triangle C1	GFZ9022-333	MM CAPACITOR	0.033 μ F

#	REF No.	PART No.	PART NAME, DESCRIPTION	#	REF No.	PART No.	PART NAME, DESCRIPTION
△	C3	QFZ9022-333	MM CAPACITOR	0.033μF			
△	C4	QCZ9016-102K	CAPACITOR	0.001μF			
△	C5	QCZ9016-102K	CAPACITOR	0.001μF			
△	C8	QCZ9016-102K	CAPACITOR	0.001μF			
△	C9	QCZ9016-102K	CAPACITOR	0.001μF			
△	C10	QCZ9016-222M	CAPACITOR	0.0022μF			
△	C11	QCZ9016-222M	CAPACITOR	0.0022μF			
	C12	QEZ0147-107	E CAPACITOR	100μF			
	or	QEZ0111-107	E CAPACITOR	100μF			
	C13	QCY53AK-472	CAPACITOR	0.0047μ, 1KV			
	or	QCZ0212-472	CAPACITOR	0.0047μ, 1KV			
	C14	QCZ0212-101	CAPACITOR	100PF, 1KV			
	C15	QFV41HJ-474	TF CAPACITOR	0.47μF			
	or	QFV11HJ-474	TF CAPACITOR	0.47μF			
	C16	QFL41HJ-682	M CAPACITOR	0.0068μF, 50V			
	C17	QETCIHM-105	E CAPACITOR	1.0μF, 50V			
	C18	QETCIJM-336	E CAPACITOR	33μF, 63V			
	C19	QEZ0125-477	E CAPACITOR	470μF, 10V			
	or	QEZ0139-477	E CAPACITOR	470μF, 10V			
	C20	QETCIEM-337	E CAPACITOR	330μF, 25V			
	C21	QEMB10M-158	E CAPACITOR	1500μF, 16V			
	C22	QETB10M-108	E CAPACITOR	1000μF, 16V			
	C23	QFL41HJ-102	M CAPACITOR	0.001μF, 50V			
	C24	QEZ0136-228	E CAPACITOR	2200μF, 10V			
	or	QEZ0106-228	E CAPACITOR	2200μF, 10V			
	C25	QETCIHM-476	E CAPACITOR	47μF, 50V			
	C26	QETC1VM-336	E CAPACITOR	33μF, 35V			
	C27	QFL41HJ-103	M CAPACITOR	0.01μF, 50V			
	C28	QEZ0156-127Z	E CAPACITOR	120μF			
	or	QEZ0135-127Z	E CAPACITOR	120μF			
	C29	QETC0JM-107	E CAPACITOR	100μF, 6.3V			
	C30	QFL41HJ-103	M CAPACITOR	0.01μF, 50V			
	C50	QCBB1HJ-271	CAPACITOR	270PF, 50V			
	C54	QCBB1HJ-471	M CAPACITOR	470μF, 50			
	C55	QFV11HJ-124	MMT CAPACITOR	0.12μF, 50V			
	L1	FU60943-330K	COIL	33μH			
	L2	FU60943-100M	COIL	10μH			
	L3	FU60943-330K	COIL	33μH			
	L4	FU48530-100K	COIL	10μH			
△	PHC1	PC111S	PHOTO COUPLER				
△	T1	PELN0301	SWITCHING TRANS				
△	HD1	FU57505	FUSE CLIP, X2				
△	HS1	PQ44610-1-1	HEAT SINK, FOR Q1				
△	HS2	PQ44724	HEAT SINK, FOR D16, D17				
△	LF1	FU61108	LINE FILTER				
△	or	FU60347	LINE FILTER				
	SCW1	SDSG3008Z	SCREW				
△	SCW2	SDSG3006Z	SCREW				
	SCW3	SDSG3008Z	SCREW, X2, FOR D16, D17				
	SCW4	SDSG3006Z	SCREW, FOR HEAT SINK				
△	SLD1	PQ44698	INSULATOR				
△	TAB1	A74316	TAB, X2				
	CN1	PU58844-104	CAP HOUSING, PIN 4-7				
	CN2	PU58844-8	CAP HOUSING, PIN 2-9				
△	CP1	ICP-N5	CIRCUIT PROTECTOR				
△	CP2	ICP-N20	CIRCUIT PROTECTOR				
△	F1	QMF51E2-1R0	FUSE	T1.0A, AC250V			
△	or	QMF51E2-1R0J1	FUSE	T1.0A, AC250V			
- REGULATOR BOARD ASSEMBLY <02> -							
	PWBA2	PB20439Q2-01	REGULATOR BOARD ASSEMBLY				
	Q7	2SB1425(EU)	TRANSISTOR				
	Q8	2SC1740S	TRANSISTOR				
	Q9	2SB941P	TRANSISTOR				
	Q10	2SC1740S(O)	TRANSISTOR				
	Q11	2SC1740S	TRANSISTOR				
	Q12	2SA933S	TRANSISTOR				
	or	2SA1267(YG)-TJK	TRANSISTOR				
	D25	1SS133	DIODE				
	or	MA165	DIODE				
	D26	UZ5.1BSC	ZENER DIODE				
	or	MTZV5.1C	ZENER DIODE				
	or	RDS.1ES-T183	ZENER DIODE				
	R31	QRD161J-102	RESISTOR	1.0KΩ, 1/6W			
	R32	QRD161J-103	RESISTOR	10KΩ, 1/6W			
	R33	QRD161J-221	RESISTOR	220Ω, 1/6W			
	R34	QRD161J-822	RESISTOR	8.2KΩ, 1/6W			
	R35	QRD161J-471	RESISTOR	470Ω, 1/6W			
	R36	QRD161J-103	RESISTOR	10KΩ, 1/6W			
	R37	QVZ3518-471A	V RESISTOR, DC 5V	470Ω			
	or	QVZ3523-471A	V RESISTOR	470Ω			
	R38	QRD161J-472	RESISTOR	4.7KΩ, 1/6W			
	R39	QRD161J-102	RESISTOR	1.0KΩ, 1/6W			
	R40	QRD161J-103	RESISTOR	10KΩ, 1/6W			
△	R41	QRZ0077-220X	FUSIBLE RESISTOR	22Ω			
	R51	QRD161J-102	RESISTOR	1.0KΩ, 1/6W			
	R52	QRD161J-222	RESISTOR	2.2KΩ, 1/6W			
	C34	QETCIJM-226	E CAPACITOR	22μF, 63V			
	C35	QETC1CM-107	E CAPACITOR	100μF, 16V			
	C36	QETC0JM-107	E CAPACITOR	100μF, 6.3V			
	C37	QETC1CM-107	E CAPACITOR	100μF, 16V			
	C38	QETCIAM-107	E CAPACITOR	100μF, 10V			
	C39	QETB1AM-226	E CAPACITOR	2200μF, 10V			
	C40	QFL41HJ-103	MY CAPACITOR	0.01μF, 50V			
	C41	QETC0JM-107	E CAPACITOR	100μF, 6.3V			
	C51	QETC1CM-476	E CAPACITOR	47μF, 16V			
	TP1	FU54983	TEST PIN, X3, (TP1-TP3)				
	CN3	PU58844-108	CAP HOUSING, PIN 2-9				
	CN4	FU60910-111	CAP HOUSING				

#	REF No	PART No	PART NAME, DESCRIPTION	#	REF No	PART No	PART NAME, DESCRIPTION
△	CP3	ICP-N20	CIRCUIT PROTECTOR	D2		1SS133	DIODE
△	CP4	ICP-N38	CIRCUIT PROTECTOR			or MA165	DIODE
△	CP5	ICP-N38	CIRCUIT PROTECTOR	D3		RD5.1E6-T1B2	ZENER DIODE
						or UZ5.1B58	ZENER DIODE
						or HZ5.1E82	ZENER DIODE

2. MAIN BOARD ASSEMBLY <03>				R1		QRD161J-473	RESISTOR 47KΩ, 1/6W
PWBA	PB10418D-01		MAIN BOARD ASSY	R4		QRD161J-242	RESISTOR 2.4KΩ, 1/6W
△	RF1	PU60384-1-1	RF CONVERTER/MIX BOOSTER	R5		QRD161J-103	RESISTOR 10KΩ, 1/6W
SPC1	PU60010		SPACER, X2	R6		QRD161J-222	RESISTOR 2.2KΩ, 1/6W
△	TB1	PQ20776-28-8	TERMINAL BOARD	R7		QRD161J-102	RESISTOR 1.0KΩ, 1/6W
BKT1	PQ32369		BRACKET	R8		QRD161J-102	RESISTOR 1.0KΩ, 1/6W
CL1	PEME0767		WIRE HOLDER	R9		QRD161J-102	RESISTOR 1.0KΩ, 1/6W
CL2	PU59311-3		WIRE CLAMP	R10		QRD161J-100	RESISTOR 10Ω, 1/6W
CL3	PU59311-2		WIRE CLAMP	R11		QVZ3518-683AZ	V RESISTOR, BIAS ADJ 68KΩ
CL4	PU59311-4		WIRE CLAMP, X2			or QVZ3523-683AZ	V RESISTOR 68KΩ
ETH1	PQ43012-1-1		EARTH PLATE, FOR RF CONV.	R12		QRD161J-153	RESISTOR 15KΩ, 1/6W
RV1	PU56800		NYLON RIVET	R13		QRD161J-6R8	RESISTOR 6.8Ω, 1/6W
SCW1	SD5T2605Z		SCREW, RF CONV.	R15		QRD161J-183	RESISTOR 18KΩ, 1/6W
SCW2	SDSF2608Z		SCREW, X2, FOR TERMINAL BOARD	R16		QRD161J-181	RESISTOR 180Ω, 1/6W
WR1	PW30401-BB20T		COAXIAL CORD, CONV.-TUN.	R17		QRD161J-274	RESISTOR 270KΩ, 1/6W
	or PW30402-BB20M		COAXIAL CORD, CONV.-TUN.	R18		QRD161J-103	RESISTOR 10KΩ, 1/6W
	or PW30401-BB20S		COAXIAL CORD, CONV.-TUN.	R21		QRD161J-183	RESISTOR 18KΩ, 1/6W
J701	PEAS2023		CONNECTOR BOARD	R22		QRD162J-682	RESISTOR 6.8KΩ, 1/6W
J702	PU60612		REMOTE PAUSE JACK	R23		QRD162J-622	RESISTOR 6.2KΩ, 1/6W
	or PU61012		REMOTE PAUSE JACK	R24		QRD161J-153	RESISTOR 15KΩ, 1/6W
TP31	PU57545		TEST PIN, X14	R25		QRD161J-153	RESISTOR 15KΩ, 1/6W
- AUDIO SECTION -				R26		QRD161J-475	RESISTOR 4.7MΩ, 1/6W
△	IC1	BA7765AS	IC	R27		QRD161J-475	RESISTOR 4.7MΩ, 1/6W
△		or XRA7765AS	IC	R28		QRD161J-123	RESISTOR 12KΩ, 1/6W
Q1	2SC1740S(RS)		TRANSISTOR	R29		QRD161J-333	RESISTOR 33KΩ, 1/6W
	or 2SC3199(G)-T.J.K		TRANSISTOR	R30		QRD161J-103	RESISTOR 10KΩ, 1/6W
Q2	2SC1740S(RS)		TRANSISTOR	R32		QRD161J-333	RESISTOR 33KΩ, 1/6W
	or 2SC3199(G)-T.J.K		TRANSISTOR	R34		QRD161J-151	RESISTOR 150Ω, 1/6W
Q3	DTA114ES		TRANSISTOR	R36		QRD161J-332	RESISTOR 3.3KΩ, 1/6W
Q4	2SC1740S(RS)		TRANSISTOR	R37		QRD161J-273	RESISTOR 27KΩ, 1/6W
	or 2SC3199(G)-T.J.K		TRANSISTOR	R40		QRD161J-272	RESISTOR 2.7KΩ, 1/6W
Q5	DTA124ES		TRANSISTOR	R41		QRD161J-475	RESISTOR 4.7MΩ, 1/6W
Q6	DTA144ES		TRANSISTOR	R45		QRD161J-222	RESISTOR 2.2KΩ, 1/6W
				R46		QRD161J-472	RESISTOR 4.7KΩ, 1/6W
				△ R47		QRZ0077-4R7X	FUSIBLE RESISTOR 4.7Ω
				R49		QRD161J-473	RESISTOR 47KΩ, 1/6W
				C1		QCB81HJ-561	CAPACITOR 560PF, 50V
				C3		QCC11EJ-272	CAPACITOR 0.0027μF, 25V
				C4		QCC11EJ-392	CAPACITOR 0.0039μF, 25V
				C5		QETCIEM-475	E CAPACITOR 4.7μF, 25V
				C6		QFL31HJ-152	M CAPACITOR 0.0015μF, 50V
				C8		PU60550-105	E CAPACITOR 1μF
				C9		QETCICM-106	E CAPACITOR 10μF, 16V
				C10		QFV71HJ-103	TF CAPACITOR 0.01μF, 50V
				C11		QEK61HM-105	E CAPACITOR 1.0μF, 50V
				C12		QETCICM-106	E CAPACITOR 10μF, 16V
				C13		QEP61CM-106	NP E CAPACITOR 10μF, 16V
						or QEN61CM-106	NP E CAPACITOR 10μF, 16V
				C14		QETCICM-336	E CAPACITOR 33μF, 16V
				C15		QETCIHM-104	E CAPACITOR 0.1μF, 50V
				C16		QETCIHM-105	E CAPACITOR 1.0μF, 50V

#	REF No.	PART No.	PART NAME, DESCRIPTION
	C17	QFV71HJ-103	TF CAPACITOR 0.01 μ F, 50V
	C19	QETC1HM-335	E CAPACITOR 3.3 μ F, 50V
	C20	QCC11EJ-822	CAPACITOR 0.0082 μ F, 25V
	C21	QCC11EJ-152	CAPACITOR 0.0015 μ F, 25V
	C24	QCC11EJ-222	CAPACITOR 0.0022 μ F, 25V
	C26	QCBB1HJ-331	CAPACITOR 330PF, 50V
	C27	QFV71HJ-473	TF CAPACITOR 0.047 μ F, 50V
	L1	FU58308-103J	COIL 10mH
	L5	FU48530-471K	COIL 470 μ H
△	T1	FU60510-2	OSC TRANSFORMER
	CN1	FU58844-4	CAP HOUSING
- VIDEO SECTION -			
	Q201	DTC114WS	TRANSISTOR
	Q202	DTC144WS	TRANSISTOR
	Q203	2SA933S(RS)	TRANSISTOR
	or	2SA1267(YG)-T.K	TRANSISTOR
	Q204	2SC1740S(RS)	TRANSISTOR
	or	2SC3199(GB)-T.K	TRANSISTOR
	Q205	2SC1740S(RS)	TRANSISTOR
	or	2SC3199(GB)-T.K	TRANSISTOR
	Q206	2SC1740S(RS)	TRANSISTOR
	or	2SC3199(GB)-T.K	TRANSISTOR
	Q207	2SA933S(RS)	TRANSISTOR
	or	2SA1267(YG)-T.K	TRANSISTOR
	Q208	2SA933S(RS)	TRANSISTOR
	or	2SA1267(YG)-T.K	TRANSISTOR
	Q209	DTA114ES	TRANSISTOR
	Q210	2SA854S(QR)	TRANSISTOR
	D201	1SS133	DIODE
	or	MA165	DIODE
	D202	1SS133	DIODE
	OR	MA165	DIODE
	D204	1SS133	DIODE
	or	MA165	DIODE
	D205	1SS133	DIODE
	or	MA165	DIODE
	D206	1SS133	DIODE
	or	MA165	DIODE
	D207	1SS133	DIODE
	or	MA165	DIODE
	D208	1SS133	DIODE
	or	MA165	DIODE
	D209	1SS133	DIODE
	or	MA165	DIODE
	D210	1SS133	DIODE
	or	MA165	DIODE
	R201	QRD161J-472	RESISTOR 4.7K Ω , 1/6W
	R202	QRD161J-563	RESISTOR 56K Ω , 1/6W
	R204	QRD161J-182	RESISTOR 1.8K Ω , 1/6W
	R205	QRD161J-472	RESISTOR 4.7K Ω , 1/6W
	R208	QRD161J-562	RESISTOR 5.6K Ω , 1/6W
	R207	QRD161J-222	RESISTOR 2.2K Ω , 1/6W

#	REF No.	PART No.	PART NAME, DESCRIPTION
	R208	QRD161J-182	RESISTOR 1.8K Ω , 1/6W
	R209	QRD161J-222	RESISTOR 2.2K Ω , 1/6W
	R210	QRD161J-222	RESISTOR 2.2K Ω , 1/6W
	R211	QRD161J-182	RESISTOR 1.8K Ω , 1/6W
	R212	QRD161J-152	RESISTOR 1.5K Ω , 1/6W
	R213	QRD161J-152	RESISTOR 1.5K Ω , 1/6W
	R214	QRD161J-331	RESISTOR 330 Ω , 1/6W
	R215	QRD161J-681	RESISTOR 680 Ω , 1/6W
	R216	QRD161J-331	RESISTOR 330 Ω , 1/6W
	R217	QRD161J-222	RESISTOR 2.2K Ω , 1/6W
	R218	QRD161J-153	RESISTOR 15K Ω , 1/6W
	R219	QRD161J-103	RESISTOR 10K Ω , 1/6W
	R220	QVZ3518-681AZ	V RESISTOR, SP REC COLOR 680 Ω
	or	QVZ3523-681AZ	V RESISTOR 680 Ω
	R221	QRD161J-222	RESISTOR 2.2K Ω , 1/6W
	R222	QRD161J-333	RESISTOR 33K Ω , 1/6W
	R223	QRD161J-153	RESISTOR 15K Ω , 1/6W
	R224	QRD161J-152	RESISTOR 1.5K Ω , 1/6W
	R225	QRD161J-561	RESISTOR 560 Ω , 1/6W
	R226	QVZ3518-332AZ	V RESISTOR, SP FREQ 3.3K Ω
	or	QVZ3523-332AZ	V RESISTOR 3.3K Ω
	R227	QRD161J-101	RESISTOR 100 Ω , 1/6W
	R228	QRD161J-102	RESISTOR 1.0K Ω , 1/6W
	R229	QRD161J-123	RESISTOR 12K Ω , 1/6W
	R230	QRD162J-103	RESISTOR 10K Ω , 1/6W
	R231	QRD123J-391SX	RESISTOR 390 Ω , 1/2W
	R232	QRD161J-472	RESISTOR 4.7K Ω , 1/6W
	R233	QRD161J-682	RESISTOR 6.8K Ω , 1/6W
	R234	QRD161J-101	RESISTOR 100 Ω , 1/6W
	R235	QRD161J-102	RESISTOR 1.0K Ω , 1/6W
	R236	QRD161J-102	RESISTOR 1.0K Ω , 1/6W
	R237	QRD161J-222	RESISTOR 2.2K Ω , 1/6W
	R238	QRD161J-750	RESISTOR 75 Ω , 1/6W
	R239	QRD161J-750	RESISTOR 75 Ω , 1/6W
	R240	QRD161J-102	RESISTOR 1.0K Ω , 1/6W
	R243	QRD161J-103	RESISTOR 10K Ω , 1/6W
	R244	QRD161J-682	RESISTOR 6.8K Ω , 1/6W
	R250	QRD161J-471	RESISTOR 470 Ω , 1/6W
	C201	QEN61AM-226	NP E CAPACITOR 22 μ F, 10V
	or	QENCIAM-226	NP E CAPACITOR 22 μ F, 10V
	C202	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C203	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C204	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C205	QCBB1HJ-121	CAPACITOR 120PF, 50V
	C206	QCBB1HJ-121	CAPACITOR 120PF, 50V
	C207	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C208	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C209	QETC1CM-476	E CAPACITOR 47 μ F, 16V
	C210	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C211	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C212	QETC0JM-476	E CAPACITOR 47 μ F, 6.3V
	C213	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C214	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
	C215	QCSB1HJ-330	CAPACITOR 33PF, 50V
	C216	QETC1CM-476	E CAPACITOR 47 μ F, 16V
	C217	QCVB1CN-103	CAPACITOR 0.01 μ F, 16V

#	REF No.	PART No.	PARTNAME, DESCRIPTION	#	REF No.	PART No.	PARTNAME, DESCRIPTION
C218		QETCOJM-477	E CAPACITOR 470 μ F, 6.3V	R408		QRD161J-105	RESISTOR 1.0M Ω , 1/6W
C219		QETCOJM-476	E CAPACITOR 47 μ F, 6.3V	R409		QRD161J-273	RESISTOR 27K Ω , 1/6W
C220		QCC31CJ-473	CAPACITOR 0.047 μ F, 16V	R411		QRD161J-105	RESISTOR 1.0M Ω , 1/6W
C221		QETC1HM-474	E CAPACITOR 0.47 μ F, 50V	R412		QRD161J-273	RESISTOR 27K Ω , 1/6W
C222		QETC1HM-105	E CAPACITOR 1.0 μ F, 50V	R413		QRD161J-273	RESISTOR 27K Ω , 1/6W
C224		QCBB1HJ-102	CAPACITOR 0.001 μ F, 50V	R414		QRD161J-335	RESISTOR 3.3M Ω , 1/6W
C225		QCFB1EZ-223	CAPACITOR 2.2 μ F, 25V	R415		QRD161J-334	RESISTOR 330K Ω , 1/6W
C240		QCC31CJ-333	CAPACITOR 3.3 μ F, 16V	R416		QRD161J-822	RESISTOR 8.2K Ω , 1/6W
C241		QETC1CM-336	E CAPACITOR 33 μ F, 16V	R418		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
C280		QCBC1HJ-101	CAPACITOR 100PF, 50V	R419		QRD161J-473	RESISTOR 47K Ω , 1/6W
L201		PU59152-221J	COIL 220 μ H	R420		QVZ3518-884	V RESISTOR, SP SW POINT 680K Ω
L202		PU59152-560J	COIL 56 μ H	R422		QRD161J-104	RESISTOR 100K Ω , 1/6W
L203		PU48530-101K	COIL 100 μ H	R426		QRD161J-821	RESISTOR 820 Ω , 1/6W
L204		PU48530-101K	COIL 100 μ H	R427		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
L205		PU59152-220J	COIL 22 μ H	R428		QRD161J-105	RESISTOR 1.0M Ω , 1/6W
L206		PU48530-101K	COIL 100 μ H	R429		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
L207		PU54710-222	COIL 2.2mH	R430		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
L208		PU59152-R22J	COIL 0.22 μ H	R434		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
CN204		PU58844-6	CAP HOUSING	R435		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
CN205		PU59555-4	CAP HOUSING	R436		QRD161J-274	RESISTOR 270K Ω , 1/6W
-- SERVO SECTION --				R437		QRD161J-274	RESISTOR 270K Ω , 1/6W
IC401		HD49733NT	IC	R438		QRD161J-224	RESISTOR 220K Ω , 1/6W
	or	HD49733ANT	IC	R439		QRD161J-103	RESISTOR 10K Ω , 1/6W
IC501		BA7039	IC	R440		QRD161J-474	RESISTOR 470K Ω , 1/6W
	or	XRA7039	IC	R441		QRD161J-823	RESISTOR 82K Ω , 1/6W
Q402		2SA1309(QRS)	TRANSISTOR	R501		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
	or	2SA933S(QRS)	TRANSISTOR	R502		QRD161J-332	RESISTOR 3.3K Ω , 1/6W
	or	2SA1267(YG)-T.K	TRANSISTOR	R503		QRD161J-272	RESISTOR 2.7K Ω , 1/6W
D401		1SS133	DIODE	R508		QRD161J-124	RESISTOR 120K Ω , 1/6W
	or	MA165	DIODE	C401		QCVB1CM-103	CAPACITOR 0.01 μ F, 16V
D402		1SS133	DIODE	C402		QEK61AM-226	E CAPACITOR 22 μ F, 10V
	or	MA165	DIODE	C403		QFV11HJ-224	TF CAPACITOR 0.22 μ F, 50V
D403		1SS133	DIODE	C404		QCC31CK-682	CAPACITOR 0.0068 μ F, 16V
	or	MA165	DIODE	C405		QEK61EM-475	E CAPACITOR 4.7 μ F, 25V
D404		1SS133	DIODE	C406		QEK61EM-475	E CAPACITOR 4.7 μ F, 25V
	or	MA165	DIODE	C407		QEK61CM-106	E CAPACITOR 10 μ F, 16V
D407		1SS133	DIODE	C408		QEK81CM-106	E CAPACITOR 10 μ F, 16V
	or	MA165	DIODE	C409		QCC31CK-223	CAPACITOR 0.022 μ F, 16V
D408		1SS133	DIODE	C410		QFV71HJ-184	TF CAPACITOR 0.18 μ F, 50V
	or	MA165	DIODE		or	QFV11HJ-184	MMT CAP 0.18 μ F, 50V
D409		1SS133	DIODE	C411		QCBB1HJ-471	CAPACITOR 470PF, 50V
	or	MA165	DIODE	C412		QFL31HJ-682	M CAPACITOR 0.0068 μ F, 50V
D410		1SS133	DIODE		or	QFN31HJ-682	M CAPACITOR 0.0068 μ F, 50V
	or	MA165	DIODE	C414		QCBB1HJ-102	CAPACITOR 0.001 μ F, 50V
R401		QRD161J-223	RESISTOR 22K Ω , 1/6W	C415		QEK61AM-226	E CAPACITOR 22 μ F, 10V
R402		QRD161J-225	RESISTOR 2.2M Ω , 1/6W	C416		QEK61AM-226	E CAPACITOR 22 μ F, 10V
R403		QRD161J-683	RESISTOR 68K Ω , 1/6W	C417		QCBB1HJ-271	CAPACITOR 270PF, 50V
R404		QRD161J-222	RESISTOR 2.2K Ω , 1/6W	C418		QCBB1HJ-561	CAPACITOR 560PF, 50V
R405		QRD161J-123	RESISTOR 12K Ω , 1/6W	C419		QCBB1HJ-102	CAPACITOR 0.001 μ F, 50V
R406		QRD161J-472	RESISTOR 4.7K Ω , 1/6W	C420		QEK61HM-105	E CAPACITOR 1.0 μ F, 50V
R407		QRD161J-392	RESISTOR 3.9K Ω , 1/6W	C421		QCBB1HJ-102	CAPACITOR 0.001 μ F, 50V
				C422		QFV71HJ-563	TF CAPACITOR 0.056 μ F, 50V
					or	QFV11HJ-563	MMT CAP 0.056 μ F, 50V
				C423		QCBB1HJ-102	CAPACITOR 0.001 μ F, 50V
				C427		QCBB1HJ-181	CAPACITOR 180PF, 50V
				C502		QCVB1CM-103	CAPACITOR 0.01 μ F, 16V

#	REF No.	PART No.	PART NAME, DESCRIPTION
C504		QFV71HJ-104	TF CAPACITOR 0.1 μ F, 50V
	or	QFV11HJ-104	MM CAPACITOR 0.1 μ F, 50V
C505		QCVB1CM-103	CAPACITOR 0.01 μ F, 16V
C506		QFV71HJ-683	TF CAPACITOR 0.068 μ F, 50V
	or	QFV11HJ-683	MMT CAP 0.068 μ F, 50V
C507		QCVB1CM-103	CAPACITOR 0.01 μ F, 16V
C508		QEK61AM-226	E CAPACITOR 22 μ F, 10V
C509		QCVB1CM-103	CAPACITOR 0.01 μ F, 16V
L501		PU59152-270J	COIL 27 μ H
CN401		PU59555-4	CAP HOUSING
CN402		PU58844-3	CAP HOUSING

△ CP401 CP-F15 CIRCUIT PROTECTOR

— MECHACON SECTION —

IC601		M37418M6-364SP	IC
IC603		M50253P	IC
Q602		DTC114ES	TRANSISTOR
Q603		2SB1425(EU)	TRANSISTOR
D601		HZS7.5EB2	ZENER DIODE
	or	MTZ7.5B	ZENER DIODE
	or	UZ7.5BSB	ZENER DIODE
D602		MA165	DIODE
	or	1SS133	DIODE
D603		MA165	DIODE
	or	1SS133	DIODE
D604		MA165	DIODE
	or	1SS133	DIODE
D605		MA165	DIODE
	or	1SS133	DIODE
D606		11ES2	DIODE
	or	ERA15-02	DIODE
	or	S5688G	DIODE
	or	1SR139-200	DIODE
R601		QRD161J-332	RESISTOR 3.3K Ω , 1/6W
R602		QRD161J-332	RESISTOR 3.3K Ω , 1/6W
R603		QRD161J-103	RESISTOR 10K Ω , 1/6W
R604		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R605		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R606		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R607		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R608		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R609		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R610		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R611		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R612		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R613		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R614		QRD161J-103	RESISTOR 10K Ω , 1/6W
R615		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R616		QRD161J-103	RESISTOR 10K Ω , 1/6W
R617		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R618		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R619		QRD161J-472	RESISTOR 4.7K Ω , 1/6W

#	REF No.	PART No.	PART NAME, DESCRIPTION
R620		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R621		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R622		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R623		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R624		QRD161J-105	RESISTOR 1.0M Ω , 1/6W
R625		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R626		QRD161J-103	RESISTOR 10K Ω , 1/6W
R627		QRD161J-103	RESISTOR 10K Ω , 1/6W
R628		QRD161J-822	RESISTOR 8.2K Ω , 1/6W
R629		QRD161J-471	RESISTOR 470 Ω , 1/6W
R630		QRD161J-333	RESISTOR 33K Ω , 1/6W

R631		QRD161J-563	RESISTOR 56K Ω , 1/6W
R632		QRD161J-103	RESISTOR 10K Ω , 1/6W
R633		QRD161J-303	RESISTOR 30K Ω , 1/6W
R634		QRD161J-154	RESISTOR 150K Ω , 1/6W
R635		QRD161J-333	RESISTOR 33K Ω , 1/6W
R636		QRD161J-103	RESISTOR 10K Ω , 1/6W
R637		QRD161J-224	RESISTOR 220K Ω , 1/6W
R638		QRD161J-103	RESISTOR 10K Ω , 1/6W
R639		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R641		QRD161J-152	RESISTOR 1.5K Ω , 1/6W
R642		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R643		QRD161J-222	RESISTOR 2.2K Ω , 1/6W
R648		QRD163J-0R0	RESISTOR 0 Ω , 1/6W

RA601 QRB035J-103XC RESISTOR ARRAY

C601		QEK61HM-105	E CAPACITOR 1.0 μ F, 50V
C602		QCFB1EZ-223	CAPACITOR 0.022 μ F, 25V
C603		QEK61EM-335	E CAPACITOR 3.3 μ F, 25V
C604		QCC11EK-104	CAPACITOR 0.1 μ F, 25V
C605		QEK60JM-107	E CAPACITOR 100 μ F, 6.3V
C606		QCB81HJ-121	CAPACITOR 120PF, 50V
C607		QCB81HJ-471	CAPACITOR 470PF, 50V
C608		QETB1CM-337	E CAPACITOR 330 μ F, 16V
C620		QCF11HP-473	CAPACITOR 0.047 μ F, 50V

L601 PU59152-2R2J COIL 2.2 μ H

△ CF601 PU60440 RESONATOR
 △ or PU60440-2 RESONATOR

CN601 PEMC0722-017 WIRE TRAP (PARALLEL WIRE)
 or PEMC0753-017 WIRE TRAP

CN602		PU59555-4	CAP HOUSING
CN603		PU59555-7	CAP HOUSING
CN604		PU58844-9	CAP HOUSING
CN605		PU58844-3	CAP HOUSING

△ CP601 ICP-F25 CIRCUIT PROTECTOR

— REGULATOR SECTION —

L851		PU59152-100J	COIL 10 μ H
L853		PU59152-101J	COIL 100 μ H

△ TH801 PU52108-1R0 POSITIVE THERMISTOR

#	REF No.	PART No.	PART NAME, DESCRIPTION
	CN801	PUB1044-11	CAP HOUSING

3. VIDEO UNIT BOARD ASSEMBLY <05>

	PWBA	PB10258A-04	VIDEO UNIT BOARD ASSEMBLY	
	IC1	PB20166G-01	Y MODULE BOARD ASSY	
△	IC2	MSM6967RS	IC	
	IC201	PB20227A	COLOR MODULE BOARD	
	IC251	8A7106LS	IC	
	or	XRA7106LS	IC	
	Q1	DTA144EU	TRANSISTOR	
	Q2	2SC2412K	TRANSISTOR	
	Q3	DTC144EK	TRANSISTOR	
	Q4	2SA1037K	TRANSISTOR	
	Q5	2SC2412K	TRANSISTOR	
	Q201	2SC2412K	TRANSISTOR	
	Q202	2SC2412K	TRANSISTOR	
	Q203	DTC114WK	TRANSISTOR	
	Q204	2SC2412K	TRANSISTOR	
	Q205	2SA1037K	TRANSISTOR	
	Q251	DTC114WK	TRANSISTOR	
	D1	1SS133	DIODE	
	or	MA165	DIODE	
	D2	1SS133	DIODE	
	or	MA165	DIODE	
	D3	1SS133	DIODE	
	or	MA165	DIODE	
	D4	1SS133	DIODE	
	or	MA165	DIODE	
	D5	1SS292	DIODE	
	D6	1SS133	DIODE	
	or	MA165	DIODE	
	D7	1SS133	DIODE	
	or	MA165	DIODE	
	D9	RD9.1ES-T1B2	ZENER DIODE	
	or	UZ9.1BSB	ZENER DIODE	
	D10	1SS133	DIODE	
	or	MA165	DIODE	
	D201	1SS133	DIODE	
	or	MA165	DIODE	
	D202	1SS133	DIODE	
	or	MA165	DIODE	
	D203	1SS133	DIODE	
	or	MA165	DIODE	
	D251	1SS133	DIODE	
	or	MA165	DIODE	
	D252	1SS133	DIODE	
	or	MA165	DIODE	
	D253	1SS133	DIODE	
	or	MA165	DIODE	
	R1	QRSA08J-103YN	RESISTOR	10KΩ, 1/10W
	R2	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R3	QRSA08J-681YN	RESISTOR	680Ω, 1/10W

#	REF No.	PART No.	PART NAME, DESCRIPTION	
	R5	QRSA08J-562YN	RESISTOR	5.6KΩ, 1/10W
	R6	QRSA08J-103YN	RESISTOR	10KΩ, 1/10W
	R7	QRSA08J-104YN	RESISTOR	100KΩ, 1/10W
	R8	QRSA08J-273YN	RESISTOR	27KΩ, 1/10W
	R9	QRSA08J-394YN	RESISTOR	390KΩ, 1/10W
	R10	QRSA08J-103YN	RESISTOR	10KΩ, 1/10W
	R11	QRSA08J-221YN	RESISTOR	220Ω, 1/10W
	R12	QRSA08J-222YN	RESISTOR	2.2KΩ, 1/10W
	R13	QRSA08J-221YN	RESISTOR	220Ω, 1/10W
	R14	QRSA08J-222YN	RESISTOR	2.2KΩ, 1/10W
	R15	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R16	QVZ3518-222AZ	V RESISTOR, NC BALANCE	2.2KΩ
	or	QVZ3523-222AZ	V RESISTOR	2.2KΩ
	R17	QRSA08J-222YN	RESISTOR	2.2KΩ, 1/10W
	R18	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
△	R20	QRD161J-181	RESISTOR	180Ω, 1/8W
	R201	QRSA08J-183YN	RESISTOR	18KΩ, 1/10W
	R202	QRSA08J-332YN	RESISTOR	3.3KΩ, 1/10W
	R203	QRD161J-222	RESISTOR	2.2KΩ, 1/8W
	R204	QRSA08J-333YN	RESISTOR	33KΩ, 1/10W
	R205	QRD161J-223	RESISTOR	22KΩ, 1/8W
	R206	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R207	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R208	QRSA08J-682YN	RESISTOR	6.8KΩ, 1/10W
	R209	QRSA08J-391YN	RESISTOR	390Ω, 1/10W
	R210	QRSA08J-333YN	RESISTOR	33KΩ, 1/10W
	R211	QRSA08J-333YN	RESISTOR	33KΩ, 1/10W
	R212	QRSA08J-152YN	RESISTOR	1.5KΩ, 1/10W
	R213	QRSA08J-331YN	RESISTOR	330Ω, 1/10W
	R214	QRSA08J-222YN	RESISTOR	2.2KΩ, 1/10W
	R215	QRSA08J-332YN	RESISTOR	3.3KΩ, 1/10W
	R216	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R217	QRSA08J-393YN	RESISTOR	39KΩ, 1/10W
	R218	QRSA08J-332YN	RESISTOR	3.3KΩ, 1/10W
	R219	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R220	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R221	QRSA08J-102YN	RESISTOR	1.0KΩ, 1/10W
	R222	QRSA08J-391YN	RESISTOR	390Ω, 1/10W
	R223	QRSA08J-821YN	RESISTOR	820Ω, 1/10W
	R224	QRSA08J-471YN	RESISTOR	470Ω, 1/10W
	R251	QRSA08J-682YN	RESISTOR	6.8KΩ, 1/10W
	R252	QRSA08J-333YN	RESISTOR	33KΩ, 1/10W
	R253	QRD161J-273	RESISTOR	27KΩ, 1/8W
	R254	QRSA08J-914YN	RESISTOR	910KΩ, 1/10W
	R255	QRSA08J-103YN	RESISTOR	10KΩ, 1/10W
	R256	QRSA08J-104YN	RESISTOR	100KΩ, 1/10W
	C1	QCXA1HJ-220	CAPACITOR	22PF, 50V
	C2	QCFA1HZ-103	CAPACITOR	0.01μF, 50V
	C3	QCXA1HJ-151	CAPACITOR	150PF, 50V
	C4	QETC1AM-226	E CAPACITOR	22μF, 10V
	C5	QCYA1HK-102	CAPACITOR	0.001μF, 50V
	C6	QCFA1HZ-103	CAPACITOR	0.01μF, 50V
	C7	QETC1EM-335	E CAPACITOR	3.3μF, 25V
	C8	QEN60JM-336	NP E CAPACITOR	33μF, 6.3V
	C9	QETC1CM-106	E CAPACITOR	10μF, 16V
	C10	QCYA1HK-102	CAPACITOR	0.001μF, 50V

#	REF No.	PART No.	PARTNAME, DESCRIPTION
C11		QCYA1HK-102	CAPACITOR 0.001 μ F, 50V
C12		QEN61HM-224	NP E CAPACITOR 0.22 μ F, 50V
	or	QENCIHM-224	NP E CAPACITOR 0.22 μ F, 50V
C13		QCSA1HJ-120	CAPACITOR 12PF, 50V
C14		QETCIEM-335	E CAPACITOR 3.3 μ F, 25V
C15		QCVCIEN-103	CAPACITOR 0.01 μ F, 16V
C16		QEN61HM-335	NP E CAPACITOR 3.3 μ F, 50V
C17		QETCOJM-337	E CAPACITOR 330 μ F, 6.3V
C18		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C19		QEN61HM-225	NP E CAPACITOR 2.2 μ F, 50V
C20		QCSA1HJ-120	CAPACITOR 12PF, 50V
C21		QETCIEM-475	E CAPACITOR 4.7 μ F, 25V
C22		QETCIEM-475	E CAPACITOR 4.7 μ F, 25V
C23		QETCOJM-476	E CAPACITOR 47 μ F, 6.3V
C24		QETCIHM-104	E CAPACITOR 0.1 μ F, 50V
C25		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C26		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C27		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C28		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C29		QETCIAM-476	E CAPACITOR 47 μ F, 10V
C201		QCSA1HJ-470	CAPACITOR 47PF, 50V
C202		QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
C203		QCSA1HJ-820	CAPACITOR 82PF, 50V
C204		QETCIHM-475	E CAPACITOR 4.7 μ F, 50V
C205		QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
C206		QFN31HJ-224	M CAPACITOR 0.22 μ F, 50V
C207		QFN31HJ-563	M CAPACITOR 0.056 μ F, 50V
C208		QETCOJM-337	E CAPACITOR 330 μ F, 6.3V
C209		QCC31CJ-223	CAPACITOR 0.22 μ F, 16V
C210		QER60JM-107	E CAPACITOR 100 μ F, 6.3V
C211		QER61CM-106	E CAPACITOR 10 μ F, 16V
C212		QETCIHM-224	E CAPACITOR 2.2 μ F, 50V
C213		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C214		QCVB1CN-103	CAPACITOR 0.01 μ F, 16V
C215		QETCIHM-474	E CAPACITOR 0.47 μ F, 50V
C218		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C219		QCC11CJ-473	CAPACITOR 0.047 μ F, 16V
C220		QCBBIHJ-121	CAPACITOR 120PF, 50V
C221		QCBBIHJ-102	CAPACITOR 0.001 μ F, 50V
C222		QCSB1HJ-150	CAPACITOR 15PF, 50V
C223		QCBBIHJ-102	CAPACITOR 0.001 μ F, 50V
C251		QETCIEM-106	E CAPACITOR 10 μ F, 16V
C252		QFN31HJ-471	M CAPACITOR 470PF, 50V
C253		QCSA1HJ-270	CAPACITOR 27PF, 50V
C254		QETCIHM-335	E CAPACITOR 3.3 μ F, 50V
C255		QCYA1HK-472	CAPACITOR 0.0047 μ F, 50V
C256		QCYA1HK-471	CAPACITOR 470PF, 50V
C257		QCSA1HJ-5R0	CAPACITOR 5PF, 50V
C258		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C259		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C260		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C261		QCSA1HJ-220	CAPACITOR 22PF, 50V
C262		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C263		QETBOJM-477	E CAPACITOR 470 μ F, 6.3V
C264		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V
C265		QCFA1HZ-103	CAPACITOR 0.01 μ F, 50V

#	REF No.	PART No.	PARTNAME, DESCRIPTION
L1		PU59152-121J	COIL 120 μ H
L2		PU59152-680J	COIL 68 μ H
L3		PU48530-101K	COIL 100 μ H
L4		PU59152-R22J	COIL 0.22 μ H
L5		PU59152-101J	COIL 100 μ H
L6		PU59152-R22J	COIL 0.22 μ H
L201		PU48530-271J	COIL 270 μ H
L202		PU59153-822J	COIL 8.1mH
L203	△	PU48530-151J	COIL 150 μ H
L205		PU59152-150J	COIL 15 μ H
L251		PU59152-330J	COIL 33 μ H
L252		PU48530-101K	COIL 100 μ H
EQ2		PU60162-2	EQUALIZER
	or	PU60162	EQUALIZER
EQ201		PU53501-11	EQUALIZER
	or	PU53501-6	EQUALIZER
LPF1		PU58021-3	LOW PASS FILTER
	or	PU60715	LOW PASS FILTER
	or	PU58021-2	LOW PASS FILTER
LPF2		PU60716	LOW PASS FILTER
LPF20		PU58022	LOW PASS FILTER
BPF201		PU60654	BAND PASS FILTER
	or	PU60654-2	BAND PASS FILTER
BPF202		PU60713	BAND PASS FILTER
CF201		PU57073	CERAMIC FILTER
DL201		PU60340-2	COMB FILTER (2H DELAY LINE)
	or	PU60490	COMB FILTER
	or	PU58971-3	COMB FILTER
LC251		PU60655	COIL, SECAM DET
△ X201		PU60653	CRYSTAL UNITS
SLD1		PQ42994	SHIELD PLATE
SLD2		PQ42995	SHIELD CASE
SLD3		PQ42996	SHIELD COVER
TP21		PU56347	TEST POINT
CN1		PU60330-113	CONNECTOR
CN2		PU60330-113	CONNECTOR
CN3		PU60330-110	CONNECTOR, (TERMINAL)

4. IF BOARD ASSEMBLY <07>

PWBA	PB10242F	IF BOARD ASSEMBLY
IC1	M51365SP	IC
Q2	2SC3354	TRANSISTOR
Q3	2SC1317(RS)	TRANSISTOR
Q4	2SC1740(RS)	TRANSISTOR
	or 2SC3199(G)	TRANSISTOR
	or 2SC3311A(RS)	TRANSISTOR
	or 2SC536SPA(FG)	TRANSISTOR

#▲	REF No.	PART No.	PART NAME, DESCRIPTION	#▲	REF No.	PART No.	PART NAME, DESCRIPTION
Q5		2SC1740(RS)	TRANSISTOR	R47		NRD718J-153NYU	RESISTOR 15KΩ, 1/8W
	or	2SC3199(G)	TRANSISTOR	R48		NRD718J-392NYU	RESISTOR 3.9KΩ, 1/8W
	or	2SC3311A(RS)	TRANSISTOR	R49		NRD718J-103NYU	RESISTOR 10KΩ, 1/8W
	or	2SC536SPA(FG)	TRANSISTOR	R50		NRD718J-471NYU	RESISTOR 470Ω, 1/8W
Q6		2SA933S(RS)	TRANSISTOR	R51		NRD718J-223NYU	RESISTOR 22KΩ, 1/8W
	or	2SA1267(G)-TJK	TRANSISTOR	R52		NRD718J-223NYU	RESISTOR 22KΩ, 1/8W
	or	2SA1309AR,S	TRANSISTOR	R53		NRD718J-103NYU	RESISTOR 10KΩ, 1/8W
Q7		2SC1740(RS)	TRANSISTOR	R54		NRD718J-682NYU	RESISTOR 6.8KΩ, 1/8W
	or	2SC3199(G)	TRANSISTOR	R57		NRD718J-153NYU	RESISTOR 15KΩ, 1/8W
	or	2SC3311A(RS)	TRANSISTOR	R73		NRD718J-331NYU	RESISTOR 330Ω, 1/8W
	or	2SC536SPA(FG)	TRANSISTOR	R74		NRD718J-103NYU	RESISTOR 10KΩ, 1/8W
Q9		2SD1450S,T	TRANSISTOR	R82		NRD718J-680NYU	RESISTOR 68Ω, 1/8W
	or	2SD1468S(RSE)	TRANSISTOR	R83		NRD718J-331NYU	RESISTOR 330Ω, 1/8W
Q11		2SC1740(RS)	TRANSISTOR	R84		NRD718J-123NYU	RESISTOR 12KΩ, 1/8W
	or	2SC3199(G)K	TRANSISTOR	R85		NRD718J-123NYU	RESISTOR 12KΩ, 1/8W
	or	2SC3311A(RS)	TRANSISTOR	R86		NRD718J-331NYU	RESISTOR 330Ω, 1/8W
	or	2SC536SPA(FG)	TRANSISTOR	R87		NRD718J-222NYU	RESISTOR 2.2KΩ, 1/8W
Q14		DTC144ES	TRANSISTOR	R88		NRD718J-103NYU	RESISTOR 10KΩ, 1/8W
	or	UN4213	TRANSISTOR	R90		NRD718J-103NYU	RESISTOR 10KΩ, 1/8W
	or	2SC3399	TRANSISTOR	R95		QRD162J-470	RESISTOR 47Ω, 1/6W
				R97		NRD718J-102NYU	RESISTOR 1.0KΩ, 1/8W
D1		MTZ10B	ZENER DIODE	R101		NRD718J-152NYU	RESISTOR 1.5KΩ, 1/8W
D5		SVC321SPA-B-1	V. DIODE	R102		NRD718J-222NYU	RESISTOR 2.2KΩ, 1/8W
D6		1SS133	DIODE	R103		NRD718J-681NYU	RESISTOR 680Ω, 1/8W
D7		1SS133	DIODE	R104		QRD161J-393	RESISTOR 39KΩ, 1/6W
D8		1SS133	DIODE	R105		NRD718J-102NYU	RESISTOR 1.0KΩ, 1/8W
R1		NRD718J-750NYU	RESISTOR 75Ω, 1/8W	C5		NCB71HK-102NYR	CAPACITOR 0.001μF, 50V
R4		NRD718J-392NYU	RESISTOR 3.9KΩ, 1/8W	C6		NCX71CM-222NYR	CAPACITOR 0.0022μF, 16V
R6		NRD718J-182NYU	RESISTOR 1.8KΩ, 1/8W	C7		NCB71HK-102NYR	CAPACITOR 0.001μF, 50V
R8		NRD718J-681NYU	RESISTOR 680Ω, 1/8W	C8		NCB71HK-102NYR	CAPACITOR 0.001μF, 50V
R10		NRD718J-271NYU	RESISTOR 270Ω, 1/8W	C10		QETC1CM-336	E CAPACITOR 33μF, 16V
R11		NRD718J-820NYU	RESISTOR 82Ω, 1/8W	C11		NCY71CM-103NYR	CAPACITOR 0.01μF, 16V
R15		NRD718J-271NYU	RESISTOR 270Ω, 1/8W	C13		NCX71CM-222NYR	CAPACITOR 0.0022μF, 16V
R17		NRD718J-562NYU	RESISTOR 5.6KΩ, 1/8W	C14		FU57601-474ME	E CAPACITOR 0.47μF
R18		NRD718J-332NYU	RESISTOR 3.3KΩ, 1/8W	C15		QETC1CM-336	E CAPACITOR 33μF, 16V
R19		NRD718J-222NYU	RESISTOR 2.2KΩ, 1/8W	C16		NCX71CM-222NYR	CAPACITOR 0.0022μF, 16V
R20		NRD718J-222NYU	RESISTOR 2.2KΩ, 1/8W	C17		NCF71EZ-223NYR	CAPACITOR 0.022μF, 25V
				C19		NCY71CM-103NYR	CAPACITOR 0.01μF, 16V
R21		QVZ3518-472	V RESISTOR, RF AGC 4.7KΩ	C20		NCY71CM-103NYR	CAPACITOR 0.01μF, 16V
	or	QVZ3523-472	V RESISTOR 4.7KΩ	C21		NCB71HK-101NYR	CAPACITOR 100PF, 50V
R22		NRD718J-824NYU	RESISTOR 820KΩ, 1/8W	C22		QETC1HM-105	E CAPACITOR 1.0μF, 50V
R24		NRD718J-102NYU	RESISTOR 1.0KΩ, 1/8W	C23		QCC11BK-223	CAPACITOR 0.022μF, 25V
R25		NRD718J-331NYU	RESISTOR 330Ω, 1/8W	C24		QETC1HM-105	E CAPACITOR 1.0μF, 50V
R27		NRD718J-104NYU	RESISTOR 100KΩ, 1/8W	C25		NCX71CM-222NYR	CAPACITOR 0.0022μF, 16V
R28		NRD718J-104NYU	RESISTOR 100KΩ, 1/8W	C27		QETC1HM-474	E CAPACITOR 0.47μF, 50V
R31		NRD718J-222NYU	RESISTOR 2.2KΩ, 1/8W	C28		NCS71HJ-100NYR	CAPACITOR 10PF, 50V
R32		NRD718J-103NYU	RESISTOR 10KΩ, 1/8W	C29		NCS71HJ-470NYR	CAPACITOR 47PF, 50V
R33		NRD718J-223NYU	RESISTOR 22KΩ, 1/8W	C31		QETC1HM-335	E CAPACITOR 3.3μF, 50V
R34		NRD718J-470NYU	RESISTOR 47Ω, 1/8W	C32		NCF71EZ-223NYR	CAPACITOR 0.022μF, 25V
R35		NRD718J-561NYU	RESISTOR 560Ω, 1/8W	C33		QETC1HM-474	E CAPACITOR 0.47μF, 50V
R36		NRD718J-561NYU	RESISTOR 560Ω, 1/8W	C50		QETC1CM-336	E CAPACITOR 33μF, 16V
R37		NRD718J-121NYU	RESISTOR 120Ω, 1/8W	C51		NCB71HK-101NYR	CAPACITOR 100PF, 50V
R38		NRD718J-182NYU	RESISTOR 1.8KΩ, 1/8W	C52		QETC1CM-336	E CAPACITOR 33μF, 16V
R39		NRD718J-272NYU	RESISTOR 2.7KΩ, 1/8W	C56		QETC1CM-336	E CAPACITOR 33μF, 16V
R40		QVZ3518-103	V RESISTOR, COLOR LEVEL 10KΩ	C57		QEN41CM-336	NP E CAPACITOR 33μF, 16V
	or	QVZ3523-103	V RESISTOR 10KΩ	or		QEN61CM-336	NP E CAPACITOR 33μF, 16V
R41		NRD718J-222NYU	RESISTOR 2.2KΩ, 1/8W	C58		NCS71HJ-100NYR	CAPACITOR 10PF, 50V
R45		NRD718J-471NYU	RESISTOR 470Ω, 1/8W				
R46		NRD718J-104NYU	RESISTOR 100KΩ, 1/8W				

#	REF No.	PART No.	PART NAME, DESCRIPTION
L2		PU60025-1R0	COIL 1 μ H
L3		PU60025-2R0	COIL 2 μ H
L4		PU59152-8R2J	COIL 8.2 μ H
L5		PU59152-220J	COIL 22 μ H
L6		PU59152-6R8K	COIL 6.8 μ H
L7		PU59152-R22K	COIL 0.22 μ H
L9		PU59152-6R8K	COIL 6.8 μ H
CF1		PU60774-4	CERAMIC FILTER, 6.5MHZ
CF3		PU32990-2	CERAMIC FILTER, 5.5MHZ
CF5		PU32990-4	CERAMIC FILTER, 6.5MHZ
CF6		PU60774-2	CERAMIC FILTER, 5.5MHZ
SAW1		PU35557-6	SAW FILTER
T2		PU60497	IF.TRANSFORMER, VCO 38.9MHZ
T3		PU60864	IF.TRANSFORMER, AFC 38.9MHZ
T4		PU60955	IF.TRANSFORMER, SOUND DET 5.5MHZ
T5		PU60046	IF.TRANSFORMER
JPI		PU59935-16	TERMINAL

#	REF No.	PART No.	PART NAME, DESCRIPTION
R11		QRD161J-103	RESISTOR 10K Ω , 1/6W
R12		QRD161J-333	RESISTOR 33K Ω , 1/6W
R13		QRD161J-103	RESISTOR 10K Ω , 1/6W
R14		QRD161J-103	RESISTOR 10K Ω , 1/6W
R15		QRD161J-153	RESISTOR 15K Ω , 1/6W
R16		QRD161J-154	RESISTOR 150K Ω , 1/6W
R17		QRD161J-154	RESISTOR 150K Ω , 1/6W
R18		QRD161J-394	RESISTOR 390K Ω , 1/6W
R19		QRD161J-331	RESISTOR 330K Ω , 1/6W
R20		QRD161J-333	RESISTOR 33K Ω , 1/6W
R21		QRD161J-103	RESISTOR 10K Ω , 1/6W
R22		QRD161J-103	RESISTOR 10K Ω , 1/6W
R33		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R35		QRD161J-103	RESISTOR 10K Ω , 1/6W
R36		QRD161J-103	RESISTOR 10K Ω , 1/6W
R37		QRD161J-103	RESISTOR 10K Ω , 1/6W
R38		QRD161J-103	RESISTOR 10K Ω , 1/6W
R39		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R40		QRD161J-472	RESISTOR 4.7K Ω , 1/6W
R41		QRD161J-472	RESISTOR 4.7K Ω , 1/6W

5. TUNER CONTROL BOARD ASSEMBLY <08>

PWBA PB20361C TUNER CTL. BOARD ASSEMBLY

#	REF No.	PART No.	PART NAME, DESCRIPTION
TNR1		PERF0019	TUNER
IC1		ANI358	IC
	or	M5223P	IC
IC2		CAT93C46P	IC
Q2		2SD1863(QR)	TRANSISTOR
	or	2SC3243D,E	TRANSISTOR
Q3		2SB810H,J	TRANSISTOR
Q4		DTC144ES	TRANSISTOR
	or	UN4213	TRANSISTOR
	or	2SC3399	TRANSISTOR
Q5		2SC1740(S)	TRANSISTOR
	or	2SC3311A(S)	TRANSISTOR
	or	2SC536SPA(G)	TRANSISTOR
Q7		UN4319VI	TRANSISTOR
Q8		UN4319VI	TRANSISTOR
Q9		UN4319VI	TRANSISTOR
D1		HZT33-02	ZENER DIODE
D2		E-103	DIODE
D3		RD5.6ES-T181	ZENER DIODE
	or	MTZ5.6A	ZENER DIODE
D4		1SS133	DIODE
D5		1SS133	DIODE
R1		QRD161J-103	RESISTOR 10K Ω , 1/6W
R2		QRD161J-104	RESISTOR 100K Ω , 1/6W
R7		QRD161J-102	RESISTOR 1.0K Ω , 1/6W
R8		QRD161J-153	RESISTOR 15K Ω , 1/6W
R9		QRD161J-182	RESISTOR 1.8K Ω , 1/6W
R10		QRD161J-103	RESISTOR 10K Ω , 1/6W

C1		QETC10M-336	E CAPACITOR 33 μ F, 16V
C2		QEK61HM-225	E CAPACITOR 2.2 μ F, 50V
C3		QETC1HM-105	E CAPACITOR 1.0 μ F, 50V
C12		QCSB1HK-102	CAPACITOR 0.001 μ F, 50V
C13		QETC10M-336	E CAPACITOR 33 μ F, 16V
C14		QETC10M-336	E CAPACITOR 33 μ F, 16V
C15		QETC10M-107	E CAPACITOR 100 μ F, 16V
C16		QETC10M-106	E CAPACITOR 10 μ F, 16V
C17		QCSB1HJ-100	CAPACITOR 10PF, 50V
C18		QFV71HJ-153	TF CAPACITOR 0.015 μ F, 50V
C19		QFV71HJ-333	TF CAPACITOR 0.033 μ F, 50V
C20		QFV71HJ-153	TF CAPACITOR 0.015 μ F, 50V

C21		QFV71HJ-333	TF CAPACITOR 0.033 μ F, 50V
C22		QCVB10M-103	CAPACITOR 0.01 μ F, 16V
C23		QETC1HM-106	E CAPACITOR 10 μ F, 50V
C27		QETC10M-106	E CAPACITOR 10 μ F, 16V
C28		QEK61HM-474	E CAPACITOR 0.47 μ F, 50V
C30		QETC10M-106	E CAPACITOR 10 μ F, 16V
C31		QETC10M-106	E CAPACITOR 10 μ F, 16V
C32		QETC10M-106	E CAPACITOR 10 μ F, 16V

L1		PU59152-R22K	COIL 0.22 μ H
L2		PU59152-6R8J	COIL 6.8 μ H
	or	PU59152-6R8K	COIL 6.8 μ H
L5		PU59152-100J	COIL 10 μ H
L7		PU59152-2R7K	COIL 2.7 μ H

HD1 PU36416-1-3 HOLDER

CN1 PU58844-7 CAP HOUSING
CN2 PU58844-12 CAP HOUSING

△ CPI ICP-F10 CIRCUIT PROTECTOR

Δ REF No. PART No. PART NAME, DESCRIPTION

6. AUDIO CONTROL HEAD BOARD <12>

PWB1	PB40068	AUDIO CONTROL HEAD BOARD
CN1	PU58844-107	CAP HOUSING

7. TIMER/DISPLAY/SW BOARD ASSY <21>

PWBA	PB10352J	TIMER/DISPLAY/SW BOARD ASSY
------	----------	-----------------------------

IC1	UPD75216ACW-B04 IC		
	or UPD75P216ACWB04 IC		
IC2	IC--PST523H-2 IC		
IC101	GPIU541X	INFRARED RAYS UNIT	
	or GPIU521	INFRARED RAYS UNIT	
	or GPIU521X	INFRARED RAYS UNIT	
Q1	2SC3199(G)-TJK	TRANSISTOR	
	or 2SC3311A(RS)	TRANSISTOR	
D1	RD9.1ES-T1B2	ZENER DIODE	
D2	1SS133	DIODE	
D3	1SS133	DIODE	
D4	11ES2	DIODE	
D5	11ES2	DIODE	
D6	11ES2	DIODE	
	or ERA15-02	DIODE	
D101	SLH-56VC3F	LE DIODE, POWER	
D102	SLH-34MC3F	LE DIODE, PLAY	
D103	SLH-34DC3F	LE DIODE, PAUSE	
D104	SLH-34VC3F	LE DIODE, REC	
D105	SLH-34MC3F	LE DIODE, AUTO TRACK	
D111	1SS132	DIODE	
D112	1SS132	DIODE	
D115	1SS132	DIODE	
D116	1SS132	DIODE	
D117	1SS132	DIODE	
D118	1SS132	DIODE	
D123	1SS132	DIODE	
D124	1SS132	DIODE	
D129	1SS132	DIODE	
D140	1SS132	DIODE	
R1	QRD161J-103	RESISTOR	10K Ω , 1/6W
R2	QRD161J-472	RESISTOR	4.7K Ω , 1/6W
R3	QRD161J-273	RESISTOR	27K Ω , 1/6W
R4	QRD161J-882	RESISTOR	8.8K Ω , 1/6W
R5	QRD161J-333	RESISTOR	33K Ω , 1/6W
R6	QRD161J-333	RESISTOR	33K Ω , 1/6W
R7	QRD162J-102	RESISTOR	1.0K Ω , 1/6W
R8	QRD161J-103	RESISTOR	10K Ω , 1/6W
R9	QRD161J-103	RESISTOR	10K Ω , 1/6W
R10	QRD161J-103	RESISTOR	10K Ω , 1/6W

Δ REF No. PART No. PART NAME, DESCRIPTION

R11	QRD161J-103	RESISTOR	10K Ω , 1/6W
R12	QRD161J-333	RESISTOR	33K Ω , 1/6W
R13	QRD161J-271	RESISTOR	270 Ω , 1/6W
R14	QRD161J-271	RESISTOR	270 Ω , 1/6W
R15	QRD161J-103	RESISTOR	10K Ω , 1/6W
R16	QRD161J-103	RESISTOR	10K Ω , 1/6W
R17	QRD161J-472	RESISTOR	4.7K Ω , 1/6W
R25	QRD161J-103	RESISTOR	10K Ω , 1/6W
R26	QRD161J-103	RESISTOR	10K Ω , 1/6W
R30	QRD161J-224	RESISTOR	220K Ω , 1/6W
R31	QRD161J-151	RESISTOR	150 Ω , 1/6W
R32	QRD161J-271	RESISTOR	270 Ω , 1/6W
R33	QRD161J-271	RESISTOR	270 Ω , 1/6W

R101	QRD161J-271	RESISTOR	270 Ω , 1/6W
R102	QRD161J-271	RESISTOR	270 Ω , 1/6W
R103	QRD161J-271	RESISTOR	270 Ω , 1/6W
R104	QRD161J-271	RESISTOR	270 Ω , 1/6W
R105	QRD161J-271	RESISTOR	270 Ω , 1/6W

RA1	QRB047J-333	RESISTOR ARRAY	
	or QRB049J-333	RESISTOR ARRAY	
RA2	QRB077J-104	RESISTOR ARRAY	
	or QRB079J-104	RESISTOR ARRAY	

C3	QCVC1CN-103	CAPACITOR	0.01 μ F, 16V
C4	QER61CM-106	E CAPACITOR	10 μ F, 16V
C5	QEA40HZ-105	E CAPACITOR	1F, 5.5V
C6	QAT3123-200	TRIMMER CAP, TIMER CLOCK	20PF
C7	QCSB1HJ-120	CAPACITOR	12PF, 50V
C11	QER61CM-106	E CAPACITOR	10 μ F, 16V
C13	QCVB1CN-103	CAPACITOR	0.01 μ F, 16V
C14	QER61HM-106	E CAPACITOR	10 μ F, 50V
C15	QCBB1HJ-101	CAPACITOR	100PF, 50V
C16	QCBB1HJ-101	CAPACITOR	100PF, 50V
C17	QCF11HP-473	CAPACITOR	0.047 μ F, 50V
C18	QER61CM-106	E CAPACITOR	10 μ F, 16V
C19	QER61CM-106	E CAPACITOR	10 μ F, 16V
C21	QCCH1EJ-473	CAPACITOR	0.47 μ F, 25V

Δ X1 PU60226-4 CRYSTAL RESONATOR

S1	PU60392-1-2Z	TACT SW, POWER
S2	PU60392-2-2	TACT SW, STOP/EJECT
S3	PU60392-2-2	TACT SW, FF/SEARCH+
S4	PU60392-2-2	TACT SW, REW/SEARCH-
S6	PU60392-1-2Z	TACT SW, REC/ITR
S7	PU60392-2-2	TACT SW, PLAY/X2
S8	PU60392-1-2Z	TACT SW, PAUSE
S18	PU60392-2-2	TACT SW, ADJ/PROG/CH PLUS
S19	PU60392-2-2	TACT SW, ITR (START)

S21	PU60392-2-2	TACT SW, CANCEL/SKIP/RESET
S22	PU60392-2-2	TACT SW, REPEAT/STORE/C. MEM
S23	PU60392-2-2	TACT SW, SELECT/SUMMER TIME
S24	PU60392-2-2	TACT SW, TIMER
S25	PU60392-2-2	TACT SW, SET +/-TRACK +
S26	PU60392-2-2	TACT SW, SET +/-TRACK -
S28	PU60392-2-2	TACT SW, DISPLAY OFF
S30	PU60392-2-2	TACT SW, CH SET
S32	PU60392-2-2	TACT SW, CNT/REM/DATE

#	REF No.	PART No.	PART NAME, DESCRIPTION
	S49	PU60392-2-2Z	TACT SW, CH +
	S50	PU60392-2-2Z	TACT SW, CH -
	S403	PU58486-1-1	SLIDE SW, AFC
	S405	PU58487-1-1	SLIDE SW, REPEAT
△	FDP1	FEDP0008-04	FLUORESCENT DISPLAY PANEL
	CL1	PU56729-2	WIRE CLAMP
	HD1	PQ31331-1-1	FDP HOLDER (R)
	HD2	PQ31330-1-1	FDP HOLDER (L)
	HD3	PQM30038-2-2	LED HOLDER, X4
	HD4	PQ40795-2-2	LED HOLDER, FOR D101
	TP1	PU56008	TEST-PIN
	CN1	PU58844-104	CAP HOUSING
	CN2	PU59555-7	CAP HOUSING
△	CP1	ICP-F10	CIRCUIT PROTECTOR

8. UPPER DRUM BOARD <41>

PWB1 PDM3017 BOARD (UPPER DRUM)

9. PRE/REC AMP BOARD ASSEMBLY <43>

PWBA PB10257J PRE/REC BOARD ASSEMBLY

IC1	AN3380K	IC
	or AN3380NK	IC
Q1	2SA1309R, S	TRANSISTOR
Q2	2SC1740S(RS)	TRANSISTOR
	or 2SC3199(GB)-TJK	TRANSISTOR
Q3	2SC1740S(RS)	TRANSISTOR
	or 2SC3199(GB)-TJK	TRANSISTOR
Q4	2SC1740S(RS)	TRANSISTOR
	or 2SC3199(GB)-TJK	TRANSISTOR
Q5	DTC144WS	TRANSISTOR

R1	QRD161J-102	RESISTOR	1.0KΩ, 1/6W
R2	QRD161J-222	RESISTOR	2.2KΩ, 1/6W
R3	QRD161J-222	RESISTOR	2.2KΩ, 1/6W
R4	QRD161J-391	RESISTOR	390Ω, 1/6W
R5	QRD161J-391	RESISTOR	390Ω, 1/6W
R6	QRD161J-821	RESISTOR	820Ω, 1/6W
R7	QRD161J-222	RESISTOR	2.2KΩ, 1/6W
R8	QRD161J-222	RESISTOR	2.2KΩ, 1/6W
R9	QRD161J-102	RESISTOR	1.0KΩ, 1/6W
R10	QRD161J-122	RESISTOR	1.2KΩ, 1/6W

#	REF No.	PART No.	PART NAME, DESCRIPTION
	R11	QRD161J-561	RESISTOR 560Ω, 1/6W
	R12	QRD161J-821	RESISTOR 820Ω, 1/6W
	R13	QRD161J-122	RESISTOR 1.2KΩ, 1/6W
	R14	QRD161J-332	RESISTOR 3.3KΩ, 1/6W
	R15	QRD161J-103	RESISTOR 10KΩ, 1/6W
	R16	QRD161J-562	RESISTOR 5.6KΩ, 1/6W
	R17	QRD161J-153	RESISTOR 15KΩ, 1/6W
	R19	QRD161J-561	RESISTOR 560Ω, 1/6W
	R20	QRD161J-391	RESISTOR 390Ω, 1/6W
	R21	QRD161J-151	RESISTOR 150Ω, 1/6W
	R22	QRD161J-151	RESISTOR 150Ω, 1/6W
	R23	QRV144F-3742AY	RESISTOR 370KΩ, 1/4W
	R24	QRD161J-560	RESISTOR 56Ω, 1/6W

C1	QER61CM-476	E CAPACITOR	47μF, 16V
C2	QCVB1CN-103	CAPACITOR	0.01μF, 16V
C3	QCB81HJ-121	CAPACITOR	120PF, 50V
C4	QCVB1CN-103	CAPACITOR	0.01μF, 16V
C5	QCSB1HJ-270	CAPACITOR	27PF, 50V
C6	QCSB1HK-3R9	CAPACITOR	3.9PF, 50V
C7	QCVB1CN-103	CAPACITOR	0.01μF, 16V
C8	QCSB1HJ-360	CAPACITOR	36PF, 50V
C9	QCSB1HJ-120	CAPACITOR	12PF, 50V

C11	QCVB1CN-103	CAPACITOR	0.01μF, 16V
C12	QFV41HJ-104	TF CAPACITOR	0.1μF, 50V
C13	QER51CM-476	E CAPACITOR	47μF, 16V
C14	QEE41AM-335	TANTAL CAPACITOR	3.3μF, 10V
C15	QCSB1HJ-680	CAPACITOR	68PF, 50V
C16	QCVB1CN-103	CAPACITOR	0.01μF, 16V
C17	QFV41HJ-104	TF CAPACITOR	0.1μF, 50V
C18	QER61CM-106	E CAPACITOR	10μF, 16V
C19	QCB81HJ-820	CAPACITOR	82PF, 50V
C20	QCB81HJ-820	CAPACITOR	82PF, 50V
C21	QER61CM-106	E CAPACITOR	10μF, 16V
C22	QCVB1CN-103	CAPACITOR	0.01μF, 16V
C23	QEE40JM-685	TANTAL CAPACITOR	6.8μF, 6.3V

L1	PU48530-101J	COIL	100μH
L2	PU59988-680J	COIL	68μH
L3	PU59988-470J	COIL	47μH
L4	PU59988-330J	COIL	33μH
L5	PU59988-390J	COIL	39μH
L6	PU48530-101J	COIL	100μH
L7	PU59988-150J	COIL	15μH
L8	PU59988-6R8J	COIL	6.8μH
L9	PU59988-120J	COIL	12μH

SLD1 PQ32216-1-1 SHIELD CASE(1)

CN1	PU58844-106	CAP HOUSING
CN2	PU59555-104	CAP HOUSING
CN3	PU59973-4	CAP HOUSING

Δ REF No. PART No. PART NAME, DESCRIPTION

Δ REF NO. PART NO. PART NAME, DESCRIPTION

10. DECK TERMINAL BOARD ASSEMBLY <51>

PWBA	PB10320A-02	DECK TERMINAL BOARD ASSEMBLY	
Q1	FU60625	END SENSOR	
R1	QRD161J-202	RESISTOR	2.0K Ω , 1/6W
R3	QRD161J-331	RESISTOR	330 Ω , 1/6W
R4	QRD161J-331	RESISTOR	330 Ω , 1/6W
R5	QRD161J-331	RESISTOR	330 Ω , 1/6W
R7	QRD161J-202	RESISTOR	2.0K Ω , 1/6W
R8	NTH5D473KB	THERMISTOR	
	or ERT-D2ZHK473S	MEGA THERMISTOR	
C1	QCVB1CM-103	CAPACITOR	0.01 μ F, 16V
PS1	PS5705HR	PHOTO INTERRUPTER	
PS2	PS5705HR	PHOTO INTERRUPTER	
CN1	PEMC0722-017	WIRE TRAP	
	or PEMC0753-017	WIRE TRAP	
CN2	FU60642	CONNECTOR, (7 PIN)	
CN3	FU60640	CONNECTOR, (4 PIN)	

11. LOADING MDA BOARD ASSEMBLY <55>

PWBA2	PB10320A2-01	LOADING MDA BOARD ASSY	
Δ IC1	BA6418N	IC	
Δ	or XRA6418N	IC	
C1	QETA1CM-336	E CAPACITOR	33 μ F, 16V
CN1	FU59555-104	CAP HOUSING	

12. CASSETTE HOUSING BOARD <56>

PWB1	PB40041-01-01	CASSETTE HOUSING BOARD	
Q2	PN268VI-NC	PHOTO TRANSISTOR	
C1	QCC11EJ-103	CAPACITO	0.01 μ F, 25V
PHS3	FU60629	CASSETTE SENSOR	
CN2	FU60639	CONNECTOR (4P)	

SECTION 6 TECHNICAL INFORMATIONS

6.1 CIRCUIT CONTROL SYSTEM

1. IC601 pin function (Mechacon)


Pin No.	Symbol	I/O format	Label	I/O	Contents	
1	Port 6	C-MOS	LCM1	0	LOADING MOTOR DRIVE	
2			LCM2			
3			DRUM CTL			
4			CAP CTL			
5	Port 4	N-ch OPEN DRAIN	FM DET	1	AVERAGE FM (AUTO TRACKING DATA) THERMIC CORRECTION	
6			THERM			
7			MODE SENS 1			
8			MODE SENS 2			
9			MODE SENS 3			
10	Port 3		CLK	1	TM (TIMER/M-CTL CPU) bus Data : CLOCK DATA : 16 bit	
11			DATA	I/O		
12			REC SF	1		REC SAFETY SW ON: L
13			CAP REV	0		CAPSTAN MOTOR REV MODE: L
14			SERVO	0		CAPSTAN MOTOR SERVO
15			CAP FG	1		MODE DETECT, BACK SPACE COUNT, TAPE REMAIN
16			CTL PULSE	1		MODE DETECT, BLANK DETECT
17	Port 5	C-MOS	PWM	0	TUNING DATA OUTPUT	
18			PAUSE	0	CAPSTAN MOTOR SERVO (CAPSTAN BRAKE)	
19			NC	-	NC	
20			V PULSE	0	V PULSE OUTPUT (V JITTER CORRECTION)	
21			DFF	1	DRUM ROTATION DETECT/REC TIMING CONTROL (HEAD SW)	
22	CN Vss		CN Vss	1	GND (ALWAYS GND)	
23	RESET		RESET	1	RESET AT CONNECT VCR TO AC	
24	X IN		X IN	1	MAIN SYSTEM CLOCK (8 MHz)	
25	X OUT		X OUT	0		
26	Vss		Vss	-	GND	
27	Port 5	C-MOS	START SENS	1	START SENSOR, LEADER TAPE DETECT (DET ON: L)	
28			TU FG	1	REEL ROTATION DETECT, TAPE REMAIN	
29			SP FG	1		
30	Port 1	N-ch OPEN DRAIN	R. PAUSE	1	REMOTE PAUSE (PAUSE ON: L)	
31			CASS	1	CASSETTE SENSOR (CASS IN: )	
32			AUX	0	AUX MODE: L	
33			END SENS	1	END SENSOR, TRAILER TAPE DETECT (DET ON: L)	
34			REC START	0	REC START: L	
35			REC	0	REC MODE: L	
36	Port 0		EE	0	EE MODE: L	
37			P CTL		POWER CONTROL (PWR ON: L)	
38			P MUTE		PICTURE MUTE CONTROL (MUTE ON: L)	
39			SP		SP MODE: L (NOT USED)	
40			SYNC DET		1	SYNC DETECT (No signal: H)/PICTURE MUTE CONTROL
41			AFC DET			AFC CONTROL (ON/OFF)
42			TEXT		0	TEXT MODE: L
43	A MUTE		AUDIO MUTE CONTROL (MUTE ON: H)			
44	Port 2	C-MOS	V UP	0	MOTOR DRIVE VOLTAGE CONTROL (Norm: L)	
45			EXP DATA		12 bit Serial data (TNR BAND SELECT)	
46			TNR CTL		TUNER CTL (ON: H)	
47			M CE		0	MEMORY IC CHIP ENABLE
48			M DATA		I/O	MEMORY DATA WRITE/READ
49			S/M/P CLK		0	CLOCK
50			S. DATA		0	SERVO IC CONTROL DATA
51			INDEX		I/O	INDEX DATA WRITE/READ (ON: L)
52	Vcc		Vcc	1	for the SYSTEM CONTROL	

Table 6-1 IC601 pin functions

2. IC1 pin function (Timer)

Pin No.	Symbol	Label	I/O	Contents
1	S3	Sd		
2	S2	Sc		
3	S1	Sb	0	SEGMENT DISPLAY DATA /KEY SCAN PULSE OUTPUT
4	S0	Sa		/KEY SCAN PULSE OUTPUT
5	P00/INT4	POWER DOWN	I	POWER DOWN DETECT (DETECT ON: L)
6	P01/SCK	NC	-	NC
7	P02/SD	NC		
8	P03/SI	TEST	I	TEST POINT (CLOCK ADJUST/FDP CHECK/X10 SPEED set)
9	P10/INT0	REMOTE	I	REMOTE DATA 16 bit SERIAL DATA (A/B code)
10	P11/INT1	NC	-	NC
11	P12/INT2	NC		
12	P13/T10	CNT PLS	I	COUNTER DATA
13	P20	KS0		
14	P21	KS1	I	KEY SCAN DATA INPUT
15	P22	KS2		
16	P23/BUZ	KS3		
17	P30	TIMER DATA	I/O	TM (TIMER/M-CTL CPU) bus : 16 bit DATA
18	P31	TIMER CLK	0	: CLOCK
19	P32	SDA	I/O	VIDEO PROGRAMING SYSTEM: I ² C Bus
20	P33	SCL	0	VIDEO PROGRAMING SYSTEM: CLOCK
21	P60	NC		
22	P61	NC	-	NC
23	P62	NC		
24	P63	NC		
25	P40	POWER		
26	P41	PLAY	0	LED DRIVE (LED ON: L)
27	P42	PAUSE		
28	P43	REC		
29	PP0	NC	-	NC
30	X1	X1	I	
31	X2	X2	0	MAIN SYSTEM CLOCK (4.19 MHz)
32	Vss	Vss	-	GND
33	XT1	XT1	I	GND (ALWAYS GND)
34	XT2	NC		
35	P50	NC	-	NC
36	P51	NC		
37	P52	AUTO TRACK	0	LED DRIVE (LED ON: L)
38	P53	NC	-	NC
39	RESET	RESET	I	RESET AT CONNECT VCR TO AC
40	T0	4G		
41	T1	5G		
42	T2	6G		
43	T3	7G		
44	T4	1G	0	COLUMN DISPLAY DATA
45	T5	2G		
46	T6	3G		
47	T7	8G		
48	T8	9G		
49	T9	10G	-	NC
50	T10/S15/PH3	SP		
51	T11/S14/PH2	So		
52	T12/S13/PH1	Sn	0	SEGMENT DISPLAY DATA /KEY SCAN PULSE OUTPUT
53	T13/S12/PH0	Sm		/KEY SCAN PULSE OUTPUT
54	T14/S11	SI		
55	T15/S10	Sk		
56	V _{LOAD}	V _{LOAD}	I	-30V For the FDP DRIVE
57	V _{PRE}	V _{PRE}		-5V
58	S9	Sj		
59	S8	Si		
60	S7	Sh	0	/KEY SCAN PULSE OUTPUT
61	S6	Sg		/KEY SCAN PULSE OUTPUT
62	S6	Sf		SEGMENT DISPLAY DATA /KEY SCAN PULSE OUTPUT
63	S4	Se		/KEY SCAN PULSE OUTPUT
64	V _{DD}	V _{DD}	I	5V For the SYSTEM CONTROL

Table 6-2 IC1 pin functions