

# DENON

Hi-Fi Personal Component System

## SERVICE MANUAL

Europe Model


### PERSONAL COMPONENT SYSTEM

UNIT No. UPO-250 (Power Amplifier)

UNIT No. UTP-250 (MW, LW, FM Tuner/Pre Amplifier)

UNIT No. UDRW-250 (Cassette Tape Deck)

UNIT No. UCD-250 (Compact Disc Player)

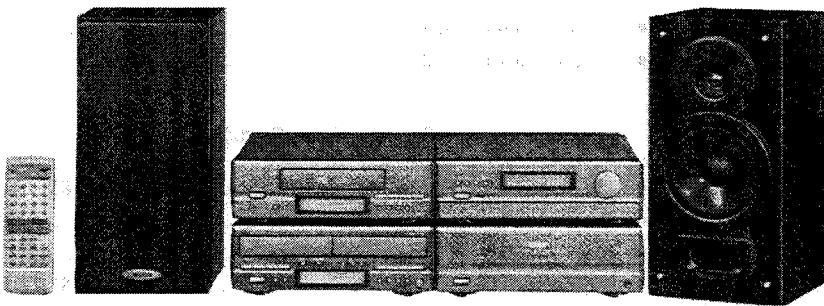

COMPACT  
disc  
DIGITAL AUDIO

• The D-250 Personal Component System consists of the following:

Power Amplifier	UPO-250
MW, LW, FM Tuner / Pre Amplifier Section	UTP-250
Remote Control Unit	RC-154
Cassette Deck Section	UDRW-250
CD player Section	UCD-250

## MAIN FEATURES

- **AM/FM 30-station random preset tuner**  
Random presetting permits easy operation and will be convenient for the increased number of FM stations in the future.
- **Independent power amplifier designed for quality sound**  
High quality 50 W per channel power amplifier with large speaker terminals.
- **New SDB control**  
The Super Dynamic Bass control circuit delivers clear bass sound.
- **Super linear converter and high performance digital filter**  
Denon's unique systems for preventing loss of CD sound quality permit excellent sound field reproduction.
- **Editing circuit**  
Automatic selection of CD tracks for minimum blank space on the tape when recording.
- **Dolby B, C and HX PRO circuits**  
For high quality sound in playback and recording.
- **CD SRS circuit**  
CDs can be recorded at the touch of a button.
- **Easy-to-use remote control unit**
- **Auto on/off function**  
This function switches on the power with just a press of the CD or cassette deck play button. The power is switched off about 10 minutes after playback has finished.

## BEFORE USING

- **Moving the system**  
To prevent short-circuiting or damage of connection cords, be sure to unplug the power cord and disconnect all connection cords before moving the system.  
In addition, always remove CDs before moving the system. If not, the CD may be scratched.
- **Before turning the power on**  
Check again that all connections are proper and that the connection cords are not damaged. Always set the power switch to the STANDBY position before disconnecting connection cords.
- Humming may be produced if the system is set near a TV set or other audio component or its connection cords. If this happens, try changing the position of the equipment and connection cords.
- Do not move the system abruptly from a cold place to a warm place, as this may cause dew (water droplets) to form in the set, preventing proper operation. If this happens, wait one hour before using the system.
- **Be sure to keep this manual**  
The illustrations used in this manual may differ from the actual system.

Check that the following parts are included in the package aside from the main unit:

① Operating Instructions .....	1
② FM Antenna .....	1
③ AM Loop Antenna .....	1
④ Remote Controller .....	1
⑤ R6P/AA batteries .....	2
⑥ System Connectors 1 & 2 .....	2
⑦ FM Antenna adaptor .....	1
⑧ Pin Plug Cords .....	4

**NIPPON COLUMBIA CO., LTD.**

**GENERAL SECTION**

**TABLE OF CONTENTS**

**General Section**

- Main Features ..... 1
- Before Using ..... 1
- Main Specifications ..... 3
- Operating Instructions ..... 4~24

**Tuner, Pre Section**

- Level Diagram ..... 25
- Block Diagram ..... 26, 27
- Assembly Procedures ..... 28, 29
- Adjustment ..... 30, 31
- Semiconductors ..... 32~34
- Microprocessor Documentation ..... 34~36
- Microprocessor Peripheral Wiring Diagram ..... 37
- Printed Wiring Board, Parts List ..... 38~41
- Wiring Diagram ..... 42
- Schematic Diagram ..... 43
- Exploded View, Parts List ..... 44
- Remote Control Unit ..... 45

**Amplifier Section**

- Disassembly Procedures ..... 46, 47
- Block Level, Diagram ..... 48
- Adjustment ..... 49
- Semiconductors ..... 49
- Printed Wiring Board, Parts List ..... 50~52
- Schematic Diagram ..... 53
- Exploded View, Parts List ..... 54, 55
- Wiring Diagram ..... 56

**CD Section**

- Disassembly Procedures ..... 57, 58
- Block Diagram ..... 59
- Laser Pickup ..... 60, 61
- Service Points ..... 62, 63
- Adjustment Method ..... 64, 65
- Printed Wiring Board, Parts List ..... 66~69
- Semiconductors ..... 70~74
- Microprocessor Peripheral Wiring Diagram ..... 75
- Wiring Diagram ..... 76
- Schematic Diagram ..... 77
- Exploded View, Parts List ..... 78
- Disassembly of CD Mechanism ..... 79

**Cassette Deck Section**

- Disassembly Procedures ..... 80, 81
- Level Diagram ..... 82
- Block Diagram ..... 82
- Adjustment ..... 83, 84
- Semiconductors ..... 84~86
- Microprocessor Documentation ..... 87, 88
- Microprocessor Peripheral Wiring Diagram ..... 89
- Printed Wiring Board, Parts List ..... 90~95
- Wiring Diagram ..... 96
- Schematic Diagram ..... 97
- Exploded View, Parts List ..... 98
- Cassette Mechanism ..... 99~104

Tuner Pre-Amp Unit	UTP-250	1S
Power Amplifier Unit	UPO-250	1S
CD Player Unit	UCD-250	1S
Cassette Deck Unit	UDRW-250	1S
Top Cushion	503 1002 001	1
Top Spacer	502 0763 018	1
Top Spacer	502 0763 034	1
Space Cushion	502 9124 001	2
(Master) Carton	501 1626 012	1
Envelope Sub Assy		1S
Envelope	505 8006 019	1
Notice Sheet	515 0601 008	1
Inst. Manual	511 2421 006	1
Loop Antenna	231 0922 009	1
Remocon (RC-154)	499 0228 008	1
FM Ant. Ass'y	395 0019 025	1
Envelope Sub Ass'y		1S
Envelope	505 9119 002	1
Output Cord Ass'y	009 9022 015	2

# SPECIFICATIONS

- **Tuner-preamplifier (UTP-250)**  
**Reception Frequency Range:** FM: 87.50 MHz to 108.00 MHz  
AM: 522 kHz to 1611 kHz (MW), 153 kHz to 279 kHz (LW)  
**Receiving Sensitivity:** FM: 1.5  $\mu$ V, 75 ohms (SN ratio 30 dB)  
AM: 20  $\mu$ V (SN ratio 20 dB, MW), 35  $\mu$ V (SN ratio 20 dB, LW)  
**FM Stereo Separation:** 40 dB (1 kHz)  
**Bass Adjustment:** 100 Hz  $\pm$ 8 dB  
**Treble Adjustment:** 10 kHz  $\pm$ 8 dB  
**Super Dynamic Bass:** 80 Hz +8 dB  
**Jacks:** PREOUT: Output jacks  
PHONO: Input jacks  
DAT: Input jacks, recording output jacks  
Processor: Processor input/output jacks  
270 (W)  $\times$  86 (H)  $\times$  330 (D) mm (10-5/8"  $\times$  3-25/64"  $\times$  13")  
3.2 kg (7 lbs 10 oz)  
**Power Supply:** AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
**Power Consumption:** 18 W
  - **Amplifier (UPO-250)**  
**Rated Output Power:** 50 W + 50 W (20 Hz to 20 kHz, 8 ohm)  
**Jacks:** 6.3 mm headphone jack  
**Dimensions (max.):** 270 (W)  $\times$  96 (H)  $\times$  330 (D) mm (10-5/8"  $\times$  3-25/32"  $\times$  13")  
**Weight:** 4.1 kg (9 lbs 1 oz)  
**Power Supply:** AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
**Power Consumption:** 140 W
  - **CD Player (UCD-250)**  
**Wow and Flutter:** Below measurable limits ( $\pm$ 0.001% W. Peak)  
**Sampling Frequency:** 44.1 kHz  
**Light Source:** Semiconductor  
**Dimensions (max.):** 270 (W)  $\times$  86 (H)  $\times$  313 (D) mm (10-5/8"  $\times$  3-25/64"  $\times$  12-21/64")  
**Weight:** 3.1 kg (6 lbs 13 oz)  
**Power Supply:** AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
**Power Consumption:** 15 W
  - **Cassette Deck (UDRW-250)**  
**Type:** Horizontal 4-track, 2-channel auto reverse stereo cassette deck  
**Heads:** 1 hard permalloy recording/playback head, 1 hard permalloy playback head,  
and 1 double-gap ferrite erase head  
**Tape Speed:** 4.75 cm/s  
**Noise Reduction Circuits:** Dolby B and C NR  
**Usable Tapes:** Normal, chrome, and metal tapes  
**Dimensions (max.):** 270 (W)  $\times$  96 (H)  $\times$  318 (D) mm (10-5/8"  $\times$  3-25/32"  $\times$  12-33/64")  
**Weight:** 4.4 kg (9 lbs 11 oz)  
**Power Supply:** AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
**Power Consumption:** 18 W
  - **Remote Control Unit (RC-154)**  
**Type:** Infrared pulse  
**Number of Buttons:** 41 (including 1 slide switch)  
**Dimensions (max.):** 60 (W)  $\times$  177 (H)  $\times$  18 (D) mm (20-23/64"  $\times$  6-31/32"  $\times$  45/64")  
**Weight:** 130 g (Approx. 6.4 oz) (including batteries)
- \* Maximum dimensions include controls, jacks, and covers. (W) = width, (H) = height, (D) = depth  
• For improvement purposes, specifications and functions are subject to change without advanced notice.




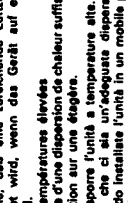



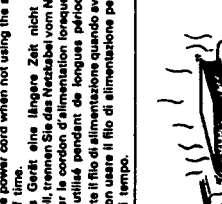
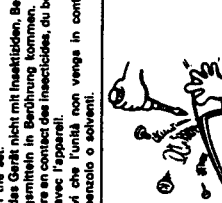
**ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSAETTELSE FOR STRÅLING.**

**VARO! AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.**

**VARNING - OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.**

GENERAL SECTION

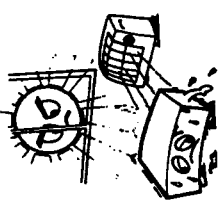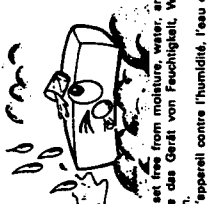NOTE ON USE/HINWEISE ZUM GEBRAUCH/OBSERVATIONS RELATIVES A L'UTILISATION/NOTE SULL'USO

 <ul style="list-style-type: none"> <li>• Avoid high temperatures</li> <li>• Allow for sufficient heat dispersion when installed on a rack.</li> <li>• Beachten Sie hohe Temperaturen</li> <li>• Stellen Sie die eine ausreichende Luftzirkulation gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.</li> <li>• Eviter des températures élevées</li> <li>• Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.</li> <li>• Evitare di esporre l'unità a temperature alte.</li> <li>• Assicurarsi che ci sia un'adeguata dispersione del calore quando si installa l'unità in un mobile per componenti audio.</li> </ul>	 <ul style="list-style-type: none"> <li>• Keep the set free from moisture, water, and dust.</li> <li>• Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.</li> <li>• Protéger l'appareil contre l'humidité, l'eau et la poussière.</li> <li>• Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let foreign objects in the set.</li> <li>• Keine fremden Gegenstände in das Gerät kommen lassen.</li> <li>• Ne pas laisser des objets étrangers dans l'appareil.</li> <li>• È importante che nessun oggetto è inserito all'interno dell'unità.</li> </ul>
 <ul style="list-style-type: none"> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Wenn das Gerät eine längere Zeit nicht verwendet werden soll, ziehen Sie das Netzkabel vom Netzstecker.</li> <li>• Débrancher le cordon d'alimentation de l'appareil n'est pas inutile pendant de longues périodes.</li> <li>• Disinnestare il filo di alimentazione quando avete finenzione di non usare il filo di alimentazione per un lungo periodo di tempo.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let insecticides, benzene, and thinner come in contact with the set.</li> <li>• Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.</li> <li>• Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.</li> <li>• Assicurarsi che l'unità non venga in contatto con insetticidi, benzolo o solventi.</li> </ul>	
 <ul style="list-style-type: none"> <li>• Handle the power cord carefully.</li> <li>• Hold the plug when unplugging the cord.</li> <li>• Gehen Sie vorsichtig mit dem Netzkabel um.</li> <li>• Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.</li> <li>• Manipuler le cordon d'alimentation avec précaution.</li> <li>• Tenir la prise lors du débranchement du cordon.</li> <li>• Maneggiare il filo di alimentazione con cura.</li> <li>• Agire per la spina quando scollegate il cavo dalla presa.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not obstruct the ventilation holes.</li> <li>• Die Belüftungsdürrungen dürfen nicht verdeckt werden.</li> <li>• Ne pas obstruer les trous d'aération.</li> <li>• Non coprire i fori di ventilazione.</li> </ul>	 <ul style="list-style-type: none"> <li>• Never disassemble or modify the set in any way.</li> <li>• Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern.</li> <li>• Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.</li> <li>• Non smontare mai, né modificare l'unità in nessun modo.</li> </ul>

SAFETY IMPORTANT

**WARNING:**  
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

(LUTP-250 only)

**IMPORTANT**  
(BRITISH MODEL ONLY)

The wires in this mains lead are coloured in accordance with the following code:

- Blue: Neutral
- Brown: Live

The colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.  
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

**CLASS 1 LASER PRODUCT**  
LASSERKABINETT  
KLASS 1 LASERAPPARAT

**ADVARSEL:** UBYNYLUG LASERSTRÅLING VED ÅBNING. NÅR SKENHEDESRØRVEDERE ER UDE AF FUNKTION, UNDGA UDSTRÆLSELSE FOR STRÅLING.

**VAROITUS:** LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEISSA MAINTULLA TAVALLA SAATTAÄÄLLÄ KÄYTTÄMINEN TUURKILISUUDUKSIAN TAVALLA EI SUOJELTAVALLA LAABERISÄTEILLE.

**VARNING:** ÖM APPARATEN ANVÄNDAS PÅ ANMÅT SÄTT AN I DENNA ANVÄNDNINGSSÄTT. LAN ANVÄNDAREN UTSÄTTAS FÖR ÖVERLIGG LASERSTRÅLNING ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.



Irregularities  
• If the system should smoke or produce strange smells, immediately set the power switch to the STANDBY position, unplug the power cord, and contact your store of purchase.

Unregelmäßigkeiten  
• Sollte das Gerät Rauch produzieren oder eigenartig riechen, stellen Sie den Netzschalter sofort auf die Position STANDBY (Bereitschaft), ziehen Sie den Netzstecker heraus und kontaktieren Sie Ihren Händler.

Anomalies  
• Si de la fumée sort de la chaîne ou des odeurs bizarres, placer l'interrupteur d'alimentation immédiatement sur la position de veille (STANDBY), débrancher le cordon d'alimentation et contacter le distributeur.


Irregolarità  
• Quotora il sistema dovesse produrre del fumo o degli odori strani, collocare immediatamente l'interruttore di accensione nella posizione STANDBY, disinnestate il filo di alimentazione e rivolgetevi al negozio dell'acquisto.

**"SERIAL NO.**  
**PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE CABINET FOR FUTURE REFERENCE"**


GENERAL SECTION

FRONT PANEL/FRONTPLATTE/PANNEAU AVANT/PANNELLO ANTERIORE


POWER AMPLIFIER  
LEISTUNGSVERSTÄRKER  
AMPLIFICATEUR DE PUISSANCE  
AMPLIFICATORE DI POTENZA

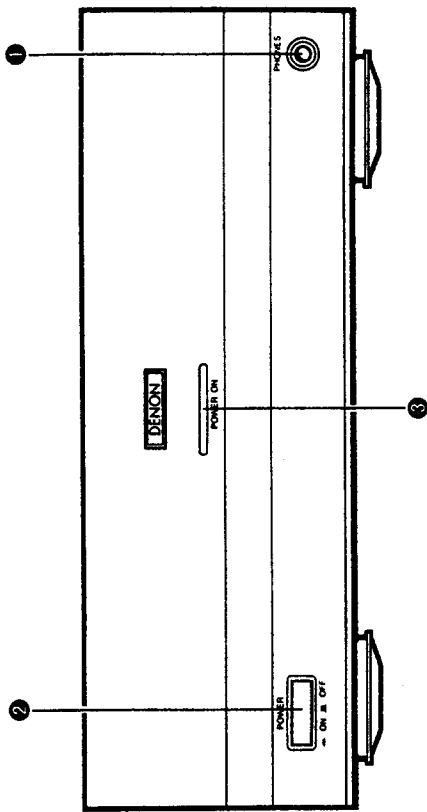


TUNER-PREAMPLIFIER  
TUNER-VORVERSTÄRKER  
TUNER-PREAMPLIFICATEUR  
SINTONIZZATORE-PREAMPLIFICATORE

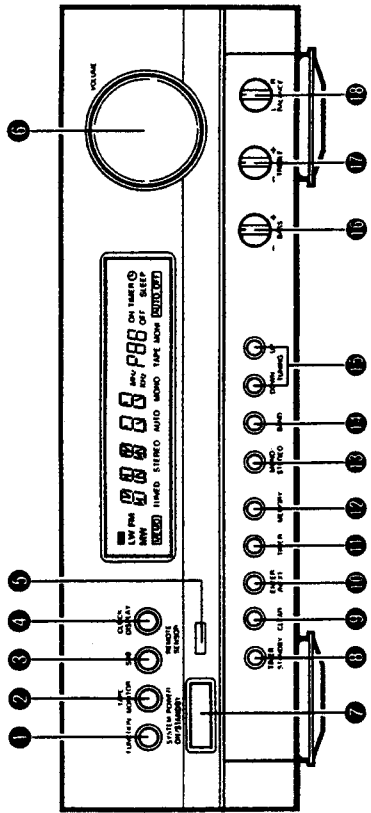

CASSETTE DECK  
CASSETTENDECK  
PLATINE CASSETTE  
PIASTRA A CASSETTE

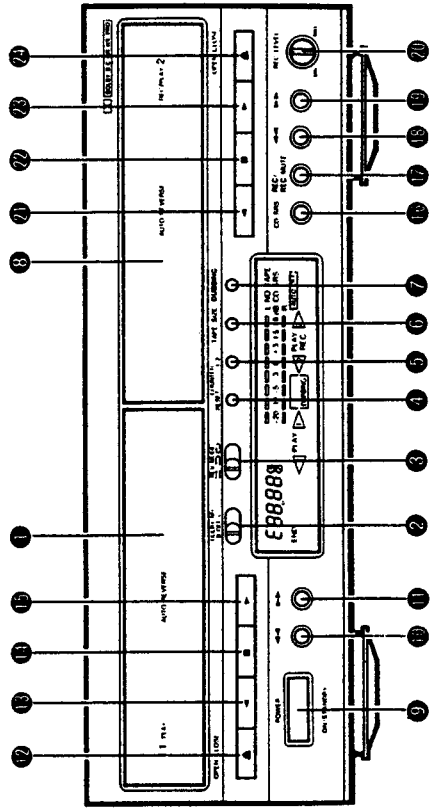

CD PLAYER  
CD-SPIELER  
LECTEUR CD  
DISPLAY DELLA PIASTRA A CASSETTE

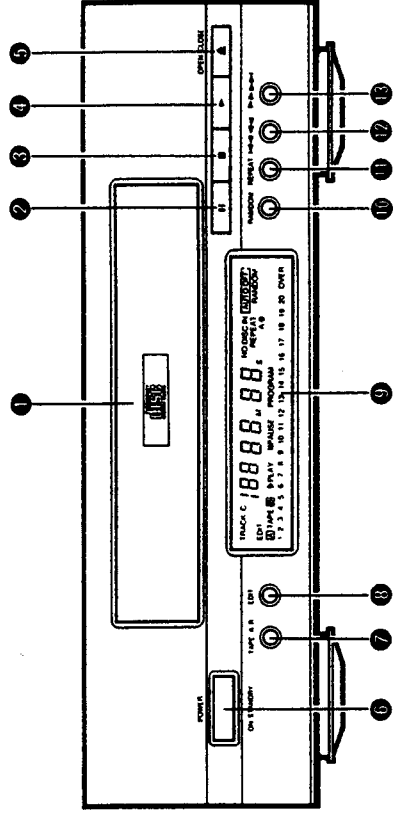


- As an aid to better understanding the operation method, the illustrations used in this manual may differ from the actual system.
- Als Hilfestellung zum besseren Verständnis der Betriebsmethode, erlauben wir uns den Hinweis, daß sich die Abbildungen in dieser Bedienungsanleitung leicht von dem aktuellen System unterscheiden.
- Pour faciliter la compréhension de la méthode de fonctionnement, les illustrations utilisées dans ce manuel peuvent être différentes de celles de la chaîne réelle.
- Per rendere la spiegazione del metodo operativo più facile, le illustrazioni usate in questo libretto delle istruzioni possono differire dal sistema stesso.

GENERAL SECTION

3 ANTENNA CONNECTIONS


Connecting the Included Antennas

**AM Loop Antenna**  
 Assemble the included AM loop antenna as shown in the diagram, separate it as far from the system as possible, and place it in a position that provides the best reception. In some cases, reception is better if the polarities of the connections are reversed. AM broadcasts will not be received well if the loop antenna is not connected or if it is connected but is located near a metal part. Attach the loop antenna even when using an outdoor AM antenna.

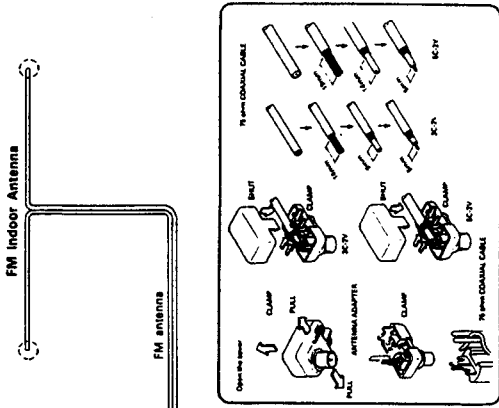


Connecting an Outdoor Antenna

Use an outdoor antenna if reception cannot be heard clearly with the included antenna. Change the location, height, and direction of the antenna to find the position of best reception, then fix the antenna in that position.

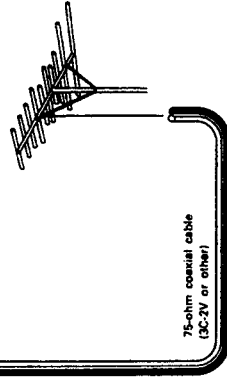

- Connect the outdoor antenna using 75-ohm coaxial cable. This will help shield the antenna from external noise.
- **Places for Installing Outdoor Antennas**
  - Install the outdoor antenna facing a broadcast station's transmission antenna.
  - When surrounded by buildings or hills, place the antenna in the location which provides best reception and try changing the direction of the antenna to obtain optimum reception.
  - Do not install the antenna under power lines.
  - It is extremely dangerous for the antenna to come into contact with a power line.
  - Install away from roads and train tracks to prevent noise from cars and trains.
  - Do not install the antenna too high, as it may be hit by lightning.

Assembling the Loop Antenna

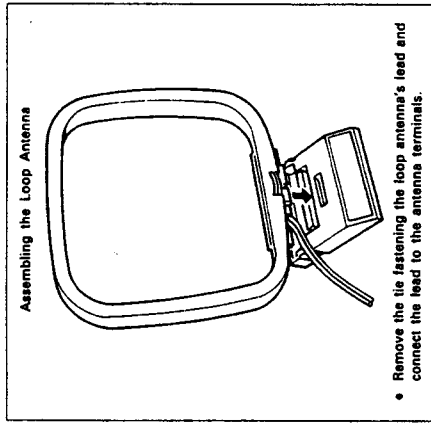

- Remove the tie fastening the loop antenna's lead and connect the lead to the antenna terminals.
- Separate the FM and AM antenna wires from the system connector wires.

CONTENTS

1 Main Features	4	(Single Side Playback, Two-Side Playback and Continuous Playback)	14, 15
2 Before Using	4	Recording Cassette Tapes	15, 16
3 Antenna Connections	4	Playing CDs	16-19
4 Connections	5	• Compact Discs	16
5 CD Player	5	• Regular Playback	17
6 Power Amplifier	6	• Other Playback Features	17-19
• Tuner-Preamplifier	6	• Edited Recording onto Slides A and B of a Tape	20
• Cassette Deck	6	• Remote Control Unit	19
• CD Player	7	• Auto On/Off Function	21
• Display	7-8	• Important Information	21
6 Listening to Radio Broadcasts	9-10	• Specifications	21
7 Using the Timer	10-13	• Troubleshooting	22
8 Cassette Deck	13, 14		
• Before Recording and Playback	13		
9 Playing Cassette Tapes			

Check that the following parts are included in the package aside from the main unit:

- 1 Operating Instructions
- 2 FM Antenna
- 3 AM Loop Antenna
- 4 Remote Controller
- 5 RBP/AA Batteries
- 6 System Connectors 1 & 2
- 7 FM Antenna Adaptor
- 8 Pin Plug Cords

1 MAIN FEATURES

- **AM/FM 30-station random preset tuner**  
 Random presetting permits easy operation and will be convenient for the increased number of FM stations in the future.
- **Independent power amplifier designed for quality sound**  
 High quality 50 W per channel power amplifier with large speaker terminals.
- **New SDB control**  
 The Super Dynamic Bass control circuit delivers clear bass sound.
- **Super linear converter and high performance digital filter**  
 Denon's unique systems for preventing loss of CD sound quality permit excellent sound field reproduction.
- **Editing circuit**  
 Automatic selection of CD tracks for minimum blank space on the tape when recording.
- **Dolby B, C and HX PRO circuits**  
 For high quality sound in playback and recording.
- **CD SRS circuit**  
 CDs can be recorded at the touch of a button.
- **Easy-to-use remote control unit**
- **Auto on/off function**  
 This function switches on the power with just a press of the CD or cassette deck play button. The power is switched off about 10 minutes after playback has finished.
- **Hum may be produced if a TV set or another audio component is set near this system or their connection cords are nearby. If this happens, try changing the position of the equipment and connection cords.**
- **Do not move the system abruptly from a cold place to a warm place, since this may cause water droplets (condensation) to form in the equipment, preventing proper operation. If this happens, wait one hour before using the system.**

2 BEFORE USING

- **Note the following points before using the D-250.**
- **Moving the system**  
 To prevent short-circuiting or damage of the connection cords, be sure to unplug the power cord and disconnect all connection cords before moving the system.
- **In addition, always remove CDs before moving the system.**  
 Failing to do so may result in scratched CDs.
- **Before switching on the power**  
 Check again that all connections are proper and that the connection cords are not damaged. Be sure to disconnect the power plug before disconnecting or connecting the connection cords.

GENERAL SECTION

4 CONNECTIONS


**AC OUTLET**  
Always connect the amplifier's (UPO-250) power cord to this AC outlet.

- **SWITCHED** (total capacity of 370 W)  
The power of this outlet is switched on and off with the tuner's power switch.
- **UNSWITCHED** (total capacity - 110W)  
The power is supplied to these outlets regardless of whether or not the tuner's power switch is turned on or off.


Plug the power cords of the CD player and cassette deck into these outlets.

**MONO OUT jack**  
Jack for connecting a subwoofer (super woofer) with built-in amplifier.

Power plug  
AC 230 V 50 Hz  
AC 240 V 50 Hz (for U.K. model)  
(Plug into a power outlet)

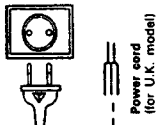


These jacks are for connecting the exclusive surround processor. For instructions on connections, refer to the surround processor's manual.

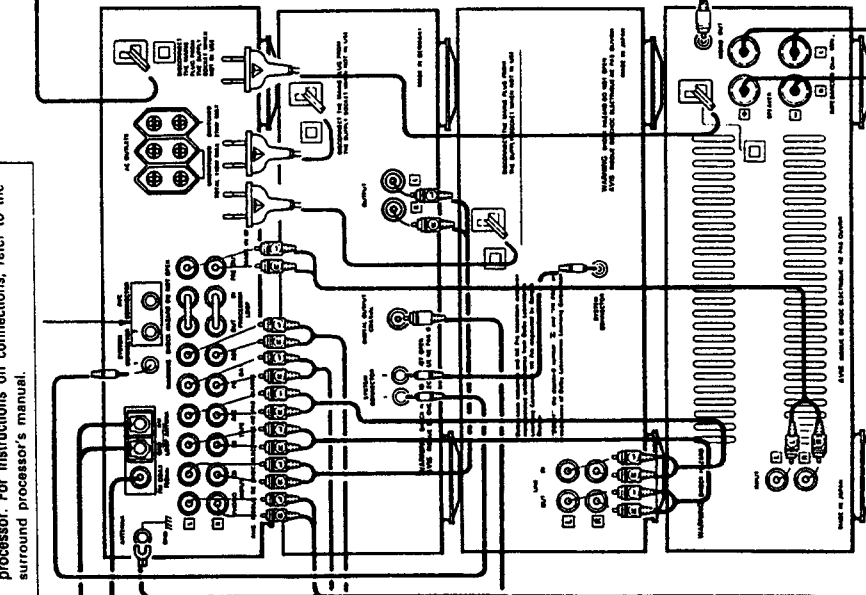

Keep the FM and AM antenna wires away from the system connector wires to prevent noise from entering the antennas.

FM antenna  
Refer to Page 4.

AM loop antenna

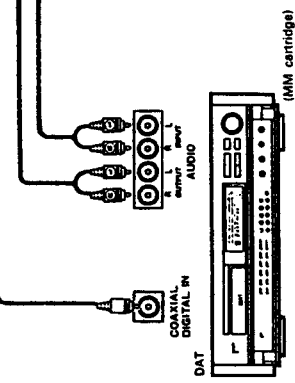


Record Player (Option)


- Do not plug the power cord into the outlet until all connections have been completed. Connect properly, as illustrated in the diagram.
- Check the left and right channels, then properly connect the left speaker's terminals to the amplifier's L terminals and the right speaker's terminals to the amplifier's R terminals.
- Insert the plugs securely. Incomplete connections can cause noise.
- When the power cord has been disconnected from the power outlet, wait about 5 seconds before plugging it back in.
- Use the AC OUTLET to plug in the amplifier CD and Cassette deck. Never use it for other appliances, such as hair driers, etc.
- Note that grouping connection cords (pin-plug cords) together with power cords or setting them near power transformers can cause hum or other noise.
- Note that if the input jacks selected with the FUNCTION button are open (if a component is not connected), there might be leakage of the reproduced sound of a component connected to another set of input jacks.

**NOTE:**  
This system includes digital circuitry which may interfere with the colors on a TV. Should this occur, switch off the power of the unused component(s).

USC-250  
(Left channel)  
(Right channel)

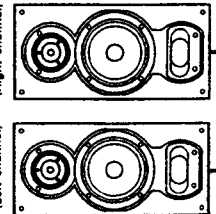

**Speaker system connections**  
Connect the speaker system for the left channel (the left side as seen from the front) to the L terminals, and the speaker system for the right channel to the R terminals.

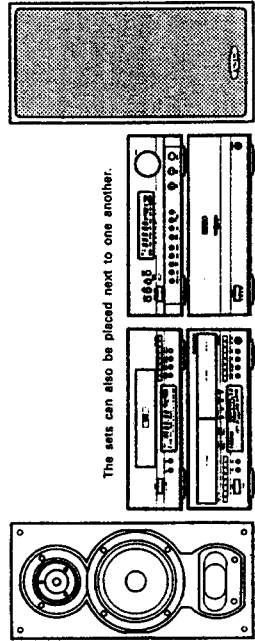

The sets can also be placed next to one another.

**NOTE:**  
System operation is not possible and the power cannot be turned on and off unless all system connector cords and pin-plug cords are connected.

GENERAL SECTION

5 PART NAMES AND FUNCTIONS

POWER AMPLIFIER

- 1 **PHONES jack**  
When using headphones, plug them in here. The sound from the speakers is cut when headphones are plugged in.
- 2 **POWER switch**  
When pressed once, the power is switched on and the power indicator LED lights up. This switch is usually left on.

TUNER-PREAMPLIFIER

- 1 **FUNCTION button**  
Use this to select the program source. The selection changes in the order of TUNER, TAPE, CD, PHONO, and DAT.
- 2 **TAPE MONITOR button**  
Use this to listen to the sound of the tape. When used with a 3-head tape deck, the sound can be monitored while recording.
- 3 **SDB (Super Dynamic Bass) button**  
Press this button for more powerful bass sound.
- 4 **CLOCK/DISPLAY button**  
This button switches the display to the reception frequency or the function display and time display.
- 5 **Remote control sensor**  
The remote control unit is pointed toward this sensor and operated.
- 6 **VOLUME control**  
This control adjusts the overall volume. Turn clockwise (☺) to increase the volume, counterclockwise (☹) to decrease it.
- 7 **SYSTEM POWER button**  
(This switch can switch on the power for the entire system.) Press to switch the power on, press again to put the system into standby.
- 8 **TIMER STANDBY button**  
Press this button to cause the timer to operate at the set time. When the timer has been set, pressing this button will light up the display's timer standby indicator (☺), and pressing it again will switch off the standby indicator. The timer will not function when the standby indicator is off.
- 9 **CLEAR button**  
This button is used to change the current time setting or the contents of the set timer.
- 10 **Power indicator LED**  
This LED will flash for about 5 seconds until the speaker relay goes on, then it will light steadily. The LED will also flash when the protection circuit is activated. Should this occur, switch the power off, check the speaker connections, then switch the power on again.
- 11 **ENTER/NEXT button**  
This is used when setting the timer, setting the current time, and when advancing to the next operation.
- 12 **TIMER button**  
This is used to set the timer.
- 13 **MEMORY button**  
This button is used when presetting FM, MW and LW stations.
- 14 **MONO/STEREO (FM stereo mute/mono) button**  
This button will not function when receiving MW/LW broadcasts.  
(For FM reception) Use this mode to receive FM broadcasts in stereo.  
(For MW/LW reception) ("AUTO" appears on the display.) The muting circuit is activated to cut the hiss noise between stations.
- 15 **MONO:** In this mode, FM broadcasts are received in monaural, regardless of whether they are broadcast in monaural or stereo.  
Set to the mono mode if there is much noise in the stereo mute mode (with "AUTO" displayed) or if the signals are weak.
- 16 **BAND (FM/MW/LW selection) button**  
With each press, the band is switched in the order of FM, MW, LW, PH, and so on.
- 17 **TUNING UP and DOWN buttons**  
Use these to tune in FM, MW or LW stations and when setting the clock and timer.
- 18 **BASS control**  
Use this control to adjust the bass.
- 19 **TREBLE control**  
Use this control to adjust the treble.
- 20 **BALANCE control**  
Use this control to adjust the balance of the volume between the left and right channels. The volume is the same for the left and right channels when the control is at the center.

CASSETTE DECK


- 1 **Cassette tray: Deck 1**  
The cassette tray opens outward when the OPEN/CLOSE button is pressed. Insert the cassette tape with the side on which the tape is exposed facing away from you. To close the cassette tray, press the OPEN/CLOSE button again.
- 2 **DOLBY NR selection switch**  
Use this switch to select the Dolby NR mode: off, B type or C type. During playback, set this switch to the same mode in which the tape was recorded.
- 3 **REV MODE switch**  
Use this switch to set the reverse mode to one of the following modes: (☺) (single side mode), (☻) (two-side mode), or (☼) (continuous mode). Refer to Page 13 for details.
- 4 **COUNTER RESET button**  
Press this button to reset the tape counter to 00.00.
- 5 **COUNTER 1/2 selection button**  
Use this button to change the counter display between deck 1 and deck 2.
- 6 **TAPE SIZE setting button**  
Set the time of the tape to the length of the tape being used. Refer to Page 8 for details.
- 7 **DUBBING button**  
Simply pressing this button permits dubbing (copying) a tape from deck 1 to deck 2.
- 8 **Cassette tray: Deck 2**  
The cassette tray opens outward when the OPEN/CLOSE button is pressed. Insert the cassette tape with the side on which the tape is exposed facing away from you. To close the cassette tray, press the OPEN/CLOSE button again.
- 9 **POWER ON/STANDBY switch**  
This switch turn the power of the cassette deck on and off.
- 10 **(rewind) button: Deck 1**  
Press this button to rewind the tape in deck 1. Also, if pressed during playback in the (☻) (forward) direction, the tape is rewound to the beginning of the currently playing selection. If pressed during playback in the (☹) (reverse) direction, the tape is forwarded to the beginning of the next selection (on the back side of the tape).
- 11 **(fast-forward) button: Deck 1**  
Press this button to fast forward the tape in deck 1. Also, if pressed during playback in the (☻) (forward) direction, the tape is fast forwarded to the beginning of the following selection. If pressed during playback in the (☹) (reverse) direction, the tape is rewound to the beginning of the next selection (on the back side of the tape).
- 12 **OPEN/CLOSE button: Deck 1**  
Press this button to open and close the cassette tray. The button also works in the standby condition.

- 13 **(reverse play) button: Deck 1**  
Press this button to begin playback in the reverse direction on deck 1.  
When this button is pressed in the standby condition, the power is automatically switched on and the deck plays.
- 14 **(stop) button: Deck 1**  
Press this button to stop the moving tape in deck 1.
- 15 **(forward play) button: Deck 1**  
Press this button to begin playback in the forward direction on deck 1.  
When this button is pressed in the standby condition, the power is automatically switched on and the deck plays.
- 16 **CD SRS (CD synchronized recording button)**  
Use this button for simple CD synchronized recording. Refer to Page 15.
- 17 **REC/REC MUTE (recording/recording mute) button**  
To record, press the REC/REC MUTE button and the (☻) play button only. If only the REC/REC MUTE button is pressed, the deck is set to the recording pause mode. If this button is pressed again, or pressed during recording, the recording mute mode is set for approximately 5 seconds, after which the deck is set to the recording pause mode.  

Recording pause mode  
When the play button of the CD player is pressed in the recording pause mode, the CD begins to be recorded.
- 18 **(rewind) button: Deck 2**  
Press this button to rewind the tape in deck 2. Also, if pressed during playback in the (☻) (forward) direction, the tape is rewound to the beginning of the currently playing selection. If pressed during playback in the (☹) (reverse) direction, the tape is forwarded to the beginning of the next selection (on the back side of the tape).
- 19 **(fast-forward) button: Deck 2**  
Press this button to fast forward the tape in deck 2. Also, if pressed during playback in the (☻) (forward) direction, the tape is fast forwarded to the beginning of the following selection. If pressed during playback in the (☹) (reverse) direction, the tape is rewound to the beginning of the next selection (on the back side of the tape).
- 20 **REC LEVEL (recording level) control**  
Use this control to set the recording level.
- 21 **(reverse play) button: Deck 2**  
Press this button to begin playback in the reverse direction on deck 2.  
When this button is pressed in the standby condition, the power is automatically switched on and the deck plays.
- 22 **(stop) button: Deck 2**  
Press this button to stop the moving tape in deck 2.
- 23 **(forward play) button: Deck 2**  
Press this button to begin playback in the forward direction on deck 2.  
When this button is pressed in the standby condition, the power is automatically switched on and the deck plays.



**TUNER-PREAMPLIFIER DISPLAY**

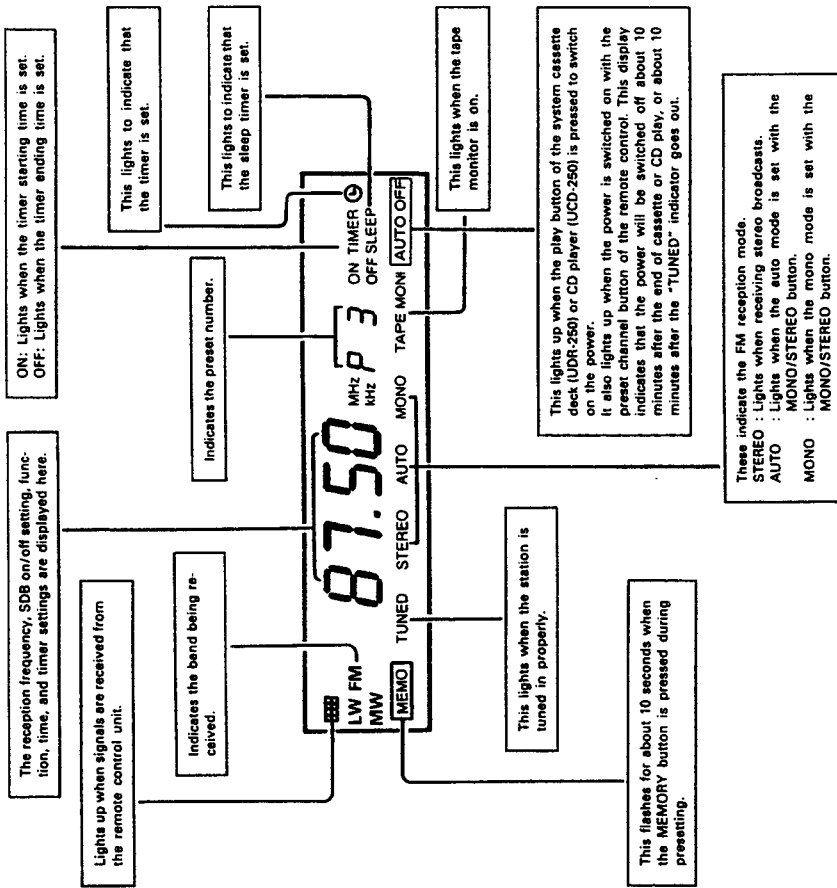

**Trap Door**

- To open the trap door, press area of the PUSH OPEN  $\Delta$  indication at the upper right of the panel. When the door lock is released, open the door with your hand.
- To close the trap door, press the indicated area at the upper right of the panel and lock the door.

- OPEN/CLOSE button: Deck 2**  
Press this button to open and close the cassette tray. The button also works in the standby condition.

- Deck 1 is for playback only and deck 2 is for recording and playback.
- After the power cord is plugged into an outlet, a mechanical sound is produced from the cassette deck when the power switch is pressed on the first time only. This is the sound of the cassette mechanism being set to the proper operating position, and is not a problem with the deck.


**CD PLAYER**

- Disc tray**  
Compact discs are loaded to the disc tray.
  - Pause button**  
Press this button to stop CD play temporarily.  
Press the play button to resume CD play.
  - Stop button**  
Press this button to stop CD play.
  - Play button**  
Press this button to start playing the disc. If pressed when the disc tray is open, the disc tray closes and playback begins. Pressing this button in the standby mode automatically switches on the power and plays the disc.
  - OPEN/CLOSE button**  
Press this button to open the disc tray. Press once to open the disc tray forward, then press again to close the disc tray. This button also operates in the standby mode.
  - POWER ON/STANDBY switch**  
Press this to switch the CD player's power on and off.
  - TAPE A/B button**  
Press this button during editing to switch the display between the display of program contents for tape side A and the display for tape side B.
  - EDIT button**  
Press this button for edited recording (dividing the tracks to be recorded to fit onto sides A and B of a tape according to the length of the tape).
  - Display**  
This displays the time and the settings of the various buttons.
  - RANDOM button**  
Press this button to play the disc tracks in random order.
  - REPEAT button**  
Press this button for repeat play.
  - MEMO button (automatic/manual search backward button)**  
Press this button to move the pickup back to the beginning of the desired track.  
Press in the play, stop, or pause mode to move back a number of tracks equal to the number of times the button is pressed.
  - MEMORY button (automatic/manual search forward button)**  
Press this button to move the pickup forward to the beginning of the desired track.  
Press in the play, stop, or pause mode to move forward a number of tracks equal to the number of times the button is pressed.
- \* The automatic search function is set if button  $\odot$  or  $\bullet$  is released within 0.5 seconds, and the manual search function is set if the button is held in for more than 0.5 seconds.
- \* Buttons  $\odot$  and  $\bullet$  do not function in the pause mode.

GENERAL SECTION

USING THE TAPE COUNTER

1. Tape Counter Display
  - The tape counter indicates the elapsed time of the running tape in minutes and seconds.

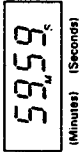

- The counter is reset to 00:00 when the tape is ejected and loaded, and by the COUNTER RESET button.
- Making a memo of the contents of a recording and the range of the counter numbers while you are recording or playing back a tape will be convenient when you search for a portion of the tape you would like to listen to or when you search for the next portion you would like to record.

2. Tape Size Selector

- Match the tape size with the tape being used.
- Press the TAPE SIZE button until the desired tape size is displayed, then press the button again while the tape size is being displayed to set it. With each press of the button, the display will change according to the following cycle.

C46 → C50 → C54 → C60 → C74 → C90 → C100 → C120 → C54L → C50L → C46L →

- \* C46L, C50L, and C54L indicate large-hubbed cassettes.
- \* Only values included in the display can be set.


3. END Display

- This display indicates that the tape is reaching the end during recording or playback.
- Match the tape size with the tape you are going to use.
- The END indicator will start flashing when the remaining time to the end of the tape is about 5 minutes. (Note that this will be the case only when the TAPE SIZE setting and the length of the tape are in agreement. When the tape used and the TAPE SIZE setting differ, a large error may arise in the time at which the END indicator starts flashing.)
- When the tape has been recorded or played back to its end, the flashing of the END indicator will change to steady lighting.
- Note that this indicator is only a guide and its operation will vary according to the size of the hub diameter of the tape as well as with differences of tape thickness, so that the END indicator might not light in some cases.

NOTE:


This deck's linear tape counter has been set for the following cassette tape lengths: C46, C50, C54, C60, C74, C90, C100, C120, C46L, C50L, and C54L. (L indicates large-hubbed cassettes.)  
Using a tape that lies outside of this range, or a tape with a different length than the displayed lengths, will result in error. When using a tape that is not included in the TAPE SIZE selection, select the tape size closest to the length of the tape to be used. (This will reduce the error.)  
The linear tape counter is not accurate like a clock. The thickness of the tape will differ depending on the type of tape used (tape position and time), and so there will be some error introduced. Error also arises from the difference between tapes with smaller and larger hubs.

- Large hubs are ones with a diameter of about 27 mm. Note that if the hub is larger than this, there will be a large error in indicating the tape travel time.

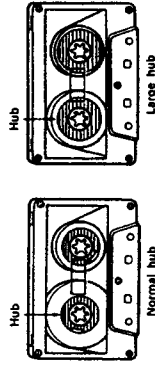

Dolby noise reduction and HX PRO headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX PRO originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.


CASSETTE DECK DISPLAY

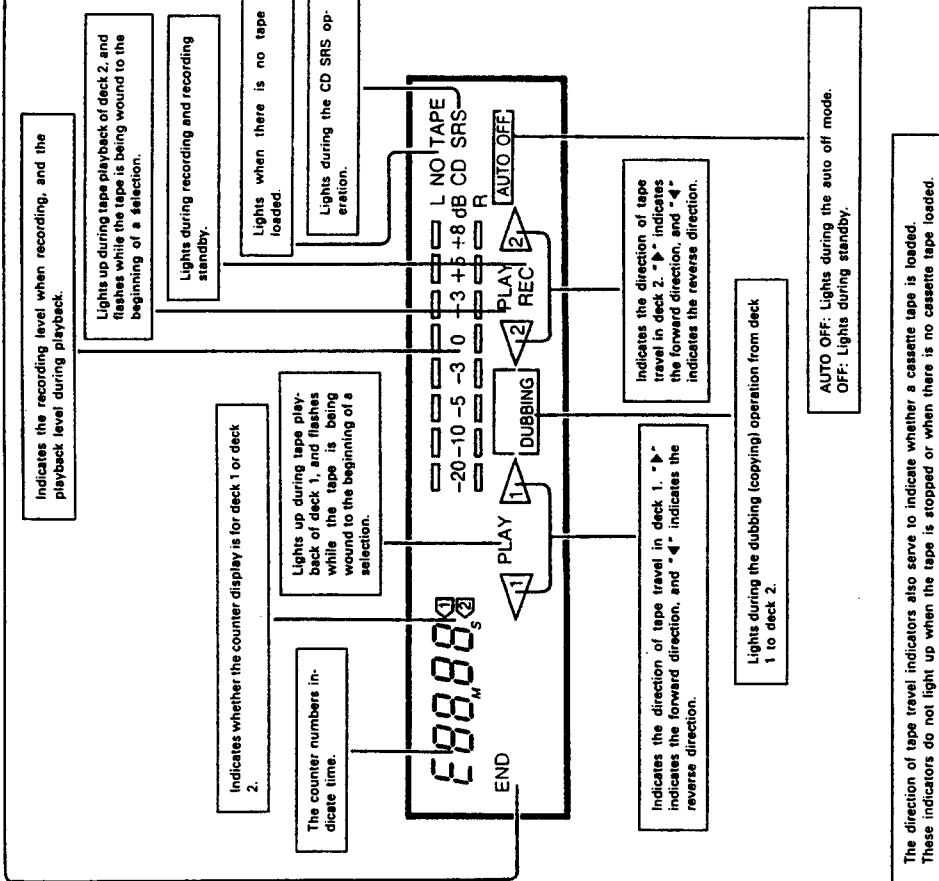

### 6 LISTENING TO RADIO BROADCASTS

(Check that connections are proper, referring to Page 5)

#### TUNING

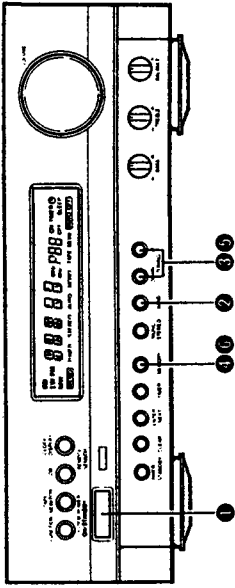

Example: Tuning to 87.50 MHz, FM

1	Set the VOLUME control to the minimum position, then press the SYSTEM POWER button.		
2	Select the FM band with the BAND button.		
3	Use the UP and DOWN buttons to set the frequency to 87.50 MHz.		

#### Presetting MW, LW and FM Stations

Example: Presetting the (currently tuned) FM 87.50 MHz to preset number 3

4	Press the MEMORY button. [MEMO] flashes for 10 seconds.		
5	Use the UP and DOWN buttons to call up the number to which you want to preset the station. Or, directly press the number buttons on the remote control unit. The preset number will flash.		
6	Press the MEMORY button while [MEMO] is flashing.		

Up to 30 MW, LW and FM stations can be preset at random using this procedure.


- Auto Tuning
- When the TUNING buttons are pressed, the frequency changes in steps of 50 kHz for FM, 9 kHz for MW and 1 kHz for LW.
  - If the TUNING UP or DOWN button is held in for more than 1 second, the frequency continues to change when the button is released.
- The next station is tuned in automatically and the tuning stops there. Note that tuning will not stop if the antenna input is weak and the TUNED indicator does not light. To stop the auto tuning, press the UP or DOWN button again.

#### CD PLAYER DISPLAY

Tape type and remaining time display  
During the editing operation, C-D lights and the tape time is displayed.

Track number display  
DD is displayed when the disc data cannot be read properly.  
When a disc is loaded:  
• The total number of tracks is displayed in the stop mode.  
• The track number is displayed in the play and program modes.  
• [C] or [D] is displayed when the innermost or outermost section of the disc is reached in the manual search mode.

The indicators switch as follows when the REPEAT button is pressed in the play mode:  
First press: REPEAT (single track repeat) The repeated track number lights on the music calendar.  
Second press: REPEAT (all tracks repeat) The track numbers of the tracks on the disc light.  
Third press: REPEAT A-  
Fourth press: REPEAT A-B  
Fifth press: No display  
• When track 21 or higher is repeated in 1-track repeat, the TRACK number flashes.

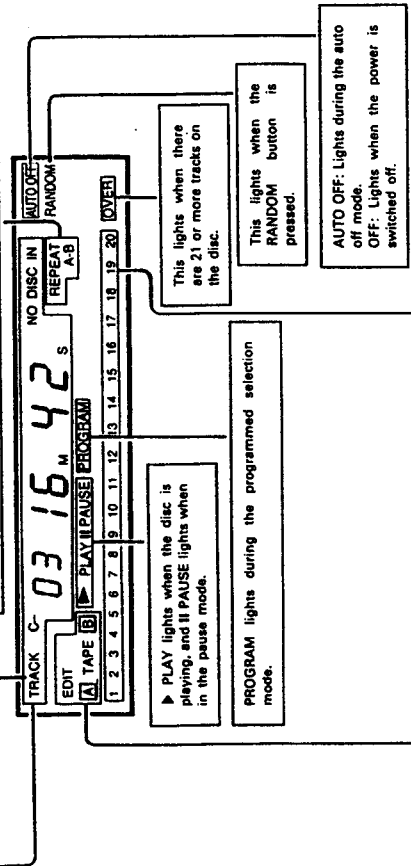

During the editing operation, EDIT [A] TAPE lights up, the remaining time for side A of the tape is indicated on the time section of the display, the track numbers set for side A light on the calendar section of the display, while the track numbers set for side B flash. When the TAPE A/B button is pressed, [A] goes off, [B] lights, and the remaining time and track numbers set for side B are indicated in the same way.

Music calendar display  
This indicates the track numbers on the disc to a maximum of 20. The track numbers go off after the corresponding tracks are played. In the program mode, the track numbers of the programmed tracks are indicated to a maximum of 20. All track numbers from 1 to 20 light when the disc data cannot be read properly.

- NO DISC lights on the display if no disc is loaded, or if the disc is loaded upside-down or is heavily scratched or dirty.

GENERAL SECTION

7 USING THE TIMER


Setting the Timer

- Be sure to set the current time.
  - Regular timer: The power can be switched on and off once every day at the same time. (Wake-up music)
  - Sleep timer: The power can be set to turn off in up to 90 minutes in steps of 10 minutes using the remote control unit. (Bedtime music)
- Be sure to preset stations before setting the timer.  
Refer to "Presenting MW, LW and FM Stations" on Page 9.
- Turn the standby switch off when not using the timer.

Power Failure

Should a power failure occur or if the power cord becomes unplugged from the power outlet, 00:00 or the time at which the power failed will flash on the time display. If this happens, reset the current time.  
(Reset the current time and timer settings. If 00:00 was displayed, also reset the stations preset on the tuner.)  
The standby mark starts flashing if there is a power failure or the power cord is unplugged while the standby mark is lit. If this happens, reset the time and the timer. (If the display reads 00:00, also reset the tuner's preset channels.)  
To make the standby mark stop flashing, press the TIMER button, then press the TIMER or CLEAR button while "FUNC" is displayed.

Setting the Current Time (A 24-hour clock display is used.)

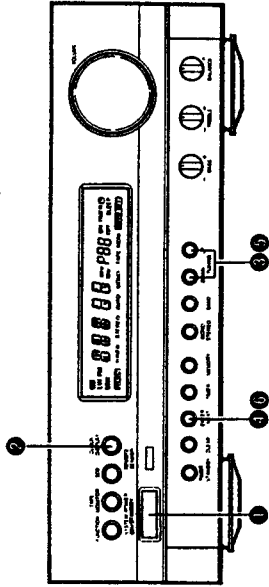

Example: Setting to 19:30 (7:30 p.m.)

1	Press the SYSTEM POWER button.		
2	Hold in the CLOCK/DISPLAY button for 3 seconds or longer.		The hour's place flashes. (All places flash if the time has already been set.)
3	Set the hours with the UP and DOWN buttons.		The set places flash.
4	Press the ENTER/NEXT button.		The minutes' places flash.
5	Set the minutes with the UP and DOWN buttons.		The set places flash.
6	Press the ENTER/NEXT button at the sound of a time signal. The time display lights steadily and the clock starts keeping the time.		The display lights steadily and the clock starts to count from 0 seconds.

Listening to Preset Stations

Example: Listening to the FM station preset at number 3

1	Press the TUNER button on the remote control unit.		
2	Press button "3" on the remote control unit.		

FM Stereo Reception

- When the MONO/STEREO button is pressed (which lights the AUTO and MONO indicators) and an FM stereo broadcast is received, the STEREO indicator lights and the station is received in stereo. If the MONO indicator is lit by pressing the MONO/STEREO button, the STEREO indicator goes off and the station is received in monaural.


Notes on Presenting

- When an FM station is preset, the auto or monaural mode is also set, so check the display before presenting the station.
- If a station is preset to a number at which another station has previously been preset, the previous station is cleared and the new station is preset.
- If the power cord is unplugged, the preset memory is not cleared immediately, but will be cleared if the cord is left unplugged over a long period. Should this happen, preset the stations again.

GENERAL SECTION

**Setting the Timer**

(Presets the MW, LW and FM stations in advance)

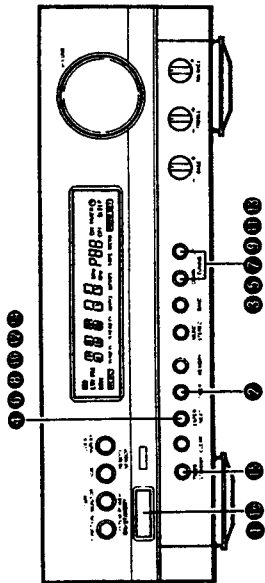

Example: Setting the timer to turn on at 12:35 and off at 12:56.  
 90.00 MHz FM is being received on preset number "1".  
 87.50 MHz FM is set to preset number "3".

1	Press the SYSTEM POWER button.		FUNC
2	Press the TIMER button.		TUNER
3	Press the UP and DOWN buttons to display "TUNER".		
4	Press the ENTER/NEXT button.		87.50 AUTO TUNING
5	Press the UP and DOWN buttons to set the preset number.		
6	Press the ENTER/NEXT button.		12:00 AUTO TUNING
7	Use the UP and DOWN buttons to set the hour at which the timer is to switch on.		12:00 AUTO TUNING
8	Press the ENTER/NEXT button.		12:35 AUTO TUNING
9	Use the UP and DOWN buttons to set the minutes at which the timer is to switch on.		12:35 AUTO TUNING
10	Press the ENTER/NEXT button.		12:00 AUTO TUNING

11	Use the UP and DOWN buttons to set the hour at which the timer is to switch off.		12:00 AUTO TUNING
12	Press the ENTER/NEXT button.		12:00 AUTO TUNING
13	Use the UP and DOWN buttons to set the minutes at which the timer is to switch off.		12:56 AUTO TUNING
14	Press the ENTER/NEXT button.		90:00 AUTO TUNING
15	Press the TIMER STANDBY button.		90:00 AUTO TUNING
16	Press the SYSTEM POWER button.		10:15

- When the TIMER STANDBY button is pressed and the "S" mark is lit, the timer will function at the same times each day.
- To switch off the timer, press the TIMER STANDBY button and turn off the "S" mark.

**NOTE:**  
 The timer standby mark "S" will not light unless the current timer has been set. Should this be the case, set the current time, then press the TIMER STANDBY button.



GENERAL SECTION

8 CASSETTE DECK





Before Recording and Playback


Auto Reverse

This deck is equipped with an auto reverse mechanism, so cassette tapes can be played and recorded on both sides or played continuously without having to turn them over.

**Direction of tape travel**  
This deck has two play buttons, one for the forward direction (front side) and another for the reverse direction (back side). The side being played can be changed during playback by pressing the opposite play button.

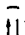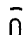
**Reverse mode**  
Set the reverse mode switch (REV MODE) as follows:

- **Single-side recording/playback mode (  )**  
In this position, only the front side or the back side of the cassette tape is played or recorded. (The tape stops automatically when the end of that side is reached.)
- **Two-side recording/playback mode (  )**  
In this position, when the end of the front side is reached, recording or playback automatically switches to the back side and continues from there. (The tape stops automatically when the end of the back side is reached.)
- **Continuous playback mode (  )**  
When tape is loaded in only one of the decks, playback continues until the STOP button is pressed.
- **Relay playback mode (  )**  
When tapes are loaded in both decks, playback continues from deck 1 onto deck 2, and then back again, as shown in the diagram at the right.

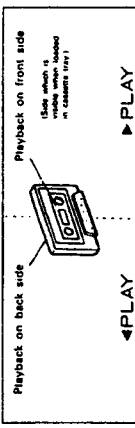


If you start playing or recording from the back side, the tape will stop automatically at the end of the back side.

The reverse recording/playback mode (  ) is set automatically during recording.

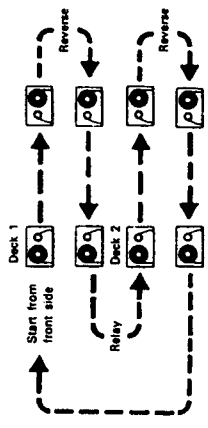

- Storage Precautions**
- Avoid storing in the following places:
    - Hot, humid places
    - Dusty places
    - Places exposed to direct sunlight
    - Near magnetic fields (TVs, speakers, etc.)
  - Store the cassette tape in a case equipped with stoppers to keep the tape from coming slack.

- Protecting Cassette Tapes From Being Erased Accidentally**
- Cassette tapes are equipped with accidental erasure prevention tabs. To protect recorded tapes from being erased accidentally, use a screwdriver, etc., and break these tabs off.
  - To record on a cassette tape whose accidental erasure prevention tabs have been broken off, place a piece of cellophane tape over the hole.


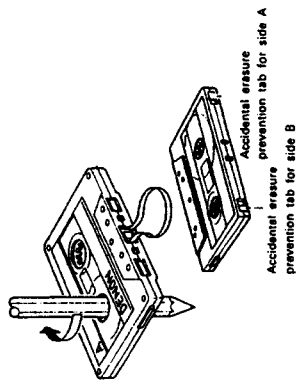


Cassette Tapes

- Handling Precautions**
- C-120 cassette tapes
  - Avoid using 120-minute cassette tapes, since they have extremely thin tape which tends to become wound onto the capstans or pinch rollers.
  - **Tape slack**  
If the tape is slack, it may become wound onto mechanism parts or otherwise damaged. Take up the slack with a pencil before loading the cassette.

Setting the Sleep Timer

(Use the remote control unit for these operations.)  
Example: Setting the power to switch off in 50 minutes.

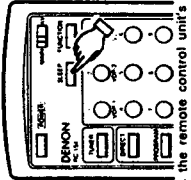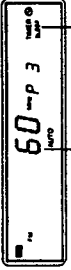1	 <p>Currently receiving 87.50 MHz, FM.</p> <p>"87.50"</p>  <p>"60" is displayed. "SLEEP" appears and flashes for 5 seconds.</p> <p>Press the remote control unit's SLEEP button.</p>	<p>"60" is displayed, and the frequency display (87.50) reappears after 5 seconds.</p> <p>The power is switched off after 50 minutes.</p>
2	<p>Press the SLEEP button again while "SLEEP" is flashing.</p>	

- If the sleep timer and regular timer settings overlap, the sleep timer is given priority.
- Do not press the TIMER STANDBY button after the power has been switched on with the timer. If this is done, the timer will not function properly.
- If the same time is set for the on time and off time, the power will not be switched on even when the "STANDBY" indicator is lit.
- If the timer is set for an AM or FM station and the on time of the timer is reached while listening to another station, the tuner switches to the station which was set with the timer.
- If the display is not normal, unplug the power cord, then holding in the MEMORY button and the BAND button, plug the power plug into the power outlet. This will reset the tuner to the initial settings and provide a proper display. If this is done, reset the preset stations, current time, and timer settings.


Cancelling the Sleep Timer

- To cancel the timer while it is operating in the sleep mode, press the SLEEP button, and while "SLEEP" is flashing, press the CLEAR button on the tuner-preamplifier.
- Press the SLEEP button and continue to press it until the power is switched off. When the power is switched off the sleep timer will be cancelled.

GENERAL SECTION

9 PLAYING CASSETTE TAPES

(Single Side Playback, Two-Side Playback, and Continuous Playback)

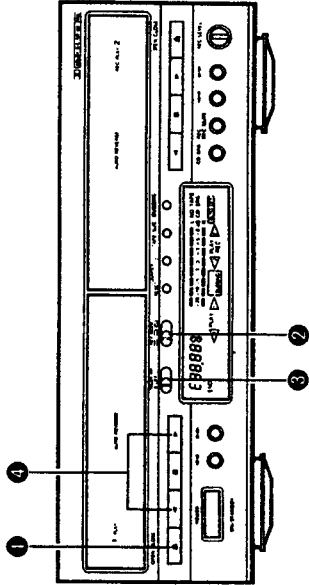



- Functions common for deck 1 and deck 2.
- When operating from the remote control unit, the operation switches between deck 1 and deck 2 each time the **DECK** 1/2 button is pressed. The counter indicator (1) or (2) lights for the selected deck.

<p><b>1</b></p> <p>Press the <b>OPEN/CLOSE</b> button, and load a recorded tape into the tray. Refer to Page 14.</p>		<p>Loading the tape</p> <p>The tape can be loaded easily by inserting it at an angle.</p>
<p><b>2</b></p> <p>Set the <b>REV MODE</b> switch. Refer to Page 13.</p>		<p>Removing the tape</p> <p>The tape can be removed easily by lifting it out toward yourself at an angle.</p>
<p><b>3</b></p> <p>Set the <b>DOLBY NR</b> switch. Refer to Page 6 ⑥.</p>	<p>Set to B or C (as indicated on the tape) for tapes recorded with Dolby NR.</p>	<p>Press the stop button  to stop the playback.</p>
<p><b>4</b></p> <p>Press the play button (▶ or ◀).</p>	<p>Playback starts in the direction of the button pressed.</p>	

Before Operating

Loading and Unloading Cassette Tapes (Common for Deck 1 and Deck 2)

- **Loading**
  - 1 Press the **OPEN/CLOSE** button (▲) to open the cassette tray.
  - 2 Set the tape in the cassette tray with the open side (on which the tape is exposed) facing away from you.
  - 3 Press the **OPEN/CLOSE** button again to close the tray.

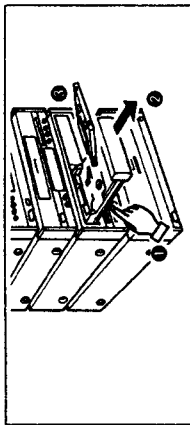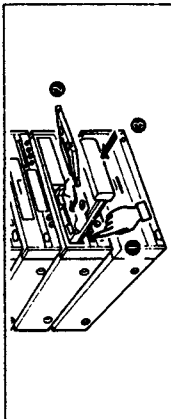

Check the following before recording or playing cassette tapes:

1. Is the head dirty?...  
The sound quality will be poor if the head is dirty. Refer to Page 21.
2. Are the accidental erasure prevention tabs broken off?...  
Recording is not possible if these tabs are broken off. Refer to Page 13.

NOTE:

- Load the cassette tape on an angle with the open side facing away from you. Loading it in the opposite direction can cause damage.
- Do not press the **OPEN/CLOSE** button during playback or recording. Always press the **STOP** button before pressing the **OPEN/CLOSE** button.

Using the Tape Counter (Linear Tape Counter)


- This counter displays the elapsed running time of the tape in minutes and seconds.
- The counter can be reset to 00:00 by pressing the **COUNTER RESET** button. Or, the counter will also be reset when the tape is loaded or unloaded.
- Making a memo of the contents of a recording and the range of the counter numbers while you are recording or playing back a tape will be convenient when you search for a portion of the tape to which you would like to listen.

NOTE:

- This deck's linear tape counter has been set for the following cassette tape lengths: C46, C50, C54, C60, C74, C90, C100, C120, C46L, C50L, and C54L. (L indicates large-hubbed cassettes.) Using a tape that lies outside of this range, or a tape with a different length than the displayed lengths, will result in error. When using a tape that is not included in the **TAPE SIZE** selection, select the tape size closest to the length of the tape to be used. (This will reduce the error.)
- The linear tape counter is not accurate like a clock. The thickness of the tape will differ depending on the type of tape used (tape position and time), and so there will be some error introduced. Error also arises from the difference between tapes with smaller and larger hubs, and shows up in the remaining tape display (END mark).


Auto Tape Selector Mechanism

- This deck is equipped with an auto tape selector mechanism which uses the detection holes in the cassette halves to automatically set the recording bias and equalization best suited for that type of tape.
- Do not use ferrichrome tapes.
- Use metal tapes equipped with detection holes. (Use of the old type of metal tape without detection holes will result in the sound having an emphasized treble region.)

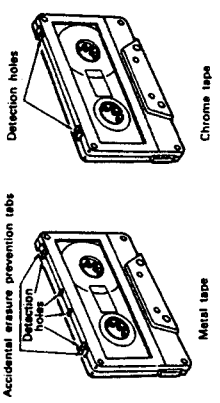



# 10 RECORDING CASSETTE TAPES

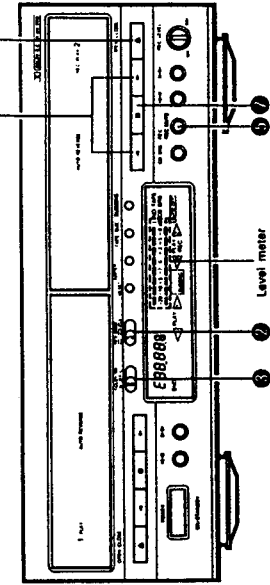

The positions of the VOLUME and tone controls do not affect the sound being recorded.

<p><b>1</b></p> <p>Press the OPEN/CLOSE button  for deck 2 and load the tape to which you will record. Refer to Page 14.</p>	<p><b>2</b></p> <p>Set the REV MODE switch to  or . Refer to Page 13.</p>	<p><b>3</b></p> <p>Set the DOLBY NR switch. Refer to Page 6 .</p>	<p><b>4</b></p> <p>Press the BAND selector button.</p> <p>Select the station you wish to record. (Refer to Page 9.)</p>	<p><b>5</b></p> <p>Press the REC/REC MUTE button.</p> <p>Press the  or  button. (Recording starts)</p>	<p><b>7</b></p> <p>To stop recording, press the stop button. </p>
<p><b>OPEN/CLOSE</b> </p> <p>Single-side recording Two-side (reverse) recording.</p>		<p>Recording from a VDP or DAT</p> <p>Press the tuner-preamplifier's FUNCTION button and select PHONO or DAT.</p> <p>Start playback on the VDP or DAT.</p>		<p>The REC (recording) indicator lights.</p>	
<p>Recording from a CD player</p> <p>Set the disc in the CD player. (Refer to Page 16.)</p>		<p>Recording from a VDP or DAT</p> <p>Set to B or C to record with Dolby Noise Reduction.</p>		<p>Recording from a CD player</p> <p>Set the disc in the CD player. (Refer to Page 16.)</p>	

Adjust the recording level.

REC LEVEL

Adjust the lighting condition of the level meter with the recording level control. Refer to the section on Page 15.

When the CD SRS button is pressed, a 7-second blank portion is automatically created before recording starts.

# PLAYING CASSETTE TAPES

Using the MS (Music Search) Function and the Music Search Display

## Using the MS (Music Search) Function


Use this function to move to the beginning of the following section or return to the beginning of the current selection.

- 1 Press or .
- 2 Press or .

In the rewind direction, playback starts from the beginning of the selection which is currently playing, and in the fast-forward direction, playback starts from the beginning of the following selection.

The tape stops by a number of selections equal to the number of times the or button is pressed.

For example:

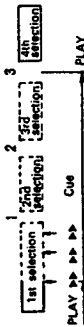

For the normal fast-forward or rewind operations, press the stop button before pressing the or button.

## Display During the Music Search Operation

During the music search operation, the number of selections being skipped is indicated on the tape counter, and this number decreases each time a blank section is detected (for example, 3 → 2 → 1).

- When skipping back to a previous selection

P-03

—Number of tracks to be skipped

This lights when skipping backward

- When skipping ahead to a following selection

P 05

—Number of tracks to be skipped

## Adjustment of the Recording Input Level Control

Too high a recording level will result in a recording which has a high degree of distortion, whereas too low a recording level will result in a high degree of noise. Adjustment of the recording input level is of the utmost importance in making a well-balanced recording.

Guide to Recording Input Levels


Type I (normal) tapes	0 dB
Type II (CrO <sub>2</sub> ) tapes	+3 dB
Type IV (metal) tapes	+3 dB

**NOTE:**  
The optimum recording level will actually differ, depending on the source and the type of tape, and so a trial recording should be made.

GENERAL SECTION

RECORDING CASSETTE TAPES

- Making a Synchro Dubbing (Copy)  
Synchro dubbing (tape copying) can be made at regular speed from deck 1 to deck 2.  
Press the SYSTEM POWER button of the tuner-preamplifier.

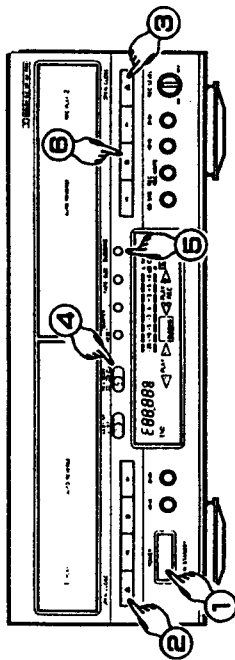

- Press the SYSTEM POWER button of the tuner-preamplifier or press the POWER ON/STANDBY button of the deck.
- Press the OPEN/CLOSE (▲) button and load the tape to be played back in deck 1.
- Press the OPEN/CLOSE (▲) button and load the tape to be recorded back in deck 2.
- Set the reverse mode with the REV MODE switch.  
(REV MODE : : : C)
- Press the DUBBING (synchro dubbing) button. Note that if the POWER ON/STANDBY button of the deck is pressed to switch on the power, the power of the tuner-preamplifier will automatically be switched on when the DUBBING button is pressed. You will be able to hear the audio normally.  
The tape will automatically stop when it reaches the end and the synchro dubbing mode will be cancelled.
- Recording level during synchro dubbing  
During synchro dubbing, the recording is made at the same level as the playback tape of deck 1, regardless of the position of the recording level control. Note that when the recording tape and the playback tape are of different types, the recording level might be different and so synchro dubbing should be done with the same types of tape if possible.
- Dolby NR mode during synchro dubbing  
The Dolby NR system is automatically disengaged from the panel switch during synchro dubbing (even though the display does not change) and the tape is recorded with the Dolby NR mode of the playback tape.
- You can listen to the sound of another source while synchro dubbing.  
Changing the source with the FUNCTION button or the CD play button will not interrupt the synchro dubbing.
- When synchro dubbing, both decks begin running in the forward direction (from the A side).
- The synchro DUBBING button is effective in starting the operation only when both tapes are in the stopped condition.
- The following buttons do not function during the synchro dubbing operation: forward play ►, reverse play ◀, fast forward ►►, rewind ◀◀, and REC/REC MUTE.

- To ensure complete reproduction, use the same length of recording tape as the playback tape, and rewind both tapes to the beginning of side A before starting the dubbing operation.
- By setting the REV MODE switch to the ◀ or C position, when the playback tape of deck 1 reverses at the end of the tape on side A, the deck 2 tape will reverse at the same time and dubbing can continue on side B.

11 PLAYING CDS

Compact Discs


- Press the OPEN/CLOSE button (▲) once to open the disc tray, once again to close it.
- The disc tray can also be closed by pressing the play (▶) button. When this is done, playback automatically starts from the first track on the disc (or if the tracks are programmed, the first programmed track).
- Load the disc with the label side facing up, being careful not to touch the disc surface.
- Load the disc with the disc tray open all the way.
- Set the disc securely in the tray guide at the center of the disc tray.
- To play an 8 cm disc, place the disc in the sunken part at the center of the disc tray.
- When the disc tray is closed, the disc turns automatically for several seconds, and the number of tracks and total playing time appear on the display.




Only discs with this mark can be played.

- For CDVs, only the audio part is played (the video part is not played).

Disc	Remarks
CD	
CDV	Only the audio part is played.
CD single (8 cm)	

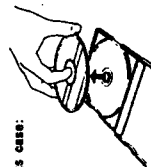


When removing the disc from its case: As shown in the diagram, grasp the disc along the edges, gently press down on the hole in the middle with a finger, and lift the disc. It should come out easily.

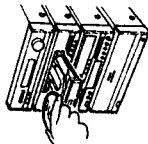

When setting the disc in the disc tray: Always set the disc with the label side facing up. (Compact discs can only be played on one side). For 8 cm CDs, set the disc in the sunken part in the middle of the tray.


Handling the Disc Tray

- Do not switch off the power or push or pull the disc tray when it is moving, since this may damage it.
- If the cord of a set of headphones, etc., gets caught in the disc tray when it is closed, press the OPEN/CLOSE button (▲) again.
- Never set objects other than CDs in the disc tray, as this can cause damage.

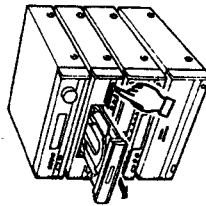


NOTE:

"NO DISC" is displayed on the display window when no disc is loaded, when the disc is loaded upside-down, or when the disc is not properly loaded. Also, "00.00" may appear during playback of a CD if the disc is scratched or dirty. If this happens, the set will not operate when a normal operating button (other than the OPEN/CLOSE button) is pressed, so press the OPEN/CLOSE (▲) button, remove the disc, clean it as necessary, then press the PLAY (▶) button again.

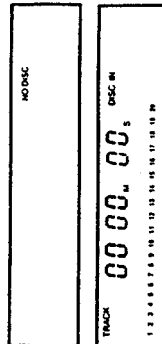

GENERAL SECTION

Regular Play

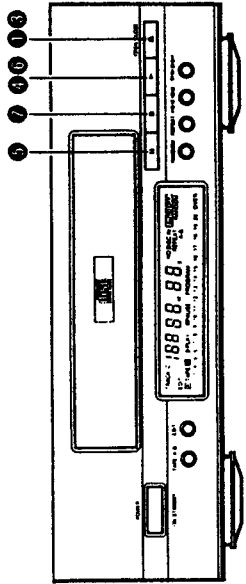

Example: Playing a CD with 15 tracks and a total playing time of 82 minutes 03 seconds, starting from track 1

1	Press the OPEN/CLOSE button. 	NO DISC
2	Set the CD in the disc tray. Refer to Page 16. 	The display appears several seconds after the disc tray closes.
3	Press the OPEN/CLOSE button. 	TRACK 15 62.03, DISC IN 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
4	Press the play button. 	TRACK 01 16.01, DISC IN 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
To stop play temporarily:		
5	Press the pause button. 	"PAUSE" goes off and "II PAUSE" appears. CD play is paused at the point the button is pressed.
To resume CD play:		
6	Press the play button. 	"II PAUSE" goes off and "▶ PLAY" appears. CD play resumes from the point the pause button was pressed.
To stop CD play:		
7	Press the stop button. 	TRACK 15 62.03, DISC IN 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15


NOTE: "00" is displayed on the track number section of the display for several seconds after the disc is set, while the data on the number of tracks, playing time, etc., is being read from the disc. After this, the number of tracks and total playing time appear.

Various CD Play Functions

(Insert the disc before performing the following operations.)

Playing Certain Tracks

Example: Playing the 8th track Perform this operation from the remote control unit.

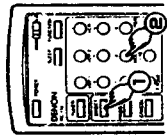


- 1 Press the DIRECT button.
- 2 Press track button "8". "TRACK 8" appears on the display, and the 8th track begins playing.
- 3 When the end of the track is reached, play continues on to the next track.

- For track numbers of 11 and higher, for example 15, press [15] and [8].
- For track numbers of 20 and higher, for example 23, press [20], [3], and [8].
- For track number 20, press [20] and [10].

DIRECT SELECTION

Playing 1 Track Repeatedly

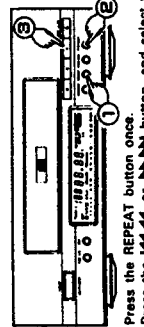

- 1 Press the REPEAT button once.
- 2 Press the TRACK 1 or TRACK 10 button, and select the desired track.
- 3 Press the play button (▶) to start play.

1 TRACK REPEAT

- When the specified track finishes playing, the pickup returns to the beginning of that track and play is repeated.
- If the REPEAT button is pressed once during play, the track will be played repeatedly.
- If the REPEAT button is pressed once during programmed play, the track will be played repeatedly.
- If the REPEAT button is pressed once while the disc is stopped, the TRACK numbers indicator flashes and the 1 track repeat play mode is set.

Playing All Tracks Repeatedly



- 1 Press the REPEAT button twice.
- 2 Press the play button (▶) to start play.

ALL TRACKS REPEAT

- When the last track finishes playing, the pickup returns to the first track of the disc and play is repeated.
- If the REPEAT button is pressed twice during play, the disc will be played repeatedly.
- If the REPEAT button is pressed twice during programmed play, the program will be played twice during programmed play.
- If the REPEAT button is pressed twice while the disc is stopped, the TRACK numbers indicator lights and the all tracks repeat play mode is set.

Playing a Specific Section Repeatedly

Example: The CD has a total of 15 tracks


1st time	(1) Press the REPEAT button during CD play. 	TRACK 03 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	Only that track is played repeatedly, and that track number lights on the music calendar. • With a 1-track repeat of track 21 or higher, "TRACK No." flashes.
2nd time	(2) Press the REPEAT button before CD play. 	TRACK 03 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	The total number of tracks flashes, and then 1 the first track is repeated by pressing the play button 2 when play is started by direct selection from the remote control or with the PAH or PAE button, only those selected tracks are played repeatedly.
3rd time	Press the REPEAT button during CD play. 	TRACK 03 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	The track numbers contained on the disc light up on the music calendar, and all tracks are played repeatedly.
4th time	Press the REPEAT button during CD play. 	TRACK 03 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	"REPEAT A." lights up. If nothing else is done, all tracks are played repeatedly.
			"REPEAT A-B" lights up. The A-B section is played repeatedly.

Pressing the REPEAT button once again returns the player to regular CD play.

GENERAL SECTION

QUICK SEARCH


- ① Press the auto search forward button (▶▶▶▶).
- Each press of the auto search forward button (▶▶▶▶) moves the pickup to the beginning of following tracks.

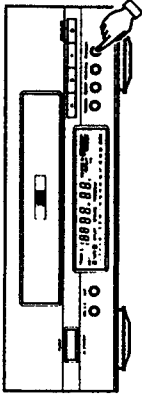

② Moving to the Next Track During CD Play

QUICK SEARCH

- ① Press the auto search backward button (◀◀◀◀).
- Each press of the auto search backward button (◀◀◀◀) during the search operation moves the pickup to the beginning of previous tracks.

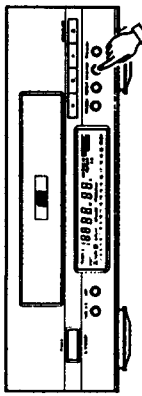


③ Moving Back to the Beginning of the Current Track During CD Play

SKIP MONITOR


- ② Searching for Tracks While Listening to the Sound
  - Use this to skip through a disc listening to the sound at high speed. This function is convenient when searching for a certain section within a long track.
  - Use the skip monitor function to find the desired position, then release the search button to start regular playback from there.

1 Forward skip monitor

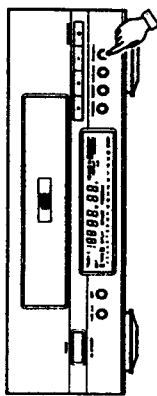

① During CD play, press and hold in the forward search button (▶▶▶▶) to skip forward while listening to the sound.

2 Backward skip monitor

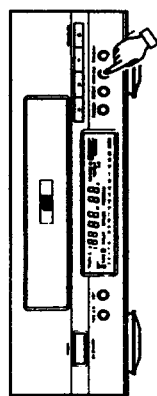

① During CD play, press and hold in the backward search button (◀◀◀◀) to skip backward while listening to the sound.

If the forward or backward skip button is pressed during programmed CD play and released at a track which has not been programmed, the next programmed track will be played once that track has been played to the end.

PROGRAMMED SELECTION

- ② Playing Certain Tracks in any Desired Order (Perform this operation from the remote control unit.)

Example: Programming track 3 to play first, track 18 to play second, on a CD with 18 tracks and a total playing time of 62 minutes, 3 seconds


Setting and Playing the Program (Set the Slide Switch to the "MAIN" Side.)

1	Press the PROGRAM button.		
2	Set track 3 to play first.		<p>After 2 seconds The display when track 3 is set to play first Time of first track: 8 minutes, 00 seconds</p>
3	Set track 18 to play second.		<p>After 2 seconds The display when track 18 is set to play second Time of first track: 16 minutes, 05 seconds</p>
4	Press the play button.		<p>The tracks start playing in the programmed order.</p>

- The numbers of the programmed tracks go off once the tracks are played.
- The time display will read "—M —S" if a track number of 31 or higher is set in the program.
- When a program is set during CD play after a direct selection, the track currently playing is set as the first track in the program.
- Up to 20 tracks of your choice from among track numbers 1 through 98 can be programmed with this CD player.
- If you attempt to set a track number that is greater than the number of tracks on the disc, that track number will not be displayed when the buttons are pressed.
- Programming is also possible when the disc tray is open. In this case, track numbers greater than the number of tracks on the disc can be programmed, but these are ignored when the disc is played.
- There is a silent interval of 4 seconds between tracks. This is has been designed to create a blank section of 4 seconds between selections when recording programmed tracks onto tape.
- The entire program is cleared when the disc tray is opened or closed (by pressing the ▲ button).
- If you make a mistake when programming tracks, press the CANCEL button and program again. (Each press of the CANCEL button cancels the last track.)
- An A-B section repeat is not possible during programmed play.
- Other operations possible during programmed play:
  - The quick search, pause, skip monitor, and other operations can be used during programmed play. To move to the beginning of the previous track with the quick search operation, press ◀◀◀◀ once, then once again while the time display reads 00.00. To move to the beginning of the following track, press ▶▶▶▶ once, regardless of the time display.
  - Perform programming and canceling in the stop mode.

**RANDOM SEARCH**

- **Playing Tracks in Random Order**
- The function plays each track on the disc once in random order.

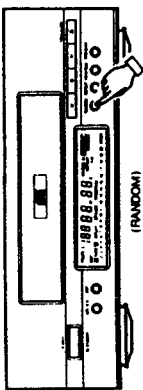

- A press of the **RANDOM** button lights the **[RANDOM]** indicator to show that the random mode has been set. Random search will begin when the play button is pressed and the disc will start playing automatically.
- Simply pressing the **RANDOM** button during CD play will start the random search and start random play.


- Pressing the **RANDOM** button when a program has been set will play the programmed tracks in random order.
- Pressing the **RANDOM** button when repeat play has been set will play the tracks through randomly one time, and each time following this there will be a random search with a different pattern.
- An A-B section repeat is not possible during random play.
- During the search operation, the track numbers of the disc from track 1 to the last track will be repeatedly displayed at high speed in the **TRACK NO.** section, and the following tracks to be played will not be known from the end of the search to the time CD play begins.
- Pressing the **RANDOM** button when 1-track repeat has been set will automatically change the setting to all tracks repeat and these tracks will be played randomly.

**NOTE:**  
Random play is not possible during the edit operation.

**Edited Recording onto Sides A and B of a Tape (EDIT)**

Editing is possible with CDs containing up to 20 tracks.

Before starting the edited recording operation, load the cassette tape to which you will record into deck 2 with side A facing up. The leader tape is automatically taken up before recording starts. (Set the **REV MODE** switch to the **EDIT** position.)

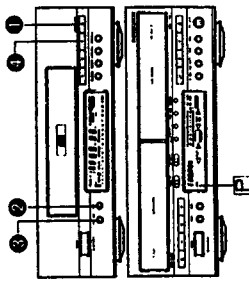

- **Automatic Edited Recording**

**Example:** Recording a disc with 18 tracks and a total playing time of 56 minutes onto a C-60 cassette tape

1

Press the **OPEN/CLOSE** button. → Set the disc. → Press the **OPEN/CLOSE** button. → Press the play button and set the function to CD. → Press the stop button.

- NOTE:**
- With edited recording, side B of the tape will be recorded automatically even when the **REV MODE** switch of the deck is set to the **EDIT** position.
  - During edited recording, only the following buttons will function: the stop button of the CD or the **OPEN/CLOSE** button, and the stop button of the deck.
  - When using a recorded tape for edited recording, the tape should be erased before use, since when the tape is longer than the set time, an unrecorded section of side B will remain after the tape stops.
  - When a tape which has been recorded with this system is played back, there will be 4-second blank portions between tracks (for making it easy to reach the beginning of a track). This will differ from the actual silent portions between the tracks on the disc, and so there will be some error in the actual remaining time of the tape and the displayed time.

Setting the desired recording time (Method 2)  
Select a tape length close to the desired time, then make a time adjustment using the **[EDIT]** or **[PROGRAM]** button.  
For example, to set 51 minutes, select C-50, then press the **[EDIT]** button once to set C-51.

2

Tracks for side A light up. Tracks for side B flash. (Tracks 1 through 9 are recorded on side A.) (Tracks 10 through 18 are recorded on side B.)

3

Tracks for side A light up. Tracks for side B flash. (Tracks 1 through 9 are recorded on side A.) (Tracks 10 through 18 are recorded on side B.)

4

The display changes between sides A and B each time the **TAPE** button is pressed. (Use this to check the extra time on side B.)

- Note that in some cases, even if the tape is longer than the total playing time on the disc, it may not be possible to record all the tracks onto the tape, since they are divided onto sides A and B. In such cases, the **OVER** indicator flashes.


- **Programmed Edited Recording**
- ① Follow the instructions under "PROGRAMMED SELECTION" on Page 18 to program the tracks.
- ② Perform steps 2 through 4 under the aforementioned "Automatic Edited Recording".

**RECORDING CERTAIN TRACKS IN ANY DESIRED ORDER**

- Pressing the **PROGRAM** button of the remote control unit will light up the "PROGRAM" indicator. When the disc is stopped, programming can be done with the search buttons **[4]** **[5]** **[6]** **[7]** **[8]** **[9]** on the CD player or with the search buttons **[4]** **[5]** **[6]** **[7]** **[8]** **[9]** on the remote control unit.
- Select the tracks with the search buttons, then press the **PROGRAM** button to program them.
  - The search buttons **[4]** **[5]** **[6]** **[7]** **[8]** **[9]** can be used to change the track numbers continuously.
  - After the track numbers have been selected with the search buttons, if the play button is pressed to start CD play before the **PROGRAM** button is pressed, the last track of the program set up to this point will be played.
  - In this case, the tracks selected with the search buttons will not be programmed.

GENERAL SECTION

Button Names and Functions

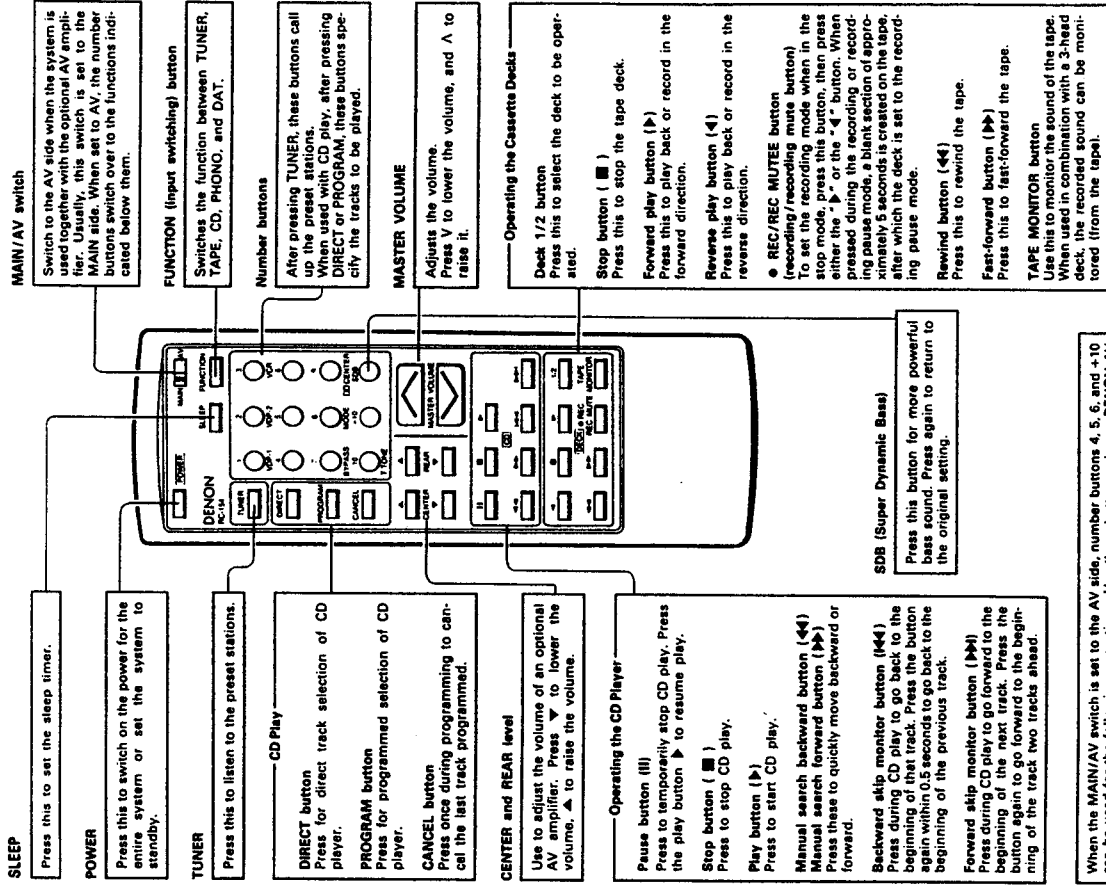



When the MAIN/AV switch is set to the AV side, number buttons 4, 5, 6, and +10 can be used for the following operations. Use these buttons when a DENON AV amplifier having these functions is used with this system.  
4 button → VCR-2  
5 button → DBS  
6 button → TV  
+10 button → 3CH LOGIC

12 REMOTE CONTROL UNIT

Cautions on Use

- The D-250 is supplied with a remote control unit (RC-154) for system control.
- Replace the batteries with new ones when the transmission distance possible with the remote control unit shortens. For longer battery life, remove the batteries when not using the remote control unit for long periods.
- When replacing batteries, use two new batteries. Never use an old battery with a new one.
- Do not use two different types of batteries.
- Do not heat batteries or take them apart.
- Be careful that the remote control sensor is not exposed to direct sunlight or strong light from lighting fixtures.
- The remote control sensor is located on the tuner preamplifier. Point the remote control unit at the sensor, then press the buttons for the desired operation.
- Operate the remote control unit within the range illustrated in the diagram.

Inserting the Batteries

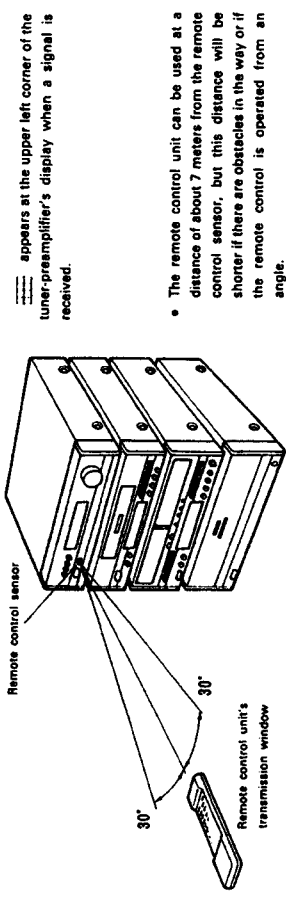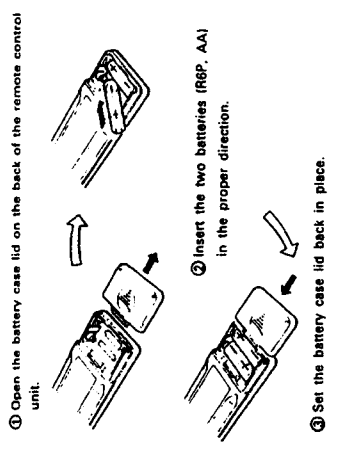

- The remote control unit can be used at a distance of about 7 meters from the remote control sensor, but this distance will be shorter if there are obstacles in the way or if the remote control is operated from an angle.
- Do not press buttons on the remote control unit and on the main unit at the same time. Doing so will lead to a malfunction.
- If the tuner-preamplifier's display due to incident light even though the remote control unit has not been operated, it is best to move the set or place it in a different direction. Even if this happens, it will not cause a malfunction with remote control unit.
- When adjusting the volume continuously with the remote control unit, the volume adjustment will stop if the remote control unit is moved away from the remote control sensor. Should this happen, press the button again to continue changing the volume.

**15 SPECIFICATIONS**

- **Tuner-preamplifier (UTP-250)**  
**Reception Frequency Range:**  
 FM: 87.50 MHz to 108.00 MHz  
 AM: 522 kHz to 1611 kHz (MW), 153 kHz to 279 kHz (LW)  
**Receiving Sensitivity:**  
 FM: 1.5 µV, 75 ohms (SN ratio 30 dB)  
 AM: 20 µV (SN ratio 20 dB, MW), 35 µV (SN ratio 20 dB, LW)  
**FM Stereo Separation:**  
 40 dB (1 kHz)  
**Bass Adjustment:**  
 10 kHz ±8 dB  
**Treble Adjustment:**  
 80 Hz ±8 dB  
**Super Dynamic Bass:**  
 PHONO: Output jacks  
 PHONO: Input jacks  
**DAT:** Input jacks, recording output jacks  
**Processor:** Processor input/output jacks  
 270 (W) × 86 (H) × 330 (D) mm (10-5/8" × 3-25/64" × 13")  
 3.2 kg (7 lbs 10 oz)  
 AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
 18 W  
 50 W ± 50 W (20 Hz to 20 kHz, 8 ohm)  
 6.3 mm headphone jack  
 270 (W) × 86 (H) × 330 (D) mm (10-5/8" × 3-25/32" × 13")  
 4.1 kg (9 lbs 11 oz)  
 AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
 140 W  
 Below measurable limits (±0.001% W, Peak)  
 44.1 kHz  
**Semiconductor**  
 270 (W) × 86 (H) × 313 (D) mm (10-5/8" × 3-25/64" × 12-21/64")  
 3.1 kg (6 lbs 13 oz)  
 AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
 15 W  
**Horizontal 4-track, 2-channel auto reverse stereo cassette deck**  
 1 hard permalloy recording/playback head, 1 hard permalloy playback head,  
 and 1 double-gap ferrite erase head  
 4.76 cm/s  
 Dolby B and C NR  
**Normal, chrome, and metal tapes**  
 270 (W) × 86 (H) × 318 (D) mm (10-5/8" × 3-25/32" × 12-33/64")  
 4.4 kg (9 lbs 11 oz)  
 AC 230 V, 50Hz, AC 240 V, 50Hz (for U.K. model)  
 18 W  
**Infrared pulse**  
 41 (including 1 slide switch)  
 60 (W) × 177 (H) × 18 (D) mm (20-23/64" × 6-31/32" × 45/64")  
 130 g (Approx. 6.4 oz) (including batteries)  
 • Maximum dimensions include controls, jacks, and covers. (W) = width, (H) = height, (D) = depth  
 • For improvement purposes, specifications and functions are subject to change without advanced notice.


**13 AUTO ON/OFF FUNCTION**

- When the CD or deck play button, or the OPEN/CLOSE button is pressed from the standby mode, the power is switched on automatically, and the play or open/close operation is performed. The "AUTO OFF" indicator lights at this time.
- When play ends in this mode and there are no operations for 10 minutes, the power is automatically switched off and the system enters the standby mode. If there is no disc or cassette in the system, the power will be switched off in about 1 minute.
- When the disc tray or the cassette tray is open, the tray will close in about 1 minute.
- When the tuner number buttons (preset numbers) are pressed, the power will be switched on in the same way and the system will enter the auto off mode. In this case, the "TUNED" indicator will go off and 10 minutes later the power will be switched off.

**14 IMPORTANT INFORMATION**

- **Head Demagnetizing**  
 The heads become magnetized after the deck has been used over a long period of time or if the heads are exposed to a magnetic field. This results in noise and reduced treble. In addition, there may be a reduction of the treble range of recorded tapes as well as noise produced on these tapes.  
 When the heads become magnetized, use one of the cassette tape head demagnetizers (erasers) available on the market to demagnetize the heads.  
 • For details, read the operating instructions of the demagnetizer.

- **Disc Cleaning**  
 Dust, fingerprints, or spittle on the disc can cause noise or skipping.  
 If the disc is dirty or if the player does not work properly, clean the disc as follows:  
 • Hold the disc as shown in the diagram, with the signal surface facing up (and the labelled side facing down).  
 • Using a soft cloth, wipe the disc gently from the inside straight towards the edges (as shown by the arrows).




- Do not wipe from the edges towards the center, or around the disc as you would wipe records.
- Do not use hard cloths or rub the disc forcefully, since the signal surface is susceptible to scratches.

- **Head Cleaning**  
 After the cassette deck has been used for a while, powder from the tapes and dirt adhere to the head and lower the sound quality. Use a head cleaning cassette tape to clean.

**NOTE:**  
 Some of the cleaning sets on the market have a strong polishing effect which can damage the head.

- **Disc Cleaning**

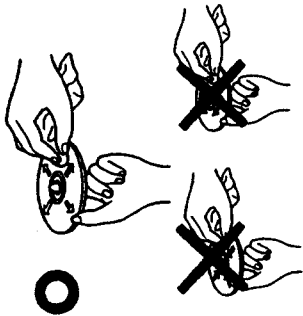

- Never use the following to clean discs:  
 • Solvents such as benzene or alcohol  
 • Cleaners containing abrasives  
 • Record sprays or cleaners  
 • Anti-static products

**GENERAL SECTION**

Avoid using ultrasonic humidifiers nearby. If ultrasonic humidifiers are used nearby, the calcium, etc., included in the water may be scattered into the air, causing white dust to accumulate on the surface of the objective lens or sensor, resulting in improper operation.

Normal operation may not be possible if there is dirt or other substances on the surface of the internal objective lens or sensor. These parts must be cleaned periodically depending on the place of installation. For details, contact your store of purchase.

**When Condensation Forms**  
The signals of the disc may not be read and this product will not operate properly. To remove the condensation, take out the disc and switch on the power. The condensation will evaporate within 1 hour and the set will operate normally.

**Dew (Condensation) Phenomenon**  
Dew (water droplets) may form on the lens of the internal optical system or on the disc, or on the rotating parts of the tape deck in situations such as the following:  
• Soon after a heater is put on.  
• When the set is placed in a steamy or damp room.  
• When the set is moved from a cold place to a warm room.

This system consists of precision components using microprocessors. Avoid using it in places where there is much external noise. If used in such places, the system may not operate properly, but this is not a problem with the system. If the system does not operate properly, try performing the desired operation again.

**16 TROUBLESHOOTING**



1. Check that the connections are proper.
2. Check that you are operating the system according to the instructions in the manual. Check the following table if the system does not seem to be working properly. If the problem is not solved after checking these points carefully, the system may be malfunctioning. Switch off the power and contact your store of purchase.

Common	Symptom	Cause	Measures	See Page
Common	Power does not come on when POWER button pressed.	• Power cord not plugged into outlet.	• Plug cord into outlet properly.	5
	No sound produced from speakers.	• VOLUME control set to minimum. • Headphones are plugged in. • Speaker cables not connected to speaker terminals.	• Turn VOLUME control clockwise (∞). • Disconnect headphones. • Connect speaker cables properly.	6
	Treble not produced. Orientation of sound field not clear.	• Speaker polarities (⊕ and ⊖) not matched.	• Connect speaker cables properly.	5
Deck	Source other than the desired one is heard.	• Function selector button not set properly.	• Set to desired function.	6
	Cannot record when REC/REC MUTE button pressed.	• No cassette tape loaded. • Accidental erasure prevention tabs of cassette broken off.	• Load tape. • Apply cellophane tape over holes.	14 13
	Sound is interrupted during playback and recording, or treble sound is low.	• Head dirty. • Tape stretched.	• Clean. • Replace tape.	21 -
Tuner	Wow (fluctuation) is heavy during playback and recording.	• Capstans and pinch rollers dirty.	• Clean.	21
	Buzzing noise heard during playback.	• Noise from TV. • (Some TVs produce noise.)	• Separate TV from system. • Turn off TV.	- -
	Hissing noise heard during FM reception.	• Antenna not pointed in proper direction. • Signals weak.	• Change direction of antenna. • Install outdoor antenna.	4 4
CD Player	Hissing or scratchy noise heard during AM reception.	• Noise from TV, etc., or interference from other stations.	• Turn off TV. • Change position of loop antenna. • Install outdoor antenna.	- 4
	Hum noise heard during AM reception.	• Signals coming over power cord are modulated by power source frequency.	• Plug in cord in opposite direction. • Install outdoor antenna.	5 4
	Disc loaded but total number of tracks not displayed.	• Disc loaded upside-down. • Disc dirty. • Non-standard disc loaded.	• Reload disc. • Clean disc. • Replace with standard disc.	16 21 16
CD Player	Operation not performed when buttons pressed, or playback stops in middle of track.	• Disc loaded upside-down. • Foreign object in disc holder. • Disc dirty. • Disc scratched.	• Reload disc. • Remove disc and remove foreign object. • Clean disc. • Replace with non-scratched disc.	16 16 21 -
	Sound skips.	• Dust, fingerprints, or spittle on disc. • Disc scratched. • Player set in shaky, unstable place.	• Clean disc. • Replace with non-scratched disc. • Set player in stable place.	21 - -
	Buzzing noise mixed in with CD sound.	• Signals coming over power cord are modulated by power source frequency.	• Plug in cord in opposite direction.	5




TUNER PRE SECTION

LEVEL DIAGRAM

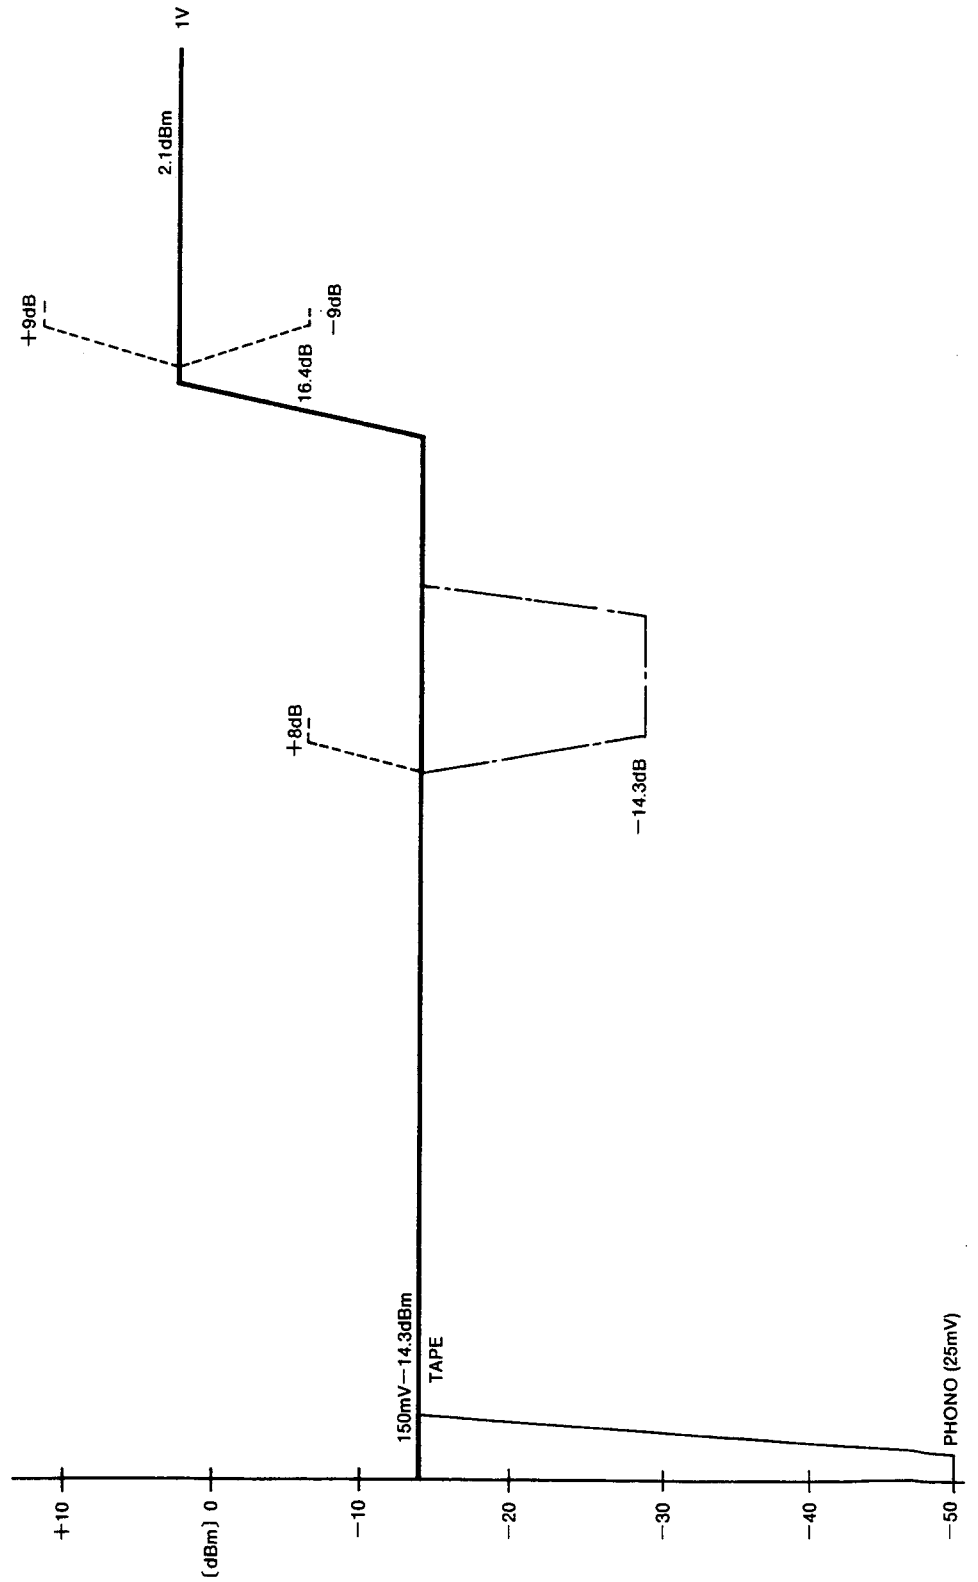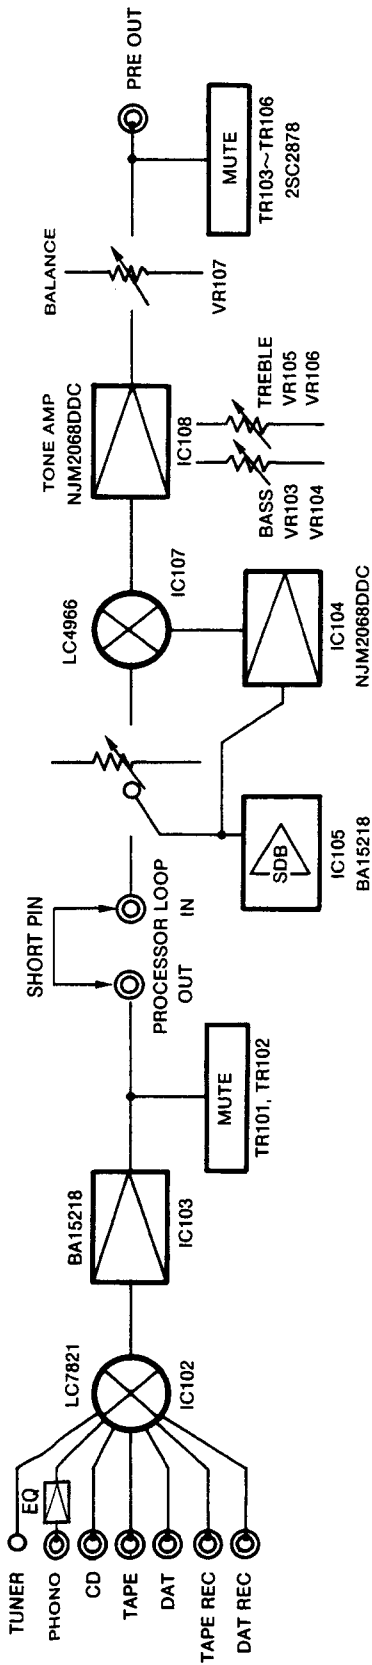



TUNER PRE SECTION

BLOCK DIAGRAM (TUNER SECTION)

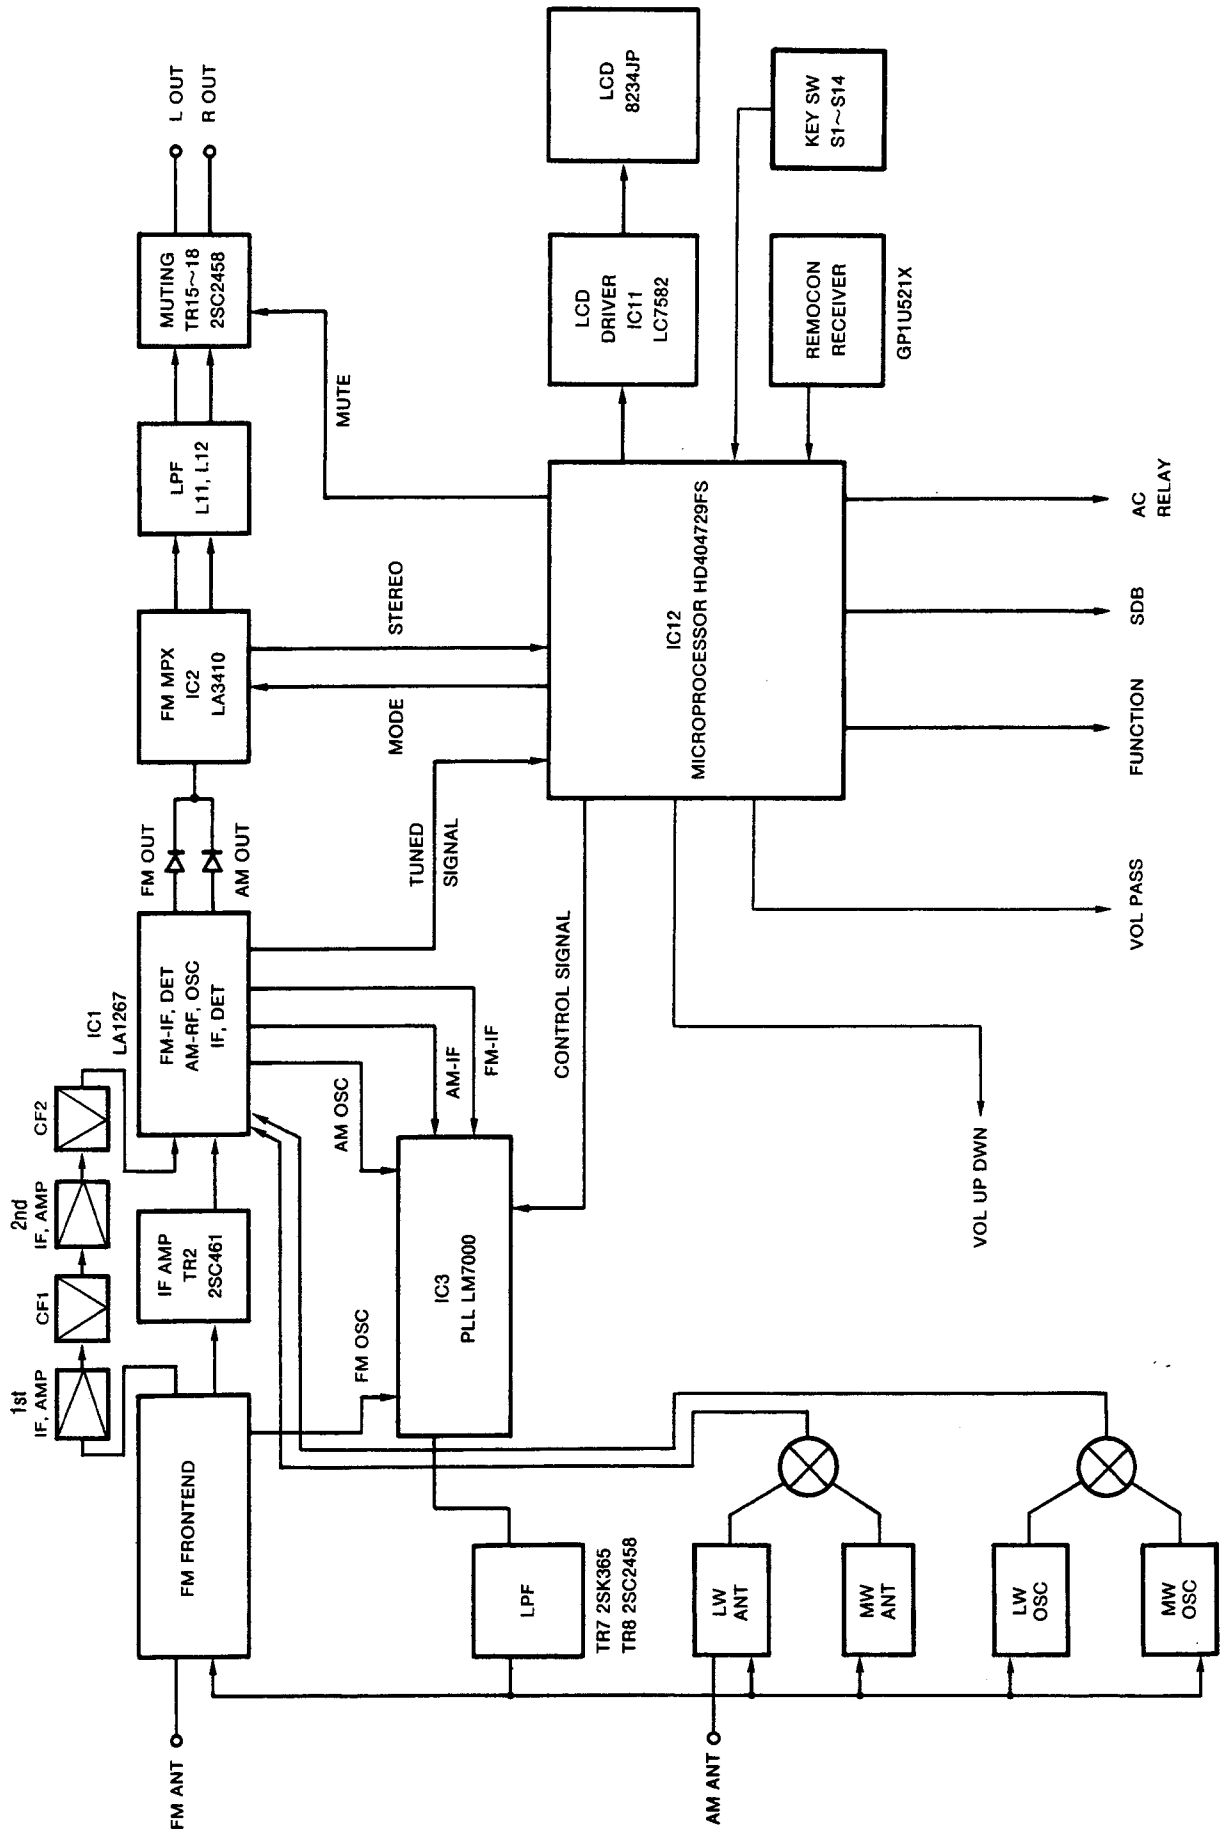

TUNER PRE SECTION

(PRE AMPLIFIER SECTION)

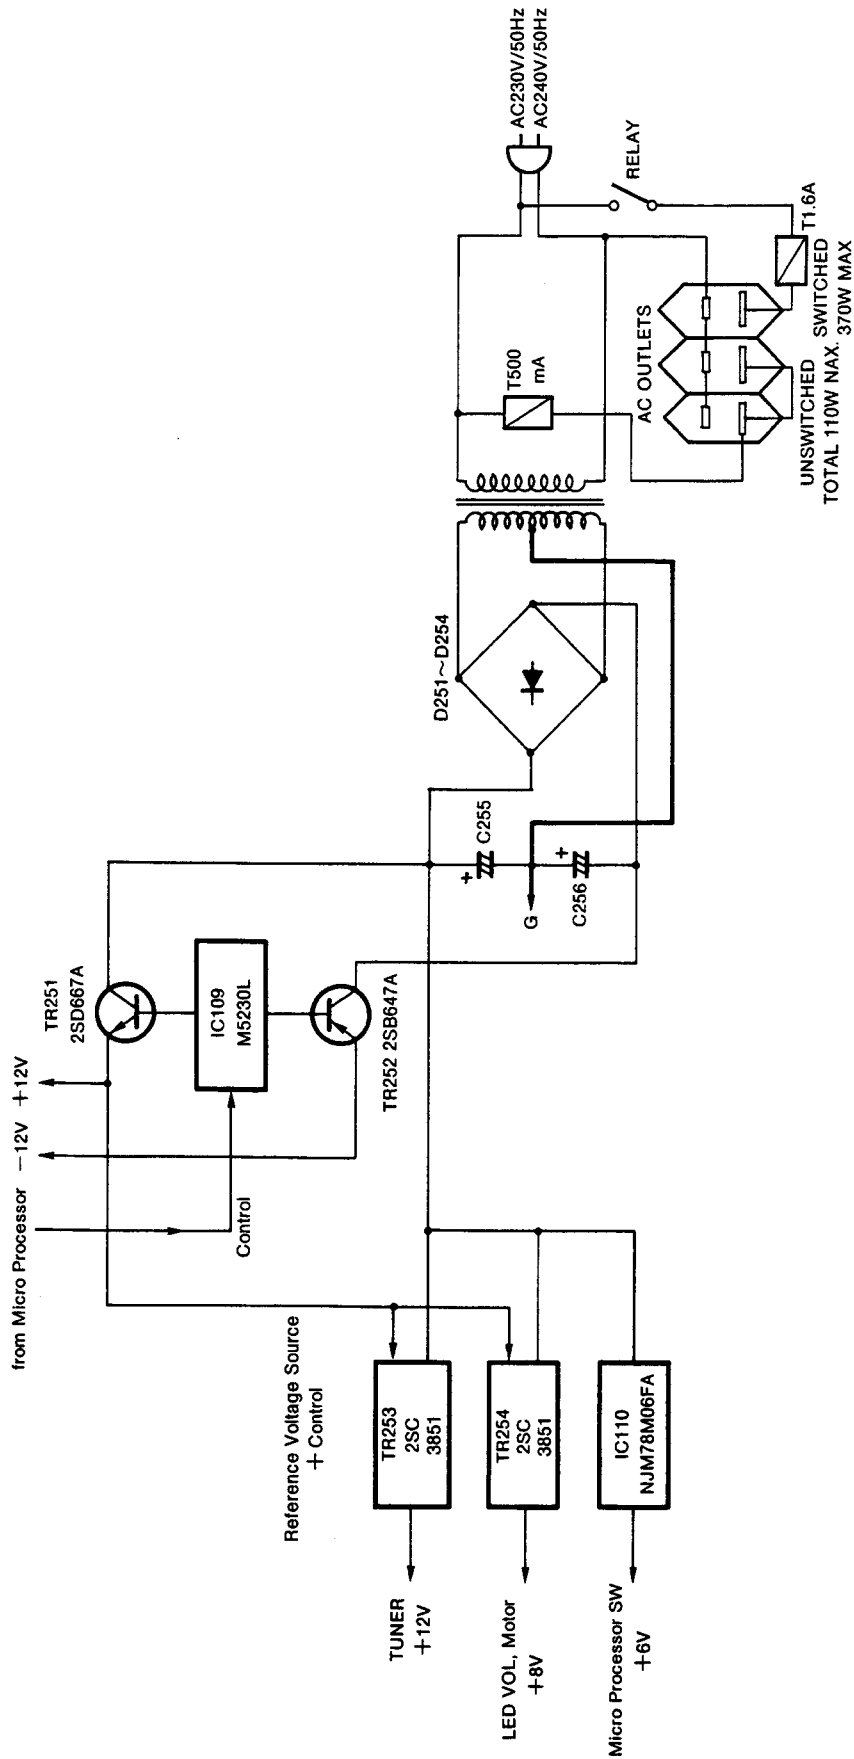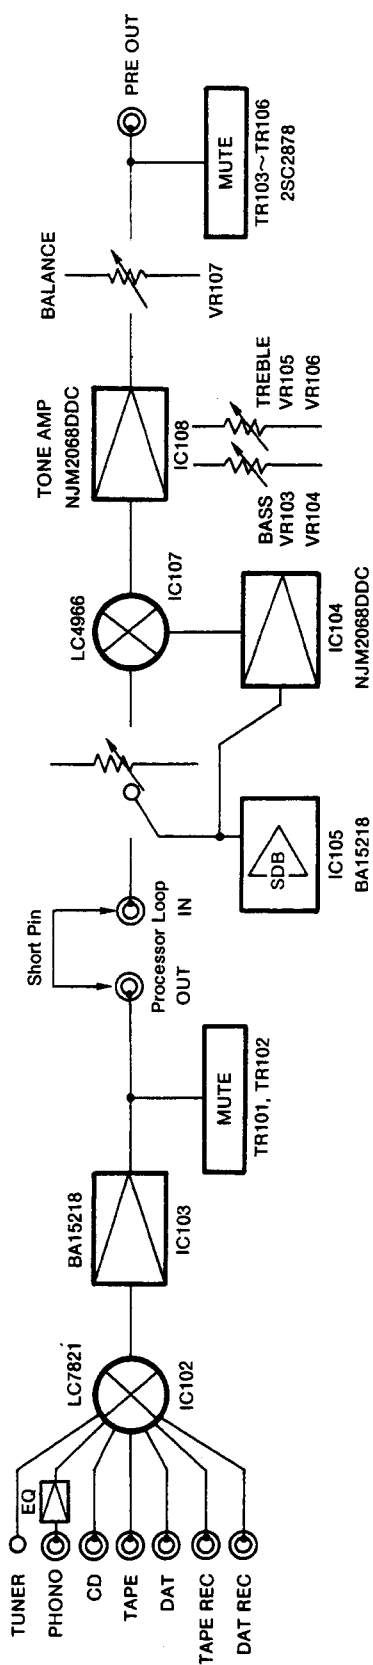


## TUNER PRE SECTION

## DISASSEMBLY PROCEDURES


(Follow these procedures in reverse order to reassemble.)

1. Removing the top cover and front panel


- ① Remove the 6 screws which fasten the top cover.
- ② Remove the 2 screws of the bottom side which fasten the front panel.

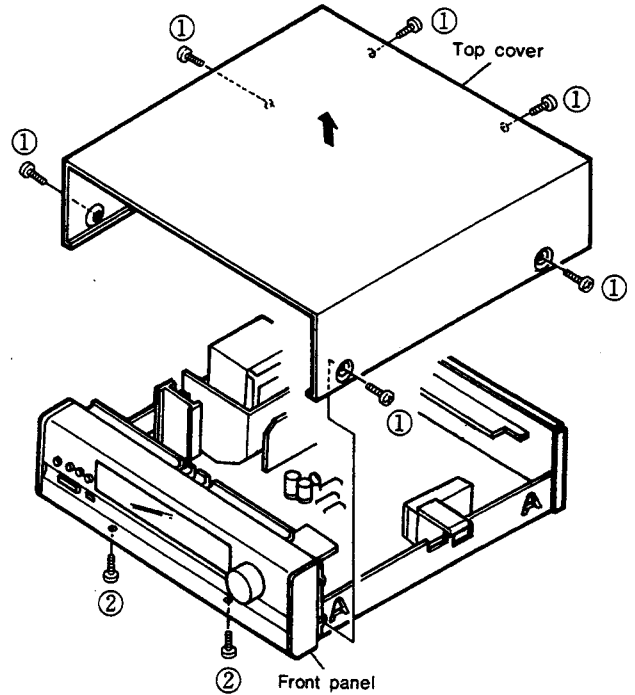

- ③ Disconnect connectors CB3, CB4, CB6, and CB8 which are attached to the main unit.
- ④ Remove the FFC cable, which is connected to the main unit, in the direction of the arrow.

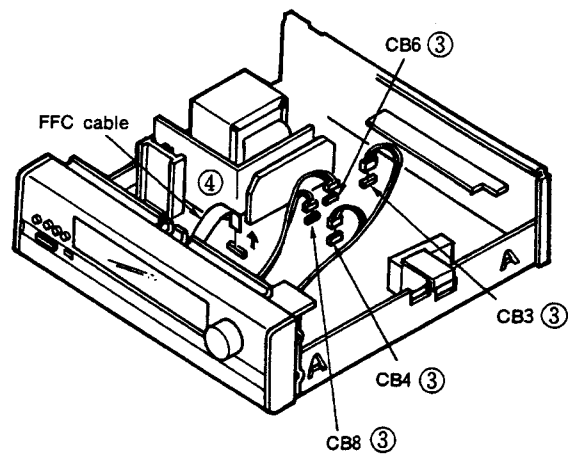


- ⑤ Remove the 2 screws which fasten the side plate.
- ⑥ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver),
- ⑦ Use your fingers to push out the hook of the inner panel from the side plate in the direction of the arrow.  
Using the same method for the left side, remove the side plate. Remove the front panel in the direction of the arrow.

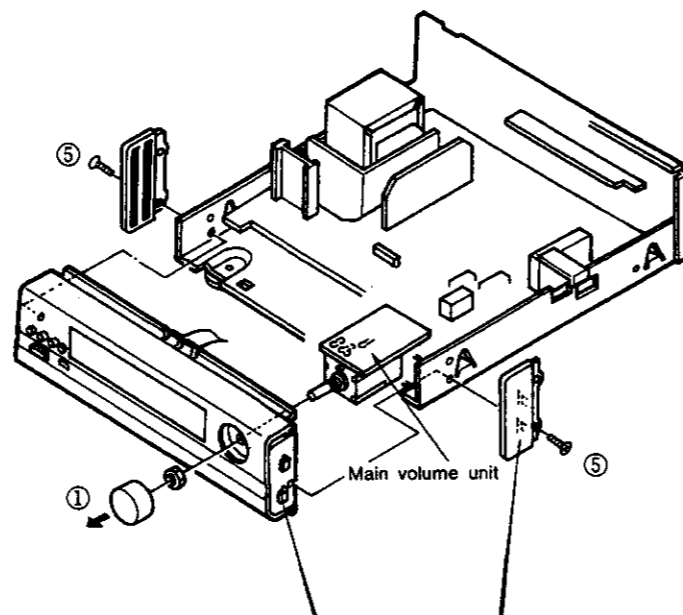

2. Removing the printed wiring boards

**MAIN VOLUME UNIT IU-2476-5**

- ① Remove the volume control assembly in the direction of the arrow and remove the nuts attached to the main volume unit.

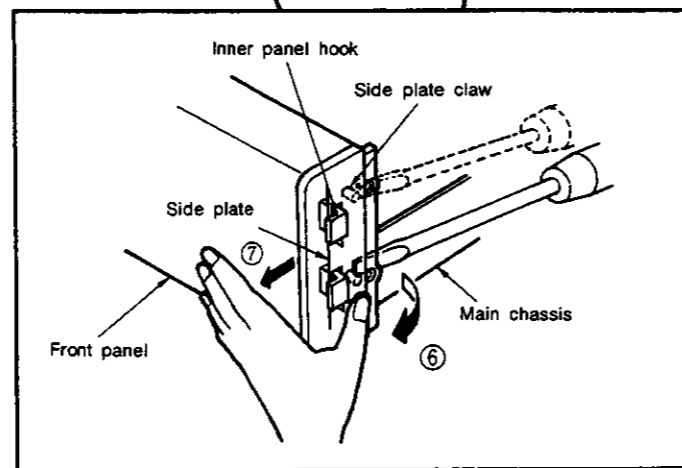


**TONE VOLUME UNIT IU-2476-4**

- ② Remove the 4 screws which fasten the tone volume unit (IU-2376-4) and remove the board in the direction of the arrow.

**LCD TACT SWITCH UNIT IU-2476-3**

- ③ Remove the 9 screws which fasten the LCD Tact switch unit and remove the board in the direction of the arrow.

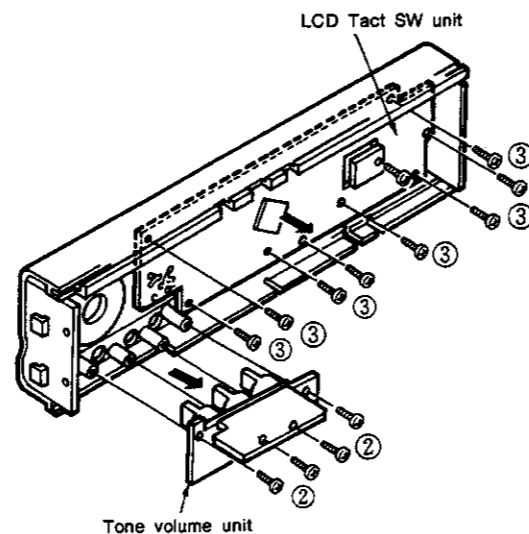


**S.D.B. UNIT 1U-2476-8**

- ④ Remove the S.D.B. unit in the direction of the arrow.


**TUNER UNIT IU-2476-2**

- ⑤ Remove the 3 screws which fasten the tuner unit.
- ⑥ Remove the solder from the shielded wire, then remove the screw.

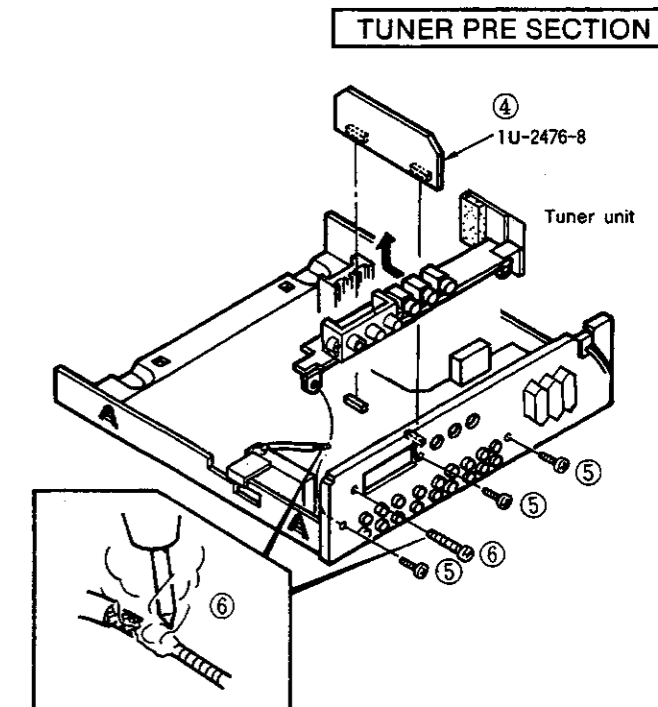


**MAIN UNIT IU-2476-1**

- ⑦ Remove the 2 shorting pins which are attached to the 6-pin pin jack.
- ⑧ Remove the 12 screws which are attached to the main unit.

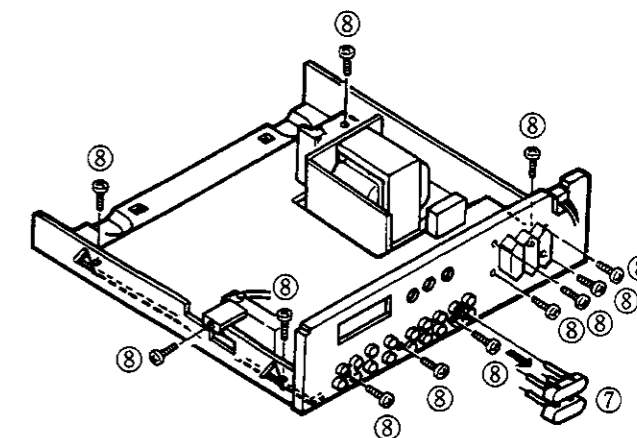


- ⑨ Remove the main unit in the direction of the arrow.

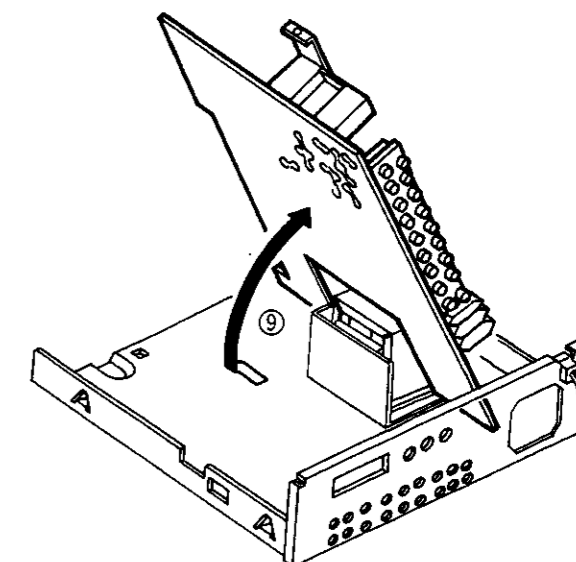


TUNER PRE SECTION

ADJUSTMENTS

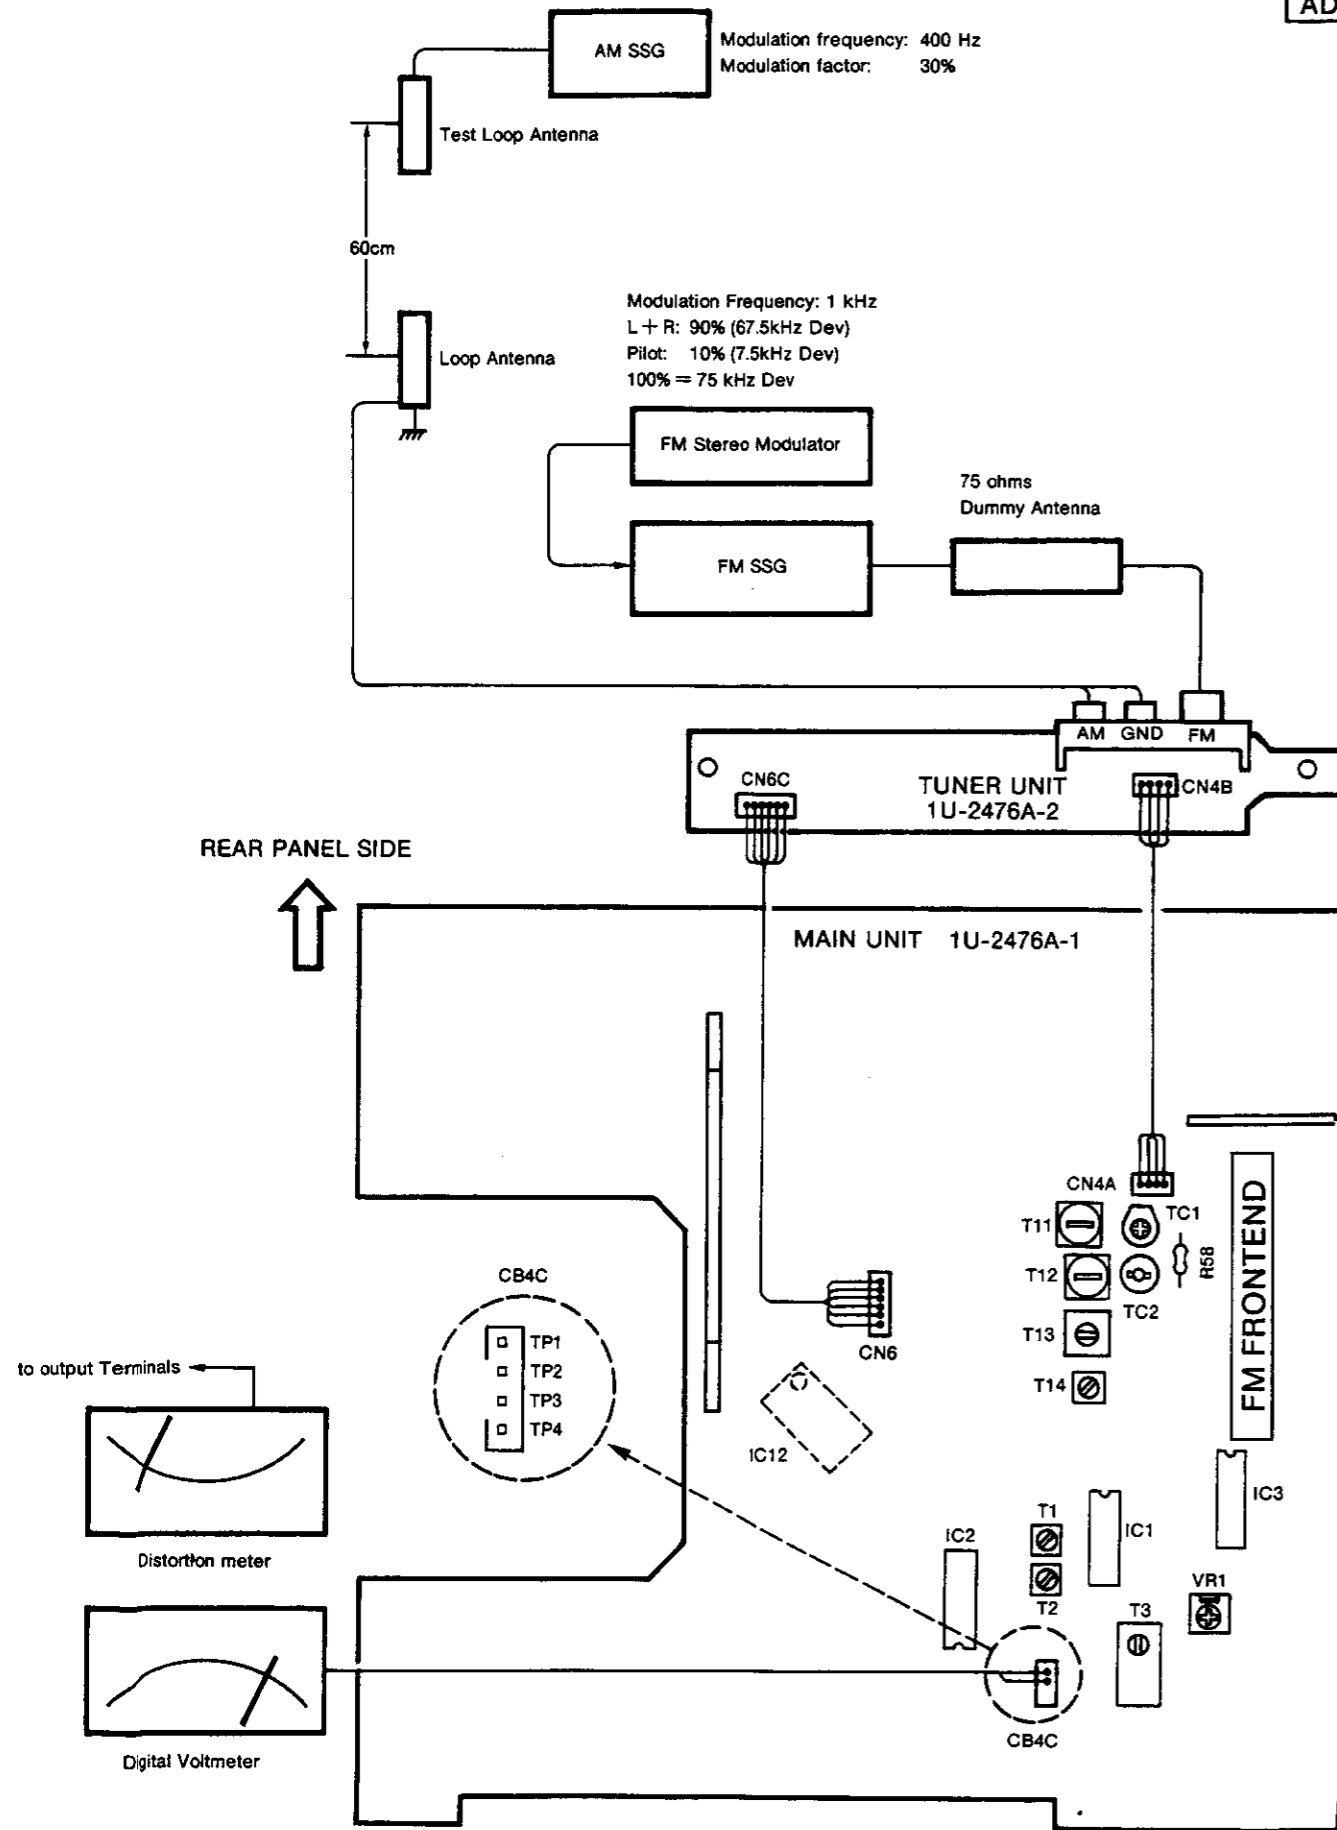

1U-2476 TUNER UNIT ASS'Y (Component Side)

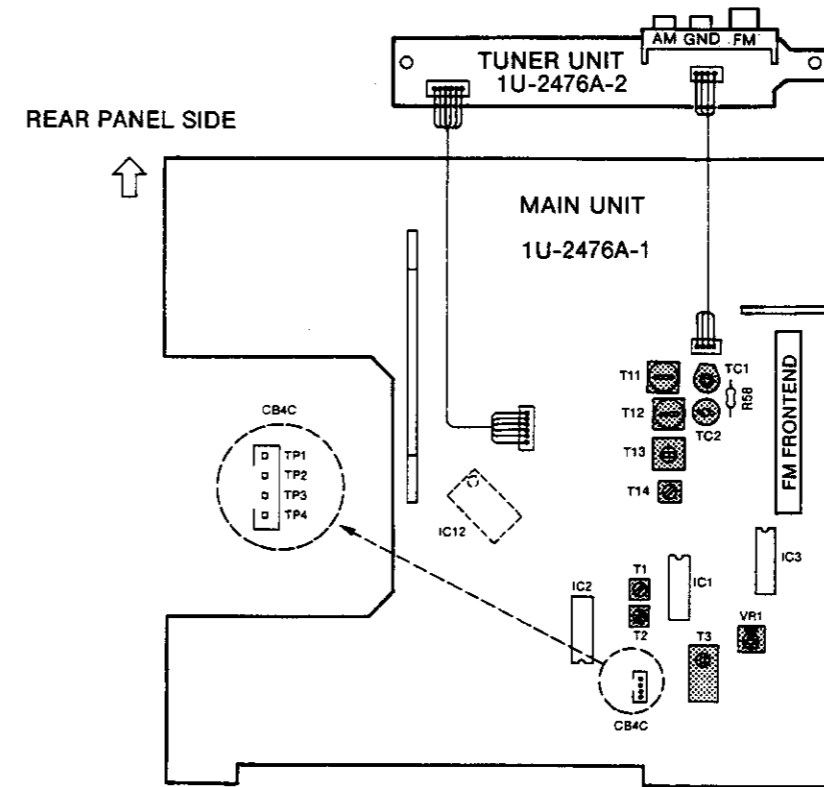

TUNER PRE SECTION

1. FM adjustment (BAND SELECTOR button: FM, STEREO / MONO MUTE button: AUTO)

Step	Adjustment item	Tuning point (Channel setting)	Input				Output		Adjustment location	Setting value	Notes	
			Measuring instrument	Frequency	Input level	Modulation	Connection location	Measuring instrument				Connection location
1	FM DC balance	98MHz	FM S.G.	98MHz	60dB $\mu$	1kHz 75kHz DEV	FM antenna terminal	Digital Volt	TP.1, TP.2	T-1	0 $\pm$ 50 mV	Perform with monaural modulation signal
2	Distortion	"	"	"	"	"	"	Distortion factor meter	Output jack	T-2	Minimum distortion	"
3	Repeat Steps 1 and 2.											
4	AUTO STOP level	98MHz	FM S.G.	98MHz	22dB $\mu$	1kHz 75kHz DEV	FM antenna terminal	Check for the lighting of TUNED	Output jack	VR-1	Input level 22dB $\mu$ $\pm$ 4dB	(Level at which TUNED lights up) Level at which the output is provided

2. MW adjustment (BAND SELECT button: MW)



1	IF	Clear frequency (without a broadcast)	AM IF sweep	-	Level at which AGC is not applied	-	AM antenna terminal	Oscilloscope	⊕ TP.3 ⊖ TP.4	T-3	Waveform maximum and symmetry	
2	Band edge	522kHz	-	-	-	-	-	Digital voltmeter	⊕ R58 ⊖ G	T-14	1.2V	
		1611kHz	-	-	-	-	-	-	-	-	Approx. 8.2V	No place to adjust
3	Tracking	603kHz	AM S.G.	603kHz	Level at which AGC is not applied	400Hz 30%	Loop antenna	VTVM	Output terminal	T-12	Maximum output	
4	Tracking	1404kHz	"	1404kHz	"	"	"	"	"	TC-2	Maximum output	
5	Repeat Steps 3 and 4, and set the output to maximum.											

3. LW adjustment (BAND SELECT button: LW)

1	Band edge	153kHz	-	-	-	-	-	Digital voltmeter	⊕ TP.5 ⊖ TP.6	T-13	1.2V	
		279kHz	-	-	-	-	-	-	-	-	Approx. 7.0V	No place to adjust
2	Tracking	163kHz	AM S.G.	163kHz	Level at which AGC is not applied	400Hz 30%	Loop antenna	VTVM	Output terminal	T-11	Maximum output	
3	Tracking	270kHz	"	270kHz	"	"	"	"	"	TC-1	Maximum output	
4	Repeat Steps 2 and 3, and set the output to maximum.											

Front End  
Part No.: 2160079005



No.	Name	No.	Name
1	ANT	5	V1
2	ANT	6	+B
3	AGC	7	IF OUT
4	GND	8	OSC OUT

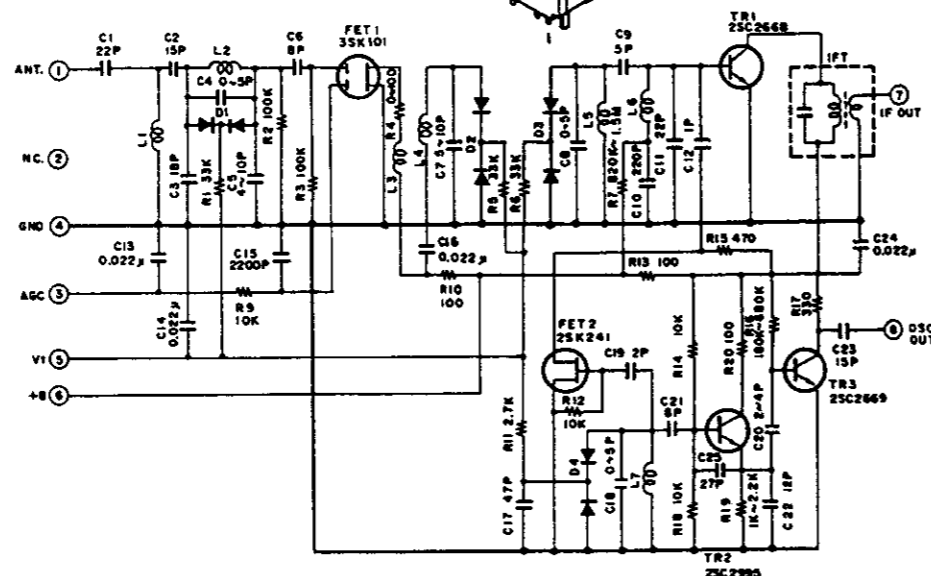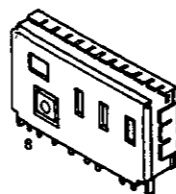


TUNER PRE SECTION

IC's



LM7000 (IC003)

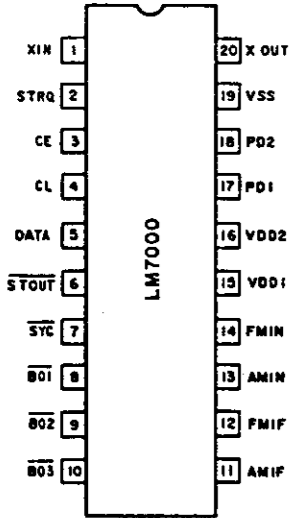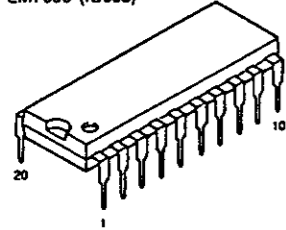


**Pin Description**  
 SYC : Clock (400 kHz) for the controller  
 XIN, XOUT : X'tal oscillator (7.2 MHz) with built-in feedback resistor  
 FM IN, AM IN : Local oscillator signal input  
 CE, CL, DATA : Data input  
 B01, B02, B03 : Band data output. B01 can be set as the time base output (8 Hz).  
 STRQ : IF counter request input  
 STOUT : Auto research stop signal output  
 VDD1, VDD2, VSS : Power supply (VDD2 is a back-up power supply)  
 AMIF, FMIF : IF signal input  
 PD1, PD2 : Charge pump output

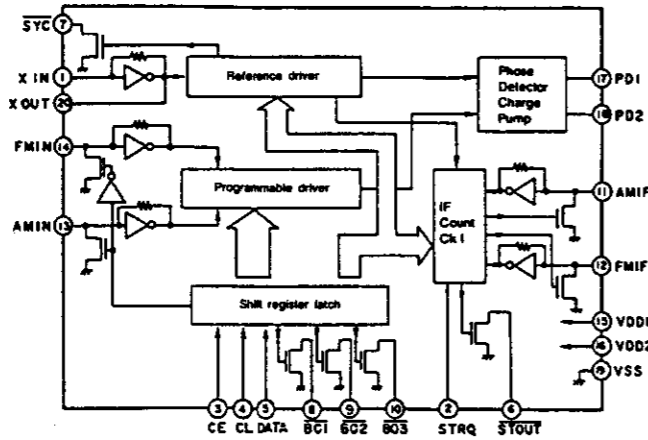


LA1267 (IC001)

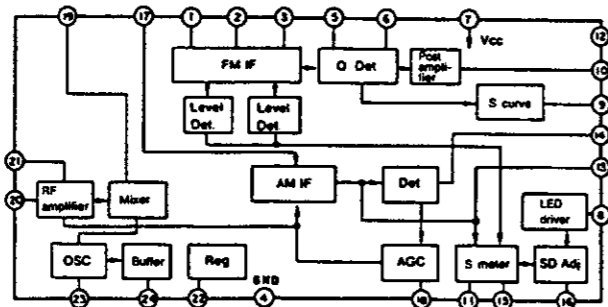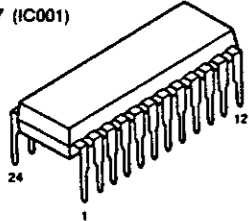

NJM78M06FA (IC110)




1: Input  
 2: GND  
 3: Output


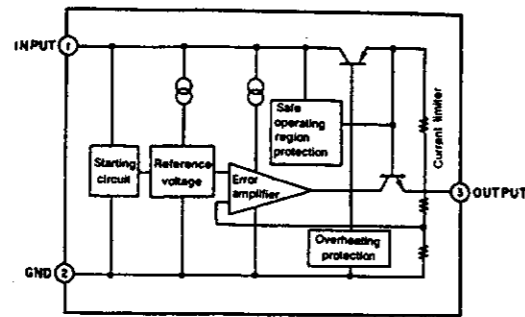


SEMICONDUCTORS



LA3410 (IC002)

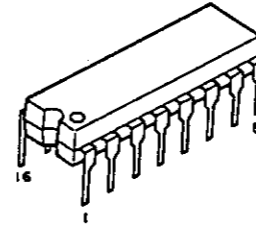

LC7582 (IC011)

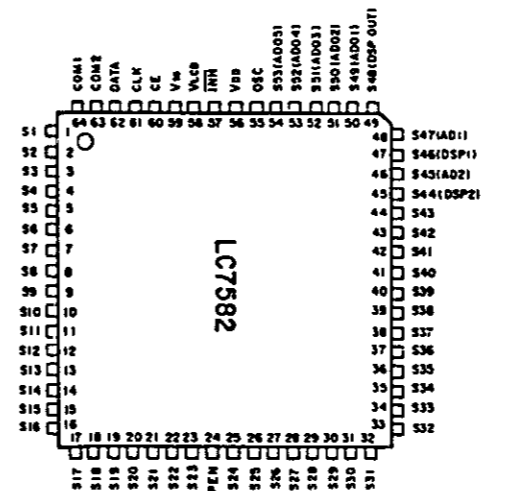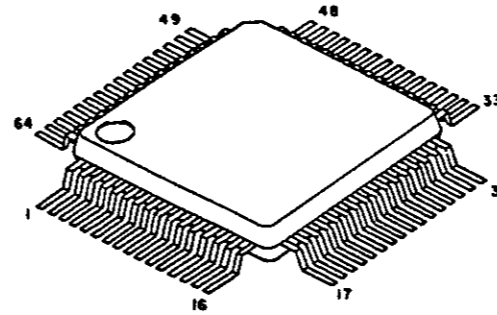


**Pin Description**  
 S1 through S43 : Segment output pins  
 S46 (DSP1), S44 (DSP2) : Segment output or DSP input pins  
 S47 (AD1), S45 (AD2) : Segment output or AD input pins  
 S48 (DSPOUT) : Segment output of DSP output pin  
 S49 through S53 (AD01 through 5) : Segment output or AD output pins  
 COM1, 2 : Common output pins (Only COM1 is used at time of 1:1 duty, and COM2 is set open)  
 VLCD : LCD bias voltage setting pin  
 OSC : Oscillation pin  
 CE, CLK, DATA : Input pin for serial data transfer  
 VDD, VSS, VDD : Supply pins  
 INH : Display-off input pin. (Valid only with the output driver. This means that the transfer of serial data is possible while the display is off.)  
 OPEN : No connection is made.

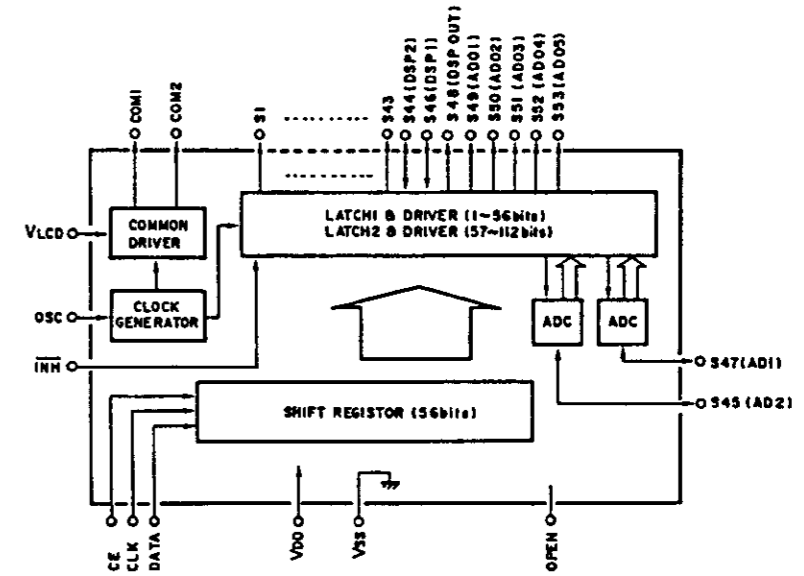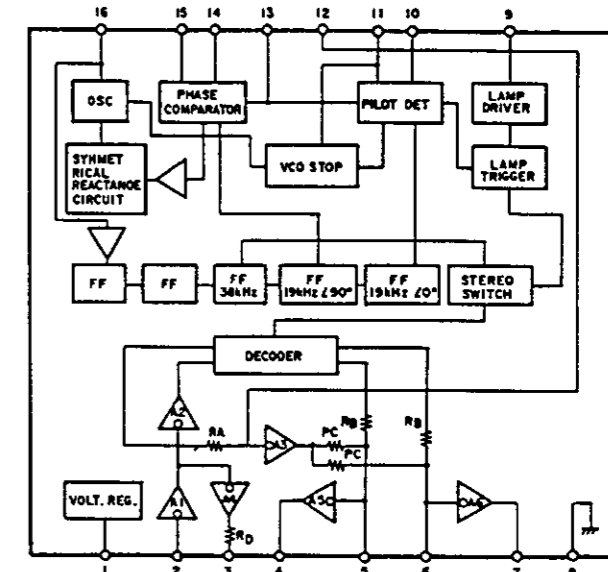





TUNER PRE SECTION

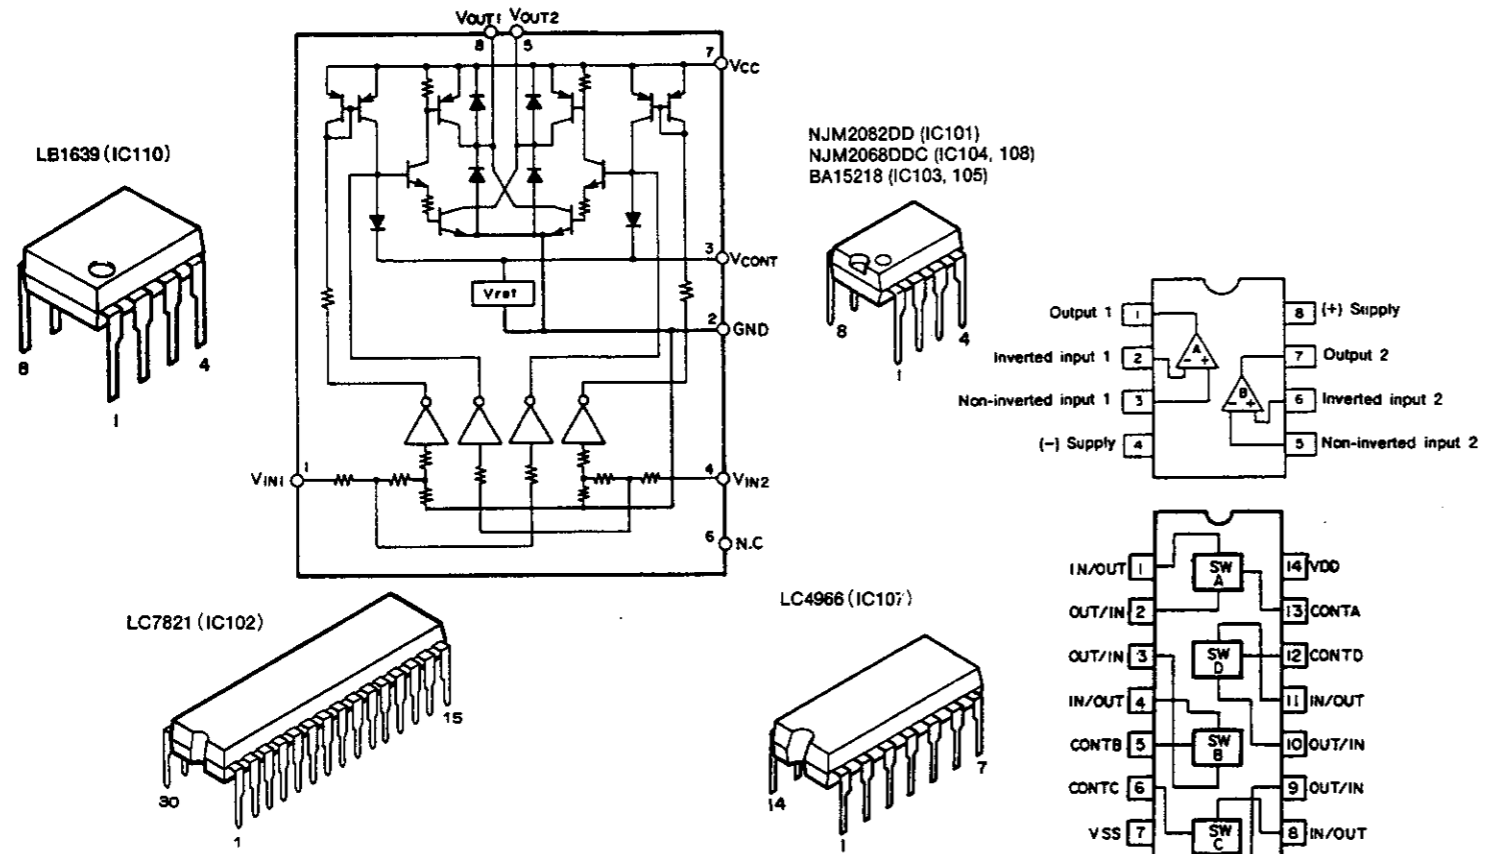


● Transistors

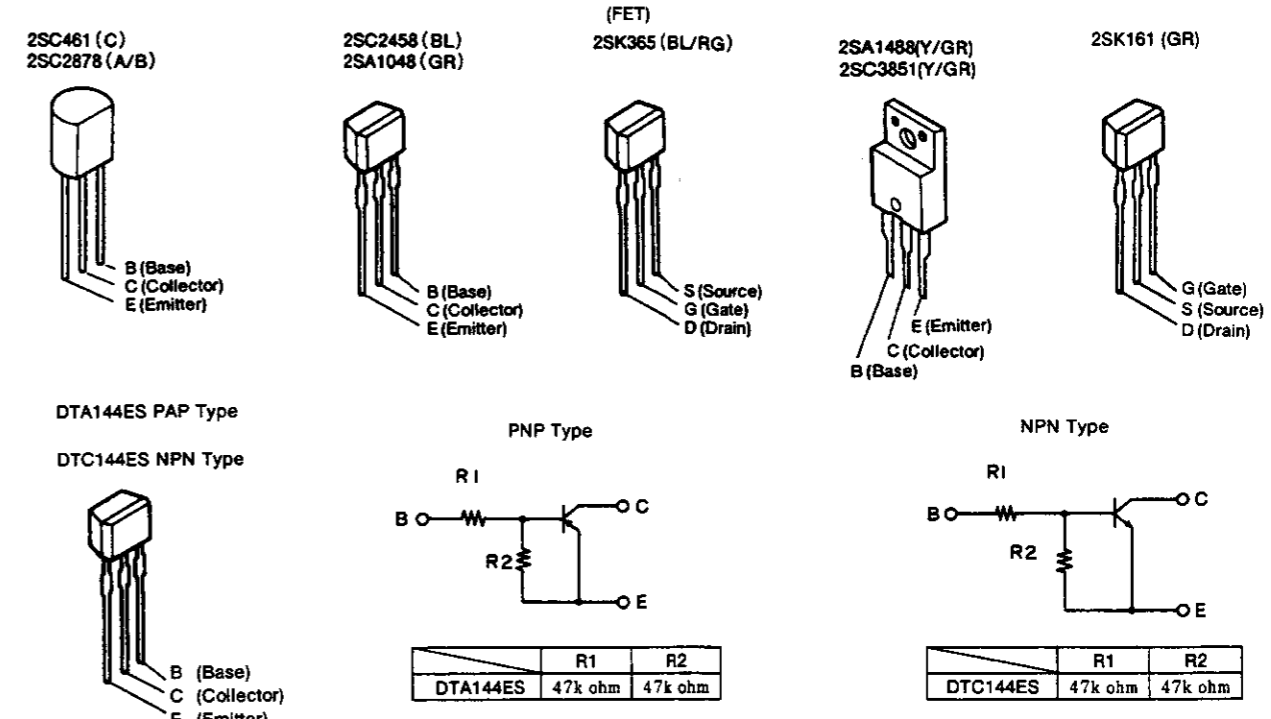

● Diodes (including LED)

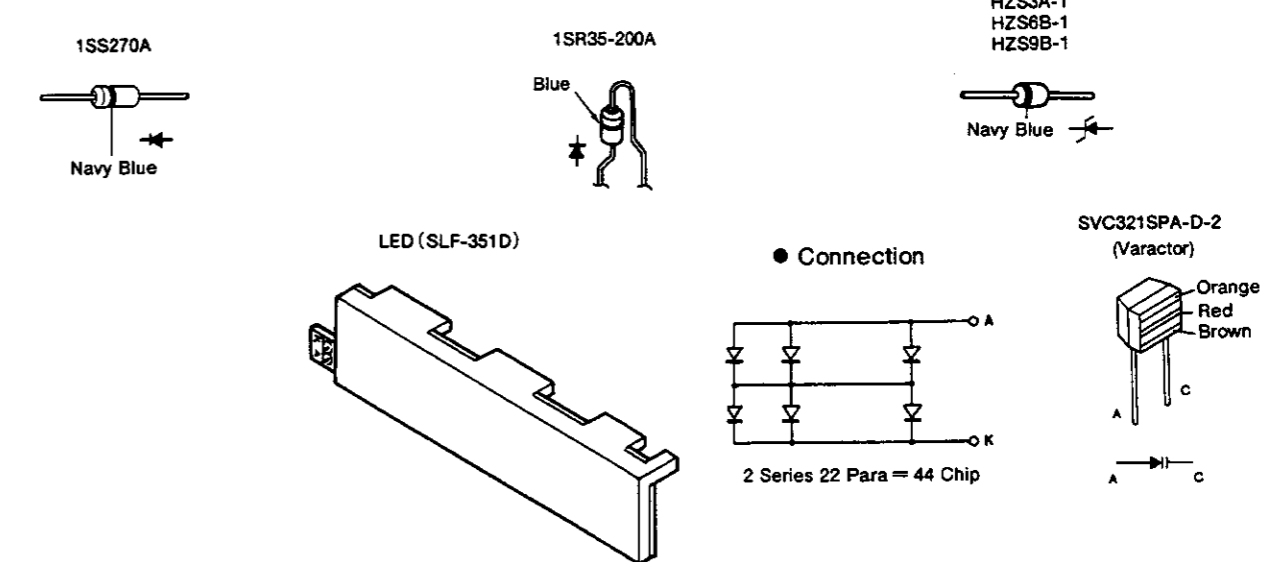


● Infrared Remote Control Sensor

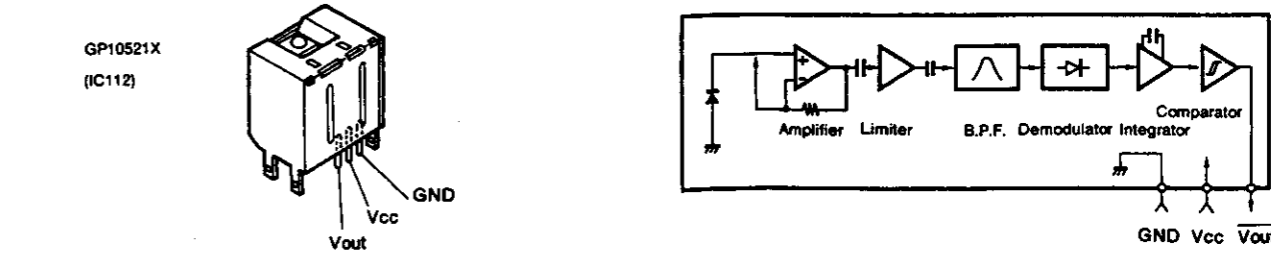


**TUNER PRE SECTION**

● LCD ASS'Y  
Part No.: 3934142002 (8234JP)

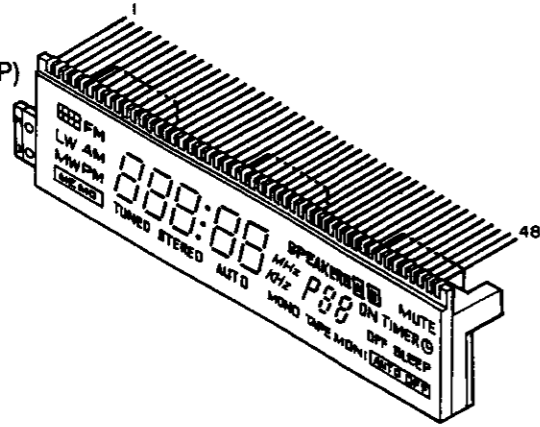

Segment division

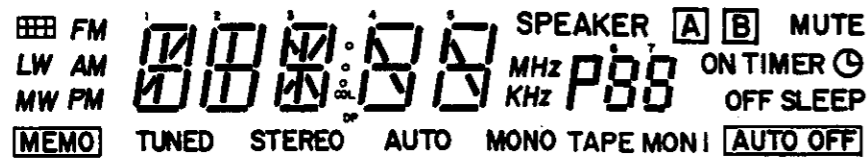

● LCD Pin Configuration Pin configuration definitions (segment side)

A/B	COM1	COM2	A/B	COM1	COM2
S 1	A11	A 4	S31	C (LW)	K (MONO)
S 2	A10	A 3	S32	M (KHz)	N (MHz)
S 3	A 9	A 2	S33	A (□□)	L (DIRECT)
S 4	A 8	A 1	S34	G 4	G 3
S 5	A 7	A 6	S35	T (P)	O (SPEAKER)
S 6	A 5	B 3	S36	G 2	G 1
S 7	B 8	B 2	S37	G 7	G 6
S 8	B 7	B 1	S38	G 5	H 3
S 9	B 5	B 6	S39	Q (B)	P (A)
S10	B 9	B 4	S40	H 7	H 2
S11	C12	C 4	S41	H 6	H 1
S12	C11	C 3	S42	S (OFF)	R (ON)
S13	C 9	C 2	S43	H 4	H 5
S14	C 8	C 1	S44	V (TIMER)	U (MUTE)
S15	C 7	C 6	S45	W (□)	X (SLEEP)
S16	C13	C10	S46	B (FM)	Y (AUTO OFF)
S17	D 2	C 5	S47	—	—
S18	I (STEREO)	D 1	S48	—	—
S19	E 4	E 3	S49	—	—
S20	E 7	E 2	S50	—	—
S21	E 6	E 1	S51	—	—
S22	E 9	E 8	S52	—	—
S23	E 5	F 3	S53	—	—
S24	F 7	F 2			
S25	F 6	F 1			
S26	F 4	F 8			
S27	F 9	F 5			
S28	G (MEMO)	H (TUNED)			
S29	F (PM)	J (AUTO)			
S30	D (AM)	E (MW)			

B. Common side  
COM1  
COM2

Pin Connection



NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
COM1	—	COM	1l	1m	1g	1i	1j	1c	2g	2i	2c	2l	3l	3m	3h	3i	3j	3k	DP	STEREO	4d	4h	4b	4k
COM2	COM	—	1d	1e	1f	1a	1b	2e	2f	2a	2b	2d	3d	3e	3f	3a	3b	3g	3c	COL	4e	4f	4a	4g

NO	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	
COM1	4c	5b	5b	5d	5k	MEMO	PM	AM	LW	KHZ		6d	P	6f	6g	6c	B	7g	7b	OFF	7d	TIMER		FM	
COM2	5e	5f	5a	5g	5c	TUNED	AUTO	MW	MONO	MHZ	TAPE	MONI	6e	SPEA	6a	6b	7e	SUB	7f	7a	ON	7c	MUTE	SLEEP	AUTO

**MICROPROCESSOR DOCUMENTATION**

HD404729FS Part No.: 2621624106  
(IC012)

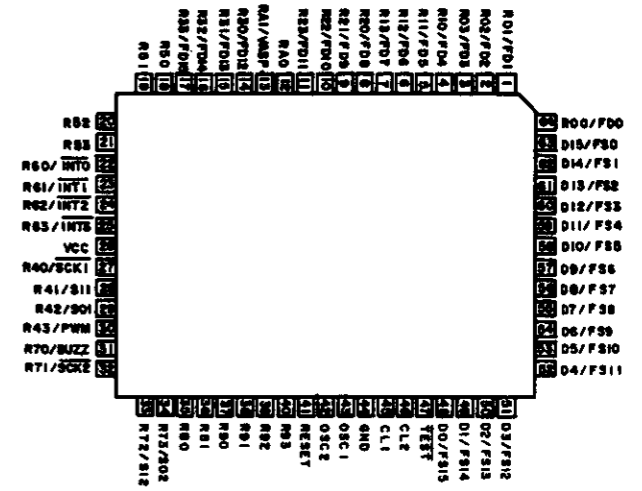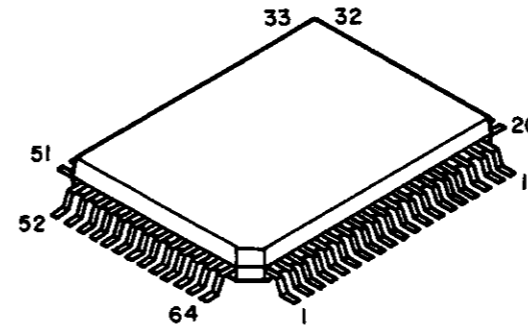

1. Overview

The functions of this microcomputer are made up of the following four pillars.

- a. Tuner Functions
  - These functions perform the required control for the reception of FM and AM broadcasts.
- b. Auto Functions
  - Positioned at the heart of the system stereo, the auto functions perform serial communications with other components (such as the deck, CD, and amplifier) to provide overall control.
  - These functions decode the signals from the remote control and send them to each component of the system.
- c. Timer Functions
  - Counts the clock of the 24-hour display.
  - Provides 2 types of timer operation: once and sleep.
- d. Display Function
  - Outputs the control signal of the LCD.

**Note 1:** When buttons "ENTER/NEXT" and "MEMORY" of the wiring diagram are pressed simultaneously and the power cord is inserted into the power outlet, the frequencies used for the tracking adjustment will automatically be registered in the preset memory as indicated below.

Use this information for tuning and other procedures.

	P 1	P 2	P 3	P 4	P 5	P 6	P 7	P 8	P 9	P 10
MW (kHz)	522	603	999	1,098	1,404	1,611	153	163	270	279
	P 11	P 12	P 13	P 14	P 15	P 16	P 17	P 18	P 19	P 20
FM (MHz)	87.50	89.00	98.00	100.10	108.00	87.50	254	163	87.50	87.50
	P 21	P 22	P 23	P 24	P 25	P 26	P 27	P 28	P 29	P 30
MW (kHz)	522	522	522	522	522	522	522	522	522	522


2. Receiving Band Table

Band	Receiving frequency	Local oscillator frequency	IF frequency	Frequency division ratio	Comparison frequency	Step frequency	Other
FM	87.50~108.00 MHz	98.20~118.70 MHz	10.7 MHz	1/2	25 kHz	100 kHz	STEREO
MW	522~1611 kHz	972~2061 kHz	450 kHz	—	9 kHz	9 kHz	
LW	153~279 kHz	603~729 kHz	450 kHz	—	1 kHz	1 kHz	


TUNER PRE SECTION

3. Signals sent to the LM7000 Programmable Divider

- a. Signals to the programmable divider are sent from 3 sources: CE OUT, CLOCK OUT, and DATA OUT.
- b. The programmable divider takes in DATA at CLOCK  $\bar{f}$ , when CE equals 1.
- c. The data is a 24-bit serial signal which is taken in to the programmable divider from the LSB.  
(At the AM setting, D<sub>0</sub> through D<sub>3</sub> are ignored, so that D<sub>4</sub> becomes the LSB.)
- d. The data is made up of the number of frequency divisions data, the band data, and the comparison frequency data. (See diagram below.)

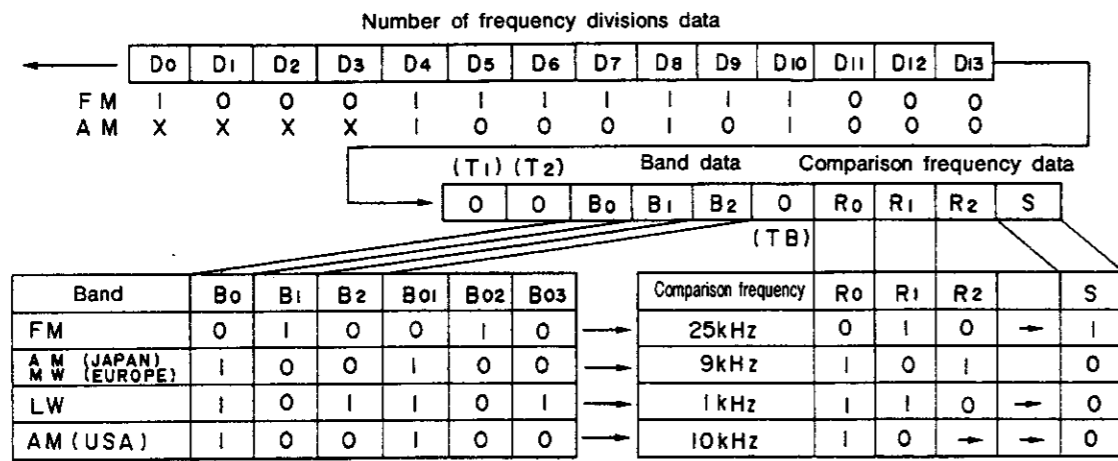

e. Timing for sending  
a = 2.5 μsec

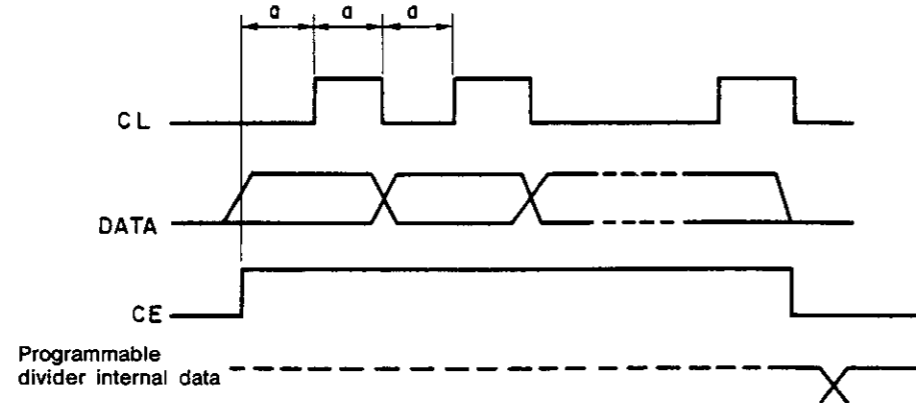

Description of Key and Selection Switch Inputs

No.	Function Name	Function
1	TAPE MONI	Pressing this button selects whether the tape monitor is on or off. *When the tape monitor is on, TAPE MONI OUT1 is high. *When the tape monitor is off, TAPE MONI OUT1 is low.
2	FREQ UP	*In the tuner mode, this function shifts the reception frequency upwards in steps of 1. After the button has been depressed for 0.5 seconds or longer, the frequency changes continuously, then from the point at which the button is released the tuner enters the auto tuning mode. Pressing the button again will set the step operation.
3	FREQ, DOWN	*In the tuner mode, this function shifts the reception frequency downwards in steps of 1. After the button has been depressed for 0.5 seconds or longer, the frequency changes continuously, then from the point at which the button is released the tuner enters the auto tuning mode. Pressing the button again will set the step operation.
4	BAND	This function operates cyclicly to command switching to the FM, AM (MW), and LW reception modes.
5	MODE	During FM reception this function commands switching of the reception mode to the stereo/mono auto mode and the forced mono mode.
6	SDB	Pressing this button selects whether SDB is on or off. With SDB on, high level is output. With SDB off, low level is output.
7	CLEAR	This function commands a clearing of the timer setting contents.
8	TIMER	When you would like the timer to operate only once at the set time, this button causes a shift to this setting mode. A one-course setting is possible.
9	ENTER/NEXT	This function is used to advance to the next step during the clock setting or the setting of the timer.
10	POWER	This is the RELAY OUT button which switches on and off the power of the other system components.
11	STAND BY	Pressing this button selects whether the timer operation is on or off. When timer operation is desired, pressing this button causes the standby mark in the LCD to light.
12	MEMORY	*During the tuner mode, this function causes a shift to the mode in which the station currently being received is registered in the preset memory. The "MEMORY" indication will flash and registration will be achieved when the P1-P10 and P+10 buttons are pressed.
13	FUNC	This function operates cyclicly to switch the function of the amplifier.
14	DISPLAY	This function switches the time display and the mode display.

## TUNER PRE SECTION


## Pin Description (HD404729FS---)

Pin No.	Port Name	Function Name	Function
1	R01/FD1	AVC CHECK IN2	AVC on/off signal input pin.
2	R02/FD2	SDB	SDB control output.
3	R03/FD3	AVC	Outputs a high level at time of FUNCTION AVC.
4	R10/FD4	S.FUNC.MUTE OUT	FUNCTION MUTE output pin.
5	R11/FD5	S.CE	CE output for LC7821-L.
6	R12/FD6	S.DATA	Data output for LC7821-L.
7	R13/FD7	S.CLOCK	Clock output for LC7821-L.
8	R20/FD8	VOLUME UP OUT	Output for motor drive up.
9	R21/FD9	VOLUME DOWN OUT	Output for motor drive down.
10	R22/FD10	S.DIRECT	Direct mode switching output.
11	R23/FD11	DIMMER OUT	Dimmer mode switching output.
12	RA0	STEREO IN	STEREO indication signal input.
13	RA1/Vdisp	STOP IN	PTOP signal input.
14	R30/FD12	20DB MUTE OUT	20 dB muting output pin.
15	R31/FD13	POWER OFF OUT	Power on/off control output.
16	R32/FD14	MONI OUT1	High level output when tape monitor is on.
17	R33/FD15	VOL PASS OUT	Volume pass output control pin.
18	R50	SERIAL SIG OUT	Denon bus out pin.
19	R51	RELAY OUT	Provides a toggle operation in sync with the POWER button to control the AC relay.
20	R52	MUTE OUT	Muting output pin of the tuner audio output.
21	R53	AUTO/MONO OUT	Auto/Mono switching output pin.
22	R60/INT0	SERIAL SIG IN	Denon bus input pin.
23	R61/INT1	50/60 IN	50Hz/60 Hz pulse input pin.
24	R62/INT2	SIGNAL IN	Tuner signal input pin.
25	R63/INT3	TUNED IN	Tuning signal input pin.
26	VCC		5 V
27	R40/SCK1	PLL CLOCK OUT	Clock output pin for PLL.
28	R41/SI1	PLL ST REQ OUT	Request output pin for PLL.
29	R42/SO1	PLL DATA OUT	Data output pin for PLL.
30	R43/PWM	PLL CE OUT	CE output pin for PLL.
31	R70/BUZZ	LCD INH OUT	INH output for LCD (LC7582).
32	R71/SCK2	LCD CLOCK OUT	Clock output for LCD (LC7582).
33	R72/SI2	LCD CE OUT	CE output for LCD (LC7582).
34	R73/SO2	LCD DATA OUT	Data output for LCD (LC7582).
35	R80	PROTECT IN	Speaker protect input pin.
36	R81	REMOCON1 IN	Remote control 1 input pin.
37	R90	KRO	Key return 0.
38	R91	KR1	Key return 1.
39	R92	KR2	Key return 2.
40	R93	KR3	Key return 3.
41	RESET		Reset input pin.
42	OSC2		4 MHz Cell lock.
43	OSC1		4 MHz Cell lock.
44	GND		Ground
45	CL1		32 kHz xtal

Pin No.	Port Name	Function Name	Function
46	CL2		32 kHz xtal
47	TEST		5 V
48	D0/FS15	PRE OUT ON/OFF	Pre out control output.
49	D1/FS14	SP RELAY A OUT	Speaker A control output.
50	D2/FS13	SP RELAY B OUT	Speaker B control output.
51	D3/FS12	KS12	Key strobe 12.
52	D4/FS11	KS11	Key strobe 11.
53	D5/FS10	KS10	Key strobe 10.
54	D6/FS9	KS9	Key strobe 9.
55	D7/FS8	KS8	Key strobe 8.
56	D8/FS7	KS7	Key strobe 7.
57	D9/FS6	KS6	Key strobe 6.
58	D10/FS5	KS5	Key strobe 5.
59	D11/FS4	KS4	Key strobe 4.
60	D12/FS3	KS3	Key strobe 3.
61	D13/FS2	KS2	Key strobe 2.
62	D14/FS1	KS1	Key strobe 1.
63	D15/FS0	KS0	Key strobe 0.
64	R00/FD0	AVC CHECK IN1	AVC on/off signal input pin.

MICROPROCESSOR PERIPHERAL WIRING DIAGRAM

TUNER PRE SECTION

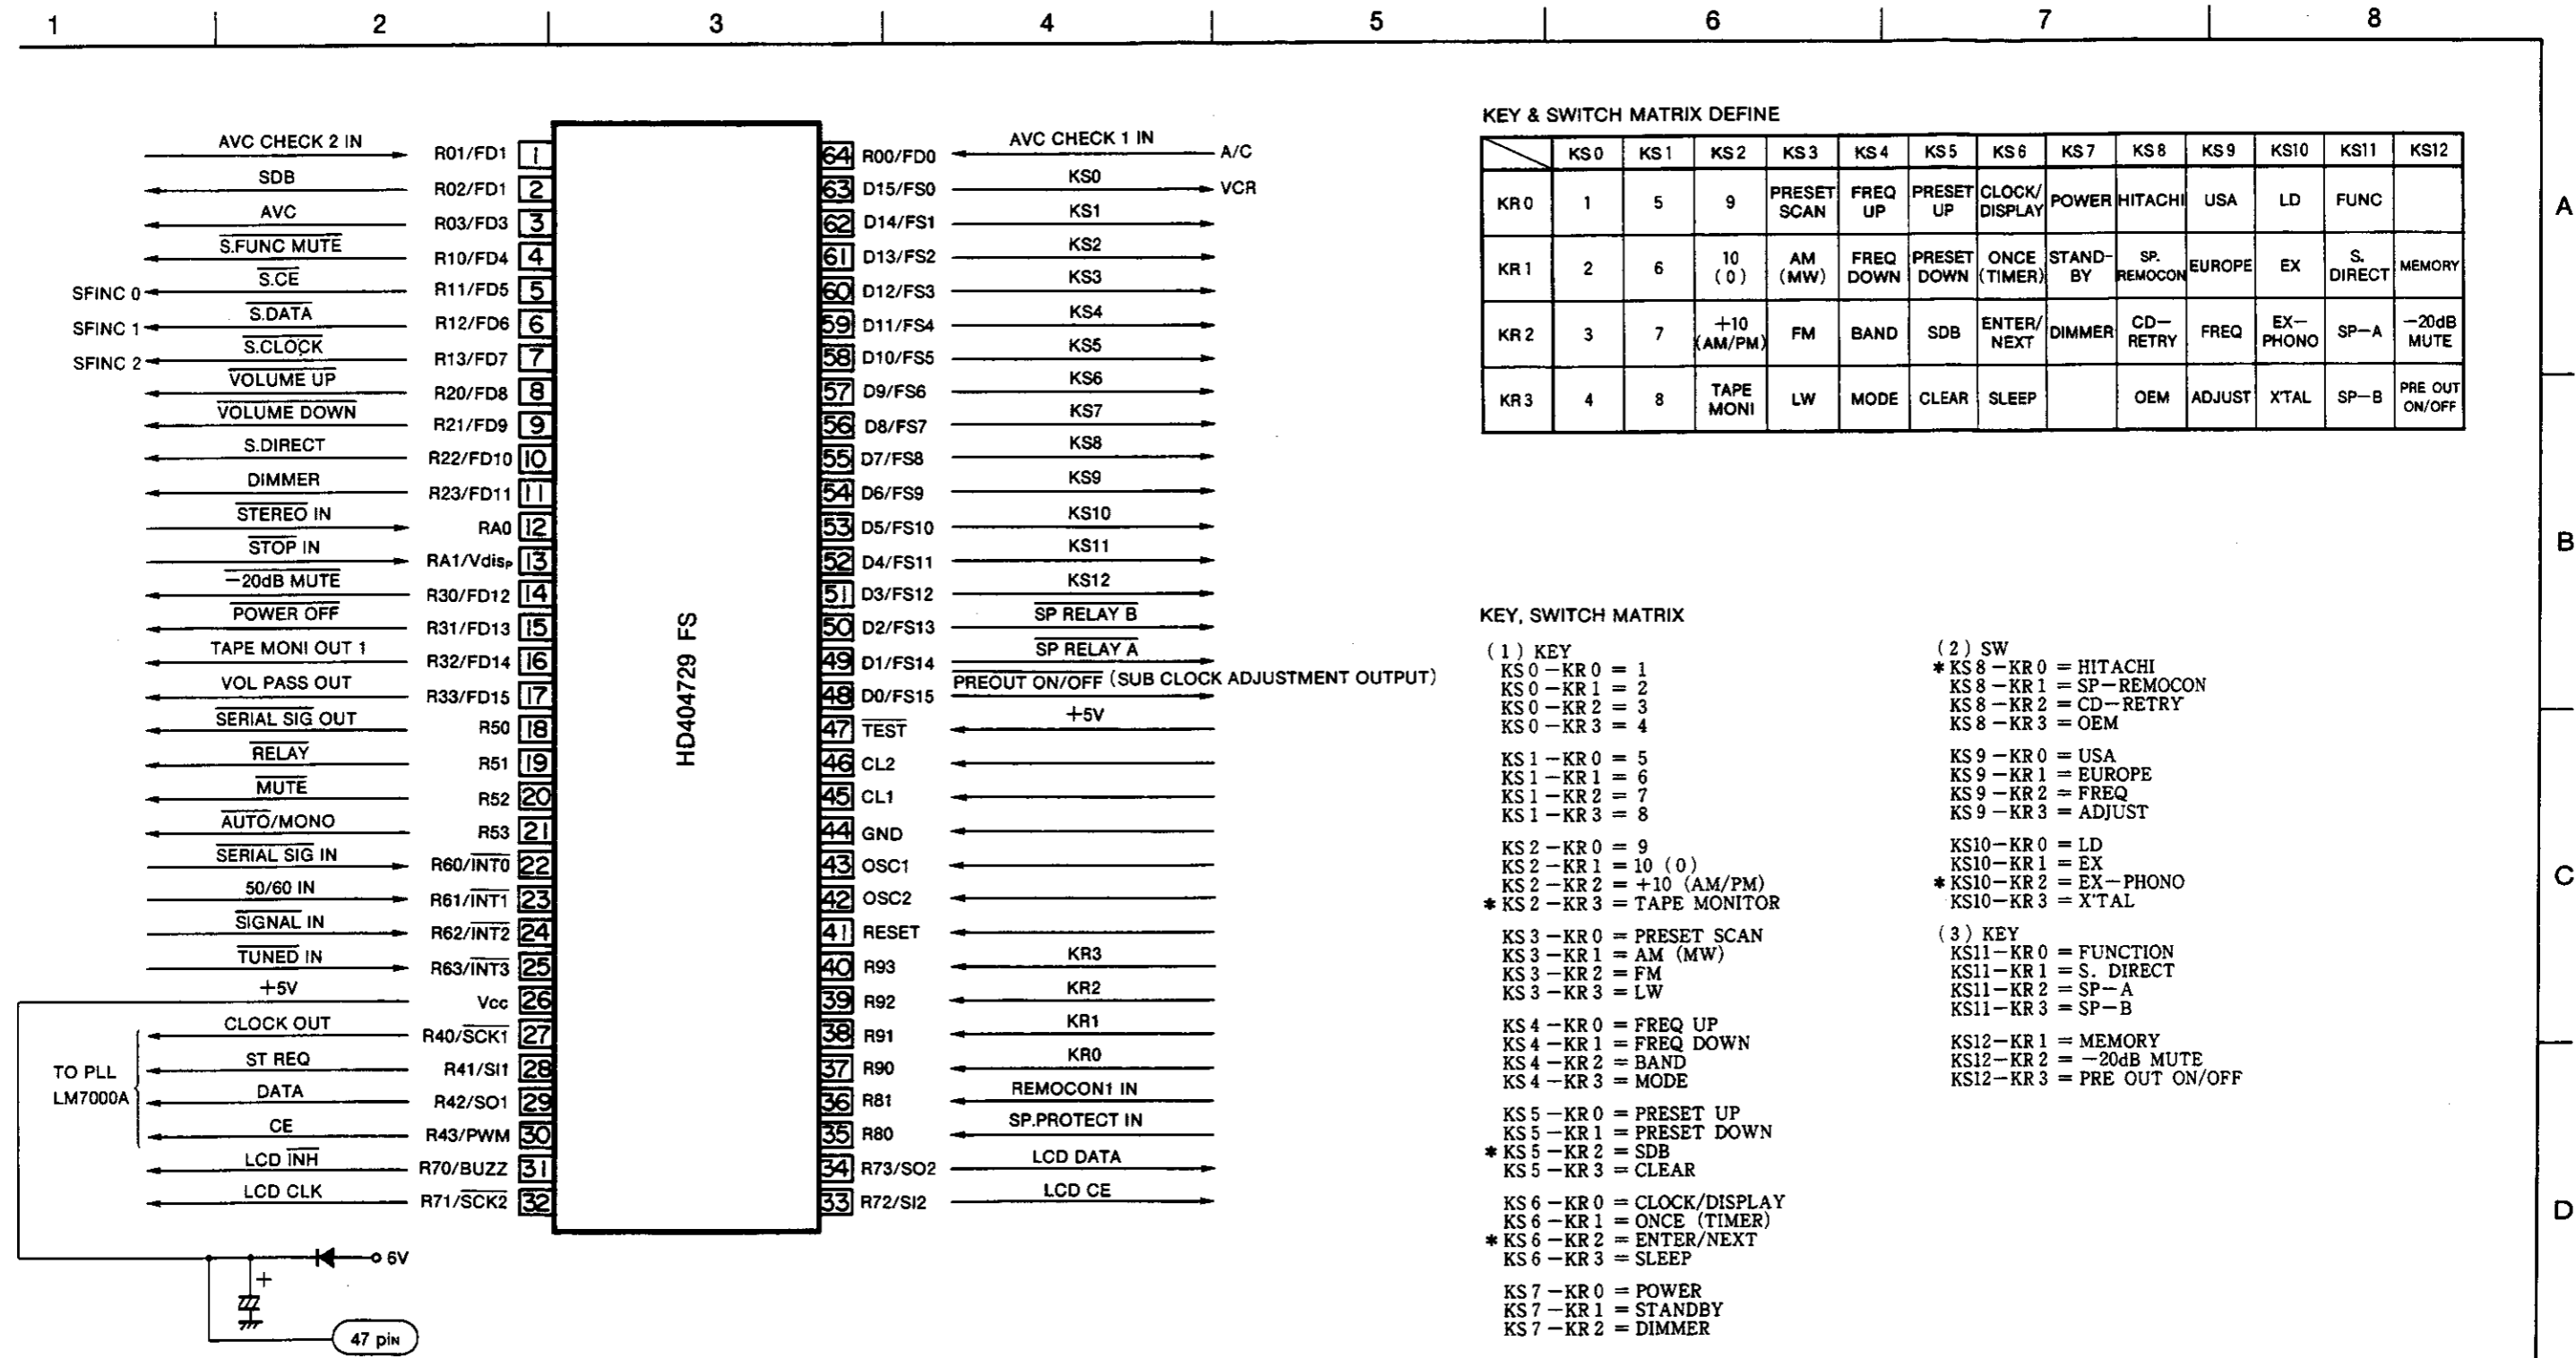

KEY & SWITCH MATRIX DEFINE

	KS0	KS1	KS2	KS3	KS4	KS5	KS6	KS7	KS8	KS9	KS10	KS11	KS12
KR0	1	5	9	PRESET SCAN	FREQ UP	PRESET UP	CLOCK/ DISPLAY	POWER	HITACHI	USA	LD	FUNC	
KR1	2	6	10 (0)	AM (MW)	FREQ DOWN	PRESET DOWN	ONCE (TIMER)	STAND- BY	SP. REMOCON	EUROPE	EX	S. DIRECT	MEMORY
KR2	3	7	+10 (AM/PM)	FM	BAND	SDB	ENTER/ NEXT	DIMMER	CD- RETRY	FREQ	EX- PHONO	SP-A	-20dB MUTE
KR3	4	8	TAPE MONI	LW	MODE	CLEAR	SLEEP		OEM	ADJUST	XTAL	SP-B	PRE OUT ON/OFF

KEY, SWITCH MATRIX

- (1) KEY
  - KS0 - KR0 = 1
  - KS0 - KR1 = 2
  - KS0 - KR2 = 3
  - KS0 - KR3 = 4
  - KS1 - KR0 = 5
  - KS1 - KR1 = 6
  - KS1 - KR2 = 7
  - KS1 - KR3 = 8
  - KS2 - KR0 = 9
  - KS2 - KR1 = 10 (0)
  - KS2 - KR2 = +10 (AM/PM)
  - \* KS2 - KR3 = TAPE MONITOR
  - KS3 - KR0 = PRESET SCAN
  - KS3 - KR1 = AM (MW)
  - KS3 - KR2 = FM
  - KS3 - KR3 = LW
  - KS4 - KR0 = FREQ UP
  - KS4 - KR1 = FREQ DOWN
  - KS4 - KR2 = BAND
  - KS4 - KR3 = MODE
  - KS5 - KR0 = PRESET UP
  - KS5 - KR1 = PRESET DOWN
  - \* KS5 - KR2 = SDB
  - KS5 - KR3 = CLEAR
  - KS6 - KR0 = CLOCK/DISPLAY
  - KS6 - KR1 = ONCE (TIMER)
  - \* KS6 - KR2 = ENTER/NEXT
  - KS6 - KR3 = SLEEP
  - KS7 - KR0 = POWER
  - KS7 - KR1 = STANDBY
  - KS7 - KR2 = DIMMER
- (2) SW
  - \* KS8 - KR0 = HITACHI
  - KS8 - KR1 = SP-REMOCON
  - KS8 - KR2 = CD-RETRY
  - KS8 - KR3 = OEM
  - KS9 - KR0 = USA
  - KS9 - KR1 = EUROPE
  - KS9 - KR2 = FREQ
  - KS9 - KR3 = ADJUST
  - KS10 - KR0 = LD
  - KS10 - KR1 = EX
  - \* KS10 - KR2 = EX-PHONO
  - KS10 - KR3 = XTAL
  - (3) KEY
    - KS11 - KR0 = FUNCTION
    - KS11 - KR1 = S. DIRECT
    - KS11 - KR2 = SP-A
    - KS11 - KR3 = SP-B
    - KS12 - KR1 = MEMORY
    - KS12 - KR2 = -20dB MUTE
    - KS12 - KR3 = PRE OUT ON/OFF

A  
B  
C  
D  
E



TUNER PRE SECTION

PRINTED WIRING BOARD

1 2 3 4 5 6 7 8

1U-2476 UTP-250  
UNIT ASS'Y  
Component Side


A

B

C

D

E

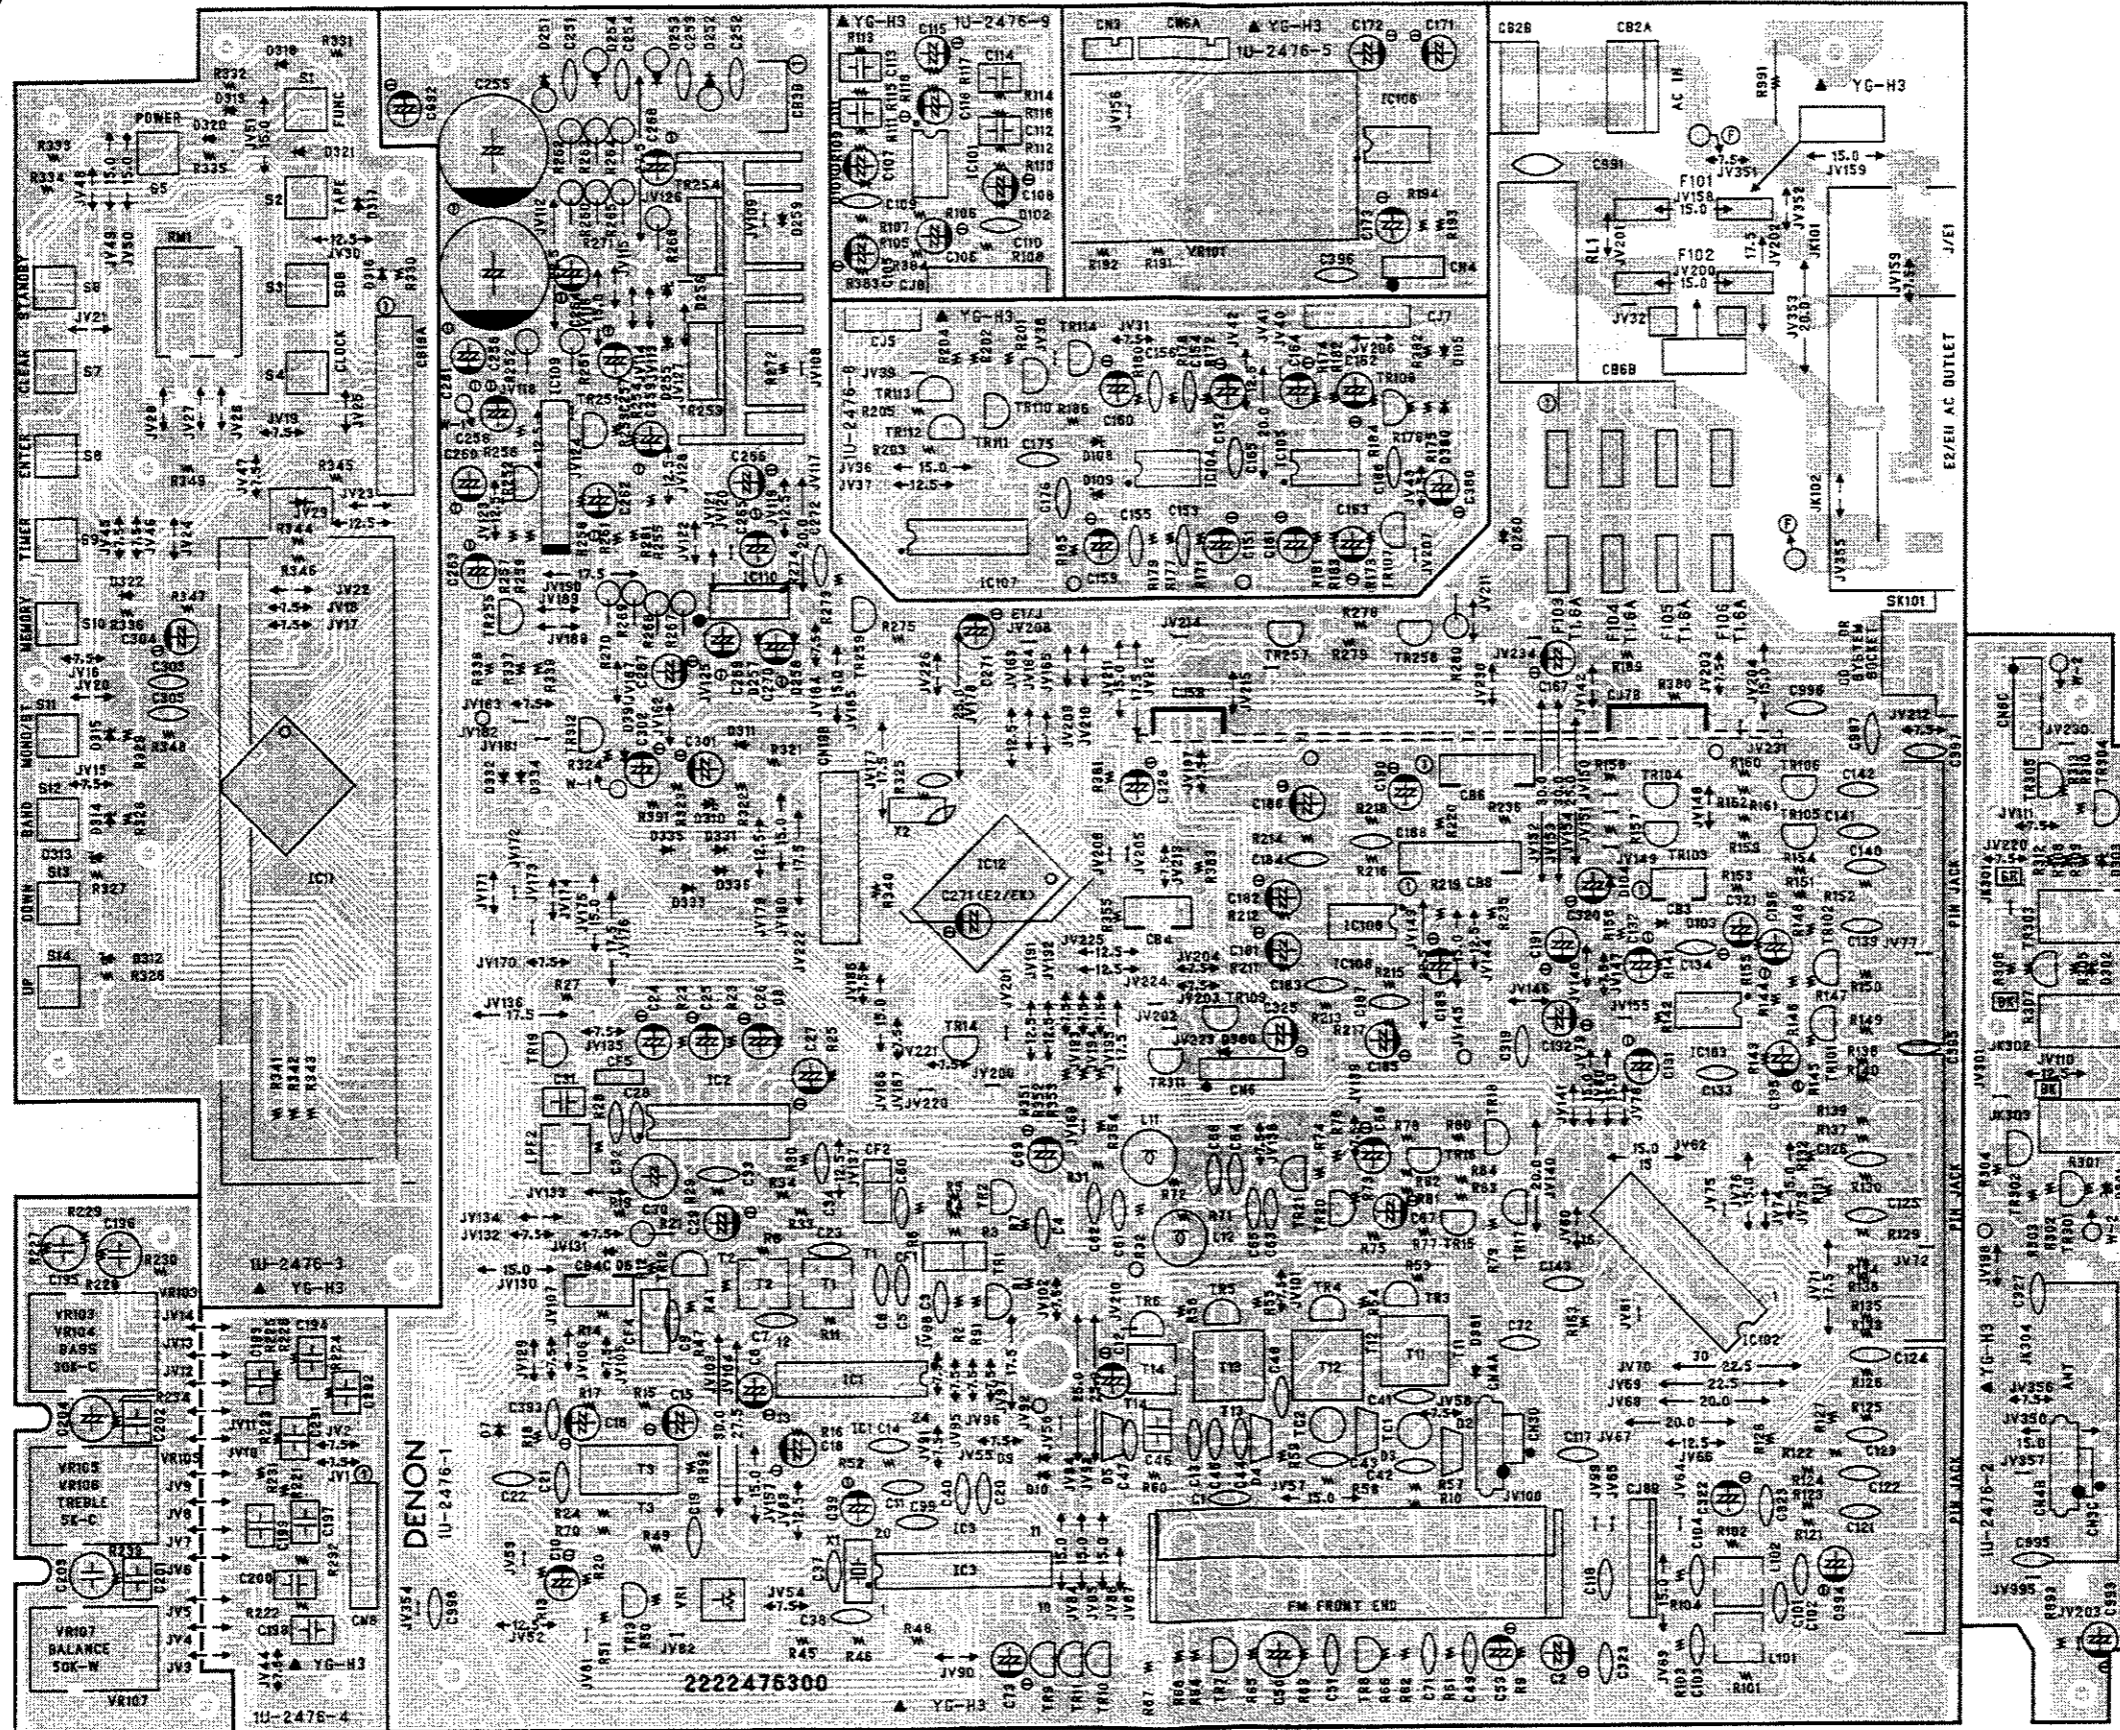




TUNER PRE SECTION

1 2 3 4 5 6 7 8

Pattern Side

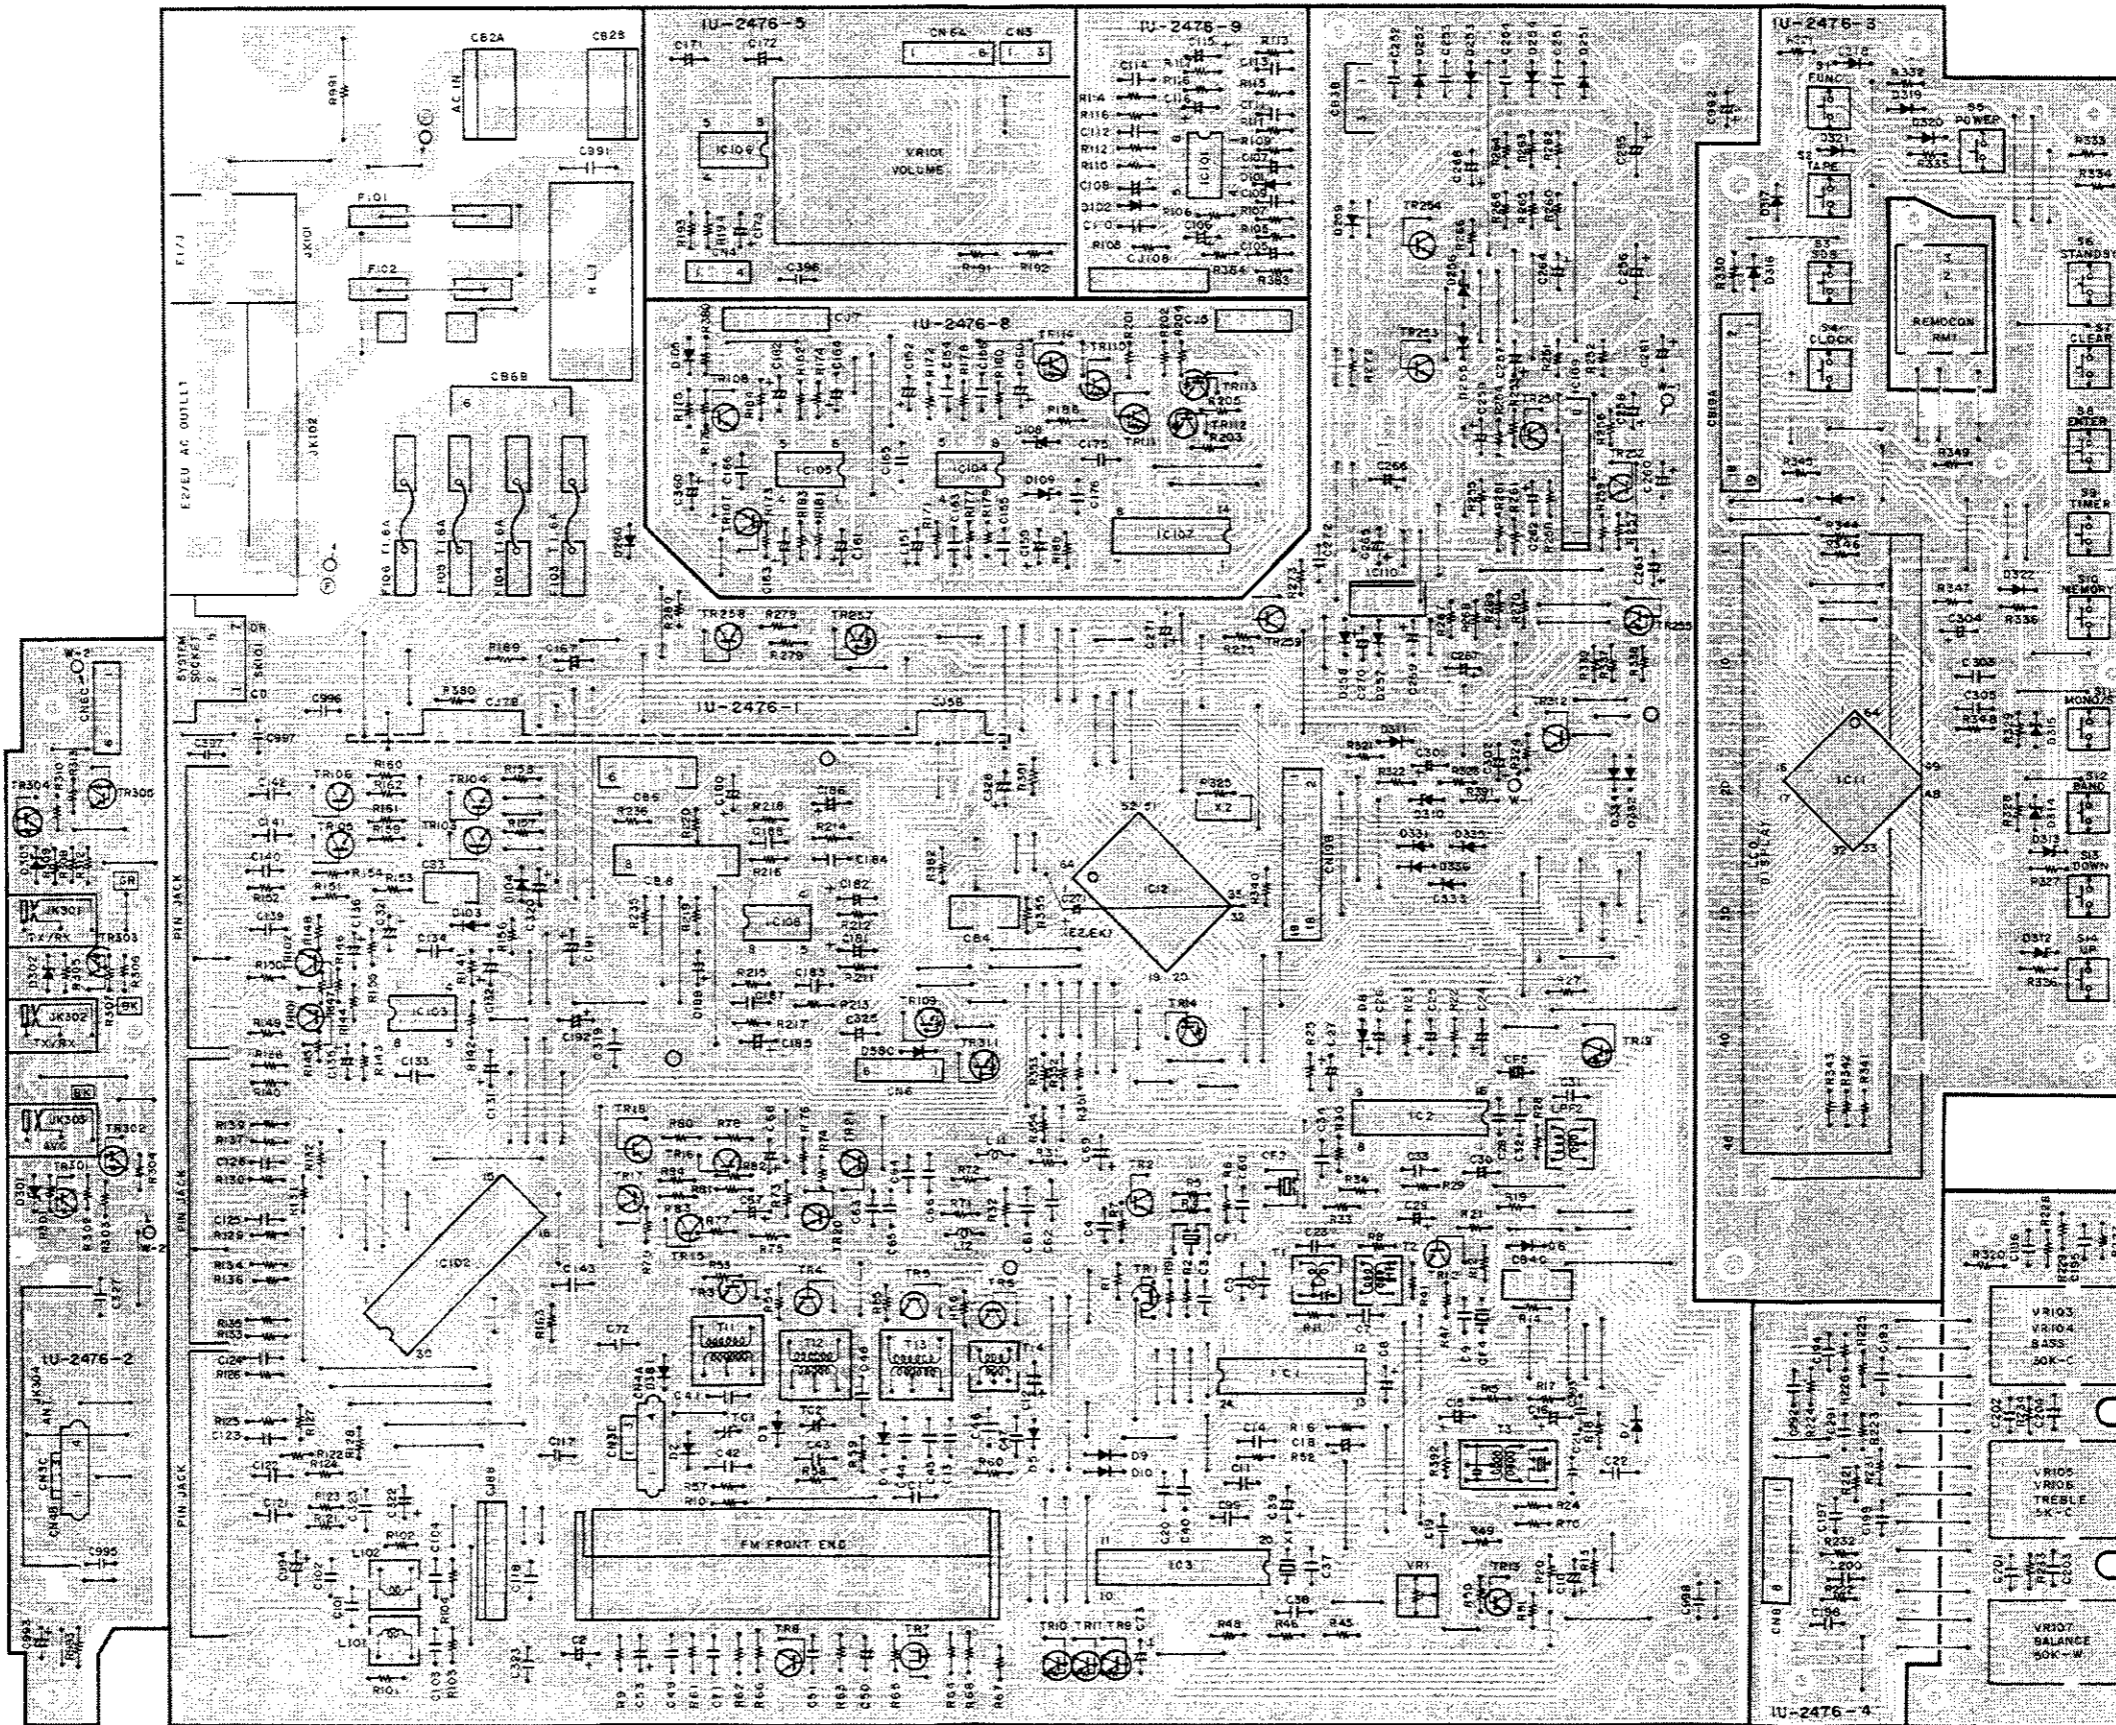

A

B

C

D

E

**TUNER PRE SECTION**

**NOTE ON PARTS LIST**

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W. Board parts list. (Refer to the Schematic Diagram for those parts.)

**WARNING:**

Parts marked with this symbol  $\Delta$  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

**Resistors**

Ex.: **RN 14K 2E 182 G FR**  
 Type Shape and performance Power Resistance Allowable error Others

RD : Carbon Film	2B : 1/8W	F : ±1%	P : Pulse-resistant type
RC : Composition	2E : 1/4W	G : ±2%	NL : Low noise type
RS : Metallic oxide Film	2H : 1/2W	J : ±5%	NB : Non-burning type
RW : Winding	3A : 1W	K : ±10%	FR : Fuse-resistor
RN : Metal film	3D : 2W	M : ±20%	F : Lead wire forming
RK : Metal mixture	3F : 3W		
	3H : 5W		

**\* Resistance**  
 $\overset{1}{\text{R}} \overset{2}{\text{R}} \Rightarrow 1800 \text{ ohm} = 1.8 \text{ kohm}$   
 Indicates number of zeros after effective number  
 2-digit effective number  
 • Units: ohm

$\overset{1}{\text{R}} \overset{2}{\text{R}} \Rightarrow 1.2 \text{ ohm}$   
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.  
 • Units: ohm

**\* Capacity (electrolyte only)**  
 $\overset{2}{\text{R}} \overset{2}{\text{R}} \Rightarrow 2200 \mu\text{F}$   
 Indicates number of zeros after effective number.  
 2-digit effective number.  
 • Units:  $\mu\text{F}$

$\overset{2}{\text{R}} \overset{2}{\text{R}} \Rightarrow 2.2 \mu\text{F}$   
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.  
 • Units:  $\mu\text{F}$

**Capacitors**

Ex.: **CE 04W 1H 2R2 M BP**  
 Type Shape Dielectric Capacity Allowable error Others

CE : Aluminum foil electrolyte	0J : 6.3V	F : ±1%	HS : High stability type
CA : Aluminum solid electrolyte	1A : 10V	G : ±2%	BP : Non-polar type
CS : Tantalum electrolyte	1C : 16V	J : ±5%	HR : Ripple-resistant type
CQ : Film	1E : 25V	K : ±10%	DL : For charge and discharge
CK : Ceramic	1V : 35V	M : ±20%	HF : For assuring high frequency
CC : Ceramic	1H : 50V	Z : +80%	U : UL part
CP : Oil	2A : 100V	-20%	C : CSA part
CM : Mica	2B : 125V	P : +100%	W : UL-CSA type
CF : Metallized	2C : 160V	-0%	F : Lead wire forming
CH : Metallized	2D : 200V	C : ±0.25pF	
	2E : 250V	D : ±0.5pF	
	2H : 500V	= : Others	
	2J : 630V		

**\* Capacity (except electrolyte)**  
 $\overset{2}{\text{R}} \overset{2}{\text{R}} \Rightarrow 2200\text{pF} = 2200 \mu\text{F} = 0.002 \mu\text{F}$   
 (More than 2) — Indicates number of zeros after effective number.  
 2-digit effective number.  
 • Units:  $\mu\text{F}$

$\overset{2}{\text{R}} \overset{2}{\text{R}} \overset{1}{\text{R}} \Rightarrow 220\text{pF}$   
 (0 or 1) — Indicates number of zeros after effective number.  
 2-digit effective number.  
 • Units: pF

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

**1U-2476A P.W.B UNIT ASSY PARTS LIST**

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
<b>SEMICONDUCTORS GROUP</b>							
IC001	263 0421 002	IC LA1267	μ-com	D008	276 0432 903	Diode 1SS270A	9 V
IC002	263 0584 004	IC LA3410		D009	276 0432 903	Diode 1SS270A	
IC003	262 0703 002	IC LM7000		D010	276 0432 903	Diode 1SS270A	
IC011	263 0533 000	IC LC7582		D103	276 0432 903	Diode 1SS270A	
IC012	262 1624 106	IC HD404729FS---		D104	276 0432 903	Diode 1SS270A	
IC101	263 0743 007	IC NJM2082DD		D105	276 0531 901	Diode 1SS254	
IC102	262 1808 003	IC LC7821N		D251	276 0553 905	Diode 1SR35-200A	
IC103	263 0712 009	IC :RC4558P		D252	276 0553 905	Diode 1SR35-200A	
IC104	263 0609 002	IC NJM2068DDC		D253	276 0553 905	Diode 1SR35-200A	
IC105	263 0712 009	IC :RC4558P		D254	276 0553 905	Diode 1SR35-200A	
IC106	263 0476 002	IC LB1639		D256	276 0468 906	Zener Diode HZS9B-1	
IC107	263 0359 006	IC LC4966	D257	276 0432 903	Diode 1SS270A		
IC108	263 0609 002	IC NJM2068DDC	D258	276 0432 903	Diode 1SS270A		
IC109	263 0646 007	IC M5230L	D259	276 0432 903	Diode 1SS270A		
IC110	263 0586 002	IC NJM78M06FA	D260	276 0432 903	Diode 1SS270A		
Regulator +6V				D301	276 0462 902	Zener Diode HZS6B-1	6 V
TR001	275 0051 909	FET 2SK161(GR)	D302	276 0462 902	Zener Diode HZS6B-1	6 V	
TR002	273 0025 926	Transistor 2SC461(C)	D303	276 0462 902	Zener Diode HZS6B-1	6 V	
TR003	273 0317 906	Transistor 2SC2458(BL)	D310	276 0452 909	Zener Diode HZS3A-1	3 V	
TR004	273 0317 906	Transistor 2SC2458(BL)	D312	276 0462 902	Zener Diode HZS6B-1	6 V	
TR005	273 0317 906	Transistor 2SC2458(BL)	D313	276 0462 902	Zener Diode HZS6B-1	6 V	
TR006	273 0317 906	Transistor 2SC2458(BL)	D314	276 0462 902	Zener Diode HZS6B-1	6 V	
TR007	275 0053 907	FET 2SK365(BL/GR)	D315	276 0462 902	Zener Diode HZS6B-1	6 V	
TR008	273 0317 906	Transistor 2SC2458(BL)	D316	276 0432 903	Diode 1SS270A		
TR009	269 0093 904	Transistor DTA144ES (47k-47k)	D317	276 0432 903	Diode 1SS270A		
TR010	269 0093 904	Transistor DTA144ES (47k-47k)	D318	276 0432 903	Diode 1SS270A		
TR011	269 0093 904	Transistor DTA144ES (47k-47k)	D319	276 0432 903	Diode 1SS270A		
TR012	273 0317 906	Transistor 2SC2458(BL)	D320	276 0432 903	Diode 1SS270A		
TR013	273 0317 906	Transistor 2SC2458(BL)	D321	276 0432 903	Diode 1SS270A		
TR014	269 0093 904	Transistor DTA144ES (47k-47k)	D322	276 0432 903	Diode 1SS270A		
TR015	273 0317 906	Transistor 2SC2458(BL)	D331	276 0432 903	Diode 1SS270A		
TR016	273 0317 906	Transistor 2SC2458(BL)	D333	276 0432 903	Diode 1SS270A		
TR017	273 0317 906	Transistor 2SC2458(BL)	D335	276 0432 903	Diode 1SS270A		
TR018	273 0317 906	Transistor 2SC2458(BL)	D380	276 0432 903	Diode 1SS270A		
TR019	269 0040 902	Transistor DTC144ES (47k-47k)	D381	276 0432 903	Diode 1SS270A		
TR020	273 0317 906	Transistor 2SC2458(BL)	D391	276 0432 903	Diode 1SS270A		
TR021	273 0317 906	Transistor 2SC2458(BL)	D399	276 0370 007	Diode 1SS106		
TR101	273 0253 918	Transistor 2SC2878(A/B)	JV125	276 0432 903	Diode 1SS270A		
TR102	273 0253 918	Transistor 2SC2878(A/B)	JV205	276 0432 903	Diode 1SS270A		
TR103	273 0253 918	Transistor 2SC2878(A/B)		393 9470 009	LED	LED	
TR104	273 0253 918	Transistor 2SC2878(A/B)		393 4142 002	LCD 8234 JP	LCD	
TR105	273 0253 918	Transistor 2SC2878(A/B)					
TR106	273 0253 918	Transistor 2SC2878(A/B)					
TR107	273 0253 918	Transistor 2SC2878(A/B)					
TR108	273 0253 918	Transistor 2SC2878(A/B)					
TR109	269 0093 904	Transistor DTA144ES (47k-47k)	RM001	499 0172 002	GP1U521X	Remocon Receiver	
TR110	269 0040 902	Transistor DTC144ES (47k-47k)	<b>RESISTORS GROUP (Not included Carbon Film ±5%, 1/4W Type. Refer to the Schematic Diagram for those Parts.)</b>				
TR111	269 0040 902	Transistor DTC144ES (47k-47k)	ΔR021	241 2376 964	Carbon Film 47 ohm 1/4W(NB)	RD14B2E470JNBS	
TR112	269 0093 904	Transistor DTA144ES (47k-47k)	ΔR260	241 2387 949	Carbon Film 4.7 ohm 1W (NB)	RD14B2E4R7JNBS	
TR113	269 0093 904	Transistor DTA144ES (47k-47k)	ΔR262	244 2055 938	Metal Oxide 6.8 ohm 1W (NB)	RS14B3A6R8JNBS(S)	
TR114	269 0040 902	Transistor DTC144ES (47k-47k)	ΔR263	244 2055 938	Metal Oxide 6.8 ohm 1W (NB)	RS14B3A6R8JNBS(S)	
TR251	274 0060 900	Transistor 2SD667A(C)	ΔR264	244 2055 938	Metal Oxide 6.8 ohm 1W (NB)	RS14B3A6R8JNBS(S)	
TR252	272 0053 908	Transistor 2SB647A(C)	ΔR265	244 2055 938	Metal Oxide 6.8 ohm 1W (NB)	RS14B3A6R8JNBS(S)	
TR253	273 0338 008	Transistor 2SC3851(Y)/(G)	ΔR266	244 2061 016	Metal Oxide 150 ohm 1W (NB)	RS14B3A151JNBS	
TR254	273 0338 008	Transistor 2SC3851(Y)/(G)	ΔR267	244 2052 928	Metal Oxide 47 ohm 1W (NB)	RS14B3A470JNBS(S)	
TR255	269 0040 902	Transistor DTC144ES (47k-47k)	ΔR268	244 2055 938	Metal Oxide 6.8 ohm 1W (NB)	RS14B3A6R8JNBS(S)	
TR257	269 0040 902	Transistor DTC144ES (47k-47k)	ΔR269	244 2055 938	Metal Oxide 6.8 ohm 1W (NB)	RS14B3A6R8JNBS(S)	
TR258	273 0198 918	Transistor 2SC1815(BL)	ΔR270	244 2044 979	Metal Oxide 5.6 ohm 1W (NB)	RS14B3A5R6JNBS(S)	
TR259	273 0317 906	Transistor 2SC2458(BL)	ΔR271	244 2050 933	Metal Oxide 180 ohm 1W (NB)	RS14B3A181JNBS(S)	
TR301	269 0040 902	Transistor DTC144ES (47k-47k)	ΔR280	244 2050 920	Metal Oxide 120 ohm 1W (NB)	RS14B3A121JNBS(S)	
TR302	269 0040 902	Transistor DTC144ES (47k-47k)	VR001	211 6087 915	Semi Fixed Resistor 22k ohm	V06PB223	
TR303	269 0040 902	Transistor DTC144ES (47k-47k)	VR101	211 0749 107	Variable Resistor 100k ohm		
TR304	269 0040 902	Transistor DTC144ES (47k-47k)	VR103	211 0769 006	Variable Resistor 30k ohm	Bass	
TR305	269 0040 902	Transistor DTC144ES (47k-47k)	VR105	211 0768 007	Variable Resistor 5 k ohm	Treble	
TR311	269 0093 904	Transistor DTA144ES (47k-47k)	VR107	211 9105 001	Variable Resistor 50 k ohm		
TR312	273 0317 906	Transistor 2SC2458(BL)	<b>CAPACITORS GROUP</b>				
D002	276 0302 004	Varactor SVC321SPA-D-2	C001	253 1181 917	Ceramic 0.022μF/50 V	CK45F1H223Z	
D003	276 0302 004	Varactor SVC321SPA-D-2	C002	254 4254 909	Electrolytic 10μF/16 V	CE04W1C100M	
D004	276 0302 004	Varactor SVC321SPA-D-2	C003	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z	
D005	276 0302 004	Varactor SVC321SPA-D-2	C004	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z	
D006	276 0432 903	Diode 1SS270A	C005	253 1181 917	Ceramic 0.022μF/50 V	CK45F1H223Z	
D007	276 0432 903	Diode 1SS270A	C006	253 1181 917	Ceramic 0.022μF/50 V	CK45F1H223Z	



TUNER PRE SECTION

Table with 4 columns: Ref. No., Part No., Part Name, Remarks. Contains parts list for Ref. No. C007 to C122.

Table with 4 columns: Ref. No., Part No., Part Name, Remarks. Contains parts list for Ref. No. C266 to C998 and includes an 'OTHERS GROUP' section.

Table with 5 columns: Ref. No., Part No., Part Name, Remarks, Qty. Contains parts list for Ref. No. 216 0079 005 to 513 0815 089.

TUNER PRE SECTION

WIRING DIAGRAM

1

2

3

4

5

6

7

8

A


B


C

D

E

42

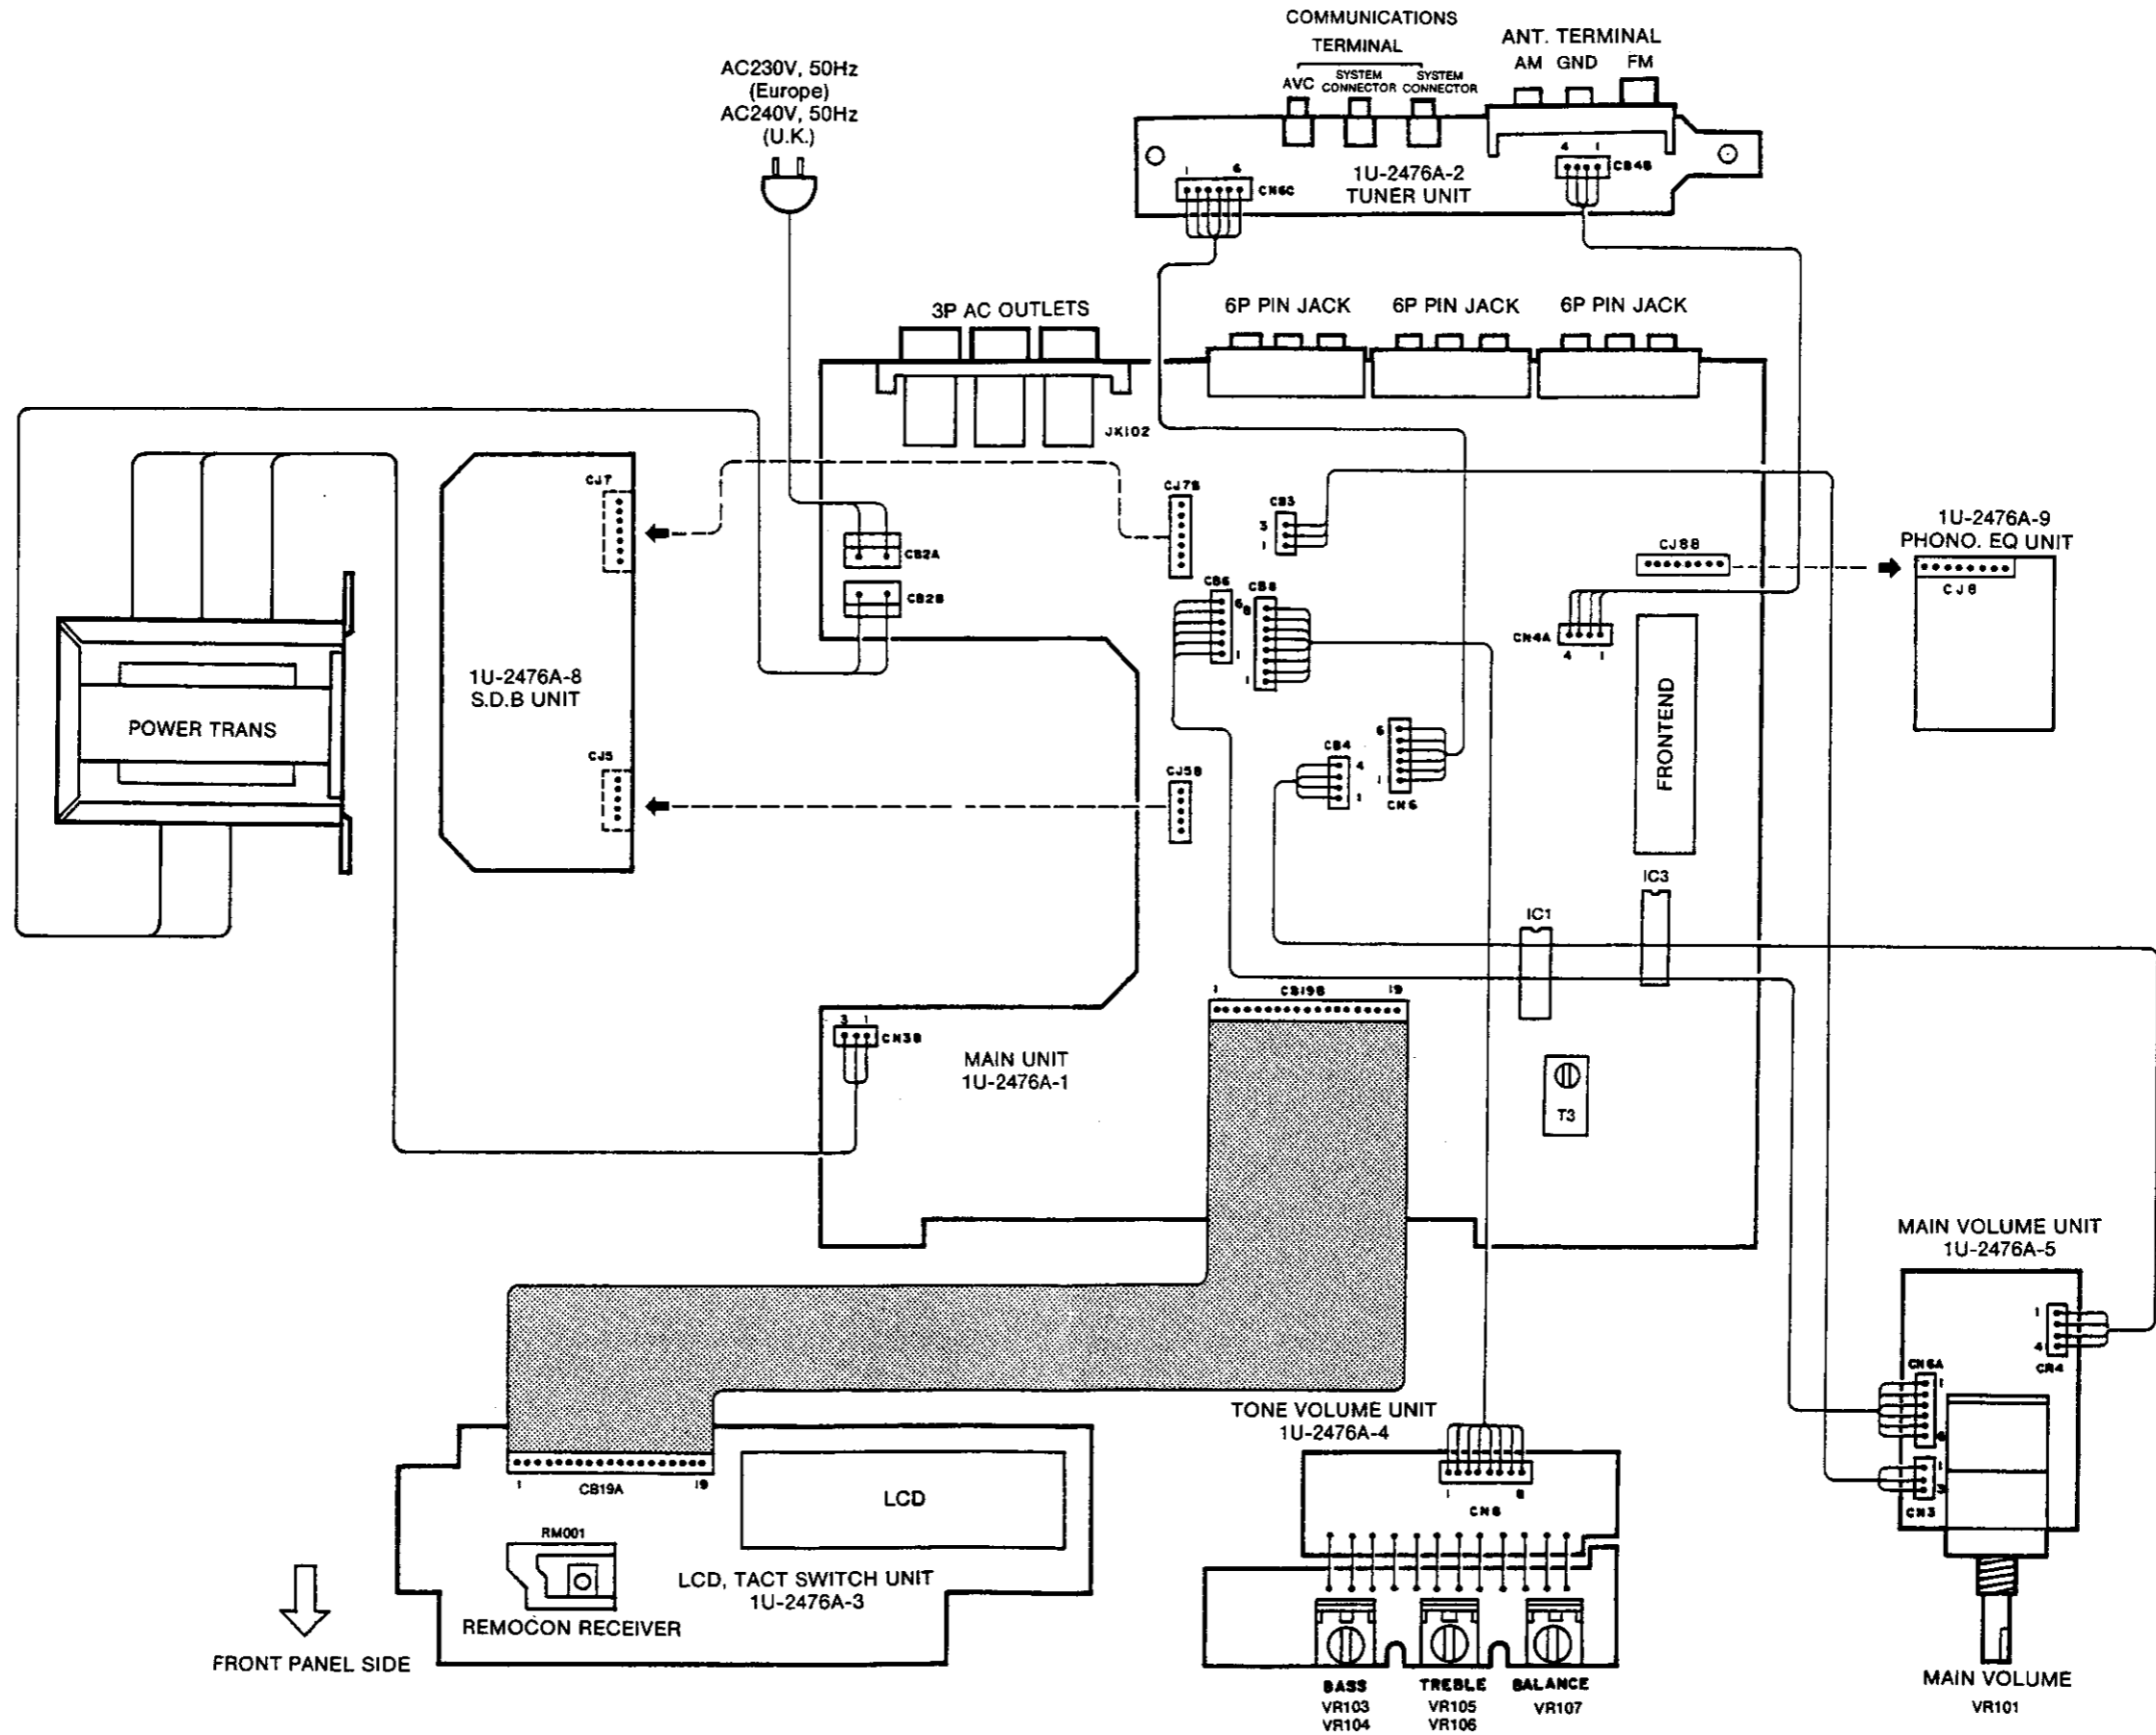

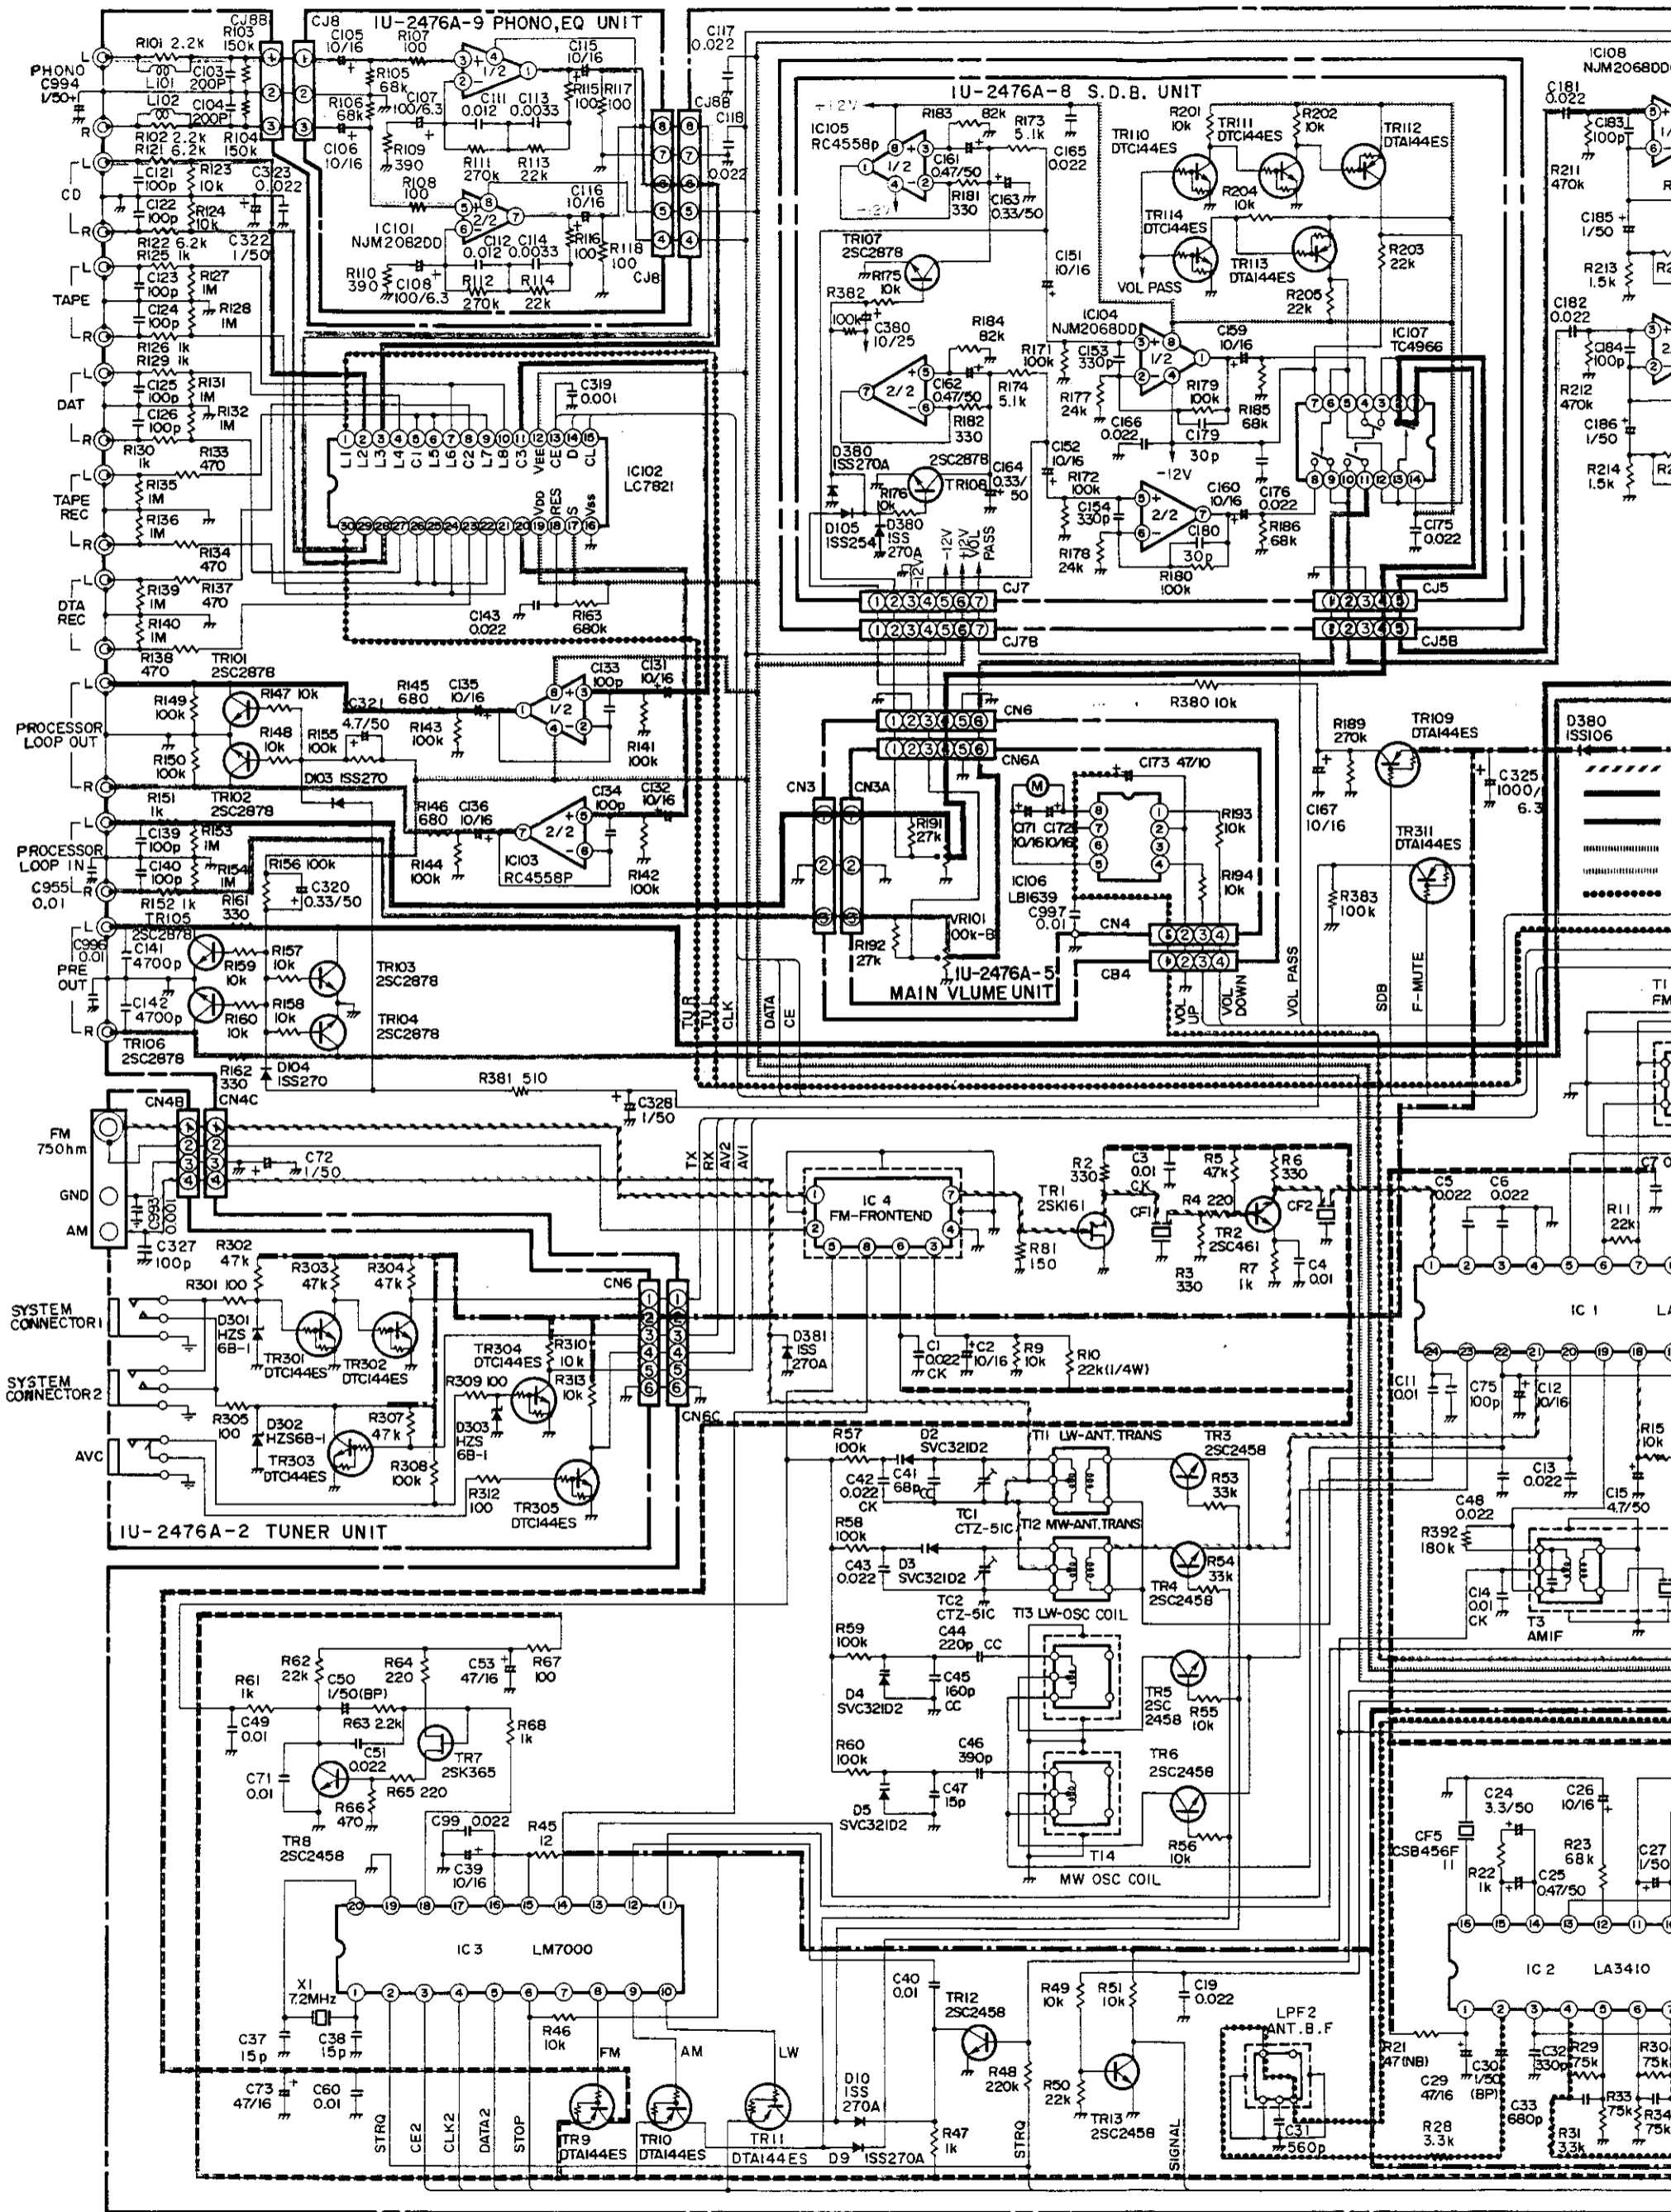


**WARNING:**  
 Parts marked with this symbol  $\Delta$  have critical characteristics.  
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION  
 Before  
 leakage  
 defectiv  
 WARN  
 DO NOT

SCHEMATIC DIAGRAM

TUNER PRE SECTION

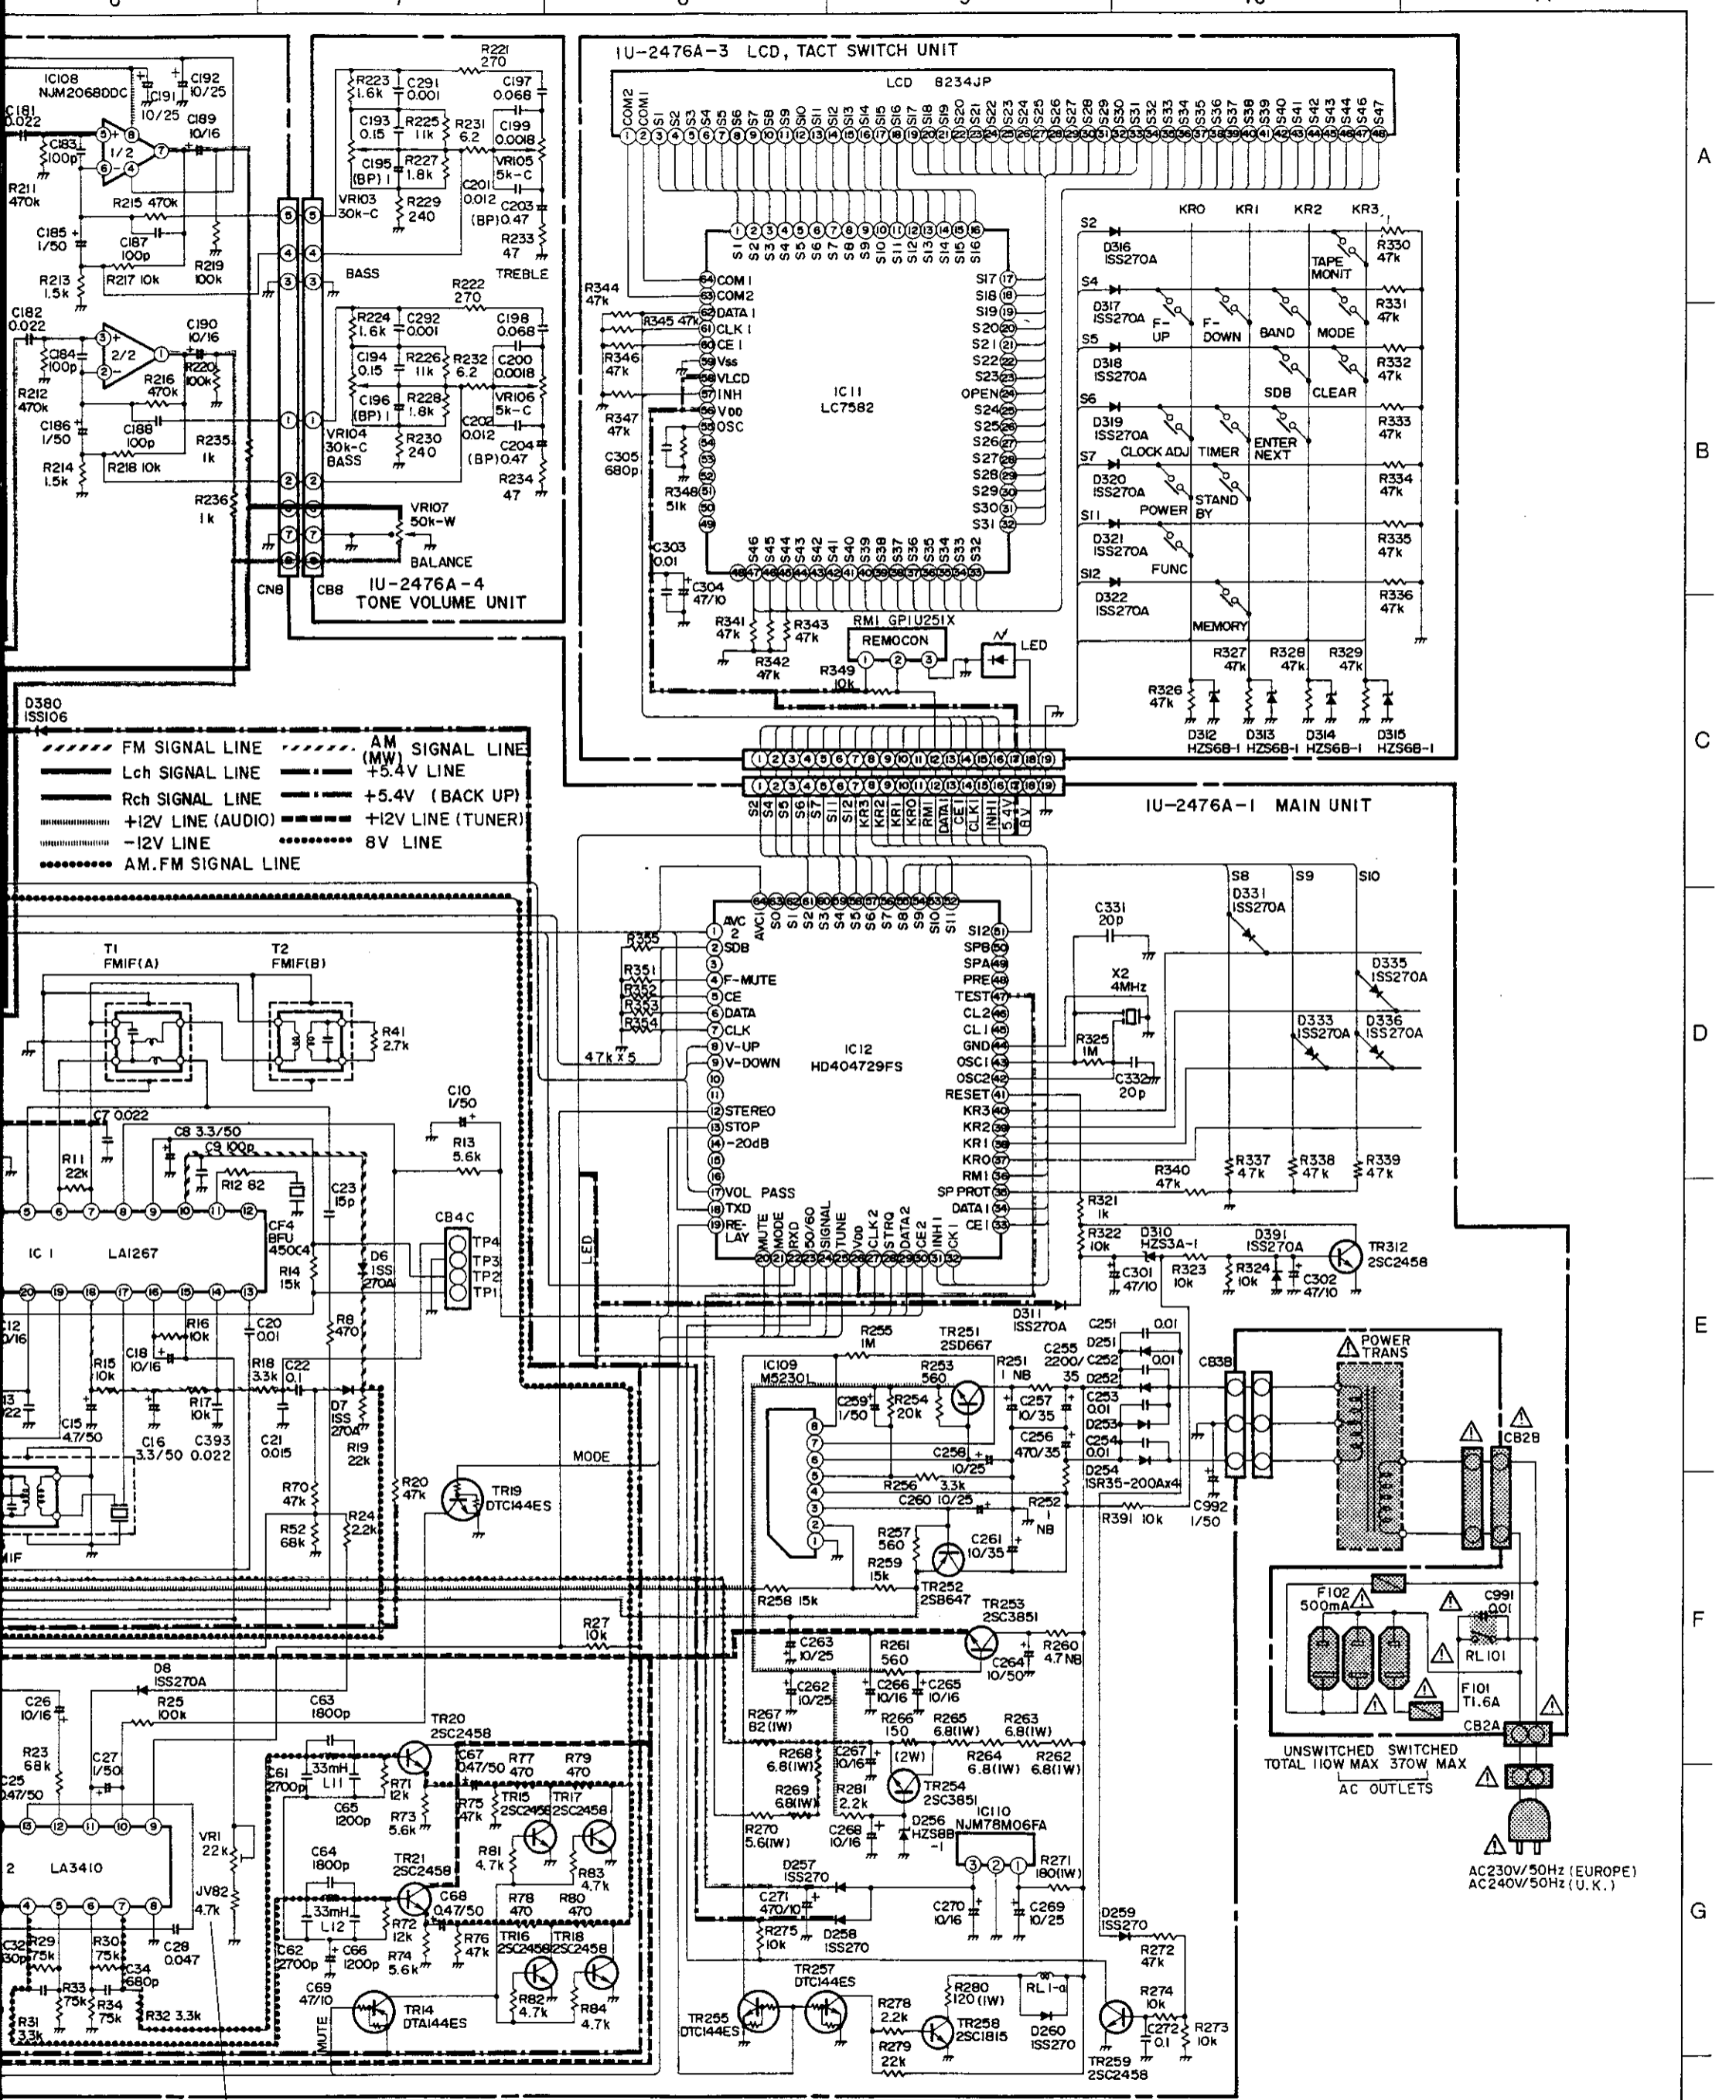

Resistor inserted in JV82 (jumper silk)

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.

**NOTES**  
ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.


A  
B  
C  
D  
E  
F  
G  
H

TUNER PRE SECTION

EXPLODED VIEW OF PARTS LIST

Ref. No.	Part No.	Part Name	Remarks	Qty
1	1U- 2476 A	P.W.Board Unit Assy		1 <sup>S</sup>
1-1	-	Main Unit		(1)
1-2	-	Tuner Unit		(1)
1-3	-	LCD,Tact Switch Unit		(1)
1-4	-	Tone Volume Unit		(1)
1-5	-	Main Volume Unit		(1)
1-6	-	Trans Wire Unit(P)		(1)
1-7	-	Trans Wire Unit(S)		(1)
1-8	-	S.D.B. Unit		(1)
1-9	-	Phono,EQ Unit		(1)
2	204 8278 009	6 P Pin Jack(S-GND)		3
3	211 0749 107	Variable Resistor 100k ohm		1
4	211 0769 006	Variable Resistor 30k ohm	Bass	1
5	211 0768 007	Variable Resistor 5k ohm	Treble	1
6	211 9105 001	Variable Resistor 50k ohm		1
7	206 1015 058	Fuse 1.6 A(T)		1
8	203 3950 002	3 P AC Outlet		1
9	-	-		-
10	204 8421 005	Mini Jack	for system	2
11	204 8422 004	Mini Jack(SW)	for AVC	1
12	214 0120 013	Relay(TV-8)		1
13	254 4258 785	Chemicon 470µF/25 V	C256	1
14	254 4259 700	Chemicon 2200µF/35 V	C255	1
15	393 4142 002	LCD (8234JP)		1
16	449 0057 009	LCD Holder		1
17	205 0603 002	3 P Ant. Terminal(DIN)		1
18	216 0079 005	Front End(U)		1
19	411 1184 332	Main Chassis		1
20	412 9339 001	Trans Bracket		1
21	104 0237 201	Foot Assy		4
22	105 1042 249	Rear Panel	Europe model	1
22	105 1042 252	Rear Panel	U.K. model	1
23	208 2094 000	AC Cord W/Conn	Europe model	1
23	208 2109 002	AC Cord W/Conn	U.K. model	1
24	445 0057 008	Cord Bush		1
25	205 0752 005	Short Pin		2
26	412 2814 028	Card Spacer(L=10)		4
27	-	-		-
28	144 2211 236	Front Panel		1
29	146 1409 317	Inner Panel Assy		1
30	146 1420 121	Knob Guide(Round)		1
31	113 1549 044	Push Knob(Round)		1
32	113 1460 013	Power Knob		1
33	144 2216 215	Trap Door		1
34	401 0175 112	Door Hinge(L)		1
35	401 0176 111	Door Hinge(R)		1
36	435 0113 009	Latch(Y3Y18)		1
37	112 0645 166	Knob		3
38	112 0691 107	Volume Knob Assy		1
39	233 6001 001	Power Trans	Europe model	1
39	233 9650 006	Power Trans	U.K. model	1
40	146 1411 211	Side Plate		2
41	122 0183 007	Spacer	100X10XT5	1
42	445 8004 007	Wire Clamper		3
43	102 0519 211	Top Cover		1
44	414 0676 015	Shield Plate		1
45	009 0077 001	19 P F.F.Cable		1
46	412 3485 016	P.W.Bracket		2
47	513 9316 013	Rating Sheet	Europe model	1
47	513 9316 039	Rating Sheet	U.K. model	1
48	415 9066 001	Insulating Sheet		1
49	477 0018 001	Washer(P-87)		1
50	205 0071 016	Terminal Assy		1
51	461 0756 012	Rubber Sheet	10X10XT15	1
52	414 9132 000	Shield Plate		1
53	461 0496 026	Spacer	10X35XT3	1
54	461 0756 041	Rubber Sheet	10X10XT7	1
55	461 0756 025	Rubber Sheet	10X10XT10	1
56	513 2058 006	Blind Sheet		4
57	461 9039 002	Spacer		1
58	412 9340 003	Fix. Plate		1
59	414 9133 009	Earth Plate		1
60	461 0758 010	Rubber Sheet		1
61	461 0756 009	Rubber Sheet	25X25XT20	2
62	513 9328 001	Homologation Label		1
63	206 1015 003	Fuse 500 mA		1
64	513 0815 089	Fuse Label(T-1.6 A)		1
65	513 0815 005	Fuse Label(0.5 A)		1
66	-	-		-
67	-	-		-
68	-	-	20X20XT5	2
<b>SCREWS</b>				
71	473 7004 016	Tapping Screw(S)4X6		4
72	473 7002 018	Tapping Screw(S)3X8		10
73	473 7015 005	Tapping Screw(S)3X6	Black	13
74	473 7505 007	Tapping Screw(P)2.6X8		12
75	477 0064 107	Fixing Screw		8
76	477 0276 018	Earth Screw		1
77	473 7004 003	Tapping Screw(S)4X8		4
78	473 7500 028	F.Tapping Screw(P)3X8		2
79	473 7002 005	Tapping Screw(S)3X6		1
80	-	-		-
<b>PACKING &amp; ACCESSORIES (Not included EXPLODED VIEW)</b>				
101	505 0178 000	:Poly Cover		1
102	503 1062 106	:Cushion		1
103	503 1061 000	:Top Cushion	Europe model	1
103	503 9040 001	:Top Cushion	U.K. model	1
104	501 1657 010	:Carton Case	Europe model	1
104	501 1657 023	:Carton Case	U.K. model	1
105	505 0241 005	Cabinet Cover		1
106	511 2421 006	:Inst. Manual		1
107	511 2433 007	:Inst. Manual		1
108	505 9124 000	:Poly Cover	U.K. model only	1

A  
B  
C  
D  
E  
F  
G  
H

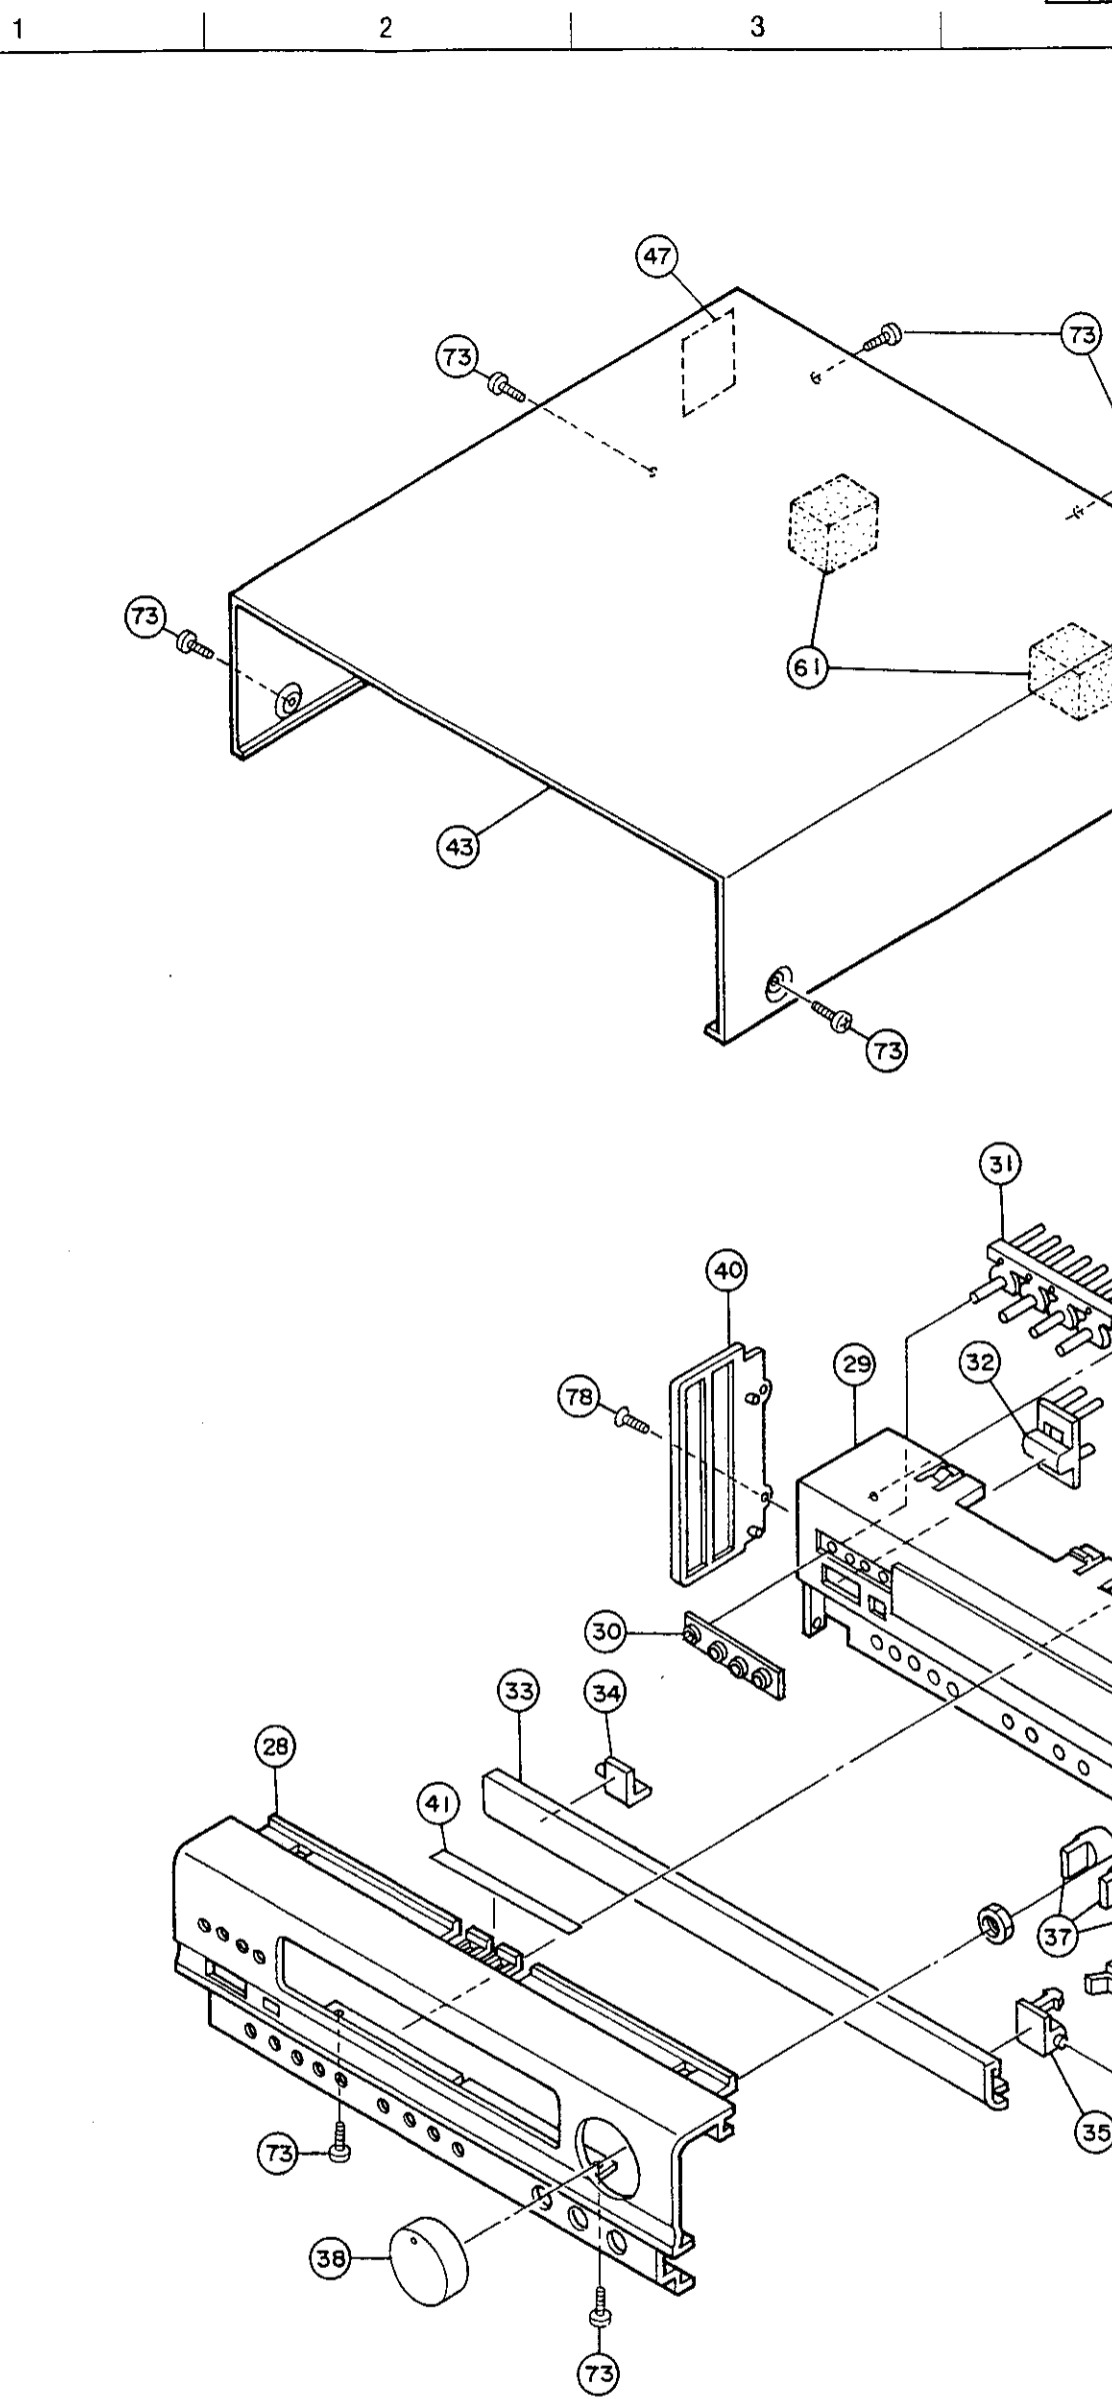

**NOTE ON PARTS LIST**

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

**WARNING:**  
Parts marked with this symbol △ [square with diagonal lines] have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.



EXPLODED VIEW

4


5

6

7

8

9

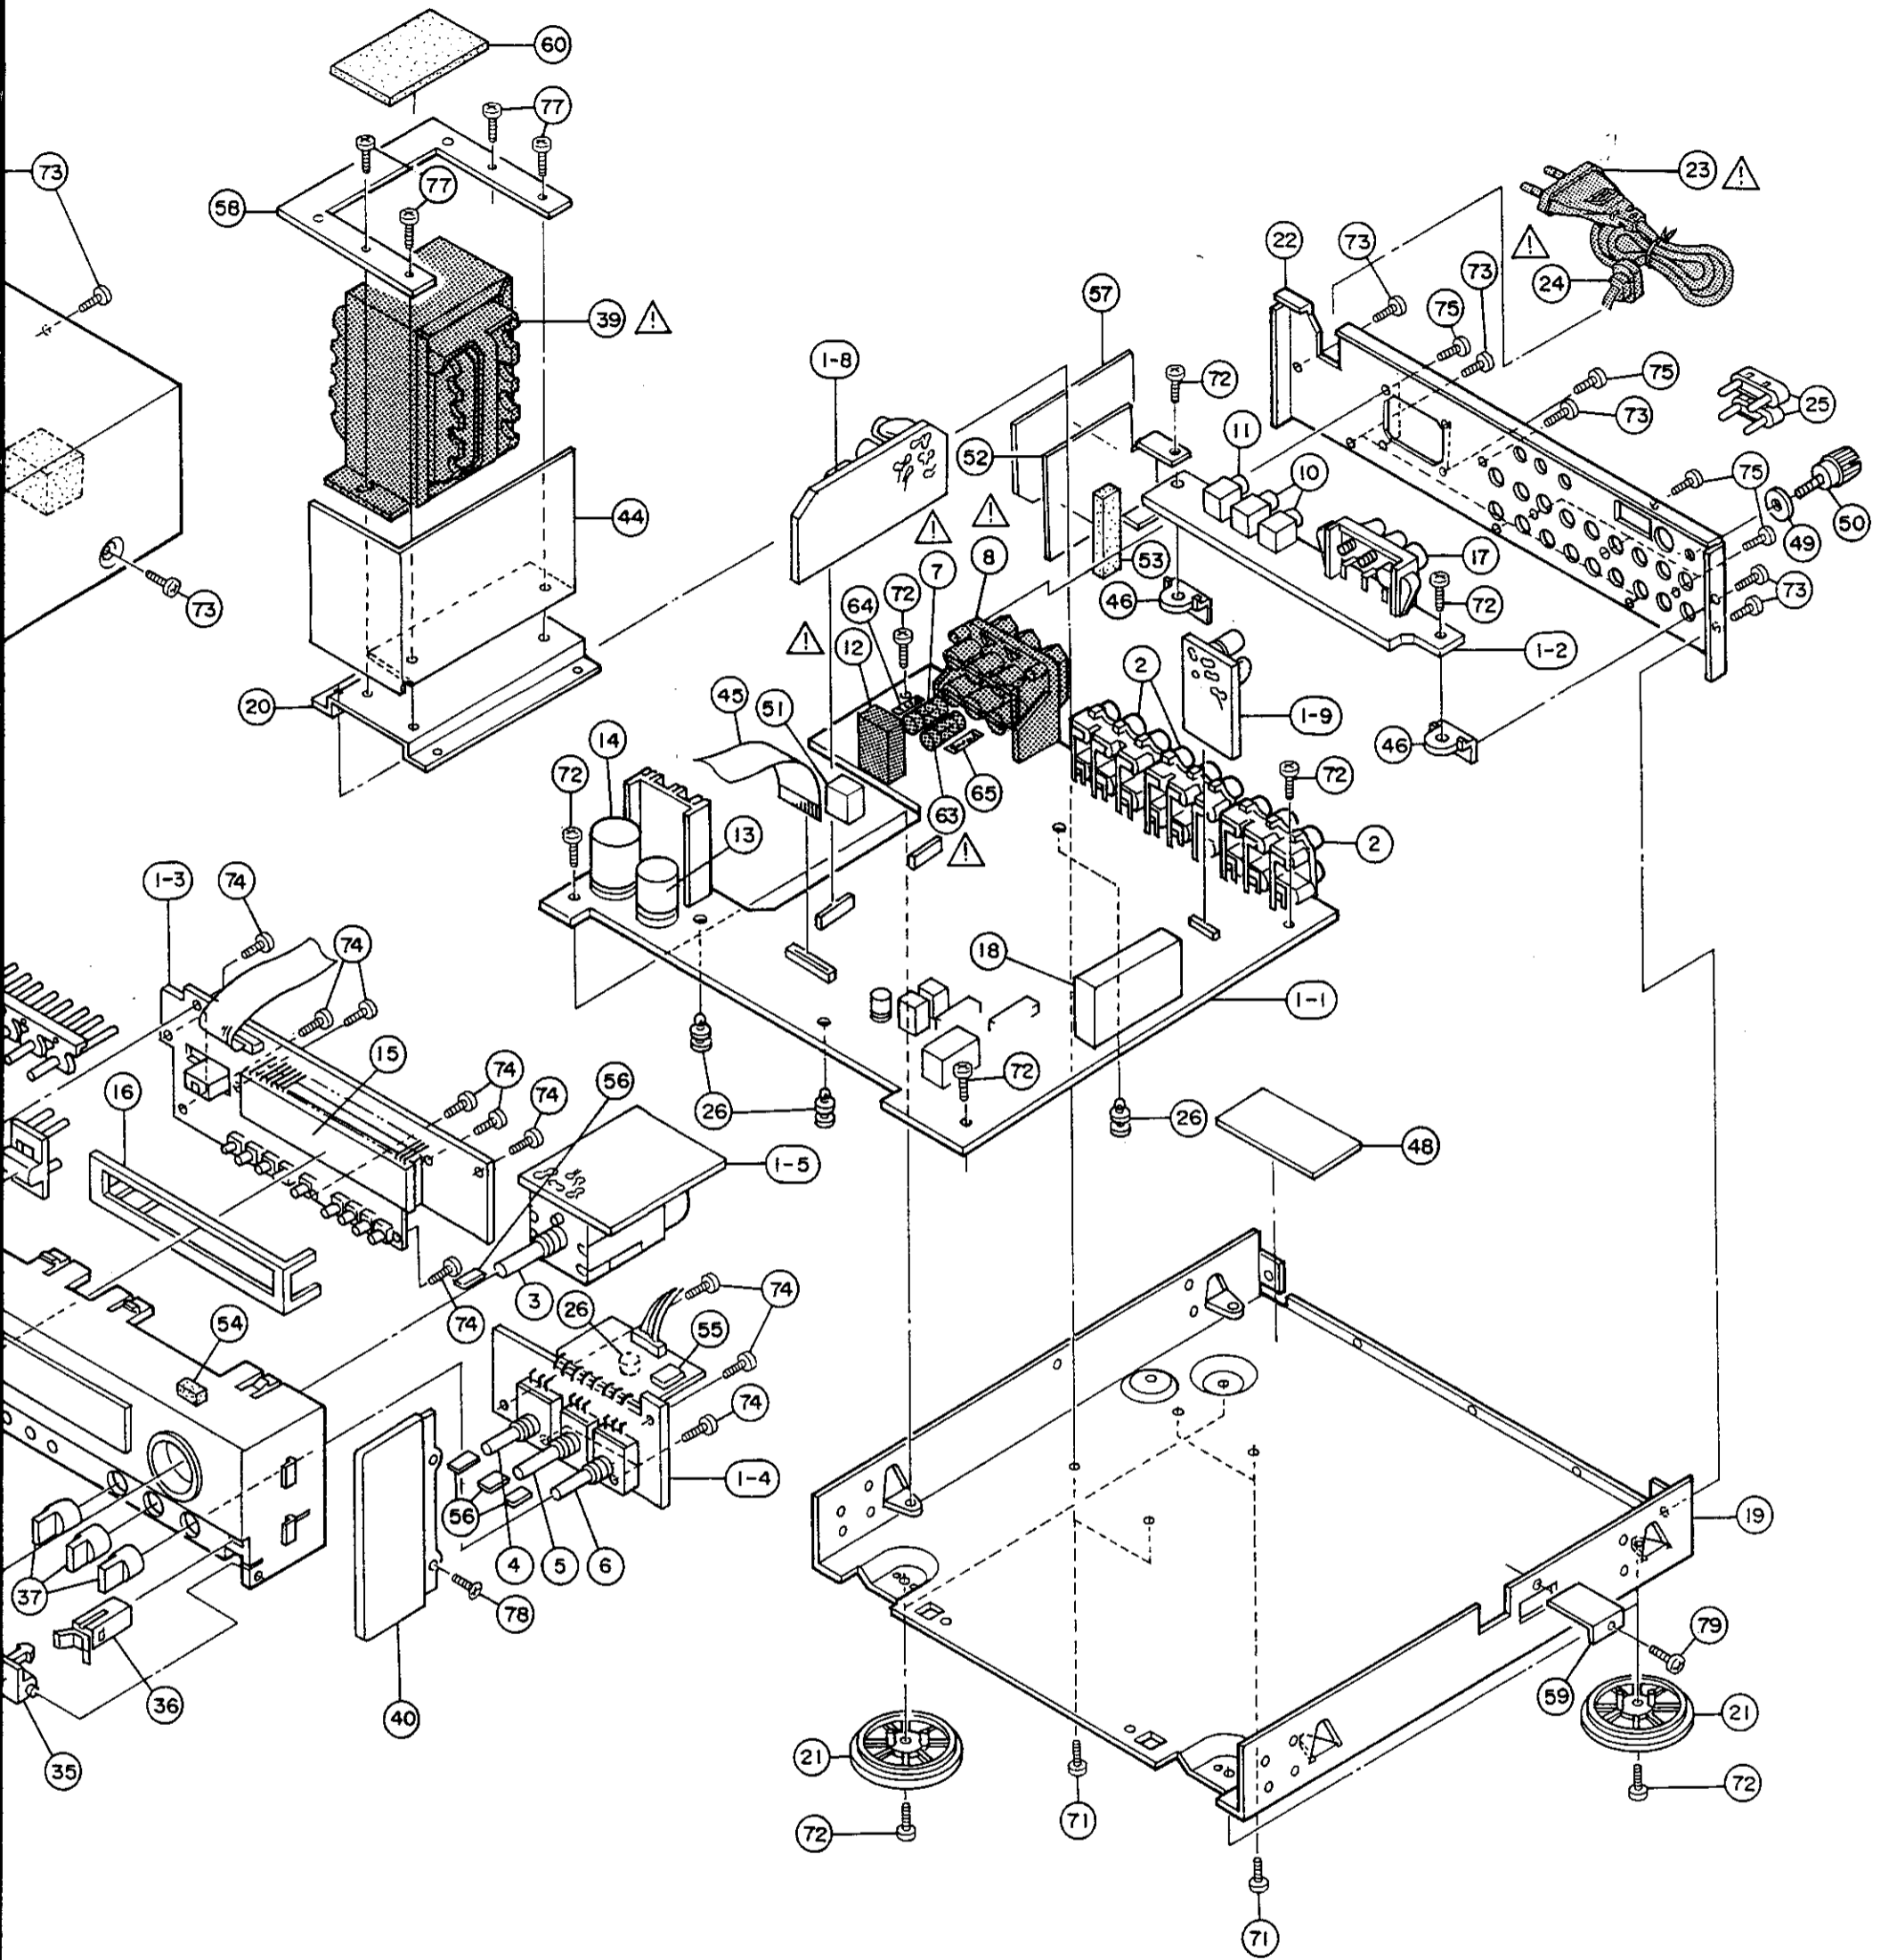


g, or in some case

REMOTE CONTROL UNIT (RC-154: Part No.: 3990168004)


TUNER PRE SECTION

Schematic Diagram

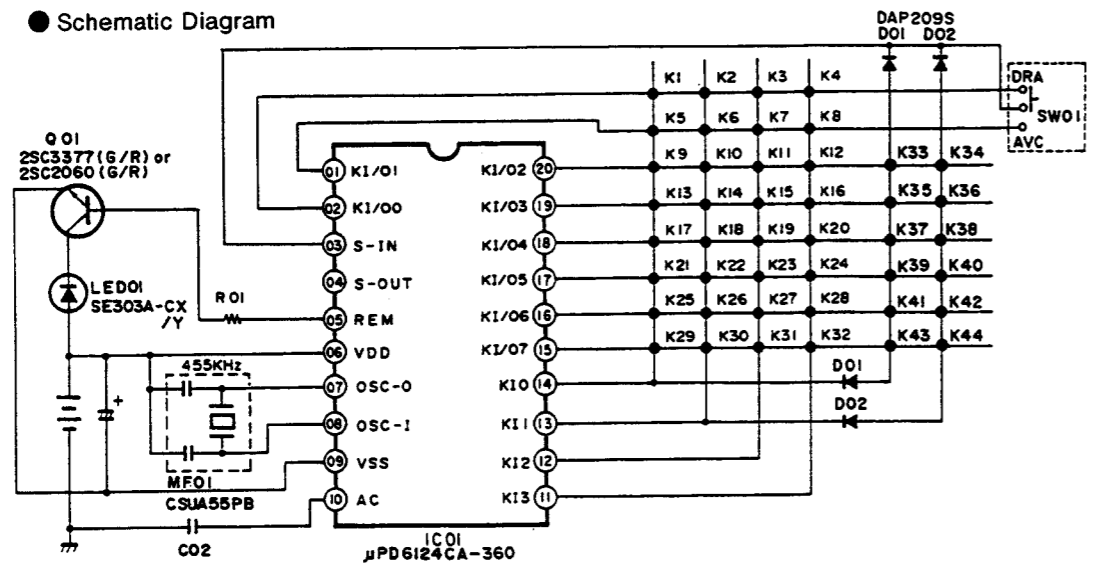


**NOTES**  
 ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM  
 ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD  
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

IC

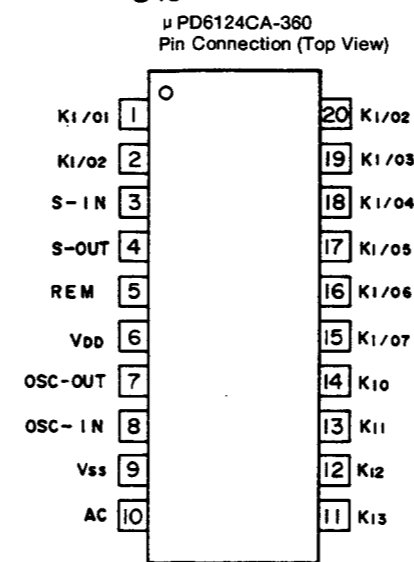


Block Diagram

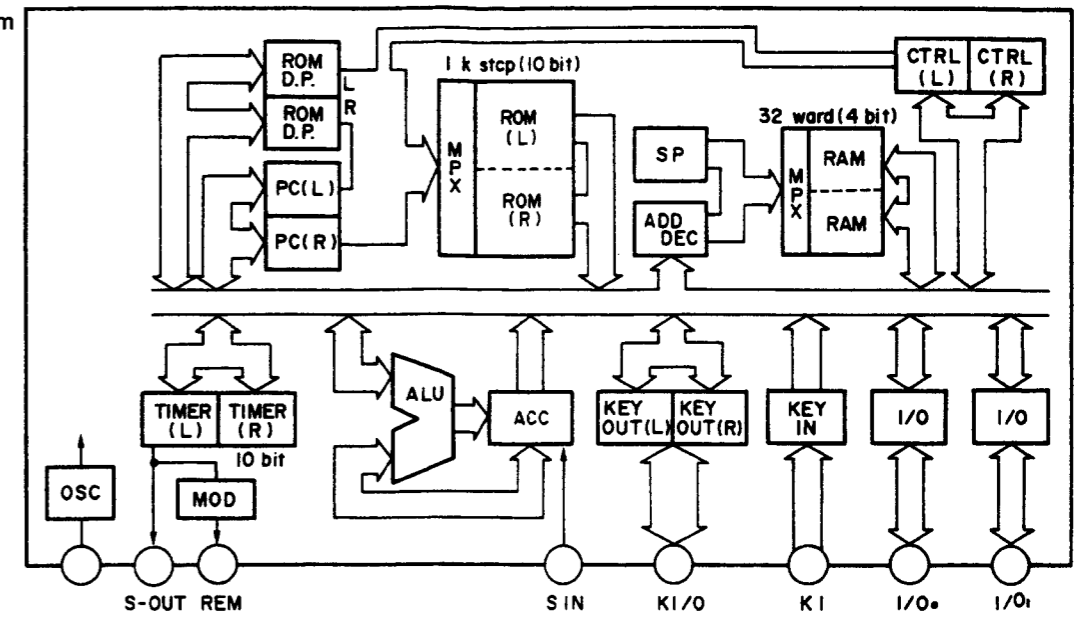


Cord Table (SW DRA Mode Side)

Key No.	System Address					Data Code					Expansion	Mask	Rul-ing	K	Remarks	RC-154	
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10							C11
1	0	0	1	1	0	0	0	0	0	1	0	0	0	0	0	POWER	○
2	0	0	1	1	0	0	0	0	1	0	0	0	1	0	0	VOLUME UP	○
3	0	0	1	1	0	0	0	0	1	1	0	0	1	0	0	VOLUME DOWN	○
4	0	0	1	1	0	0	0	0	1	0	0	1	1	0	0	SLEEP	○
5	0	0	1	1	0	0	0	0	1	1	0	0	1	0	0	MUTING	○
6	0	0	1	1	0	0	0	1	1	1	0	1	0	0	0	FUNCTION	○
7	0	0	1	1	0	0	0	0	1	1	0	1	0	0	0	T-MONITOR	○
8	0	0	1	1	0	0	0	0	1	1	0	1	0	0	0	TUNER	○
9	0	0	1	0	0	0	0	0	1	1	0	1	0	0	0	F.PLAY 1 ▶	○
10	0	0	1	0	0	0	0	1	1	0	1	0	1	0	0	R.PLAY 1 ◀	○
11	0	0	1	0	0	0	0	0	1	1	0	1	0	0	0	FF 1 ▶▶	○
12	0	0	1	0	0	0	0	1	1	0	1	0	0	0	0	REW 1 ◀◀	○
13	0	0	1	0	0	0	1	1	1	1	0	1	0	0	0	REC/MUTE 1 ●	○
14	0	0	1	0	0	0	0	1	1	1	1	0	0	0	0	STOP 1 ■	○
15	0	0	1	0	0	0	1	1	0	0	1	0	0	0	0	SELECT A/B	○
16																No signals sent	○
17	Keys for which the codes change																
27	See the Code Tables for the tuner and CD modes.																
28																	
29																	
30																No signals sent	
31																	
32																	
33	0	0	0	1	0	1	1	1	0	1	0	1	0	0	0	DIRECT	○
34	0	0	0	1	0	1	0	1	1	0	0	1	0	0	0	PROGRAM	○
35	0	0	0	1	0	1	0	0	0	1	0	1	0	0	0	CANCEL	○
36	0	0	0	1	0	0	1	0	0	1	1	1	0	0	0	SDB	○
37	0	0	0	1	0	0	0	1	1	1	0	1	0	0	0	PLAY ▶	○
38	0	0	0	1	0	0	0	1	1	1	0	1	0	0	0	STOP ■	○
39	0	0	0	1	0	0	0	0	1	1	0	1	0	0	0	A-SEARCH ▶▶	○
40	0	0	0	1	0	0	0	0	1	1	0	1	0	0	0	A-SEARCH ◀◀	○
41	0	0	0	1	0	0	1	0	1	1	0	1	0	0	0	M-SEARCH ▶▶	○
42	0	0	0	1	0	0	1	1	0	1	0	1	0	0	0	M-SEARCH ◀◀	○
43	0	0	0	1	0	1	0	1	1	0	1	0	0	0	0	PAUSE	○
44	0	0	0	1	0	1	1	0	1	0	1	1	0	0	0	DISK SKIP	○

Transistor

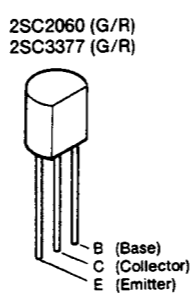

Diodes

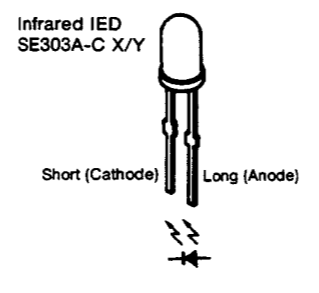

Cord Table (SW DRA Mode Side)  
 Tuner mode (after TUNER (K8) Key pressed (and in the initial state with the SW DRA mode values after the batteries have been inserted))

Key No.	System Address					Data Code					Expansion	Mask	Rul-ing	K	Remarks	RC-154	
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10							C11
17	0	0	1	1	0	0	1	0	0	0	0	1	0	0	0	1	○
18	0	0	1	1	0	0	1	1	0	0	0	0	1	0	0	2	○
19	0	0	1	1	0	0	0	0	1	0	0	0	1	0	0	3	○
20	0	0	1	1	0	0	1	0	1	0	0	0	1	0	0	4	○
21	0	0	1	1	0	0	1	1	0	0	0	0	1	0	0	5	○
22	0	0	1	1	0	0	1	1	0	0	0	0	1	0	0	6	○
23	0	0	1	1	0	0	0	0	1	0	0	0	1	0	0	7	○
24	0	0	1	1	0	0	1	0	0	1	0	0	1	0	0	8	○
25	0	0	1	1	0	0	1	1	0	0	0	1	1	0	0	9	○
26	0	0	1	1	0	0	0	1	0	0	0	1	1	0	0	10	○
27	0	0	1	1	0	0	1	1	1	0	1	1	0	0	0	+10	○

Cord Table (SW DRA Mode Side)  
 CD mode (after DIRECT (K33) or PROGRAM (K34) Key pressed)

Key No.	System Address					Data Code					Expansion	Mask	Rul-ing	K	Remarks	RC-154	
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10							C11
17	0	0	0	1	0	0	1	0	0	0	0	1	0	0	0	1	○
34	0	0	0	1	0	1	0	1	0	0	0	1	0	0	0	2	○
35	0	0	0	1	0	0	0	1	0	0	0	1	0	0	0	3	○
36	0	0	0	1	0	0	1	0	0	0	0	1	0	0	0	4	○
21	0	0	0	1	0	0	0	1	1	0	0	0	1	0	0	5	○
22	0	0	0	1	0	0	1	1	0	0	0	1	0	0	0	6	○
23	0	0	0	1	0	0	0	0	1	0	0	0	1	0	0	7	○
24	0	0	0	1	0	0	1	0	0	1	0	0	1	0	0	8	○
25	0	0	0	1	0	0	1	0	1	0	0	1	0	0	0	9	○
26	0	0	0	1	0	1	1	0	1	0	0	1	0	0	0	10	○
27	0	0	0	1	0	0	0	1	1	0	0	1	0	0	0	+10	○

Cord Table (SW AVC Mode Side)

Key No.	System Address					Data Code					Expansion	Mask	Rul-ing	K	Remarks	RC-154	
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10							C11
1	0	1	0	0	0	1	0	0	0	0	0	1	1	0	0	POWER	○
2	0	1	0	0	0	1	0	0	0	1	1	1	1	0	0	VOLUME UP	○
3	0	1	0	0	0	1	0	0	0	1	1	1	0	0	0	VOLUME DOWN	○
4	0	1	0	0	0	1	0	0	0	1	1	1	0	0	0	SLEEP	○
5	0	1	0	0	0	0	0	0	0	1	1	1	1	0	0	MUTING	○
6	0	1	0	0	0	1	1	1	1	1	0	1	0	0	0	FUNCTION	○
7	0	1	0	0	0	0	0	1	1	1	0	1	0	0	0	T-MONITOR	○
8	0	1	0	0	0	1	0	0	1	1	0	1	0	0	0	TUNER	○
9	0	1	0	0	0	0	1	1	1	1	0	1	0	0	0	F.PLAY 1 ▶	○
10	0	1	0	0	0	1	1	1	0	1	0	1	0	0	0	R.PLAY 1 ◀	○
11	0	1	0	0	0	0	1	0	1	0	1	0	0	0	0	FF 1 ▶▶	○
12	0	1	0	0	0	1	1	0	1	1	0	1	0	0	0	REW 1 ◀◀	○
13	0	1	0	0	0	1	1	1	1	1	0	1	0	0	0	REC/MUTE 1 ●	○
14	0	1	0	0	0	0	1	1	1	1	0	1	0	0	0	STOP 1 ■	○
15	0	1	0	0	0	1	1	0	0	1	0	1	0	0	0	SELECT A/B	○
16																No signals sent	○
17	0	1	0	0	0	0	1	0	1	0	0	1	1	0	0	VDP-1	○
18	0	1	0	0	0	1	1	0	1	0	0	1	1	0	0	VDP-2	○
19	0	1	0	0	0	1	0	1	1	0	0	1	1	0	0	VCR-1	○
20	0	1	0	0	0	0	1	1	1	0	0	1	1	0	0	VCR-2	○
21	0	1	0	0	0	0	0	0	0	1	0	0	1	1	0	DBS	○
22	0	1	0	0	0	1	0	0	0	1	0	0	1	1	0	TV	○
23	0	1	0	0	0	1	1	1	0	0	1	1	1	0	0	BYPASS	○
24	0	1	0	0	0	0	1	1	0	0	1	1	1	0	0	SURROUND MODE	○
25	0	1	0	0	0	0	0	1	1	0	0	1	1	0	0	D CENTER	○
26	0	1	0	0	0	0	1	0	1	0	1	1	1	0	0	T. TONE	○
27	0	1	0	0	0	1	1	0	1	0	1	1	1	0	0	3CH LOGIC	○
28	0	1	0	0	0	1	1	0	0	1	1	1	1	0	0	REAR VOL. UP	○
29	0	1	0	0	0	0	0	1	0	1	1	1	1	0	0	REAR VOL. DOWN	○
30	0	1	0	0	0	1	0	1	0	1	1	1	1	0	0	CENTER VOL. UP	○
31	0	1	0	0	0	0	1	1	0	1	1	1	1	0	0	CENTER VOL. DOWN	○
32																No signals sent	○
33	0	0	0	1	0	1	1	1	0	1	0	1	0	0	0	DIRECT	○
34	0	0	0	1	0	1	0	1	0	1	0	0	1				


**POWER AMPLIFIER SECTION**

**DISASSEMBLY PROCEDURES**


(Follow these procedures in reverse order to reassemble.)

**1. Removing the cover and front panel**

- ① Remove the 6 screws which fasten the top cover.
- ② Remove the 2 screws of the bottom side which fasten the front panel.

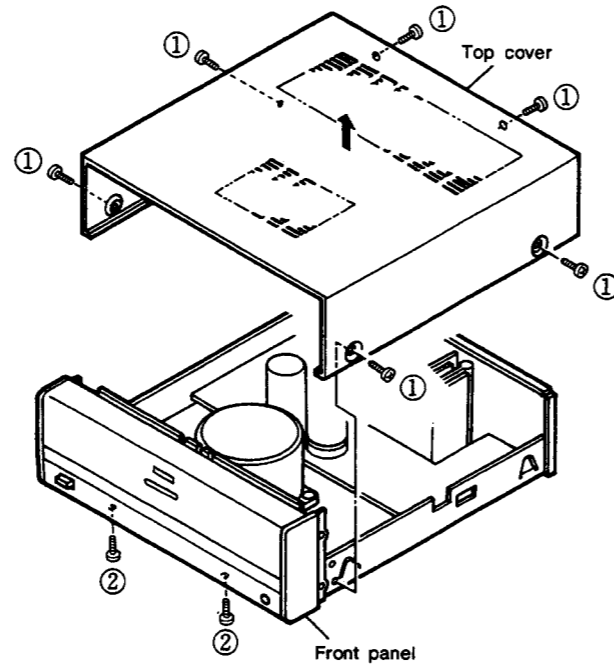

- ③ Disconnect connectors CB402, CB403, and CB405 which are attached to the main unit.
- ④ Remove the 2 screws which fasten the side plate.
- ⑤ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver),
- ⑥ Use your fingers to push out the hook of the inner panel from the side plate in the direction of the arrow. Using the same method for the left side, remove the side plate. Remove the front panel in the direction of the arrow.

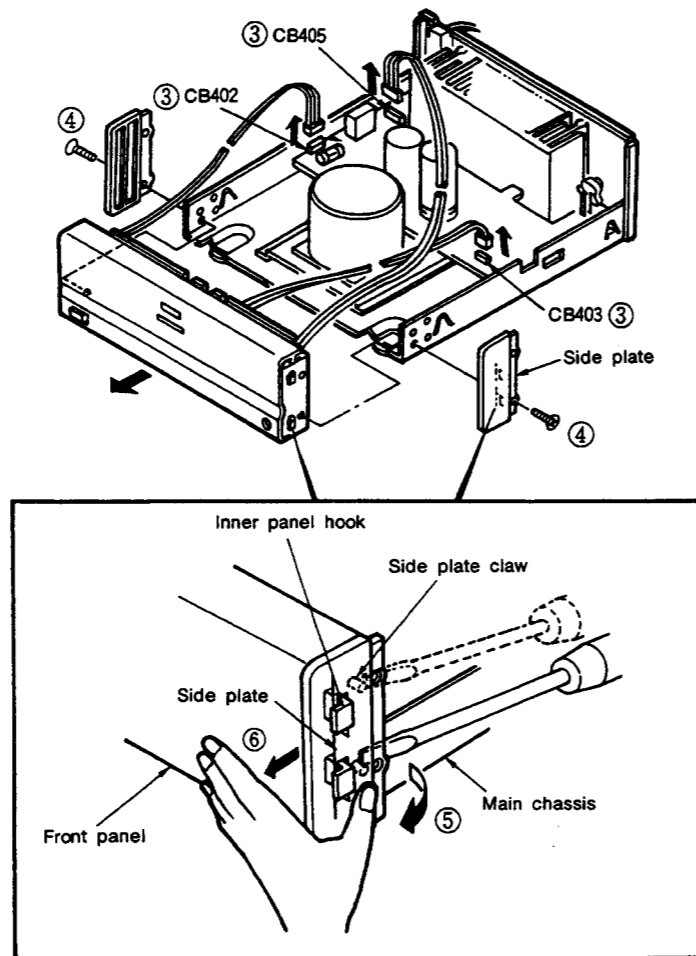


**2. Removal of the Various Boards**

**POWER SWITCH UNIT 1U-2477-2**

- ① Remove the 2 screws which fasten the power switch unit and remove the board in the direction of the arrow.


**POWER LED UNIT 1U-2477-3**

- ② Remove the 2 screws which fasten the power LED unit and remove the board in the direction of the arrow.

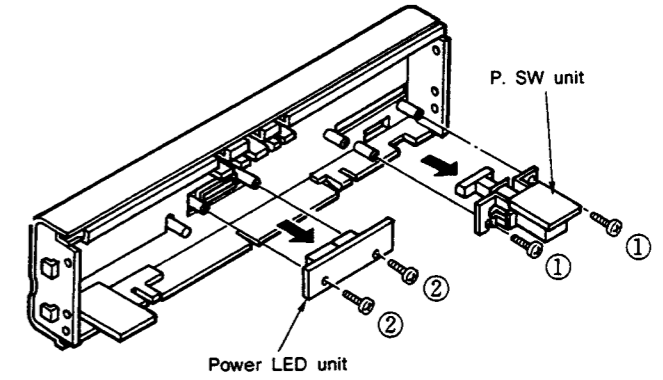

**HEADPHONE UNIT 1U-2477-4**

- ③ While pressing (with a flat-bladed screwdriver) the 4 hooks of the inner panel which fasten the front panel, remove the front panel in the direction of the arrow.
- ④ Remove the spacer which fastens the headphone unit in the direction of the arrow.

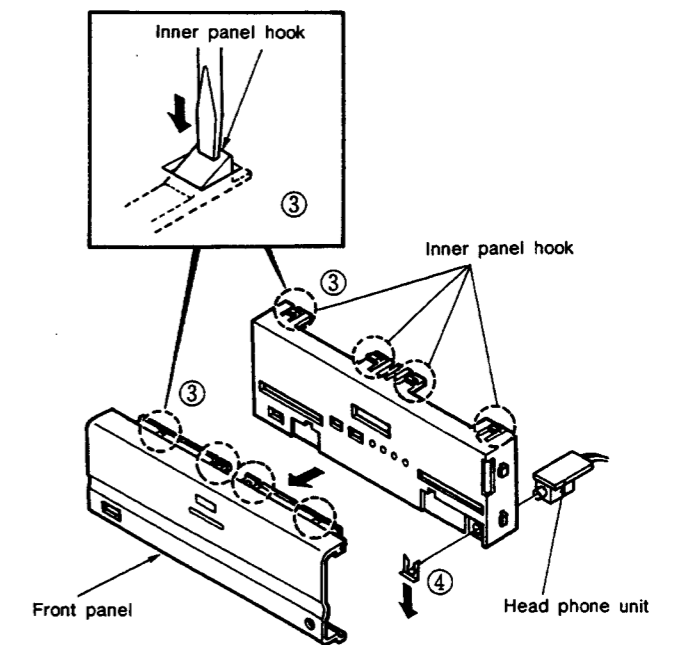





## POWER AMPLIFIER SECTION

## MAIN UNIT IU-2477-1

- ⑤ Stand the main unit in the horizontal orientation and remove the 4 screws which fasten the power radiator.
- ⑥ Remove the 2 screws which fasten the main unit.

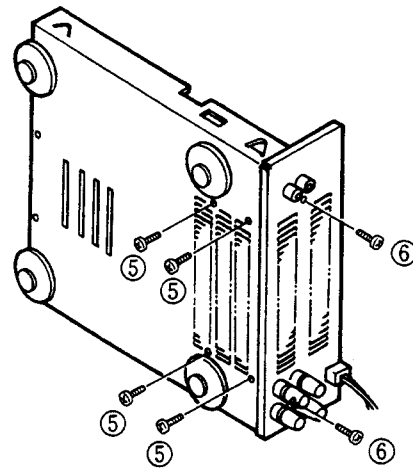


- ⑦ Disconnect connectors CB401 and CB404, CN406 which are attached to the main unit.
- ⑧ Remove the 4 screws which fasten the power transformer and move the power transformer in the direction of the arrow.
- ⑨ Remove the 7 screws which fasten the main unit.

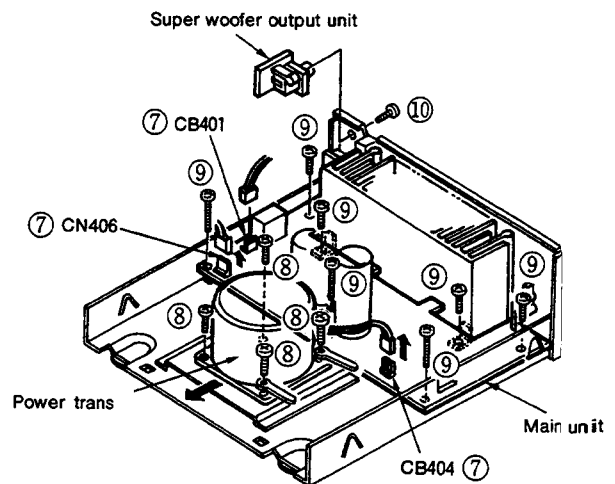



## S. WOOFER OUT PUT UNIT IU-2477-6


- ⑩ Remove the screw which fastens the superwoofer output unit.
- ⑪ Remove the main unit in the direction of the arrow.

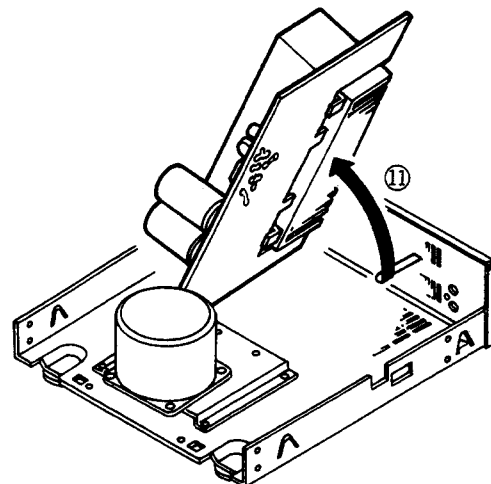

POWER AMPLIFIER SECTION

BLOCK, LEVEL DIAGRAM

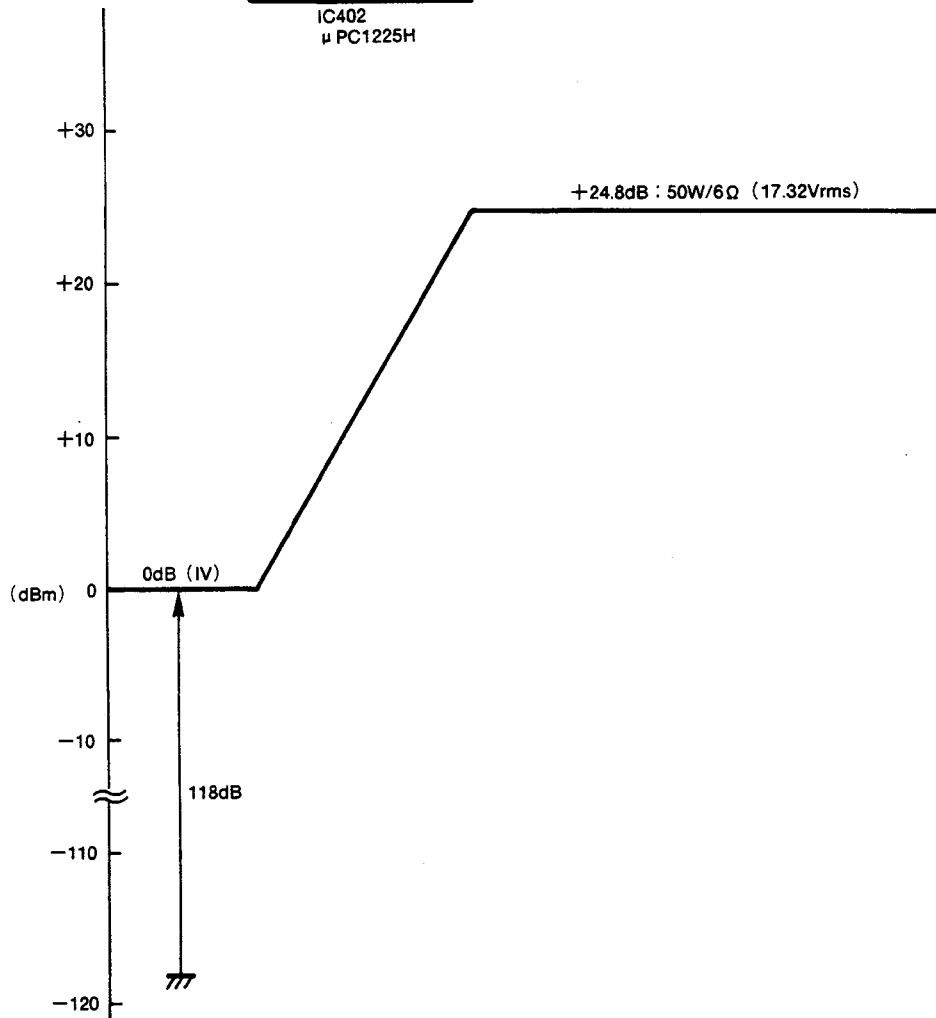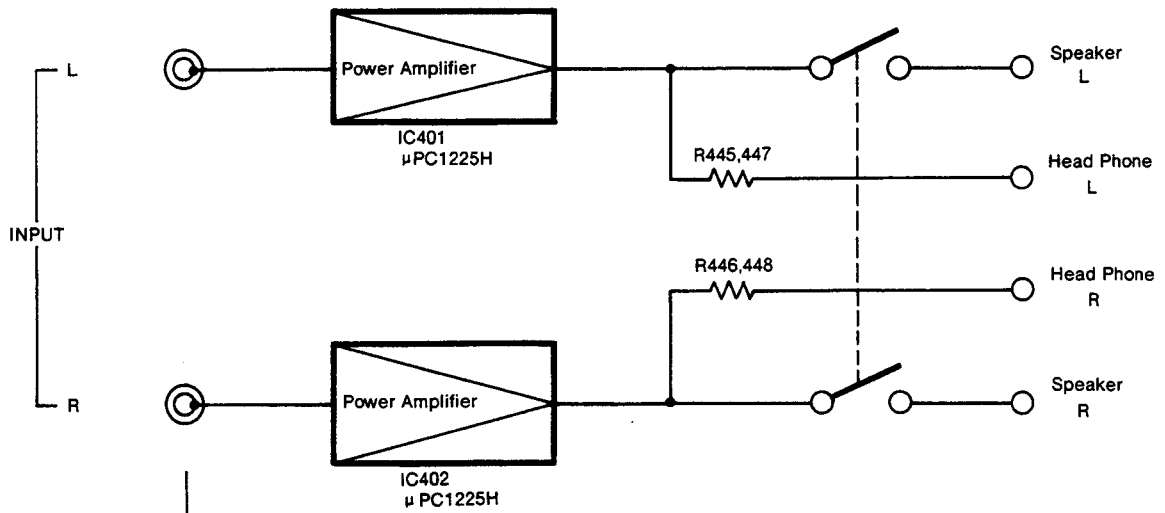

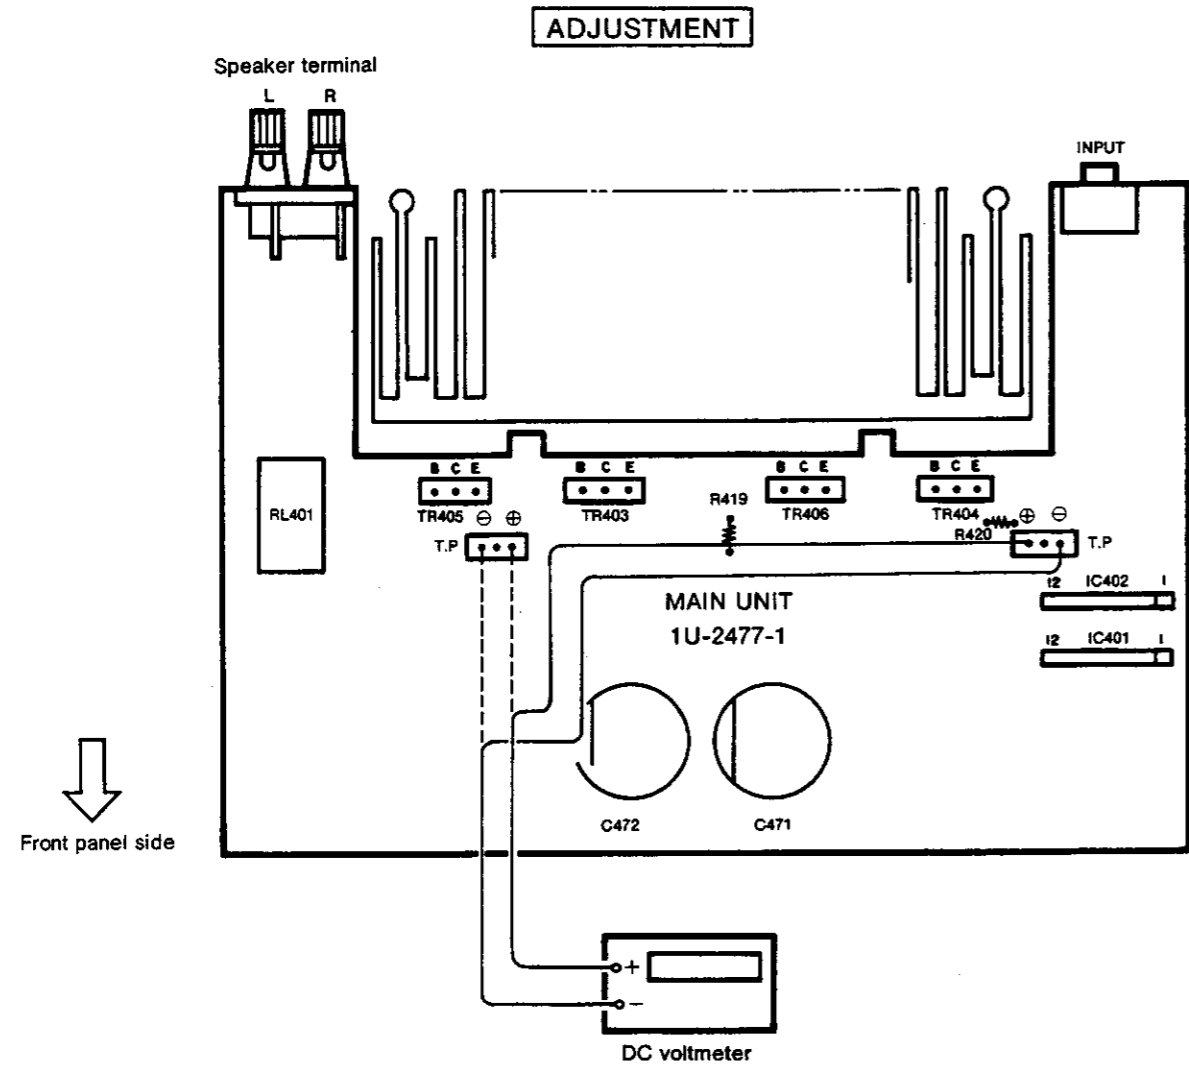

**1. Measuring Instruments Required for the Adjustments**

- DC voltmeter


**2. Preparation**

- (1) Avoid placing the set near an air conditioner or fan where there is a lot of air circulation and place it in the normal operating condition. The operating temperature of the set should be between 15 and 30°C, and the humidity should be normal.
- (2) Set the switches of the set as follows:
  - POWER switch: ON (→)
  - SPEAKER terminals: No load (i.e., do not connect a speaker or dummy resistor)
  - INPUT pin: No input

**● Adjustments**

- (1) Remove the top cover and connect a DC voltmeter to the test point of 1U-2477-1 (the main board).
- (2) Plug the power cord into a 230 V AC source (or one in the range of 219 to 241 V) and set the power switch on (→).
- (3) Read the voltmeter after 10 minutes and check that the reading is in the range of 2 mV to 40 mV (DC).
- (4) When the value of the voltmeter reading is 1 mV or less, cut the aforementioned R419 and R420 (510 ohm).

**● IC's**  
μPC1225H  
(IC401,402)

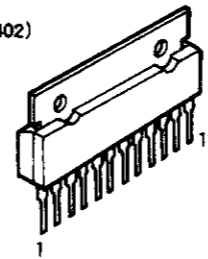


**Terminal Connection**

Terminal No.	Connection
1	+ V <sub>CCD</sub> (Drive stage power supply)
2	+ V <sub>CCP</sub> (Pre-drive stage power supply)
3	Muting
4	Input (Non inverted)
5	NFB (Inverted)
6	Phase Comparator
7	Bias
8	Bias
9	- V <sub>CCP</sub> (Pre-drive stage power supply)
10	- V <sub>CCD</sub> (Drive stage power supply)
11	Lower Output
12	Upper Output


**SEMICONDUCTORS**

**POWER AMPLIFIER SECTION**

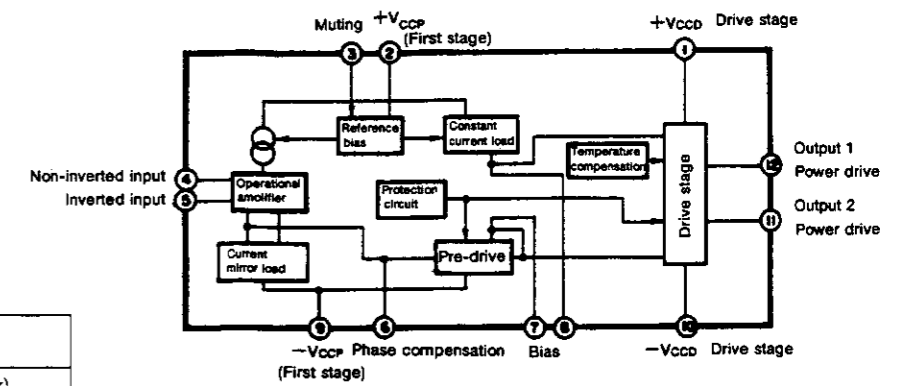


**● Transistors**


- 2SA970 (BL/GR)
- 2SC1815 (BL)
- 2SC1841 (E/F)
- 2SA1015 (GR)
- 2SC2878 (A/B)
- 2SC2240 (BL/GR)

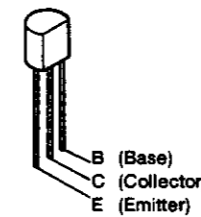


- 2SA1491LB (O/P/Y)(Z)
- 2SC3855LB (O/P/Y)(Z)

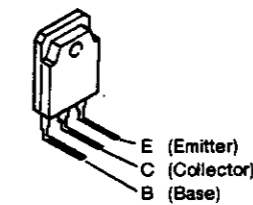

- 2SC2458 (BL)
- 2SA1048 (GR)

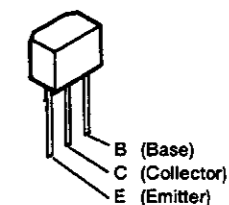


- 2SB1328 (P)
- 2SD2004 (P)

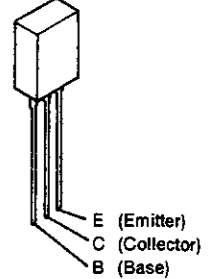


**● Diodes (including LED)**


1SS270A




HZS7B-1 HZS12B-1  
HZS16-1 HZS30-1




1SR35-200A

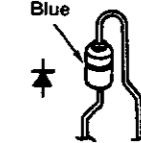


S4VB20F

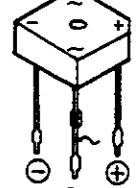

Thyristor  
SFOR1A42

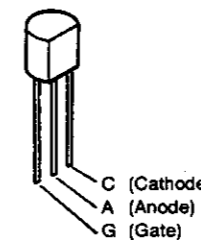

LED  
SLP-171E

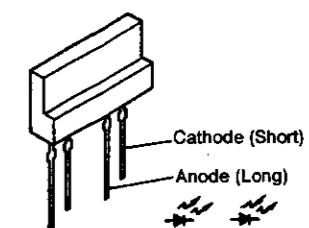


POWER AMPLIFIER SECTION

PRINTED WIRING BOARD

1 2 3 4 5 6 7 8

1U-2477 UPO-250 UNIT ASS'Y  
Component Side

A  
B  
C  
D  
E

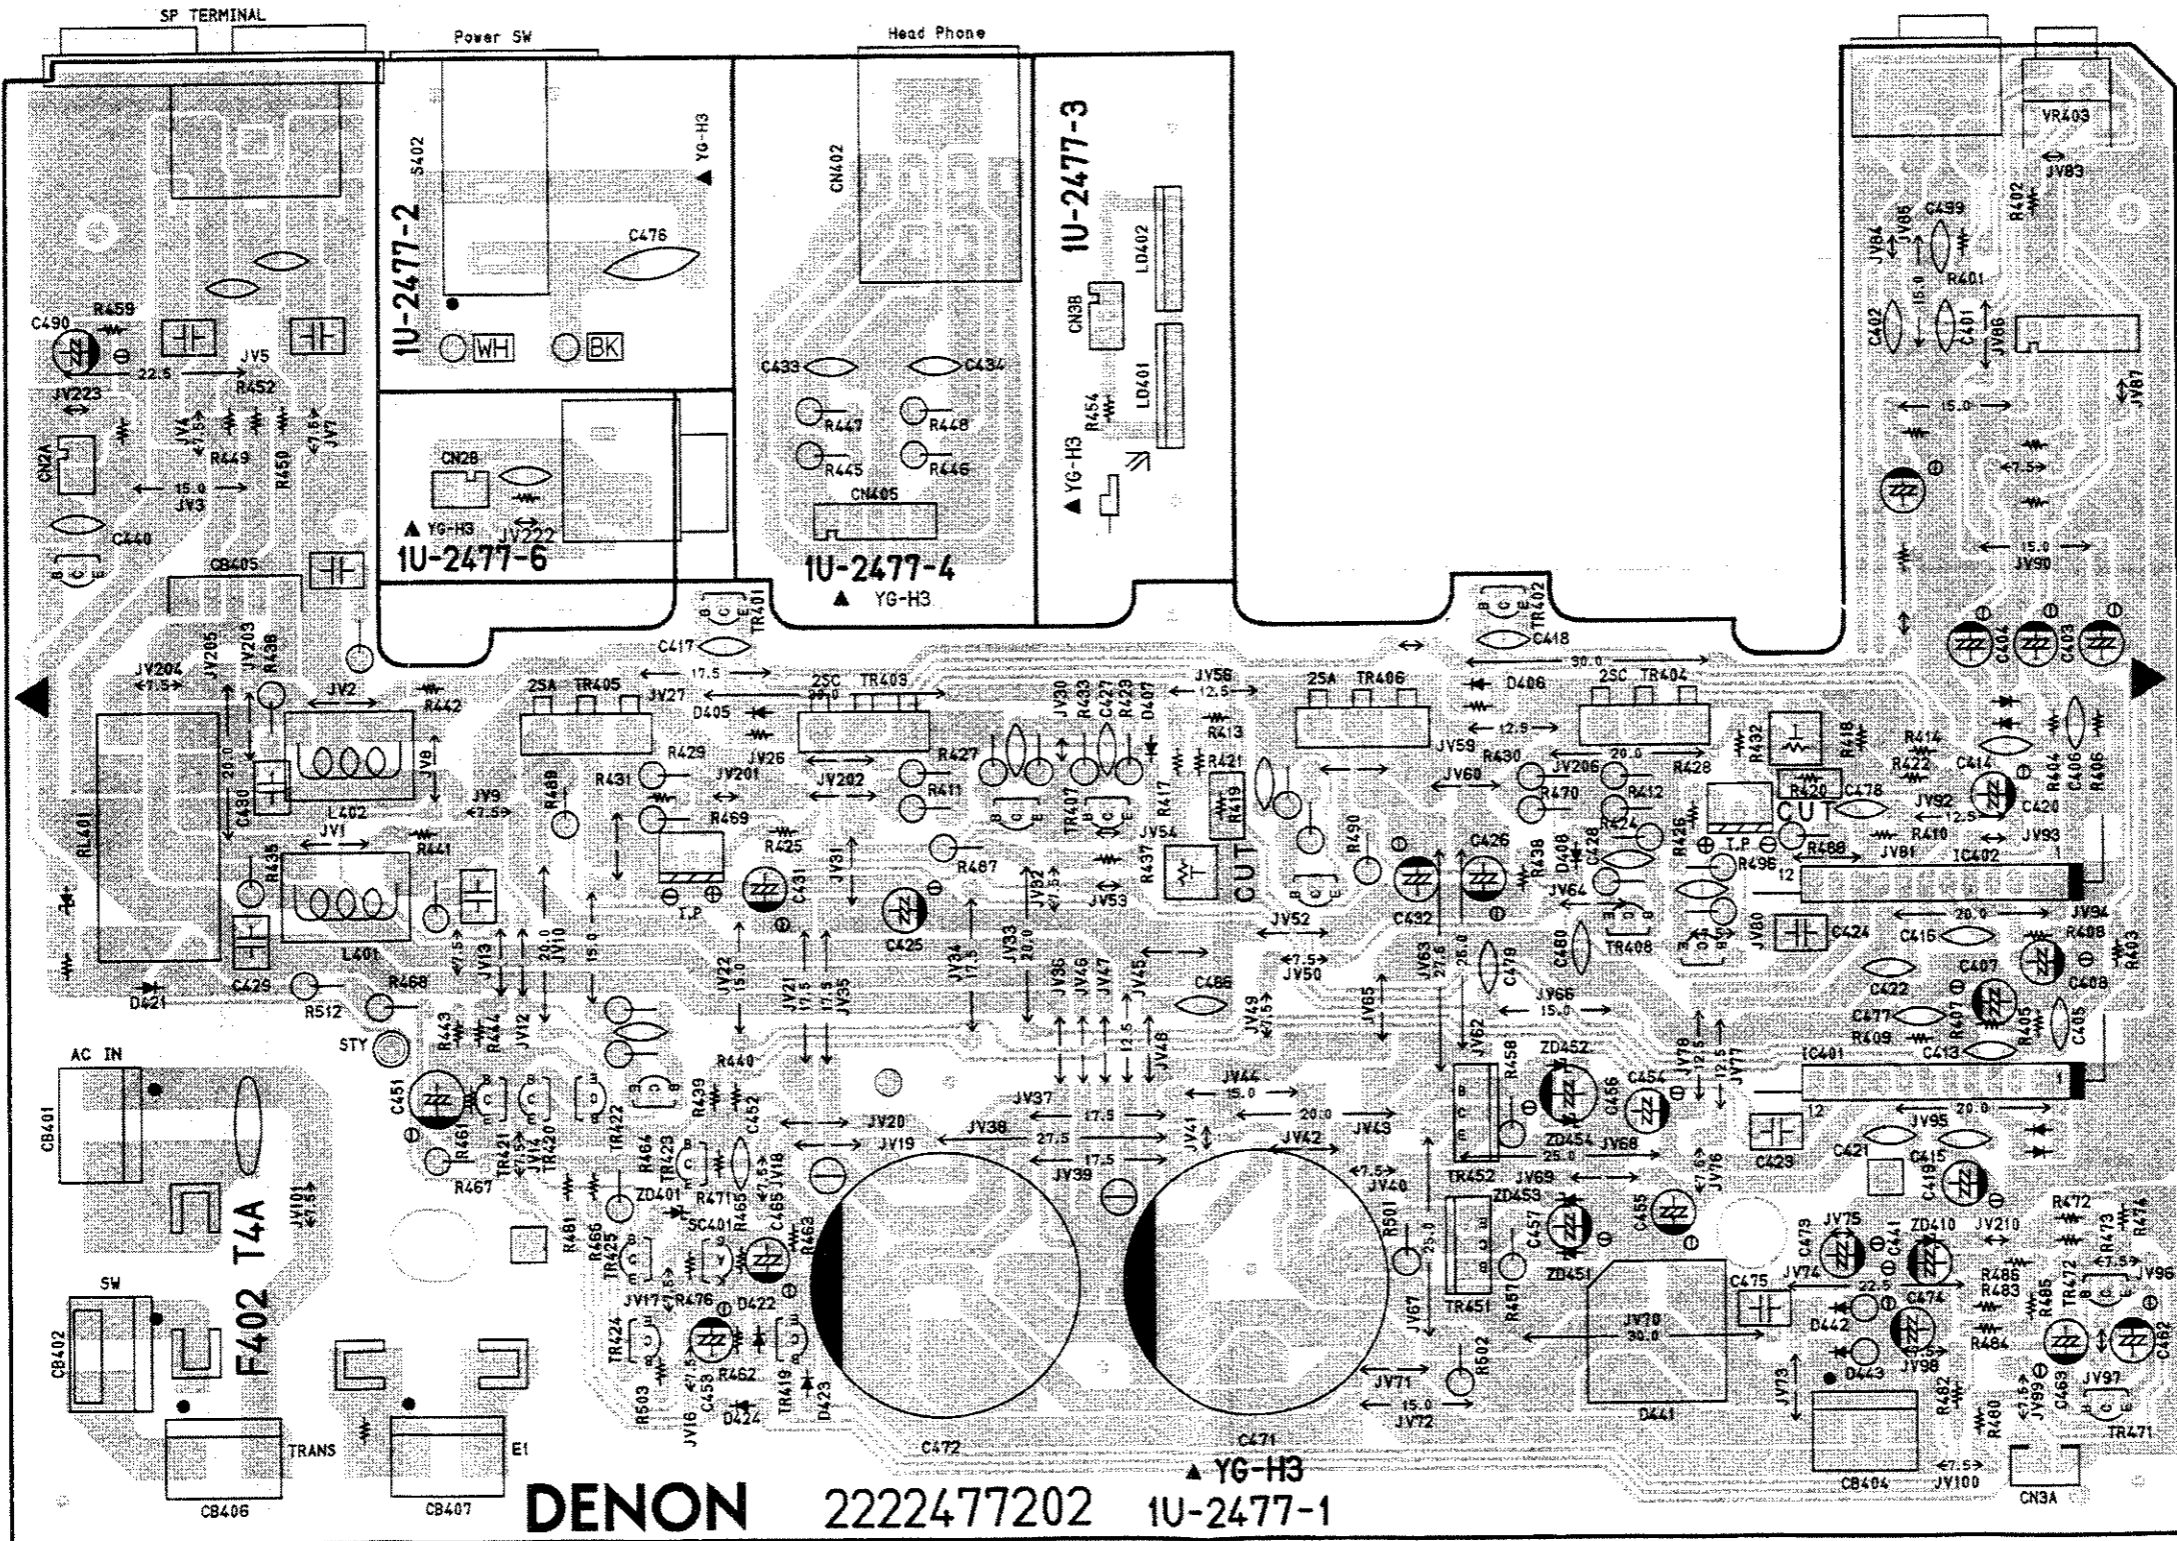


DENON 2222477202 1U-2477-1

POWER AMPLIFIER SECTION

1 2 3 4 5 6 7 8

Pattern Side

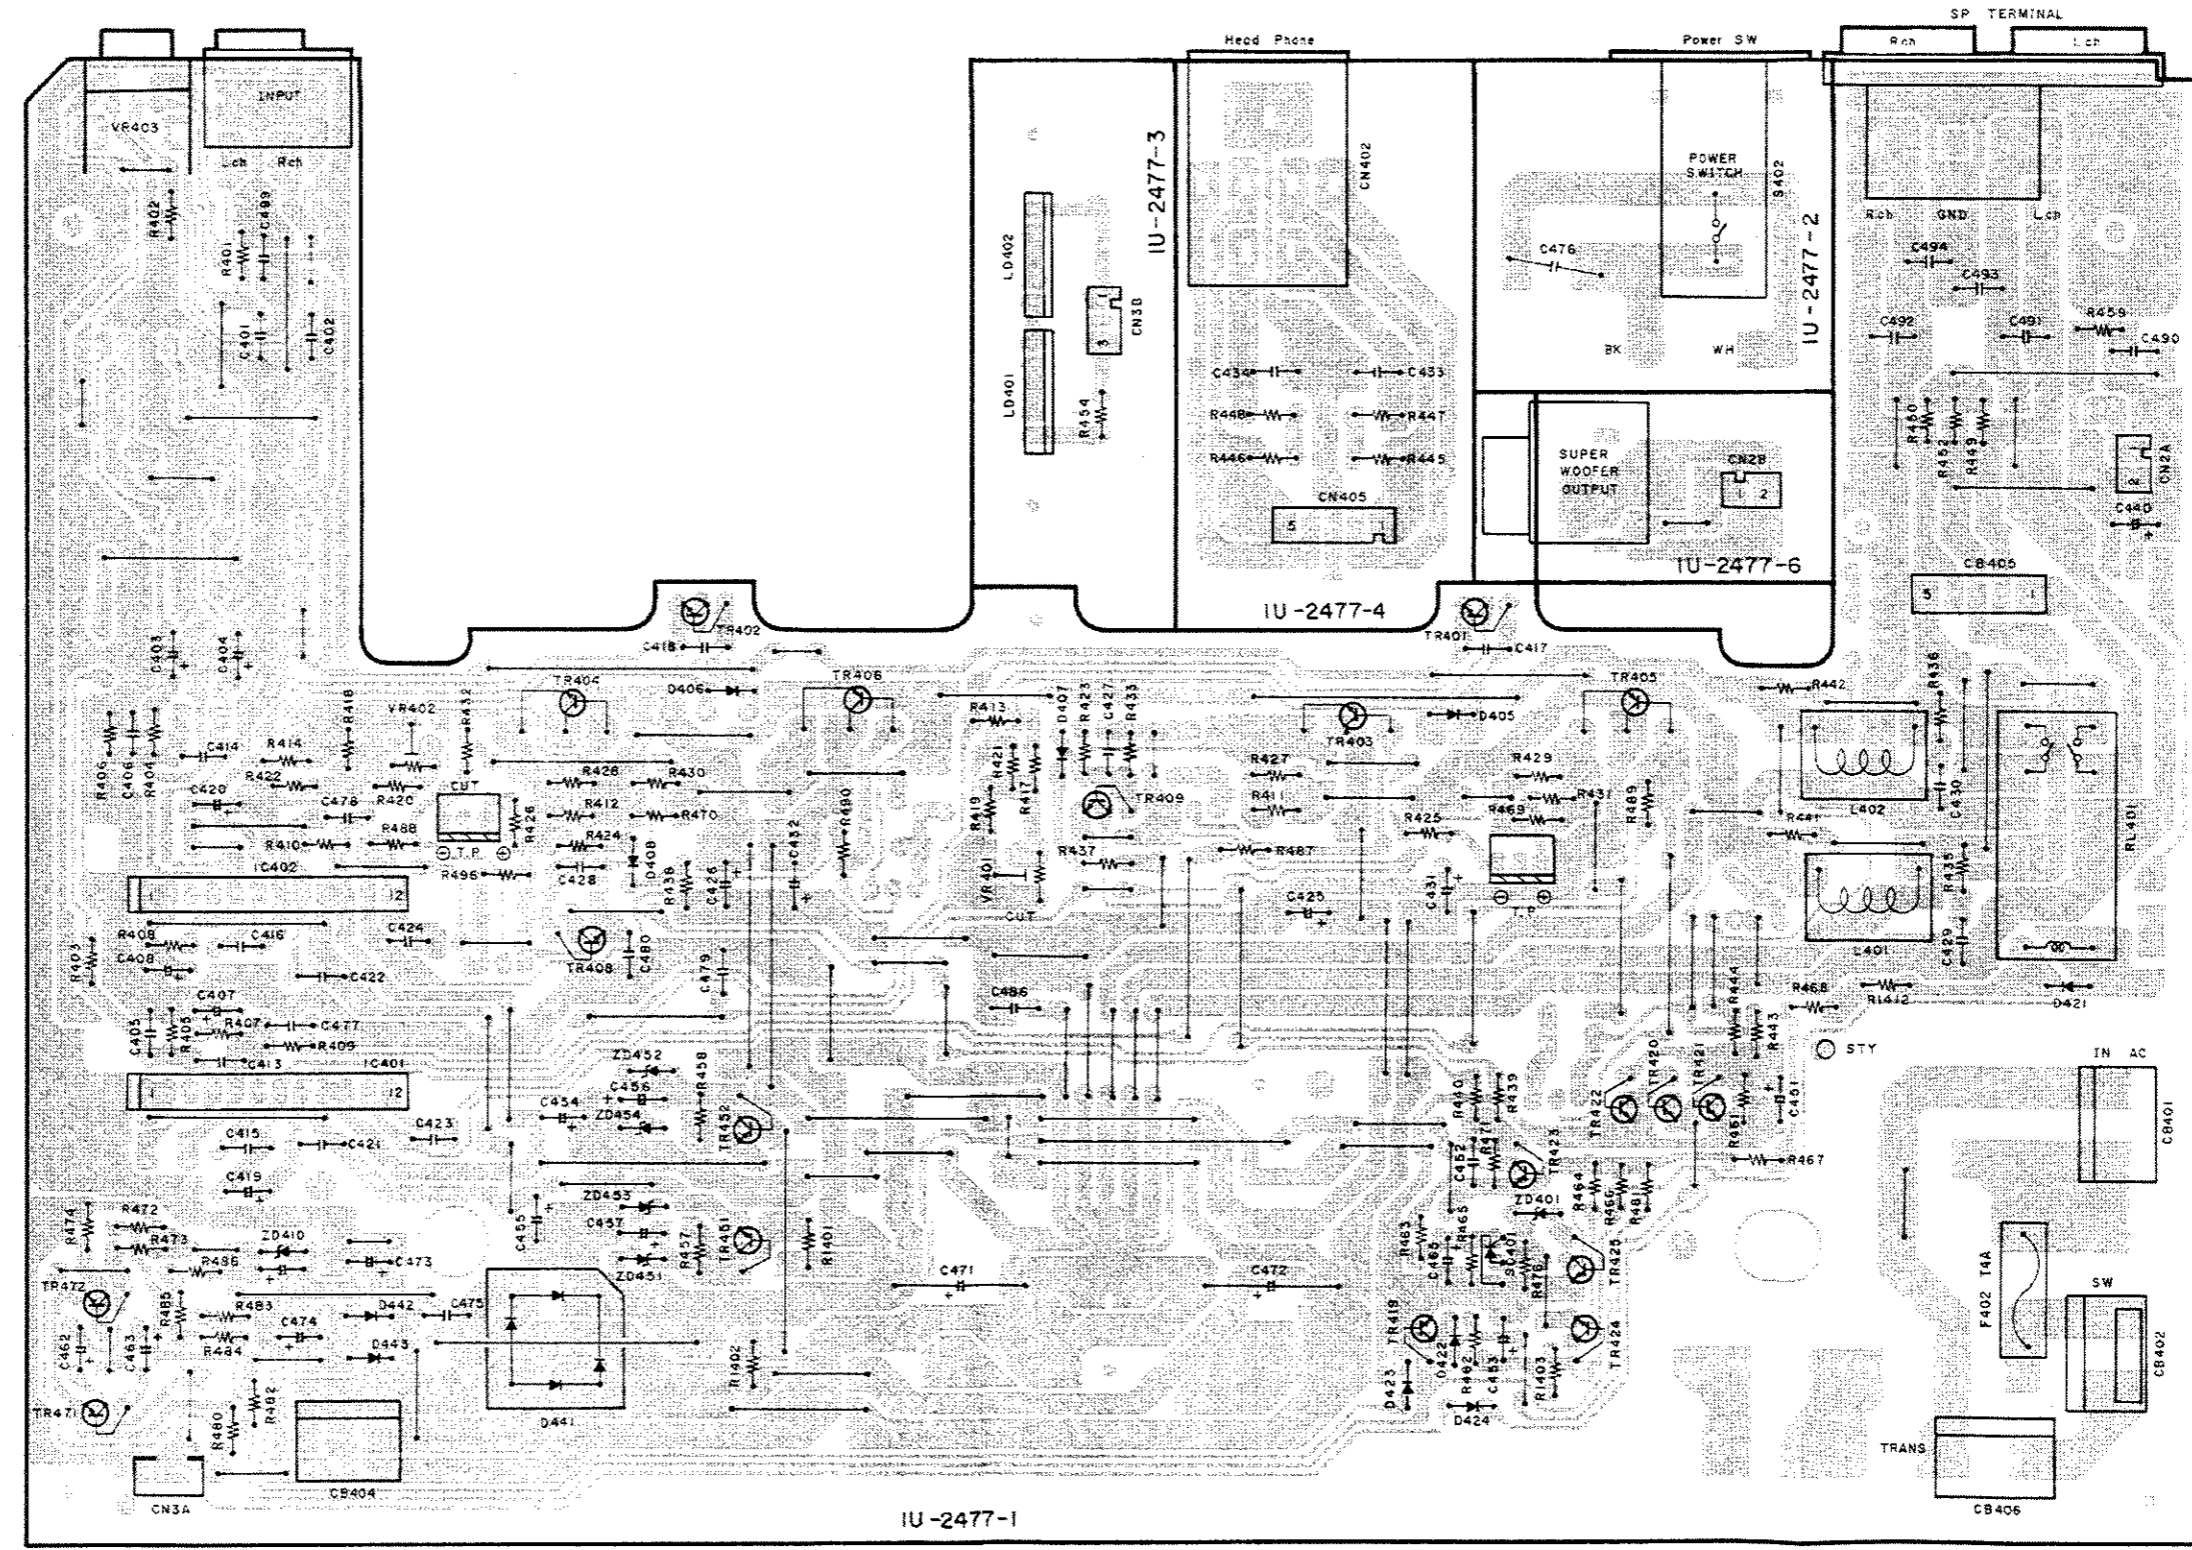

A

B

C

D

E



**POWER AMPLIFIER SECTION**

**NOTE ON PARTS LIST**

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W. Board parts list. (Refer to the Schematic Diagram for those parts.)

**WARNING:**

Parts marked with this symbol  $\Delta$  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

**Resistors**

Ex.: RN 14K 2E 182 G FR  
 Type Shape and performance Power Resistance Allowable error Others

RD : Carbon Film	2B : 1/8W	F : ±1%	P : Pulse-resistant type
RC : Composition	2E : 1/4W	G : ±2%	NL : Low noise type
RS : Metallic oxide Film	2H : 1/2W	J : ±5%	NB : Non-burning type
RW : Winding	3A : 1W	K : ±10%	FR : Fuse-resistor
RN : Metal film	3D : 2W	M : ±20%	F : Lead wire forming
RK : Metal mixture	3F : 3W		
	3H : 5W		

\* Resistance  
 1 8 2 ⇒ 1800 ohm = 1.8 kohm  
 Indicates number of zeros after effective number  
 2-digit effective number

Units: ohm

1 R 2 ⇒ 1.2 ohm  
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.

Units: ohm

\* Capacity (electrolyte only)  
 2 2 R ⇒ 2200 μF  
 Indicates number of zeros after effective number.  
 2-digit effective number.

Units: μF

2 R 2 ⇒ 2.2 μF  
 1-digit effective number.  
 2-digit effective number, decimal point indicated by R.

Units: μF

**Capacitors**

Ex.: CE 04W 1H 2R2 M BP  
 Type Shape and performance Dielectric strength Capacity Allowable error Others

CE : Aluminum foil electrolyte	0J : 6.3V	F : ±1%	HS : High stability type
CA : Aluminum solid electrolyte	1A : 10V	G : ±2%	BP : Non-polar type
CS : Tantalum electrolyte	1C : 16V	J : ±5%	HR : Ripple-resistant type
CQ : Film	1E : 25V	K : ±10%	DL : For charge and discharge
CK : Ceramic	1V : 35V	M : ±20%	HF : For assuring high frequency
CC : Ceramic	1H : 50V	Z : +80%	U : UL part
CP : Oil	2A : 100V	-20%	C : CSA part
CM : Mica	2B : 125V	P : +100%	W : UL-CSA type
CF : Metallized	2C : 160V	-0%	F : Lead wire forming
CH : Metallized	2D : 200V	C : ±0.25pF	
	2E : 250V	D : ±0.5pF	
	2H : 500V	= : Others	
	2J : 630V		

\* Capacity (except electrolyte)  
 2 R 2 ⇒ 2200pF = 2200 μF = 0.002 μF  
 (More than 2) — Indicates number of zeros after effective number.  
 2-digit effective number.

Units: μF

2 2 1 ⇒ 220pF  
 (0 or 1) — Indicates number of zeros after effective number.  
 2-digit effective number.

Units: pF

When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.


**1U-2477A P.W.B UNIT ASSY PARTS LIST**

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
<b>SEMICONDUCTORS GROUP</b>							
IC401	263 0206 007	IC μPC1225H		D405	276 0432 903	Diode 1SS270A	
IC402	263 0206 007	IC μPC1225H		D406	276 0049 914	Diode 1S2076A	
TR401	273 0198 918	Transistor 2SC1815(BL)		D407	276 0049 914	Diode 1S2076A	
TR402	273 0198 918	Transistor 2SC1815(BL)		D408	276 0432 903	Diode 1SS270A	
TR407	273 0235 923	Transistor 2SC1841(E/F)		D421	276 0432 903	Diode 1SS270A	
TR408	273 0235 923	Transistor 2SC1841(E/F)		D422	276 0432 903	Diode 1SS270A	
TR419	273 0253 918	Transistor 2SC2878(A/B)		D423	276 0432 903	Diode 1SS270A	
TR420	271 0191 906	Transistor 2SA1048(GR)		D424	276 0432 903	Diode 1SS270A	
TR421	273 0317 906	Transistor 2SC2458(BL)		ΔD441	276 0338 002	Diode S4UB20F	Bridge
TR422	273 0317 906	Transistor 2SC2458(BL)		D442	276 0553 905	Diode 1SR35-200A	
TR423	271 0094 935	Transistor 2SA970(BL/GR)		D443	276 0553 905	Diode 1SR35-200A	
TR424	273 0187 932	Transistor 2SC2240(BL/GR)		D445	276 0519 004	Diode 1SR35-200A	
TR425	273 0187 932	Transistor 2SC2240(BL/GR)		ZD401	276 0465 909	Zener Diode HZS7B-1	7 V
TR451	274 0151 903	Transistor 2SD2004(P)		ZD410	276 0477 900	Zener Diode HZS16-1	16 V
TR452	272 0107 906	Transistor 2SB1328(P)		ZD451	276 0478 909	Zener Diode HZS18-1	18 V
TR471	273 0317 906	Transistor 2SC2458(BL)		ZD452	276 0478 909	Zener Diode HZS18-1	18 V
TR472	273 0317 906	Transistor 2SC2458(BL)		ZD453	276 0477 900	Zener Diode HZS16-1	16 V
				ZD454	276 0477 900	Zener Diode HZS16-1	16 V

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
LD401	393 9155 007	LED SLP-171E	LED	C441	254 4260 948	Electrolytic 1μF/50 V	CE04W1H010M
LD402	393 9155 007	LED SLP-171E	LED	C451	254 4250 945	Electrolytic 330μF/6.3 V	CE04W0J331M
SC401	279 0016 904	Thyristor SF0R1A42		C452	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z
<b>RESISTORS GROUP (Not Included Carbon Film ±5%, 1/4W Type. Refer to the Schematic Diagram for those Parts.)</b>							
ΔR411	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C453	254 4252 930	Electrolytic 100μF/10 V	CE04W1A101M
ΔR412	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C454	254 4263 945	Electrolytic 1μF/100 V	CE04W2A010M
ΔR412	244 2055 941	Metal Oxide 330 ohm 1W (NB)	RS14B3A331JNBS(S)	C455	254 4263 945	Electrolytic 1μF/100 V	CE04W2A010M
ΔR423	241 2380 934	Carbon Film 1.8kohm 1/4W(NB)	RD14B2E162JNBS	C457	254 4262 917	Electrolytic 10μF/63 V	CE04W1J100M
ΔR423	241 2380 934	Carbon Film 1.8kohm 1/4W(NB)	RD14B2E162JNBS	C458	254 4262 917	Electrolytic 10μF/63 V	CE04W1J100M
ΔR423	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C462	254 4260 951	Electrolytic 2.2μF/50 V	CE04W1H2R2M
ΔR423	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C463	254 4260 951	Electrolytic 2.2μF/50 V	CE04W1H2R2M
ΔR423	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C465	254 4260 980	Electrolytic 10μF/50 V	CE04W1H100M
ΔR423	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C471	254 4370 702	Electrolytic 8200μF/63 V	CE04W1J822MC(DL)
ΔR423	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C472	254 4370 702	Electrolytic 8200μF/63 V	CE04W1J822MC(DL)
ΔR423	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C474	254 4263 958	Electrolytic 2.2μF/100 V	CE04W2A2R2M
ΔR433	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)	C475	256 1049 702	Metalized 0.22μF/250 V	CF93B2E224K
ΔR433	241 2380 950	Carbon Film 2k ohm 1/4W(NB)	RD14B2E202JNBS	ΔC476	253 8014 702	Ceramic 0.01μF/400V(AC)	CK45F2GAC103MC
ΔR433	241 2380 950	Carbon Film 2k ohm 1/4W(NB)	RD14B2E202JNBS	C477	253 4535 955	Ceramic 5 pF/50 V	CC45SL1H050C
ΔR433	244 2043 937	Metal Oxide 10 ohm 1W (NB)	RS14B3A100JNBS(S)	C478	253 4535 955	Ceramic 5 pF/50 V	CC45SL1H050C
ΔR433	244 2043 937	Metal Oxide 10 ohm 1W (NB)	RS14B3A100JNBS(S)	C481	254 4262 069	Electrolytic 22μF/63 V	CE04W1J221M
ΔR433	244 2043 937	Metal Oxide 10 ohm 1W (NB)	RS14B3A100JNBS(S)	C490	254 4254 909	Electrolytic 10μF/16 V	CE04W1C100M
ΔR443	244 2050 933	Metal Oxide 180 ohm 1W (NB)	RS14B3A181JNBS(S)	C491	253 1121 906	Ceramic 5600 pF/50 V	CK45B1H562K
ΔR443	244 2050 933	Metal Oxide 180 ohm 1W (NB)	RS14B3A181JNBS(S)	C492	253 1121 906	Ceramic 5600 pF/50 V	CK45B1H562K
ΔR443	244 2050 933	Metal Oxide 180 ohm 1W (NB)	RS14B3A181JNBS(S)	C493	253 1114 900	Ceramic 1500 pF/50 V	CK45B1H152K
ΔR443	244 2050 933	Metal Oxide 180 ohm 1W (NB)	RS14B3A181JNBS(S)	C494	253 1114 900	Ceramic 1500 pF/50 V	CK45B1H152K
ΔR453	241 2380 950	Carbon Film 2k ohm 1/4W(NB)	RD14B2E202JNBS	C499	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z
ΔR453	241 2380 950	Carbon Film 2k ohm 1/4W(NB)	RD14B2E202JNBS	<b>OTHERS GROUP</b>			
ΔR453	244 2051 932	Metal Oxide 3.3k ohm 1W(NB)	RS14B3A332JNBS(S)			(P.W.Board)	
ΔR453	244 2043 953	Metal Oxide 470 ohm 1W (NB)	RS14B3A471JNBS(S)		202 0040 909	Fuse Clip	for F402
ΔR453	244 2052 973	Metal Oxide 560 ohm 1W (NB)	RS14B3A561JNBS(S)		417 0472 001	Heat Sink	
ΔR453	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)		473 7002 018	Tapping Screw(S)3×8	
ΔR473	244 2055 912	Metal Oxide 0.47 ohm 1W(NB)	RS14B3AR47JNBS(S)		204 8420 006	Headphone Jack(6.5)	
ΔR503	241 2387 908	Carbon Film 1 ohm 1/4W (NB)	RD14B2E010JNBS		205 0551 002	4 P Terminal	
ΔR503	241 2387 908	Carbon Film 1 ohm 1/4W (NB)	RD14B2E010JNBS		205 0550 003	4 P Terminal	Europe model
VR403	211 9122 000	Semi Fixed VR 100k ohm	Europe model only		204 8406 004	1 P Pin Jack	U.K. model
<b>CAPACITORS GROUP</b>							
C401	253 4538 949	Ceramic 100pF/50 V	CC45SL1H101J	L401	235 0068 004	Inductor 1mH	
C402	253 4538 949	Ceramic 100pF/50 V	CC45SL1H101J	L402	235 0068 004	Inductor 1mH	
C403	254 4260 948	Electrolytic 1μF/50 V	CE04W1H010M	ΔSW402	212 1103 004	Power Switch	
C404	254 4260 948	Electrolytic 1μF/50 V	CE04W1H010M	ΔF402	206 1015 058	Fuse 1.6 A	
C405	253 4538 949	Ceramic 100pF/50 V	CC45SL1H101J	RL401	214 0161 001	Relay(VB24STCU)	
C406	253 4538 949	Ceramic 100pF/50 V	CC45SL1H101J		461 0415 007	Rubber Bush	
C407	254 4250 929	Electrolytic 100μF/6.3 V	CE04W0J101M	T.P	205 0190 036	3 P NH Conn. Base	
C408	254 4250 929	Electrolytic 100μF/6.3 V	CE04W0J101M	CB405	205 0233 058	5 P NH Conn. Base	
C413	253 4538 949	Ceramic 100pF/50 V	CC45SL1H101J	CN3A	205 0343 032	3 P Conn. Base(KR-PH)	
C414	253 4538 949	Ceramic 100pF/50 V	CC45SL1H101J	CB404	205 0653 036	3 P VH Conn. Base	
C415	253 4536 996	Ceramic 24 pF/50 V	CC45SL1H240J	CB401	205 0581 001	2 P VH Conn. Base	
C416	253 4536 996	Ceramic 24 pF/50 V	CC45SL1H240J	CB402	205 0581 001	2 P VH Conn. Base	
C417	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z	CB406	205 0581 001	2 P VH Conn. Base	
C418	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z		205 0092 037	3 P Wrapping Terminal	
C419	254 4254 909	Electrolytic 10μF/16 V	CE04W1C100M	STY	205 0452 017	Style Pin	
C420	254 4254 909	Electrolytic 10μF/16 V	CE04W1C100M	CN2A	203 2249 015	2 P SCN-SCN Conn. Cord	
C421	253 1126 901	Ceramic 150 pF/500 V	CK45B2H151K	CN3B	203 4789 052	3 P KR-DA Conn. Cord	
C422	253 1181 917	Ceramic 0.022μF/50 V	CK45F1H223Z	CN405	203 8346 019	5 P EH-SCN Conn. Cord	
C423	255 4223 988	Plastic Film 0.33μF/50 V	CQ93M1H333J(MRZ)	CB402	203 4776 023	3 P VH Conn. Cord(2P)	
C424	255 4223 988	Plastic Film 0.33μF/50 V	CQ93M1H333J(MRZ)		125 9008 016	UL Tube(L=7)	for D1,29
C425	254 4262 917	Electrolytic 10μF/63 V	CE04W1J100M		125 9006 087	UL Tube(L=25)	for D2,4
C426	254 4262 917	Electrolytic 10μF/63 V	CE04W1J100M		513 0815 089	Fuse Label(T1.6 A)	
C427	253 1181 917	Ceramic 0.022μF/50 V	CK45F1H223Z				
C428	253 1181 917	Ceramic 0.022μF/50 V	CK45F1H223Z				
C429	256 1034 979	Metalized 0.1μF/50 V	CF93A1H104J				
C430	256 1034 979	Metalized 0.1μF/50 V	CF93A1H104J				
C431	254 4262 917	Electrolytic 10μF/63 V	CE04W1J100M				
C432	254 4262 917	Electrolytic 10μF/63 V	CE04W1J100M				
C433	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z				
C434	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z				
C440	253 1181 904	Ceramic 0.01μF/50 V	CK45F1H103Z				

IU-2477A-1

- ..... Lch SIGNAL LINE
- Rch SIGNAL LINE
- ..... +B LINE
- -B LINE

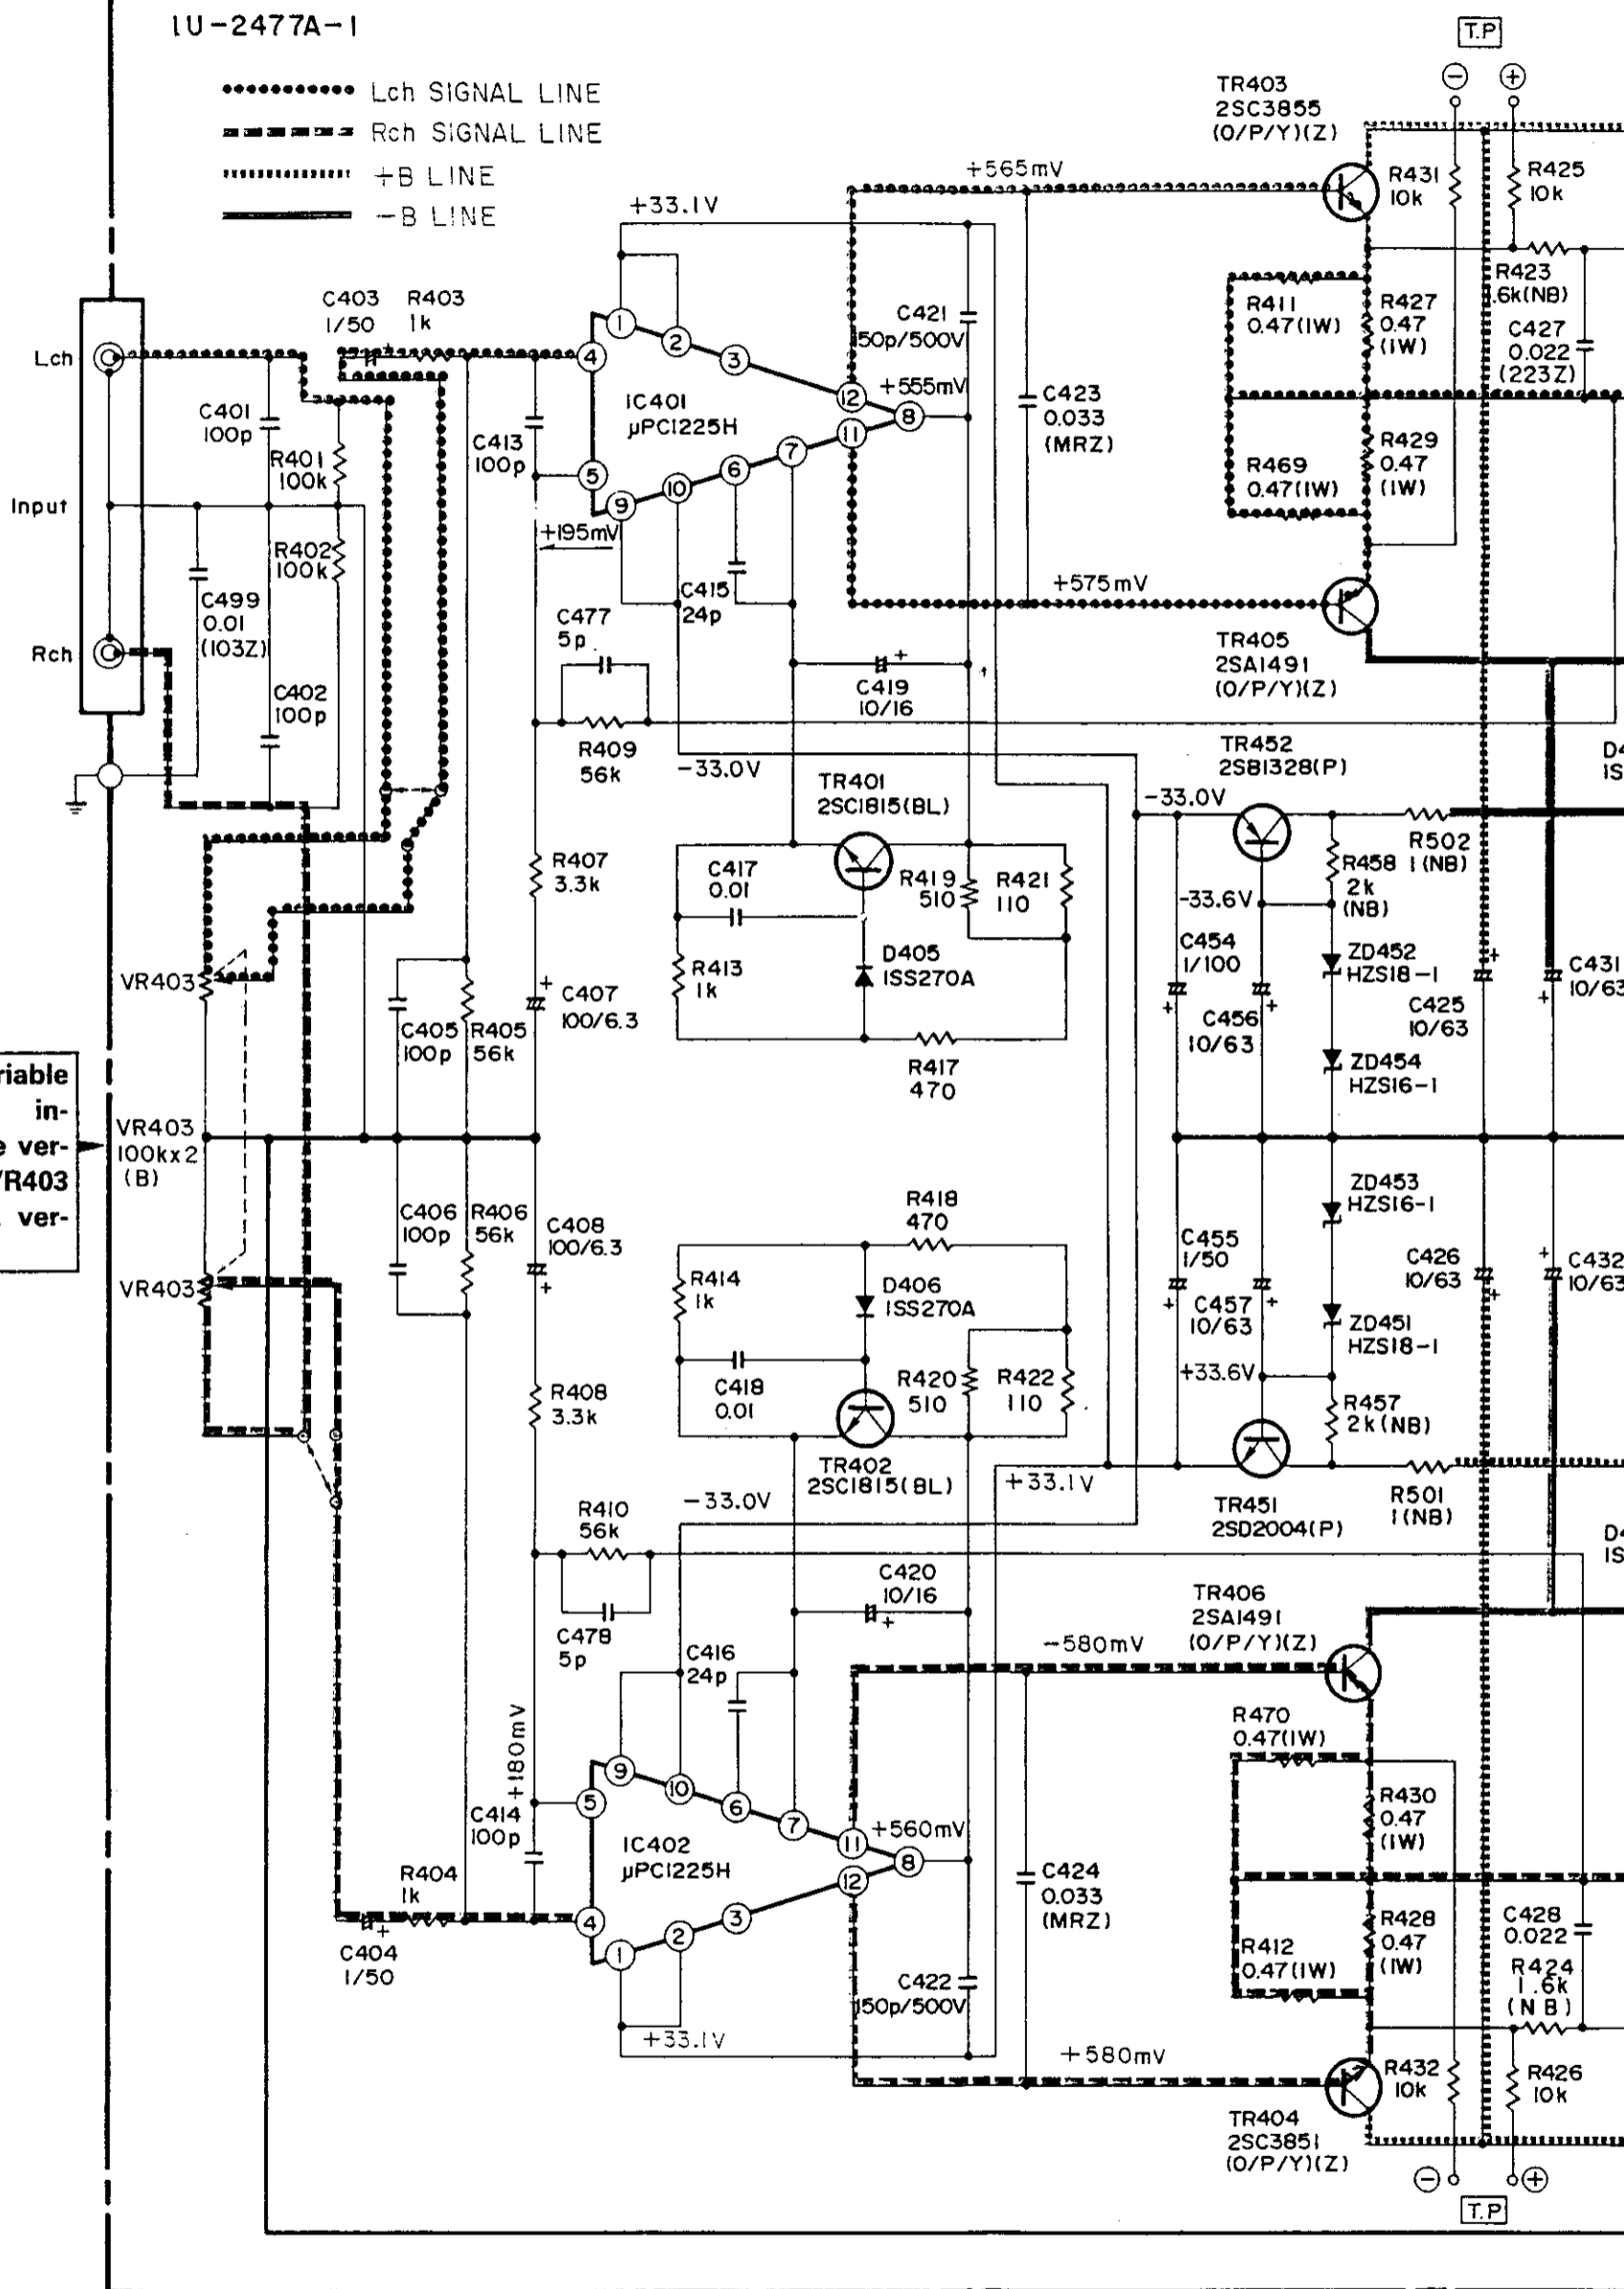

Input control variable resistor (VR403) included for Europe versions only (no VR403 included for U.K. versions)

**WARNING:**  
Parts marked with this symbol  $\Delta$  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.


**CAUTION:**  
Before returning to service, check for leakage current. If defective, replace.

**WARNING:**  
DO NOT return to service until replaced.

CHEMATIC DIAGRAM

POWER AMPLIFIER SECTION

6 7 8 9 10 11

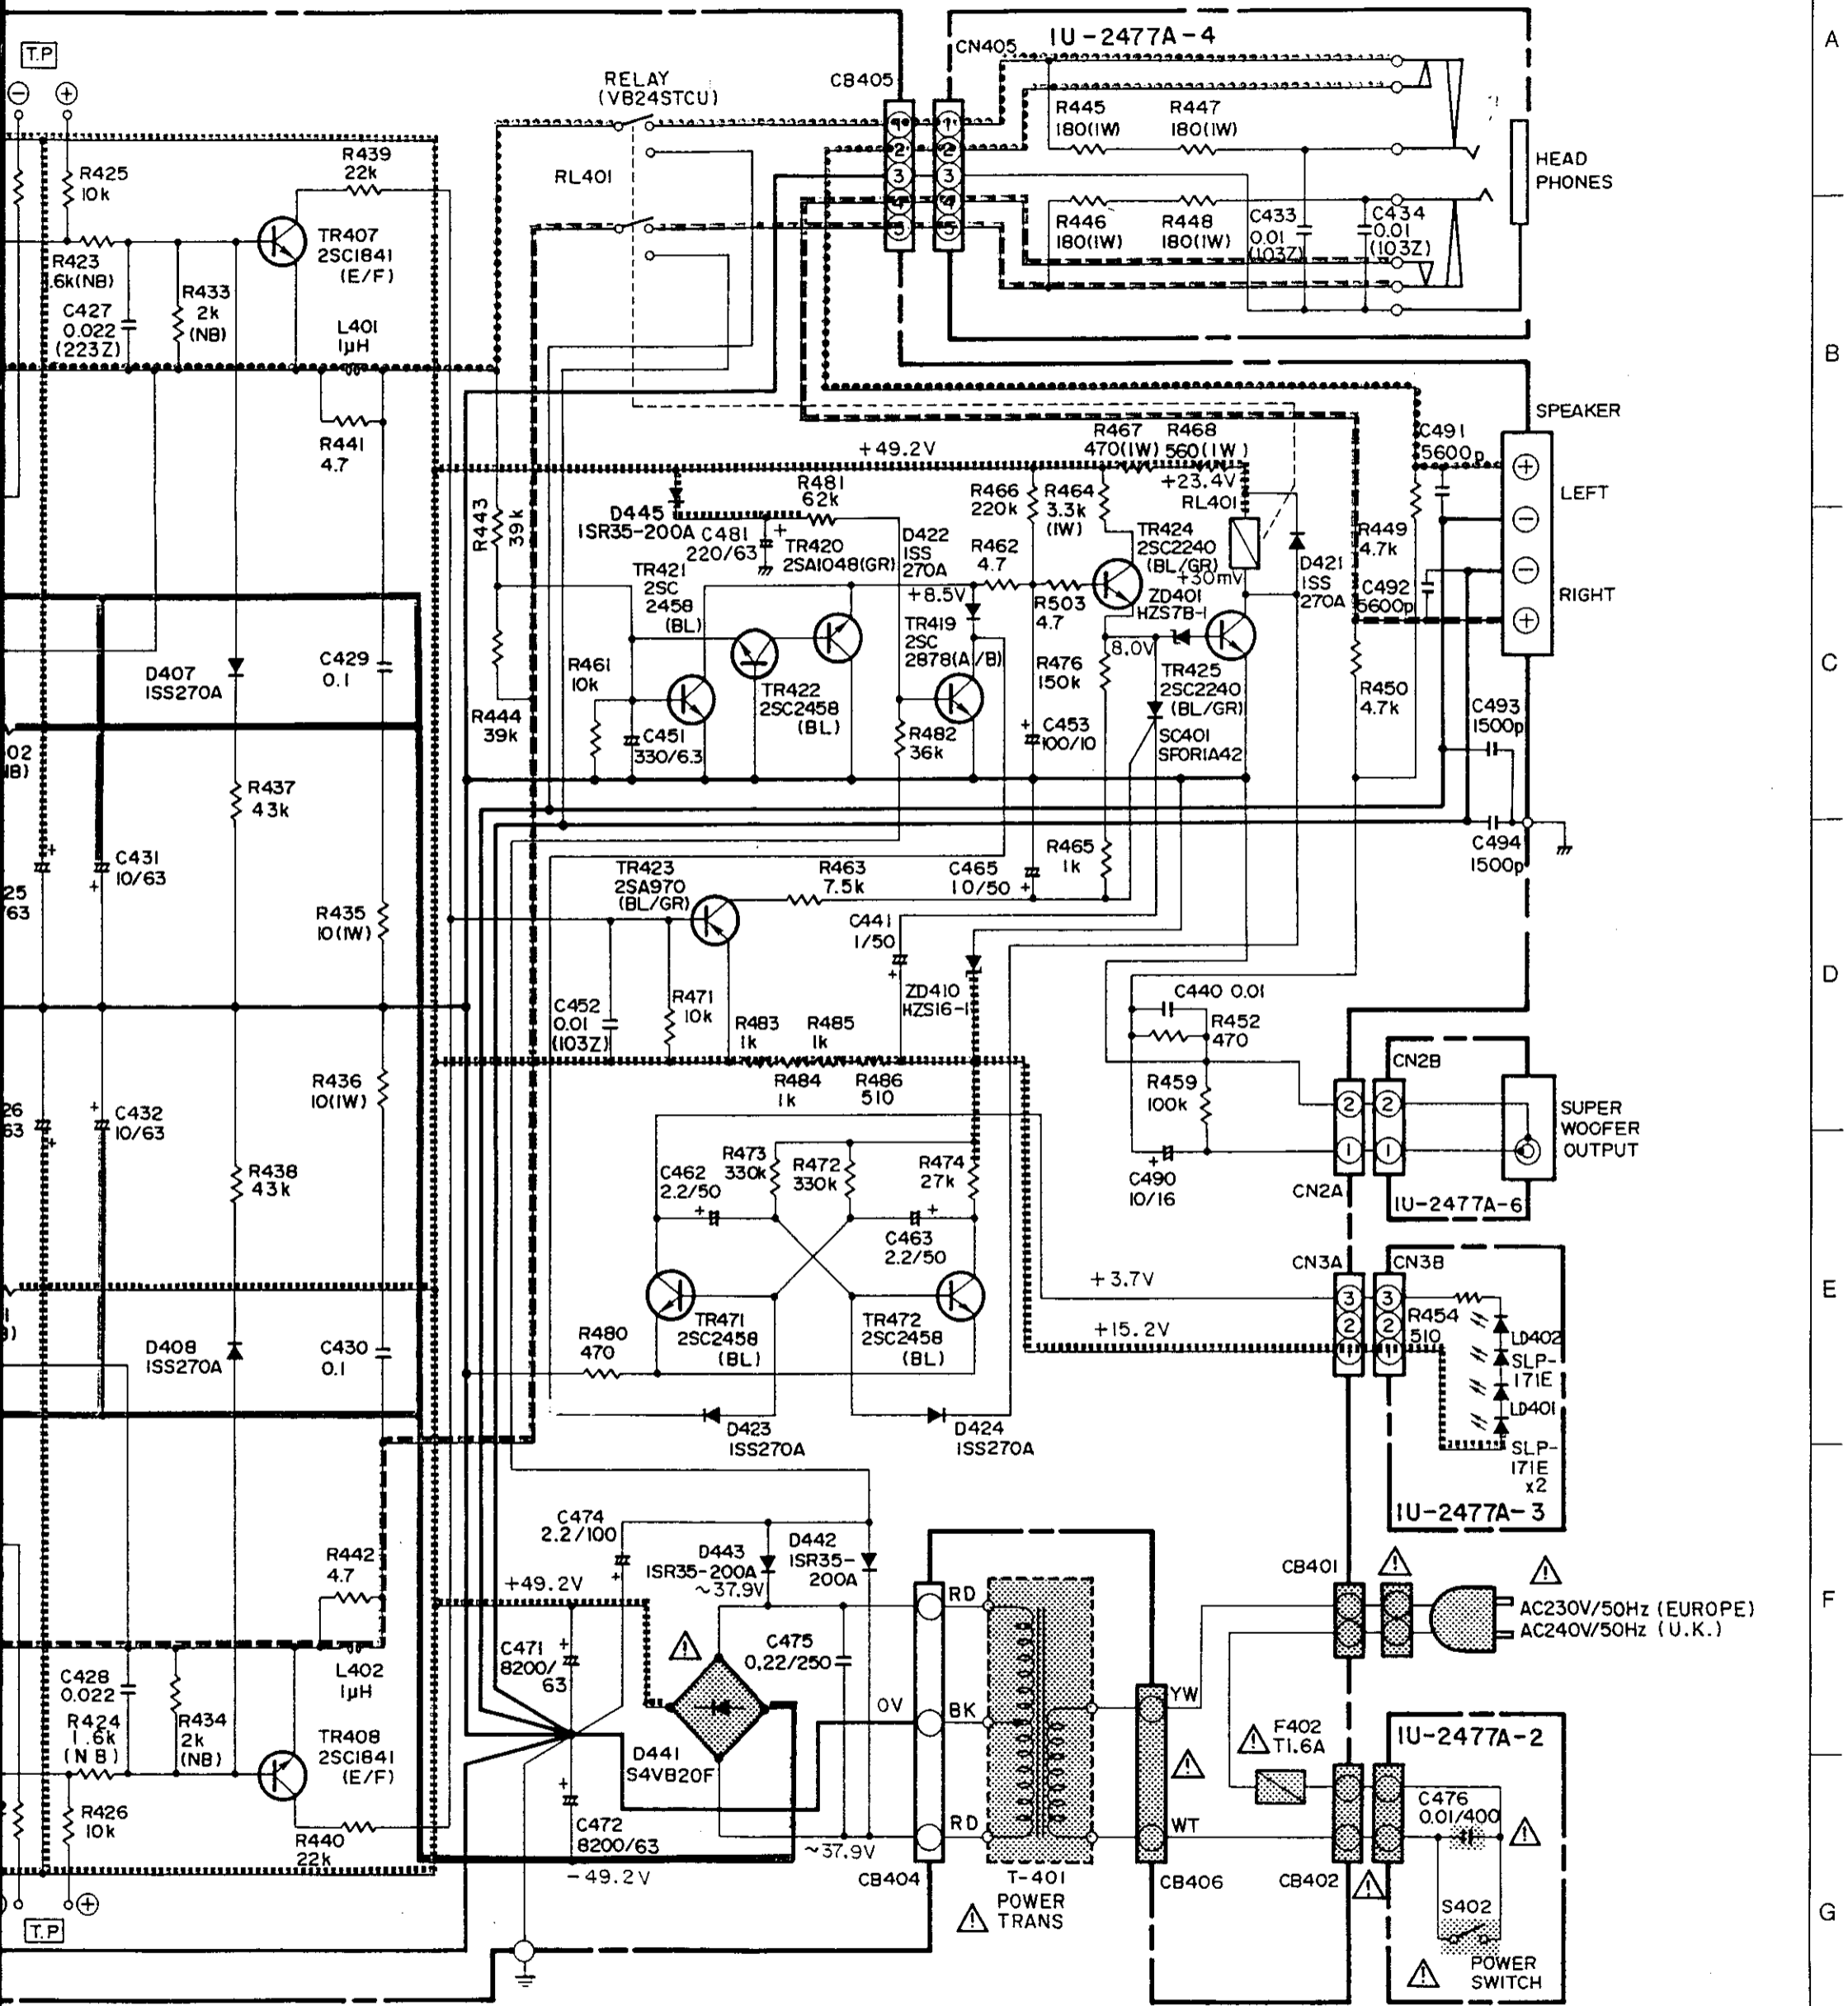

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.

**WARNING**  
DO NOT return the unit to the customer until the problem is located and corrected.

**NOTES**  
ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

A  
B  
C  
D  
E  
F  
G



1

2

3

4

5

6

A

B

C


D

E


F

G

H

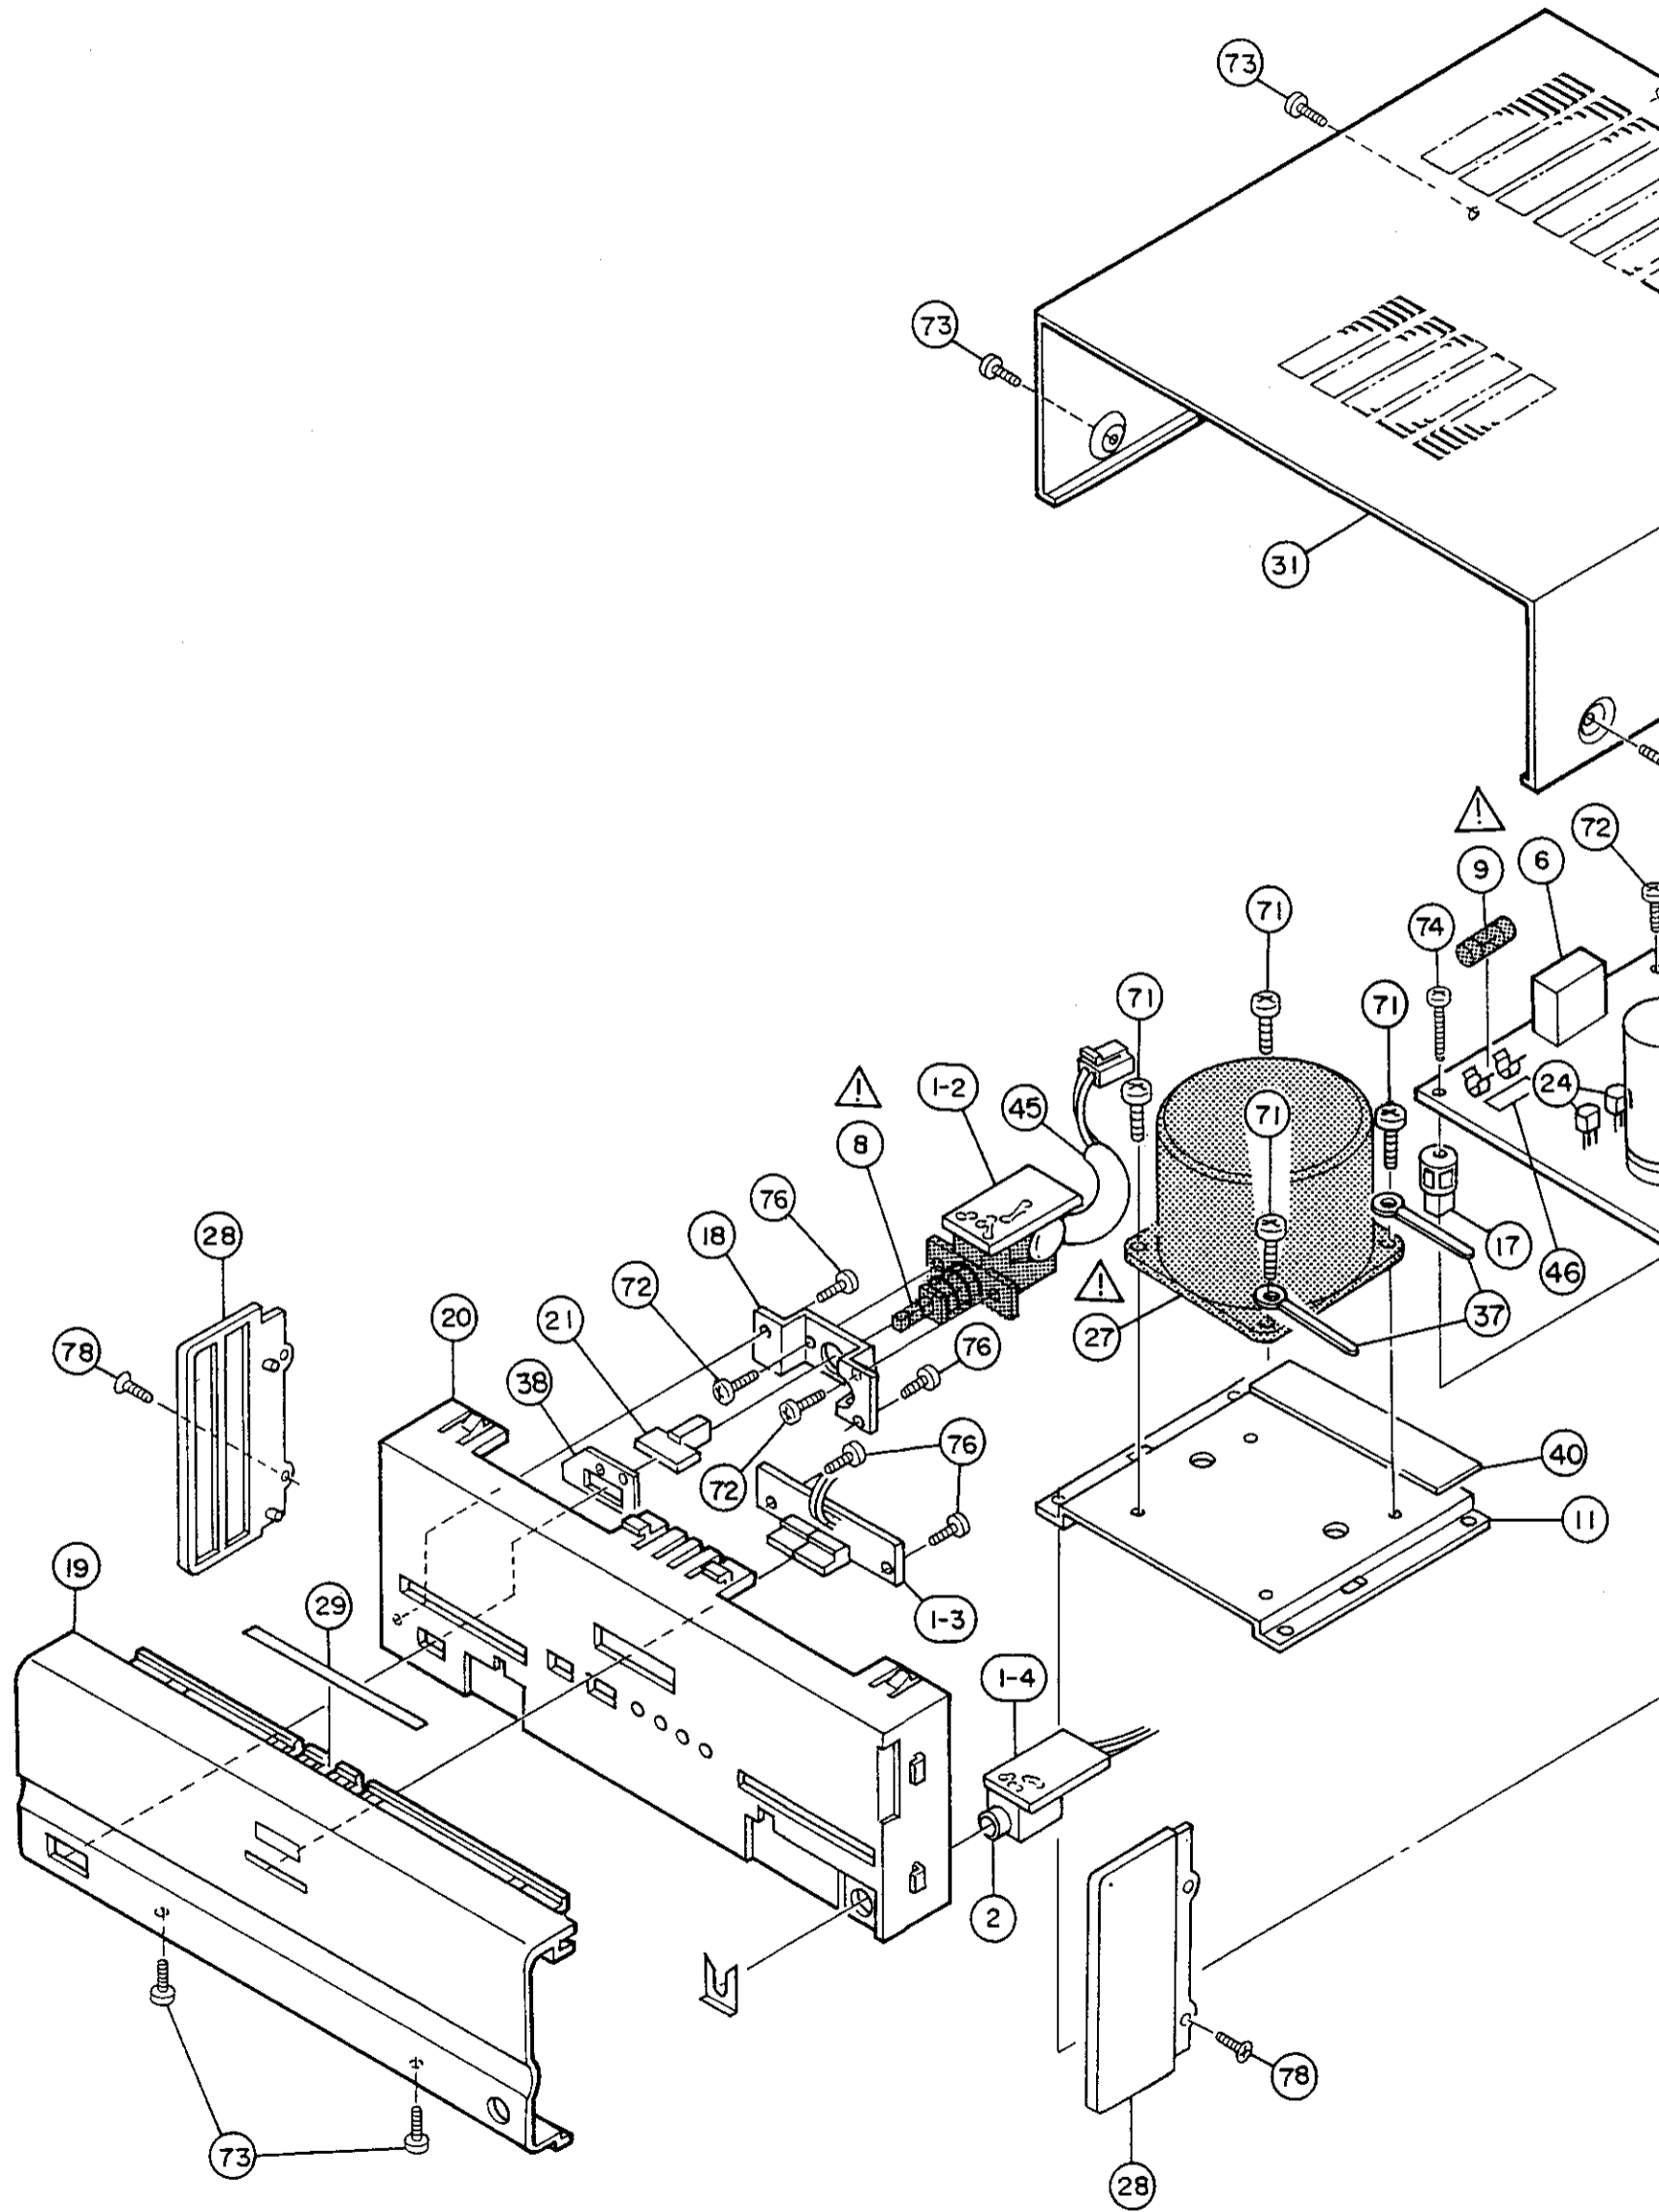

EXPLODED VIEW

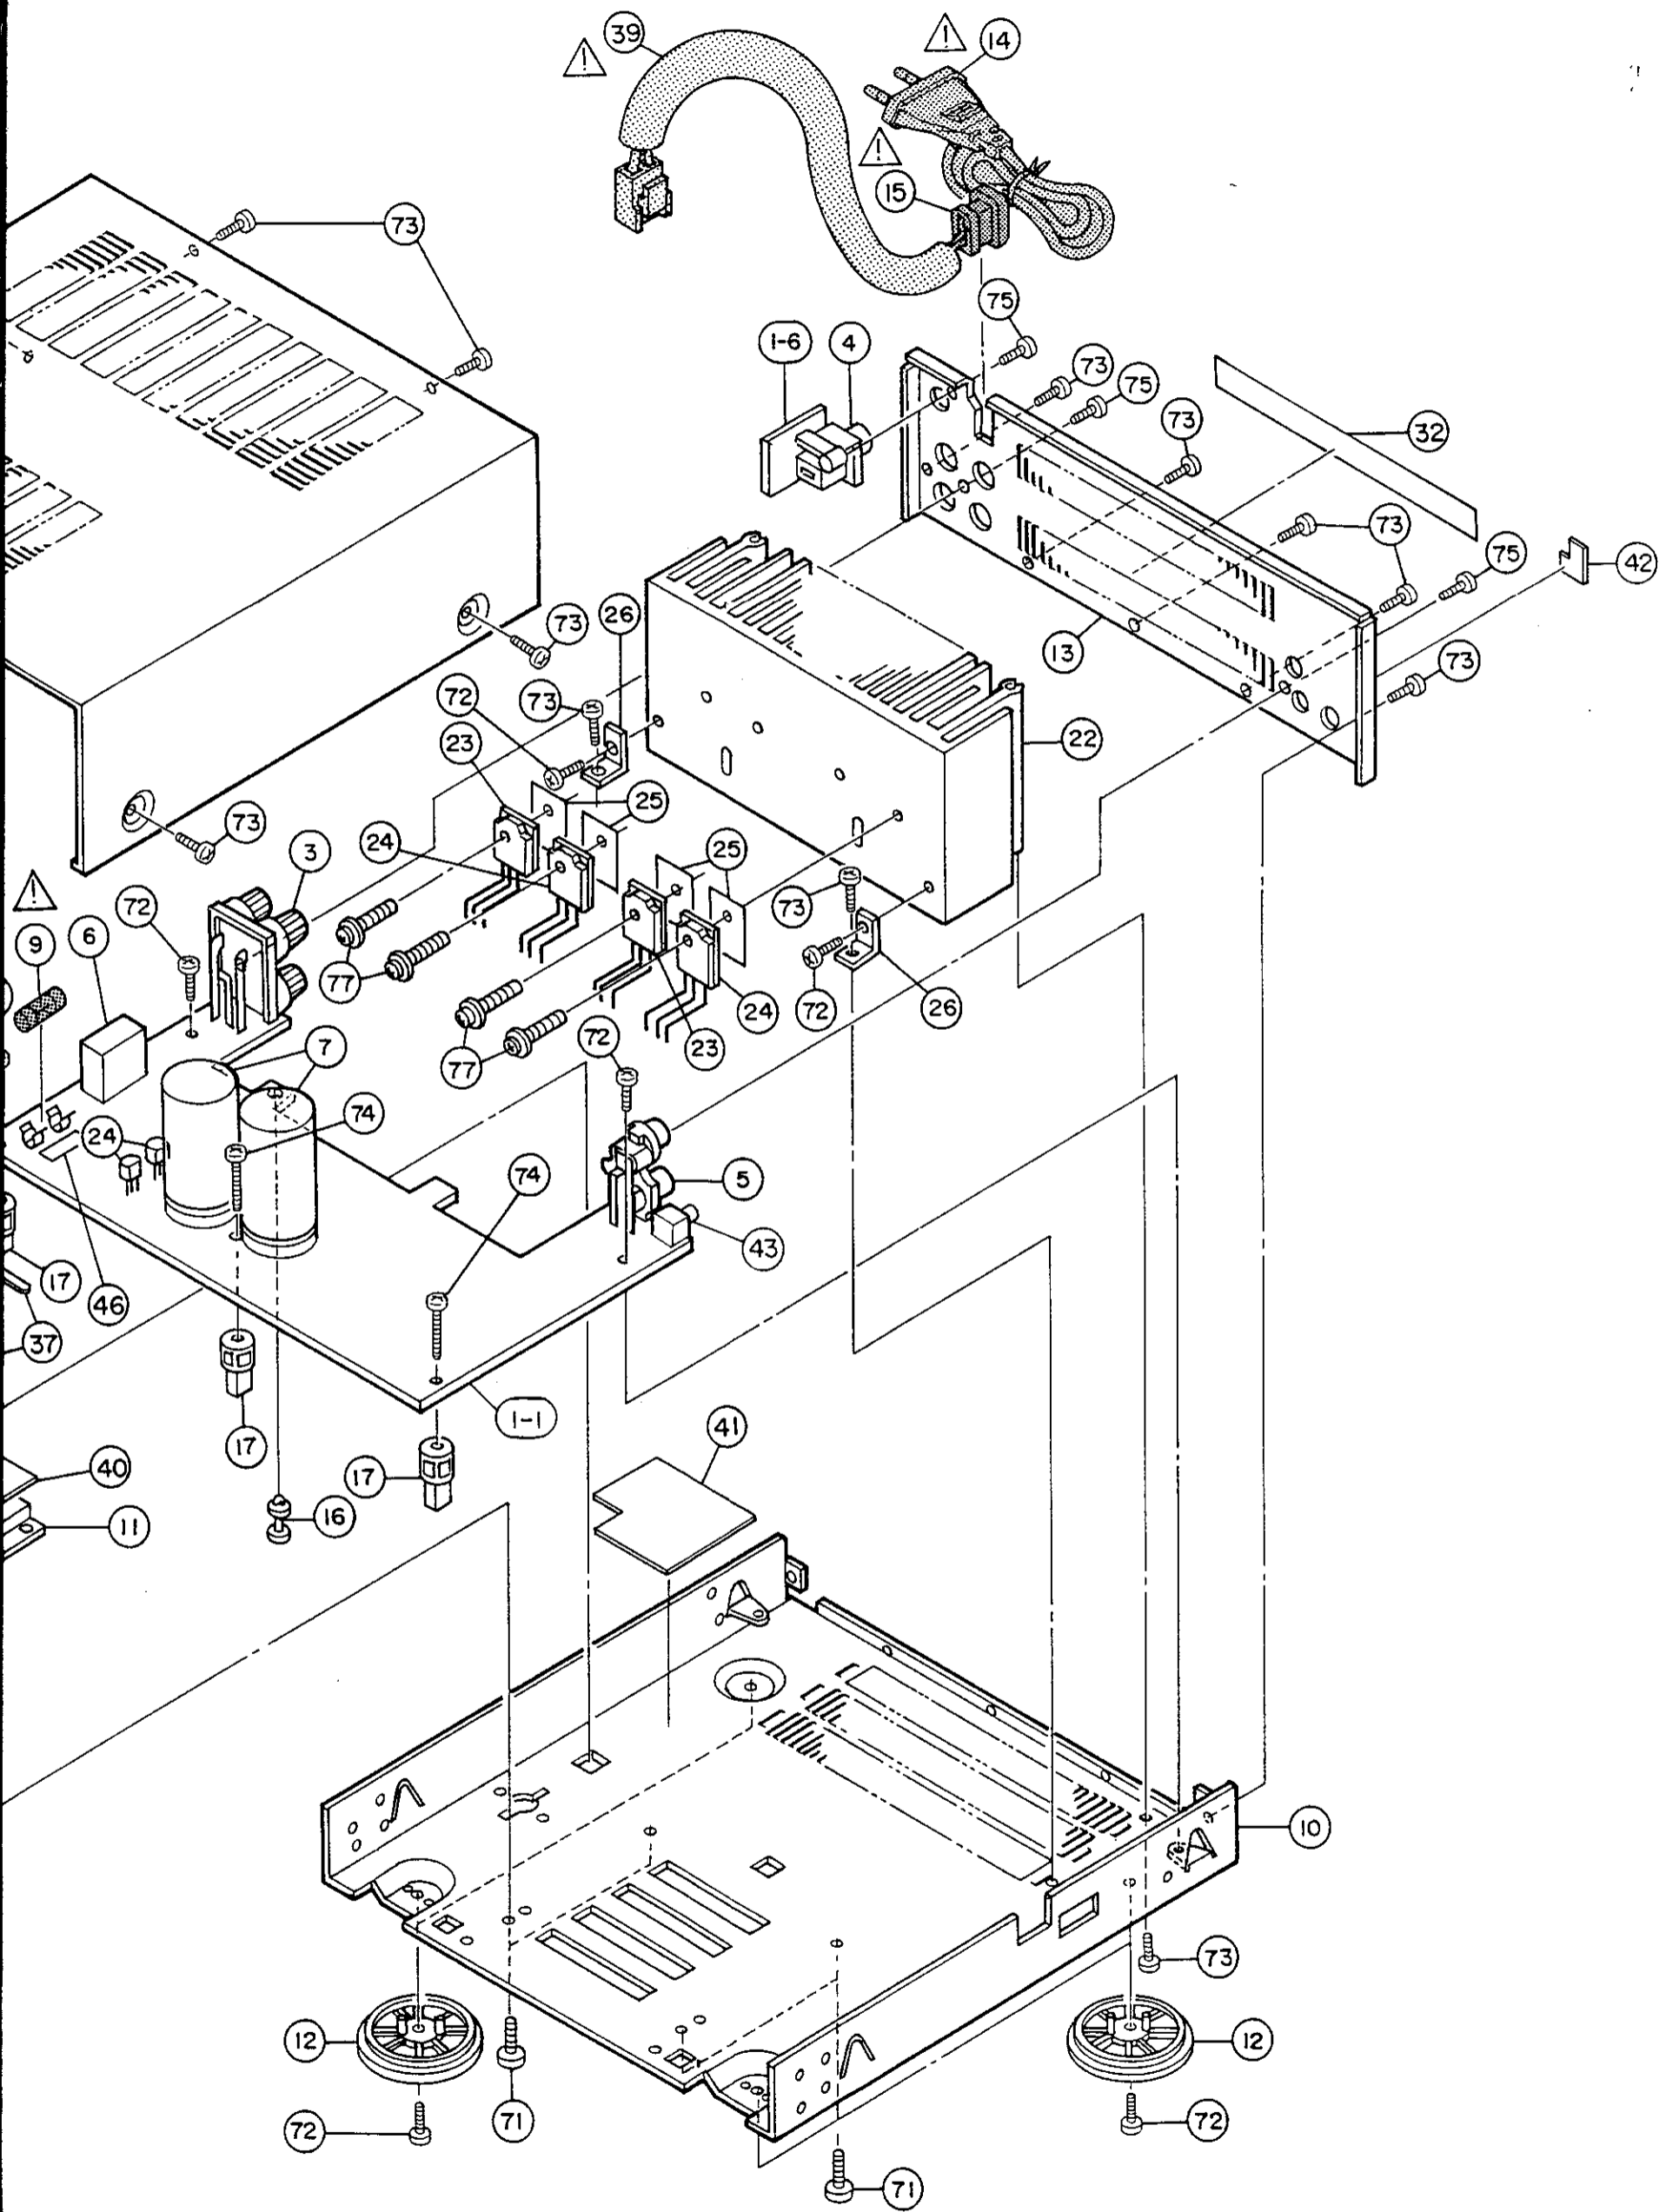

EXPLODED VIEW OF PARTS LIST

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	1U- 2477 A	P.W.Board Unit Assy		1 <sup>S</sup>	78	473 7009 008	F.Tapping Screw(S)3X6		2
1-1	—	Main Unit		(1)	79				
1-2	—	Power Switch Unit		(1)	<b>PACKING &amp; ACCESSORIES (Not included EXPLODED VIEW)</b>				
1-3	—	Power LED Unit		(1)	101	505 0102 089	Stylen Paper	700X700	1
1-4	—	Head Phone Unit		(1)	102	503 1029 107	Cushion		1
1-5	—	—			103	503 1032 107	Top Cushion		1
1-6	—	Super W. Output Unit		(1)	104	501 1658 006	Carton Case		1
2	204 8420 006	Head Phone Jack(6.5)		1	105	GEN 2236 -01	Envelope Sub Assy		1 <sup>S</sup>
3	205 0551 002	4 P Terminal	Europe model	1	105-1	505 8006 019	Envelope		(1)
3	205 0550 003	4 P Terminal	U.K. model	1	105-2	231 0922 009	Loop Antenna		(1)
4	204 8406 004	1 P Pin Jack		1	105-3	395 0019 025	FM Ant. Assy		(1)
5	205 0274 004	2 P Connector Base		1	105-4	399 0168 004	Remote Control	RC-154	(1)
6	214 0161 001	Relay(VB24STOU)	RL401	1	105-5	—	Battery		(2)
7	254 4370 702	Chemicon 8200µF/63 V	C471,472	2	105-6	203 2319 000	2 P Pin Cord	L=500	(1)
△ 8	212 1103 004	Power Switch(TV-5)		1	105-7	203 2223 002	2 P Pin Cord	L=1000	(3)
△ 9	206 1015 058	Fuse 1.6 ATD	F402	1	105-8	203 2315 004	Stereo Mini Plug Cord	L=500	(1)
10	411 1184 329	Main Chassis		1	105-9	203 2315 017	Stereo Mini Plug Cord	L=1000	(1)
11	412 9160 607	Trans Bracket		1	105-10	529 0072 005	FM Ant. Adaptor		(1)
12	104 0253 007	Foot Assy		4					
13	105 1045 149	Rear Panel	Europe model	1					
13	105 1045 152	Rear Panel	U.K. model	1					
△ 14	206 2089 106	AC Cord W/Conn.		1					
△ 15	445 0056 008	Cord Bush		1					
16	412 2814 028	Card Spacer(L=10)		1					
17	412 3548 005	P.W.B Catcher		3					
18	412 3532 105	Power Switch Bracket		1					
19	144 2225 219	Front Panel Assy		1					
20	146 1405 311	Inner Panel		1					
21	113 9263 005	Power Knob Assy		1					
22	417 0465 102	Power Radiator		1					
23	271 0240 035	Transistor 2SA1491LB (O/P/YXZ)	TR405,406	2					
24	273 0389 031	Transistor 2SC3855LB (O/P/YXZ)	TR423,424	2					
25	415 0234 007	Insulating Sheet		4					
26	412 3531 009	Radiator Bracket		2					
△ 27	233 6003 106	Power Trans.	Europe model	1					
△ 27	233 9653 003	Power Trans.	U.K. model	1					
28	146 1400 303	Side Plate		2					
29	122 0183 007	Spacer	100X10XT0.5	1					
★ 30	445 8004 007	Wire Clamper		5					
31	102 0518 212	Top Cover		1					
32	513 9317 009	Rating Sheet	Europe model	1					
32	513 9317 012	Rating Sheet	U.K. model	1					
33	—	—							
34	—	—							
★ 35	445 0033 005	Wire Clamp Band		1					
★ 36	445 8031 009	Wire Clamper		1					
37	445 0048 003	Cord Holder(L=76)		2					
38	441 1482 006	Power Knob Guide		1					
△ 39	415 0461 016	UL Tube(43)Black		1					
40	415 0643 038	Insulating Sheet	15X30XT0.5	1					
41	415 9067 000	Insulating Sheet	T0.5	1					
42	513 9325 004	Blind Sheet	U.K.model only	1					
43	211 9122 000	Semi Fixed Resistor 100k ohm	Europe model only	1					
44	—	—							
45	125 9006 087	UL Tube	φ 4.2X25	2					
46	513 0815 089	Fuse Label(T-1.6A)		1					
47	—	—							
48	—	—							
<b>SCREWS</b>									
71	473 7004 016	Tapping Screw(S)4X6		8					
72	473 7002 018	Tapping Screw(S)3X8		16					
73	473 7015 005	Tapping Screw(S)3X6	Black	17					
74	473 7508 046	Tapping Screw(P)3X16	Black	3					
75	477 0064 107	Fixing Screw		3					
76	473 7505 007	Tapping Screw(P)2.6X8		4					
77	473 8007 009	Cup Screw 3X12		4					

**NOTE ON PARTS LIST**


- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

**WARNING:**

Parts marked with this symbol △ [hatched] have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

POWER AMPLIFIER SECTION

WIRING DIAGRAM

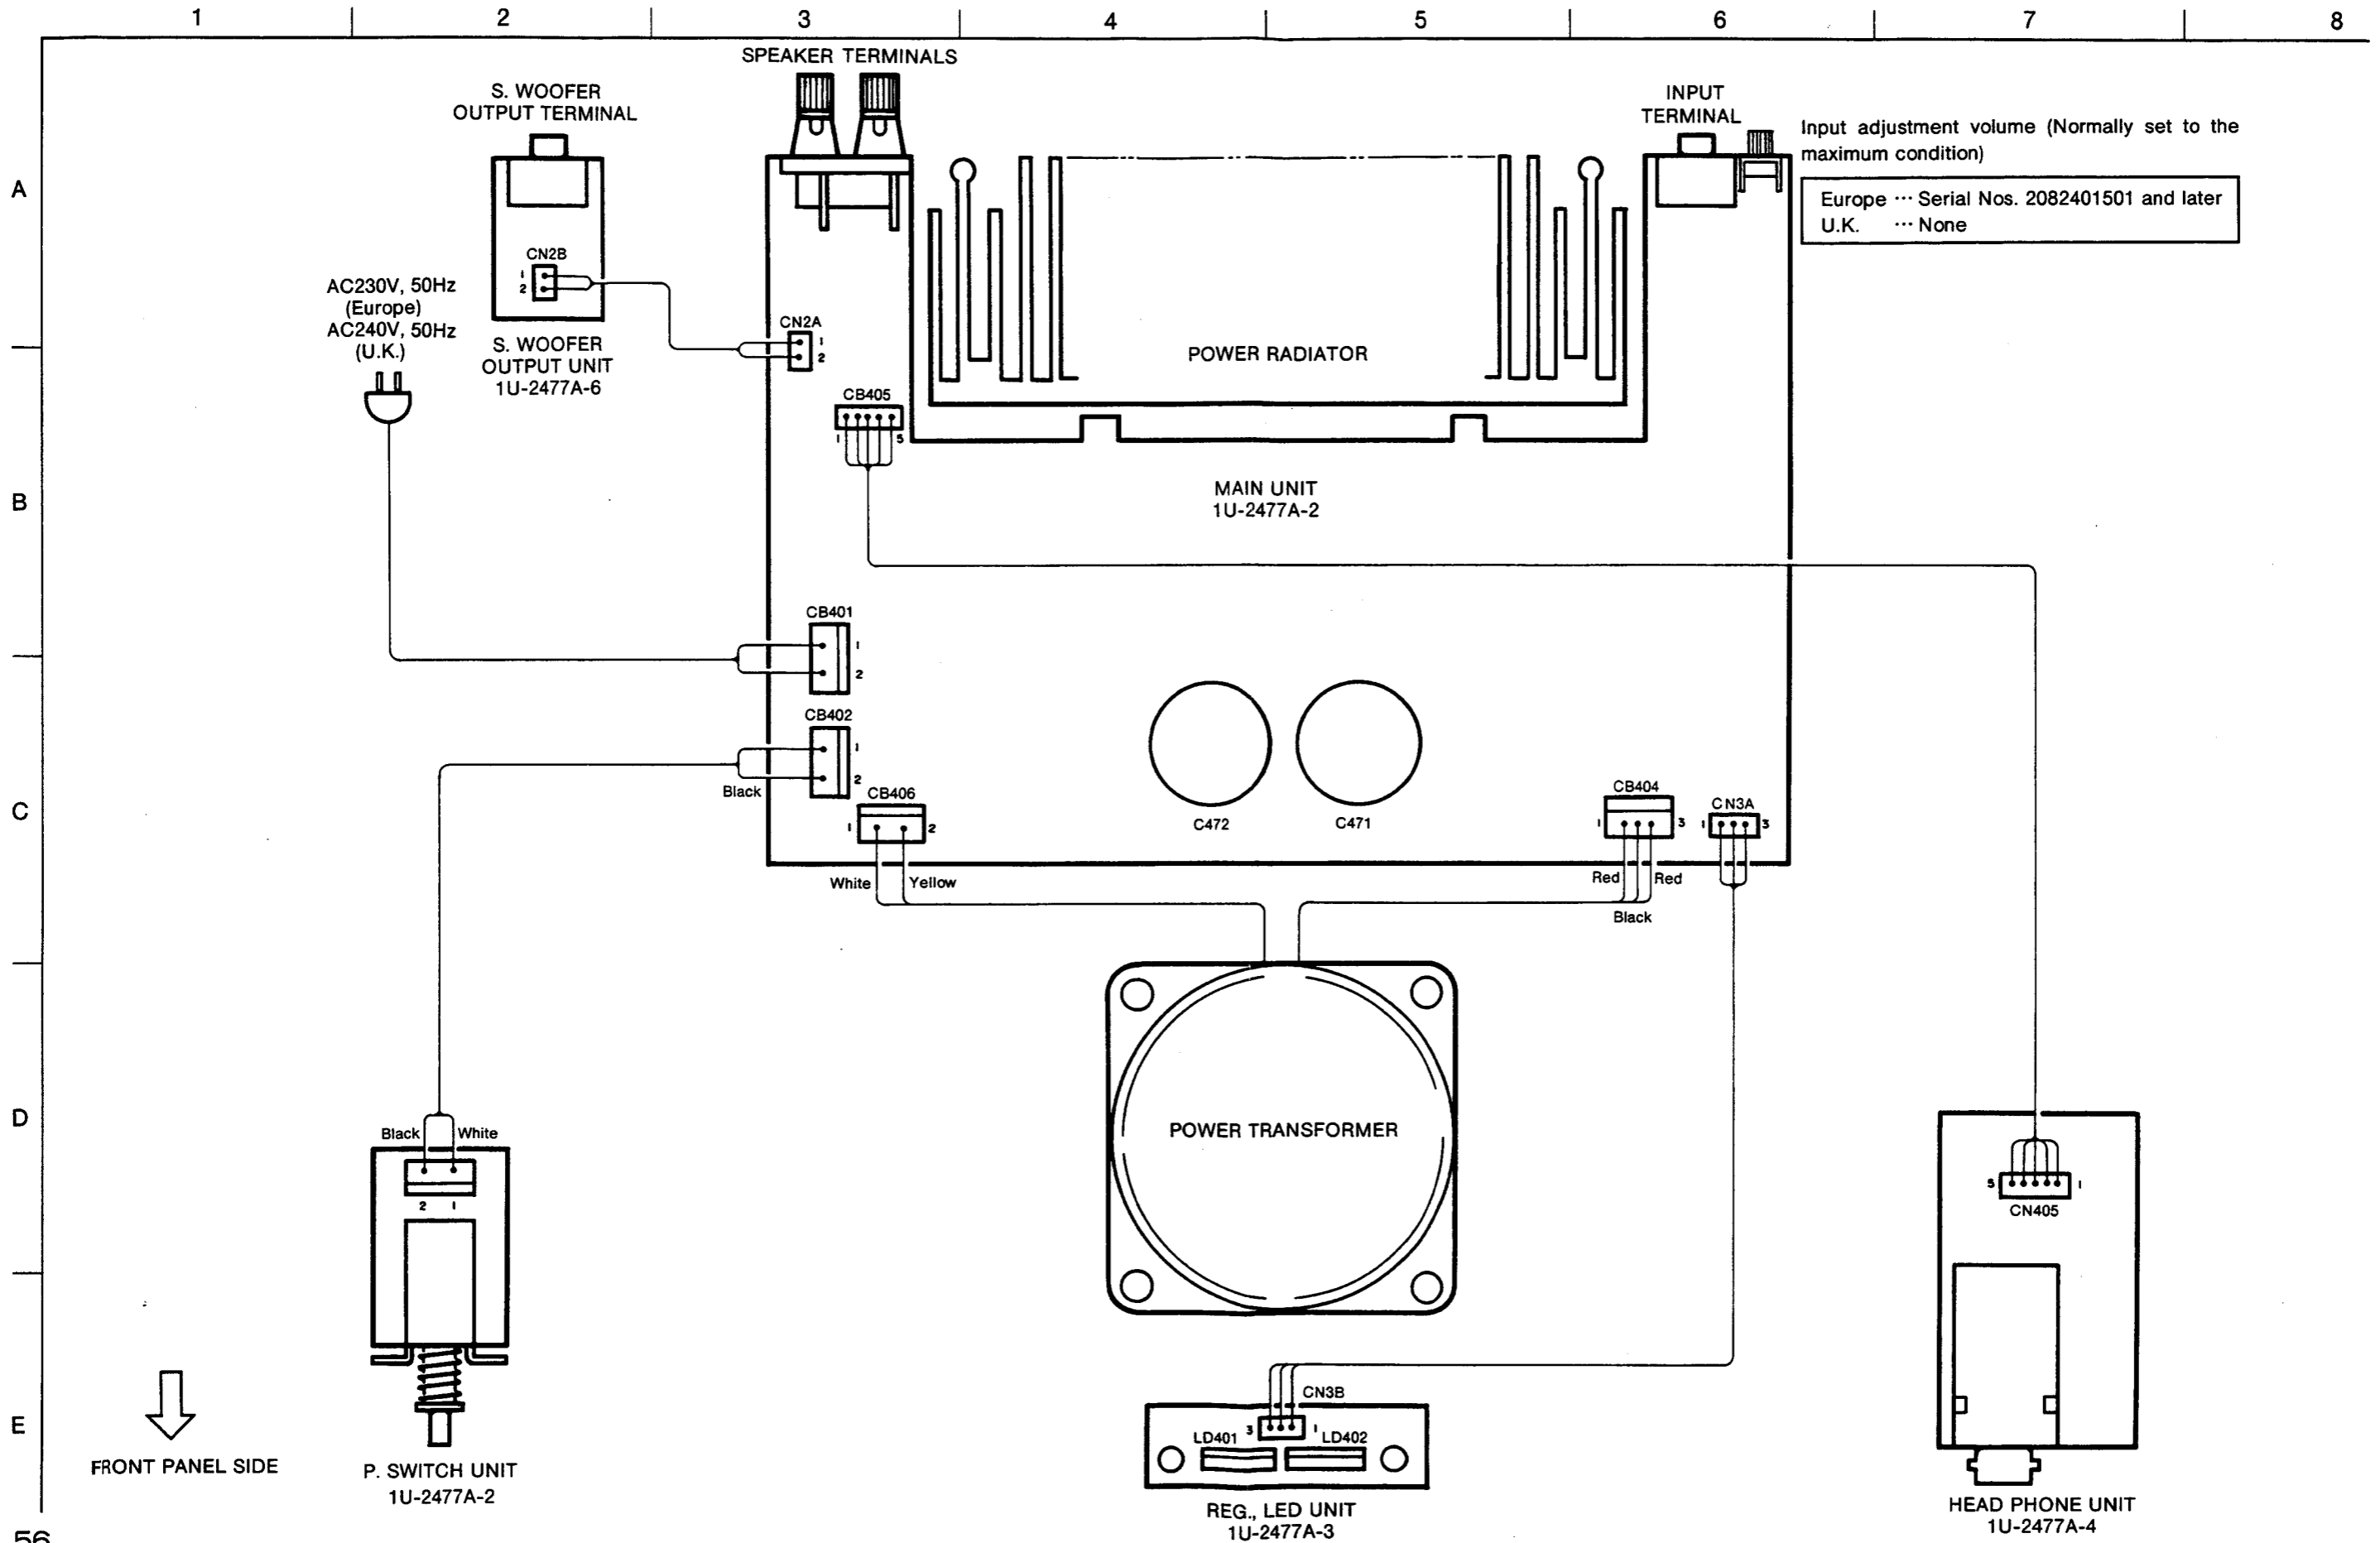

Input adjustment volume (Normally set to the maximum condition)

Europe ... Serial Nos. 2082401501 and later  
 U.K. ... None


FRONT PANEL SIDE

**DISASSEMBLY PROCEDURES**


(Follow these procedures in reverse order to reassemble.)

**1. Removing the top cover and front panel**



- ① Remove the 6 screws which fasten the top cover.
- ② Remove the 2 screws of the bottom side which fasten the front panel.

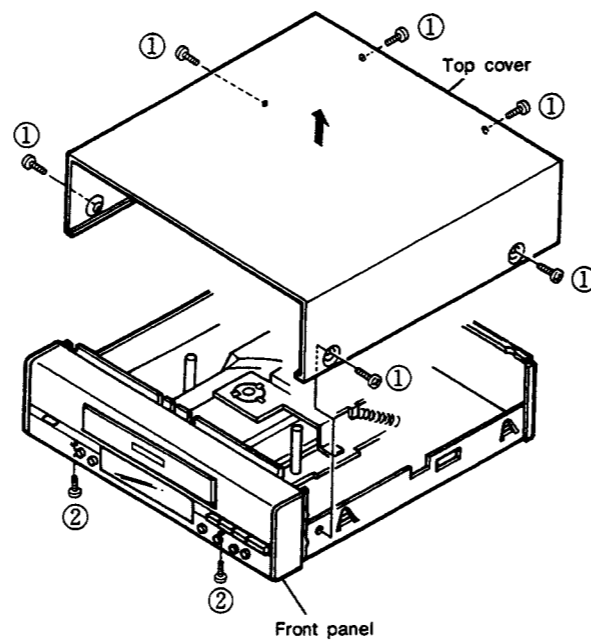**2. Removal of the Various Boards****LCD TACT SWITCH UNIT 1U-2478-2**


- ① Remove the 9 screws which fasten the LCD Tact switch unit and remove the board in the direction of the arrow.

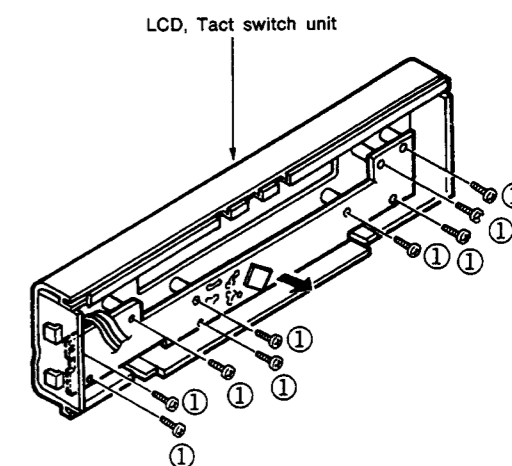

- ③ Disconnect connectors CB561 and CB581 which are attached to the main unit.
- ④ Remove the 2 screws which fasten the side plate.
- ⑤ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver),
- ⑥ Use your fingers to push out the hook of the inner panel from the side plate in the direction of the arrow.  
Using the same method for the left side, remove the side plate. Remove the front panel in the direction of the arrow.

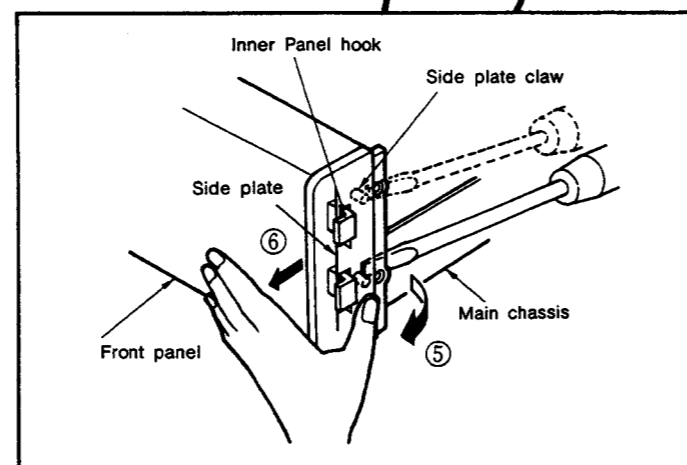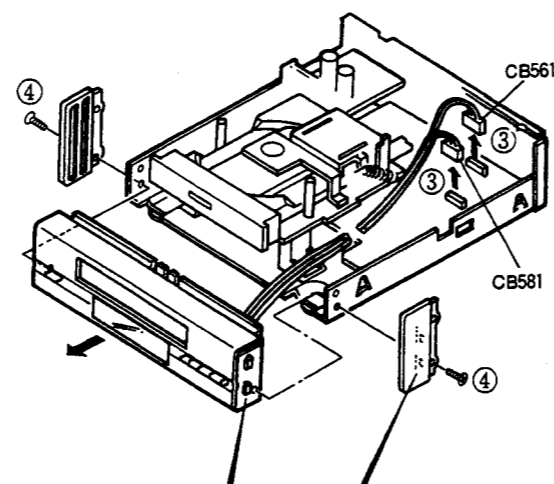**3. Removal of the CD Mechanism Unit**


- ② Disconnect connectors CB501, CB502, CB503, and CB504 which are attached to the main unit.
- ③ Remove the 3 screws which fasten the CD mechanism unit and remove the mechanism unit in the direction of the arrow.

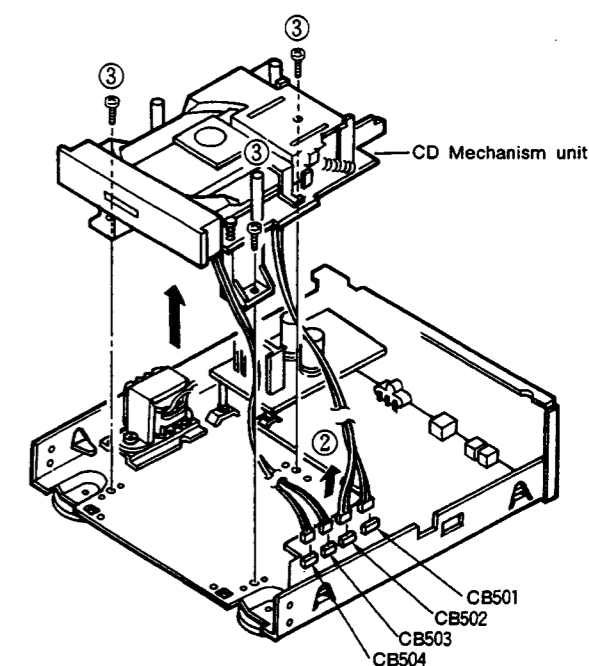

## CD PLAYER SECTION


## POWER UNIT 1U-2478-3

- ④ Disconnect connector CB651 which is attached to the main unit.
- ⑤ Use a pair of long-nosed pliers to disengage the board catch, which fastens the power unit, in the direction of the arrow.
- ⑥ Remove the 2 screws which fasten the power unit and remove the board in the direction of the arrow.

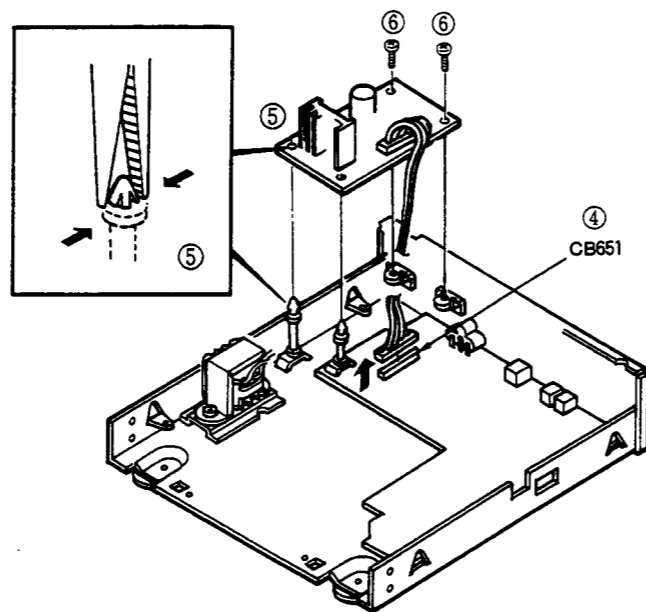

## MAIN UNIT 1U-2478-1


- ⑦ Remove the 6 screws which fasten the main unit and remove the board in the direction of the arrow.

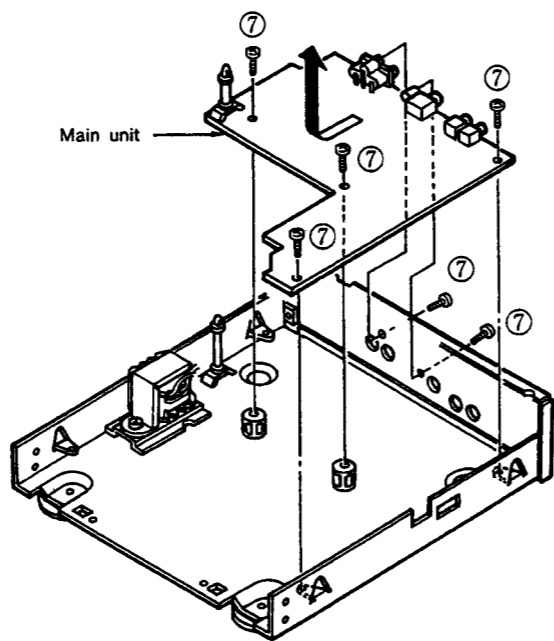

BLOCK DIAGRAM


CD PLAYER SECTION

1 2 3 4 5 6 7 8

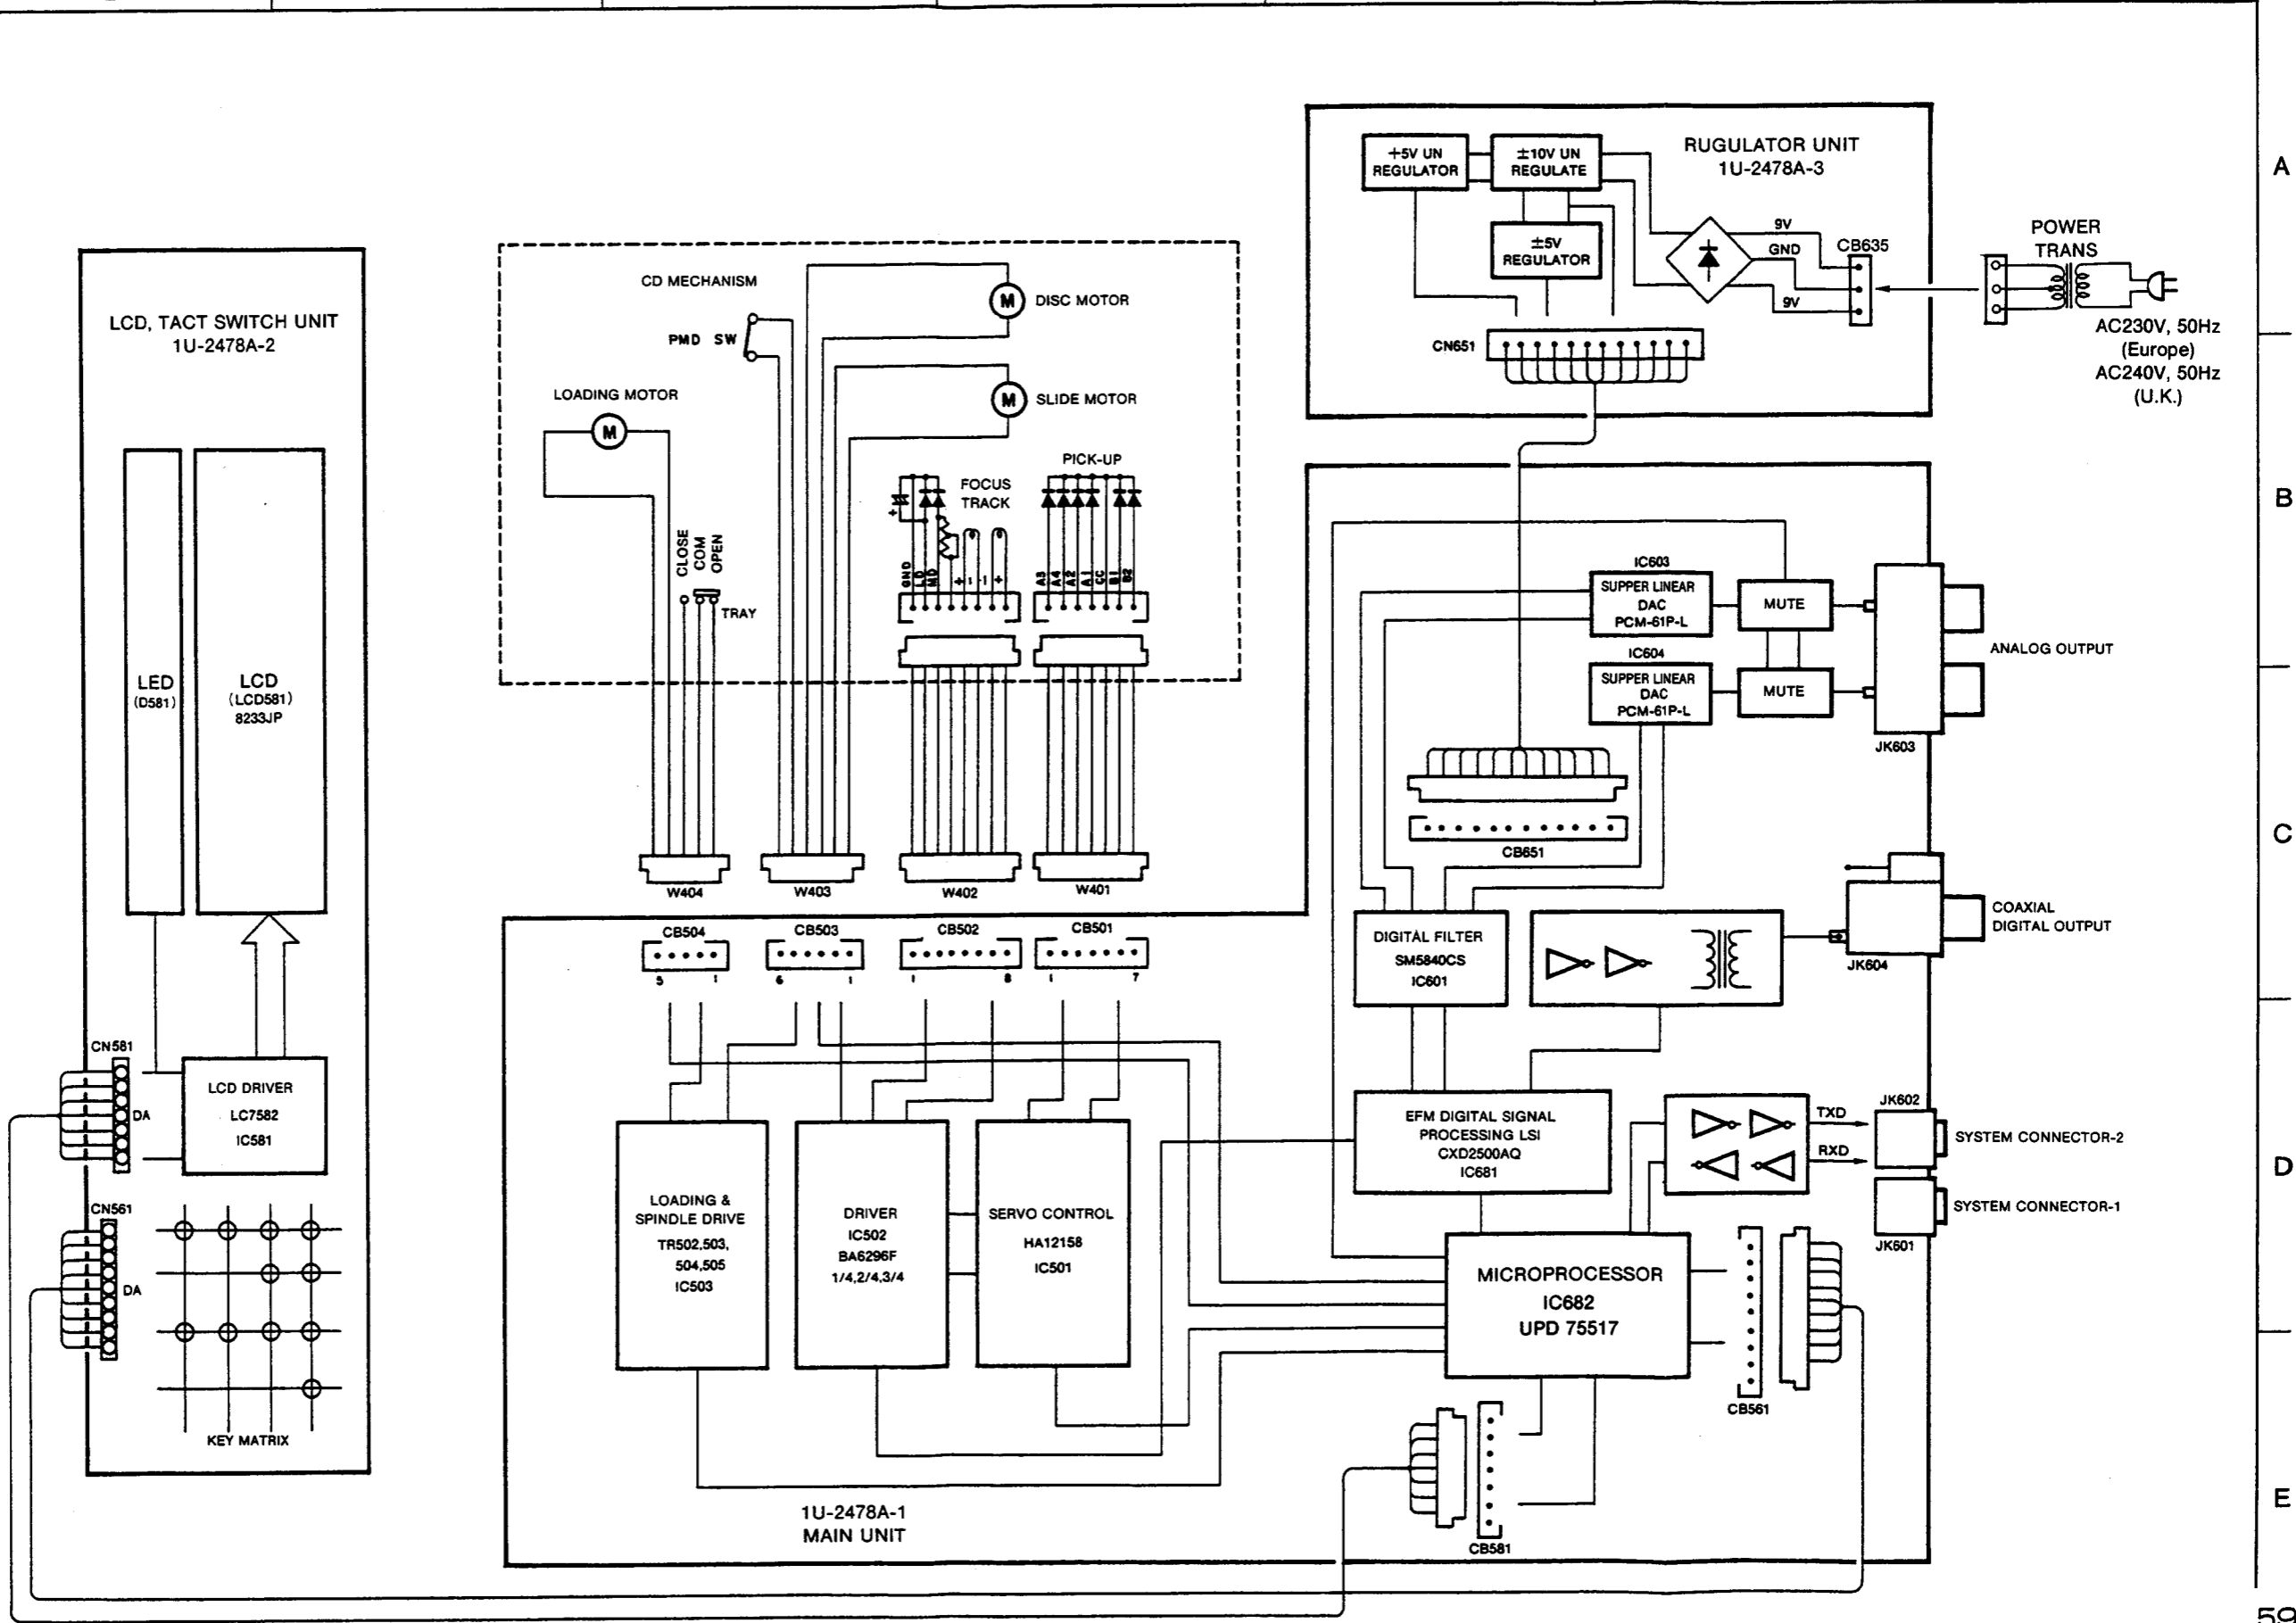


CD PLAYER SECTION

Connections Diagram

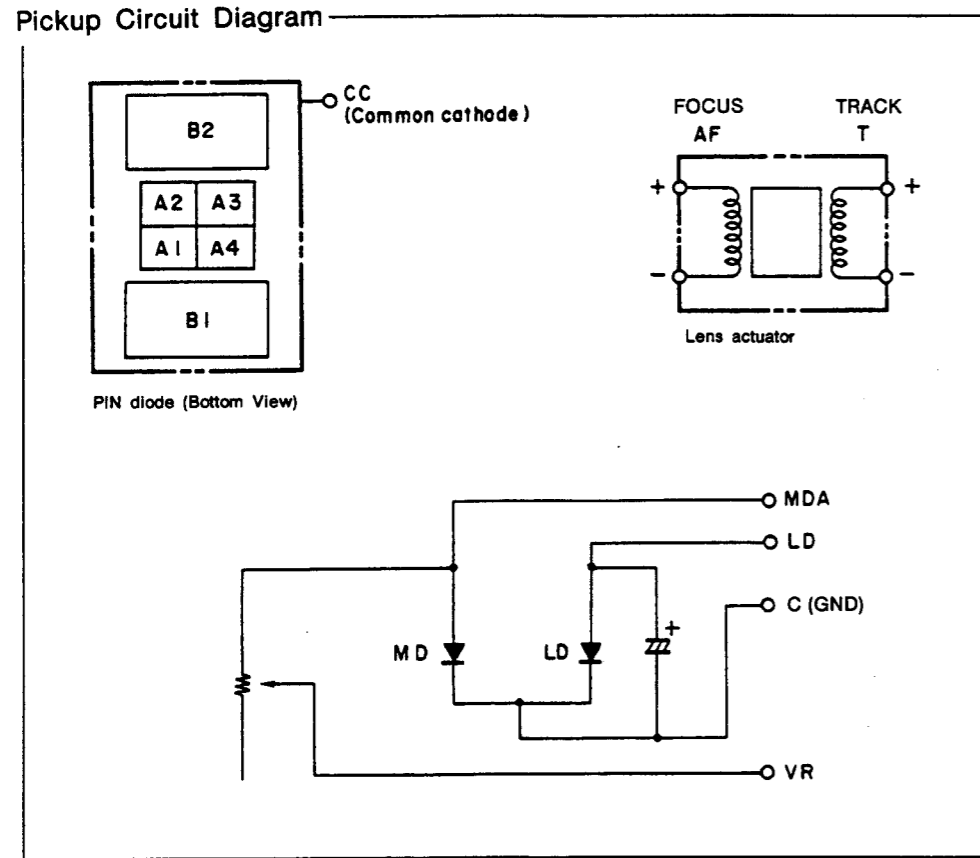


LASER PICKUP

Laser Drive Basic Circuit Diagram

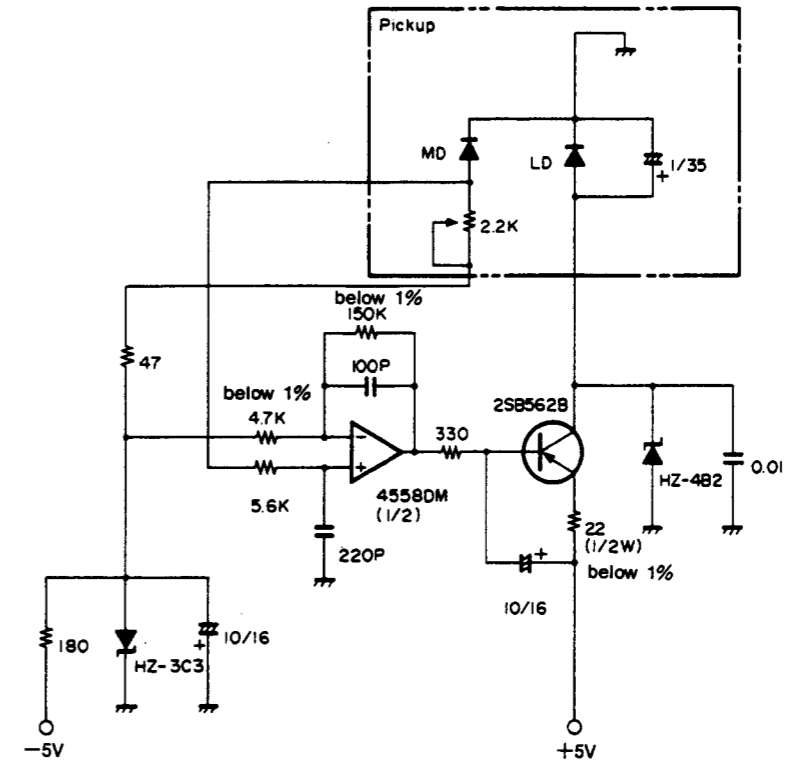


Measurement Circuit Diagram

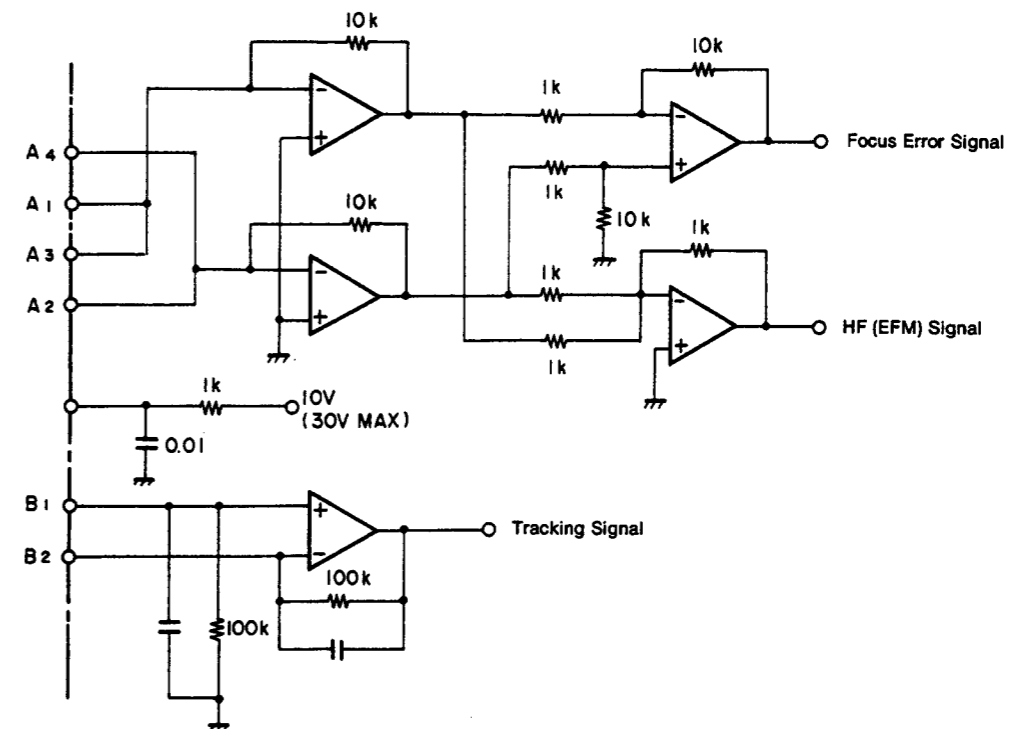

1. PD connector


PH pin post 7 pins (Type number B7B-PH-K-S manufactured by Nippon Atchaku Tanshi Hanbai K.K.)

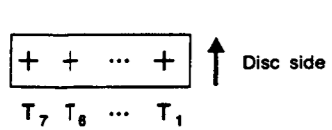

Tn	1	2	3	4	5	6	7
Item	A <sub>4</sub>	A <sub>3</sub>	A <sub>2</sub>	A <sub>1</sub>	CC	B <sub>1</sub>	B <sub>2</sub>

2. LD actuator connector

PH pin post 8 pins (Type number B8B-PH-K-S manufactured by Nippon Atchaku Tanshi Hanbai K.K.)



Tn	1	2	3	4	5	6	7	8
Item	C (GND)	LD	MD	VR	TR+	TR-	AF-	AF+



## ● Precautions in Use

Read the following carefully before handling.

### 1. Laser control circuit

The light output of the laser diode (LD) is greatly affected by temperature, so a built-in monitor photodiode should be used in the LD to supplement the light output.

In order to get rid of the dispersion of the monitor photodiode, the semiconductor resistor accompanying the pickup has been adjusted so that the mirror surface level of the HF signal becomes 250 mV when the measurement circuit of this manual and the basic laser drive circuit are used.

When designing a new laser drive circuit, note that the life of the laser will be shortened when the mirror level of the HF signal becomes 275 mV with this measuring circuit.

### 2. Wiring

Be sure to use the specified connectors for the wiring.

Note that the eye pattern may deteriorate when there is a microprocessor or other digital noise source in the vicinity from the photodiode to the harness.

Note that a poor connection related to the LD and actuator connector will cause deterioration of the laser, and so there should not be any looseness of connectors.

## ● Precautions in Handling

This mechanism has been precisely assembled and adjusted at a special factory. It should not be disassembled or adjusted without good reason. Pay attention to the following points related to handling.

### 1. General items

#### (1) Storage

Avoid storage in places with high temperatures and high humidity, and in places exposed to a lot of dust.

#### (2) Handling

The unit has been precisely adjusted and care should be taken so as not to expose the unit to shocks through dropping or careless handling.

### 2. Semiconductor laser (LD)

#### (1) Protection of the eyes from the laser

The output of the LD is via an objective lens and is a maximum of 400  $\mu$ W, but reaches approximately  $1.3 \times 10^4$  W/cm<sup>2</sup> in places where there is condensed light. After being condensed by the objective lens, the beam widens and so is all right at a distance of 30 cm or further, but during operation the LD should never be allowed to be viewed directly or through another lens or mirror since this is dangerous.

#### (2) Destruction by surge currents or static electricity

When a large current flows through the LD, even for a very short period, the strong light which the LD generates itself will advance the deterioration of the LD or destroy it.

Wire a switch into the LD drive circuit or provide another method of preventing the flow of surge currents. Also, when handled without care, the LD can be destroyed instantly by the application of static electricity from the body. Therefore, when handling the LD, be sure to ground your body and ground the measuring instruments, jigs, and tools. It is also desirable to use a grounding mat on the work bench and floor.

### 3. Lens actuator

#### (1) The actuator section uses a strong magnetic circuit, so that when magnetic bodies come too close, their characteristics are altered.

Also be careful not to allow foreign matter to enter from the cover gap.

#### (2) Lens cleaning

Dust or dirt adhering to the objective lens will change the performance.

To clean, blow the dirt away with clean air from an air blower.

### 4. Handling

Be sure not to contact the lens when handling the LD.

Note that direct contact of the body or other objects with the circuit of the LD board will cause deterioration to occur, so sufficient care should be taken.

## CD PLAYER SECTION

## SERVICE POINTS

## 1. Parts replacement of the tray mechanism (Figs. 1 and 2)

## (1) Removal of the tray

Open the tray and use a flat-bladed screwdriver to press the stopper portions of Fig. 1 (one each in the left and right locations) in the direction of the black arrow, then remove in the direction of the white arrow.

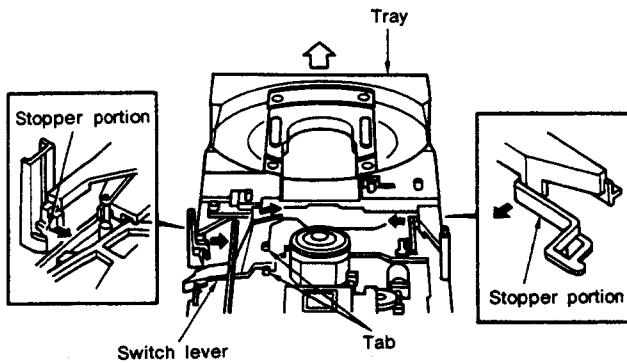


Fig. 1

## (2) Mounting of the tray (Figs. 1, 2, and 3)

Rotate the switch lever in the direction of the arrow, set the latches of the tray as illustrated in Fig. 2, then align the rails of the tray in the grooves of the loading plate, and insert so that the pinch lever pins of the switch lever enter into the rack grooves. Push in the tray while pressing the stopper portion inside a little.

(Check that the latches are in the positions illustrated in Fig. 2.)

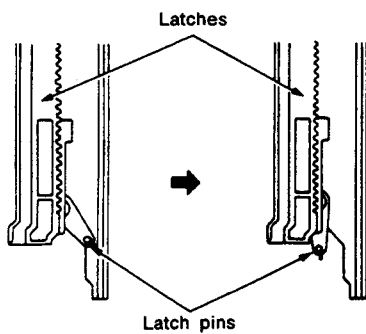


Fig. 2

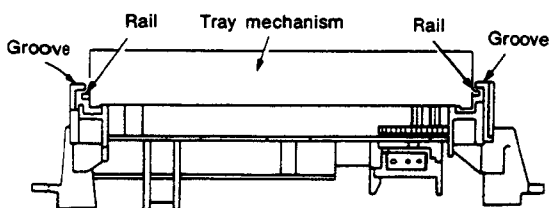


Fig. 3

## (3) Replacement of the disc holder (Fig. 4)

With the tray removed, remove tabs (D) and (E) of the disc receptacle of Fig. 4, then lift up and off.

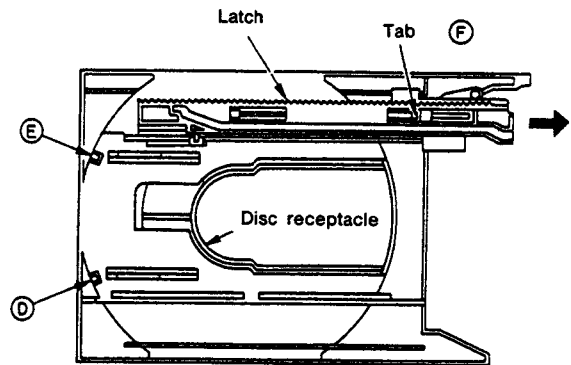


Fig. 4

## (4) Replacement of the latches (Fig. 4)

Set the latches into the condition of Fig. 4, lift the latch tab (F) up about 1 mm with a flat-bladed screwdriver and remove the rack in the direction of the arrow.

## (5) Removal of the loading motor and switches (Fig. 5)

Remove the belt from the loading motor, then remove the 3 tabs. Remove the fixed tabs from the various switches.

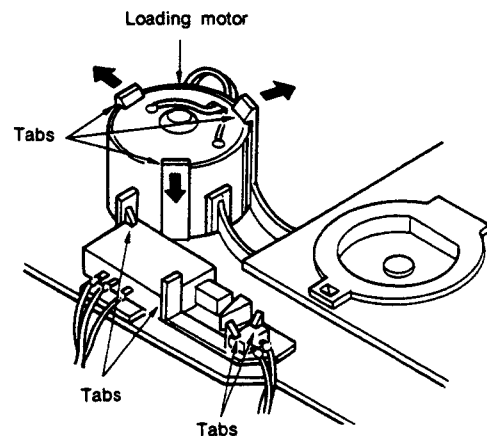


Fig. 5

## (6) Replacement of the belt

Replace the belt with the tray removed.

## (7) Replacement of the clammer (Fig. 6)

Hook the elongated holes of the clammer onto the C arm, bend the elongated hole sections and attach.

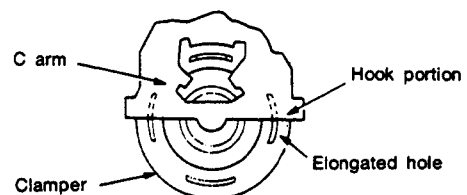


Fig. 6


## (8) Replacement of the switch lever (Fig. 1)

Remove the tabs of the bottom side (in 2 locations).

CD PLAYER SECTION

2. Removal of the unit mechanism (Fig. 7)


After removing the loading mechanism, remove the tab of the bottom surface (in one location) as illustrated in Fig. 7.

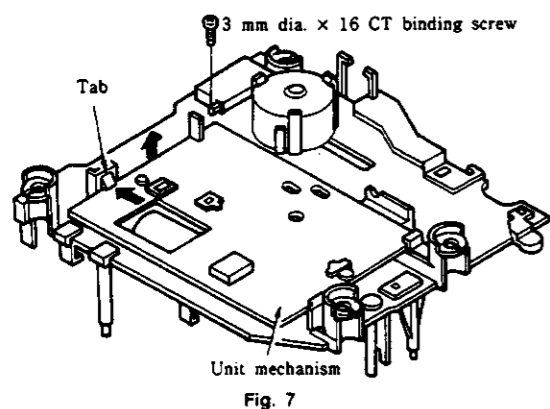


(1) To replace the DC motor (D2) and the turntable, follow the procedure below

- 1) Pull the turntable (plastic) off vertically from the unit plate.
- 2) When fitting on the servicing turntable (metal), make a height adjustment. (Fig. 8)

Do not exert excessive force to the shaft of the DC motor (D2) at this time.

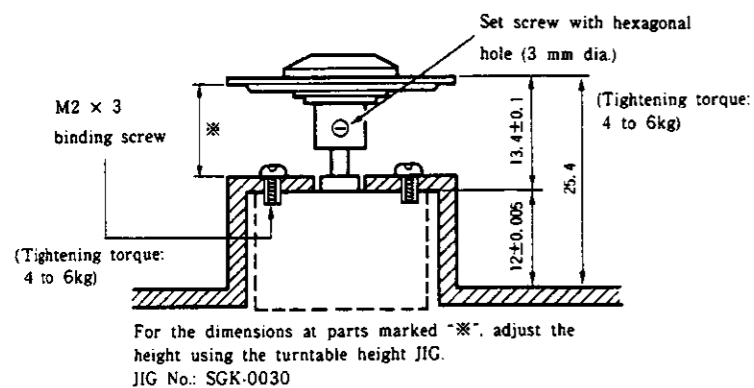


3) At the time of service replacement of the DC motor (D2), do not apply excessive force in direction B. When part C of the unit plate is misshapen, it will cause eye pattern deterioration. (Fig. 9)

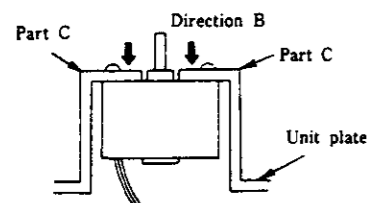

NOTE:


- Motor replacement or turntable replacement method  
Remove the pressure-fitted turntable, and remove the motor screws.
- Do not reuse a turntable (plastic) that has been removed once.

(2) When disassembling and assembling the unit mechanism, assemble with wiring resembling that of Fig. 10

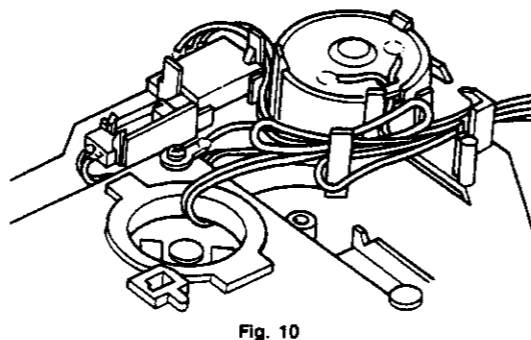

3. Inspection of the objective lens (Fig. 11)

Handle so as not to get dirt or dust on the objective lens of the lens actuator section. Note that when used for a long period, dirt or dust may have adhered to the objective lens. Try cleaning the surface of the objective lens with a dry, clean cotton swab. If the dirt still does not come off, moisten the cotton swab with a small amount of water and wipe. When doing this, be careful not to get water on any parts other than the lens.

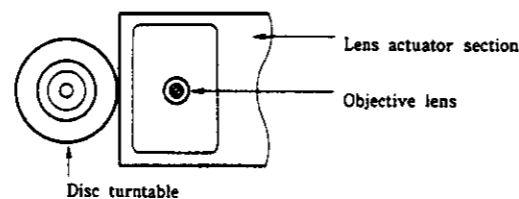

4. Inspection for laser breakdown

The laser is normally driven with a current of 30 to 80 mA. If this laser drive current value is measured at 120 mA or higher in the circuit, the laser may be thought to be faulty. (The current value is measured by taking the voltage (0.99 to 3.3 V) across both ends of R401, which is 33 ohms).


5. Precautions at time of servicing (Fig. 12)

(1) Semiconductor laser

The semiconductor laser is very susceptible to static electricity destruction and surge currents. Be careful never to touch the terminals of the semiconductor laser and the terminals of the flexible board with your hands or a tool.


As illustrated in Fig. 12, the current and light intensity characteristics increase abruptly once the threshold current value is exceeded.

Also note that this threshold current differs a little from laser to laser. In view of this, when replacing the unit mechanism or any work that involves setting the amount of light of the laser, be sure to turn the adjustment control VR401 fully in the counterclockwise direction, and then raise it to the specified value.

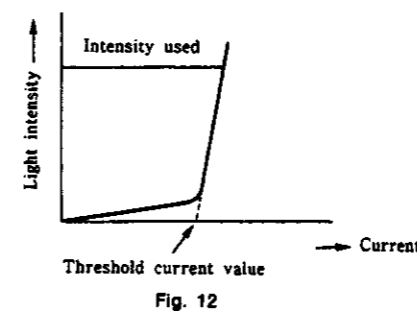

(2) Handling the unit mechanism (Fig. 13)

When handling the pickup mechanism and the unit mechanism, use a ground ring such as the one illustrated in Fig. 13. (A ground ring can be constructed using ordinary lead wire.)

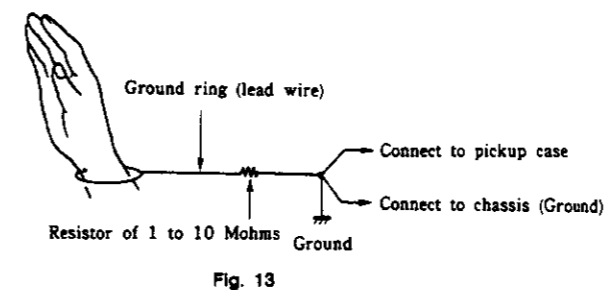


6. Inspection of the actuator (Fig. 14)

Check the resistance value of the actuator coil. It is normal if the values are as follows:

- Focusing coil ..... 30 ohms
- Tracking coil ..... 10 ohms

If the coils are open or shorted, the actuator may be thought to be broken. Also, a 1.5 V battery can be used to observe if the lens moves.

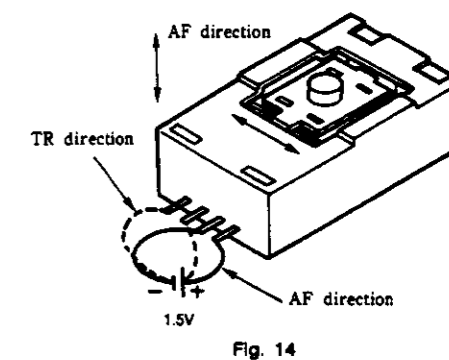

**CD PLAYER SECTION**

**ADJUSTMENT METHOD**

The microprocessor contained in this unit incorporates a service program which allows a wide variety of service adjustments to be conducted easily by using the operation buttons.

**1. Method of starting the service program**

Switch on the AC power while simultaneously pressing the ► PLAY button and the ▲ OPEN/CLOSE button of the CD unit (UCD-250). When all power has been switched on there will be a transition to the service program. At this time the display section of the CD unit (UCD-250) display tube will indicate "01".

NOTE: Once the service program starts the operation buttons cannot be used for normal operation.

**2. Operation functions when the service program is operating**

Operation button	Operation function	Description
▲ OPEN/CLOSE	Opens and closes the disc holder.	<ul style="list-style-type: none"> <li>● Opening and closing takes place when the rotation of the disc has stopped.</li> <li>● Other operation buttons are performed when the opening and closing operation is completed.</li> </ul>
■ STOP	Stops system operation.	<ul style="list-style-type: none"> <li>● Track number display becomes 01.</li> <li>● Press when an adjustment has been completed or is redone.</li> </ul>
► PLAY	Operates the focus servo and rotates the disc.	<ul style="list-style-type: none"> <li>● Press at the time of the tracking offset adjustment.</li> <li>● After the operation is completed, the track number display becomes 02.</li> </ul>
⏸ PAUSE	Operates the focus servo, tracking servo, slide servo, and the spindle servo.	<ul style="list-style-type: none"> <li>● When the play button has been pressed, the tracking servo and slide servo are operated.</li> <li>● After the operation is completed the track number display becomes 03.</li> </ul>
Other buttons	Operation is not normal.	<ul style="list-style-type: none"> <li>● Do not operate buttons other than the above.</li> <li>● When a button is operated by mistake, immediately turn the power switch off.</li> </ul>

NOTE: Do not use the remote control while the service program is operating.


**3. Adjustment method**

**(1) Measuring instruments required in the adjustment**

- ① Dual-trace oscilloscope
- ② Oscilloscope

**OUTLINE DIAGRAM OF ADJUSTMENT LOCATION**

1U-2478-1 MAIN UNIT ASS'Y (Component Side)

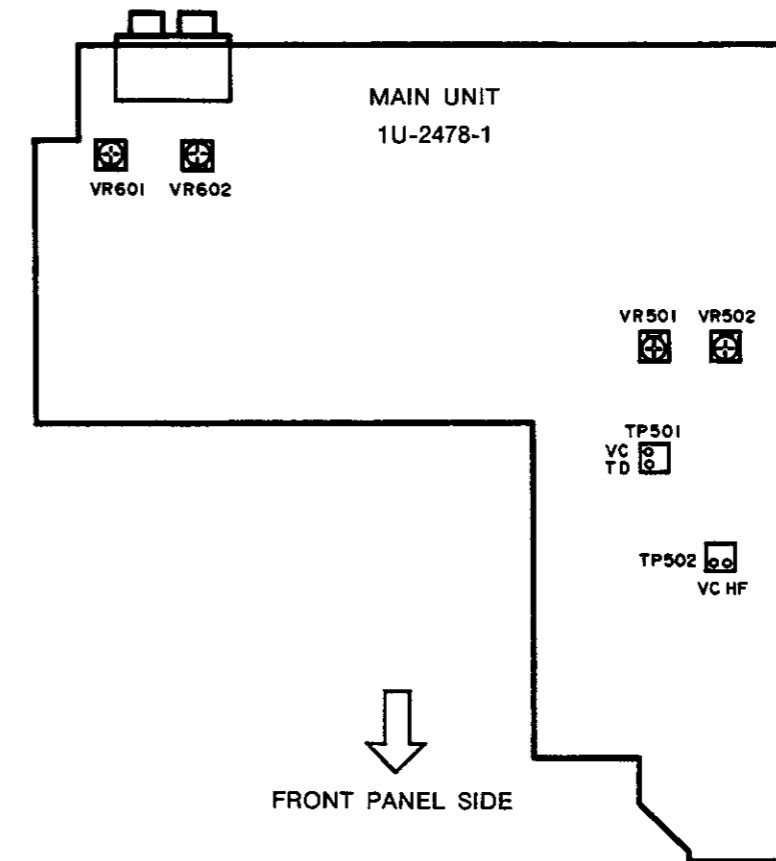

NOTE: VR601 and VR602 have been adjusted before shipping and do not require adjustment.

**(2) Adjustment preparation**

1.	Set the adjustment control (VR501, 502) to the position illustrated.	VR501 (T-OFFSET) VR502 (F-OFFSET)
2.	Adjustment step	1. Tracking offset 2. Focus offset

(3) Tracking offset adjustment

Wiring Diagram

Oscilloscope (DC range)		Adjustment location	Check items	Adjustment procedure
V	H	(Control)	DC Voltmeter	
0.2V/div	1~2ms/div	VR501	<p style="text-align: center;">A = B</p>	<ol style="list-style-type: none"> <li>1. <input type="button" value="OPEN/CLOSE"/> Press the OPEN/CLOSE button and place an adjustment disc in the disc holder.</li> <li>2. <input type="button" value="OPEN/CLOSE"/> Press the OPEN/CLOSE button again and close the disc holder.</li> <li>3. <input type="button" value="PLAY"/> Press the PLAY button and check that the display indicates "02".</li> <li>4. Short circuit the (+) and (-) terminals of the oscilloscope and check the board wiring.</li> <li>5. Adjust the VR501 "T-OFFSET" control and set the upper and lower amplitude of the waveform to be equal.</li> </ol>

(4) Focus offset Adjustment

Wiring diagram

Oscilloscope		Adjustment location	Check items
V	H	Control	Oscilloscope
50mV/div or 20mV/div	0.2 μ/div or 0.5 μ/div	VR502	

Adjustment Procedure

1. Press the  button.
2. Adjust VR502 "F. OFFSET" and set the FEO voltage to +70 mV (±10 mV).






CD PLAYER SECTION

1 2 3 4 5 6 7 8

Pattern Side

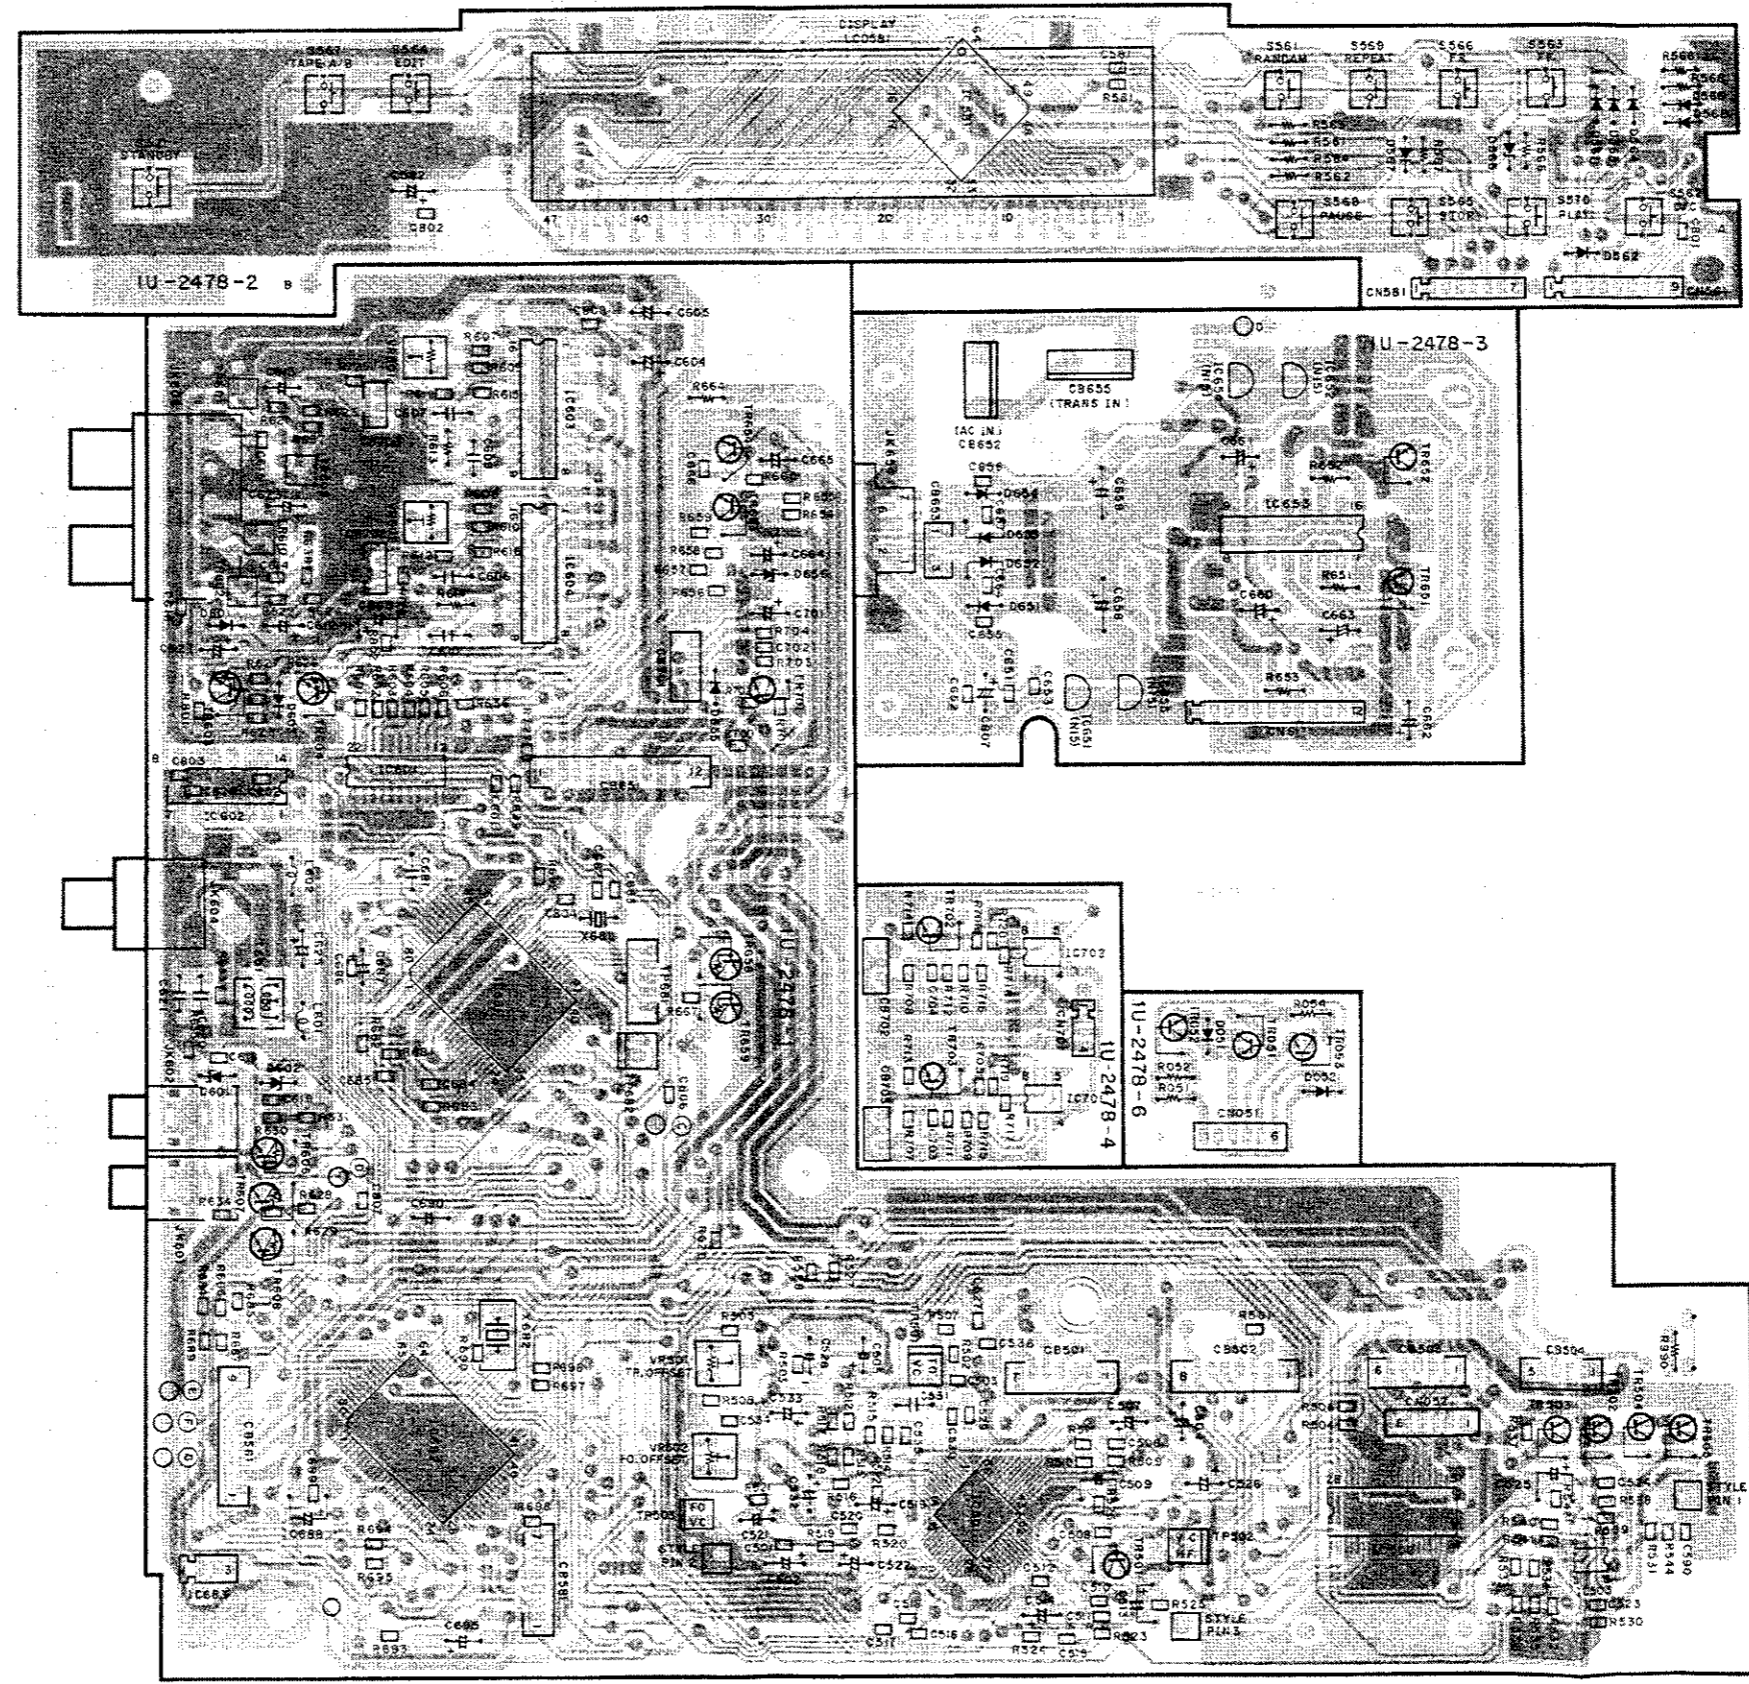

A  
B  
C  
D  
E

CD PLAYER SECTION

NOTE ON PARTS LIST

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W. Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol  $\Delta$  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

Resistors

Ex.: RN 14K 2E 182 G FR

Type	Shape and performance	Power	Resistance	Allowable error	Others
RD : Carbon Film RC : Composition RS : Metallic oxide Film RW : Winding RN : Metal film RK : Metal mixture	2B : 1/8W 2E : 1/4W 2H : 1/2W 3A : 1W 3D : 2W 3F : 3W 3H : 5W	F : ±1% G : ±2% J : ±5% K : ±10% M : ±20%	P : Pulse-resistant type NL : Low noise type NB : Non-burning type FR : Fuse-resistor F : Lead wire forming		

\* Resistance  
1 8 2 ⇒ 1800 ohm = 1.8 kohm  
Indicates number of zeros after effective number  
2-digit effective number  
Units: ohm

1 R 2 ⇒ 1.2 ohm  
1-digit effective number.  
2-digit effective number, decimal point indicated by R.  
Units: ohm

\* Capacity (electrolyte only)  
2 2 R ⇒ 2200 μF  
Indicates number of zeros after effective number.  
2-digit effective number.  
Units: μF

2 R 2 ⇒ 2.2 μF  
1-digit effective number.  
2-digit effective number, decimal point indicated by R.  
Units: μF

Capacitors

Ex.: CE 04W 1H 2R2 M BP

Type	Shape and performance	Dielectric strength	Capacity	Allowable error	Others
CE : Aluminum foil electrolyte CA : Aluminum solid electrolyte CS : Tantalum electrolyte CQ : Film CK : Ceramic CC : Ceramic CP : Oil CM : Mica CF : Metallized CH : Metallized	0J : 6.3V 1A : 10V 1C : 16V 1E : 25V 1V : 35V 1H : 50V 2A : 100V 2B : 125V 2C : 160V 2D : 200V 2E : 250V 2H : 500V 2J : 630V	F : ±1% G : ±2% J : ±5% K : ±10% M : ±20% Z : +80% -20% P : +100% -0% C : ±0.25pF D : ±0.5pF - : Others	HS : High stability type BP : Non-polar type HR : Ripple-resistant type DL : For charge and discharge HF : For assuring high frequency U : UL part C : CSA part W : UL-CSA type F : Lead wire forming		

\* Capacity (except electrolyte)  
2 R 2 ⇒ 2200pF = 2200 μF = 0.002 μF  
(More than 2) — Indicates number of zeros after effective number.  
2-digit effective number.  
Units: μF

2 2 1 ⇒ 220pF  
(0 or 1) — Indicates number of zeros after effective number.  
2-digit effective number.  
Units: pF

When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

1U-2478A P.W.B UNIT ASSY PARTS LIST

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
<b>SEMICONDUCTORS GROUP</b>							
IC501	263 0821 000	IC HA12158		R503	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
IC502	263 0805 903	IC BA6296FP		R504	247 0010 961	Chip Carbon 22k ohm 1/10W	RM73B--223J
IC503	263 0615 902	IC BA15218F		R505	247 0008 931	Chip Carbon 2.4kohm 1/10W	RM73B--242J
IC581	263 0533 000	IC LC7582		R506	247 0011 902	Chip Carbon 33k ohm 1/10W	RM73B--333J
IC601	262 1397 909	IC SM5840CS-L1		R507	247 0010 987	Chip Carbon 27k ohm 1/10W	RM73B--273J
IC602	262 1126 002	IC PC74HC00P		R508	247 0008 931	Chip Carbon 2.4kohm 1/10W	RM73B--242J
IC603	262 1409 004	IC PCM61P-L		R509	247 0005 976	Chip Carbon 200 ohm 1/10W	RM73B--201J
IC604	262 1409 004	IC PCM61P-L		R510	247 0008 902	Chip Carbon 1.8kohm 1/10W	RM73B--182J
IC651	268 0073 905	IC ICP-N15	IC Protector 15 V	R511	247 0009 969	Chip Carbon 8.2kohm 1/10W	RM73B--822J
IC652	268 0073 905	IC ICP-N15	IC Protector 15 V	R512	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
IC653	263 0693 005	IC M5290P		R513	247 0010 929	Chip Carbon 15k ohm 1/10W	RM73B--153J
IC654	268 0073 905	IC ICP-N15	IC Protector 15 V	R514	247 0009 972	Chip Carbon 9.1kohm 1/10W	RM73B--912J
IC655	268 0073 905	IC ICP-N15	IC Protector 15 V	R515	247 0012 901	Chip Carbon 82k ohm 1/10W	RM73B--823J
IC681	262 1514 009	IC CXD2500AQ		R516	247 0010 903	Chip Carbon 12k ohm 1/10W	RM73B--123J
IC682	262 1625 406	IC μPD75517GF-150-3B9	μ com	R517	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
IC683	262 0678 001	IC MN1280-S		R518	247 0010 929	Chip Carbon 15k ohm 1/10W	RM73B--153J
TR501	271 0102 937	Transister 2SA1015(GR/Y)		R519	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR502	274 0144 907	Transister :BC368		R520	247 0010 929	Chip Carbon 15k ohm 1/10W	RM73B--153J
TR503	272 0101 902	Transister :BC369		R521	247 0005 905	Chip Carbon 100 ohm 1/10W	RM73B--101J
TR504	274 0144 907	Transister :BC368		R522	247 0008 960	Chip Carbon 3.3kohm 1/10W	RM73B--332J
TR505	272 0101 902	Transister :BC369		R523	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR601	269 0066 902	Transister DTC323TK	Built in Resistor	R524	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR602	269 0066 902	Transister DTC323TK	Built in Resistor	R525	247 0003 949	Chip Carbon 22 ohm 1/10W	RM73B--220J
TR603	269 0020 906	Transister DTC114ES	Built in Resistor	R526	247 0010 903	Chip Carbon 12k ohm 1/10W	RM73B--123J
TR604	269 0046 906	Transister DTA114ES	Built in Resistor	R527	247 1009 984	Chip Carbon 10 k ohm 1/8W	RM73B2B103J
TR606	269 0040 902	Transister DTC144ES	Built in Resistor	R528	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR607	269 0040 902	Transister DTC144ES	Built in Resistor	R529	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR608	269 0040 902	Transister DTC144ES	Built in Resistor	R530	247 0012 914	Chip Carbon 91k ohm 1/10W	RM73B--913J
TR609	269 0066 902	Transister DTC323TK	Built in Resistor	R531	247 0005 989	Chip Carbon 220 ohm 1/10W	RM73B--221J
TR610	269 0066 902	Transister DTC323TK	Built in Resistor	R532	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J
TR651	274 0415 003	Transister :BD935F		R533	247 0008 960	Chip Carbon 3.3kohm 1/10W	RM73B--332J
TR652	272 0102 008	Transister :BD936F		R534	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR653	274 0144 907	Transister :BC368		R535	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
TR654	273 0222 907	Transister 2SC2458(Y/GR)		R536	247 0009 943	Chip Carbon 6.8kohm 1/10W	RM73B--682J
TR658	269 0020 906	Transister DTC114ES	Built in Resistor	R537	247 0010 961	Chip Carbon 22k ohm 1/10W	RM73B--223J
TR659	269 0020 906	Transister DTC114ES	Built in Resistor	R538	247 0005 905	Chip Carbon 100 ohm 1/10W	RM73B--101J
D561	276 0432 903	Diode 1SS270A		R539	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
D562	276 0432 903	Diode 1SS270A		R540	247 0009 943	Chip Carbon 6.8kohm 1/10W	RM73B--682J
D563	276 0432 903	Diode 1SS270A		R541	247 0009 956	Chip Carbon 7.5kohm 1/10W	RM73B--752J
D564	276 0432 903	Diode 1SS270A		R542	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J
D565	276 0462 902	Zener Diode HZS6B-1	6 V	R544	247 0003 949	Chip Carbon 22 ohm 1/10W	RM73B--220J
D566	276 0462 902	Zener Diode HZS6B-1	6 V	R581	247 0011 957	Chip Carbon 51k ohm 1/10W	RM73B--513J
D567	276 0462 902	Zener Diode HZS6B-1	6 V	R601	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
D568	276 0462 902	Zener Diode HZS6B-1	6 V	R602	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
D581	393 9470 009	LED	LED	R603	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
D601	276 0462 902	Zener Diode HZS6B-1	6 V	R604	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
D602	276 0462 902	Zener Diode HZS6B-1	6 V	R605	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
D603	276 0432 903	Diode 1SS270A		R606	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
D651	276 0553 905	Diode 1SR35-200A		R607	247 0012 998	Chip Carbon 200kohm 1/10W	RM73B--204J
D652	276 0553 905	Diode 1SR35-200A		R608	247 0012 998	Chip Carbon 200kohm 1/10W	RM73B--204J
D653	276 0553 905	Diode 1SR35-200A		R609	247 0013 984	Chip Carbon 470kohm 1/10W	RM73B--474J
D654	276 0553 905	Diode 1SR35-200A		R610	247 0013 984	Chip Carbon 470kohm 1/10W	RM73B--474J
D655	276 0432 903	Diode 1SS270A		R611	247 0014 967	Chip Carbon 1 M ohm 1/10W	RM73B--105J
D656	276 0462 915	Zener Diode HZS6B-2	6 V	R612	247 0014 967	Chip Carbon 1 M ohm 1/10W	RM73B--105J
D801	276 0503 900	Diode 1SS198		R615	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J
	393 4141 003	LCD 8233 JP	LCD	R616	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J
<b>RESISTORS GROUP (Not included Carbon Film ±5%, 1/4W Type. Refer to the Schematic Diagram for those Parts.)</b>							
R008	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	R621	247 0007 903	Chip Carbon 680 ohm 1/10W	RM73B--681J
R055	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	R622	247 0007 903	Chip Carbon 680 ohm 1/10W	RM73B--681J
R056	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	R623	247 0010 990	Chip Carbon 30k ohm 1/10W	RM73B--303J
R501	247 0004 922	Chip Carbon 47 ohm 1/10W	RM73B--470J	R624	247 0010 990	Chip Carbon 30k ohm 1/10W	RM73B--303J
R502	247 0011 902	Chip Carbon 33k ohm 1/10W	RM73B--333J	R625	247 0004 993	Chip Carbon 91 ohm 1/10W	RM73B--910J
				R626	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J
				R627	247 0012 998	Chip Carbon 200kohm 1/10W	RM73B--204J
				R628	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J
				R629	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J
				R630	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J
				R631	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J



CD PLAYER SECTION

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
R633	247 0004 977	Chip Carbon 75 ohm 1/10W	RM73B--750J	C525	254 4260 964	Electrolytic 3.3µF/50 V	CE04D1H3R3M
R634	247 0005 905	Chip Carbon 100 ohm 1/10W	RM73B--101J	C525	254 4252 930	Electrolytic 100µF/10 V	CE04W1A101M
R635	247 0005 905	Chip Carbon 100 ohm 1/10W	RM73B--101J	C526	254 4250 929	Electrolytic 100µF/6.3 V	CE04W0J101M
R636	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J	C527	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
R637	247 0005 963	Chip Carbon 180 ohm 1/10W	RM73B--181J	C528	254 4254 938	Electrolytic 47µF/16 V	CE04W1C470M
R638	247 0005 963	Chip Carbon 180 ohm 1/10W	RM73B--181J	C529	257 1011 995	Chip Ceramic 0.056µF/50 V	CK73B1H563K
R639	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C530	257 0010 955	Chip Ceramic 0.027µF/50 V	CK73B1H273K
R654	247 0007 945	Chip Carbon 1 k ohm 1/10W	RM73B--102J	C531	256 1034 995	Metalized 0.15µF/50 V	CF93A1H154J
R655	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C532	254 4254 912	Electrolytic 22µF/16 V	CE04W1C220M
R656	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J	C533	254 4260 919	Electrolytic 0.22µF/50 V	CE04W1HR22M
R657	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C534	257 0008 983	Chip Ceramic 0.22µF/50 V	CE04W1HR22M
R658	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C535	257 0006 901	Chip Ceramic 390 pF/50 V	CC73SL1H391J
R659	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J	C536	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
R660	247 0011 944	Chip Carbon 47k ohm 1/10W	RM73B--473J	C581	257 0006 969	Chip Ceramic 680 pF/50 V	CC73SL1H681J
<b>CAPACITORS GROUP</b>							
R667	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C582	254 4193 947	Electrolytic 100µF/16 V	CE04W1C101M(SRA)
R681	247 0008 960	Chip Carbon 3.3kohm 1/10W	RM73B--332J	C590	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104K
R682	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C601	257 1009 923	Chip Ceramic 330 pF/50 V	CK73B1H331K
R683	247 0009 943	Chip Carbon 6.8kohm 1/10W	RM73B--682J	C602	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
R684	247 0008 928	Chip Carbon 2.2kohm 1/10W	RM73B--222J	C604	254 4254 930	Electrolytic 100µF/10 V	CE04W1A101M
R685	247 0008 928	Chip Carbon 2.2kohm 1/10W	RM73B--222J	C605	254 4254 930	Electrolytic 100µF/10 V	CE04W1A101M
R686	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C606	255 4235 963	Plastic Film 0.0056µF/100V	CQ93P2A562J(NH)
R687	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C607	255 4235 963	Plastic Film 0.0056µF/100V	CQ93P2A562J(NH)
R688	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C608	253 4456 908	Ceramic 680 pF/50 V	CC45SL1H681J
R689	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C610	253 4456 908	Ceramic 680 pF/50 V	CC45SL1H681J
R690	247 0014 967	Chip Carbon 1 M ohm 1/10W	RM73B--105J	C612	254 4313 918	Electrolytic 10µF/50 V	CE04W1H100M(ASF)
R692	247 0008 915	Chip Carbon 2 k ohm 1/10W	RM73B--202J	C613	254 4313 918	Electrolytic 10µF/50 V	CE04W1H100M(ASF)
R693	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C614	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J
R694	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C615	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J
R695	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C616	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
R696	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C618	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J
R698	247 0009 985	Chip Carbon 10k ohm 1/10W	RM73B--103J	C619	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J
R725	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C620	253 1146 907	Ceramic 0.01µF/50 V	CK45F1H103Z
R726	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C621	253 4452 902	Ceramic 470 pF/50 V	CC45SL1H471J
R727	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C623	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M
R801	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C625	254 4254 925	Electrolytic 33µF/16 V	CE04W1C330M
R802	247 0012 927	Chip Carbon 100kohm 1/10W	RM73B--104J	C626	254 0004 961	Chip Ceramic 100 pF/50 V	CC73SL1H101J
VR501	211 6087 931	Semi Fixed Resistor 4.7k ohm	V06PB472	C627	254 4254 954	Electrolytic 220µF/16 V	CE04W1C221M
VR502	211 6087 928	Semi Fixed Resistor 100k ohm	V06PB104	C651	257 1011 908	Chip Ceramic 0.01µF/50 V	CK73B1H103K
VR601	211 6087 928	Semi Fixed Resistor 100k ohm	V06PB104	C652	257 1011 908	Chip Ceramic 0.01µF/50 V	CK73B1H103K
VR602	211 6087 928	Semi Fixed Resistor 100k ohm	V06PB104	C653	257 1011 908	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C501	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K	C654	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C502	254 4250 929	Electrolytic 100µF/6.3 V	CE04W0J101M	C655	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C503	257 0008 983	Chip Ceramic 1000 pF/50 V	CK73B1H102K	C656	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C504	254 4260 935	Electrolytic 0.47µF/50 V	CE04W1HR47M	C658	254 4255 704	Electrolytic 3300µF/16 V	CE04W1C332MC
C505	254 4254 909	Electrolytic 10µF/16 V	CE04W1C100M	C659	254 4255 704	Electrolytic 3300µF/16 V	CE04W1C332MC
C506	257 0004 987	Chip Ceramic 120 pF/50 V	CC73SL1H121J	C660	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M
C507	254 4254 909	Electrolytic 10µF/16 V	CE04W1C100M	C661	254 4260 964	Electrolytic 3.3µF/50 V	CE04W1H3R3M
C508	257 0009 937	Chip Ceramic 2700 pF/50 V	CK73B1H272K	C662	254 4254 954	Electrolytic 220µF/16 V	CE04W1C221M
C509	254 4254 909	Electrolytic 10µF/16 V	CE04W1C100M	C663	254 4254 954	Electrolytic 220µF/16 V	CE04W1C221M
C510	257 0011 967	Chip Ceramic 0.033µF/25 V	CK73B1E333K	C665	254 4254 941	Electrolytic 100µF/16 V	CE04W1C101M
C511	257 0009 924	Chip Ceramic 2200 pF/50 V	CK73B1H222K	C666	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C512	257 0010 926	Chip Ceramic 0.015µF/50 V	CK73B1H153K	C681	253 1146 907	Ceramic 0.01µF/50 V	CK45F1H103Z
C513	254 4254 909	Electrolytic 10µF/16 V	CE04W1C100M	C682	257 0001 951	Chip Ceramic 3 pF/50 V	CC73SL1H3R0C
C514	254 4260 935	Electrolytic 0.47µF/50 V	CE04W1HR47M	C683	257 0001 977	Chip Ceramic 5 pF/50 V	CC73SL1H5R0C
C515	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K	C684	257 1011 982	Chip Ceramic 0.047µF/50 V	CK73B1H473K
C516	257 0008 983	Chip Ceramic 1000 pF/50 V	CK73B1H102K	C685	257 0009 908	Chip Ceramic 1500 pF/50 V	CK73B1H152K
C517	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K	C686	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C518	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K	C687	254 4250 932	Electrolytic 220µF/6.3 V	CE04W0J221M
C519	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M	C688	254 4250 929	Electrolytic 100µF/6.3 V	CE04W0J101M
C520	257 0009 979	Chip Ceramic 5600 pF/50 V	CK73B1H562K	C689	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C521	254 4260 919	Electrolytic 0.22µF/50 V	CE04W1HR22M	C690	253 1146 907	Ceramic 0.01µF/50 V	CK45F1H103Z
C522	254 4254 909	Electrolytic 10µF/16 V	CE04W1C100M	C695	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M
C523	257 0009 979	Chip Ceramic 5600 pF/50 V	CK73B1H562K	C801	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
C524	257 0010 942	Chip Ceramic 0.022µF/50 V	CK73B1H223K	C803	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K
				C804	257 0004 961	Chip Ceramic 100 pF/50 V	CC73SL1H101J
				C805	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M
				C807	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M



Ref. No.	Part No.	Part Name	Remarks
C807	257 0010 942	Chip Ceramic 0.022µF/50 V	CK73B1H223K
C808	257 0010 942	Chip Ceramic 0.022µF/50 V	CK73B1H223K
<b>OTHERS GROUP</b>			
L601	235 0049 900	(P.W.Board) Beads Inductor Tape	1
L602	235 0049 900	Beads Inductor Tape	1
	212 5604 910	Tact Switch	11
	449 0057 009	LCD Holder	1
	417 0307 008	Heat Sink	1
	470 0012 022	Pan Screw 3X12 with SW.W	2
X681	399 0112 005	Crystal (16.934MHz)	1
X682	399 9018 003	Ceramic Vibrator	CST 4.00MGW 1
T601	231 8063 009	Pulse Trans	1
JK601	204 8421 005	Mini Jack	1
JK602	204 8421 005	Mini Jack	1
JK603	204 8413 000	2 P Pin Jack(C-GND)	1
JK604	204 8366 005	1 P Pin Jack	1
JK654	204 2429 003	7 P System Socket	1
CN581	204 2513 029	7 P KR-DA Conn. Cord	1
CN561	204 2561 000	9 P KR-DA Conn. Cord	1
CN651	204 6286 035	12 P PH-SAN Conn. Cord	1
CB501	205 0343 074	7 P Conn. Base(KR-PH)	1
CB502	205 0343 087	8 P Conn. Base(KR-PH)	1
CB503	205 0343 061	6 P Conn. Base(KR-PH)	1
CB504	205 0343 058	5 P Conn. Base(KR-PH)	1
CB561	205 0343 090	9 P Conn. Base(KR-PH)	1
CB581	205 0343 074	7 P Conn. Base(KR-PH)	1
CB651	205 0375 026	12 P Conn. Base(KR-PH)	1
TP501	205 0133 022	2 P NH Conn. Base	1
TP502	205 0133 022	2 P NH Conn. Base	1
TP503	205 0133 022	2 P NH Conn. Base	1
	205 0452 004	Style Pin	2
	203 0374 021	1 P SIN Conn. Assy	1
	203 0340 068	1 P Contact Assy	1
CB653	205 0233 032	3 P EH Conn. Base	1
CB655	205 0581 001	2 P VH Conn. Base	1
CB655	205 0624 007	2 P AC Conn. Base	1

CD PLAYER SECTION

● IC's

SEMICONDUCTORS



HA12158 (IC501)

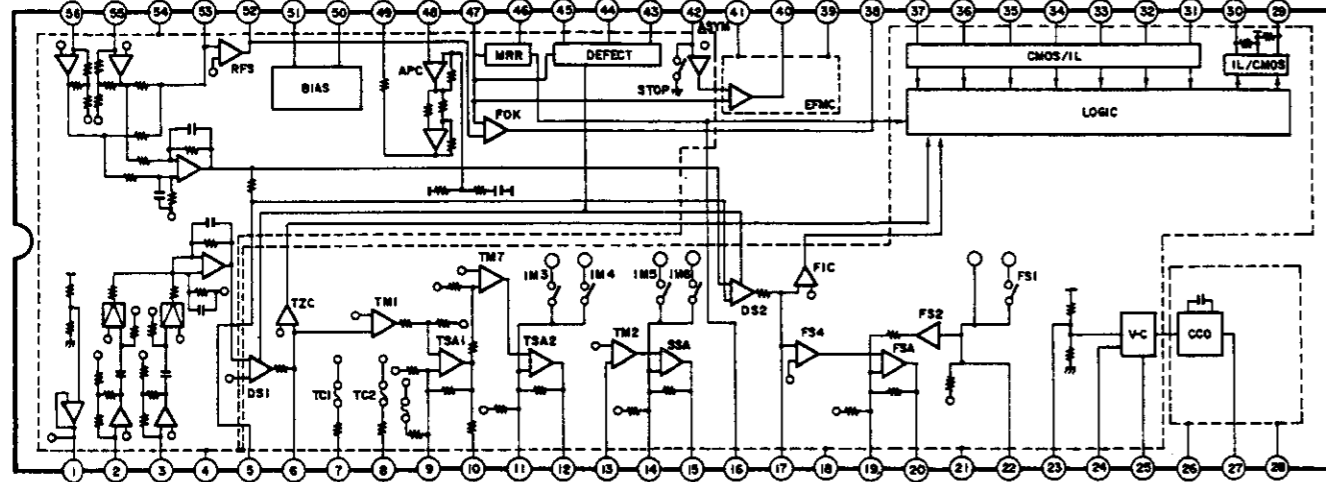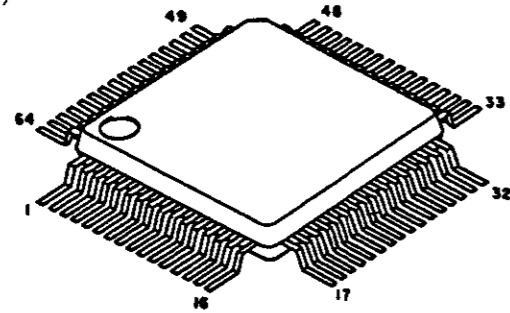


● Pin function table

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	TG2	I	TG2 switch	29	LMSW	I	Limit switch input
2	TS1	I	TSA1 ⊖ input	30	LDSW	I	Laser switch input
3	TS10	O	TSA1 output	31	FOK	O	FOK comparator output
4	TS2	I	TSA2 ⊖ input	32	GEFM	GND	EFM comparator ground
5	TS20	O	TSA2 output	33	EFMC	O	EFM comparator output
6	TM2	I	TM2 input	34	VEFM	Vcc	EFM comparator Vcc
7	SS	I	SSA ⊖ input	35	DSLCL	I	Data slice level control input
8	SSO	O	SSA output	36	DFIN	I	Defect comparator input
9	MIRR	O	Mirror comparator output	37	DFO	O	Defect signal output
10	FE	I/O	Focus error signal output, FS4 input	38	DFH	O	Defect hold signal output
11	SG	GND	Servo block ground	39	MIRH	O	Error hold signal output
12	FS	I	SSA ⊖ input	40	EFMI	I	EFM signal output
13	FSO	O	FSA input	41	MD	I	APC amplifier input
14	SVCC	Vcc	Servo block Vcc	42	LD	O	APC amplifier output
15	FUD	O	Focus up/down voltage output	43	BYPS	O	Capacitor connection pin for ripple filter
16	VCR	I/O	VCO reference voltage	44	ISET	O	Reference current setting
17	PDIN	I	VCO control voltage input	45	RFO	O	RFS output
18	FRA	O	VCO free-run frequency setting	46	RF	I	RFS ⊖ input
19	VVcc	Vcc	VCO Vcc	47	PVcc	Vcc	Pre-block Vcc
20	VCO	O	VCO output	48	RF1	I	RF1 (I/V conversion block) input
21	VGND	GND	VCO ground	49	RF2	I	RF2 (I/V conversion block) input
22	COUT	O	Track count signal output	50	VREF	O	Reference voltage output
23	SENS	O	FZC and TZC signal output	51	TR1	I	TR1 (I/V conversion amplifier) input
24	XRST	I	Reset signal output	52	TR2	I	TR2 (I/V conversion amplifier) input
25	DIRC	I	Direct control signal output	53	PG	GND	Preamplifier block ground
26	XLT	I	Data transfer signal input	54	FH	O	Focus error hold signal output
27	DATA	I	Data signal input	55	TE	I/O	Track error signal output, TMI input
28	CLK	I	Data sync clock input	56	TG1	I	TG1 switch

SM5840CS (IC601)

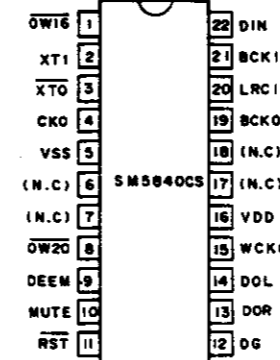
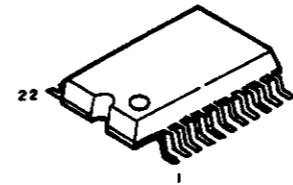


MN1280S (IC683)



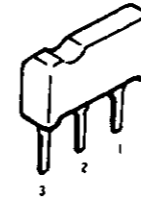


1: Output  
2: V<sub>DD</sub>  
3: GND

BA15218 (IC503)

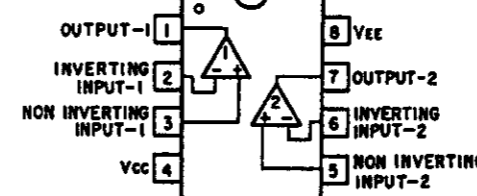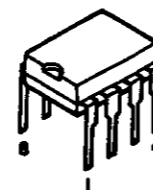


HD74HC00P (IC602)

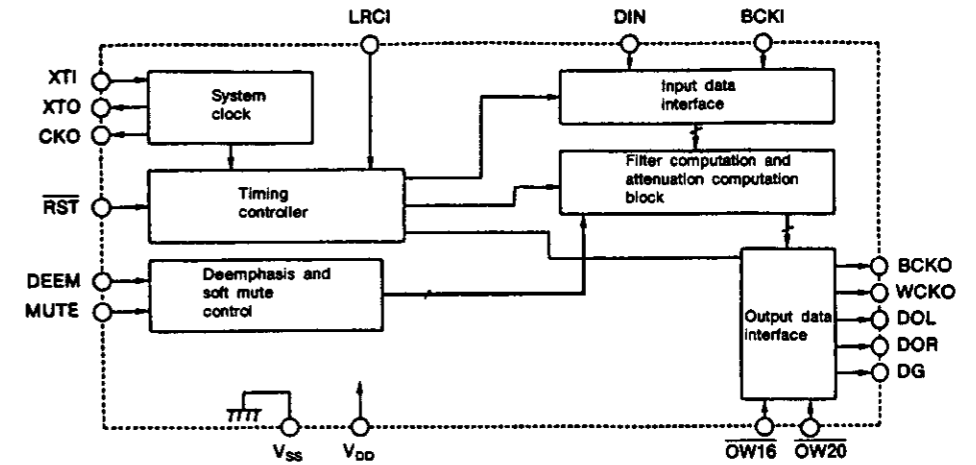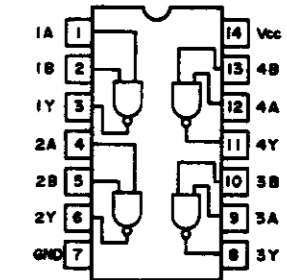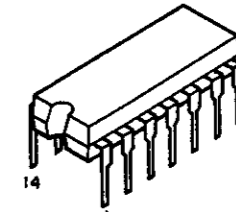

● Pin Description

Pin number DIP	Pin name	I/O	Function	Setting	
				OW16	OW20
1	OW16	ip	Selection pin 1 for number of output bits (NOTE) NS-ON : Noise shaper on NS-OFF : Noise shaper off	H 18bit output (NS-ON)	L 20bit output (NS-ON)
2	XTI	i	Oscillator input pin		
3	XTO	o	Oscillator input pin		
4	CKO	o	Oscillator output clock (Frequency is the same as XTI)		
5	Vss	-	Ground pin		
	(N.C.)				
6	OW20	ip	Selection pin 2 for number of output bits (NOTE) See the column of OW16.	(When OW20 is low level : 18 bits or 20 bits)	(When OW20 is high level : 18 bits or 16 bits)
7	DEEM	ip	Deemphasis signal input	(When DEM is low level : Deemphasis is off)	(When DEM is high level : Deemphasis is on)
8	MUTE	ip	Mute signal input	(When MUTE is low level : Soft mute is off)	(When MUTE is high level : Soft mute is on)
9	RST	ip	System reset (Initialization)		
10	DG	o	Degitch output		
11	DOR	o	Right channel data output		
12	DOL	o	Left channel data output		
13	WCKO	o	Output word clock		
	(N.C.)				
15	BCKO	o	Output bit clock		
16	LRCI	ip	Clock of the input data sample rate (fs)		
17	BCKI	ip	Input bit clock		
18	DIN	ip	Input data		

i : Input pin ip : Input pin with pull-up resistor o : Output pin

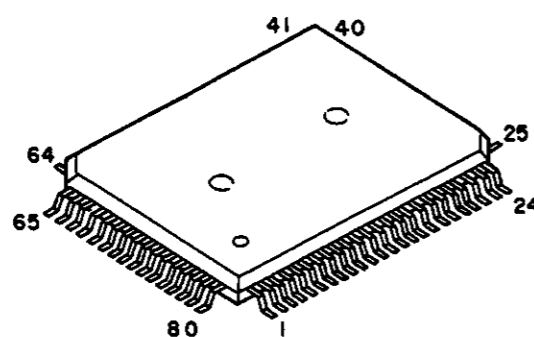

CXD2500AQFP (IC681)



● CXD2500AQFP Pin Function Table

Pin no.	Pin symbol	I/O	Pin description
1	FOK	I	Focus OK input pin. Used in SENS output and the servo auto sequencer.
2	FSW	O 2,0	Output filter switching output of the spindle motor.
3	MON	O 1,0	On-off control output of the spindle motor.
4	MDP	O 1,Z,0	Servo control of the spindle motor.
5	MDS	O 1,Z,0	Servo control of the spindle motor.
6	LOCK	O 1,0	Samples GFS at 460 Hz. When GFS is "H", H is output. L is output when there is "L", 8 times in succession.
7	NC	—	
8	VCOO	O 1,0	Oscillation circuit output for analog EFM PLL.
9	VCOI	I	Oscillation circuit output for analog EFM PLL. $f_{lock}=8.6436$ MHz.
10	TEST	I	Test pin, always grounded.
11	PDO	O 1,Z,0	For charge pump used with analog EFM PLL.
12	Vss		Ground
13	NC	—	
14	NC	—	
15	NC	—	
16	VPCO	O 1,Z,0	PLL charge pump output used for vari-pitch.
17	VCKI	O	Clock input $f_{center}$ from the external VCO for varipitch equals 16.9344 MHz.
18	FILO	O Analog	Filter output (slave = digital PLL) for master PLL.
19	FILI	I	Filter input for master PLL.
20	PCO	O 1,Z,0	Charge pump output for master PLL.
21	AVss		Analog ground.
22	CLTV	I	VCO control voltage input for master.
23	AVDD		Analog supply (+5 V)
24	RF	I	EFM signal input
25	TEST2	I	Grounded
26	TEST3	I	Grounded
27	ASYO	O 1,0	EFM full-swing output. (L = Vss, H = VDD)
28	TEST4	I	Grounded
29	NC	—	
30	PSSL	I	Switching input for the audio data output mode. Serial output with "L" and parallel output with "H".
31	WDCK	O 1,0	D/A interface for 48-bit slot. Word clock $f = 2Fs$ .
32	LRCK	O 1,0	D/A interface for 48-bit slot. LR clock $f = Fs$ .
33	VDD		Supply (+5 V)



Pin no.	Pin symbol	I/O	Pin description
34	DA16	O 1,0	DA16 (MSB) output when PSSL = 1. Serial data of the 48-bit slot when PSSL = 0. (2s' COMP, MSB first.)
35	DA15	O 1,0	DA15 output when PSSL = 1. Bit clock of the 48-bit slot when PSSL = 0.
36	DA14	O 1,0	DA14 output when PSSL = 1. Serial data of the 64-bit slot when PSSL = 0. (2s' COMP, LSB first.)
37	DA13	O 1,0	DA13 output when PSSL = 1. Bit clock of the 64-bit slot when PSSL = 0.
38	DA12	O 1,0	DA12 output when PSSL = 1. LR clock of the 64-bit slot when PSSL = 0.
39	DA11	O 1,0	DA11 output when PSSL = 1. GTOF output when PSSL = 0.
40	DA10	O 1,0	DA10 output when PSSL = 1. XUGF output when PSSL = 0.
41	DA09	O 1,0	DA09 output when PSSL = 1. XPLCK output when PSSL = 0.
42	DA08	O 1,0	DA08 output when PSSL = 1. GFS output when PSSL = 0.
43	DA07	O 1,0	DA07 output when PSSL = 1. RFCK output when PSSL = 0.
44	DA06	O 1,0	DA06 output when PSSL = 1. C2P0 output when PSSL = 0.
45	DA05	O 1,0	DA05 output when PSSL = 1. XRAOF output when PSSL = 0.
46	DA04	O 1,0	DA04 output when PSSL = 1. MNT3 output when PSSL = 0.
47	DA03	O 1,0	DA03 output when PSSL = 1. MNT2 output when PSSL = 0.
48	DA02	O 1,0	DA02 output when PSSL = 1. MNT1 output when PSSL = 0.
49	DA01	O 1,0	DA01 output when PSSL = 1. MNT0 output when PSSL = 0.
50	APTR	O 1,0	Control output for aperture correction. "H" with Rch.
51	APTL	O 1,0	Control output for aperture correction. "H" with Lch.
52	Vss		Ground
53	XTAI	I	16.9344 MHz x'tal oscillator circuit input. Or 33.8688 MHz input.
54	XTAO	O 1,0	16.9344 MHz x'tal oscillator circuit input.
55	XTSL	I	X'tal selection input pin. "L" when the x'tal is 16.9344 MHz and "H" when the x'tal is 33.8688 MHz.
56	FSTT	O 1,0	2/3 frequency division output of pins 53 and 54. Does not change with vari-pitch.
57	C4M	O 1,0	4.2336 MHz output. Changes simultaneously when varypitch is applied.
58	C16M	O 1,0	16.9344 MHz output. Changes simultaneously when varypitch is applied.
59	MD2	I	Digital-Out on/off control. H when on and L when off.
60	DOU	O 1,0	Digital-out output pin.
61	EMPH	O 1,0	When the playback disc has emphasis, "H" is output. "L" is output when there is no emphasis.
62	WFCK	O 1,0	WFCK (Write Frame Clock) output.
63	SCOR	O 1,0	"H" output when either sub code sync S0 or S1 is detected.
64	SBSO	O 1,0	Sub P through W serial output.
65	EXCK	I	Clock input for SBSO read-out use.
66	SQSO	O 1,0	SubQ 80 bit and PCM peak level data 16-bit output.
67	SQCK	I	Clock input for SQSO read-out use.
68	MUTE	I	Mute L is cancelled with H.
69	SENS	— 1,Z,0	SENS output. Output to CPU.
70	XRST	I	System set. Reset with "L".
71	DATA	I	Serial data input from CPU.
72	XLAT	I	Latch input from CPU. Latches serial data on the fall.
73	VDD		Supply (+5 V)
74	CLOCK	I	Serial data transfer clock input from CPU.
75	SEIN	I	Sense input from SSP.
76	CNIN	O	Count signal input of number of track jumps.
77	DATO	O 1,0	Serial data output to SSP.
78	XLTO	O 1,0	Serial data latch output to SSP. Latches on the fall.
79	CLKO	O 1,0	Serial data transfer clock output to SSP.
80	MIRR	I	Mirror signal input. Used in jumps of 128 tracks or more with an auto sequencer.

CD PLAYER SECTION


PCM61P-L (IC203, 204)

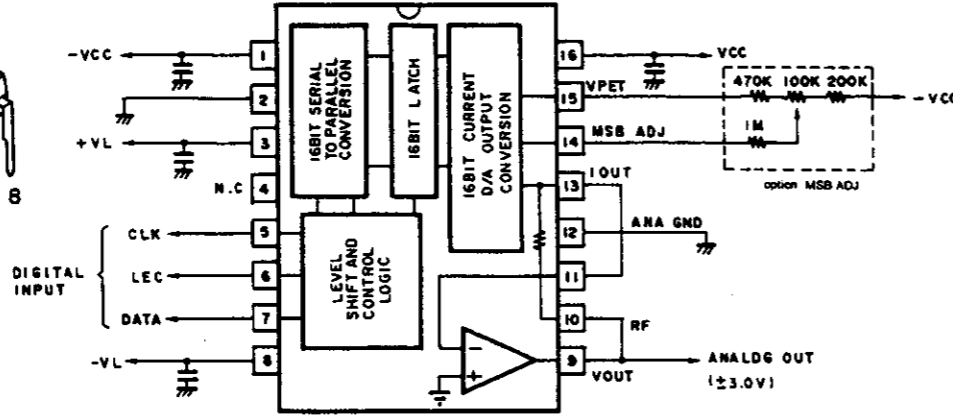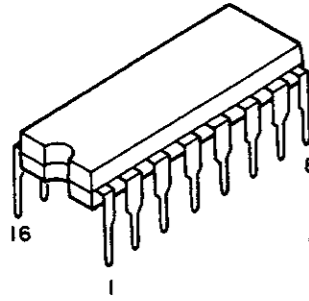


BA6296FP (IC502)

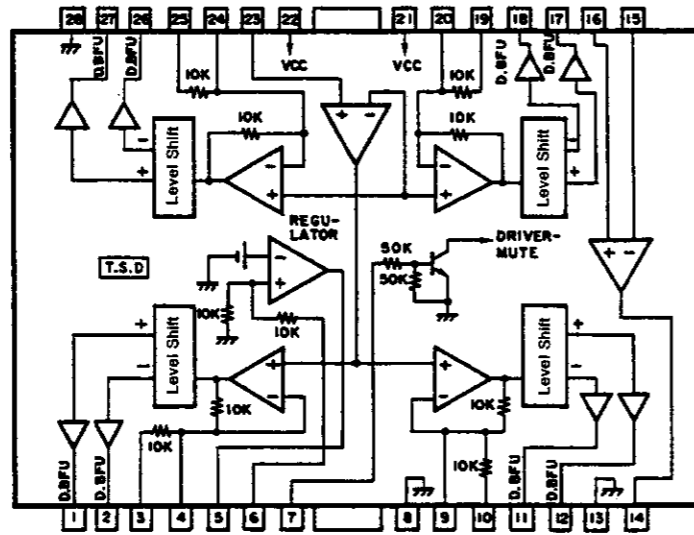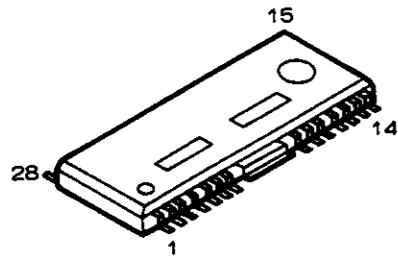

M5290P (IC503)

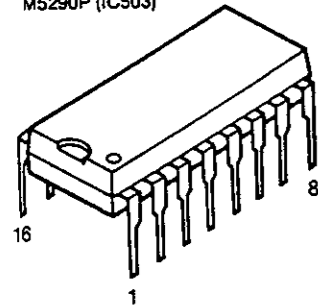


BLOCK DIAGRAM

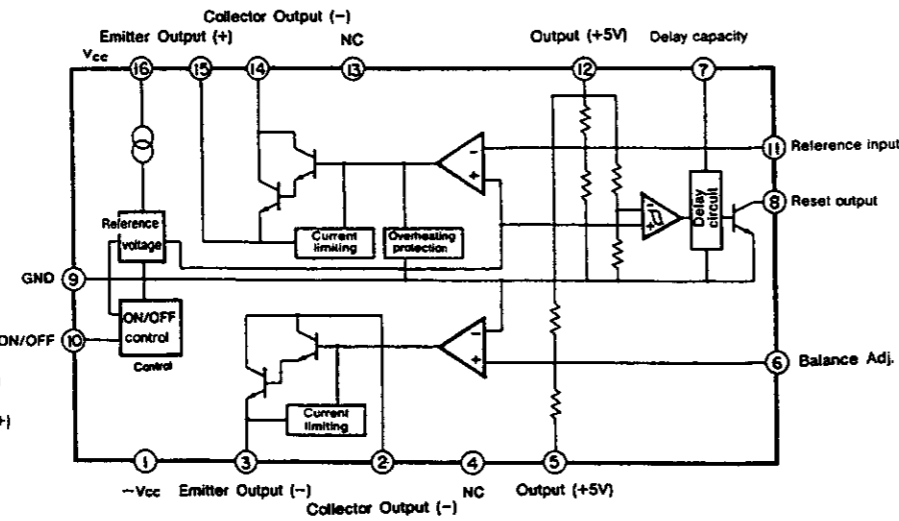


● IC PROTECTOR ICP-N15 (IC501, 502)




LC7582 (IC901)

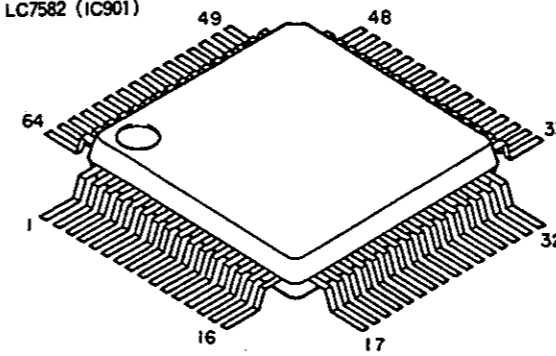


Pin Configuration

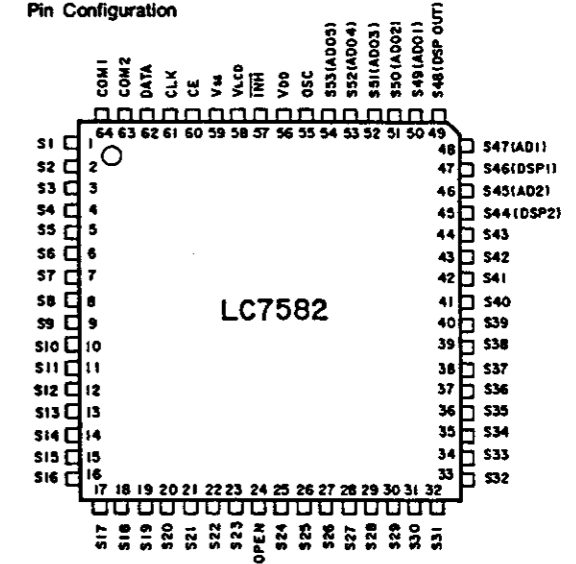

Step Voltage Difference  
Input voltage of S45 (AD2) and S47 (AD1)

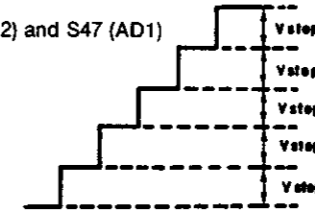


Block Diagram

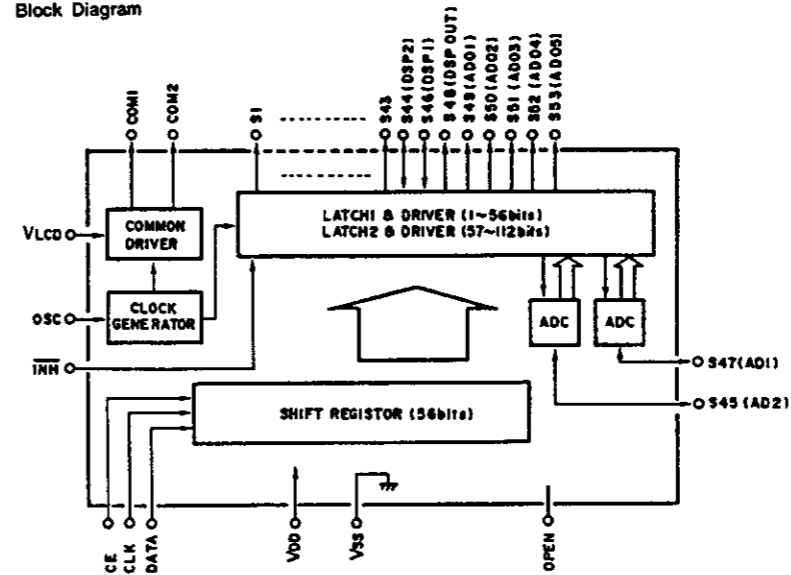



Pin Description

- S1~S13 : Segment output pins
- S46 (DSP1), S44 (DSP2) : Segment output or DSP input pins
- S47 (AD1), S45 (AD2) : Segment output or AD input pins
- S48 (DSP OUT) : Segment output or DSP output pins
- S49~S53 (AD01~5) : Segment output or AD output pins
- COM1,2 : Common output pins (At 1:1 duty, only COM1 is used and COM2 is open)
- VLCD : Pin for LCD bias voltage setting
- OSC : Oscillation pin
- CE, CLK, DATA : Input pins for serial data transfer
- VCC, VDD : Supply pins
- INH : Display-off input pin (Valid only with the output driver. As a result, the transfer of serial data is possible while the display is off.)
- OPEN : No connection

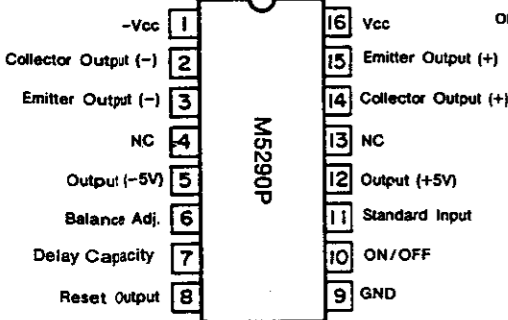

CD PLAYER SECTION

μ PD75517GF (IC682)

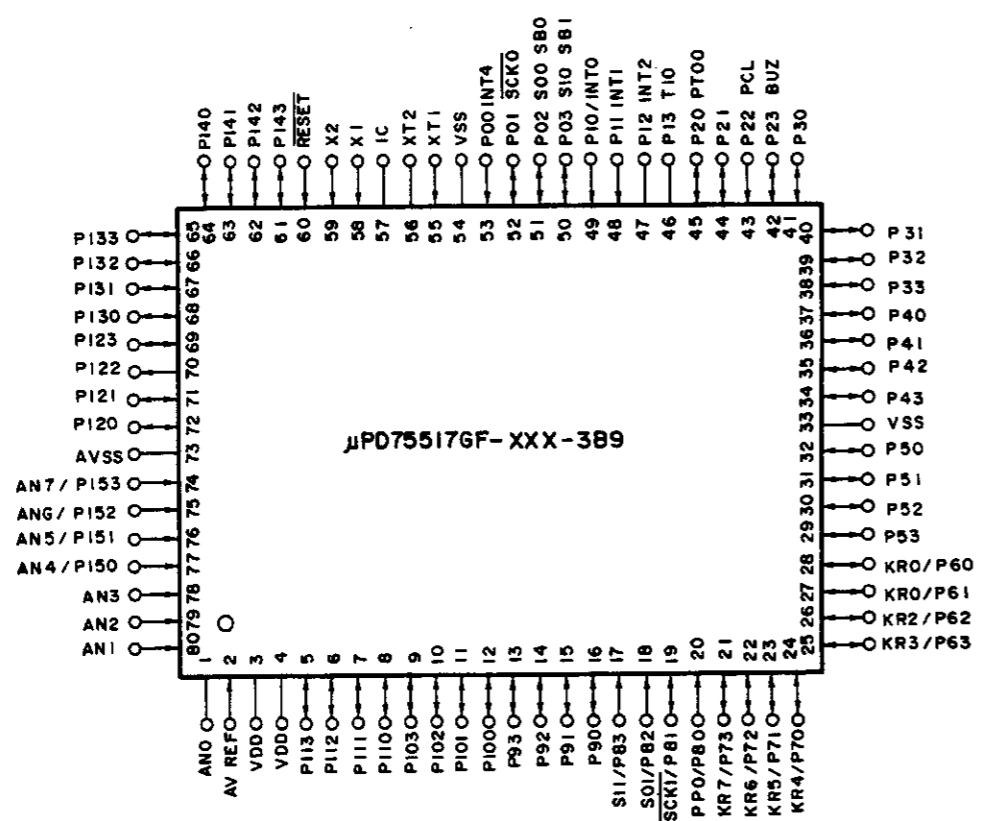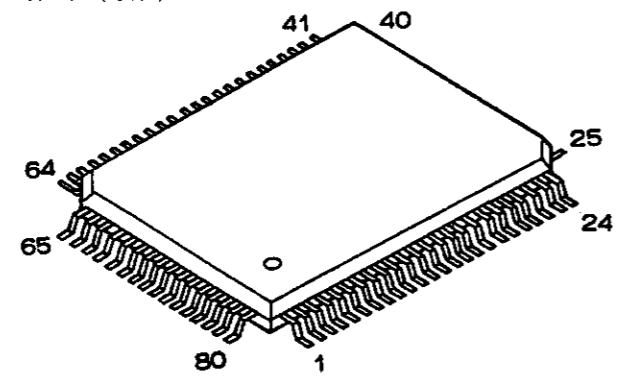


● Pin Description

No.	Board Name	Function Name	Function	No.	Board Name	Function Name	Function
1	AN0	NC	Ground (In)	42	P23/BUZ	PSVCDATA OUT	Data output for the servo control signal and D and F.
2	AVref	NC	Ground (In)	43	P22/PCL	PSVCXLT OUT	Servo control signal latch output
3	VDD		5 V	44	P21	PSVCCLK	Clock output for the servo control signal and D and F.
4	VDD		5 V	45	P20/PT00	PLASER OUT	Laser on/off control output
5	P113	NC	Open (Out)	46	P13/T10	PSENSE IN	Servo condition detection signal input
6	P112	PPLYON	PLAY indication	47	P12/INT2	PGFS IN	Rotation sync signal input from DSP
7	P111	PAUTO	AUTO. OFF indication	48	P11/INT1	PSCOR IN	Sub code sync signal input
8	P110	PDPLAY	PLAY indication	49	P10/INT0	SERIAL SIG IN	Denon bus input
9	P103	XRST OUT	Reset signal for DSP	50	P03/SI0	PSUBQ IN	Sub code data input
10	P102	POWER OFF OUT	Output for power on/off control	51	P02/S00	NC	Open (Out)
11	P101	DIGITAL OFF OUT	Output for digital on/off control	52	P01/SCK0	PSQCK OUT	Clock output for sub code reading
12	P100	STANDBY OUT	Output for power on/off control	53	P00/INT4	50/60 IN	50 Hz/60 Hz input
13	P93	PINITIAL	Test pin (Open)	54	VSS		Ground
14	P92	PEDIT	Test pin (Open)	55	XT1	NC	Ground
15	P91	PSEARCH	Test pin (Open)	56	XT2	NC	Open
16	P90	PDOUT	Test pin (Open)	57	IC	NC	Ground
17	P83/S11	NC	Ground (In)	58	X1		4 MHz Cell lock
18	P82/S01	PLCDDATA	Data for the LCD	59	X2		4 MHz Cell lock
19	P81/SCK1	PLCCLK	Clock for the LCD	60	RESET		Reset signal input
20	P80/PPO	NC	Ground (In)	61	P143	PFOK IN	Focus OK signal input
21	P73/KR7	KS3 OUT	Key scan output	62	P142	PSWOP IN	Loader open position detection
22	P72/KR6	KS2 OUT	Key scan output	63	P141	PSWCL IN	Loader close position detection
23	P71/KR5	KS1 OUT	Key scan output	64	P140	PSWPMD IN	Pickup inner track position detection
24	P70/KR4	KS0 OUT	Key scan output	65	P133	PMVCL OUT	Loader drive signal
25	P63/KR3	KS7 OUT	Key scan output	66	P132	PMVOP OUT	Loader drive signal
26	P62/KR2	KS6 OUT	Key scan output	67	P131	D. MUTE OUT	Muting output for the LSI
27	P61/KR1	KS5 OUT	Key scan output	68	P130	SERIAL SIG OUT	Denon bus output
28	P60/KR0	KS4 OUT	Key scan output	69	P123	PDFLATCH OUT	Latch output for D and F
29	P53	KS8 OUT	Key scan output	70	P122	A. MUTE OUT	Audio muting output
30	P52	KS9 OUT	Key scan output	71	P121	PEMPHA OUT	Signal output with emphasis control
31	P51	G1	Open (Out)	72	P120	PDIRC OUT	Servo control signal output
32	P50	G2	Open (Out)	73	AVSS	NC	Ground
33	VSS		Ground (In)	74	AN7/P153	KR0 IN	Key return input
34	P43	CD ON/OFF IN	Input for digital on/off control	75	AN6/P152	KR1 IN	Key return input
35	P42	A.P. SEL IN	Selects the auto power on/off function	76	AN5/P151	KR2 IN	Key return input
36	P41	NC	Ground (In)	77	AN4/P150	KR3 IN	Key return input
37	P40	NC	Ground (In)	78	AN3	NC	Ground (In)
38	P33	PLCDOFF OUT	INH for the LCD	79	AN2	NC	Ground (In)
39	P32	PLCDCE OUT	CE for the LCD	80	AN1	NC	Ground (In)
40	P31	G3	Open (Out)				
41	P30	G4	Open (Out)				


CD PLAYER SECTION

● Transistors


2SA1015 (GR)

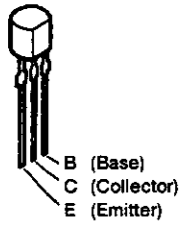

2SB562 (C)  
2SD468 (C)

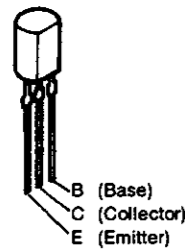


2SB1274  
2SD1913

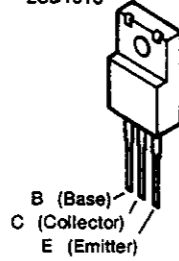



PNP Type

2SC2458 (Y/GR)

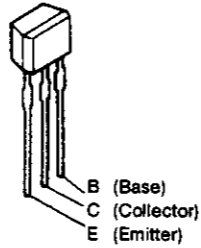


NPN Type

DTA114ES PNP Type  
DTC114ES NPN Type  
DTC144ES NPN Type

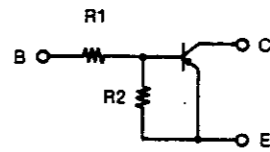
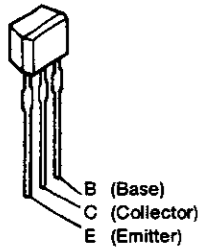


	R1	R2
DTA114ES	10k ohm	10k ohm

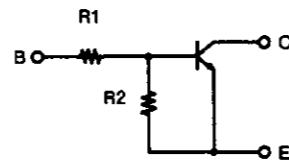

	R1	R2
DTC114ES	10k ohm	10k ohm
DTC144ES	47k ohm	47k ohm

DTC323TK

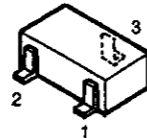

1: GND / Emitter  
2: In / Base  
3: Out / Collector


● Diodes

1SS270  
1SS270A



1SS270 : Light Blue  
1SS270A : Navy Blue

1SR35-200A

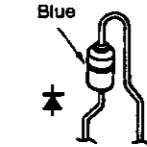


HZS6A-1  
HZS6B-1




● LED ASS'Y

SLF-351D  
Part No. 3939470009 (D581)

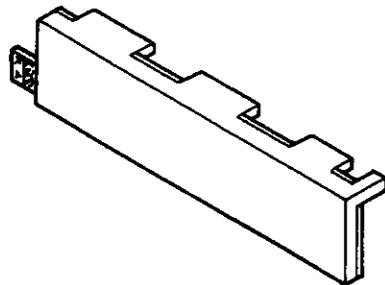


● Connection

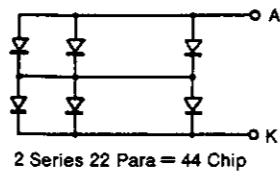

2 Series 22 Para = 44 Chip

● LCD ASS'Y (8233JP)

Part No. 3934141003

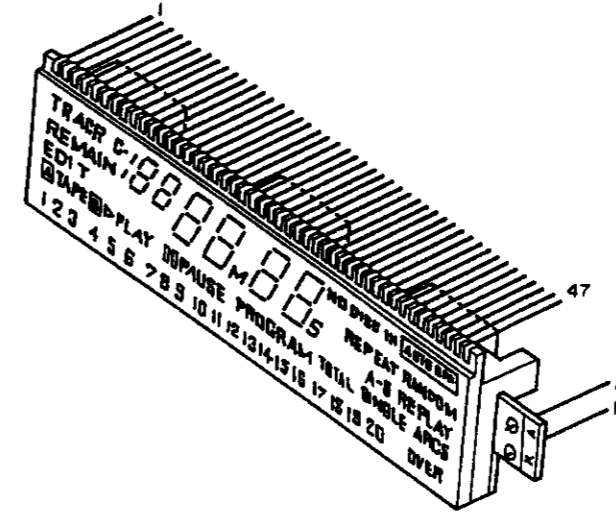


TRACK C- 18888 M 88 S NO DISC IN **AUTO OFF**  
REMAIN 18888 M 88 S REPEAT RANDOM  
EDIT A-B REPLAY  
**A** TAPE **B** ▷PLAY **II** PAUSE PROGRAM TOTAL SINGLE ARCS  
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 OVER

NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
COM1	-	COM	6	PAUSE	4	B	2	TRACK	A	C-	1f	1a	1b	2d	2a	2g	3d	3e	3a	3b	4e	4f	4b	M
COM2	COM	-	5	PLAY	3	TAPE	1	REMAIN	EDIT	1d	1e	1g	1c	2e	2f	2b	2c	3f	3g	3c	4d	4a	4g	4c
NO.	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	
COM1	TOTAL	5e	5f	5a	5c	6f	6a	6b	17	B	DISC	IN	SINGLE	ARCS	RANDOM	<b>AUTO</b>	20	16	14	12	10	8	7b	
COM2	PROGRAM	5d	5g	5b	6d	6e	6g	6c	S	A-	NO	REPEAT	18	OVER	REPLAY	OFF	19	15	13	11	9	7	7c	

MICROPROCESSOR PERIPHERAL WIRING DIAGRAM


CD PLAYER SECTION

1 2 3 4 5 6 7 8

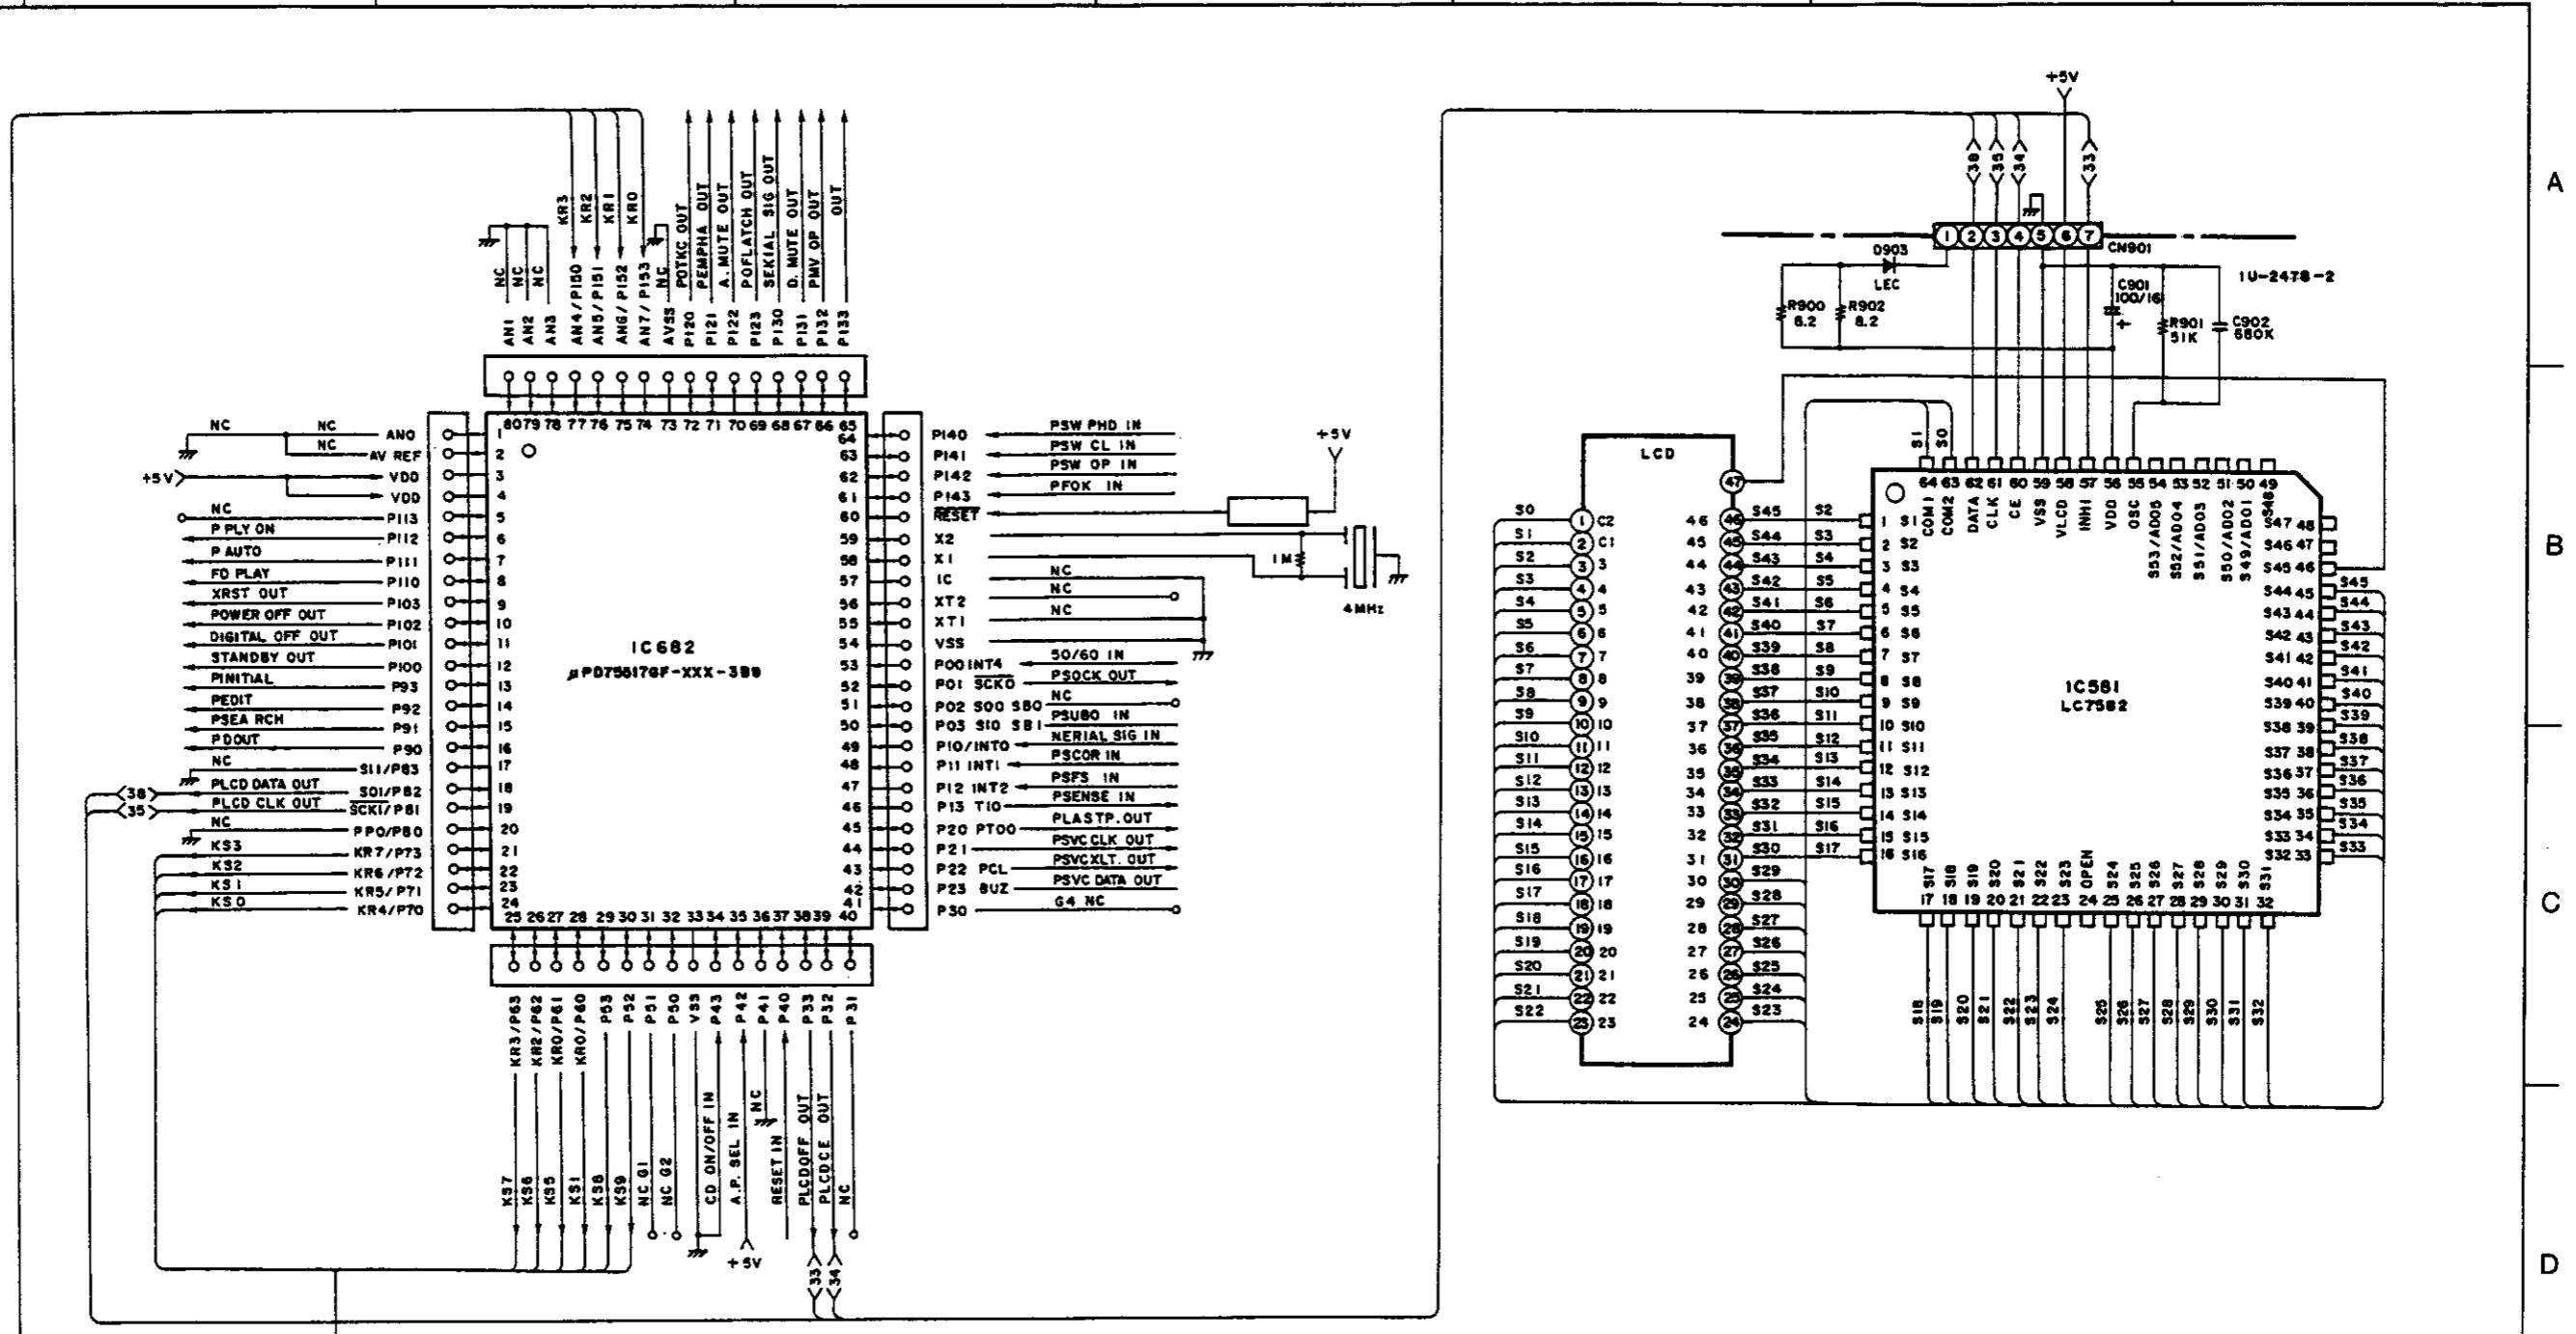

	KS0	KS1	KS2	KS3	KS4	KS5	KS6	KS7	KS8	KS9
KR0	KP0	OPTU CICE	FDNT	FANOM	TIME PAUSE	9	5	1	PLAY	
KR1	KP1	STOP	TAPE SIDE A/B	TIME/ TAPE SIDE	DIRECT	CALL	10	6	2	DWT ON/OFF
KR2	KP2	PAUSE	RTMAT	PRGA	MCK	+10	7	3	WSEL	
KR3	KP3	PLAY	STAND BY	CALL	LINK		8	4		


KEY, SWITCH MATRIX

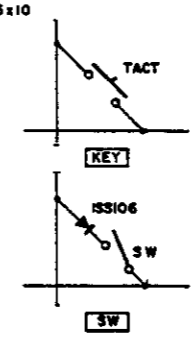

A  
B  
C  
D  
E


CD PLAYER SECTION

WIRING DIAGRAM

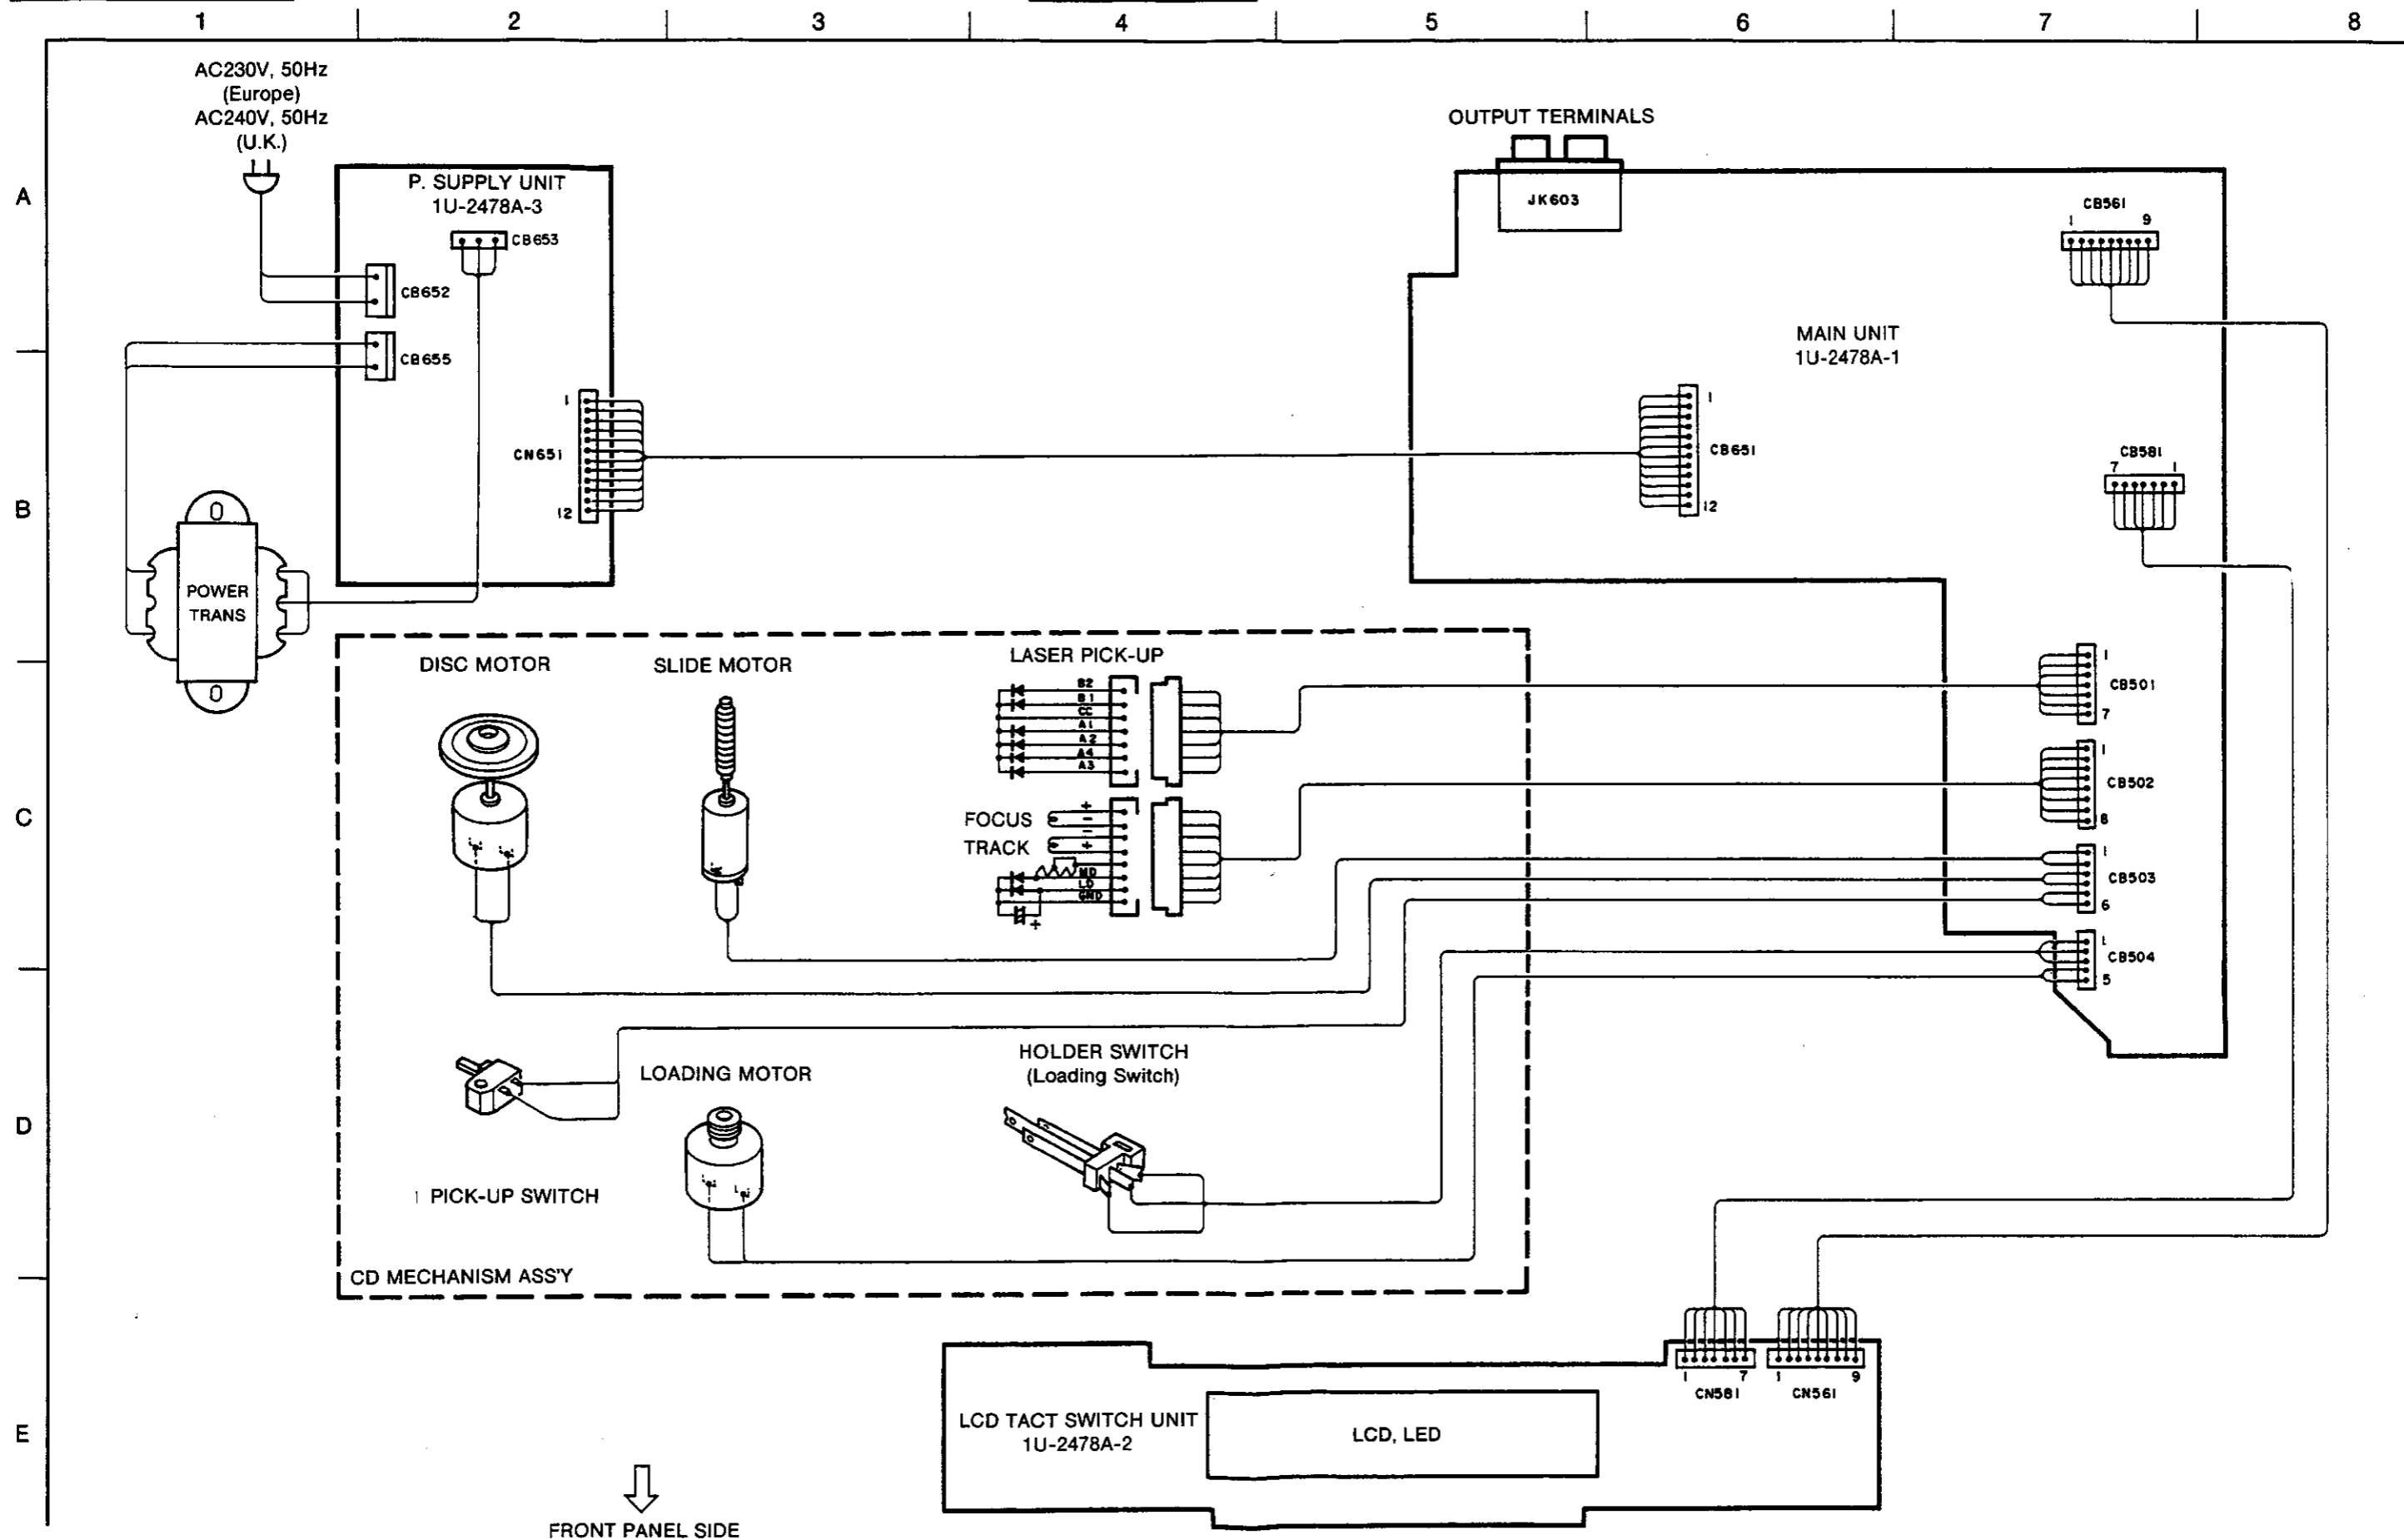

↓  
FRONT PANEL SIDE



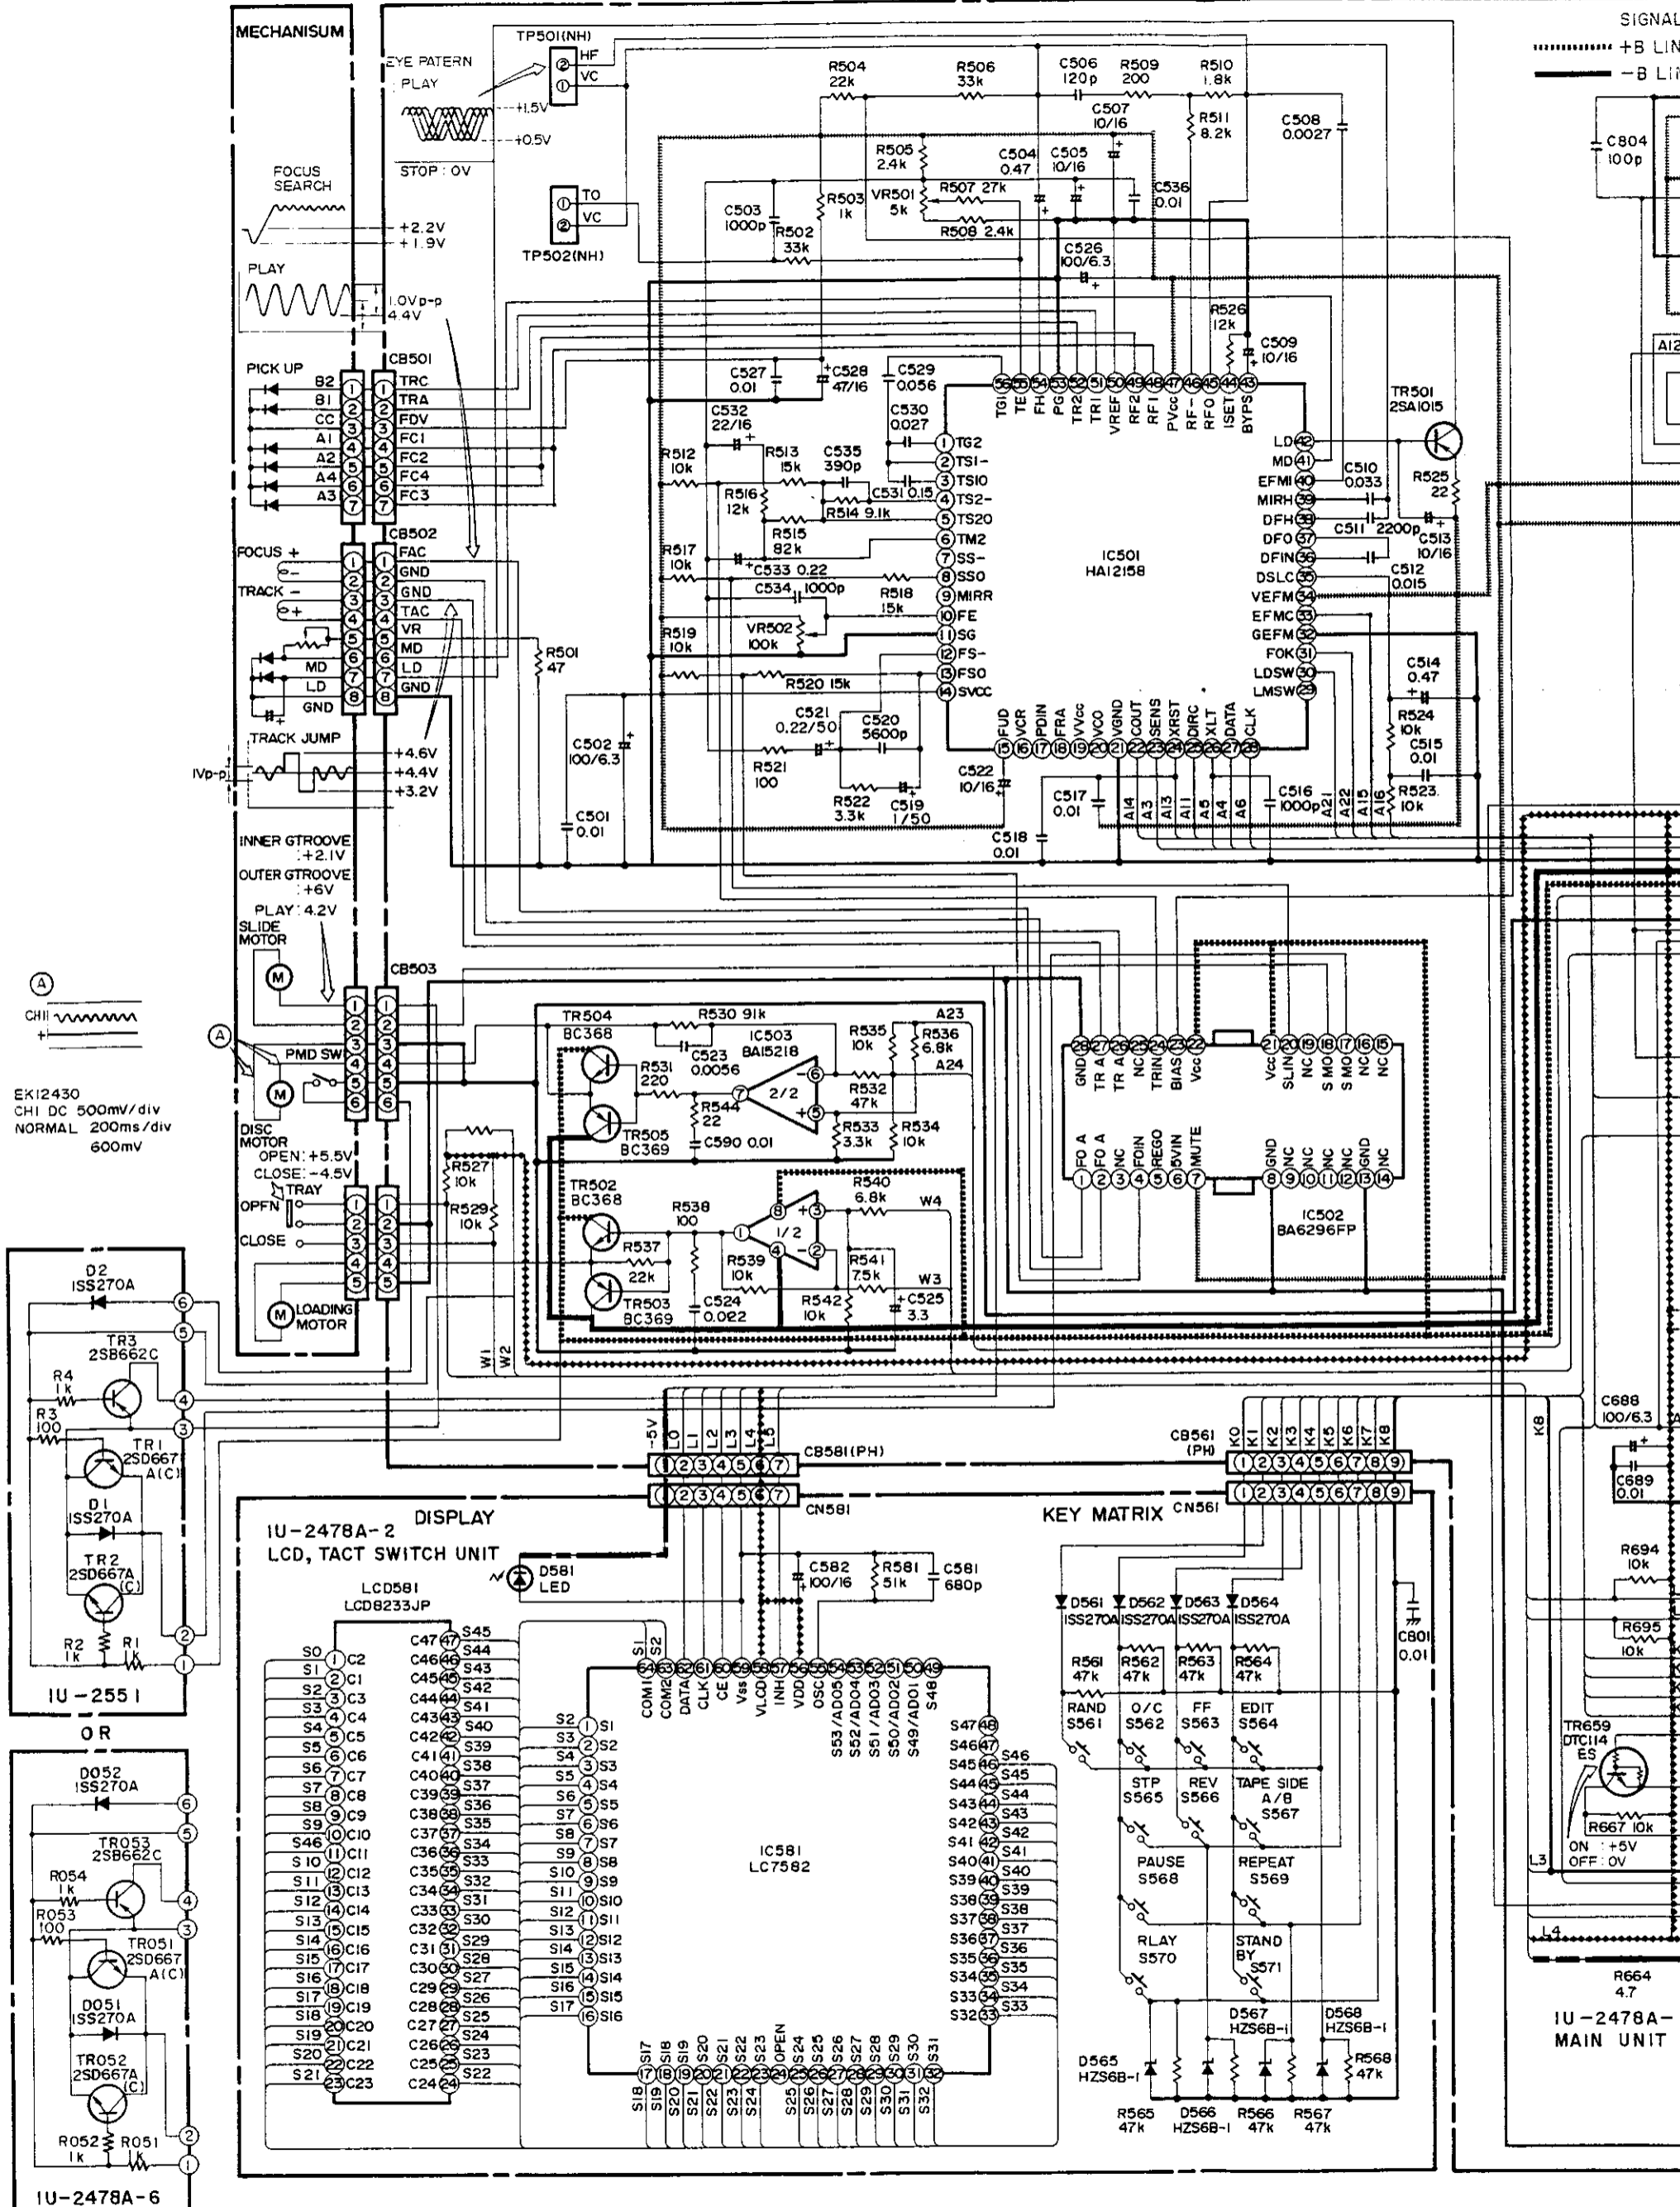

EK12430  
CHI DC 500mV/div  
NORMAL 200ms/div  
600mV

IU-255 I

OR

IU-2478A-6

IU-2478A-2  
LCD, TACT SWITCH UNIT

KEY MATRIX


IU-2478A-1  
MAIN UNIT

**WARNING:**  
Parts marked with this symbol have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

SCHEMATIC DIAGRAM

CD PLAYER SECTION

6 7 8 9 10 11

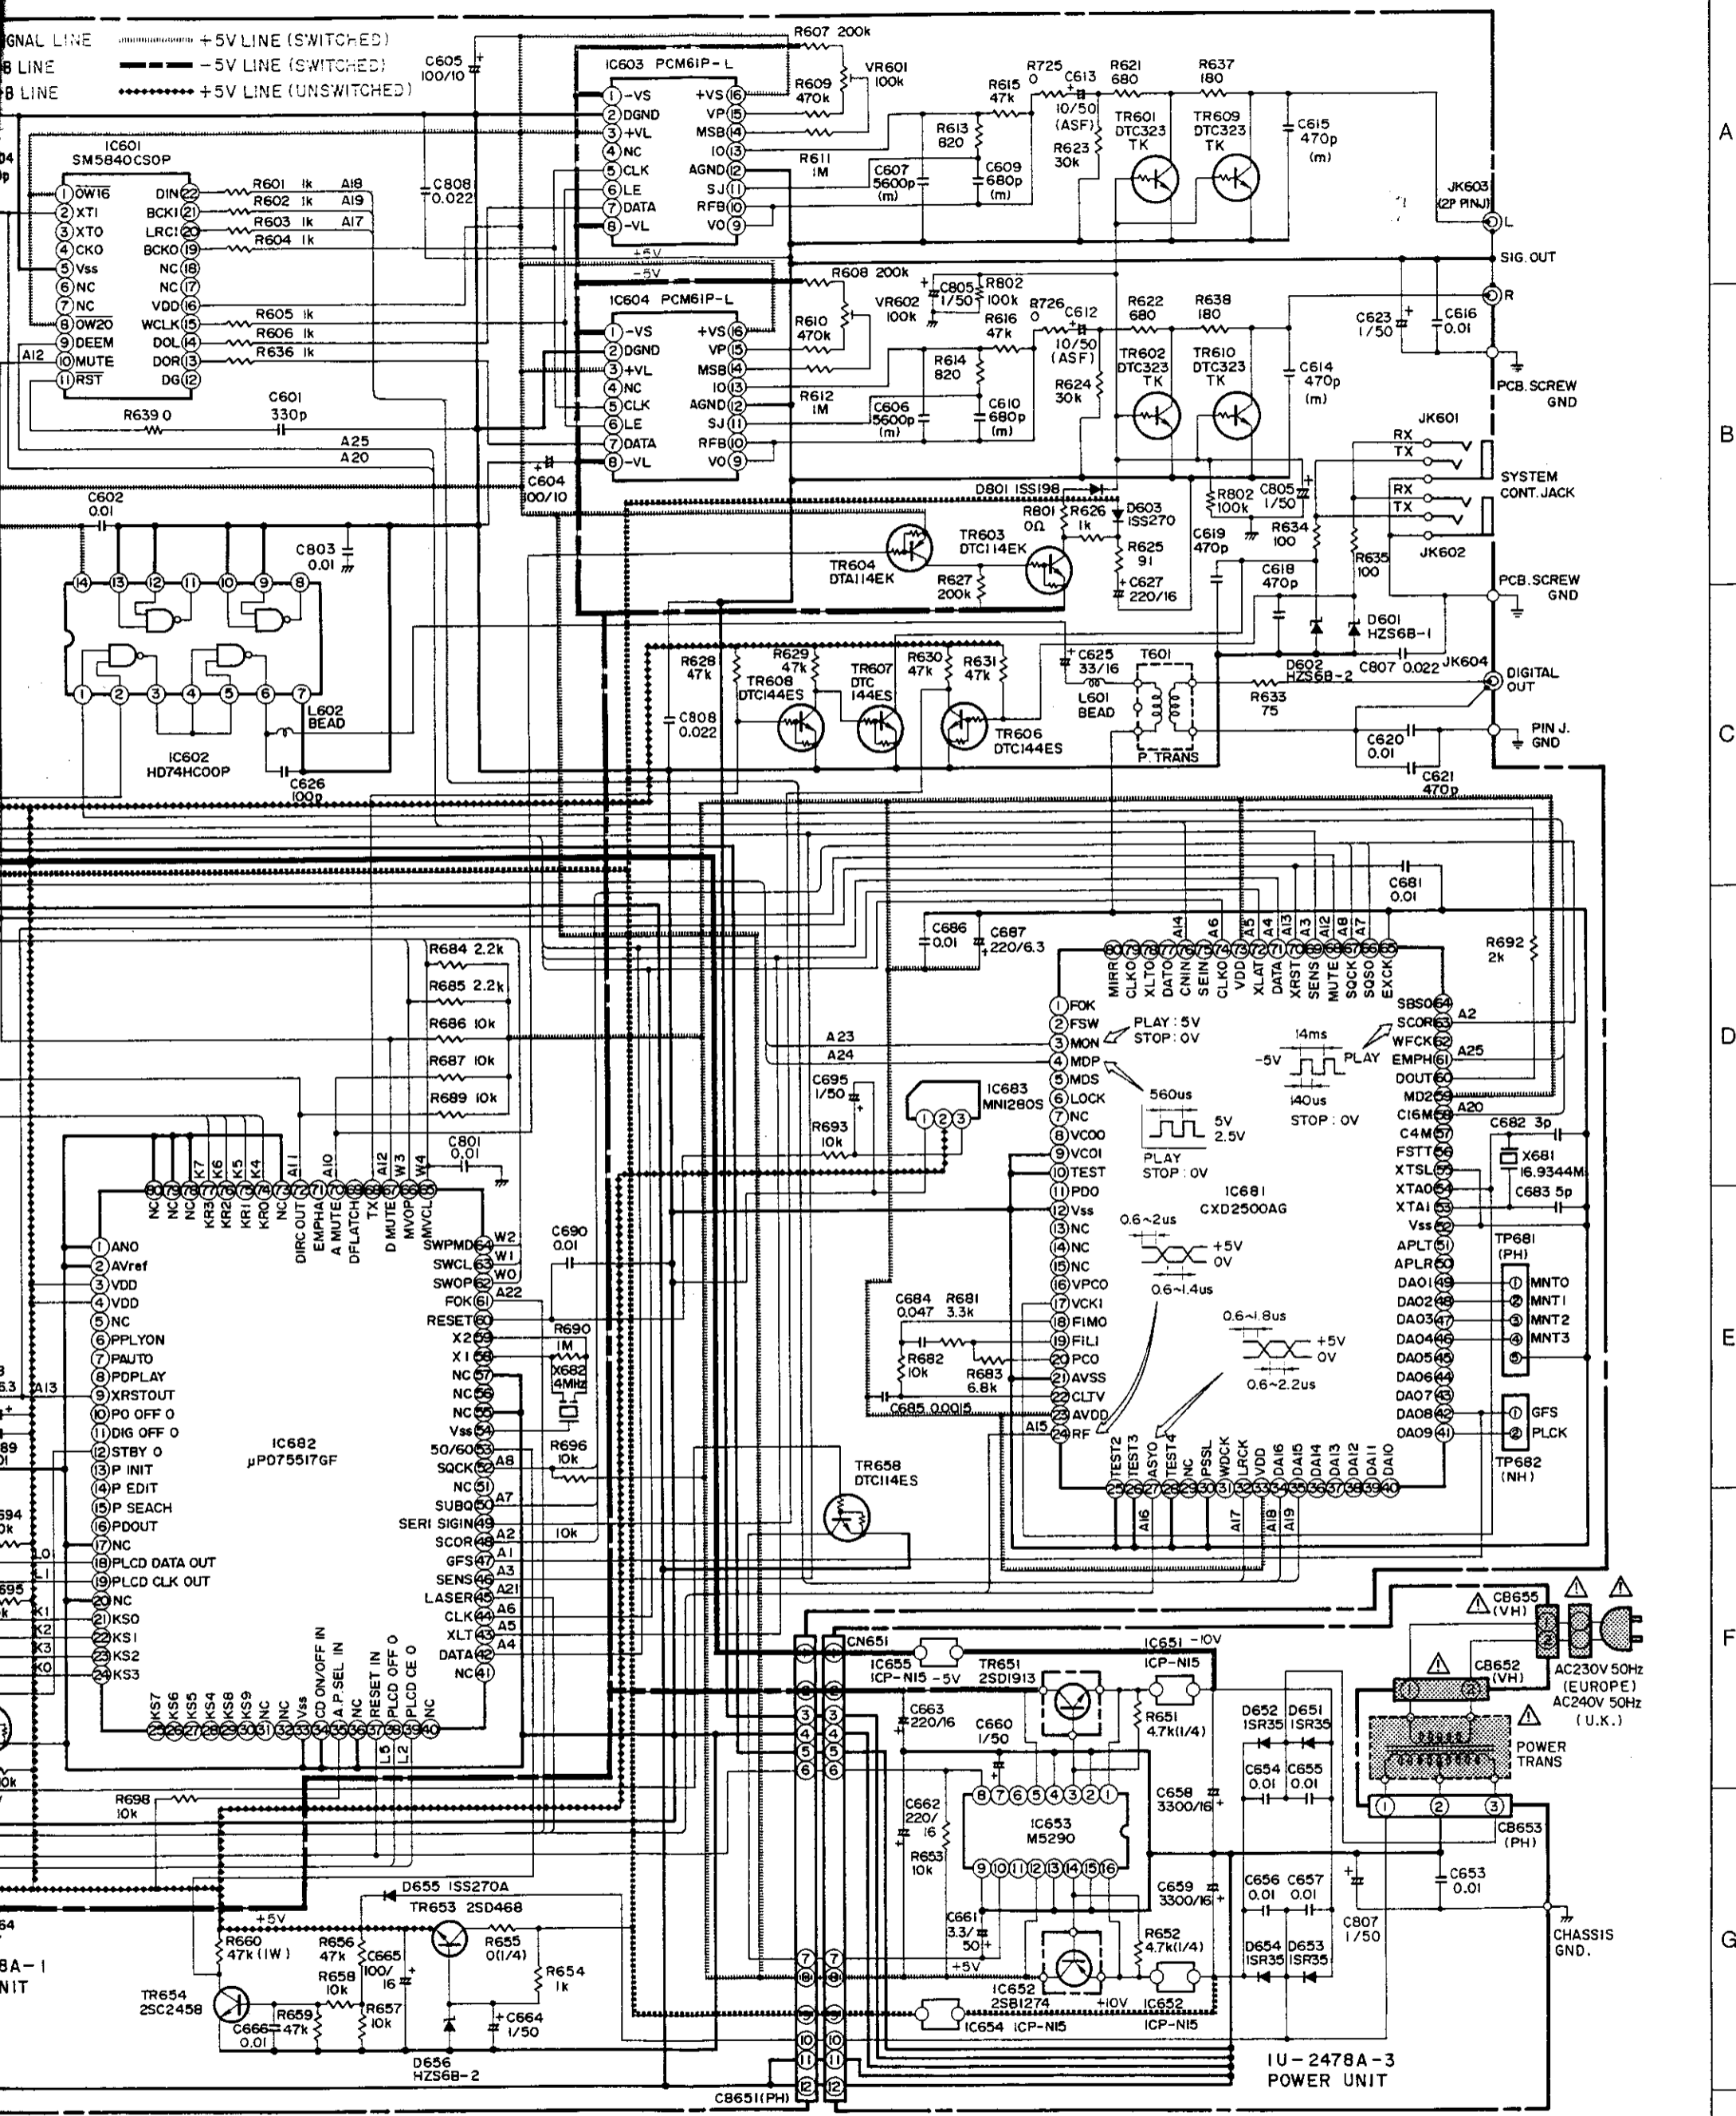

**CAUTION:**  
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.


**WARNING**  
 DO NOT return the unit to the customer until the problem is located and corrected.

**NOTES**  
 ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM  
 ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD  
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

A B C D E F G H

EXPLODED VIEW OF PARTS LIST

Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	1U- 2478 A	P.W.Board Unit Assy		1S
1-1	—	Main Unit		(1)
1-2	—	LCD.Tact Switch Unit		(1)
1-3	—	Power Unit		(1)
1-4	—	Audio Unit		(1)
2	393 4141 003	LCD (8233JP)		1
3	449 0057 009	LCD Holder		1
4	—	—		—
5	204 8413 000	2 P Pin Jack(C-GND)		1
6	204 8366 005	1 P Pin Jack		1
7	204 8421 005	Mini Jack		2
8	411 1184 332	Main Chassis		1
9	104 0237 201	Foot Assy		4
10	105 1044 221	Rear Panel	Europe model	1
10	105 1044 234	Rear Panel	U.K. model	1
11	412 2814 028	Card Spacer(L=10)		1
12	412 3548 005	P.W.B Catcher		2
13	449 0073 119	Mech. Holder		3
14	337 0017 018	CD Mech. Unit		1
15	144 2212 219	Front Panel		1
16	146 1402 217	Inner Panel Assy		1
17	146 1420 121	Knob Guide(Round)	4 Gang	1
18	146 1420 134	Knob Guide(Round)	2 Gang	1
19	113 1547 376	Push Knob(Play)	4 Gang	1
20	113 1549 044	Push Knob(Round)	4 Gang	1
21	113 1549 057	Push Knob(Round)	2 Gang	1
22	113 1460 013	Power Knob		1
23	146 1401 111	Loader Panel Assy		1
24	146 1411 211	Side Plate		2
25	102 0519 211	Top Cover		1
26	122 0183 007	Spacer	100X10X10.5	1
27	412 1965 004	P.C Support	L=24	1
28	409 0052 019	Holder(A)	L=33.6	1
29	412 3485 016	P.W.Bracket		2
30	513 9316 000	Rating Sheet	Europe model	1
30	513 9316 026	Rating Sheet	U.K. model	1
31	412 9337 003	Trans Bracket		1
32	412 9337 003	Trans Bracket		1
33	412 9337 003	Trans Bracket		1
34	513 2066 001	:Laser Caution		1
35	5002 000	Power Trans	Europe model	1
35	9851 005	Power Trans	U.K. model	1
36	445 8004 007	Wire Clamper		1
37	—	—		—
38	—	—		—
39	513 0985 003	Inst. Label		1
40	204 2307 028	7 P PH-PH Conn. Cord	CC501	1
41	204 2306 032	8 P PH-PH Conn. Cord	CC502	1
<b>SCREWS</b>				
71	473 7002 018	Tapping Screw(S)3X8		11
72	473 7015 005	Tapping Screw(S)3X6	Black	19
73	473 7508 046	Tapping Screw(P)3X6		2
74	477 0064 107	Fixing Screw		2
75	473 7508 017	Tapping Screw(P)3X10	Black	3
76	473 7500 028	F.Tapping Screw(P)3X8		2
77	473 7505 007	Tapping Screw(P)2.6X8		9
78	473 7508 046	Tapping Screw(P)3X16		2
79	473 7004 003	Tapping Screw(S)4X8		2
80	—	—		—
<b>PACKING &amp; ACCESSORIES (Not included EXPLODED VIEW)</b>				
101	505 0241 005	Cabinet Cover		1
102	503 1062 106	:Cushion		1
103	503 1061 000	:Top Cushion		1
104	501 1657 007	:Carton Case		1
105	—	—		—

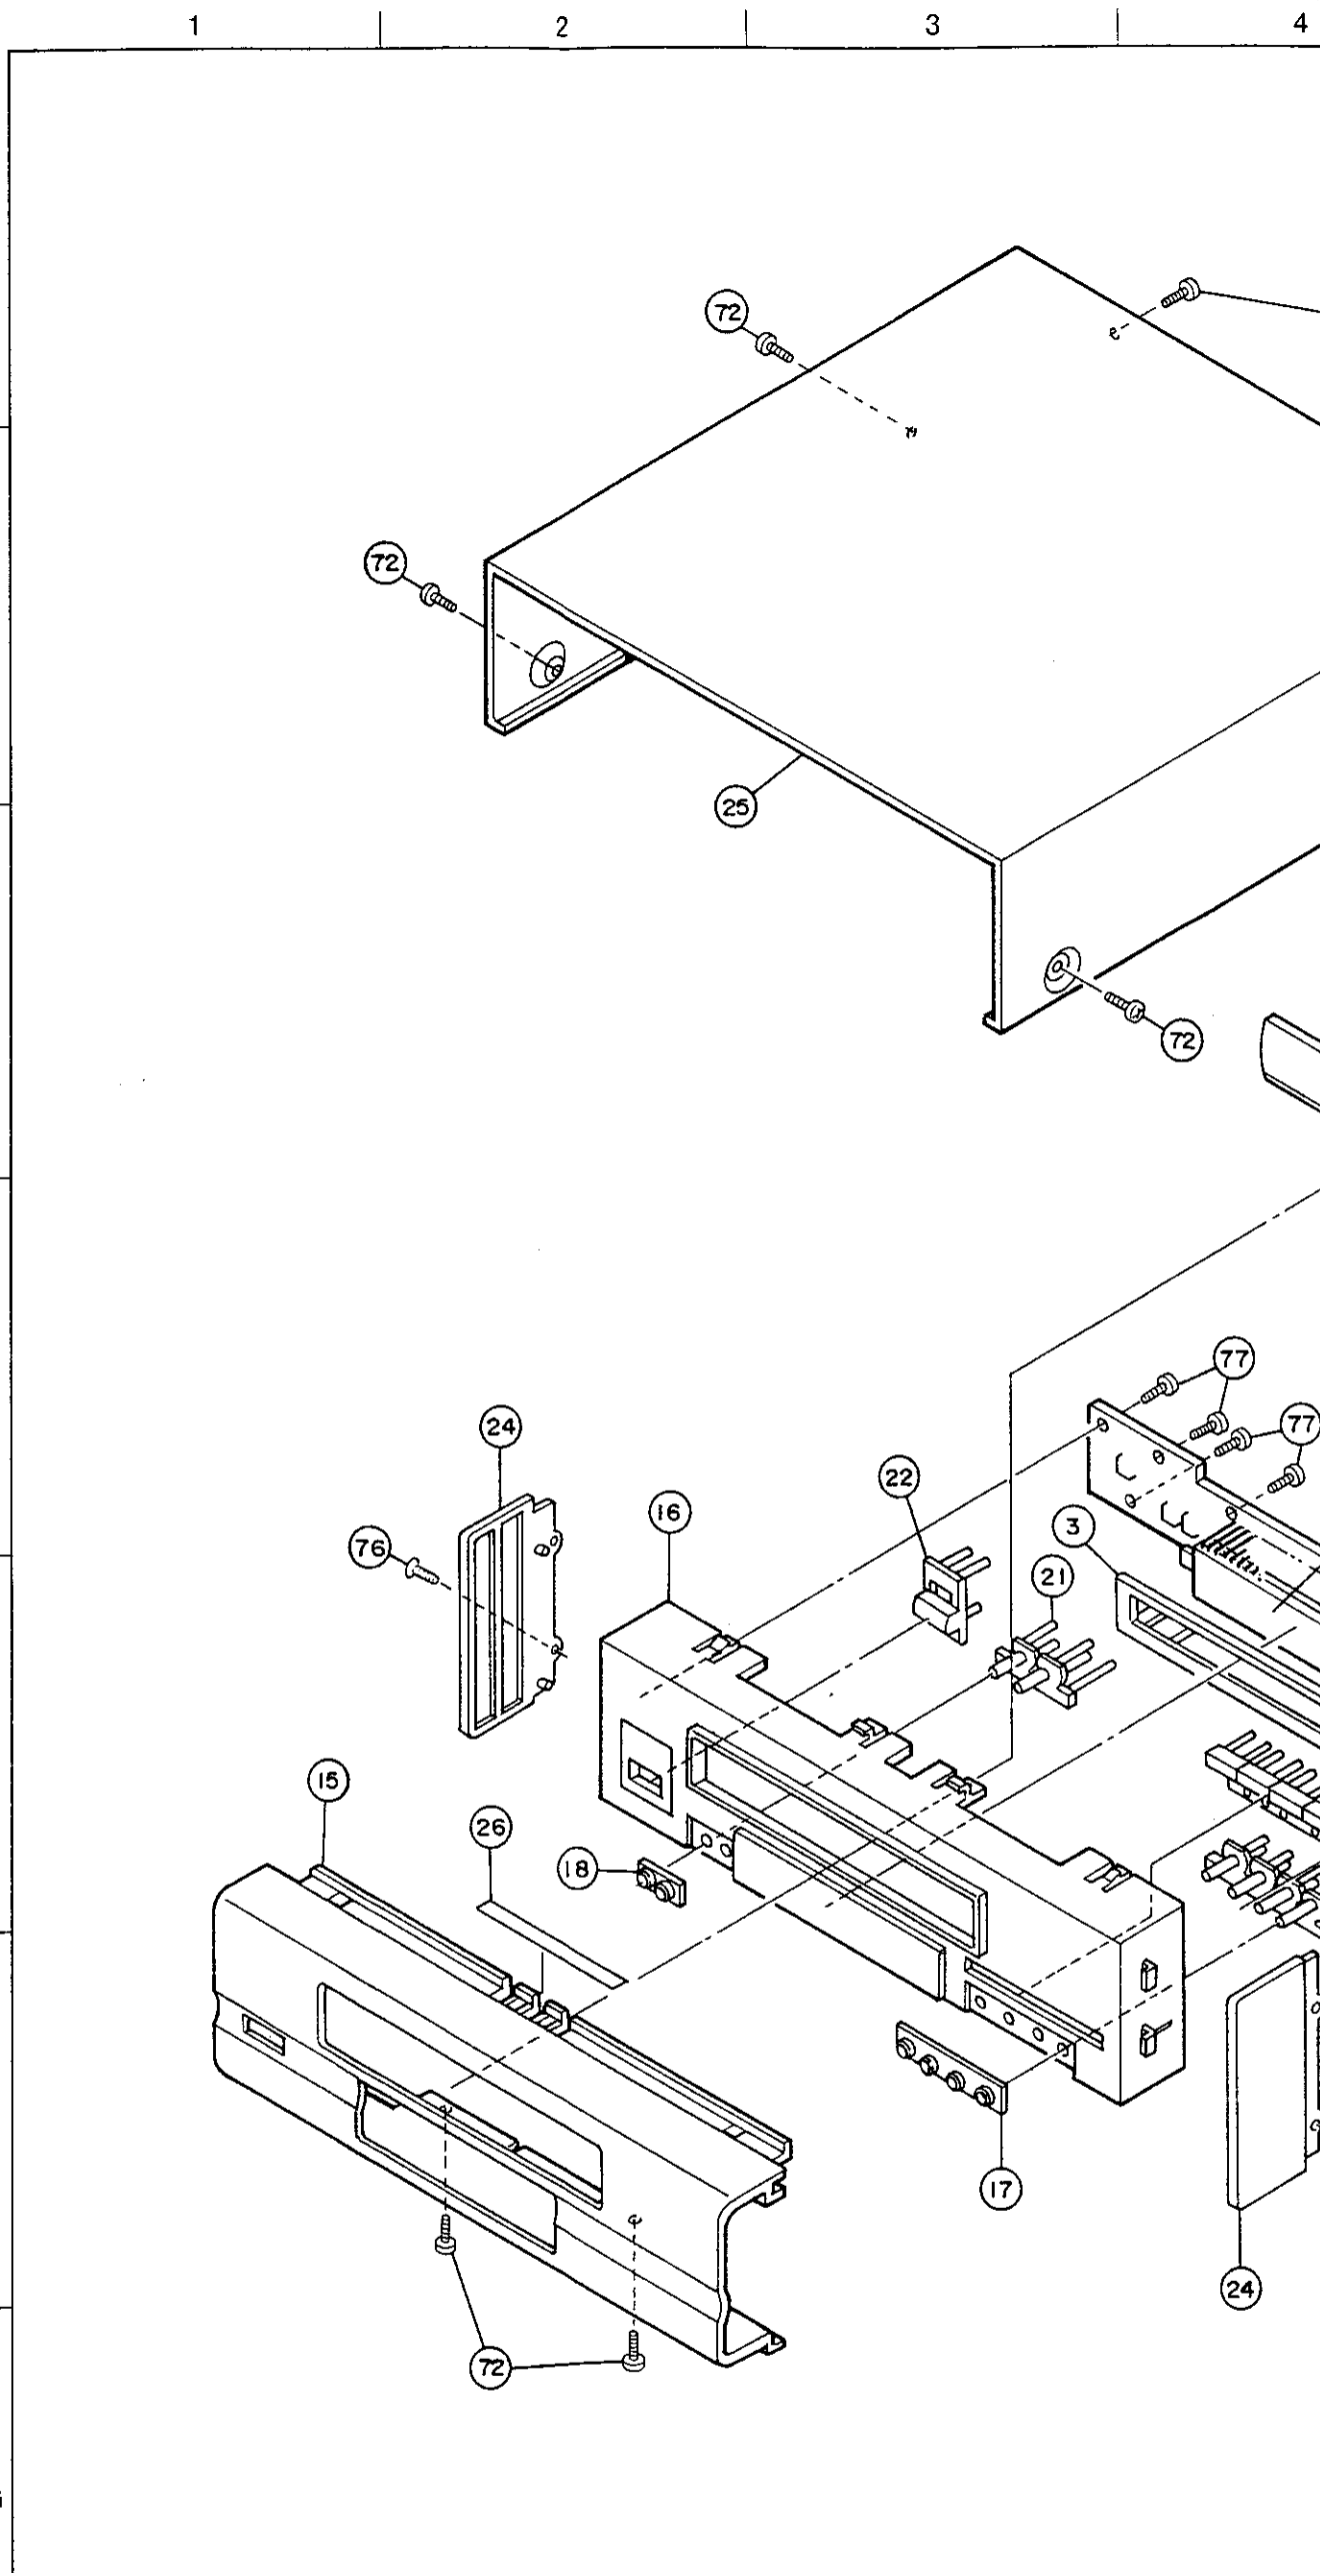

NOTE ON PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

WARNING:

Parts marked with this symbol  $\Delta$  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

EXPLODED VIEW

4


5

6

7

8


9

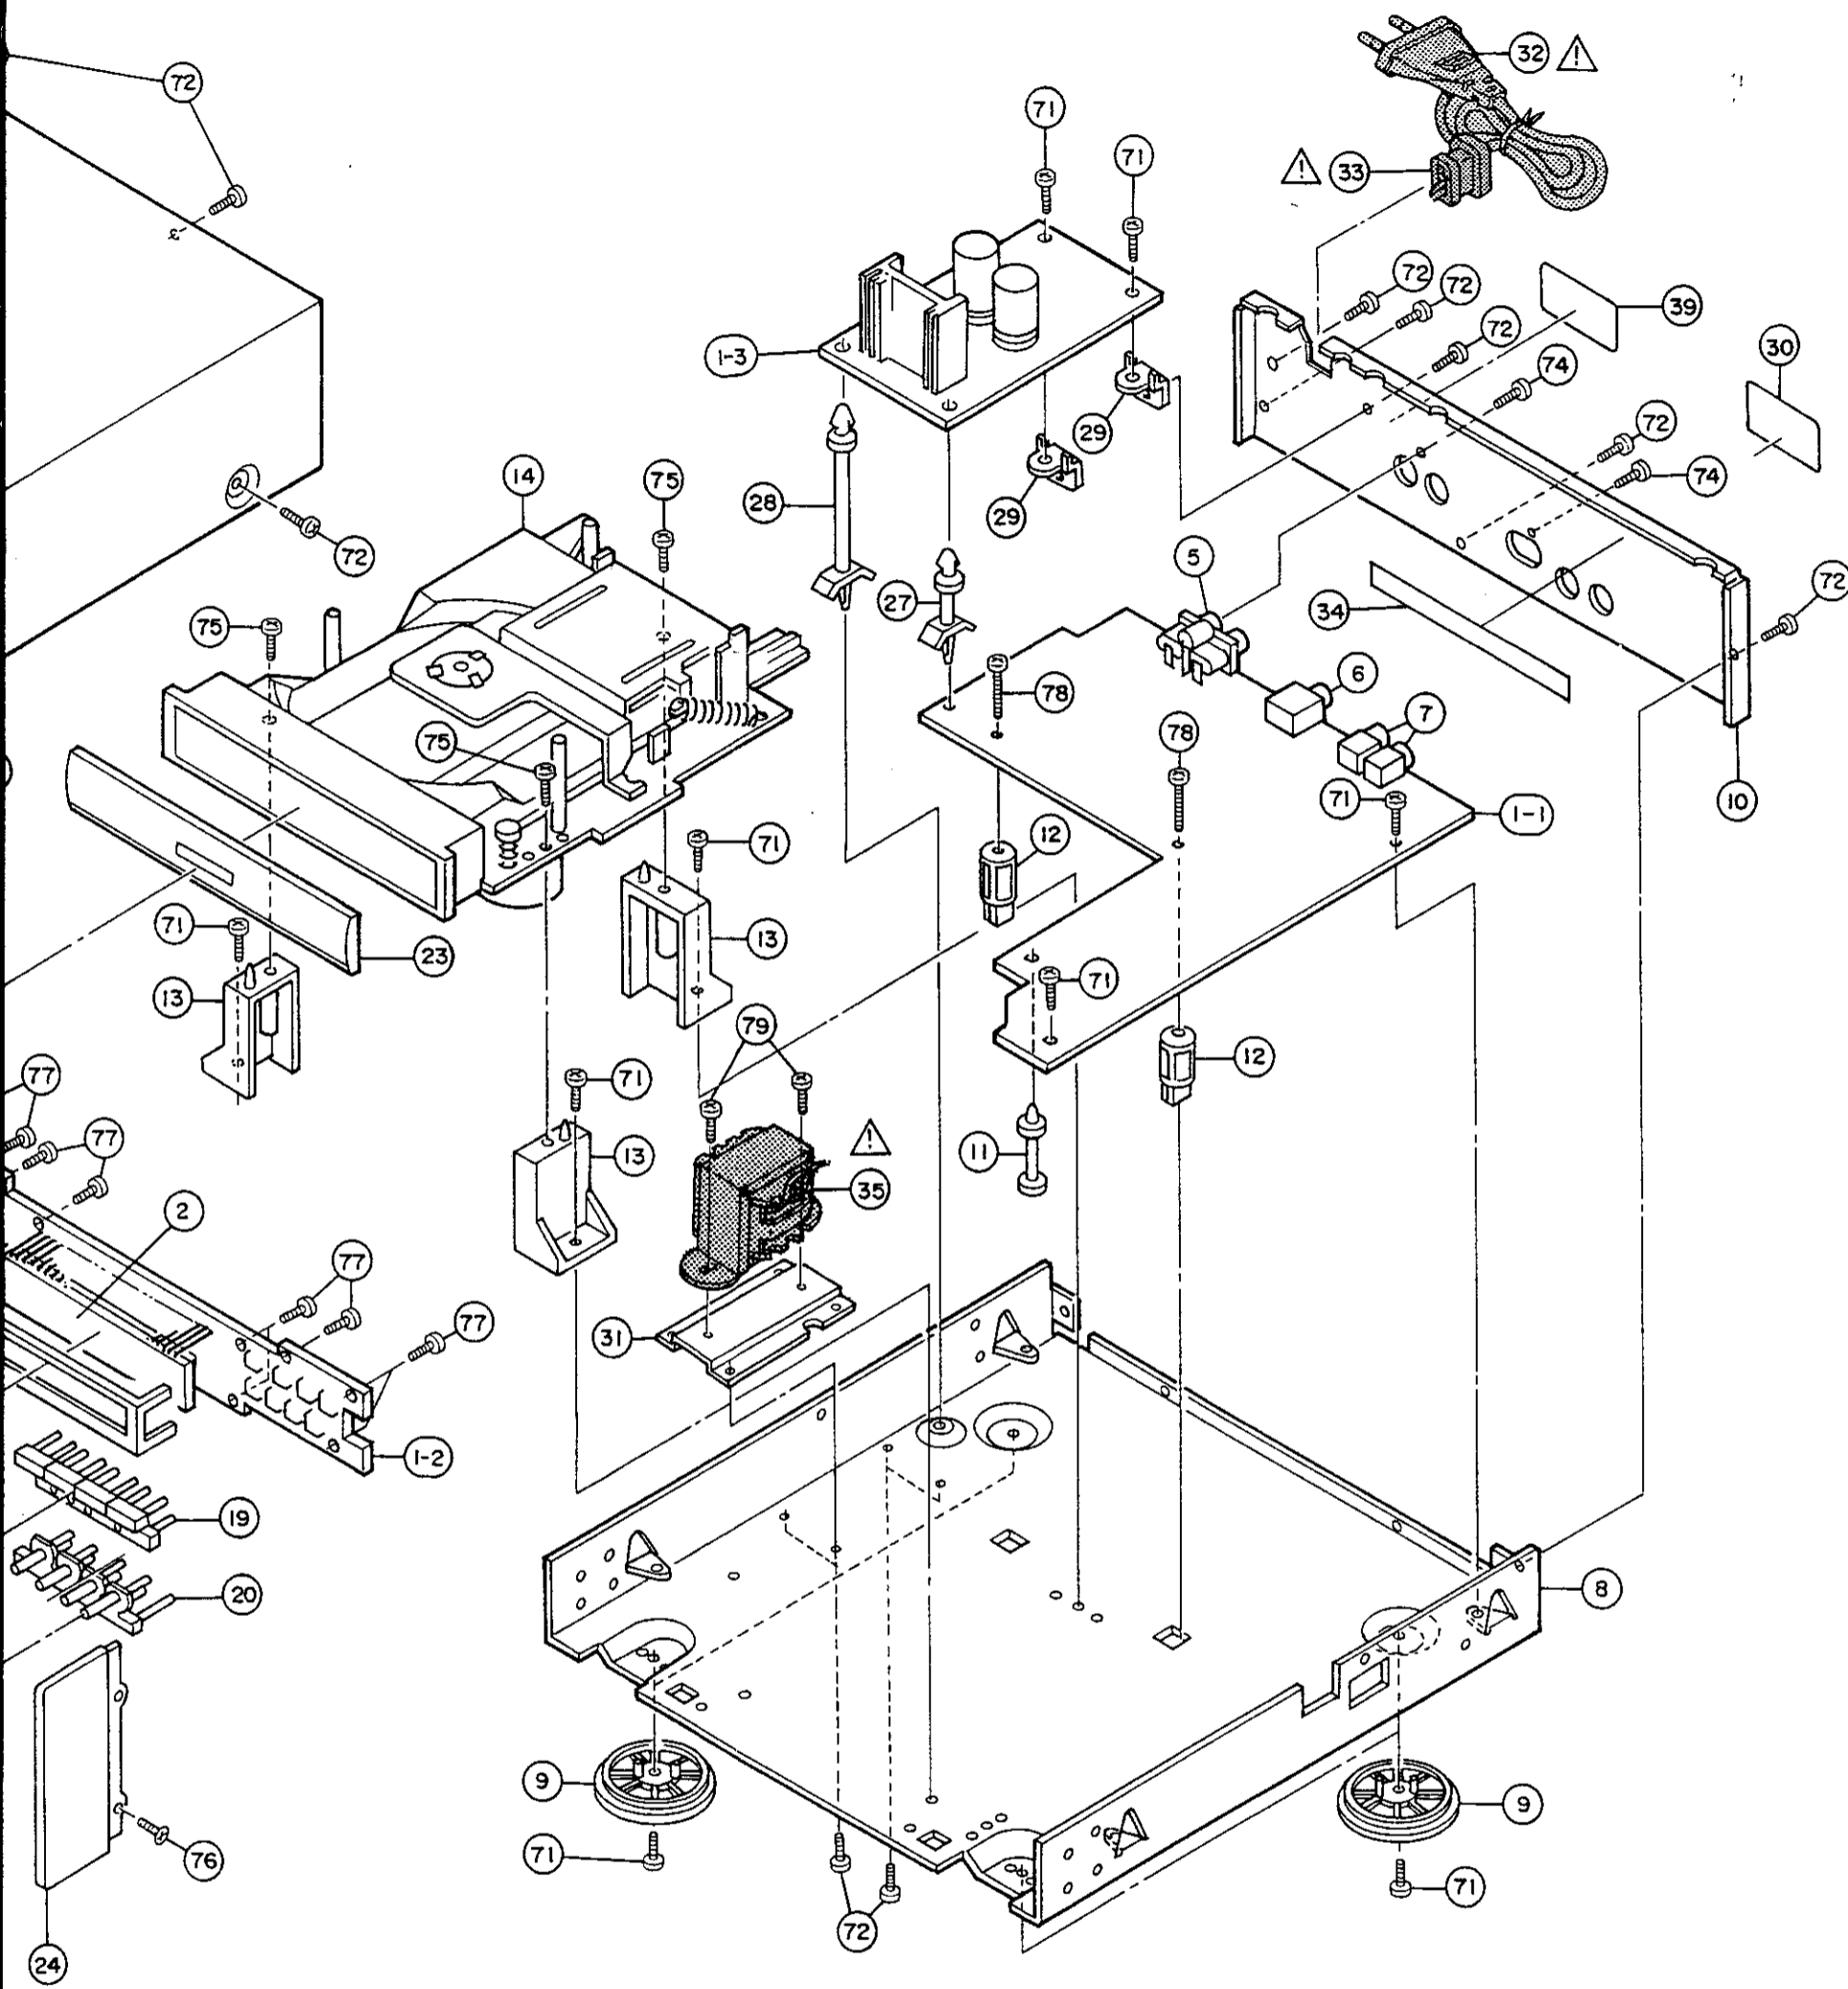

ing, or in some case

CD MECHANISM Part No.: 3370017005

CD PLAYER SECTION

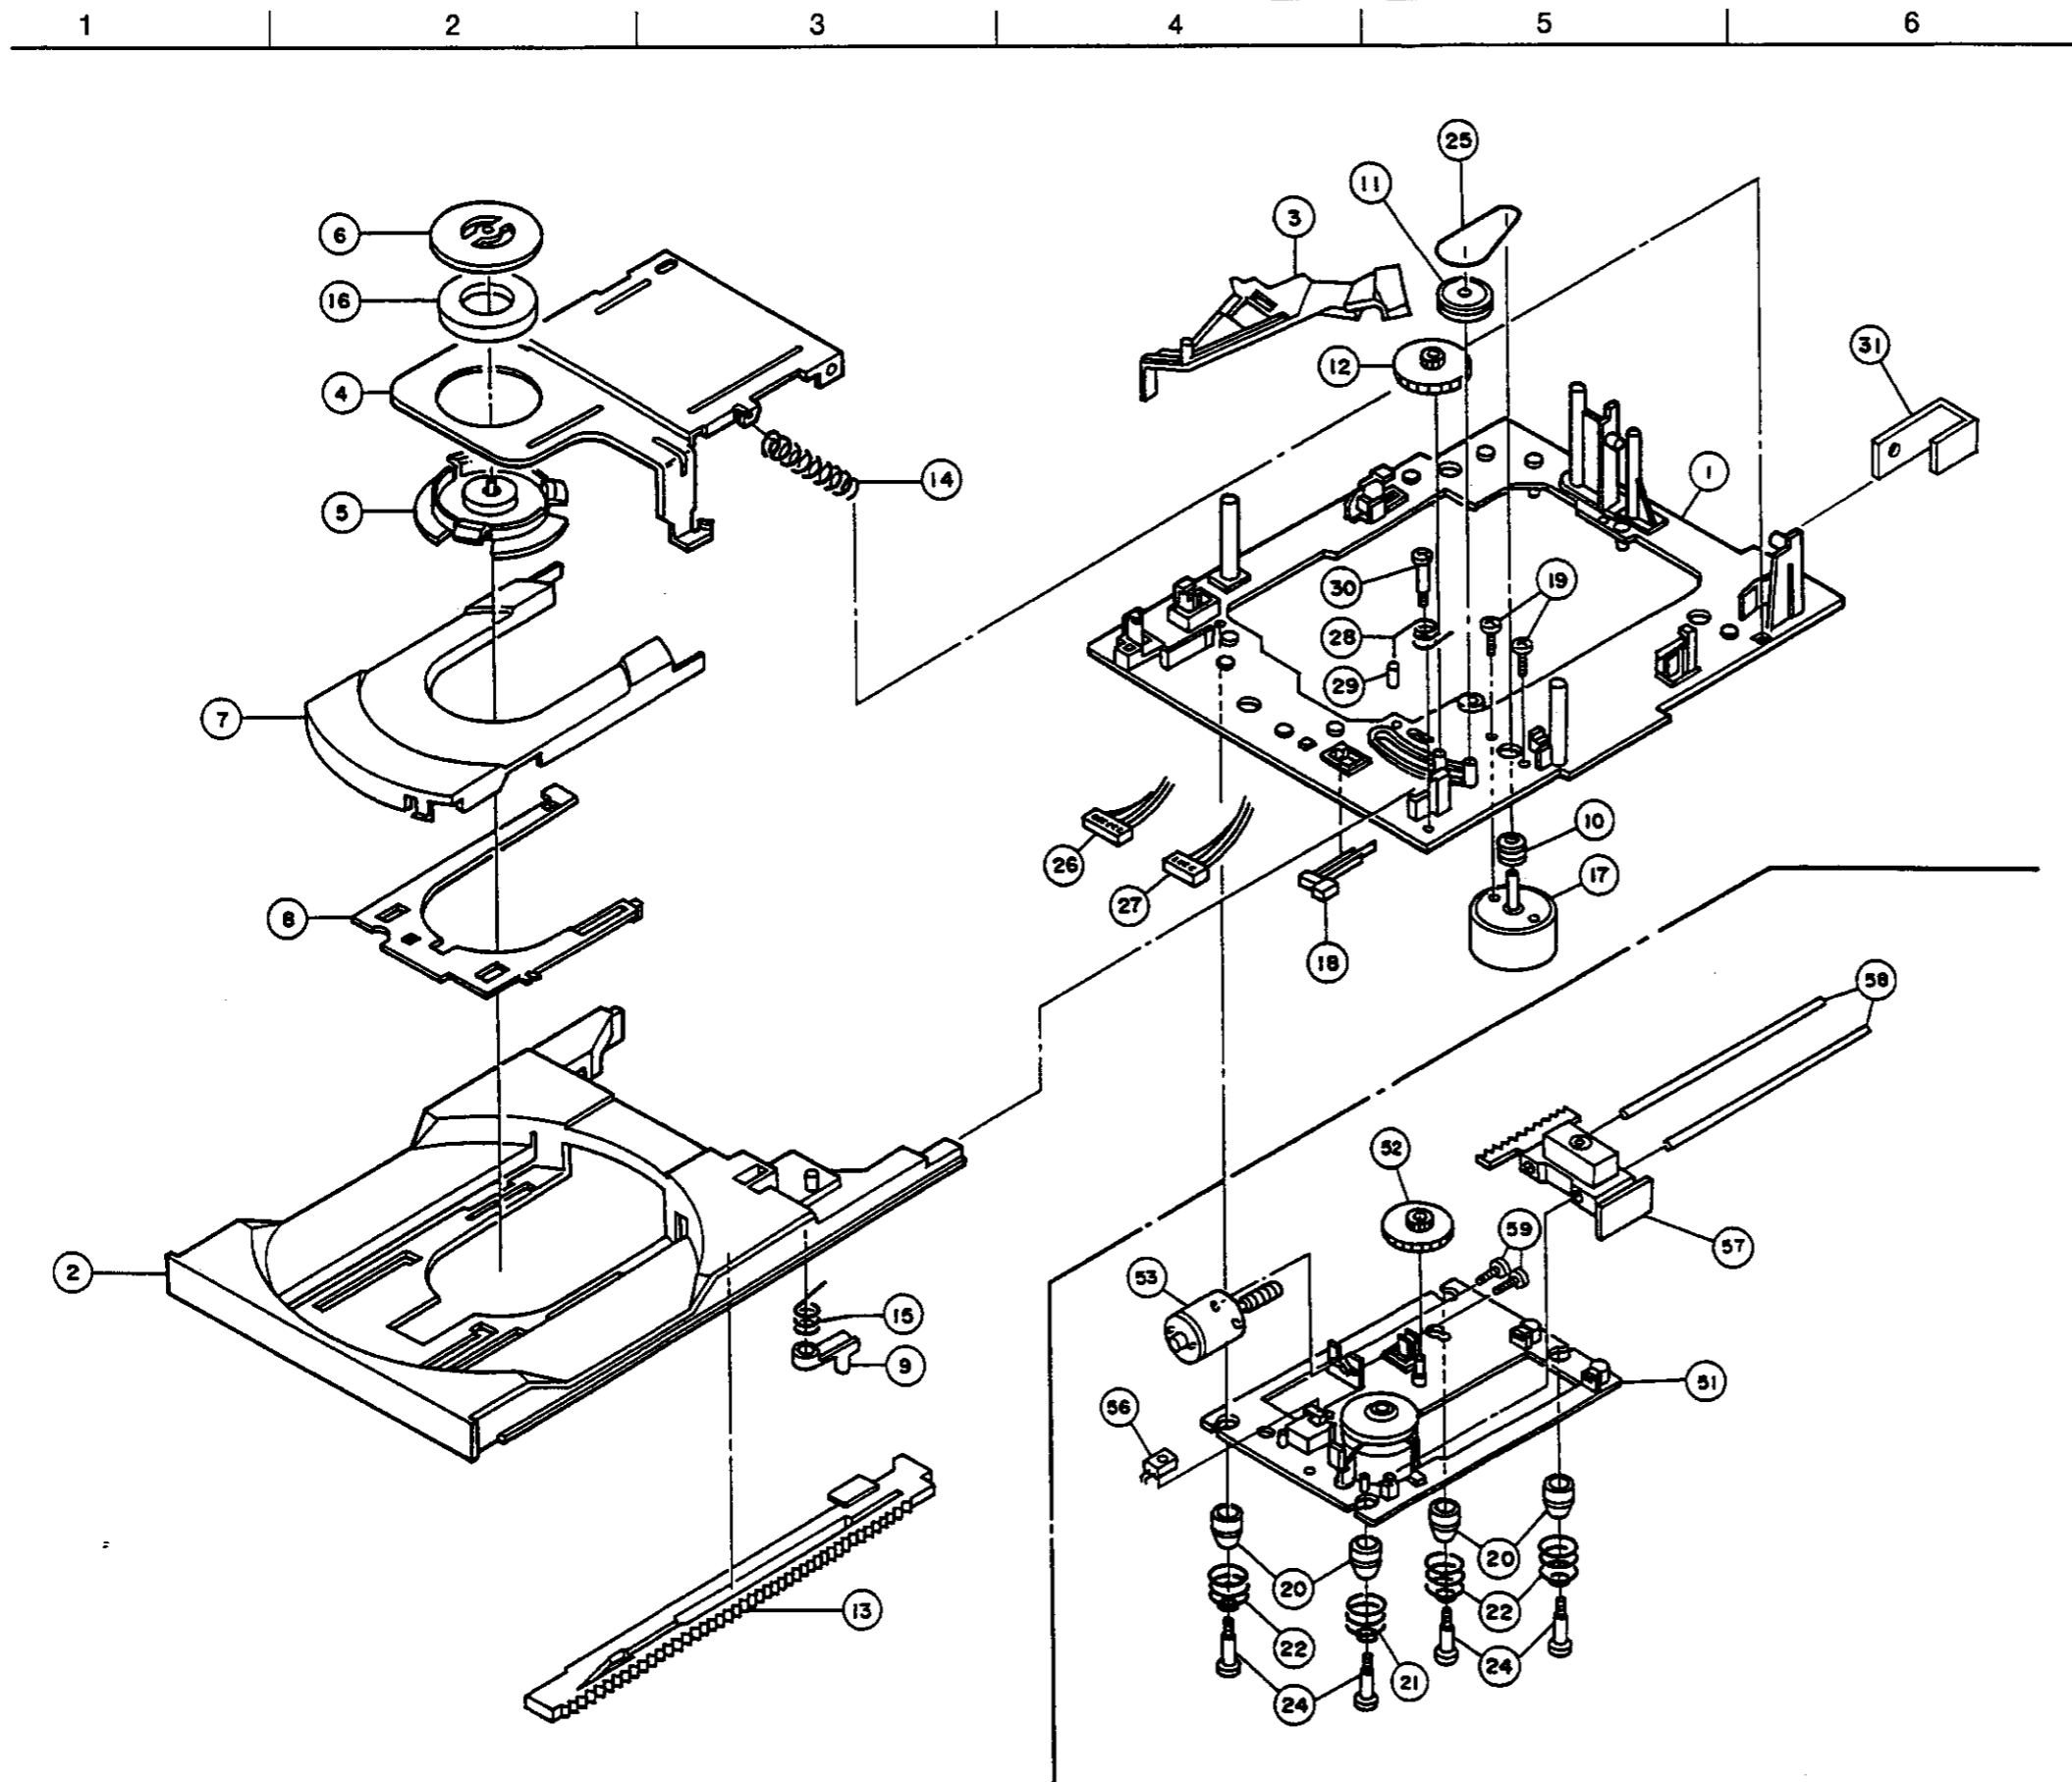

CD MECHANISM PARTS LIST

Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	9KA 81A2 95	Loading Plate Ass'y OS		1
1-1	-	Loading Plate		1
2	9KA 81G9 73	Tray 201		1
3	9KA 81G9 74	Switch Lever		1
4	9KA 81P4 62	Clamper Arm		1
5	9KA 81G9 75	Clamper		1
6	9KA 81P4 63	Clamper Plate		1
7	9KA 81G9 76	Disc Holder		1
8	9KA 81G9 77	Lifter Cam		1
9	9KA 81G9 78	Latch		1
10	9KA 81G2 35	Motor Pulley	Mold	1
11	9KA 81G1 22	Pulley Gear		1
12	9KA 81G1 23	Gear 3		1
13	9KA 81G5 81	Rack 11B		1
14	9KA 81S0 59	Clamp Spring		1
15	9KA 81S0 60	Latch Spring		1
16	9KA 82G0 57	Clamper Magnet		1
17	9KM 01T0 94	Motor	MDN-4RA3EZAS	1
18	9KS 01W0 51	Leaf Switch	LSC122338	1
19	9KM 20S0 04	Tams Screw	M2X4	2
20	9KA 82G0 56	Float Cushion M3		4
21	9KA 81S0 66	Float Spring M3A		1
22	9KA 81S0 67	Float Spring M3B		3
23	-	-		
24	9KA 81H0 85	Fixing Screw C		4
25	9KA 82G1 80	Belt 1.4X18.1		1
26	9KA 82G1 23	Connector Cord	CNW6PM3	1
27	9KA 82G1 24	Connector Cord	CNW5PM3	1
28	9KA 81S0 71	Tray Spring 201		1
29	9KA 82G1 84	UL Tube 2X5.5		1
30	9KA 82H0 35	Floater Screw RM		1
31	-	-		
32	-	-		
51	9KA 81A3 33	Spindle Motor (T/T) Ass'y	Including Motor, T/T	1
51-1	-	Unit Plate M3G2		1
52	9KA 81G9 66	Slide Gear T		1
53	9KA 81A2 90	Feed Motor Ass'y		1
53-1	-	F. Motor	RD-050Y	1
53-2	-	Warm Gear T		1
54	9KA 81A2 93	Turn Table Ass'y		1
54-1	-	Turn Table Plate		1
55	9KM 01T0 94	Motor	MDN-4RA3EZAS	1
56	9KS 01W0 56	Switch	SW-SPPB-11	1
57	9KA 81G7 49	Pickup M3	HOPM3TR	1
58	9KA 81H1 07	Guide Bar		2
59	9KM 20N0 03	Pan Screw	M2X3	4
60	-	-		
61	-	-		
62	-	-		


**CASSETTE DECK SECTION**

**DISASSEMBLY PROCEDURES**


(Follow these procedures in reverse order to reassemble.)

**1. Removing the top cover and front panel**

- ① Remove the 6 screws which fasten the top cover.
- ② Remove the 2 screws of the bottom side which fasten the front panel.

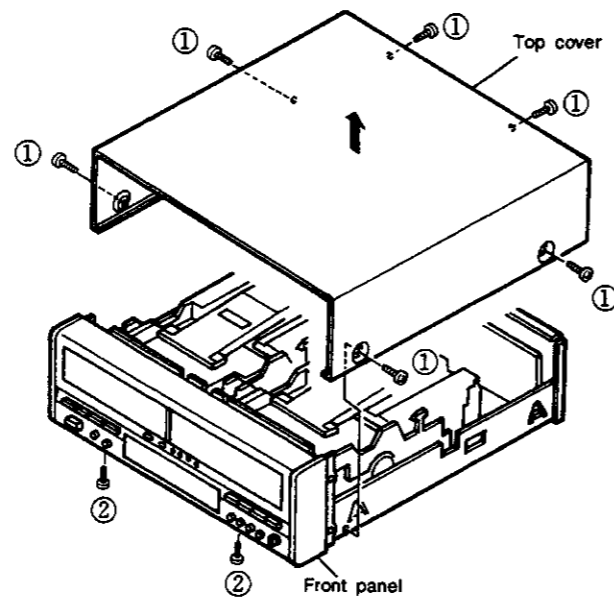


- ③ Remove the 2 screws which fasten the side plate.
- ④ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver),
- ⑤ Push out the side plate in the direction of the arrow and remove from the hooks of the inner panel. Using the same method for the left side, remove the side plate. Remove the front panel in the direction of the arrow.

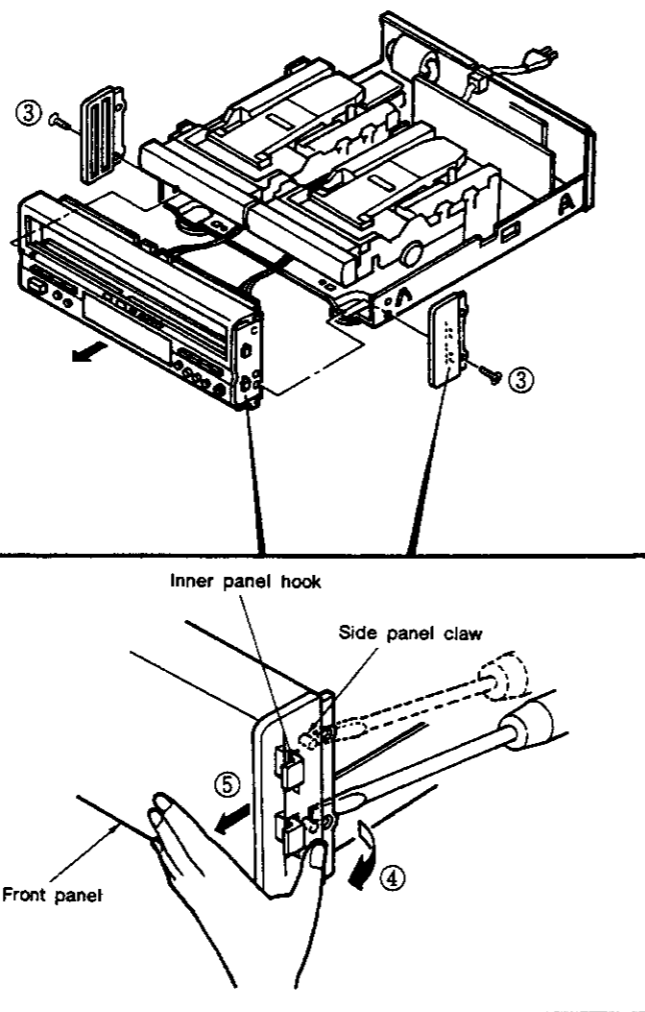

**2. Removing the printed wiring boards**


**LCD, Tact Switch Unit IU-2479-2**

- ① Disconnect connectors CB706, CB707, and CB708 which are attached to the LCD Tact switch unit.
- ② Remove the 8 screws which are attached to the LCD Tact switch unit and remove the board in the direction of the arrow.

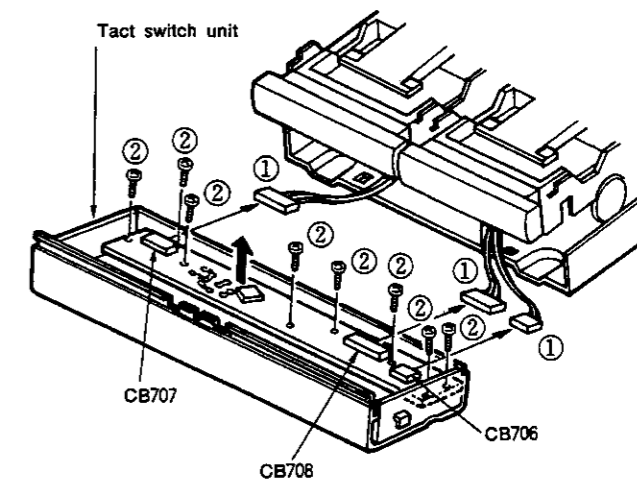


**3. Removing the cassette mechanism**

- ③ Turn the set upside down and remove the 8 screws which fasten the cassette mechanism unit. Lifting the chassis up will now allow the cassette mechanism unit to be removed.

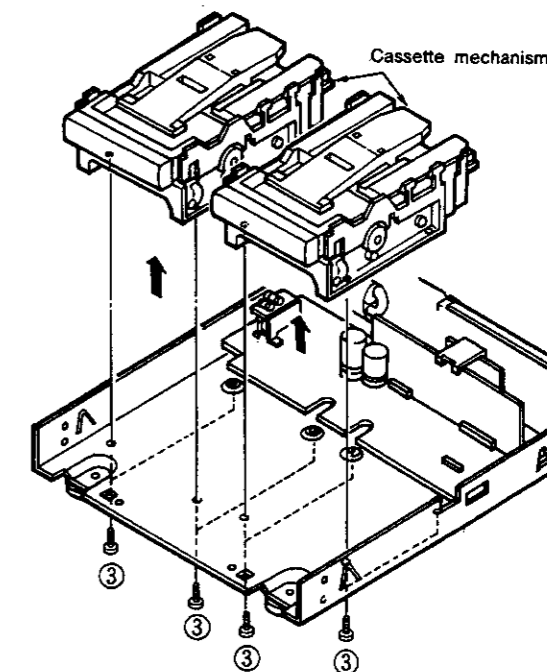


CASSETTE DECK SECTION

- ④ Disconnect connectors CB701, CB702, CB703, CB710, and CB712 which are attached to the main unit.
- ⑤ Using a flat-bladed screwdriver, press the head portion of connectors CB7111 and CB713, which are attached to the main unit, and while so doing disconnect in the direction of the arrow.

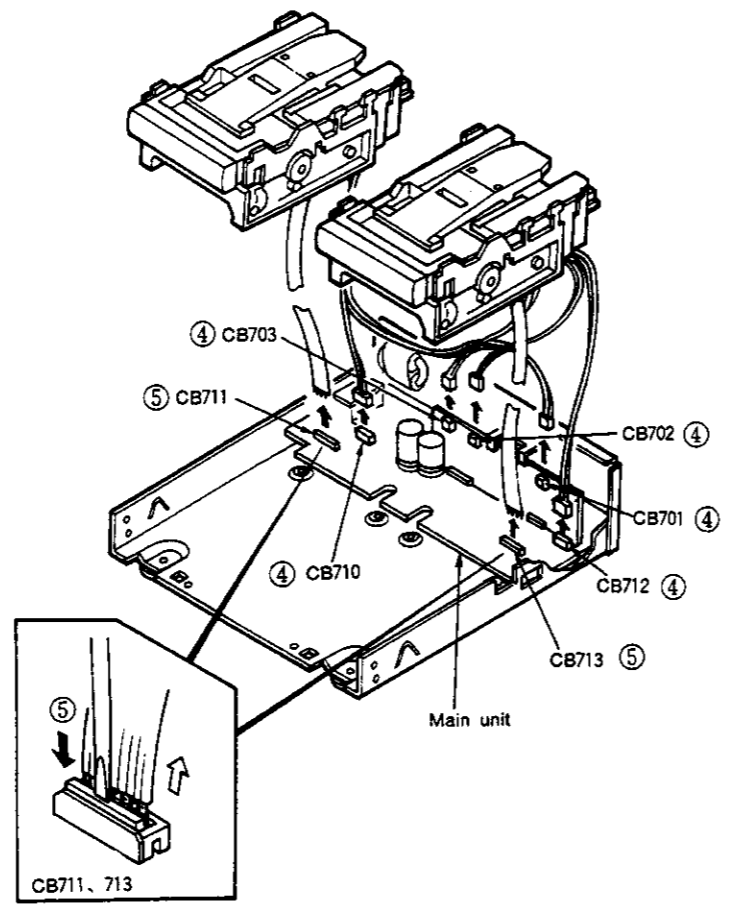


EX. UNIT IU-2476-6

- ⑨ Use a pair of long-nosed pliers to disengage the board catch, which fastens the EX unit, in the direction of the arrow.
- ⑩ Remove the four screws which fasten the power transformer.

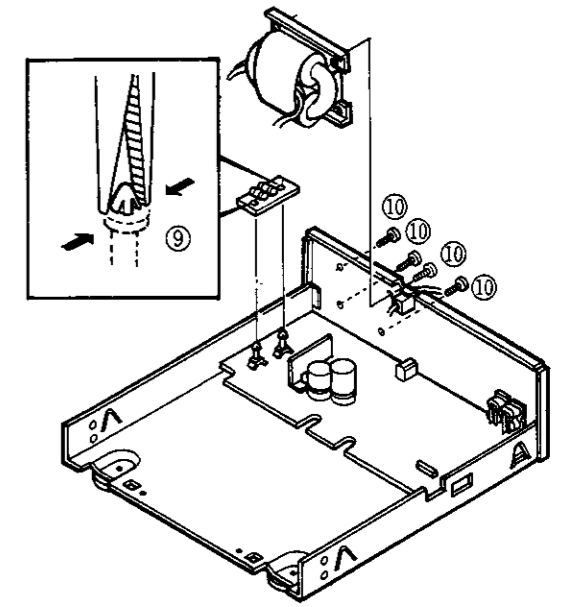


- PB, REC UNIT IU-2479-3
- DOLBY UNIT IU-2479-4
- P. TR & IC UNIT IU-2479-5

- ⑥ Remove the screw of the mounting fitting of the board which is attached to the rear panel.
- ⑦ Remove the playback and record unit, and the Dolby unit.
- ⑧ Remove the 2 screws which fasten the P. TR and IC unit.

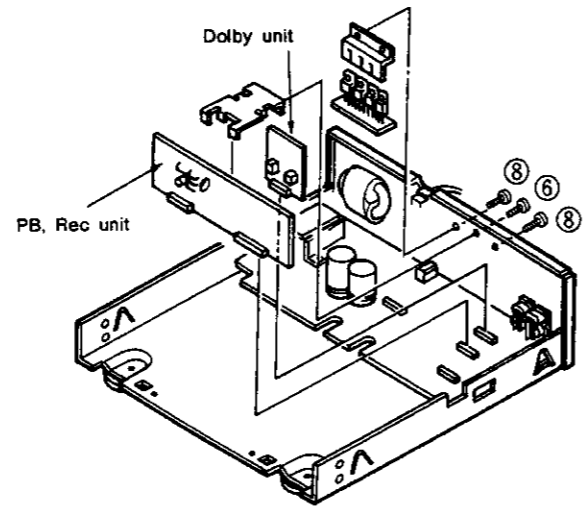

MAIN UNIT IU-2479-1



- ⑪ Remove the 5 screws which fasten the main unit and remove the board in the direction of the arrow.

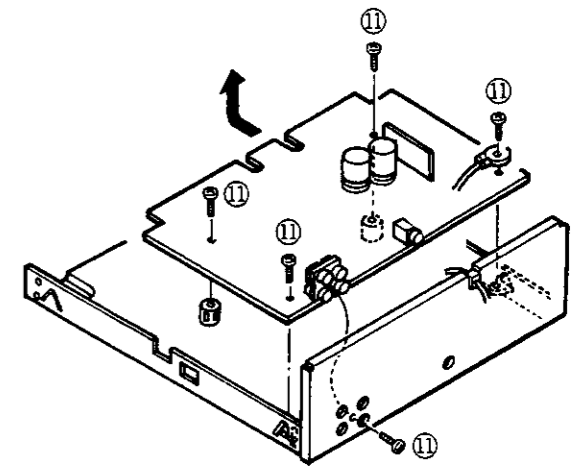





CASSETTE DECK SECTION


LEVEL DIAGRAM

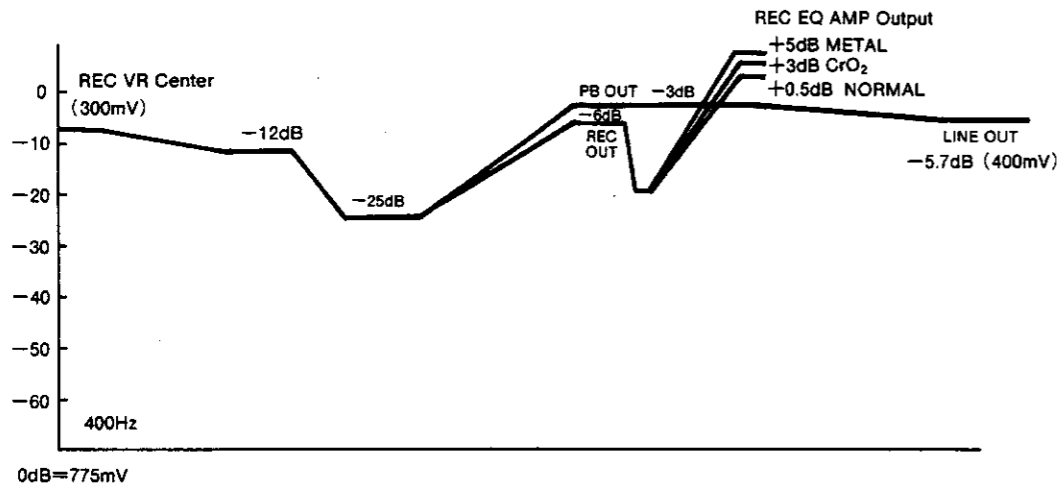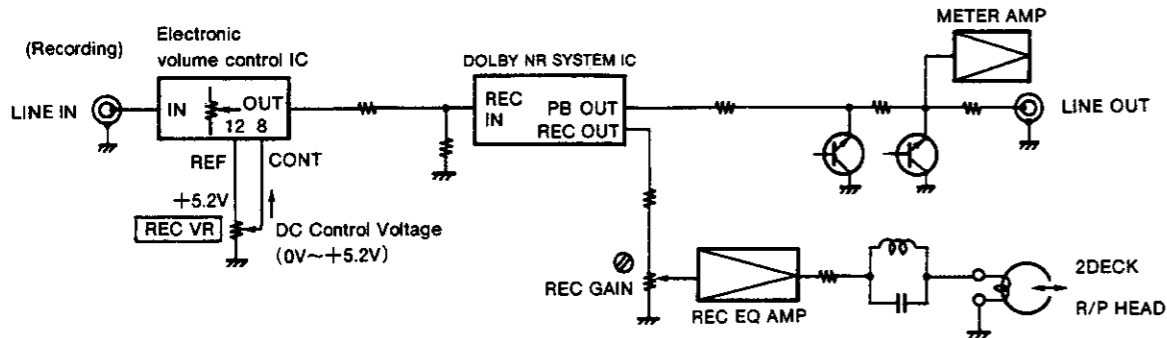

(Playback)

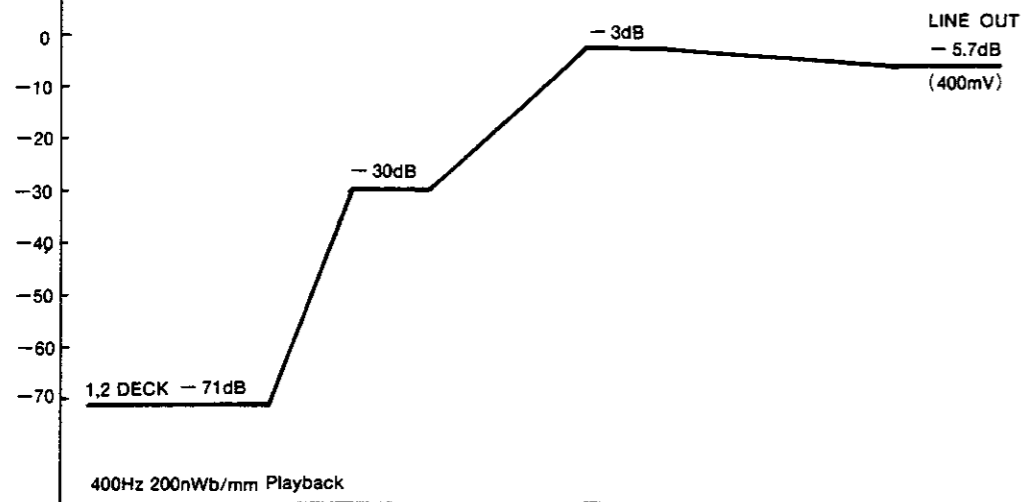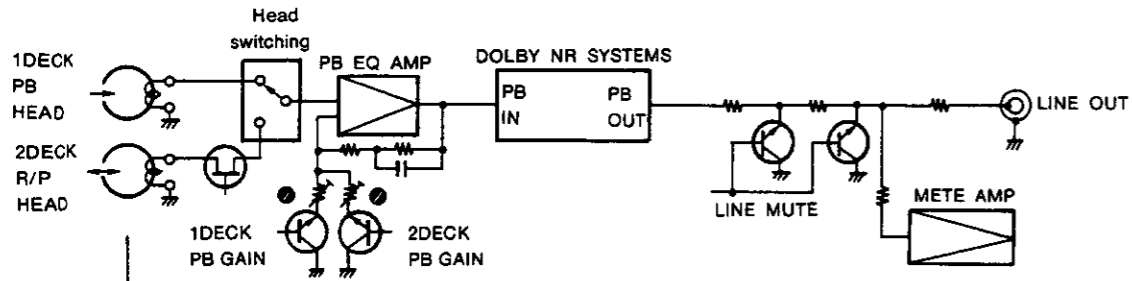

BLOCK DIAGRAM

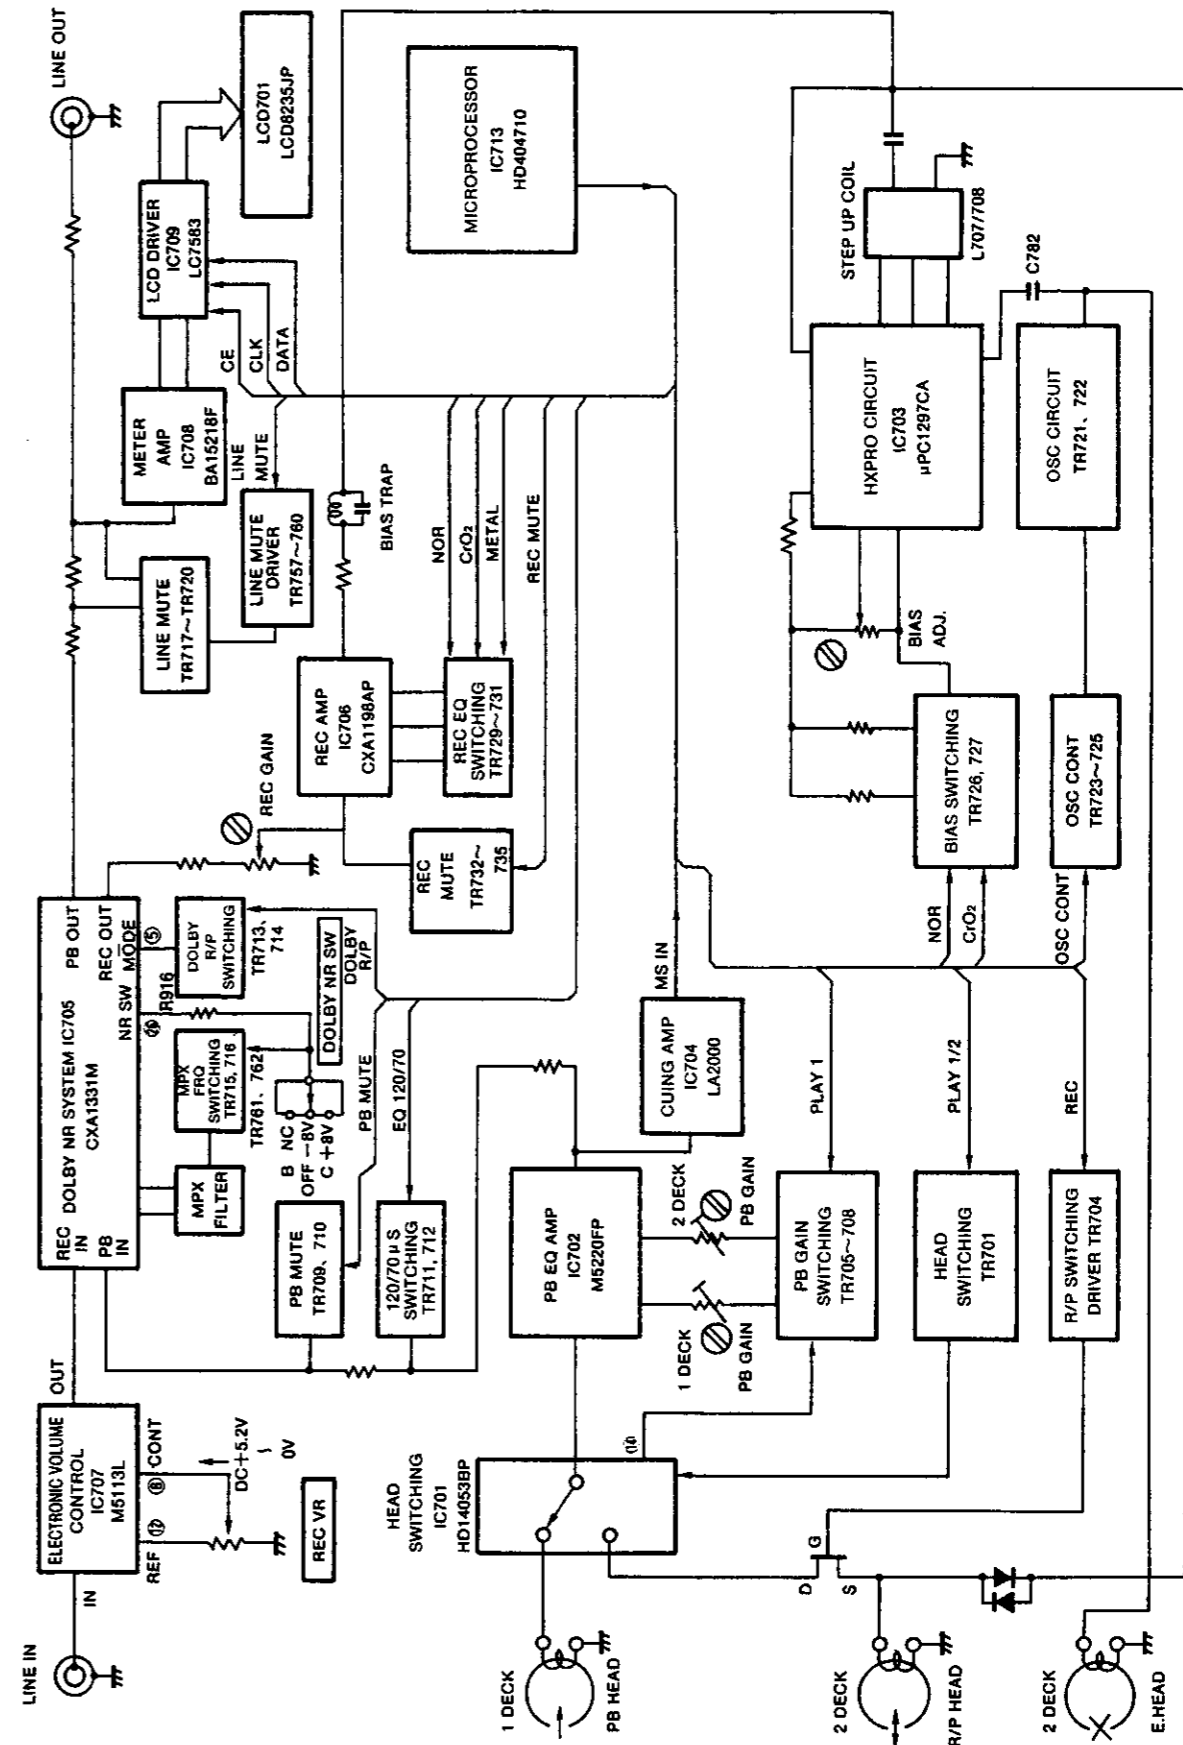




ADJUSTMENTS

● Mechanism Measurements

Measurement item	Standard value	Remarks
Winding torque (PLAY)	35~70 gcm	SONY TW-2111 for forward, TW-2121 for reverse
Fast-forward and rewind torque	70~180 gcm	SONY TW-2231
Back tension torque	2 ± 0.3 gcm	SONY TW-2111 for forward, TW-2121 for reverse
Pinch roller pressure	270 ± 50 g	See diagram at right
Fast-forward and rewind time	110 ± 15 s	C-60

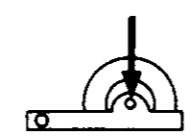

With the deck in the play mode, apply force with the tension gauge in the direction of the arrow and read the value at which the pinch roller stops rotating.

● ELECTRICAL ADJUSTMENTS

● Preparations Before Adjustments

1. Measuring Instruments Necessary for Adjustments

- Screwdriver: Small flat-bladed screwdriver for variable resistors
- Low frequency oscillator
- Attenuator
- V.T.V.M.
- Oscilloscope
- Frequency counter
- Test tapes (TEAC MTT-111, MTT-114, MTT-150, DENON HDX/60, or equivalent)
- Load resistor 47kohm 2pcs. (A-BEX, TC-111, TCC-153, TCC-130)


● Adjustment notes

- ① Before adjusting, wipe the surface of the heads, the capstans, and the pinch rollers with a piece of gauze moistened with alcohol.
- ② Demagnetize the playback, recording, and erasure heads with a head eraser.
- ③ Completely demagnetize the adjustment screwdriver.
- ④ Unless otherwise specified, set the switches at the following positions and use the LINE IN Terminal IN jacks for the input.  
DOBLY NR SW: OFF  
REC VR: CENTER (Click position)
- ⑤ Be sure to connect a 47 load resistor to LINE OUT.

2. Playback adjustments


2-1 Azimuth adjustment

Play back the (TEAC MTT-114) test tape and turn the azimuth adjustment scrw to yield maximum values for the left and right channels. Lock the screw.

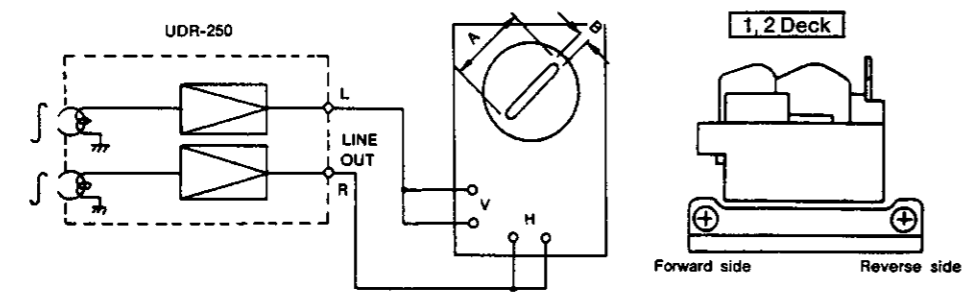

2-2 Tape speed check and adjustment

- Connect the frequency counter to LINE OUT Terminal.
  - ① Play the test tape (MTT-111) on deck 2 and once tape transport has stabilized, adjust normal-speed-adjustment variable resistor (motor Variable Resistor) to yield 3,000 Hz ± 10 Hz.
  - ② Using the same procedure on deck 1, adjust variable resistor (motor Variable Resistor).
- NOTE: Use the central portion of the test tape; not the beginning or end of the winding.

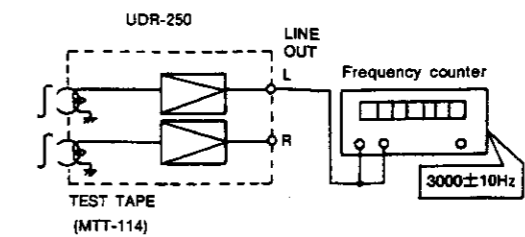

2-3 Playback level check and adjustment

Play a Dolby reference level tape (TEAC MTT-150) and check that the voltage of the left and right monitor outputs of LINE OUT on the 1U-2479-3 deck board is within 400 mV ± 1 dB.

If it is not within this range, the playback level requires adjustment.

NOTE: When adjusting deck 1, the playback level of deck 2 also changes; therefore, the playback level of deck 2 should be readjusted.

- For deck 1, adjust: VR703 (Left channel), and VR704 (right channel)
- For deck 2, adjust: VR701 (Left channel), and VR702 (right channel)

Caution: Always adjust the playback level starting from the left deck first.

3. Recording adjustments (deck 2 only)

3-1 Overall frequency response adjustment for recording and playback

Load a blank DENON HDX/60 tape for adjustment purposes and record and play it back, adjusting the input attenuators of the 1 kHz and 10 kHz signals to yield a left and right monitor output voltage of 40 mV at LINE OUT of the 1U-2479-3 deck board. Adjust so that the 10 kHz level is about +0.5 dB with respect to 1 kHz, and the overall response is within the range shown in the diagram below.


- If the 10 kHz output is larger than the 1 kHz output, turn VR707 (left channel) and VR708 (right channel) counterclockwise, and if it is smaller, turn these controls clockwise.

3-2 Recording level check and adjustment

Load a blank DENON HDX/60 tape for adjustment purposes and check that the voltmeter indication is within the 40 mV ± 1 dB range when a 1 kHz signal is recorded and played back.

If it is not within this range, the recording level requires adjustment.


- If the level at the time of playing back the recording is higher than at the time of recording, turn VR705 (left channel) and VR706 (right channel) counterclockwise, and if lower, turn these controls clockwise.

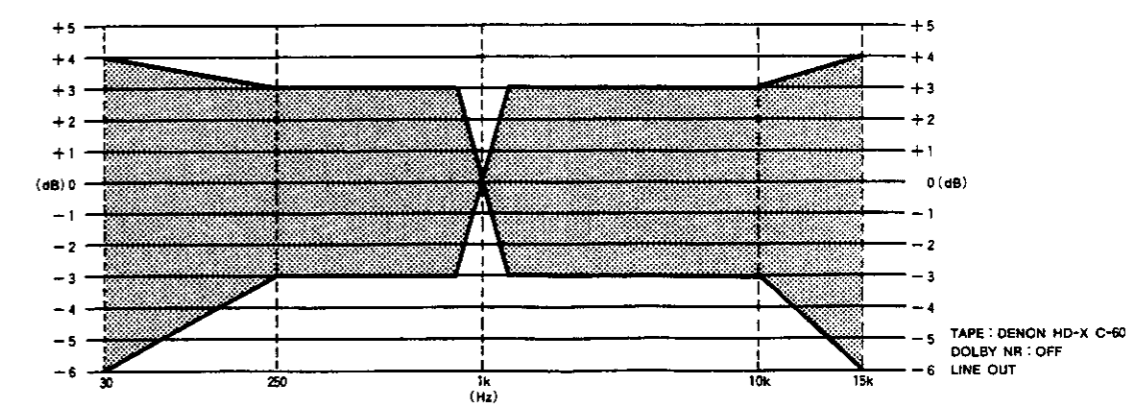

CASSETTE DECK SECTION

OUTLINE DIAGRAM OF ADJUSTMENT LOCATIONS




1U-2479-3 PB, REC UNIT ASS'Y (Component Side)

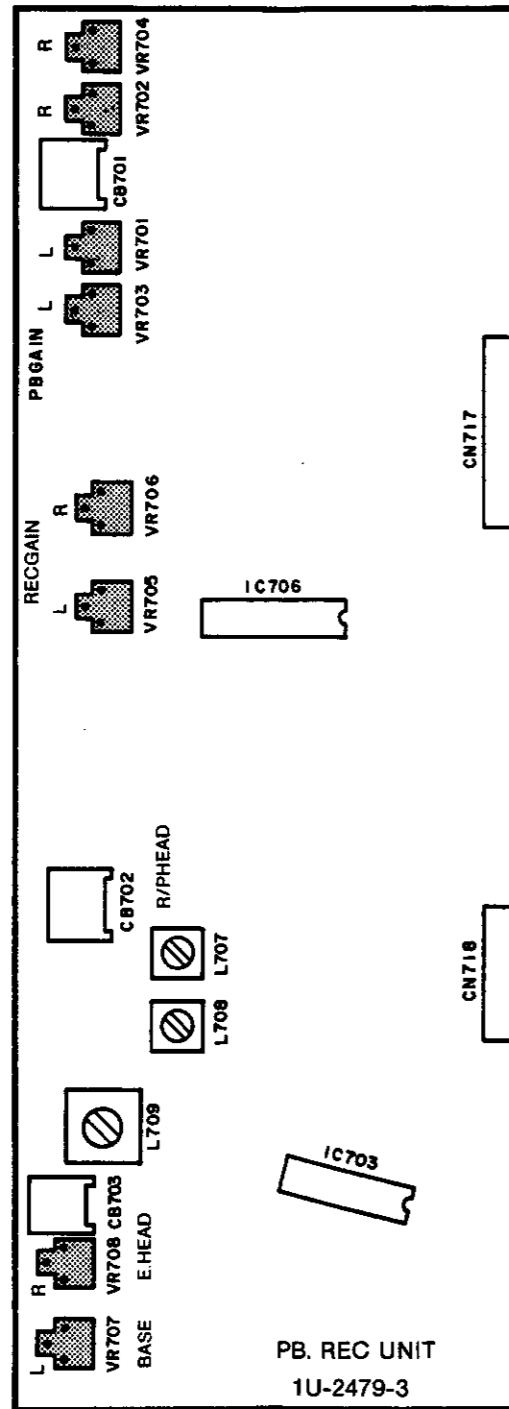



SEMICONDUCTORS

IC



HD14053BFP (IC701)

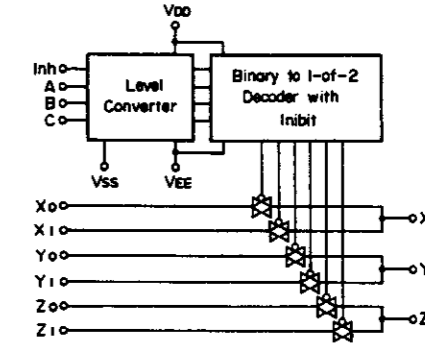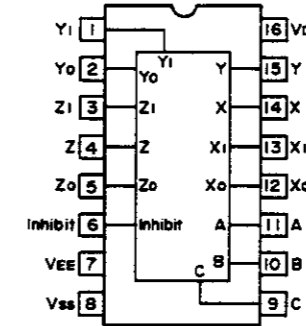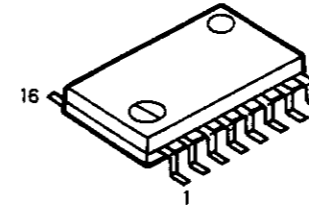



CXA1198AP (IC706)

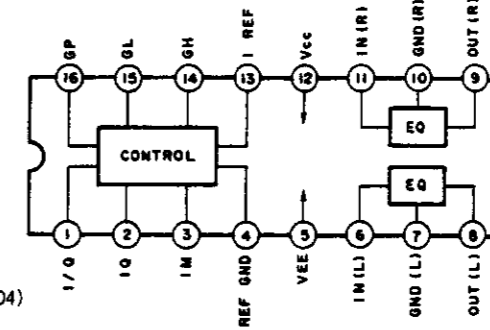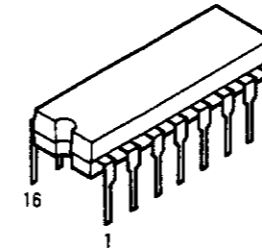




LA2000 (IC704)

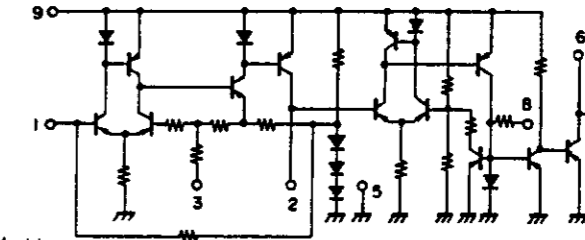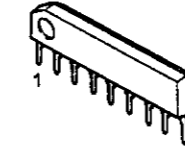




μ PC1297CA (IC703)

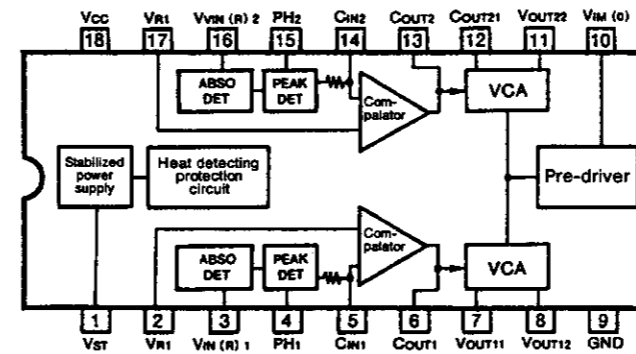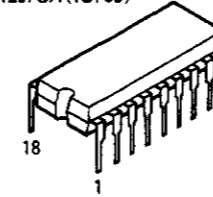

M62005L (IC712)

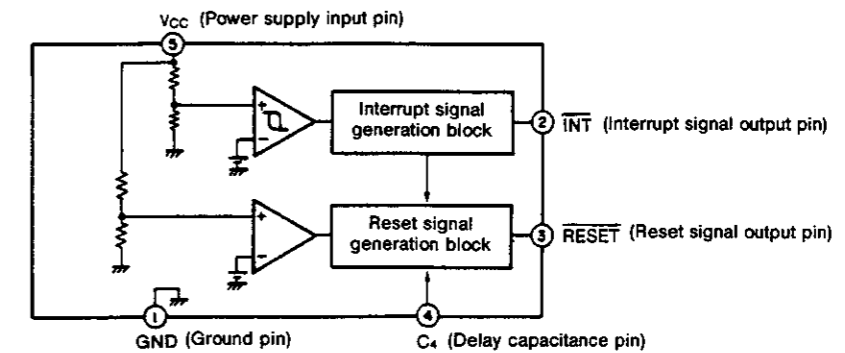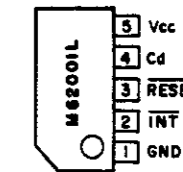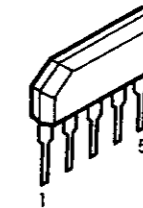



LC7583 (IC709)  
LCD driver with level meter

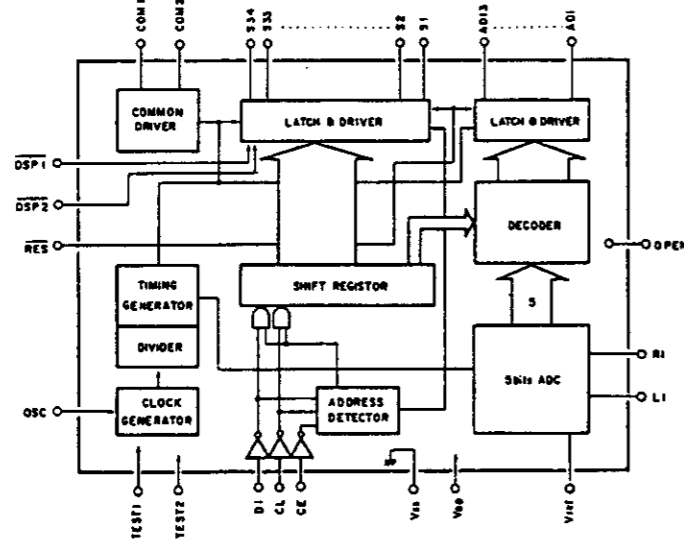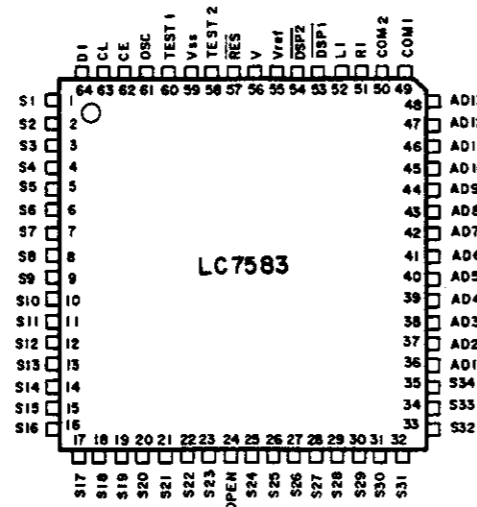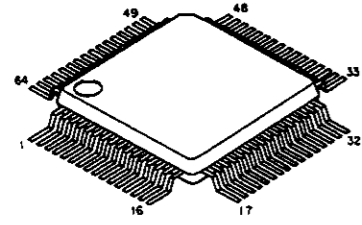

Pin Description


Pin	Pin No.	Description	Active	I/O
S1~S33	1~34	Segment outputs which display the data transferred from the serial data.	-	O
S34	35	Segment output which displays the external input (DSP1, DSP2) information.	-	O
AD1~AD13	36~48	Segment outputs which display the ADC input (R1, L1) information. Three kinds of patterns are output depending on the control bits "A1", and "A2". AD1 is the minimum lighting level, and AD13 is the maximum lighting level.	-	O
COM1 COM2	49 50	With the common driver output, the frame frequency is $\frac{f_{osc}}{512}$ Hz.	-	O
R1 L1	51 52	AD converter input pins.	Analog	I
DSP1 DSP2	53 54	These are input pins for the direct (external input) display, and their segment output is output from S34.	L	I
Vref	55	Reference power supply pin of the AD converter.	-	-
V <sub>DD</sub> V <sub>SS</sub>	56 59	Power supply pins.	-	-
RES	57	This pin forcefully switches off the display in the initial condition.	L	I
TEST2	58	To be used in the open condition.	-	O
TEST1	60	To be used open or with V <sub>SS</sub> .	-	I
CE	62	Pins for serial data transfer. Connected with the controller. (microprocessor).	CE: Chip enable CL: Sync clock DI: Transfer data	H I -
CL	63			
DI	64			
OPEN	24	No connection.	-	-

CXA1331M (IC705)

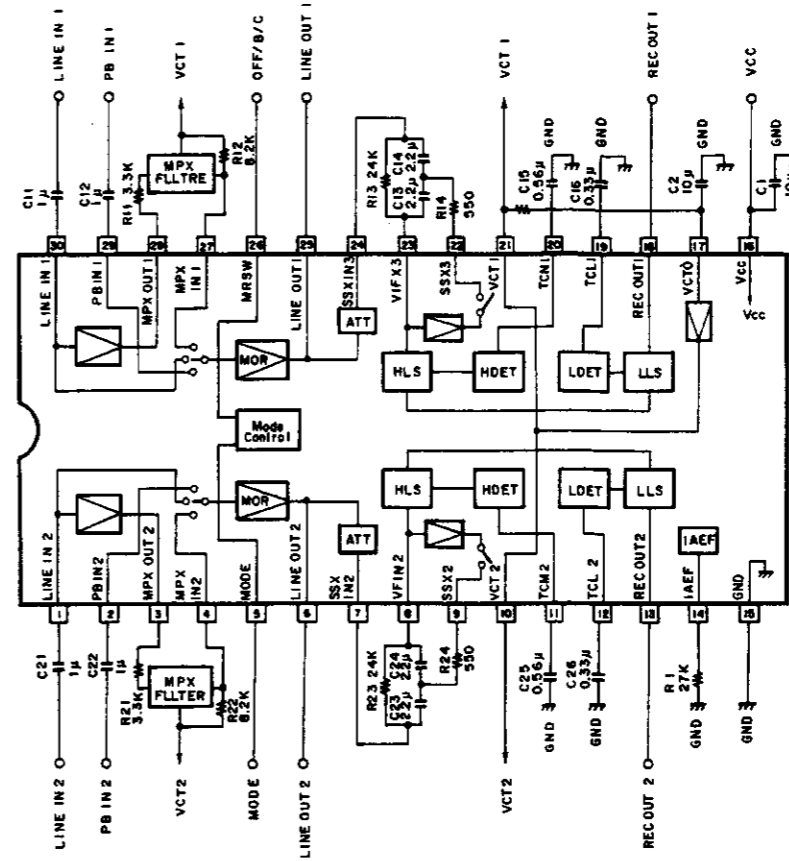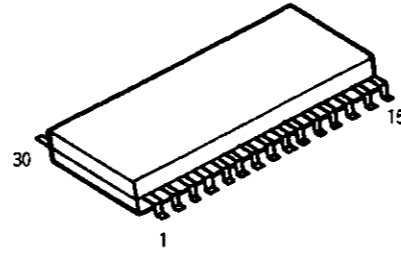


CASSETTE DECK SECTION

NJM78M06FA (S) (IC715)  
NJM78M08FA (S) (IC716)  
NJM78M12FA (S) (IC714)  
(Three-terminal positive constant voltage power supply)





1: Output  
2: GND  
3: Input

NJM79M08FA (IC717)  
(Three-terminal negative constant voltage power supply)





1: Output  
2: Input  
3: GND



M51131L (IC707)

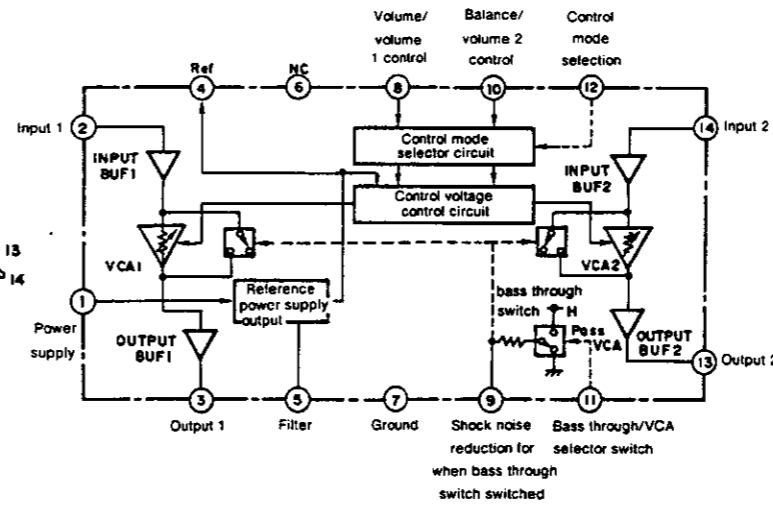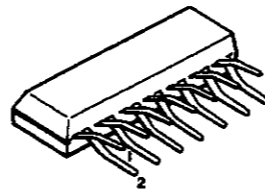



M5220FP (IC702)

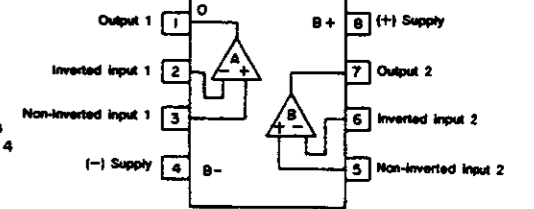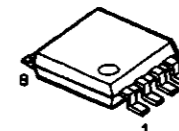

BA6209 (IC710, 711)  
Reversible motor driver  
(2 circuits built in)

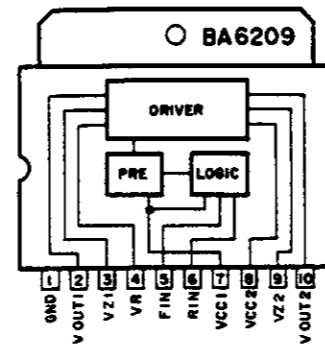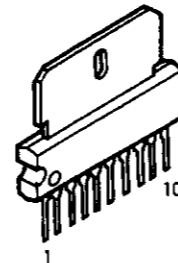


BA15218F (IC708)

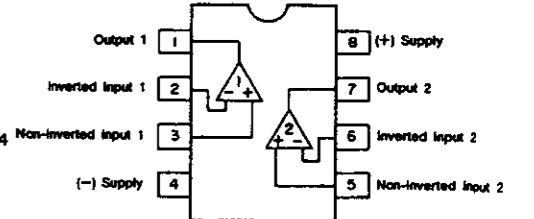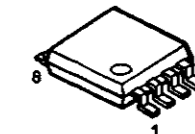


**CASSETTE DECK SECTION**

● **Transistors**


2SD1111  
2SA933S(S)

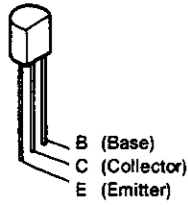


2SB562(C)

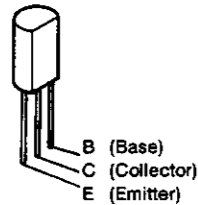


2SC1740S

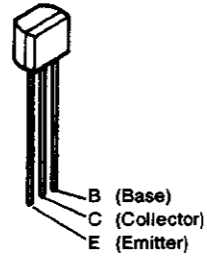

2SC3852


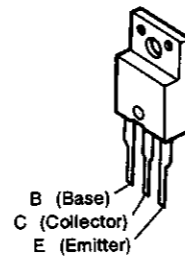


2SK373(Y) (FET)

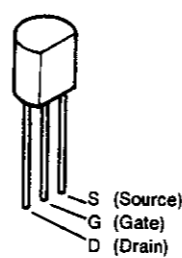


● **LCD ASS'Y (8235JP)**


Part No. 3934143001

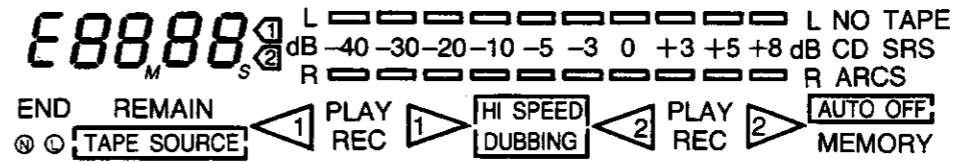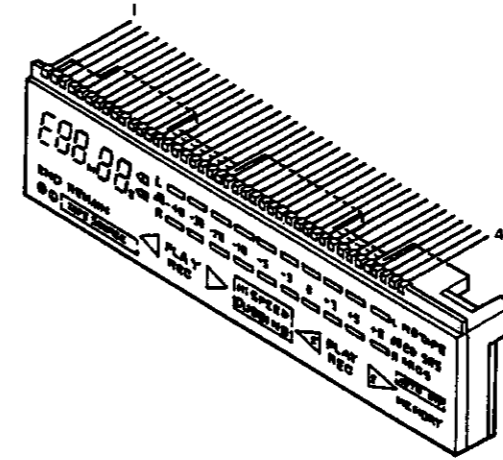



NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14
COM1	COM	—	REC <sup>2)</sup>	HI SPEED	REC <sup>1)</sup>	SOURCE	END	REMAIN	TAPE	REMAIN	M. S	1d	1e	1a
COM2	—	COM	PLAY <sup>2)</sup>	DUBBING	PLAY <sup>1)</sup>	TAPE	REMAIN	REMAIN	REMAIN	REMAIN	REMAIN	REMAIN	REMAIN	REMAIN
NO.	15	16	17	18	19	20	21	22	23	24	25	26	27	28
COM1	1b	1c	2f	2a	2c	3e	3a	3b	3c	4f	4a	4c	1	L DB R (A)
COM2	1g	2e	2g	2b	2d	3d	3f	3g	4e	4g	4b	4d	2	-40 -30
NO.	29	30	31	32	33	34	35	36	37	38	39	40	41	42
COM1	A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	#1	NO TAPE	MEMORY	[OFF]
COM2	B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	L DB R (A)	CD SRS	ARCS	[AUTO]

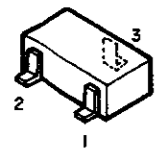

1: GND / Emitter  
2: In / Base  
3: Out / Collector

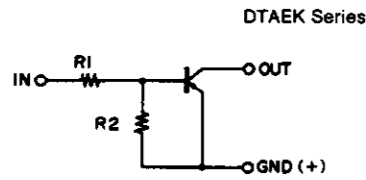


	R1	R2
DTA114EK	10k ohm	10k ohm

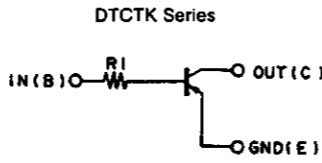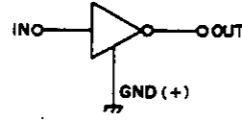


	R1
DTC114TK	10k ohm
DTC323TK	2.2k ohm


DTA114EK  
DTC114EK  
DTC124EK  
DTC144EK  
DTC114TK  
DTC323TK

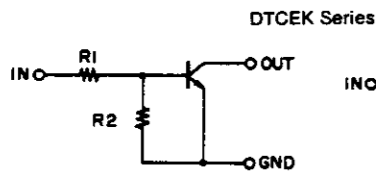

	R1	R2
DTC114EK	10k ohm	10k ohm
DTC124EK	22k ohm	22k ohm
DTC144EK	47k ohm	47k ohm

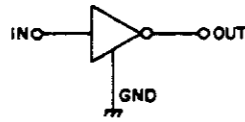

2SC2412K(S)

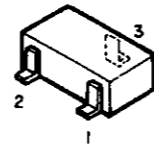

1: GND / Emitter  
2: In / Base  
3: Out / Collector

● **Diodes (including LED)**

HZS3A-1  
HZS4A-1  
HZS6A-1  
HZS6C-1  
HZS7C-1  
HZS9B-1  
HZS12A-1




1SS270A




1SR35-200A



LED (SLF-351D)  
Part No. 3939470009

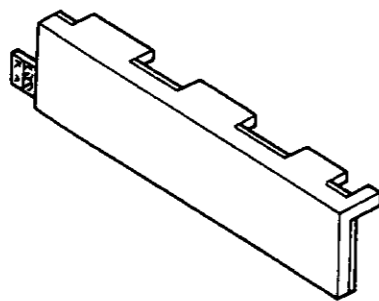

● **Connection**

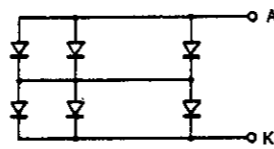


2 Series 22 Para = 44 Chip

MICROPROCESSOR DOCUMENTATION


● Control Circuits for the Deck  
 HD404710A22FS: 2621626104 (IC713)  
 (CMOS 4-bit single-chip microprocessor)

- Main Functions
- Deck Control
    1. Control output for deck mechanism control and signal circuits
    2. Twin reverse: playback - recording
    3. Cuing operation, continuous play
    4. Regular speed tape copying
    5. CD syncro operation
    6. Edit operation
    7. Auto function operation
    8. Real time counter
    9. Auto power on/off operation
    10. Tape end indication
    11. LCD display control

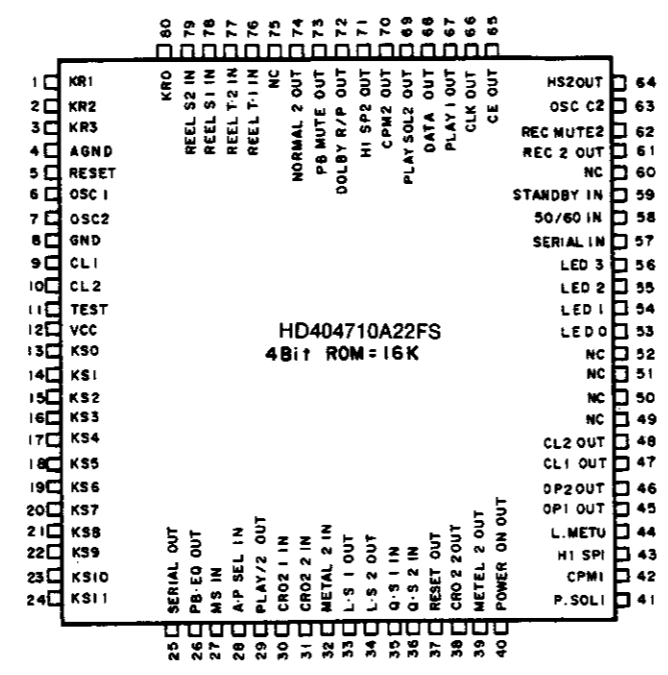

● Pin Description

Pin No.	Pin Name	Function Name	Function
1	RD1/AN5	KR 1	Key return 1 input
2	RD2/AN6	KR 2	Key return 2 input
3	RD3/AN7	KR 3	Key return 3 input
4	AGND		Ground (Ia)
5	RESET	RESET	Reset input
6	OSC1		4 MHz Cell lock
7	OSC2		4 MHz Cell lock
8	GND		Ground
9	CL1	NC	Ground (Ia)
10	CL2	NC	Open
11	TEST	NC	5 V
12	VCC		5 V
13	D 0	KS 0	Key strobe 0 output
14	D 1	KS 1	Key strobe 1 output
15	D 2	KS 2	Key strobe 2 output
16	D 3	KS 3	Key strobe 3 output
17	D 4	KS 4	Key strobe 4 output
18	D 5	KS 5	Key strobe 5 output
19	D 6	KS 6	Key strobe 6 output
20	D 7	KS 7	Key strobe 7 output
21	D 8	KS 8	Key strobe 8 output
22	D 9	KS 9	Key strobe 9 output
23	D 10	KS 10	Key strobe 10 output
24	D 11	KS 11	Key strobe 11 output
25	D 12	SERIAL OUT	Serial communications output
26	D 13	PB.EQ OUT	Playback equalizer switching output 120 = L, 70 = H
27	D 14	MS IN	Inter track detection signal input (Active = L)
28	D 15	A.P. SEL IN	Auto power on/off switching High = Auto power on/off is performed Low = Auto power on/off is not performed
29	R00	PLAY 1/2 OUT	Output which indicates the play condition of the mechanisms Mechanism 1 playing = L Mechanism 2 playing = H
30	R01	CROM 1 IN	Mechanism 1 tape type detection input
31	R02	CROM 2 IN	Mechanism 2 tape type detection input
32	R03	METAL 2 IN	Mechanism 2 tape type detection input
33	R10	L.SPEED 1 OUT	Loading speed control output
34	R11	L.SPEED 2 OUT	Loading speed control output
35	R12	Q.SENSE 1 IN	Quick sense input of tape 1 (Active = L)
36	R13	Q.SENSE 2 IN	Quick sense input of tape 2 (Active = L)
37	R20	RESET OUT	Control output for 4 seconds following reset
38	R21	CROM 2 OUT	Output which switches the recording equalization of tape 2 to chrome
39	R22	METAL 2 OUT	Output which switches the recording equalization of tape 2 to metal
40	R23	POWER ON OUT	Power on/off control output On = High Off = Low

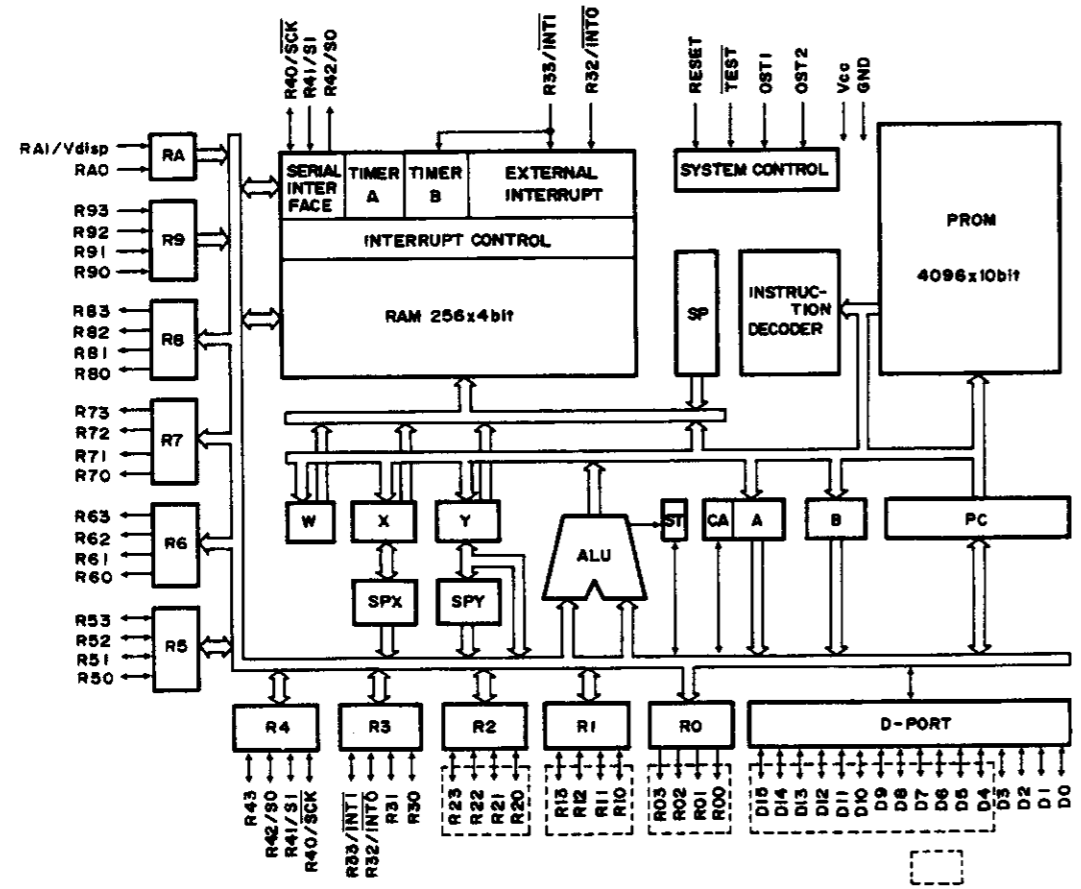

## CASSETTE DECK SECTION

Pin No.	Pin Name	Function Name	Function
41	R30	PLAY SOL1 OUT	Output which drives the solenoid of mechanism 1
42	R31	CPM 1 OUT	Output which drives the capstan motor of mechanism 1
43	R32	HI-SP 1 OUT	Switches the speed of the capstan motor of mechanism 1 at the time of high-speed tape copying
44	R33	LINE MUTE OUT	Playback output muting pin
45	R40	OPEN 1 OUT	Output for opening the loader of mechanism 1
46	R41	OPEN 2 OUT	Output for closing the loader of mechanism 2
47	R42	CLOSE 1 OUT	Output for opening the loader of mechanism 1
48	R43	CLOSE 2 OUT	Output for closing the loader of mechanism 2
49	R50/Vdisp	NC	Ground (In)
50	R51	NC	Ground (In)
51	R52	NC	Ground (In)
52	R53	NC	Ground (In)
53	R60/COMP	LED0	Output pin for mode display drive (Active = L)
54	R61/Vref	LED1	Output pin for mode display drive (Active = L)
55	R62/TOE1	LED2	Output pin for mode display drive (Active = L)
56	R63/TOE2	LED3	Output pin for mode display drive (Active = L)
57	R70/INT0	SERIAL IN	Serial communications input
58	R71/INT1	50/60 IN	50 Hz/60 Hz pulse input
59	R72/INT2	STANDBY IN	Input which sets the microcomputer to the standby mode
60	R73/INT3	NC	Ground (In)
61	R80/INT4	REC 2 OUT	Tape 2 record mode output
62	R81/INT5	REC MUTE 2 OUT	Tape 2 recording amplifier muting output
63	R82/SO1	OSC CONT2 OUT	Tape 2 bias oscillator control output
64	R83/SI1	HI-SP REC2 OUT	Time constant switching output at the time of high-speed tape copying
65	R90/SCK1	LCDCE OUT	LCD CE output
66	R91/SCK2	LCDCLK OUT	LCD clock output
67	R92/SI2	PLAY 1 OUT	Play 1 output
68	R93/SO2	LCDDATA OUT	LCD data output
69	RA0/ICT0	PLAY SOL2 OUT	Output which drives the solenoid of mechanism 2
70	RA1/ICT2	CPM2 OUT	Output which drives the capstan motor of mechanism 2
71	RA2/TOG	HI-SP 2 OUT	Switches the speed of the capstan motor of mechanism 2 at the time of high-speed tape copying
72	RA3/BUZZ	DOLBY R/P OUT	Dolby record/playback switching output
73	RB0/TOC	PB MUTE OUT	Playback equalizer muting output
74	RB1/TOG	NORMAL 2 OUT	Normal 2 output
75	AVCC	NC	5 V
76	RC0/AN0	REEL.T.1 IN	Reel pulse take-up 1 input
77	RC1/AN1	REEL.T.2 IN	Reel pulse take-up 2 input
78	RC2/AN2	REEL.S.1 IN	Reel pulse supply 1 input
79	RC3/AN3	REEL.S.2 IN	Reel pulse supply 2 input
80	RD0/AN4	KR0	Key return 0 input

## ● Button Input Description


Item	Button Name	Description of Function
1	F. PLAY	Commands the forward direction play mode. Commands the cue/revue mode with one-touch play operations of PLAY + REW/FF, or FF/REW during the play mode.
2	R. PLAY	Commands the play mode of the reverse direction. The one-touch play operations of the cue/revue mode are the same as with F. PLAY.
3	F. F	Commands the tape to be wound quickly in the right direction.
4	REW	Commands the tape to be wound quickly in the left direction.
5	STOP	Commands the stop mode. When there has been input from this button, there will be a change to the stop mode from whichever mode is currently set.
6	OPEN/CLOSE	Commands the open/close mode of the cassette tray. The open/close mode is switched cyclicly with the input of this button. This is a toggle operation. When there is input from this button with the power off, the power is switched on and there is then a shift to the open mode.
7	F. PLAY	Commands the forward direction play mode. Commands the cue/revue mode with one-touch play operations of PLAY + REW/FF, or FF/REW during the play mode.
8	R. PLAY	Commands the play mode of the reverse direction. The one-touch play operations of the cue/revue mode are the same as with F. PLAY.
9	F. F	Commands the tape to be wound quickly in the right direction.
10	REW	Commands the tape to be wound quickly in the left direction.
11	STOP	Commands the stop mode. When there has been input from this button, there will be a change to the stop mode from whichever mode is currently set.
12	OPEN/CLOSE	Commands the open/close mode of the cassette tray. The open/close mode is switched cyclicly with the input of this button. This is a toggle operation. When there is input from this button with the power off, the power is switched on and there is then a shift to the open mode.
13	REC/REC MUTE	Commands the record, record pause, and record muting modes. When there is button input in the stop mode, there will be a shift to the record pause mode. When there is button input in the record pause mode, there will be a shift to the record mute mode. When switched on simultaneously with PLAY, or when there is PLAY button input in the record pause mode, there will be a shift to the record mode. The conditions of the record mode must be satisfied.
14	COUNTER RESET	Resets the counter to "0000".
15	COUNTER 1/2	This key selects the counter display for either deck 1 or deck 2.
16	TAPE SIZE	Inputs the time of the tape length. Toggle operation.
17	POWER	Commands the power on/off mode of the set.
18	DUBBING	Records from deck 1 to deck 2.
19	CD SRS	Commands the CD SRS operation.

## ● Description of Switch Inputs

Item	Switch Name	Description of Function
1	REVERSE	Commands the one side or two side recording/playback modes and the endless playback mode.
2	DOLBY NR	Commands Dolby (B/C) on/off.

MICROPROCESSOR PERIPHERAL WIRING DIAGRAM

CASSETTE DECK SECTION

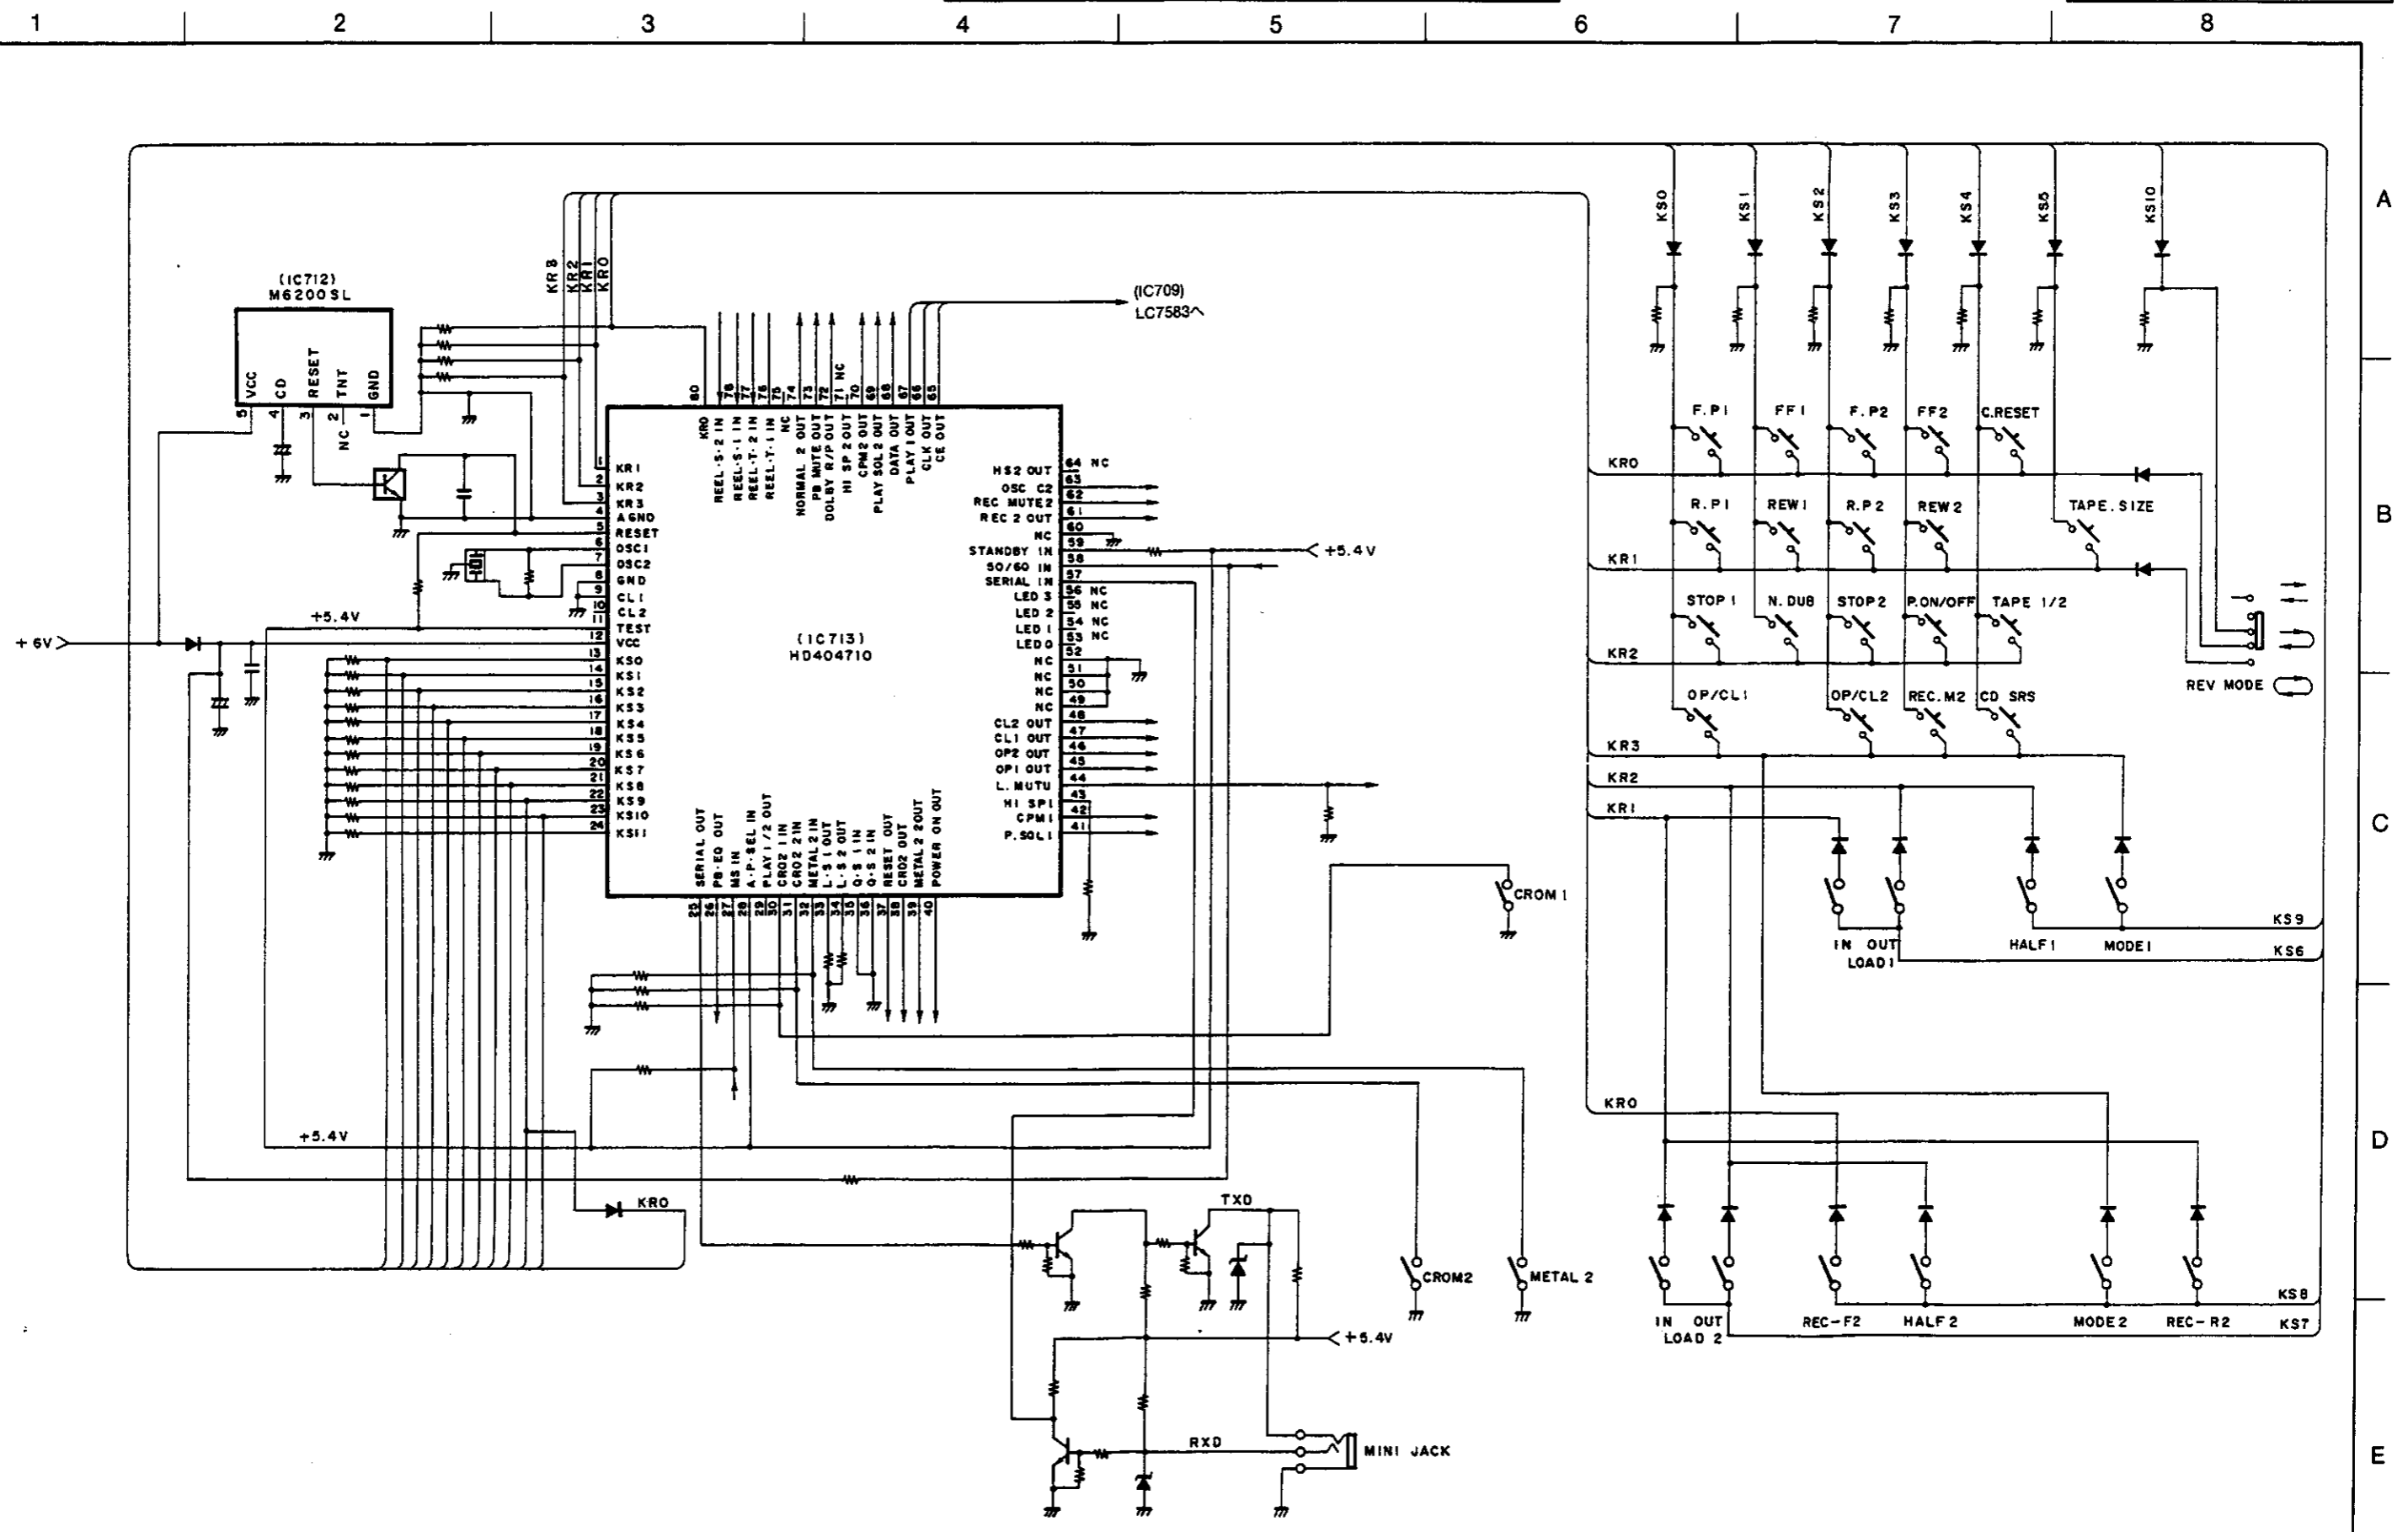

CASSETTE DECK SECTION

PRINTED WIRING BOARD

1

2

3

4

5

6

7

8

1U-2479 UDRW-250 UNIT ASS'Y  
Component Side

A


B

C

D

E

90

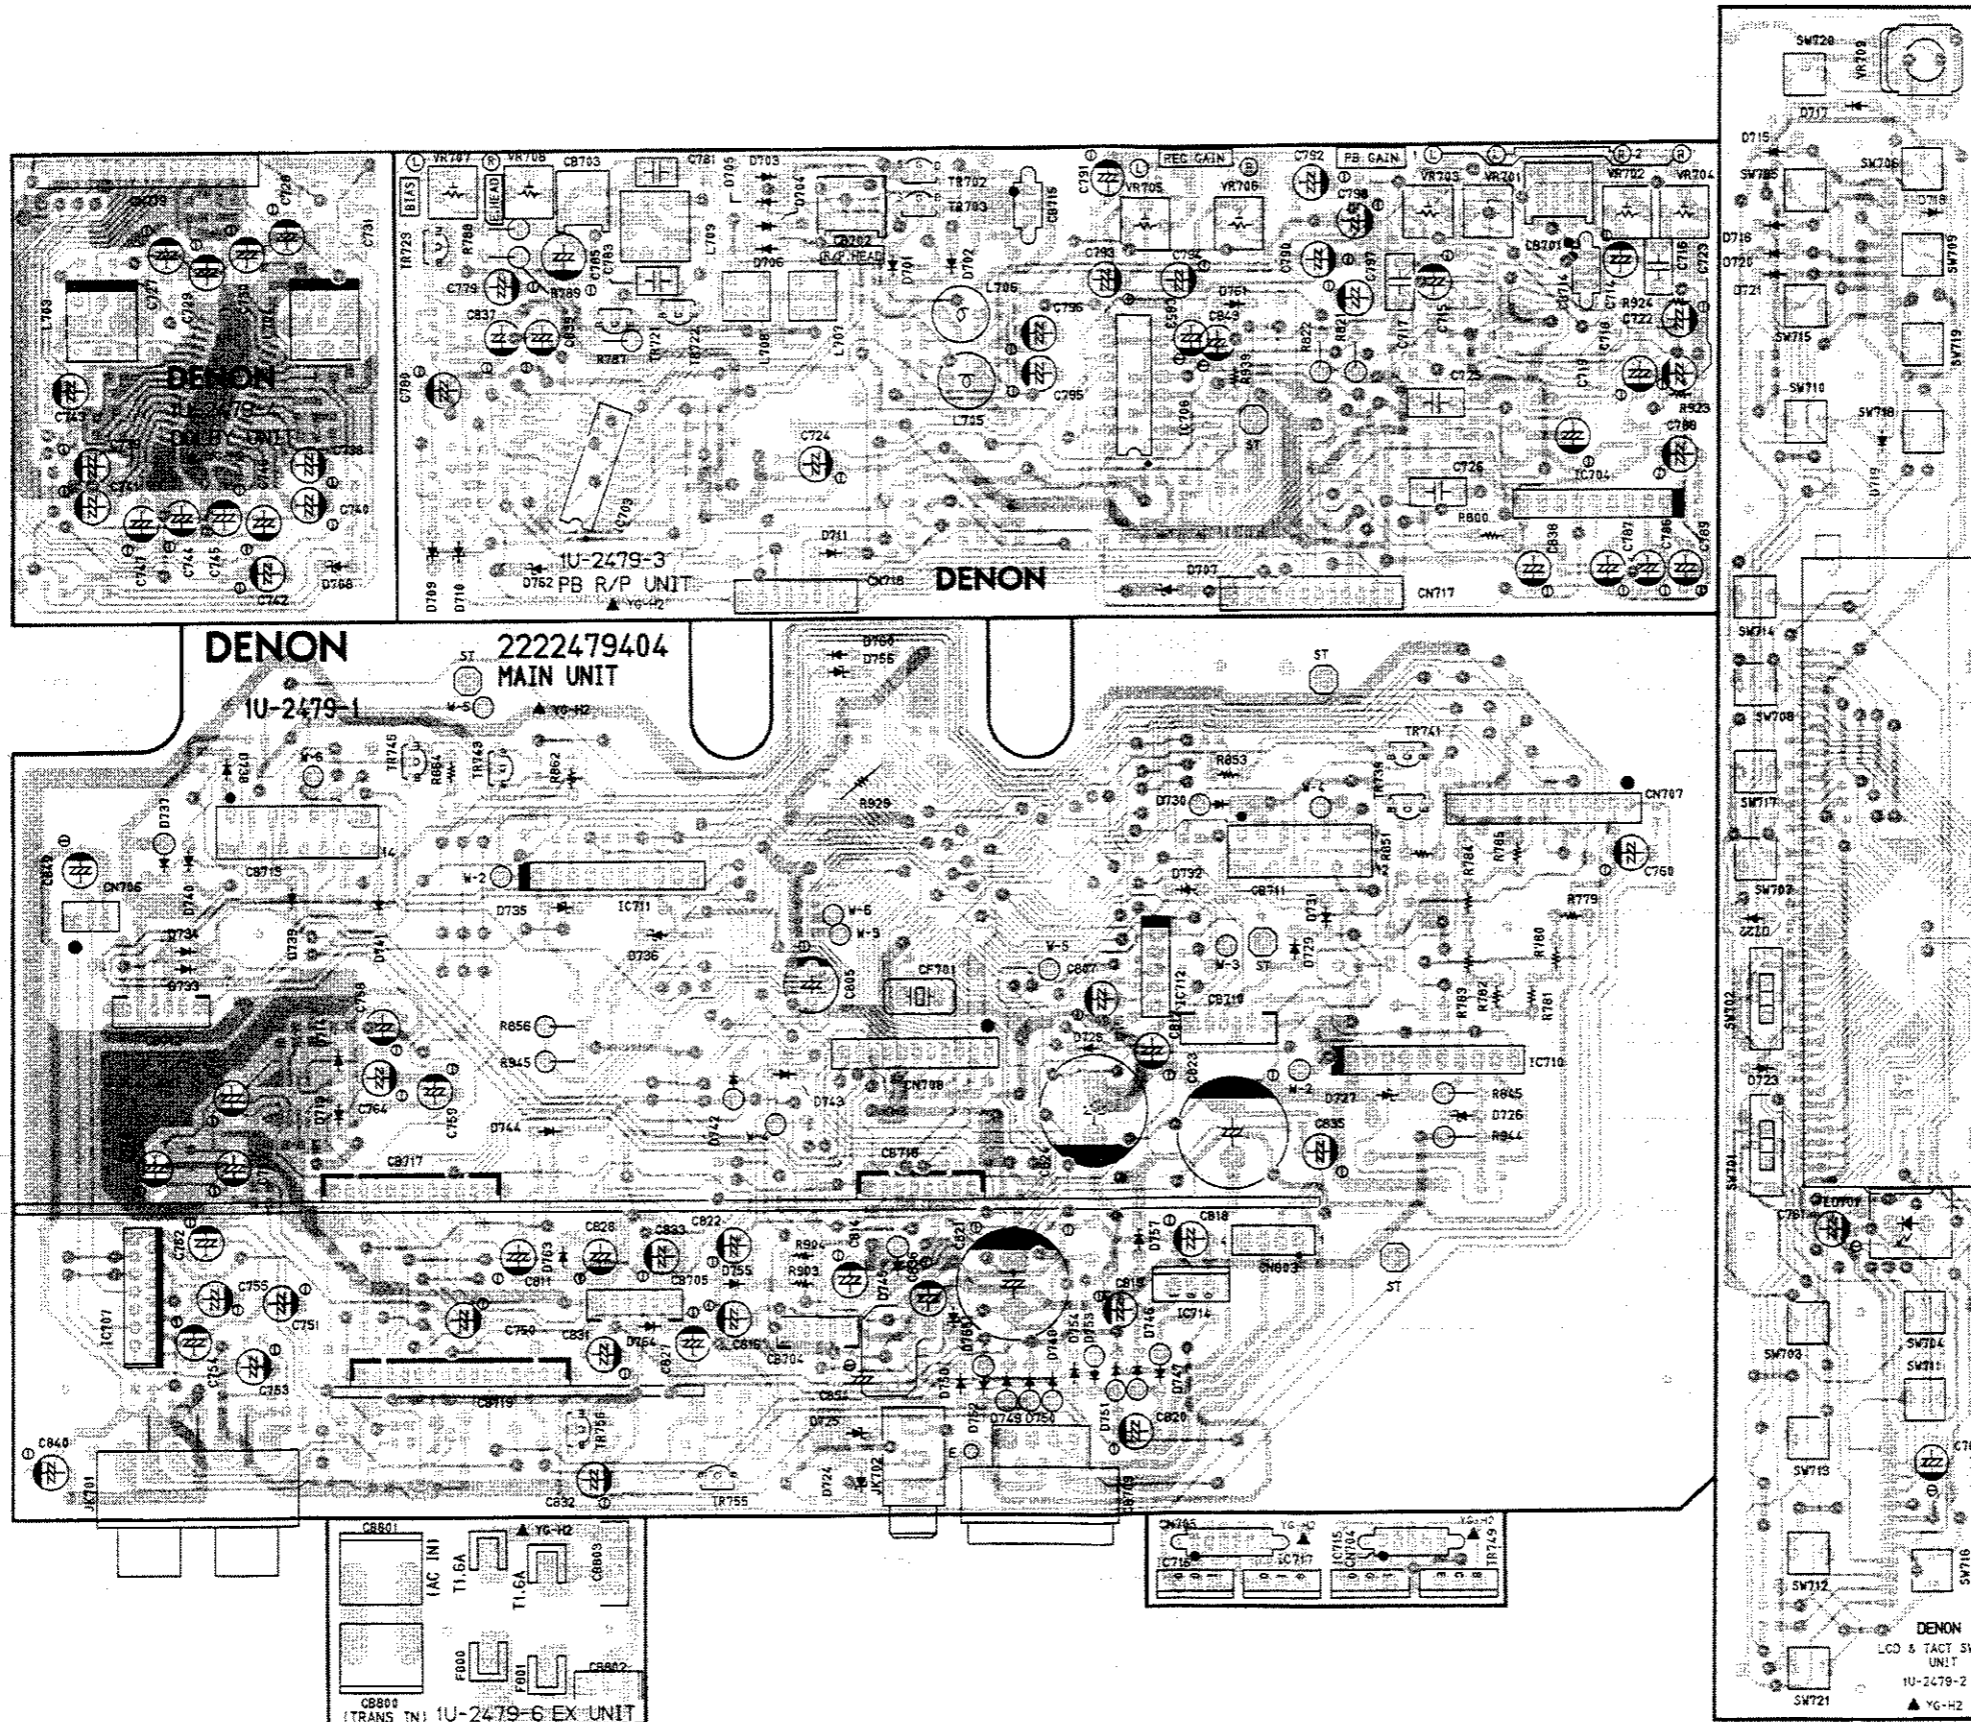




CASSETTE DECK SECTION

1 2 3 4 5 6 7 8

Pattern Side

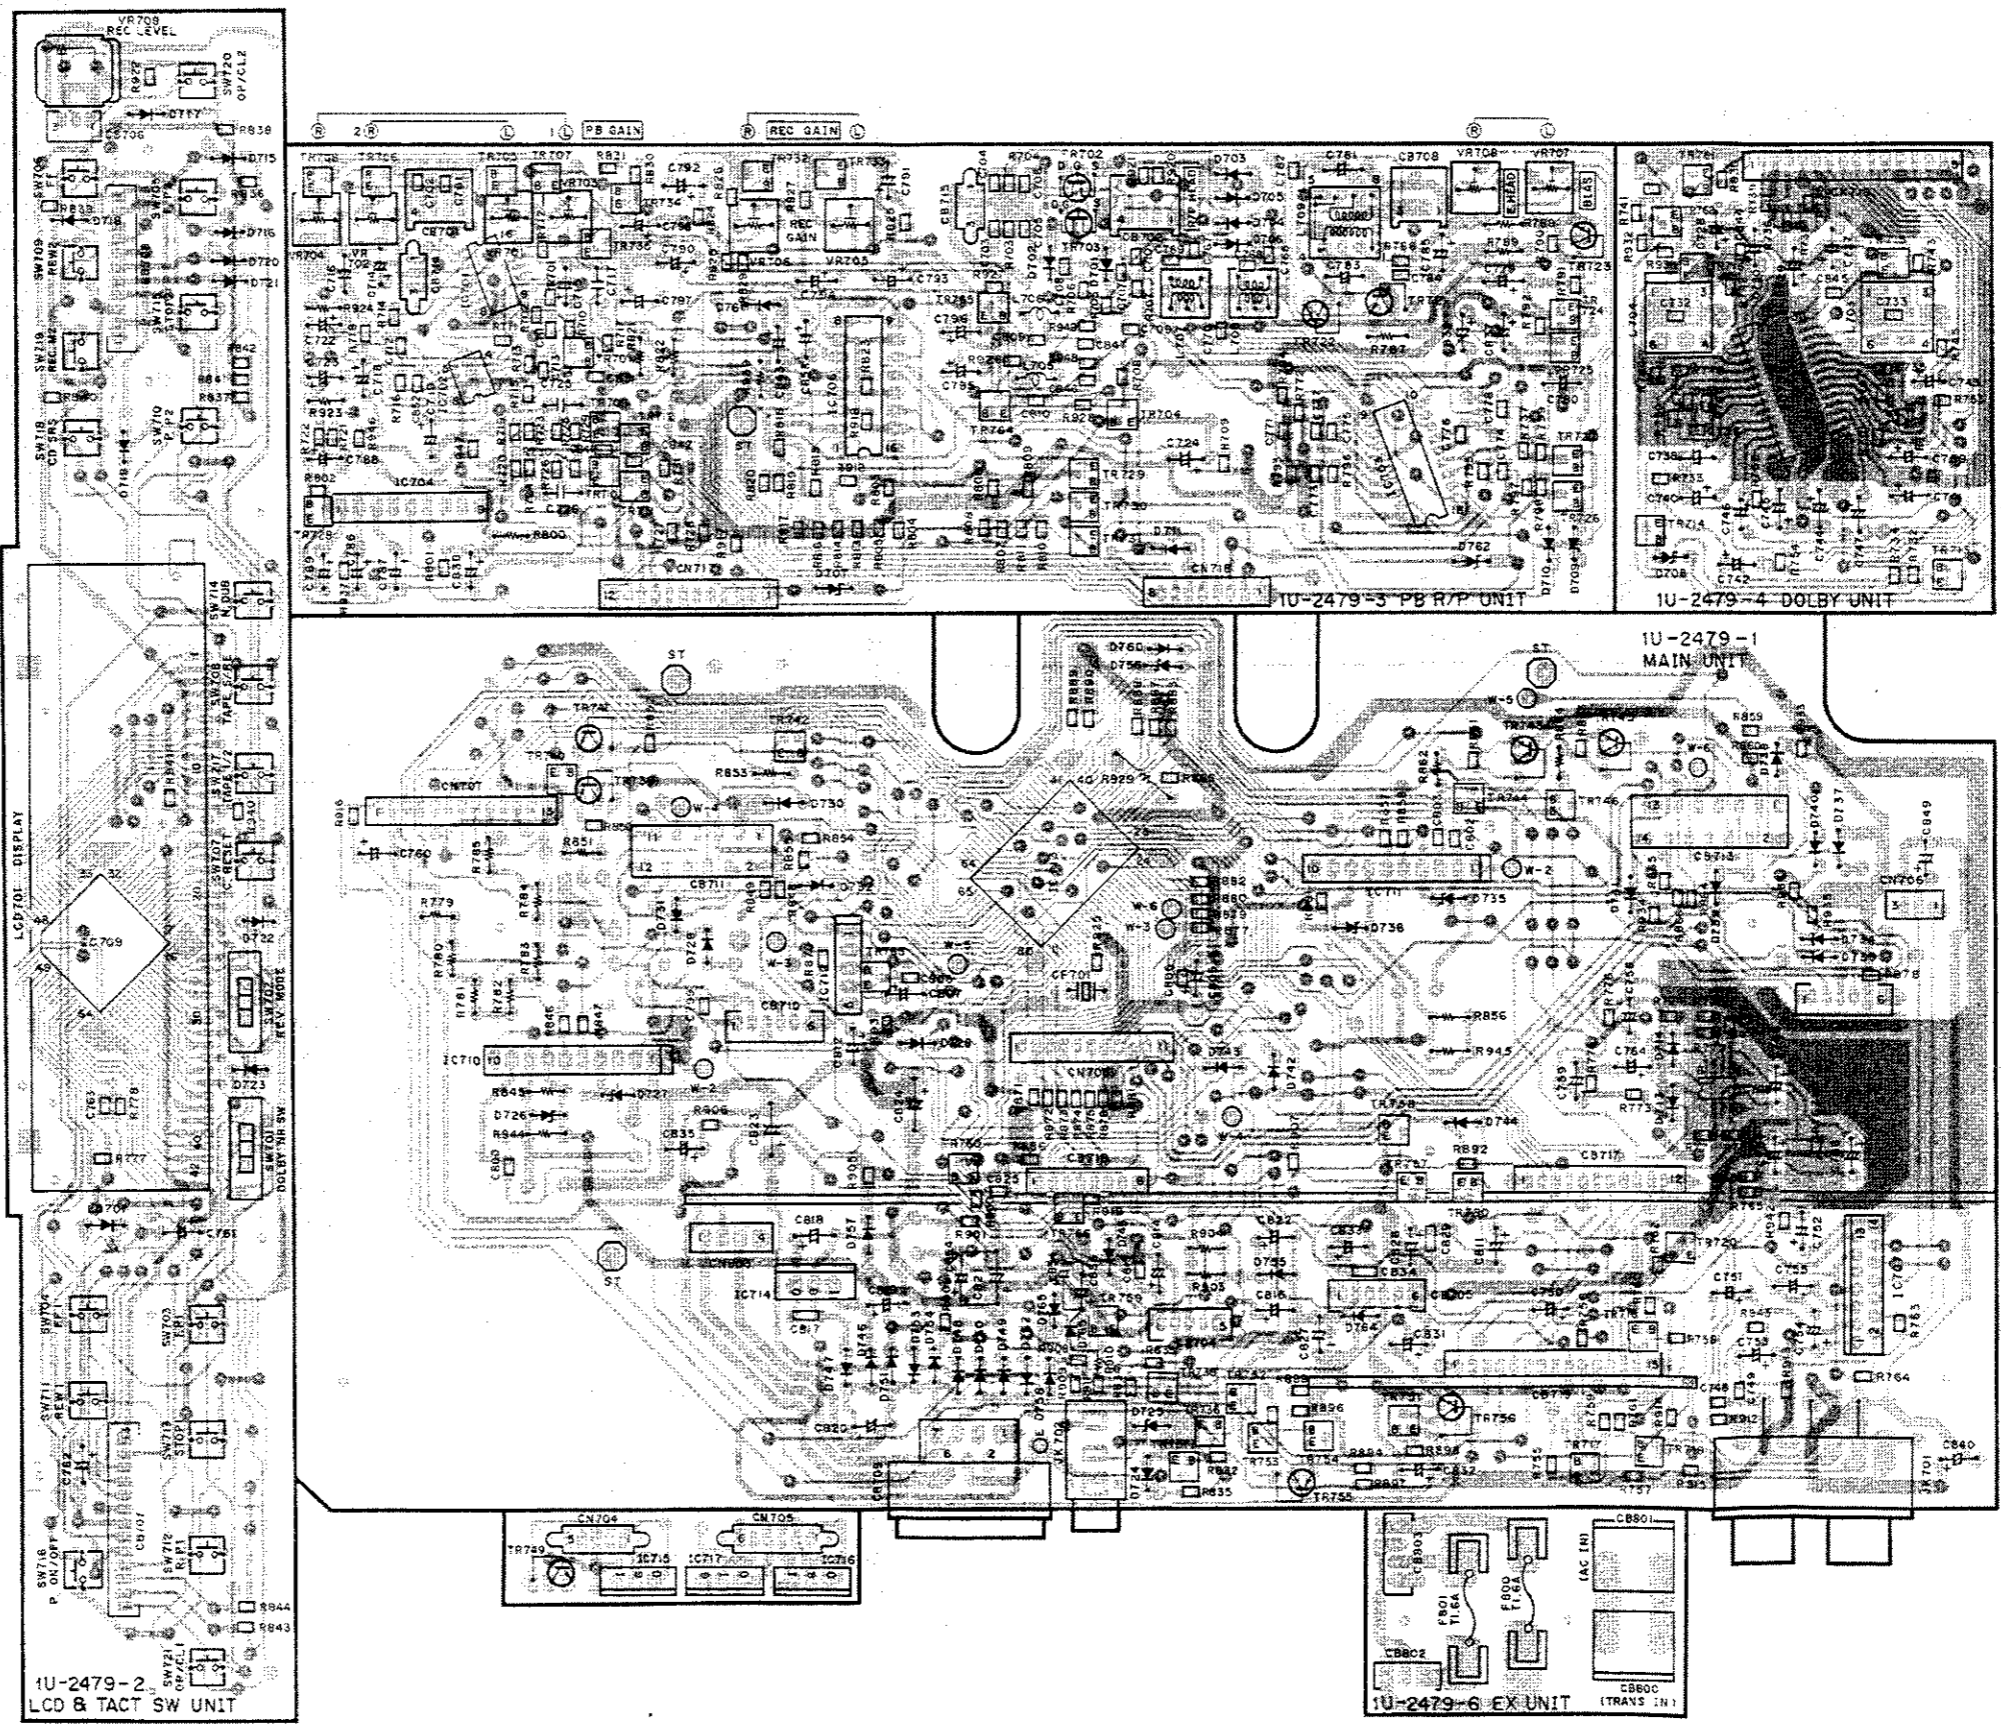

A  
B  
C  
D  
E

**CASSETTE DECK SECTION**

**NOTE ON PARTS LIST**

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W. Board parts list. (Refer to the Schematic Diagram for those parts.)

**WARNING:**

Parts marked with this symbol  $\Delta$   $\square$  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

**Resistors**

Ex.: **RN 14K 2E 182 G FR**  
Type Shape and performance Power Resistance Allowable error Others

RD : Carbon Film	2B : 1/8W	F : ±1%	P : Pulse-resistant type
RC : Composition	2E : 1/4W	G : ±2%	NL : Low noise type
RS : Metallic oxide Film	2H : 1/2W	J : ±5%	NB : Non-burning type
RW : Winding	3A : 1W	K : ±10%	FR : Fuse-resistor
RN : Metal film	3D : 2W	M : ±20%	F : Lead wire forming
RK : Metal mixture	3F : 3W		
	3H : 5W		

**\* Resistance**

**1 8 2** ⇒ 1800 ohm = 1.8 kohm  
Indicates number of zeros after effective number  
2-digit effective number

• Units: ohm

**1 R 2** ⇒ 1.2 ohm

1-digit effective number.  
2-digit effective number, decimal point indicated by R.

• Units: ohm

**\* Capacity (electrolyte only)**

**2 2 R** ⇒ 2200 μF  
Indicates number of zeros after effective number.  
2-digit effective number.

• Units: μF

**2 R 2** ⇒ 2.2 μF

1-digit effective number.  
2-digit effective number, decimal point indicated by R.

• Units: μF

**Capacitors**

Ex.: **CE 04W 1H 2R2 M BP**  
Type Shape and performance Dielectric strength Capacity Allowable error Others

CE : Aluminum foil electrolyte	OJ : 6.3V	F : ±1%	HS : High stability type
CA : Aluminum solid electrolyte	1A : 10V	G : ±2%	BP : Non-polar type
CS : Tantalum electrolyte	1C : 16V	J : ±5%	HR : Ripple-resistant type
CQ : Film	1E : 25V	K : ±10%	DL : For charge and discharge
CK : Ceramic	1V : 35V	M : ±20%	HF : For assuring high frequency
CC : Ceramic	1H : 50V	Z : +80%	U : UL part
CP : Oil	2A : 100V	-20%	C : CSA part
CM : Mica	2B : 125V	P : +100%	W : UL-CSA type
CF : Metallized	2C : 160V	-0%	F : Lead wire forming
CH : Metallized	2D : 200V	C : ±0.25pF	
	2E : 250V	D : ±0.5pF	
	2H : 500V	-	
	2J : 630V		

**\* Capacity (except electrolyte)**

**2 R 2** ⇒ 2200pF = 2200 μF = 0.002 μF  
(More than 2) Indicates number of zeros after effective number.  
2-digit effective number.

• Units: μF

**2 2 1** ⇒ 220pF

(0 or 1) Indicates number of zeros after effective number.  
2-digit effective number.

• Units: pF

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

**1U-2479A P.W.B UNIT ASSY PARTS LIST**

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
<b>SEMICONDUCTORS GROUP</b>							
IC701	262 1211 904	IC HD14053BFP		TR733	273 0384 900	Transister 2SC2412K(S)	
IC702	263 0700 008	IC M5220FP		TR734	269 0083 901	Transister DTA144EK	Built in Resistor
IC703	263 0354 001	IC μPC1297CA		TR735	269 0082 902	Transister DTC114EK	Built in Resistor
IC704	263 0621 006	IC LA2000		TR736	269 0082 902	Transister DTC114EK	Built in Resistor
IC705	262 1267 903	IC CXA1331M		TR737	269 0054 901	Transister DTC144EK	Built in Resistor
IC706	263 0589 009	IC CXA1198AP		TR738	269 0054 901	Transister DTC144EK	Built in Resistor
IC707	263 0761 005	IC M51131L		TR739	272 0025 907	Transister 2SB562(C)	
IC708	263 0615 902	IC BA15208F		TR740	269 0088 906	Transister DTC114TK	Built in Resistor
IC709	262 1363 001	IC LC7583		TR741	272 0025 907	Transister 2SB562(C)	
IC710	263 0402 005	IC BA6209		TR742	269 0088 906	Transister DTC114TK	Built in Resistor
IC711	263 0402 005	IC BA6209		TR743	272 0025 907	Transister 2SB562(C)	
IC712	263 0822 009	IC M62005L		TR744	269 0088 906	Transister DTC114TK	Built in Resistor
IC713	262 1626 201	IC HD404710A---	μ-com	TR745	272 0025 907	Transister 2SB562(C)	
IC714	263 0794 001	IC NJM78M12FA(S)	Regulator +12V	TR746	269 0088 906	Transister DTC114TK	Built in Resistor
IC715	263 0792 003	IC NJM78M06FA(S)	Regulator +6 V	TR749	273 0330 006	Transister 2SC3852	
IC716	263 0815 003	IC NJM78M08FA(S)	Regulator +8 V	TR750	273 0384 900	Transister 2SC2412K(S)	
IC717	263 0511 006	IC NJM79M08FA	Regulator -8 V	TR751	273 0384 900	Transister 2SC2412K(S)	
TR701	269 0102 905	Transister DTC124EK	Built in Resistor	TR752	269 0054 901	Transister DTC144EK	Built in Resistor
TR702	275 0042 905	FET 2SK373(Y)		TR753	273 0384 900	Transister 2SC2412K(S)	
TR703	275 0042 905	FET 2SK373(Y)		TR754	269 0082 902	Transister DTC114EK	Built in Resistor
TR704	269 0083 901	Transister DTA144EK	Built in Resistor	TR755	271 0192 905	Transister 2SA933S(S)	
TR705	269 0054 901	Transister DTC144EK	Built in Resistor	TR756	274 0036 905	Transister 2SD468(C)	
TR706	269 0054 901	Transister DTC144EK	Built in Resistor	TR757	269 0083 901	Transister DTA144EK	Built in Resistor
TR707	269 0054 901	Transister DTC144EK	Built in Resistor	TR758	269 0082 902	Transister DTC114EK	Built in Resistor
TR708	269 0054 901	Transister DTC144EK	Built in Resistor	TR759	273 0384 900	Transister 2SC2412K(S)	
TR709	273 0384 900	Transister 2SC2412K(S)		TR761	269 0054 901	Transister DTC144EK	Built in Resistor
TR710	273 0384 900	Transister 2SC2412K(S)		TR762	269 0054 901	Transister DTC144EK	Built in Resistor
TR711	273 0384 900	Transister 2SC2412K(S)		TR763	269 0054 901	Transister DTC144EK	Built in Resistor
TR712	273 0384 900	Transister 2SC2412K(S)		TR764	269 0066 902	Transister DTC323TK	Built in Resistor
TR713	269 0082 902	Transister DTC114EK	Built in Resistor	TR765	269 0066 902	Transister DTC323TK	Built in Resistor
TR714	269 0082 902	Transister DTC114EK	Built in Resistor	TR766	269 0082 902	Transister DTC114EK	Built in Resistor
TR715	269 0066 902	Transister DTC323TK	Built in Resistor	TR780	269 0083 901	Transister DTA144EK	Built in Resistor
TR716	269 0066 902	Transister DTC323TK	Built in Resistor				
TR717	269 0066 902	Transister DTC323TK	Built in Resistor	D701	276 0432 903	Diode 1SS270A	
TR718	269 0066 902	Transister DTC323TK	Built in Resistor	D702	276 0432 903	Diode 1SS270A	
TR719	269 0066 902	Transister DTC323TK	Built in Resistor	D703	276 0432 903	Diode 1SS270A	
TR720	269 0066 902	Transister DTC323TK	Built in Resistor	D704	276 0432 903	Diode 1SS270A	
TR721	273 0303 910	Transister 2SC1740S(S)		D705	276 0432 903	Diode 1SS270A	
TR722	273 0303 910	Transister 2SC1740S(S)		D706	276 0432 903	Diode 1SS270A	
TR723	272 0025 907	Transister 2SB562(C)		D707	276 0461 903	Zener Diode HZS6A-1	6 V
TR724	269 0082 902	Transister DTC114EK	Built in Resistor	D708	276 0468 906	Zener Diode HZS9B-1	9 V
TR725	269 0082 902	Transister DTC114EK	Built in Resistor	D709	276 0468 906	Zener Diode HZS9B-1	9 V
TR726	269 0082 902	Transister DTC114EK	Built in Resistor	D710	276 0468 906	Zener Diode HZS9B-1	9 V
TR727	269 0082 902	Transister DTC114EK	Built in Resistor	D711	276 0432 903	Diode 1SS270A	
TR728	273 0384 900	Transister 2SC2412K(S)		D713	276 0432 903	Diode 1SS270A	
TR729	269 0082 902	Transister DTC114EK	Built in Resistor	D714	276 0432 903	Diode 1SS270A	
TR730	269 0082 902	Transister DTC114EK	Built in Resistor	D715	276 0432 903	Diode 1SS270A	
TR731	269 0082 902	Transister DTC114EK	Built in Resistor	D716	276 0432 903	Diode 1SS270A	
TR732	273 0384 900	Transister 2SC2412K(S)		D717	276 0432 903	Diode 1SS270A	
				D718	276 0432 903	Diode 1SS270A	
				D719	276 0432 903	Diode 1SS270A	



CASSETTE DECK SECTION

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	
R878	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	R936	247 0008 928	Chip Carbon 2.2kohm 1/10W	RM73B--222J	C719	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C772	257 0006 985	Chip Ceramic 820 pF/50 V	CC73SL1H821J	
R879	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	R937	247 0010 990	Chip Carbon 30 kohm 1/10W	RM73B--303J	C722	254 4252 927	Electrolytic 47µF/10 V	CE04W1A470M	C773	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K	
R880	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	R938	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	C723	254 4252 927	Electrolytic 47µF/10 V	CE04W1A470M	C774	257 0010 900	Chip Ceramic 0.01µF/50 V	CK73B1H103K	
R881	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	R940	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	C724	254 4302 974	Electrolytic 100µF/10 V	CE04W1A101M(SRE)	C775	257 0010 984	Chip Ceramic 0.047µF/50 V	CK73B1H473K	
R882	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	R941	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	C725	255 1265 936	Plastic Film 0.01µF/50 V	CQ93M1H103J(B)	C776	257 0010 984	Chip Ceramic 0.047µF/50 V	CK73B1H473K	
R883	247 0009 901	Chip Carbon 4.7kohm 1/10W	RM73B--472J	R942	247 0011 999	Chip Carbon 75 kohm 1/10W	RM73B--753J	C726	255 1265 936	Plastic Film 0.01µF/50 V	CQ93M1H103J(B)	C777	257 0010 942	Chip Ceramic 0.022µF/50 V	CK73B1H223K	
R884	247 0009 901	Chip Carbon 4.7kohm 1/10W	RM73B--472J	R943	247 0011 999	Chip Carbon 75 kohm 1/10W	RM73B--753J	C727	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	C778	257 0010 942	Chip Ceramic 0.022µF/50 V	CK73B1H223K	
R885	247 0009 901	Chip Carbon 4.7kohm 1/10W	RM73B--472J	R946	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C728	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	C779	254 4304 943	Electrolytic 10µF/35 V	CE04W1V100M(SRE)	
R886	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	R947	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C729	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	C780	254 4303 957	Electrolytic 22µF/25 V	CE04W1E220M(SRE)	
R887	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	R948	247 0010 929	Chip Carbon 15 kohm 1/10W	RM73B--153J	C730	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	C781	255 1265 936	Plastic Film 0.0082µF/200V	CQ92M2D822J	
R888	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	R949	247 0010 929	Chip Carbon 15 kohm 1/10W	RM73B--153J	C731	254 4299 003	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C782	257 0002 921	Chip Ceramic 10 pF/50 V	CC73SL1H100D	
R889	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J					C732	257 0009 937	Chip Ceramic 2700 pF/50 V	CK73B1H272K	C783	255 1265 978	Plastic Film 0.022µF/50 V	CQ93M1H223J(B)	
R890	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	<del>ΔR787</del>	<del>247 2313 985</del>	<del>Carbon Film 47 kohm 1/4W(NB)</del>	<del>RD14B2E820JFRS</del>	C733	257 0009 937	Chip Ceramic 2700 pF/50 V	CK73B1H272K	C784	257 0009 937	Chip Ceramic 2700 pF/50 V	CK73B1H272K	
R891	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	<del>ΔR788</del>	<del>247 2316 925</del>	<del>Fusible 22 ohm 1/4W(NB)</del>	<del>RD14B2E820JFRS</del>	C734	257 0009 924	Chip Ceramic 2200 pF/50 V	CK73B1H222K	C785	254 4256 952	Electrolytic 220µF/25 V	CE04W1E221M	
R892	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	<del>ΔR789</del>	<del>247 2315 925</del>	<del>Fusible 22 ohm 1/4W(NB)</del>	<del>RD14B2E820JFRS</del>	C735	257 0009 924	Chip Ceramic 2200 pF/50 V	CK73B1H222K	C786	254 4305 900	Electrolytic 0.1µF/50 V	CE04W1H0R1M(SRE)	
R894	247 0008 931	Chip Carbon 2.4kohm 1/10W	RM73B--242J	<del>ΔR821</del>	<del>247 2377 921</del>	<del>Carbon Film 22 kohm 1/4W(NB)</del>	<del>RD14B2E820JNBS</del>	C736	257 0009 924	Chip Ceramic 2200 pF/50 V	CK73B1H222K	C787	254 4305 900	Electrolytic 0.1µF/50 V	CE04W1H0R1M(SRE)	
R896	247 0010 961	Chip Carbon 22 kohm 1/10W	RM73B--223J	<del>ΔR822</del>	<del>247 2377 921</del>	<del>Carbon Film 22 kohm 1/4W(NB)</del>	<del>RD14B2E820JNBS</del>	C737	257 0009 924	Chip Ceramic 2200 pF/50 V	CK73B1H222K	C788	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	
R897	247 0000 931	Chip Carbon 2.4kohm 1/10W	RM73B--242J	<del>ΔR845</del>	<del>247 2050 904</del>	<del>Resistor Output 22 kohm 1/4W(NB)</del>	<del>RS14B3A220JNBS(S)</del>	C738	254 4278 943	Electrolytic 0.56µF/50 V	CE04W1HR56M	C789	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	
R898	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	<del>ΔR868</del>	<del>247 2050 904</del>	<del>Resistor Output 22 kohm 1/4W(NB)</del>	<del>RS14B3A220JNBS(S)</del>	C739	254 4278 943	Electrolytic 0.56µF/50 V	CE04W1HR56M	C790	254 4252 930	Electrolytic 100µF/10 V	CE04W1A101M	
R899	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	<del>ΔR869</del>	<del>247 2050 904</del>	<del>Resistor Output 22 kohm 1/4W(NB)</del>	<del>RS14B3A220JNBS(S)</del>	C740	254 4305 939	Electrolytic 0.33µF/50 V	CE04W1HR33M(SRE)	C791	254 4305 942	Electrolytic 0.47µF/50 V	CE04W1HR47M(SRE)	
R900	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	<del>ΔR845</del>	<del>247 2050 904</del>	<del>Resistor Output 22 kohm 1/4W(NB)</del>	<del>RS14B3A220JNBS(S)</del>	C741	254 4305 939	Electrolytic 0.33µF/50 V	CE04W1HR33M(SRE)	C792	254 4305 942	Electrolytic 0.47µF/50 V	CE04W1HR47M(SRE)	
R901	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J					C742	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C793	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	
R902	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	VR701	211 6091 901	Semi Fixed Resistor 1k ohm	V06PB102	C743	254 4304 024	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C794	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	
R905	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0J	VR702	211 6091 901	Semi Fixed Resistor 1k ohm	V06PB102	C744	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C795	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	
R906	247 0007 945	Chip Carbon 1 kohm 1/10W	RM73B--102J	VR703	211 6091 901	Semi Fixed Resistor 1k ohm	V06PB102	C745	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C796	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	
R907	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	VR704	211 6091 901	Semi Fixed Resistor 1k ohm	V06PB102	C746	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C797	254 4252 930	Electrolytic 100µF/10 V	CE04W1A101M	
R908	247 0005 905	Chip Carbon 100ohm 1/10W	RM73B--101J	VR705	211 6091 930	Semi Fixed Resistor 10k ohm	V06PB103	C747	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C798	254 4327 904	Electrolytic 1000µF/6.3 V	CE04W0J102M(SMG)	
R909	247 0009 901	Chip Carbon 4.7kohm 1/10W	RM73B--472J	VR706	211 6091 930	Semi Fixed Resistor 10k ohm	V06PB103	C748	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J	C799	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	
R910	247 0010 961	Chip Carbon 22 kohm 1/10W	RM73B--223J	VR707	211 6091 956	Semi Fixed Resistor 47k ohm	V06PB473	C749	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J	C800	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	
R911	247 0012 927	Chip Carbon 100kohm 1/10W	RM73B--104J	VR708	211 6091 956	Semi Fixed Resistor 47k ohm	V06PB473	C750	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C802	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	
R912	247 0006 962	Chip Carbon 470 ohm 1/10W	RM73B--471J	VR709	211 6090 009	Semi Fixed Resistor 100k ohm	V0920P07FA104	C751	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C803	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	
R913	247 0006 962	Chip Carbon 470 ohm 1/10W	RM73B--471J					C752	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C805	254 4327 904	Electrolytic 1000µF/6.3 V	CE04W0J102M(SMG)	
R914	247 0008 928	Chip Carbon 2.2kohm 1/10W	RM73B--222J					C753	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	C806	257 0012 966	Chip Ceramic 0.01µF/50 V	CK73F1H103Z	
R915	247 0008 928	Chip Carbon 2.2kohm 1/10W	RM73B--222J	<b>CAPACITORS GROUP</b>									C807	254 4305 942	Electrolytic 0.47µF/50 V	CE04W1HR47M(SRE)
R916	247 0010 961	Chip Carbon 22 kohm 1/10W	RM73B--223J	C701	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J	C754	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C808	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	
R917	247 0010 961	Chip Carbon 22 kohm 1/10W	RM73B--223J	C702	257 0006 927	Chip Ceramic 470 pF/50 V	CC73SL1H471J	C755	254 4299 919	Electrolytic 22µF/16 V	CE04W1C220M(SRE)	C809	257 0005 902	Chip Ceramic 150 pF/50 V	CC73SL1H151J	
R918	247 0012 927	Chip Carbon 100kohm 1/10W	RM73B--104J	C703	257 0005 986	Chip Ceramic 330 pF/50 V	CC73SL1H331J	C756	254 4305 997	Electrolytic 3.3µF/50 V	CE04W1H3R3M(SRE)	C810	257 0005 902	Chip Ceramic 150 pF/50 V	CC73SL1H151J	
R919	247 0007 945	Chip Carbon 1 kohm 1/10W	RM73B--102J	C704	257 0005 986	Chip Ceramic 330 pF/50 V	CC73SL1H331J	C757	254 4305 997	Electrolytic 3.3µF/50 V	CE04W1H3R3M(SRE)	C811	254 4304 927	Electrolytic 4.7µF/35 V	CE04W1V4R7M(SRE)	
R920	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C705	257 0002 921	Chip Ceramic 10 pF/50 V	CC73SL1H100D	C758	254 4305 997	Electrolytic 3.3µF/50 V	CE04W1H3R3M(SRE)	C812	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	
R921	247 0018 905	Chip Carbon 0 ohm 1/10W	RM73B--0R0K	C706	257 0002 921	Chip Ceramic 10 pF/50 V	CC73SL1H100D	C759	254 4305 997	Electrolytic 3.3µF/50 V	CE04W1H3R3M(SRE)	C813	257 1013 977	Chip Ceramic 0.068µF/25 V	CK73B1E683K	
R922	247 0011 944	Chip Carbon 47 kohm 1/10W	RM73B--473J	C707	257 0008 983	Chip Ceramic 1000 pF/50 V	CK73B1H102K	C760	254 4303 957	Electrolytic 22µF/25 V	CE04W1E220M(SRE)	C814	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	
R925	247 0014 967	Chip Carbon 1 kohm 1/10W	RM73B--105J	C708	257 0008 983	Chip Ceramic 1000 pF/50 V	CK73B1H102K	C761	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C816	254 4256 949	Electrolytic 100µF/25 V	CE04W1E101M	
R926	247 0007 945	Chip Carbon 1 kohm 1/10W	RM73B--102J	C709	257 0008 983	Chip Ceramic 1000 pF/50 V	CK73B1H102K	C762	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	C817	257 1013 977	Chip Ceramic 0.068µF/25 V	CK73B1E683K	
R927	247 0007 945	Chip Carbon 1 kohm 1/10W	RM73B--102J	C710	257 0012 966	Chip Ceramic 0.01µF/50 V	CK73F1H103Z	C763	257 0008 983	Chip Ceramic 1000 pF/50 V	CK73B1H102K	C818	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	
R928	247 0007 945	Chip Carbon 1 kohm 1/10W	RM73B--102J	C711	257 0012 966	Chip Ceramic 0.01µF/50 V	CK73F1H103Z	C764	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C819	254 4261 921	Electrolytic 100µF/50 V	CE04W1H101M	
R930	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	C712	257 0004 961	Chip Ceramic 100 pF/50 V	CC73SL1H101J	C765	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	C820	254 4258 950	Electrolytic 100µF/35 V	CE04W1V101M	
R931	247 0009 985	Chip Carbon 10 kohm 1/10W	RM73B--103J	C713	257 0004 961	Chip Ceramic 100 pF/50 V	CC73SL1H101J	C766	257 0004 961	Chip Ceramic 100 pF/50 V	CC73SL1H101J	C821	254 4256 790	Electrolytic 2200µF/25 V	CE04W1E222MC	
R932	247 0009 914	Chip Carbon 5.1kohm 1/10W	RM73B--512J	C714	254 4300 963	Electrolytic 100µF/6.3 V	CE04W0J101M(SRE)	C767	257 0004 961	Chip						



CASSETTE DECK SECTION


Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks	Q'ty
C827	254 4304 943	Electrolytic 10µF/35 V	CE04W1V100M(SRE)	CB706	205 0343 032	3 P Conn. Base(KR-PH)		1
C828	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	CB707	205 0375 039	13 P Conn. Base(KR-PH)		1
C829	257 1013 977	Chip Ceramic 0.068µF/25 V	CK73B1E683K	CB708	205 0375 013	11 P Conn. Base(KR-PH)		1
C831	254 4304 943	Electrolytic 10µF/35 V	CE04W1V100M(SRE)	CB710	205 0343 061	6 P Conn. Base(KR-PH)		1
C832	254 4305 942	Electrolytic 0.47µF/50 V	CE04W1HR47M(SRE)	CB712	205 0343 061	6 P Conn. Base(KR-PH)		1
C833	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	CB711	205 0553 026	12 P Trap Conn. Base		1
C834	257 1013 977	Chip Ceramic 0.068µF/25 V	CK73B1E683K	CB713	205 0554 041	14 P Trap Conn. Base		1
C835	254 4256 952	Electrolytic 220µF/25 V	CE04W1E221M	CB714	205 0409 031	3 P Dip Socket		1
C836	254 4305 997	Electrolytic 3.3µF/50 V	CE04W1H3R3M(SRE)	CB715	205 0409 031	3 P Dip Socket		1
C837	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	CN704	205 0409 057	5 P Dip Socket		1
C838	254 4302 974	Electrolytic 100µF/10 V	CE04W1A101M(SRE)	CN705	205 0409 060	6 P Dip Socket		1
C839	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	CB717	205 0535 028	12 P Conn. Base		1
C840	254 4305 968	Electrolytic 1µF/50 V	CE04W1H010M(SRE)	CB718	205 0535 002	8 P Conn. Base		1
C841	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	CN717	205 0536 027	12 P Conn. Socket		1
C842	257 0014 935	Chip Ceramic 0.1µF/25 V	CK73F1E104Z	CN718	205 0536 001	8 P Conn. Socket		1
C843	254 4299 906	Electrolytic 10µF/16 V	CE04W1C100M(SRE)	CN719	205 0708 017	15 P Conn. Socket		1
C846	257 0005 986	Chip Ceramic 330 pF/50 V	CC73SL1H331J	CN719	205 0707 018	15 P Conn. Base		1
C847	257 0005 986	Chip Ceramic 330 pF/50 V	CC73SL1H331J	W001	203 0226 014	1 P Contact Assy	L=120	1
C849	254 4260 948	Electrolytic 1µF/50 V	CE04W1H010M	W002	209 0220 005	Vinyl Wire(UL1007)	L=150	1
C851	257 0003 904	Chip Ceramic 22 pF/50 V	CC73SL1H220J	W003	209 0220 047	Vinyl Wire(UL1007)	L=100	1
C852	257 0003 904	Chip Ceramic 22 pF/50 V	CC73SL1H220J	W004	209 0220 005	Vinyl Wire(UL1007)	L=150	1
C853	254 4254 006	Electrolytic 10µF/16 V	CE04W1C100M	W005	209 0220 047	Vinyl Wire(UL1007)	L=100	1
C854	254 4260 058	Electrolytic 2.2µF/50 V	CE04W1H2R2M	W006	209 0220 047	Vinyl Wire(UL1007)	L=100	1
<b>OTHERS GROUP</b>								
L703	232 0109 003	MPX Filter		CN704	203 8337 015	5 P PH Conn. Cord	L=100	1
L704	232 0109 003	MPX Filter		CN705	204 0391 007	6 P PH Conn. Cord	L=100	1
L705	235 0020 945	Inductor 153J		CN706	203 4896 000	3 P KR-DA Conn. Cord	L=360	1
L706	235 0020 945	Inductor 153J		CN708	204 6387 002	11 P KR-DA Conn. Cord	L=300	1
L707	239 0010 009	HX Step up Coil		CN707	204 6388 001	13 P KR-DA Conn. Cord	L=300	1
L708	239 0010 009	HX Step up Coil		CN803	203 6352 005	4 P EH-SCN Conn. Cord	L=150	1
L709	232 0135 006	OSC Coil		<del>CB800</del>	<del>205 0581 001</del>	<del>12 P VH Conn. Base</del>		<del>1</del>
	212 5604 910	Tact Switch		<del>CB801</del>	<del>205 0581 001</del>	<del>12 P VH Conn. Base</del>		<del>1</del>
SW701	212 1078 906	Slide Switch(1-3)		<del>CB802</del>	<del>205 0233 032</del>	<del>3 P EH Conn. Base</del>		<del>1</del>
SW702	212 1078 906	Slide Switch(1-3)		CB803	205 0233 045	4 P EH Conn. Base		1
	449 0057 009	LCD Holder						
CF701	399 9018 003	Ceramic Vibrator	GST4.00MGW					
JK701	204 8266 008	4 P Pin Jsck(S-GND)						
JK702	204 8421 005	Mini Jack						
CB709	204 2429 003	7 P System Socket						
<del>AF800</del>	<del>205 1015 058</del>	<del>Fuse 1.6 A</del>						
<del>AF801</del>	<del>205 1015 058</del>	<del>Fuse 1.6 A</del>						
	202 0040 909	Fuse Clip						4
	205 0452 017	Style Pin						1
CB701	205 0343 045	4 P Conn. Base(KR-PH)	For PB Head					3
CB702	205 0321 041	4 P Conn. Base(Red)	For R/PB Head					1
CB703	205 0355 033	3 P KR Conn. Base(L)						1
CB704	205 0343 058	5 P Conn. Base(KR-PH)						1
CB705	205 0343 061	6 P Conn. Base(KR-PH)						1

CASSETTE DECK SECTION


WIRING DIAGRAM

1 2 3 4 5 6 7 8

A  
B  
C  
D  
E

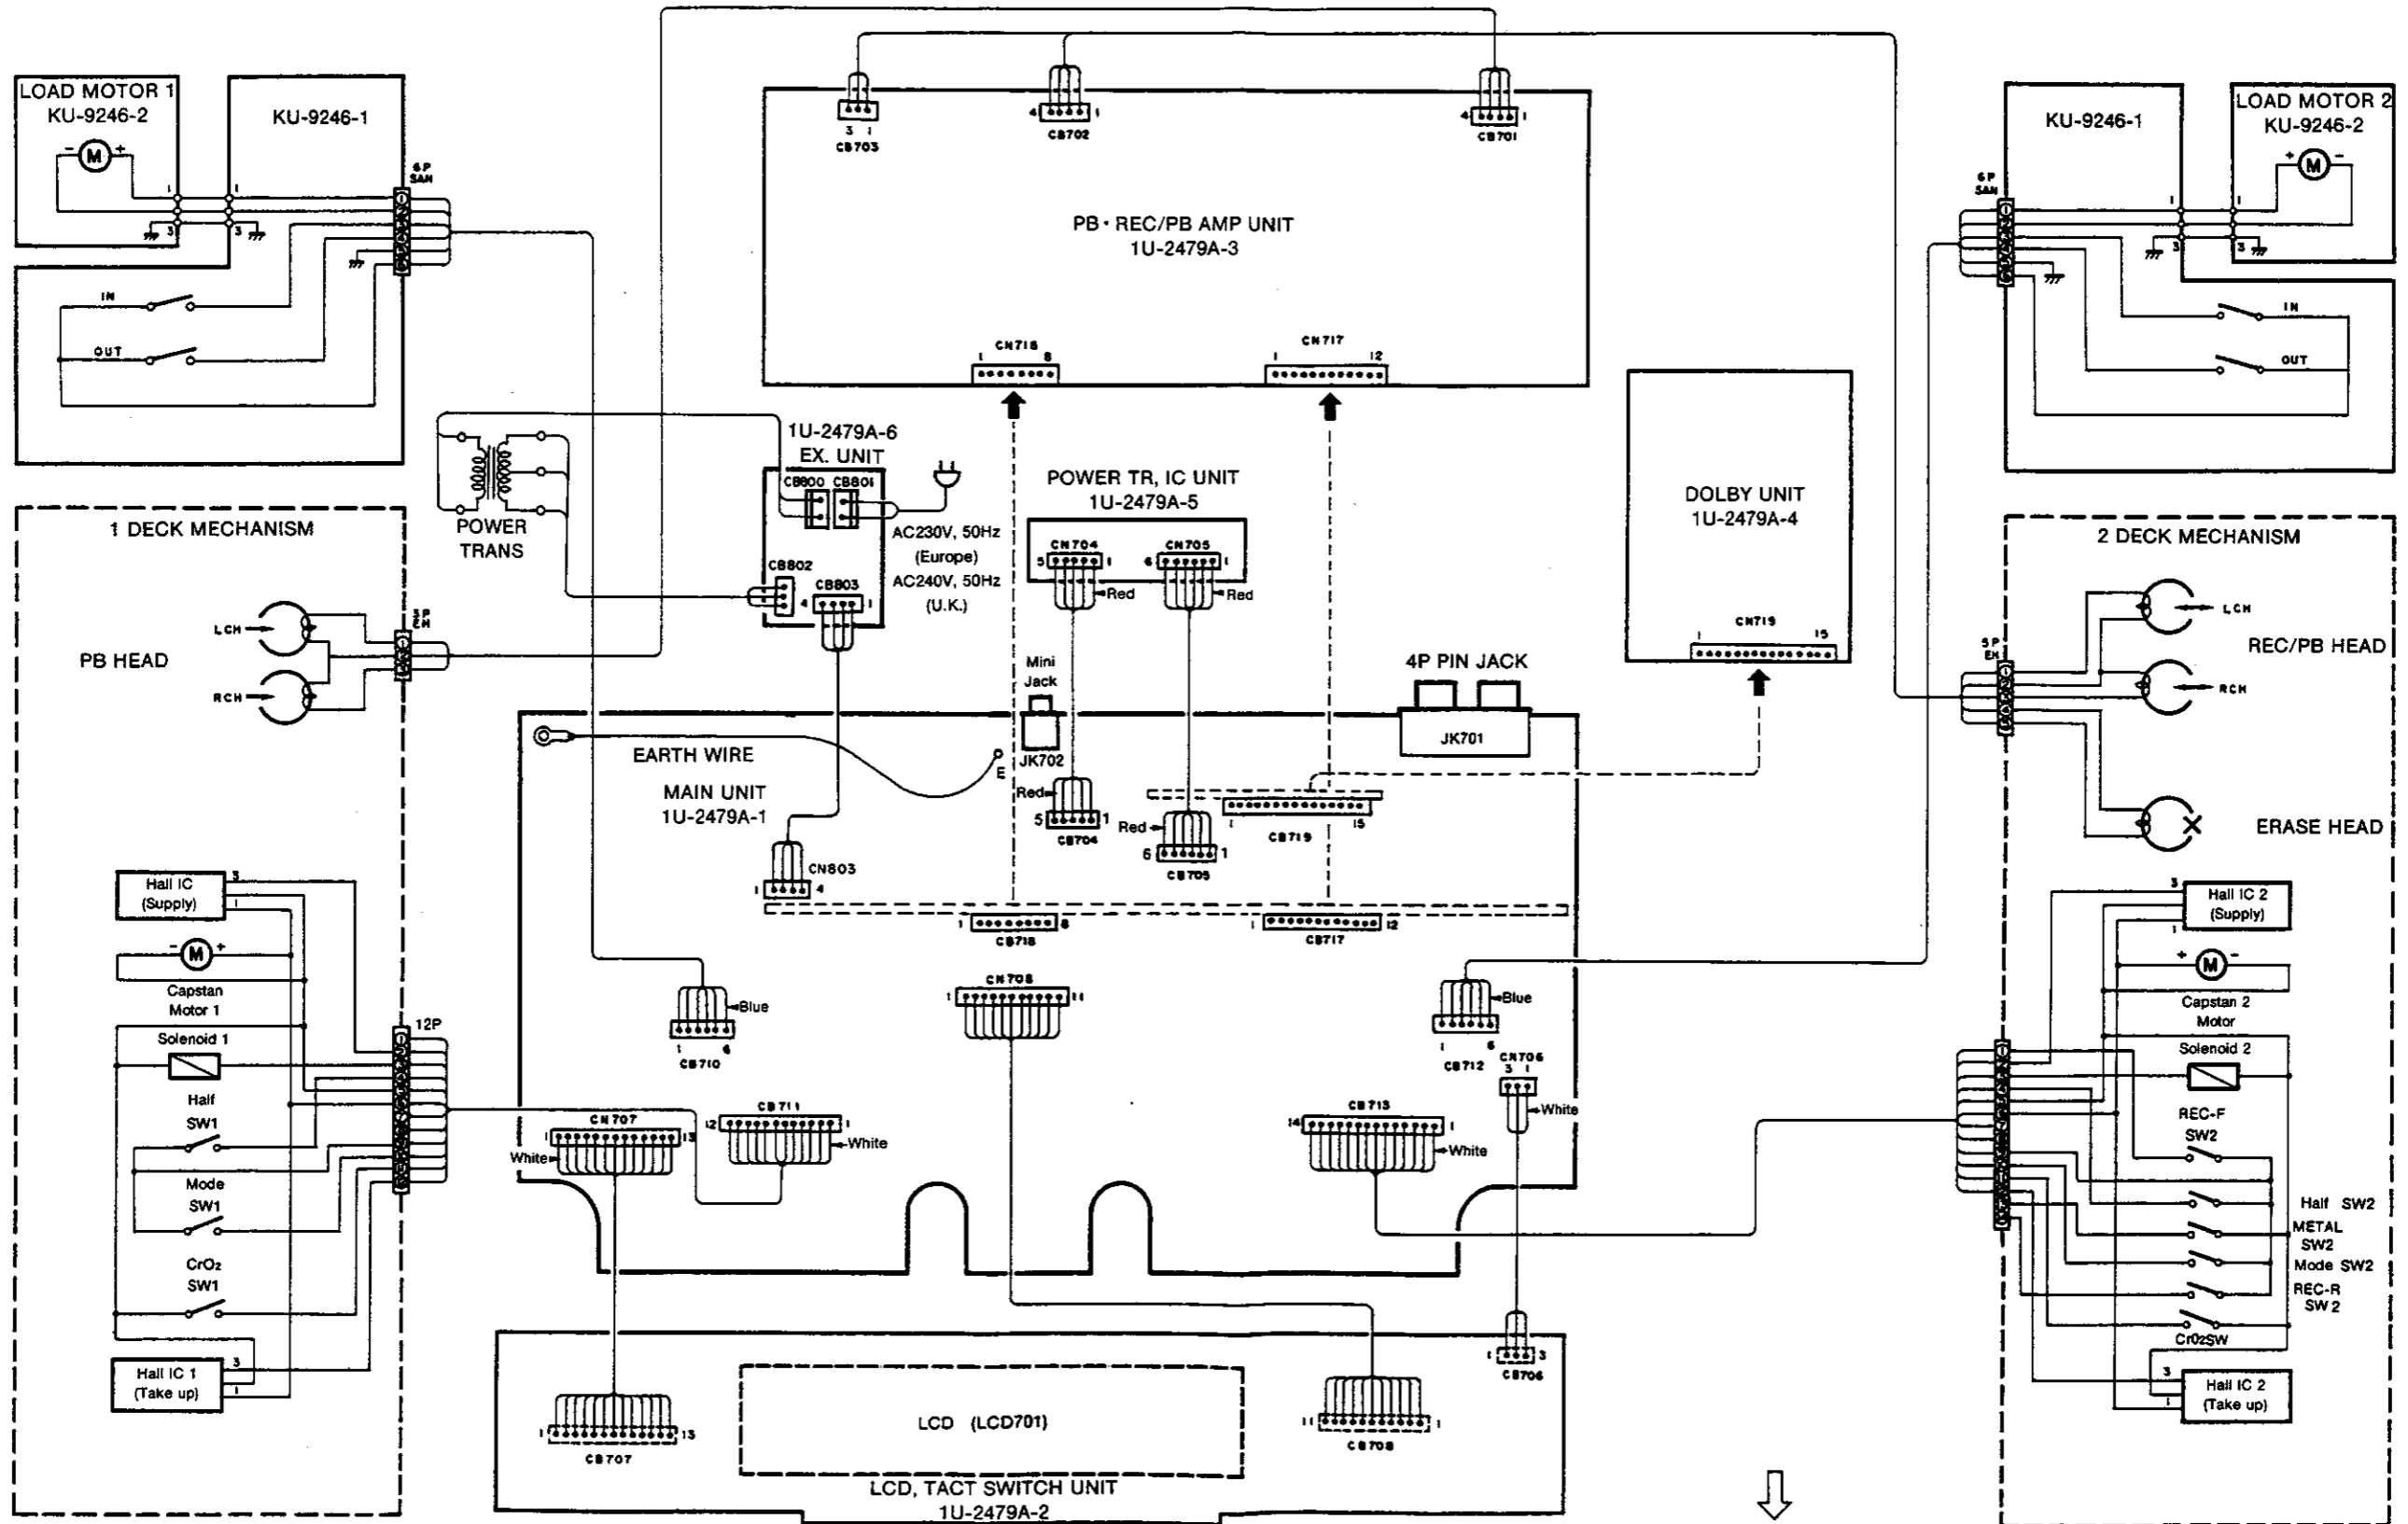

FRONT PANEL SIDE

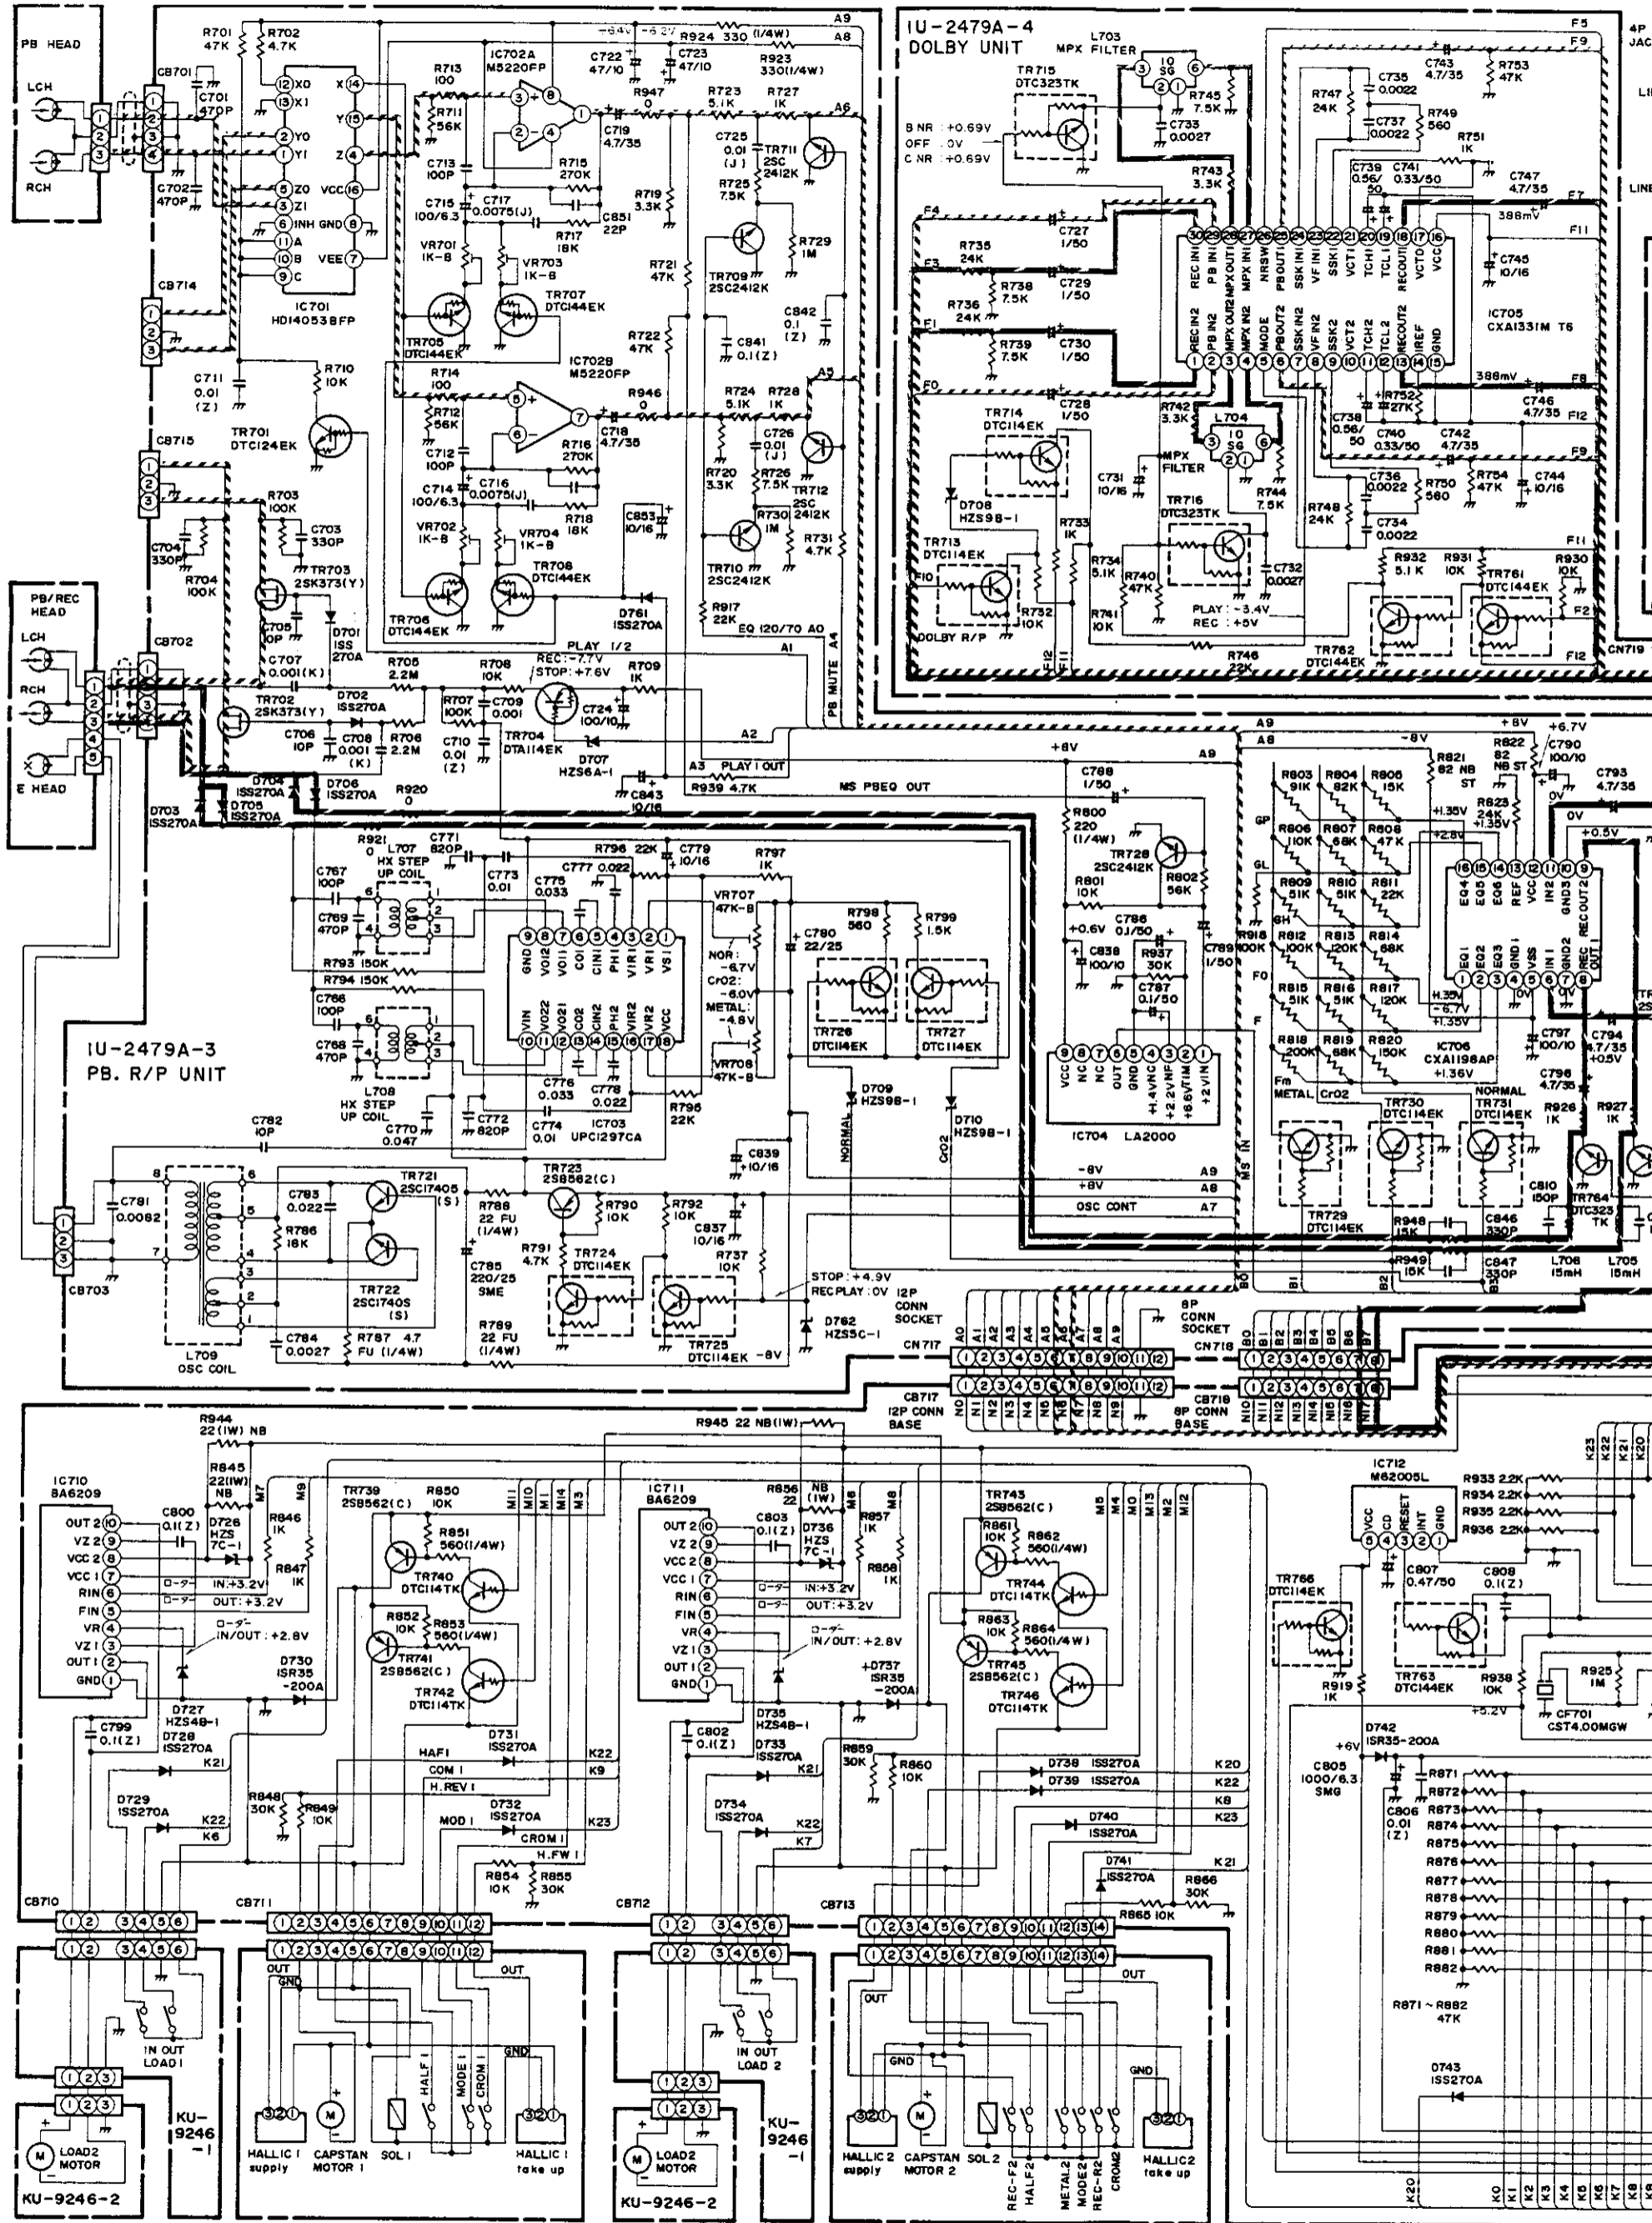


//// P.B. SIGNAL LINE  
 --- REC SIGNAL LINE

**WARNING:**  
 Parts marked with this symbol  $\Delta$  have critical characteristics.  
 Use ONLY replacement parts recommended by the manufacturer.

**CAUTION:**  
 Before re...  
 leakage c...  
 defective.  
**WARNING:**  
 DO NOT r...

CHEMATIC DIAGRAM

CASSETTE DECK SECTION

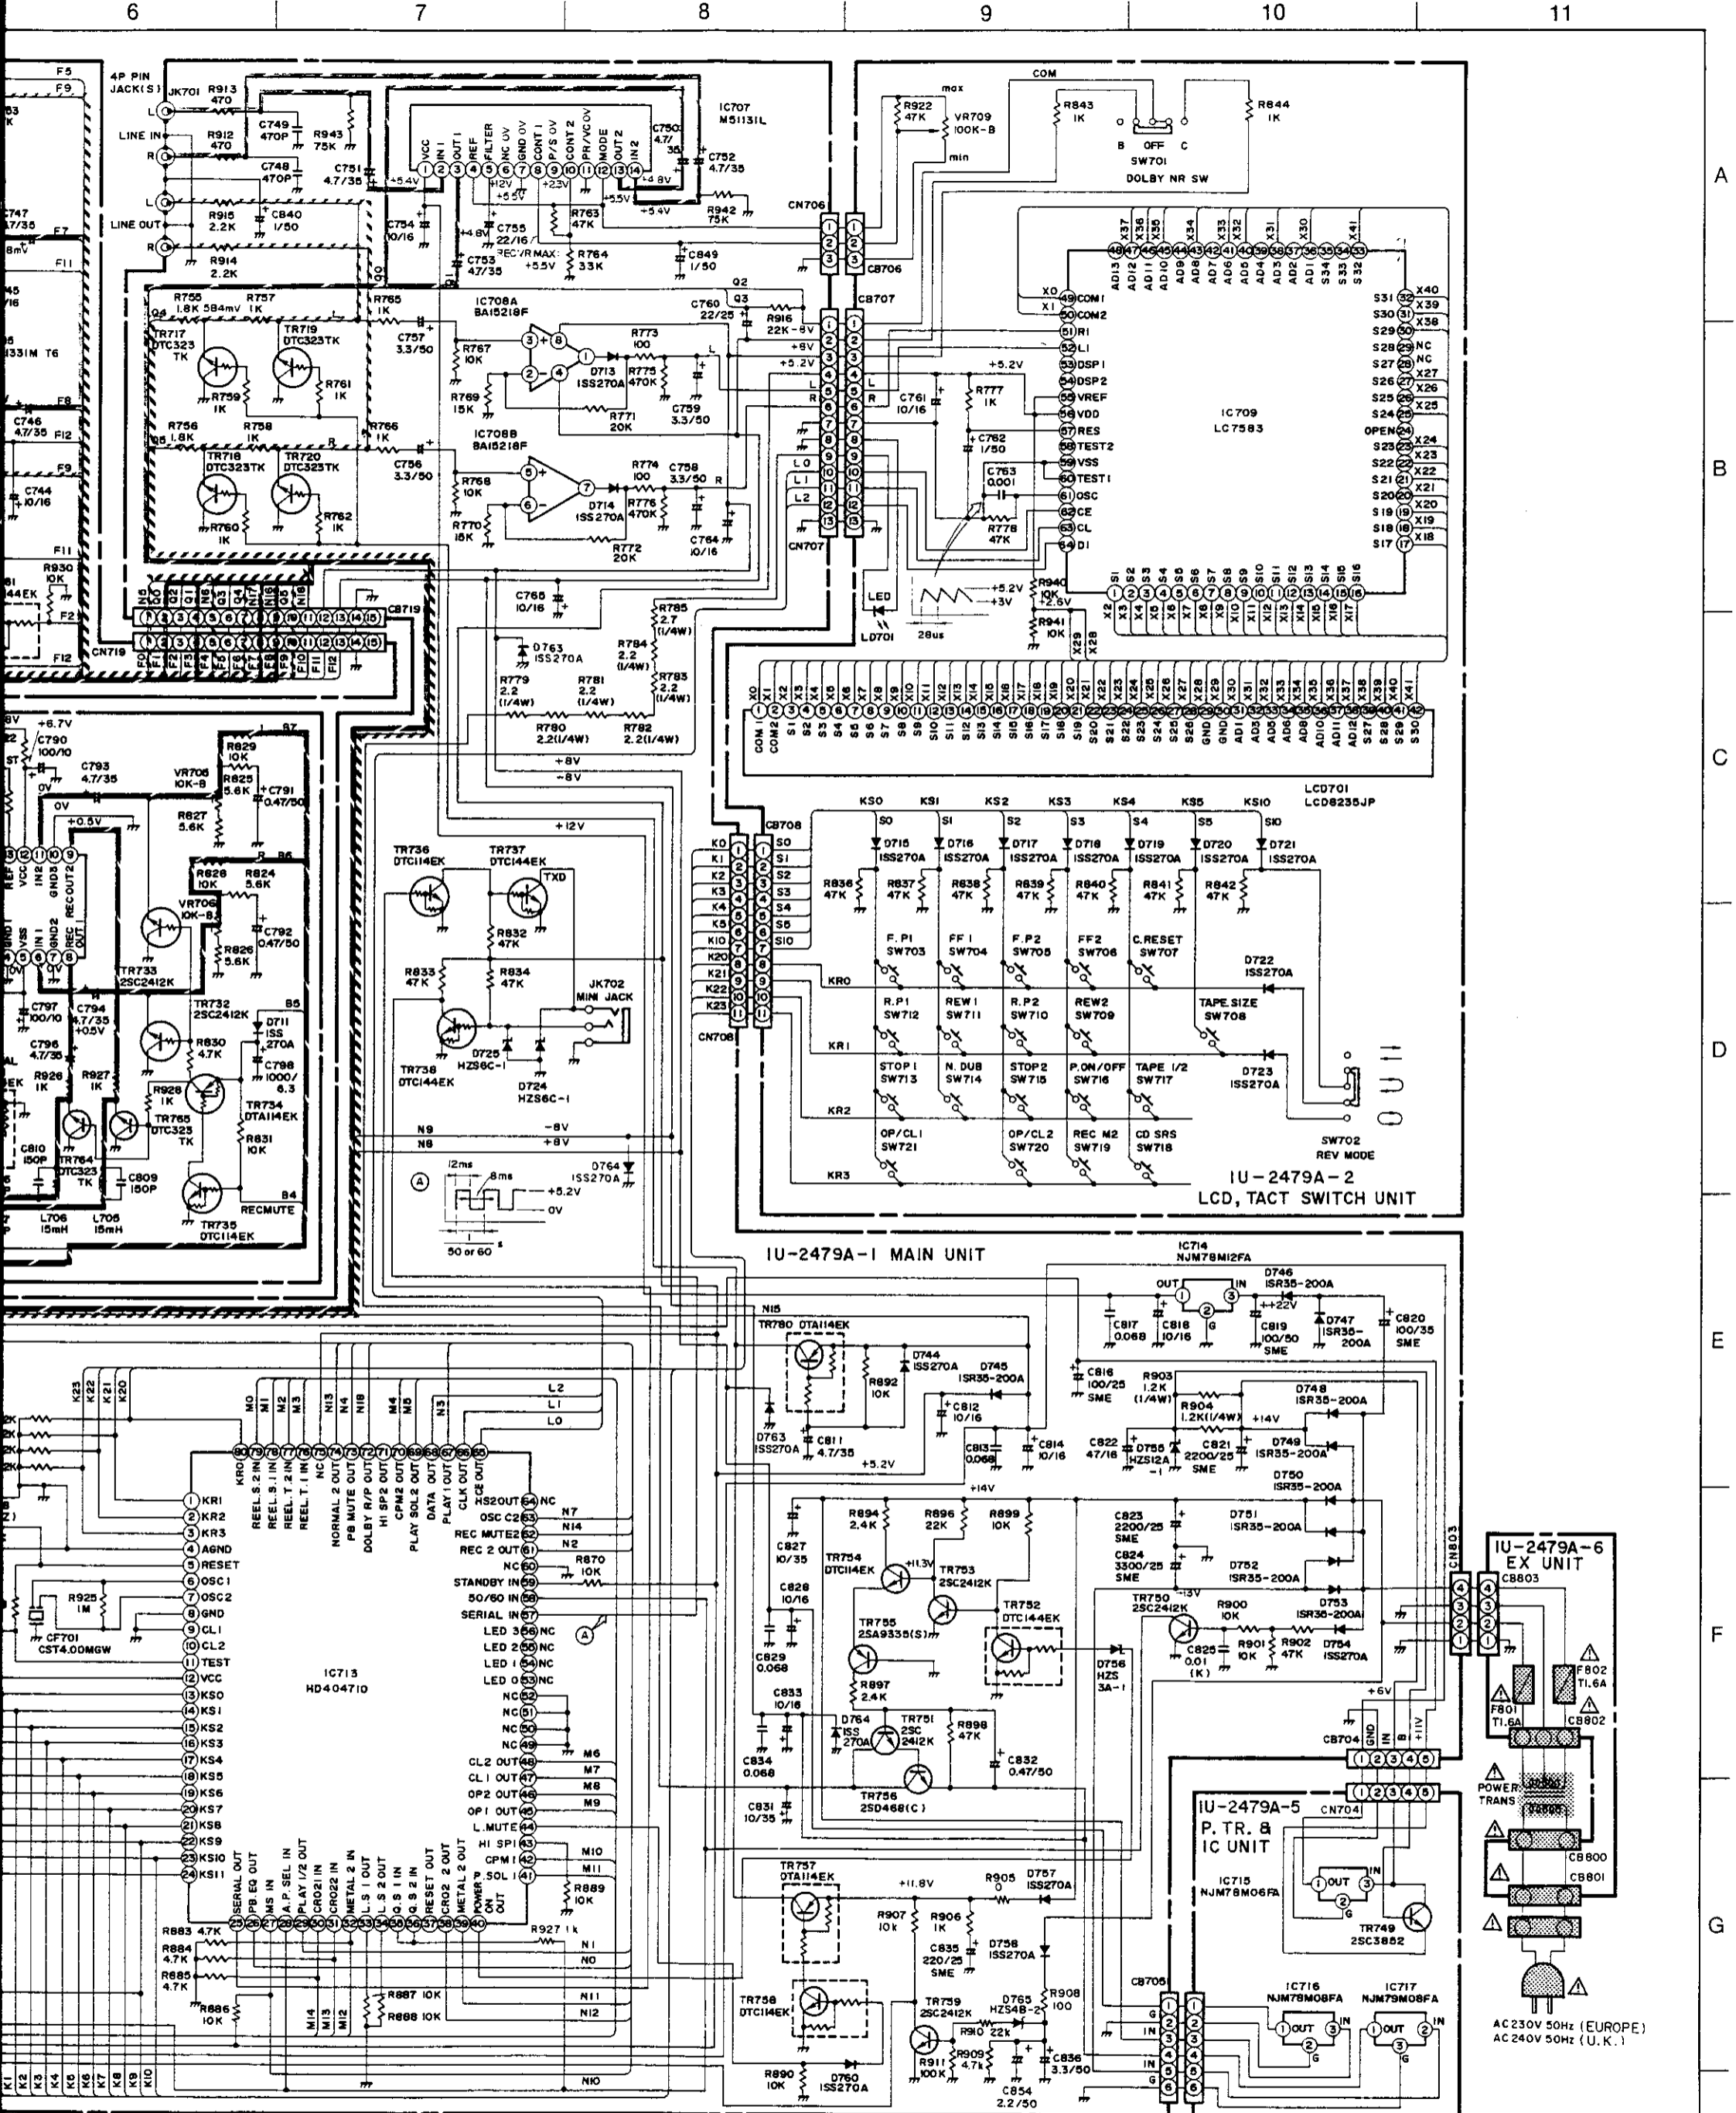

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.


**WARNING**  
DO NOT return the unit to the customer until the problem is located and corrected.

**NOTES**  
ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.



**CASSETTE DECK SECTION**  
**EXPLODED VIEW OF PARTS LIST**

Ref. No.	Part No.	Part Name	Remarks	Qty
1	1U- 2479 A	P.W.Board Unit Assy		1 <sup>S</sup>
1-1	—	Main Unit		(1)
1-2	—	LCD.Tact Switch Unit		(1)
1-3	—	PB,R/P Unit		(1)
1-4	—	Dolby Unit		(1)
1-5	—	P.TR. & IC Unit		(1)
1-6	—	EX. Unit		(1)
2	393 4143 001	LCD (8235JP)		1
3	449 0057 009	LCD Holder		1
4	211 6090 009	Variable Resistor 100kohm		1
5	204 8421 005	Mini Jack		1
6	—	—		—
7	204 8266 008	4 P Pin Jack(S-GND)		1
8	411 1184 316	Main Chassis		1
9	104 0237 201	Foot Assy	Europe model	4
10	105 1043 112	Rear Panel	U.K. model	1
10	105 1043 138	Rear Panel		1
11	412 2814 028	Card Spacer(L=10)		1
12	412 3548 005	P.W.B Catcher		2
13	HM55A	Cassette Mech. Unit		1
14	449 0071 001	Mech. Holder(F)		2
15	144 2213 221	Front Panel		1
16	146 1404 309	Inner Panel Assy		1
17	146 1420 105	Knob Guide(Round)		1
18	146 1420 118	Knob Guide(Round)		1
19	113 1547 318	Push Knob(Play)		1
20	113 1547 321	Push Knob(Play)		1
21	113 1549 002	Push Knob(Round)		2
22	113 1549 015	Push Knob(Round)		1
23	113 1548 003	Select Knob		2
24	113 1460 000	Power Knob		1
25	146 1407 209	Loader Panel(1)		1
26	146 1408 208	Loader Panel(2)		1
27	112 0645 166	Knob	Rec Level	1
28	146 1400 303	Side Plate		2
29	122 0183 007	Spacer	100X10X10.5	1
★ 30	445 8004 007	Wire Clamper		5
31	102 0518 209	Top Cover		1
32	412 9326 001	IC Holder		1
33	412 9327 000	P.W.B Bracket		1
34	414 9125 101	Wire Cover		4
35	461 9036 005	Spacer	15X15X15	1
△ 36	233 9649 004	Power Trans.	Europe model	1
△ 36	233 9652 004	Power Trans.	U.K. model	1
△ 37	206 1072 059	Fuse 1.6 A	T800,80	2
△ 38	443 0058 008	Cord Bush		1
△ 39	206 2089 106	AC Cord W/Conn.		1
40	415 9016 006	P.C.B Holder		2
41	—	—		—
42	254 4256 790	Chemicon 2200µF/25V	C821,823	2
43	254 4257 702	Chemicon 3300µF/25V	C824	1
44	393 9470 009	LED		1
45	415 9070 000	Insulating Sheet		1
46	461 0758 007	Rubber Sheet	10X8XT5	2
47	513 9315 001	Rating Sheet	Europe model	1
47	513 9315 014	Rating Sheet	U.K. model	1
<b>SCREWS</b>				
71	473 7002 005	Tapping Screw(S)3X6		10
72	473 7015 005	Tapping Screw(S)3X6	Black	14
73	473 7508 046	Tapping Screw(S)3X16	Black	2
74	477 0064 107	Fixing Screw		1
75	473 7508 017	Tapping Screw(P)3X10	Black	4
76	473 7500 015	Tapping Screw(P)3X8		4
77	473 7505 007	Tapping Screw(P)2.6X8		8
78	473 7009 008	F.Tapping Screw(S)3X6		2
79	473 7015 018	Tapping Screw(S)3X8	Black	6
80	—	—		—
<b>PACKING &amp; ACCESSORIES (Not included EXPLODED VIEW)</b>				
101	505 0102 089	Stylen Paper	700X700	1
102	503 1029 107	Cushion		1
103	503 1032 107	Top Cushion		1
104	501 9228 001	Carton Case		1
105	461 0770 001	Protector Sheet		1

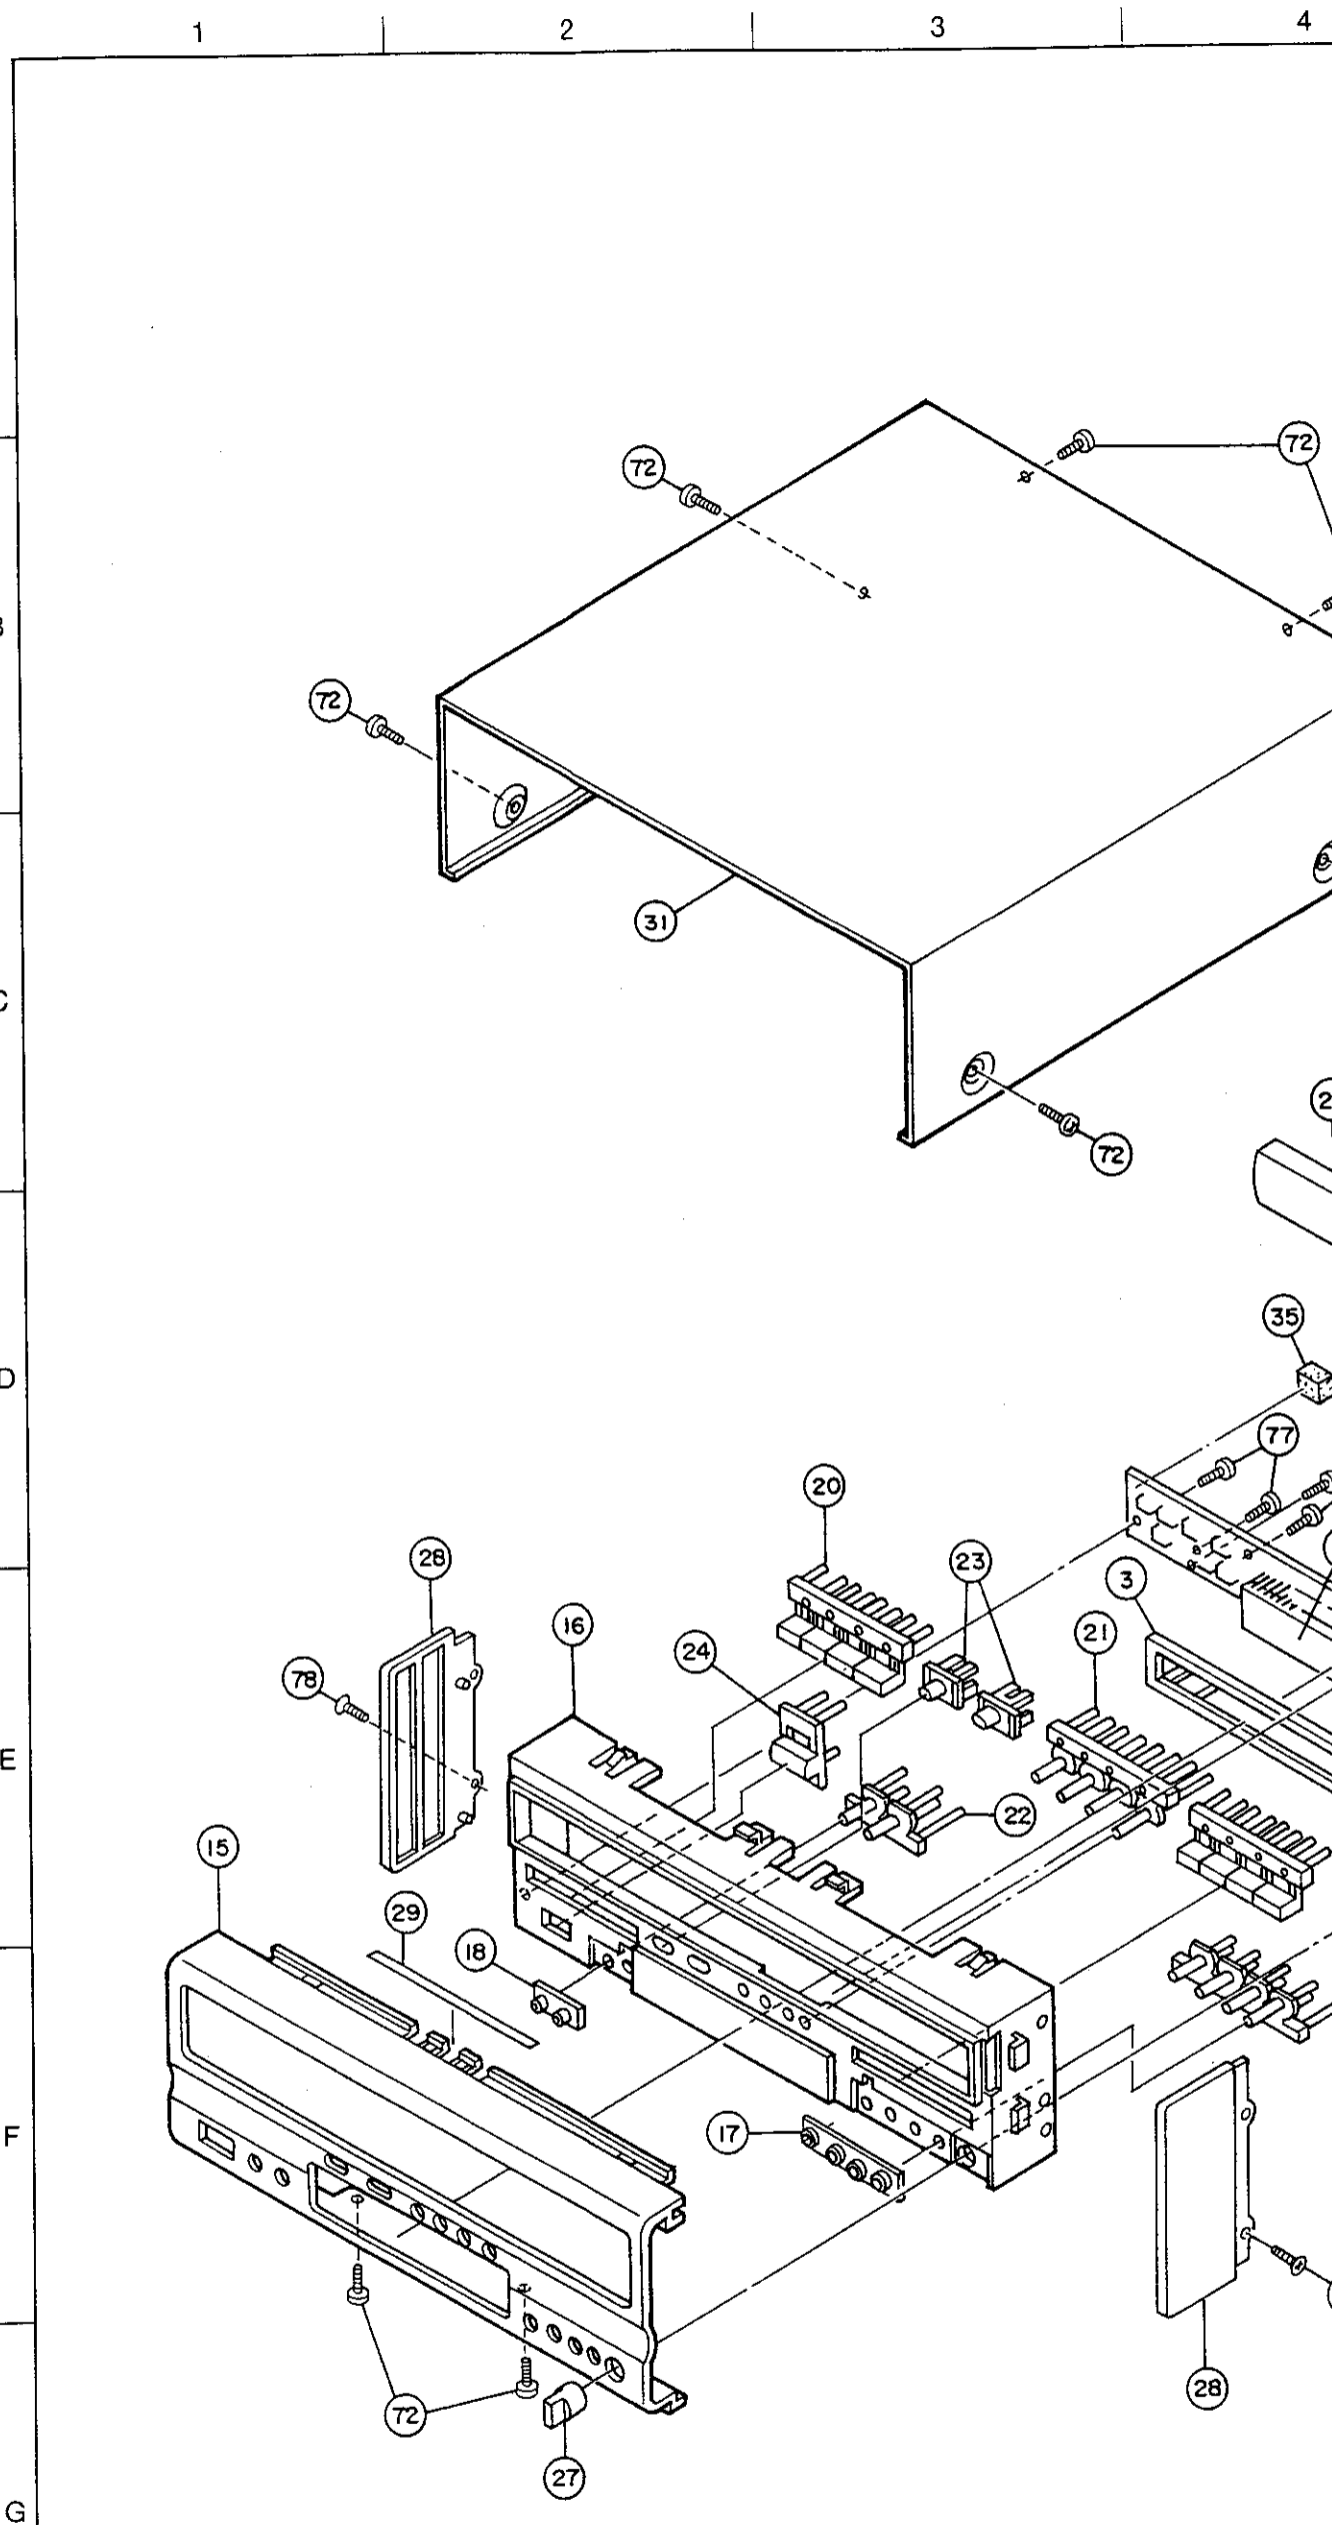

**NOTE ON PARTS LIST**

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some cases supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

**WARNING:**

Parts marked with this symbol △ [hatched] have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

EXPLODED VIEW

4


5

6

7

8

9

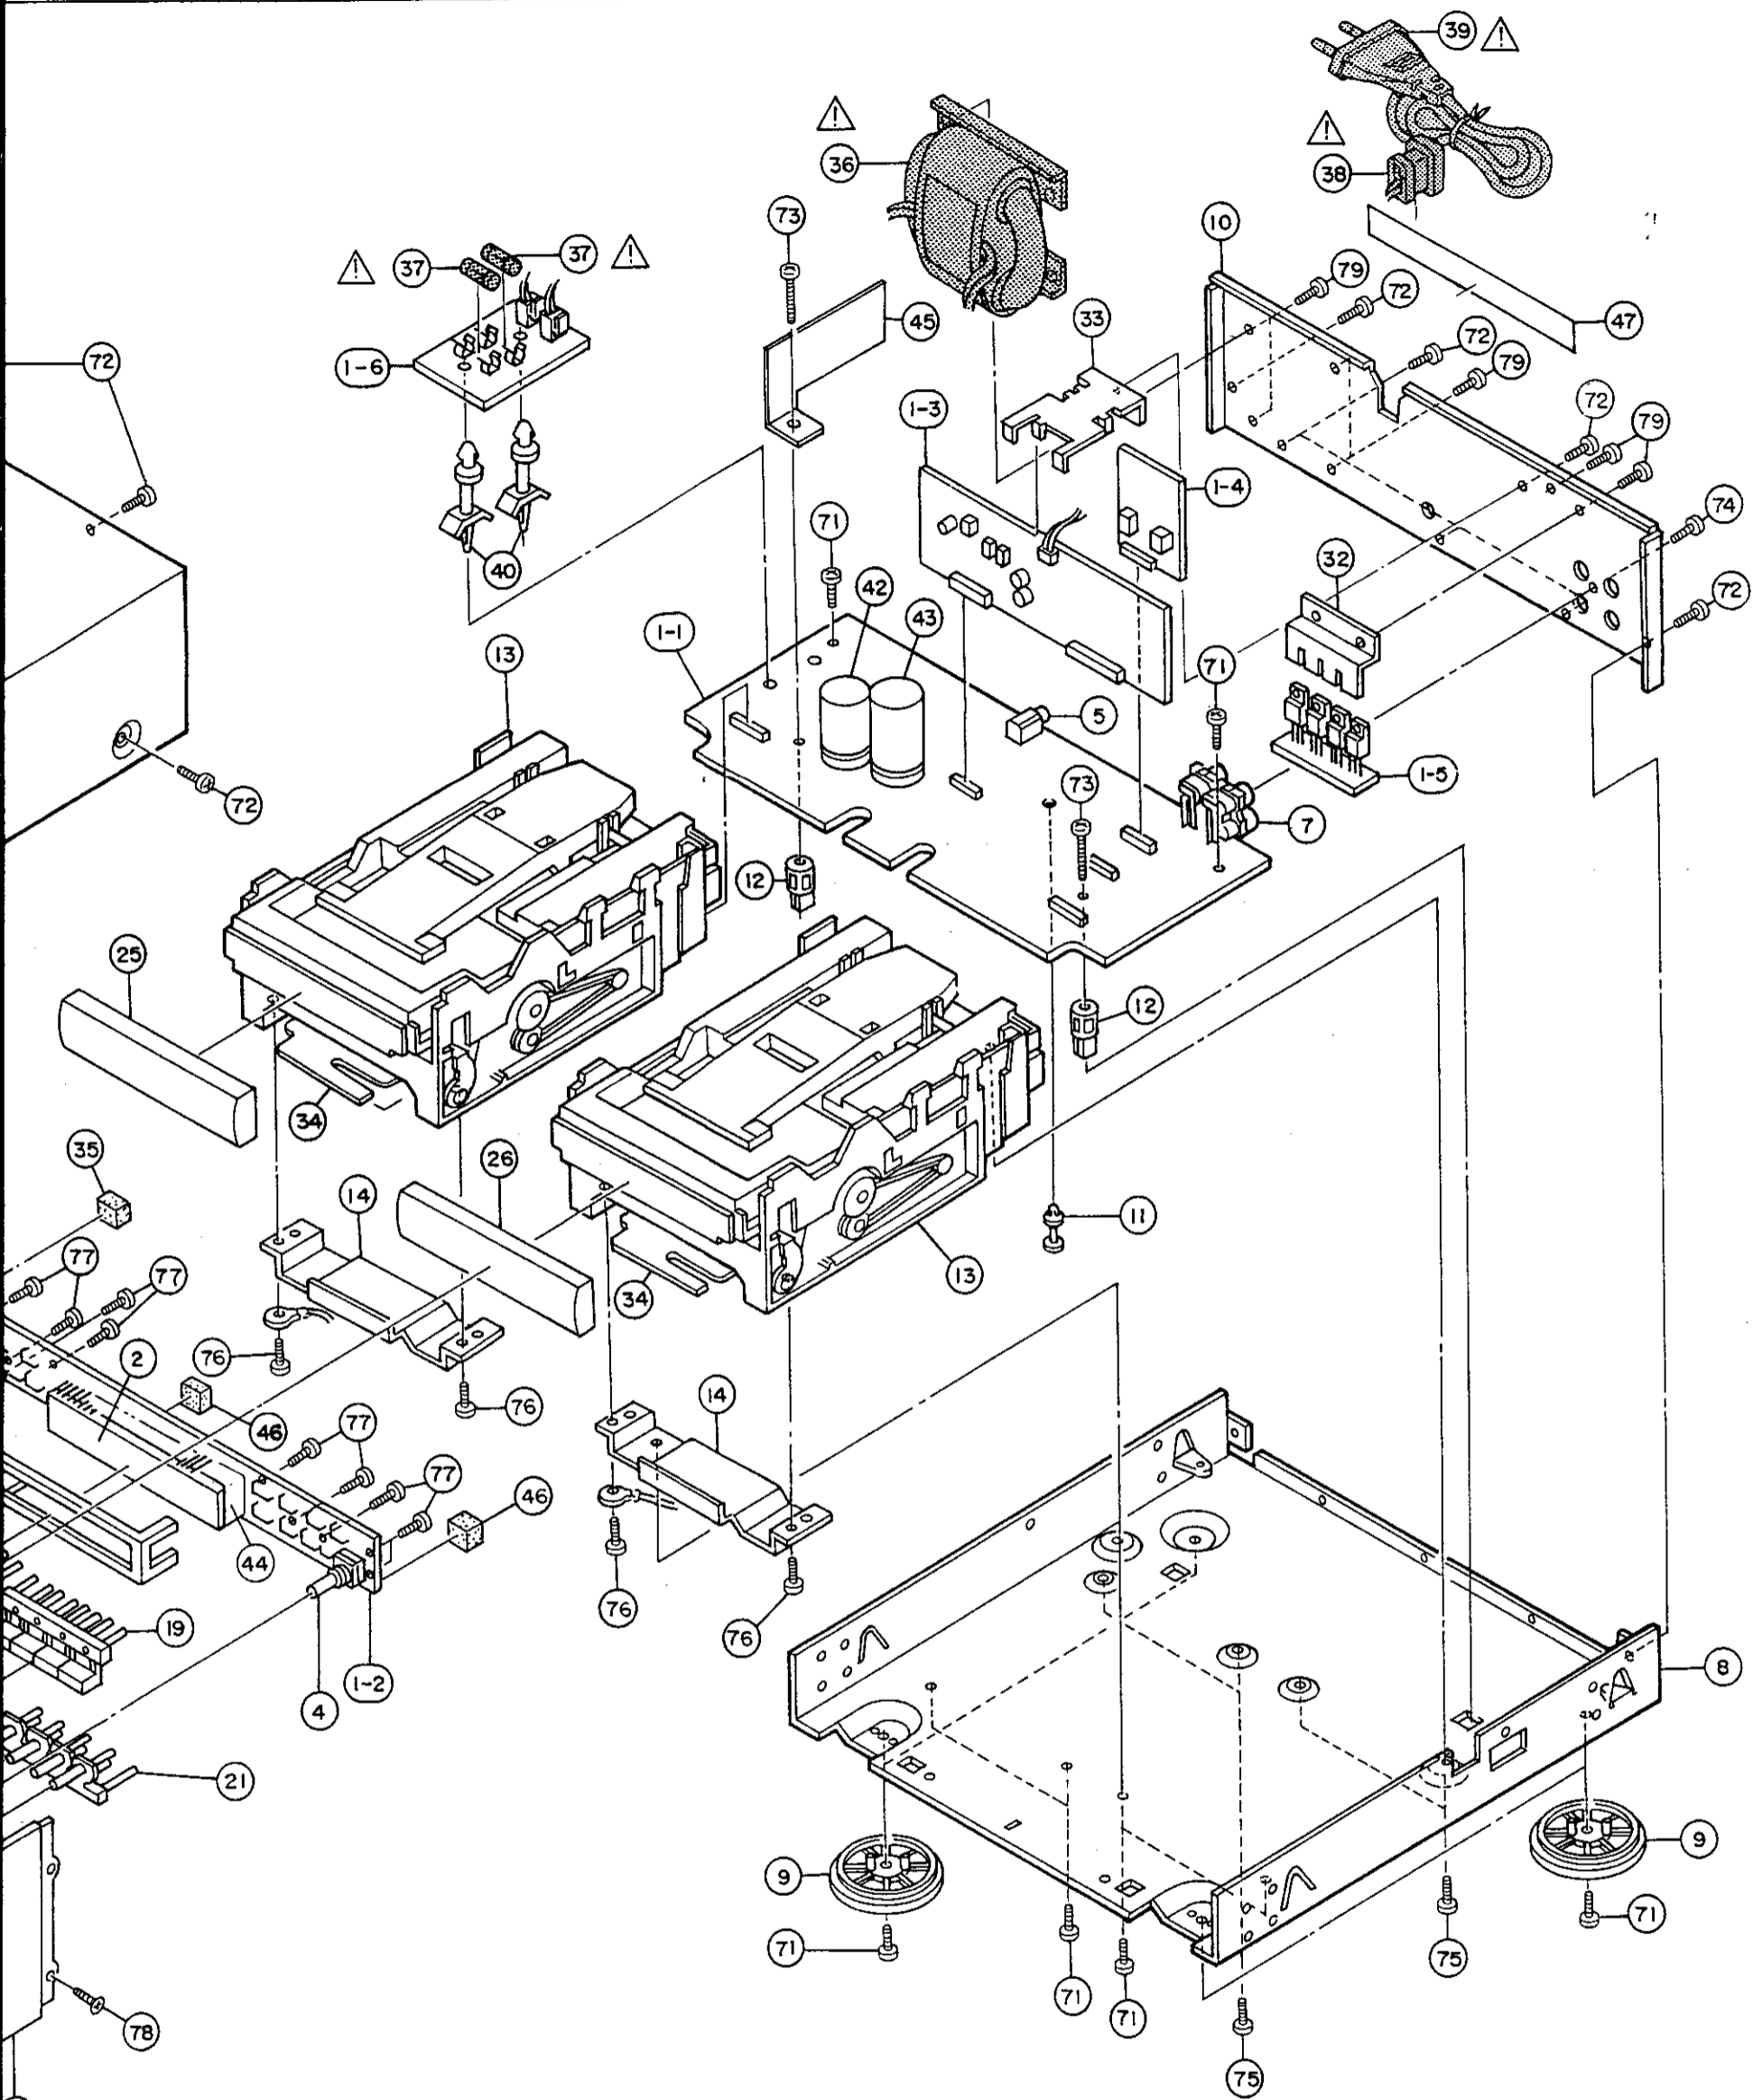

pling, or in some case

## CASSETTE DECK SECTION


## DISASSEMBLY PROCEDURES

(Follow these procedures in reverse order to reassemble.)

### 1. Removing the loader frame assembly

- ① Pull the loader frame assembly out forwards until it stops.
- ② Insert a screwdriver with a narrow tip into the section indicated with the arrow, then lift the hook and pull the loader frame assembly out forwards.


**NOTE:** When reinserting the loader frame assembly, be careful not to damage the micro slide switch.

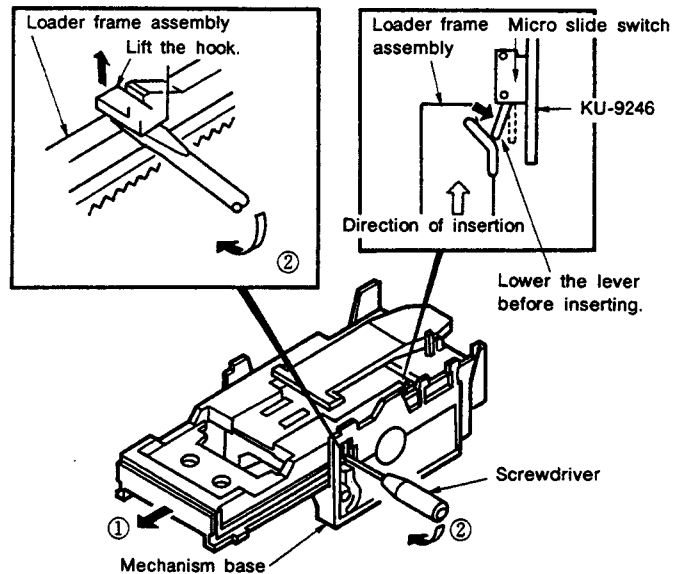

### 2. Removing the cassette mechanism

- ③ Remove the shield cover screw, then remove the shield cover.
- ④ Remove the five screws fastening the cassette mechanism.
- ⑤ Pressing the push bracket in the direction of the arrow...
- ⑥ ...lift the cassette mechanism up and off.

**NOTE:** The push bracket may be deformed if the cassette mechanism is lifted without pressing the push bracket in the direction of the arrow. (The same is true when reassembling.) A deformed push bracket cannot be used. After fastening the cassette mechanism with the screws, check that the push bracket moves (rotates) properly.

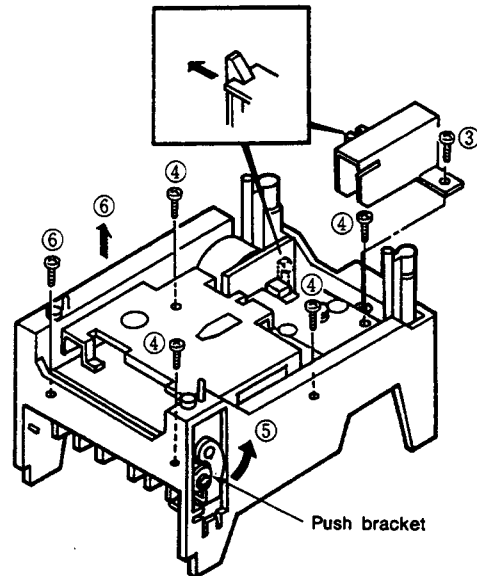


### 3. Removing the push bracket

Do this with the loader frame assembly and cassette mechanism removed.

- ⑦ Remove the two special screws.
- ⑧ Remove the lever spring.
- ⑨ Remove the push bracket spring using a spring catching rod, etc., through hole A.
- ⑩ Remove the push bracket.
  - (a) Disconnect first the left then the right push bracket bar from the mechanism base's push bracket boss.
  - (b) Bring out first the left then the right side from the mechanism base's push bracket insertion slot.

**NOTE:** Be careful not to deform the push bracket (do not forcibly disassemble or assemble it). A deformed push bracket cannot be used.

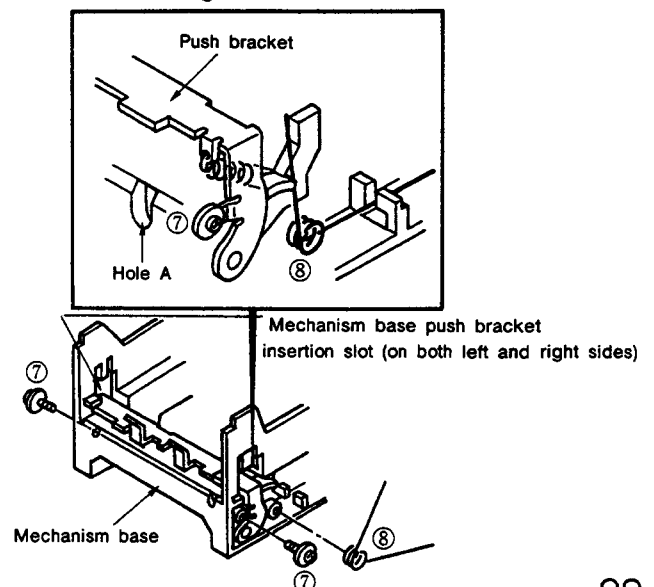

## CASSETTE DECK SECTION

## CASSETTE MECHANISM HM-55A

## HM-55R UNIT PARTS LIST (REC/PB)

Ref. No.	Part No.	Part Name	Remarks	Qty
● 1	411 1163 418	Loading Mecha Ass'y		1
● 2	411 1156 108	Mecha Base Ass'y		1
3	424 0183 000	Pulley Gear		1
4	423 0064 003	Belt		1
5	424 0182 001	Gear		1
6	475 1119 110	Slit Washer		1
7	433 0574 202	Push Lever		1
● 8	412 3467 102	Push Bracket		1
9	463 0708 008	Lever Spring		1
10	463 0709 007	Push Bracket SP.		1
11	433 0573 203	Clamper Arm		1
12	463 0710 009	Clamper SP.		1
13	431 0323 004	Clamper Press		2
14	463 0707 009	Clamper Press SP.		2
15	431 0329 202	Loader F. Sub Ass'y		1
16	GEN1920 A	Loading Motor		1
17	421 0379 103	Motor Pulley		1
● 18	338 0154 000	CRF340 C. Mecha REC/PB		1
● 19	412 3468 101	Shield Bracket		1
● 20	412 3518 006	Shield Cover		1
● 21	KU- 9246 A	P.W. Board Ass'y		1
★ 22	203 8334 005	5P PH-3P/4P PH Con. Cord		1
★ 23	203 0240 003	1P Contact Cord		1
24	203 0521 007	Earth Wire Ass'y		1
25	212 1077 004	Micro Slide SW		2
26	475 1161 003	Washer		1
27	461 0724 002	Spacer	16×t5	2
● 28	412 3517 007	Shield Ring		3
<b>SCREWS</b>				
51	473 8044 004	Special Screw		4
52	471 3201 011	Bind Screw 2.6×4		2
53	473 7002 005	Tapping Screw (P) 3×6		2
54	473 7500 015	Tapping Screw (P) 3×8		6


## HM-55P UNIT PARTS LIST (PB ONLY)

Ref. No.	Part No.	Part Name	Remarks	Qty
● 1	411 1163 418	Loading Mecha Ass'y		1
● 2	411 1156 108	Mecha Base Ass'y		1
3	424 0183 000	Pulley Gear		1
4	423 0064 003	Belt		1
5	424 0182 001	Gear		1
6	475 1119 110	Slit Washer		1
7	433 0574 202	Push Lever		1
● 8	412 3467 102	Push Bracket		1
9	463 0708 008	Lever Spring		1
10	463 0709 007	Push Bracket SP.		1
11	433 0573 203	Clamper Arm		1
12	463 0710 009	Clamper SP.		1
13	431 0323 004	Clamper Press		2
14	463 0707 009	Clamper Press SP.		2
15	431 0329 202	Loader F. Sub Ass'y		1
16	GEN1920 A	Loading Motor		1
17	421 0379 103	Motor Pulley		1
● 18	338 0155 009	CRF341 C. Mecha PB		1
● 19	412 3468 101	Shield Bracket		1
● 20	412 3518 006	Shield Cover		1
● 21	KU- 9246 A	P.W. Board Ass'y		1
★ 22	203 4856 008	3P EH-4P PH Con. Cord		1
★ 23	203 0240 003	1P Connect Cord		1
24	—	—		—
25	212 1077 004	Micro Slide SW		2
26	475 1161 003	Washer		1
27	461 0724 002	Spacer	16×t5	2
● 28	412 3517 007	Shield Ring		2
<b>SCREWS</b>				
51	473 8044 004	Special Screw		4
52	471 3201 011	Bind Screw 2.6×4		2
53	—	—		—
54	473 7500 015	Tapping Screw (P) 3×8		6

## P.W.B UNIT ASS'Y

Component

Pattern Side

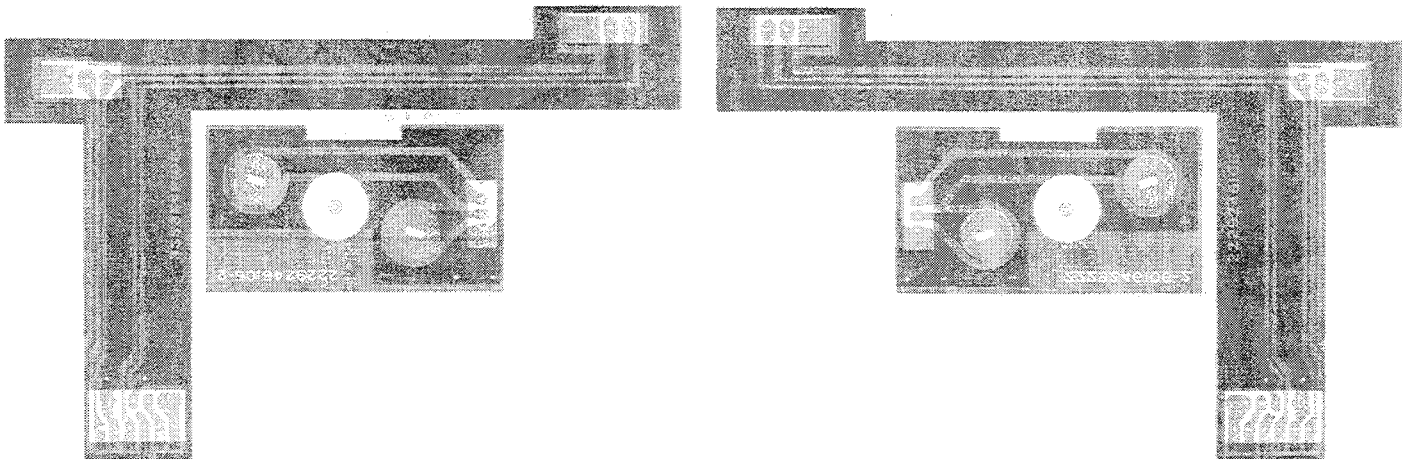

## P.W.B. UNIT ASS'Y PARTS LIST

Ref. No.	Part No.	Part Name	Remarks	Qty
<b>OTHER GROUP</b>				
—	—	(P.W. Board)		(1)
	205 0355 062	6P KR Con Base (L)		1
	209 0008 146	Jumper (L=5)		2
	205 0409 031	3P DIP Socket		2
	002 0042 006	3C R. Wire Ass'y		1
	212 1077 004	Micro Slide Switch		2
	475 1161 003	Washer		1

CASSETTE DECK SECTION

1 2 3 4 5 6 7 8



A

B

C


D

E

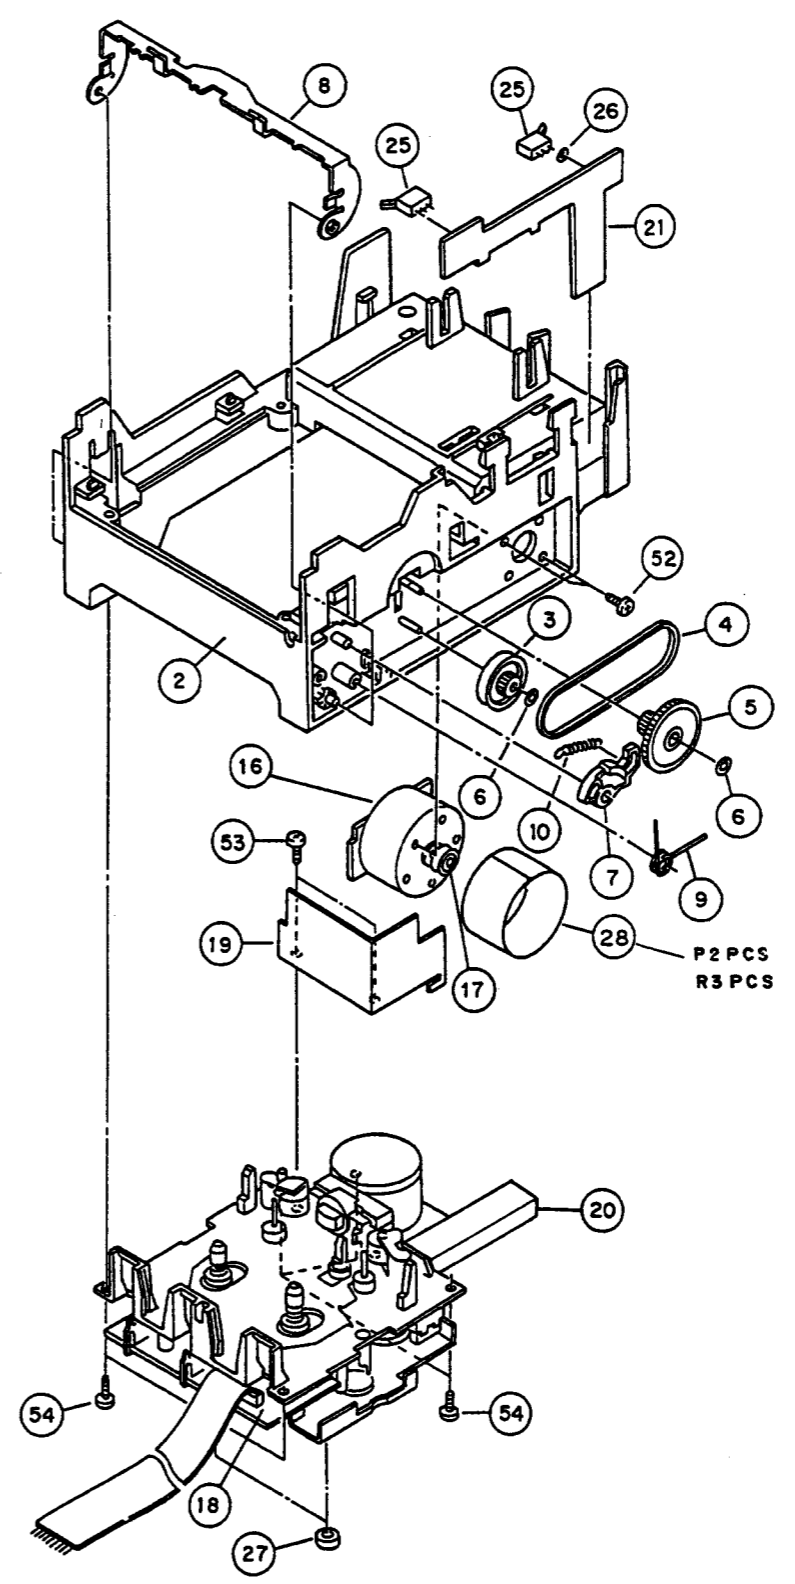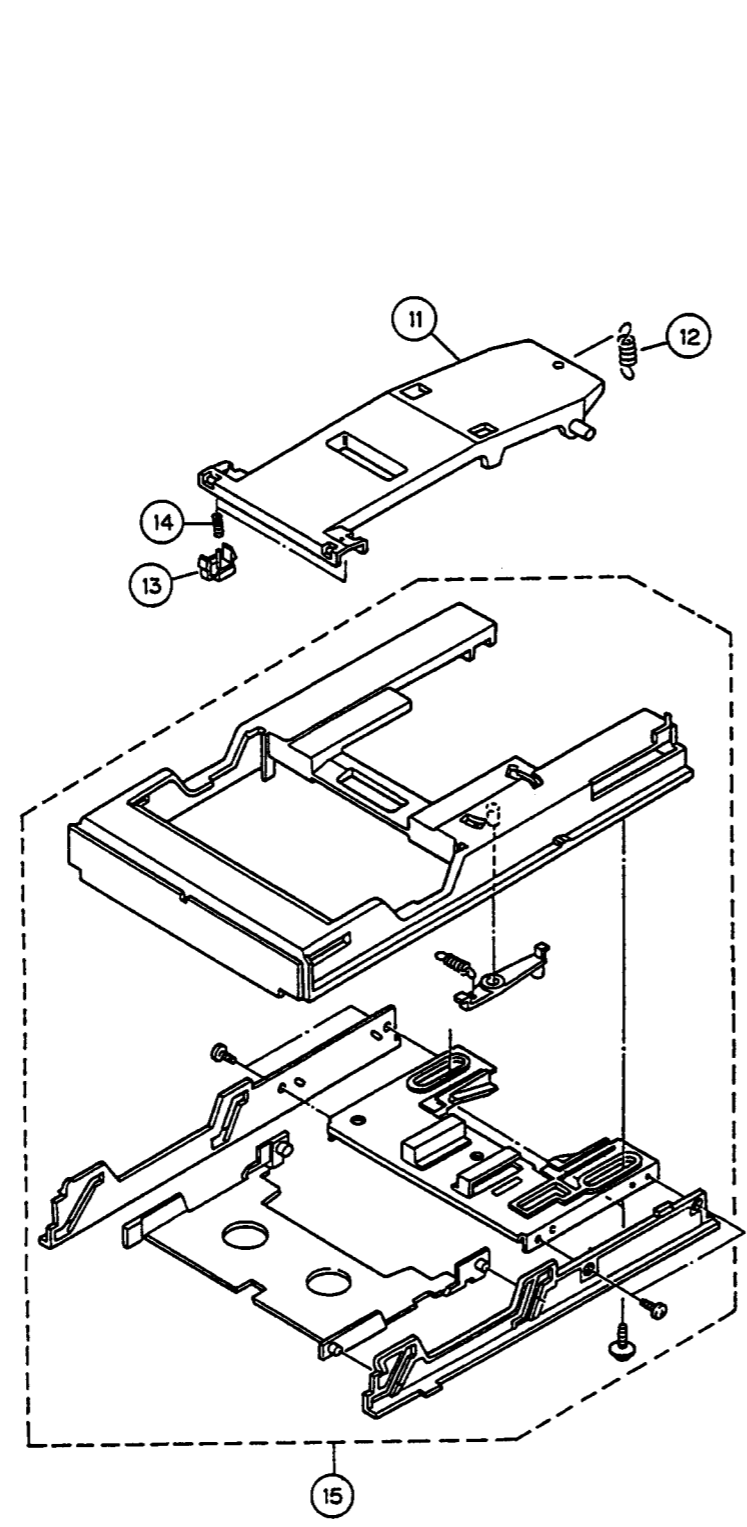


CASSETTE DECK SECTION

EXPLODED VIEW (REC/PB)

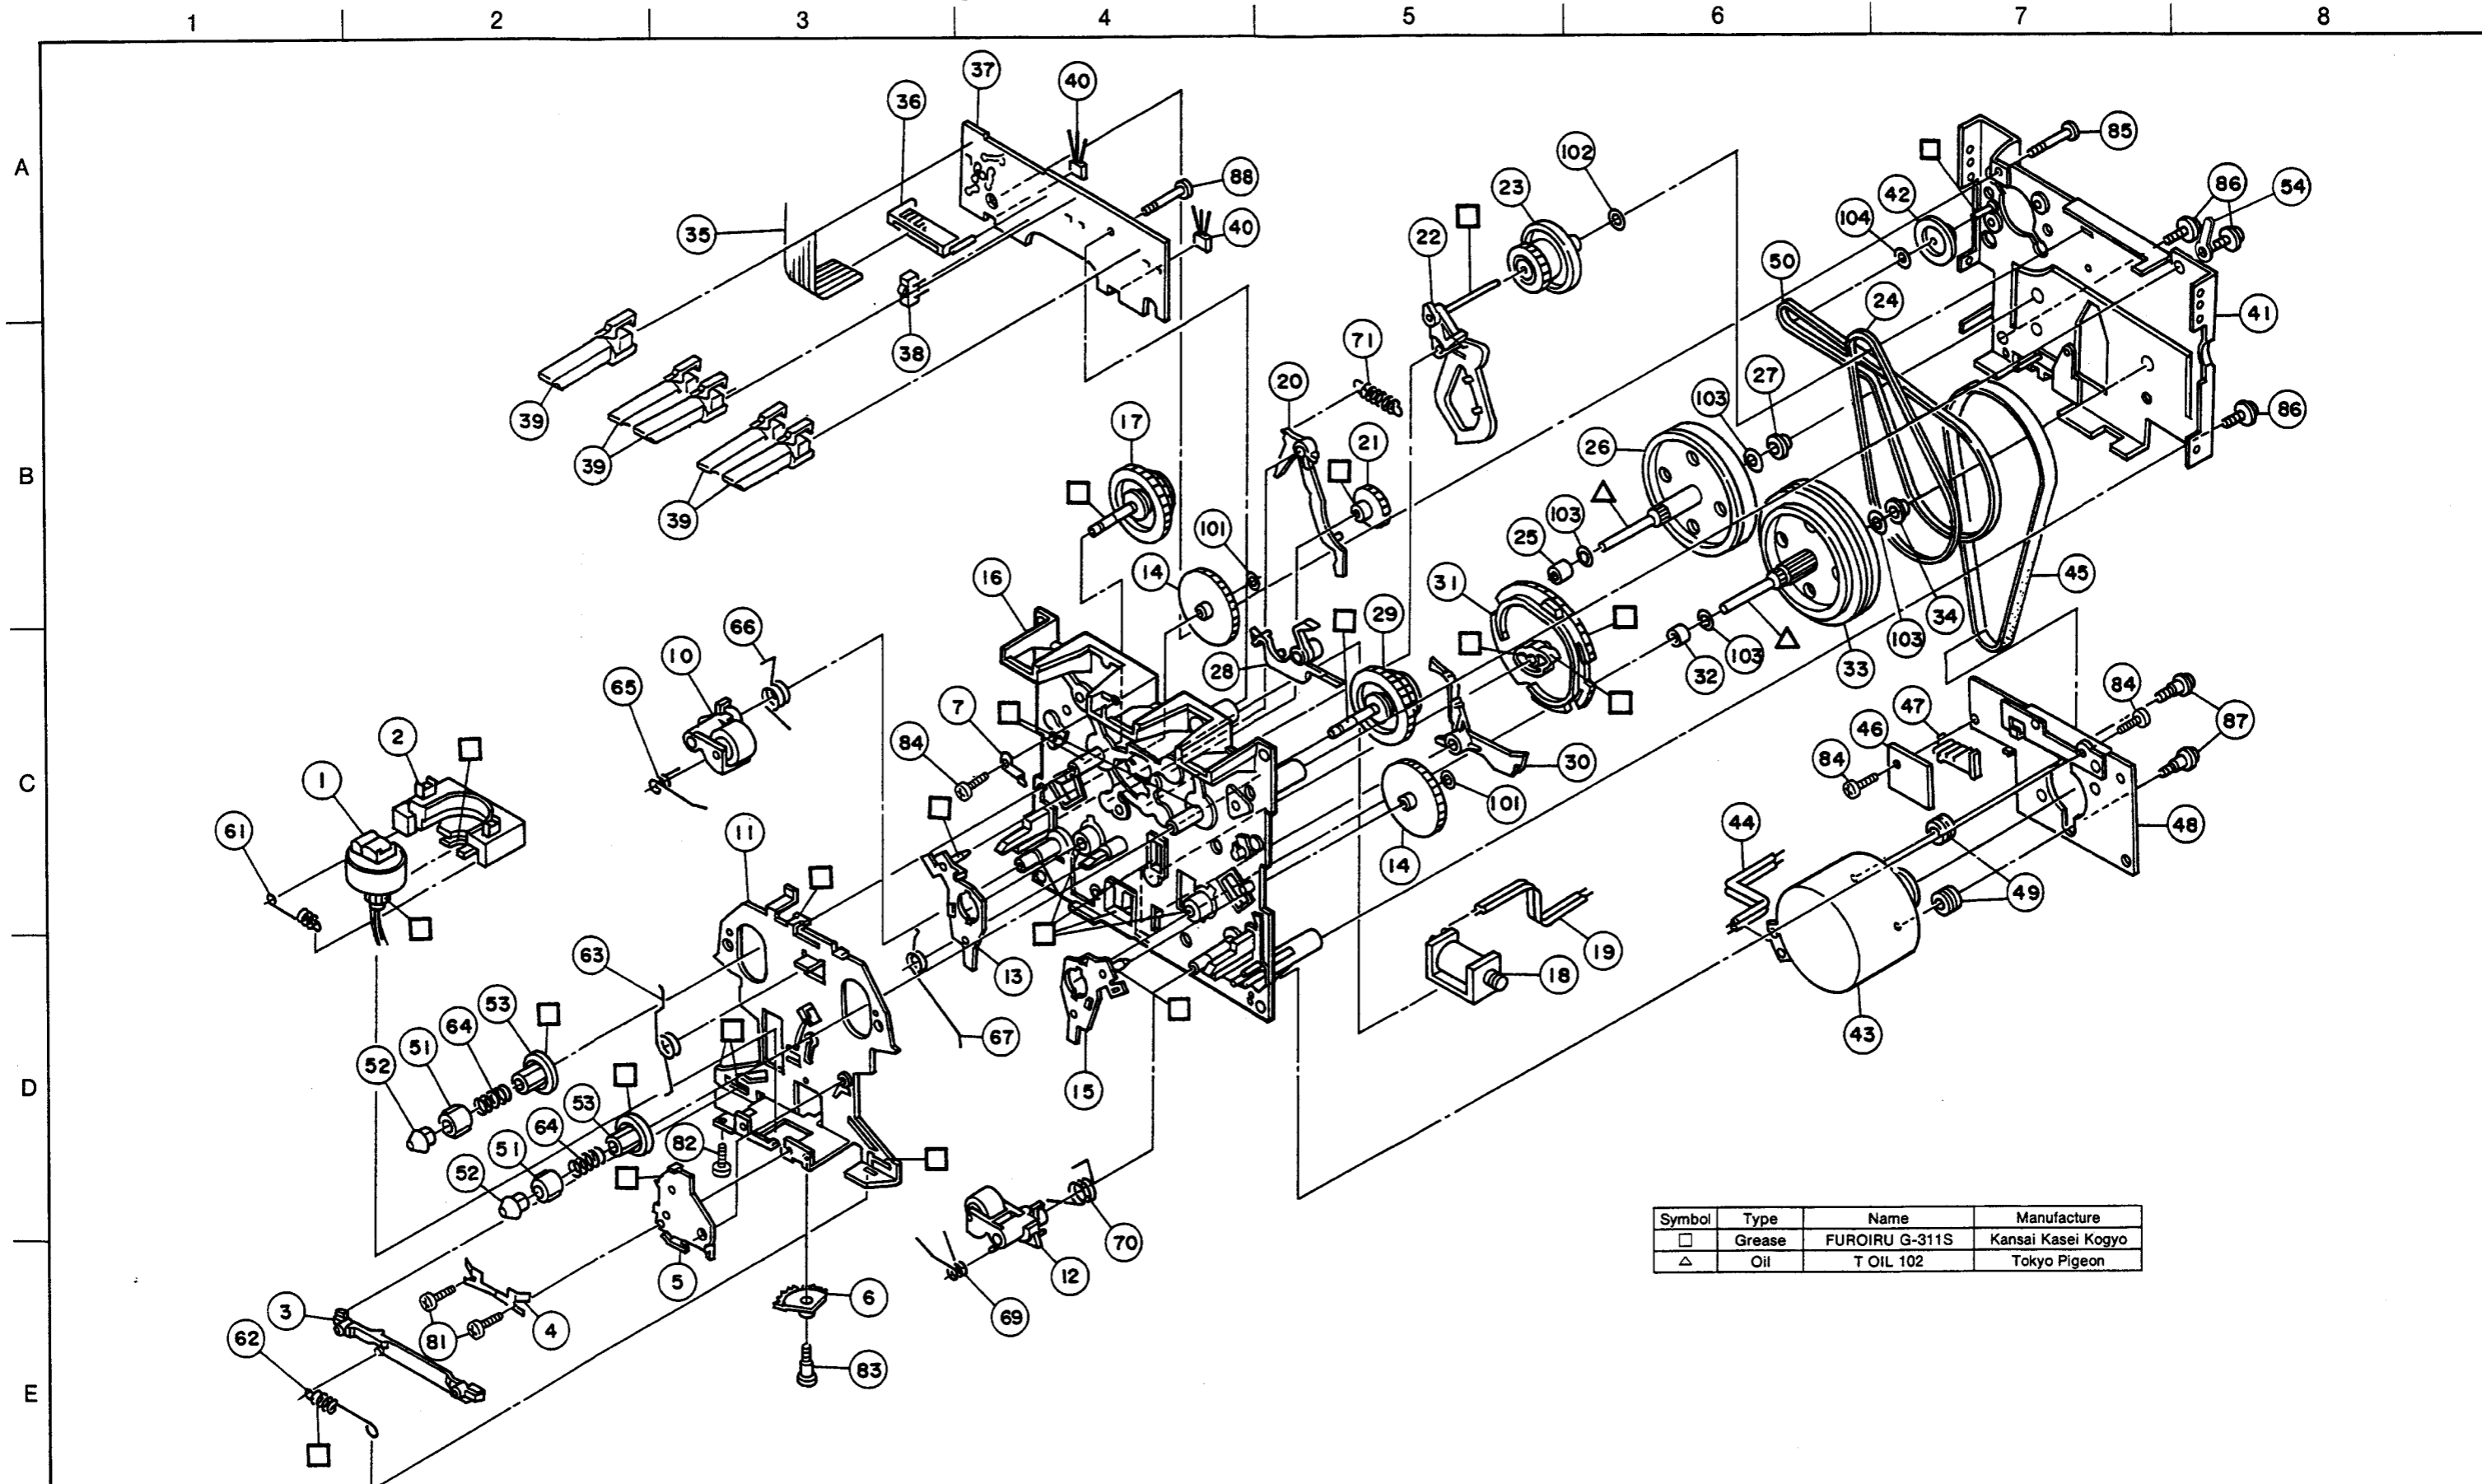

CASSETTE DECK SECTION

EXPLODED VIEW (PB Only)

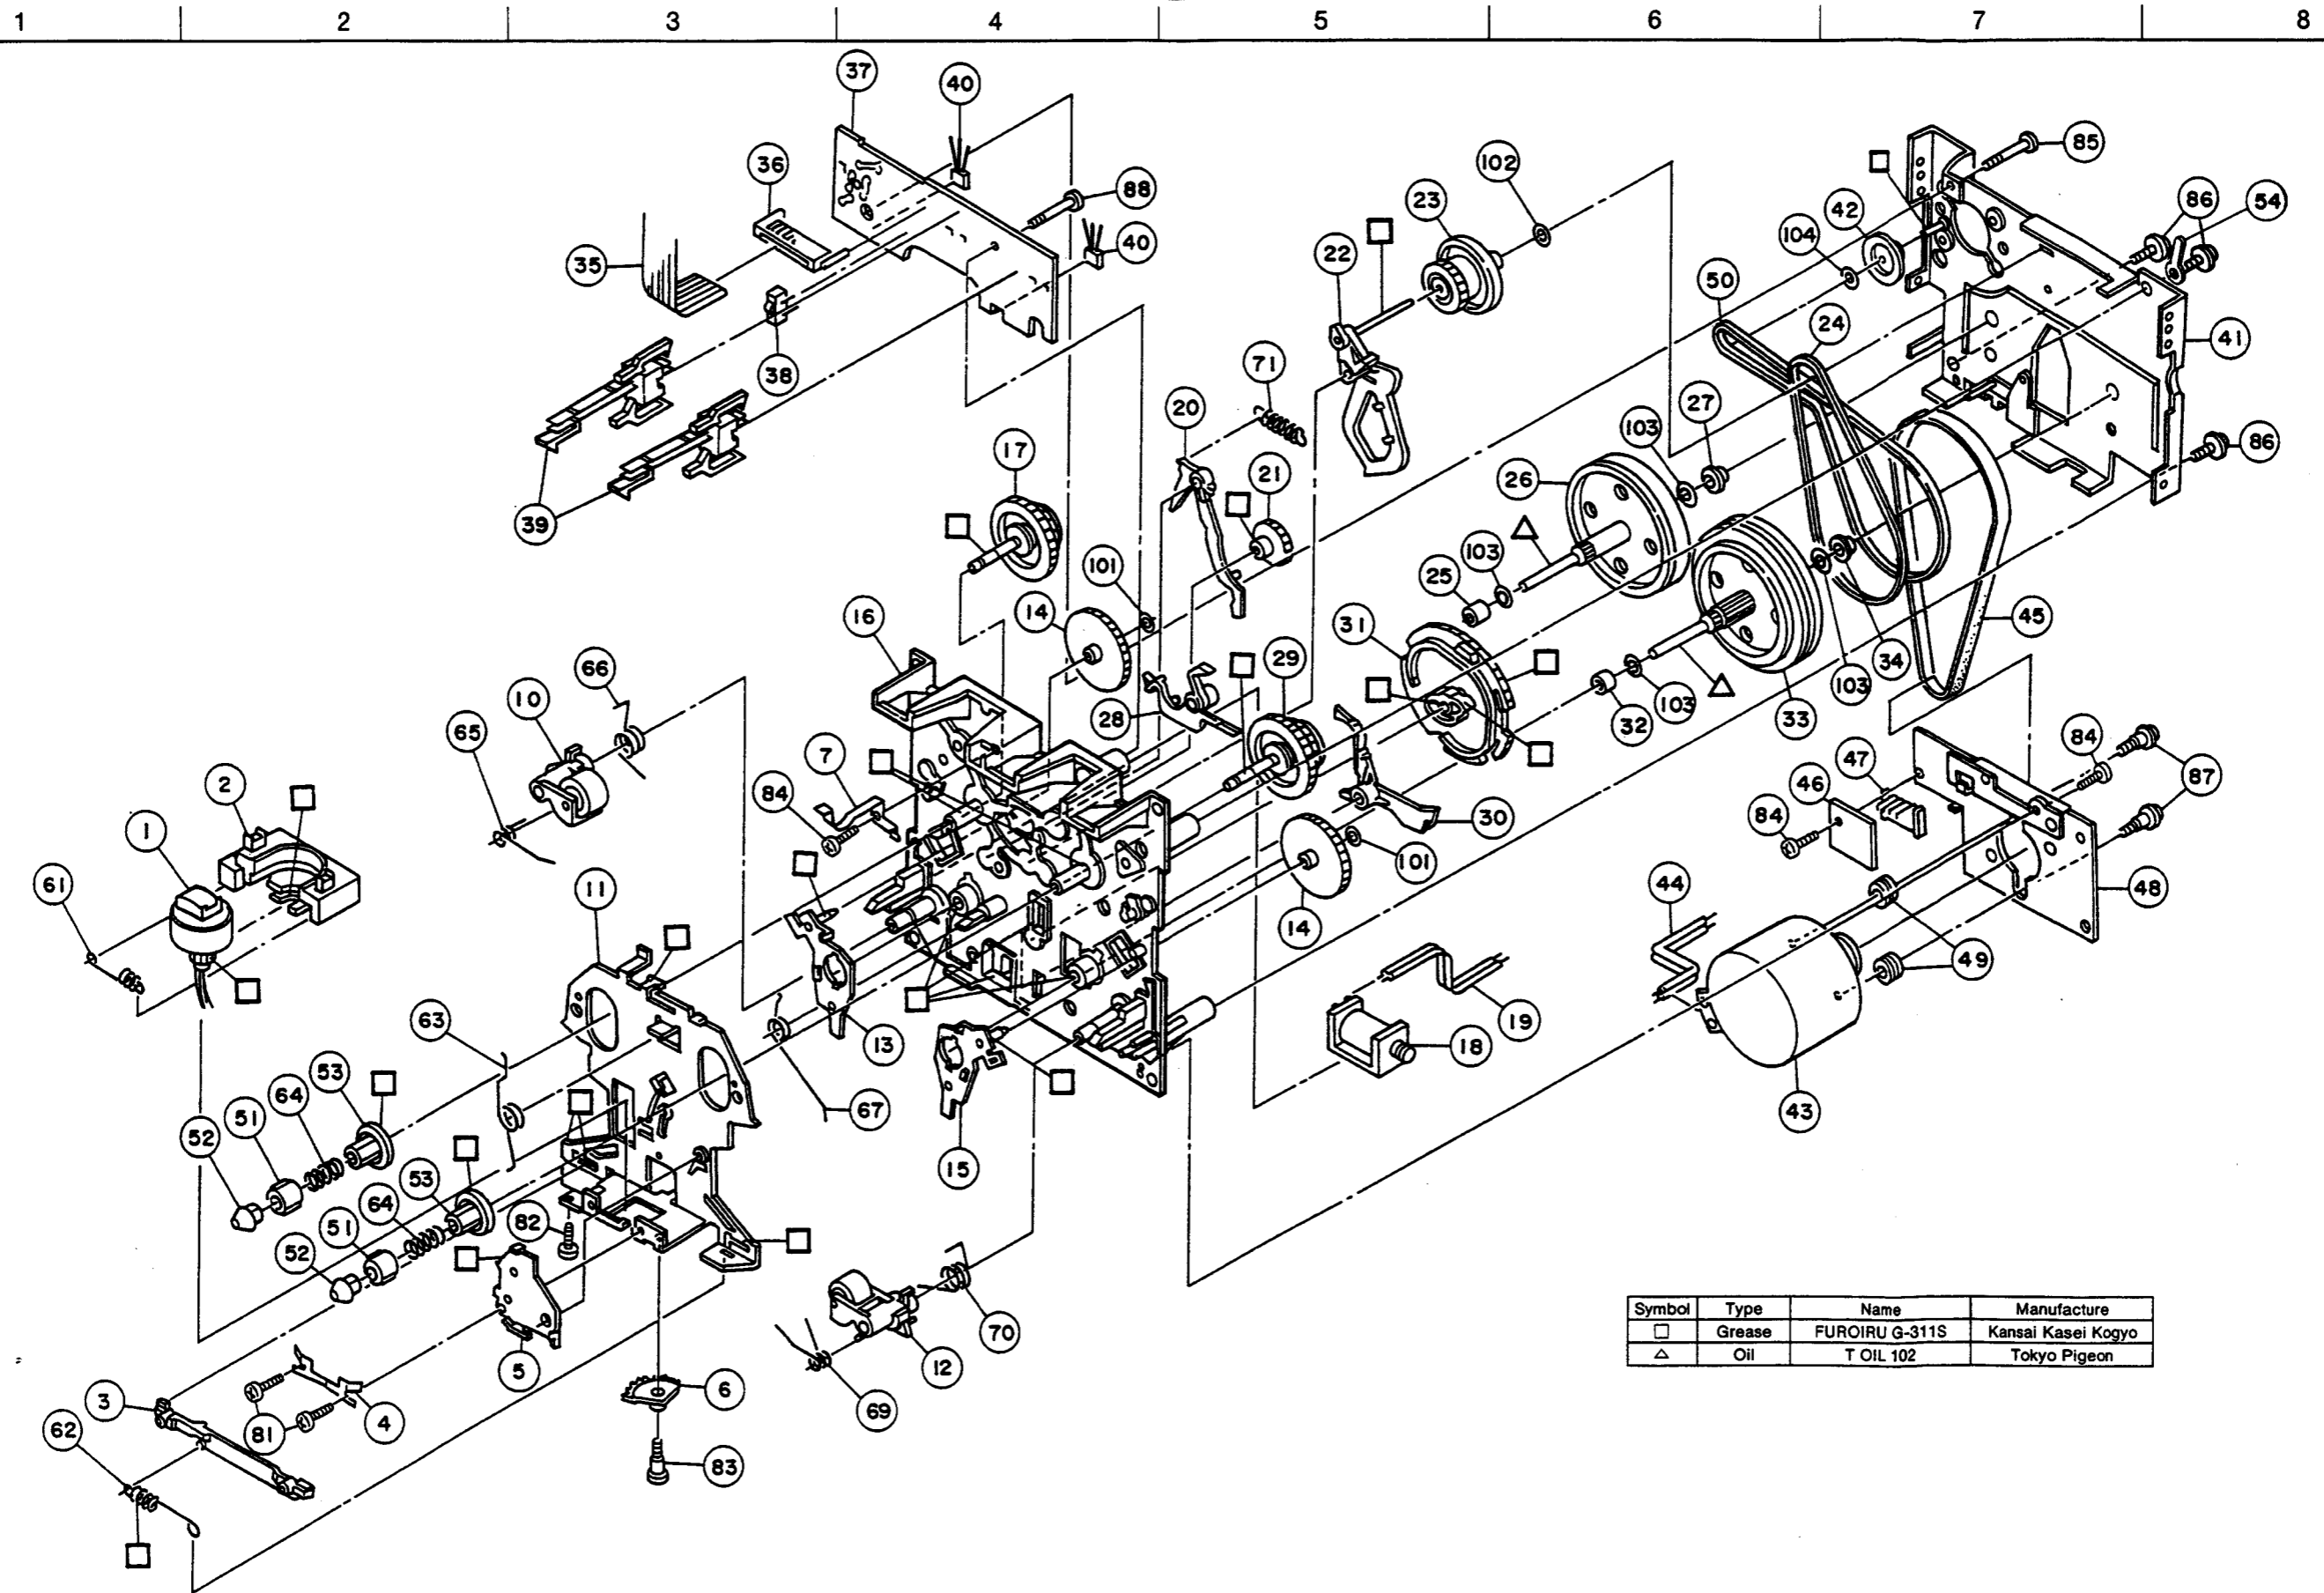

Symbol	Type	Name	Manufacture
□	Grease	FUROIRU G-311S	Kansai Kasei Kogyo
△	Oil	T OIL 102	Tokyo Pigeon

## CASSETTE DECK SECTION

## PARTS LIST OF CASSETTE MECHANISM (REC/PB) Parts No. 3380154000

Ref. No.	Part No.	Part Name	Remarks	Qty	Ref. No.	Part No.	Part Name	Remarks	Qty
* 1	948 0000 126	Ass'y Holder Head	22-093-4269	1	67	948 0004 766	Spring	01-082-4337	1
2	948 0000 207	Frame Head	22-219-1026	1	68	—	—	—	—
3	948 0000 304	Lever Head	22-259-2012	1	69	948 0004 779	Spring	01-082-4254	1
4	948 0000 401	Spring Azimuth	16-160-4032	1	70	948 0004 782	Spring	01-082-4261	1
5	948 0000 508	Ass'y Arm Assist	22-093-4053	1	71	948 0004 795	Spring	01-080-4260	1
6	948 0000 605	Gear Arm Head	22-239-4020	1					
7	948 0000 702	Plate Stopper	22-119-4283	1	81	948 0004 821	Screw (Azimuth)	03-300-4056	2
8	—	—	—	—	82	948 0004 818	Screw	PGSU20A2005	1
9	—	—	—	—	83	948 0004 706	Screw	03-300-4043	1
10	948 8000 809	Ass'y Pinch Arm L	22-093-4149	1	84	948 0004 834	Screw	PGSD10A2004	3
11	948 8000 906	Chassis Head	22-112-2022	1	85	948 0004 847	Screw	PGSD20A2016	1
12	948 0001 002	Ass'y Pinch Arm R	22-093-4150	1	86	948 0004 850	Screw	PGSL15A2608	3
13	948 0001 109	Ass'y Arm Play L	22-093-4063	1	87	948 0004 864	Screw	PBE13913	2
14	948 0001 206	Gear Play	22-222-4042	2	88	948 0004 876	Screw	PGSL10A12608	1
15	948 0001 303	Ass'y Arm Play R	22-093-4062	1					
16	948 0001 400	Chassis OS	22-210-1023	1	101	948 0004 902	Washer	PGWP16X040020S	2
17	948 0001 507	Ass'y Sub Reel L	22-093-3277	1	102	948 0004 915	Washer	PGWP16X040040	1
18	948 0001 604	Solenoid	07-W021C	1	103	948 0004 928	Washer	PGWP26X042013	4
19	—	Wire	22-072-4365	1	104	948 0004 931	Washer	PGWP13X030025S	1
20	948 0001 808	Arm RVS	22-239-3010	1					
21	948 0001 905	Gear FF	22-222-4048	1					
22	948 0002 001	Ass'y Arm FR	22-093-4061	1					
23	948 0002 108	Ass'y Pulley FR	22-093-3060	1					
24	948 0002 205	Belt FR	02-083-4059	1					
25	948 0002 302	Metal	22-262-4033	1					
26	948 0010 006	Ass'y Flywheel L	22-220-3278	1					
27	948 0002 315	Metal	16-262-4031	1					
28	948 0002 506	Arm Brake	22-239-3028	1					
29	948 0001 510	Ass'y Sub Reel R	22-093-4151	1					
30	948 0002 603	Arm Triger	22-268-3008	1					
31	948 0002 700	Gear Cam	22-221-2090	1					
32	948 0005 600	Metal	PBE16449	1					
33	948 0010 103	Ass'y Flywheel R	22-220-3141	1					
34	948 0002 331	Metal	16-262-4030	1					
* 35	948 0002 849	Wire (14P)	16-072-4238	1					
36	948 0002 904	Holder Wire	16-219-2382	1					
37	948 0003 000	P.W.Board	22-070-3261	1					
38	948 0003 107	Switch Mode	04-SW150	1					
39	948 0003 204	Switch (Leaf)	04-MTS10045MVJ0	5					
40	948 0003 301	Hall IC.	00-LB9051A	2					
41	948 0003 408	Bracket FW	22-093-3276	1					
42	948 0003 505	Pulley	17-223-4639	1					
43	948 0003 628	Ass'y Moter	22-093-4451	1					
44	—	Wire	22-072-4216	1					
45	948 0003 712	Belt Main	02-084-4104	1					
46	948 0003 806	P.W.Board	22-070-4046	1					
* 47	948 0003 903	Housing	00-S5BEH	1					
48	948 0004 009	Bracket Motor	22-119-4249	1					
49	948 0004 106	Rubber Cushion	PBE13360	2					
50	948 0004 203	Belt	02-083-4094	1					
51	948 0004 300	Reel A	22-228-3210	2					
52	948 0004 407	Reel B	22-228-3211	2					
53	948 0004 504	Pulley Reel	22-223-3212	2					
54	—	Keep Wire	PBE14411	1					
61	948 0004 708	Spring	01-080-4251	1					
62	948 0004 711	Spring	01-080-4249	1					
63	948 0004 724	Spring	01-082-4250	1					
64	948 0004 737	Spring	01-081-4333	2					
65	948 0004 740	Spring	01-082-4253	1					
66	948 0004 753	Spring	01-082-4262	1					

## PARTS LIST OF CASSETTE MECHANISM (PB ONLY) Part No. 3380155009

Ref. No.	Part No.	Part Name	Remarks	Qty	Ref. No.	Part No.	Part Name	Remarks	Qty
* 1	948 0000 113	Ass'y Holder Head	22-093-4067	1	67	948 0004 766	Spring	01-082-4337	1
2	948 0000 207	Frame Head	22-219-1026	1	68	—	—	—	—
3	948 0000 304	Lever Head	22-259-2012	1	69	948 0004 779	Spring	01-082-4254	1
4	948 0000 401	Spring Azimuth	16-160-4032	1	70	948 0004 782	Spring	01-082-4261	1
5	948 0000 508	Ass'y Arm Assist	22-093-4053	1	71	948 0004 795	Spring	01-080-4260	1
6	948 0000 605	Gear Arm Head	22-239-4020	1					
7	948 0000 702	Plate Stopper	22-119-4283	1	81	948 0004 821	Screw (Azimuth)	03-300-4056	2
8	—	—	—	—	82	948 0004 818	Screw	PGSU20A2005	1
9	—	—	—	—	83	948 0004 706	Screw	03-300-4043	1
10	948 0000 809	Ass'y Pinch Arm L	22-093-4149	1	84	948 0004 834	Screw	PGSD10A2004	3
11	948 0000 906	Chassis Head	22-112-2022	1	85	948 0004 847	Screw	PGSD20A2016	1
12	948 0001 002	Ass'y Pinch Arm R	22-093-4150	1	86	948 0004 850	Screw	PGSL15A2608	3
13	948 0001 109	Ass'y Arm Play L	22-093-4063	1	87	948 0004 864	Screw	PBE13913	2
14	948 0001 206	Gear Play	22-222-4042	2	88	948 0004 876	Screw	PGSL10A12608	1
15	948 0001 303	Ass'y Arm Play R	22-093-4062	1					
16	948 0001 400	Chassis OS	22-210-1023	1	101	948 0004 902	Washer	PGWP16X040020S	2
17	948 0001 507	Ass'y Sub Reel L	22-093-3277	1	102	948 0004 915	Washer	PGWP16X040040	1
18	948 0001 604	Solenoid	07-W021C	1	103	948 0004 928	Washer	PGWP26X042013	4
19	—	Wire	22-072-4365	1	104	948 0004 931	Washer	PGWP13X030025S	1
20	948 0001 808	Arm RVS	22-239-3010	1					
21	948 0001 905	Gear FF	22-222-4048	1					
22	948 0002 001	Ass'y Arm FR	22-093-4061	1					
23	948 0002 108	Ass'y Pulley FR	22-093-3060	1					
24	948 0002 205	Belt FR	02-083-4059	1					
25	948 0002 302	Metal	22-262-4033	1					
26	948 0010 006	Ass'y Flywheel L	22-220-3278	1					
27	948 0002 315	Metal	16-262-4031	1					
28	948 0002 506	Arm Brake	22-239-3028	1					
29	948 0001 510	Ass'y Sub Reel R	22-093-4151	1					
30	948 0002 603	Arm Triger	22-268-3008	1					
31	948 0002 700	Gear Cam	22-221-2090	1					
32	948 0005 600	Metal	PBE16449	1					
33	948 0010 103	Ass'y Flywheel R	22-220-3141	1					
34	948 0002 331	Metal	16-262-4030	1					
* 35	948 0002 852	Wire (12P)	16-072-4098	1					
36	948 0002 904	Holder Wire	16-219-2382	1					
37	948 0003 000	P.W.Board	22-070-3261	1					
38	948 0003 107	Switch Mode	04-SW150	1					
39	948 0003 204	Switch (Leaf)	04-MTS10045MVJ0	2					
40	948 0003 301	Hall IC. LB9051A	00-LB9051A	2					
41	948 0003 408	Bracket FW	22-093-3276	1					
42	948 0003 505	Pulley	17-223-4639	1					
43	948 0003 628	Ass'y Moter	22-093-4451	1					
44	—	Wire	22-072-4216	1					
45	948 0003 712	Belt Main	02-084-4104	1					
46	948 0003 806	P.W.Board	22-070-4046	1					
* 47	948 0003 916	Housing	00-S3BEH	1					
48	948 0004 009	Bracket Motor	22-119-4249	1					
49	948 0004 106	Rubber Cushion	PBE13360	2					
50	948 0004 203	Belt	02-083-4094	1					
51	948 0004 300	Reel A	22-228-3210	2					
52	948 0004 407	Reel B	22-228-3211	2					
53	948 0004 504	Pulley Reel	22-223-3212	2					
54	—	Keep Wire	PBE14411	1					
61	948 0004 708	Spring	01-080-4251	1					
62	948 0004 711	Spring	01-080-4249	1					
63	948 0004 724	Spring	01-082-4250	1					
64	948 0004 737	Spring	01-081-4333	2					
65	948 0004 740	Spring	01-082-4253	1					
66	948 0004 753	Spring	01-082-4262	1					