

DENON

Hi-Fi Personal Component System

SERVICE MANUAL


PERSONAL COMPONENT SYSTEM D-77

UNIT No. UDRA-77 (Stereo Receiver)

UNIT No. UCD-77 (Compact Disc Player)

UNIT No. UDR-77 (Cassette Tape Deck)

Europe Model

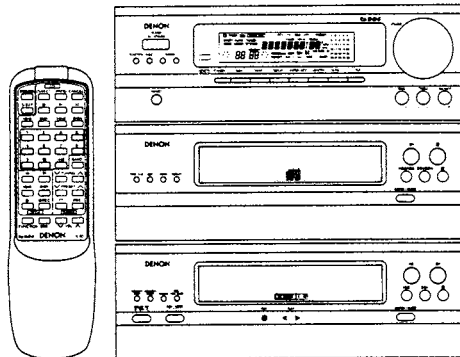

**COMPACT
disc
DIGITAL AUDIO**

• The D-77 Personal Component System consists of the following:

| | |
|----------------------|---------|
| Stereo Receiver Unit | UDRA-77 |
| Remote Control Unit | RC-800 |
| CD player Unit | UCD-77 |
| Cassette Deck Unit | UDR-77 |

MAIN FEATURES

- **RDS reception (FM only)**
RDS programs can be easily received (FM only).
- **AM/FM 30-station random preset tuner**
Random presetting permits easy operation and will be convenient for the increased number of FM stations in the future.
- **Independent power amplifier designed for quality sound**
High quality 30 W per channel power amplifier with large speaker terminals.
- **New SDB control**
The Super Dynamic Bass control circuit delivers clear bass sound.
- **Super linear converter and high performance digital filter**
Denon's unique systems for preventing loss of CD sound quality permit excellent sound field reproduction.

- **Editing circuit**
Automatic selection of CD tracks for minimum blank space on the tape when recording.
- **Dolby B and C NR circuits**
For high quality sound in playback and recording.
- **CD SRS circuit**
CDs can be recorded at the touch of a button.
- **Easy-to-use remote control unit**
- **Auto on/off function**
This function switches on the power with just a press of the CD or cassette deck play button.

BEFORE USING

Note the following points before using the D-77.

- **Moving the system**
To prevent short-circuiting or damage of the connection cords, be sure to unplug the power cord and disconnect all connection cords before moving the system.
In addition, always remove CDs before moving the system. Failing to do so may result in scratched CDs.
- **Before switching on the power**
Check again that all connections are proper and that the connection cords are not damaged. Be sure to disconnect the power plug before disconnecting or connecting the connection cords.

- Hum may be produced if a TV set or another audio component is set near this system or their connection cords are nearby. If this happens, try changing the position of the equipment and connection cords.
- Do not move the system abruptly from a cold place to a warm place, since this may cause water droplets (condensation) to form in the equipment, preventing proper operation. If this happens, wait one hour before using the system.

Check that the following parts are included in the package aside from the main unit:

| | | | |
|--------------------------------|---|---------------------------------|---|
| ① Operating Instructions | 1 | ⑤ R6P Batteries | 2 |
| ② FM Indoor Antenna | 1 | ⑥ System Connectors 1 & 2 | 2 |
| ③ AM Loop Antenna | 1 | ⑦ AC Cord | 1 |
| ④ Remote Controller | 1 | | |

NIPPON COLUMBIA CO., LTD.

GENERAL SECTION

TABLE OF CONTENTS

General Section (Page 1 ~ Pages 26)

- Main Features 1
- Before Using 1
- Main Specifications 3
- Operating Instructions 4~26

Receiver Section (Pages 27 ~ Pages 62)

- Disassembly Procedures 27~29
- Block Diagram 30, 31
- Level Diagram 32
- Adjustment 32~34
- Semiconductors 35~44
- Microprocessor Documentation 45~48
- Microprocessor Peripheral Wiring Diagram 49
- Printed Wiring Board, Parts List 50~58
- Remote Control Unit 59
- Wiring Diagram 60
- Schematic Diagram 61
- Exploded View, Parts List 62

CD Player Section (Pages 63 ~ Pages 81)

- Disassembly Procedures 63, 64
- Confirming Method of Servo 65~67
- Semiconductors 68~73
- Printed Wiring Board, Parts List 74~77
- Wiring Diagram 78
- Schematic Diagram 79
- Exploded View, Parts List 80
- Parts List of CD Mechanism Unit 81

Cassette Deck Section (Pages 82 ~ Pages 104)

- Disassembly Procedures 82, 83
- Level Diagram 84
- Block Diagram 85
- Adjustment 86~88
- Semiconductors 89~91
- Microprocessor Documentation 92~94
- Microprocessor Peripheral Wiring Diagram 95
- Printed Wiring Board, Parts List 96~99
- Wiring Diagram 100
- Schematic Diagram 101
- Exploded View, Parts List 102
- Cassette Mechanism 103, 104

Only discs with the mark at the right can be played on this system.



Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

PACKING & ACCESSORIES PARTS LIST

| Ref. No. | Part No. | Part Name | Remarks | Q'ty |
|----------|--------------|--------------------------|--------------------------|----------------|
| ● 1 | UDR A77 | Receiver Unit | | 1 |
| ● 2 | UCD 77 | CD Player Unit | | 1 |
| ● 3 | UDR 77 | Cassette Deck Unit | | 1 |
| ● 4 | 505 0241 005 | Cabinet Cover | | 1 |
| ● 5 | 503 9291 102 | :Cushion | | 1 |
| ● 6 | 503 9292 004 | :Top Cushion | | 1 |
| ● 7 | 501 9279 102 | :Master Carton | | 1 |
| 8 | GEN 7754 | Envelope Sub Ass'y | | 1 ^s |
| 8-1 | 505 9125 009 | :Poly Cover | 240x350 | (1) |
| ● 8-2 | 511 9434 009 | Inst. Manual | E,G,F,I,T,ES, NL,S,PO | (1) |
| 8-3 | 394 0040 004 | :Battery(R6P/UM-3) Ass'y | | (1) |
| △ 8-4 | 206 2108 003 | :AC Conn. with Plug | L=1.8 m | (1) |
| 8-5 | 231 1914 003 | Loop Antenna | | (1) |
| 8-6 | 395 0023 008 | FM Ant. Ass'y | | (1) |
| 8-7 | — | — | | — |
| 8-8 | 204 6471 002 | 13 P System Connector | | (1) |
| 8-9 | 204 6316 015 | 15 P System Connector | | (1) |
| ● 9 | 499 9011 009 | :Remote Control | RC-800 | (1) |

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSAETTELSE FOR STRÅLING.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

WARNING— OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.

SPECIFICATIONS

■ Receiver (UDRA-77)

- Tuner
 - Reception Frequency Range: FM: 87.50 MHz to 108.00 MHz
AM: 522 kHz to 1611 kHz
 - Receiving Sensitivity: FM: 1.5 μ V, 75 ohms (SN ratio 30 dB)
AM: 20 μ V (SN ratio 20 dB)
 - FM Stereo Separation: 40 dB (1 kHz)
- Amplifier
 - Rated Output Power: 30 W + 30 W (40 Hz to 20 kHz, 6 ohm)
 - Jacks: 3.5 mm headphone jack
 - Bass Adjustment: 100 Hz \pm 8 dB
 - Treble Adjustment: 10 kHz \pm 8 dB
 - Super Dynamic Bass: 80 Hz +8 dB
 - Jacks: PHONO: Input jacks
AUX/DAT: Input jacks, recording output jacks
PROCESSOR: Processor input/output jacks
 - Dimensions (max.): 273 (W) \times 97 (H) \times 323 (D) mm (10-48/64" \times 3-13/16" \times 12-23/32")
 - Weight: 5.6 kg (12 lbs 5 oz)
 - Power Supply: AC 230 V, 50Hz
 - Power Consumption: 95 W

■ CD Player (UCD-77)

- Wow and Flutter: Below measurable limits (\pm 0.001% W. Peak)
- Sampling Frequency: 44.1 kHz
- Light Source: Semiconductor
- Dimensions (max.): 273 (W) \times 97 (H) \times 295 (D) mm (10-48/64" \times 3-13/16" \times 11-39/64")
- Weight: 2.6 kg (5 lbs 12 oz)

■ Cassette Deck (UDR-77)

- Type: Horizontal 4-track, 2-channel auto reverse stereo cassette deck
- Heads: 1 hard permalloy recording/playback head
and 1 double-gap ferrite erase head
- Tape Speed: 4.75 cm/s
- Noise Reduction Circuits: Dolby B and C NR
- Usable Tapes: Normal, chrome and metal tapes
- Dimensions (max.): 273 (W) \times 97 (H) \times 295 (D) mm (10-48/64" \times 3-13/16" \times 11-39/64")
- Weight: 2.9 kg (6 lbs 6 oz)

■ Remote Control Unit (RC-800)

- Type: Infrared pulse
- Number of Buttons: 40
- Dimensions (max.): 54.5 (W) \times 183 (H) \times 18.5 (D) mm (2-3/16" \times 7-9/16" \times 7/9")
- Weight: 100 g (Approx. 4.6 oz) (including batteries)



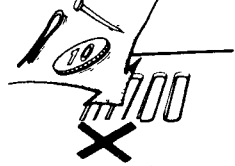
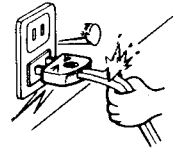
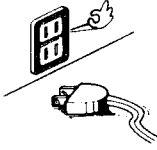

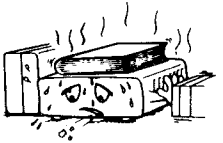

* Maximum dimensions include controls, jacks, and covers.

(W) = width, (H) = height, (D) = depth

● For improvement purposes, specifications and functions are subject to change without advanced notice.



NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO
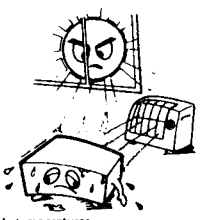
| | | |
|---|--|--|
|  <ul style="list-style-type: none"> • Avoid high temperatures Allow for sufficient heat dispersion when installed on a rack. • Vermeiden Sie hohe Temperaturen Beachten Sie, daß eine zureichende Luftzirkulation gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. • Eviter des températures élevées Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. • Evitate di esporre l'unità a temperature alte. Assicuratevi che ci sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. |  <ul style="list-style-type: none"> • Keep the set free from moisture, water, and dust. • Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern. • Protéger l'appareil contre l'humidité, l'eau et la poussière. • Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. |  <ul style="list-style-type: none"> • Do not let foreign objects in the set. • Keine fremden Gegenstände in das Gerät kommen lassen. • Ne pas laisser des objets étrangers dans l'appareil. • È importante che nessun oggetto è inserito all'interno dell'unità. |
|  <ul style="list-style-type: none"> • Handle the power cord carefully. Hold the plug when unplugging the cord. • Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. • Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. • Maneggiare il filo di alimentazione con cura. Agitare per la spina quando scollegate il cavo dalla presa. |  <ul style="list-style-type: none"> • Unplug the power cord when not using the set for long periods of time. • Wenn das Gerät eine längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. • Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. • Disinnestate il filo di alimentazione quando avete l'intenzione di non usare il filo di alimentazione per un lungo periodo di tempo. |  <ul style="list-style-type: none"> • Do not let insecticides, benzene, and thinner come in contact with the set. • Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. • Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. • Assicuratevi che l'unità non venga in contatto con insetticidi, benzolo o solventi. |
| |  <p>*(For sets with ventilation holes)</p> <ul style="list-style-type: none"> • Do not obstruct the ventilation holes. • Die Belüftungsöffnungen dürfen nicht verdeckt werden. • Ne pas obstruer les trous d'aération. • Non coprite i fori di ventilazione. |  <ul style="list-style-type: none"> • Never disassemble or modify the set in any way. • Versuchen Sie niemals das Gerät auseinander zu nehmen oder auf jegliche Art zu verändern. • Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. • Non smontate mai, né modificate l'unità in nessun modo. |

CAUTION / VORSICHT / ATTENTION / AVVISO

- If the system should smoke or produce strange smells, immediately set the power switch to the STANDBY position, unplug the power cord, and contact your store of purchase.
- Sollte das Gerät Rauch produzieren oder eigenartig riechen, stellen Sie den Netzschalter sofort auf die Position STANDBY (Bereitschaft), ziehen Sie den Netzstecker heraus und kontaktieren Sie Ihren Händler.
- Si de la fumée sort de la chaîne ou des odeurs bizarres, placer l'interrupteur d'alimentation immédiatement sur la position de veille (STANDBY), débrancher le cordon d'alimentation et contacter le distributeur.
- Qualora il sistema dovesse produrre del fumo o degli odori strani, collocate immediatamente l'interruttore di accensione nella posizione STANDBY, disinnestate il filo di alimentazione e rivolgetevi al negozio dell'acquisto.

"SERIAL NO. (UDRA-77)

(UCD-77)

(UDR-77)

PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE CABINET FOR FUTURE REFERENCE"

SAFETY IMPORTANT

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.


PARA LECTORES DE ESPAÑOL PAGINA 2bis
 VOOR NEDERLANDSTALIGE LEZERS PAGINA 2bis
 FÖR SVENSKA LÄSARE SIDA 2bis
 PARA LEITORES PORTUGUESES PAGINA 2bis

**CLASS 1 LASER PRODUCT
 LUOKAN 1 LASERLAITE
 KLASS 1 LASERAPPARAT**

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSÅFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.


VARNING: OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.



**FRONT PANEL / FRONTPLATTE / PANNEAU AVANT / PANNELLO ANTERIORE
PANEL FRONTAL / VOORPANEEL / FRAMSIDA / PAINEL FRONTAL**


RECEIVER
RECEIVER
RECEIVER
RICEVITORE

RECEPTOR
ONTVANGER
RECEIVER
RECEPTOR

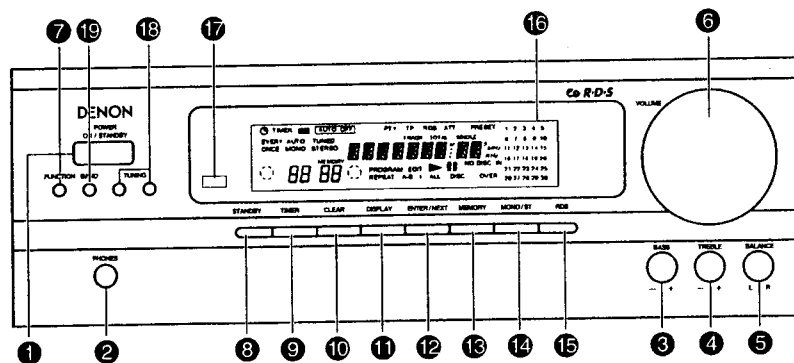


CASSETTE DECK
CASSETTENDECK
PLATINE CASSETTE
PIASTRA A CASSETTE

PLATINA DE CASSETTE
CASSETTEDECK
KASSETDÄCKET
NOMES DAS PEÇAS E FUNÇÕES

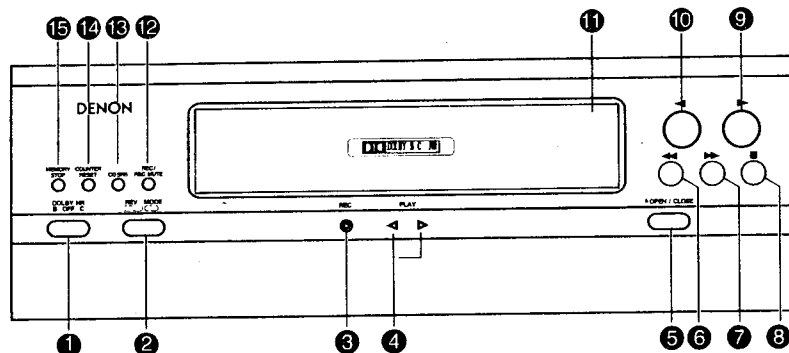

CD PLAYER
CD-SPIELER
LECTEUR CD
DISPLAY DELLA PIASTRA A CASSETTE

REPRODUCATOR DE CD
CD-SPELER
CD-SPELAREN
LEITOR DE DISCOS COMPACTOS

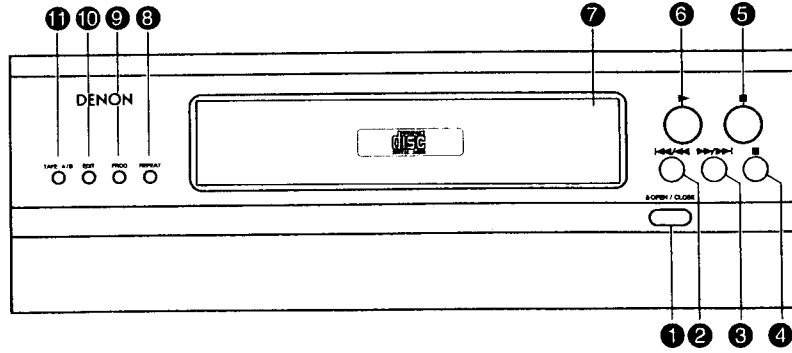

- As an aid to better understanding the operation method, the illustrations used in this manual may differ from the actual system.
- Als Hilfestellung zum besseren Verständnis der Betriebsmethode, erlauben wir uns den Hinweis, daß sich die Abbildungen in dieser Bedienungsanleitung leicht von dem aktuellen System unterscheiden.
- Pour faciliter la compréhension de la méthode de fonctionnement, les illustrations utilisées dans ce manuel peuvent être différentes de celles de la chaîne réelle.
- Per rendere la spiegazione del metodo operativo più facile, le illustrazioni usate in questo libretto delle istruzioni possono differire dal sistema stesso.
- Como ayuda a un mejor entendimiento del método de funcionamiento, las ilustraciones utilizadas en este manual pueden diferir del sistema real.
- Als bijkomende hulp om de bedieningsmethode beter te begrijpen, is het mogelijk dat de afbeeldingen die in deze handleiding zijn gebruikt verschillen van het eigenlijke systeem.
- Ilustrationerna i bruksanvisningen hjälper dig förstå de olika funktionerna. Studera dem noga. (Vissa illustrationer kan skilja sig lite grann från din apparat.)
- Como ajuda para uma melhor compreensão do método de funcionamento, as ilustrações utilizadas neste manual podem diferir do verdadeiro sistema.

CONTENTS

| | | | |
|---------------------------------------|-------|---|--------|
| 1 Main Features | 4 | (Single Side Playback, Two-Side Playback and Continuous Playback) | 17 |
| 2 Before Using | 4 | 10 Recording Cassette Tapes | 18 |
| 3 Antenna Connections | 4 | 11 Playing CDs | 18-21 |
| 4 Connections | 5 | • Compact Discs | 18 |
| 5 Part Names and Functions | | • Regular Play | 19 |
| • Receiver | 6 | • Various CD Play Functions | 19 |
| • Cassette Deck | 6 | • Edited Recording onto Sides A and B of a Tape | 21 |
| • CD Player | 7 | 12 Remote Control Unit | 22 |
| • Display | 7, 8 | 13 Important Information | 23 |
| 6 Listening to Radio Broadcasts | 9-11 | 14 Specifications | 23 |
| 7 Using the Timer | 11-16 | 15 Troubleshooting | 24 |
| 8 Cassette Deck | 16 | DENON Service Network | 92, 93 |
| • Before Recording and Playback | 16 | | |
| 9 Playing Cassette Tapes | | | |

Check that the following parts are included in the package aside from the main unit:

| | |
|---------------------------------|---|
| ① Operating Instructions | 1 |
| ② FM Indoor Antenna | 1 |
| ③ AM Loop Antenna | 1 |
| ④ Remote Controller | 1 |
| ⑤ RG/AA Batteries | 2 |
| ⑥ System Connectors 1 & 2 | 2 |
| ⑦ AC Cord | 1 |

1 MAIN FEATURES

- **RDS reception (FM only)**
RDS programs can be easily received (FM only).
- **AM/FM 30-station random preset tuner**
Random presetting permits easy operation and will be convenient for the increased number of FM stations in the future.
- **Independent power amplifier designed for quality sound**
High quality 30 W per channel power amplifier with large speaker terminals.
- **New SDB control**
The Super Dynamic Bass control circuit delivers clear bass sound.
- **Super linear converter and high performance digital filter**
Denon's unique systems for preventing loss of CD sound quality permit excellent sound field reproduction.

2 BEFORE USING

Note the following points before using the D-77

- **Moving the system**
To prevent short-circuiting or damage of the connection cords, be sure to unplug the power cord and disconnect all connection cords before moving the system. In addition, always remove CDs before moving the system. Failing to do so may result in scratched CDs.
- **Before switching on the power**
Check again that all connections are proper and that the connection cords are not damaged. Be sure to disconnect the power plug before disconnecting or connecting the connection cords.


- **Editing circuit**
Automatic selection of CD tracks for minimum blank space on the tape when recording.
- **Dolby B and C NR circuits**
For high quality sound in playback and recording.
- **CD SRS circuit**
CDs can be recorded at the touch of a button.
- **Easy-to-use remote control unit**
- **Auto on function**
This function switches on the power with just a press of the PRESET CALL and CD or cassette deck play button. The power also turns on automatically when the PRESET button and the number buttons in the tuner section of the remote control unit are pressed.

- Hum may be produced if a TV set or another audio component is set near this system or their connection cords are nearby. If this happens, try changing the position of the equipment and connection cords.
- Do not move the system abruptly from a cold place to a warm place, since this may cause water droplets (condensation) to form in the equipment, preventing proper operation. If this happens, wait one hour before using the system.

3 ANTENNA CONNECTIONS

Connecting the Included Antennas


AM Loop Antenna
Assemble the included AM loop antenna as shown in the diagram, separate it as far from the system as possible, and place it in a position that provides the best reception. In some cases, reception is better if the polarities of the connections are reversed. AM broadcasts will not be received well if the loop antenna is not connected or if it is connected but is located near a metal part. Attach the loop antenna even when using an outdoor AM antenna.

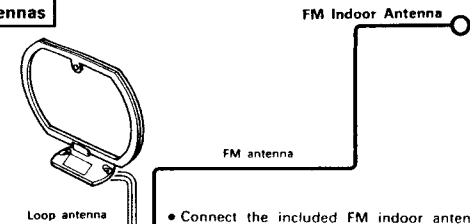


- Connect the included FM indoor antenna to the FM antenna terminal, tune in an FM station, then find the position at which distortion and noise is minimum and fasten the ends of the antenna in that position using tape or pins. Disconnect this antenna when using an outdoor antenna.

Connecting an Outdoor Antenna

Use an outdoor antenna if reception cannot be heard clearly with the included antenna. Change the location, height, and direction of the antenna to find the position of best reception, then fix the antenna in that position.

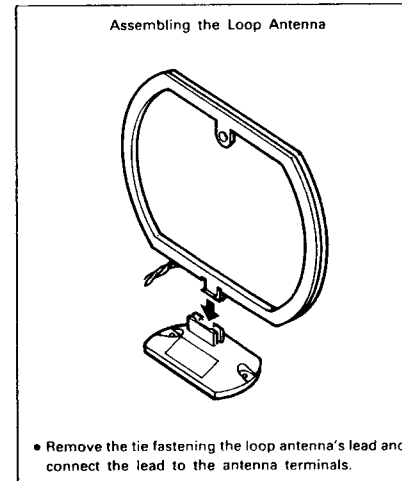


- Remove the tie fastening the loop antenna's lead and connect the lead to the antenna terminals.
- Separate the FM and AM antenna wires from the system connector wires.

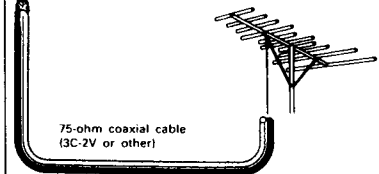

- Connect the outdoor antenna using 75-ohm coaxial cable. This will help shield the antenna from external noise.
- **Places for installing Outdoor Antennas**
 - Install the outdoor antenna facing a broadcast station's transmission antenna. When surrounded by buildings or hills, place the antenna in the location which provides best reception and try changing the direction of the antenna to obtain optimum reception.
 - Do not install the antenna under power lines. It is extremely dangerous for the antenna to come into contact with a power line.
 - Install away from roads and train tracks to prevent noise from cars and trains.
 - Do not install the antenna too high, as it may be hit by lightning.

4 CONNECTIONS

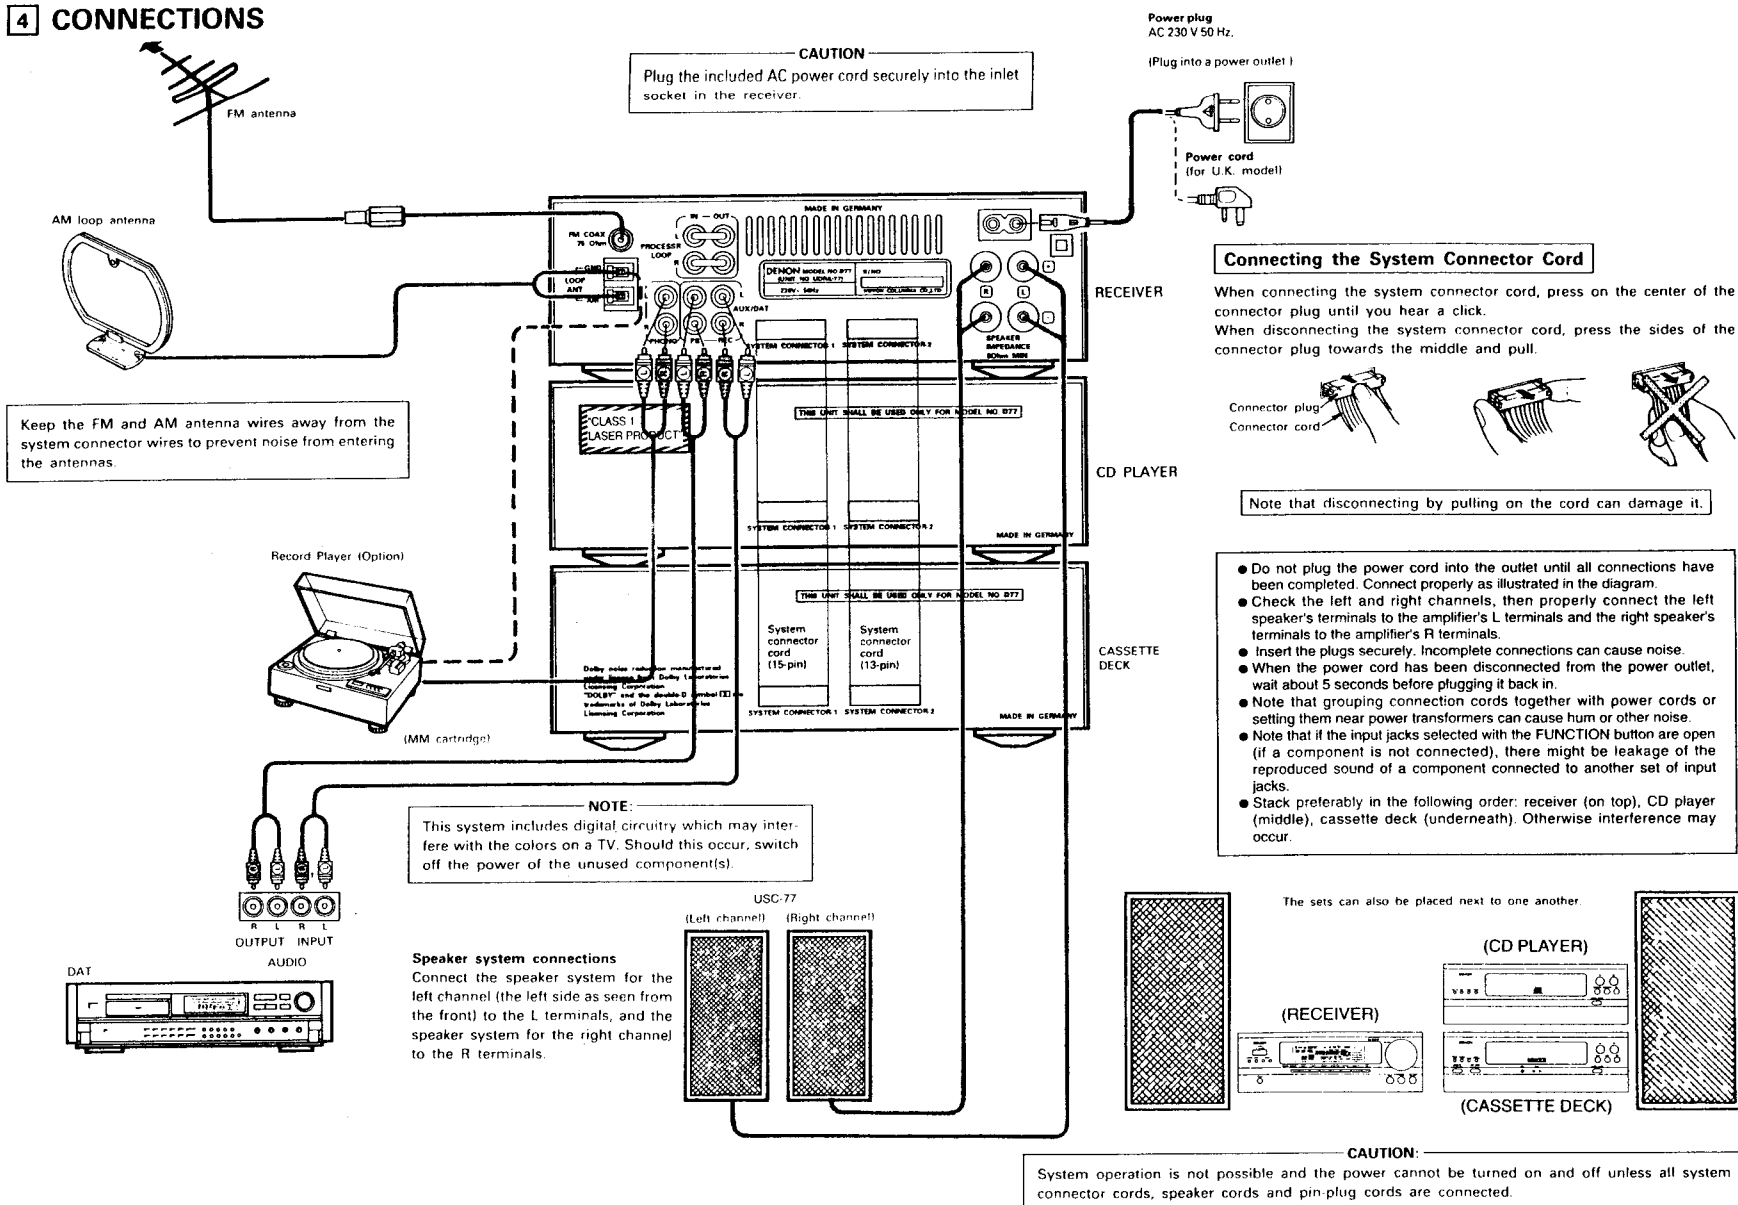

5 PART NAMES AND FUNCTIONS

RECEIVER

- 1 **POWER ON/STANDBY switch**
When pressed once, the power is turned on and the display lights. Also, this power switch can be used to turn the power of all the units on and off.
- 2 **PHONES jack**
When using headphones, plug them in here. The sound from the speakers is cut when headphones are plugged in.
- 3 **BASS control**
Use this control to adjust the bass.
- 4 **TREBLE control**
Use this control to adjust the treble.
- 5 **BALANCE control**
Use this control to adjust the balance of the volume between the left and right channels. The volume is the same for the left and right channels when the control is at the center.
- 6 **VOLUME control**
This control adjusts the overall volume. Turn clockwise (↻) to increase the volume, counterclockwise (↺) to decrease it.
- 7 **FUNCTION button**
Use this to select the program source. The selection changes in the order of TUNER, TAPE, CD, AUX and PHONO.

NOTE: The auto function serves to automatically switch the function when the operation buttons are pressed on each unit.
Tuner: BAND button
CD: Play button (▶)
Deck: Play buttons (▶ and ◀)
(Note that the auto function will not operate unless a tape is loaded in the deck.)
- 8 **STANDBY button**
Press this button to cause the timer to operate at the set time. When the timer has been set, pressing this button will light up the display's timer standby indicator (⏸), and pressing it again will switch off the standby indicator. The timer will not function when the standby indicator is off.
- 9 **TIMER button**
This is used to set the timer.
- 10 **CLEAR button**
This button is used to change the current time setting or the contents of the set timer.

- 11 **DISPLAY button**
Use this switch to switch between the function and time display. For example, when the function is set to the tuner, the display switches between the reception frequency and time.
When RDS stations or stations for which you have written characters yourself and stored them in the memory are tuned in, press this button once to display the frequency, then press again to display the time.
- 12 **ENTER/NEXT button**
This is used when setting the timer, setting the current time, and when advancing to the next operation.
- 13 **MEMORY button**
This button is used when presetting FM and AM stations.
- 14 **MONO/ST (FM Stereo mute/mono) button**
This button will not function when receiving AM broadcasts.
(For FM reception)
AUTO: Use this mode to receive FM broadcasts in (mute): stereo.
("AUTO" appears on the display.) The muting circuit is activated to cut the hiss noise between stations.
MONO: In this mode, FM broadcasts are received in monaural, regardless of whether they are broadcast in monaural or stereo.
Set to the mono mode if there is much noise in the stereo mute mode (with "AUTO" displayed) or if the signals are weak.
- 15 **RDS button**
Use this button to automatically tune to stations using the radio data system.
- 16 **DISPLAY**
The display indicates a wide variety of information including: functions and SDB of the amplifier, frequency and reception conditions of the tuner, number of tracks and time of the CD, and the counter of the tape deck.
- 17 **Remote control sensor**
The remote control unit is pointed toward this sensor and operated.
- 18 **TUNING UP and DOWN buttons**
Use these to tune in FM or AM stations and when setting the time and timer.
- 19 **BAND (FM/AM) button**
With each press, the band is switched in the order of FM, AM, FM and so on.

CASSETTE DECK

- 1 **DOLBY NR selection switch**
Use this switch to select the Dolby NR mode: off, B type or C type. During playback, set this switch to the same mode in which the tape was recorded.
- 2 **REV MODE switch**
Use this switch to set the reverse mode to one of the following modes: ↔ (single side mode), ↔ (two-side mode), or ↵↔
(continuous mode). Refer to Page 16 for details.
- 3 **REC LED**
This LED lights in the recording mode.
- 4 **PLAY LEDs**
This LED lights in the play mode.
- 5 **▲ OPEN/CLOSE button**
Press this button to open and close the cassette tray. The button also works in the standby condition. When this button is pressed in the standby condition, the power is automatically switched on.
- 6 **◀◀ (rewind) button**
Press this button to rewind the tape. Also, if pressed during playback in the ▶ (forward) direction, the tape is rewound to the beginning of the currently playing selection. If pressed during playback in the ◀ (reverse) direction, the tape is forwarded to the beginning of the next selection (on the back side of the tape).
- 7 **▶▶ (fast-forward) button**
Press this button to fast forward the tape. Also, if pressed during playback in the ▶ (forward) direction, the tape is fast forwarded to the beginning of the following selection. If pressed during playback in the ◀ (reverse) direction, the tape is rewound to the beginning of the currently playing selection (on the back side of the tape).
- 8 **■ (stop) button**
Press this button to stop the moving tape.
- 9 **▶ (forward play) button**
Press this button to begin playback in the forward direction.
When this button is pressed in the standby condition, the power is automatically switched on and the deck plays.
- 10 **◀ (reverse play) button**
Press this button to begin playback in the reverse direction.
When this button is pressed in the standby condition, the power is automatically switched on and the deck plays.

- 11 **Cassette tray**
The cassette tray opens outward when the OPEN/CLOSE button is pressed. Insert the cassette tape with the side on which the tape is exposed facing away from you. To close the cassette tray, press the OPEN/CLOSE button again.
- 12 **REC/REC MUTE (recording) button**
To record, press the REC/REC MUTE button (hold it in for at least 0.5 seconds), then press the ▶ play button only. If only the REC/REC MUTE button is pressed, the deck is set to the recording pause mode. If this button is pressed again, or pressed during recording, the recording mute mode is set for approximately 5 seconds, after which the deck is set to the recording pause mode.

Recording pause mode

When the play button of the CD player is pressed in the recording pause mode, the CD begins to be recorded.

- 13 **CD SRS (CD synchronized recording system) button**
Use this button for simple CD synchronized recording. Refer to Page 18.
- 14 **COUNTER RESET button**
Press this button to reset the tape counter on the tuner unit's display to "0000".
- 15 **MEMORY STOP button**
When this button is pressed and "MEMORY" is displayed on the receiver unit's display, when the ▶▶ or ◀◀ button is pressed the tape automatically stops at the point where the counter reads "0000". (The search operation is performed if the ▶▶ or ◀◀ button is pressed during playback, so first press the STOP button, then press the ▶▶ or ◀◀ button.)

NOTE:


- After the power cord is plugged into an outlet, a mechanical sound is produced from the cassette deck when the power switch is pressed on the first time only. This is the sound of the cassette mechanism being set to the proper operating position, and is not a problem with the deck.

CD PLAYER

- 1 **▲ OPEN/CLOSE button**
Press this button to open the disc tray. Press once to open the disc tray forward, then press again to close the disc tray. This button also operates in the standby mode.
- 2 **⏮/⏪ (automatic/manual search backward button)**
Press this button to move the pickup back to the beginning of the desired track.
Press in the play, stop, or pause mode to move back a number of tracks equal to the number of times the button is pressed.
- 3 **⏭/⏩ (automatic/manual search forward button)**
Press this button to move the pickup forward to the beginning of the desired track.
Press in the play, stop, or pause mode to move forward a number of tracks equal to the number of times the button is pressed.
* The automatic search function is set if button 2 or 3 is released within 0.5 seconds, and the manual search function is set if the button is held in for more than 0.5 seconds.
* Buttons 2 and 3 do not function in the pause mode.
- 4 **■ Stop button**
Press this button to stop CD play.
- 5 **⏸ Pause button**
Press this button to stop CD play temporarily.
Press the play button to resume CD play.
- 6 **▶ Play button**
Press this button to start playing the disc. If pressed when the disc tray is open, the disc tray closes and playback begins. Pressing this button in the standby mode automatically switches on the power and plays the disc.


- 7 **Disc tray**
Compact discs are loaded to the disc tray.
- 8 **REPEAT button**
Press this button for repeat play.
- 9 **PROGRAM Button**
Use this button to play the desired tracks in the order you wish.
- 10 **EDIT button**
Press this button for edited recording (dividing the tracks to be recorded to fit onto sides A and B of a tape according to the length of the tape).
- 11 **TAPE A/B button**
Press this button during editing to switch the display between the display of program contents for tape side A and the display for tape side B.

RECEIVER DISPLAY

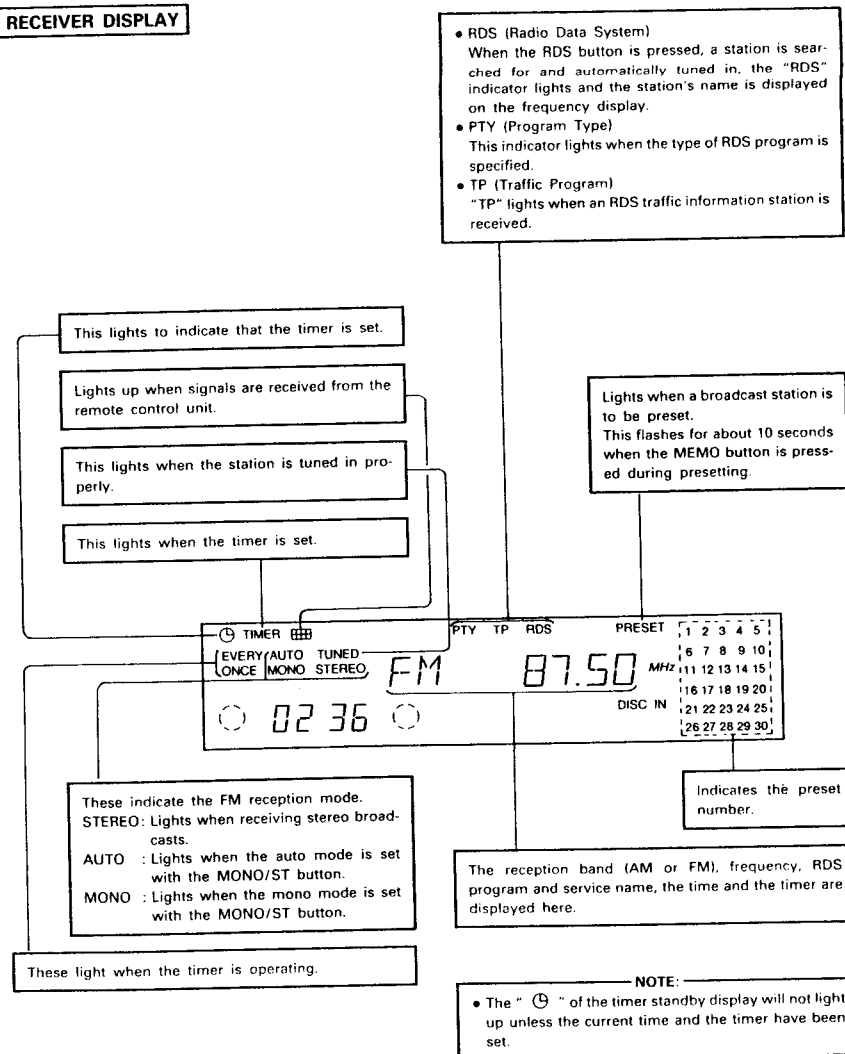

CASSETTE DECK DISPLAY

• This is displayed on the display of the receiver unit (UDRA-77)

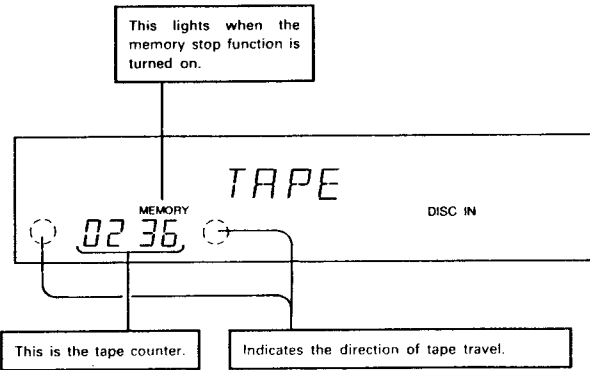


USING THE TAPE COUNTER

- The counter is reset to "0000" when the tape is ejected and loaded, and when the COUNTER RESET button is pressed.
- Making a memo of the contents of a recording and the range of the counter numbers while you are recording or playback back a tape will be convenient when you search for a portion of the tape you would like to listen to or when you search for the next portion you would like to record.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

CD PLAYER DISPLAY

• This is displayed on the display of the receiver unit (UDRA-77)

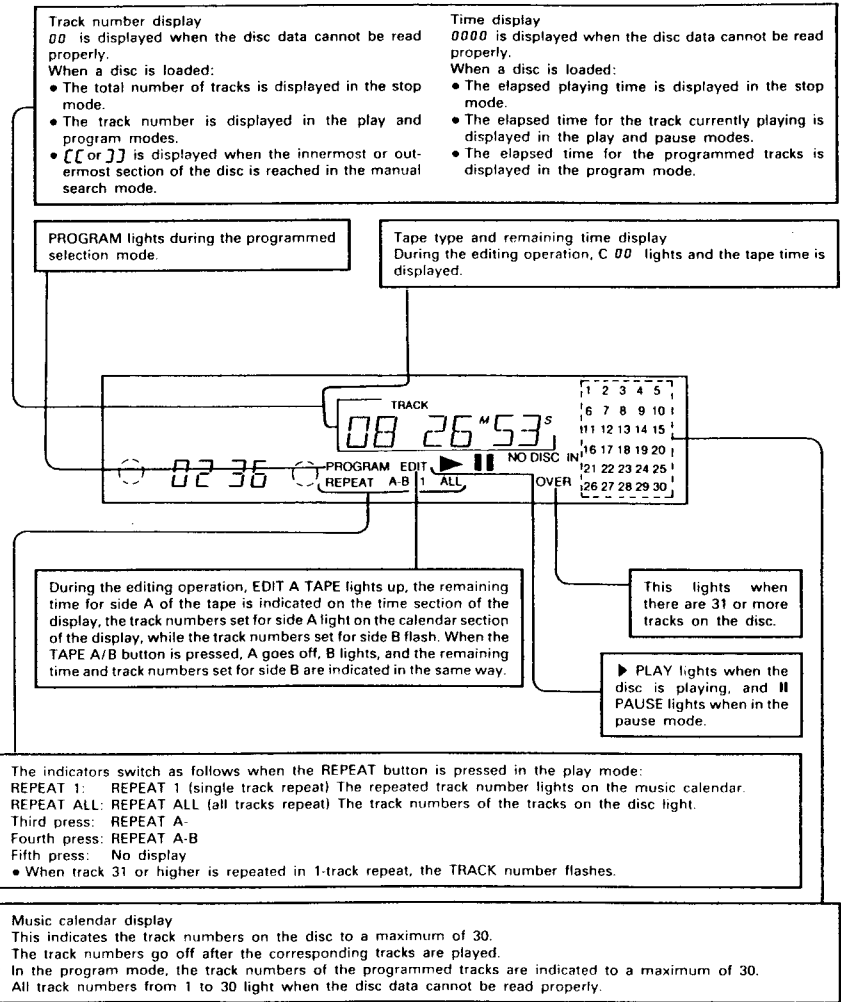


• NO DISC lights on the display if no disc is loaded, or if the disc is loaded upside-down or is heavily scratched or dirty.

6 LISTENING TO RADIO BROADCASTS

(Check that connections are proper, referring to Pages 5)

TUNING

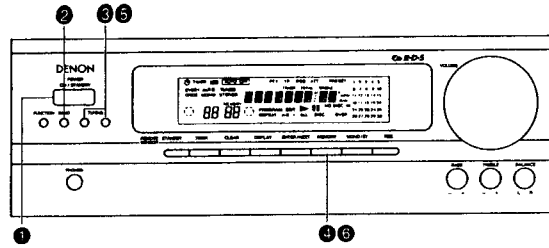

Example: Tuning to 87.50 MHz, FM

| | | | | |
|---|--|-------------------|--|---|
| 1 | Set the VOLUME control to the minimum position, then press the POWER button of the receiver. | POWER ON/STANDBY | | |
| 2 | Select the FM band with the BAND button. | BAND | | Set to FM. |
| 3 | Use the UP and DOWN buttons to set the frequency to 87.50 MHz. | TUNING DOWN UP | | Lights up when the station is tuned in. |

Presetting FM and AM Stations

Example: Presetting the (currently tuned) FM 87.50 MHz to preset number 3

| | | | | |
|---|--|-------------------|--|--|
| 4 | Press the MEMORY button. "PRESET" flashes for 10 seconds. | MEMORY | | |
| 5 | Use the TUNING UP and DOWN buttons to call up the number to which you want to preset the station. Or, directly press the number buttons on the remote control unit. The preset number will flash. | TUNING DOWN UP | | |
| 6 | Press the MEMORY button while "PRESET" is flashing. | MEMORY | | |

Up to 30 FM and AM stations can be preset at random using this procedure.

Note: The character writing mode is set if the MEMORY button is pressed in for over 3 seconds.

Auto Tuning

- When the TUNING buttons are pressed, the frequency changes in steps of 50 kHz for FM, 9 kHz for AM.
- If the TUNING UP or DOWN button is held in for more than 0.5 second, the frequency continues to change when the button is released. The next station is tuned in automatically and the tuning stops there. The auto tuning might not stop when a weak signal is received at the antenna. At this time the TUNED display will not light. To stop the auto tuning, press the UP or DOWN button again.

Listening to Preset Stations

Example: Listening to the FM station preset at number 3

| | | | |
|---|---|--|--|
| 1 | Press the TUNER BAND button on the remote control unit. | | |
| 2 | Press button "3" on the remote control unit. | | |

FM Stereo Reception

- When the MONO/ST button is pressed (which lights the AUTO indicators) and an FM stereo broadcast is received, the STEREO indicator lights and the station is received in stereo. If the MONO indicator is lit by pressing the MONO/ST button, the STEREO indicator goes off and the station is received in monaural.

Notes on Presetting



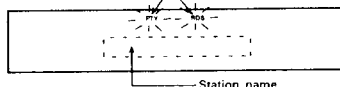
- When an FM station is preset, the auto or monaural mode is also set, so check the display before presetting the station.
- If a station is preset to a number at which another station has previously been preset, the previous station is cleared and the new station is preset.
- If the power cord is unplugged, the preset memory is not cleared immediately, but will be cleared if the cord is left unplugged over a long period. Should this happen, preset the stations again.

Receiving RDS broadcasts (FM only)

| | | |
|---|--|--|
| 1 | Press the BAND button and set the FM band. | |
| 2 | Press the RDS button once. | Flashes "RDS" blinks |
| 3 | Press the TUNING UP or DOWN button. | Flashes |
| 4 | The station is tuned in. | "RDS" lights after 5 seconds of flashing. Station name Once the station is tuned in, "RDS" flashes for 5 seconds and the program service name is displayed. When another station is desired, press the UP or DOWN button of TUNING while "RDS" is flashing and start the tuning. |

NOTE: If no RDS station is found, "NO RDS" is displayed.


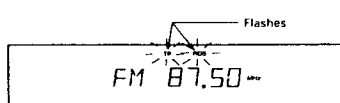
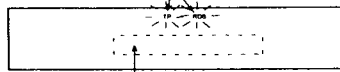
PTY Search
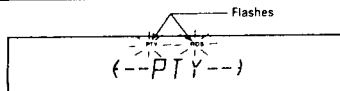
| | |
|--|---|
| <p>1 Press the RDS button twice.</p> |  <p>("PTY" and "RDS" flash, and "--PTY--" is displayed.)</p> |
| <p>2 Press the PRESET UP or DOWN button on the remote control unit to select the type of program. (One of the 15 types listed below can be selected.)</p> |  |
| <p>3 Press the TUNING UP or DOWN button.</p> | <p>"PTY" and "RDS" light after 5 seconds of flashing</p> |
| <p>4 The station is tuned in.</p> |  <p>Once the station is tuned in, "RDS" and "PTY" flash for 5 seconds and the program service name is displayed. When the UP or DOWN button of TUNING is pressed while "RDS" and "PTY" are flashing, tuning is started again.</p> |
| <p>NOTE: If no program of the specified type is found, "NO PROG" is displayed.</p> | |

Programs

| | | | |
|---------|-------------------|----------|--------------------|
| NEWS | (News) | VARIED | (Varied) |
| AFFAIRS | (Current Affairs) | POP M | (Pop Music) |
| INFO | (Information) | ROCK M | (Rock Music) |
| SPORT | (Sport) | MOR M | (M.O.R. Music) |
| EDUCATE | (Education) | LIGHT M | (Light Classics) |
| DRAMA | (Drama) | CLASSICS | (Serious Classics) |
| CULTURE | (Culture) | OTHER M | (Other Music) |
| SCIENCE | (Science) | | |

TP Search

| | |
|--|--|
| <p>1 Press the RDS button 3 times.</p> |  |
| <p>2 Press the TUNING UP or DOWN button of TUNING.</p> |  |
| <p>3 Broadcast reception.</p> | <p>"TP" and "RDS" light after 5 seconds of flashing</p>  <p>Once the station is tuned in, "RDS" and "TP" flash for 5 seconds and the program service name is displayed. When the UP or DOWN button of TUNING is pressed while "RDS" and "TP" are flashing, tuning is started again.</p> |
| <p>NOTE: "NO PROG" is displayed when there is no traffic information broadcast station.</p> | |

NOTE:

The D-77 is designed so that RDS broadcasts can be received. In some countries and areas, however, no RDS broadcasts are offered.

- "PTY" is a code which identifies the type of program.
- "TP" is a code which identifies the station providing the traffic information.
- "CT" is a signal providing time data in one minute units.
- Some stations which provide RDS broadcasts do not broadcast CT signals, in which case the time display cannot be corrected by pressing the CT button on the remote control unit.

Writing Characters


The D-77 includes a function for writing characters.

Example: Writing the characters "MY RADIO" for the station at FM 107.70 MHz and storing this at preset channel 5

| | | |
|---|--|--|
| 1 | Use the BAND button and the TUNING UP and DOWN buttons to display FM 107.70MHz. | |
| 2 | Press the MEMORY button for at least 3 seconds so that "PRESET" flashes on the display. | |
| 3 | Use the TUNING UP and DOWN buttons to select preset channel 5. | |
| 4 | Press the ENTER/NEXT button. The "-" begins to flash. | |
| 5 | Use the TUNING UP and DOWN buttons to select the character "M", then press the PRESET UP button on the remote control unit. The "-" stops flashing, and the "M" in the second place starts flashing. | |
| 6 | Use the TUNING UP and DOWN buttons to select the character "Y", then press the PRESET UP button on the remote control unit. | |
| 7 | Repeat this procedure to write "MY RADIO", then press the ENTER/EXIT button. "PRESET" stops flashing and the character writing mode is cancelled. | |

The characters which can be written are shown below.

- The characters change in the direction of the arrow when the PRESET UP button is pressed, in the opposite direction when the PRESET DOWN button is pressed.
- The character sequence starts over from A each time a character is set.



NOTES:

- The cursor can be moved to correct a character by pressing the PRESET button during the character writing mode.
- If the frequency of the station for which characters have been written is the same as the frequency of a PS broadcasting station, the characters are rewritten by the PS signal.
- Characters can also be written in the same way when in the AM mode.

7 USING THE TIMER

Setting the Timer

- Be sure to set the current time.
- Regular timer: The power can be switched on and off once every day at the same time. (Wake-up music)
- Sleep timer: The power can be set to turn off in up to 60 minutes in steps of 10 minutes using the remote control unit. (Bedtime music)

Be sure to preset stations before setting the timer.

Refer to "Presetting FM and AM Stations" on Page 9.

- Turn the standby switch off when not using the timer.

Power Failure


Should a power failure occur or if the power cord becomes unplugged from the power outlet, "00:00" will flash on the time display. If this happens, reset the current time.

(Reset the current time and timer settings. If "00:00" was displayed, also reset the stations preset on the tuner.)

The standby mark starts flashing if there is a power failure or the power cord is unplugged while the standby mark is lit. If this happens, reset the time and the timer. (If the display reads "00:00", also reset the tuner's preset channels.)

To make the standby mark stop flashing, press the TIMER button, then press the TIMER or CLEAR button while "FULL" is displayed.

Setting the Current Time (A 24-hour clock display is used.)

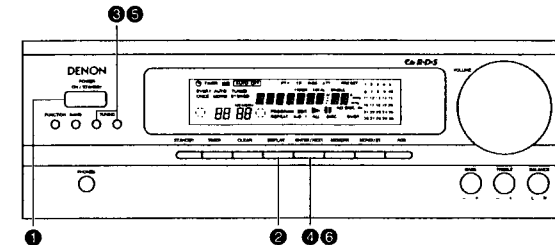


Example: Setting to 19:30 (7:30 p.m.)

| | | | |
|---|--|--|---|
| 1 | Press the POWER button of the receiver. | | |
| 2 | Depress the DISPLAY button for 3 seconds or longer. | | The hour's place flashes. (All places flash if the time has already been set.) |
| 3 | Set the hours with the UP and DOWN buttons. | | The set places flashes. |
| 4 | Press the ENTER/NEXT button. | | The minutes' places flashes. |
| 5 | Set the minutes with the UP and DOWN buttons. | | The set places flashes. |
| 6 | Press the ENTER/NEXT button at the sound of a time signal. The time display lights steadily and the clock starts keeping the time. | | The display lights steadily and the clock starts to count from 0 seconds. |

Setting the Timer

(Preset the FM and AM stations in advance)

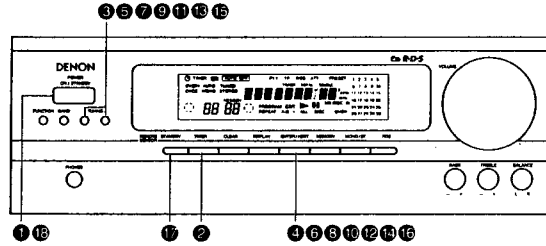

Example: Setting the timer to turn on at 12:35 and off at 12:56.
 90.00 MHz FM is being received on preset "1".
 87.50 MHz FM is set to preset number "3".

| | | | | |
|----|---|------------------|-----------|---------------------------------|
| 1 | Press the POWER button. | POWER ON/STANDBY | TIMER | Flashes TIMER |
| 2 | Press the TIMER button. | TIMER | TIMER | Flashes TIMER |
| 3 | Press the UP and DOWN buttons to display "EVERY". | TUNING DOWN UP | EVERY | Flashes TIMER |
| 4 | Press the ENTER/NEXT button. | ENTER/NEXT | FUNC | TIMER EVERY FUNC |
| 5 | Press the UP and DOWN buttons to display "TUNER". | TUNING DOWN UP | TUNER | TIMER EVERY TUNER |
| 6 | Press the ENTER/NEXT button. | ENTER/NEXT | FM 87.50 | TIMER EVERY TUNED FM 87.50 |
| 7 | Use the UP and DOWN buttons to set the preset number 3. | TUNING DOWN UP | 0:00 | Flashes TIMER EVERY 0:00 |
| 8 | Press the ENTER/NEXT button. | ENTER/NEXT | Lights up | Lights up |
| 9 | Use the UP and DOWN buttons to set the hour at which the timer is to switch on. | TUNING DOWN UP | 12:00 | Flashes TIMER EVERY 12:00 |
| 10 | Press the ENTER/NEXT button. | ENTER/NEXT | 12:00 | Flashes TIMER EVERY 12:00 |

| | | | | |
|----|---|------------------|----------|---|
| 11 | Use the UP and DOWN buttons to set the minutes at which the timer is to switch on. | TUNING DOWN UP | 12:35 | Flashes TIMER EVERY 12:35 |
| 12 | Press the ENTER/NEXT button. | ENTER/NEXT | 0:00 | Flashes TIMER EVERY 0:00 |
| 13 | Use the UP and DOWN buttons to set the hour at which the timer is to switch off. | TUNING DOWN UP | 12:80 | Flashes TIMER EVERY 12:80 |
| 14 | Press the ENTER/NEXT button. | ENTER/NEXT | 12:00 | Flashes TIMER EVERY 12:00 |
| 15 | Use the UP and DOWN buttons to set the minutes at which the timer is to switch off. | TUNING DOWN UP | 12:56 | Flashes TIMER EVERY 12:56 |
| 16 | Press the ENTER/NEXT button. | ENTER/NEXT | FM 90.00 | Flashes TIMER EVERY TUNED FM 90.00 |
| 17 | Press the STANDBY button. | STANDBY | FM 90.00 | Lights up (See NOTE) TIMER EVERY TUNED FM 90.00 |
| 18 | Press the POWER button. | POWER ON/STANDBY | 10:15 | TIMER is displayed TIMER EVERY 10:15 |


- When the STANDBY button is pressed and the "☉" mark is lit, the timer will function at the same times each day.
- To switch off the timer, press the STANDBY button and turn off the "☉" mark.

NOTE:
 The timer standby mark "☉" will not light unless the current timer has been set. Should this be the case, set the current time, then press STANDBY the button.

NOTE:
 1) When there is an irregularity in the contents of the display or in the operation, unplug the power cord from the power outlet, then, while pressing down both the DOWN button of TUNING and the MEMORY button at the same time, plug the power cord into the power outlet again.
 All conditions will return to their initial settings and the display will appear normal. It will now be necessary to reset the presets, current time, and the timer setting time.
 2) To enable remote control operation of this system, the AC power is always supplied to the system. Even when the POWER button has been switched off, the display of the tuner will continue to be lit dimly.

Setting the Once Timer

(Preset the AM and FM stations in advance)

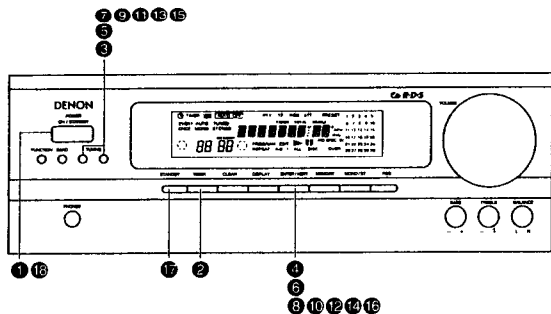

Example: Setting the timer to turn on at 12:35 and off at 12:56.
522 kHz AM is being received on preset number "2".
1611 kHz AM is set to preset number "15".

| | | | | |
|----|---|------------------|---------|-----------------------------|
| 1 | Press the POWER button. | POWER ON/STANDBY | TIMER | Flashes TIMER |
| 2 | Press the TIMER button. | TIMER | TIMER | Flashes TIMER |
| 3 | Press the DOWN button to display "ONCE". | TUNING DOWN UP | ONCE | Flashes ONCE |
| 4 | Press the ENTER/NEXT button. | ENTER/NEXT | FUNC | TIMER ONCE FUNC |
| 5 | Press the UP and DOWN buttons to display "TUNER". | TUNING DOWN UP | TUNER | TIMER ONCE TUNER |
| 6 | Press the ENTER/NEXT button. | ENTER/NEXT | AM 1611 | TIMER ONCE TUNED AM 1611 |
| 7 | Press the UP and DOWN buttons to set the preset number 15. | TUNING DOWN UP | 15 | Flashes ONCE 15 |
| 8 | Press the ENTER/NEXT button. | ENTER/NEXT | 0:00 | ONCE 0:00 Lights up. |
| 9 | Use the UP and DOWN buttons to set the hour at which the timer is to switch on. | TUNING DOWN UP | 12:00 | Flashes ONCE 12:00 |
| 10 | Press the ENTER/NEXT button. | ENTER/NEXT | 12:00 | Flashes ONCE 12:00 |

| | | | | |
|----|---|------------------|---------|--|
| 11 | Use the UP and DOWN buttons to set the minutes at which the timer is to switch on. | TUNING DOWN UP | 12:35 | Flashes ONCE 12:35 |
| 12 | Press the ENTER/NEXT button. | ENTER/NEXT | 0:00 | Flashes ONCE 0:00 |
| 13 | Use the UP and DOWN buttons to set the hour at which the timer is to switch off. | TUNING DOWN UP | 12:00 | Flashes ONCE 12:00 |
| 14 | Press the ENTER/NEXT button. | ENTER/NEXT | 12:00 | Flashes ONCE 12:00 |
| 15 | Use the UP and DOWN buttons to set the minutes at which the timer is to switch off. | TUNING DOWN UP | 12:56 | Flashes ONCE 12:56 |
| 16 | Press the ENTER/NEXT button. | ENTER/NEXT | AM 5 22 | Flashes ONCE TUNED AM 5 22 PRESET 2 |
| 17 | Press the STANDBY button. | STANDBY | AM 5 22 | Lights up. (See NOTE) ONCE TUNED AM 5 22 PRESET 2 |
| 18 | Press the POWER button. | POWER ON/STANDBY | 10:15 | TIMER ONCE TIMER ONCE 10:15 |

- When the STANDBY button is pressed and the "Ⓢ" mark is lit, the timer will function one time only.
- To switch off the timer, press the STANDBY button and turn off the "Ⓢ" mark.












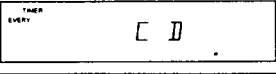
NOTE:

The standby mark "Ⓢ" will not light unless the current timer has been set. Should this be the case, set the current time, then press the STANDBY button.

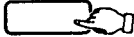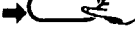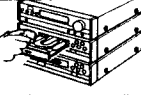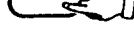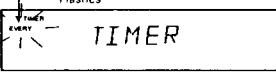


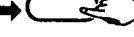






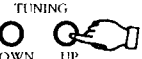
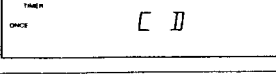
Ways to Use the Timer

Example 1: Waking up to the music of a compact disc.

1 EVERYDAY TIMER






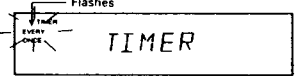






| | | | | |
|---|---|---|--|---|
| 1 | <p>POWER ON/STANDBY</p>  <p>Press the receiver's POWER button to switch on the power.</p> | <p>OPEN / CLOSE</p>  <p>Press the CD player's OPEN/CLOSE button to open the tray.</p> |  <p>Set the compact disc in the tray.</p> | <p>OPEN / CLOSE</p>  <p>Press the OPEN/CLOSE button again to close the tray.</p> |
| 2 | <p>Press the receiver's TIMER button.</p> |  | <p>Flashes</p>  | |
| 3 | <p>Press the UP button to display "EVERY".</p> | <p>TUNING</p>  | <p>Flashes</p>  | |
| 4 | <p>Press the ENTER/NEXT button.</p> |  |  | |
| 5 | <p>Press the UP and DOWN buttons of the receiver to display "CD".</p> | <p>TUNING</p>  |  | |
| 6 | <p>Follow steps 8 to 18 under "Setting the Timer" on Page 12.</p> | | | |

2 ONCE TIMER

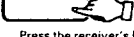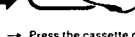




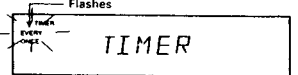





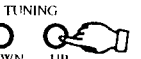
| | | | | |
|---|---|---|--|---|
| 1 | <p>POWER ON/STANDBY</p>  <p>Press the receiver's POWER button to switch on the power.</p> | <p>OPEN / CLOSE</p>  <p>Press the CD player's OPEN/CLOSE button to open the tray.</p> |  <p>Set the compact disc in the tray.</p> | <p>OPEN / CLOSE</p>  <p>Press the OPEN/CLOSE button again to close the tray.</p> |
| 2 | <p>Press the receiver's TIMER button.</p> |  | <p>Flashes</p>  | |
| 3 | <p>Press the DOWN button to display "ONCE".</p> | <p>TUNING</p>  | <p>Flashes</p>  | |
| 4 | <p>Press the ENTER/NEXT button.</p> |  |  | |
| 5 | <p>Press the UP and DOWN buttons of the receiver to display "CD".</p> | <p>TUNING</p>  |  | |
| 6 | <p>Follow steps 8 to 18 under "Setting the Timer" on Page 13.</p> | | | |

Example 2: Waking up to the music of a cassette tape.

1 EVERYDAY TIMER


| | | | | |
|---|---|---|--|--|
| 1 | <p>POWER ON/STANDBY</p>  <p>Press the receiver's POWER button to switch on the power.</p> | <p>OPEN / CLOSE</p>  <p>Press the cassette deck's OPEN/CLOSE button to open the tray.</p> |  <p>Load the cassette tape.</p> | <p>OPEN / CLOSE</p>  <p>Press the OPEN/CLOSE button again to close the tray.</p> |
| 2 | <p>Press the receiver's TIMER button.</p> |  | <p>Flashes</p>  | |
| 3 | <p>Press the UP button to display "EVERY".</p> | <p>TUNING</p>  | <p>Flashes</p>  | |
| 4 | <p>Press the ENTER/NEXT button.</p> |  |  | |
| 5 | <p>Press the UP and DOWN buttons of the receiver to display "TAPE".</p> | <p>TUNING</p>  |  | |
| 6 | <p>Follow steps 8 to 18 under "Setting the Timer" on Page 12.</p> | | | |

2 ONCE TIMER

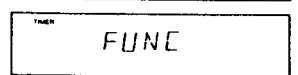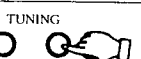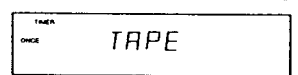
| | | | | |
|---|---|---|--|--|
| 1 | <p>POWER ON/STANDBY</p>  <p>Press the receiver's POWER button to switch on the power.</p> | <p>OPEN / CLOSE</p>  <p>Press the cassette deck's OPEN/CLOSE button to open the tray.</p> |  <p>Load the cassette tape.</p> | <p>OPEN / CLOSE</p>  <p>Press the OPEN/CLOSE button again to close the tray.</p> |
| 2 | <p>Press the receiver's TIMER button.</p> |  | <p>Flashes</p>  | |
| 3 | <p>Press the DOWN button to display "ONCE".</p> | <p>TUNING</p>  | <p>Flashes</p>  | |
| 4 | <p>Press the ENTER/NEXT button.</p> |  |  | |
| 5 | <p>Press the UP and DOWN buttons of the receiver to display "TAPE".</p> | <p>TUNING</p>  |  | |
| 6 | <p>Follow steps 8 to 18 under "Setting the Timer" on Page 13.</p> | | | |

Example 3: Unattended recording of radio broadcasts ("air checks")

1 EVERYDAY TIMER

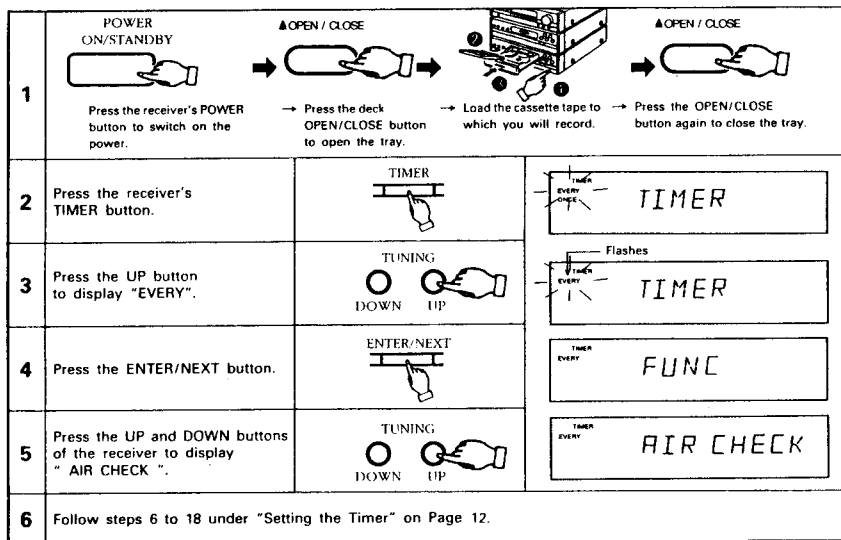

2 ONCE TIMER

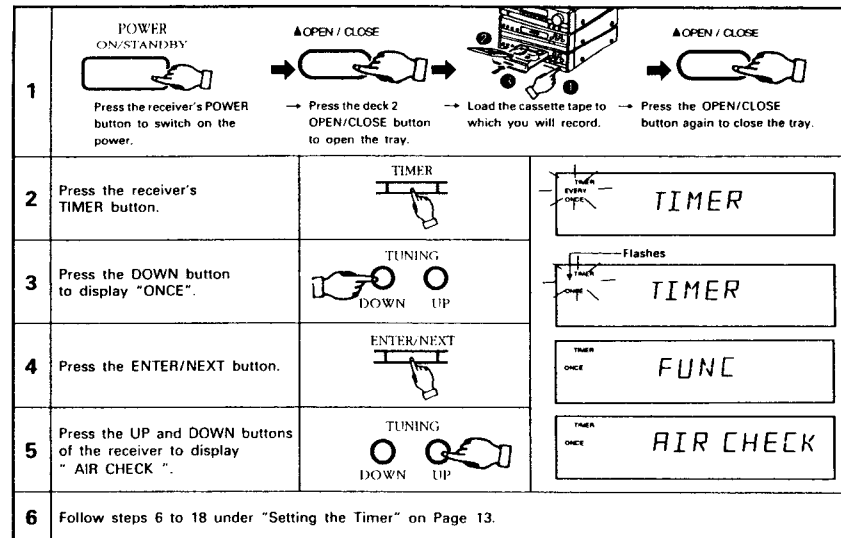

- Timer recording starts in the direction indicated by the tape deck.
- Check that the tape direction and REV MODE switch settings are as desired.
- The section of leader tape at the beginning of the tape cannot be recorded. To avoid missing the beginning of the recording, forward the tape about 10 seconds.

Checking the Timer Settings

To check the timer settings, turn on the receiver's POWER button, press the TIMER button, select "EVERY" or "ONCE" with the AUTO TUNING UP button, then press the ENTER/NEXT button. The timer start mode, reception band, preset number, on time, and off time are displayed in order each time the ENTER/NEXT button is pressed. One more press returns the display to the reception frequency.

Changing the Timer Settings

When the timer setting operation is repeated, the previous settings are deleted and the new settings are set.

Deleting the Timer Settings

The timer settings can be cleared by pressing the TIMER button, select "EVERY" or "ONCE" with the TUNING UP button, then press the ENTER/NEXT button and then while "FUNC" is being displayed, pressing the CLEAR button.

Note about the Set Timer

If the set time of the timer is reached while the power is on, the timer settings will take over and there will be a switch to the function that has been set on the timer.



Cancelling the Timer

Press the STANDBY button and the "Ⓞ" mark will go off.

Setting the Sleep Timer

(Use the remote control unit for these operations.)

Example: Setting the power to switch off in 50 minutes.
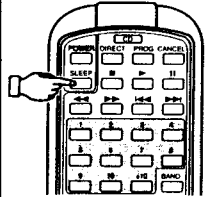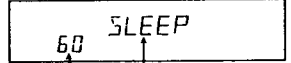
| | | | |
|---|---|---|---|
| | Currently receiving 87.50 MHz, FM. | FM 87.50 MHz | |
| 1 |  |  | |
| | Press the remote control unit's SLEEP button. | "60" is displayed. "SLEEP" appears and flashes for 5 seconds. | |
| 2 | Press the SLEEP button again while "SLEEP" is flashing. | "50" is displayed, and the frequency display (87.50) reappears after 5 seconds. | The power is switched off after 50 minutes. |

- If the sleep timer and regular timer settings overlap, the sleep timer is given priority.
- Do not press the STANDBY button after the power has been switched on with the timer. If this is done, the timer will not function properly.
- If the same time is set for the on time and off time, the power will not be switched on even when the "STANDBY" indicator is lit.
- If the timer is set for an AM or FM station and the on time of the timer is reached while listening to another station, the tuner switches to the station which was set with the timer.

Canceling the Sleep Timer

- To cancel the timer while it is operating in the sleep mode, press the SLEEP button, and while "SLEEP" is flashing, press the CLEAR button on the receiver.
- Press the SLEEP button repeatedly until the power turns off. This cancels the sleep timer.

8 CASSETTE DECK

Before Recording and Playback

Auto Reverse

This deck is equipped with an auto reverse mechanism, so cassette tapes can be played and recorded on both sides or played continuously without having to turn them over.



Direction of tape travel

This deck has two play buttons, one for the forward direction (front side) and another for the reverse direction (back side). The side being played can be changed during playback by pressing the opposite play button.

Reverse mode

Set the reverse mode switch (REV MODE) as follows:

- **Single-side recording/playback mode (|>|)**
In this position, only the front side or the back side of the cassette tape is played or recorded. (The tape stops automatically when the end of that side is reached.)
- **Two-side recording/playback mode (|<>|)**
In this position, when the end of the front side is reached, recording or playback automatically switches to the back side and continues from there. (The tape stops automatically when the end of the back side is reached.)
- **Continuous playback mode (|<=>|)**
In this position playback continues until the STOP button is pressed.

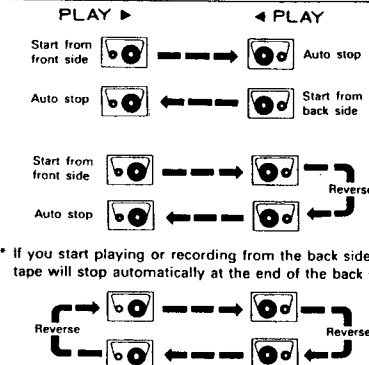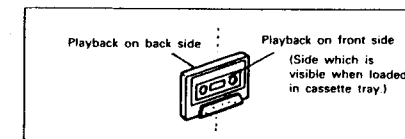


- * If you start playing or recording from the back side, the tape will stop automatically at the end of the back side.

- * The reverse recording/playback mode (|<=>|) is set automatically during recording.

Cassette Tapes

Handling Precautions

- C-120 cassette tapes
Avoid using 120-minute cassette tapes, since they have extremely thin tape which tends to become wound onto the capstans or pinch rollers.
- Tape slack
If the tape is slack, it may become wound onto mechanism parts or otherwise damaged. Take up the slack with a pencil before loading the cassette.

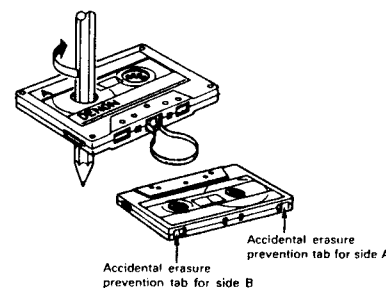

Storage Precautions

- Avoid storing in the following places:
 - Hot, humid places
 - Dusty places
 - Places exposed to direct sunlight
 - Near magnetic fields (TVs, speakers, etc.)
- Store the cassette tape in a case equipped with stoppers to keep the tape from coming slack.

Protecting Cassette Tapes From Being Erased Accidentally


- Cassette tapes are equipped with accidental erasure prevention tabs. To protect recorded tapes from being erased accidentally, use a screwdriver, etc., and break these tabs off.
- To record on a cassette tape whose accidental erasure prevention tabs have been broken off, place a piece of cellophane tape over the hole.

Before Operating

Loading and Unloading Cassette Tapes


• Loading

- ① Press the OPEN/CLOSE button (▲) to open the cassette tray.
- ② Set the tape in the cassette tray with the open side (on which the tape is exposed) facing away from you.
- ③ Press the OPEN/CLOSE button again to close the tray.

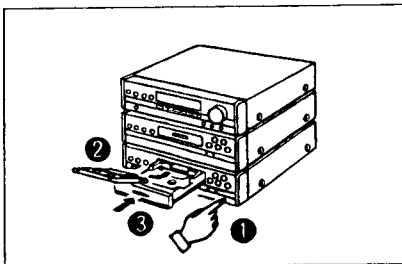

• Unloading

- ① Press the STOP button (■).
- ② Press the OPEN/CLOSE button (▲) to open the cassette tray.
- ③ Remove the cassette tape.

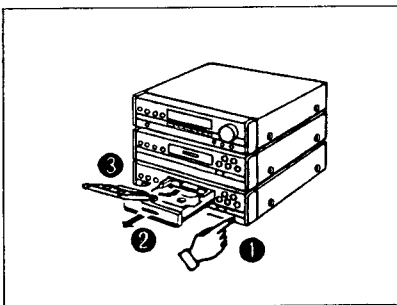

Check the following before recording or playing cassette tapes:

1. Is the head dirty? ...
The sound quality will be poor if the head is dirty. Refer to Page 23.
2. Are the accidental erasure prevention tabs broken off? ...
Recording is not possible if these tabs are broken off. Refer to Page 16.

NOTE:

- Load the cassette tape on an angle with the open side facing away from you. Loading it in the opposite direction can cause damage.
- Do not press the OPEN/CLOSE button during playback or recording. Always press the STOP button before pressing the OPEN/CLOSE button.


Auto Tape Selector Mechanism

This deck is equipped with an auto tape selector mechanism which uses the detection holes in the cassette halves to automatically set the recording bias and equalization best suited for that type of tape.

- Do not use ferrichrome tapes.
- Use metal tapes equipped with detection holes. (Use of the old type of metal tape without detection holes will result in the sound having an emphasized treble region.)

Accidental erasure prevention tabs

Detection holes

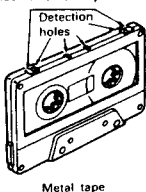


Metal tape

Chrome tape

9 PLAYING CASSETTE TAPES

(Single Side Playback, Two-Side Playback, and Continuous Playback)

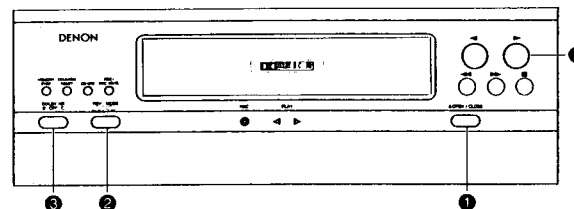


| | | |
|--|---|--|
| <p>1 Press the POWER button of the receiver, then press the OPEN/CLOSE button and load a recorded tape into the tray. Refer to Page 17.</p> | <p>▲ OPEN / CLOSE</p> | <p>Loading the tape</p> <p>The tape can be loaded easily by inserting it at an angle.</p> |
| <p>2 Set the REV MODE switch. Refer to Page 16.</p> | | <p>Removing the tape</p> <p>The tape can be removed easily by lifting it out toward yourself at an angle.</p> |
| <p>3 Set the DOLBY NR switch. Refer to Page 6 (CASSETTE DECK).</p> | <p>DOLBY NR B OFF C</p> <p>Set to B or C (as indicated on the tape) for tapes recorded with Dolby NR.</p> | |
| <p>4 Press the play button (▶ or ◀).</p> | <p>Playback starts in the direction of the button pressed.</p> | <p>Press the stop button ■ to stop the playback.</p> |

Using the MS (Music Search) Function

■ Use this function to move to the beginning of the following section or return to the beginning of the current selection.


- ① Press ▶ or ◀.
- ② Press ►► or ◀◀.

- In the rewind direction, playback starts from the beginning of the selection which is currently playing, and in the fast-forward direction, playback starts from the beginning of the following selection.

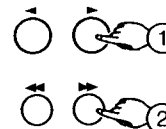

The tape skips by a number of selections equal to the number of times the ►► or ◀◀ button is pressed.

For example:




The tape skips by a number of selections equal to the number of times the ►► or ◀◀ button is pressed.

■ Music search display

During the music search operation, the number of selections to be skipped is indicated on the tape counter, and this number decreases each time a blank section between selections is detected (ex.: 3 → 2 → 1).

- When a previous selection is specified: P:03 ← Number of selections to be skipped
└─ Lights when moving to previous selections
- When a subsequent selection is specified: P:05 ← Number of selections to be skipped

10 RECORDING CASSETTE TAPES

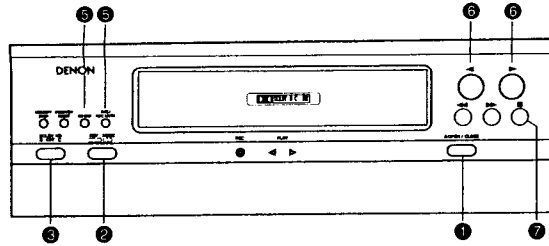

• The positions of the VOLUME and tone controls do not affect the sound being recorded.

| 1 | <p>Press the OPEN/CLOSE button and load the tape to which you will record. Refer to Page 17.</p> | | | | | | |
|---|--|---|--------------------------|----------------------------|---|---|---|
| 2 | <p>Set the REV MODE switch to or . Refer to Page 16.</p> <p>Single-side recording Two-side (reverse) recording</p> <p>REV MODE</p> | | | | | | |
| 3 | <p>Set the DOLBY NR switch. Refer to Page 6 .</p> <p>DOLBY NR B OFF C</p> <p>Set to B or C to record with Dolby NR.</p> | | | | | | |
| 4 | <table border="1"> <tr> <th>Recording from the radio</th> <th>Recording from a AUX/DAT</th> <th>Recording from a CD player</th> </tr> <tr> <td> <p></p> <p>Press the BAND selector button.</p> <p>Select the station you wish to record. (Refer to Page 9.)</p> </td> <td> <p></p> <p>Press the receiver's FUNCTION button and select AUX.</p> <p>Start playback on the DAT.</p> </td> <td> <p></p> <p>Set the disc in the CD player. (Refer to Page 18.)</p> </td> </tr> </table> | Recording from the radio | Recording from a AUX/DAT | Recording from a CD player | <p></p> <p>Press the BAND selector button.</p> <p>Select the station you wish to record. (Refer to Page 9.)</p> | <p></p> <p>Press the receiver's FUNCTION button and select AUX.</p> <p>Start playback on the DAT.</p> | <p></p> <p>Set the disc in the CD player. (Refer to Page 18.)</p> |
| Recording from the radio | Recording from a AUX/DAT | Recording from a CD player | | | | | |
| <p></p> <p>Press the BAND selector button.</p> <p>Select the station you wish to record. (Refer to Page 9.)</p> | <p></p> <p>Press the receiver's FUNCTION button and select AUX.</p> <p>Start playback on the DAT.</p> | <p></p> <p>Set the disc in the CD player. (Refer to Page 18.)</p> | | | | | |
| 5 | <p>Press the REC/REC MUTE button. </p> <p>The REC (recording) indicator lights. </p> <p> (5) CD SRS</p> | | | | | | |
| 6 | <p>Press the or button. (Recording starts)</p> <p>Press the CD SRS button. (recording starts.)</p> | | | | | | |
| 7 | <p>To stop recording, press the stop button. </p> | | | | | | |

• When the CD SRS button is pressed, a 7-second blank portion is automatically created before recording starts.

11 PLAYING CDs

Compact Discs

- Press the OPEN/CLOSE button () once to open the disc tray, once again to close it.
- The disc tray can also be closed by pressing the play () button. When this is done, playback automatically starts from the first track on the disc (or if the tracks are programmed, the first programmed track).
- Load the disc with the label side facing up, being careful not to touch the disc surface.
- Load the disc with the disc tray open all the way.
- Set the disc securely in the tray guide at the center of the disc tray. To play an 8 cm disc, place the disc in the sunken part at the center of the disc tray.
- When the disc tray is closed, the disc turns automatically for several seconds, and the number of tracks and total playing time appear on the display.



Only discs with this mark can be played.

- For CDVs, only the audio part is played (the video part is not played).


When removing the disc from its case:

As shown in the diagram, grasp the disc along the edges, gently press down on the hole in the middle with a finger, and lift the disc. It should come out easily.



When setting the disc in the disc tray:

Always set the disc with the label side facing up. (Compact discs can only be played on one side). For 8 cm CDs, set the disc in the sunken part in the middle of the tray.

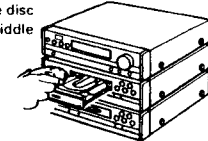


| Disc | Remarks |
|------------------|--------------------------------|
| CD | |
| CDV | Only the audio part is played. |
| CD single (8 cm) | |

Handling the Disc Tray

Do not switch off the power or push or pull the disc tray when it is moving, since this may damage it.


If the cord of a set of headphones, etc., gets caught in the disc tray when it is closed, press the OPEN/CLOSE button () again.

- Never set objects other than CDs in the disc tray, as this can cause damage.

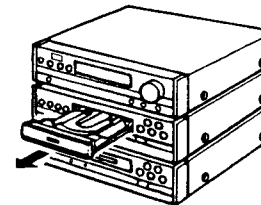


NOTE:







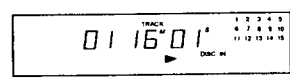
"NO DISC" is displayed on the display window when no disc is loaded, when the disc is loaded upside-down, or when the disc is not properly loaded. Also, "G.G.G." may appear during playback of a CD if the disc is scratched or dirty. If this happens, the set will not operate when a normal operating button (other than the OPEN/CLOSE button) is pressed, so press the OPEN/CLOSE () button, remove the disc, clean it as necessary, then press the PLAY () button again.

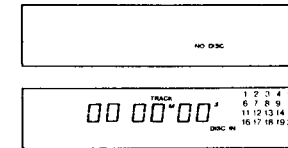

Regular Play

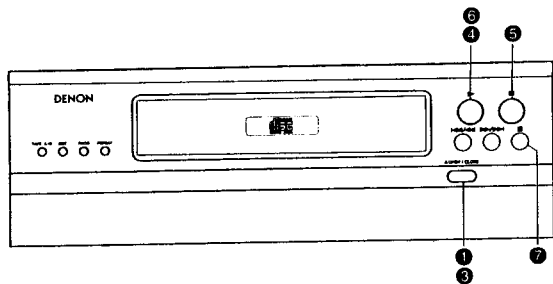


Example: Playing a CD with 15 tracks and a total playing time of 62 minutes 03 seconds, starting from track 1
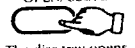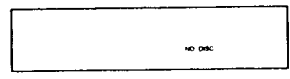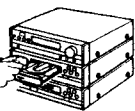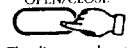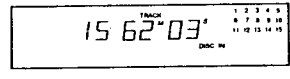
| | | | |
|---|---|---|--|
| 1 | Press the POWER button of the receiver, then press the OPEN/CLOSE button. |  The disc tray opens |  |
| 2 | Set the CD in the disc tray. Refer to Page 18. |  | The display appears several seconds after the disc tray closes. |
| 3 | Press the OPEN/CLOSE button. |  The disc tray closes |  |
| 4 | Press the PLAY button. |  CD play starts |  |


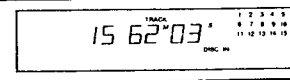
To stop play temporarily:

| | | | |
|---|-------------------------|---|---|
| 5 | Press the PAUSE button. |  | "▶ PLAY" goes off and " PAUSE" appears. CD play is paused at the point the button is pressed. |
|---|-------------------------|---|---|

To resume CD play:

| | | | |
|---|------------------------|---|--|
| 6 | Press the PLAY button. |  | " PAUSE" goes off and "▶ PLAY" appears. CD play resumes from the point the pause button was pressed. |
|---|------------------------|---|--|

To stop CD play:

| | | | |
|---|------------------------|---|--|
| 7 | Press the STOP button. |  |  |
|---|------------------------|---|--|

NOTE:

- "00" is displayed on the track number section of the display for several seconds after the disc is set, while the data on the number of tracks, playing time, etc., is being read from the disc. After this, the number of tracks and total playing time appear.


Various CD Play Functions

(Insert the disc before performing the following operations.)

① Playing Certain Tracks

DIRECT SELECTION

Example: Playing the 8th track
Perform this operation from the remote control unit.

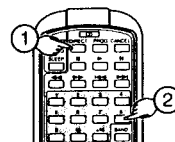


- Press the DIRECT button.
- Press track button "8". "TRACK 8" appears on the display, and the 8th track begins playing.
 - When the end of the track is reached, play continues on to the next track.

- For track numbers of 11 and higher, for example 15, press [+10] and [5].
- For track numbers of 20 and higher, for example 23, press [+10], [+10], and [3].
- For track number 20, press [+10] and [10].

② Playing 1 Track Repeatedly

1 TRACK REPEAT




- Press the REPEAT button once.
- Press the [◀◀] or [▶▶] button, and select the desired track.
- Press the play button (▶) to start play.

- When the specified track finishes playing, the pickup returns to the beginning of that track and play is repeated.
- If the REPEAT button is pressed once during play, the track will be played repeatedly.
- If the REPEAT button is pressed once during programmed play, the track will be played repeatedly.
- If the REPEAT button is pressed once while the disc is stopped, the "REPEAT 1" indicator lights and the 1 track repeat play mode is set.

③ Playing All Tracks Repeatedly

ALL TRACKS REPEAT








- Press the REPEAT button twice.
- Press the play button (▶) to start play.

- When the last track finishes playing, the pickup returns to the first track of the disc and play is repeated.
- If the REPEAT button is pressed twice during play, the disc will be played repeatedly.
- If the REPEAT button is pressed twice during programmed play, the program will be played repeatedly.
- If the REPEAT button is pressed twice while the disc is stopped, the "REPEAT ALL" indicator lights and the all tracks repeat play mode is set.

④ Playing a Specific Section Repeatedly

SECTION REPEAT

Example: The CD has a total of 15 tracks
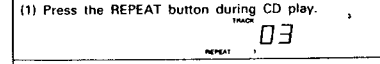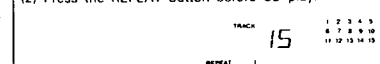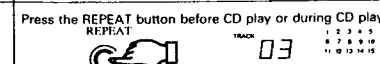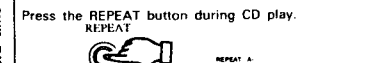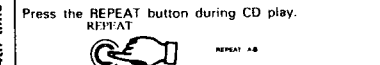
| | | | |
|----------|---|---|---|
| 1st time | (1) Press the REPEAT button during CD play. |  | "REPEAT 1" lights up, and only that track is played repeatedly, and that track number lights on the music calendar. * With a 1-track repeat of track 31 or higher, "TRACK No." flashes. |
| | (2) Press the REPEAT button before CD play. |  | "REPEAT 1" lights up, and the total number of tracks lights, and then ① the first track is repeated by pressing the play button ② when play is started by direct selection from the remote control or with the [▶▶] or [◀◀] button, only those selected tracks are played repeatedly. |
| 2nd time | Press the REPEAT button before CD play or during CD play. |  | "REPEAT ALL" lights up, and the track numbers contained on the disc light up on the music calendar, and all tracks are played repeatedly. |
| 3rd time | Press the REPEAT button during CD play. |  | "REPEAT A-" lights up. If nothing else is done, all tracks are played repeatedly. |
| 4th time | Press the REPEAT button during CD play. |  | "REPEAT A-B" lights up. The A-B section is played repeatedly. |




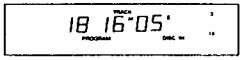
Pressing the REPEAT button once again returns the player to regular CD play.

- ④ **Playing Certain Tracks in any Desired Order**
 (Perform this operation from the remote control unit.)

PROGRAMMED SELECTION


Example: Programming track 3 to play first, track 18 to play second, on a CD with 18 tracks and a total playing time of 62 minutes, 3 seconds

Setting and Playing the Program
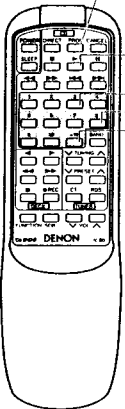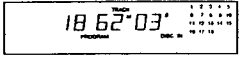
| | | | |
|---|------------------------------|---|--|
| 1 | Press the PROGRAM button. |  |  |
| 2 | Set track 3 to play first. | |  <p>After 2 seconds The display when track 3 is set to play first Time of first track: 8 minutes, 00 seconds</p> |
| 3 | Set track 18 to play second. | |  <p>After 2 seconds The display when track 18 is set to play second Total time of tracks 1 and 2: 16 minutes, 05 seconds</p> |
| 4 | Press the play button. | | The tracks start playing in the programmed order. |


- The numbers of the programmed tracks go off once the tracks are played.
- The time display will read "— M — S" if a track number of 31 or higher is set in the program.
- When a program is set during CD play after a direct selection, the track currently playing is set as the first track in the program.
- Up to 30 tracks of your choice from among track numbers 1 through 99 can be programmed with this CD player.
- If you attempt to set a track number that is greater than the number of tracks on the disc, that track number will not be displayed when the buttons are pressed.
- Programming is also possible when the disc tray is open. In this case, track numbers greater than the number of tracks on the disc can be programmed, but these are ignored when the disc is played.
- There is a silent interval of 4 seconds between tracks. This is has been designed to create a blank section of 4 seconds between selections when recording programmed tracks onto tape.
- The entire program is cleared when the disc tray is opened (by pressing the \blacktriangle button).
- If you make a mistake when programming tracks, press the CANCEL button and program again. (Each press of the CANCEL button cancels the last track.)
- An A-B section repeat is not possible during programmed play.
- Other operations possible during programmed play:
The quick search, pause, skip monitor, and other operations can be used during programmed play. To move to the beginning of the previous track with the quick search operation, press \lll once, then once again while the time display reads " 0 0 0 ". To move to the beginning of the following track, press \ggg once, regardless of the time display.
- Perform programming and canceling in the stop mode.
- Programming is also possible in the same way using the PROG button on the CD player. (In this case, use the \ggg button to select the track number, the PROG button as the memory button. In other words, first press the PROG button, next press the \ggg button to select the track number, then press the PROG button again to set the track in the memory. For the second track as well, press the \ggg button then the PROG button.)

- ⑤ **Moving to the Next Track During CD Play**

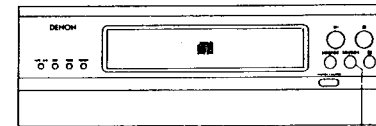

- QUICK SEARCH**
- ① Press the auto search forward button (\ggg).
- Each press of the auto search forward button (\ggg) moves the pickup to the beginning of following tracks.

- ⑥ **Moving Back to the Beginning of the Current Track During CD Play**

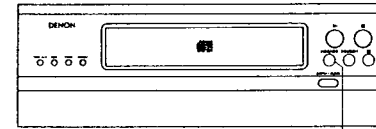


- QUICK SEARCH**
- ① Press the auto search backward button (\lll).
- Each press of the auto search backward button (\lll) during the search operation moves the pickup to the beginning of previous tracks.

- ⑦ **Searching for Tracks While Listening to the Sound**

SKIP MONITOR

- Use this to skip through a disc listening to the sound at high speed.
- This function is convenient when searching for a certain section within a long track.
- Use the skip monitor function to find the desired position, then release the search button to start regular playback from there.


- 1 **Forward skip monitor**

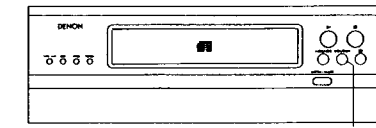

- The track number and elapsed playing time of the track being skipped through are indicated on the display.
- If the end of the last track on the disc is reached while pressing the search button, (J) appears on the display and the skip monitor operation stops. To resume CD play, press the search backward button (\lll) until (J) switches to the track number, then perform a different operation.

- ① During CD play, press and hold in the forward search button (\ggg) to skip forward while listening to the sound.

- 2 **Backward skip monitor**

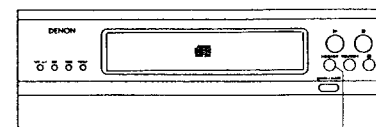

- The track number and elapsed playing time of the track being skipped through are indicated on the display.
- If the beginning of the first track on the disc is reached while pressing the search button, (L) appears on the display and the skip monitor operation stops. To resume CD play, press the search forward button (\ggg) until (L) switches to the track number, then perform a different operation.

- ① During CD play, press and hold in the backward search button (\lll) to skip backward while listening to the sound.

If the forward or backward skip button is pressed during programmed CD play and released at a track which has not been programmed, the next programmed track will be played once that track has been played to the end.


Edited Recording onto Sides A and B of a Tape (EDIT)

Editing is possible with CDs containing up to 30 tracks.

Before starting the edited recording operation, load the cassette tape to which you will record into deck with side A facing up.

The leader tape is automatically taken up before recording starts.


(Set the REV MODE switch to the  position.)

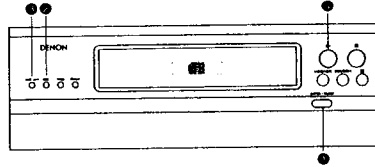


① Automatic Edited Recording

RECORDING IN THE SAME ORDER AS ON THE DISC

Example: Recording a disc with 18 tracks and a total playing time of 56 minutes onto a C-60 cassette tape

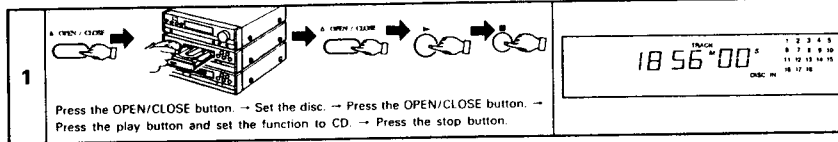





NOTE:

- With edited recording, side B of the tape will be recorded automatically even when the REV MODE switch of the deck is set to the  position.
- During edited recording, only the following buttons will function: the stop button of the CD or the OPEN/CLOSE button, and the stop button of the deck.
- When using a recorded tape for edited recording, the tape should be erased before use, since when the tape is longer than the set time, an unrecorded section of side B will remain after the tape stops. When a tape which has been recorded with this system is played back, there will be 4-second blank portions between tracks (for making it easy to reach the beginning of a track). This will differ from the actual silent portions between the tracks on the disc, and so there will be some error in the actual remaining time of the tape and the displayed time.

Press the EDIT button to set the tape length. Press the EDIT button four times when using a 60-minute (C 60) tape. (The tape length is to total time of sides A and B.)




The display changes as follows each time the EDIT button is pressed. (When the tape time has already been set, the display will change in order starting at that time each time the EDIT button is pressed.)

The desired recording time can be set when this is displayed.

Example: For a 36-minute tape, use the  or  button to set 36. To set the tape length using the remote control unit, use the number buttons. For example, in the case of a 30-minute tape, press  twice and press .

If you make a mistake, press the EDIT button to display "C-00", then start over again.

Setting the desired recording time (Method 2)

Select a tape length close to the desired time, then make a fine adjustment using the  or  button. For example, to set 51 minutes, select C-50, then press the  button once to set C-51.

"EDIT" flashes for 2 seconds

2 minutes 40 seconds extra on side A

Tracks for side A light up. Tracks for side B flash. (Tracks 1 through 9 are recorded on side A.) (Tracks 10 through 18 are recorded on side B.)

Tracks for side A flash. 1 minute 20 seconds extra on side B. Tracks for side B light up.

Track number Elapsed time

2

3

4

TAPE A/B EDIT

A/B button is pressed. (Use this to check the extra time on side B.)

The display changes between sides A and B each time the TAPE

Press the play button.

• Note that in some cases, even if the tape is longer than the total playing time on the disc, it may not be possible to record all the tracks onto the tape, since they are divided onto sides A and B. In such cases, the OVER indicator flashes.

② Programmed Edited Recording

RECORDING CERTAIN TRACKS IN ANY DESIRED ORDER

- Follow the instructions under "PROGRAMMED SELECTION" on Page 20 to program the tracks.
- Perform steps 2 through 4 under the aforementioned "Automatic Edited Recording".

Programmed CD Play Using the Search Buttons (⏮⏪⏩⏭)


Pressing the PROGRAM button of the remote control unit will light up the "PROGRAM" indicator. When the disc is stopped, programming can be done with the search buttons (⏮⏪⏩⏭) on the CD player or with the search buttons (⏮⏪⏩⏭) on the remote control unit.


- Select the tracks with the search buttons, then press the PROGRAM button to program them.
- The search buttons (⏮⏪⏩⏭) can be used to change the track numbers continuously.
- After the track numbers have been selected with the search buttons, if the play button is pressed to start CD play before the PROGRAM button is pressed, the last track of the program set up to this point will be played. In this case, the tracks selected with the search buttons will not be programmed.

12 REMOTE CONTROL UNIT

Cautions on Use


1. The D-90 is supplied with a remote control unit (RC-170) for system control.
2. Replace the batteries with new ones when the transmission distance possible with the remote control unit shortens.
3. For longer battery life, remove the batteries when not using the remote control unit for long periods.
4. When replacing batteries, use two new batteries. Never use an old battery with a new one.
5. Do not use two different types of batteries.
6. Do not heat batteries or take them apart.
7. Be careful that the remote control sensor is not exposed to direct sunlight or strong light from lighting fixtures.
8. The remote control sensor is located on the receiver. Point the remote control unit at the sensor, then press the buttons for the desired operation.
9. Operate the remote control unit within the range illustrated in the diagram.

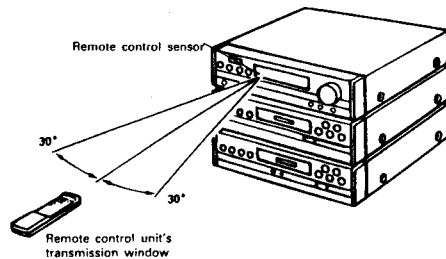


10. Do not press buttons on the remote control unit and on the main unit at the same time. Doing so will lead to a malfunction.
11. If  appears on the receiver display due to incident light even though the remote control unit has not been operated, it is best to move the set or place it in a different direction. Even if this happens, it will not cause a malfunction with remote control unit.
12. When adjusting the volume continuously with the remote control unit, the volume adjustment will stop if the remote control unit is moved away from the remote control sensor. Should this happen, press the button again to continue changing the volume.

Inserting the Batteries


- ① Open the battery case lid on the back of the remote control unit.

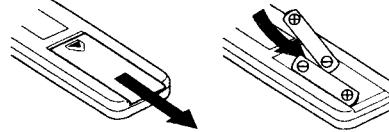

- ② Insert the two batteries (R6/AA) in the proper direction.

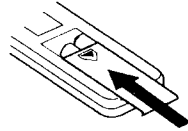

- ③ Set the battery case lid back in place.

 appears at the upper left corner of the receiver display when a signal is received.

- The remote control unit can be used at a distance of about 7 meters from the remote control sensor, but this distance will be shorter if there are obstacles in the way or if the remote control is operated from an angle.

Button Names and Functions

POWER

Press this to switch on the power for the entire system or set the system to standby.

SLEEP

Press this to set the sleep timer.

Number buttons

After pressing TUNER, these buttons call up the preset stations. When used with CD play, after pressing DIRECT or PROGRAM, these buttons specify the tracks to be played.

Operating the Cassette Decks

Stop button (■)
Press this to stop the tape deck.

Forward play button (▶)
Press this to play back or record in the forward direction.

Reverse play button (◀)
Press this to play back or record in the reverse direction.

● **REC button (recording button)**
To set the recording mode when in the stop mode, press this button, then press either the "▶" or the "◀" button. When pressed during the recording or recording pause mode, a blank section of approximately 5 seconds is created on the tape, after which the deck is set to the recording pause mode.

Rewind button (◀◀)
Press this to rewind the tape.

Fast-forward button (▶▶)
Press this to fast-forward the tape.

FUNCTION (input switching) button

Switches the function TUNER, TAPE, CD, AUX and PHONO.

SDB (Super Dynamic Bass)

Press this button for more powerful bass sound. Press again to return to the original setting.

CD Play

DIRECT button
Press for direct track selection of CD player.

PROGRAM button
Press for programmed selection of CD player.

CANCEL button
Press once during programming to cancel the last track programmed.

Operating the CD Player

Pause button (||)
Press to temporarily stop CD play. Press the play button ▶ to resume play.

Stop button (■)
Press to stop CD play.

Play button (▶)
Press to start CD play.

● **Manual search backward button (◀◀)**
● **Manual search forward button (▶▶)**
Press these to quickly move backward or forward.

● **Backward skip monitor button (◀◀)**
Press during CD play to go back to the beginning of that track. Press the button again within 0.5 seconds to go back to the beginning of the previous track.

● **Forward skip monitor button (▶▶)**
Press during CD play to go forward to the beginning of the next track. Press the button again to go forward to the beginning of the track two tracks ahead.

VOLUME

Adjusts the volume. Press V to lower the volume, and Λ to raise it.

TUNER

- **CT (Clock Time) button**
When the FM band has been set, a single press of this button will cause the clock display to appear for 2 seconds. Pressing the button again while the clock is displayed, enables the clock to be matched to the time of the RDS broadcast time service.
- Some stations which provide RDS broadcasts do not broadcast CT signals, in which case the time display cannot be corrected by pressing the CT button.

Press this button to listen to the preset stations.

● **BAND button**
Use this to select the FM or AM band. When this button and number button is pressed in the standby condition, the power is automatically switched on.

● **TUNING buttons**
Use these to tune in FM or AM stations.

● **PRESET buttons**
Use these to select preset stations. When this button is pressed in the standby condition, the power is automatically switched on.

● **RDS (Radio Data System) button**
This button is used for the RDS search, PTY search and TP search operations.

13 IMPORTANT INFORMATION

• Head Cleaning


After the cassette deck has been used for a while, powder from the tapes and dirt adhere to the head and lower the sound quality.

Use a head cleaning cassette tape to clean.

NOTE:

Some of the cleaning sets on the market have a strong polishing effect which can damage the head.

• Disc Cleaning

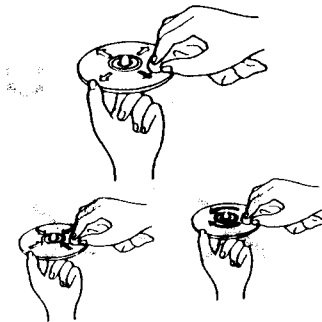

Never use the following to clean discs:

- Solvents such as benzene or alcohol
- Cleaners containing abrasives
- Record sprays or cleaners
- Anti-static products

• Head Demagnetizing

The heads become magnetized after the deck has been used over a long period of time or if the heads are exposed to a magnetic field. This results in noise and reduced treble. In addition, there may be a reduction of the treble range of recorded tapes as well as noise produced on these tapes. When the heads become magnetized, use one of the cassette tape head demagnetizers (erasers) available on the market to demagnetize the heads.

- For details, read the operating instructions of the demagnetizer.

Dust, fingerprints, or spittle on the disc can cause noise or skipping.

If the disc is dirty or if the player does not work properly, clean the disc as follows:

- Hold the disc as shown in the diagram, with the signal surface facing up (and the labelled side facing down).
- Using a soft cloth, wipe the disc gently from the inside straight towards the edges (as shown by the arrows).

- Do not wipe from the edges towards the center, or around the disc as you would wipe records.
- Do not use hard cloths or rub the disc forcefully, since the signal surface is susceptible to scratches.

14 SPECIFICATIONS

■ Receiver (UDRA-77)

| | |
|----------------------------|--|
| • Tuner | FM: 87.50 MHz to 108.00 MHz AM: 522 kHz to 1611 kHz |
| Reception Frequency Range: | FM: 1.5 μ V, 75 ohms (SN ratio 30 dB) AM: 20 μ V (SN ratio 20 dB) |
| Receiving Sensitivity: | 40 dB (1 kHz) |
| FM Stereo Separation: | |
| • Amplifier | 30 W + 30 W (40 Hz to 20 kHz, 6 ohm) |
| Rated Output Power: | 3.5 mm headphone jack |
| Jacks: | 100 Hz \pm 8 dB |
| Bass Adjustment: | 10 kHz \pm 8 dB |
| Treble Adjustment: | 80 Hz \pm 8 dB |
| Super Dynamic Bass: | PHONO: Input jacks |
| Jacks: | AUX/DAT: Input jacks, recording output jacks |
| | PROCESSOR: Processor input/output jacks |
| Dimensions (max.): | 273 (W) \times 97 (H) \times 323 (D) mm (10-48/64" \times 3-13/16" \times 12-23/32") |
| Weight: | 5.6 kg (12 lbs 5 oz) |
| Power Supply: | AC 230 V, 50 Hz |
| Power Consumption: | 95 W |

■ CD Player (UCD-77)

| | |
|---------------------|--|
| Wow and Flutter: | Below measurable limits (\pm 0.001% W. Peak) |
| Sampling Frequency: | 44.1 kHz |
| Light Source: | Semiconductor |
| Dimensions (max.): | 273 (W) \times 97 (H) \times 295 (D) mm (10-48/64" \times 3-13/16" \times 11-39/64") |
| Weight: | 2.6 kg (5 lbs 12 oz) |

■ Cassette Deck (UDR-77)

| | |
|---------------------------|--|
| Type: | Horizontal 4-track, 2-channel auto reverse stereo cassette deck |
| Heads: | 1 hard permalloy recording/playback head and 1 double-gap ferrite erase head |
| Tape Speed: | 4.75 cm/s |
| Noise Reduction Circuits: | Dolby B and C NR |
| Usable Tapes: | Normal, chrome and metal tapes |
| Dimensions (max.): | 273 (W) \times 97 (H) \times 295 (D) mm (10-48/64" \times 3-13/16" \times 11-39/64") |
| Weight: | 2.9 kg (6 lbs 6 oz) |

■ Remote Control Unit (RC-800)

| | |
|--------------------|---|
| Type: | Infrared pulse |
| Number of Buttons: | 40 |
| Dimensions (max.): | 54,5 (W) \times 183 (H) \times 18,5 (D) mm (2-3/16" \times 7-9/16" \times 7/9") |
| Weight: | 100 g (Approx. 4.6 oz) (including batteries) |

* Maximum dimensions include controls, jacks, and covers.

(W) = width, (H) = height, (D) = depth

- For improvement purposes, specifications and functions are subject to change without advanced notice.

15 TROUBLESHOOTING

1. Check that the connections are proper.
2. Check that you are operating the system according to the instructions in the manual.

Check the following table if the system does not seem to be working properly.

If the problem is not solved after checking these points carefully, the system may be malfunctioning. Switch off the power and contact your store of purchase.

| | Symptom | Cause | Measures | Page |
|-----------|---|---|--|---------------------|
| Common | Power does not come on when POWER button pressed | <ul style="list-style-type: none"> ● Power cord not plugged into outlet. | <ul style="list-style-type: none"> ● Plug cord into outlet properly. | 5 |
| | No sound produced from speakers. | <ul style="list-style-type: none"> ● VOLUME control set to minimum ● Headphones are plugged in ● Speaker cables not connected to speaker terminals. ● The Relay is affected by clicking noise at intervals. | <ul style="list-style-type: none"> ● Turn VOLUME control clockwise (↻). ● Disconnect headphones ● Connect speaker cables properly ● Short-circuit with connection cord near speaker terminal. Check connection cord again. | 6 6 5 |
| | Treble not produced. Orientation of sound field not clear. | <ul style="list-style-type: none"> ● Speaker polarities (+ and -) not matched. | <ul style="list-style-type: none"> ● Connect speaker cables properly | 5 |
| | Source other than the desired one is heard. | <ul style="list-style-type: none"> ● Function selector button not set properly. | <ul style="list-style-type: none"> ● Set to desired function | 6 |
| Deck | Cannot record when REC/REC MUTE button pressed | <ul style="list-style-type: none"> ● No cassette tape loaded ● Accidental erasure prevention tabs of cassette broken off. | <ul style="list-style-type: none"> ● Load tape. ● Apply cellophane tape over holes | 17 16 |
| | Sound is interrupted during playback and recording, or treble sound is low. | <ul style="list-style-type: none"> ● Head dirty. ● Tape stretched. | <ul style="list-style-type: none"> ● Clean. ● Replace tape. | 23 - |
| | Wow (fluctuation) is heavy during playback and recording. | <ul style="list-style-type: none"> ● Capstans and pinch rollers dirty | <ul style="list-style-type: none"> ● Clean. | 23 |
| | Buzzing noise heard during playback. | <ul style="list-style-type: none"> ● Noise from TV ● (Some TVs produce noise) | <ul style="list-style-type: none"> ● Separate TV from system. ● Turn off TV. | - - |
| Receiver | Hissing noise heard during FM reception. | <ul style="list-style-type: none"> ● Antenna not pointed in proper direction ● Signals weak. | <ul style="list-style-type: none"> ● Change direction of antenna ● Install outdoor antenna. | 4 4 |
| | Hissing or scratchy noise heard during AM reception | <ul style="list-style-type: none"> ● Noise from TV, etc., or interference from other stations. | <ul style="list-style-type: none"> ● Turn off TV ● Change position of loop antenna ● Install outdoor antenna | - - 4 |
| | Hum noise heard during AM reception | <ul style="list-style-type: none"> ● Signals coming over power cord are modulated by power source frequency. | <ul style="list-style-type: none"> ● Plug in cord in opposite direction ● Install outdoor antenna. | 5 4 |
| CD Player | Disc loaded but total number of tracks not displayed. | <ul style="list-style-type: none"> ● Disc loaded upside-down ● Disc dirty. ● Non-standard disc loaded. | <ul style="list-style-type: none"> ● Reload disc. ● Clean disc. ● Replace with standard disc | 18 23 18 |
| | Operation not performed when buttons pressed, or playback stops in middle of track. | <ul style="list-style-type: none"> ● Disc loaded upside-down ● Foreign object in disc holder ● Disc dirty. ● Disc scratched. | <ul style="list-style-type: none"> ● Reload disc ● Remove disc and remove foreign object ● Clean disc ● Replace with non-scratched disc | 18 18 23 - |
| | Sound skips. | <ul style="list-style-type: none"> ● Dust, fingerprints, or spittle on disc. ● Disc scratched ● Player set in shaky, unstable place. | <ul style="list-style-type: none"> ● Clean disc. ● Replace with non-scratched disc ● Set player in stable place | 23 - - |
| | Buzzing noise mixed in with CD sound. | <ul style="list-style-type: none"> ● Signals coming over power cord are modulated by power source frequency. | <ul style="list-style-type: none"> ● Plug in cord in opposite direction | 5 |

Normal operation may not be possible if there is dirt or other substances on the surface of the internal objective lens or sensor.
These parts must be cleaned periodically depending on the place of installation.
For details, contact your store of purchase.

Avoid using ultrasonic humidifiers nearby.
If ultrasonic humidifiers are used nearby, the calcium, etc., included in the water may be scattered into the air, causing white dust to accumulate on the surface of the objective lens or sensor, resulting in improper operation.

Dew (Condensation) Phenomenon

Dew (water droplets) may form on the lens of the internal optical system or on the disc, or on the rotating parts of the tape deck in situations such as the following:

- Soon after a heater is put on.
- When the set is placed in a steamy or damp room.
- When the set is moved from a cold place to a warm room.

When Condensation Forms

The signals of the disc may not be read and this product will not operate properly. To remove the condensation, take out the disc and switch on the power. The condensation will evaporate within 1 hour and the set will operate normally.

This system consists of precision components using microprocessors. Avoid using it in places where there is much external noise. If used in such places, the system may not operate properly, but this is not a problem with the system. If the system does not operate properly, try performing the desired operation again.


RECEIVER SECTION

DISASSEMBLY PROCEDURES



(Follow these procedures in reverse order to reassemble.)

1. Removing the top cover and front panel

- ① Remove the six screws which fasten the top cover.
- ② Remove the two screws of the bottom side which fasten the front panel.

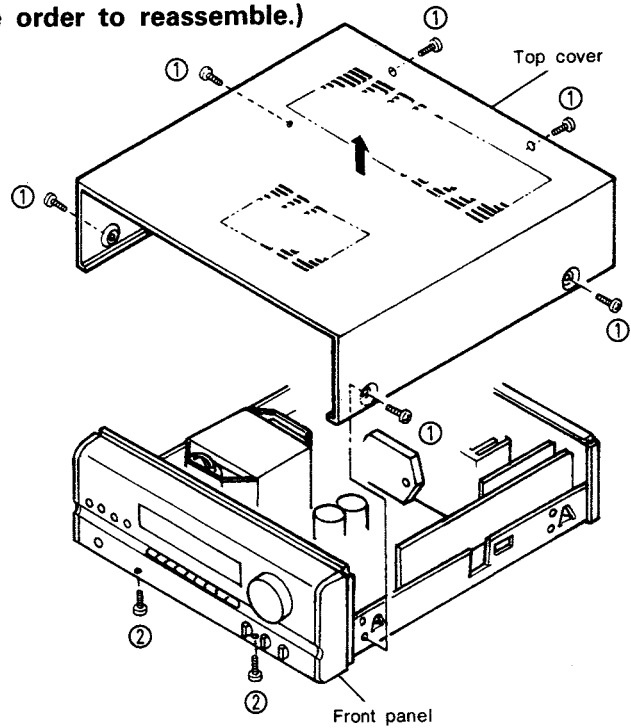


- ③ Remove the two screws which fasten the side plate.
- ④ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver).
- Use your fingers to push out the hook of the inner panel from the side plate in the direction of the arrow.
- Using the same method for the left side, remove the side plate.
- ⑤ Remove the front panel in the direction of the arrow.

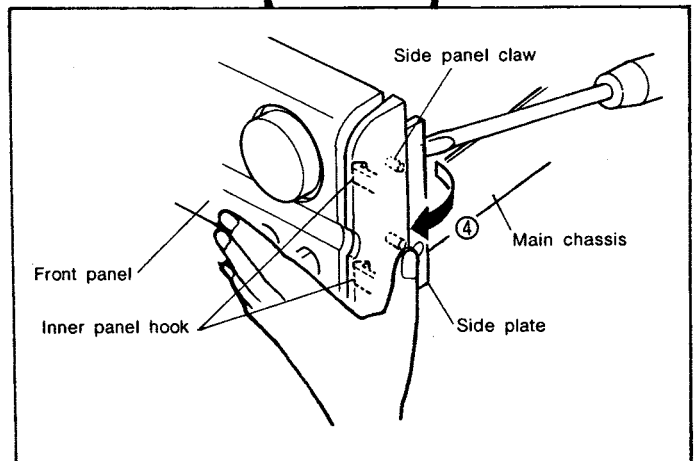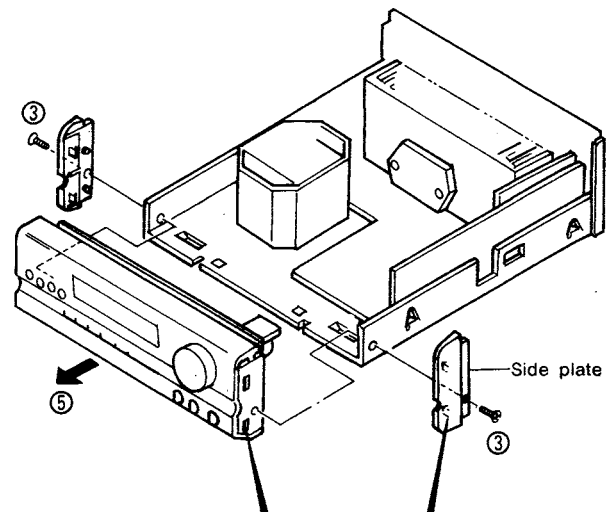

RECEIVER SECTION**2. Removal of the Various Units****Headphone Unit (KU-9332-3)**


- ① Remove the screw securing the headphone unit.

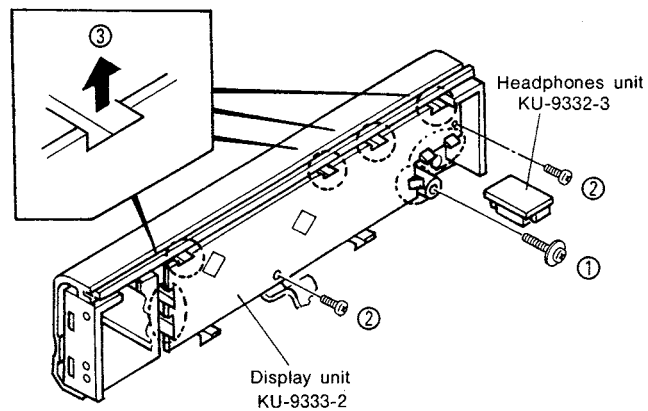**Display Unit (KU-9333-2)**

- ② Remove the two screws securing the display unit.
 ③ Move the catch in the direction of the arrow and remove the display unit.

Volume Unit (KU-9332-3)

- ④ Remove the volume knob assembly and three tone knobs, then remove the nut securing the volume unit.

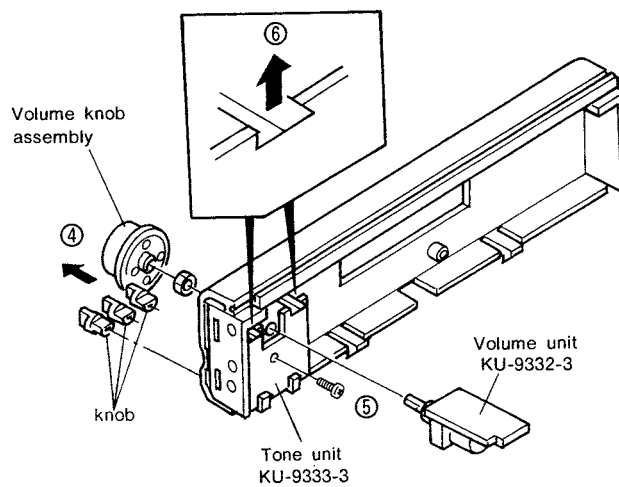**Tone Unit (KU-9333-3)**

- ⑤ Remove the screw securing the tone unit.
 ⑥ Detach the inner panel hook's catch in the direction of the arrow.

RECEIVER SECTION

Tuner Unit (KU-9333-1)


- ⑦ Remove the three screws securing the tuner unit.

PREAMP Unit (KU-9332-2)

- ⑧ Remove the screw securing the preamp unit.


AC IN Unit (KU-9332-4)

- ⑨ Remove the two screws securing the AC in unit.

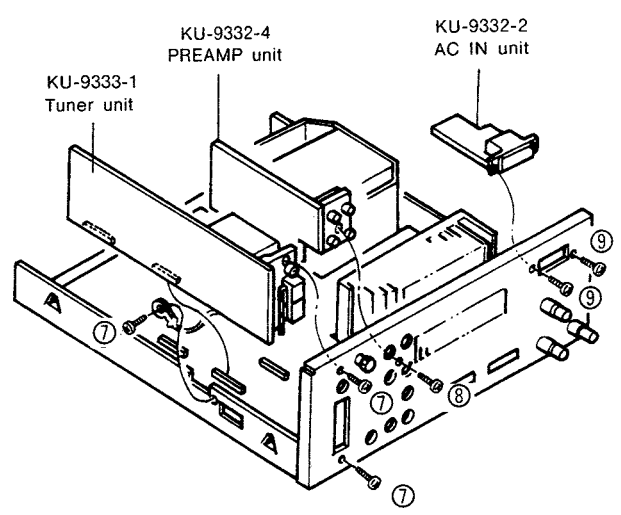


Main Unit (KU-9332-1)

- ⑩ Remove the three screws securing the heat sink.
- ⑪ Remove the five screws securing the rear panel.

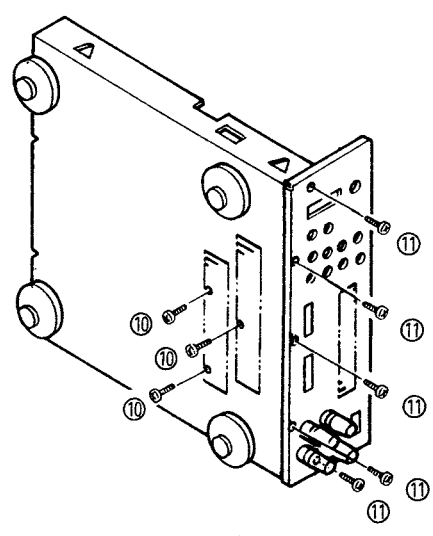


- ⑫ Remove the five screws securing the main unit.

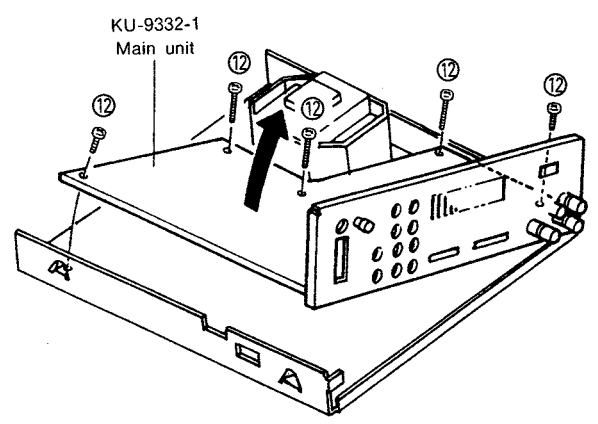

RECEIVER SECTION

TUNER SECTION

BLOCK DIAGRAM

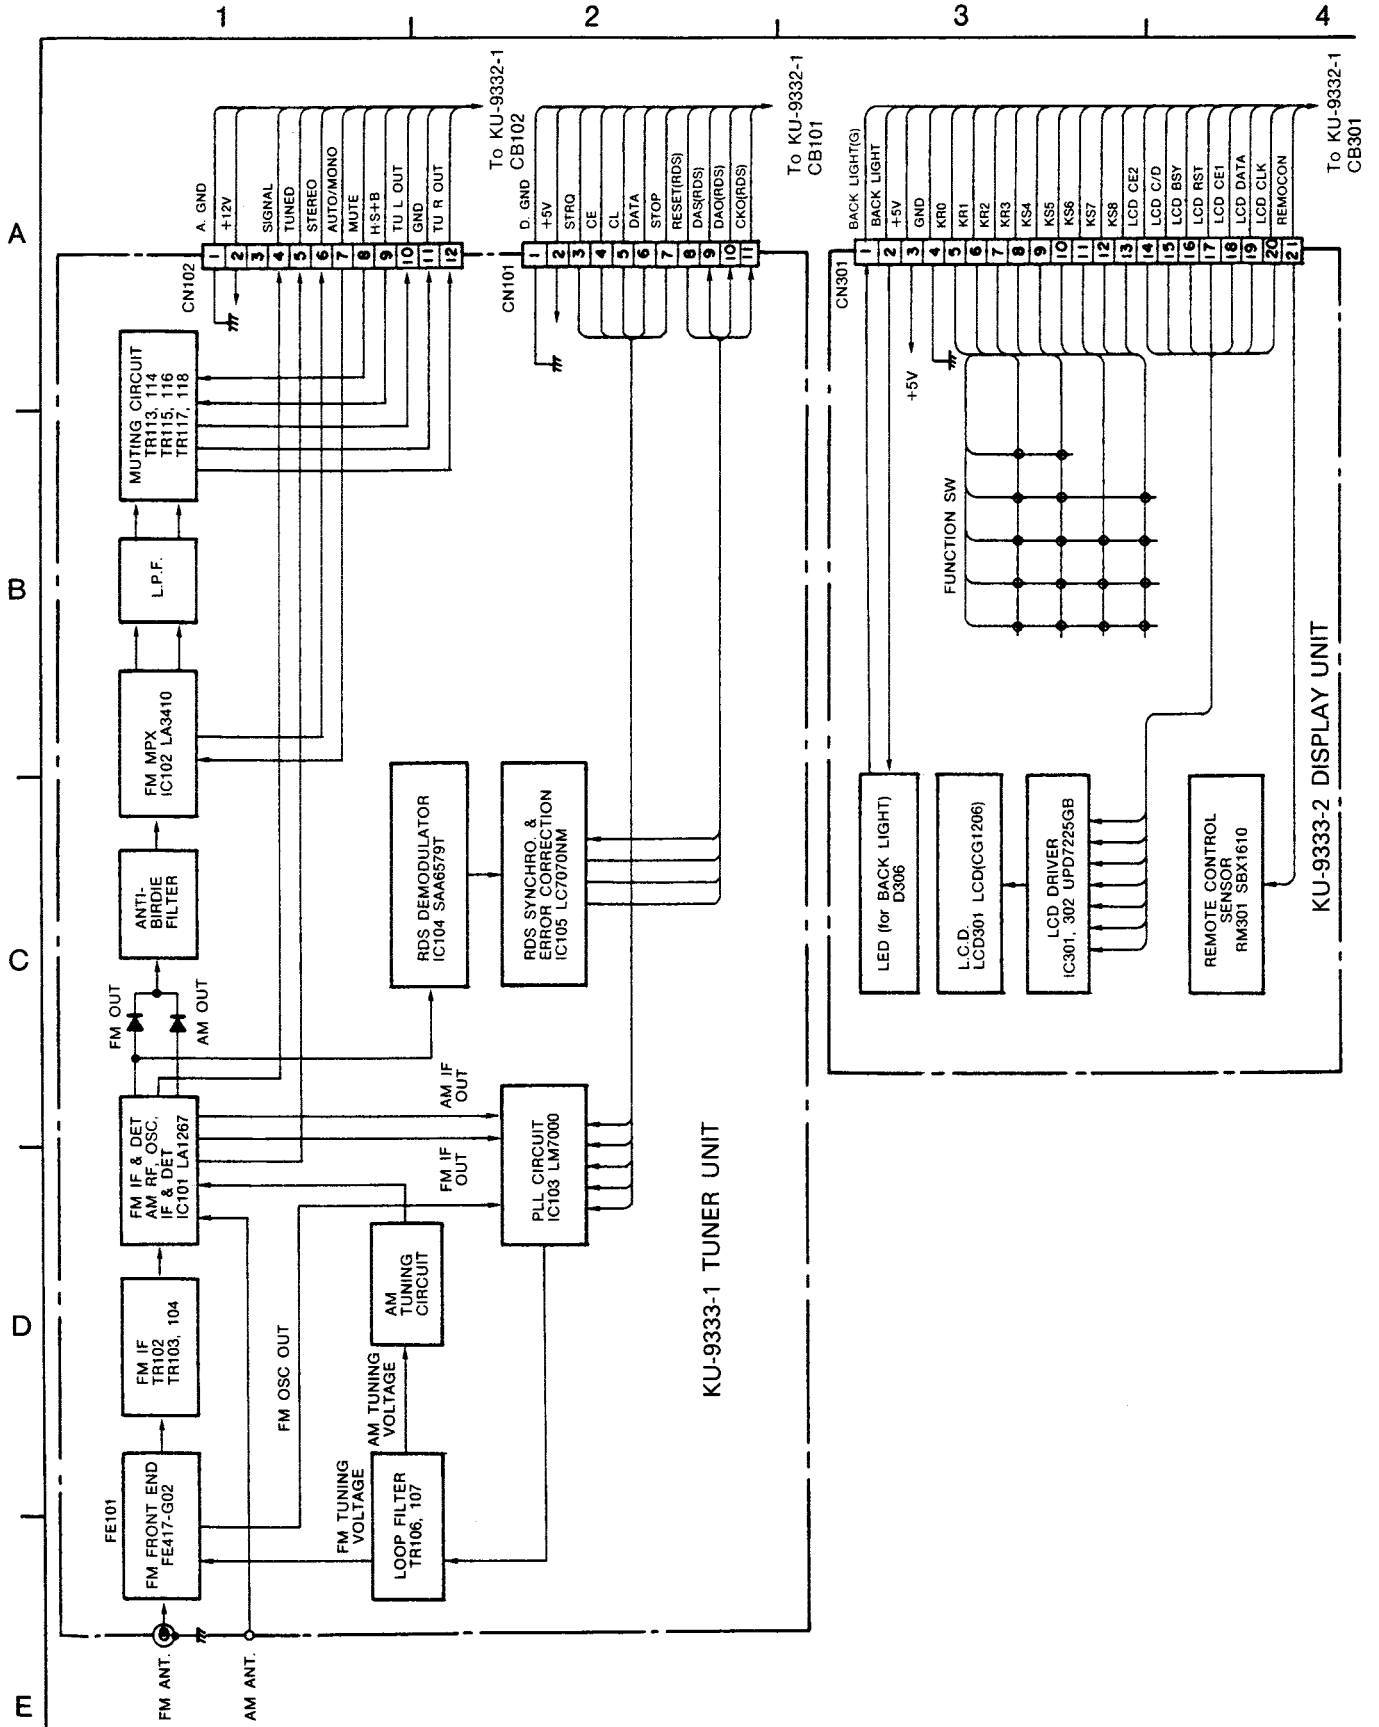


KU-9333-1 TUNER UNIT

KU-9333-2 DISPLAY UNIT

RECEIVER SECTION

AMP. SECTION


1 2 3 4 5 6 7 8

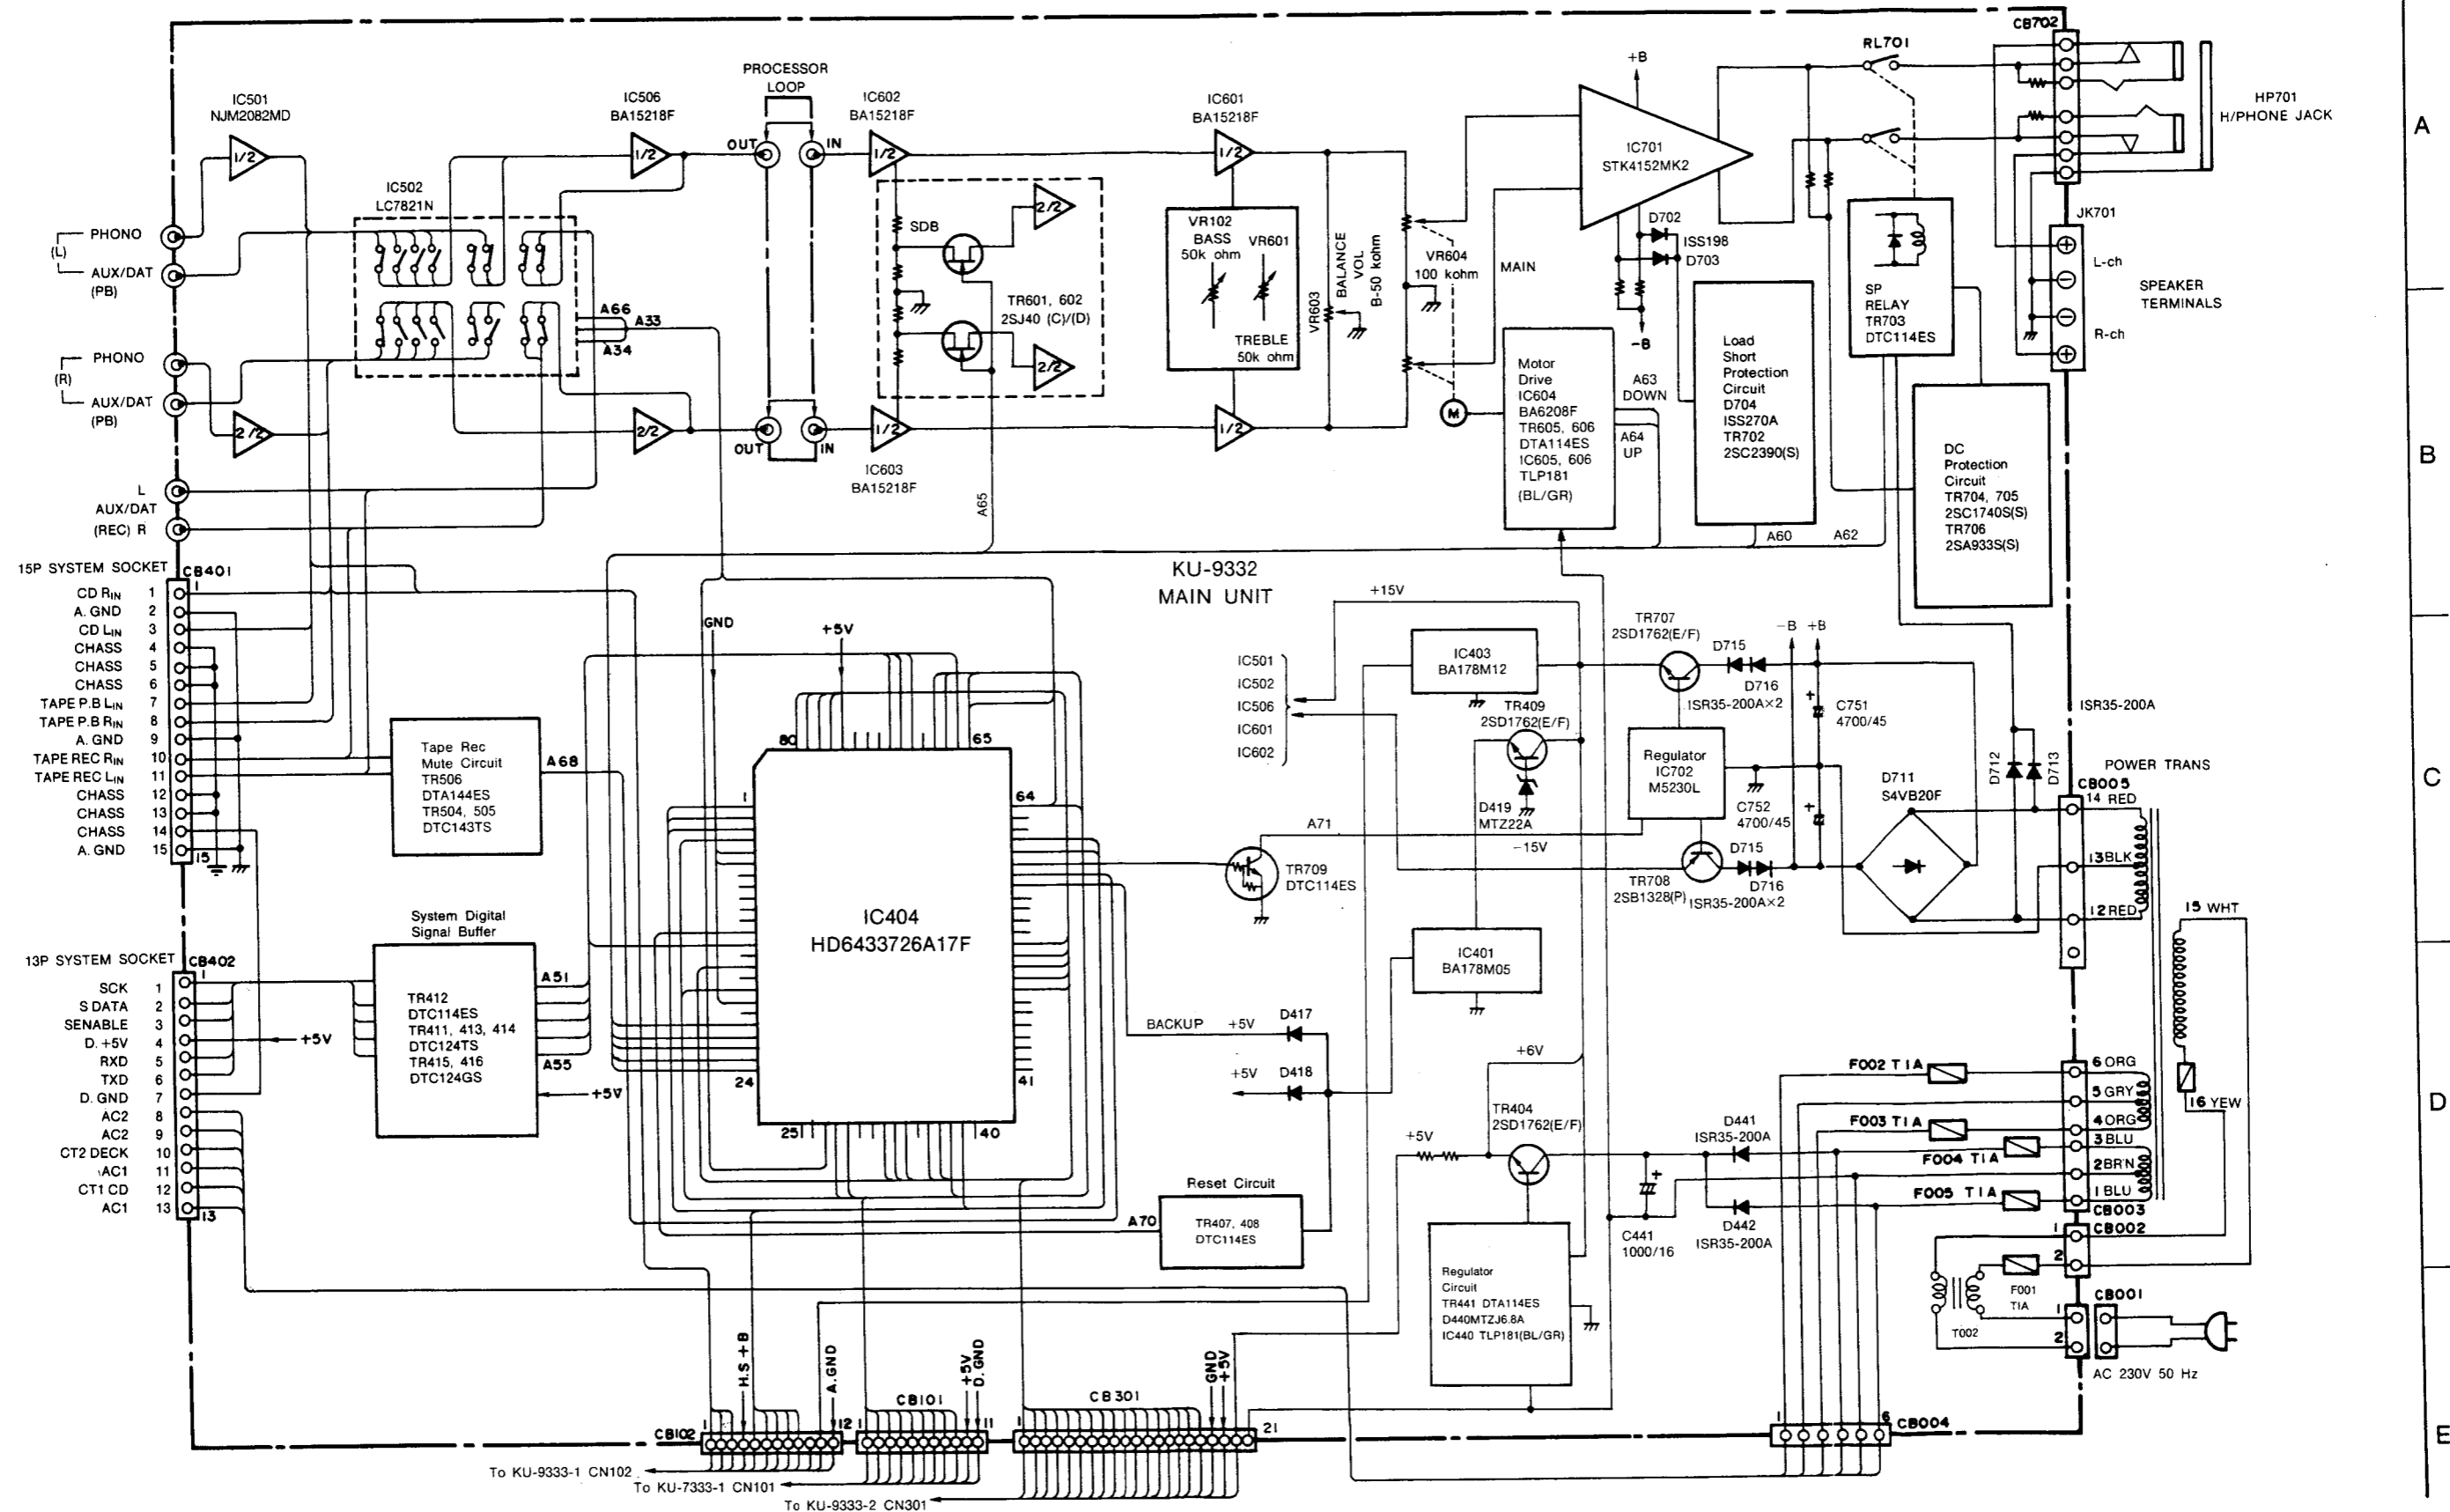


A
B
C
D
E

RECEIVER SECTION

LEVEL DIAGRAM

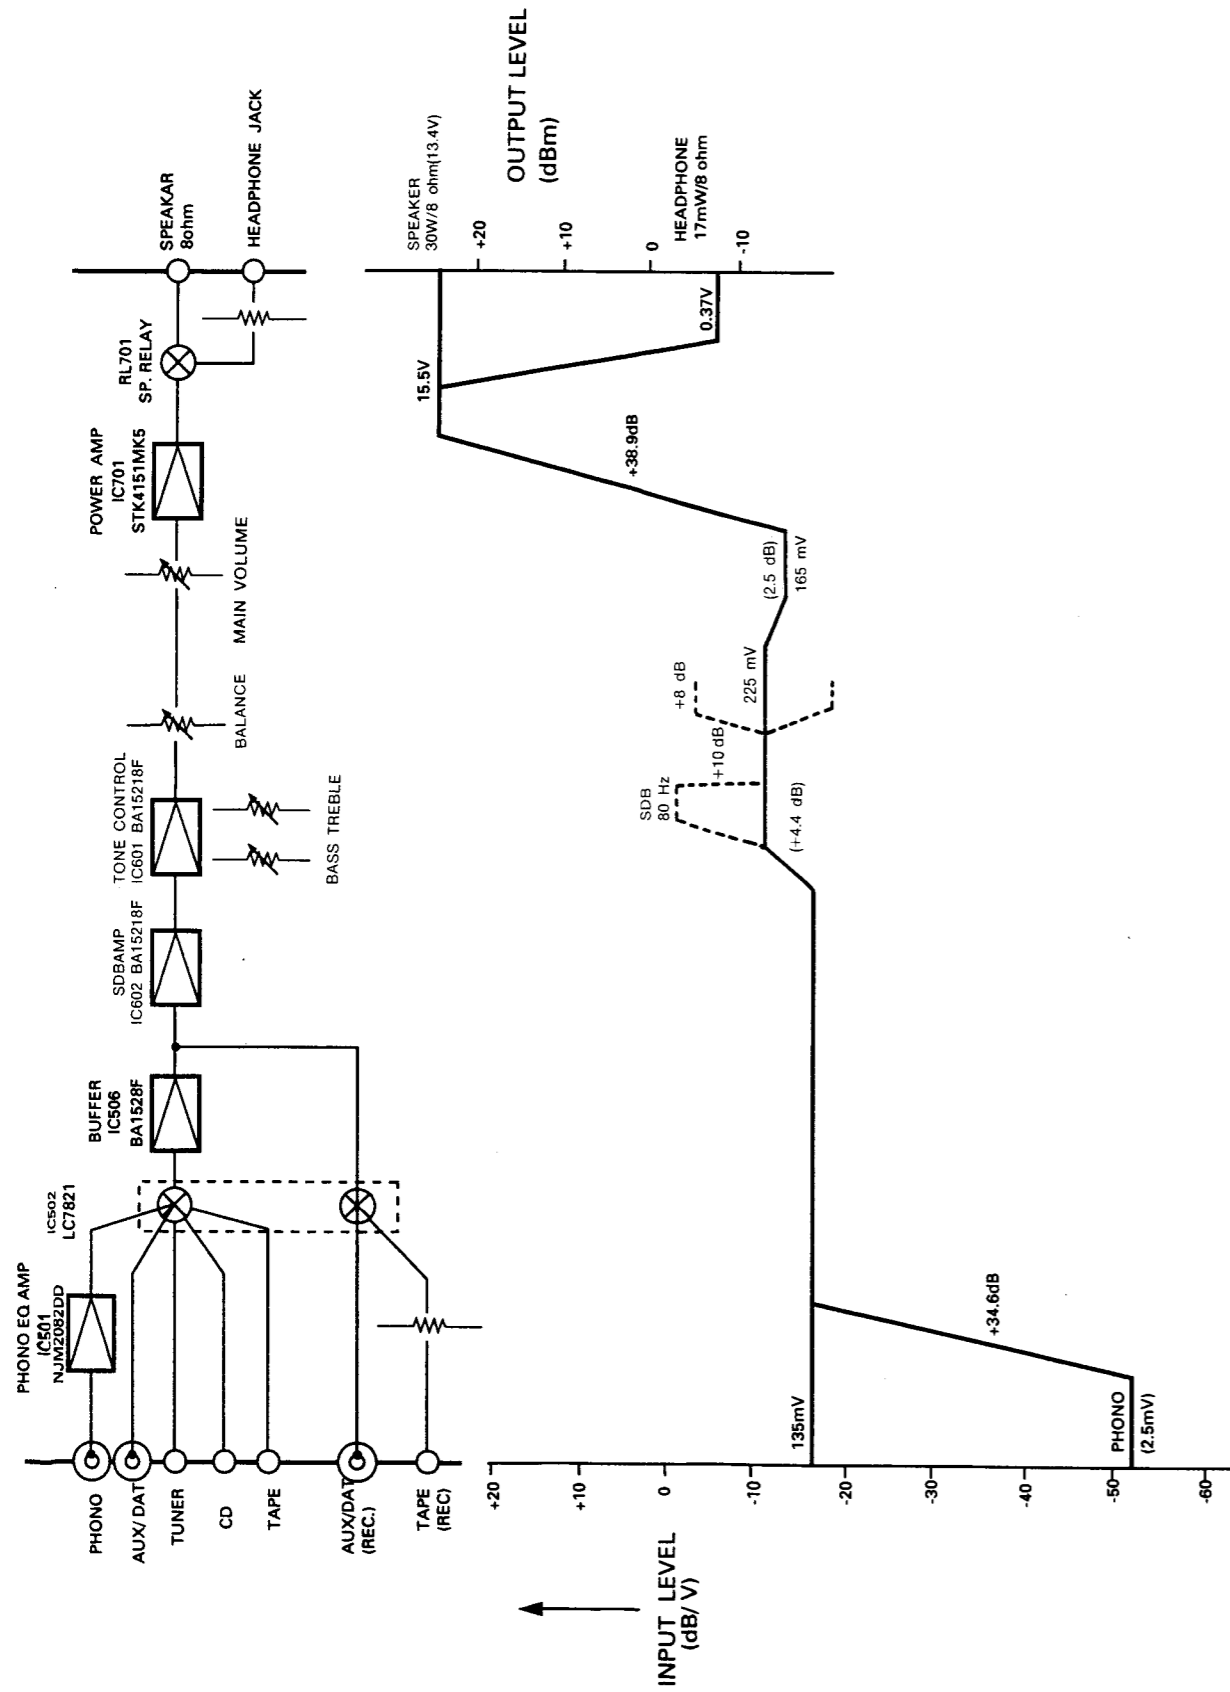

ADJUSTMENTS

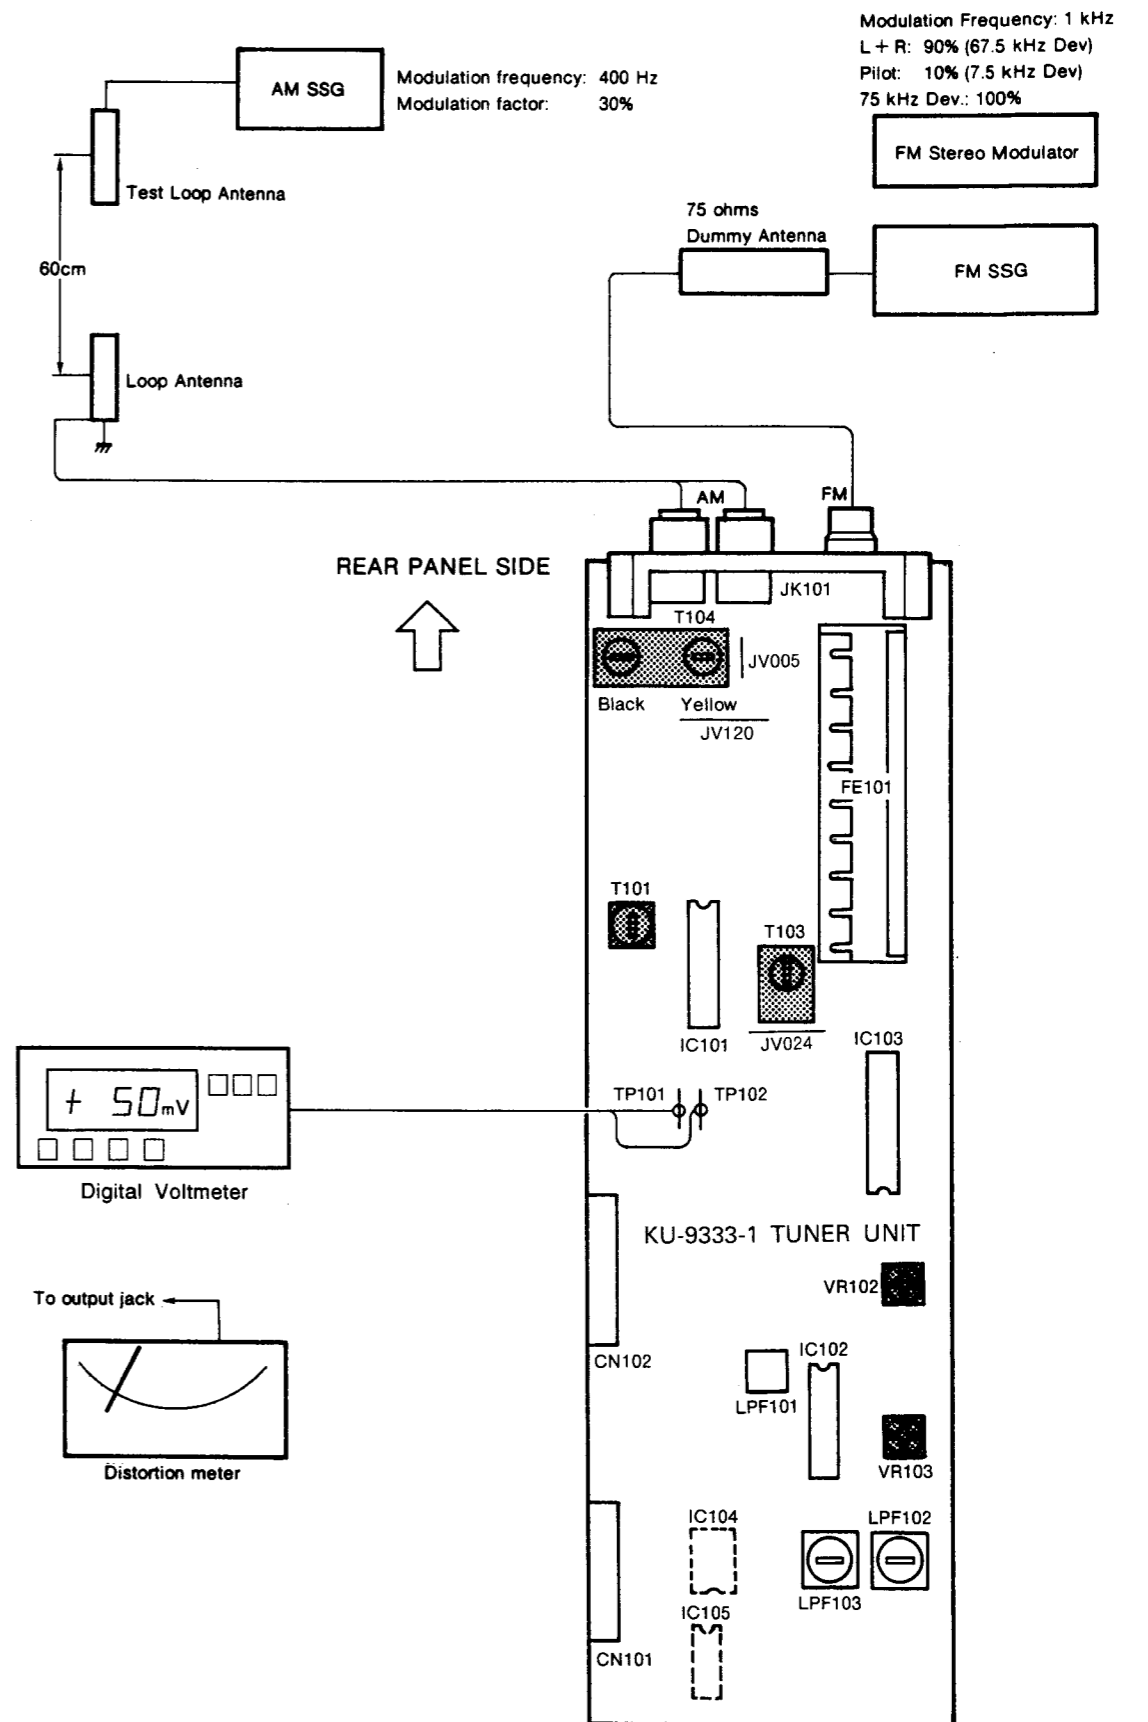

RECEIVER SECTION

1. FM adjustment (BAND button: FM, MONO/AUTO button: AUTO, RF ATT button: OFF)


| Step | Adjustment item | Tuning point (channel setting) | Input | | | | | Output | | Adjustment location | Setting value | Notes |
|------|-------------------|--------------------------------|--------------------------------|-----------|-------------|--|---------------------|---------------------------------|---------------------|---------------------|-------------------------------------|---|
| | | | Measuring Instrument | Frequency | Input level | Modulation | Connection location | Measuring instrument | Connection location | | | |
| 1 | FM DC balance | 98.00MHz | FM S.G. | 98.00MHz | 60dB μ | 1kHz 75kHz DEV | FM antenna terminal | Digital volt meter | TP101 TP102 | T101 | 0 \pm 50mV | Perform with monaural modulation signal |
| 2 | Muting level | 98.00MHz | FM S.G. | 98.00MHz | 17dB μ | 1kHz 75kHz DEV | FM antenna terminal | Check for the lighting of TUNED | Output jack | VR102 | Input level 17dB μ \pm 4dB | (Level at which TUNED lights up) Level at which the output is provided Turn VR102 fully clockwise and adjust with VR102. It is not possible to adjust with VR102. |
| 3 | Stereo separation | " | FM stereo modulator FM S.G. | " | 60dB μ | 1kHz L or R: 67.5kHz DEV Pilot; 7.5kHz DEV | " | VTVM Oscilloscope | " | VR103 | Minimum R.ch. Output | Perform with L.ch. Input of FM stereo modulator |

2. AM adjustment (BAND button: AM)

Note: The AM IFT and MW ANT./OSC. coil are adjusted individually and normally do not require adjustment.

| | | | | | | | | | | | | |
|---|-----------|---------------------------------------|-------------|--------|-----------------------------------|--------------|---------------------|-------------------|-----------------------------|-------------|-------------------------------|--------------------|
| 1 | IF | Clear frequency (without a broadcast) | AM IF sweep | 990kHz | Level at which AGC is not applied | - | AM antenna terminal | Oscilloscope | ⊕ IC101 Pin ⑩ ⊖ JV024 | T103 | Waveform maximum and symmetry | |
| 2 | Band edge | 522kHz | - | - | - | - | - | Digital voltmeter | ⊕ JV120 ⊖ JV005 | T104 Black | 1.2V \pm 0.2V | |
| | | 1611kHz | - | - | - | - | - | - | - | - | Approx. 7.5V | No place to adjust |
| 3 | Tracking | 603kHz | AM S.G. | 603kHz | Level at which AGC is not applied | 400Hz 30% | Loop antenna | VTVM | Output terminal | T104 Yellow | Maximum output | |

KU-9333-1 TUNER UNIT (Component Side)


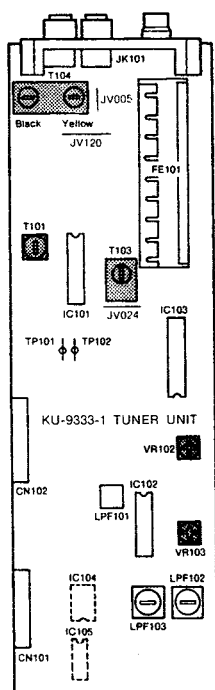


RECEIVER SECTION

Front End

Part No.: 216 0079 005

| No. | Name | No. | Name |
|-----|------|-----|---------|
| 1 | ANT | 5 | Vt |
| 2 | GND | 6 | +B |
| 3 | GND | 7 | IF OUT |
| 4 | GND | 8 | OSC OUT |

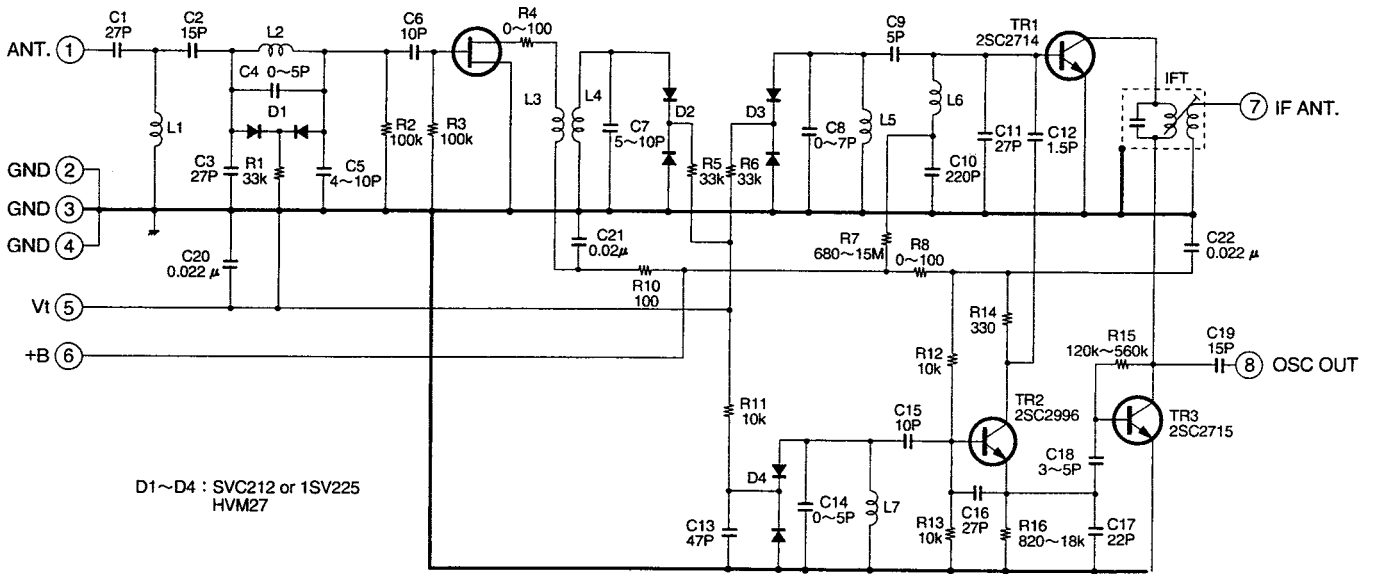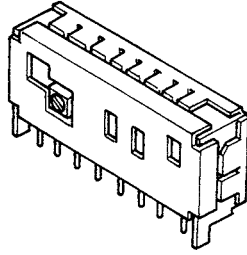

NOTES



1. TERMINAL NUMBER REFER TO OVERALL APPEARANCE.
2. RECEIVING FREQUENCY. 87.5~108 MHz.
3. INPUT IMPEDANCE. 75 OHM.
4. OUTPUT IMPEDANCE. 300 OHM.
5. SUPPLY VOLTAGE. +B 12 V.
6. TUNING VOLTAGE. Vt 1.2 min~9.0 max V.

RECEIVER SECTION

SEMICONDUCTORS


• IC's

LM7000 (IC103)

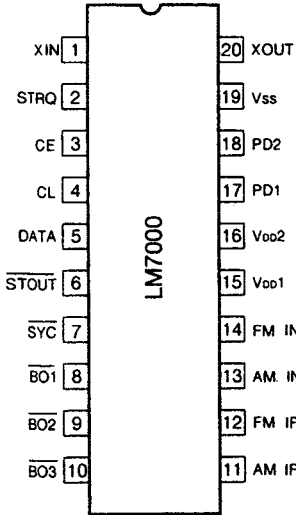
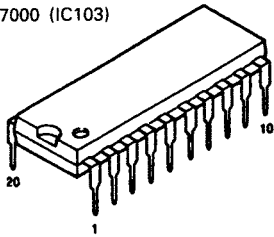


Pin Description


- SYC : Clock (400 kHz) for the controller
- XIN, XOUT : X'tal oscillator (7.2 MHz) with built-in feedback resistor
- FM IN, AM IN : Local oscillator signal input
- CE, CL, DATA : Data input
- BO1, BO2, BO3 : Band data output. BO1 can be set as the time base output (8 Hz).
- STRQ : IF counter request input
- STOUT : Auto research stop signal output
- V_{DD1}, V_{DD2}, V_{SS} : Power supply (V_{DD2} is a back-up power supply)
- AM IF, FM IF : IF signal input
- PD1, PD2 : Charge pump output

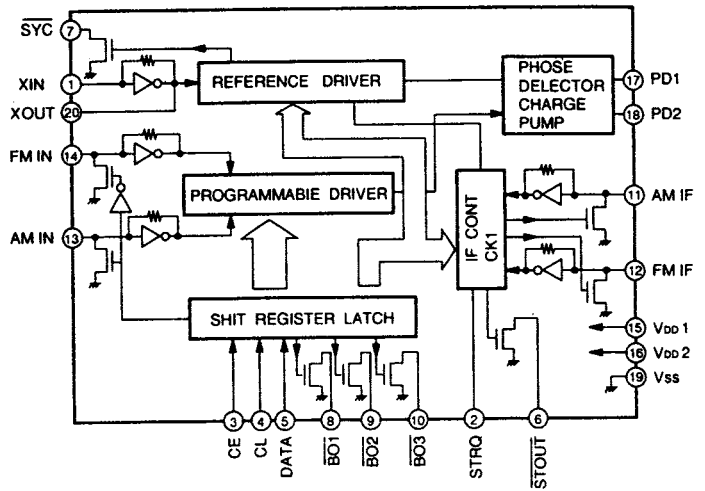


LA1267 (IC101)

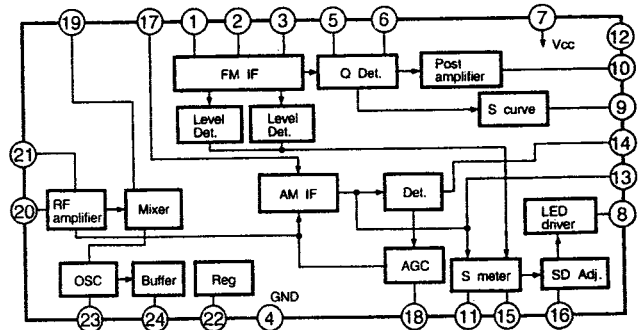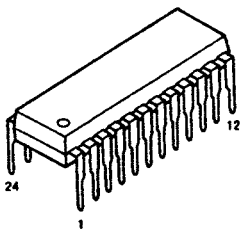

BA178M06 (IC401) ... +6V
BS178M12 (IC403) ... +12V





- 1 : Output
- 2 : GND
- 3 : Input

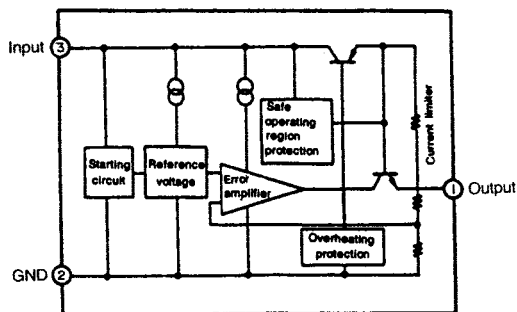

RECEIVER SECTION

SAA6579T (IC104)

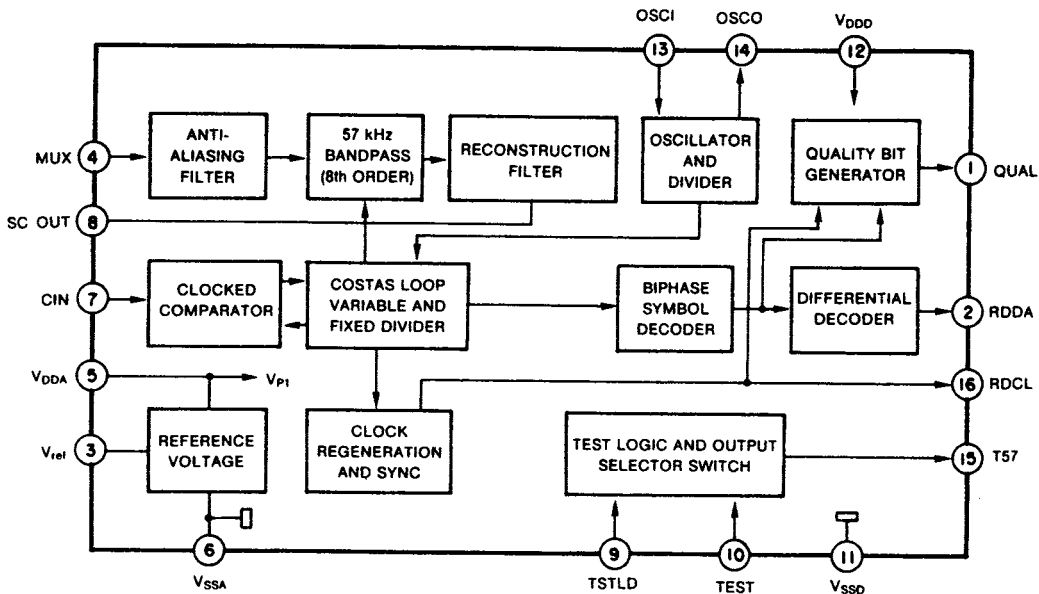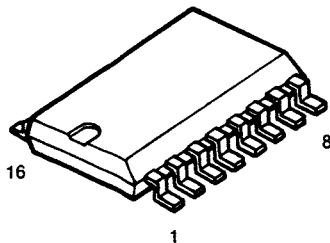


Block diagram and application circuit.



Pin Description

| SYMBOL | PIN | DESCRIPTION |
|------------------|-----|--|
| QUAL | 1 | quality indication output |
| RDDA | 2 | RDS data output |
| Vref | 3 | reference voltage output (0.5 V _{DDA}) |
| MUX | 4 | multiplex signal input |
| V _{DDA} | 5 | +5 V supply voltage for analog part |
| V _{SSA} | 6 | ground for analog part (0 V) |
| CIN | 7 | subcarrier input to comparator |
| SCOUT | 8 | subcarrier output of reconstruction filter |
| TSTLD | 9 | test control |
| TEST | 10 | test enable |
| V _{SSD} | 11 | ground for digital part (0 V) |
| V _{DD} | 12 | +5 V supply voltage for digital part |
| OSCI | 13 | oscillator input |
| OSCO | 14 | oscillator output |
| T57 | 15 | 57 kHz clock signal output |
| RDCL | 16 | RDS clock output |

Pin configuration


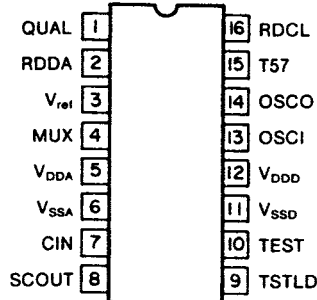


LA3410 (IC102)


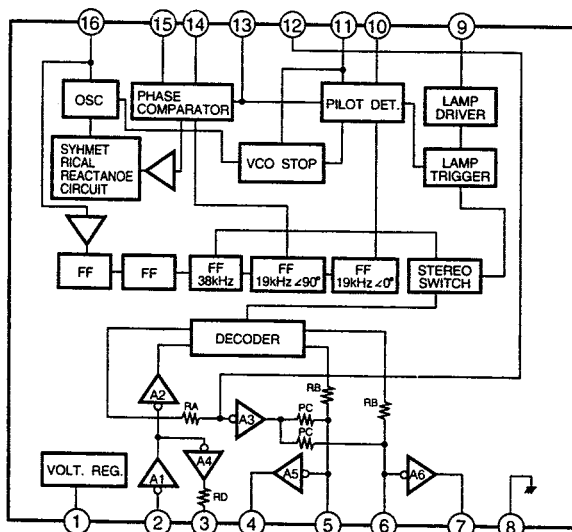
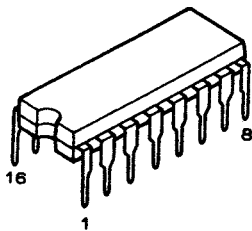


RECEIVER SECTION



STK4152II (IC351)

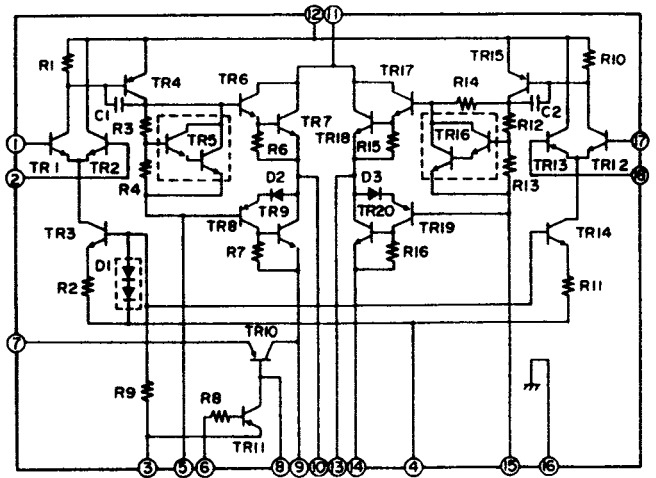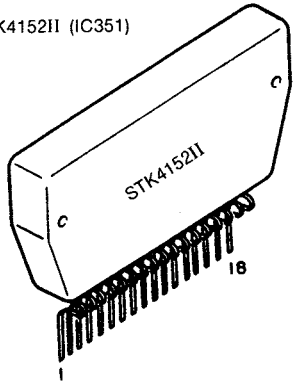




LC7821 (IC502)

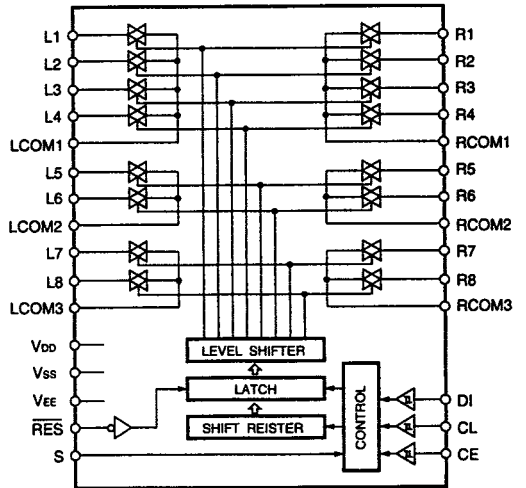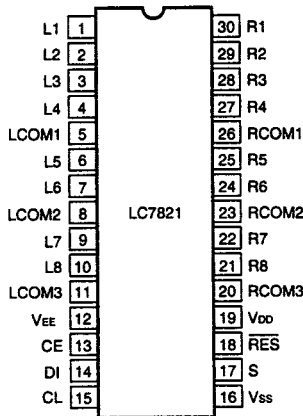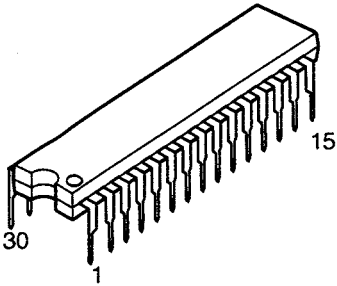

BA15218F (IC506, 601, 602, 603)
 NJM2082MD (IC501)
 M5230L (IC702)

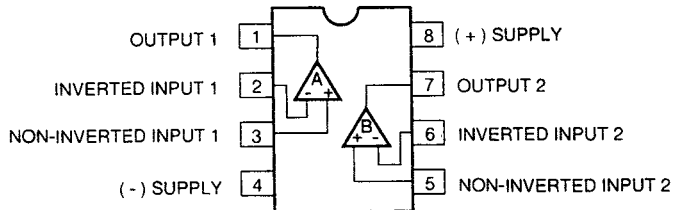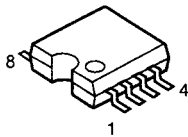


M5230L (IC702)

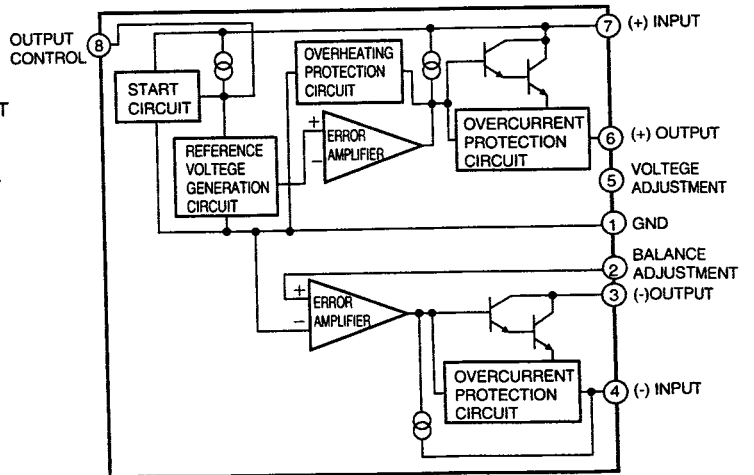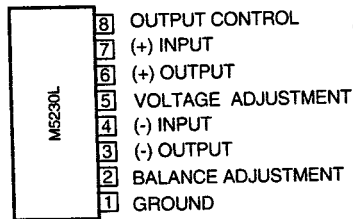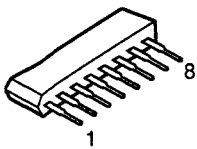


RECEIVER SECTION

LC7070NM (IC105)

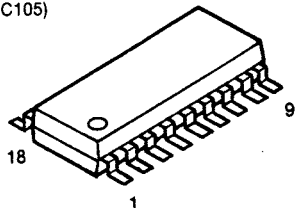

Pin Arrangement

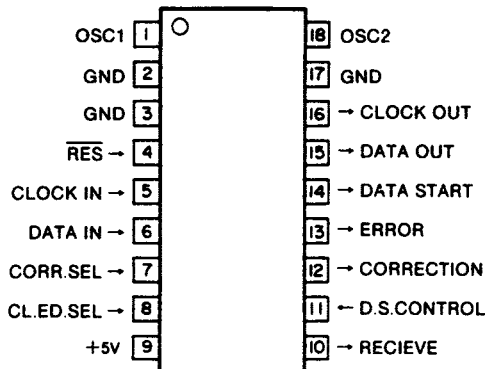


• Pin Description

| Symbol | Pin No. | I/O | Function/Details | At Time of Reset |
|--------------|------------|-----------------|---|------------------|
| OSC1 OSC2 | 1 18 | Input Output | · 4 MHz ceramic oscillator connection. | |
| CLOCK IN | 5 | Input | · RDS (LA2231) demodulation clock input. | "H" output |
| DATA IN | 6 | Input | · RDS (LA2231) demodulation data input. | "H" output |
| CORR. SEL | 7 | Input | · Error correction on/off selection input. · Sets the IC to correct errors in the RDS demodulation data or to output the data without correction. When input is 0 : No corrections are made When input is 1 : Corrections are executed | "H" output |
| CL. ED. SEL | 8 | Input | · Serial data clock polarity selection input. When input is 0 : Serial data output is enabled at the rise of the ouptut clock. (Serial data output changes at the fall of the output clock.) When input is 1 : Serial data output is enabled at the fall of the output clock. (Serial data output changes at the rise of the output clock.) NOTE: Set at the time of RES input. | "H" output |
| D.S. CONTROL | 11 | Input | · Block data start signal control input. When input is 0 : Data start signal is output for all blocks. When input is 1 : Data start signal is output for only the second block. | "H" output |
| RECEIVE | 10 (NC) | Output | · Output during RDS data reception. · After the completion of sync detection, there is a low-level, output while the serial data is being output. There is a high-level output at other times. · Open drain output. | "H" output |
| CORRECTION | 12 (NC) | Output | · Output with or without error correction. · There is a low-level output when the output data of the serial data output have been corrected or when correction is not possible. There is a high-level output when correction has not been applied. · Open drain output. | "H" output |
| ERROR | 13 (NC) | Output | · Presence of error output. · There is a low-level output when the output data of the serial data output has an error and correction is not possible. There is a high-level output when there is no error or when the error has been corrected. · Open drain output. | "H" output |
| DATA START | 14 | Output | · Block data start signal of the serial data output. Open drain output: LC7070N and LC7070NM Output with pull-up resistor: LC7071NM | "H" output |


RECEIVER SECTION

| Symbol | Pin No. | I/O | Function/Details | At Time of Reset |
|-------------------------|---------|--------|---|------------------|
| DATA OUT | 15 | Output | · Data output of the serial data output. Open drain output: LC7070N and LC77070NM Output with pull-up resistor: LC7071NM | "H" output |
| CLOCK OUT | 16 | Output | · Clock output of the serial data output. Open drain output: LC7070N and LC77070NM Output with pull-up resistor: LC7071NM | "H" output |
| $\overline{\text{RES}}$ | 4 | Input | · System reset input. · Reset and restart is accomplished by inputting the low level for 4 or more clock cycles. | |

Structure of the RDS Data Processing System

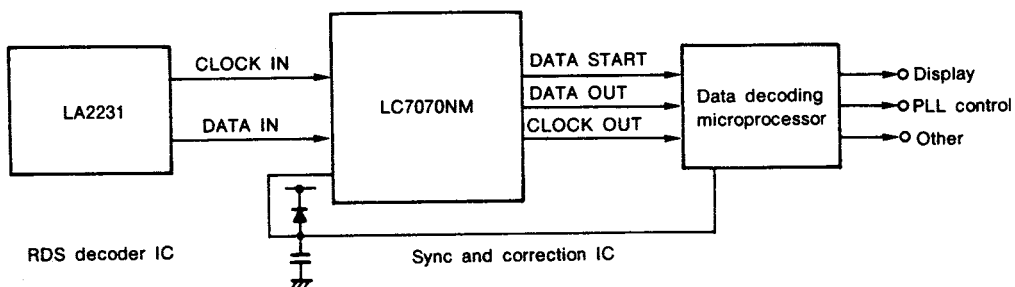



Serial Data Output Timing Chart

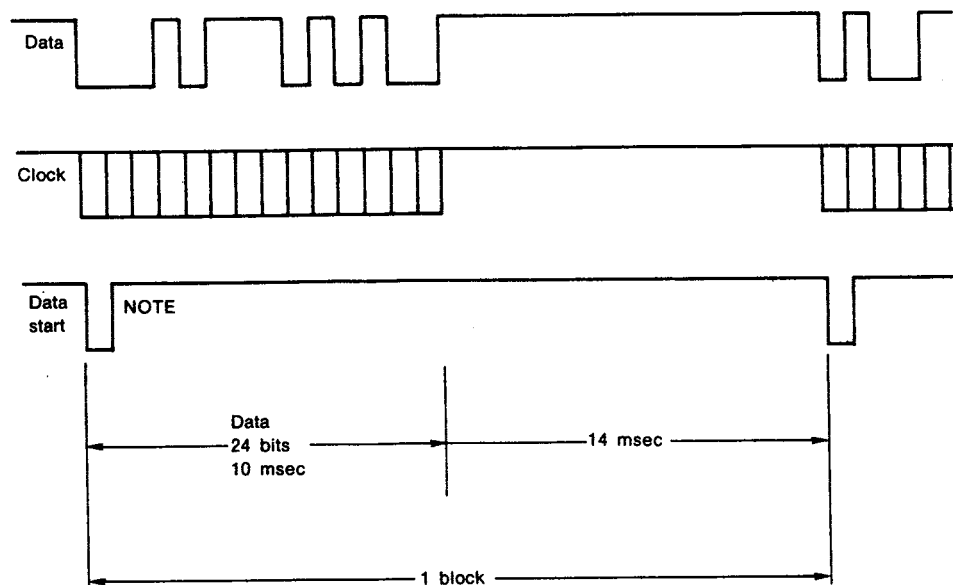



NOTE: Using the D.S. CONTROL input, only the second block among the entire 4 blocks of RDS data can be switched between the data start output and the total blocks' data start output.

RECEIVER SECTION


BA6208F (IN: IC604)

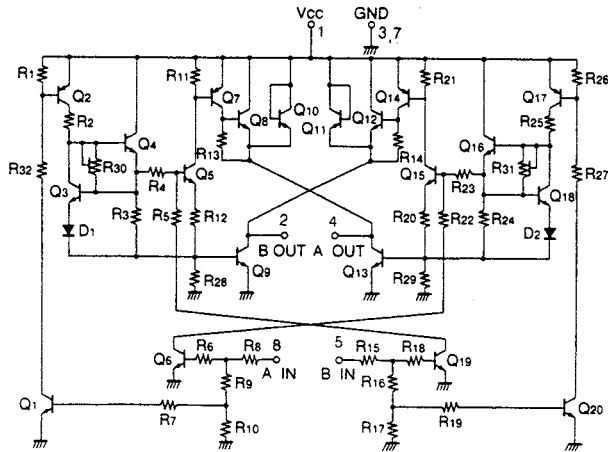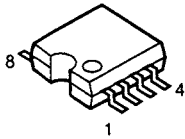

μPD 7225GB-3B7 (IC301, 302)

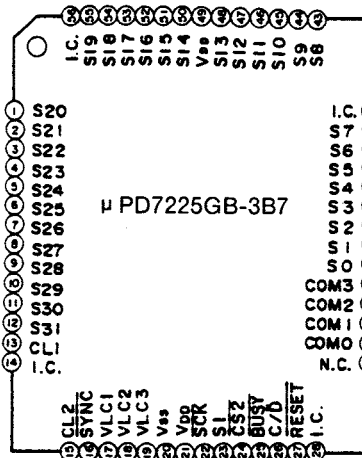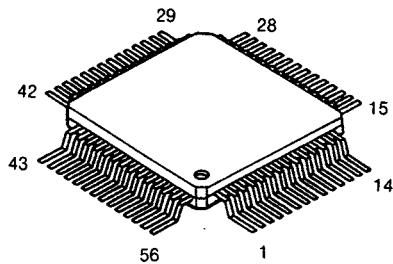

BLOCK DIAGRAM

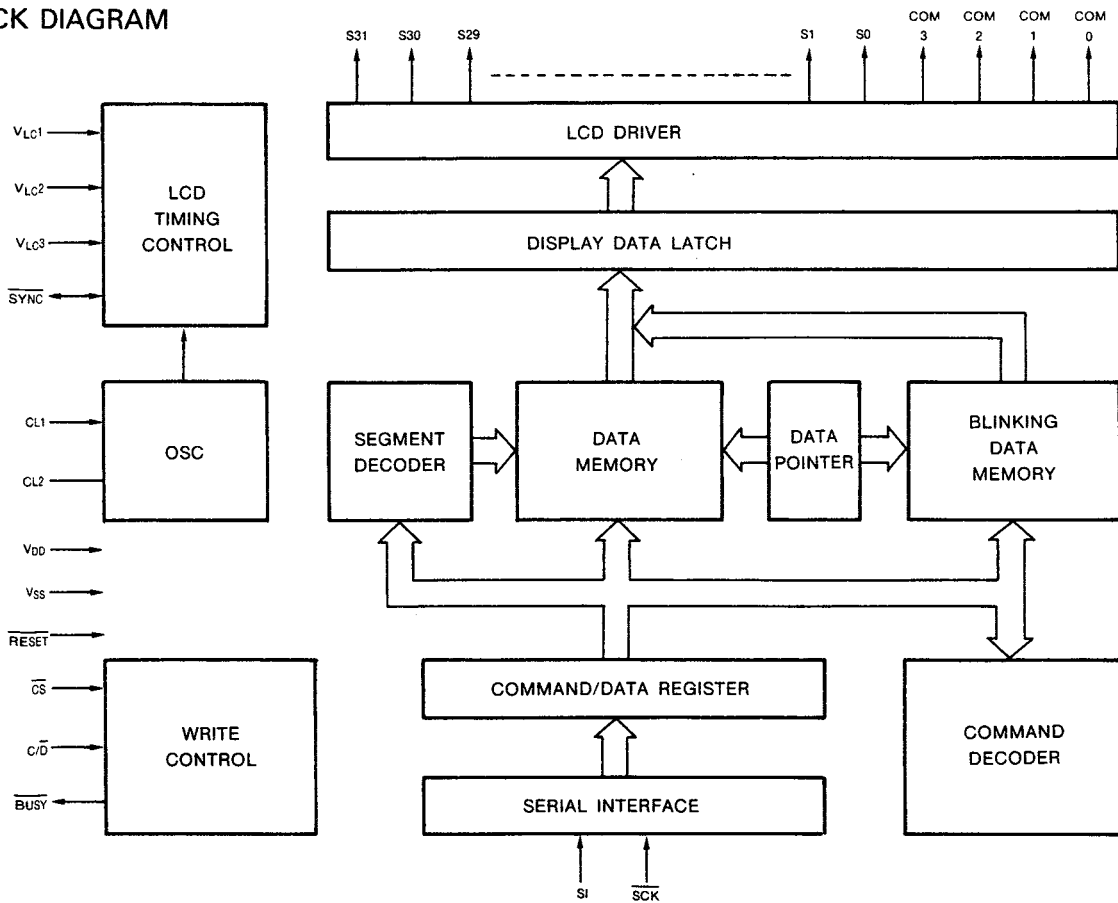

1. Pin Functions

1.1 SI (Serial Input)...Input

This is an input pin for serial data (commands/data) which inputs 19 types of commands that control the data used for the display and the operation of the μ PD7225.

1.2 SCK (Serial Clock)...Input

This is a shift clock for serial data (SI input). At the rising edge, the contents of the serial input (SI) are read to the serial register one bit at a time.

If the SCK input is "BUSY = 1" when " $\overline{\text{CS}} = 0$ ", it becomes valid, if it is "BUSY = 0" it is ignored. The SCK input is ignored when " $\overline{\text{CS}} = 1$ " regardless of the relationship to "BUSY".

1.3 C/D (Command Data)...Input

This input pin indicates whether the serial data input from the SI pin is a command or data. A low indicates data and a high indicates a command.

1.4 BUSY...3-State Output

This is an active low output pin which indicates the prohibition or approval of the input serial data. A low indicates prohibition and a high indicates approval.

A high-impedance state is set when " $\overline{\text{CS}} = 1$ ".

1.5 $\overline{\text{CS}}$ (Chip Select)...Input

Changing CS from high level to low level will clear the SCK counter of the μ PD7225 and enable the input of serial data. At the same time, the data pointer is initialized to the 0 address. When $\overline{\text{CS}}$ is set to high level following the input of serial data, the contents of the data memory are read to the display data latch and displayed on the LCD.

1.6 SYNC (Synchronous)...Input / Output

The SYNC pin is an input/output pin which connects a wired OR in cases where the common is used together in multiple chip structures, and when taking sync of a blinking operation.

The SYNC pin outputs the signal derived by dividing the clock oscillation frequency (f_{CL}) by 4 when the μ PD7225 is reset ($\overline{\text{RESET}} = 0$). (See Figure 1.) The SYNC pin takes the sync of the system clock ($f_{\text{CL}}/4$) of each μ PD7225 and after reset cancellation ($\overline{\text{RESET}} = 1$), takes the sync of the display timing of each μ PD7225 at the timing of the common drive signal illustrated in Figure 2.

Figure 1. Condition of the SYNC Pin During Reset ($\overline{\text{RESET}} = 0$)





Figure 2. Condition of the SYNC Pin After Reset Cancellation ($\overline{\text{RESET}} = 1$)

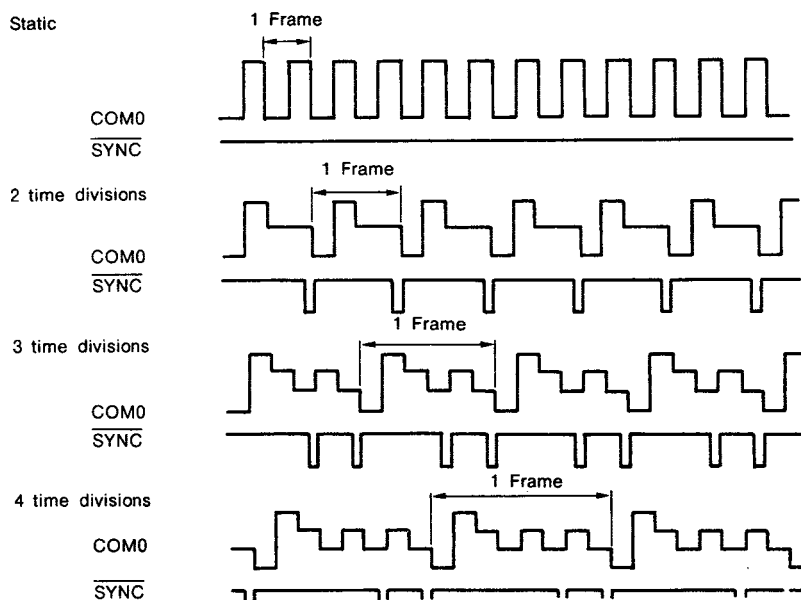

1.7 $\overline{\text{RESET}}$...Input

This is an active-low reset input pin.

1.8 S0 through S31 (Segment)...Output

These are segment drive signal output pins.

1.9 COM0 through COM5 (Common)...Output

These are common drive signal output pins.

1.10 CL1 and CL2 (Clock)

These are connection pins for resistor (R) which is used for the internal clock oscillation. Input is made to pin CL1 when the clock is supplied externally.

1.11 V_{LC1} , V_{LC2} , and V_{LC3}

These are the LCD drive power supply pins.

1.12 V_{DD}


These are the positive power supply pins. Either pin number 7 or number 33 can be used.

1.13 V_{SS}


This pin is at ground potential.

RECEIVER SECTION


● LCD ASS'Y (CG1206)
(Part No.: 393 6006 007)

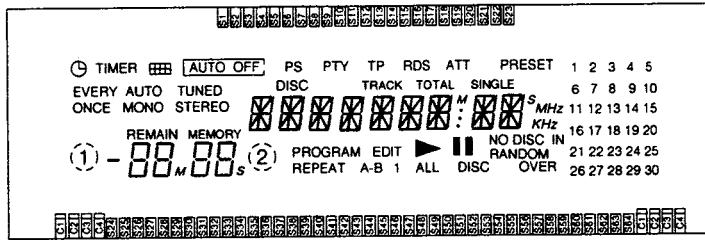

Segment

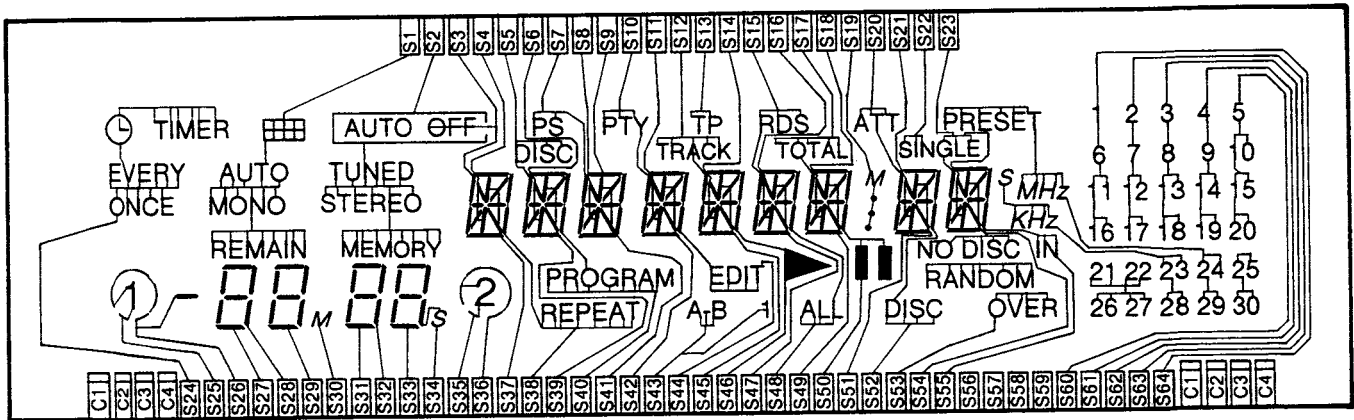


Common

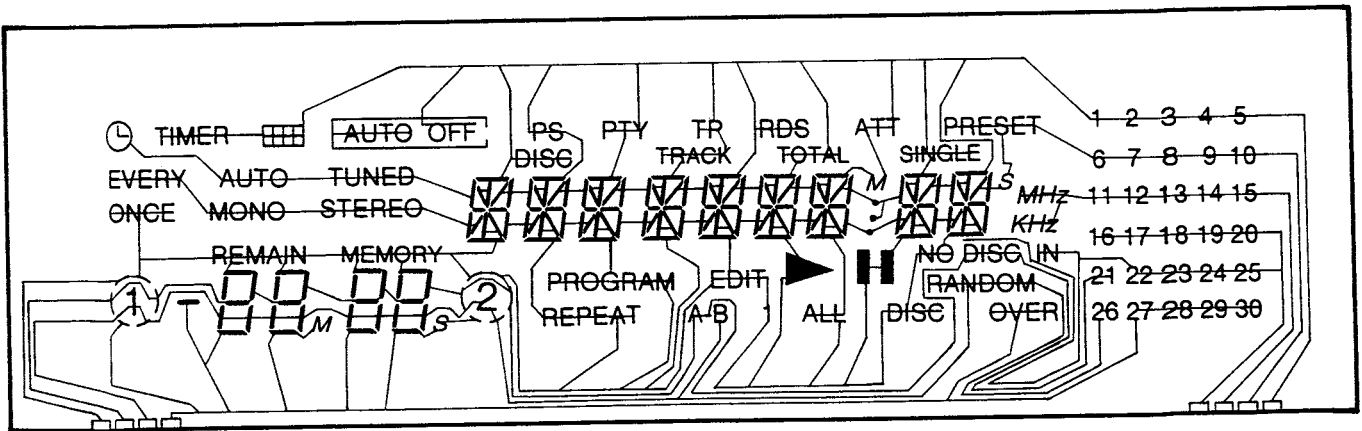


RECEIVER SECTION

● **Transistors**


2SA933S (S)
2SC1740S (S)

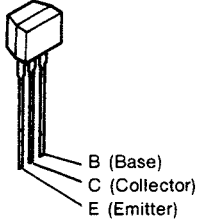


2SD1762 (E/F)

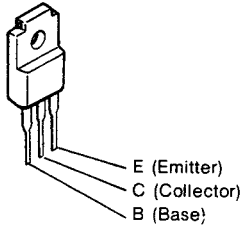


2SA935 (Q)
2SB1306 (Q/R)
2SC461 (C)
2SC2061 (Q)
2SC2390 (S)

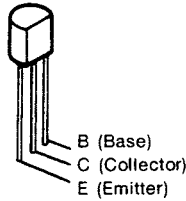

2SK365 (BL/GR)

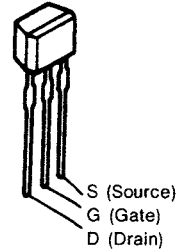


2SC2412K (S), (LN)

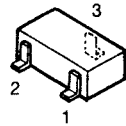


1 : Emitter
2 : Base
3 : Collector


2SK161 (GR)

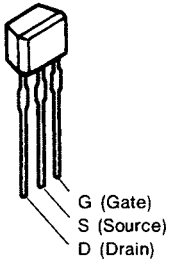


2SJ40 (C/D)

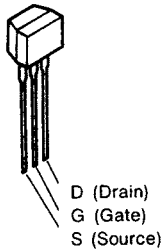

2SB1328 (P/Q)

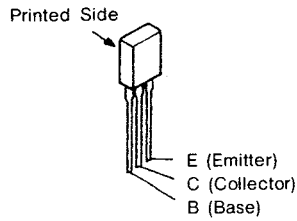


TLP181 (BL/GR)




1: Anode
3: Cathode
4: Emitter
6: Collector

DTA114ES } PNP Type
DTA144ES }
DTC114ES }
DTC144ES } NPN Type
DTC124TS }
DTC323TS }
DTC124GS }
DTC143TS }

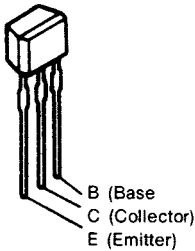


PNP Type




| | R1 | R2 |
|----------|---------|---------|
| DTA114ES | 10k ohm | 10k ohm |
| DTA144ES | 47k ohm | 47k ohm |

NPN Type




| | R1 | R2 |
|----------|---------|---------|
| DTC114ES | 10k ohm | 10k ohm |
| DTC144ES | 47k ohm | 47k ohm |

DTA114EK } PNP Type
DTC114EK }
DTC323TK } NPN Type
DTC143TK }

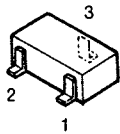


1 : Emitter
2 : Base
3 : Collector

PNP Type




| | R1 | R2 |
|----------|---------|---------|
| DTA114EK | 10k ohm | 10k ohm |

NPN Type




| | R1 |
|----------|----------|
| DTC143TK | 4.7k ohm |
| DTC124TS | 22k ohm |
| DTC323TS | 2.2k ohm |

NPN Type




| | R2 |
|----------|---------|
| DTC124GS | 22k ohm |

NPN Type



| | R1 | R2 |
|----------|---------|---------|
| DTA114EK | 10k ohm | 10k ohm |

NPN Type




| | R1 |
|----------|----------|
| DTC323TK | 2.2k ohm |


RECEIVER SECTION

● Diodes (including LED)


MTZJ3.3A
MTZJ3.6A
MTZJ6.8A
MTZJ8.2B
MTZJ12A
MTZJ22A



1SS252





1SR35-200A

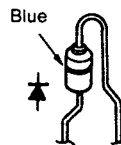


LED (SLF-351D) Ass'y
Part No. 393 9470 009 (D306)

S4VB20F (D711)

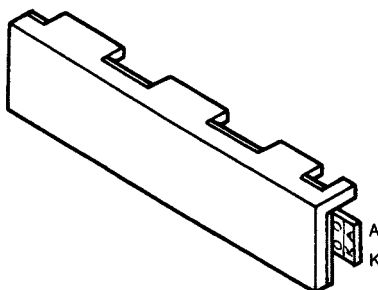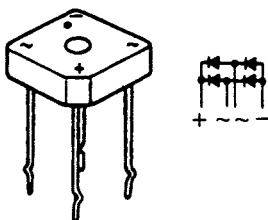


● Wiring diagram

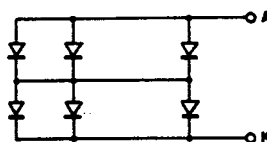

2 in series, 22 parallel = 44 chips

MICROPROCESSOR DOCUMENTATION
HD6433726A17F (IC404)

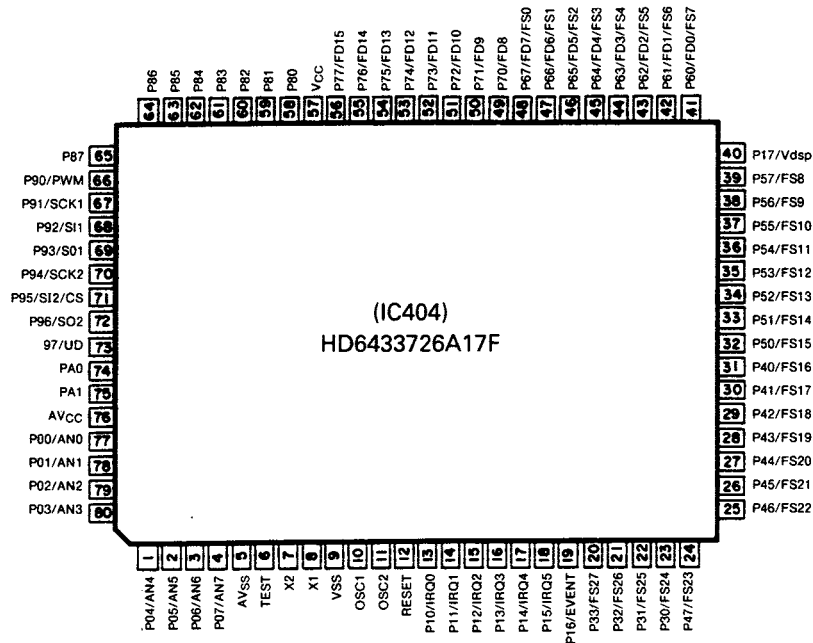

1. Overview

The functions of this microcomputer are made up of the following three pillars.

a. Tuner functions

These functions perform the required control for the reception of FM and AM broadcasts.

b. Auto functions

Positioned at the heart of the system stereo, the auto functions perform serial communications with other components (such as the deck, CD and amplifier) to provide overall control.

These functions decoder the signals from the remote control and send them to each component of the system.

c. Timer functions

Counts the clock of the 24 hour display.

Operates the three kinds of timers: Every Day, Once and Sleep.

Note 1) When the power cord is plugged in with the CB990's pin 1 and 2 short-circuited and **MEMO** pushed in, the following tracking adjustment frequencies are automatically stored in the preset memory. Use these for adjustment, etc. After setting the preset memory, undo the short circuit between CB990 pins 1 and 2.

| | | | | | | |
|----|----------|----------|----------|-----------|-----------|---------|
| | P1 | P2 | P3 | P4 | P5 | P6 |
| AM | 522kHz | 603kHz | 999kHz | 1098kHz | 1404kHz | 1611kHz |
| | P11 | P12 | P13 | P14 | P15 | |
| FM | 87.50MHz | 89.00MHz | 98.00MHz | 100.10MHz | 108.00MHz | |

Note 2) When the power cord is plugged in while pressing both keys **MEMO** and **AUTO TUNING DOWN**, the entire memory is initialized and the microcomputer operates from the beginning of the program. If there are any problems in the frequency presetting or the time display, follow this procedure for proper start-up.

Note 3) When the power cord is plugged in while pressing both keys **MEMO** and **TIMER**, the entire LCD will alternatively light up and down. To return to the normal mode from this mode, unplug the power cord, and then plug it back in.

Note 4) When the power cord is plugged in while pressing both keys **MEMO** and **AUTO TUNING UP**, can set the power on without DENON display. To return to the normal mode from this mode, unplug the power cord, and then plug it back in.


RECEIVER SECTION

2. Receiving Band Table


| Band | Receiving frequency | Local oscillator frequency | IF | Frequency division ratio | Comparison frequency | Step frequency | Other |
|------|---------------------|----------------------------|---------|--------------------------|----------------------|----------------|-------|
| FM | 87.50~108.00MHz | 98.20~118.70MHz | 10.7MHz | 1 | 25kHz | 50kHz | |
| AM | 522~1611kHz | 972~2061kHz | 450kHz | - | 9kHz | 9kHz | |

3. Signals sent to the LM7000 Programmable Divider

- a. Signals to the programmable divider are sent from 3 sources: CE OUT, CLOCK OUT, and DATA OUT.
- b. The programmable divider takes in DATA at CLOCK , when CE equals 1.
- c. The data is a 24-bit serial signal which is taken in to the programmable divider from the LSB.
(At the AM setting, D₀ through D₃ are ignored, so that D₄ becomes the LSB.)
- d. The data is made up of the number of frequency divisions data, the band data, and the comparison frequency data. (See diagram below.)

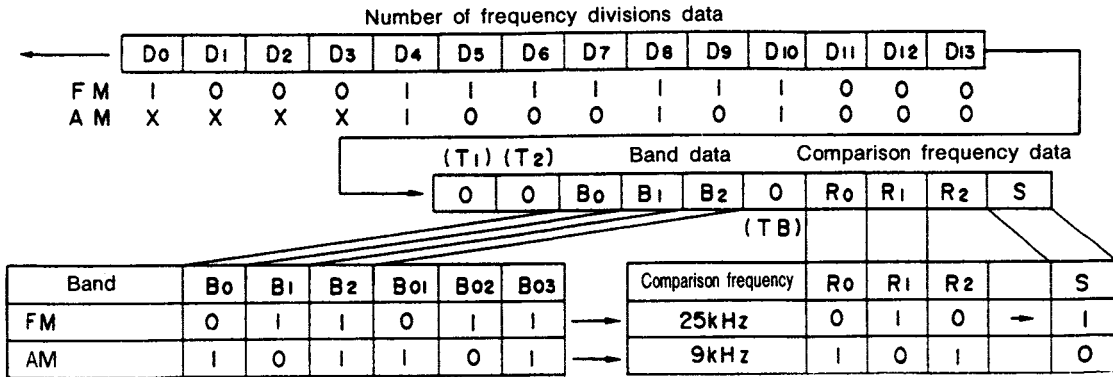

- e. Timing for sending
a = 2.5 μsec

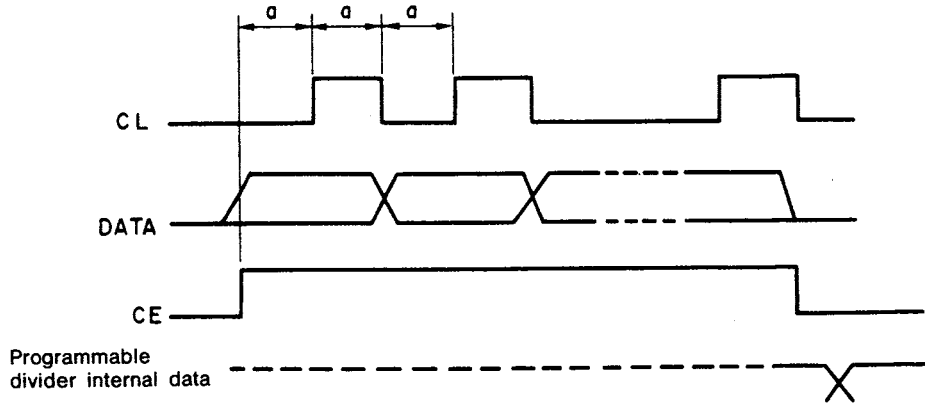

RECEIVER SECTION

● Pin Description (HD6433726A17F)

| Pin | Pin No. | I/O | DFL | ACT | PUD | Function Name | Use | Function Definition | |
|-----|------------------|-----|-----|-----|-----|------------------|------------------|--|--------------|
| 1 | P04/AN4 | I | H | L | U | _TUNED IN | TUNER | Tuning signal input | TUNED=L |
| 2 | P05/AN5 | I | H | L | U | _SIGNAL IN | TUNER | Tuning signal input | SIGNAL IN=L |
| 3 | P06/AN6 | I | H | L | U | _STEREO IN | TUNER | Stereo mode status input | STEREO=L |
| 4 | P07/AN7 | I | H | L | U | _STOP IN | PLL | PLL stop signal input | STOP=L |
| 5 | AV _{SS} | I | - | - | - | GND | | Ground | |
| 6 | TEST | I | - | - | - | | | Connect to Vcc pin. | |
| 7 | X2 | O | - | - | - | SUB CLOCK | | Sub clock oscillator pin | |
| 8 | X1 | I | - | - | - | SUB CLOCK | | 32,768 kHz | |
| 9 | V _{SS} | - | - | - | - | GND | | Ground | |
| 10 | OSC1 | I | - | - | - | SYSTEM CLOCK | | System clock oscillator pin | |
| 11 | OSC2 | O | - | - | - | SYSTEM CLOCK | | 4.0 MHz | |
| 12 | RESET | I | - | - | - | | | System reset pin | |
| 13 | P10/IRQ0 | I | H | L | U | _SERIAL SIG IN | | Denon bus input pin | |
| 14 | P11/IRQ1 | I | H | L | U | 50/60 Hz IN | | Detection input of 50 Hz and 60 Hz pulses | PULSE |
| 15 | P12/IRQ2 | I | H | L | U | _REMOCON IN | | Remote control signal input pin | |
| 16 | P13/IRQ3 | I | H | L | U | _DATA START IN | | RDS data start signal input | STROBE=L |
| 17 | P14/IRQ4 | I | H | L | U | _OFF ENA IN | | CD and deck loader close detection input | OFF ENABLE=L |
| 18 | P15/IRQ5 | I | L | H | U | PROTECT IN | AMP | SP pin fault detection input pin | DETECT=H |
| 19 | P16/EVENT | I | - | - | - | NOT USED | | | |
| 20 | P33/FS27 | O | L | L | D | _S_FUNC MUTE OUT | AMP | Function switching mute output pin | MUTE ON=L |
| 21 | P32/FS26 | O | L | H | D | PROTECT OUT | AMP | Protection circuit drive output | PROTECT ON=H |
| 22 | P31/FS25 | O | L | H | D | VOL DWN OUT | AMP | Volume driver drive output | DOWN=L |
| 23 | P30/FS24 | O | L | H | D | VOL UP OUT | AMP | Volume driver drive output | UP=L |
| 24 | P47/FS23 | O | H | L | D | _SDB OUT | AMP | SDB on/off, SDB circuit drive output | SDB ON=L |
| 25 | P46/FS22 | - | - | - | - | | | | |
| 26 | P45/FS21 | - | - | - | - | | | | |
| 27 | P44/FS20 | O | L | H | D | S. OE OUT | FUNC (LC7821) | Function switching data, chip select | |
| 28 | P43/FS19 | O | L | H | D | P. OE OUT | PLL (LM7000) | PLL data output, chip select | |
| 29 | P42/FS18 | O | L | H | D | P. STREQ OUT | PLL (LM7000) | PLL data output, stop request | |
| 30 | P41/FS17 | O | L | H | D | PS. DATA OUT | LM7000, LC7821 | PLL and function data output | |
| 31 | P40/FS16 | O | L | H | D | PS CLK OUT | LM7000, LC7821 | PLL and function clock output | |
| 32 | P50/FS15 | O | L | H | D | L. CLK OUT | DSPLY (UPD7225G) | LCD display driver data output | |
| 33 | P51/FS14 | O | L | H | D | L. DATA OUT | DSPLY (UPD7225G) | LCD display driver data output | |
| 34 | P52/FS13 | O | H | L | D | _L. CE1 OUT | DSPLY (UPD7225G) | LCD display driver data output (Chip select 1) | CHIP SEL=L |
| 35 | P53/FS12 | O | H | L | D | _L. CE2 OUT | DSPLY (UPD7225G) | LCD display driver data output (Chip select 2) | CHIP SEL=L |
| 36 | P54/FS11 | I | H | L | U | _L. BSY IN | DSPLY (UPD7225G) | LCD display driver data output, busy input | BUSY=L |
| 37 | P55/FS10 | O | L | H | D | L. C/_D OUT | DSPLY (UPD7225G) | LCD display driver data output (Command = H, Data = L) | |
| 38 | P56/FS9 | O | L | L | D | _LSI. RST OUT | | Peripheral LSI reset output | RESET=L |
| 39 | P57/FS8 | O | L | H | D | LOCAL/_DX OUT | | Local/DX switching output | DX=L |
| 40 | P17/Vdsp | I | - | - | - | NOT USED | | | |
| 41 | P60/FD0/FS7 | I/O | | | | NOT USED | | | |
| 42 | P61/FD1/FS6 | I/O | | | | NOT USED | | | |
| 43 | P62/FD2/FS5 | I/O | | | | NOT USED | | | |
| 44 | P63/FD3/FS4 | O | L | H | D | KS0 | | Key strobe pin | |
| 45 | P64/FD4/FS3 | O | L | H | D | KS1 | | Key strobe pin | |
| 46 | P65/FD5/FS2 | O | L | H | D | KS2 | | Key strobe pin | |
| 47 | P66/FD6/FS1 | O | L | H | D | KS3 | | Key strobe pin | |
| 48 | P67/FD7/FS0 | O | L | H | D | KS4 | | Key strobe pin | |
| 49 | P70/FD8 | O | L | H | D | KS5 | | Key strobe pin | |
| 50 | P71/FD9 | O | L | H | D | KS6 | | Key strobe pin | |
| 51 | P72/FD10 | O | L | H | D | KS7 | | Key strobe pin | |
| 52 | P73/FD11 | O | L | H | D | KS8 | | Key strobe pin | |
| 53 | P74/FD12 | O | L | H | D | KS9 | | Key strobe pin | |
| 54 | P75/FD13 | O | L | H | D | KS10 | | Key strobe pin | |
| 55 | P76/FD14 | O | L | H | D | KS11 | | Key strobe pin | |
| 56 | P77/FD15 | O | L | H | D | KS12 | | Key strobe pin | |
| 57 | V _{CC} | I | - | - | - | | | Power supply input pin | |
| 58 | P80 | O | H | L | | _TAPE REC OUT | AMP | Function = tape status output | TAPE=L |
| 59 | P81 | O | H | L | | _RELAY OUT | TUNER | Power supply relay control output | RELAY ON=L |
| 60 | P82 | O | L | L | | _T. MUTE OUT | TUNER | Tuner mute output | MUTE ON=L |
| 61 | P83 | O | L | L | | _AUTO/MONO OUT | TUNER | FM Auto/Mon switching output | AUTO=L |
| 62 | P84 | O | H | L | | PWR_ON/OFF OUT | TUNER | Power on/off status output | POWER ON=L |
| 63 | P85 | I/O | | | | NOT USED | | | |
| 64 | P86 | O | L | H | D | PS CLK OUT | LM7000, LC7821 | PLL and function data output | |
| 65 | P87 | O | L | H | D | PS. DATA OUT | LM7000, LC7821 | PLL and function data output | |
| 66 | P90/PWM | O | H | L | | _SERIAL SIG OUT | SYSTEM | Denon bus output pin | |
| 67 | P91/SCK1 | I | L | H | U | R. CLK IN | TUNER (LM7070NM) | RDS data input pin | |
| 68 | P92/SI1 | I | L | H | U | R. DATA IN | TUNER (LM7070NM) | RDS data input pin | |
| 69 | P93/SO1 | I/O | | | | NOT USED | | | |
| 70 | P94/SCK2 | I | L | H | U | CLK IN | CD/DECK | CD and deck display data clock pin | |
| 71 | P95/SI2/CS | I | L | H | U | DATA IN | CD/DECK | CD and deck display data input pin | |
| 72 | P96/SO2 | O | H | L | | ENABLE OUT | CD/DECK | Display data transmission enable output | CD=L, DECK=H |
| 73 | P97/UD | O | L | H | | DIMMER OUT | | Dimmer on/off output | ON=H |
| 74 | PA0 | O | L | H | | SUB CHK | | Sub check | |
| 75 | PA1 | O | L | H | | | | | |
| 76 | AV _{CC} | - | - | - | - | | | Connected to Vcc pin | |
| 77 | P00/AN0 | I | L | H | D | KR0 | | Key input pin | |
| 78 | P01/AN1 | I | L | H | D | KR1 | | Key input pin | |
| 79 | P02/AN2 | I | L | H | D | KR2 | | Key input pin | |
| 80 | P03/AN3 | I | L | H | D | KR3 | | Key input pin | |


RECEIVER SECTION

• Description of Key and Selection Switch Inputs

| No. | Function Name | Function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----------------|-------------------------|---|-------------|-------|-----|--------|-------|-----|---|---|---|--|--------|---|---|---|--|----------------|---|---|---|--|-------|---|---|---|--|-------------|---|---|---|--|
| 1 | TUNING UP | ※In the tuner mode Changes the receiving frequency upward one step at a time. When held for 0.5 seconds or longer, the change is continuous. The unit enters the auto tuning mode the moment the key is released. Pressing the key again engages the step operation. ※In the clock mode Increments the figures while they are flashing. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | TUNING DOWN | ※In the tuner mode Changes the receiving frequency downward one step at a time. When held for 0.5 seconds or longer, the change is continuous. The unit enters the auto tuning mode the moment the key is released. Pressing the key again engages the step operation. ※In the clock mode Decrements the figures while they are flashing. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | PRESET UP | Increments the preset number from the current value, and receives that preset station. At the time of the RDS PTY search, becomes the key which selects the program type. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | PRESET DOWN | Decrements the preset number from the current value, and receives that preset station. At the time of the RDS PTY search, becomes the key which selects the program type. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | BAND | Operates in a cyclic manner to specify switching to the FM or AM receiving modes. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | MONO/AUTO | At the time of FM reception, specifies the switching of the receiving mode between the mono/auto mode and the forced mono mode. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | MEMORY | Provides a transition to the mode which registers the stations being received to preset memory. The "MEMO" display will flash. Registration is accomplished by pressing the tuning up or down keys and then press the MEMO key. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | ENTER/NEXT | This is used when setting the timer, setting the current time, and when advancing to the next operation. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | TIMER | Provides a transition to the setting mode which operates the timer only once each day at the set time. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | STAND BY | Pressing this key selects whether or not the timer operation is performed. To engage the timer operation, use this key to light the stand by mark on the LCD. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | CLEAR | This button is used to change the current time setting or the contents of the set timer. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | DISPLAY | This button switches the display to the reception frequency and time and TAPE COUNTER display. Pressing this button for 3 seconds or longer changes the function to the time setting mode. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | RDS | Use this button to automatically tune to stations using the radio data system. One press engages the RDS search, two presses engage the PTY search, and three presses engage the TP search mode. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | LOCAL/DX (RF ATT.) | Use this to select the FM sensitivity, local or DX. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | USA EUROPE. FREQ. | Destination selection and setting switch <table border="1" style="margin-left: 20px; margin-top: 10px;"> <thead> <tr> <th style="text-align: left;">Destination</th> <th style="text-align: center;">3W</th> <th style="text-align: center;">USA</th> <th style="text-align: center;">Europe</th> <th style="text-align: center;">Freq.</th> </tr> </thead> <tbody> <tr> <td>USA</td> <td style="text-align: center;">1</td> <td style="text-align: center;">0</td> <td style="text-align: center;">0</td> <td></td> </tr> <tr> <td>Europe</td> <td style="text-align: center;">0</td> <td style="text-align: center;">1</td> <td style="text-align: center;">0</td> <td></td> </tr> <tr> <td>Southeast Asia</td> <td style="text-align: center;">1</td> <td style="text-align: center;">1</td> <td style="text-align: center;">0</td> <td></td> </tr> <tr> <td>Japan</td> <td style="text-align: center;">0</td> <td style="text-align: center;">0</td> <td style="text-align: center;">0</td> <td></td> </tr> <tr> <td>Middle East</td> <td style="text-align: center;">0</td> <td style="text-align: center;">0</td> <td style="text-align: center;">1</td> <td></td> </tr> </tbody> </table> <p style="margin-left: 20px; margin-top: 5px;">NOTE: "1" : Shorted with a diode "0" : Open</p> | Destination | 3W | USA | Europe | Freq. | USA | 1 | 0 | 0 | | Europe | 0 | 1 | 0 | | Southeast Asia | 1 | 1 | 0 | | Japan | 0 | 0 | 0 | | Middle East | 0 | 0 | 1 | |
| Destination | 3W | USA | Europe | Freq. | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| USA | 1 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Europe | 0 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Southeast Asia | 1 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Japan | 0 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Middle East | 0 | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

RECEIVER SECTION

MICROPROCESSOR PERIPHERAL WIRING DIAGRAM

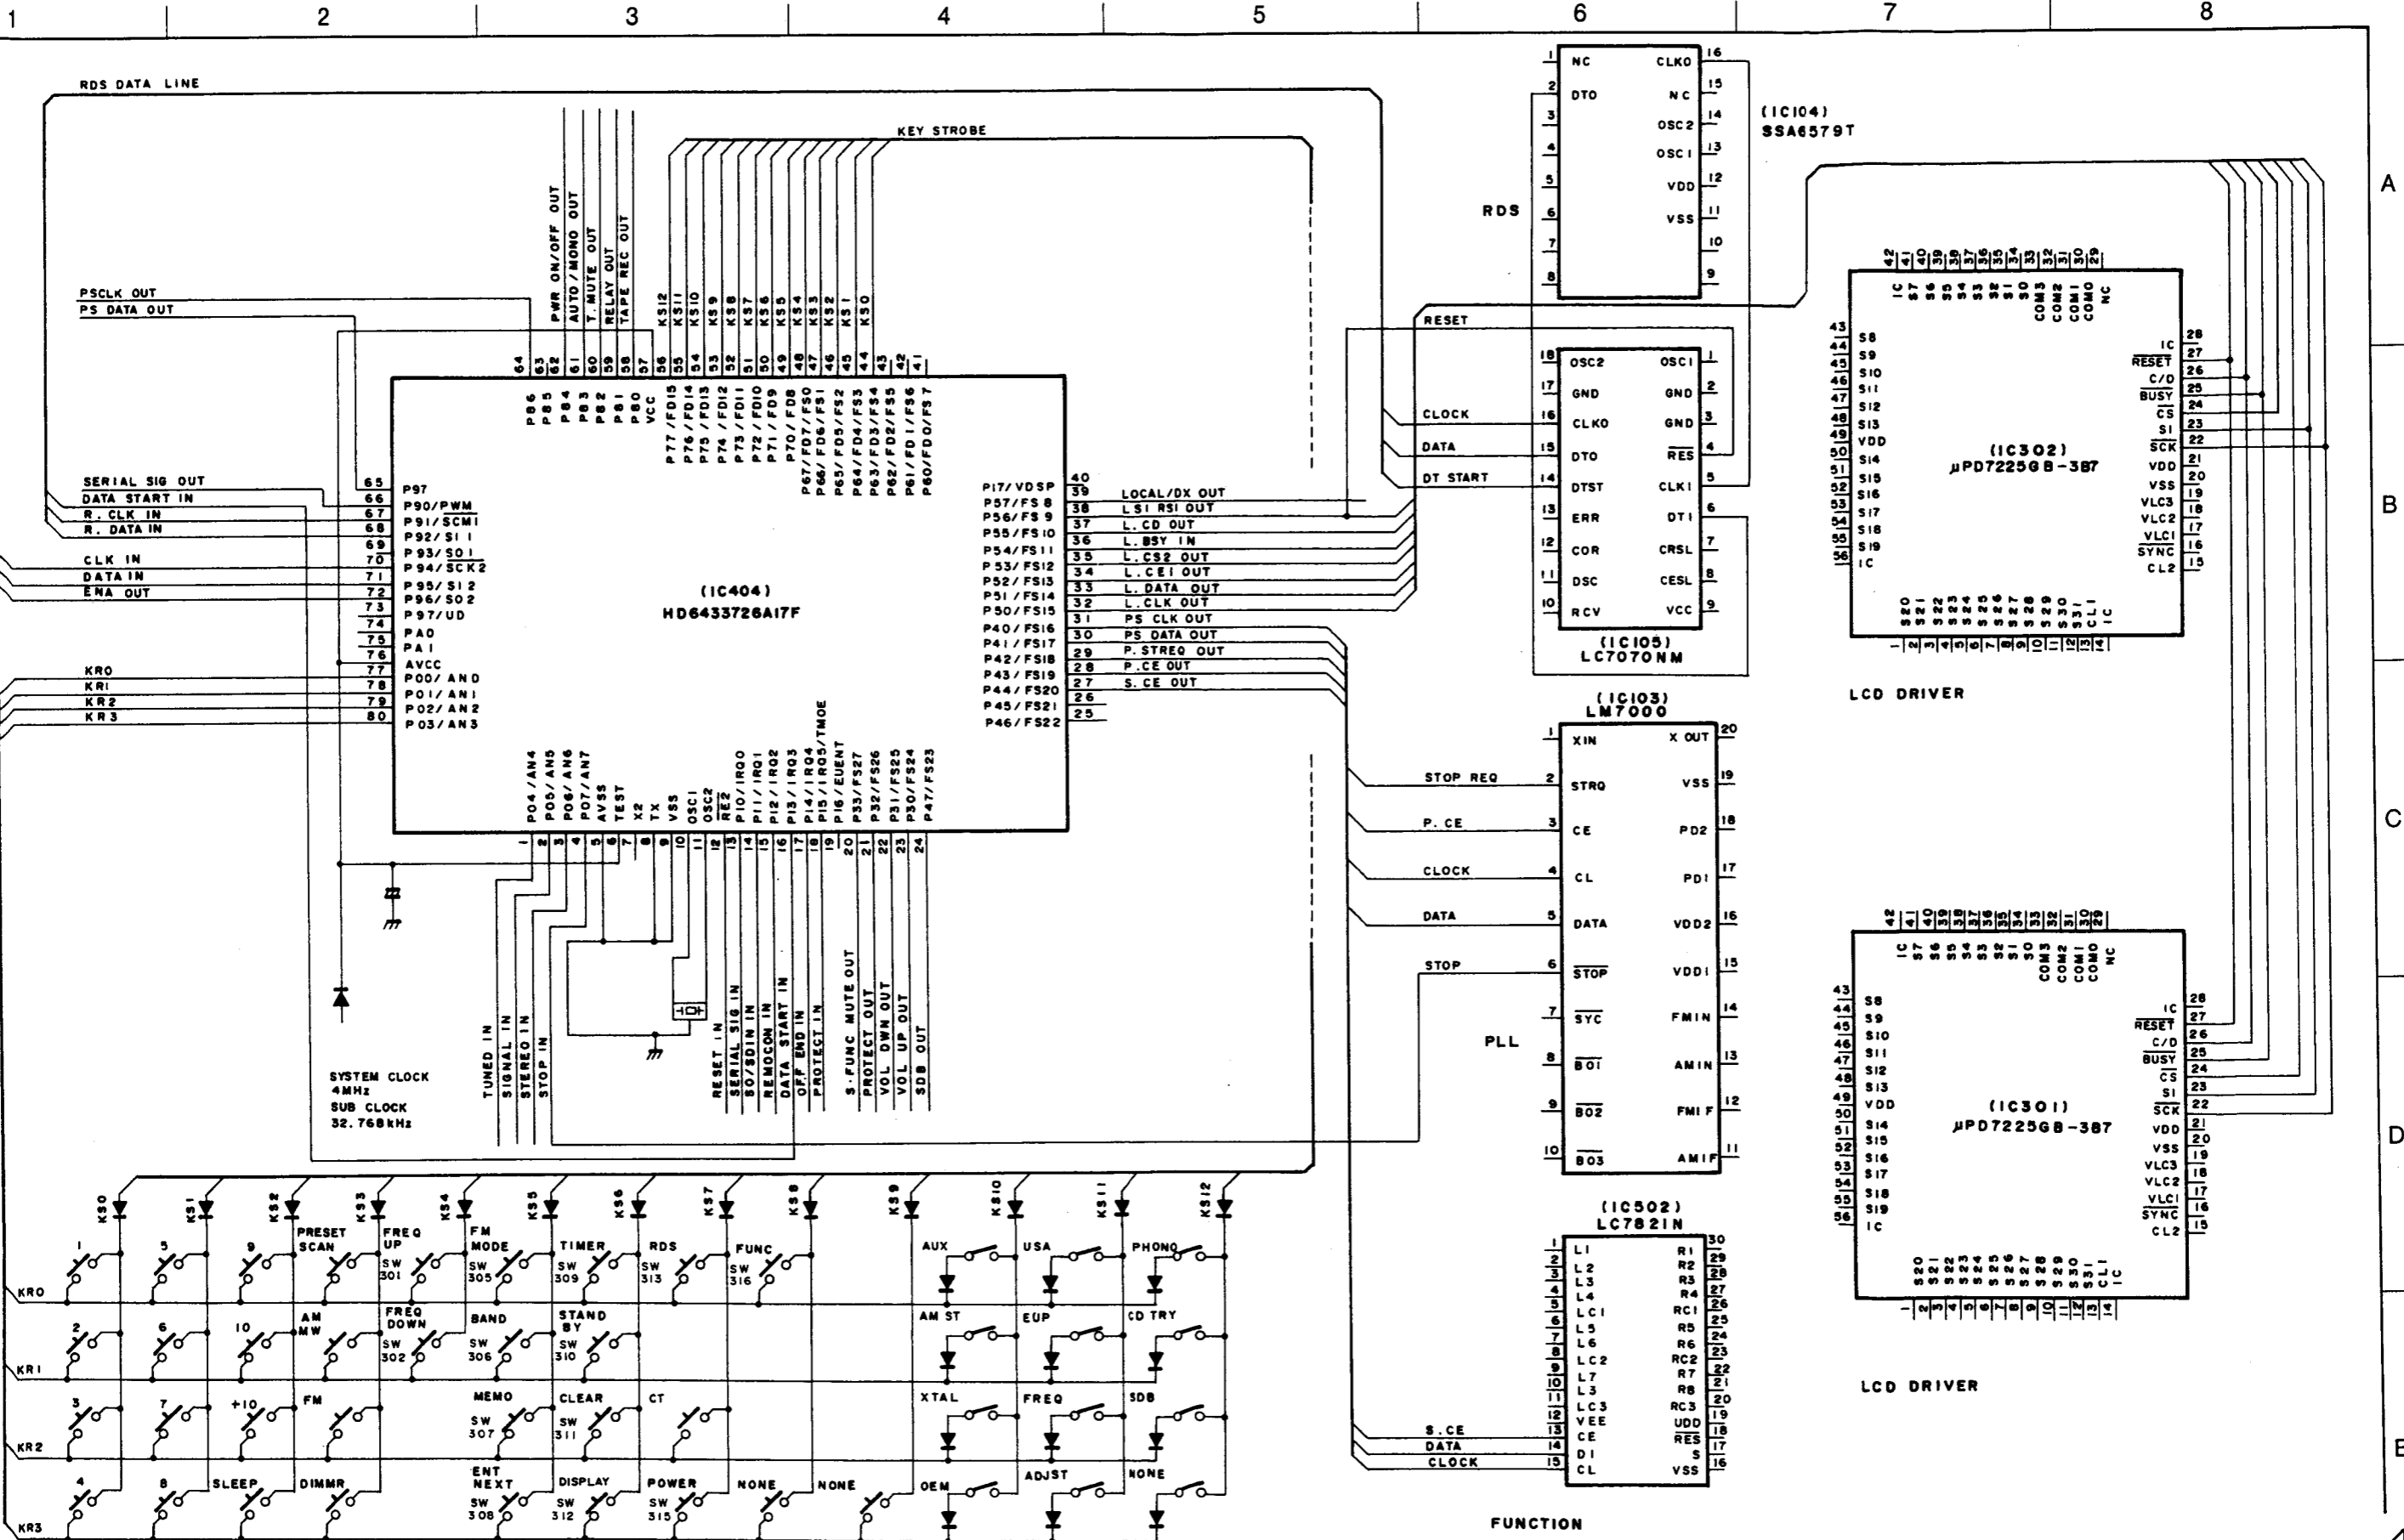

RECEIVER SECTION

PRINTED WIRING BOARD

1

2

3

4

5

6

7

8

KU-9333 TUNER UNIT ASS'Y

Component Side

| KU-9333 TUNER UNIT ASS'Y | |
|--------------------------|----------------|
| 1 | TUNER UNIT |
| 2 | DISPLAY UNIT |
| 3 | STONE UNIT |
| 4 | HEADPHONE UNIT |


A

B

C

D

E

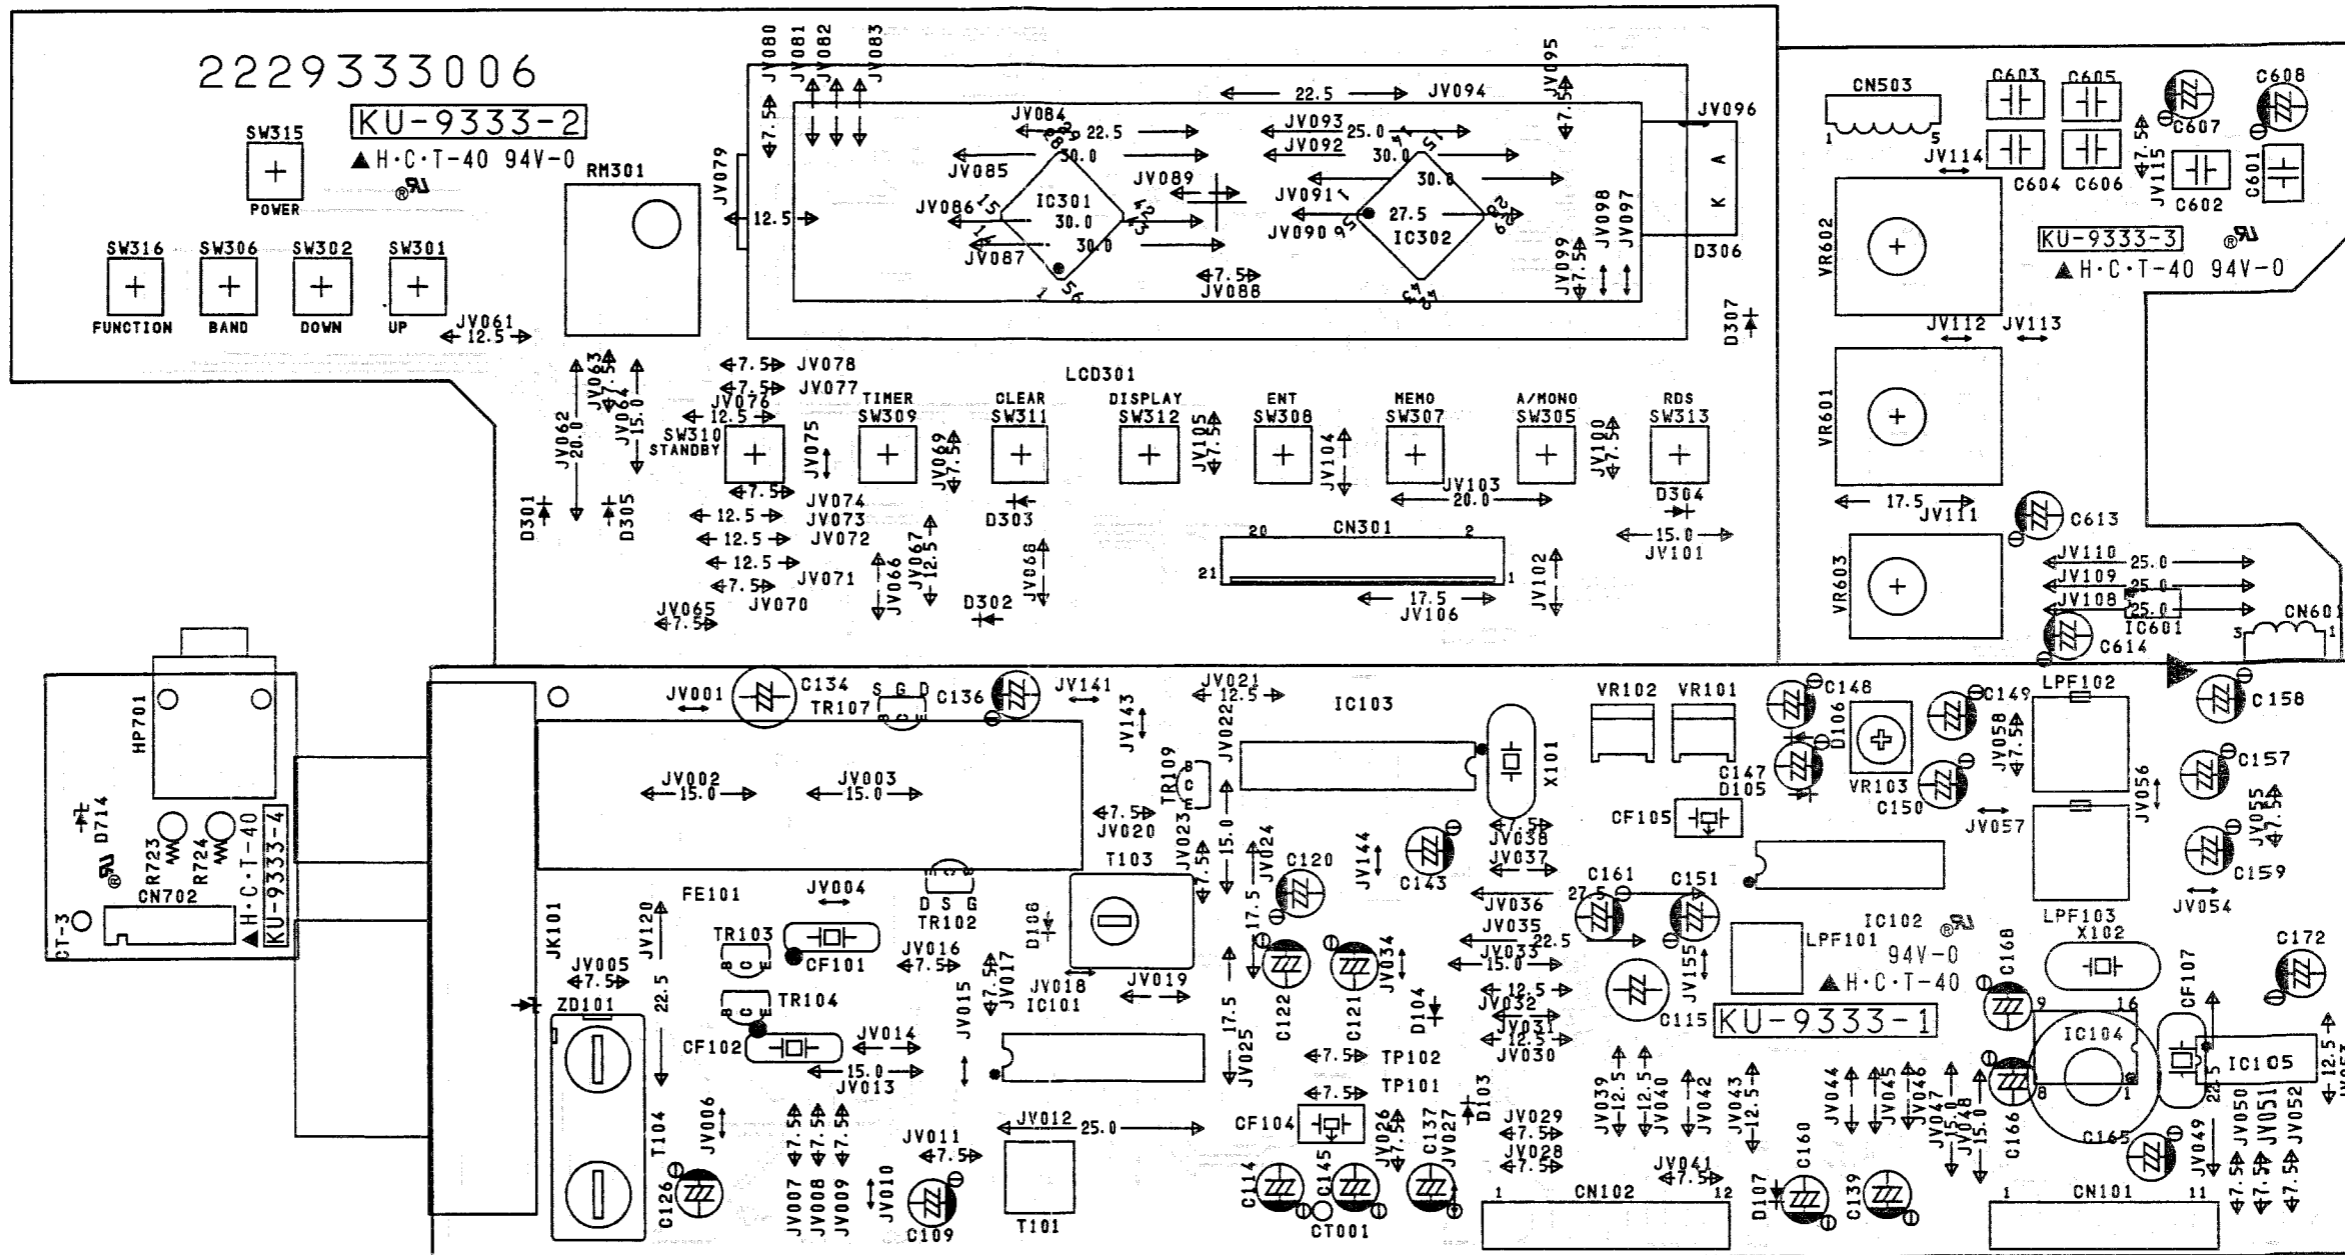

RECEIVER SECTION

1 2 3 4 5 6 7 8

Pattern Side


A

B

C

D


E

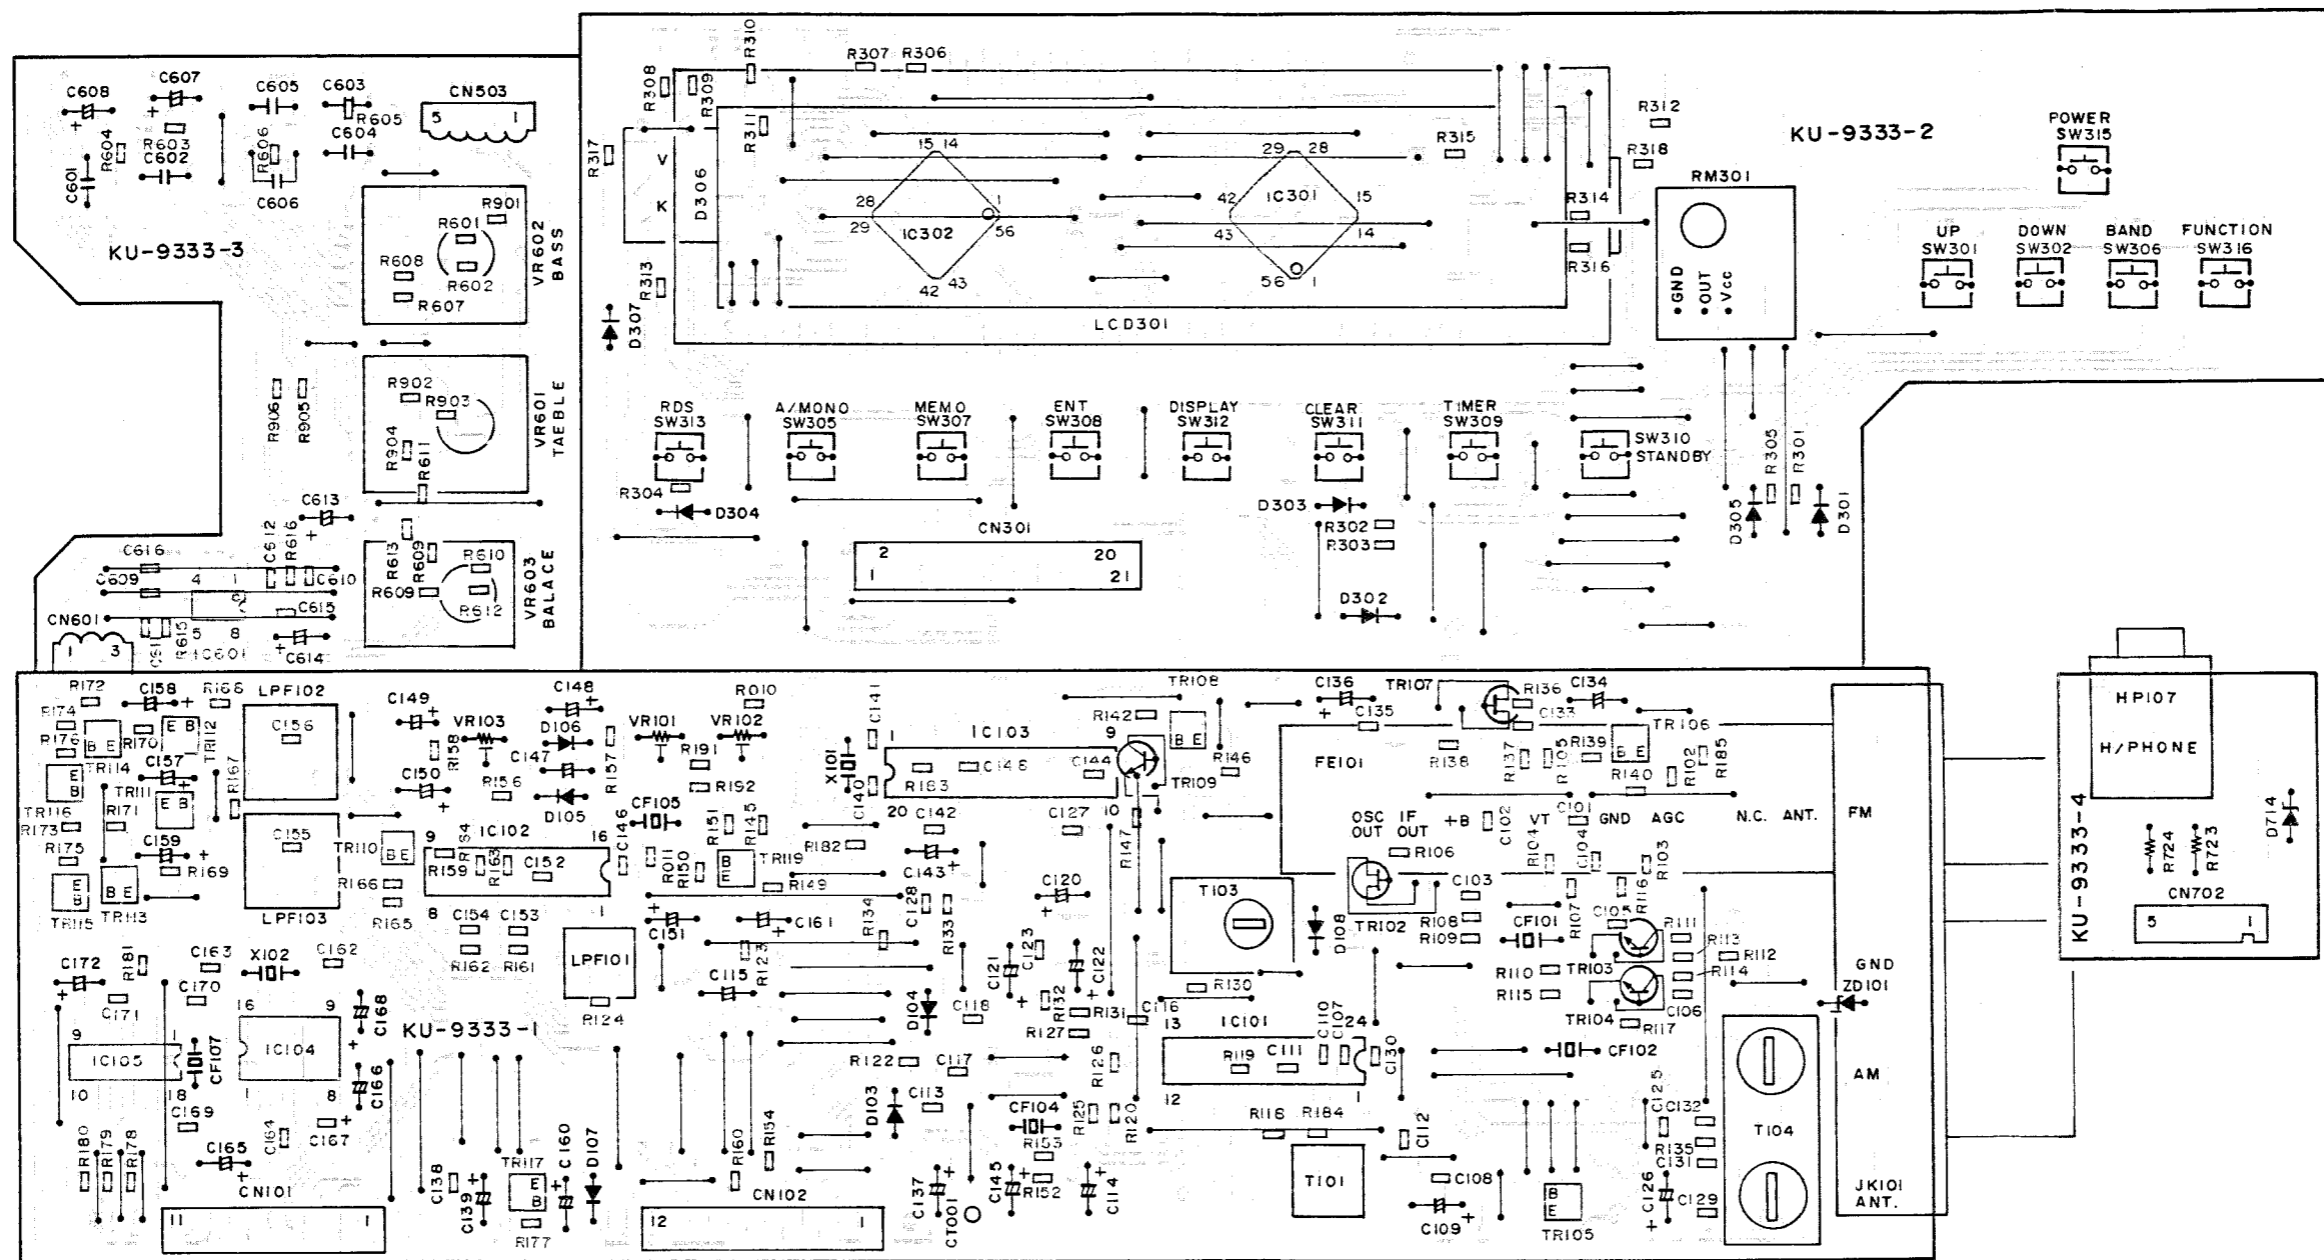

RECEIVER SECTION

1 2 3 4 5 6 7 8

Pattern Side

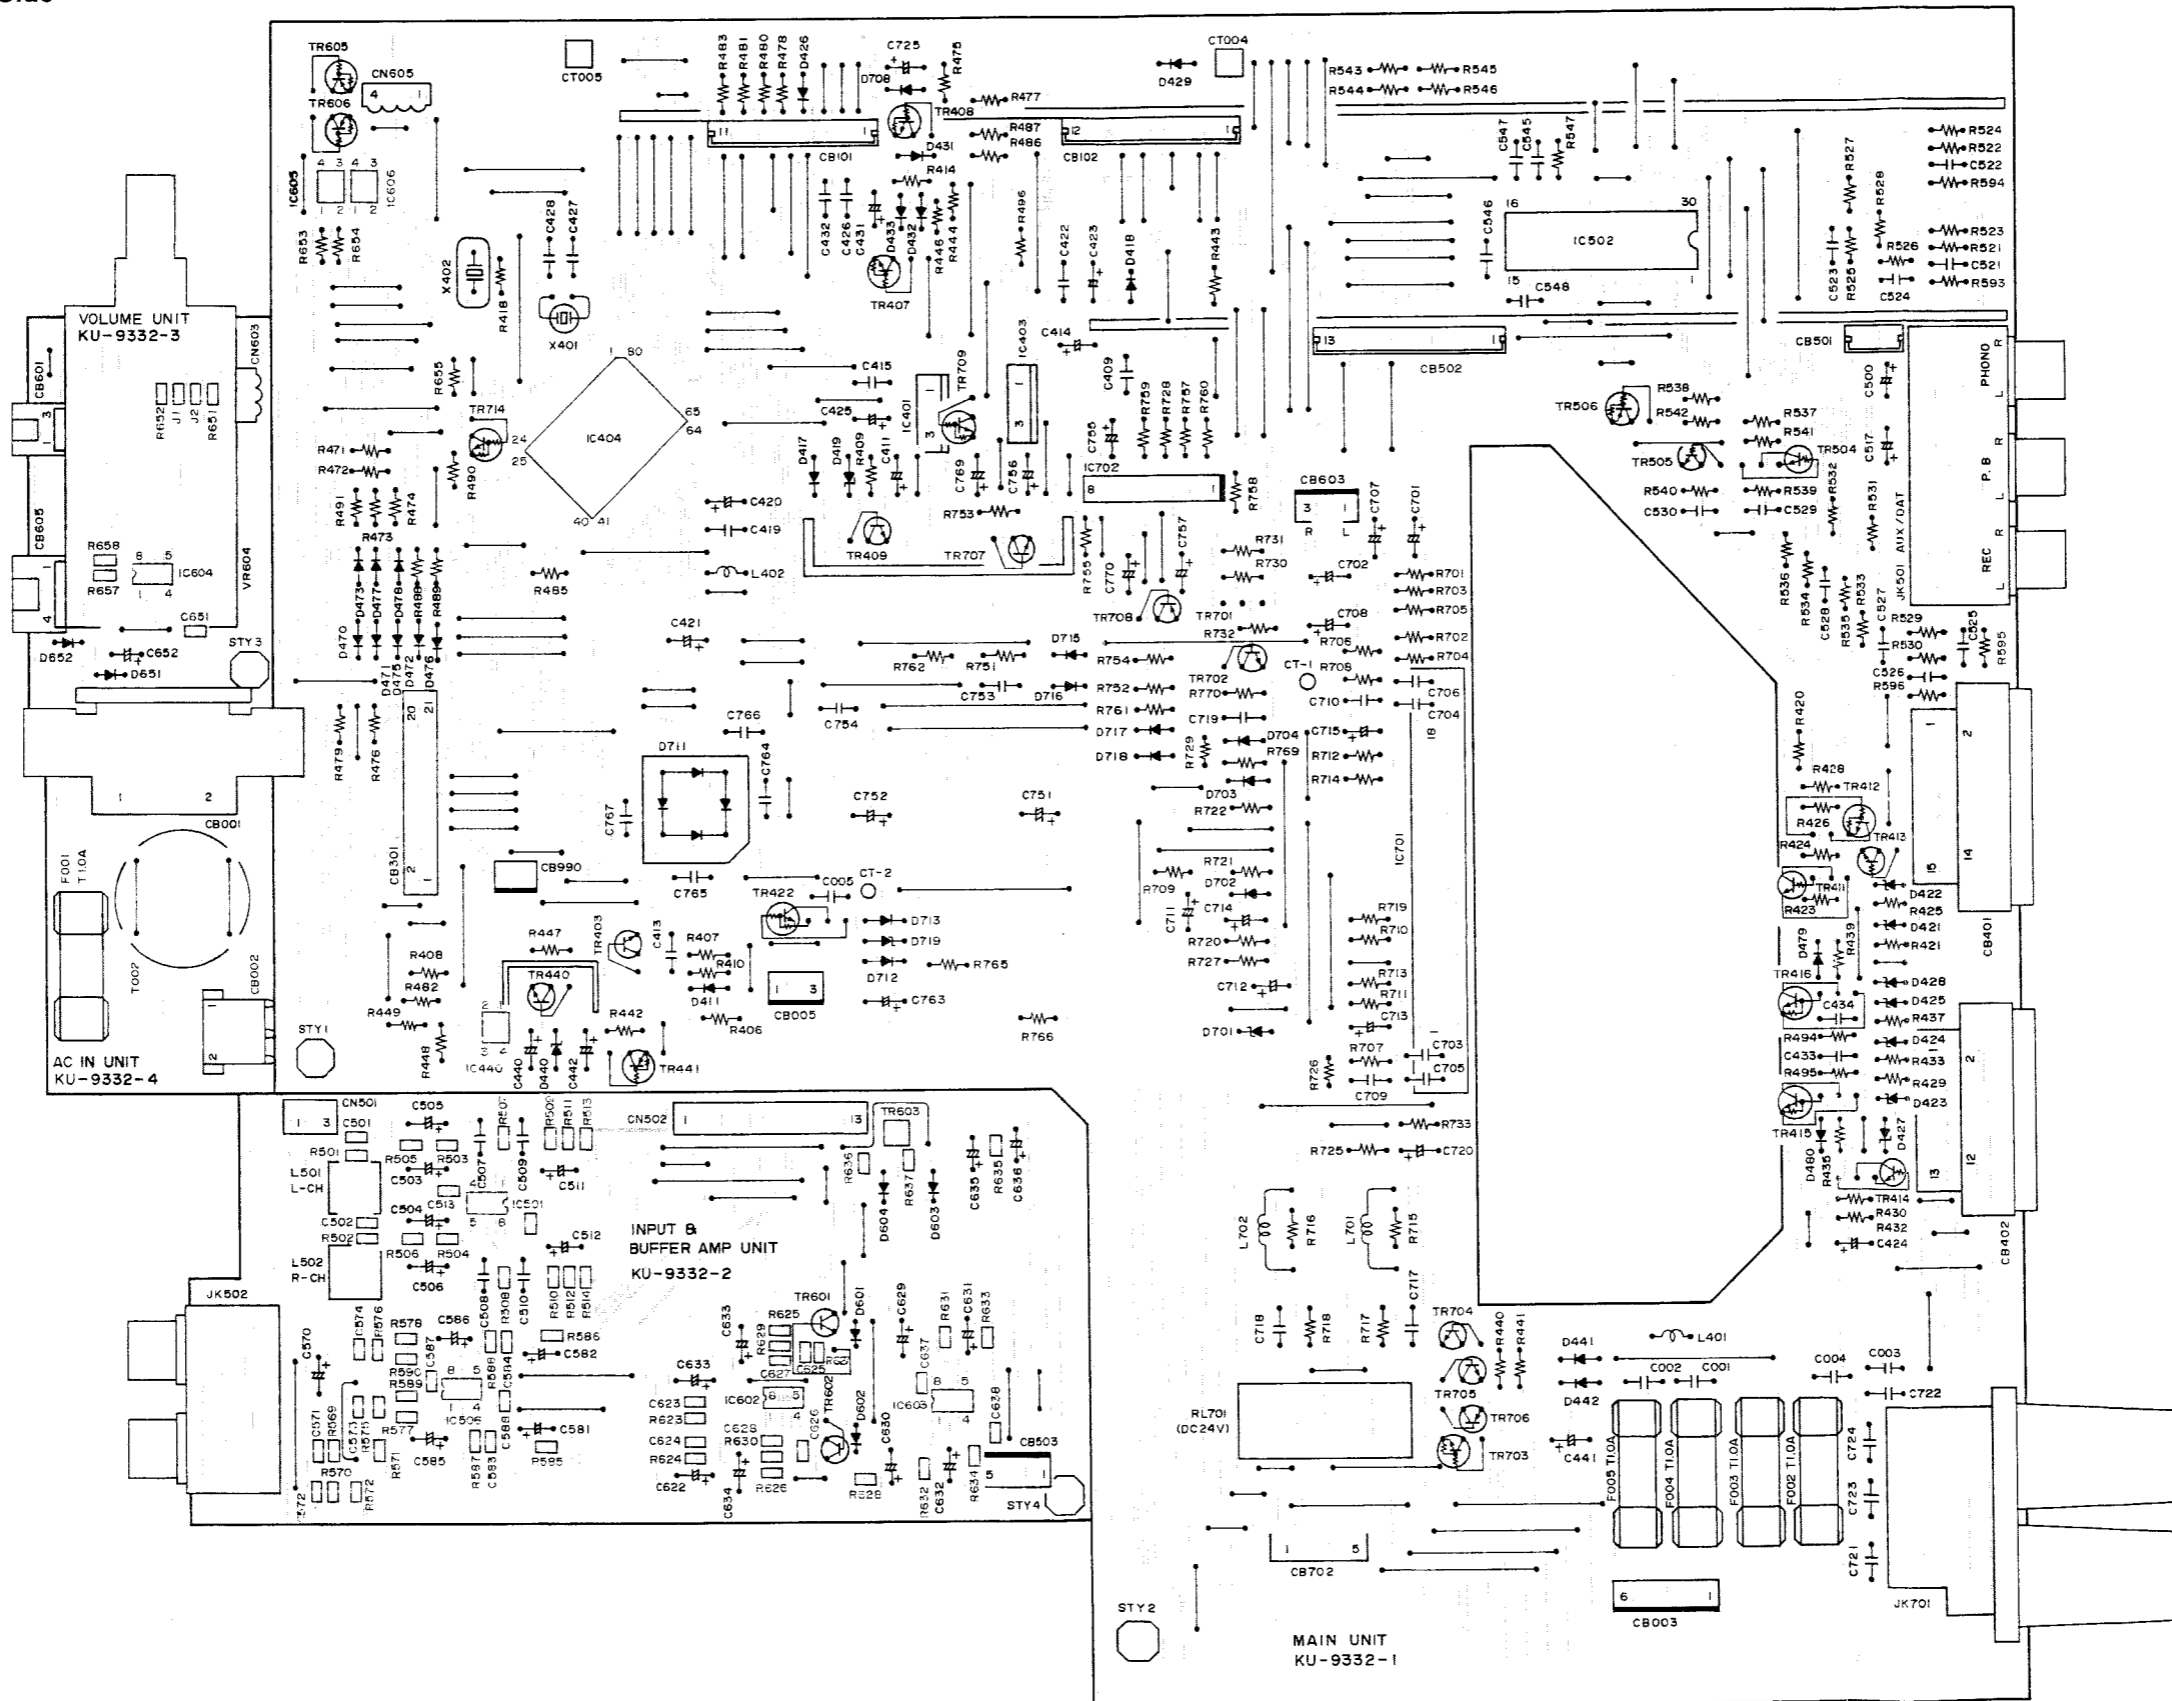

A
B
C
D
E

RECEIVER SECTION

NOTE ON PARTS LIST

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W. Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol Δ  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

● **Resistors**

Ex.: $\frac{RN}{Type} \frac{14K}{Shape\ and\ per-} \frac{2E}{Power} \frac{182}{Resist-} \frac{G}{Allowable} \frac{FR}{Others}$

| | | | |
|------------------------|-----------|----------|--------------------------|
| RD : Carbon Film | 2B : 1/8W | F : ±1% | P : Pulse-resistant type |
| RC : Composition | 2E : 1/4W | G : ±2% | NL : Low noise type |
| RS : Metalloxiide Film | 2H : 1/2W | J : ±5% | NB : Non-burning type |
| RW : Winding | 3A : 1W | K : ±10% | FR : Fuse-resistor |
| RN : Metal film | 3D : 2W | M : ±20% | F : Lead wire forming |
| RK : Metal mixture | 3F : 3W | | |
| | 3H : 5W | | |

* **Resistance**

$\frac{1}{\uparrow} \frac{8}{\uparrow} \frac{2}{\downarrow} \Rightarrow 1800\ ohm = 1.8\ kohm$
 ↑ Indicates number of zeros after effective number
 ↓ 2-digit effective number

• Units: ohm

$\frac{1}{\uparrow} \frac{R}{\uparrow} \frac{2}{\downarrow} \Rightarrow 1.2\ ohm$
 ↑ 1-digit effective number.
 ↓ 2-digit effective number, decimal point indicated by R.

• Units: ohm

* **Capacity (electrolyte only)**

$\frac{2}{\uparrow} \frac{2}{\uparrow} \frac{R}{\downarrow} \Rightarrow 2200\ \mu F$
 ↑ Indicates number of zeros after effective number.
 ↓ 2-digit effective number.

• Units: μF

$\frac{2}{\uparrow} \frac{R}{\uparrow} \frac{2}{\downarrow} \Rightarrow 2.2\ \mu F$
 ↑ 1-digit effective number.
 ↓ 2-digit effective number, decimal point indicated by R.

• Units: μF

● **Capacitors**

Ex.: $\frac{CE}{Type} \frac{04W}{Shape\ and\ per-} \frac{1H}{Dielectric} \frac{2R2}{Capacity} \frac{M}{Allowable} \frac{BP}{Others}$

| | | | |
|---------------------------------|-----------|-------------|----------------------------------|
| CE : Aluminum foil electrolyte | 0J : 6.3V | F : ±1% | HS : High stability type |
| CA : Aluminum solid electrolyte | 1A : 10V | G : ±2% | BP : Non-polar type |
| CS : Tantalum electrolyte | 1C : 16V | J : ±5% | HR : Ripple-resistant type |
| CQ : Film | 1E : 25V | K : ±10% | DL : For charge and discharge |
| CK : Ceramic | 1V : 35V | M : ±20% | HF : For assuring high frequency |
| CC : Ceramic | 1H : 50V | Z : +80% | U : UL part |
| CP : Oil | 2A : 100V | -20% | C : CSA part |
| CM : Mica | 2B : 125V | P : +100% | W : UL-CSA type |
| CF : Metallized | 2C : 160V | -0% | F : Lead wire forming |
| CH : Metallized | 2D : 200V | C : ±0.25pF | |
| | 2E : 250V | D : ±0.5pF | |
| | 2H : 500V | - | |
| | 2J : 630V | | |

* **Capacity (except electrolyte)**

$\frac{2}{\uparrow} \frac{R}{\uparrow} \frac{2}{\downarrow} \Rightarrow 2200pF = 2200\ \mu F = 0.002\ \mu F$
 ↑ (More than 2) — Indicates number of zeros after effective number.
 ↓ 2-digit effective number.

• Units: μF

$\frac{2}{\uparrow} \frac{2}{\uparrow} \frac{1}{\downarrow} \Rightarrow 220pF$
 ↑ (0 or 1) — Indicates number of zeros after effective number.
 ↓ 2-digit effective number.

• Units: pF

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

KU-9333 PARTS LIST OF UDRA-77

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|---|--------------|---------------------------|-------------------|----------|--------------|----------------------------|-------------|
| SEMICONDUCTORS GROUP | | | | | | | |
| IC101 | 263 0421 002 | IC LA1267 | | R118 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J |
| IC102 | 263 0284 004 | IC LA3410 | | R119 | 247 0011 960 | Chip Carbon 56 kohm 1/10W | RM73B--563J |
| IC103 | 262 0703 002 | IC LM7000 | | R120 | 247 0006 962 | Chip Carbon 470 ohm 1/10W | RM73B--471J |
| IC104 | 262 1701 906 | IC SAA6579T-T | | R122 | 247 0008 944 | Chip Carbon 2.7 kohm 1/10W | RM73B--272J |
| IC105 | 263 0614 903 | IC LC7070NM-TE-R | | R123 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J |
| IC301,302 | 263 0912 003 | IC UPD7225GB-3B7 | | R124 | 247 0007 990 | Chip Carbon 1.6 kohm 1/10W | RM73B--162J |
| IC601 | 263 0615 902 | IC BA15218F | | R125 | 247 0004 980 | Chip Carbon 820 ohm 1/10W | RM73B--820J |
| TR102 | 275 0051 909 | FET 2SK161(GR) | | R126 | 247 0010 990 | Chip Carbon 30 kohm 1/10W | RM73B--303J |
| TR103,104 | 273 0025 926 | Transistor 2SC461P(C) | | R127 | 247 0009 956 | Chip Carbon 7.5 kohm 1/10W | RM73B--752J |
| TR105 | 269 0083 901 | Transistor DTA114EK | Built in Resistor | R130~132 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| TR106 | 273 0426 907 | Transistor 2SC2412KLN | | R133 | 247 0011 986 | Chip Carbon 68 kohm 1/10W | RM73B--683J |
| TR107 | 275 0053 907 | FET 2SK365(BL/GR) | | R134 | 247 0011 944 | Chip Carbon 47 kohm 1/10W | RM73B--473J |
| TR108 | 269 0083 901 | Transistor DTA114EK | Built in Resistor | R135 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR109 | 273 0025 926 | Transistor 2SC461P(C) | | R136 | 247 0008 928 | Chip Carbon 2.2 kohm 1/10W | RM73B--222J |
| TR110 | 273 0384 900 | Transistor 2SC2412K(S) | | R137 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J |
| TR111,112 | 273 0426 907 | Transistor 2SC2412KLN | | R138,139 | 247 0005 989 | Chip Carbon 220 ohm 1/10W | RM73B--221J |
| TR113,114 | 269 0066 902 | Transistor DTC323TK | Built in Resistor | R140 | 247 0006 962 | Chip Carbon 470 ohm 1/10W | RM73B--471J |
| TR115,116 | 269 0091 906 | Transistor DTC143TK | Built in Resistor | R142 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J |
| TR117 | 269 0083 901 | Transistor DTA114EK | Built in Resistor | R145 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| TR119 | 273 0384 900 | Transistor 2SC2412K(S) | | R146,147 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J |
| D101 | 276 0643 941 | Zener Diode MTZJ3.6A | | R148 | 247 0012 969 | Chip Carbon 150 kohm 1/10W | RM73B--154J |
| D103~108 | 276 0616 907 | Diode 1SS252 | | R149 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J |
| D301~305 | 276 0616 907 | Diode 1SS252 | | R150 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J |
| D306 | 393 9470 009 | LED Ass'y | | R152 | 247 0011 931 | Chip Carbon 43 kohm 1/10W | RM73B--433J |
| D307 | 276 0616 907 | Diode 1SS252 | | R151 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| D714 | 276 0636 903 | Zener Diode MTZJ8.2B | | R153 | 247 0009 927 | Chip Carbon 5.6 kohm 1/10W | RM73B--562J |
| LC301 | 393 6006 007 | LCD(CG1206) Ass'y | | R154 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| RESISTORS GROUP (Not included Carbon Film ±5%, 1/4W Type. Refer to the Schematic Diagram for those Parts.) | | | | | | | |
| R011 | 247 0018 905 | Chip Carbon 0 ohm 1/10W | RM73B--0R0K | R156 | 247 0008 928 | Chip Carbon 2.2 kohm 1/10W | RM73B--222J |
| R102 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J | R157 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J |
| R103 | 247 0010 987 | Chip Carbon 27 kohm 1/10W | RM73B--273J | R158 | 247 0010 990 | Chip Carbon 27 kohm 1/10W | RM73B--273J |
| R104 | 247 0003 949 | Chip Carbon 22 ohm 1/10W | RM73B--220J | R159 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| R105 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J | R160 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| R106 | 247 0006 917 | Chip Carbon 300 ohm 1/10W | RM73B--301J | R161~164 | 247 0012 969 | Chip Carbon 150 kohm 1/10W | RM73B--154J |
| R107 | 247 0005 905 | Chip Carbon 100 ohm 1/10W | RM73B--101J | R165,166 | 247 0008 931 | Chip Carbon 2.4 kohm 1/10W | RM73B--242J |
| R108 | 247 0005 976 | Chip Carbon 200 ohm 1/10W | RM73B--201J | R167~170 | 247 0009 927 | Chip Carbon 5.6 kohm 1/10W | RM73B--562J |
| R109 | 247 0005 905 | Chip Carbon 100 ohm 1/10W | RM73B--101J | R171~174 | 274 0005 992 | Chip Carbon 240 ohm 1/10W | RM73B--241J |
| R110 | 247 0006 920 | Chip Carbon 330 ohm 1/10W | RM73B--331J | R175,176 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| R111 | 247 0010 945 | Chip Carbon 18 kohm 1/10W | RM73B--183J | R177 | 247 0009 927 | Chip Carbon 5.6 kohm 1/10W | RM73B--562J |
| R112 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J | R178~180 | 247 0011 944 | Chip Carbon 47 kohm 1/10W | RM73B--473J |
| R113,114 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J | R181~183 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| R115 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J | R184 | 247 0018 905 | Chip Carbon 0 ohm 1/10W | RM73B--0R0K |
| R116 | 247 0005 905 | Chip Carbon 100 ohm 1/10W | RM73B--101J | R185 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| R117 | 247 0006 920 | Chip Carbon 330 ohm 1/10W | RM73B--331J | R301~305 | 247 0011 944 | Chip Carbon 47 kohm 1/10W | RM73B--473J |
| | | | | R306 | 247 0012 985 | Chip Carbon 180 kohm 1/10W | RM73B--184J |
| | | | | R307 | 247 0018 905 | Chip Carbon 0 ohm 1/10W | RM73B--0R0K |
| | | | | R308~310 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| | | | | R311 | 247 0007 987 | Chip Carbon 1.5 kohm 1/10W | RM73B--152J |
| | | | | R312~316 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J |
| | | | | R317 | 247 0007 932 | Chip Carbon 910 ohm 1/10W | RM73B--911J |
| | | | | R318 | 247 0009 901 | Chip Carbon 4.7 kohm 1/10W | RM73B--472J |

RECEIVER SECTION

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|-------------------------|--------------|--|------------------------|--------------------|--------------|--------------------------------|------------------|
| R601,602 | 247 0009 974 | Chip Carbon 24 kohm 1/10W | RM73B--243J | C143 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) |
| R603,604 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J | C144 | 257 0004 961 | Chip Ceramic 100 pF/50V | CC73SL1H101J |
| R605,606 | 247 0005 989 | Chip Carbon 220 ohm 1/10W | RM73B--221J | C145 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) |
| R607,608 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J | C146 | 257 1013 951 | Chip Ceramic 0.047 μ F/25V | CK73B1E473K |
| R609,610 | 247 0011 928 | Chip Carbon 39 kohm 1/10W | RM73B--393J | C147 | 254 4260 935 | Electrolytic 0.47 μ F/50V | CE04W1HR47M(SME) |
| R611,612 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J | C148 | 254 4260 964 | Electrolytic 3.3 μ F/50V | CE04W1H3R3M(SME) |
| R613,614 | 247 0009 901 | Chip Carbon 4.7 kohm 1/10W | RM73B--472J | C149 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) |
| R615,616 | 247 0014 967 | Chip Carbon 1 Mohm 1/10W | RM73B--105J | C150 | 254 4260 948 | Electrolytic 1 μ F/50V | CE04W1H010M(SME) |
| Δ R723,724 | 244 2055 941 | Metal Oxide 330 ohm | RS14B3A331JNBS | C151 | 254 4254 938 | Electrolytic 47 μ F/16V | CE04W1C470M(SME) |
| R901~906 | 247 0018 905 | Chip Carbon 0 ohm 1/10W | RM73B--0R0K | C152~154 | 257 0005 986 | Chip Ceramic 330 pF/50V | CC73SL1H331J |
| VR102 | 211 6095 952 | Semi Fixed Resistor 100 kohm | V06QB104 | C155,156 | 257 0009 924 | Chip Ceramic 2200 pF/50V | CK73B1H222K |
| VR103 | 211 6093 970 | Semi Fixed Resistor 100 kohm | V06PB104 | C157 | 254 4254 938 | Electrolytic 47 μ F/16V | CE04W1C470M(SME) |
| VR601,602 | 211 9103 003 | Variable Resistor 50 kohm | V1420P15FB503K | C158,159 | 254 4260 951 | Electrolytic 2.2 μ F/50V | CE04W1H2R2M(SME) |
| VR603 | 211 9105 001 | Variable Resistor 50 kohm | V11P15FW503- | C160 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) |
| CAPACITORS GROUP | | | | C161 | 254 4252 930 | Electrolytic 100 μ F/10V | CE04W1A101M(SME) |
| C101~106 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | C162,163 | 257 0016 962 | Chip Ceramic 27 μ F/50V | CC73CH1H270J |
| C107,108 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | C164 | 257 0004 961 | Chip Ceramic 100 pF/50V | CC73SL1H101J |
| C109 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | C165 | 254 4260 951 | Electrolytic 2.2 μ F/50V | CE04W1H2R2M(SME) |
| C110 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | C166 | 254 4252 927 | Electrolytic 47 μ F/10V | CE04W1A470M(SME) |
| C111 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | C167 | 257 0006 943 | Chip Ceramic 560 pF/50V | CC73SL1H561J |
| C112 | 257 0002 921 | Chip Ceramic 10 pF/50V | CC73SL1H100D | C168 | 254 4252 927 | Electrolytic 47 μ F/10V | CE04W1A470M(SME) |
| C113 | 257 0003 946 | Chip Ceramic 33 pF/50V | CC73SL1H330J | C169,170 | 257 0003 933 | Chip Ceramic 30 pF/50V | CC73SL1H300J |
| C114 | 254 4260 964 | Electrolytic 3.3 μ F/50V | CE04W1H3R3M(SME) | C171 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z |
| C115 | 254 3056 933 | Electrolytic 3.3 μ F/50V (Bipole) | CE04D1H3R3MBP (SME) | C172 | 254 4252 927 | Electrolytic 47 μ F/10V | CE04W1A470M(SME) |
| C116 | 257 0007 900 | Chip Ceramic 1000 pF/50V | CC73SL1H102J | C601,602 | 255 1264 937 | Plastic Film 1800 pF/50V | CQ93M1H182J(B) |
| C117 | 257 0009 982 | Chip Ceramic 6800 pF/50V | CK73B1H682K | C603~606 | 255 1265 978 | Plastic Film 0.022 μ F/50V | CQ93M1H223J(B) |
| C118 | 257 1013 977 | Chip Ceramic 0.068 μ F/25V | CK73B1E683K | C607,608 | 254 4260 948 | Electrolytic 1 μ F/50V | CE04W1H010M(SME) |
| C120 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | C609~612 | 257 0005 944 | Chip Ceramic 220 pF/50V | CC73SL1H221J |
| C121 | 254 4260 964 | Electrolytic 3.3 μ F/50V | CE04W1H3R3M(SME) | C613,614 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) |
| C122 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) | C615,616 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z |
| C123 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | OTHER GROUP | | | |
| C125 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | | | (P.W Board) | (1) |
| C126 | 254 4254 938 | Electrolytic 47 μ F/16V | CE04W1C470M(SME) | X101 | 399 0075 003 | Crystal(7.2 MHz) | 1 |
| C127 | 257 0007 900 | Chip Ceramic 1000 pF/50V | CC73SL1H102J | X102 | 399 0178 007 | Crystal(4.332 MHz) | 1 |
| C128 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | CF101 | 261 0141 001 | FM Ceramic Filter | SK107M2-A0-20 1 |
| C129 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | CF102 | 261 0142 000 | FM Ceramic Filter | SK107M3-A0-20 1 |
| C130 | 257 0003 933 | Chip Ceramic 30 pF/50V | CC73SL1H300J | CF104 | 261 0101 009 | AM Ceramic Filter | BFU450C4N 1 |
| C131 | 257 0002 992 | Chip Ceramic 20 pF/50V | CC73SL1H200J | CF105 | 261 0103 007 | Ceramic Resonator | CSB456F11 1 |
| C132 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | CF107 | 399 0041 901 | Ceramic Resonator | CSA4.00MG 1 |
| C133 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | T101 | 231 2909 004 | FM IF Det. | 1 |
| C134 | 254 3056 917 | Electrolytic 1 μ F/50V (Bipole) | CE04D1H010MBP (SME) | T103 | 231 3904 008 | AM IFT | 1 |
| C135 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | T104 | 231 1913 004 | MW Ant-Osc. Coil | 1 |
| C136 | 254 4254 938 | Electrolytic 47 μ F/16V | CE04W1C470M(SME) | LP101 | 232 9010 009 | Antibirdie Filter | 1 |
| C137 | 254 4254 941 | Electrolytic 100 μ F/16V | CE04W1C101M(SME) | LP102,103 | 232 9011 008 | Low Pass Filter | 1 |
| C138 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | FE101 | 216 9013 004 | FM Front End(U) | 1 |
| C139 | 254 4252 930 | Electrolytic 100 μ F/10V | CE04W1A101M(SME) | | | | |
| C140,141 | 257 0016 933 | Chip Ceramic 15 pF/50V | CC73CH1H150J | | | | |
| C142 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | | | | |

RECEIVER SECTION

| Ref. No. | Part No. | Part Name | Remarks | Qty |
|-----------|--------------|--------------------------|------------|-----|
| JK101 | 205 0847 004 | 3 P Ant. Terminal(PAL/F) | | 1 |
| RM301 | 499 0150 008 | Remocon Sensor | SBX1610-52 | 1 |
| | 212 5604 907 | Tact Switch | | 13 |
| HP701 | 204 8370 020 | Head Phone Jack(D3.6) | | 1 |
| CN101 | 205 0805 059 | 11 P Conn. Socket(9176) | | 1 |
| CN102 | 205 0987 003 | 12 P Conn. Socket(9176) | | 1 |
| CN503 | 203 8211 092 | 5 P KR-DA Conn. Cord | | 1 |
| CN601 | 203 4632 028 | 3 P KR-DA Conn. Cord | | 1 |
| CN702 | 203 8346 022 | 5 P EH-SCN Conn. Cord | | 1 |
| CT001,003 | 009 9037 013 | 1 P Wire Ass'y | | 2 |

RECEIVER SECTION

KU-9332 PARTS LIST


| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|-----------------------------|--------------|----------------------------------|-------------------|-----------|--------------|---------------------------------|----------------|
| SEMICONDUCTORS GROUP | | | | D441,442 | 276 0553 905 | Diode 1SR35-200A | |
| IC401 | 263 1010 001 | IC BA178M06 | | D472 | 276 0616 907 | Diode 1SS252 | |
| IC403 | 263 1004 004 | IC BA178M12 | | D479,480 | 276 0616 907 | Diode 1SS252 | |
| IC404 | 262 1887 008 | IC HD6433726A17F | | D601,602 | 276 0616 907 | Diode 1SS252 | |
| IC440 | 262 0150 914 | IC TLP181(BL/GR) | | D604 | 276 0616 907 | Diode 1SS252 | |
| IC501 | 263 1032 908 | IC NJM2082MD | | D651,652 | 276 0616 907 | Diode 1SS252 | |
| IC502 | 262 1227 008 | IC LC7821 | | D702~704 | 276 0616 907 | Diode 1SS252 | |
| IC506 | 263 0615 902 | IC BA15218F | | D706 | 276 0616 907 | Diode 1SS252 | |
| IC602,603 | 263 0615 902 | IC BA15218F | | D708 | 276 0616 907 | Diode 1SS252 | |
| IC604 | 263 0905 900 | IC BA6208F | | △D711 | 276 0338 007 | Diode S4VB20F | Bridge |
| IC605,606 | 262 0150 914 | IC TLP181(BL/GR) | | D712,713 | 276 0553 905 | Diode 1SR35-200A | |
| IC701 | 265 0073 003 | IC STK4152MK2 | | D715~718 | 276 0553 905 | Diode 1SR35-200A | |
| IC702 | 263 0646 007 | IC M5230L | | D719 | 276 0644 966 | Zener Diode MTZJ12A | |
| TR403 | 273 0388 906 | Transistor 2SC1740S(E) | | △R447 | 244 2050 933 | Metal Oxide 180 ohm | RS14B3A181JNBS |
| TR440 | 274 0120 002 | Transistor 2SD1762(E/F) | | △R448,449 | 244 2051 987 | Metal Oxide 4.7 ohm | RS14B3A4R7JNBS |
| TR407,408 | 269 0020 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R501,502 | 247 0009 901 | Chip Carbon 4.7 kohm 1/10W | RM73B--472J |
| TR409 | 274 0120 002 | Transistor 2SD1762(E/F) | | R503,504 | 247 0011 957 | Chip Carbon 51 kohm 1/10W | RM73B--513J |
| TR411 | 269 0075 906 | Transistor DTC124TS(22K) | Built in Resistor | R505,506 | 247 0006 975 | Chip Carbon 510 ohm 1/10W | RM73B--511J |
| TR412 | 269 0020 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R507,508 | 247 0013 926 | Chip Carbon 270 kohm 1/10W | RM73B--274J |
| TR413,414 | 269 0075 906 | Transistor DTC124TS(22K) | Built in Resistor | R509,510 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J |
| TR415,416 | 269 0145 904 | Transistor DTC124GS(TP) | Built in Resistor | R511,512 | 247 0013 984 | Chip Carbon 470 kohm 1/10W | RM73B--474J |
| TR422 | 269 0020 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R513,514 | 247 0005 905 | Chip Carbon 100 ohm 1/10W | RM73B--101J |
| TR441 | 269 0046 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R569,570 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR504,505 | 269 0099 908 | Transistor DTC143TS(4.7K) | Built in Resistor | R571,572 | 247 0006 962 | Chip Carbon 470 ohm 1/10W | RM73B--471J |
| TR506 | 269 0093 904 | Transistor DTA144ES (47K-47K) | Built in Resistor | R575,576 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR601,602 | 275 0058 902 | FET 2SJ40(C)/(D) | | R577,578 | 247 0006 962 | Chip Carbon 470 ohm 1/10W | RM73B--471J |
| TR605,606 | 269 0046 906 | Transistor DTA114ES (10K-10K) | Built in Resistor | R585,586 | 247 0013 984 | Chip Carbon 470 kohm 1/10W | RM73B--474J |
| TR702 | 273 0432 904 | Transistor 2SC2389STP(S/E) | | R587~590 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR703 | 269 0020 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R623,624 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR704,705 | 273 0388 906 | Transistor 2SC1740S(E) | | R627,628 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR706 | 271 0192 905 | Transistor 2SA933S(S) | | R629,630 | 247 0009 901 | Chip Carbon 4.7 kohm 1/10W | RM73B--472J |
| TR707 | 274 0120 002 | Transistor 2SD1762(E/F) | | R631,632 | 247 0006 920 | Chip Carbon 3.3 kohm 1/10W | RM73B--332J |
| TR708 | 272 0107 919 | Transistor 2SB1328(P/Q) | | R633,634 | 247 0012 901 | Chip Carbon 82 kohm 1/10W | RM73B--823J |
| TR709 | 269 0020 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R635 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J |
| TR714 | 269 0020 906 | Transistor DTC114ES (10K-10K) | Built in Resistor | R636 | 247 0009 927 | Chip Carbon 5.6 kohm 1/10W | RM73B--562J |
| D411 | 276 0616 907 | Diode 1SS252 | | R651,652 | 247 0011 944 | Chip Carbon 47 kohm 1/10W | RM73B--473J |
| D417,418 | 276 0553 905 | Diode 1SR35-200A | | R659 | 247 0018 905 | Chip Carbon 0 ohm 1/10W | RM73B--0R0K |
| D419 | 276 0645 923 | Zener Diode MTZJ22A | | △R709,710 | 241 2377 947 | Carbon Film 100 ohm 1/4W(NB) | RD14B2E101JNBS |
| D421~428 | 276 0636 903 | Zener Diode MTZJ8.2B | | △R717,718 | 244 2051 987 | Metal Oxide 4.7 kohm | RS14B3A4R7JNBS |
| D429 | 276 0616 907 | Diode 1SS252 | | △R721,722 | 244 2043 982 | Metal Oxide 0.22 ohm | RS14B3AR22JNBS |
| D431 | 276 0616 907 | Diode 1SS252 | | △R753,754 | 241 2379 929 | Carbon Film 650 ohm 1/4W(NB) | RD14B2E651JNBS |
| D432 | 276 0634 905 | Zener Diode MTZJ3.3A | | △R765 | 244 2050 933 | Metal Oxide 180 ohm | RS14B3A181JNBS |
| D440 | 276 0644 908 | Zener Diode MTZJ6.8A | | △R766 | 244 2051 958 | Metal Oxide 220 ohm | RS14B3A221JNBS |
| | | | | △R995 | 241 2377 947 | Carbon Film 100 ohm 1/4W(NB) | RD14B2E101JNBS |

RECEIVER SECTION


| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks | Q'ty |
|-------------------------|--------------|--------------------------------------|-------------------|-------------------|--------------|-------------------------------|------------|------|
| CAPACITORS GROUP | | | | L501,502 | 235 9003 002 | Inductor | | 2 |
| C001,002 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | L701,702 | 235 0007 007 | Inductor | | 2 |
| C409 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | Δ T002 | 239 8019 002 | Line Filter Coil | | 1 |
| C411 | 254 4254 941 | Electrolytic 100 μ F/16V | CE04W1C101M(SME) | RL701 | 214 0167 005 | Relay(G5Z-2A) | | 1 |
| C413 | 253 9037 908 | Chip Ceramic 0.1 μ F/50V | CK45=1H104Z(BC) | X402 | 399 0191 903 | Ceramic Resonator | CST4.00MGW | 1 |
| C414 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | Δ F001~005 | 206 1075 001 | Fuse(1A) | | 5 |
| C415 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | JK501 | 205 0754 003 | 6 P Pin Jack (GND) | | 1 |
| C419 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | JK502 | 204 8519 001 | 4 P Pin Jack (GND) | | 1 |
| C420 | 254 2452 930 | Electrolytic 100 μ F/10V | CE04W1A101M(SME) | JK701 | 205 0551 002 | 4 P Terminal | | 1 |
| C421 | 259 0007 702 | Super Capacitor 8200 μ F/5.5V | SB CAP==822=C | | 417 9050 000 | Radiator | | 1 |
| C422 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | 473 7500 015 | Tapping Screw(P) 3 \times 8 | | 2 |
| C423 | 254 2452 930 | Electrolytic 100 μ F/10V | CE04W1A101M(SME) | | 417 0114 000 | Radiator | | 1 |
| C424 | 254 4252 969 | Electrolytic 470 μ F/10V | CE04W1A471M(SME) | | 473 7500 015 | Tapping Screw(P) 3 \times 8 | | 1 |
| C425 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | CN501 | 205 0805 017 | 3 P Conn. Socket | | 1 |
| C426 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | CN502 | 205 0987 029 | 13 P Conn. Socket(9176) | | 1 |
| C431 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) | CN602 | 205 0355 033 | 3 P KR Conn. Base(L) | | 1 |
| C432 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | CN603 | 203 5133 005 | 3 P KR-DA Shield Cord | | 1 |
| C433,434 | 254 1193 934 | Chip Ceramic 100 pF/50V | CK14B1H101K | CN605 | 203 6214 017 | 4 P KR-DA Conn. Cord | | 1 |
| C440 | 254 4254 941 | Electrolytic 100 μ F/16V | CE04W1C101M(SME) | CB001 | 203 2349 009 | 2 P Inlet | | 1 |
| C441 | 254 4254 789 | Electrolytic 1000 μ F/16V | CE04W1C102M(SME) | Δ CB002 | 205 0453 003 | 2 P VH Conn. Base(L) | | 1 |
| C442 | 254 4254 941 | Electrolytic 100 μ F/16V | CE04W1C101M(SME) | CB003 | 205 0190 065 | 6 P NH Connector Base | | 1 |
| C501,502 | 257 0005 944 | Chip Ceramic 220 pF/50V | CC73SL1H221J | CB005 | 205 0190 036 | 3 P NH Connector Base | | 1 |
| C503,504 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | CB101 | 205 0806 058 | 11 P Conn. Base(9115) | | 1 |
| C505,506 | 254 4252 927 | Electrolytic 47 μ F/10V | CE04W1A470M(SME) | CB102 | 205 0988 002 | 12 P Conn. Base(9115) | | 1 |
| C511,512 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | CB301 | | | | |
| C513,514 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | CB401 | 204 8284 022 | 15 P System Socket | | 1 |
| C529,530 | 253 4444 907 | Chip Ceramic 220 pF/50V | CC45SL1H221J | CB402 | 205 0730 056 | 13 P System Socket(BU) | | 1 |
| C571~574 | 257 0005 902 | Chip Ceramic 180 pF/50V | CC73SL1H181J | CB501 | 205 0806 016 | 3 P Conn. Base | | 1 |
| C581,582 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) | CB502 | 205 0988 028 | 13 P Conn. Base(9115) | | 1 |
| C583,584 | 257 0005 902 | Chip Ceramic 150 pF/50V | CC73SL1H151J | CB503 | 205 0343 058 | 5 P Conn. Base | | 1 |
| C585,586 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | CB603 | 205 0343 032 | 3 P Conn. Base(KR-PH) | | 1 |
| C587,588 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | CB605 | 205 0355 046 | 4 P KR Conn. Base(L) | | 1 |
| C621,622 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) | CB702 | 205 0233 058 | 5 P EH Connector Base | | 1 |
| C623~626 | 257 0005 986 | Chip Ceramic 330 pF/50V | CC73SL1H331J | | 412 9483 009 | Earth Plate | | 1 |
| C627,628 | 257 0005 986 | Chip Ceramic 330 pF/50V | CC73SL1H331J | | 009 9043 007 | 1 P Wire Ass'y | | 1 |
| C631,632 | 254 4260 922 | Electrolytic 0.33 μ F/50V | CE04W1HR33M(SME) | | 205 0452 017 | Style Pin | | 3 |
| C633,634 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | | | | | |
| C637,638 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | | | | | |
| C651 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | | | | | |
| C652 | 253 4444 907 | Chip Ceramic 220 pF/50V | CC45SL1H221J | | | | | |
| C717,718 | 256 1034 937 | Metarized 0.047 μ F/50V | CF93A1H473J | | | | | |
| C720 | 254 4250 945 | Electrolytic 330 μ F/6.3V | CE04W0J331M(SME) | | | | | |
| C707,708 | 254 4252 901 | Electrolytic 22 μ F/10V | CE04W1A220M(SME) | | | | | |
| C751,752 | 254 4424 700 | Electrolytic 4700 μ F/45V | CE04W--472M | | | | | |
| C755 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) | | | | | |
| C769,770 | 254 4258 905 | Electrolytic 4.7 μ F/35V | CE04W1V4R7M(SME) | | | | | |
| OTHER GROUP | | | | | | | | |
| | | (P.W.Board) | | | | | | (1) |
| L401,402 | 235 0060 950 | Inductor(10 μ H) | | | | | | 2 |

REMOTE CONTROL UNIT (RC-800 : Part No. 499 9010 000)

● SCHEMATIC DIAGRAM

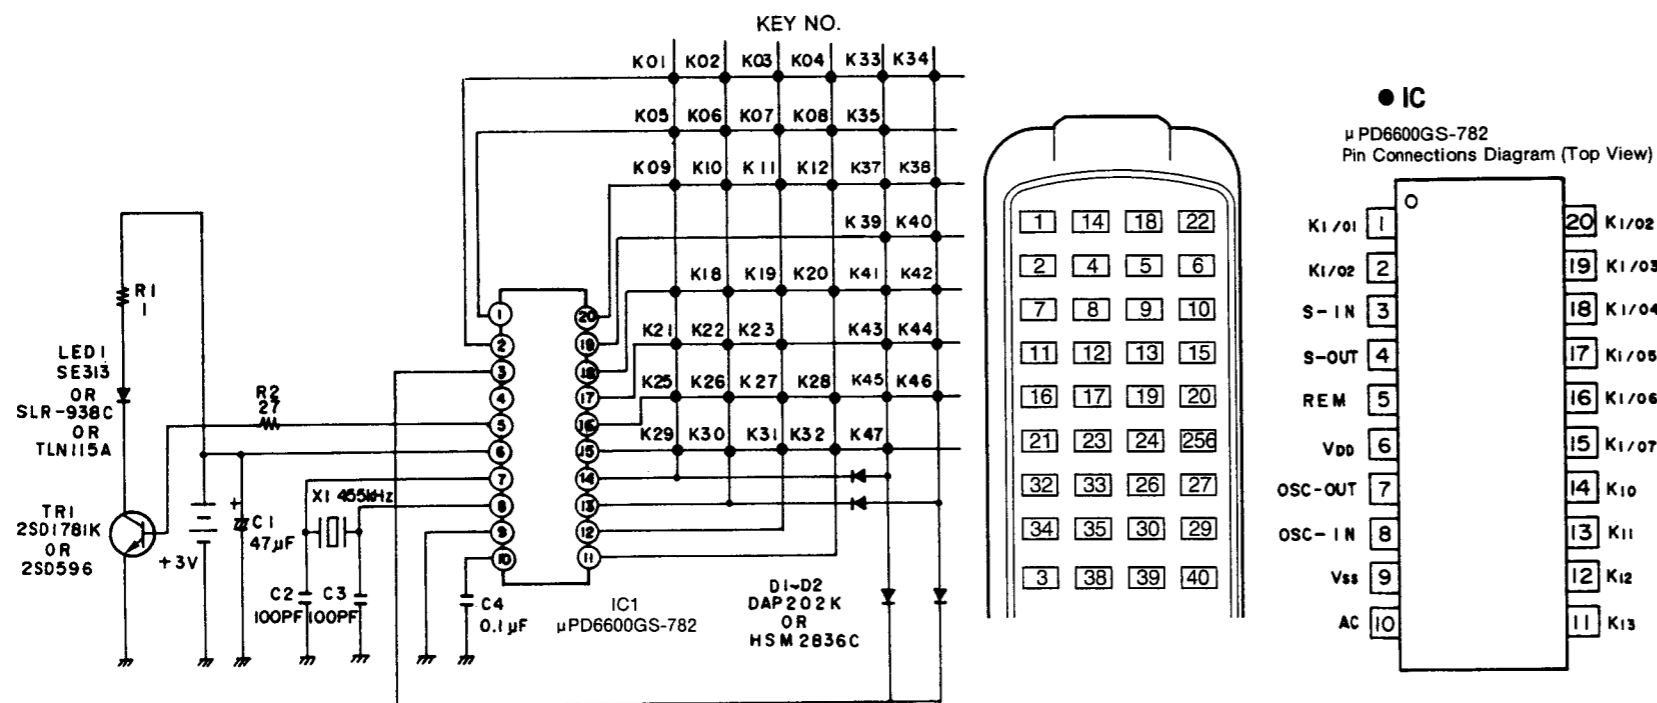


● IC
 μ PD6600GS-782
Pin Connections Diagram (Top View)

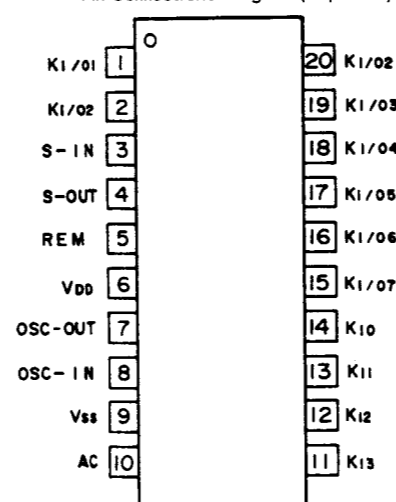

NOTE:

1. Unspecified resistance values are in ohm, K indicates kohm, and M indicates Mohm.
2. Unspecified capacitance values are in μ F, p indicates pF.
3. The voltages of the various section represent the values when there is no signal.
4. This wiring diagram is the basic wiring diagram. Note that it may be changed for the purpose of improvement, etc.

BLOCK DIAGRAM

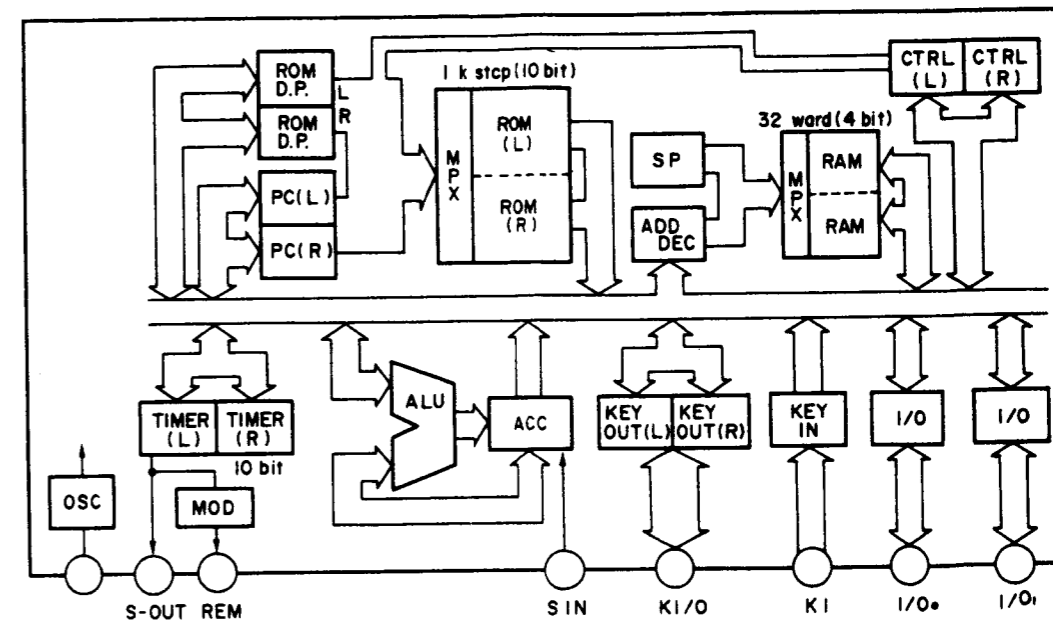


| KEY POSITION | KEY NO. | FUNCTION | C ₁ | D1 | C ₁₅ | C ₁ | D2 | C ₁₅ | KEY POSITION | KEY NO. | FUNCTION | C ₁ | D1 | C ₁₅ | C ₁ | D2 | C ₁₅ |
|--------------|---------|----------|----------------|-----------------|-----------------|----------------|-----------------|-----------------|--------------|---------|----------|----------------|-----------------|-----------------|----------------|-----------------|-----------------|
| 1 | K05 | POWER | | 001100000101000 | | | Same as left. | | 21 | K33 | 9 | | 001101100011000 | | | 000100101001000 | |
| 2 | K07 | SLEEP | | 001100100111000 | | | Same as left. | | 22 | K38 | CANCEL | | 000101000101000 | | | Same as left. | |
| 3 | K06 | FUNCTION | | 001101111101000 | | | Same as left. | | 23 | K34 | 10 | | 001100010011000 | | | 000101101001000 | |
| 4 | K46 | ■ | | 000100111101000 | | | Same as left. | | 24 | K35 | +10 | | 001101111011000 | | | 000100011001000 | |
| 5 | K44 | ▶ | | 000100011101000 | | | Same as left. | | 25 | K10 | BAND | | 001101110101100 | | | Same as left. | |
| 6 | K45 | | | 000101011101000 | | | Same as left. | | 26 | K12 | TUNING ▼ | | 001100101101100 | | | Same as left. | |
| 7 | K43 | ◀◀ | | 000101101101000 | | | Same as left. | | 27 | K11 | TUNING ▲ | | 001101001101100 | | | Same as left. | |
| 8 | K42 | ▶▶ | | 000100101101000 | | | Same as left. | | 28 | K09 | CT | | 001101100101100 | | | Same as left. | |
| 9 | K41 | ◀◀ | | 000101001101000 | | | Same as left. | | 29 | K08 | RDS | | 001100100101100 | | | Same as left. | |
| 10 | K40 | ▶▶ | | 000100001101000 | | | Same as left. | | 30 | K04 | PRESET ▼ | | 001101110010000 | | | Same as left. | |
| 11 | K25 | 1 | | 001100100001000 | | | 000100100001000 | | 31 | K03 | PRESET ▲ | | 001100111001000 | | | Same as left. | |
| 12 | K26 | 2 | | 001101100001000 | | | 000101100001000 | | 32 | K18 | ◀ | | 001001110011000 | | | Same as left. | |
| 13 | K27 | 3 | | 001100010001000 | | | 000100010001000 | | 33 | K21 | ▶ | | 001000011011000 | | | Same as left. | |
| 14 | K39 | DIRECT | | 000101110101000 | | | Same as left. | | 34 | K20 | ◀◀ | | 001001101011000 | | | Same as left. | |
| 15 | K28 | 4 | | 001101010001000 | | | 000101010001000 | | 35 | K19 | ▶▶ | | 001000101011000 | | | Same as left. | |
| 16 | K29 | 5 | | 001100110001000 | | | 000100110001000 | | 36 | K22 | ■ | | 001000111011000 | | | Same as left. | |
| 17 | K30 | 6 | | 001101110001000 | | | 000101110001000 | | 37 | K23 | ● REC | | 001001110110000 | | | Same as left. | |
| 18 | K37 | PROGRAM | | 000101011001000 | | | Same as left. | | 38 | K47 | SDB | | 000100101011100 | | | Same as left. | |
| 19 | K31 | 7 | | 001100001001000 | | | 000100001001000 | | 39 | K01 | VOLUME ▼ | | 001100011001000 | | | Same as left. | |
| 20 | K32 | 8 | | 001101001001000 | | | 000101001001000 | | 40 | K02 | VOLUME ▲ | | 001101011001000 | | | Same as left. | |

※ D1:Tune mode (After sending the BAND (K10) key and the initial condition immediately following battery insertion.)
 D2:TCD mode (After sending the DIRECT (K39) key or the PROGRAM (K37) key.)

● Transistors


2SD1781K
or
2SD596

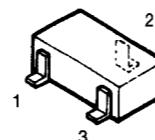


- 1 B (Base)
- 2 C (Collector)
- 3 E (Emitter)

● Diodes

Infrared LED
SE313
SLR-938C
TLN115A

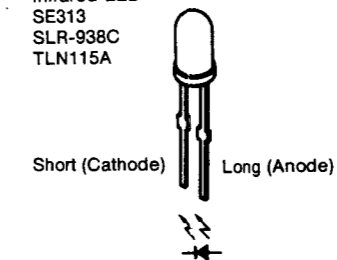




DAP202K
or
HSM2836CTR

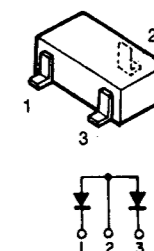

RECEIVER SECTION

WIRING DIAGRAM

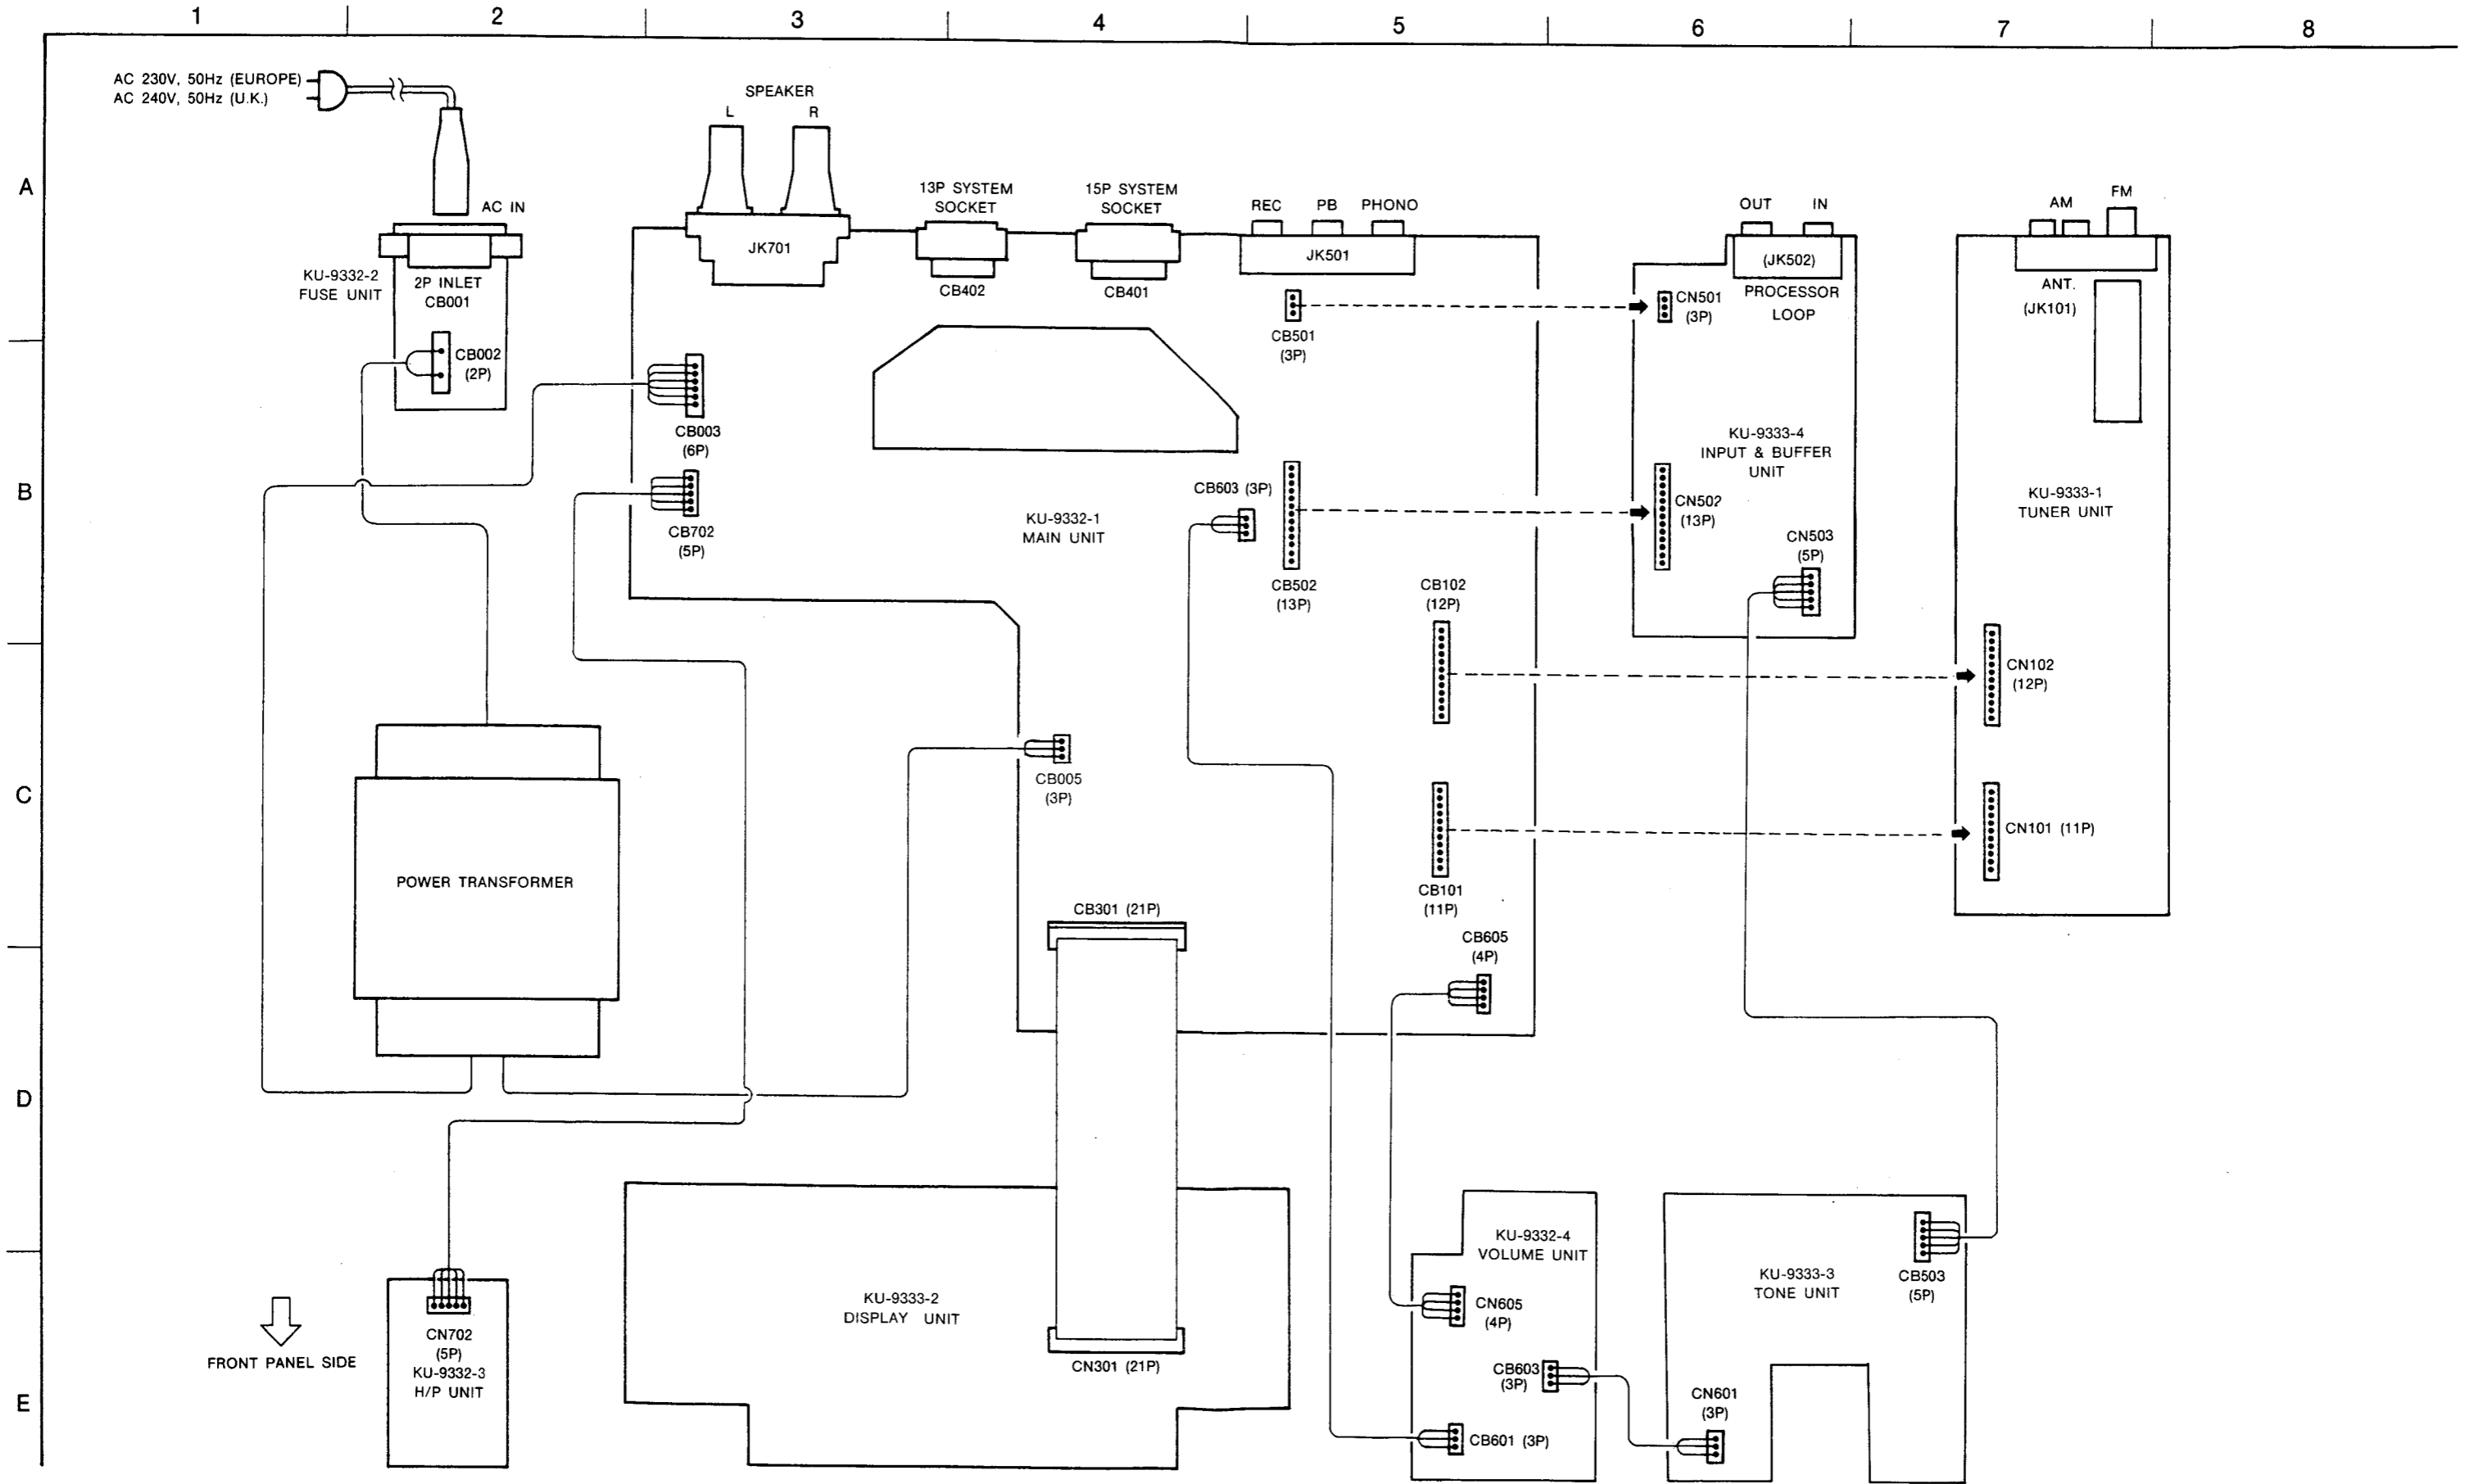

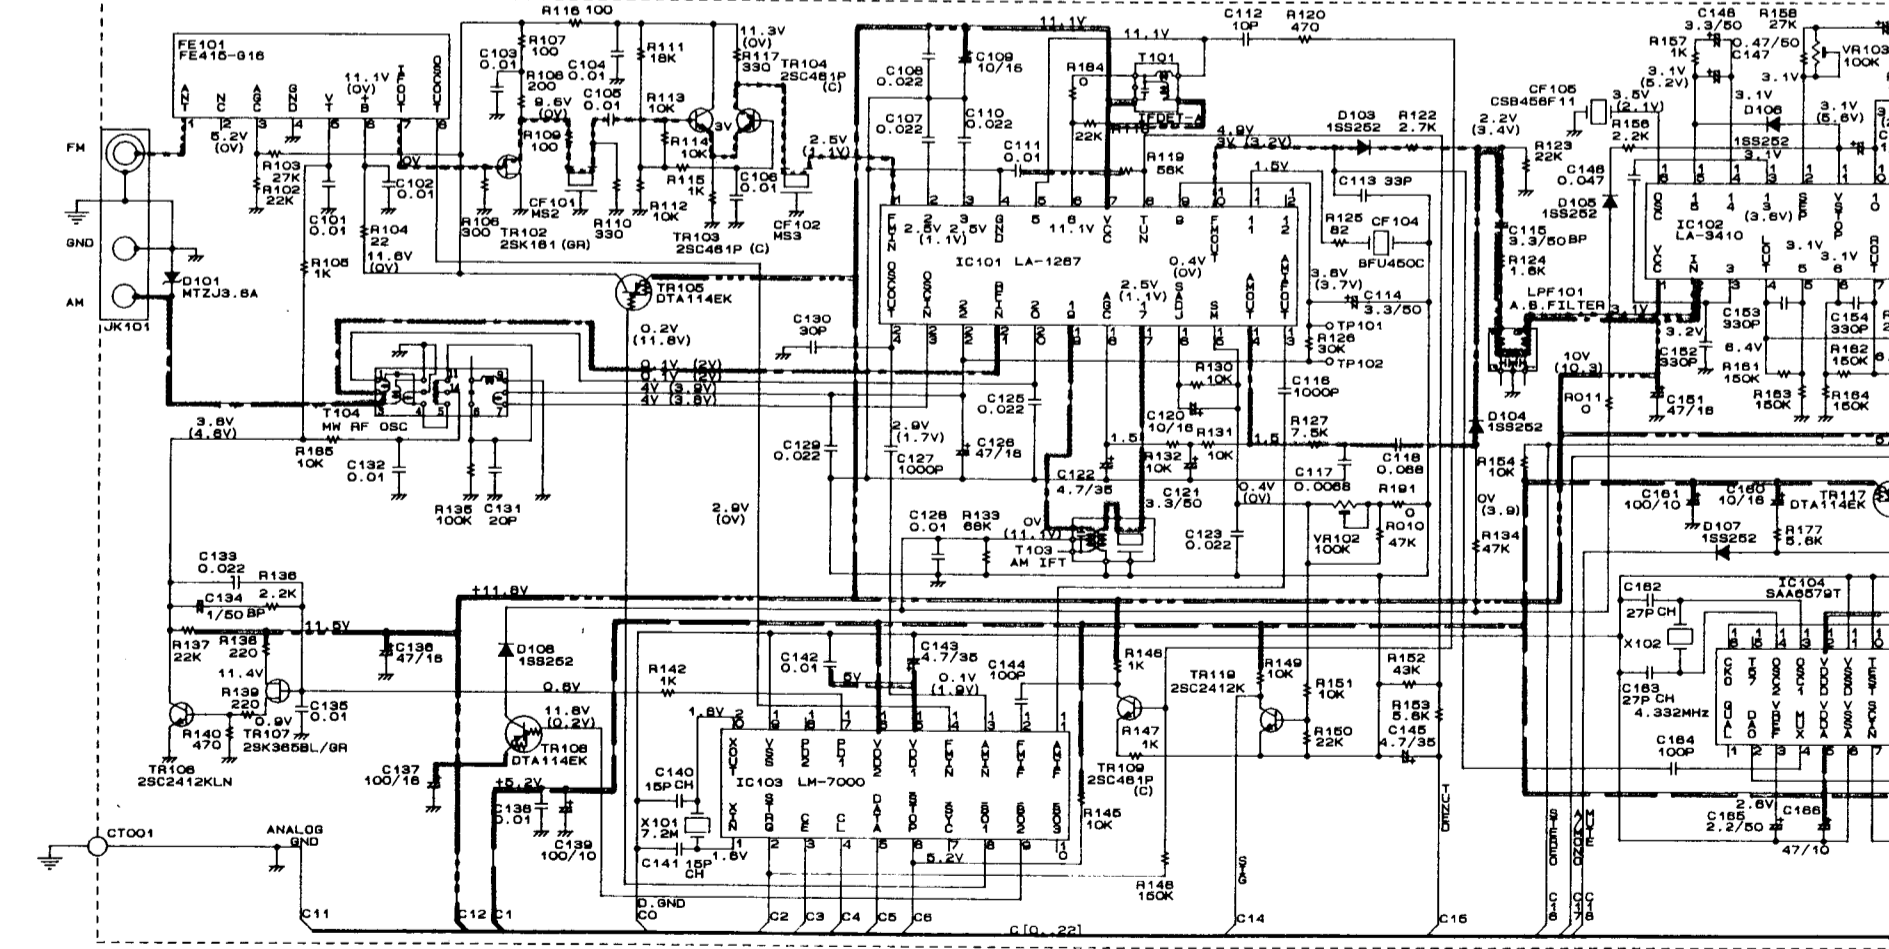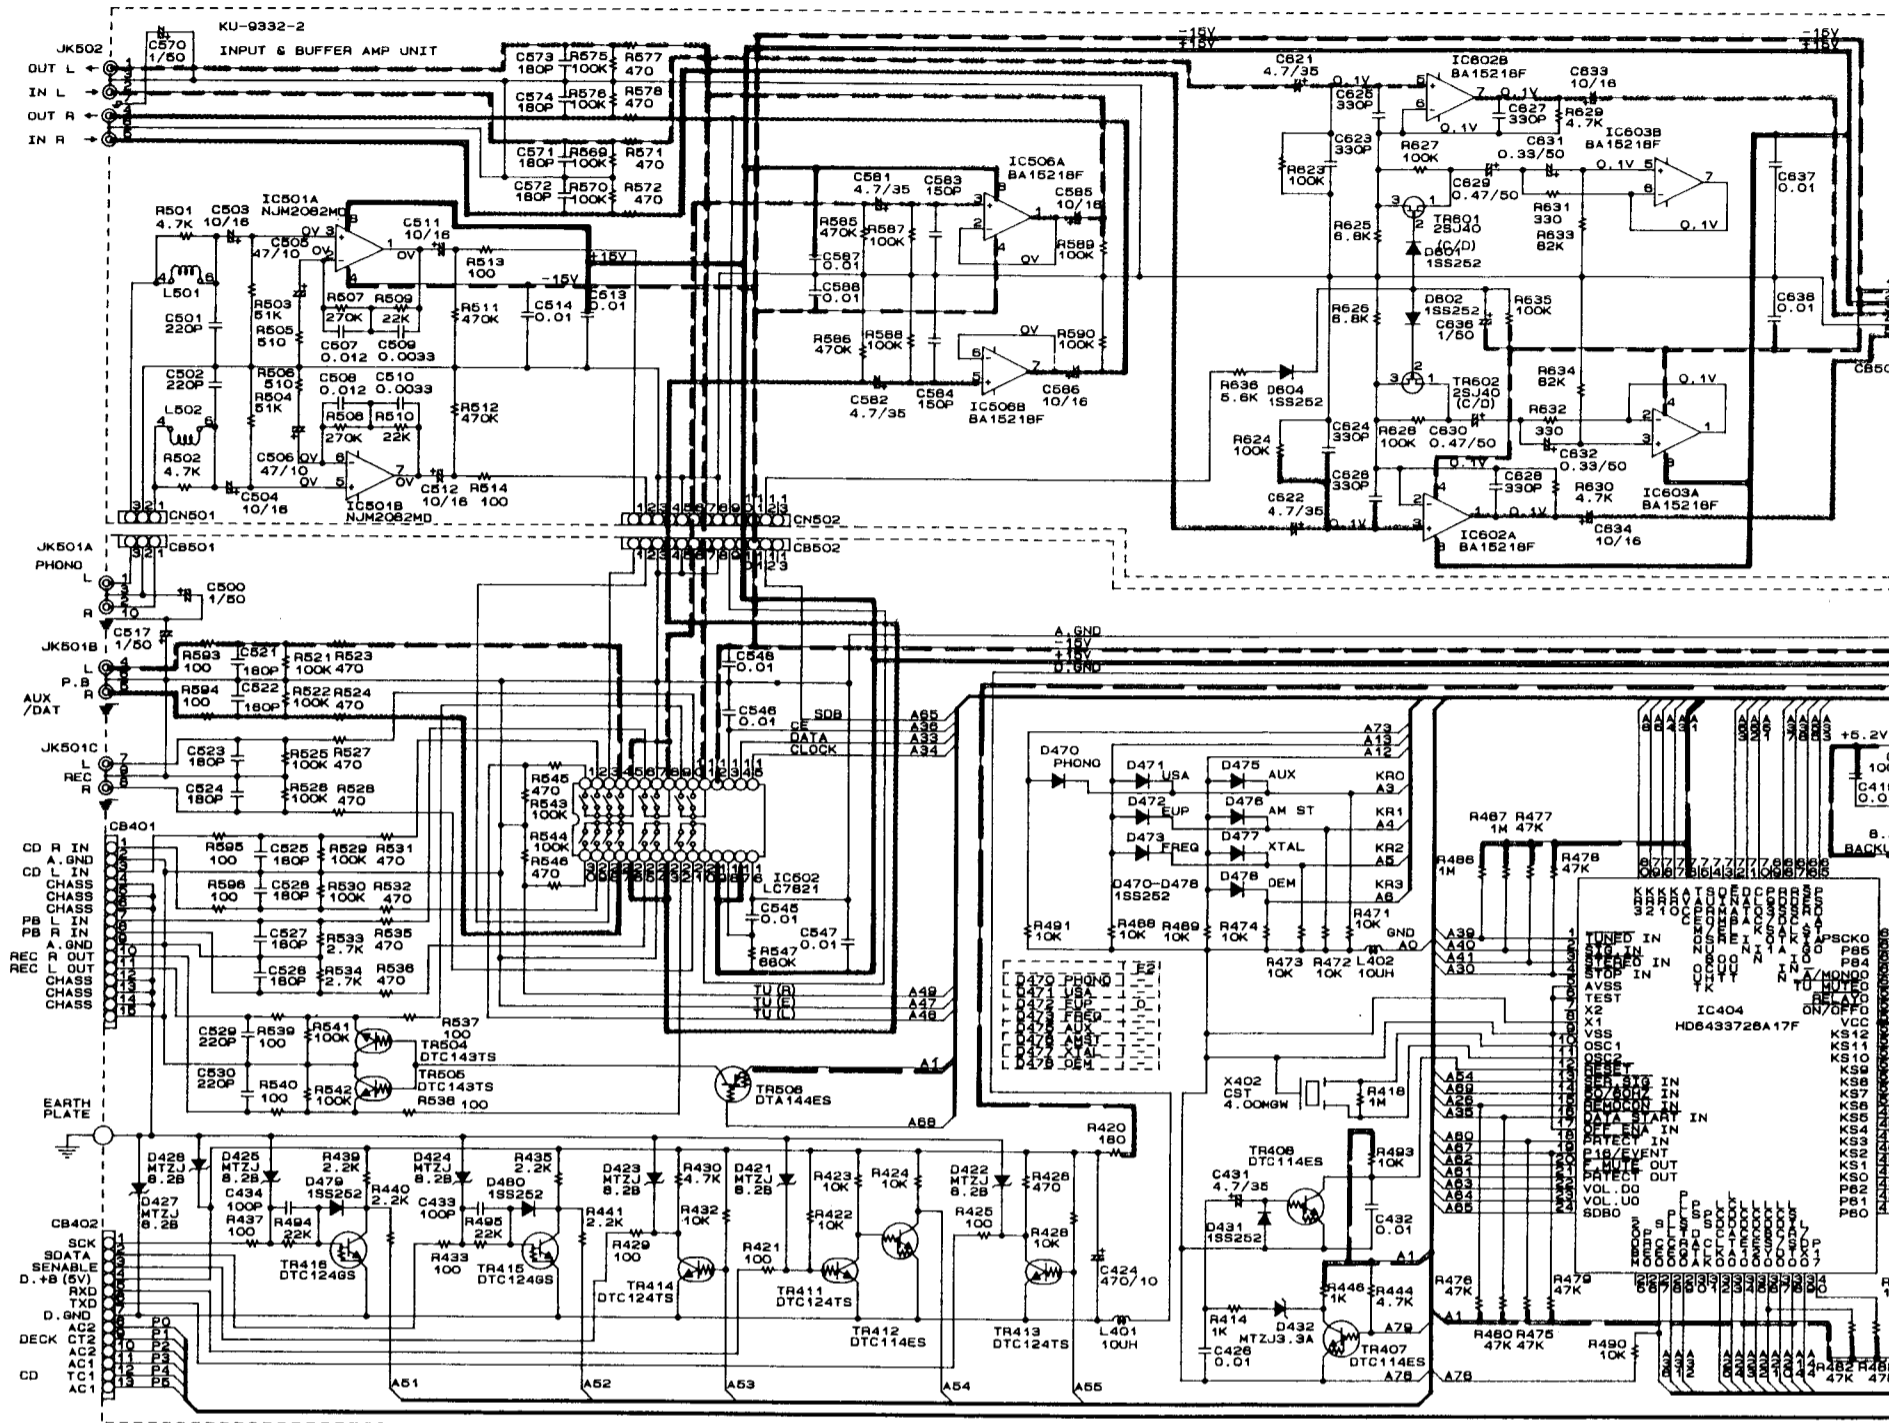

- +15V LINE
- -15V LINE
- +6V LINE
- -12V LINE
- +B LINE
- -B LINE
- R-ch LINE
- L-ch LINE
- AM SIGNAL LINE
- FM SIGNAL LINE

WARNING:
Parts marked with this symbol Δ have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

SCHMATIC DIAGRAM

5


6

7

8

9

10

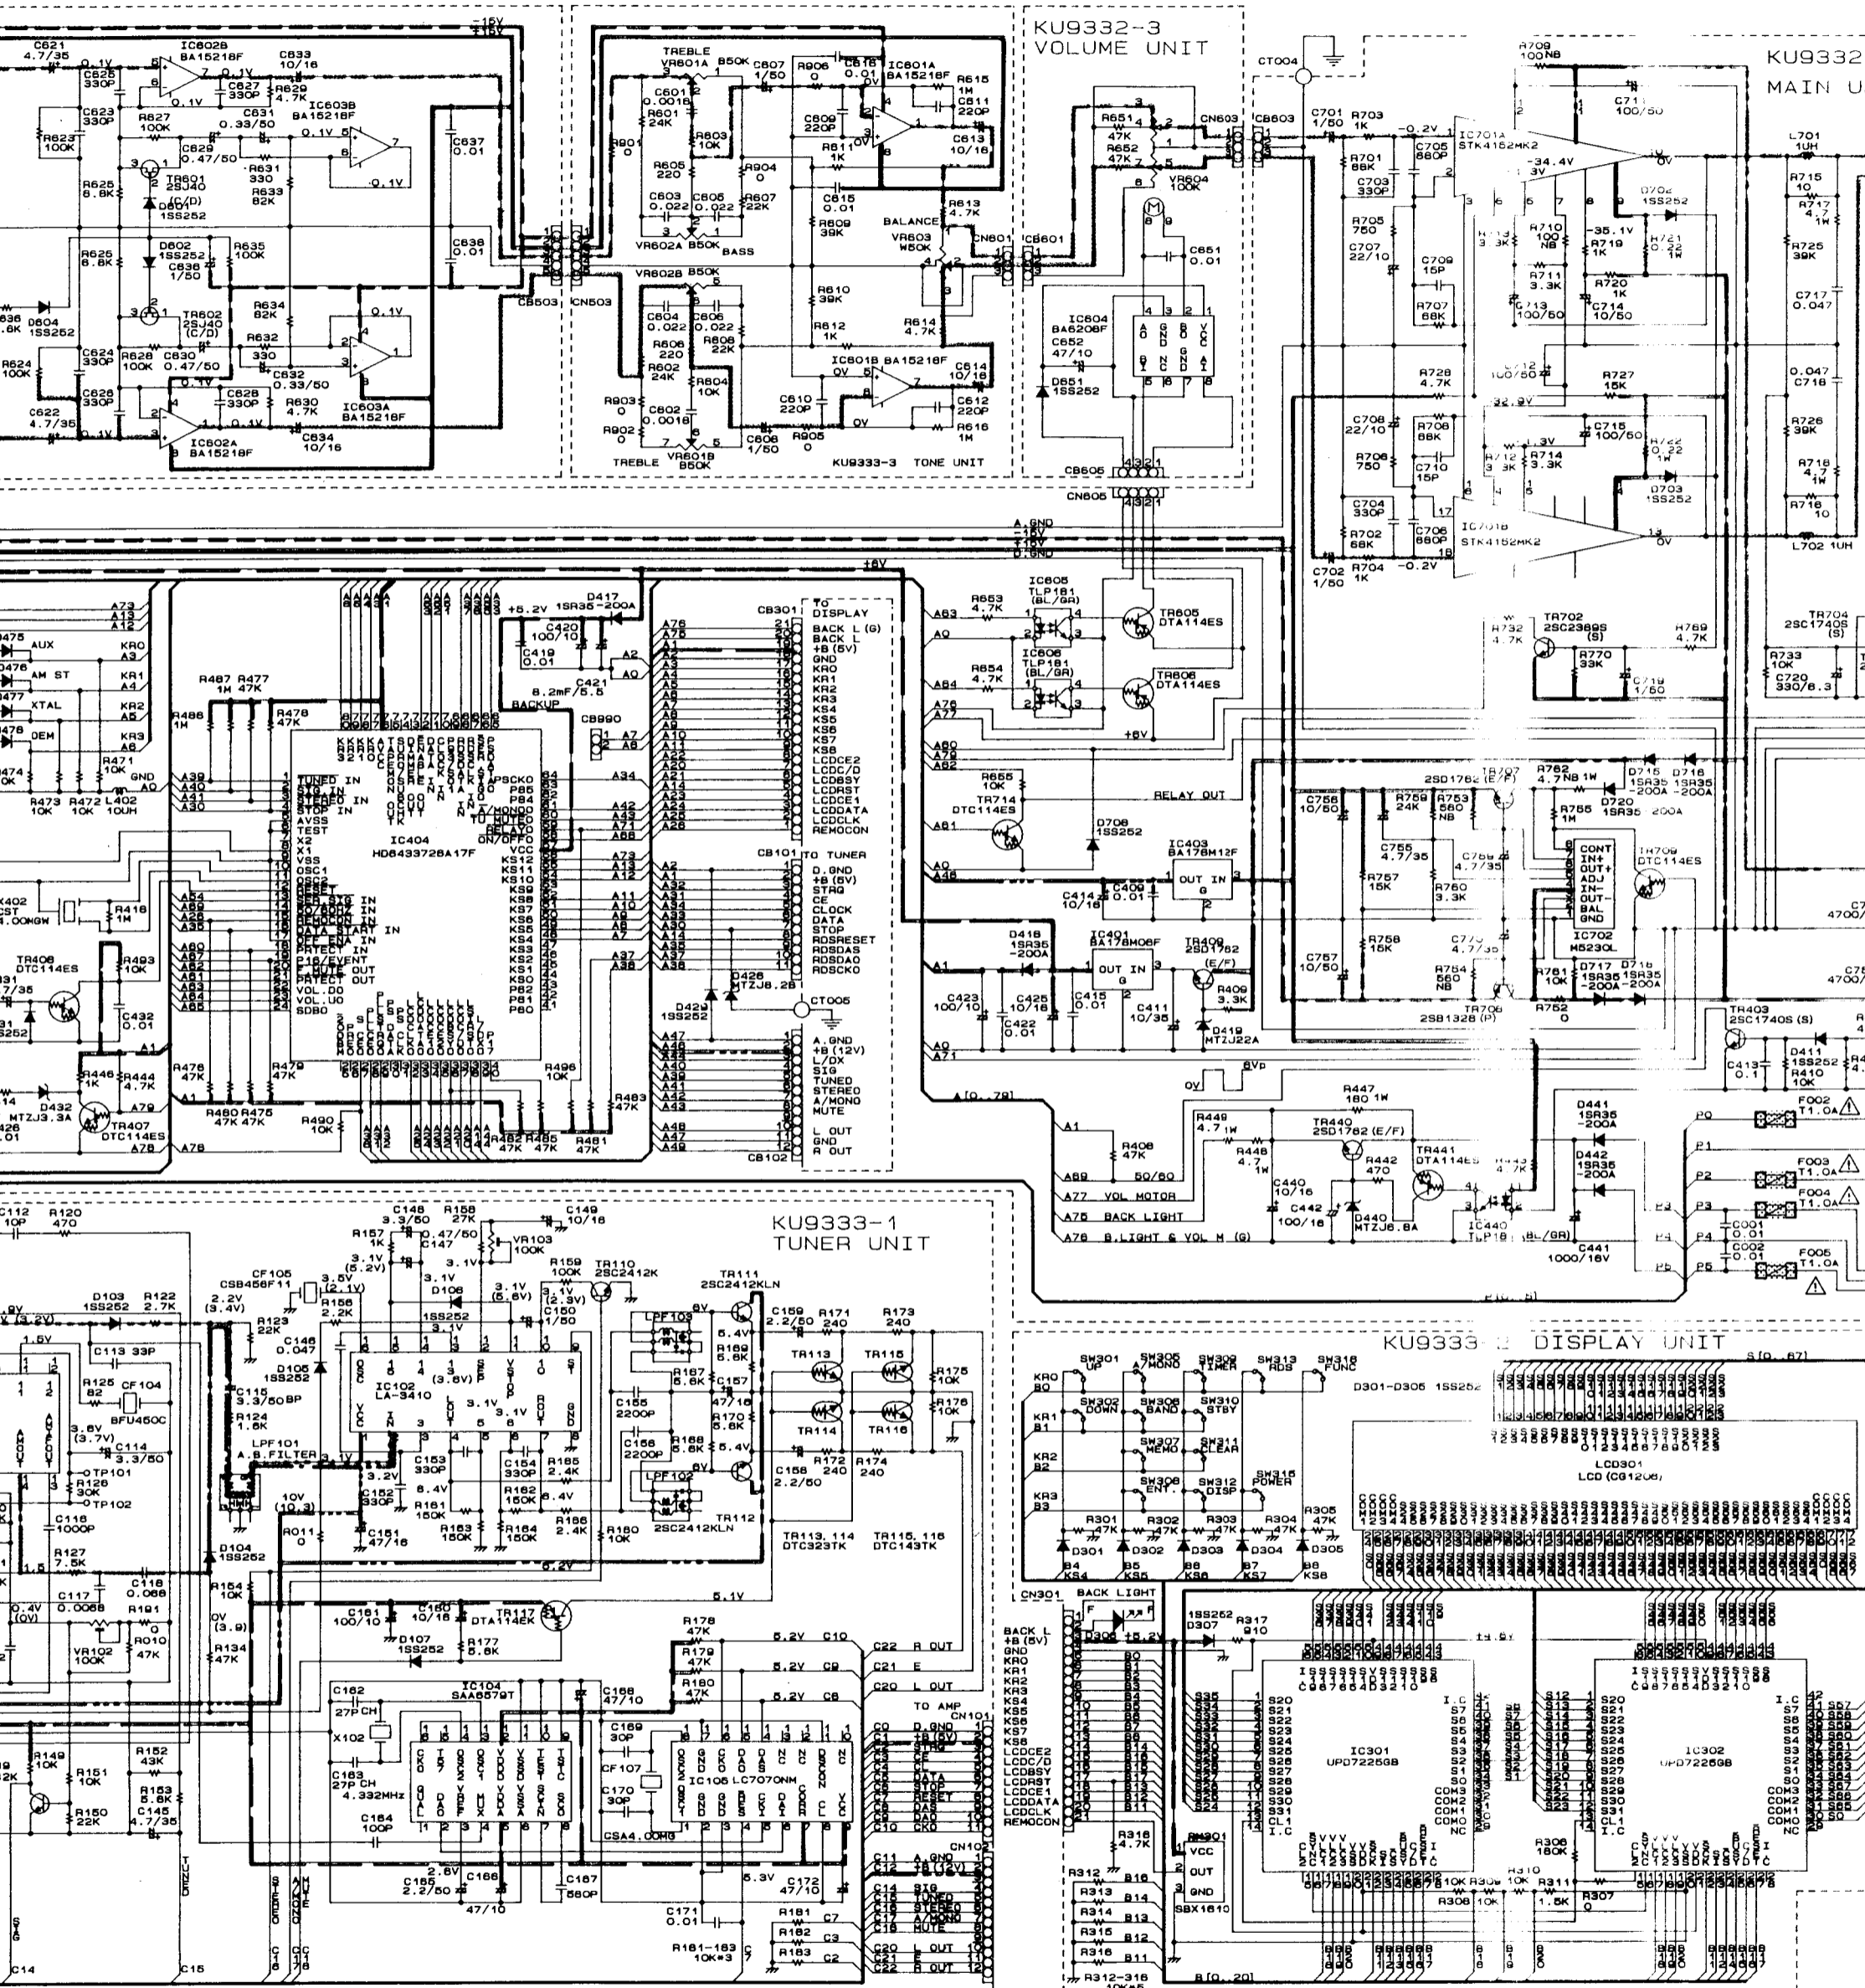


WARNING:
Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.

WARNING:
DO NOT return the unit to the customer until the problem is located and corrected.

NOTES:
ALL RESISTANCE VALUES IN OHMS
ALL CAPACITANCE VALUES IN MICROFARADS
EACH VOLTAGE AND CURRENT ARE NOMINAL
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT NOTICE

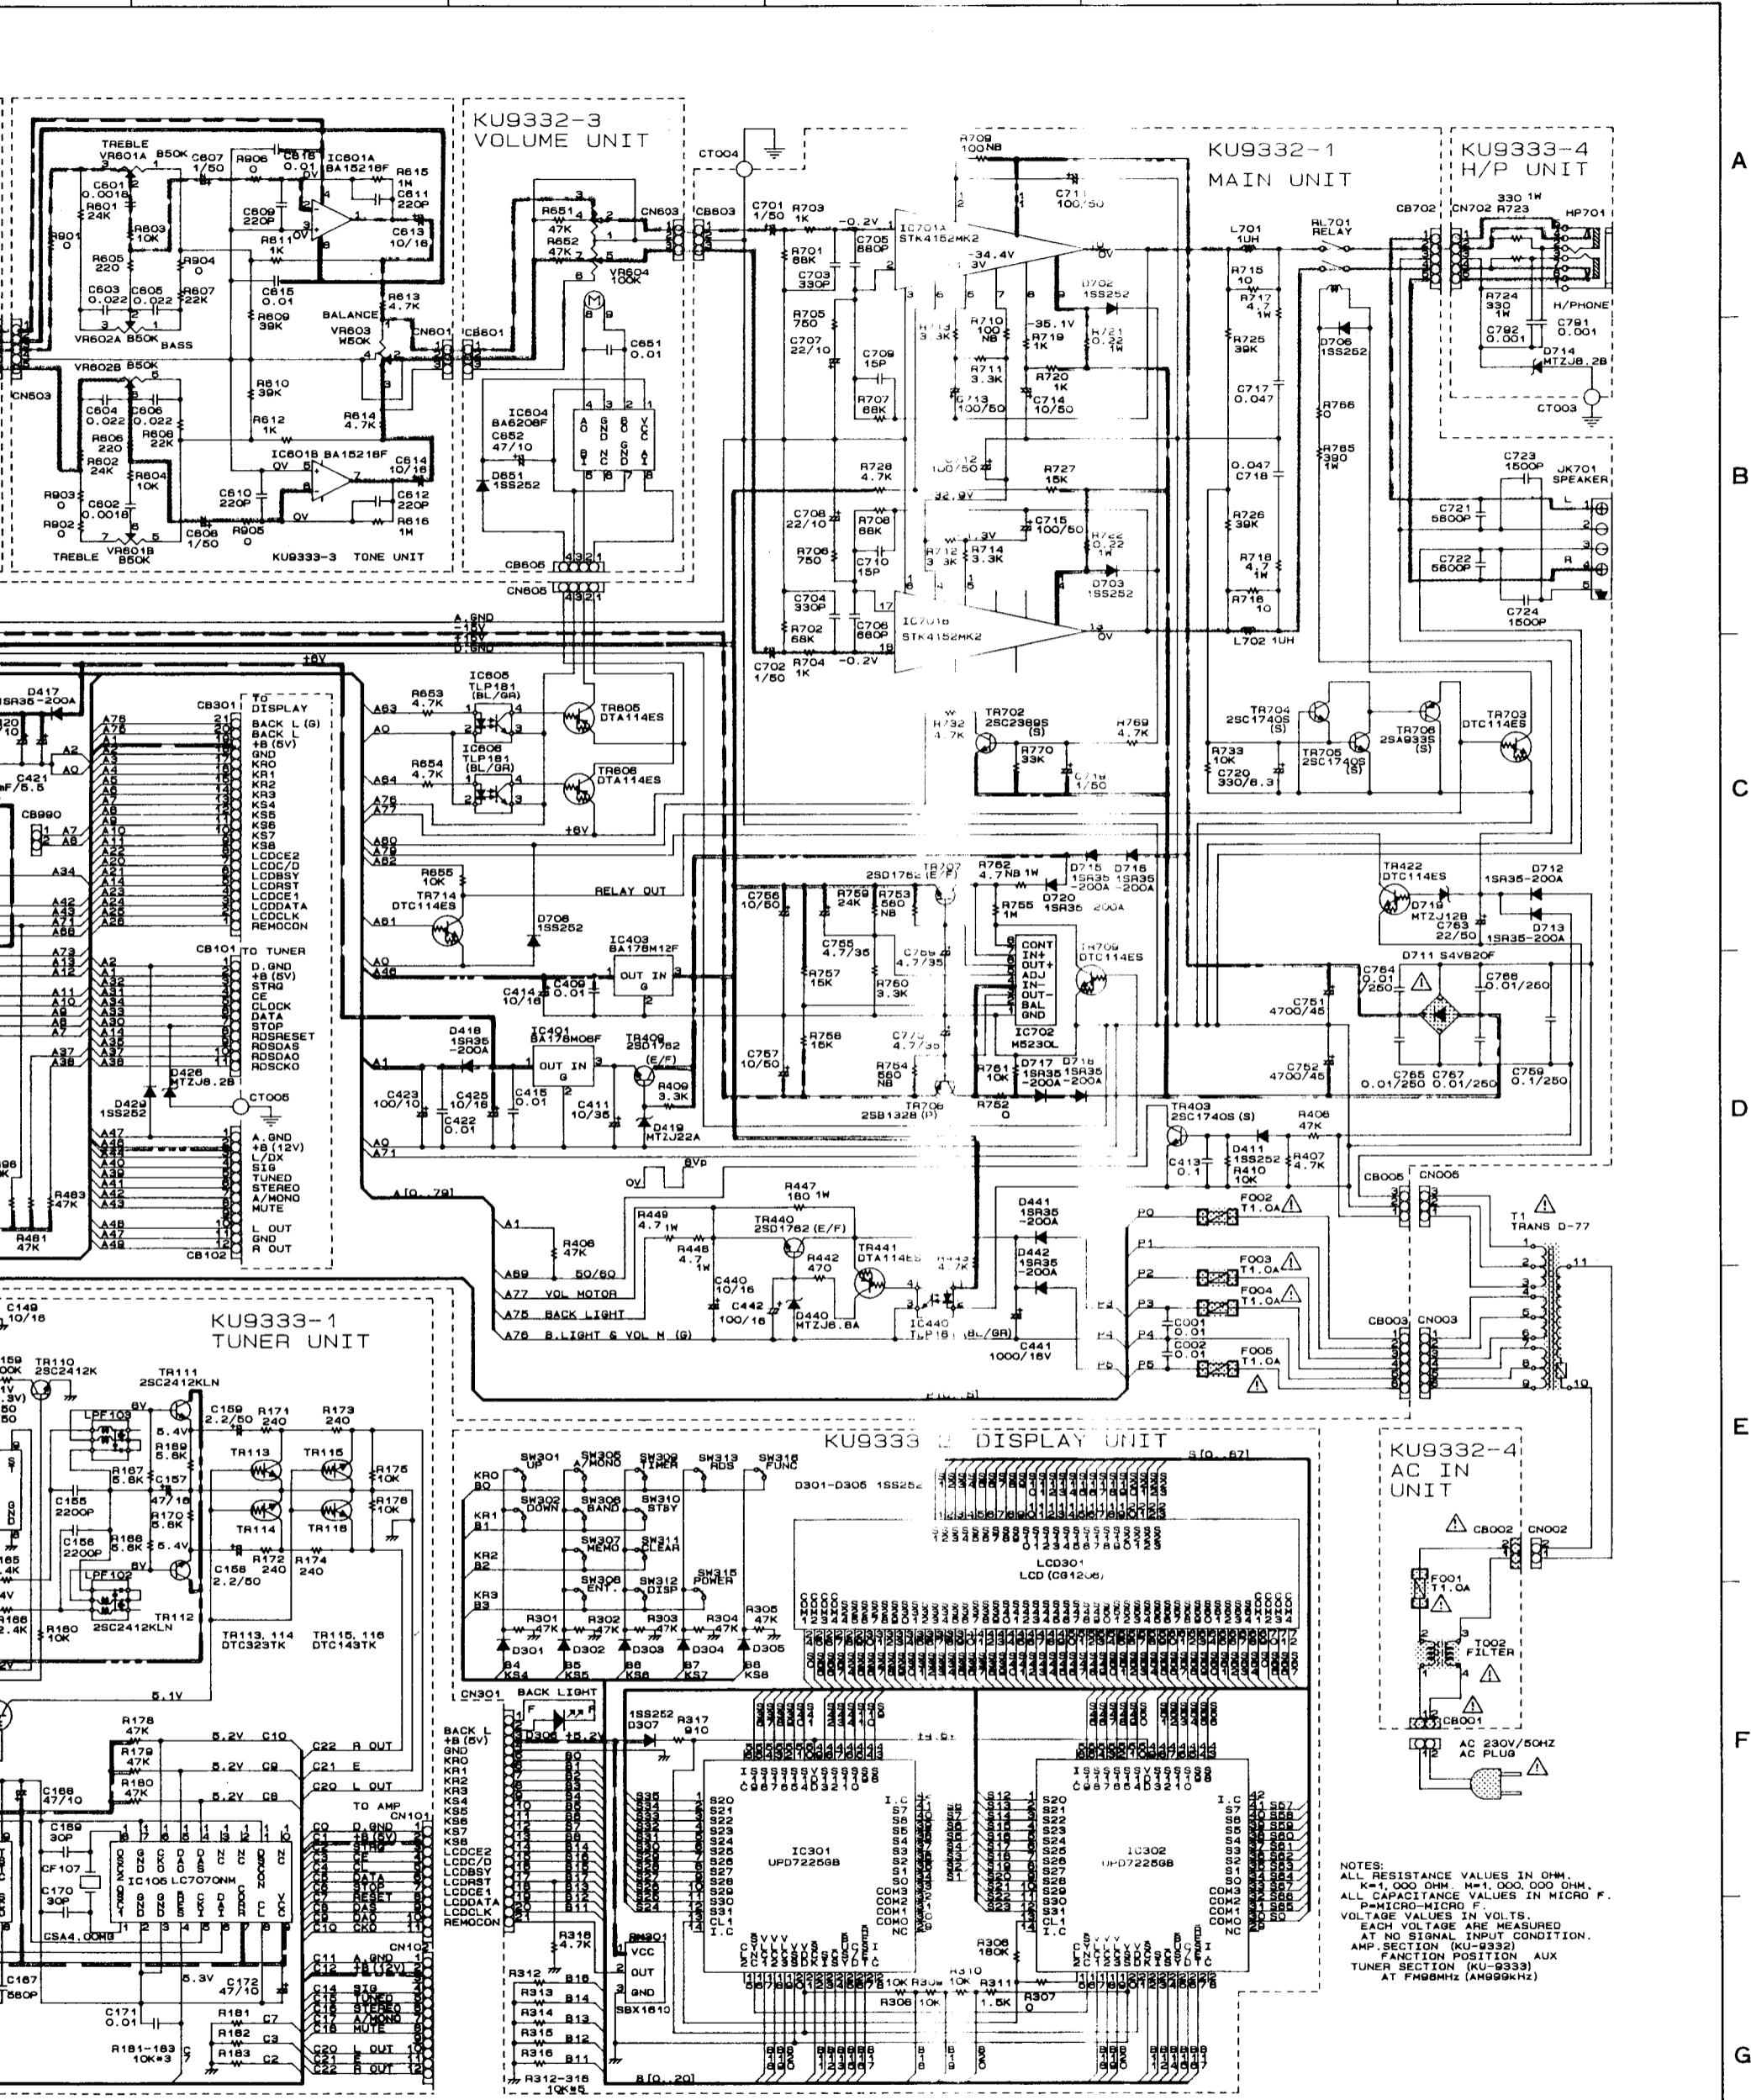

UTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.

WARNING
 Do NOT return the unit to the customer until the problem is located and corrected.


NOTES
 ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD
 VOLTAGE VALUES IN VOLTS.
 EACH VOLTAGE ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 AMP. SECTION (KU-9332) FUNCTION POSITION AUX TUNER SECTION (KU-9333) AT FM98MHz (AM999kHz)

A
B
C
D
E
F
G
H

RECEIVER SECTION

PARTS LIST OF UDRA-77 EXPLODED VIEW

| Ref. No. | Part No. | Part Name | Remarks | Qty |
|---|--------------|----------------------------|-----------------|----------------|
| 1 | KU- 9333 | Tuner Unit Ass'y | | 1 ^S |
| 1-1 | — | Tuner Unit | | (1) |
| 1-2 | — | Display Unit | | (1) |
| 1-3 | — | Tone Unit | | (1) |
| 1-4 | — | Preamp Unit | | (1) |
| 2 | 393 6006 007 | LCD Ass'y(CG1206) | LC301 | 1 |
| 3 | 216 9013 004 | FM Front End(U) | | 1 |
| 4 | 205 0847 004 | 3 P Ant. Terminal(PAL/F) | | 1 |
| 5 | KU- 9332 | Main Unit Ass'y | | 1 ^S |
| 5-1 | — | Main Unit | | (1) |
| 5-2 | — | AC IN Unit | | (1) |
| 5-3 | — | Headphone Unit | | (1) |
| 5-4 | — | Volume Unit | | (1) |
| 6 | 214 0167 005 | Relay(G5Z-2A) | | 1 |
| ★ 7 | 239 8016 002 | Line Filter Coil | T002 | 1 |
| 8 | 254 4259 700 | Chemicon 2200 μ F/35V | C520,521,518 | 3 |
| ★ 9 | 211 0805 009 | Variable Resistor 100 kohm | VR604 | 1 |
| △ 10 | 205 1015 029 | Fuse(1A) | F001-005 | 5 |
| 11 | 499 0150 008 | Remote Sensor | SBX1610-52 | 1 |
| 12 | 211 9105 001 | Variable Resistor 50 kohm | Balance(VR603) | 1 |
| 13 | 211 9013 003 | Variable Resistor 50 kohm | Tone(VR601,602) | 2 |
| 14 | 204 8370 020 | Headphone Jack(D3.5) | HP701 | 1 |
| 15 | 201 8519 001 | 4 P Pin Jack(S-GND) | JK502 | 1 |
| 16 | 205 0754 003 | 6 P Pin Jack(S-GND) | JK501 | 1 |
| △ 17 | 203 2349 009 | 2 P Inlet | CB001 | 1 |
| 18 | 411 9119 329 | Main chassis | | 1 |
| 19 | 412 9366 003 | Trans Bracket | | 1 |
| 20 | 104 0237 308 | Foot Ass'y | | 4 |
| 21 | 417 9076 000 | Radiator | | 1 |
| 22 | 105 9269 008 | Rear Panel | | 1 |
| ★ 23 | 513 9345 000 | Blind Label | | 1 |
| 24 | 412 3548 005 | P.W.B. Catcher | | 3 |
| 25 | 412 9368 108 | Shield Cover | | 1 |
| △ 26 | 233 4584 009 | Power Trans | | 1 |
| 27 | 146 9345 101 | Inner Panel | | 1 |
| 28 | 146 9189 009 | Window | | 1 |
| 29 | 113 9322 108 | 4 G Button | | 1 |
| 30 | 113 1460 013 | Power Knob | | 1 |
| 31 | 113 9329 004 | 8 G Button | | 1 |
| 32 | 113 9234 009 | Front Panel | | 1 |
| 33 | 112 9095 128 | Volume Knob Ass'y | | 1 |
| 34 | 112 0645 166 | Knob | | 3 |
| 35 | 146 9347 206 | Side Plate(L) | | 1 |
| 36 | 146 9346 207 | Side Plate(R) | | 1 |
| 37 | 102 0518 238 | Top Cover | | 1 |
| 38 | 513 9343 109 | Caution Label | Put on T. Cover | 1 |
| 39 | 412 2814 028 | Card Spacer(L=10) | | 1 |
| 40 | 009 9057 006 | 21 P FF Cable | | 1 |
| 41 | 205 0643 004 | Short Pin | | 2 |
| 42 | 205 0730 056 | 13 P System Socket(Bu) | CB402 | 1 |
| 43 | 204 0284 022 | 15 P System Socket | CB401 | 1 |
| 44 | 205 0551 002 | 4 P Terminal | JK701 | 1 |
| SCREWS | | | | |
| 71 | 473 7004 016 | Tapping Screw(S) 4×6 | | 8 |
| 72 | 473 7002 018 | Tapping Screw(S) 3×8 | | 6 |
| 73 | 473 7500 015 | Tapping Screw(P) 3×8 | Black | 4 |
| 74 | 477 0064 107 | Fixing Screw | | 12 |
| 75 | 473 7015 005 | Tapping Screw(S) 3×6 | Black | 16 |
| 76 | 473 7508 046 | Tapping Screw(P) 3×16 | Black | 5 |
| 77 | 473 7505 007 | Tapping Screw(P) 2.6×8 | | 3 |
| 78 | 477 0262 019 | Special Screw | | 1 |
| 79 | 473 7009 008 | FH.Tapping Screw(S) 3×6 | | 2 |
| PACKING & ACCESSORIES (Not included EXPLODED VIEW) | | | | |
| 101 | 505 0131 050 | Cabinet Cover | | 1 |
| 102 | 503 9291 102 | Cushion | | 1 |
| 103 | 503 9292 005 | Top Cushion | | 1 |
| 104 | 501 9279 102 | Master Carton | | 1 |
| 105 | GEN 7754 | Envelope Sub Ass'y | | 1 ^S |
| 105-1 | 505 0283 018 | Poly Cover | | 1 |
| 105-2 | 511 9434 009 | Inst. Manual | | 1 |
| 105-3 | 394 0040 004 | Battery(R6P) | | 1 |
| 105-4 | 206 2108 003 | AC Conn. with Plug | | 1 |
| 105-5 | 231 1914 003 | Loop Antenna | | 1 |
| 105-6 | 395 0023 008 | FM Ant. Ass'y | | 1 |
| 105-7 | 204 6471 002 | 13 P System Connector | | 1 |
| 105-8 | 204 6316 015 | 15 P System Connector | | 1 |
| 105-9 | 499 9711 009 | Remocon | RC-180 | 1 |

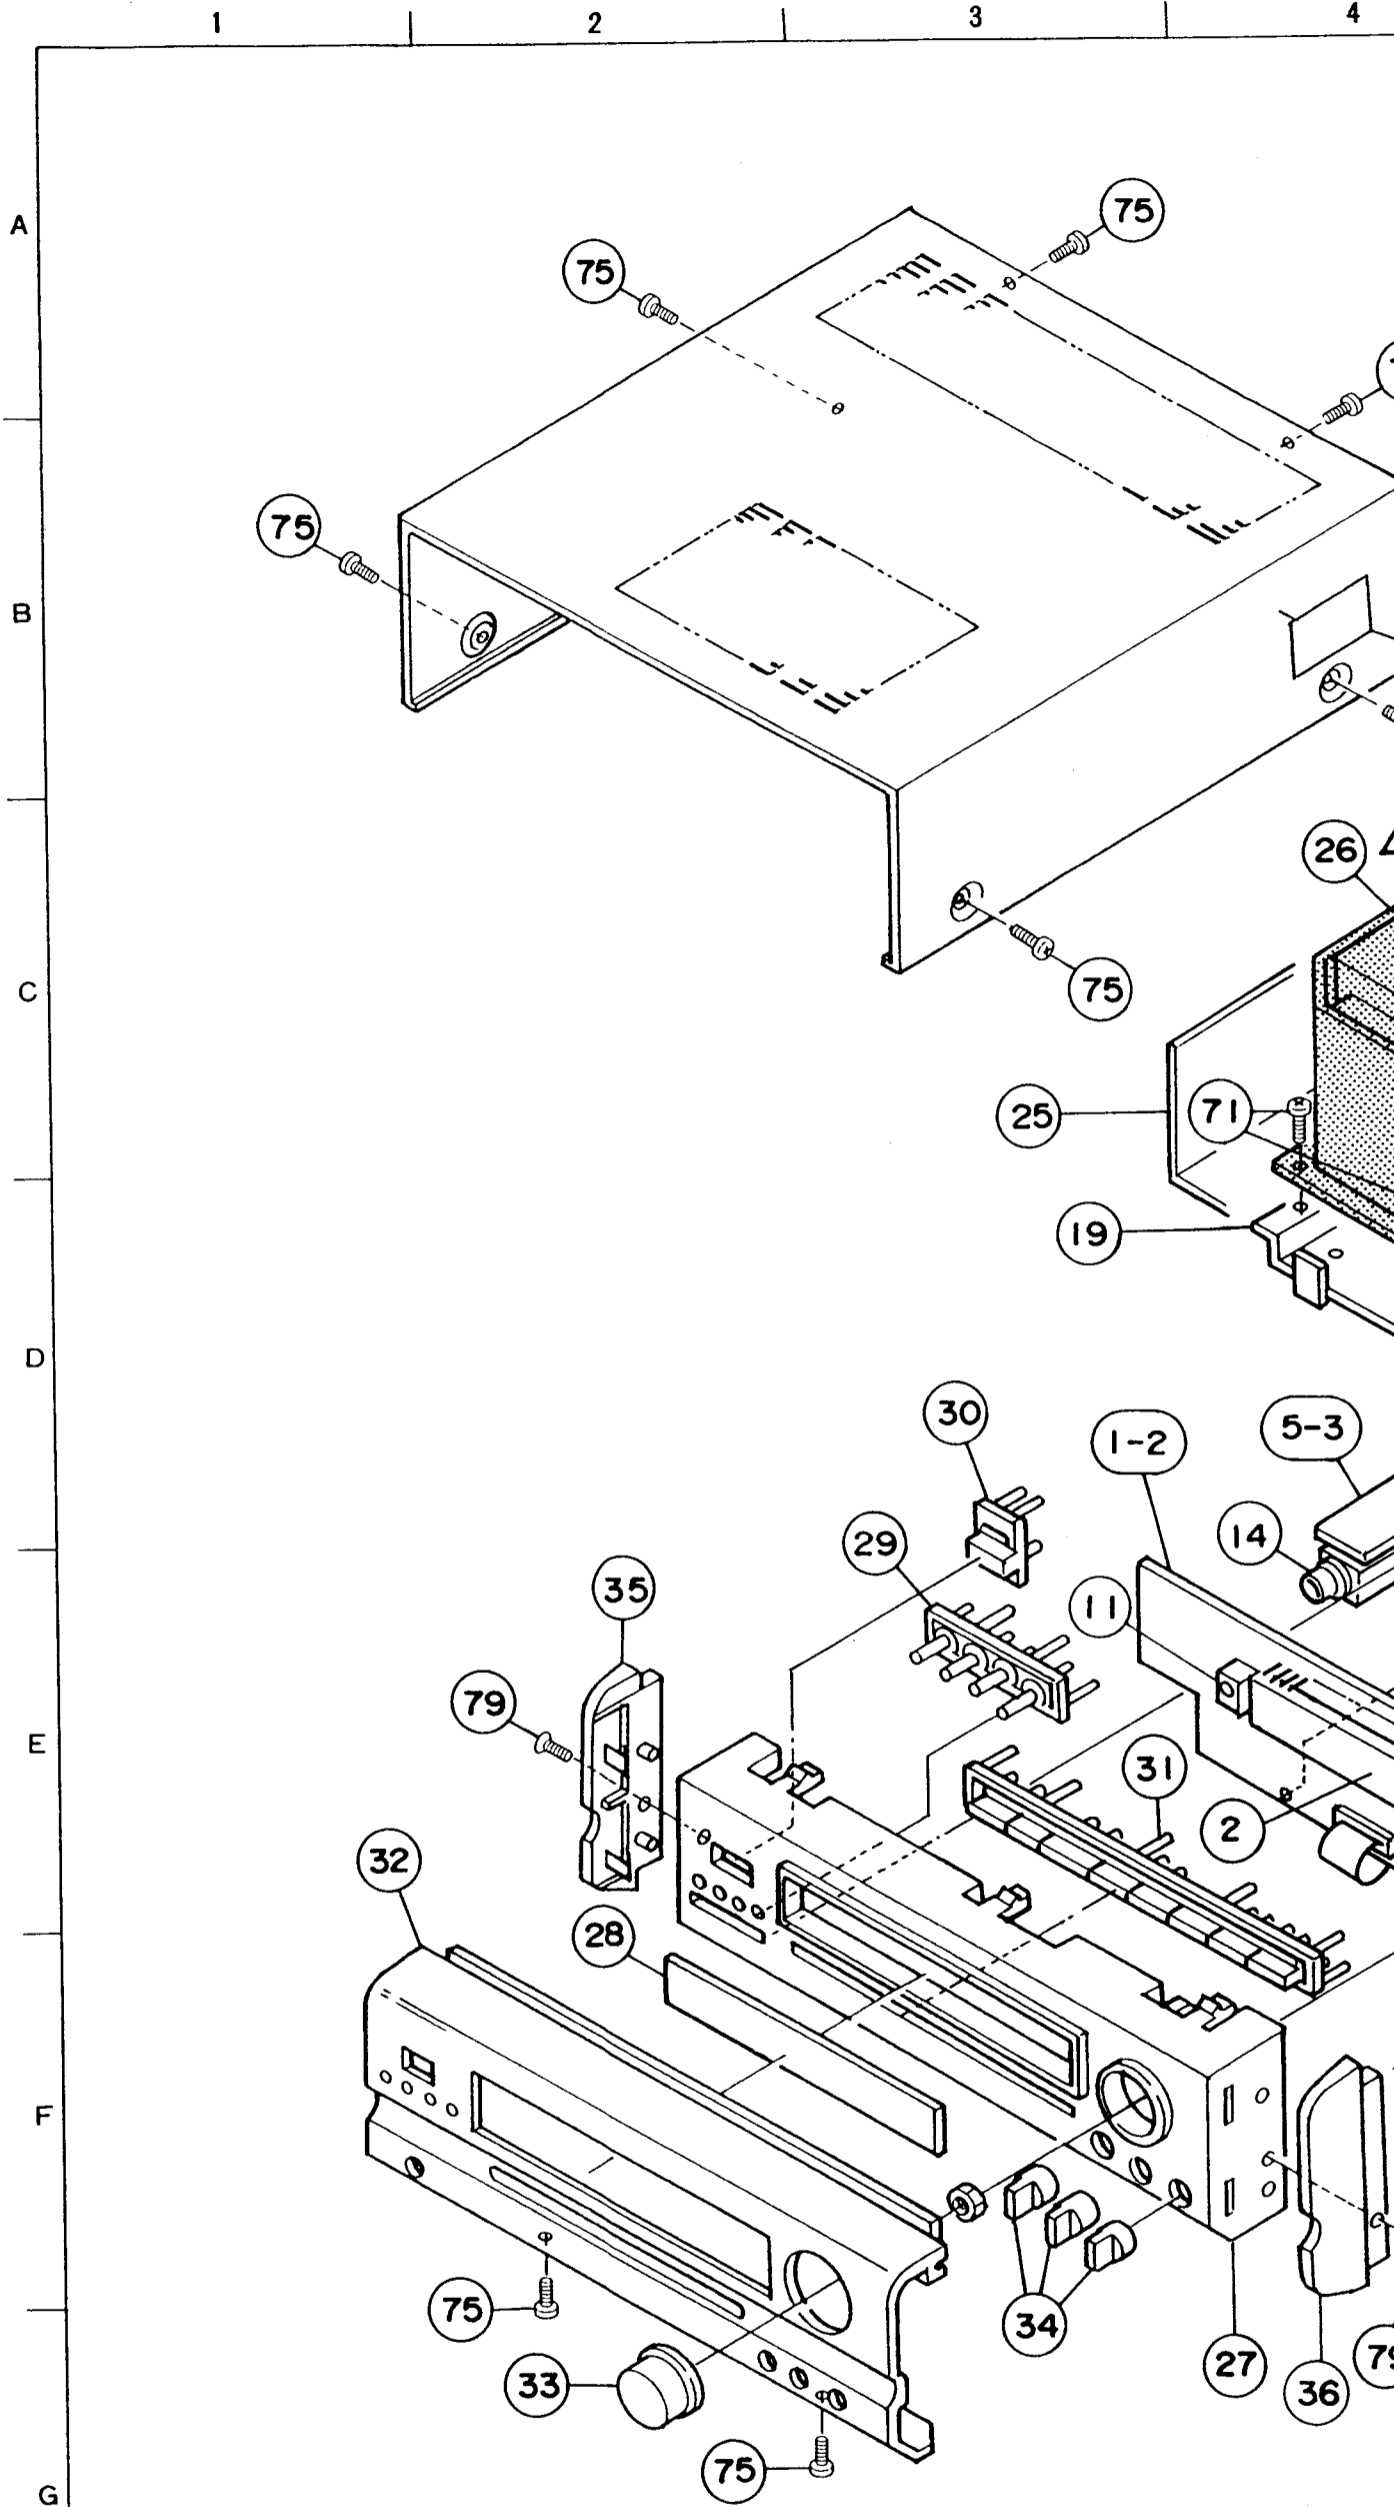

NOTE ON PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

WARNING:

Parts marked with this symbol △ [hatched] have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

EXPLODED VIEW


3

4

5


6

7

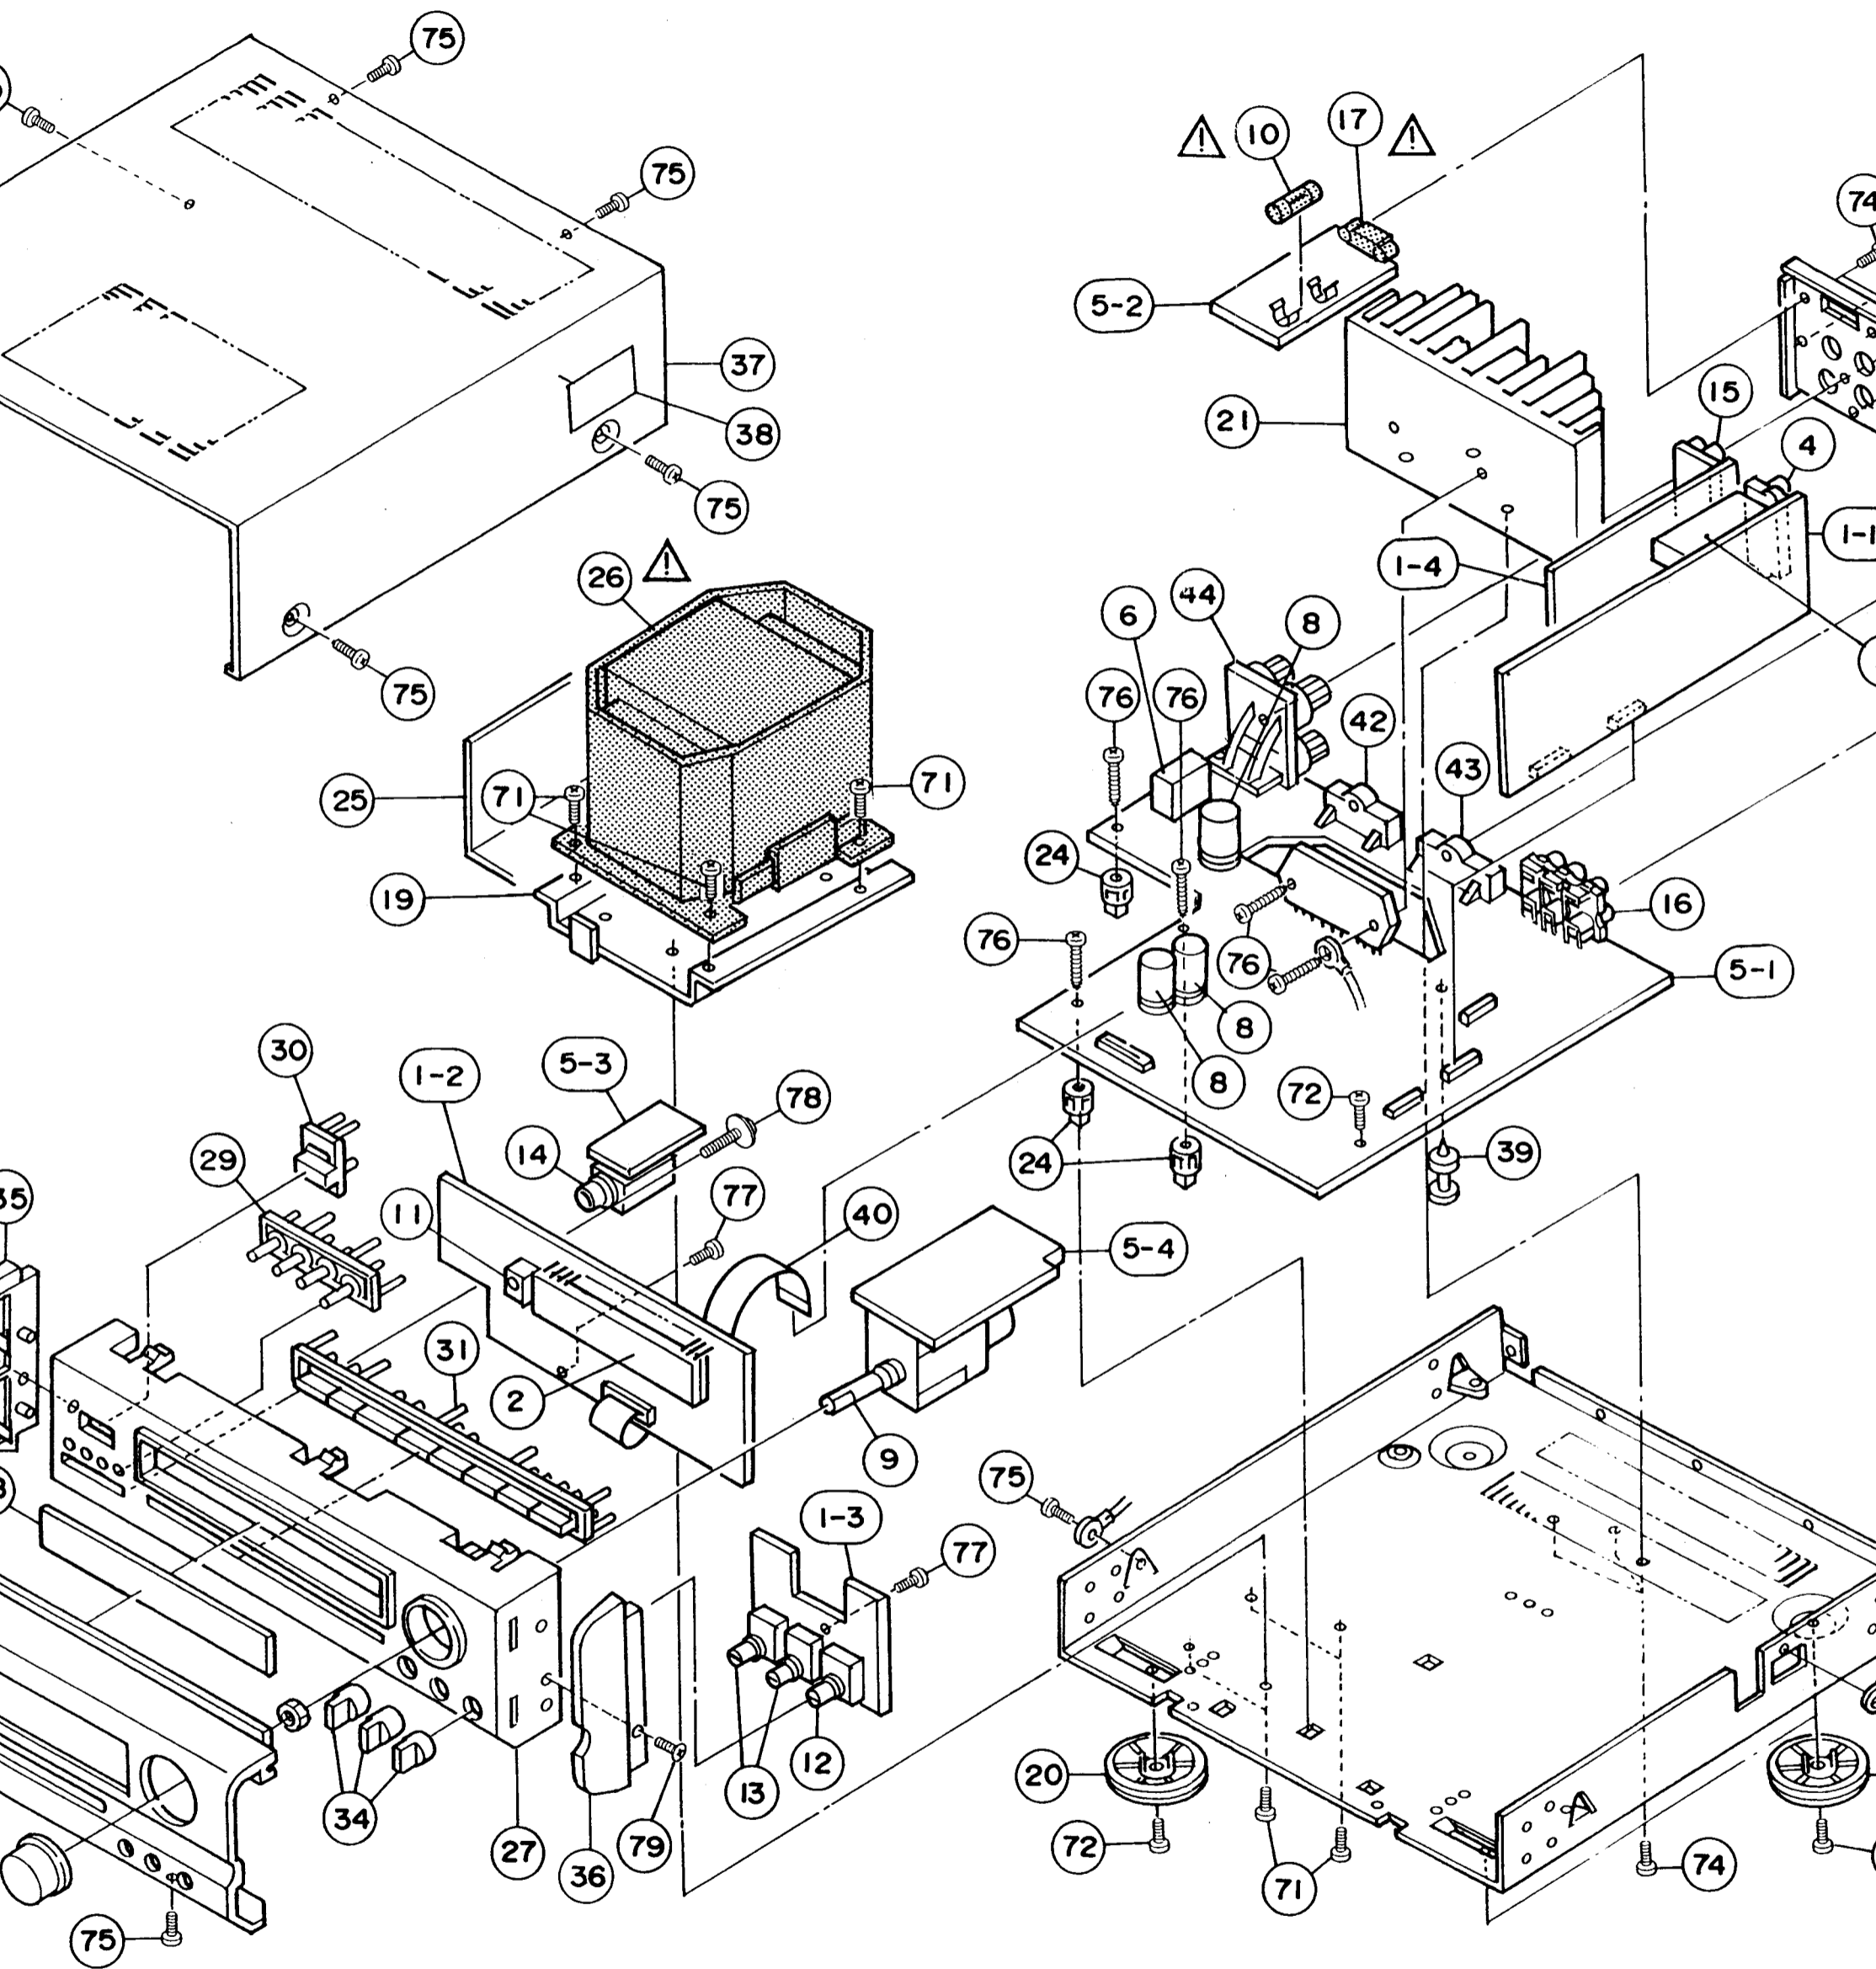

⊙ are not always in stock and possibly to take a long period of time for supplying, or in some case used.
 y indicate "1" and "1" (i) to avoid mis-supplying.
 its part number can not be supplied.
 "★" is not illustrated in the exploded view.

△ have critical characteristics.
 recommended by the manufacturer.

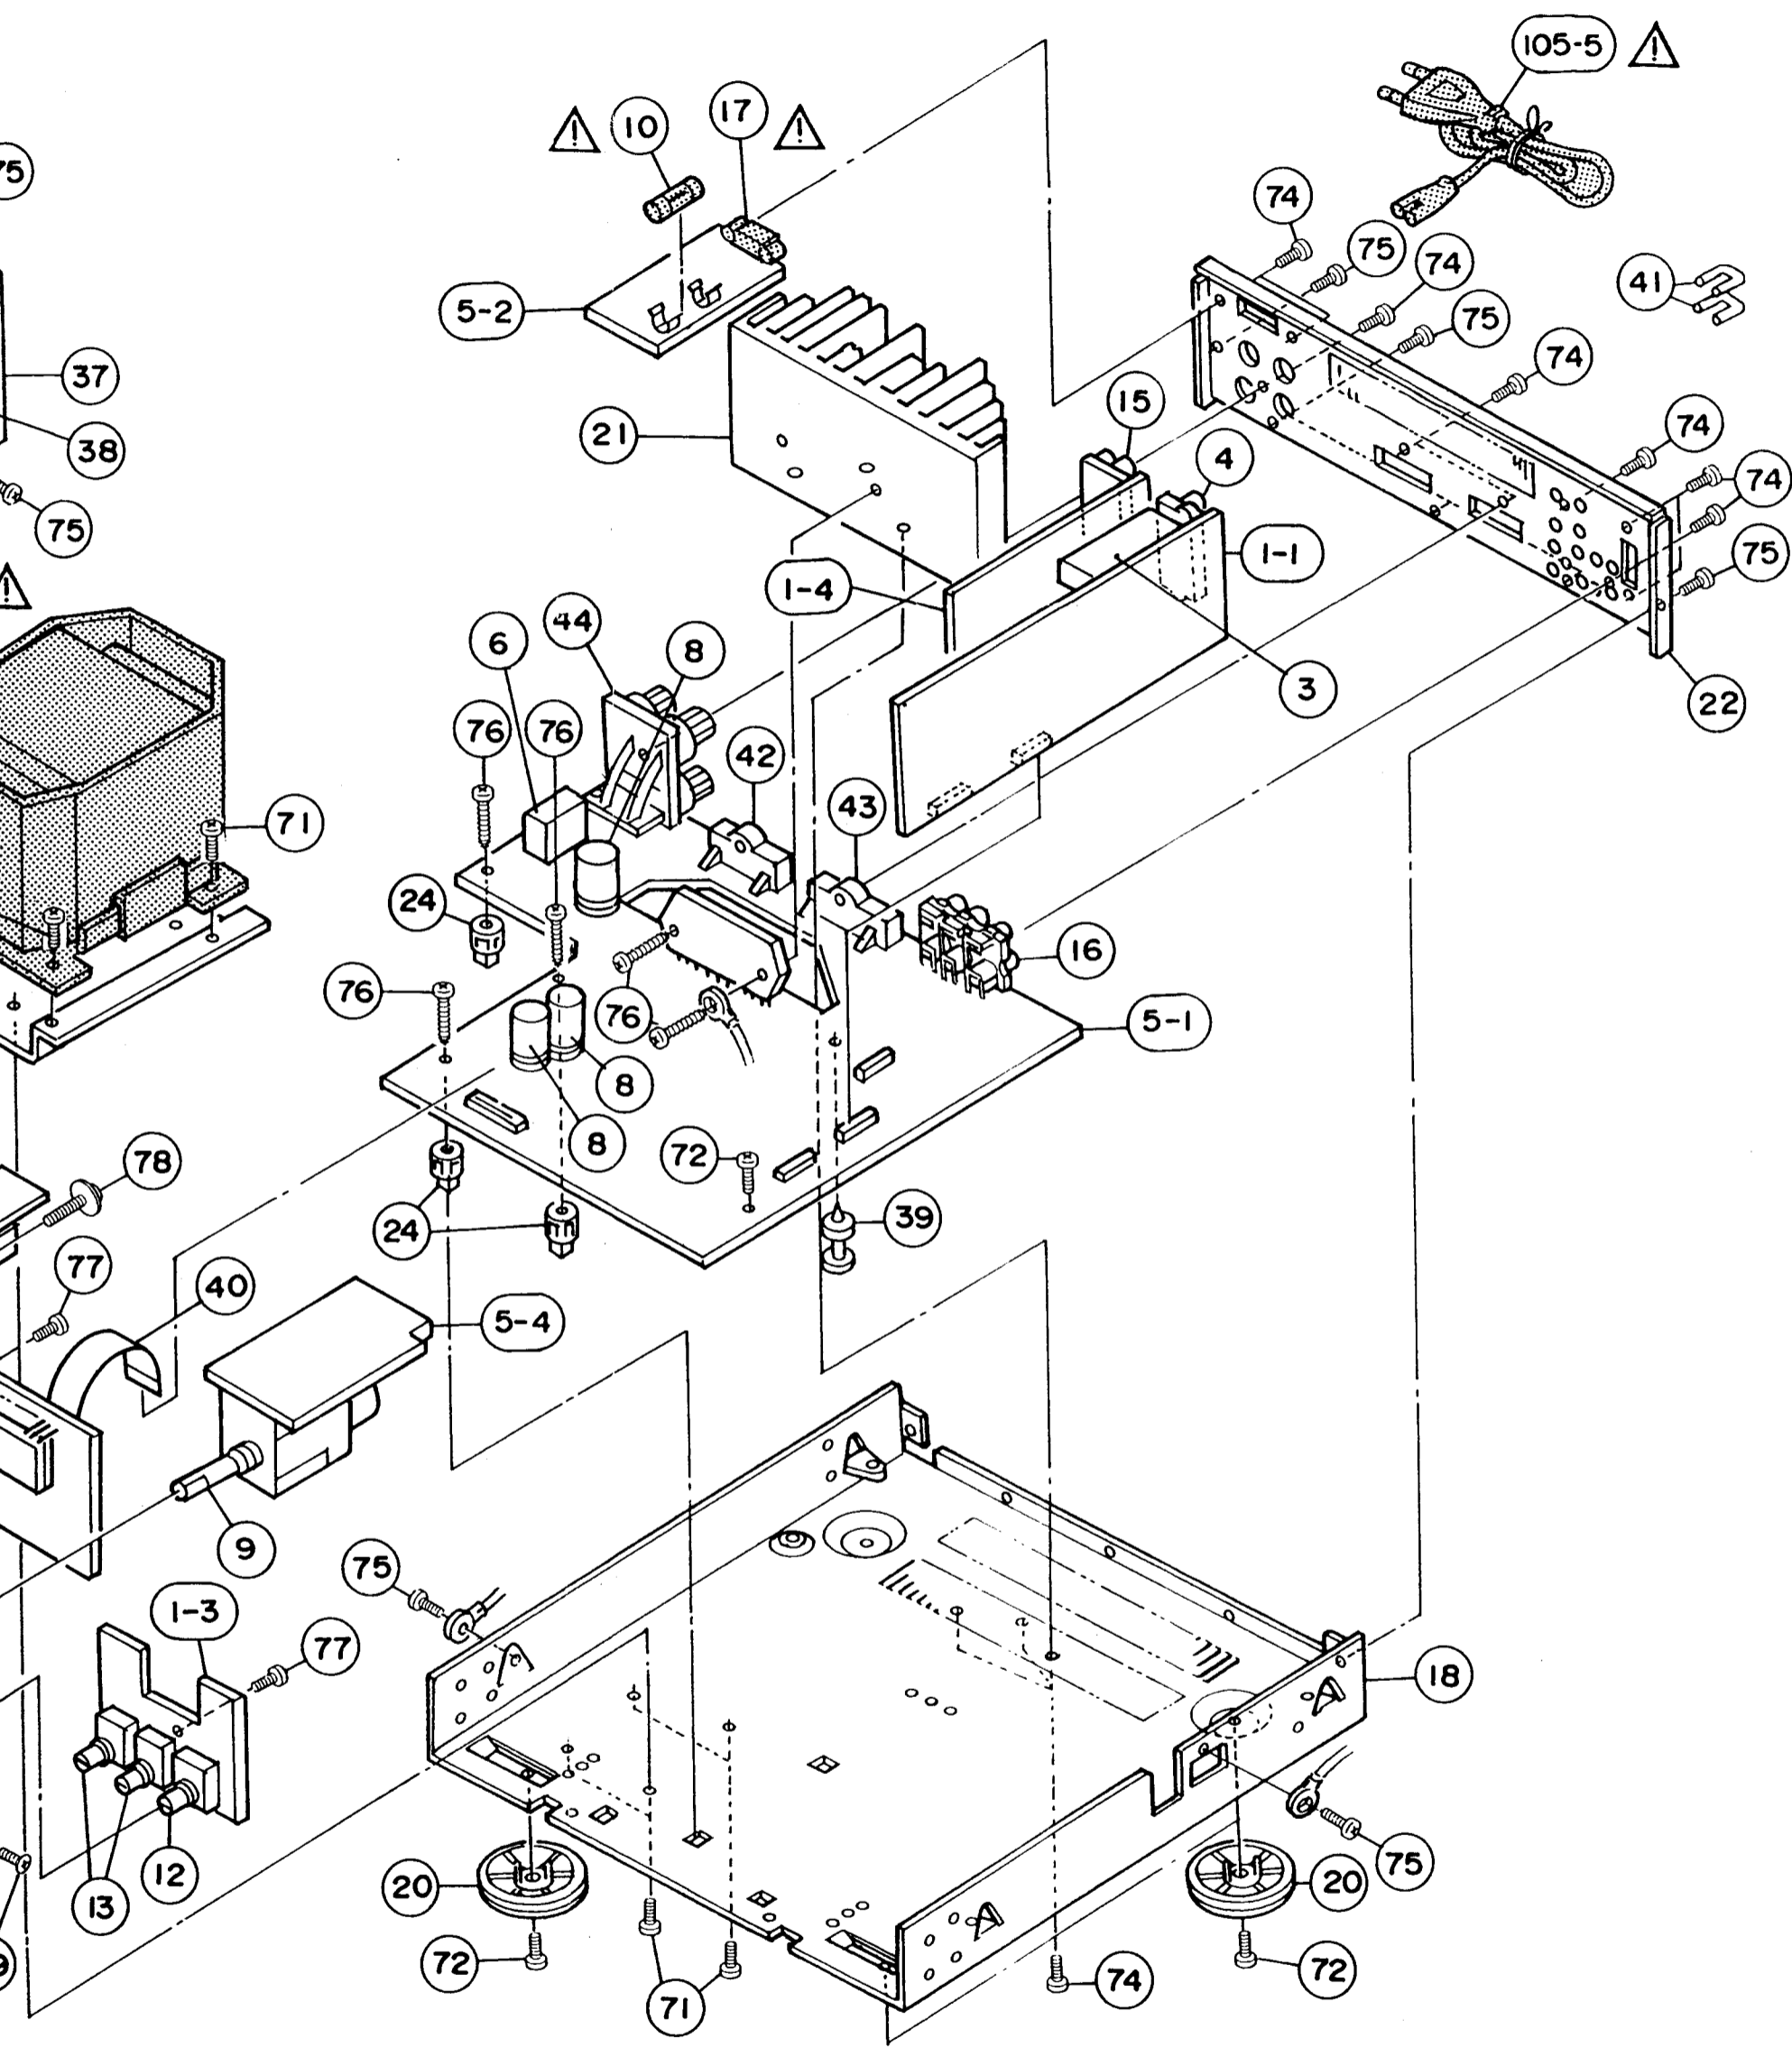

ing, or in some case


CD PLAYER SECTION

DISASSEMBLY PROCEDURES

(Follow these procedures in reverse order to reassemble.)

1. Removing the top cover and front panel

- ① Remove the six screws which fasten the top cover.
- ② Remove the two screws of the bottom side which fasten the front panel.

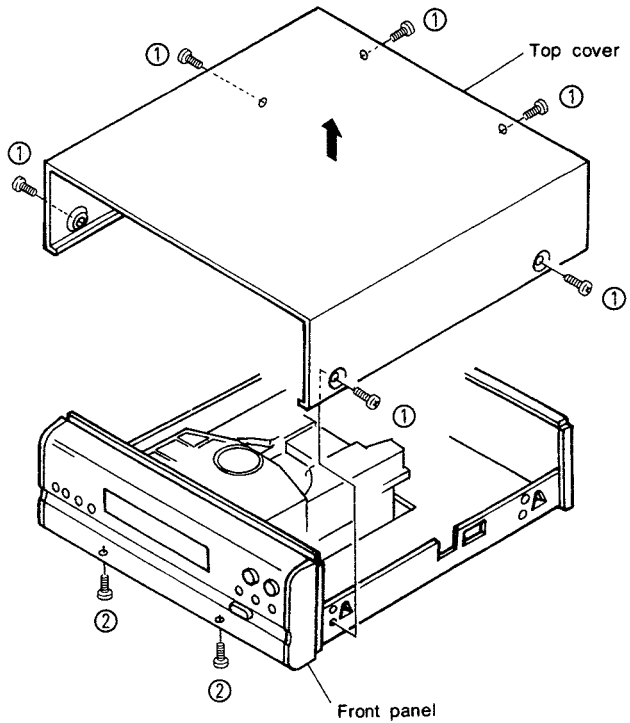



- ③ Disconnect connector CB101(8P), which is attached to the main unit.

- ④ Remove the 2 screws which fasten the side plate (L), (R).
- ⑤ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver).

Use your fingers to push out the hook of the inner panel from the side plate in the direction of the arrow.

Using the same method for the left side, remove the side plate.

- ⑥ Remove the front panel in the direction of the arrow.

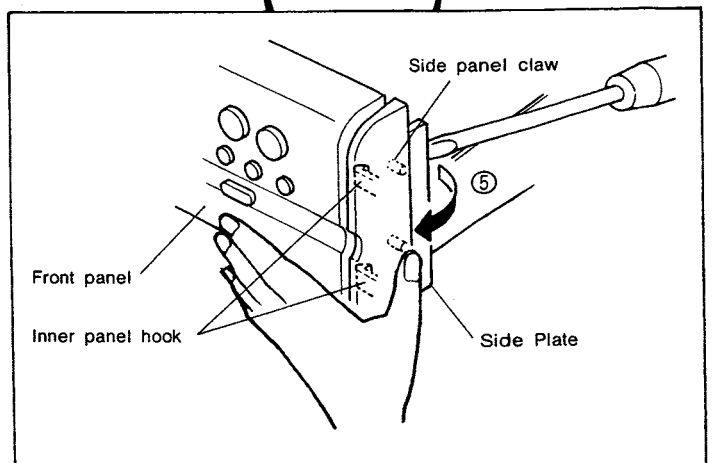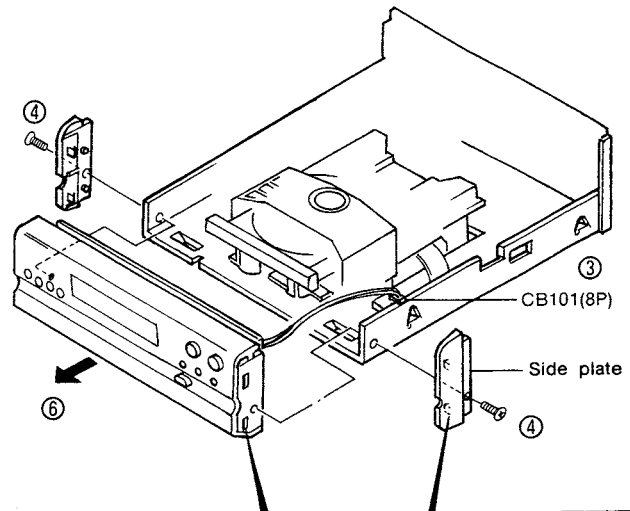


CD PLAYER SECTION

2. Removal of the Various Units


Control Unit (KU-9334-2)

- ① Remove the seven screws which fasten the Control unit and remove the board in the direction of the arrow.
- ② Detach the inner panel hook's catch in the direction of the arrow.

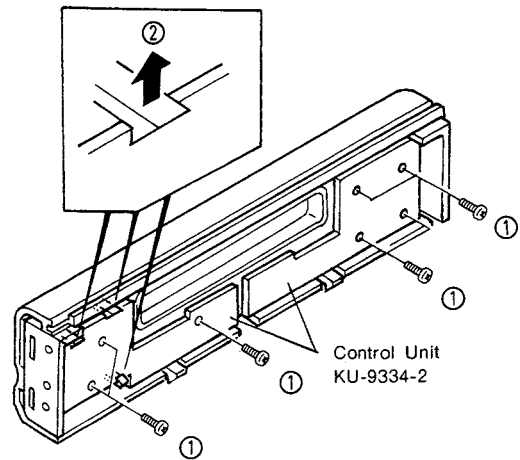


3. Removal of the CD Mechanism Unit

- ③ Disconnect connectors CN204(5P) and CB504(23P) which are attached to the main unit.
- ④ Remove the three screws which fasten the CD mechanism unit and remove the mechanism unit in the direction of the arrow.

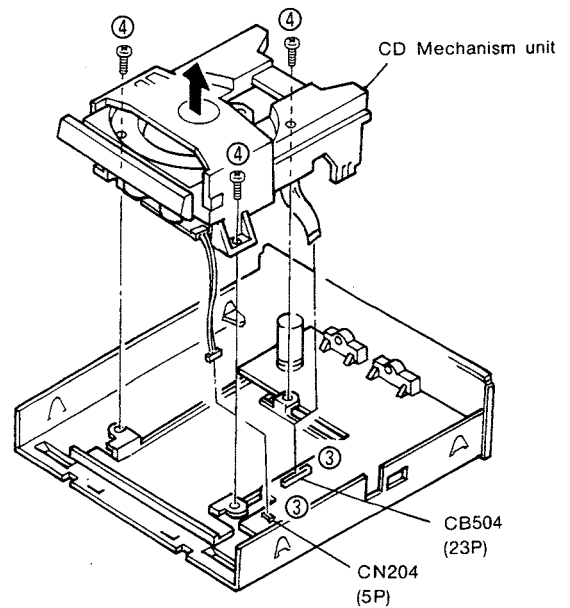

Main Unit (KU-9334-1)

- ⑤ Remove the nine screws which fasten the main unit and remove the board in the direction of the arrow.

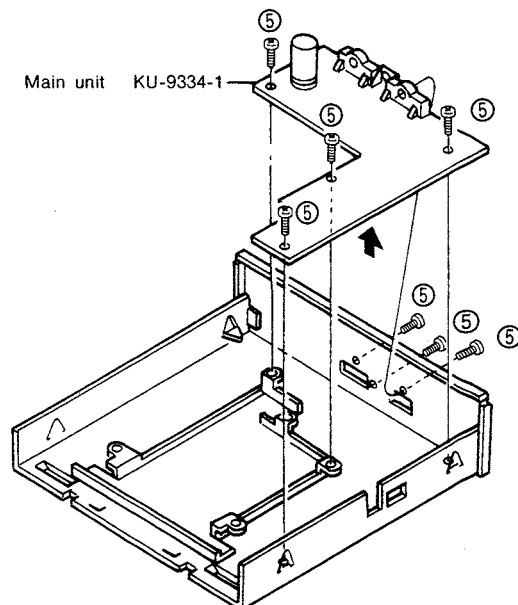

CONFIRMING METHOD OF SERVO

A microcomputer adopted to this unit has the service programs so as to perform confirming more easily with the operation buttons. Digital servo adopted to this unit is became automatic adjustment status in focus gain and tracking gain.

1. Actuating the Service Program

Disconnect 15P system connector of the main unit, and while pressing the ► PLAY and ▲ OPEN/CLOSE buttons at the same time, switch on the system power. The power will be supplied automatically in 2 to 3 seconds, the display of the receiver will indicate " 01 ", and the system will enter the service mode.

NOTE: Once the service program starts the operation buttons cannot be used for normal operation.

2. Operation Function at Service Program Actuation

| Button Operation | Operation Function | Explanation |
|------------------|---|---|
| ▲ OPEN/CLOSE | Opens or closes disc holder button. | <ul style="list-style-type: none"> • Open or closes only when disc is stopped. • Operate other keys after open or close. |
| ■ STOP | Stops system function. | <ul style="list-style-type: none"> • Displays track number 01. • Press when adjustment completed or do it again. |
| ► PLAY | Starts Focus servo and disc turns when the PLAY button is pushed while track number 01 is displayed. | <ul style="list-style-type: none"> • Push to check the tracking offset. • When completed, displays track number 02 → 03 (02: automatic adjustment). |
| | Starts Focus servo, Tracking servo, Slide servo and Spindle servo when the PLAY button is pushed while track number 03 is displayed. | <ul style="list-style-type: none"> • Push to check the HF level. • When completed, displays track number 04. |
| PAUSE | Displays a result of Focus gain automatic adjustment when the PAUSE button is pushed while track number 03 is displayed. | <ul style="list-style-type: none"> • When completed, Display shows: TRACK TIME 1- XX XX TIME display shows automatic adjustment value. Displays: 01 27~00 01 or 00 EE |
| | Displays a result of Tracking gain automatic adjustment when the PAUSE button is pushed while the result of the automatic focus gain adjustment is displayed. | <ul style="list-style-type: none"> • When completed, Display shows: TRACK TIME 2- XX XX TIME display shows automatic adjustment value. Displays: 01 27~00 01 or 00 EE |
| Other Buttons | Unable to obtain normal function. | <ul style="list-style-type: none"> • Never attempt to operate the buttons other than the above. • If the buttons are erroneously pressed, promptly turn OFF the power switch. |


(Caution)

- During the service program is in operation, do not use remote control.

CD PLAYER SECTION

3. Confirming Method

- (1) Required Measuring Equipment
 - 1) Dual-trace oscilloscope
 - 2) Test disc: CA-1094
- (2) Check Point
CD Mechanical unit PWB (pattern view)

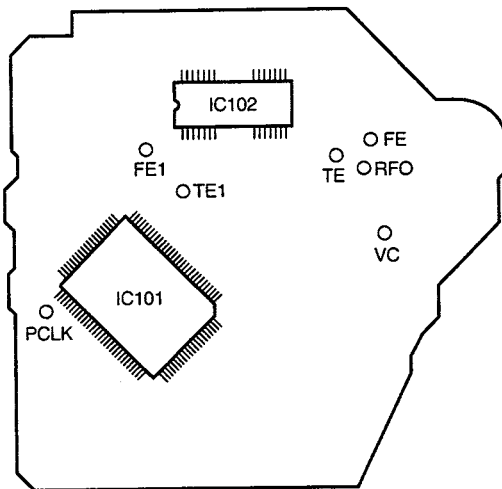

(3) Confirming Procedure

- 1) Actuate the service program.
- 2) Check the value of Focus gain automatic adjustment.
- 3) Check the value of Tracking gain automatic adjustment.
- 4) Check for Tracking offset.
- 5) Finish the service program and return the mode to normal operation (turn ON the power switch in normal manner).
- 6) Check for HF level.

(4) Confirming Focus Gain

- 1) Press **▶PLAY** button. (Track No. indication 03)
- 2) Press **⏸PAUSE** button. (Track No. indication 1-)
- 3) Check for automatic adjustment value.

Automatic adjustment value: 00 82 ~ 00 34 (normal temperature) (Test disc: CA-1094)
01 04 ~ 00 28 (0°C~40°C)

Note: As it is a possibility of abnormality in pick-up when automatic adjustment value is 00 EE or less than 00 27 execute the confirmation for pick-up according to pick-up replacement standard.

If there is no abnormality in pick-up as described in pick-up replacement standard notes, no problem will occur for disc playback even though the automatic adjustment value is 00 EE or less than 00 27

(5) Confirming Tracking Gain

- 1) After checking the focus gain in (4) press **⏸PAUSE** button. (Track No. indication 2-)
- 2) Check for automatic adjustment value.


Automatic adjustment value: 00 81 ~ 00 23 (normal temperature) (Test disc: CA-1094)
01 03 ~ 00 18 (0°C~40°C)

Note: As it is a possibility of abnormality in pick-up when automatic adjustment value is 00 EE or less than 00 22 execute the confirmation for pick-up according to pick-up replacement standard.




If there is no abnormality in pick-up as described in pick-up replacement standard notes, no problem will occur for disc playback even though the automatic adjustment value is 00 EE or less than 00 22

CD PLAYER SECTION

(6) Confirming Tracking offset (E/F Balance)


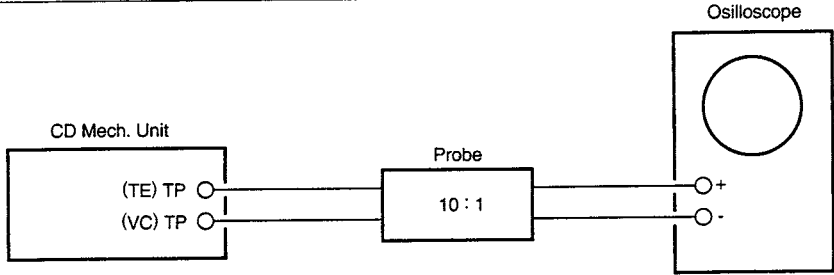
| Connection | | | |
|--|------------|----------------|--|
|  | | | |
| Oscilloscope | | Check | Step |
| V | H | (Oscilloscope) | |
| 0.1 v/div | 1~2 ms/div | | <ol style="list-style-type: none"> 1. Push ▲ OPEN/CLOSE button and load disc holder reference disk. 2. Push ▲ OPEN/CLOSE button and close disc holder. 3. Push ▶ PLAY button to turn disc. (Displays track number 03) 4. Short (+)(-) of oscilloscope and check the base line. 5. Confirm that upper and lower amplitude of the waveform is symmetric against 0V. |

(7) Confirming HF Level
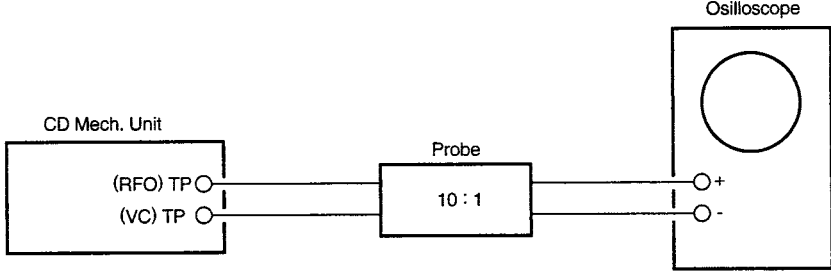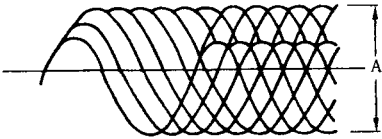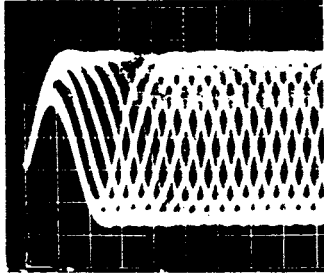
| Connection | | | |
|--|--------------------------------|---|--|
|  | | | |
| Oscilloscope | | Check | Step |
| V | H | (Oscilloscope) | |
| 50 mv/div or 20 mv/div | 0.2 μs/div or 0.5 μs/div |  $A = 1.36 \pm 0.2 V_{p-p}$ | <ol style="list-style-type: none"> 1. Push the ▶ PLAY button while track number 03 is displayed. (Displays track number 04) 2. Check HF level of oscilloscope. 3. Confirm that the waveform is in good shape. (eye pattern in center must be able to discriminate clearly.) |
| | |  | |
| | | <ul style="list-style-type: none"> • Set input mode to ALTERNATE or CHOPPER. | |

CD PLAYER SECTION

μPD75517GF-369-3B9 (IC103)

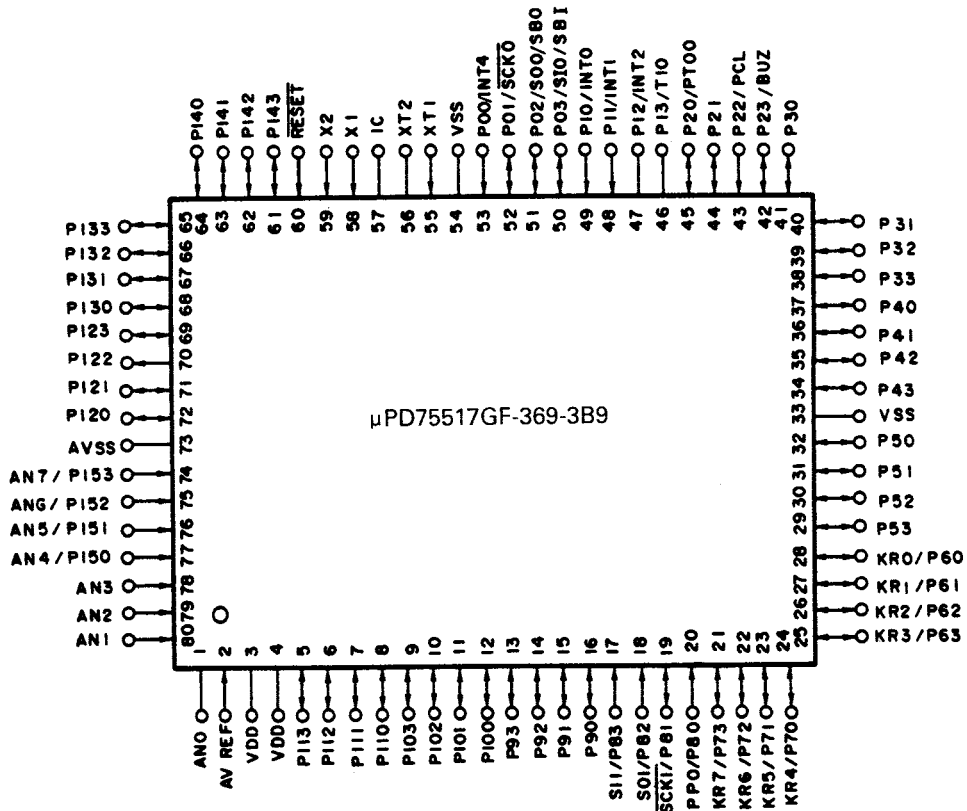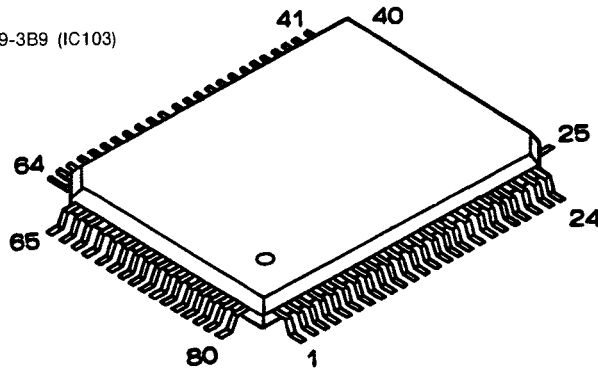

CD PLAYER SECTION

● Pin Description




| Pin No. | Name | Port | I/O | Function | Operation Mode | Pin No. | Name | Port | I/O | Function | Operation Mode |
|---------|----------|---------|-----|---------------------------------------|----------------|---------|--------|-------|-----|--|----------------|
| 1 | | AN0 | | Not used | | 41 | SCLK | P30 | OUT | Clock for SENS serial data read out | |
| 2 | | AVREF | | Not used | | 42 | DATA | P23 | OUT | LSI control | |
| 3 | | VDD | | +5 V power supply | | 43 | XLT | P22 | OUT | LSI control | |
| 4 | | VDD | | +5 V power supply | | 44 | CLK | P21 | OUT | LSI control | |
| 5 | | P113 | | Not used | | 45 | LASER | P20 | OUT | Laser diode on/off | H = ON |
| 6 | | P112 | | Not used | | 46 | SENS | P13 | IN | Use for SENS surveillance | |
| 7 | | P111 | | Not used | | 47 | GFS | INT2 | IN | Used for GFS surveillance | |
| 8 | | P110 | | Not used | | 48 | SCOR | INT1 | IN | Used for SCOR surveillance | |
| 9 | XRST | P103 | OUT | LPeripheral IC reset | L→H | 49 | RXD | INT0 | IN | RXD surveillance and reception | H→L→H |
| 10 | | P102 | | Not used | | 50 | SUB Q | S10 | IN | Used for sub code reception | H→L→H |
| 11 | | P101 | | Not used | | 51 | | S00 | | Not used | |
| 12 | | P100 | | Not used | | 52 | SQCK | SCK0 | OUT | Clock used for sub code reception | |
| 13 | | P93 | | Not used | | 53 | DSPENB | INT4 | IN | Display transmission approval surveillance, L = Approval | |
| 14 | | P92 | | Not used | | 54 | GND | VSS | | | |
| 15 | PTSEARCH | P91 | | Outputs "H" during high-speed search | L→H→L | 55 | | XT1 | | Not used; connected to GND | |
| 16 | | P90 | | Not used | | 56 | | XT2 | | Not used | |
| 17 | DISPTRIG | S11 | IN | Display communications start trigger | H→L | 57 | | IC | | Not used; connected to GND | |
| 18 | DISPDATA | S01 | OUT | Data line for LCD | | 58 | | X1 | | Ceramic oscillator, 4.00 MHz | |
| 19 | DISPCLK | SCK1 | OUT | Communications clock for the display | | 59 | | X2 | | Ceramic oscillator | |
| 20 | | PP0/P80 | | Not used | | 60 | | RESET | IN | Connected to RESET IC | L→H |
| 21 | | KR7 | | Not used | | 61 | FOK | P143 | IN | Used for FOK surveillance | |
| 22 | KS2 | KR6 | OUT | Key scan (Edit Line) | L→H→L | 62 | SWOP | P142 | IN | Used for Open Switch surveillance | L = Open |
| 23 | KS3 | KR5 | OUT | Key scan (FF Line) | L→H→L | 63 | SWCL | P141 | IN | Used for Close Switch surveillance | L = Close |
| 24 | KS0 | KR4 | OUT | Key scan (OP/CL Line) | L→H→L | 64 | | P140 | | Not used | |
| 25 | | KR3/P63 | | Not used | | 65 | CLS | P133 | OUT | Tray Close | H = Close |
| 26 | | KR2/P62 | | Not used | | 66 | OPN | P132 | OUT | Tray Open | H = Open |
| 27 | | KR1/P61 | | Not used | | 67 | DMUTE | P131 | OUT | Digital mute on/off | L→H→L |
| 28 | | KR0/P60 | | Not used | | 68 | TXD | P130 | OUT | Auto function transmission | |
| 29 | | P53 | | Not used | | 69 | | P123 | | Not used | |
| 30 | | P52 | | Not used | | 70 | AMUTE | P122 | OUT | Analog mute on/off, H = Off | H |
| 31 | | P51 | | Not used | | 71 | EMPH | P121 | OUT | Emphasis on/off, H = On | |
| 32 | | P50 | | Not used | | 72 | | P120 | | Not used | |
| 33 | GND | VSS | | 0 volts | | 73 | GND | AVSS | | | |
| 34 | | P43 | IN | Not used | | 74 | KR4 | P153 | IN | Key input | |
| 35 | SEL | P42 | IN | Auto power off select | H = Auto mode | 75 | KR3 | P152 | IN | Key input | |
| 36 | CD-G | P41 | IN | CD-G connection check, H = Connection | | 76 | KR2 | P151 | IN | Key input | |
| 37 | | P40 | IN | Not used | | 77 | KR1 | P150 | IN | Key input | |
| 38 | | P33 | | Not used | | 78 | | AN3 | | Not used | |
| 39 | | P32 | | Not used | | 79 | | AN2 | | Not used | |
| 40 | | P31 | | Not used | | 80 | | AN1 | | Not used | |

CD PLAYER SECTION

SEMICONDUCTORS

● IC's

BA6297AFP

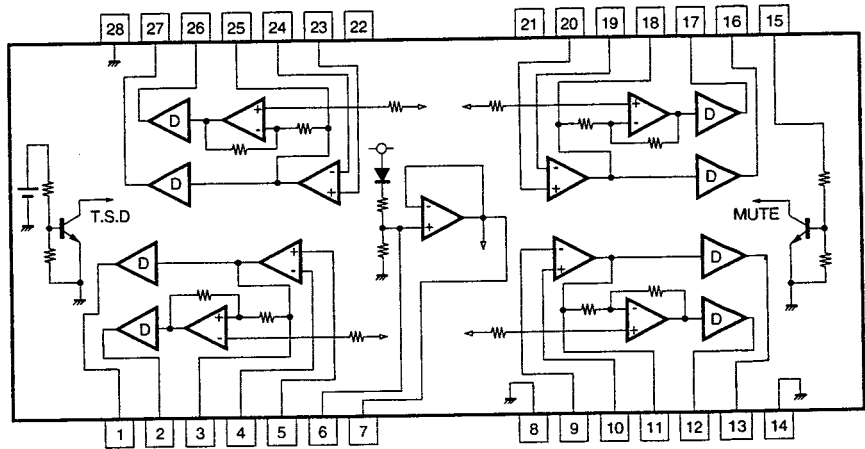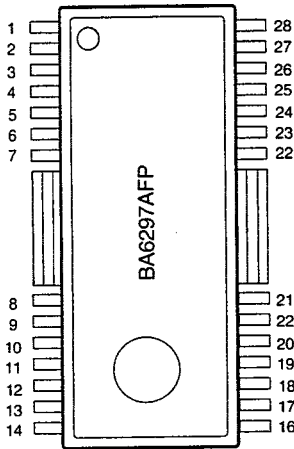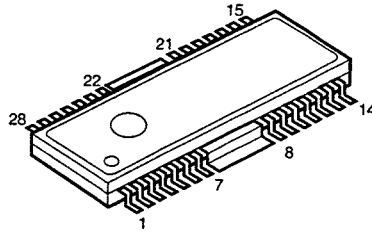

T.S.D: thermal short down
D: driver buffer

BA6297AFP Terminal Function



| Pin No. | Symbol | I/O | Function |
|---------|--------|-----|---|
| 1 | | O | CH1 output terminal (+). |
| 2 | | O | CH1 output terminal (-). |
| 3 | | O | CH1 Pre-Amplifier output terminal. |
| 4 | | I | CH1 Pre-Amplifier negative input terminal. |
| 5 | | I | CH1 Pre-Amplifier positive input terminal. |
| 6 | | | Internal Vref-Amplifier resistor bias terminal. |
| 7 | | O | Internal Vref-Amplifier output terminal. |
| 8 | GND | | Vref-Amplifier and constant current ground. |
| 9 | | I | CH2 Pre-Amplifier positive input terminal. |
| 10 | | I | CH2 Pre-Amplifier negative input terminal. |
| 11 | | O | CH2 Pre-Amplifier output terminal. |
| 12 | | O | CH2 output terminal (-). |
| 13 | | O | CH2 output terminal (+). |
| 14 | GND | | CH2 and CH3 drive ground. |

| Pin No. | Symbol | I/O | Function |
|---------|--------|-----|--|
| 15 | | I | Driver mute control terminal. |
| 16 | | O | CH3 output terminal (+). |
| 17 | | O | CH3 output terminal (-). |
| 18 | | O | CH3 Pre-Amplifier output terminal. |
| 19 | | I | CH3 Pre-Amplifier negative input terminal. |
| 20 | | I | CH3 Pre-Amplifier positive input terminal. |
| 21 | Vcc | | CH2 and CH3 driver power supply. |
| 22 | Vcc | | CH1 and CH4 driver power supply. |
| 23 | | I | CH4 Pre-Amplifier positive input terminal. |
| 24 | | I | CH4 Pre-Amplifier negative input terminal. |
| 25 | | O | CH4 Pre-Amplifier output terminal. |
| 26 | | O | CH4 output terminal (-). |
| 27 | | O | CH4 output terminal (+). |
| 28 | GND | | CH1 and CH4 driver ground. |

Note: Each driver output polarity is reference to Pre-Amplifier output terminal polarity (+).

CD PLAYER SECTION

CXD2515Q

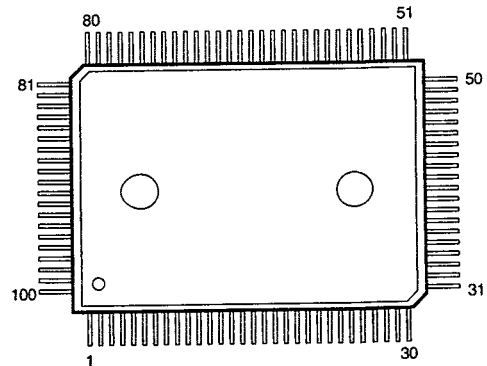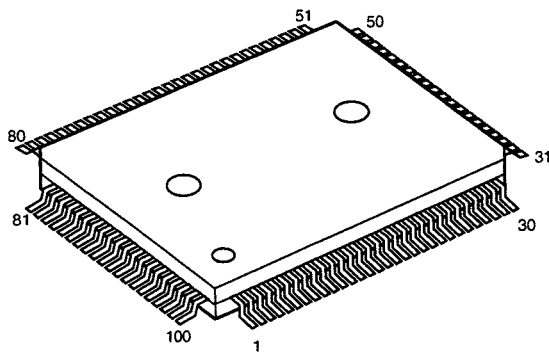





CXD2515Q Terminal Function

| Pin No. | Symbol | I/O | Function |
|---------|--------|-----|---|
| 1 | SRON | O | Sled drive output signal. |
| 2 | SRDR | O | Sled drive output signal. |
| 3 | SFON | O | Sled drive output signal. |
| 4 | TFDR | O | Tracking drive output signal. |
| 5 | TRON | O | Tracking drive output signal. |
| 6 | TRDR | O | Tracking drive output signal. |
| 7 | TFON | O | Tracking drive output signal. |
| 8 | FFDR | O | Focus drive output signal. |
| 9 | FRON | O | Focus drive output signal. |
| 10 | FRDR | O | Focus drive output signal. |
| 11 | FFON | O | Focus drive output signal. |
| 12 | VCOO | O | Osc. circuit output for analog EFM PLL. |
| 13 | VCOI | I | Osc. circuit output for analog EFM PLL. |
| 14 | TEST | I | Test terminal, normal GND. |
| 15 | DVss | - | Digital ground. |
| 16 | TES2 | I | Test terminal, normally GND. |
| 17 | TES3 | I | Test terminal, normally GND. |
| 18 | PDO | O | Change pump output for analog EFM PLL. |
| 19 | VPCO | O | PLL charge pump output for variable pitch. |
| 20 | VCKI | I | Clock input from external VCO for variable pitch. |
| 21 | AVD2 | - | Analog power supply. |
| 22 | IGEN | I | Power supply terminal for OP amplifier. |
| 23 | AVS2 | - | Analog ground. |
| 24 | ADII | I | A/D converter input terminal. |
| 25 | ADIO | O | OP amplifier output terminal. |
| 26 | RFDC | I | RF signal input. |
| 27 | TE | I | Tracking error signal input. |
| 28 | SE | I | Sled error signal input. |
| 29 | FE | I | Focus error signal input. |
| 30 | VC | I | Middle point voltage input terminal. |
| 31 | FILO | O | Filter output for master PLL. |
| 32 | FILI | I | Filter input for master PLL. |
| 33 | PCO | O | Charge pump output for master PLL. |
| 34 | CLTV | I | VCO control voltage input for master. |
| 35 | AVSI | - | Analog ground. |
| 36 | RFAC | I | EFM signal input. |
| 37 | BIAS | I | Asymmetry circuit constant current output. |
| 38 | ASY1 | I | Asymmetry comparator voltage input. |
| 39 | ASY0 | O | EFM full swing output. |
| 40 | AVDI | - | Analog power supply. |




CD PLAYER SECTION

| Pin No. | Symbol | I/O | Function |
|---------|------------------|-----|---|
| 41 | DV _{DD} | - | Digital power supply. |
| 42 | ASYE | I | Asymmetry circuit ON/OFF. |
| 43 | PSSL | I | Mode shift input of audio data output. |
| 44 | WDCK | O | 48 bit slot D/A interface word clock. |
| 45 | LRCK | O | 48 bit slot D/A interface LR clock. |
| 46 | DATA | O | DA16 output at PSSL=1, 48 bit slot serial data at PSSL=0. |
| 47 | BCLK | O | DA15 output at PSSL=1, 48 bit slot bit clock at PSSL=0. |
| 48 | 64DATA | O | DA14 output at PSSL=1, 64 bit slot serial data at PSSL=0. |
| 49 | 64BCLK | O | DA13 output at PSSL=1, 64 bit slot bit clock at PSSL=0. |
| 50 | 64LRCK | O | DA12 output at PSSL=1, 64 bit slot LR clock at PSSL=0. |
| 51 | GTOP | O | DA11 output at PSSL=1, GTOP output at PSSL=0. |
| 52 | XUGF | O | DA10 output at PSSL=1, XUGF output at PSSL=0. |
| 53 | XPLCK | O | DA09 output at PSSL=1, XPLCK output at PSSL=0. |
| 54 | GFS | O | DA08 output at PSSL=1, GFS output at PSSL=0. |
| 55 | RFCK | O | DA07 output at PSSL=1, RFCK output at PSSL=0. |
| 56 | C2PO | O | DA06 output at PSSL=1, C2PO output at PSSL=0. |
| 57 | XRAOF | O | DA05 output at PSSL=1, XRAOF output at PSSL=0. |
| 58 | MNT3 | O | DA04 output at PSSL=1, MNT3 output at PSSL=0. |
| 59 | MNT2 | O | DA03 output at PSSL=1, MNT2 output at PSSL=0. |
| 60 | MNT1 | O | DA02 output at PSSL=1, MNT1 output at PSSL=0. |
| 61 | MNT0 | O | DA01 output at PSSL=1, MNT0 output at PSSL=0. |
| 62 | XTAI | I | X'tal Osc. circuit input. |
| 63 | XTAO | O | X'tal Osc. circuit output. |
| 64 | XTSL | I | X'tal select input terminal. |
| 65 | DV _{SS} | - | Digital ground. |
| 66 | FSTI | I | 2/3 cycle input of Pin 62, 63 |
| 67 | FSTO | O | 2/3 cycle output of Pin 62, 63 |
| 68 | C4M | O | 4.2336 MHz output. |
| 69 | C16M | O | 16.9344 MHz output. |
| 70 | MD2 | I | Digital-Out ON/OFF control terminal. |
| 71 | DOUT | O | Digital-Out output terminal. |
| 72 | EMPH | O | Playback disc emphasis mode output. |
| 73 | WFCK | O | WFCK output. |
| 74 | SCOR | O | Sub code sync output terminal. |
| 75 | SBSO | O | Sub P~W serial output. |
| 76 | EXCK | I | Clock input for SBSO read out. |
| 77 | SUBQ | O | Sub Q 80 bit output. |
| 78 | SQCK | I | Clock input for SQSO read out. |
| 79 | MUTE | I | Mute shift terminal. |
| 80 | SENS | O | SENS output. |
| 81 | XRST | I | System reset. |
| 82 | DIRC | I | Using at 1 track jump. |
| 83 | SCLK | I | Clock for SENS serial data read out. |
| 84 | DFSW | I | DFCT shift terminal. |
| 85 | ATSK | I | Anti-shock terminal. |
| 86 | DATA | I | Serial data input from CPU. |
| 87 | XLAT | I | Latch input from CPU. |
| 88 | CLOCK | I | Serial data transfer clock input from CPU. |

CD PLAYER SECTION

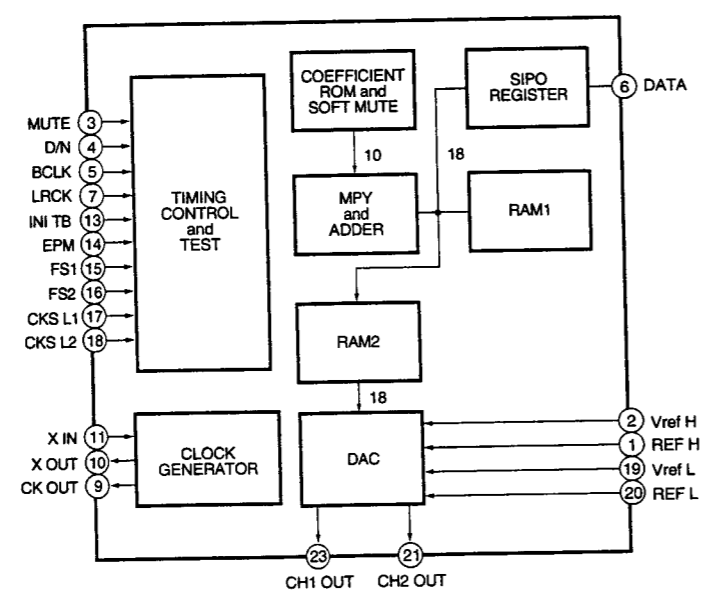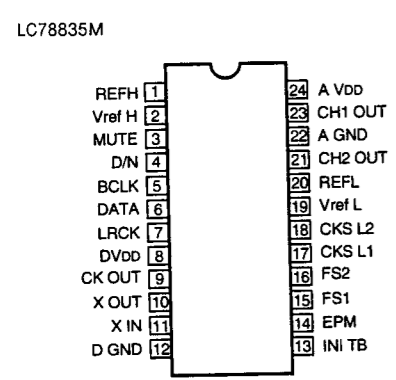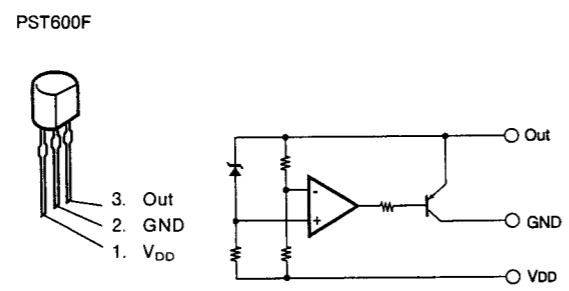
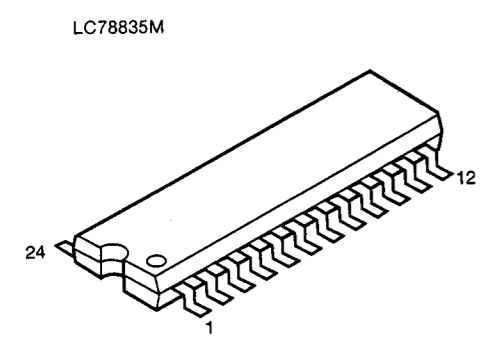


BA178M05 (IC251)

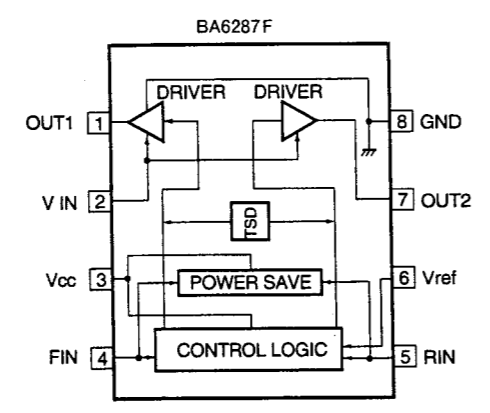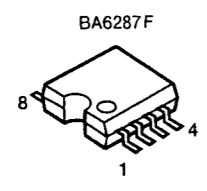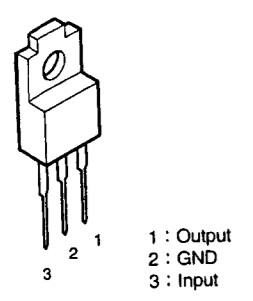



● Transistors

2SD1762 (E/F)

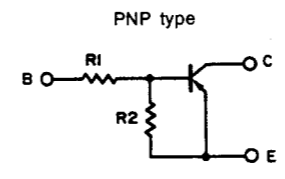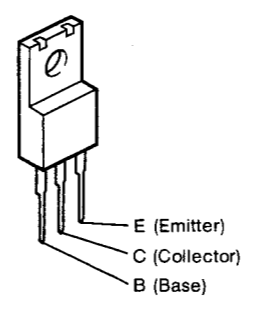


| | R1 | R2 |
|----------|---------|---------|
| DTA124ES | 22k ohm | 22k ohm |

- DTA124ES PNP type
- DTC144ES } NPN type
- DTC323TS }
- DTC114ES }

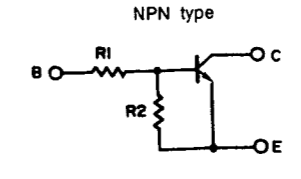
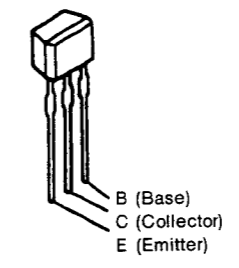


| | R1 | R2 |
|----------|----------|---------|
| DTC144ES | 47k ohm | 47k ohm |
| DTC323TS | 2.2k ohm | - |
| DTC114ES | 10k ohm | 10k ohm |

2SA933S(S)

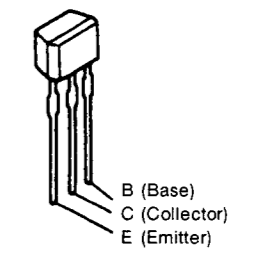


● Diodes

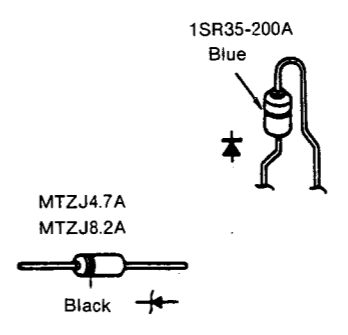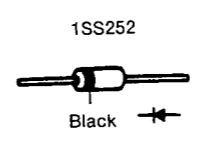

● IC PROTECTORS

ICP-N15 (IC253)

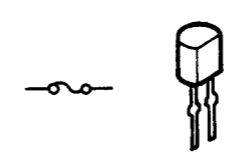

CD PLAYER SECTION

PRINTED WIRING BOARD

1 2 3 4 5 6 7 8

KU-9282 CD UNIT ASS'Y
Component Side

| KU-9334 CD UNIT ASS'Y | |
|-----------------------|--------------|
| 1 | MAIN UNIT |
| 2 | DISPLAY UNIT |



A

B

C

D

E

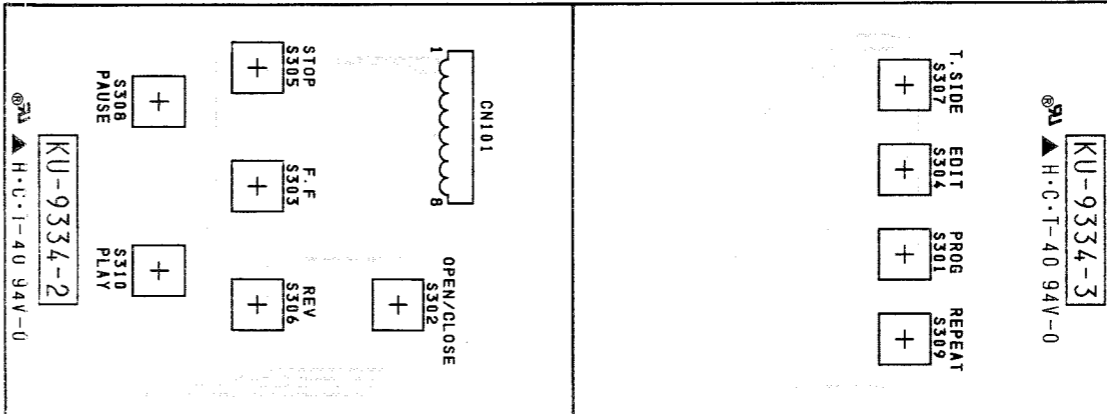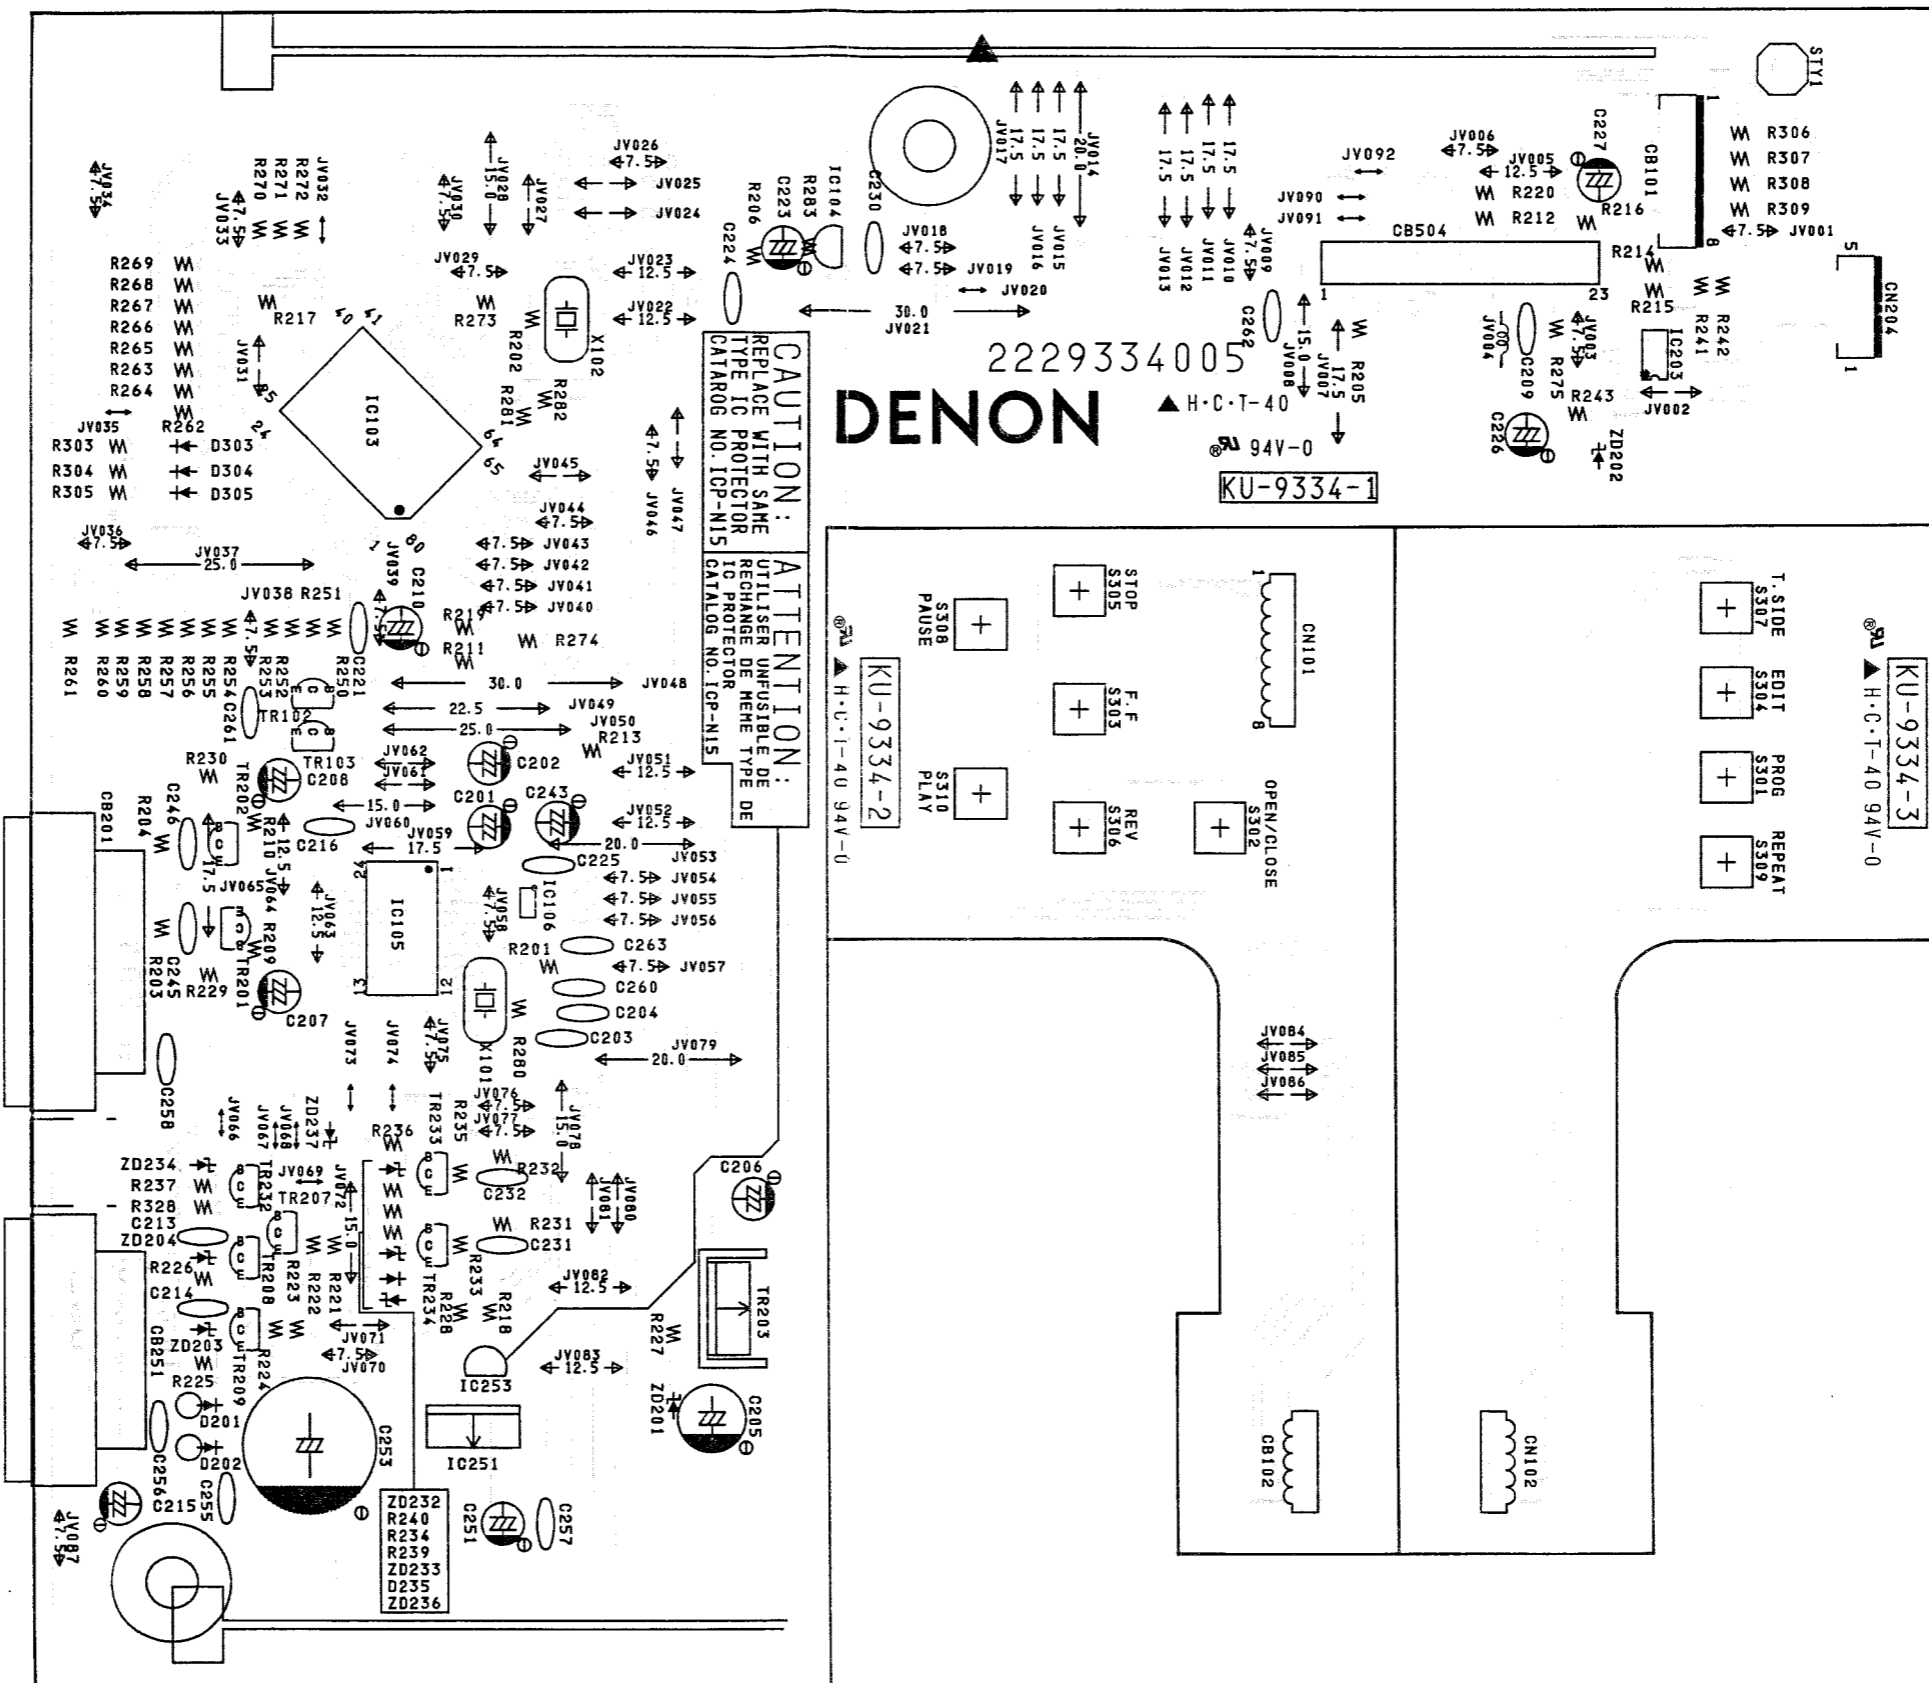

CD PLAYER SECTION

NOTE ON PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W. Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol Δ have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

Resistors

Ex.: RN 14K 2E 182 G FR
Type Shape and performance Power Resistance Allowable error Others

| | | | |
|------------------------|-----------|----------|--------------------------|
| RD : Carbon film | 2B : 1/8W | F : ±1% | P : Pulse-resistant type |
| RC : Composition | 2E : 1/4W | G : ±2% | NL : Low noise type |
| RS : Metalloxiide film | 2H : 1/2W | J : ±5% | NB : Non-burning type |
| RW : Winding | 3A : 1W | K : ±10% | FR : Fuse-resistor |
| RN : Metal film | 3D : 2W | M : ±20% | F : Lead wire forming |
| RK : Metal mixture | 3F : 3W | | |
| | 3H : 5W | | |

*** Resistance**

1 8 2 ⇒ 1800 ohm = 1.8 kohm
Indicates number of zeros after effective number
2-digit effective number

Units: ohm

1 R 2 ⇒ 1.2 ohm
1-digit effective number.
2-digit effective number, decimal point indicated by R.

Units: ohm

*** Capacity (electrolyte only)**

2 2 R ⇒ 2200 μF
Indicates number of zeros after effective number.
2-digit effective number.

Units: μF

2 R 2 ⇒ 2.2 μF
1-digit effective number.
2-digit effective number, decimal point indicated by R.

Units: μF

Capacitors

Ex.: CE 04W 1H 2R2 M BP
Type Shape and performance Dielectric strength Capacity Allowable error Others

| | | | |
|---------------------------------|-----------|-------------|----------------------------------|
| CE : Aluminum foil electrolyte | 0J : 6.3V | F : ±1% | HS : High stability type |
| CA : Aluminum solid electrolyte | 1A : 10V | G : ±2% | BP : Non-polar type |
| CS : Tantalum electrolyte | 1C : 16V | J : ±5% | HR : Ripple-resistant type |
| CQ : Film | 1E : 25V | K : ±10% | DL : For charge and discharge |
| CK : Ceramic | 1V : 35V | M : ±20% | HF : For assuring high frequency |
| CC : Ceramic | 1H : 50V | Z : +80% | U : UL part |
| CP : Oil | 2A : 100V | -20% | C : CSA part |
| CM : Mica | 2B : 125V | P : +100% | W : UL-CSA type |
| CF : Metallized | 2C : 160V | -0% | F : Lead wire forming |
| CH : Metallized | 2D : 200V | C : ±0.25pF | |
| | 2E : 250V | D : ±0.5pF | |
| | 2H : 500V | = : Others | |
| | 2J : 630V | | |

*** Capacity (except electrolyte)**

2 R 2 ⇒ 2200pF = 2200 μF = 0.002 μF
(More than 2) — Indicates number of zeros after effective number.
2-digit effective number.

Units: μF

2 2 1 ⇒ 220pF
(0 or 1) — Indicates number of zeros after effective number.
2-digit effective number.

Units: pF

When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

KU-9334 PARTS LIST OF UCD-77

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks | Q'ty |
|-----------------------------|--------------|---------------------------|--------------------|----------|--------------|-------------------------|---------|------|
| SEMICONDUCTORS GROUP | | | | | | | | |
| IC103 | 262 2233 004 | IC UPD75517GF--369 | | CN101 | 204 2612 030 | 8 P KR-DA Conn. Cord WT | | 1 |
| IC104 | 263 1026 901 | IC PST600F | | CB101 | 205 0343 087 | 8 P Conn. Base(KR-PH) | | 1 |
| IC105 | 262 1824 906 | IC LC78835M | | CB201 | 204 8284 022 | 15 P System Socket | | 1 |
| IC106 | 262 2257 909 | IC TC4S81F TE85L | | CB204 | 205 0829 051 | 5 P CT Conn. Base | | 1 |
| IC203 | 263 0994 908 | IC BA6287F | | CB251 | 205 0730 056 | 13 P System Socket(BU) | | 1 |
| IC251 | 263 1024 000 | IC BA178M05 | | CB504 | 205 0990 003 | 23 P FFC Conn. Base | | 1 |
| IC253 | 268 0073 905 | IC ICP-N15 | | | 205 0452 017 | Style Pin | | 1 |
| TR102 | 269 0020 906 | Transistor DTC114ES | Built in Resistor | | | | | |
| TR103 | 269 0063 905 | Transistor DTA124ES | Built in Resistor | | 412 9483 009 | Earth Plate | | 1 |
| TR201,202 | 269 0072 909 | Transistor DTC323TS | | | | | | |
| TR203 | 274 0120 002 | Transistor 2SD1762(E/F) | | | | | | |
| TR207~209 | 269 0040 902 | Transistor DTC144ES | Built in Resistor | | | | | |
| TR232 | 269 0020 906 | Transistor DTC114ES | Built in Resistor | | | | | |
| TR233,234 | 271 0192 905 | Transistor 2SA933S(S) | | | | | | |
| D201,202 | 276 0553 905 | Diode 1SR35-200A(T93X) | | | | | | |
| D235 | 276 0616 907 | Diode 1SS252 | | | | | | |
| D303~305 | 276 0616 907 | Diode 1SS252 | | | | | | |
| ZD201 | 276 0644 924 | Zener Diode MTZJ8.2A | | | | | | |
| ZD202 | 276 0643 970 | Zener Diode MTZJ4.7A | | | | | | |
| ZD203,204 | 276 0644 924 | Zener Diode MTZJ8.2A | | | | | | |
| ZD232~234 | 276 0644 924 | Zener Diode MTZJ8.2A | | | | | | |
| ZD236,237 | 276 0644 924 | Zener Diode MTZJ8.2A | | | | | | |
| CAPACITORS GROUP | | | | | | | | |
| C201,202 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | | | | | |
| C203,204 | 253 4536 983 | Chip Ceramic 22 pF/50V | CC45SL1H220J(DD-3) | | | | | |
| C205 | 254 4254 954 | Electrolytic 220 μ F/16V | CE04W1C221M(SME) | | | | | |
| C206~208 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | | | | | |
| C209 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C210 | 254 4252 930 | Electrolytic 100 μ F/10V | CE04W1A101M(SME) | | | | | |
| C213,214 | 253 1179 987 | Chip Ceramic 470 pF/50V | CK45B1H471K(DD-3) | | | | | |
| C215 | 254 4260 948 | Electrolytic 1 μ F/50V | CE04W1H010M(SME) | | | | | |
| C216 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C221 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C223 | 254 4260 919 | Electrolytic 0.22 μ F/50V | CE04W1HR22M(SME) | | | | | |
| C224,225 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C226,227 | 254 4254 909 | Electrolytic 10 μ F/16V | CE04W1C100M(SME) | | | | | |
| C230 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C231,232 | 253 4538 949 | Chip Ceramic 100 pF/50V | CC45SL1H101J(DD-3) | | | | | |
| C243 | 254 4250 932 | Electrolytic 220 μ F/5.6V | CE04W0J221M(SME) | | | | | |
| C245,246 | 253 4538 949 | Chip Ceramic 100 pF/50V | CC45SL1H101J(DD-3) | | | | | |
| C251 | 254 4252 930 | Electrolytic 100 μ F/10V | CE04W1A101M(SME) | | | | | |
| C253 | 254 4255 717 | Electrolytic 4700 μ F/16V | CE04W1C472MC(SME) | | | | | |
| C255~258 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C260~262 | 253 1181 904 | Chip Ceramic 0.01 μ F/50V | CK45F1H103Z(DD-3) | | | | | |
| C263 | 253 1180 921 | Chip Ceramic 1000 pF/50V | CK45B1H102K(DD-3) | | | | | |
| OTHER GROUP | | | | | | | | |
| | | (P.W. Board) | | | | | | (1) |
| X101 | 399 0200 904 | Ceramic Resonator | CSA4.00MGW-TF01 | | | | | 1 |
| X102 | 399 0191 903 | Ceramic Resonator | CST16.93MX | | | | | 1 |
| SW301~310 | 212 5604 907 | Tact Switch | | | | | | 11 |

CD PLAYER SECTION


PARTS LIST OF CD MECHANISM UNIT
SA4 6494 32A CD MECHANISM P.W.B. UNIT ASS'Y



S16 4572 111 LOADING P.W.B. UNIT ASS'Y

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|--|--------------|--------------------------------|--------------|--------------------|--------------|-----------------------------|---------|
| SEMICONDUCTORS GROUP | | | | OTHER GROUP | | | |
| IC101 | 262 1879 003 | IC CXD2515Q | | S151 | S15 7208 511 | Leaf Switch (Limit) | |
| IC102 | 926 0000 100 | IC BA297AFP | | S152 | S15 7208 511 | Leaf Switch (Limit) | |
| RESISTORS GROUP (Not included Carbon Film $\pm 5\%$, 1/4W Type. Refer to the Schematic Diagram for those Parts.) | | | | CN151 | S15 6894 311 | S P Connector Base (L Type) | |
| R101 | 247 0010 929 | Chip Carbon 15 kohm 1/10W | RM73B--153J | | | | |
| R102 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J | | | | |
| R103 | 247 0010 929 | Chip Carbon 15 kohm 1/10W | RM73B--153J | | | | |
| R104 | 247 0011 902 | Chip Carbon 33 kohm 1/10W | RM73B--333J | | | | |
| R105 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J | | | | |
| R106,107 | 247 0008 960 | Chip Carbon 3.3 kohm 1/10W | RM73B--332J | | | | |
| R108 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J | | | | |
| R109 | 247 0014 967 | Chip Carbon 1 Mohm 1/10W | RM73B--105J | | | | |
| R110 | 247 0005 905 | Chip Carbon 100 ohm 1/10W | RM73B--101J | | | | |
| R112 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J | | | | |
| R113,114 | 247 0010 929 | Chip Carbon 15 kohm 1/10W | RM73B--153J | | | | |
| R117,118 | 247 0010 929 | Chip Carbon 15 kohm 1/10W | RM73B--153J | | | | |
| R121,122 | 247 0010 929 | Chip Carbon 15 kohm 1/10W | RM73B--153J | | | | |
| R123 | 247 0009 985 | Chip Carbon 10 kohm 1/10W | RM73B--103J | | | | |
| R124 | 247 0012 927 | Chip Carbon 100 kohm 1/10W | RM73B--104J | | | | |
| R125~127 | 247 0007 945 | Chip Carbon 1 kohm 1/10W | RM73B--102J | | | | |
| R131 | 247 0006 920 | Chip Carbon 330 ohm 1/10W | RM73B--331J | | | | |
| R151~156 | 247 0009 956 | Chip Carbon 7.5 kohm 1/10W | RM73B--752J | | | | |
| R157 | 247 0011 986 | Chip Carbon 68 kohm 1/10W | RM73B--683J | | | | |
| R158 | 247 0010 916 | Chip Carbon 13 kohm 1/10W | RM73B--133J | | | | |
| R159 | 247 0011 902 | Chip Carbon 33 kohm 1/10W | RM73B--333J | | | | |
| R160 | 247 0010 961 | Chip Carbon 22 kohm 1/10W | RM73B--223J | | | | |
| R161 | 247 0101 980 | Chip Carbon 4.7 ohm 1/10W | RM73B--4R7J | | | | |
| R162,163 | 247 0011 986 | Chip Carbon 68 kohm 1/10W | RM73B--683J | | | | |
| CAPACITORS GROUP | | | | | | | |
| C101 | 257 0008 941 | Chip Ceramic 470 pF/50V | CK73B1H471K | | | | |
| C102 | 257 0014 935 | Chip Ceramic 0.1 μ F/25V | CK73F1E104Z | | | | |
| C103 | 257 0008 941 | Chip Ceramic 470 pF/50V | CK73B1H471K | | | | |
| C105 | S11 3515 521 | Chip Ceramic 4.7 μ F/16V | | | | | |
| C106 | S11 6434 611 | Chip Ceramic 1 μ F/16V | | | | | |
| C107 | S11 6450 511 | Chip Ceramic 2.2 μ F/16V | | | | | |
| C108 | 257 0013 907 | Chip Ceramic 0.047 μ F/50V | CK73F1H473Z | | | | |
| C109 | 257 0009 908 | Chip Ceramic 1500 pF/50V | CK73B1H152K | | | | |
| C110 | S11 6301 700 | Chip Ceramic 4700 pF/50V | | | | | |
| C111 | 257 0004 961 | Chip Ceramic 100 pF/50V | CC73SL1H101J | | | | |
| C112,113 | 257 0014 935 | Chip Ceramic 0.1 μ F/25V | CK73F1E104K | | | | |
| C123 | 257 0012 966 | Chip Ceramic 0.01 μ F/50V | CK73F1H103Z | | | | |
| C124 | S11 6400 511 | Chip Ceramic 0.47 μ F/25V | | | | | |
| C151,152 | 257 0008 967 | Chip Ceramic 680 pF/50V | CK73B1H681K | | | | |
| C153 | 257 0014 935 | Chip Ceramic 0.1 μ F/25V | CK73F1E104K | | | | |
| C154 | 257 0014 906 | Chip Ceramic 0.33 μ F/25V | CK73F1E334K | | | | |
| C155,156 | 257 0008 967 | Chip Ceramic 680 pF/50V | CK73B1H681K | | | | |
| C157,158 | 257 0012 982 | Chip Ceramic 0.022 μ F/50V | CK73F1H223Z | | | | |
| C159 | S11 6302 300 | Chip Ceramic 0.015 μ F/50V | CK73B1H153K | | | | |
| C160 | 257 0012 953 | Chip Ceramic 6800 pF/50V | CK73F1H682Z | | | | |
| C161 | 257 0014 935 | Chip Ceramic 0.1 μ F/25V | CK73F1E104Z | | | | |
| OTHER GROUP | | | | | | | |
| CN101 | S15 6886 511 | 23 P Connector Base | | | | | |
| CN102 | S15 6879 511 | 12 P Connector Base | | | | | |
| S101 | S15 7208 511 | Leaf Switch (Limit) | | | | | |

CD PLAYER SECTION

WIRING DIAGRAM

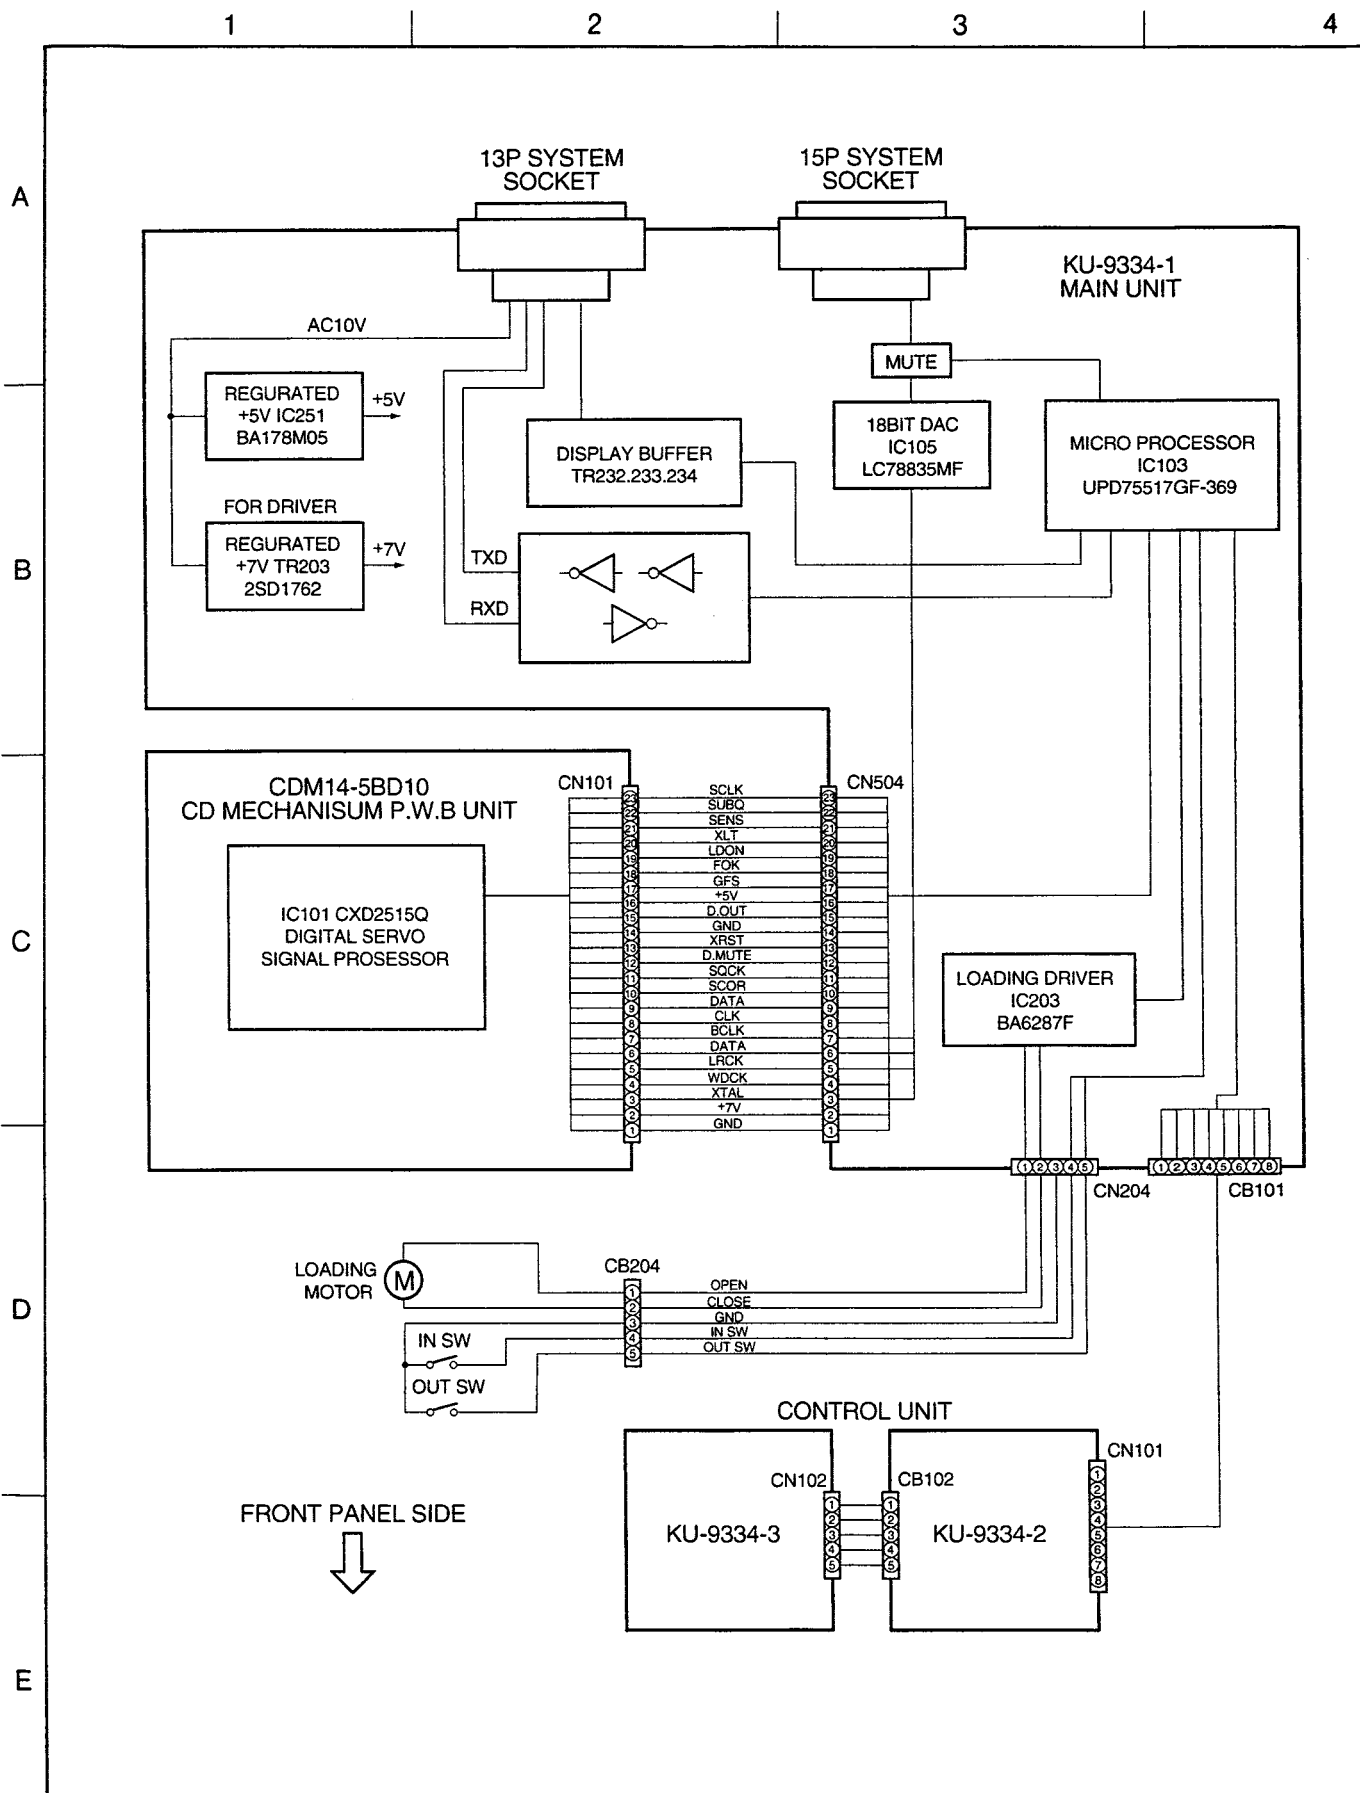

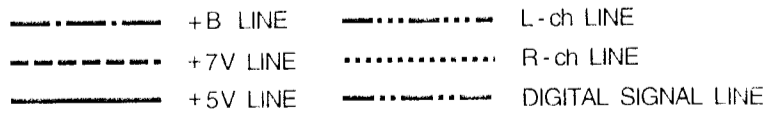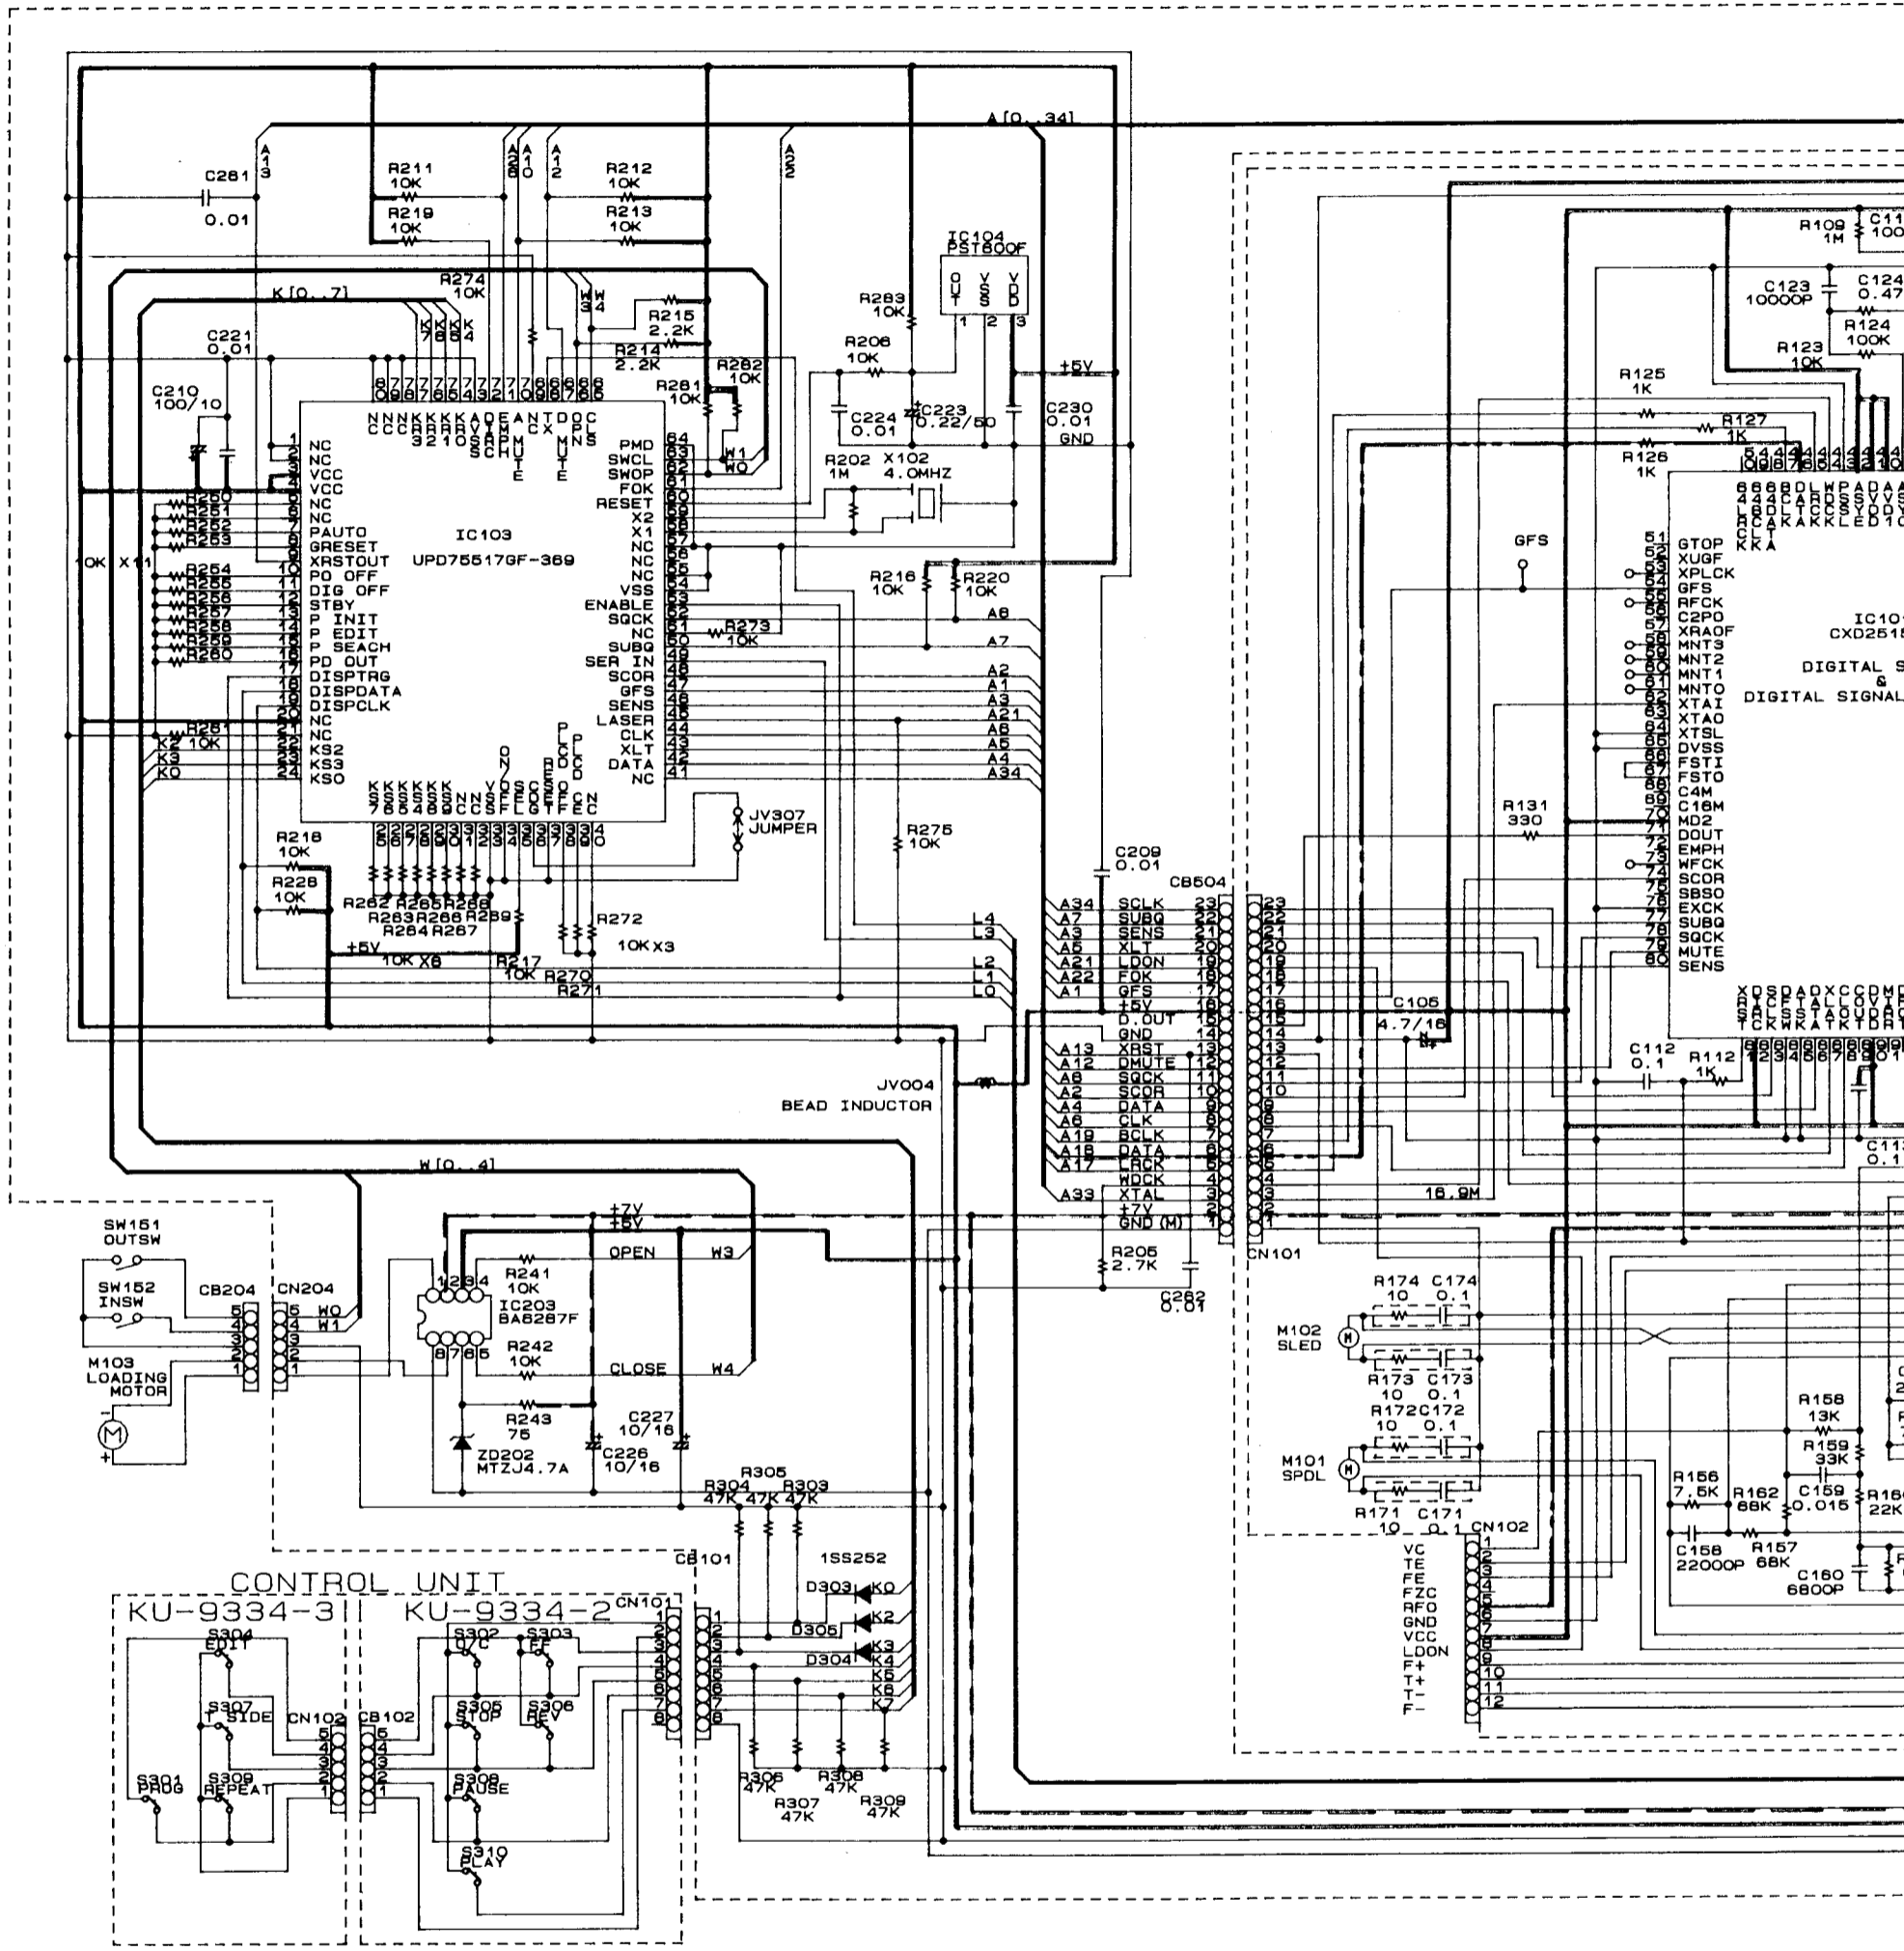

WARNING:
Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before return leakage current defective.

WARNING:
DO NOT return

SCHMATIC DIAGRAM

5


6

7

8

9

10

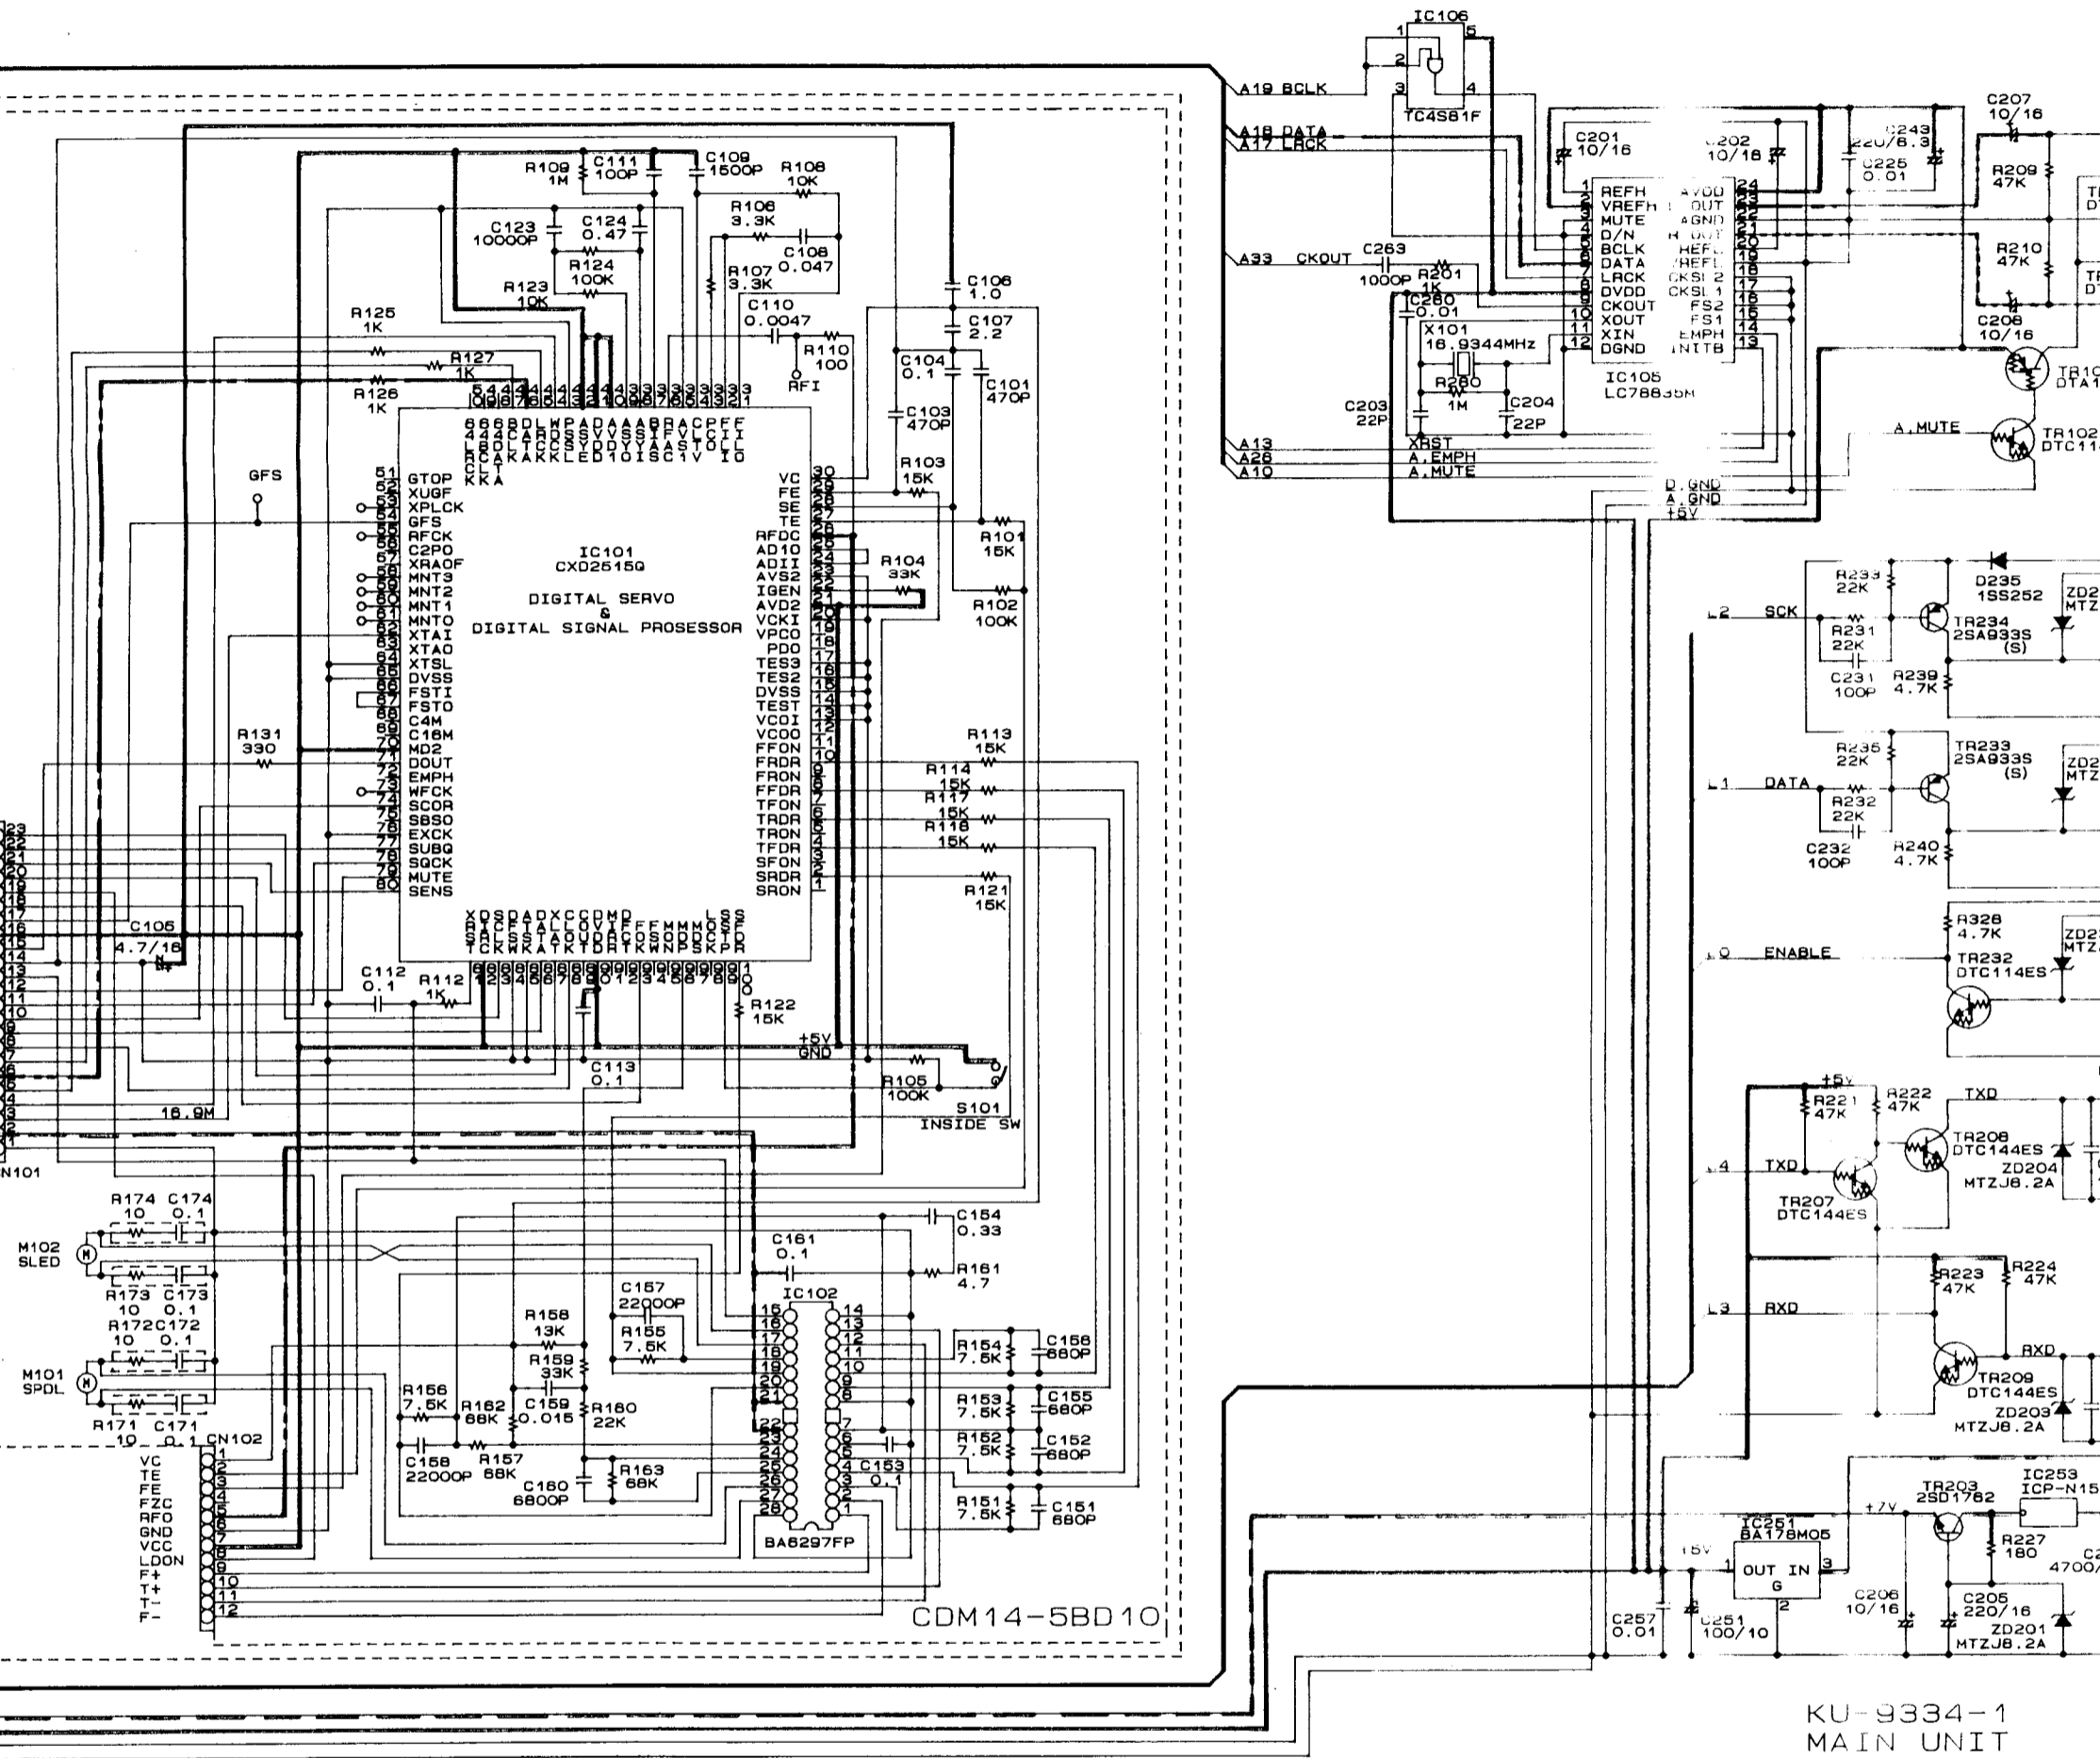

CDM14-5BD10

KU-9334-1
MAIN UNIT

with this symbol have critical characteristics. Replacement parts recommended by the manufacturer.

CAUTION:


Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.

WARNING

DO NOT return the unit to the customer until the problem is located and corrected.

NOTES

ALL RESISTANCE VALUES IN OHM K-1,000.
ALL CAPACITANCE VALUES IN MICRO FARAD.
EACH VOLTAGE AND CURRENT ARE MEASUREMENTS.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE.

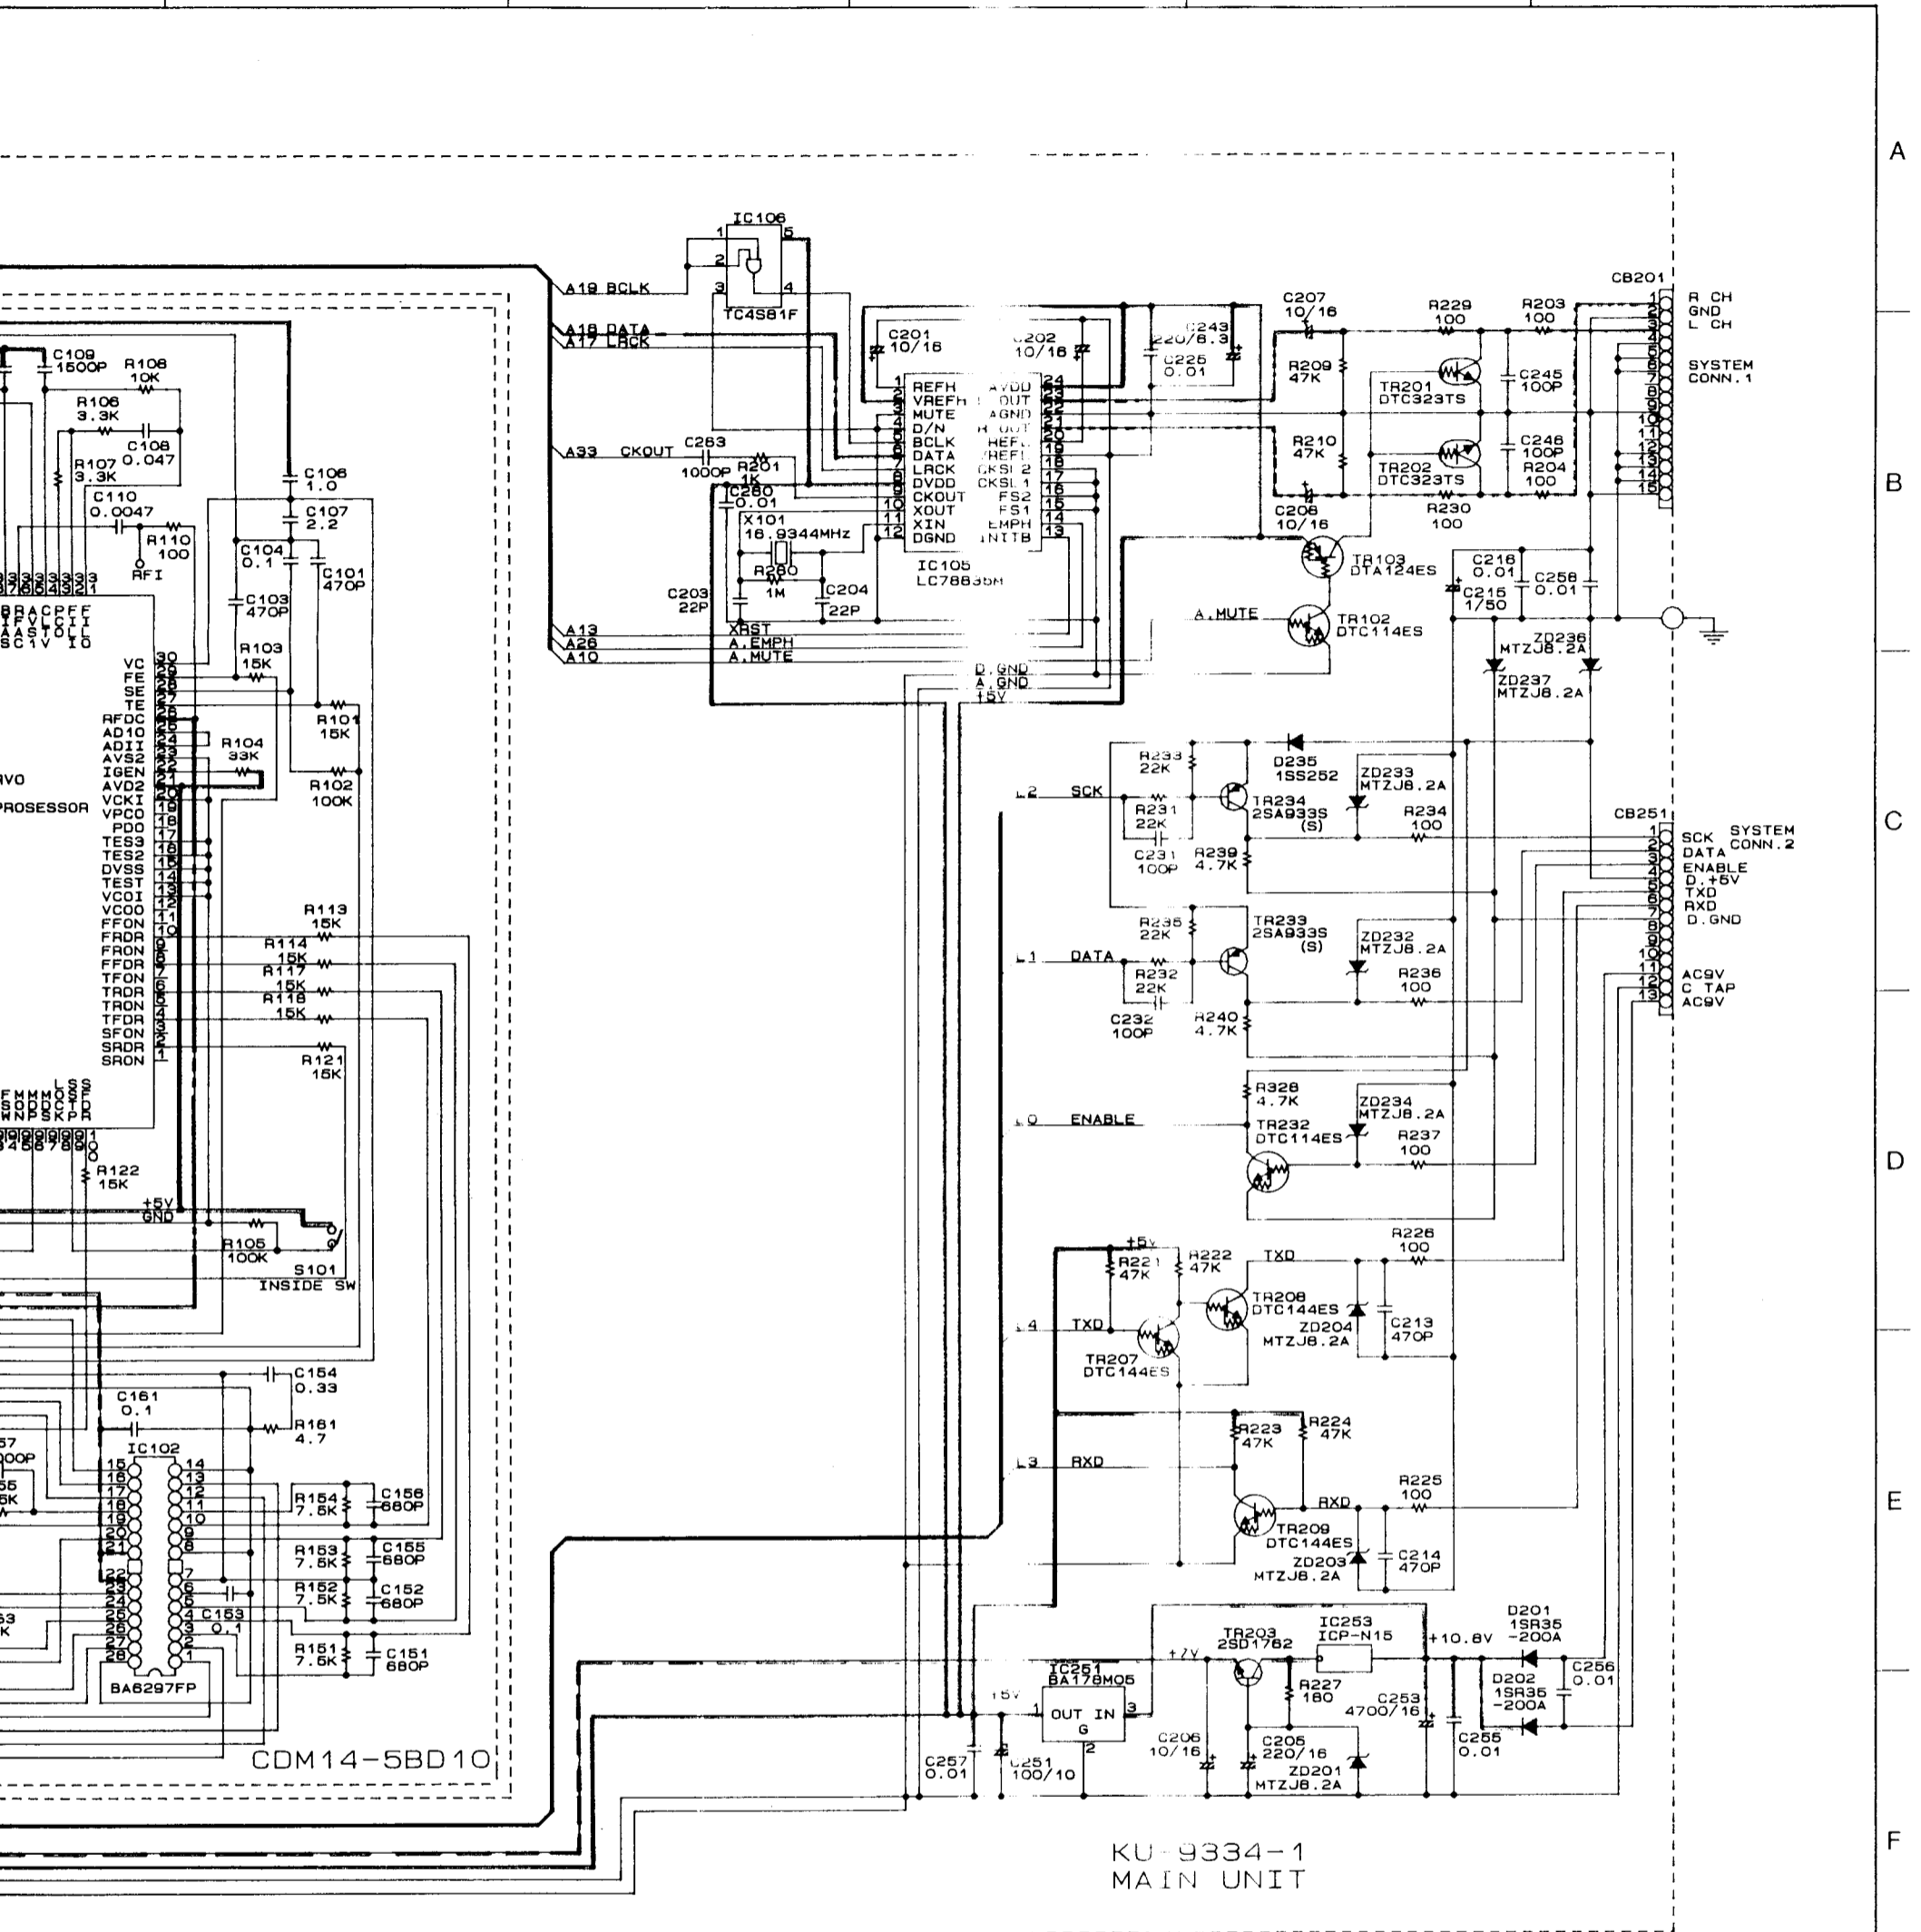

NOTES
 ALL RESISTANCE VALUES IN OHM K-1,000 OHM M-1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD P-MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

When returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.


Do not return the unit to the customer until the problem is located and corrected.

A
B
C
D
E
F
G
H

CD PLAYER SECTION

PARTS LIST OF UCD-77 EXPLODED VIEW

| Ref. No. | Part No. | Part Name | Remarks | Qty |
|---|--------------|---------------------------|---------|----------------|
| ● 1 | KU- 9334 | Main Unit Ass'y | | 1 ^S |
| └ 1-1 | — | Main Unit | | (1) |
| └ 1-2 | — | Control Unit | | (1) |
| 2 | 254 4255 717 | Chemicon 4700 μ F/16V | | (1) |
| ● 3 | 411 9115 316 | Main chassis | | 1 |
| 4 | 104 0237 308 | Foot Ass'y | | 4 |
| ● 5 | 105 9235 126 | Black Panel | | 1 |
| 6 | 513 2358 007 | Laser Caution | | 1 |
| 7 | 449 9037 004 | Mecha Holder (CD) | | 1 |
| ● 8 | 337 0040 001 | CD Mecha Unit | | 1 |
| ● 9 | 412 2814 028 | Card Spacer(L=10) | | 1 |
| ● 10 | 146 9348 315 | Inner Panel | | 1 |
| 11 | 113 9322 108 | 4 G Button | | 1 |
| 12 | 113 9330 006 | 6 G Button | | 1 |
| ● 13 | 144 9235 105 | Front Panel | | 1 |
| 14 | 146 9349 107 | Loader panel(CD) | | 1 |
| 15 | 146 9346 207 | Side Plate(R) | | 1 |
| 16 | 146 9347 206 | Side Plate(L) | | 1 |
| ● 17 | 102 9043 018 | Top Cover | | 1 |
| ★ 18 | 513 9390 000 | Rating Sheet | | 1 |
| 19 | 204 8284 022 | 15 P System Socket | | 1 |
| 20 | 205 0730 056 | 13 P System Socket(Bu) | | 1 |
| ★ 21 | 203 8385 009 | 5 P DA-DA Conn. Cord(Amp) | | 1 |
| 22 | 009 9058 005 | 23 P FF Cable | | 1 |
| SCREWS | | | | |
| 51 | 473 7002 018 | Tapping Screw(S) 3×8 | | 11 |
| 52 | 473 7015 018 | Tapping Screw(S) 3×8 | Black | 14 |
| 53 | 473 7015 005 | Tapping Screw(S) 3×6 | Black | 3 |
| 54 | 473 7500 044 | Tapping Screw(P) 3×8 | Black | 2 |
| 55 | 473 7505 007 | Tapping Screw(P) 2.6×8 | | 7 |
| 56 | 473 7009 008 | FH.Tapping Screw(S) 3×6 | | 2 |
| PACKING & ACCESSORIES (Not included EXPLODED VIEW) | | | | |
| 71 | 505 0241 005 | Cabinet Cover | | 1 |
| 72 | 503 9293 207 | Cushion | | 1 |

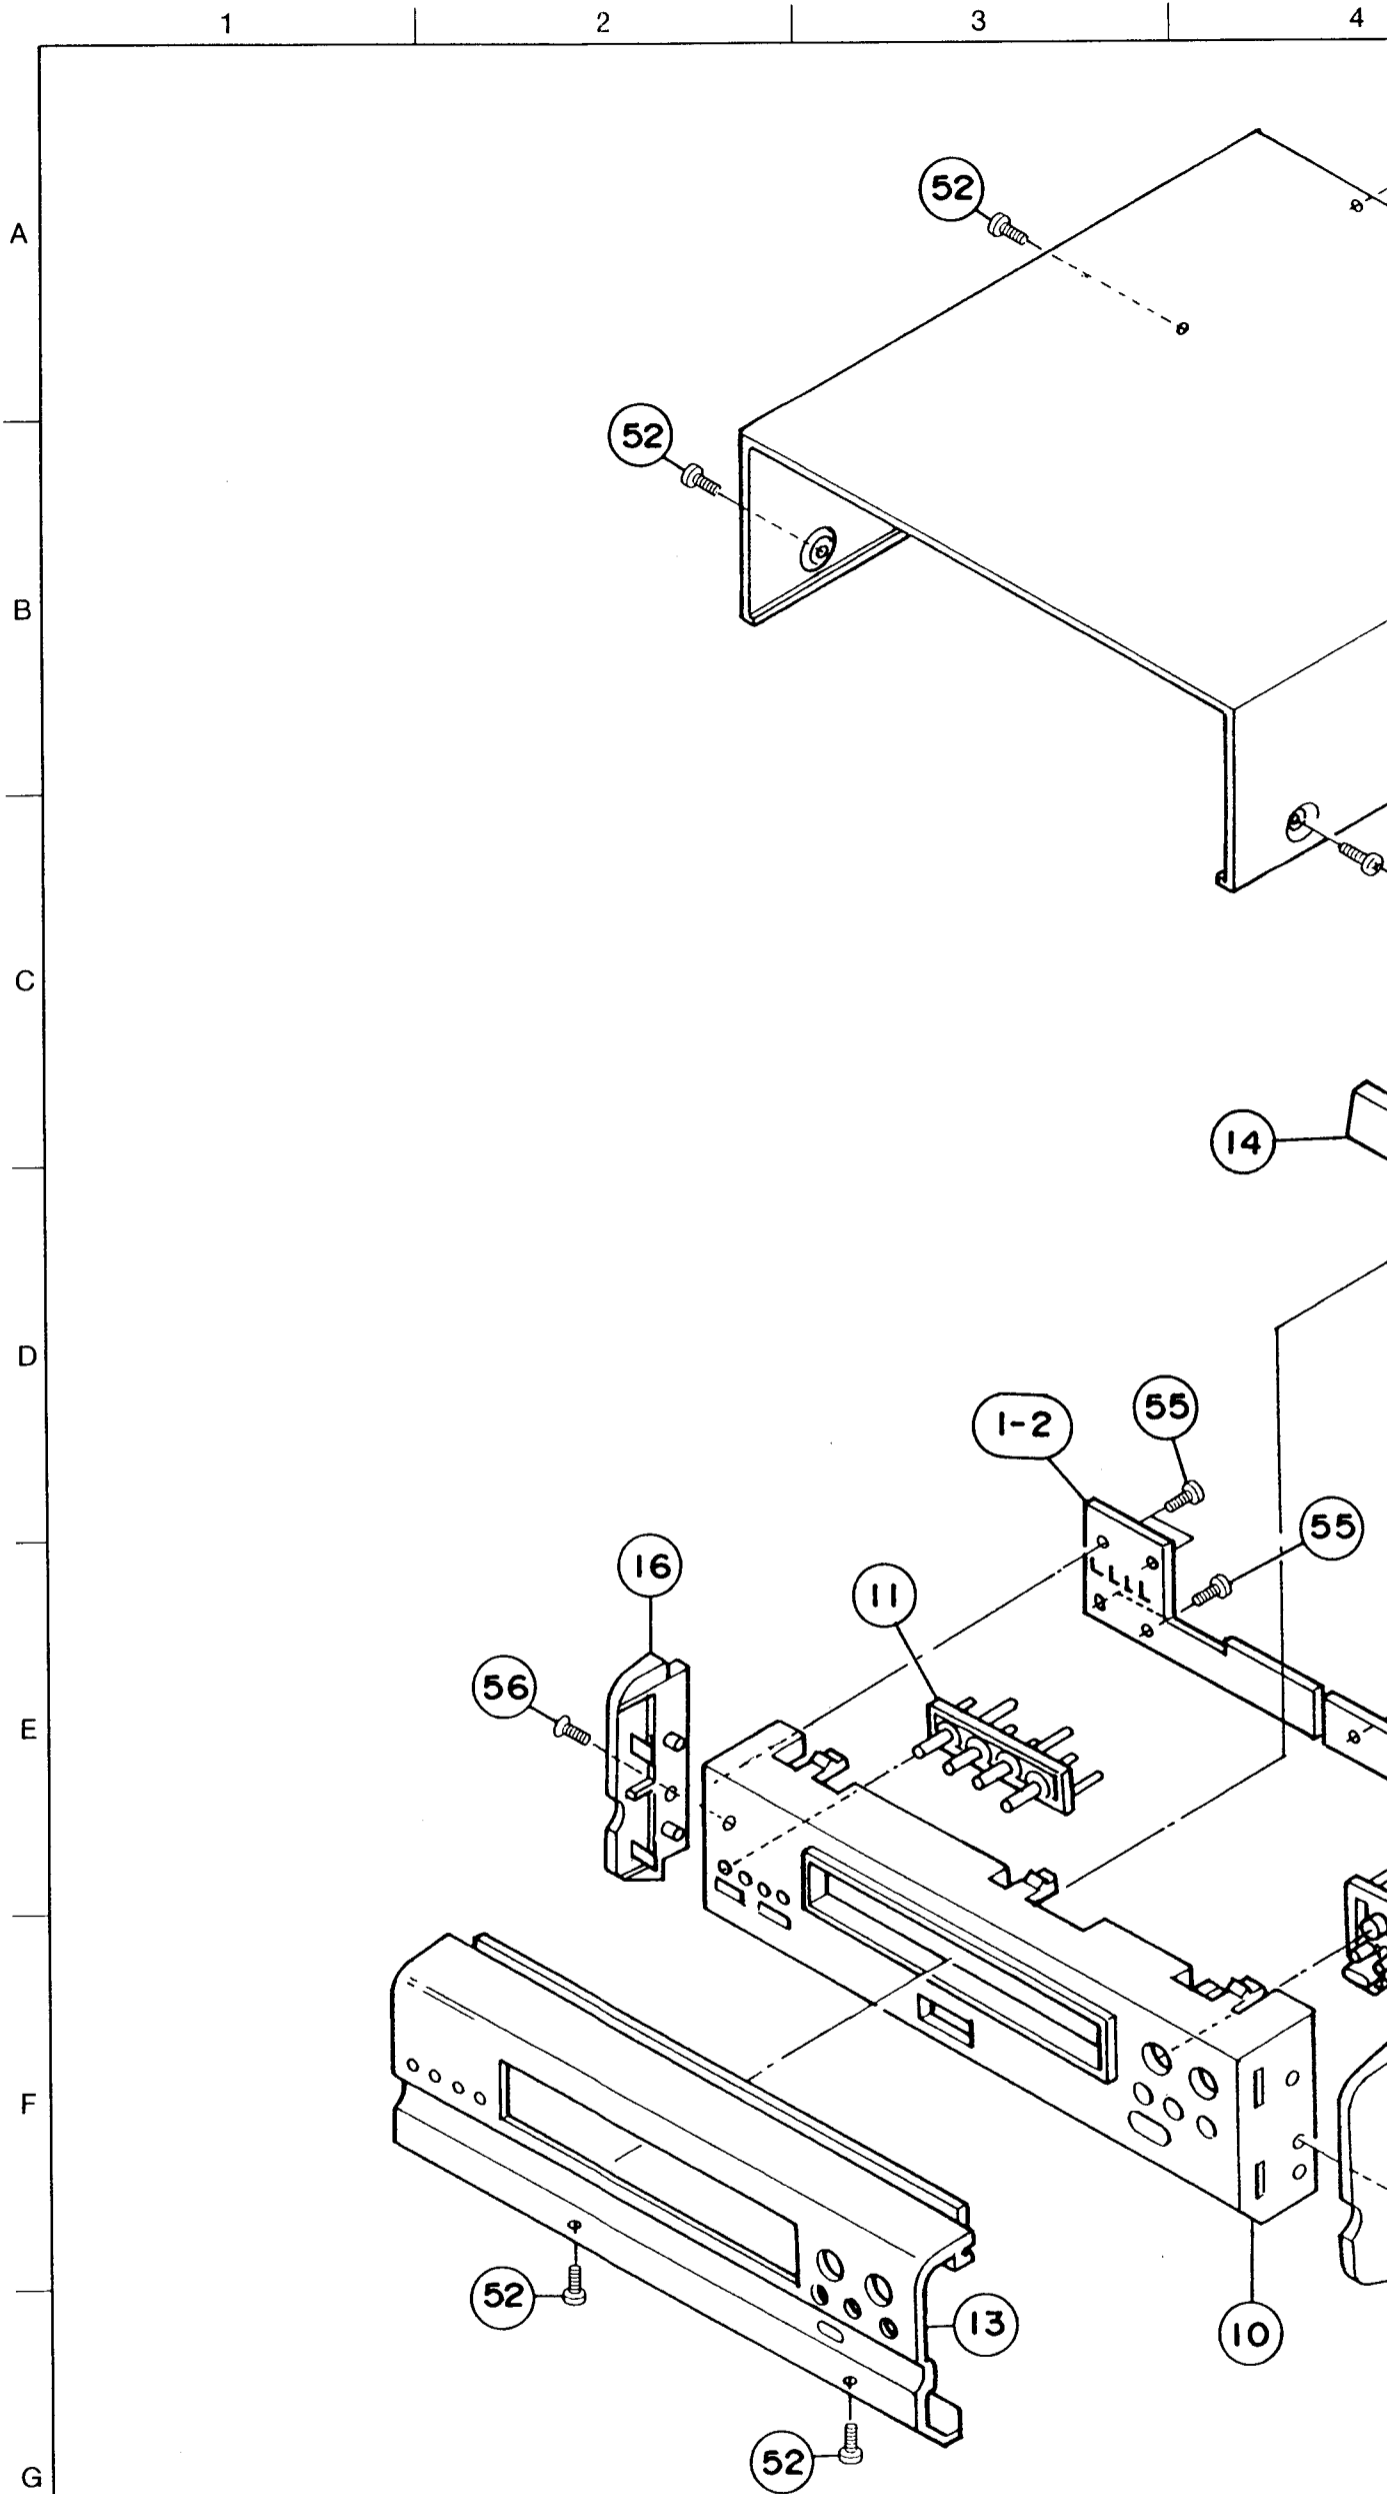


NOTE ON PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying. supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

WARNING:

Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.


EXPLODED VIEW

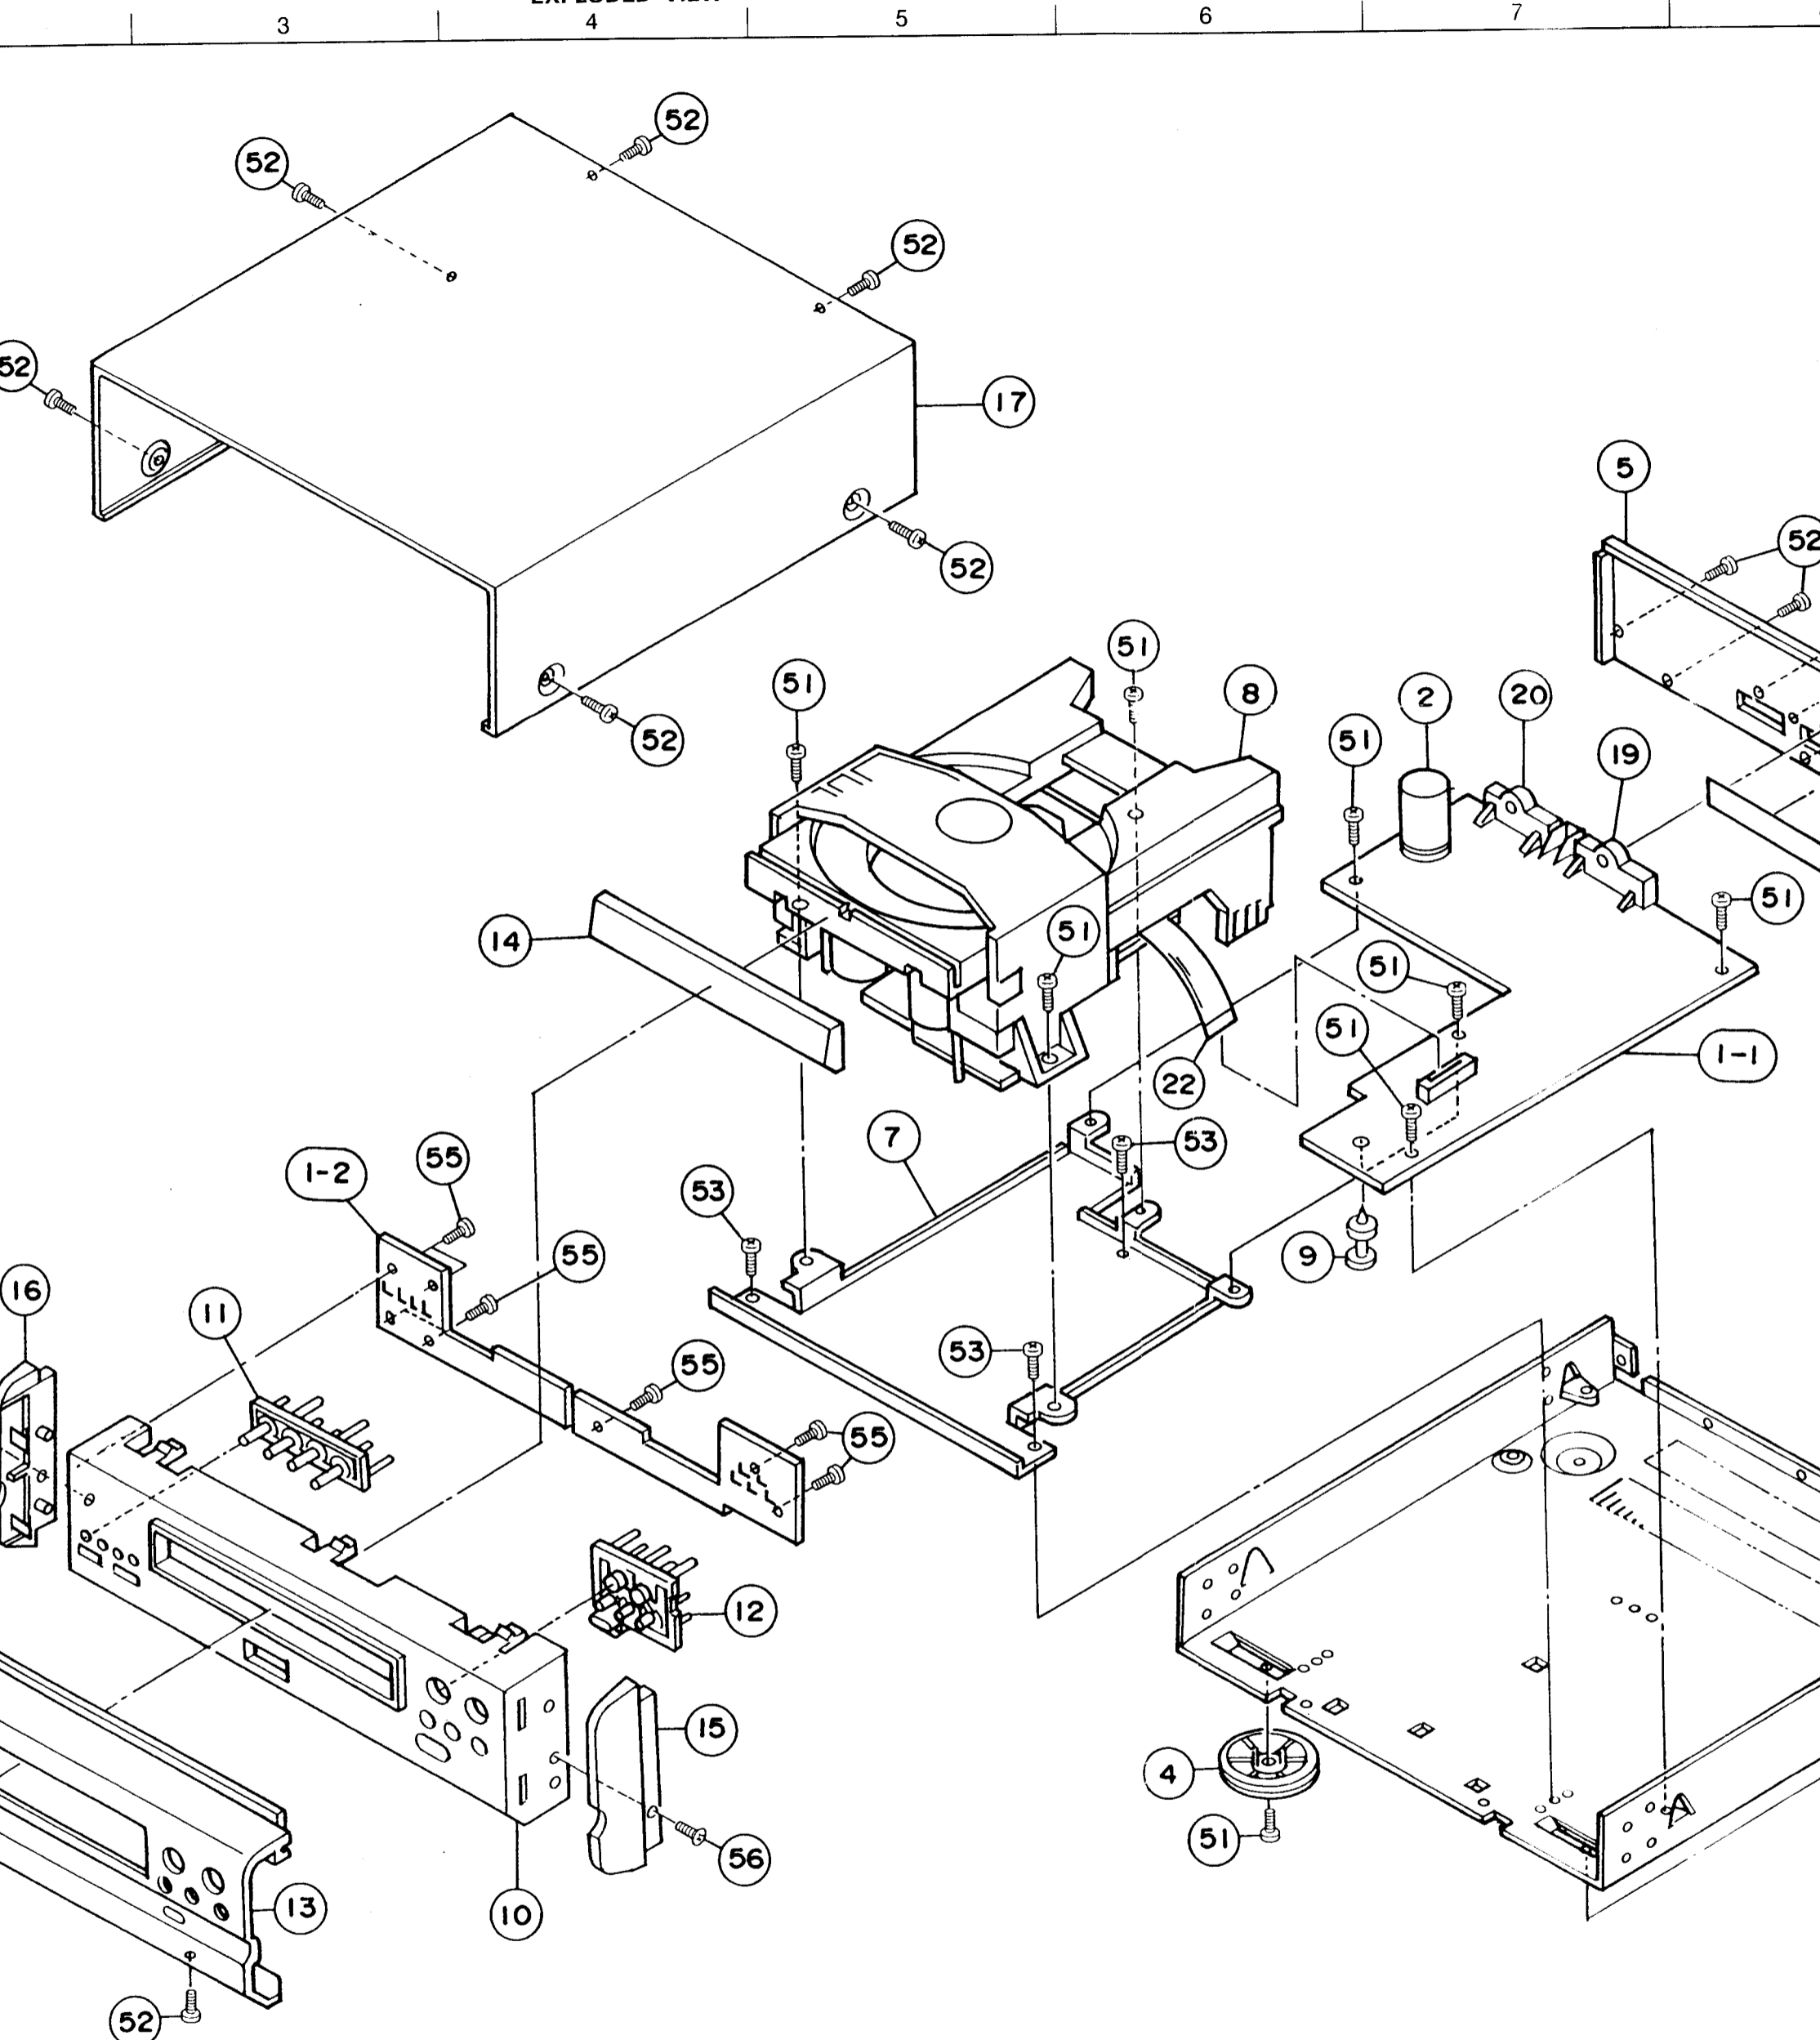

are not always in stock and possibly to take a long period of time for supplying, or in some case
 ed.
 indicate "1" and "1" (i) to avoid mis-supplying.
 s part number can not be supplied.
 ★ is not illustrated in the exploded view.

have critical characteristics.
 mended by the manufacturer.



52

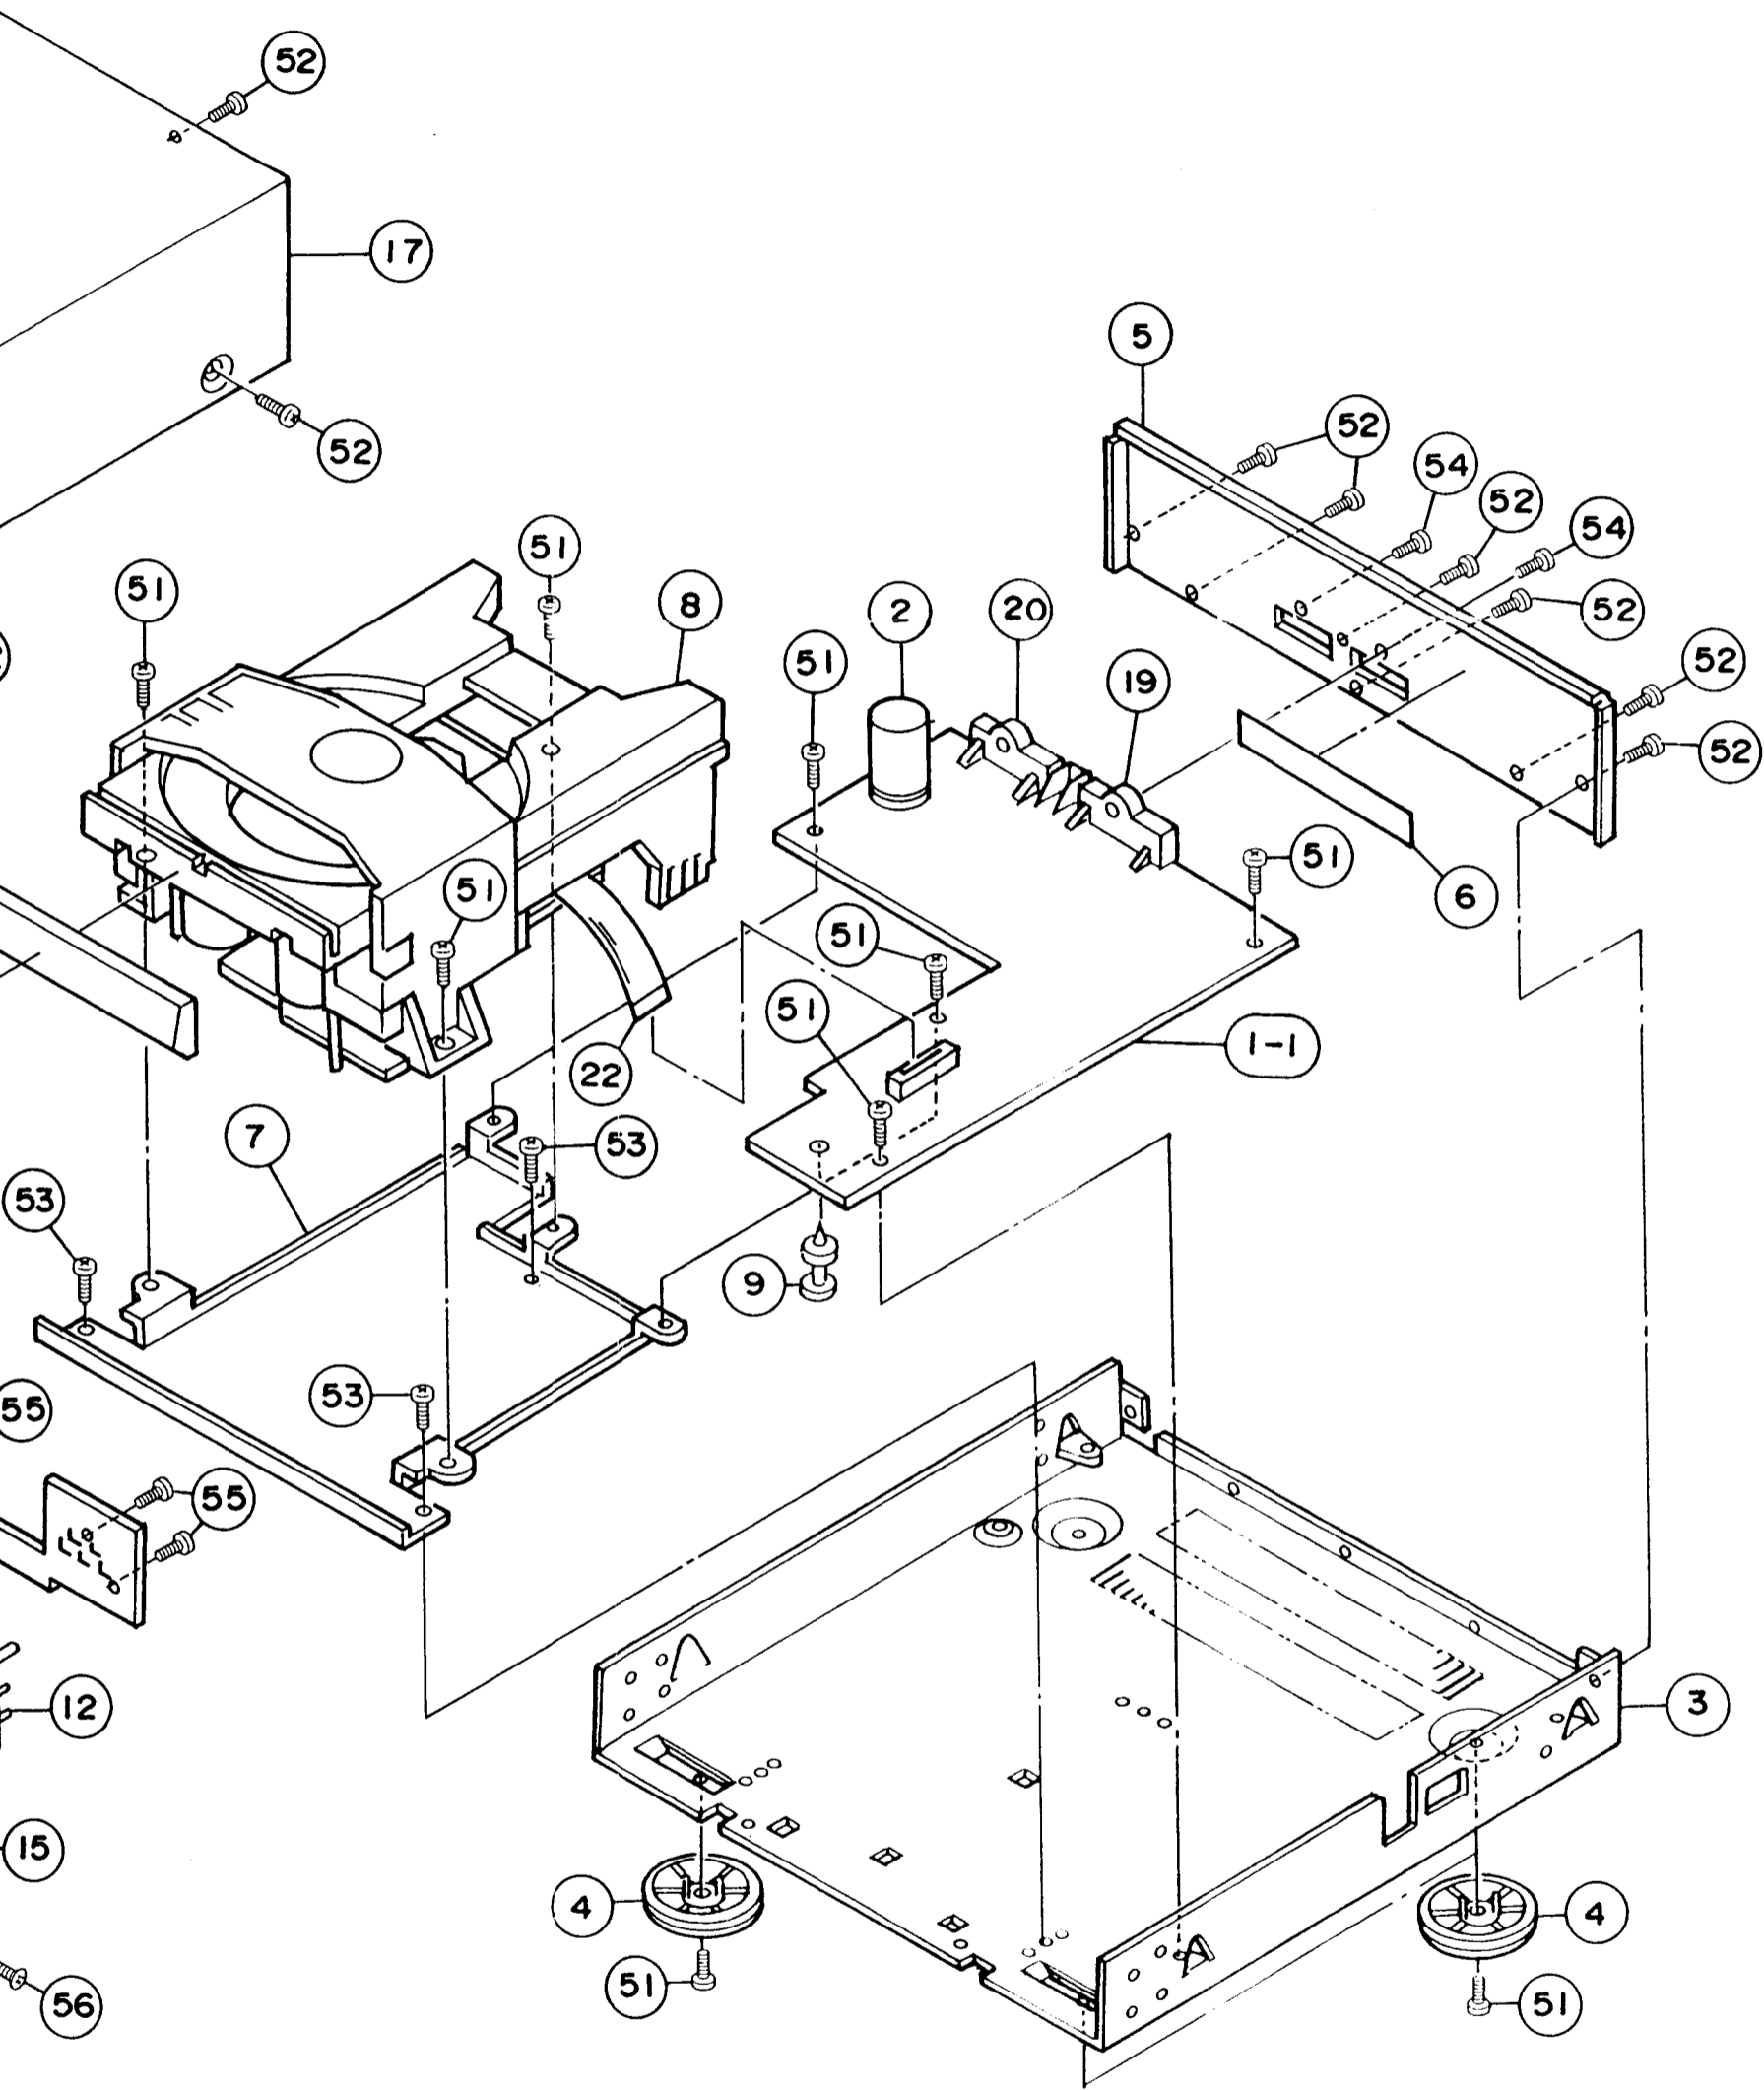

some case

PARTS LIST OF CD MECHANISM UNIT
OPTICAL PICK-UP UNIT

MD UNIT

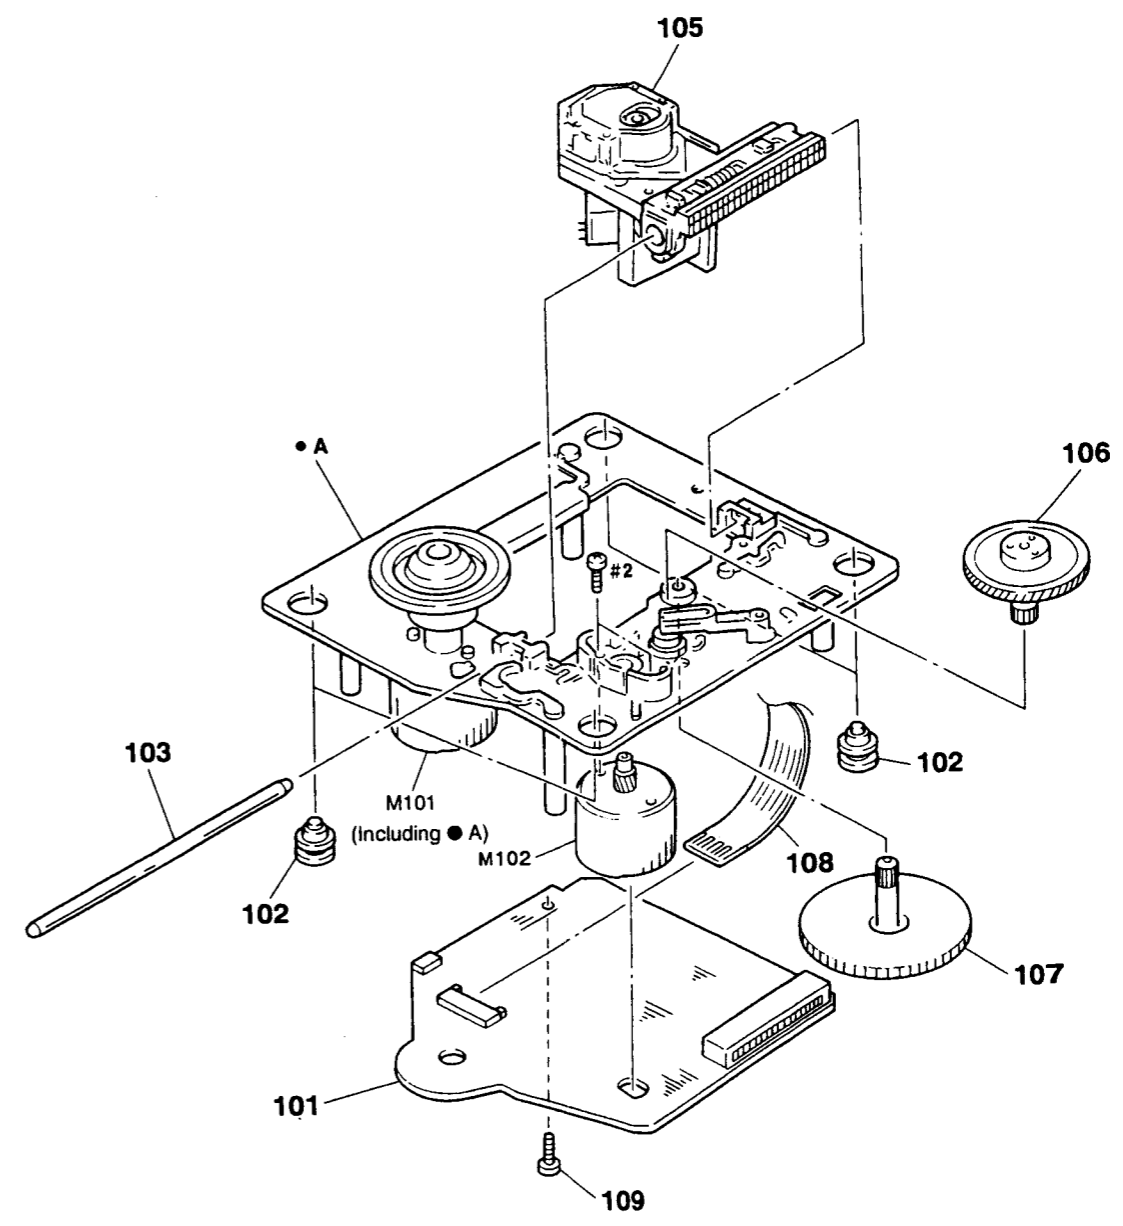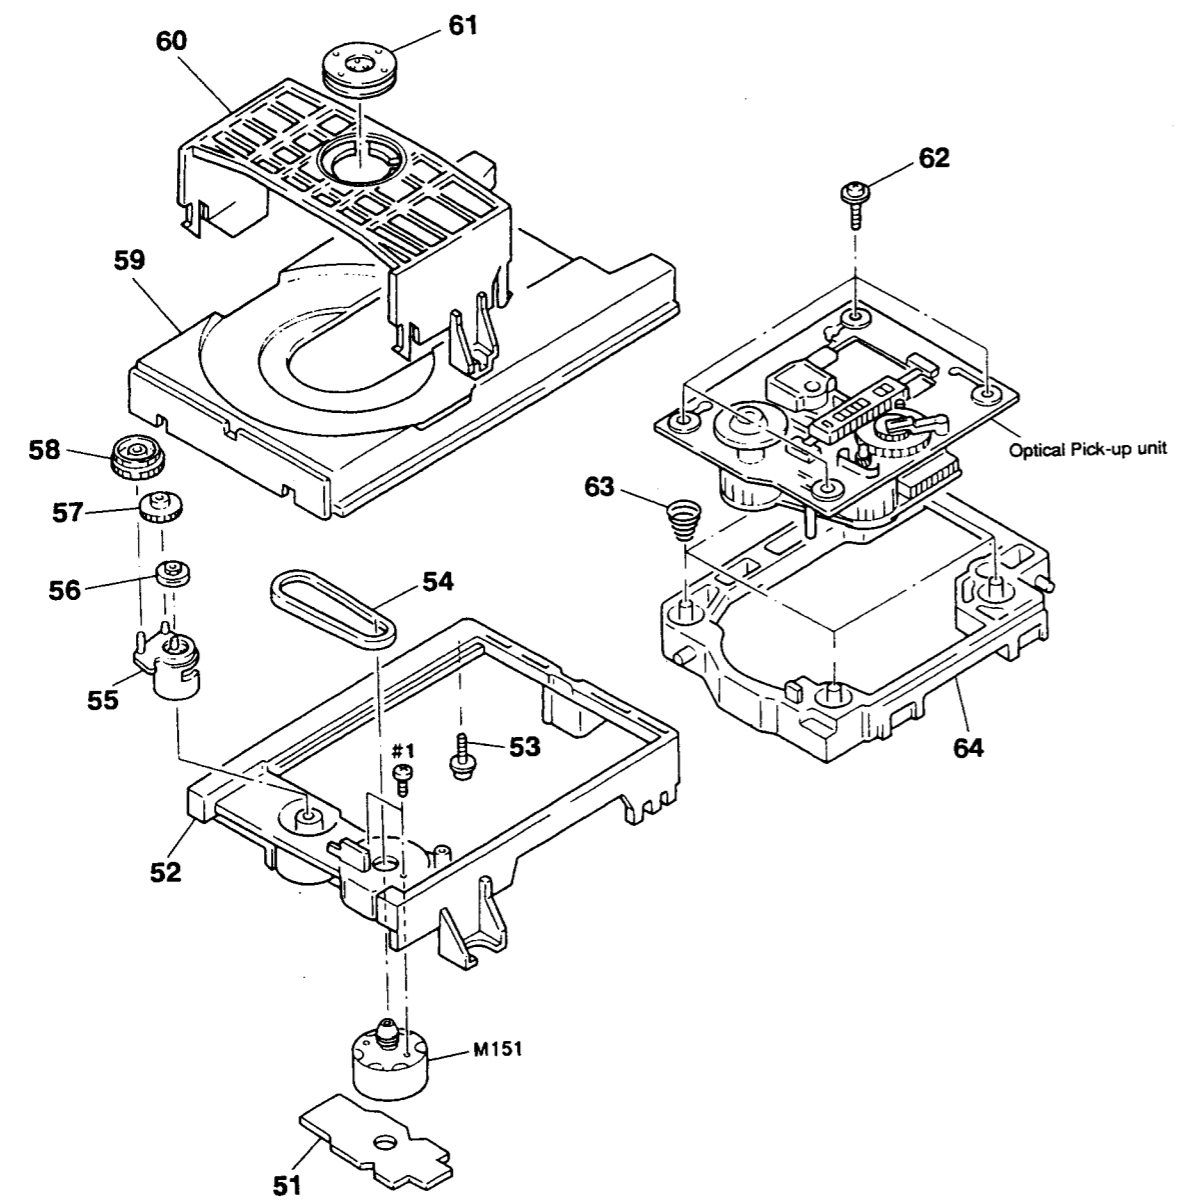

PARTS LIST OF CD MECHANISM UNIT

| Ref No. | Part No. | Part Name | Remarks |
|---------|--------------|---------------------------|-----------------|
| 51 | S16 4572 111 | Loading P.W.B. Unit Ass'y | See page 28, 29 |
| 52 | S49 3311 101 | Chassis(MD) | |
| 53 | S49 1758 321 | Yoke Bracket | |
| 54 | S49 2764 901 | Belt | |
| 55 | S49 3310 901 | Cam | |
| 56 | S49 2765 101 | Pulley(S) | |
| 57 | S49 2762 801 | Gear(C) | |
| 58 | S49 3310 701 | Gear(PL) | |

| Ref No. | Part No. | Part Name | Remarks |
|---------|--------------|---------------|---------|
| 59 | S49 3311 201 | Disk Table | |
| 60 | S49 3311 001 | Holder(MG) | |
| 61 | S14 5253 811 | Magnet | |
| 62 | S49 3313 401 | Screw | |
| 63 | S49 4850 301 | Spring(BU) | |
| 64 | S49 3312 901 | Holder(BU) | |
| M151 | SA4 6043 63A | Motor(L)Ass'y | |
| #1 | 471 3201 024 | 2.6×4 CBS | |

PARTS LIST OF OPTICAL PICK-UP UNIT

| Ref No. | Part No. | Part Name | Remarks |
|---------|--------------|--------------------------------|-----------------|
| 101 | SA4 6494 32A | CD Mechanism P.W.B. Unit Ass'y | See page 28, 29 |
| 102 | S49 3312 601 | Insulator Rubber | |
| 103 | S49 1756 501 | Sled Shaft | |
| 105 | 499 0191 009 | Optical PU KSS240A | |
| 106 | S49 1756 701 | Gear(M) | |
| 107 | S49 1756 401 | Gear(P) | |


| Ref No. | Part No. | Part Name | Remarks |
|---------|--------------|---------------------|---------|
| 108 | S15 7500 111 | Flat Cable | |
| M101 | SX4 9175 233 | Motor(Spindle)Ass'y | |
| M102 | SX4 9175 041 | Motor(Sled)Ass'y | |
| 109 | S49 5162 001 | Screw | |
| #2 | 471 1810 019 | 2×3 CPS | |

CASSETTE DECK SECTION


DISASSEMBLY PROCEDURES
(Follow these procedures in reverse order to reassemble.)

1. Removing the top cover and front panel

- ① Remove the six screws which fasten the top cover.
- ② Remove the two screws of the bottom side which fasten the front panel.

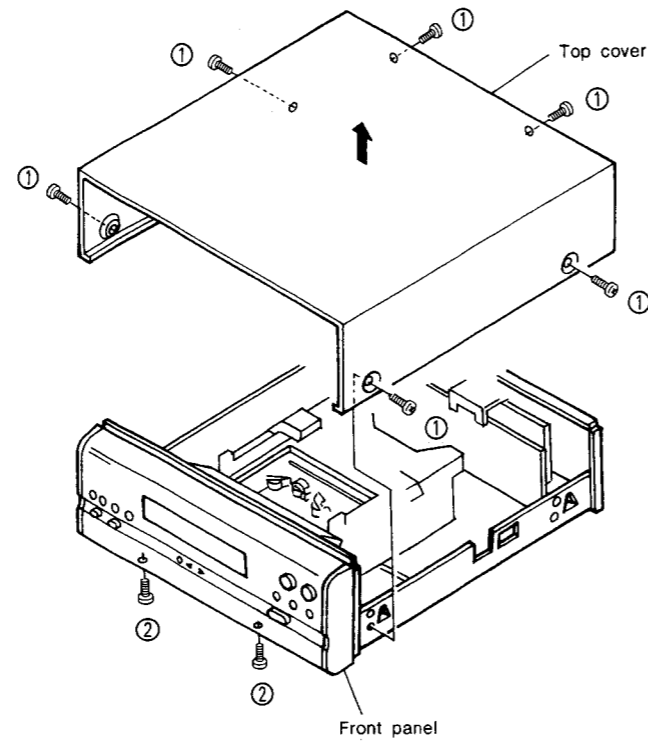


- ③ Remove the two screws which fasten the side plate.
- ④ While disengaging in the direction of the arrow the tabs of the side plate and the holes of the main chassis (with a flat-bladed screwdriver). Push out the side plate in the direction of the arrow and remove from the hooks of the inner panel. Using the same method for the left side, remove the side plate.
- ⑤ Remove the front panel in the direction of the arrow.

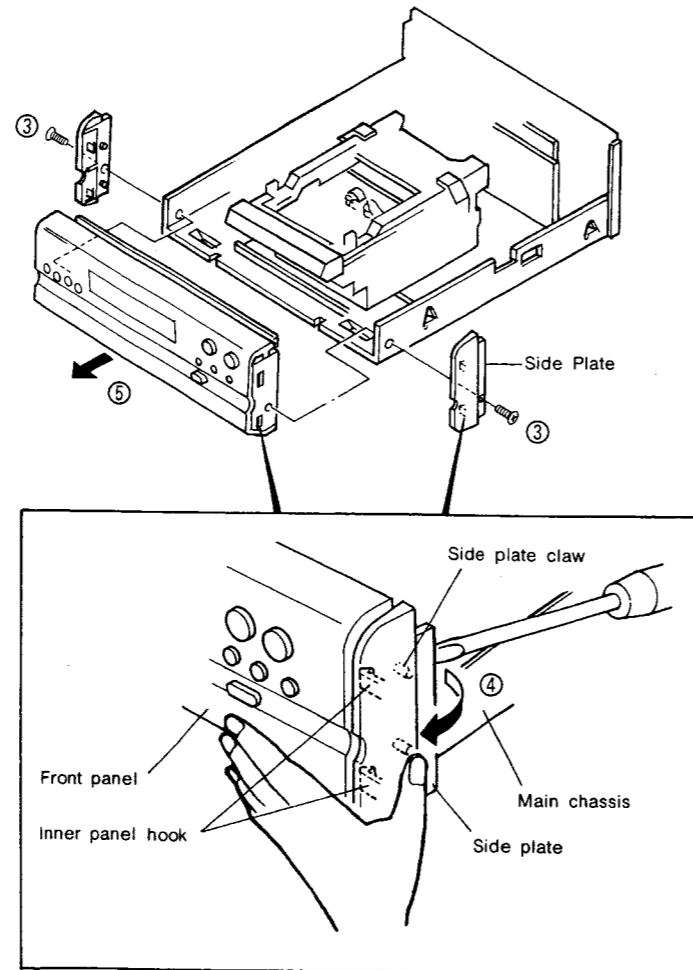

2. Removing the printed wiring units


LED & Tact SW Unit KU-9335-4

- ① Disconnect connector CB401(15P) which is attached to the main unit.
- ② Remove the seven screws which are attached to the control unit.
- ③ Detach the inner panel hook's catch in the direction of the arrow.

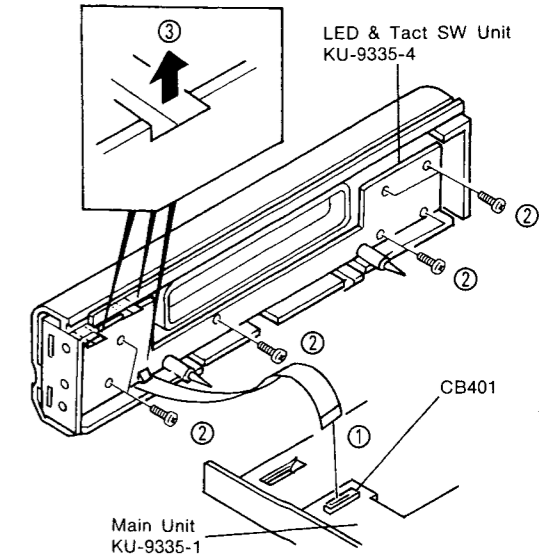


3. Removing the Cassette Mechanism

- ④ Removing the four screws which fasten the cassette mechanism unit.

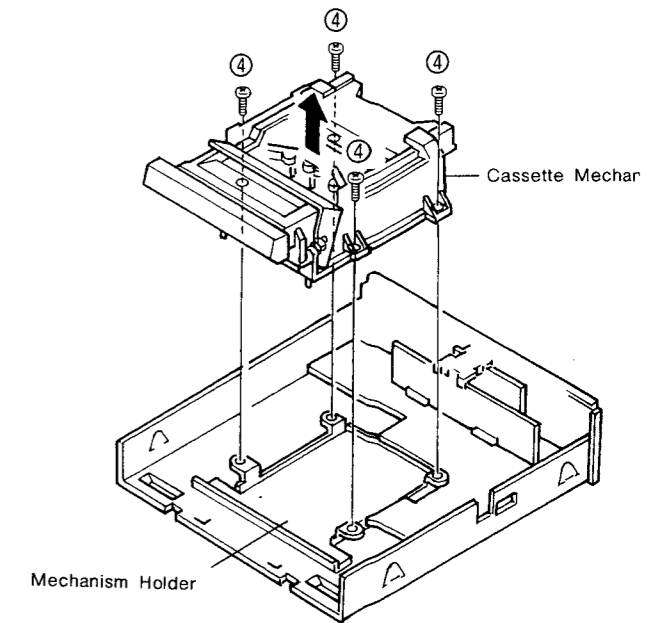

CASSETTE DECK SECTION


- ⑤ Disconnect connectors CB301(4P), CB302(3P), CB501(6P) and CB502(13P) which are attached to the PB R/P unit and the main unit.

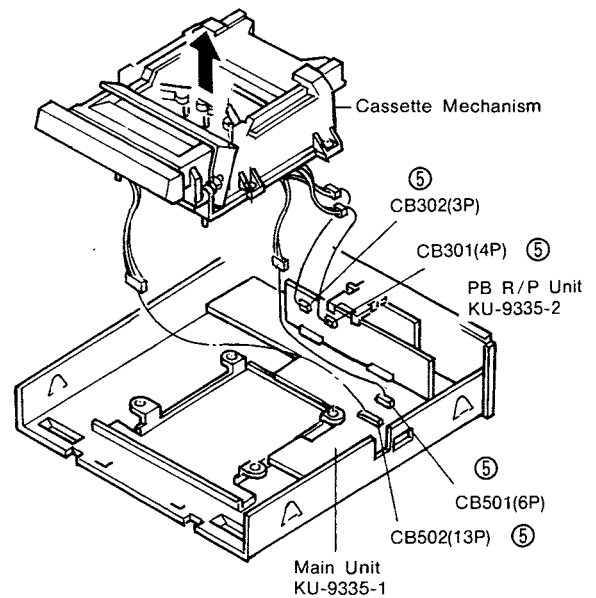

REC/PB Unit (KU-9335-2)


Dolby Unit (KU-9335-3)

- ⑥ Remove the four screws of the mounting fitting of the board which is attached to the rear panel.
- ⑦ Remove the RB R/P unit and the Dolby unit.

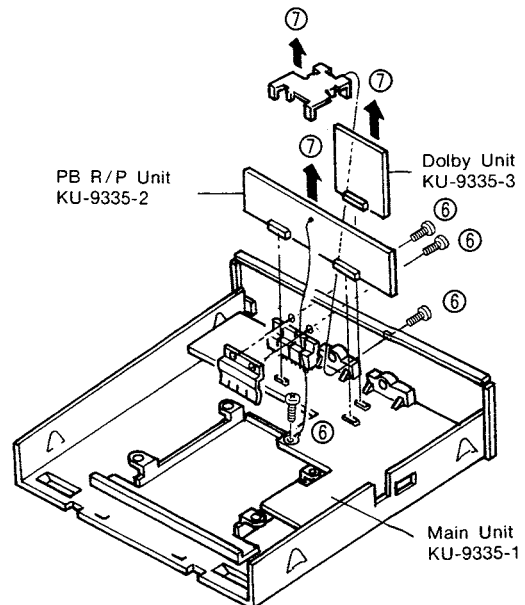

Main Unit (KU-9335-1)


- ⑧ Remove the six screws which fasten the main unit and remove the board in the direction of the arrow.

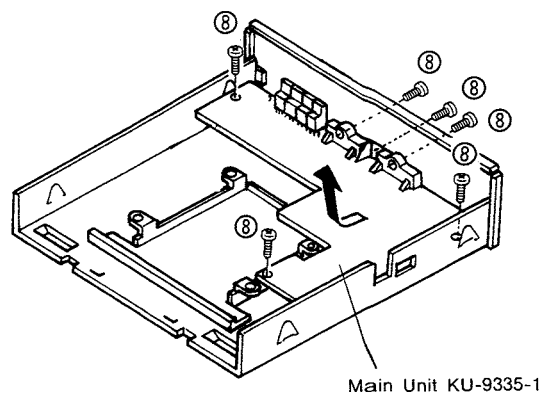


CASSETTE DECK SECTION

LEVEL DIAGRAM

(Recording)

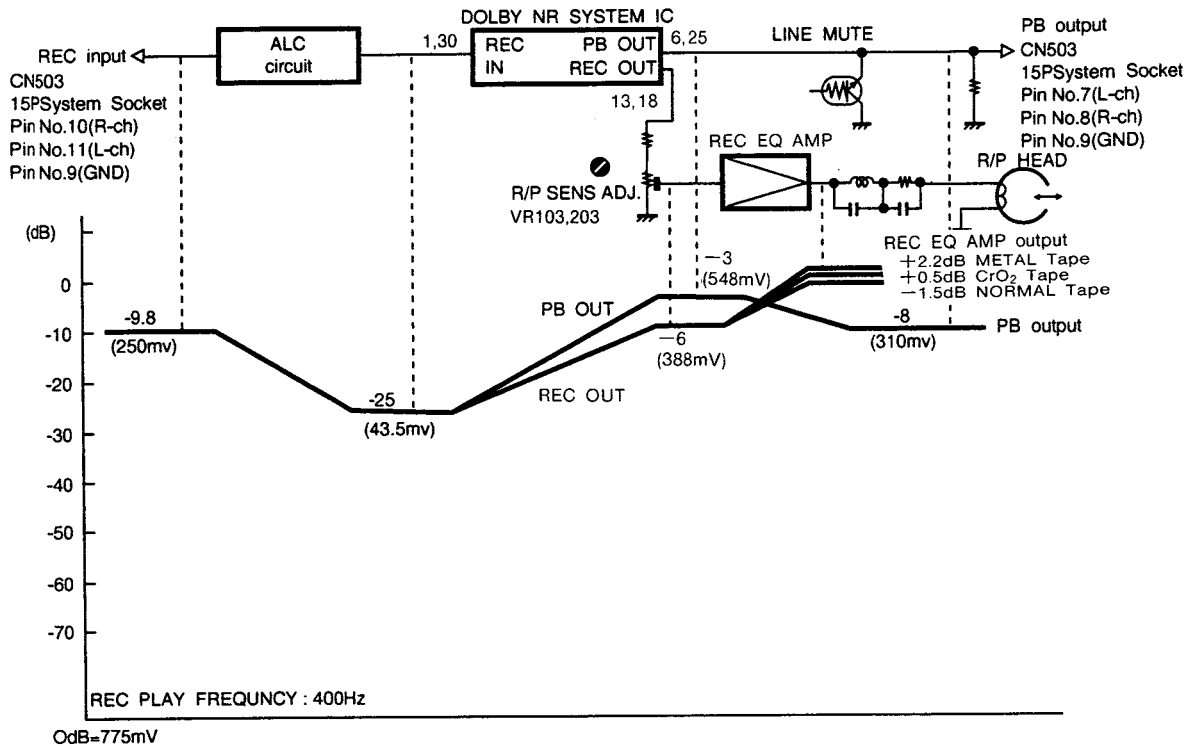

(Playback)

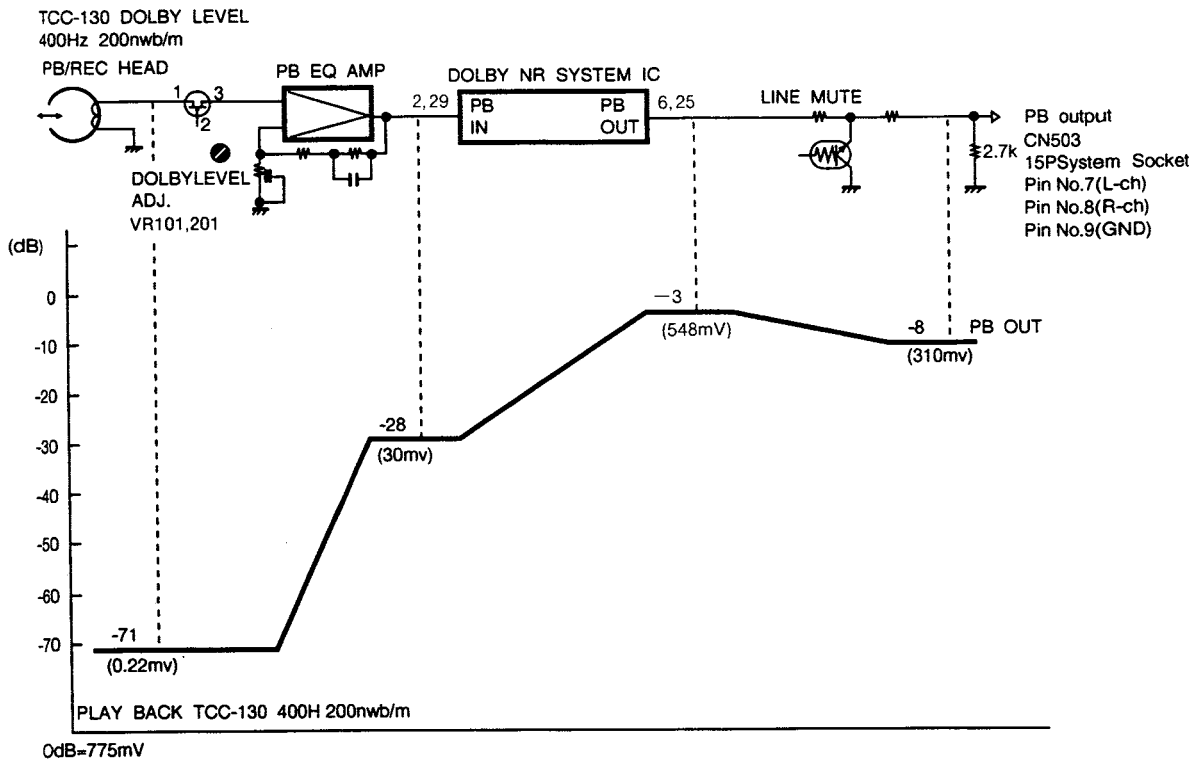


CASSETTE DECK SECTION

ADJUSTMENT

● MECHANISM MEASUREMENTS

| Measurement item | Standard value | Remarks |
|--------------------------------|----------------|---|
| Winding torque (PLAY) | 30~60 gcm | SONY TW-2111 for forward, TW-2121 for reverse |
| Fast-forward and rewind torque | 70~120 gcm | SONY TE-2231 |
| Back tension torque | 2~6 gcm | SONY TW-2111 for forward, TW-2121 for reverse |
| Pinch roller pressure | 280 ± 42 g | See diagram ar right |
| Fast-forward and rewind time | 100 ± 15 sec | C-60 |

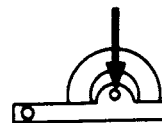

With the deck in the play mode, apply force with the tension gauge in the direction of the arrow and read the value at which the pinch roller stops rotating.

● ELECTRICAL ADJUSTMENTS (UDRA-77 is required for the adjustment of this unit. UCD-77 is not required.)

● Preparations Before Adjustments

1. Measuring Instruments Necessary for Adjustments

- Screwdriver: Small flat-bladed screwdriver for variable resistors
- Low frequency oscillator
- Attenuator
- V.T.V.M.
- Oscilloscope
- Frequency counter
- Test tapes [A-BEX TCC-111, TCC-153, TCC-130, TCC-203B]

● Adjustment notes

- ① Before adjusting, wipe the surface of the heads, the capstans, and the pinch rollers with a piece of gauze moistened with alcohol.
- ② Demagnetize the playback, recording, and erasure heads with a head eraser.
- ③ Completely demagnetize the adjustment screwdriver.
- ④ Unless otherwise specified, set the switches at the following positions and use the AUX/DAT PB Terminal IN jacks for the input. For the output use test point Connector Base TP301 on the KU-9335-3 Dolby Unit.


DOLBY NR SW: OFF

2. Play back adjustments

2-1 Azimuth adjustment

Play back the (A-BEX TCC-153) test tape and turn the azimuth adjustment screw to yield maximum values for the left and right channels.

Lock the screw.

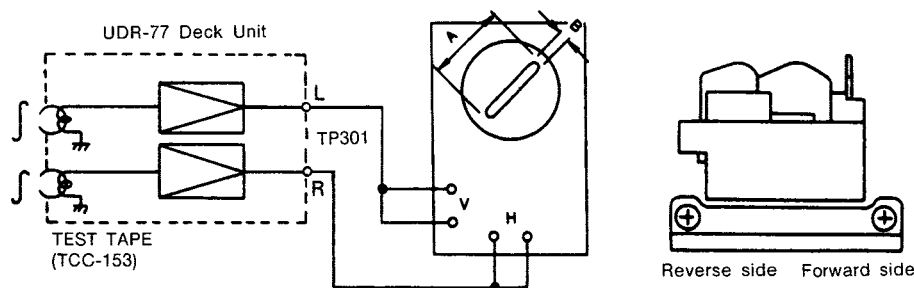


2-2 Tape speed check and adjustment

- Connect the frequency counter to test point TP301.

Play back the test tape (TCC-111) on deck and once tape transport has stabilized, adjust normal-speed-adjustment variable resistor (motor Variable Resistor) to yield 3,000 Hz ±10 Hz

NOTE: Use the central portion of the test tape: not the beginning or end of the winding.

CASSETTE DECK SECTION

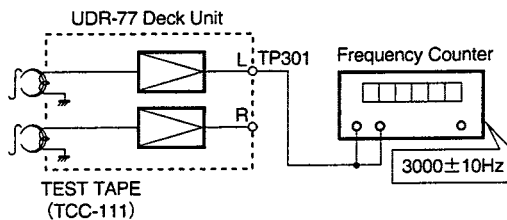

2-3 Playback level check and adjustment

Play a Dolby reference level tape (A-BEX TCC-130) and check that the voltage of the left and right monitor outputs of TP301 on the KU-9335-3 Unit is within 548 mV \pm 1 dB.

NOTE: For anything other than the above, the playback level must be adjusted.

- Adjust: VR101 (Left channel), and VR201 (right channel)

3. Recording adjustments

3-1 Overall frequency response adjustment for recording and playback

Load blank A-BEX TCC-203B tape for adjustment purposes and record and play it back, adjusting the input attenuators of the 1 kHz and 10 kHz signals to yield a left and right monitor output voltage of 54.8 mV at TP301 on the KU-9335-3 Dolby Unit. Adjust so that the 10 kHz level is about +0 dB with respect to 1 kHz, and the overall response is within the range shown in the diagram below.


- If the 10 kHz output is larger than the 1 kHz output, turn VR102 (left channel) and VR202 (right channel) counterclockwise, and if it is smaller, turn these controls clockwise.

3.2 Recording level check and adjustment

Load a blank A-BEX TCC-203B tape for adjustment purposes and check that the voltmeter indication is within the 54.8 mV \pm 1 dB range when a 1 kHz signal is recorded and played back.


If it is not within this range, the recording level requires adjustment.

- If the level at the time of playing back the recording is higher than at the time of recording, turn VR103 (left channel) and VR203 (right channel) counterclockwise, and if lower, turn these controls clockwise.

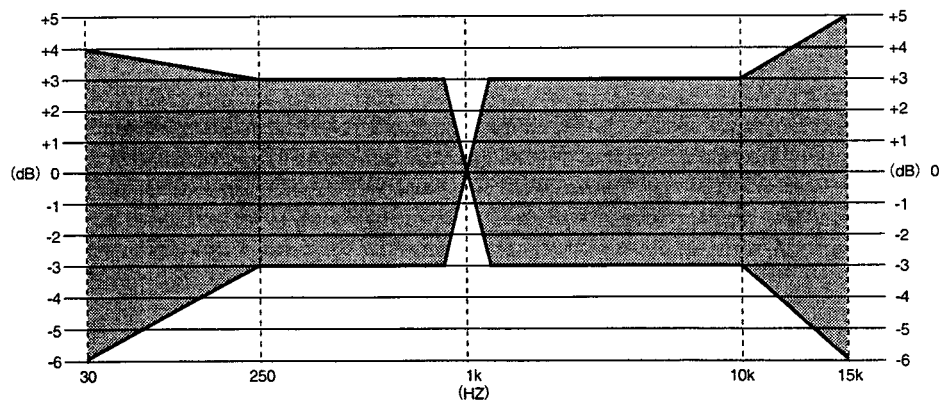

CASSETTE DECK SECTION

**OUTLINE DIAGRAM OF ADJUSTMENT LOCATION
KU-9335-2 REC/PB UNIT ASS'Y (Component Side)**


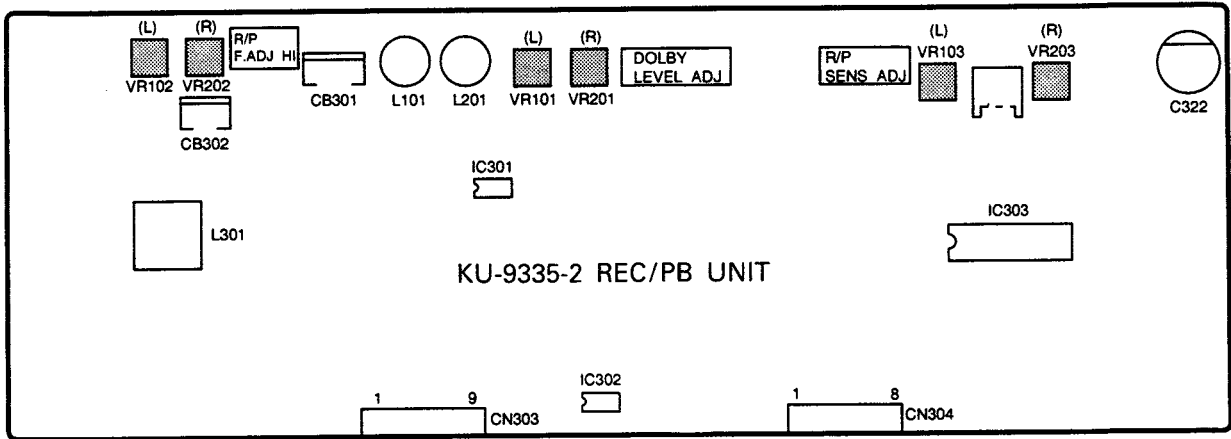


CASSETTE DECK SECTION



SEMICONDUCTORS

● IC's



CXA1198AP (IC303)

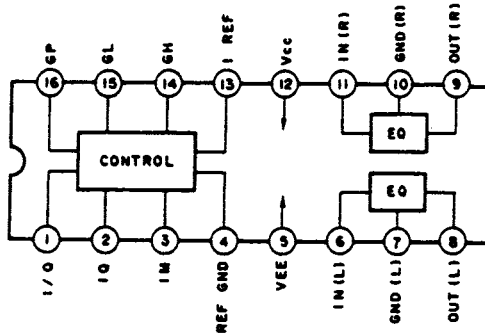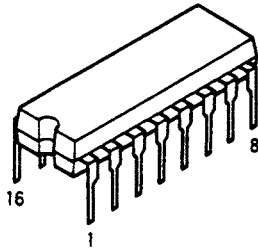



LA2000M (IC302)

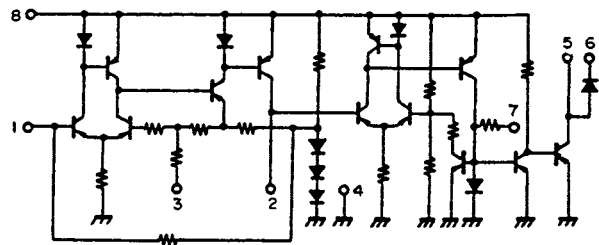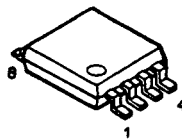



BA6209 (IC501)
Reversible motor driver
(2 circuits built in)

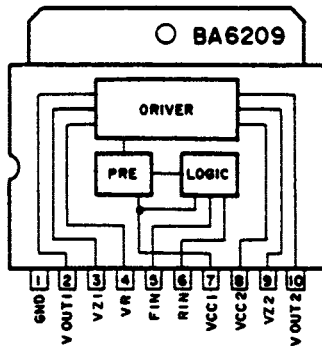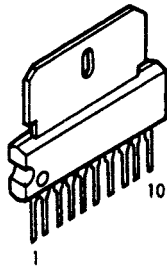


μPC4570G2 (IC301, 306)

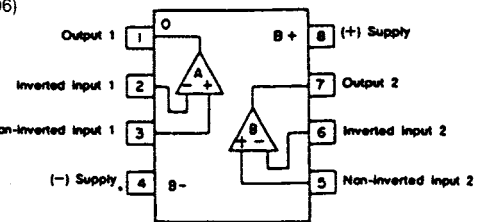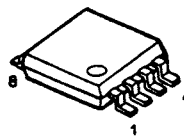

BA15218F (IC305)

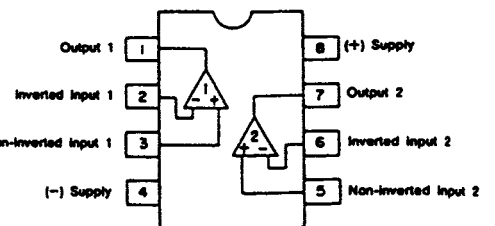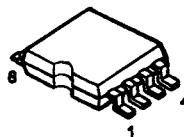


BA178M06 (S) (IC503) .. +6V
BA178M08 (S) (IC504) .. +8V
(Three-terminal positive constant voltage power supply)



1: Output
2: GND
3: Input



NJM79M08FA (IC505) .. -8V
(Three-terminal negative constant voltage power supply)



1: Output
2: Input
3: GND

CASSETTE DECK SECTION


CXA1331M (IC304)

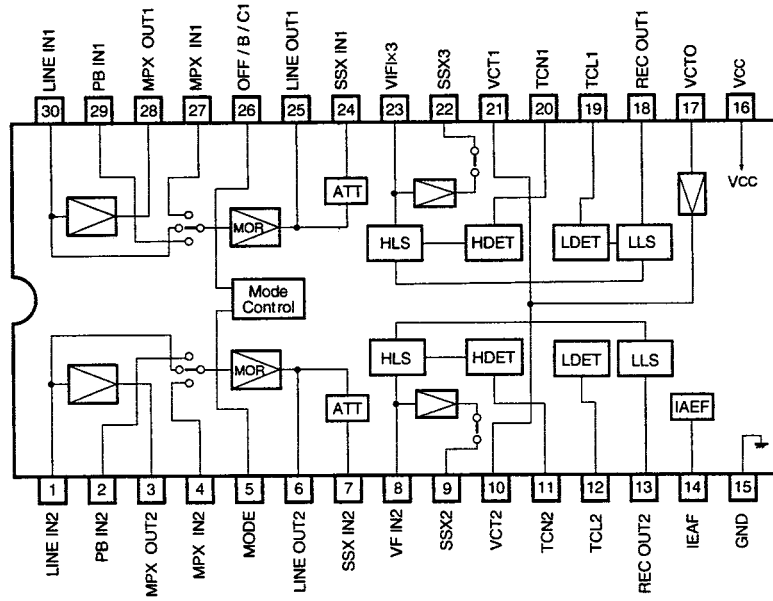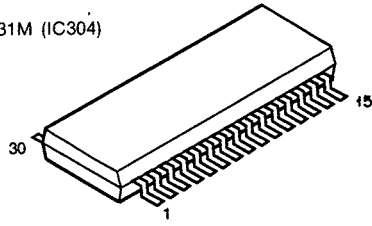


CASSETTE DECK SECTION

● **Transistors**



2SB562 (C)

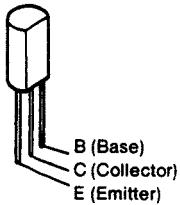

2SA933S (S)


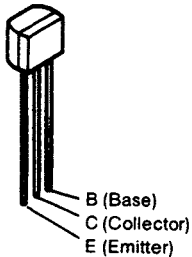


2SK373 (Y) (FET)

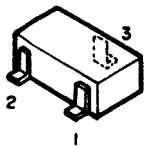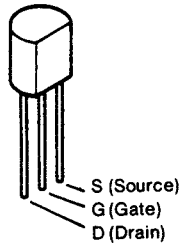


1 : GND / Emitter
2 : In / Base
3 : Out / Collector

PNP Type

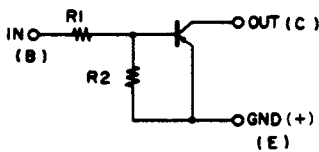



NPN Type



| | R1 | R2 |
|----------|---------|---------|
| DTA114EK | 10k ohm | 10k ohm |
| DTA144EK | 47k ohm | 47k ohm |


| | R1 |
|----------|----------|
| DTC114TK | 10k ohm |
| DTC323TK | 2.2k ohm |

NPN Type

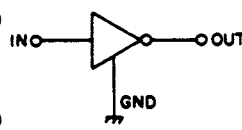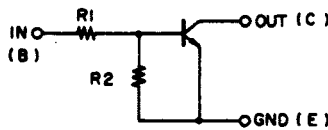

| | R1 | R2 |
|----------|---------|---------|
| DTC114EK | 10k ohm | 10k ohm |
| DTC144EK | 47k ohm | 47k ohm |

2SA1037K (S/R)
2SC2412K (S)

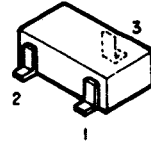

1 : GND / Emitter
2 : In / Base
3 : Out / Collector

- DTA144EK PNP type
- DTA114EK PNP type
- DTC114EK NPN type
- DTC144EK NPN type
- DTC114TK NPN type
- DTC323TK NPN type

● **Diodes**


- MTZJ5.6A
- MTZJ7.5A
- MTZJ7.5C
- MTZJ9.1A



1SS252




1SR35-200A

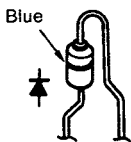

● **LED ASS'Y**




- SEL-2410G (Green) (D401, 402)
- SEL-2210R (Red) (D403)

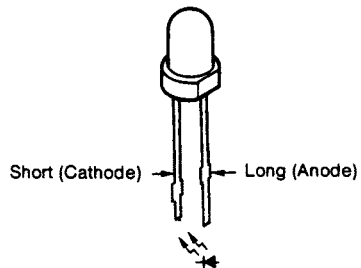

CASSETTE DECK SECTION

MICROPROCESSOR DOCUMENTATION

HD404729C29FS
(IC502) Part No. 262 1867 002

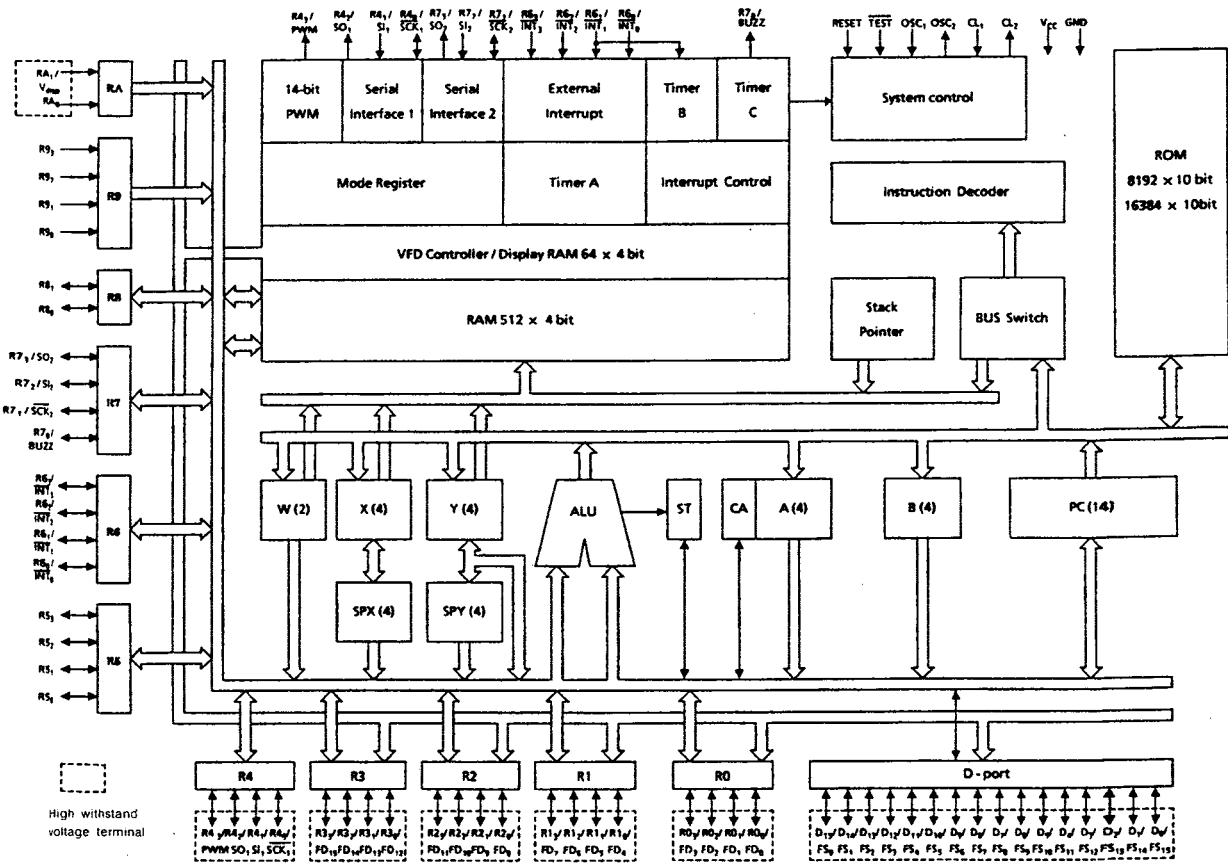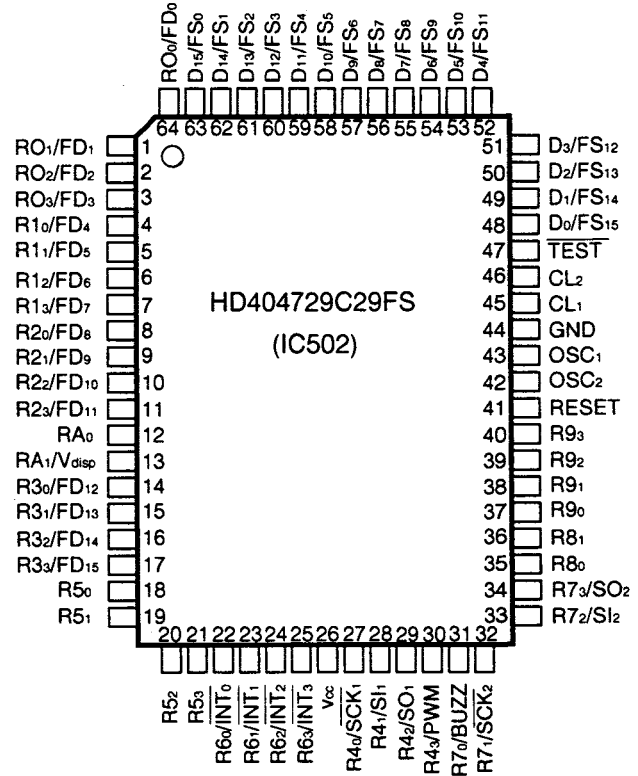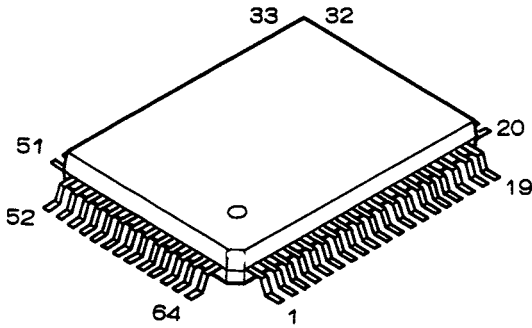

| |
|------------------------------|
| CASSETTE DECK SECTION |
|------------------------------|

• Pin Discription

| No. | Port Name | Function Name | Function |
|-----|-----------|-----------------------------------|---|
| 1 | R01/FD1 | CPM OUT | This pin drives the capstan motor of the mechanism. (Active high) |
| 2 | R02/FD2 | REC MUTE OUT | Mute output pin of the recording amplifier. (Active low) |
| 3 | R03/FD3 | DOLBY R/P OUT | Output pin that switches the record/playback mode of the Dolby IC. |
| 4 | R10/FD4 | OPEN OUT | Output pin used to open the loader of the mechanism. (Active high) |
| 5 | R11/FD5 | CLOSE OUT | Output pin used to close the loader of the mechanism. (Active high) |
| 6 | R12/FD6 | L.SPEED OUT | Open |
| 7 | R13/FD7 | OFF ENA OUT | Open |
| 8 | R20/FD8 | OSC CONT OUT | Output pin that controls the bias oscillation. (Active high) |
| 9 | R21/FD9 | REC OUT | Record mode output pin; high level during the record mode. |
| 10 | R22/FD10 | $\overline{\text{REC OUT}}$ | Record out inverted output pin. |
| 11 | R23/FD11 | PB EQ OUT | Output pin which switches the time constant of the playback amplifier. $120 \mu = \text{H}$, $70 \mu = \text{L}$ |
| 12 | RA0 | CrO ₂ IN | Mechanism's tape type detection switch input pin. |
| 13 | RA1/Vdisp | METAL IN | Mechanism's tape type detection switch input pin. |
| 14 | R30/FD12 | METAL OUT | Output pin that switches the recording equalizer and the bias to meta!. (Active high) |
| 15 | R31/FD13 | CrO ₂ OUT | Output pin that switches the recording equalizer and the bias to chrome. (Active high) |
| 16 | R32/FD14 | NORMAL OUT | Output pin that switches the recording equalizer and the bias to normal. (Active high) |
| 17 | R33/FD15 | PB MUTE OUT | Mute output pin of the playback amplifier. (Active high) |
| 18 | R50 | NC (OUT) | Open |
| 19 | R51 | NC (OUT) | Open |
| 20 | R52 | NC (OUT) | Open |
| 21 | R53 | SERIAL SIG OUT | Output pin used for serial communications. (Active low) |
| 22 | R60/INT0 | $\overline{\text{SERIAL SIG IN}}$ | Input pin used for serial communications. (Active low) |
| 23 | R61/INT1 | STANDBY IN | This pin sets the microprocessor to the standby mode. |
| 24 | R62/INT2 | ENA IN | Display data output enable input pin. |
| 25 | R63/INT3 | MS IN | Input pin for the intertrack detection signal from the IC used for intertrack detection. (Active low) |
| 26 | Vcc | Vcc | Power supply input pin. |
| 27 | R40/SCK1 | CLOCK OUT | Clock pulse output pin used for display data transfer. |
| 28 | R41/SI1 | NC (OUT) | Open |
| 29 | R42/SO2 | DATA OUT | Display data output pin. |
| 30 | R43/PWM | LINE MUTE OUT | Mute output pin of the playback output pin. |
| 31 | R70/BUZZ | NC (OUT) | Open |
| 32 | R71/SCK2 | NC (OUT) | Open |
| 33 | R72/SI2 | NC (OUT) | Open |
| 34 | R73/SO2 | NC (OUT) | Open |
| 35 | R80 | NC (OUT) | Open |
| 36 | R81 | NC (OUT) | Open |
| 37 | R90 | KR0 | Key and switch input pin. |
| 38 | R91 | KR1 | Key and switch input pin. |
| 39 | R92 | KR2 | Key and switch input pin. |
| 40 | R93 | KR3 | Key and switch input pin. |
| 41 | RESET | RESET IN | System reset input pin. |
| 42 | OSC2 | OSC2 | System clock oscillation pin. 4 MHz |
| 43 | OSC1 | OSC1 | System clock oscillation pin. 4 MHz |
| 44 | GND | GND | Ground pin. |
| 45 | CL1 | CL1 | Connect to ground. |

CASSETTE DECK SECTION

| No. | Port Name | Function Name | Function |
|-----|-----------|---------------|---|
| 46 | CL2 | CL2 | Open |
| 47 | TEST | TEST | Connect to Vcc. |
| 48 | D0/FS15 | KS0 | Key strobe output pin. |
| 49 | D1/FS14 | KS1 | Key strobe output pin. |
| 50 | D2/FS13 | KS2 | Key strobe output pin. |
| 51 | D3/FS12 | KS3 | Key strobe output pin. |
| 52 | D4/FS11 | KS4 | Key strobe output pin. |
| 53 | D5/FS10 | KS5 | Key strobe output pin. |
| 54 | D6/FS9 | KS6 | Key strobe output pin. |
| 55 | D7/FS8 | POWER ON OUT | Open |
| 56 | D8/FS7 | REV LED OUT | REVERSE LED lighting output. |
| 57 | D9/FS6 | FWD LED OUT | FORWARD LED lighting output. |
| 58 | D10/FS5 | REC LED OUT | REC LED lighting output. |
| 59 | D11/FS4 | NC (OUT) | Open |
| 60 | D12/FS3 | NC (IN) | Connect to Vcc. |
| 61 | D13/FS2 | NC (OUT) | Open |
| 62 | D14/FS1 | REEL S IN | Reel pulse input pin of the supply side. |
| 63 | D15/FS0 | REEL T IN | Reel pulse input pin of the take-up side. |
| 64 | R00/FD0 | PLAY SOL OUT | Output pin that drives the solenoid of the mechanism. |

CASSETTE DECK SECTION


• Button Input Description

| Item | Button Name | Description of Function |
|------|---------------|---|
| 1 | F. PLAY | Commands the forward direction play mode. Commands the cue/revue mode with one-touch play operations of PLAY + REW/FF, or FF/REW during the play mode. |
| 2 | R. PLAY | Commands the play mode of the reverse direction. The one-touch play operations of the cue/revue mode are the same as with F. PLAY. |
| 3 | F. F | Commands the tape to be wound quickly in the right direction. |
| 4 | REW | Commands the tape to be wound quickly in the left direction. |
| 5 | STOP | Commands the stop mode. When there has been input from this button, there will be a change to the stop mode from whichever mode is currently set. |
| 6 | OPEN/CLOSE | Commands the open/close mode of the cassette tray. The open/close mode is switched cyclicly with the input of this button. This is a toggle operation. When there is input from this button with the power off, the power is switched on and there is then a shift to the open mode. |
| 7 | REC/REC MUTE | Commands the record, record pause, and record muting modes. When there is button input in the stop mode, there will be a shift to the record pause mode. When there is button input in the record pause mode, there will be a shift to the record mute mode. When switched on simultaneously with PLAY, or when there is PLAY button input in the record pause mode, there will be a shift to the record mode. The conditions of the record mode must be satisfied. |
| 8 | COUNTER RESET | Resets the counter to "0000". |
| 9 | MEMORY STOP | Stops when the counter reaches "0000". |
| 10 | CD SRS | Commands the CS SRS operation. |

• Switch Input Description

| Item | Switch Name | Description of Function |
|------|-------------|---|
| 1 | REVERSE | Commands the one side or two side recording/playback modes and the endless playback mode. |
| 2 | DOLBY NR | Commands the on/off switching of the Dolby (B/C) noise reduction circuit. |

MICROPROCESSOR PERIPHERAL WIRING DIAGRAM

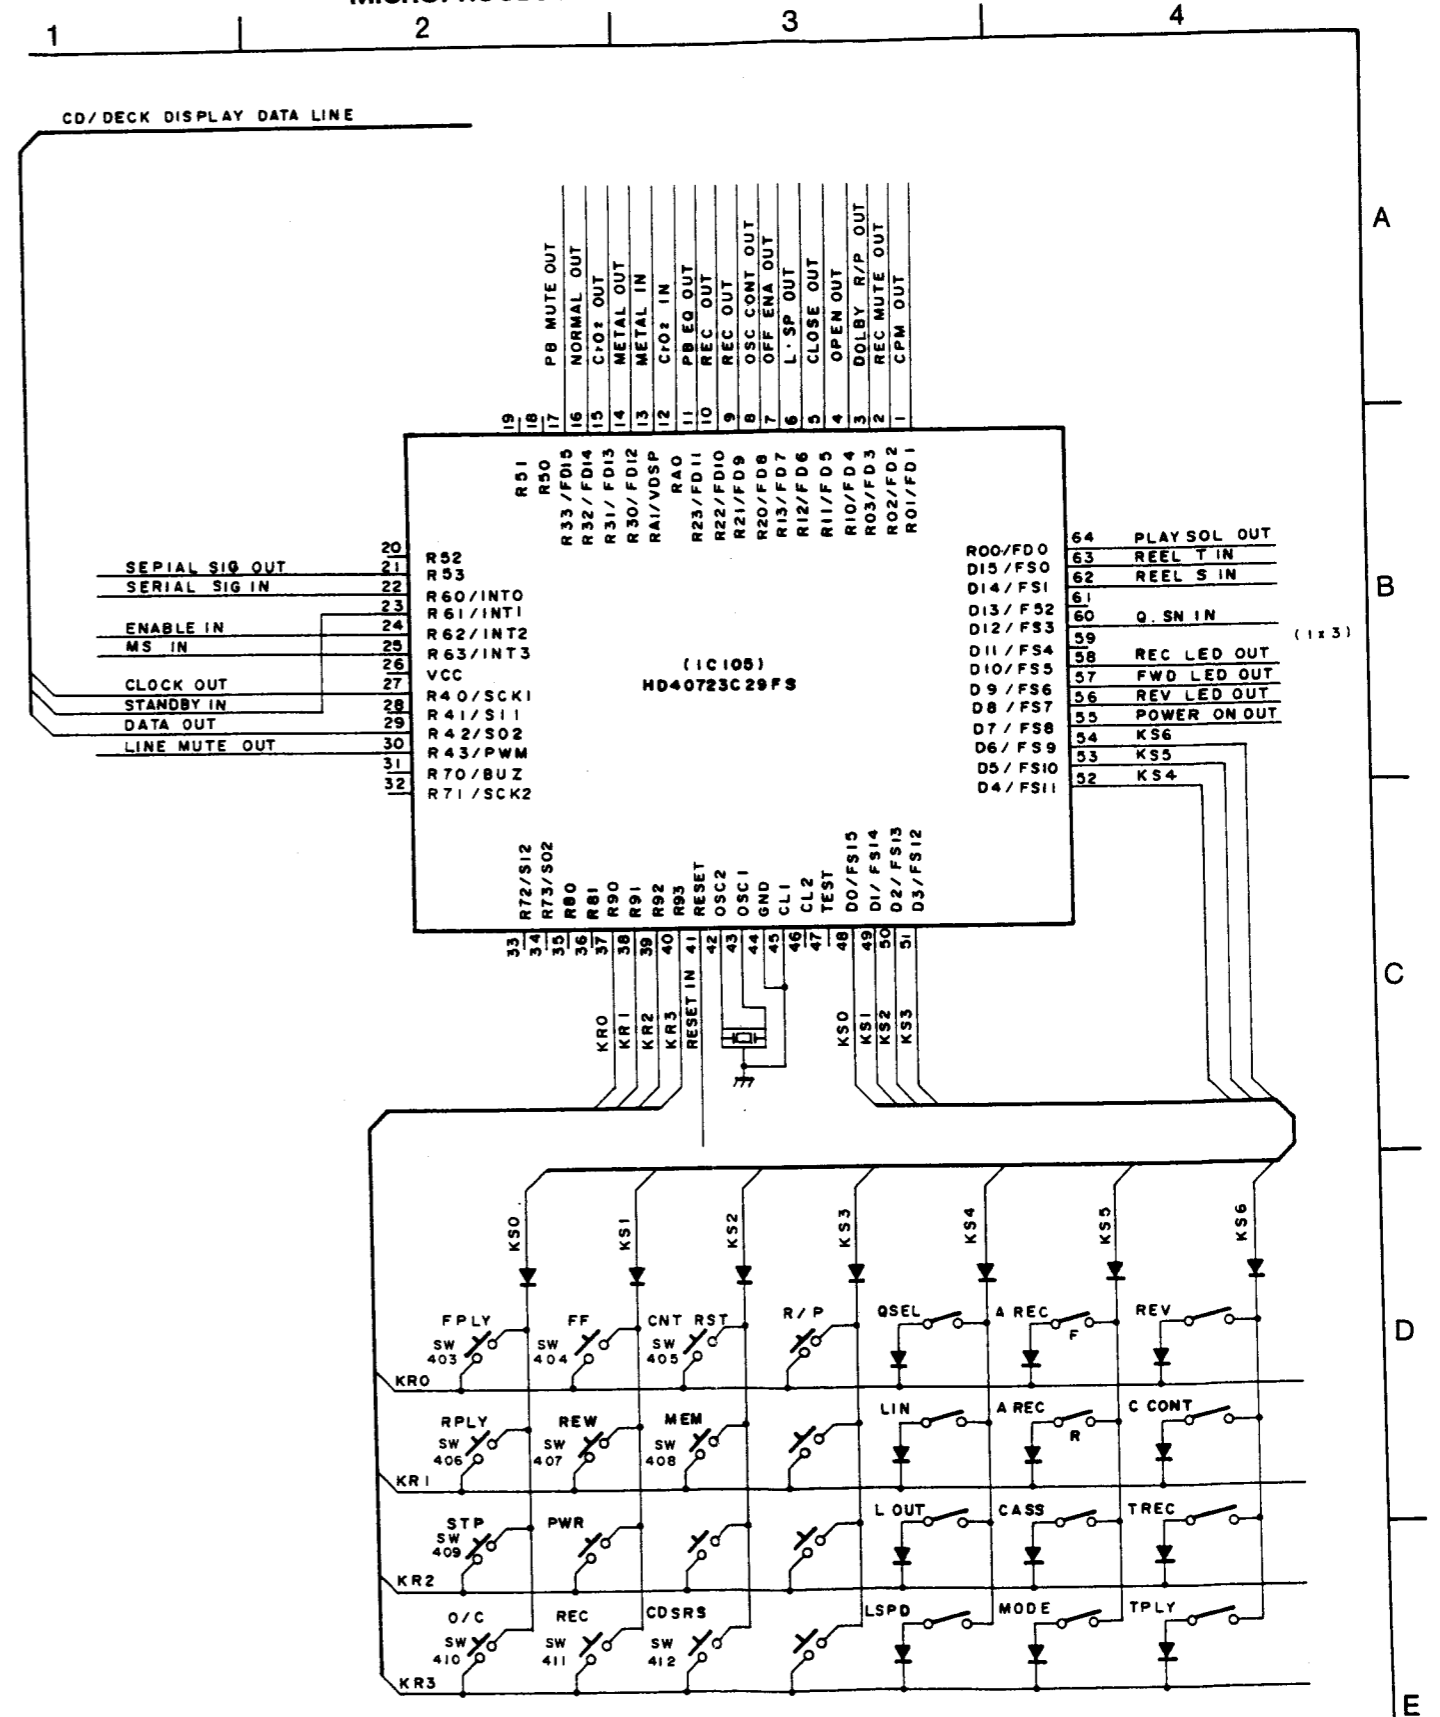

CASSETTE DECK SECTION

PRINTED WIRING BOARD

1 2 3 4 5 6 7 8

KU-9335 DECK UNIT ASS'Y

Component Side

| KU-9335 DECK UNIT ASS'Y | |
|-------------------------|-------------------|
| 1 | MAIN UNIT |
| 2 | REC/PB UNIT |
| 3 | LED, CONTROL UNIT |
| 4 | DOLBY UNIT |


A

B

C

D


E

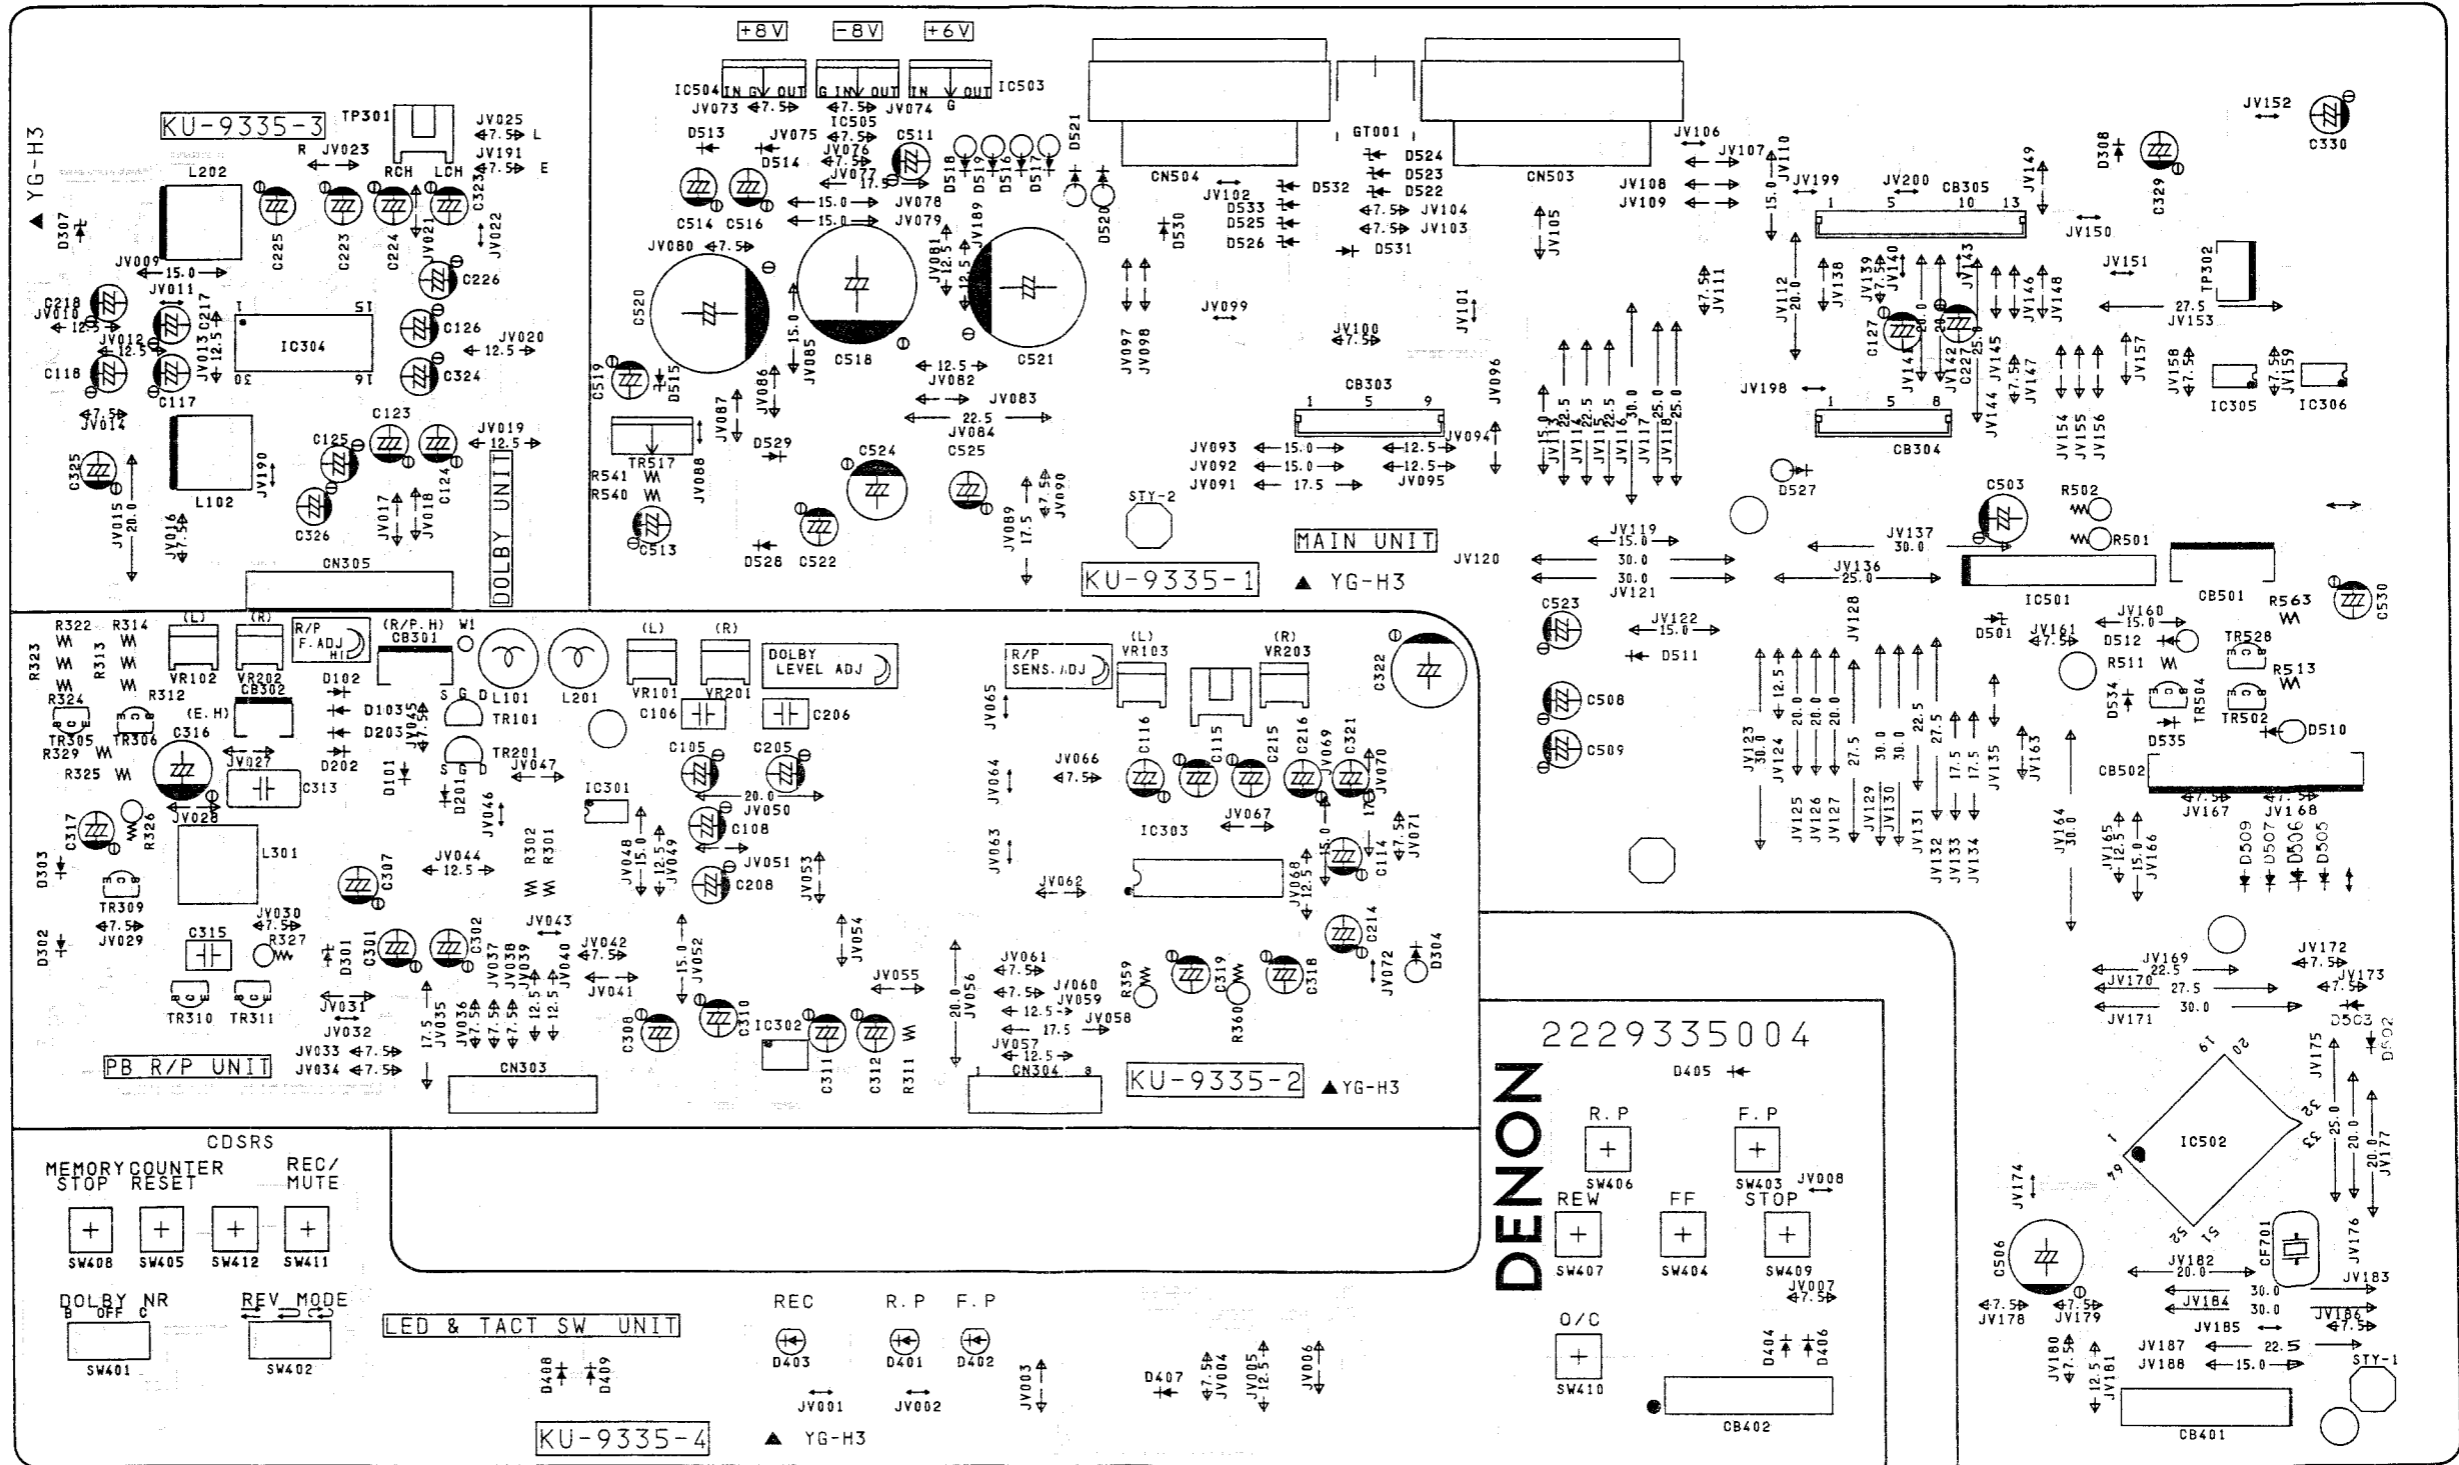

CASSETTE DECK SECTION

1 2 3 4 5 6 7 8


Patern Side


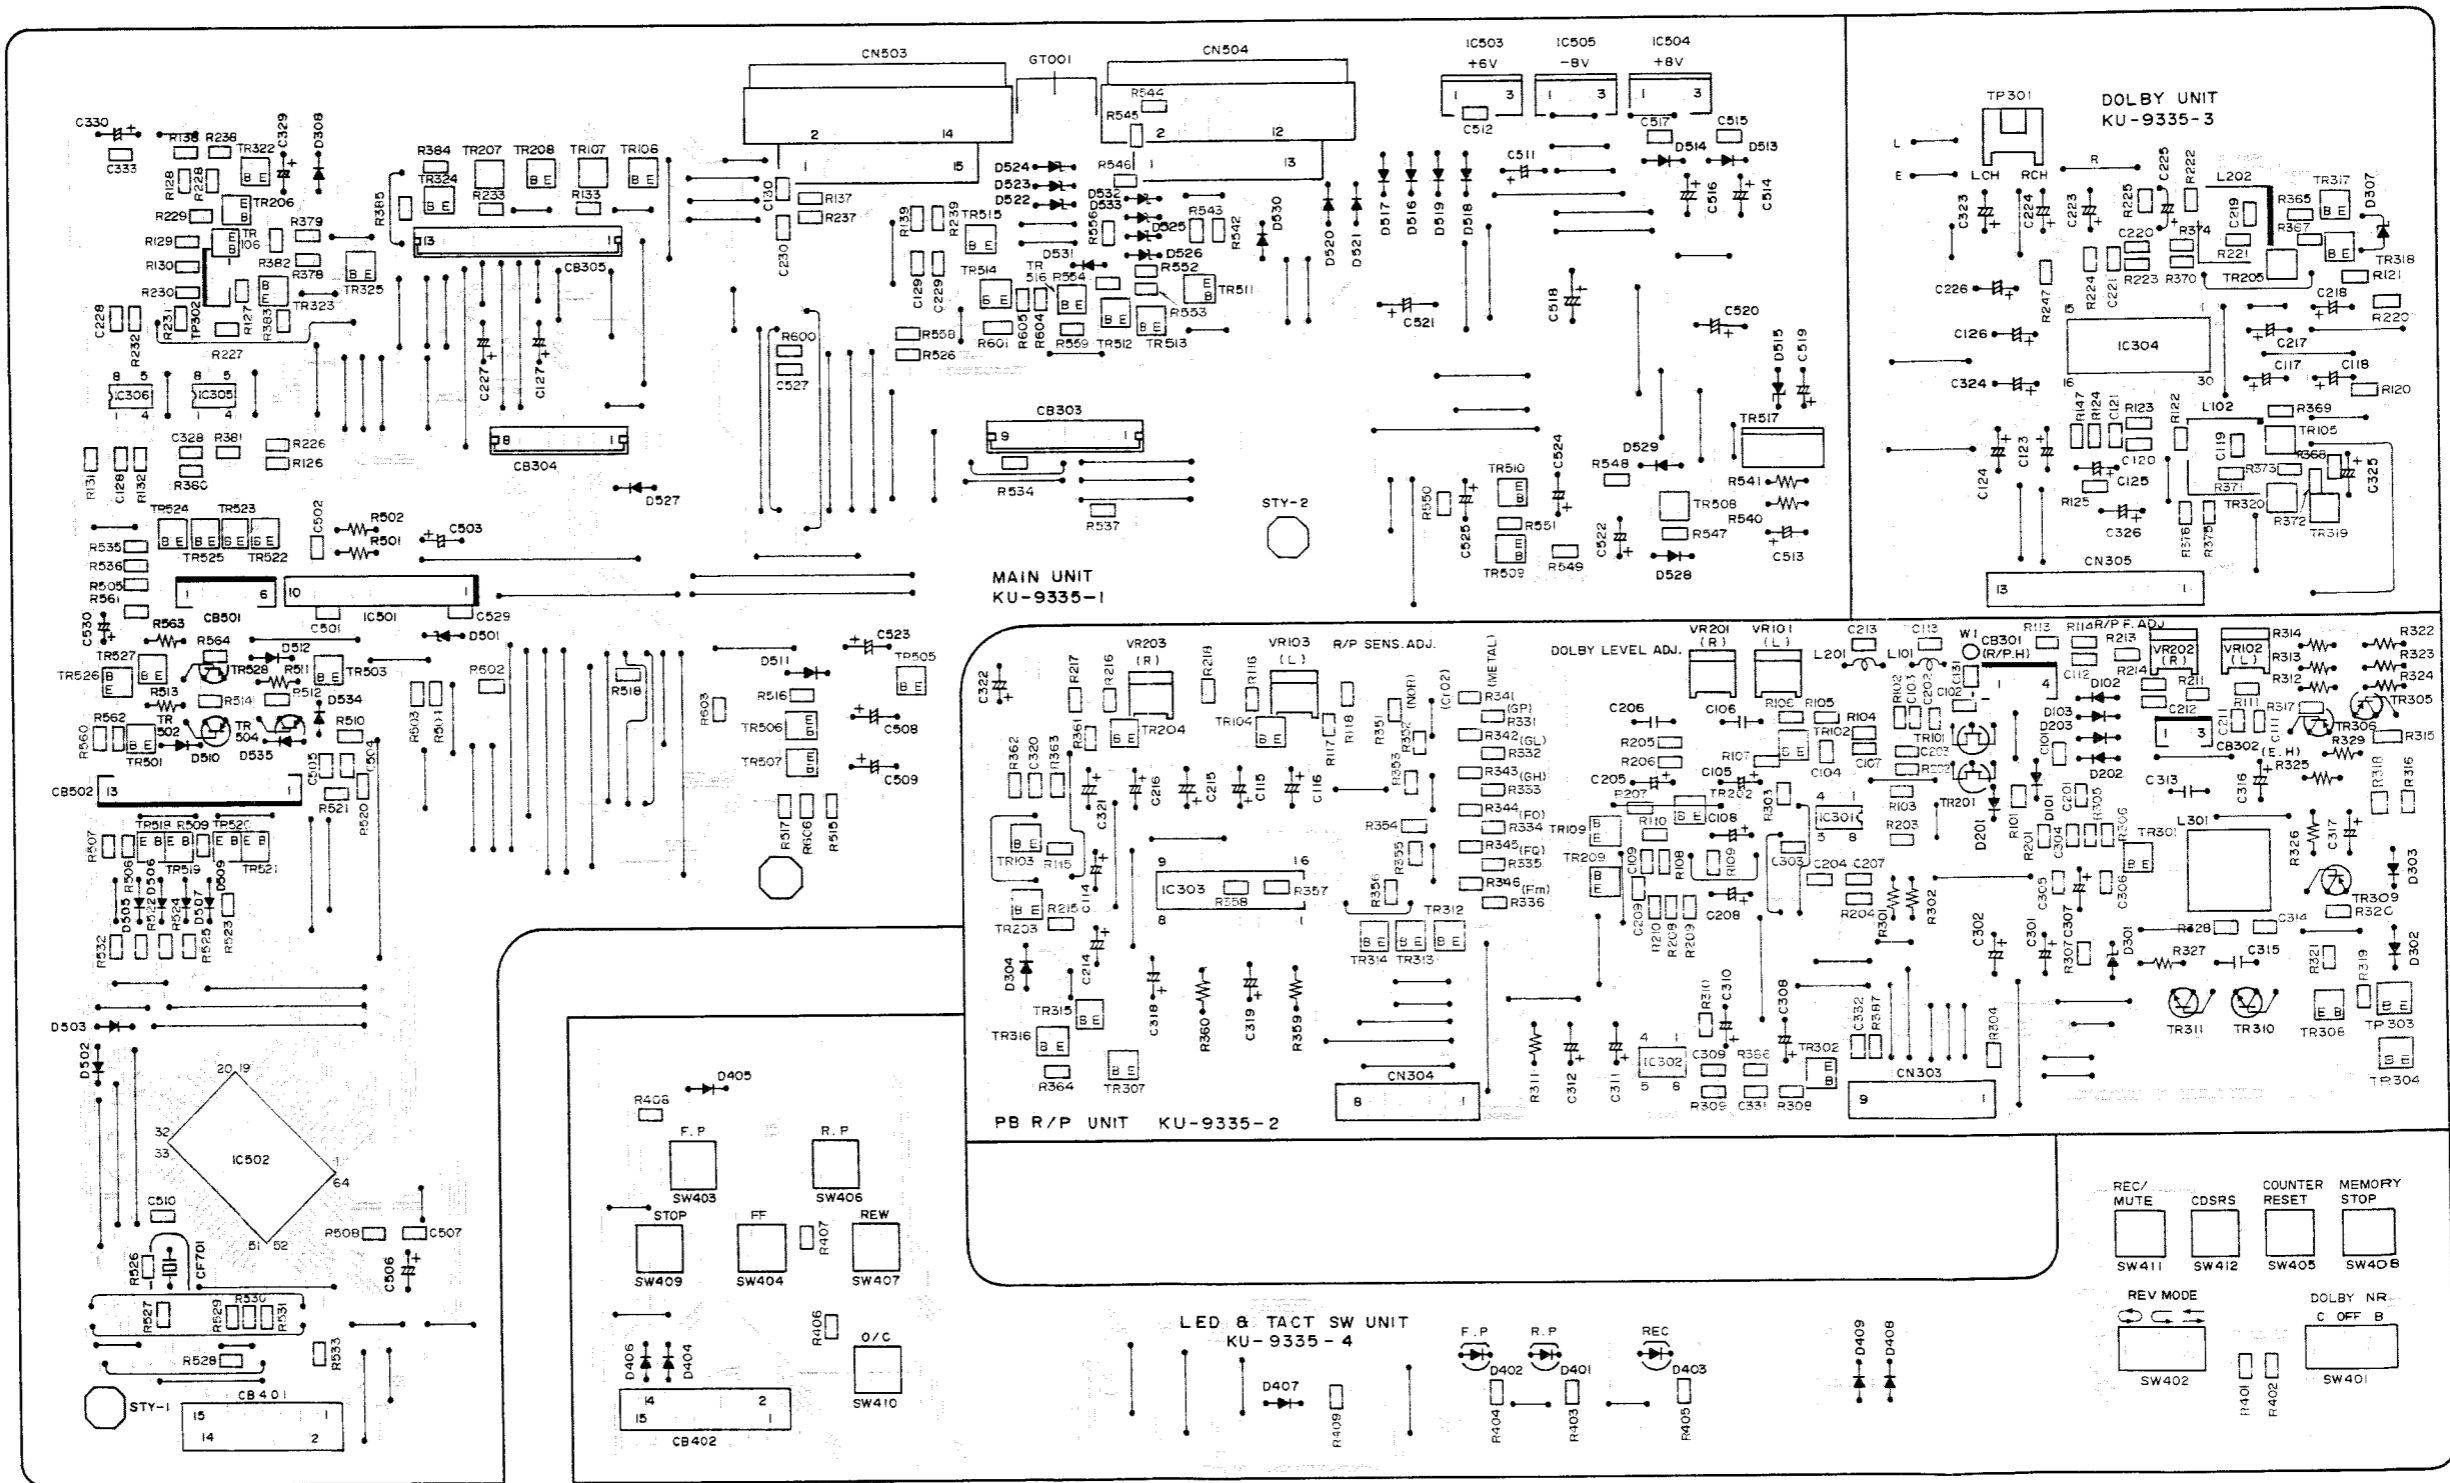


A
B
C
D
E

CASSETTE DECK SECTION

WIRING DIAGRAM

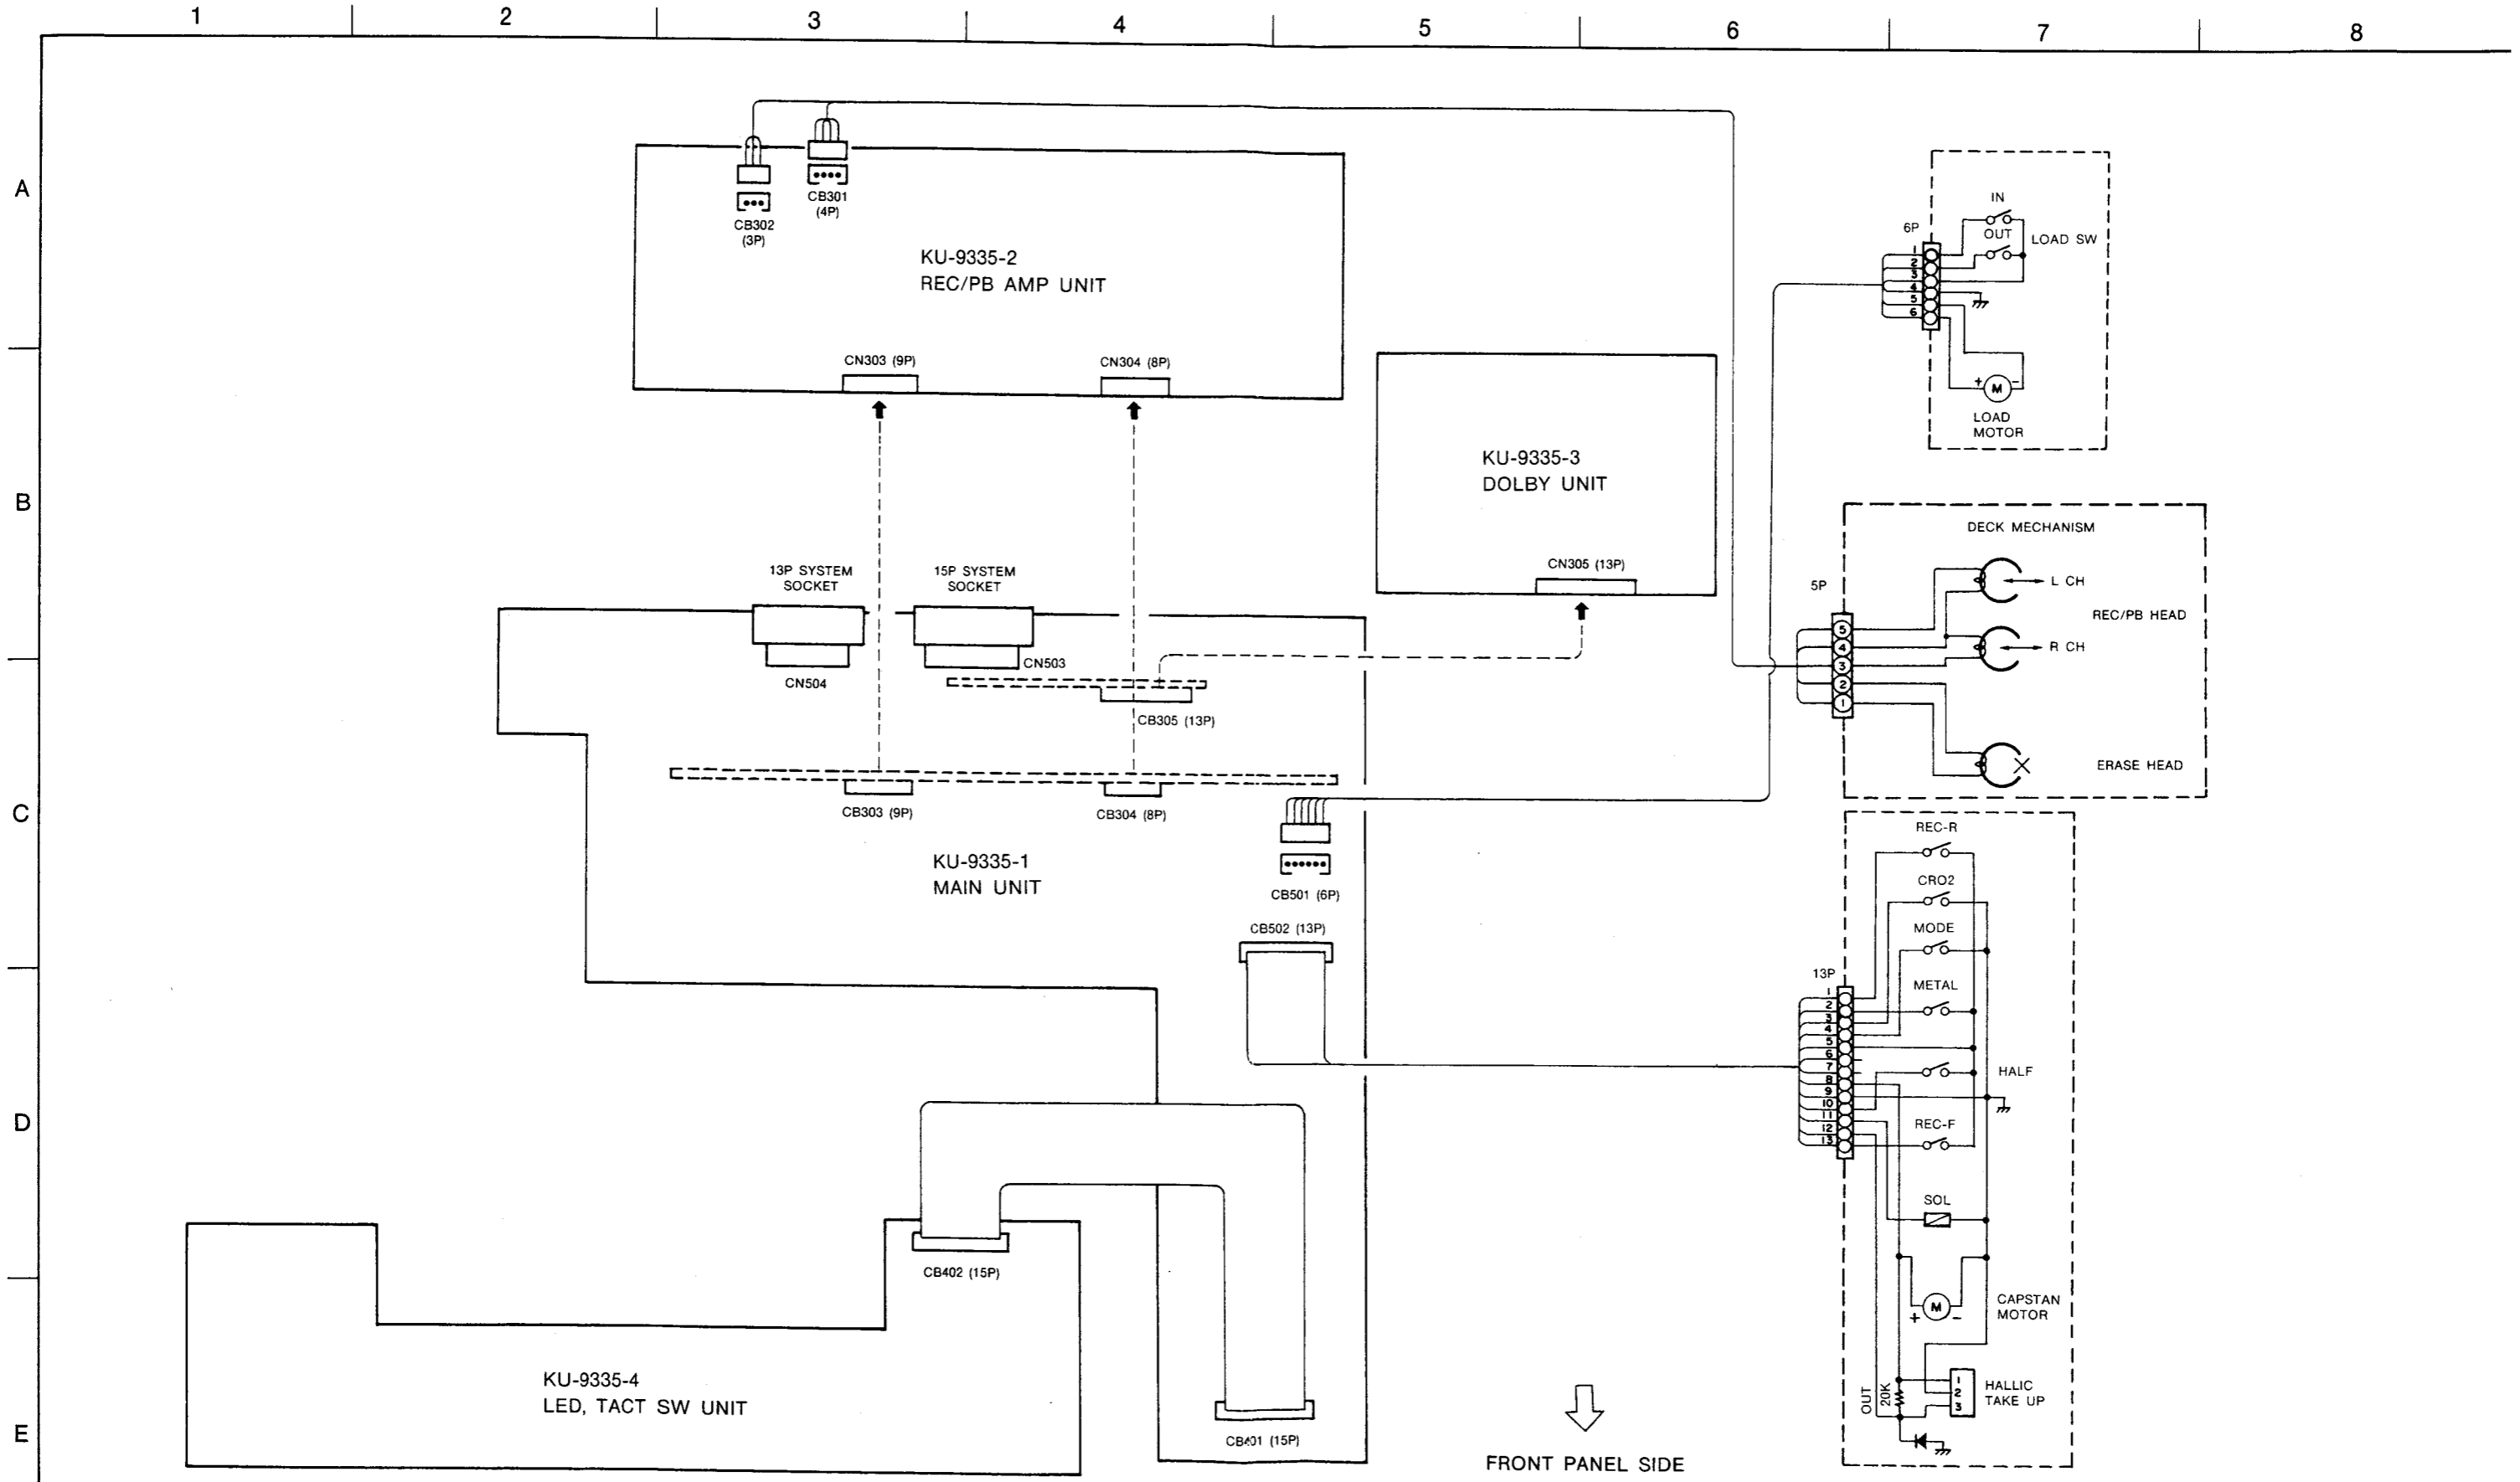

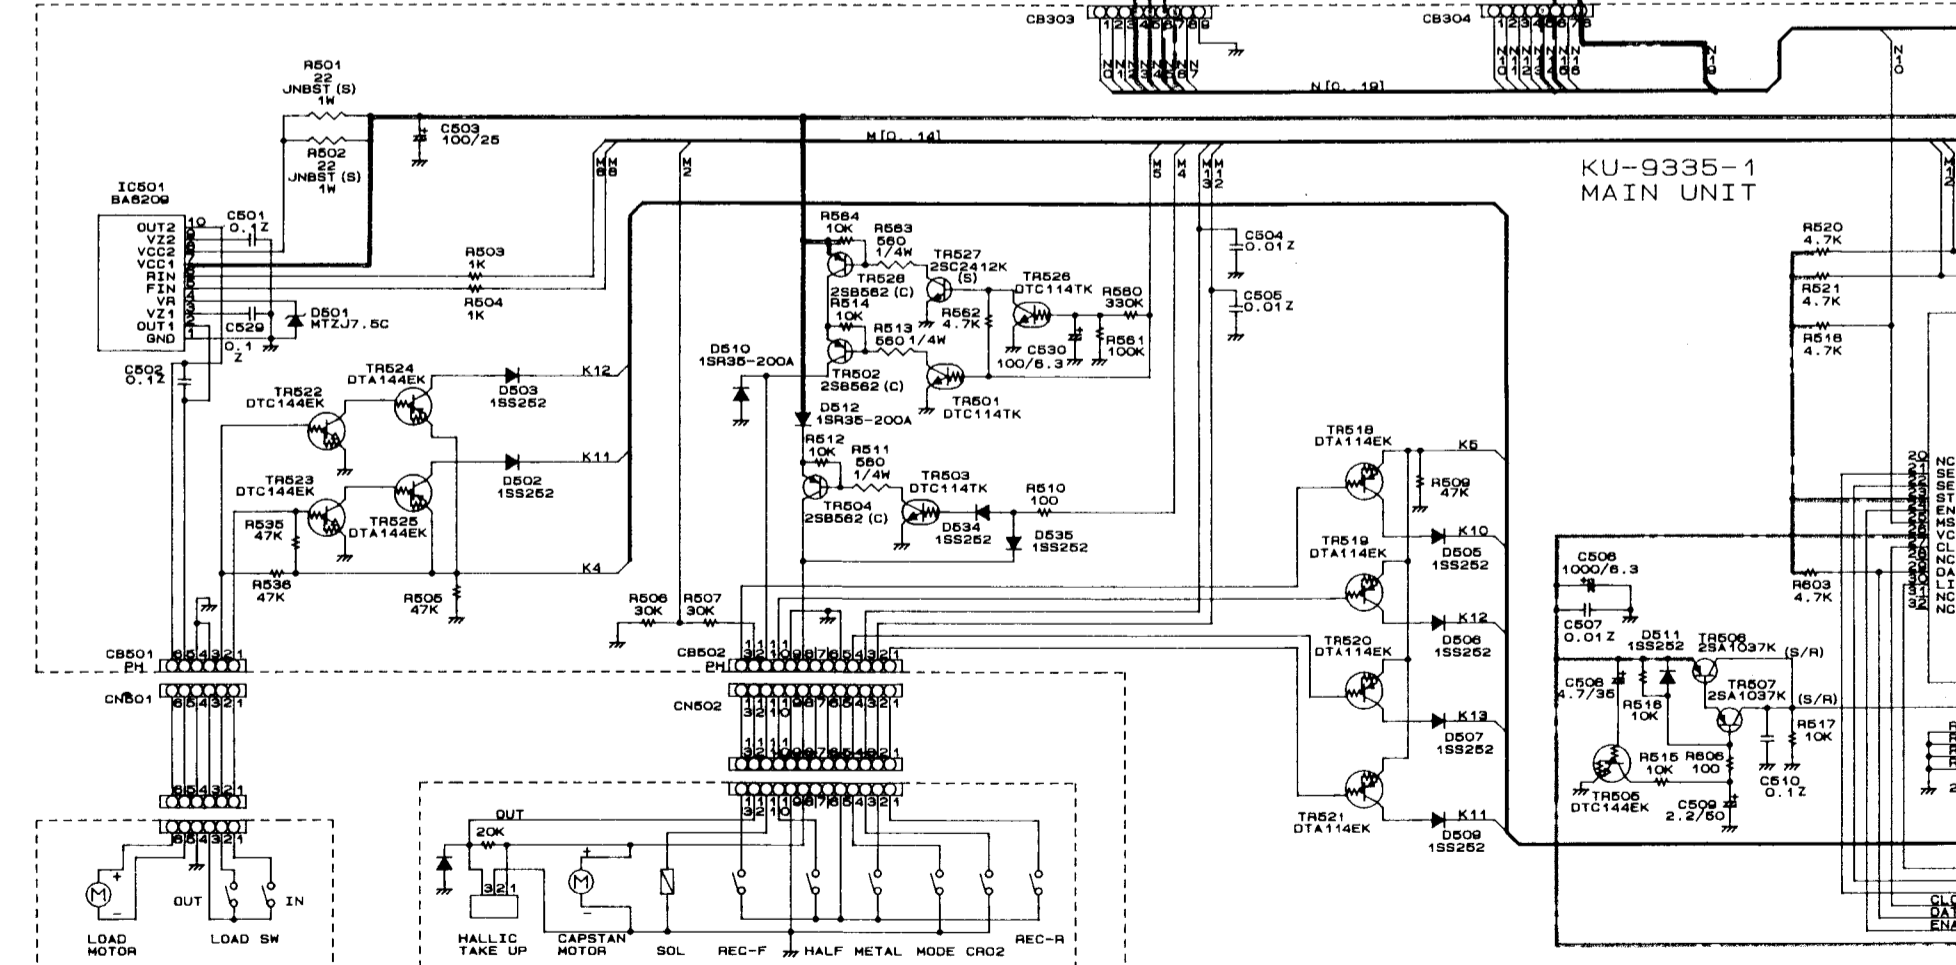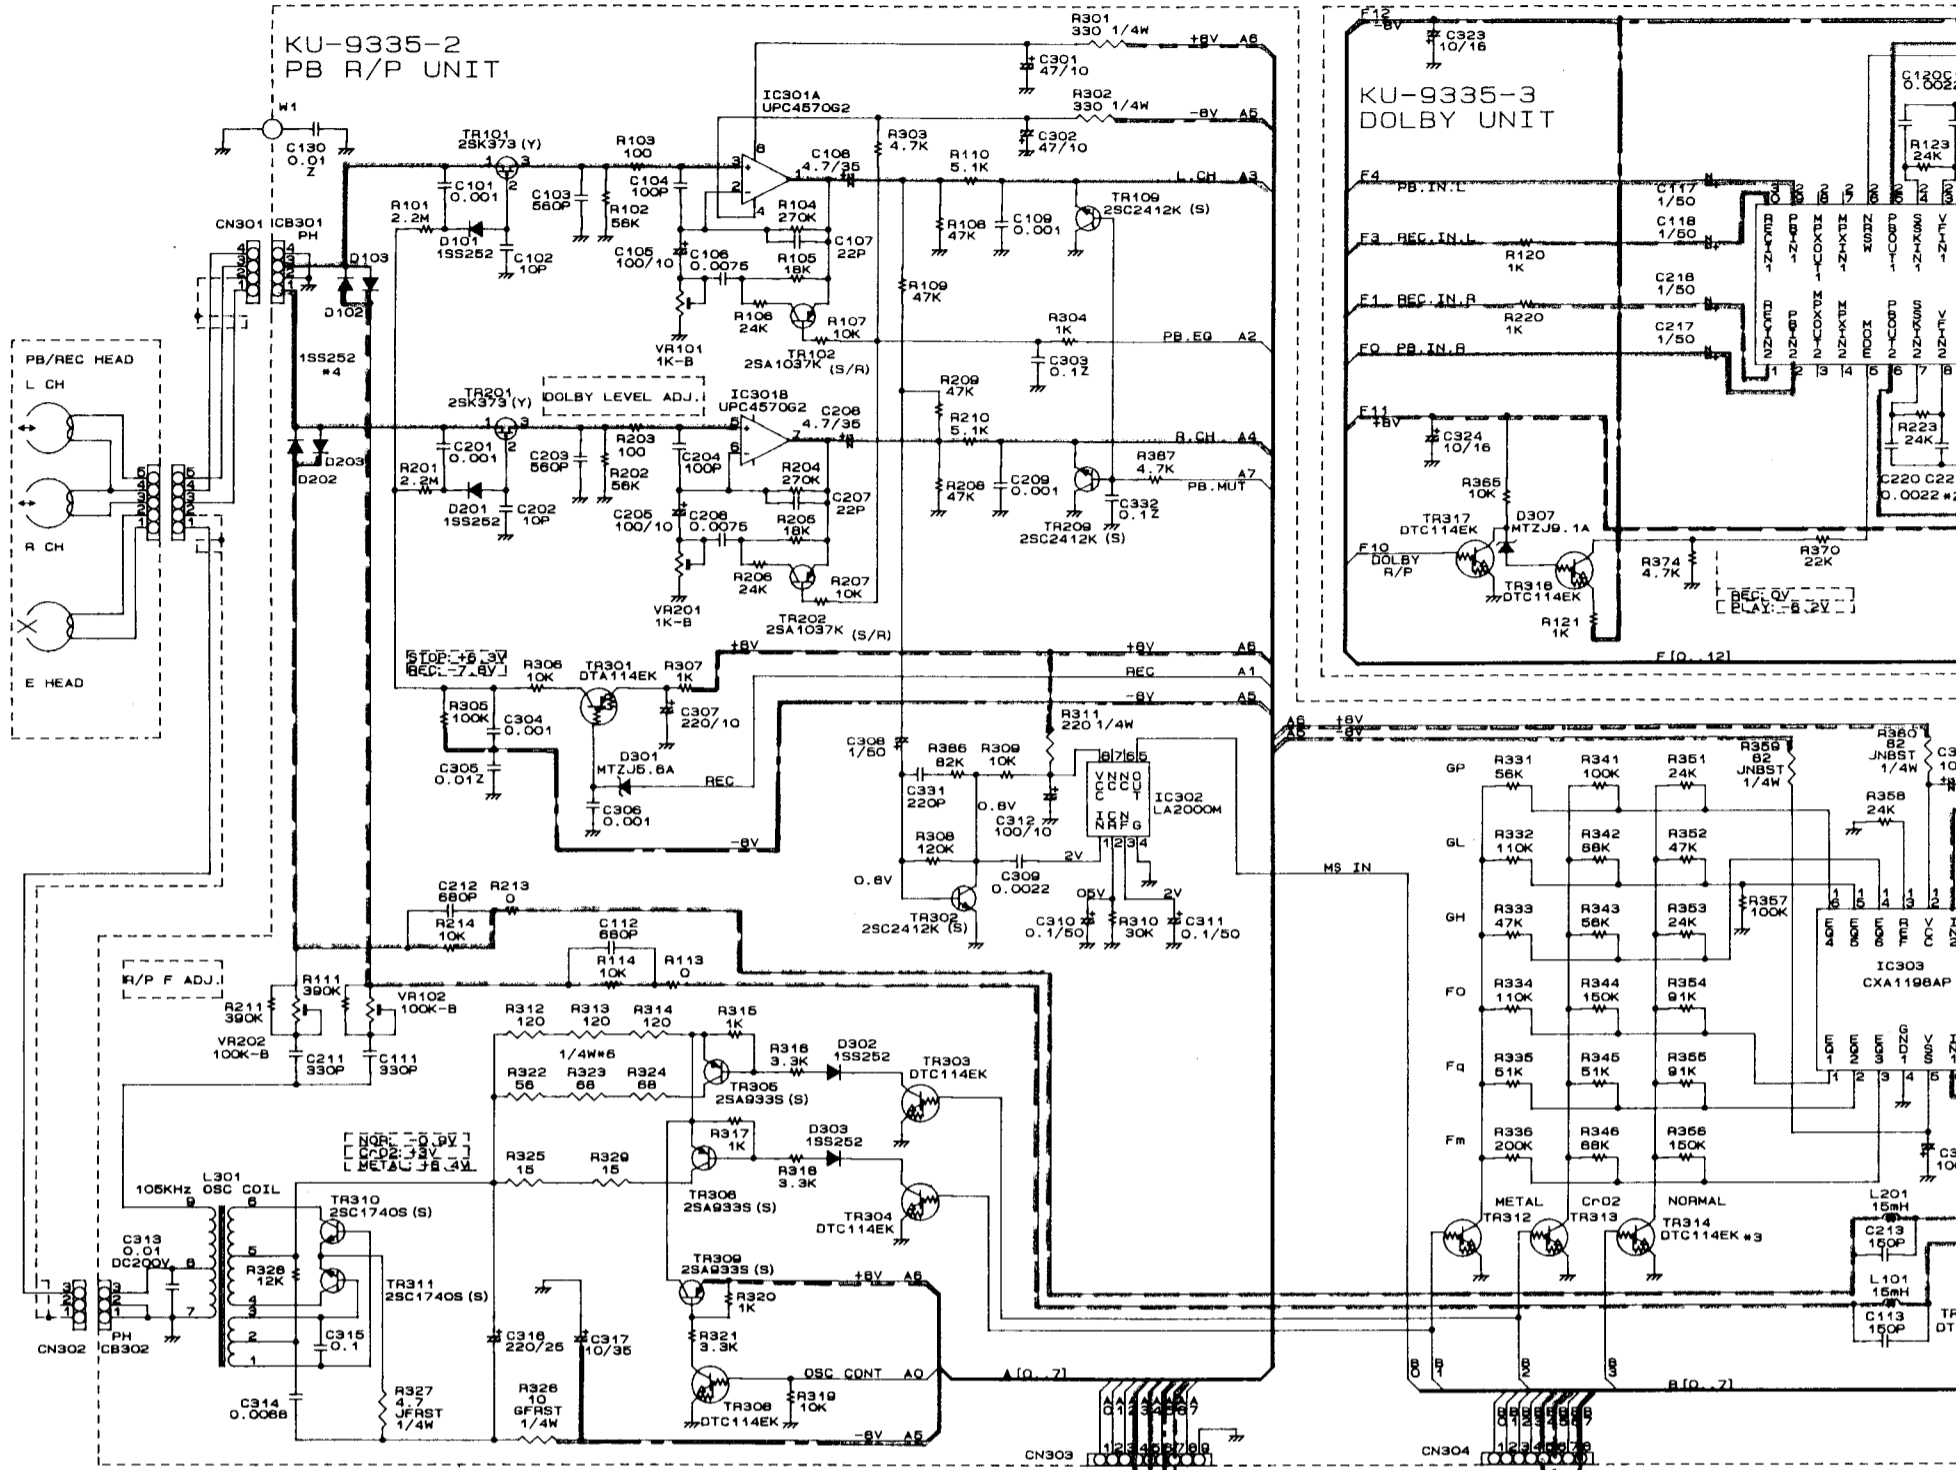

- +13.8V LINE
- +8V LINE
- -8V LINE
- +6V LINE
- PB LINE
- REC LINE

WARNING:
Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

DENON 211

CUT
Before
leaky
defec
WARN
DO N

SCHEMATIC DIAGRAM

5


6

7

8

9

10

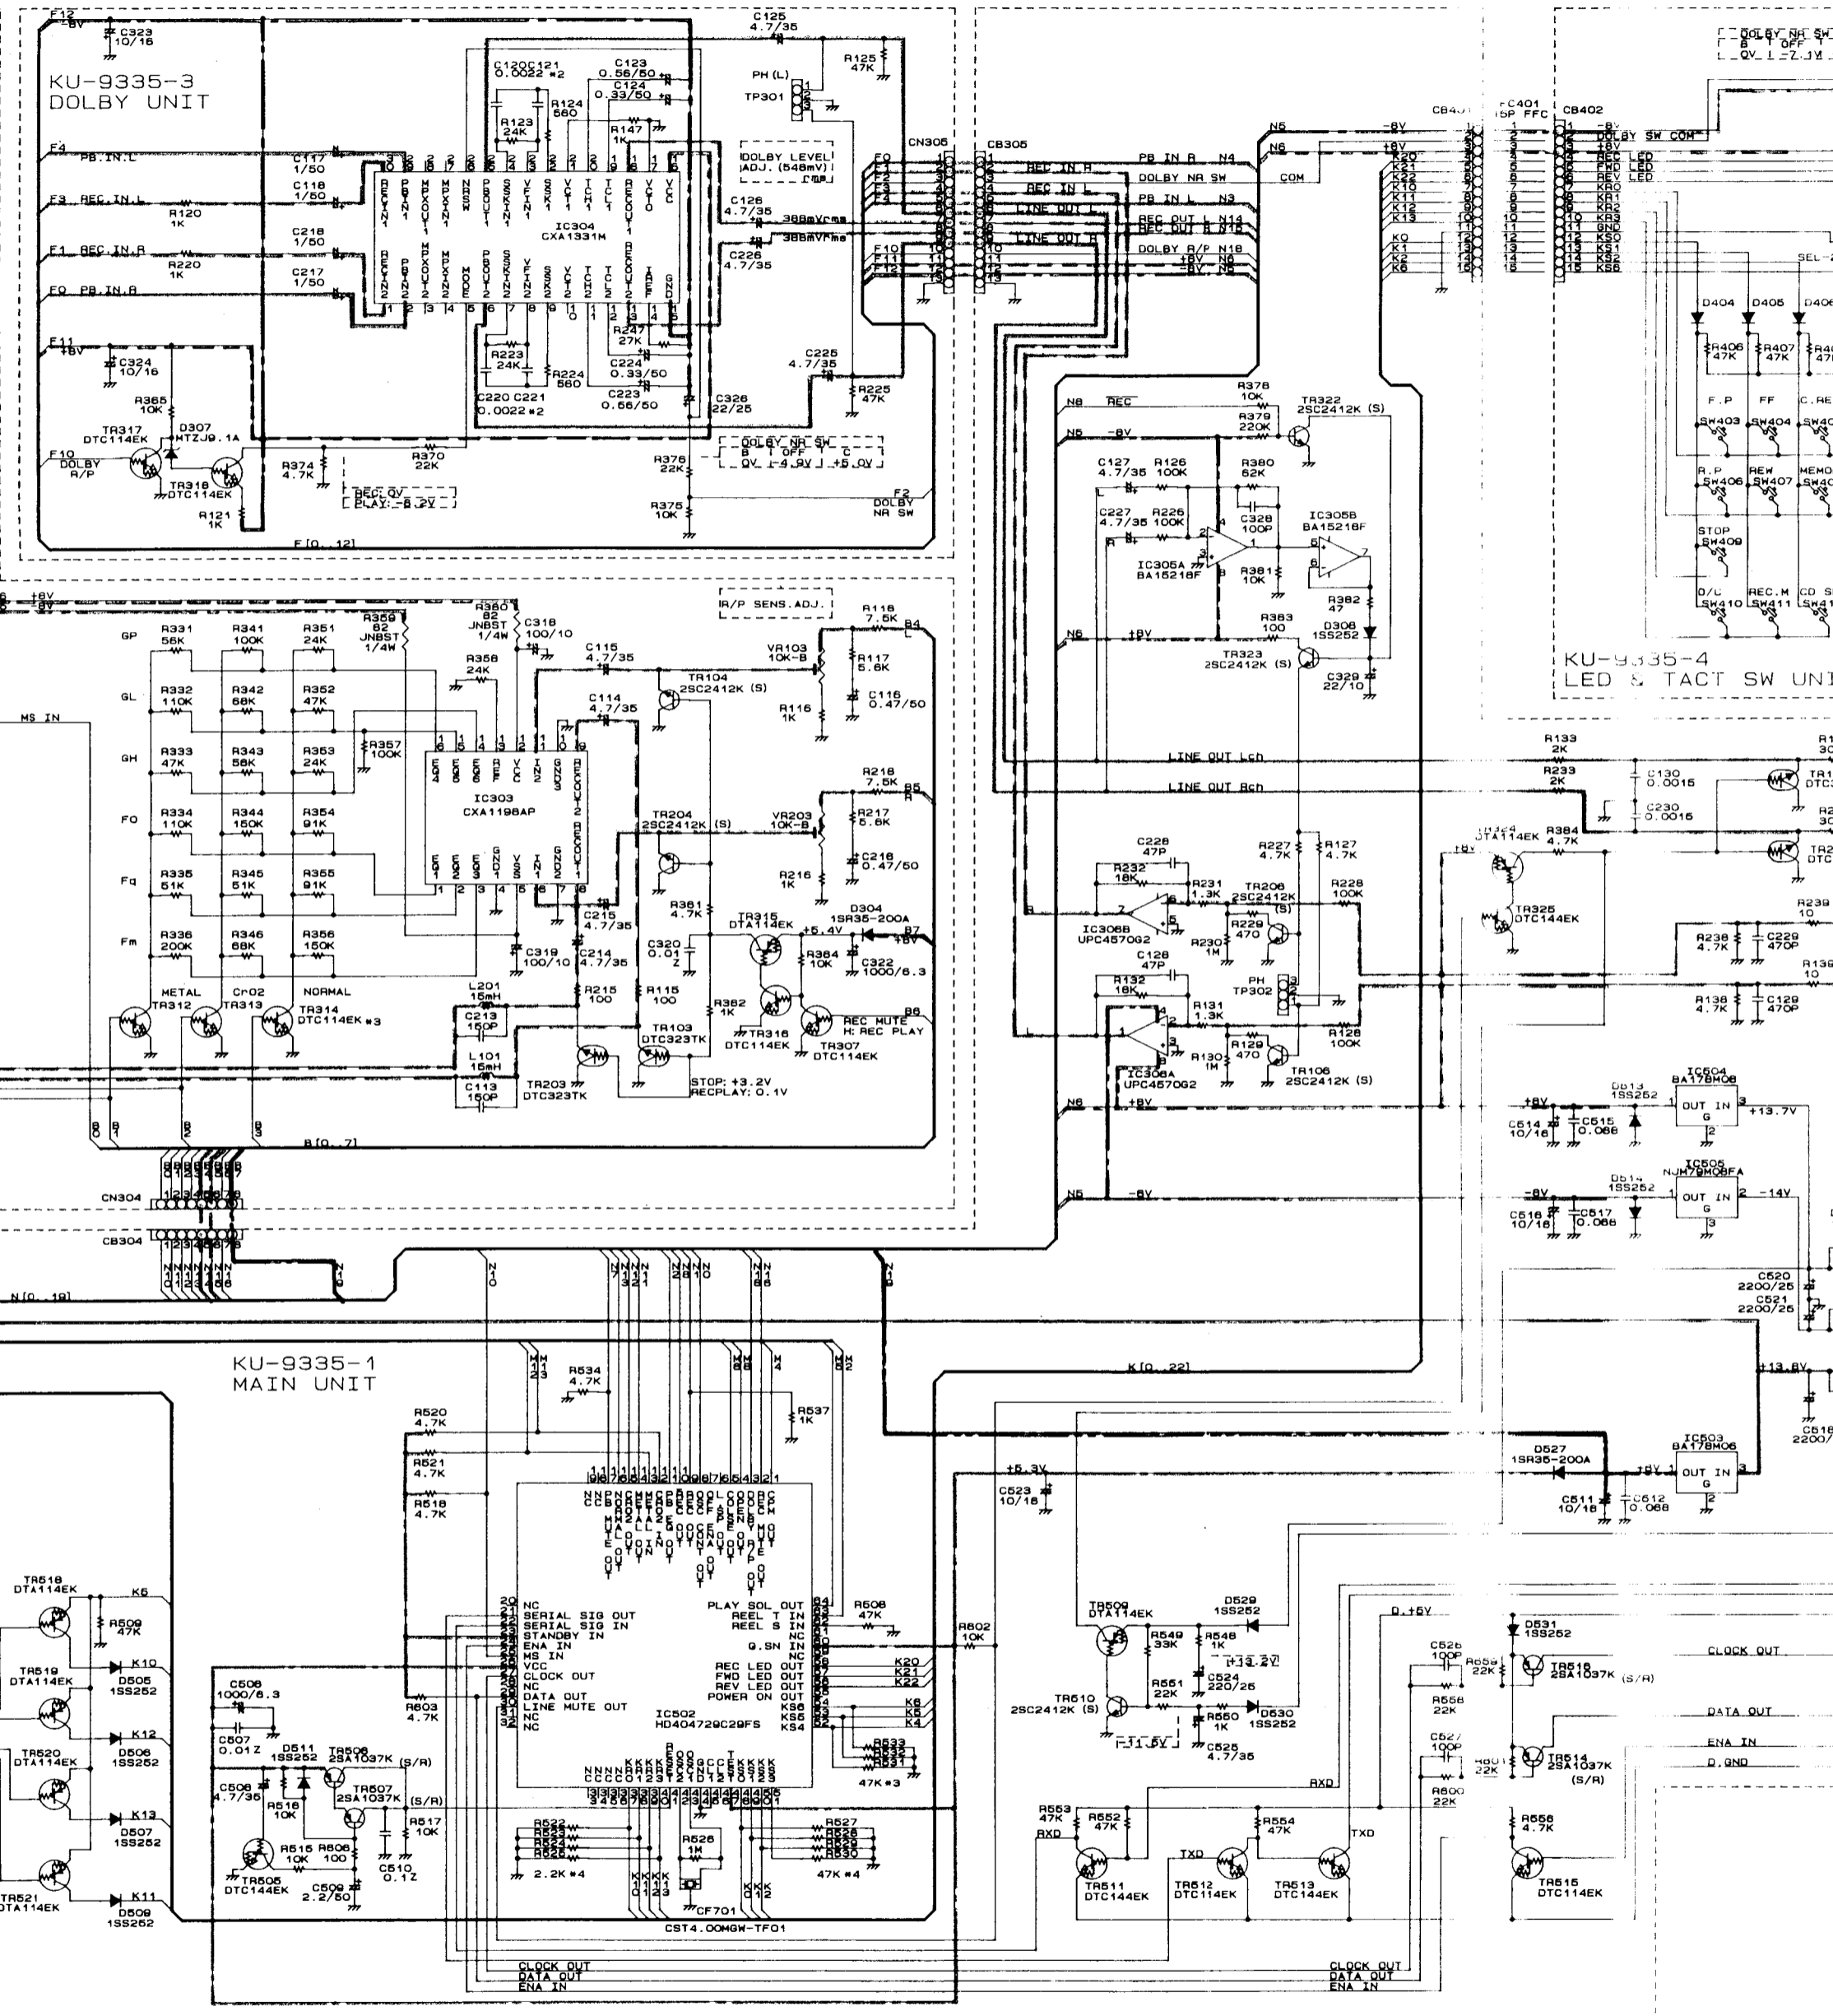

CAUTION:

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 Kohms, the unit is defective.

WARNING:


DO NOT return the unit to the customer until the problem is located and corrected.

NOTES:

ALL RESISTANCE VALUES IN OHMS UNLESS OTHERWISE SPECIFIED.
ALL CAPACITANCE VALUES IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
EACH VOLTAGE AND CURRENT ARE INDICATED ON THE SCHEMATIC.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

marked with this symbol Δ have critical characteristics.
Only replacement parts recommended by the manufacturer.

6 7 8 9 10 11

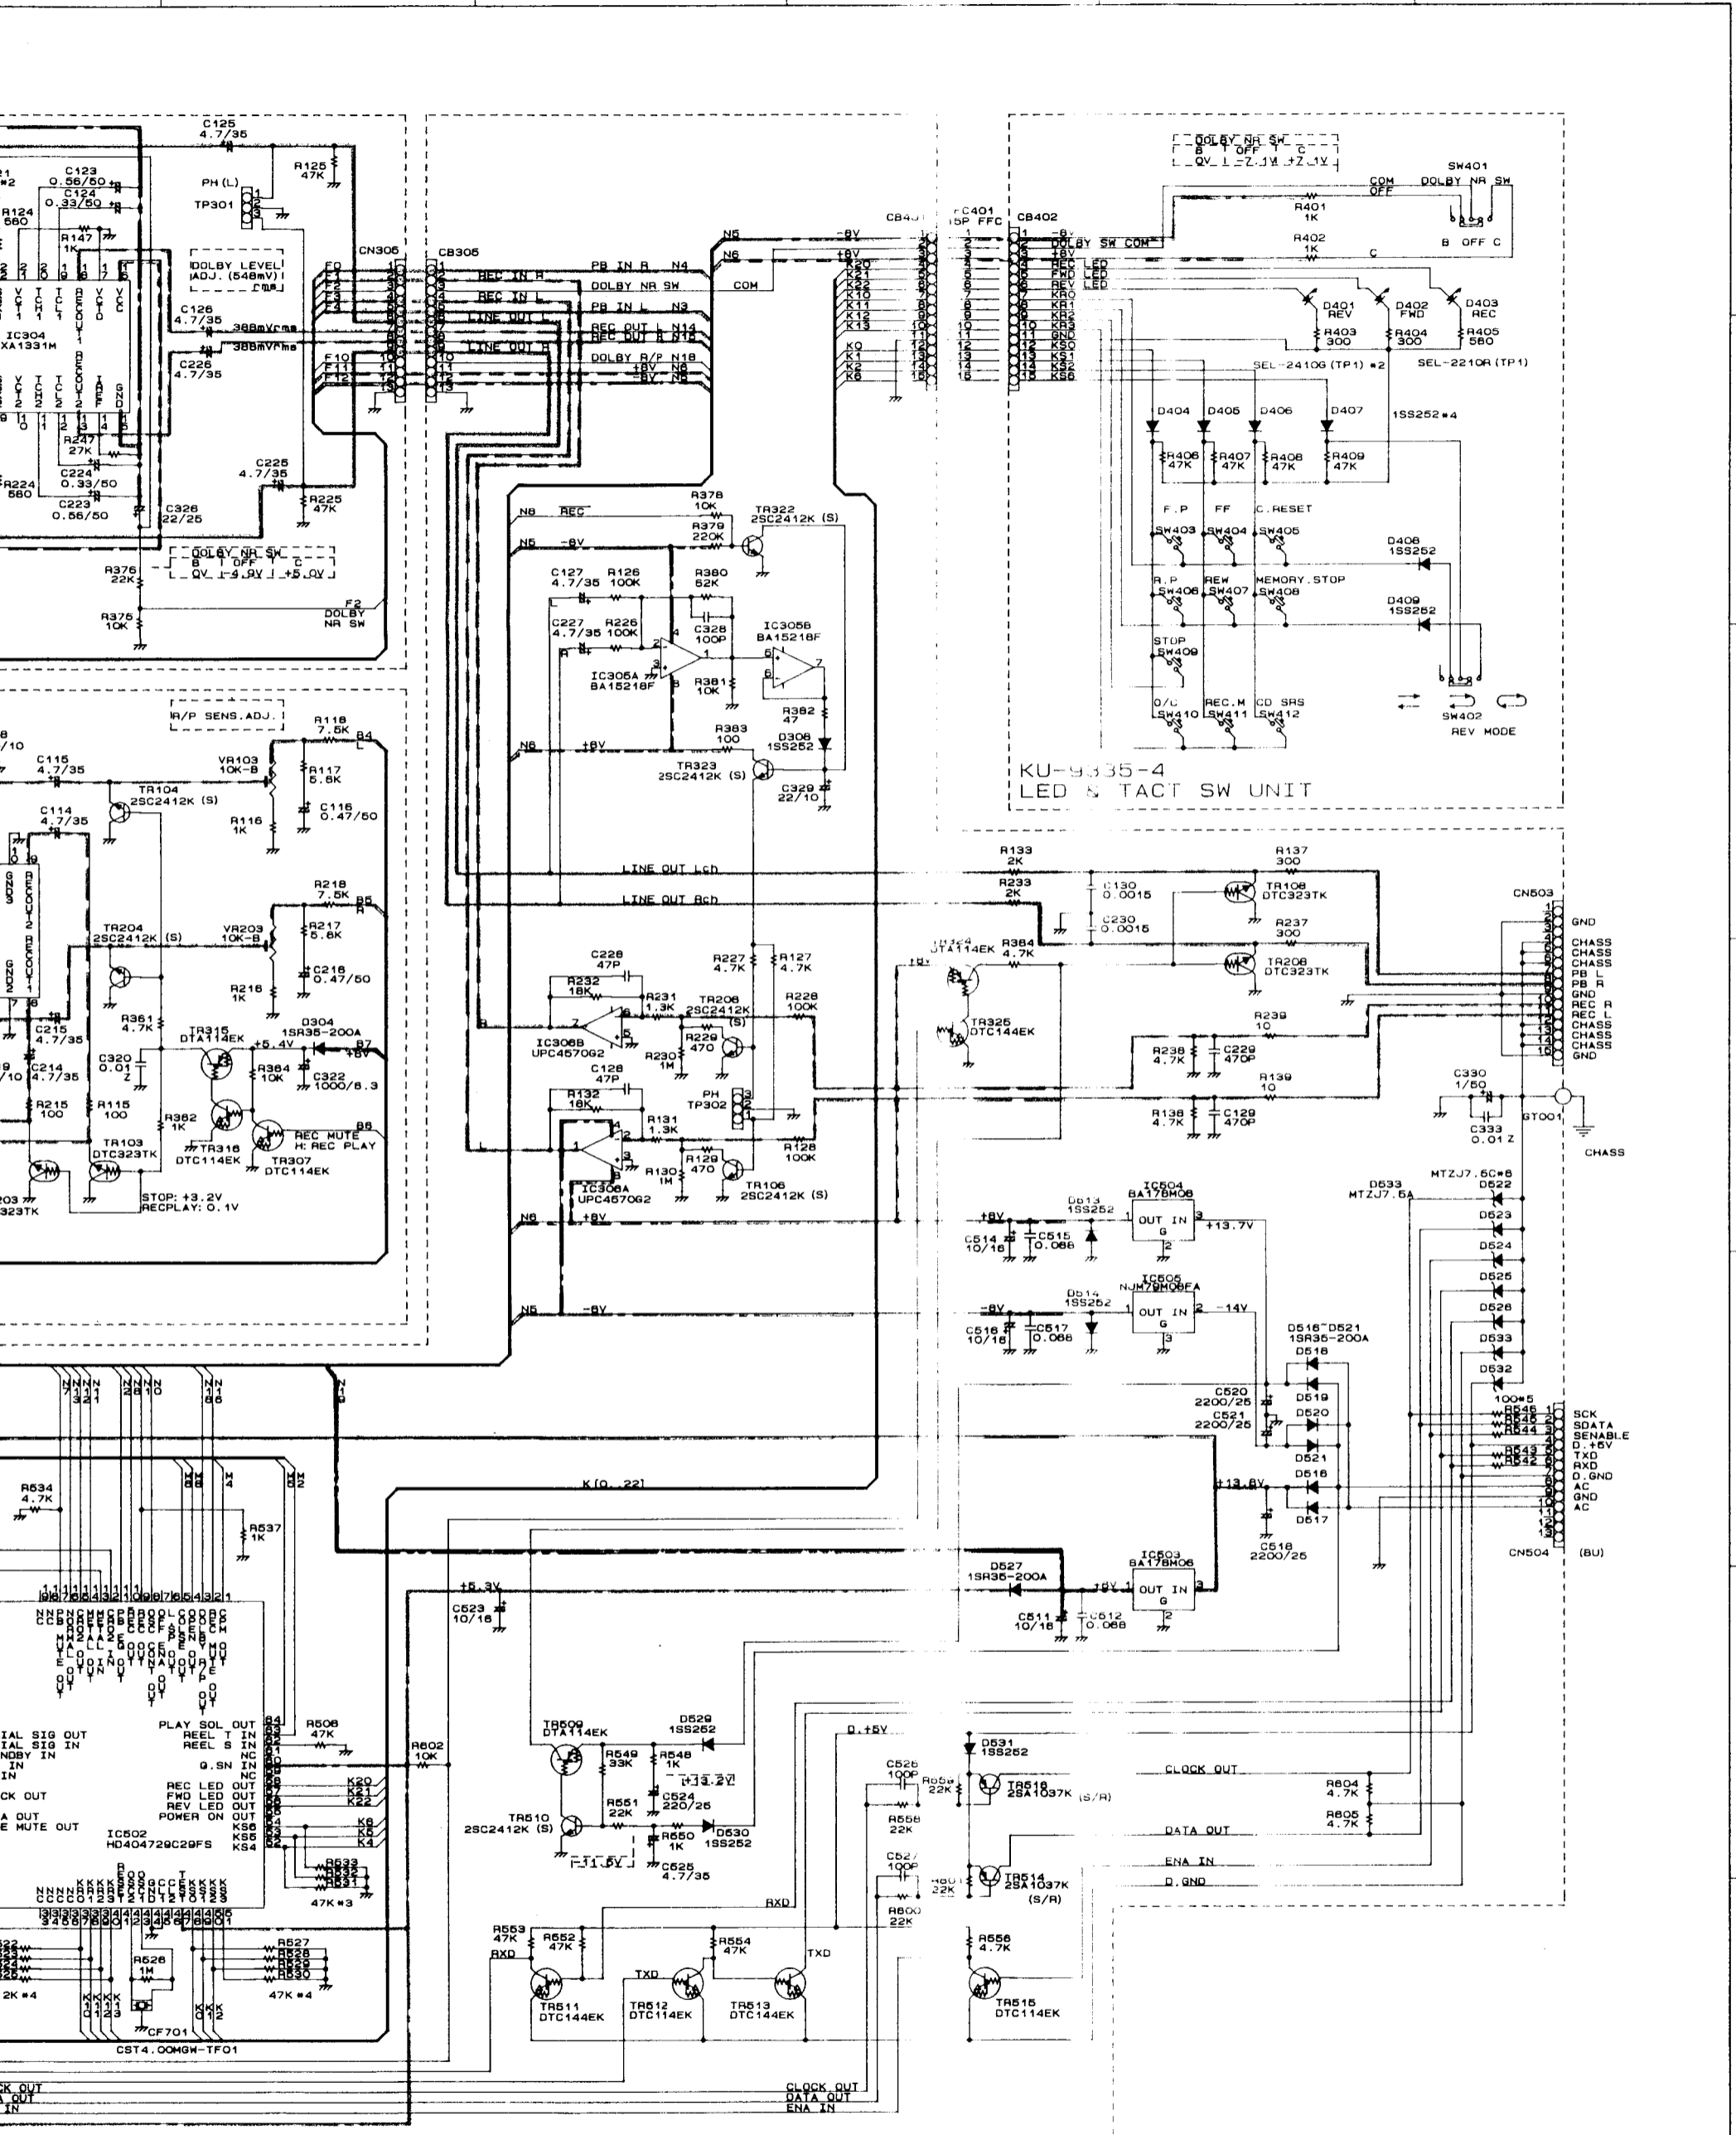

KU-9335-4
LED & TACT SW UNIT

NOTES
 ALL RESISTANCE VALUES IN OHM K=1,000 OHM M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD P=100-PICO MICRO-FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

WARNING:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from either side of the power cord is less than 240 Kohms, the unit is unsafe to use.
 Do not return the unit to the customer until the problem is located and corrected.


A
B
C
D
E
F
G

CASSETTE DECK SECTION

EXPLODED VIEW

PARTS LIST OF UDR-77 EXPLODED VIEW

| Ref. No. | Part No. | Part Name | Remarks | Q'ty |
|---|--------------|-------------------------|--------------|----------------|
| 1 | KU- 9335 | Deck Unit Ass'y | | 1 ^S |
| 1-1 | — | Main Unit | | (1) |
| 1-2 | — | PB R/P Unit | | (1) |
| 1-3 | — | Dolby Unit | | (1) |
| 1-4 | — | LED & Tact SW Unit | | (1) |
| 2 | 212 1078 906 | Slide Switch | | 2 |
| 3 | 254 4256 790 | Chemicon 2200 μ F/25V | C518,520,521 | 3 |
| 4 | 205 0730 056 | 13 P System Socket(Bu) | | 1 |
| 5 | 204 8284 022 | 15 P System Socket | | 1 |
| 6 | 009 9056 007 | 15 P FFC | | 1 |
| 7 | 411 9115 316 | Main Chassis | | 1 |
| 8 | 104 0237 308 | Foot Ass'y | | 4 |
| 9 | 105 9235 126 | Back Panel | | 1 |
| 10 | 449 9038 003 | Mecha Holder(DR) | | 1 |
| 11 | 338 9031 001 | ACLM 574A CASS/L MECH | | 1 |
| 12 | 412 2814 028 | Card Spacer(L=10) | | 2 |
| 13 | 445 0048 016 | Cord Holder(L=50) | | 1 |
| 14 | 412 3470 102 | Spring Plate | | 1 |
| 15 | 412 3685 104 | P.W.B. Bracket | | 1 |
| 16 | 146 9348 302 | Inner Panel | | 1 |
| 17 | 113 9322 108 | 4 G Button | | 1 |
| 18 | 113 9330 006 | 6 G Button | | 1 |
| 19 | 113 1548 003 | Select Knob | | 2 |
| 20 | 144 9236 104 | Front Panel Ass'y | | 1 |
| 21 | 146 9350 109 | Loader Panel(DR) | | 1 |
| 22 | 146 9346 207 | Side Plate(R) | | 1 |
| 23 | 146 9347 206 | Side Plate(L) | | 1 |
| 24 | 102 9043 018 | Top Cover | | 1 |
| ★ 25 | 513 9390 013 | Rating Sheet | | 1 |
| SCREWS | | | | |
| 51 | 473 7002 018 | Tapping Screw(S) 3×8 | | 12 |
| 52 | 473 7015 018 | Tapping Screw(S) 3×8 | Black | 17 |
| 53 | 473 7015 005 | Tapping Screw(S) 3×6 | Black | 3 |
| 54 | 473 7500 044 | Tapping Screw(P) 3×8 | Black | 2 |
| 55 | 473 7505 007 | Tapping Screw(P) 2.6×8 | | 7 |
| 56 | 473 7009 008 | FH.Tapping Screw(S) 3×6 | | 2 |
| PACKING & ACCESSORIES (Not included EXPLODED VIEW) | | | | |
| 71 | 505 0241 005 | Cabinet Cover | | 1 |
| 72 | 503 9293 207 | Cushion | | 1 |

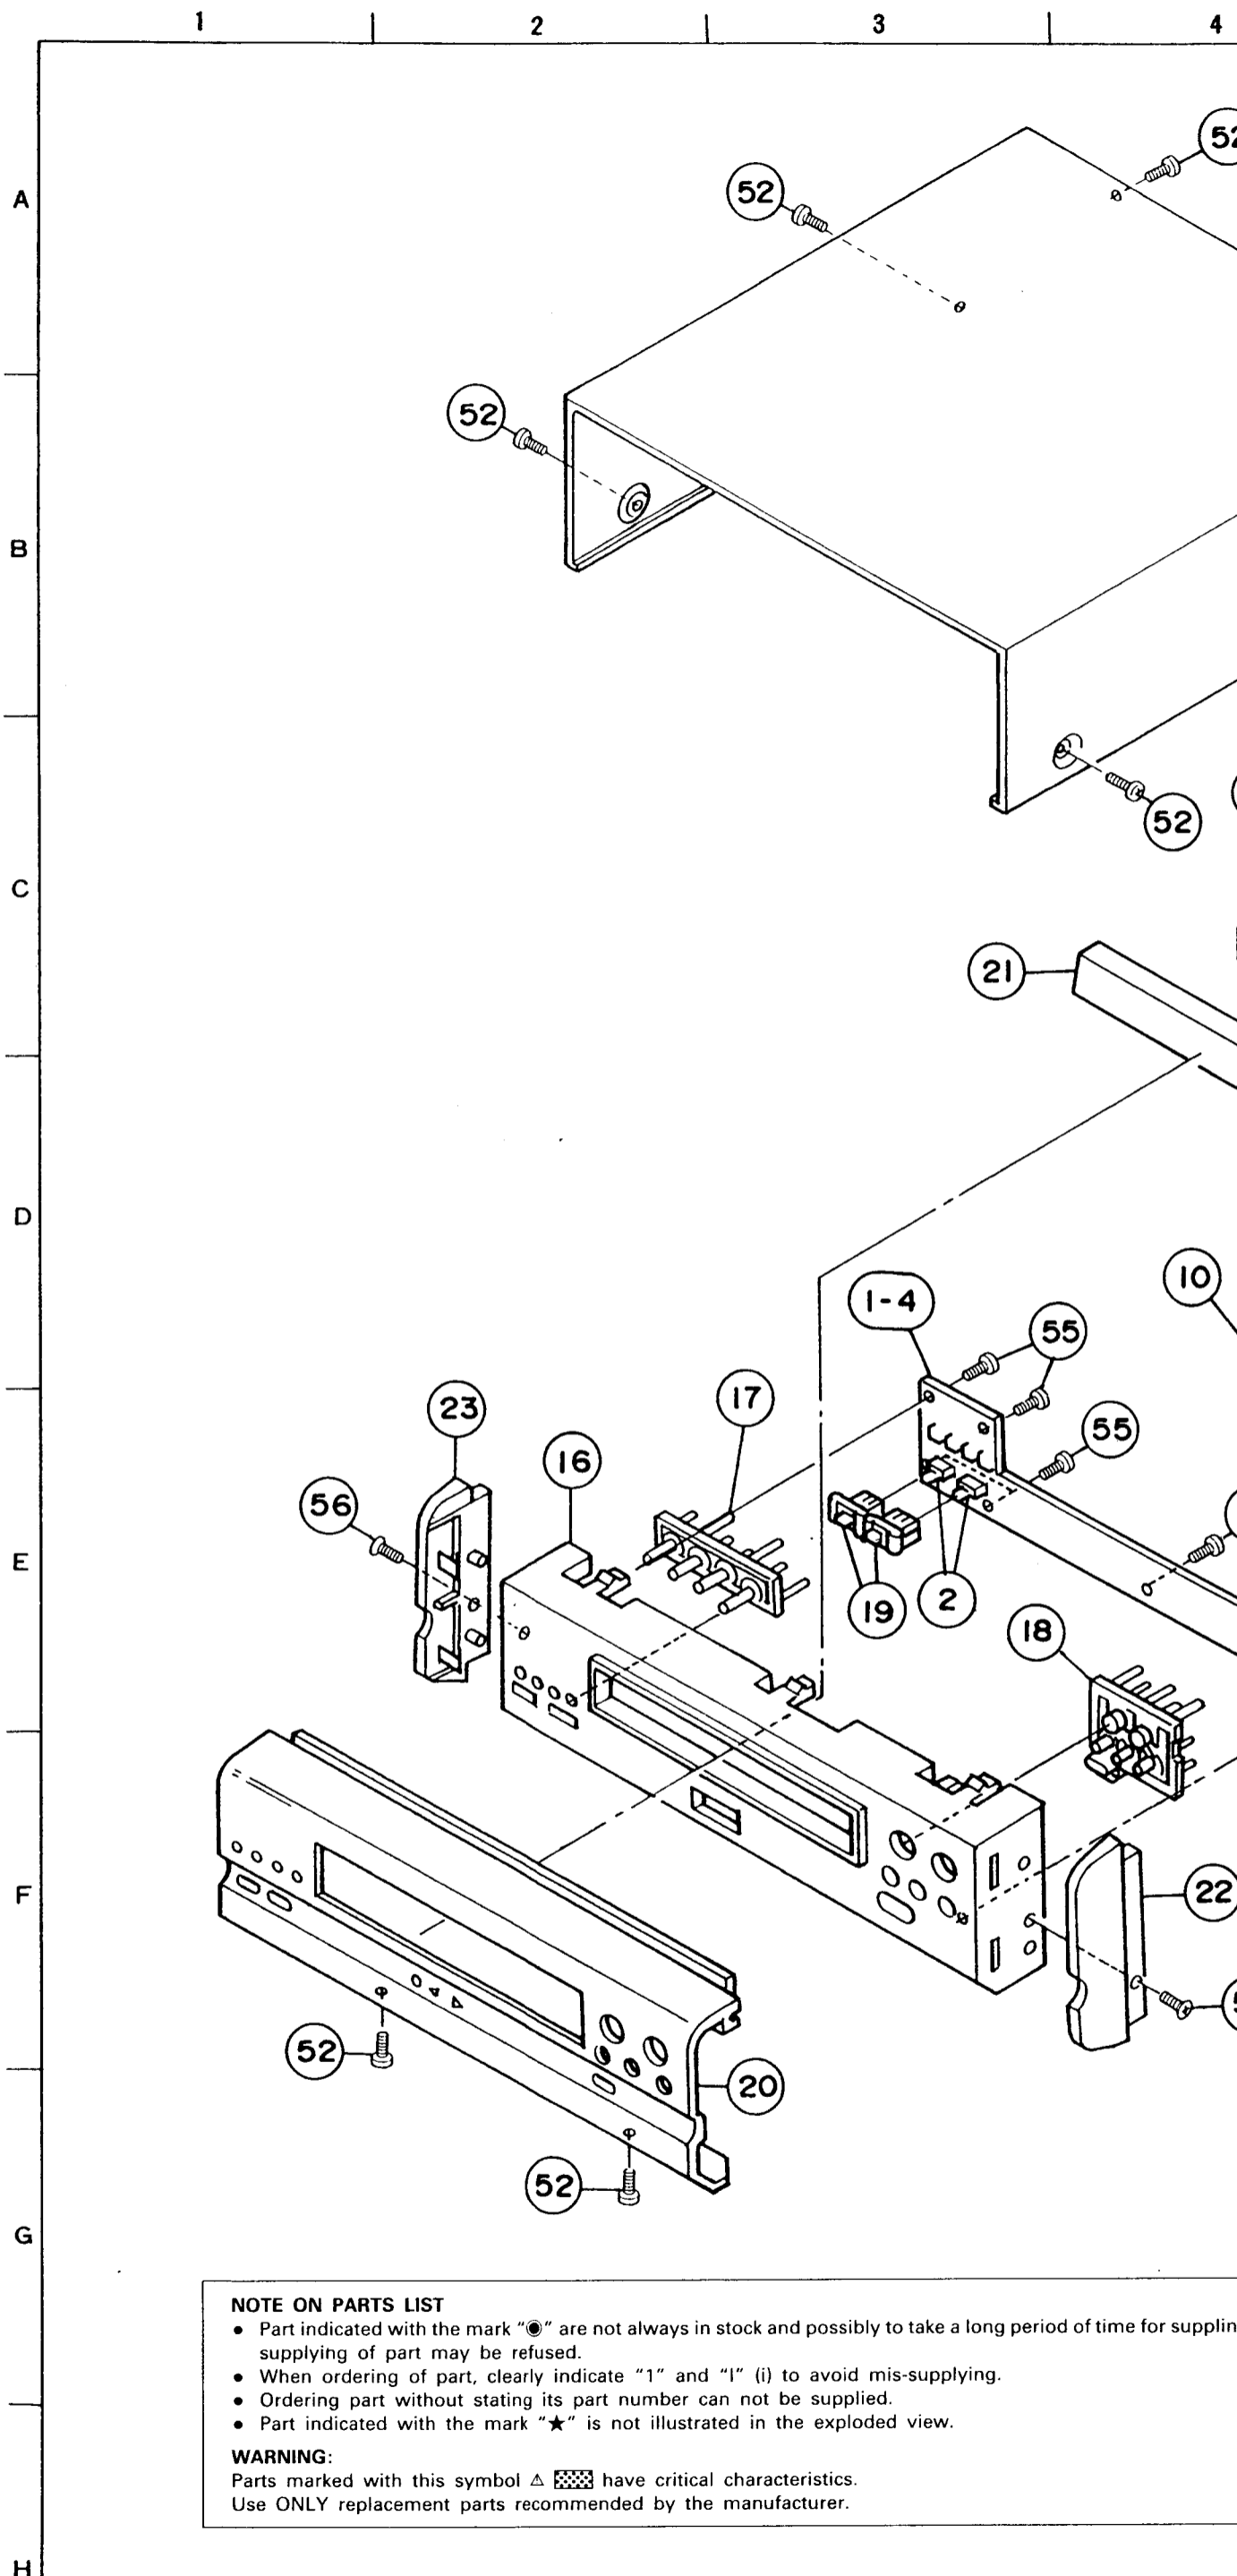


NOTE ON PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying. supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

WARNING:

Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

EXPLODED VIEW

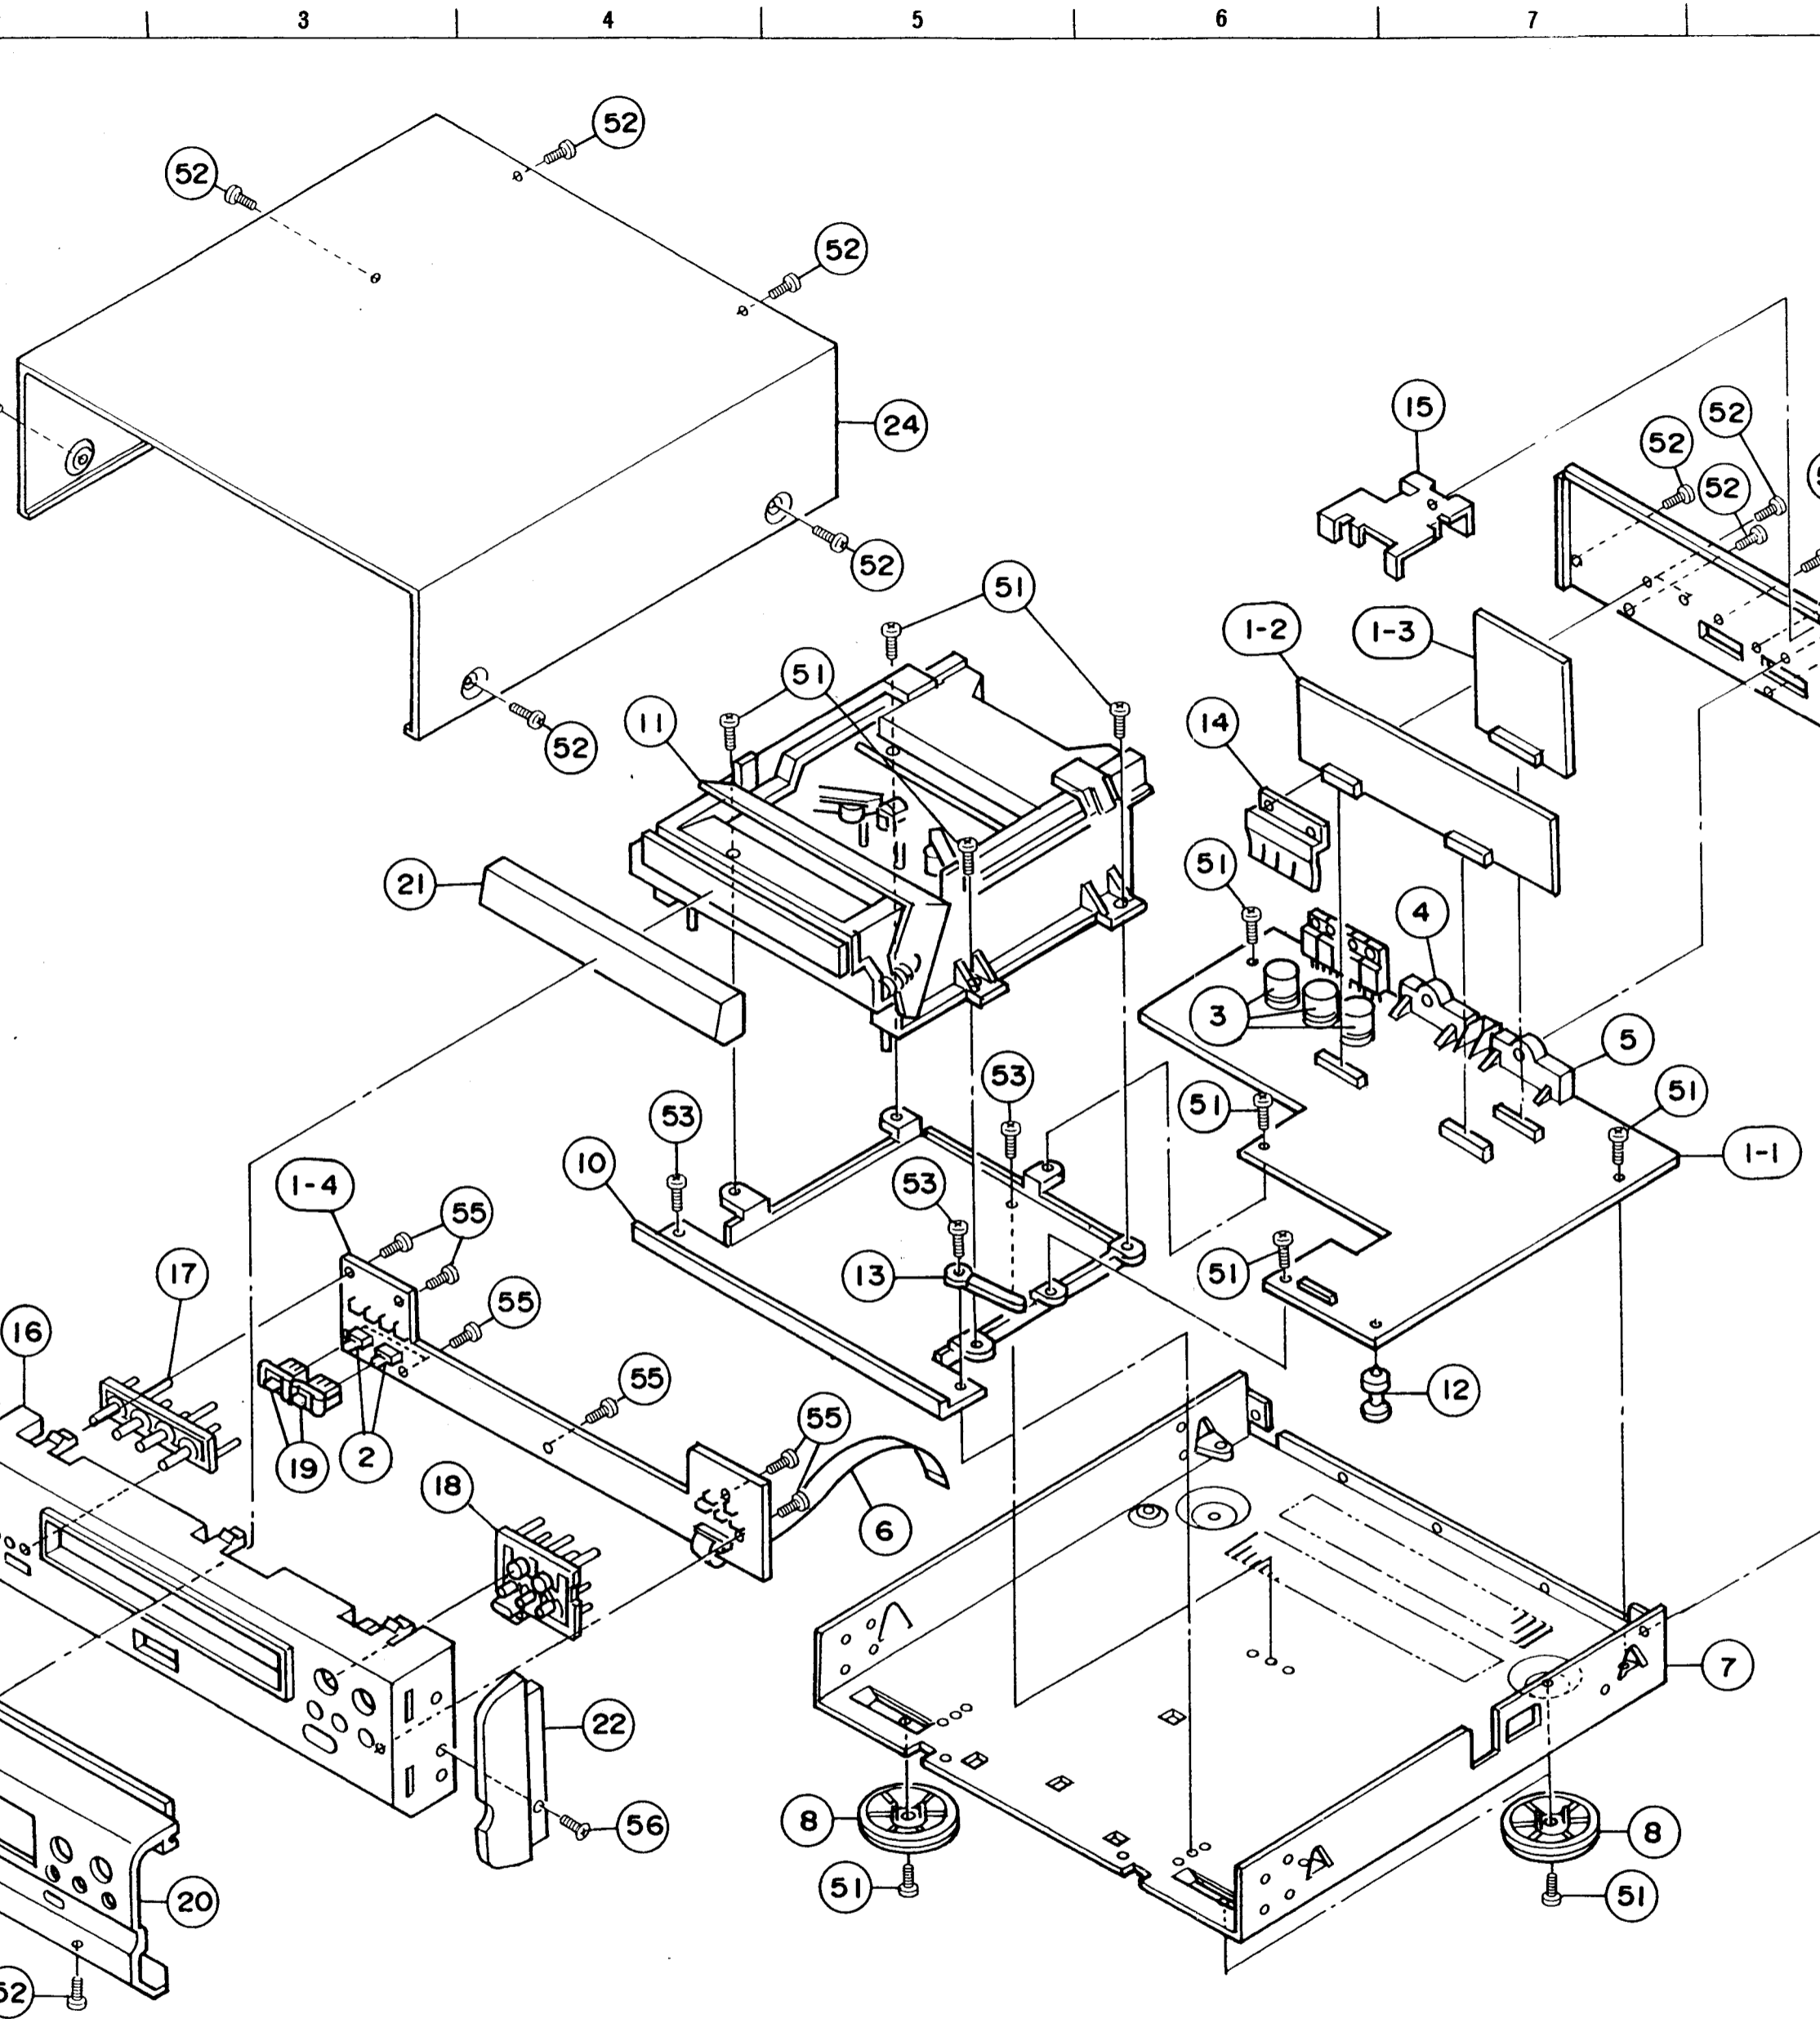

* are not always in stock and possibly to take a long period of time for supplying, or in some case used.
 indicate "1" and "1" (i) to avoid mis-supplying.
 its part number can not be supplied.
 ★ is not illustrated in the exploded view.
 [hatched box] have critical characteristics.
 recommended by the manufacturer.

VIEW


5

6

7

8


9

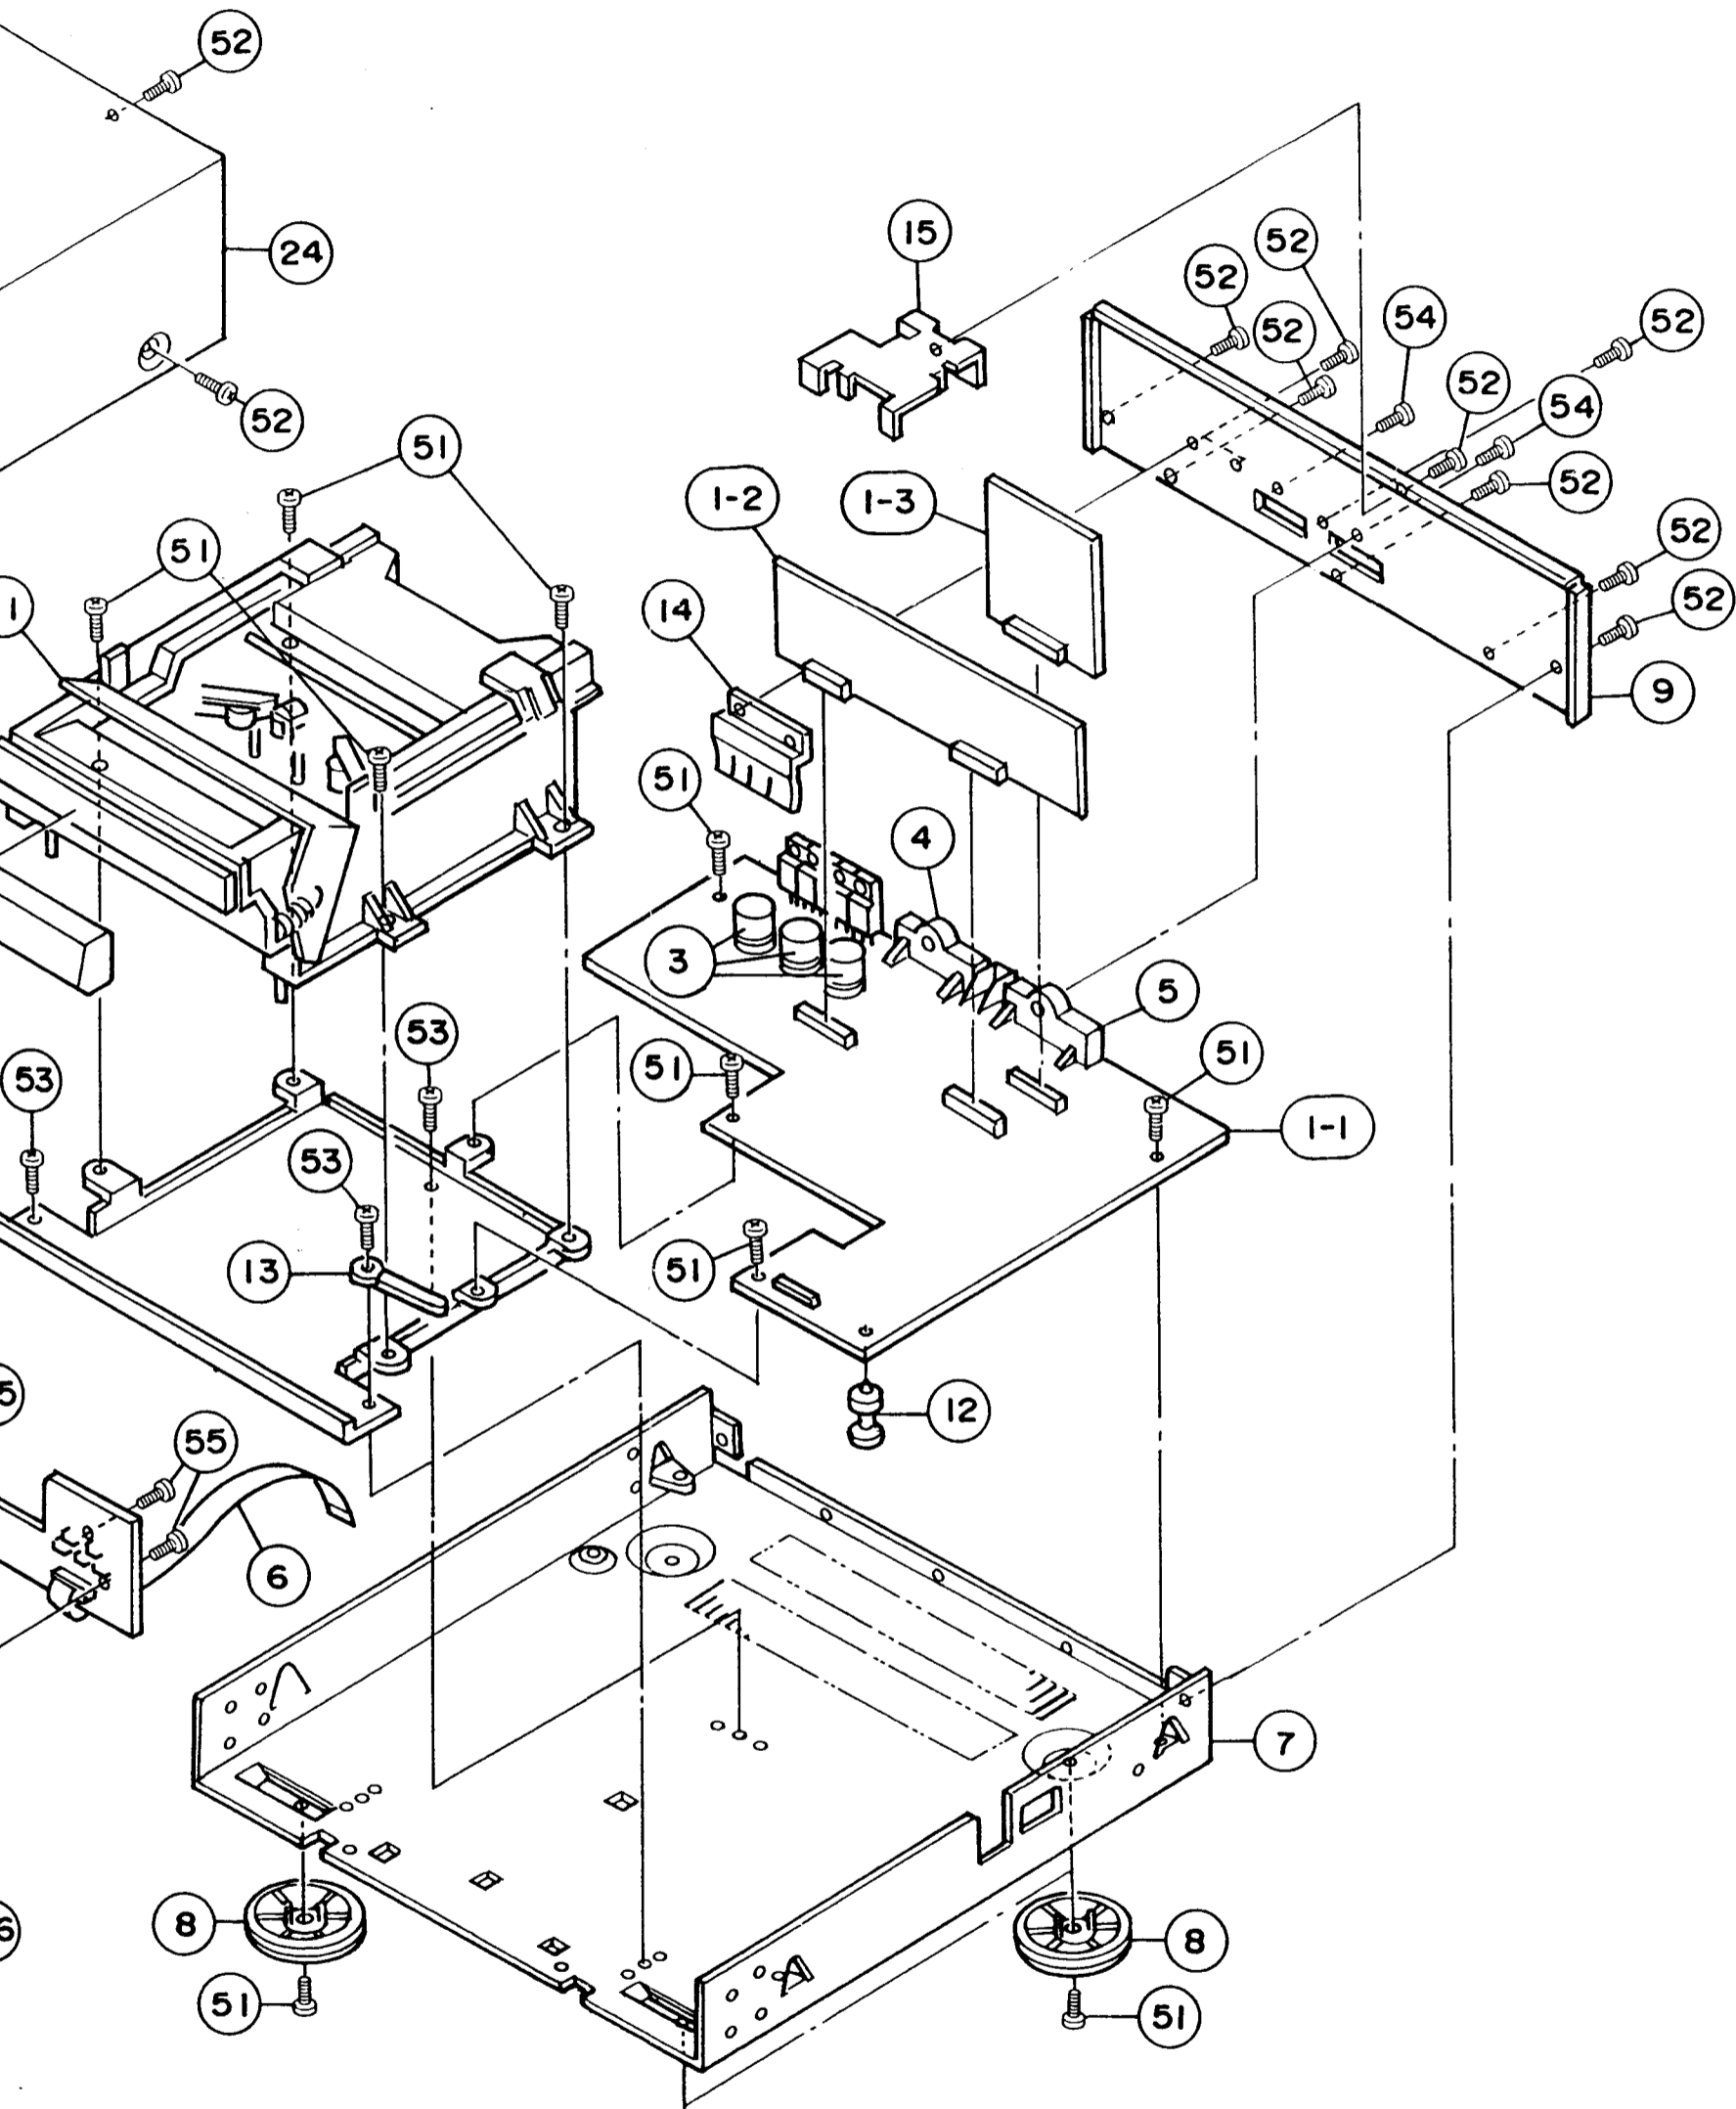

or in some case

CASSETTE DECK SECTION

EXPLODED VIEW

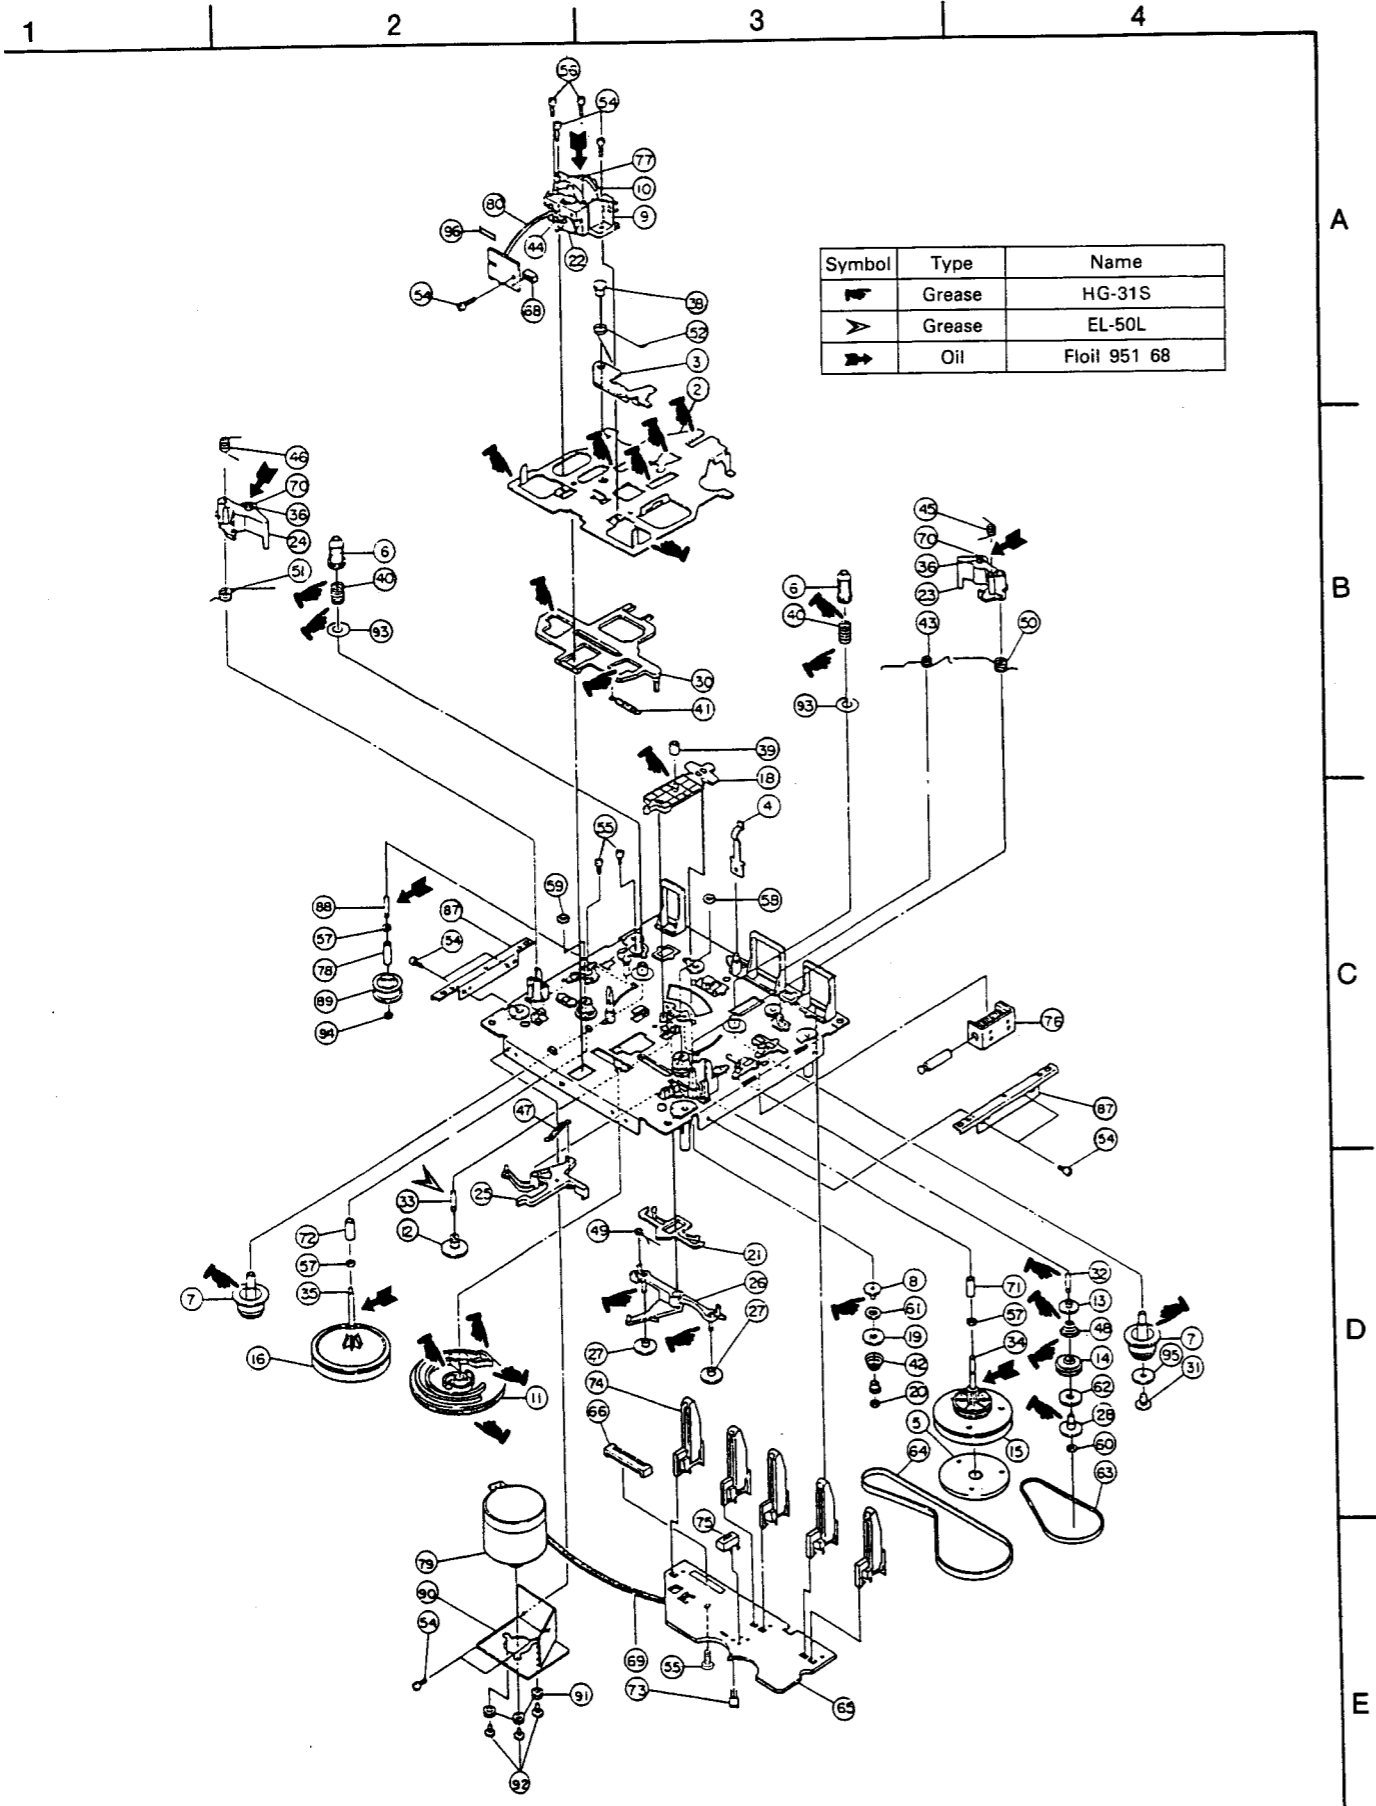


PARTS LIST OF CASSETTE MECHANISM (REC/PB)

| No. | Part Name | Part Number | Description | Q'ty |
|-----|-------------------|---------------|-------------|------|
| 1 | CHASSIS MAIN | 11112-00500BA | | 1 |
| 2 | BASE HEAD | 11105-00310BA | | 1 |
| 3 | BASE SUB HEAD | 11105-00420BA | | 1 |
| 4 | PLATE SPRING | 51299-12316XA | | 1 |
| 5 | PLATE FLYWHEEL F | 11143-00800BA | | 1 |
| 6 | CHIP REEL | 11110-00120AA | | 2 |
| 7 | BASE REEL | 11105-00330AA | | 2 |
| 8 | BUSH P | 11107-00220AA | | 1 |
| 9 | BRACKET HEAD | 11106-00650AA | | 1 |
| 10 | GEAR HEAD | 11128-00740AA | | 1 |
| 11 | GEAR CAM | 11128-00760AA | | 1 |
| 12 | GEAR IDLER | 11128-00780AA | | 1 |
| 13 | BUSH C | 11107-00230AA | | 1 |
| 14 | PULLEY C | 11145-00560AA | | 1 |
| 15 | PULLEY F/W F | 11145-00570AA | | 1 |
| 16 | PULLEY F/W R | 11145-00580AA | | 1 |
| 17 | PULLEY MOTOR AD | 11145-00720EB | | 1 |
| 18 | ARM P | 11102-01020AA | | 1 |
| 19 | GEAR P | 11128-00730AA | | 1 |
| 20 | CAP P | 11117-00090AA | | 1 |
| 21 | LEVER BRAKE | 11102-01030AA | | 1 |
| 22 | GEAR DIR | 11128-00750AA | | 1 |
| 23 | ARM PINCH F | 11102-01040AA | | 1 |
| 24 | ARM PINCH R | 11102-01050AA | | 1 |
| 25 | ARM CAM LOCK | 11102-01060AA | | 1 |
| 26 | ARM RF | 11102-01070AA | | 1 |
| 27 | GEAR RF | 11128-00770AA | | 2 |
| 28 | CAP C | 11117-00100AA | | 1 |
| 29 | SPRING B/T R | 51203-03098XB | | 1 |
| 30 | LEVER AC | 11134-01870AA | | 1 |
| 31 | CAP MAGNET | 11117-00120AA | | 1 |
| 32 | SHAFT RF | 11150-02260EA | | 1 |
| 33 | SHAFT IDLER | 11150-02270EA | | 1 |
| 34 | SHAFT CAPSTAN F | 11150-02291EA | | 1 |
| 35 | SHAFT CAPSTAN R | 11150-02301EA | | 1 |
| 36 | SHAFT PINCH | 11150-00130EA | | 1 |
| 37 | PIN AZIMUTH | 52017-00503XA | | 1 |
| 38 | SHAFT BASE SUB | 11150-02810EA | | 1 |
| 39 | ROLLER P | 11147-01780EA | | 1 |
| 40 | SPRING B/T F | 51203-03097XA | | 2 |
| 41 | SPRING LEVER AC | 51211-01026XA | | 1 |
| 42 | SPRING P | 51203-05106XB | | 1 |
| 43 | SPRING BASE HEAD | 51263-08046XA | | 1 |
| 44 | SPRING DIR | 51267-03036XA | | 1 |
| 45 | SPRING PINCH F | 51263-07056XA | | 1 |
| 46 | SPRING PINCH R | 51263-08056B | | 1 |
| 47 | SPRING CAM LOCK | 51211-03036XB | | 1 |
| 48 | SPRING C | 51203-06146XA | | 1 |
| 49 | SPRING ARM RF | 51264-03036XA | | 2 |
| 50 | SPRING P/RETURN F | 51263-03046XA | | 2 |

| No. | Part Name | Part Number | Description | Q'ty |
|-----|-------------------|---------------|--------------|------|
| 51 | SPRING P/RETURN R | 51263-03046XB | | 1 |
| 52 | SPRING SUB | 51272-10073BA | | 1 |
| 53 | SCREW TAPPING | 50032-16082EA | M1.6x8 | 2 |
| 54 | SCREW TAPTITE | 50262-20049EA | M2.0x4 | 4 |
| 55 | SCREW EARTH | 50432-20170EA | | 1 |
| 56 | SCREW AZIMUTH | 50432-20052BA | | 2 |
| 57 | WASHER PLAIN | 51000-02302BA | 2.3x3.5x0.25 | 3 |
| 58 | WASHER PLAIN | 51010-01850AA | 1.6x4x0.5 | 1 |
| 59 | WASHER PLAIN | 51010-01605AA | 1.6x3.5x0.5 | 1 |
| 60 | WASHER PLAIN | 51010-01202AA | 1.2x3.2x0.25 | 1 |
| 61 | FELT P | 11123-00312FA | | 1 |
| 62 | FELT C | 11123-00320FA | | 1 |
| 63 | BELT SUB | 51428-033AAPA | 33.1x1.1x1.1 | 1 |
| 64 | BELT M LA | 51418-09905BA | 99.0x3.2x0.5 | 1 |
| 65 | PCB CONTROL 2103 | 11142-00270FA | | 1 |
| 66 | CONNECTOR R/P | 70219-30012LA | 13P | 1 |
| 67 | SPRING EARTH | 51201-02056XA | | 2 |
| 68 | CONNECTOR HEAD | 70219-30004EA | 5P | 1 |
| 69 | WIRE MOTOR | 70620-05002BM | 2P-180 | 1 |
| 70 | ROLLER PINCH | 11147-00160FA | | 2 |
| 71 | METAL FG F | 51601-02206AA | CAPSTAN FWD | 1 |
| 72 | METAL FG R | 51601-02020AA | CAPSTAN RVS | 1 |
| 73 | HALL IC | 69801-99001ZA | | 1 |
| 74 | SWITCH DETECT | 70022-02055DA | | 5 |
| 75 | SWITCH MODE | 70018-04004AA | | 1 |
| 76 | SOLENOID | 79840-00009AA | | 1 |
| 77 | HEAD R/P | 71488-94044ZA | 14 kHz | 1 |
| 78 | METAL CYLN SUB | 51601-02011AB | PULLEY SUB | 1 |
| 79 | MOTOR | 71650-12006AA | AD2F | 1 |
| 80 | WIRE HEAD(BRN) | 70620-01501CA | AWG36 | 1 |
| 81 | WIRE HEAD(BLU) | 70620-01501DA | AWG36 | 1 |
| 82 | WIRE HEAD(GRN) | 70620-01501GA | AWG36 | 1 |
| 83 | WIRE HEAD(ORA) | 70620-01501QA | AWG36 | 1 |
| 84 | WIRE HEAD(RED) | 70620-01501RA | AWG36 | 1 |
| 85 | WIRE HEAD(WHT) | 70620-01501WA | AWG36 | 1 |
| 86 | WIRE HEAD(YEL) | 70620-01501YA | AWG36 | 1 |
| 87 | BRKT SIDE | 11106-00970AA | | 2 |
| 88 | SHAFT SUB | 11150-02970EA | | 1 |
| 89 | PULLEY SUB | 11145-01030AC | | 1 |
| 90 | BRKT MOTOR TOP | 11106-00980AA | | 1 |
| 91 | CUSHION MOTOR | 11115-00020FA | | 3 |
| 92 | SCREW M | 50062-26041EA | MOTOR | 3 |
| 93 | WASHER B/T | 51000-06025XA | 6.0x11x0.25 | 2 |
| 94 | WASHER PLAIN | 51000-01602BA | 1.6x3.2x0.25 | 1 |
| 95 | PLATE MAGNET | 11143-00970AA | | 1 |
| 96 | WEDGE | 59893-06200AB | | 1 |
| 97 | | | | |
| 98 | | | | |
| 99 | | | | |

CASSETTE DECK SECTION

CASSETTE MECHANISM: ACLM-574A

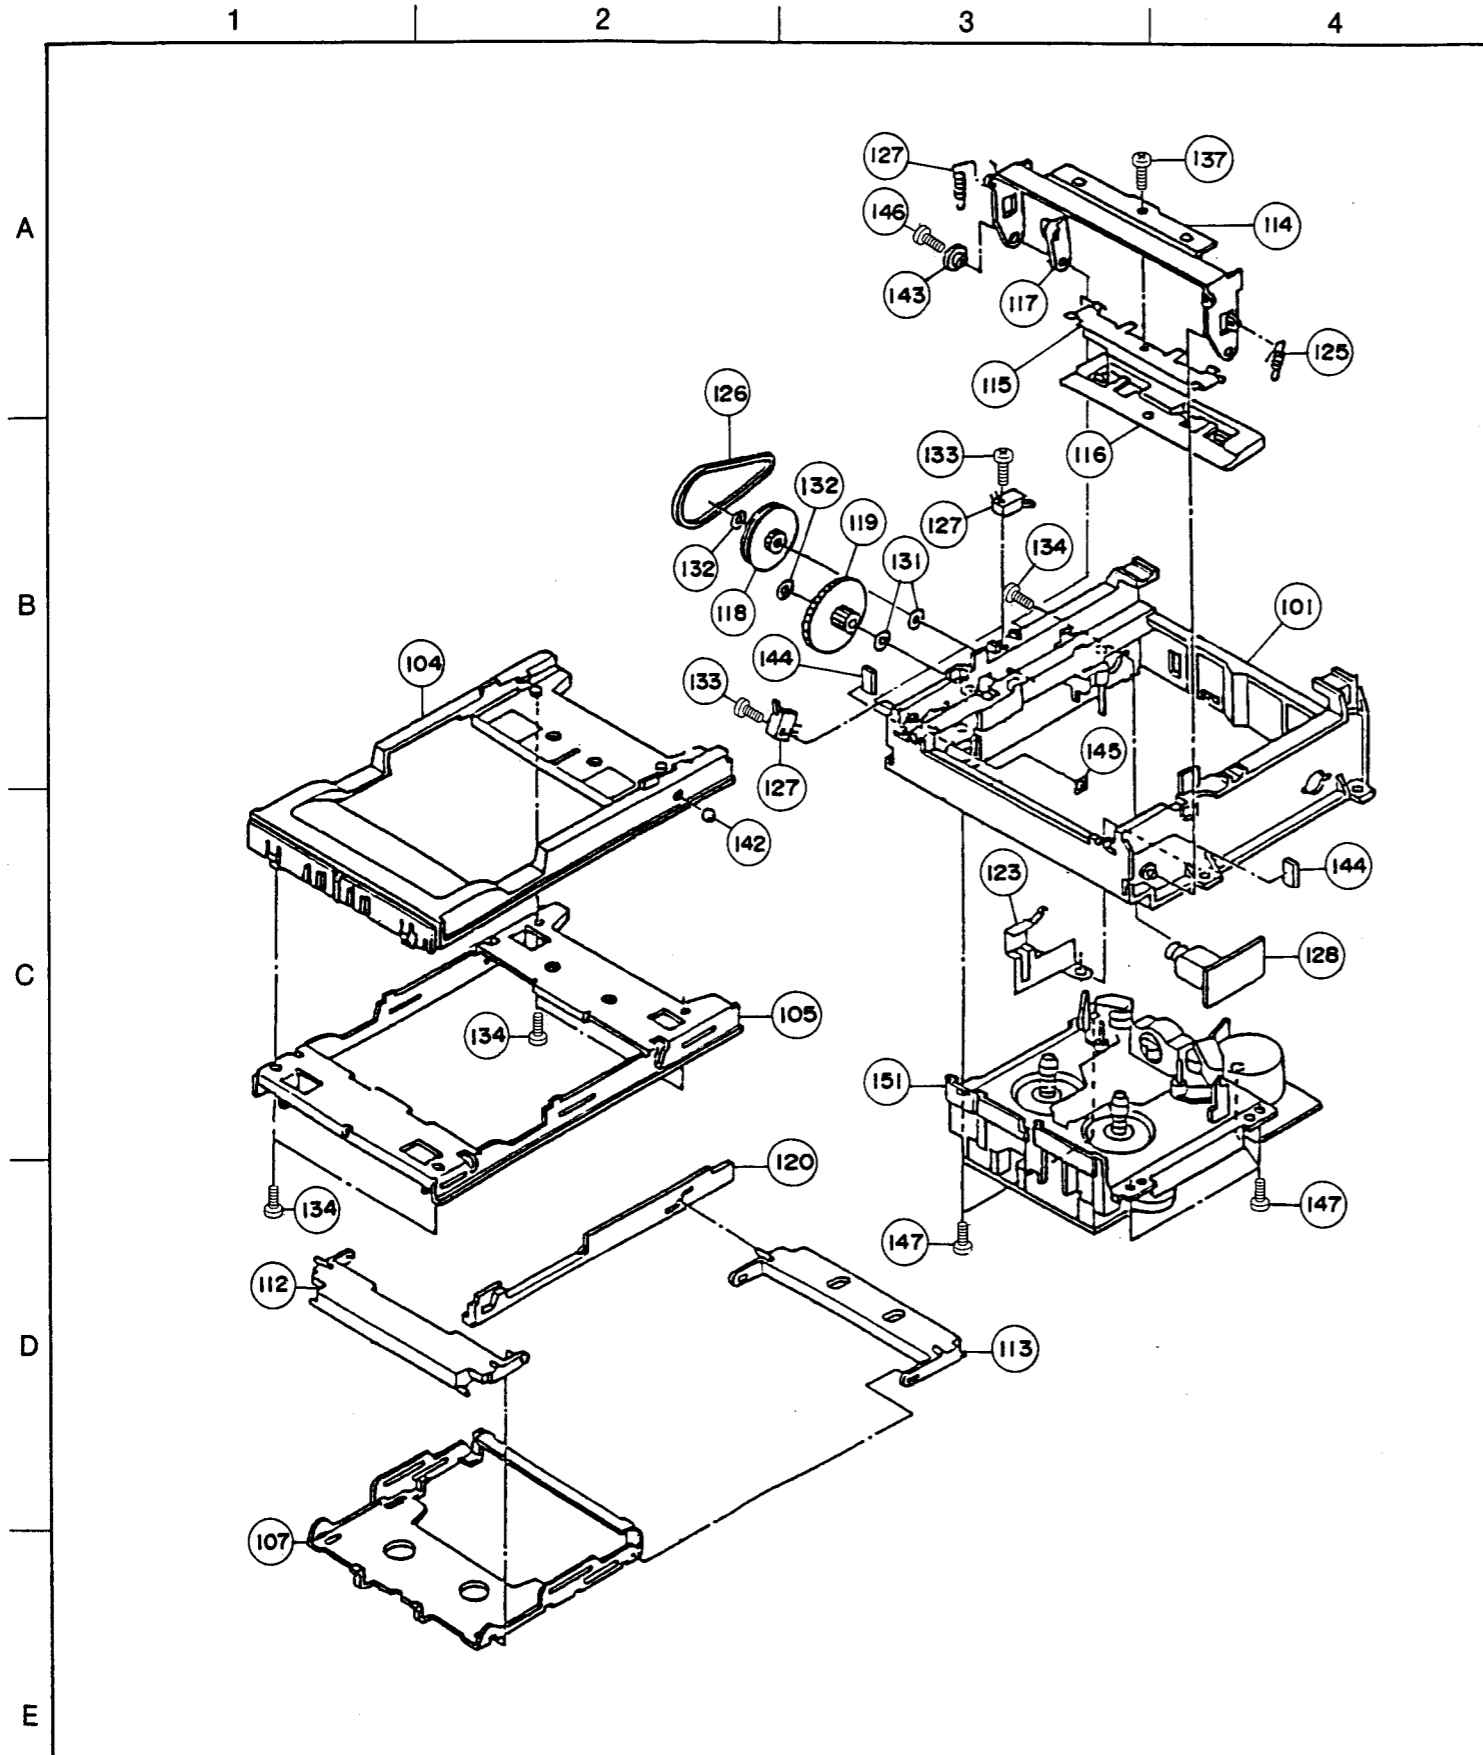

CASSETTE MECHANISM ACLM-574A PARTS LIST

| No. | Parts No. | Description | Q'ty | |
|-----|-----------|-----------------------|------|--------------------|
| 101 | A1A001A | Flame Assy | 1 | |
| 104 | A1G002A | Tray | 1 | |
| 105 | A1P001A | Chassis | 1 | |
| 107 | A1A002B | Holder Assy | 1 | |
| 112 | A1G004A | Arm A | 1 | |
| 113 | A1G029A | Arm C | 1 | |
| 114 | A1P003A | Arm | 1 | |
| 115 | A1P004A | Retainer | 1 | |
| 116 | A1G006A | Plate | 1 | |
| 117 | A1G007A | Arm | 1 | |
| 118 | A1G008A | Pulley | 1 | |
| 119 | A1G009A | Gear | 1 | |
| 120 | A1G010A | Gear Luck | 1 | |
| 123 | A1P005A | Plate | 1 | |
| 124 | A1S001A | Spring A | 1 | |
| 125 | A1S002B | Spring B | 1 | |
| 126 | A1G011A | Belt | 1 | |
| 127 | S01W181 | Switch MSS-8B | 2 | |
| 128 | A1A574A | Motor PCB Assy | 1 | W/6P Connector Pin |
| 131 | P21W405 | PSW 2.1x4x0.5 | 2 | |
| 132 | P21C405 | PSW 2.1x4x0.5C | 2 | |
| 133 | N20B008 | B Tite Screw M2x8BK | 2 | |
| 134 | N26B005 | B Tite Screw M2.6x5BK | 4 | |
| 135 | M20N004 | Screw M2x4 | 1 | |
| 137 | S14N002 | Screw M1.4x2BK | 1 | |
| 142 | A1H006A | Boul φ5 | 1 | |
| 143 | A1H002A | Bush | 1 | |
| 144 | A1G015A | Buffer | 2 | |
| 145 | A1P007A | Nut | 1 | |
| 146 | S17N010 | Screw M1.7x10BK | 1 | |
| 147 | M30P006 | P Tite Screw 3x6BK | 5 | |
| 148 | A1G026A | Connector 5P-3P 4P PH | 1 | For Deck Head |
| 149 | A1G027A | Connector 13P-13P PH | 1 | For Deck |
| 150 | A1G028A | Connector 6P-6P PH | 1 | For Loader |
| 151 | ADR2174TB | Cassette Mechanism | 1 | |