

SERVICE MANUAL

US Model
Canadian Model



**VIDEO
WALKMAN**

SPECIFICATIONS

System

Video recording system	Rotary two-head helical scanning FM system
Audio recording system	Rotary head, FM system
Video signal	EIA standard, NTSC color
Usable cassettes	8 mm video format cassettes
Tape speed	SP: approx. 1.43 cm/sec. LP: approx. 0.72 cm/sec.
Recording time	SP mode: 2 hours LP mode: 4 hours (with Sony P6-120 cassette)
Playback time	SP mode: 2 hours LP mode: 4 hours (with Sony P6-120 cassette)
Fast forward/rewinding time	Approx. 6 minutes (with Sony P6-120 cassette)

LCD section

Picture	4 inches measured diagonally 8.2 x 6.2 cm (3 1/4 x 2 1/2 inches)
On-screen display	TN LCD/TFT active matrix method Total picture-element number: 112,086 (479 x 234)

Tuner section


Channel coverage	VHF: 2 - 13 channels UHF: 14 - 69 channels Cable TV channels: A-8 - A-6, A-2 - W, W + 30 - W + 84
Antenna input	75-ohm minijack for VHF/UHF

Inputs/outputs

VIDEO/AUDIO IN/OUT	Selectable automatically according to the operation
Video input	Phono jack, 1 Vp-p, 75 ohms, unbalanced, sync negative
Video output	Phono jack, 1 Vp-p, 75 ohms, unbalanced, sync negative
Audio input	Phono jack, -7.5 dBs (0 dBs = 0.775 Vrms), input impedance more than 47 kilohms
Audio output	Phono jack, -7.5 dBs (330 mV) at load impedance 47 kilohms, output impedance less than 10 kilohms
Speakers	16 ohms, 150 mW
Earphone	Stereo minijack, 8 ohms x 2
CONTROLS	Minijack
Camera input	12-pin

Timer section

Clock	Crystal lock
Time indication	12-hour cycle
Timer setting	Only for recording, 1 event/24 hours

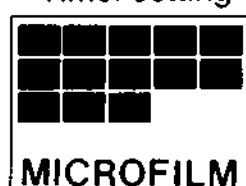

General

Power requirements	Battery mounting surface input: 6.0 V (battery pack) DC jack input: 7.5 V (AC power adaptor), 6.5 V (DC pack DCP-77) 6.9 W (for continuous playback)
Power consumption	0°C to 40°C (32°F to 104°F)
Operating temperature	-20°C to 60°C (-4°F to 140°F)
Storage temperature	
Dimensions	129 x 71 x 226 mm (w/h/d) (5 1/8 x 2 7/8 x 9 inches) Approx. 1.1 kg (2 lb 7 oz) not incl. battery pack
Weight	
Accessories supplied	Stereo earphones (1) Signal splitter (1) Carrying case (1) Battery pack NP-77 (1) AC power adaptor AC-V50 (1) Lithium battery (1)

AC-V50

Power consumption	23 W
Power requirements	100 - 240 V AC, 50/60 Hz
Output voltage	DC OUT: 7.5 V, 2 A in operating mode
Battery charge terminal:	10 V, 1.3 A in charge mode
Operating temperature	0°C to 40°C (32°F to 104°F)
Storage temperature	-20°C to 60°C (-4°F to 140°F)
Dimensions	Approx. 71 x 45 x 144 mm (w/h/d) (2 7/8 x 1 13/16 x 5 3/4 inches) including projecting parts and controls
Weight	Approx. 400 g (14 oz)

Design and specifications are subject to change without notice.

— Continued on next page —

For MECHANICAL ADJUSTMENT, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL III (U MECHANISM)" (9-972-732-11)

8 VIDEO TV RECORDER
SONY®

LIST OF RECOMMENDED ACCESSORIES



	Model name	Page
Battery pack	NP-77H, NP-66H, NP-55	11
Battery charger	BC-77	
Car battery charger	DC-V30	11
DC pack	DCP-77	17
Color video camera	CCD-G1	56
Antenna connector	EAC-40	54
Signal splitter	EAC-45	54
Antenna cord	CCD-6M, CCD-2	54
Car antenna	VCA-3W, VCA-4E	54
Pan tilter	HVR-200	59
Connecting cord	VMC-910MS/920MS (1m/2m) VMC-810S/820S (1m/2m) VMC-710M/720M (1m/2m)	60
Car connecting pack	CPA-2	
Video walkman hood	VCV-GV300	
Cleaning cassette	V8-25CLH	70
RFU adaptor kit	RFU-89UCKA	63

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!


LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL					
•	Features	5			
•	Location of Parts and Controls	5			
•	Power Sources	6			
•	Setting the Clock	8			
•	Presetting TV Channels	9			
•	Watching TV Programs	10			
•	Listening to Stereo Programs	11			
•	Adjusting the Picture and Sound	12			
•	Using the SLEEP Timer	12			
•	Inserting a Cassette	12			
•	Recording TV Programs	13			
•	Recording Stereo Programs	14			
•	Using the Timer-Activated Recording Feature	14			
•	Playing Back the Recorded Tapes	15			
•	Using Indexes—to Find the Desired Scene Quickly ..	16			
•	Connecting an Outdoor Antenna and CATV cable ..	17			
•	Connecting other VCRs or Monitors	17			
•	Editing Tapes	20			
•	Precautions	21			
•	Maintenance	21			
•	Notes on Moisture Condensation	21			
•	Using Your Video TV Recorder Abroad	22			
•	List of On-Screen Displays	22			
2. DISASSEMBLY					
2-1.	Removal of Cabinet (Upper) Assy	23			
2-2.	Removal of SC Unit	23			
2-3.	Removal of Liquid Crystal Display Module	23			
2-4.	Removal of Control Switch Block	24			
2-5.	Removal of Cassette Compartment Assy	24			
2-6.	Removal of TU-123 Board	24			
2-7.	Removal of SB Block and Lithium Battery	25			
2-8.	Removal of DC-22 Board	25			
2-9.	Removal of Mechanism Deck	25			
2-10.	Internal Views	26			
3. DIAGRAMS					
3-1.	Circuit Boards Location	27			
3-2.	Overall Block Diagram	28			
3-3.	Head Amp Block Diagram	31			
3-4.	Video Block Diagram	33			
3-5.	LCD Video Block Diagram	35			
3-6.	Marker Block Diagram	37			
3-7.	Servo/System Control Block Diagram	40			
3-8.	Table of SV-38 Board IC206 (CXP-80116) Port	43			
3-9.	Test Mode	45			
3-10.	List of SIRCS Code	48			
3-11.	System Control—Video • Audio Part Interface	49			
3-12.	System Control—Servo Peripheral Circuit Interface	51			
3-13.	System Control—System Control Peripheral Circuit Interface	53			
3-14.	System Control—Mechanism Control Part Interface	55			
3-15.	Tuner Block Diagram	56			
3-16.	Audio Block Diagram	59			
3-17.	Power Block Diagram	65			
4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS					
4-1.	Frame Schematic Diagram	67			
4-2.	Printed Wiring Boards and Schematic Diagrams ..	70			
•	RP-75 Board	71			
•	RG-8 Board	76			
•	CC-32, CN-6 and SV-38 (Video) Boards	83			
•	SV-38 (Servo, System Control) Board	92			
•	AU-53 Board	101			
•	SB-3 and TU-123 Boards	108			
•	SV-38 (ATF, Marker) Board	116			
•	DC-22, KB-10 and UC-6 Boards	125			
4-3.	Semiconductors	129			
5. EXPLODED VIEWS					
5-1.	Cabinet (Upper) Assembly	131			
5-2.	SC Unit Assembly	132			
5-3.	Cabinet (Lower) Assembly	133			
5-4.	Mechanism Deck Assembly (1)	134			
5-5.	Mechanism Deck Assembly (2)	135			
5-6.	Mechanism Deck Assembly (3)	136			
6. ELECTRICAL PARTS LIST					
137					
7. MECHANICAL ADJUSTMENTS					
7-1.	Setting the Track Shift Mode	158			
7-2.	Preparation for Adjustment	158			
8. ELECTRICAL ADJUSTMENTS					
8-1.	Preparation for Adjustment	159			
8-1-1.	Using Instruments	159			
8-1-2.	Connection of Instruments	159			
8-1-3.	VIDEO/AUDIO Terminal of the Unit	160			
8-1-4.	Set-up at the Adjustment	160			
8-1-5.	Alignment Tape	161			
8-1-6.	Input/Output Level and Impedance	162			
8-1-7.	Test Mode	163			
8-2.	Power Source Part Adjustment	166			
8-2-1.	UNREG Power Source Voltage Check	166			
8-2-2.	Switch 5V Adjustment	166			
8-2-3.	DD Converter Frequency Adjustment	166			
8-2-4.	-8V Adjustment	166			
8-2-5.	LCD Power Source Voltage Check	166			

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
8-2-6.	CAM UNREG Check	167	8-9-7.	Recording Matrix L+R Adjustment	182
8-3.	System Control System Adjustment	167	8-9-8.	Recording Matrix L-R Adjustment	183
8-3-1.	Clock Precision Adjustment	167	8-9-9.	Playback Matrix Adjustment	183
8-3-2.	Battery Down Adjustment	167	8-9-10.	Total Level Characteristic Separation Check ..	183
8-4.	Servo System Adjustment	167	8-9-11.	Total Distortion Rate Check	183
8-4-1.	CUE/REV Adjustment	167	8-10.	Adjusting Parts Location Diagram	184
8-4-2.	Switching Position Adjustment	168			
8-5.	Video System Adjustment	168			
8-5-1.	Playback Frequency Characteristic Adjustment	169			
8-5-2.	fsc Check	169			
8-5-3.	SYNC AGC Adjustment	169			
8-5-4.	IR Adjustment	170			
8-5-5.	Y/C Separation Adjustment	170			
8-5-6.	Emphasis Y Level Adjustment	171			
8-5-7.	De-emphasis Y Level Adjustment	171			
8-5-8.	Playback Y Level Adjustment	171			
8-5-9.	Y FM Carrier Adjustment	171			
8-5-10.	Y FM Deviation Adjustment	172			
8-5-11.	Recording Y Level Adjustment	172			
8-5-12.	Chroma Emphasis Adjustment	172			
8-5-13.	Recording Chroma Level Adjustment	173			
8-6.	LCD System Adjustment	173			
8-6-1.	Contrast Adjustment	174			
8-6-2.	R Gain Adjustment	174			
8-6-3.	B Gain Adjustment	174			
8-6-4.	Sub Bright Adjustment	174			
8-6-5.	fsc Adjustment	175			
8-6-6.	White Balance Adjustment	175			
8-6-7.	V COM DC Adjustment	175			
8-6-8.	Character Position Adjustment	176			
8-7.	Marker System Adjustment	176			
8-7-1.	Playback VCO Free Oscillation Frequency Adjustment	176			
8-8.	Tuner System Adjustment	177			
8-8-1.	FAS Adjustment	177			
8-8-2.	P.REF Adjustment	177			
8-8-3.	AFT Adjustment	177			
8-8-4.	S.REF Adjustment	177			
8-8-5.	MPX Level Adjustment	178			
8-8-6.	FILTER Adjustment	178			
8-8-7.	VCO Adjustment	178			
8-8-8.	Separation Adjustment	179			
8-8-9.	RF AGC Adjustment	179			
8-9.	Audio System Adjustment	180			
8-9-1.	1.5MHz Carrier Frequency Adjustment	181			
8-9-2.	1.7MHz Carrier Frequency Adjustment	181			
8-9-3.	E-E Output Level Check	181			
8-9-4.	1.5MHz Carrier Level Check	181			
8-9-5.	1.7MHz Carrier Level Adjustment	182			
8-9-6.	1.5MHz Deviation Adjustment	182			

SECTION 1 GENERAL

Features

This section is extracted from instruction manual.

The "Video Walkman" GV-300 is an 8mm video recorder with a LCD (Liquid Crystal Display). Its compact and lightweight design allows you to watch TV programs and video tapes anywhere and anytime you like.

- With this video TV recorder, you can:
- view the playback picture of 8 mm video tapes.
 - view TV programs.
 - record TV programs.
- In addition, by connecting it to a video camera (not supplied), you can record pictures with the camera, and play back the recorded pictures on it immediately.

Other features


- Hi-fi stereo for high quality sound*
- Stereo TV tuner for enjoying stereo programs
- Index function for finding the desired scenes quickly
- CRYSTAL-CLEAR still/slow/picture search on LCD
- Timer-activated recording
- SLEEP timer for turning off the unit automatically
- MEGA BASS circuit for dynamic bass sound

* Hi-fi Stereo System


On the 8 mm video standard track, the sound is recorded/played back in Hi-fi monaural. The PCM digital stereo sound is recorded/played back on the PCM track as an option. With this unit, Hi-fi stereo sound can be recorded on the standard track. To maintain compatibility with the conventional Hi-fi monaural equipment, the Hi-fi stereo sound is recorded as L - R sound using the 1.7 MHz carrier and L + R sound using the 1.5 MHz carrier as the FM audio signal. To play back the tape recorded by its hi-fi stereo system, this unit uses a matrix circuit to produce the L and R stereo sounds separately. When conventional Hi-fi monaural equipment is used to play back a tape recorded in Hi-fi stereo, it will produce the L + R monaural sound because it can reproduce only the 1.5 MHz carrier. The Hi-fi stereo system of this unit provides a live stereo sound atmosphere even when using the 8 mm video standard track.

This unit uses 8 mm video format cassettes. It records in the SP mode (approximately 1.43 cm/second) and the LP mode (approximately 0.72 cm/second) and can play back in the SP mode and LP mode. The quality of the playback picture in the LP mode, however, will not be as good as that in the SP mode.

Location of Parts and Controls

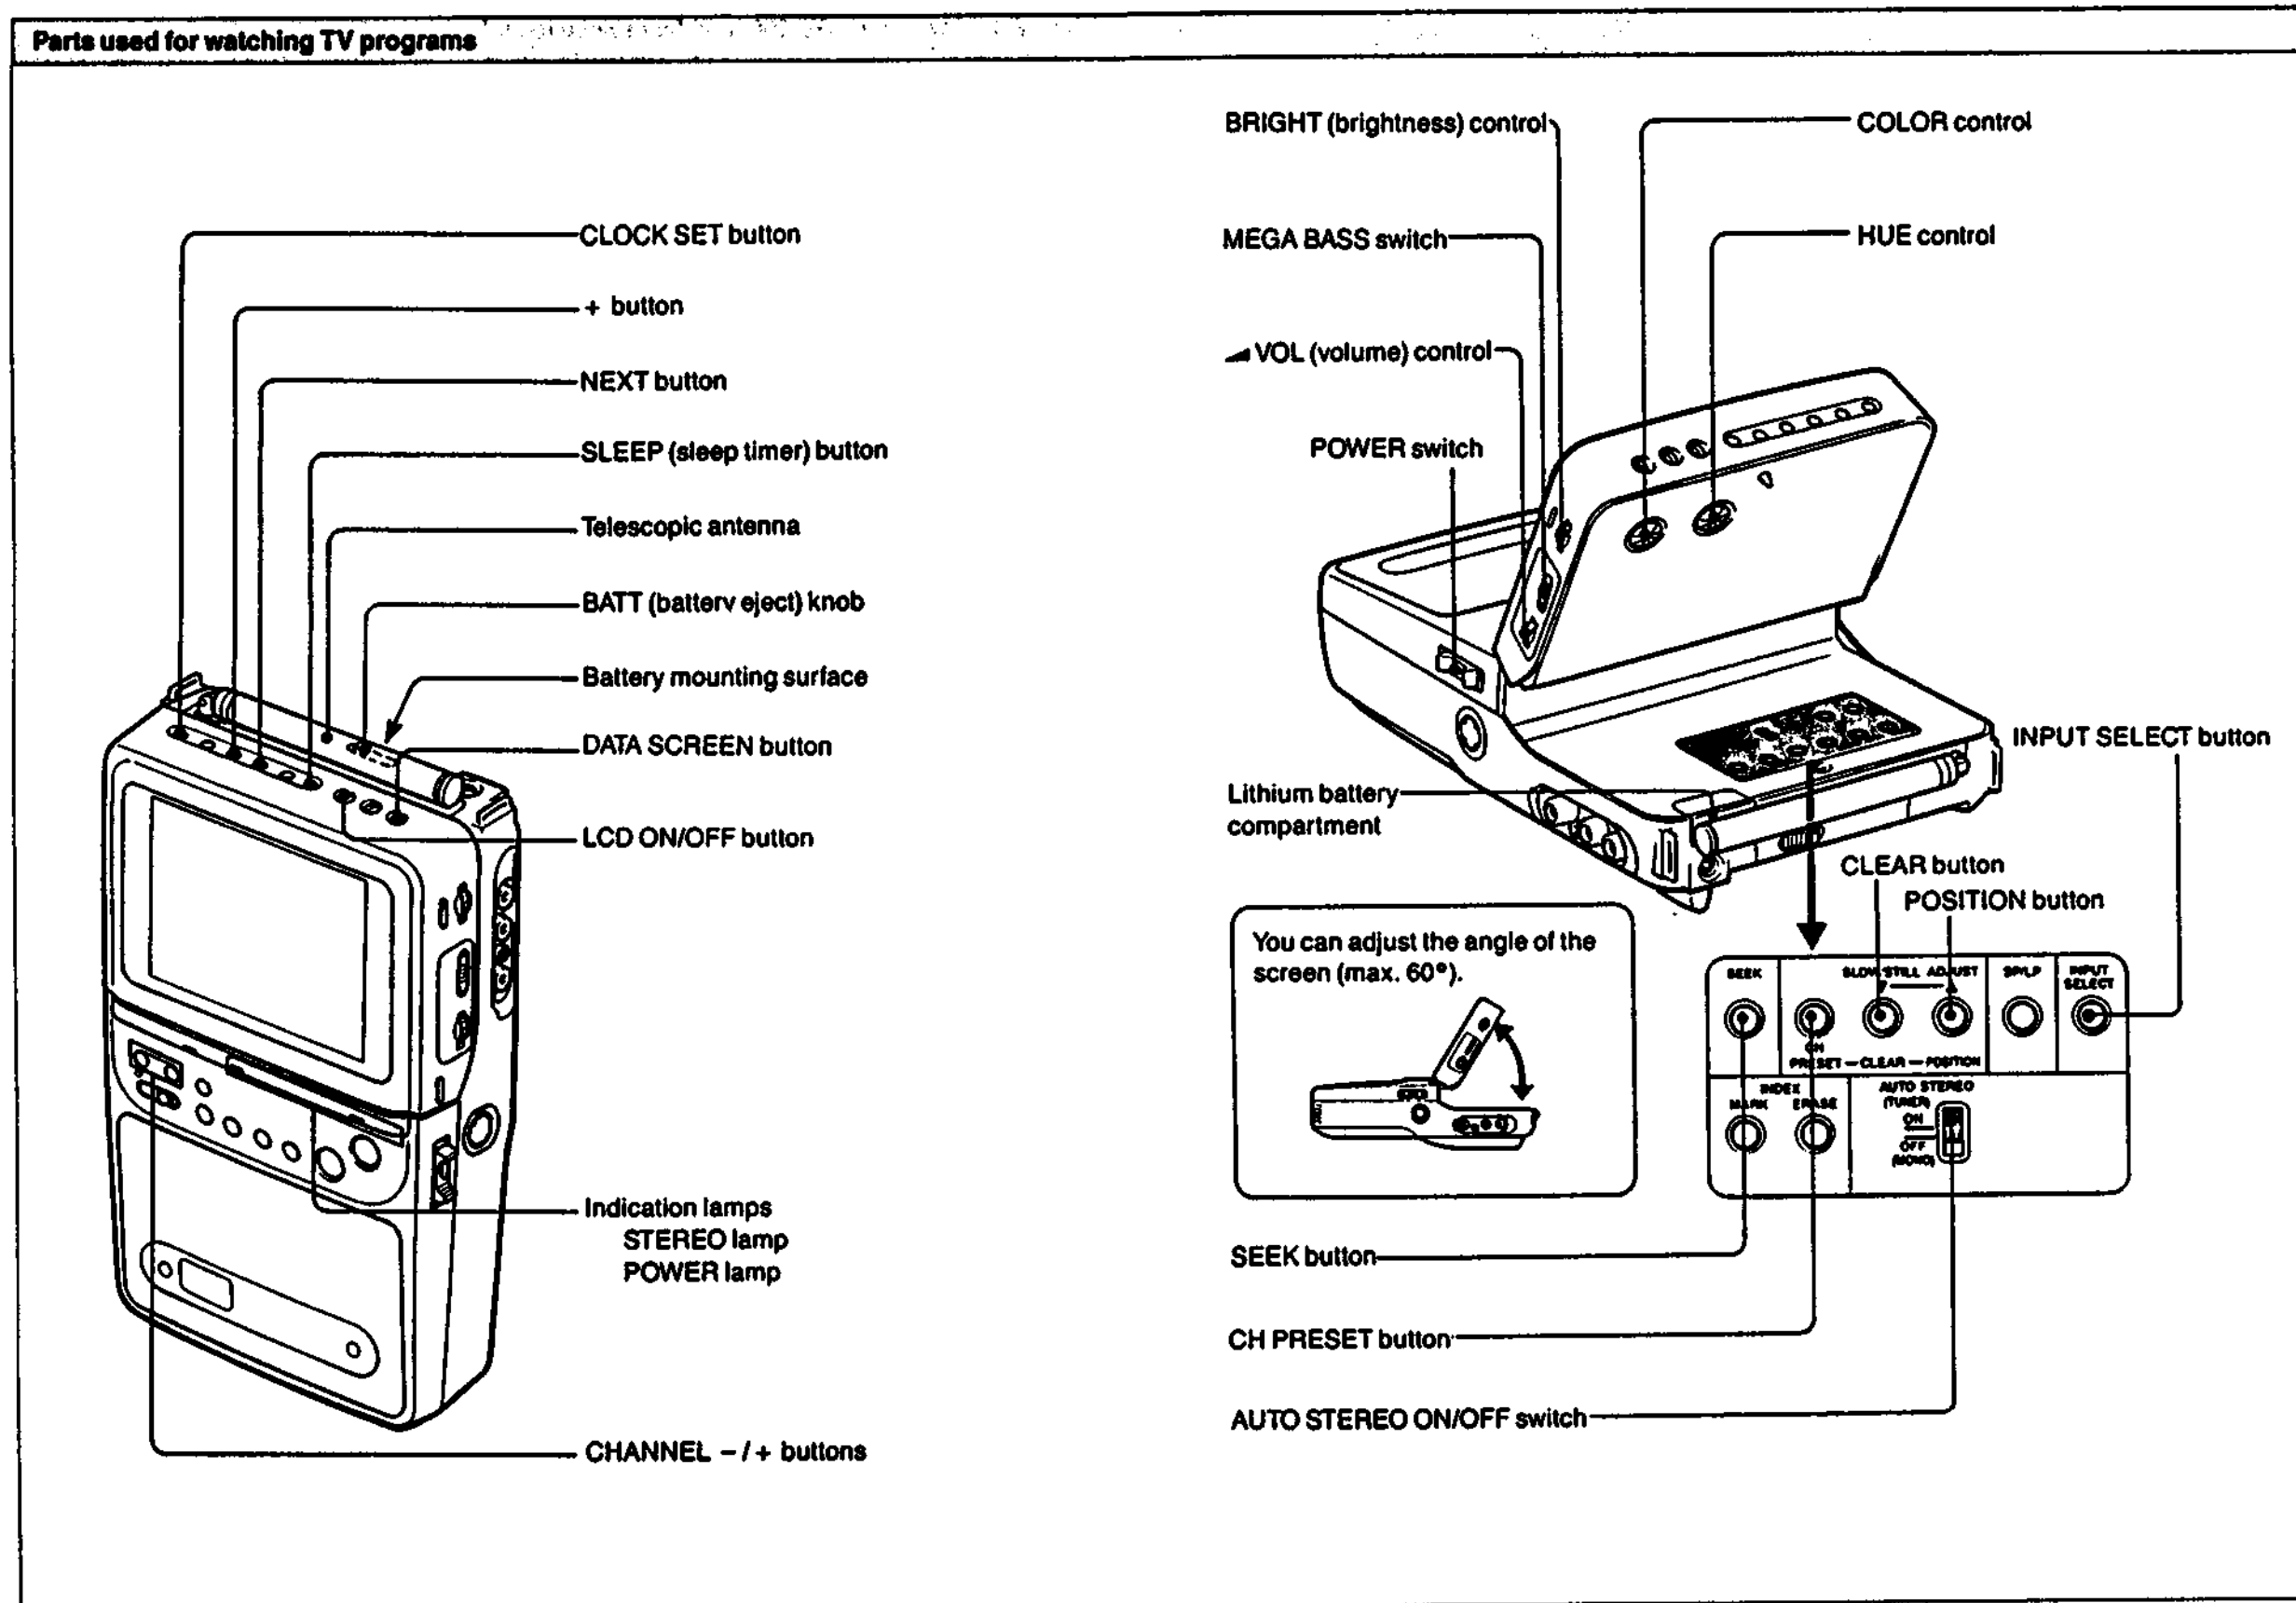

Parts used for VCR playback/recording

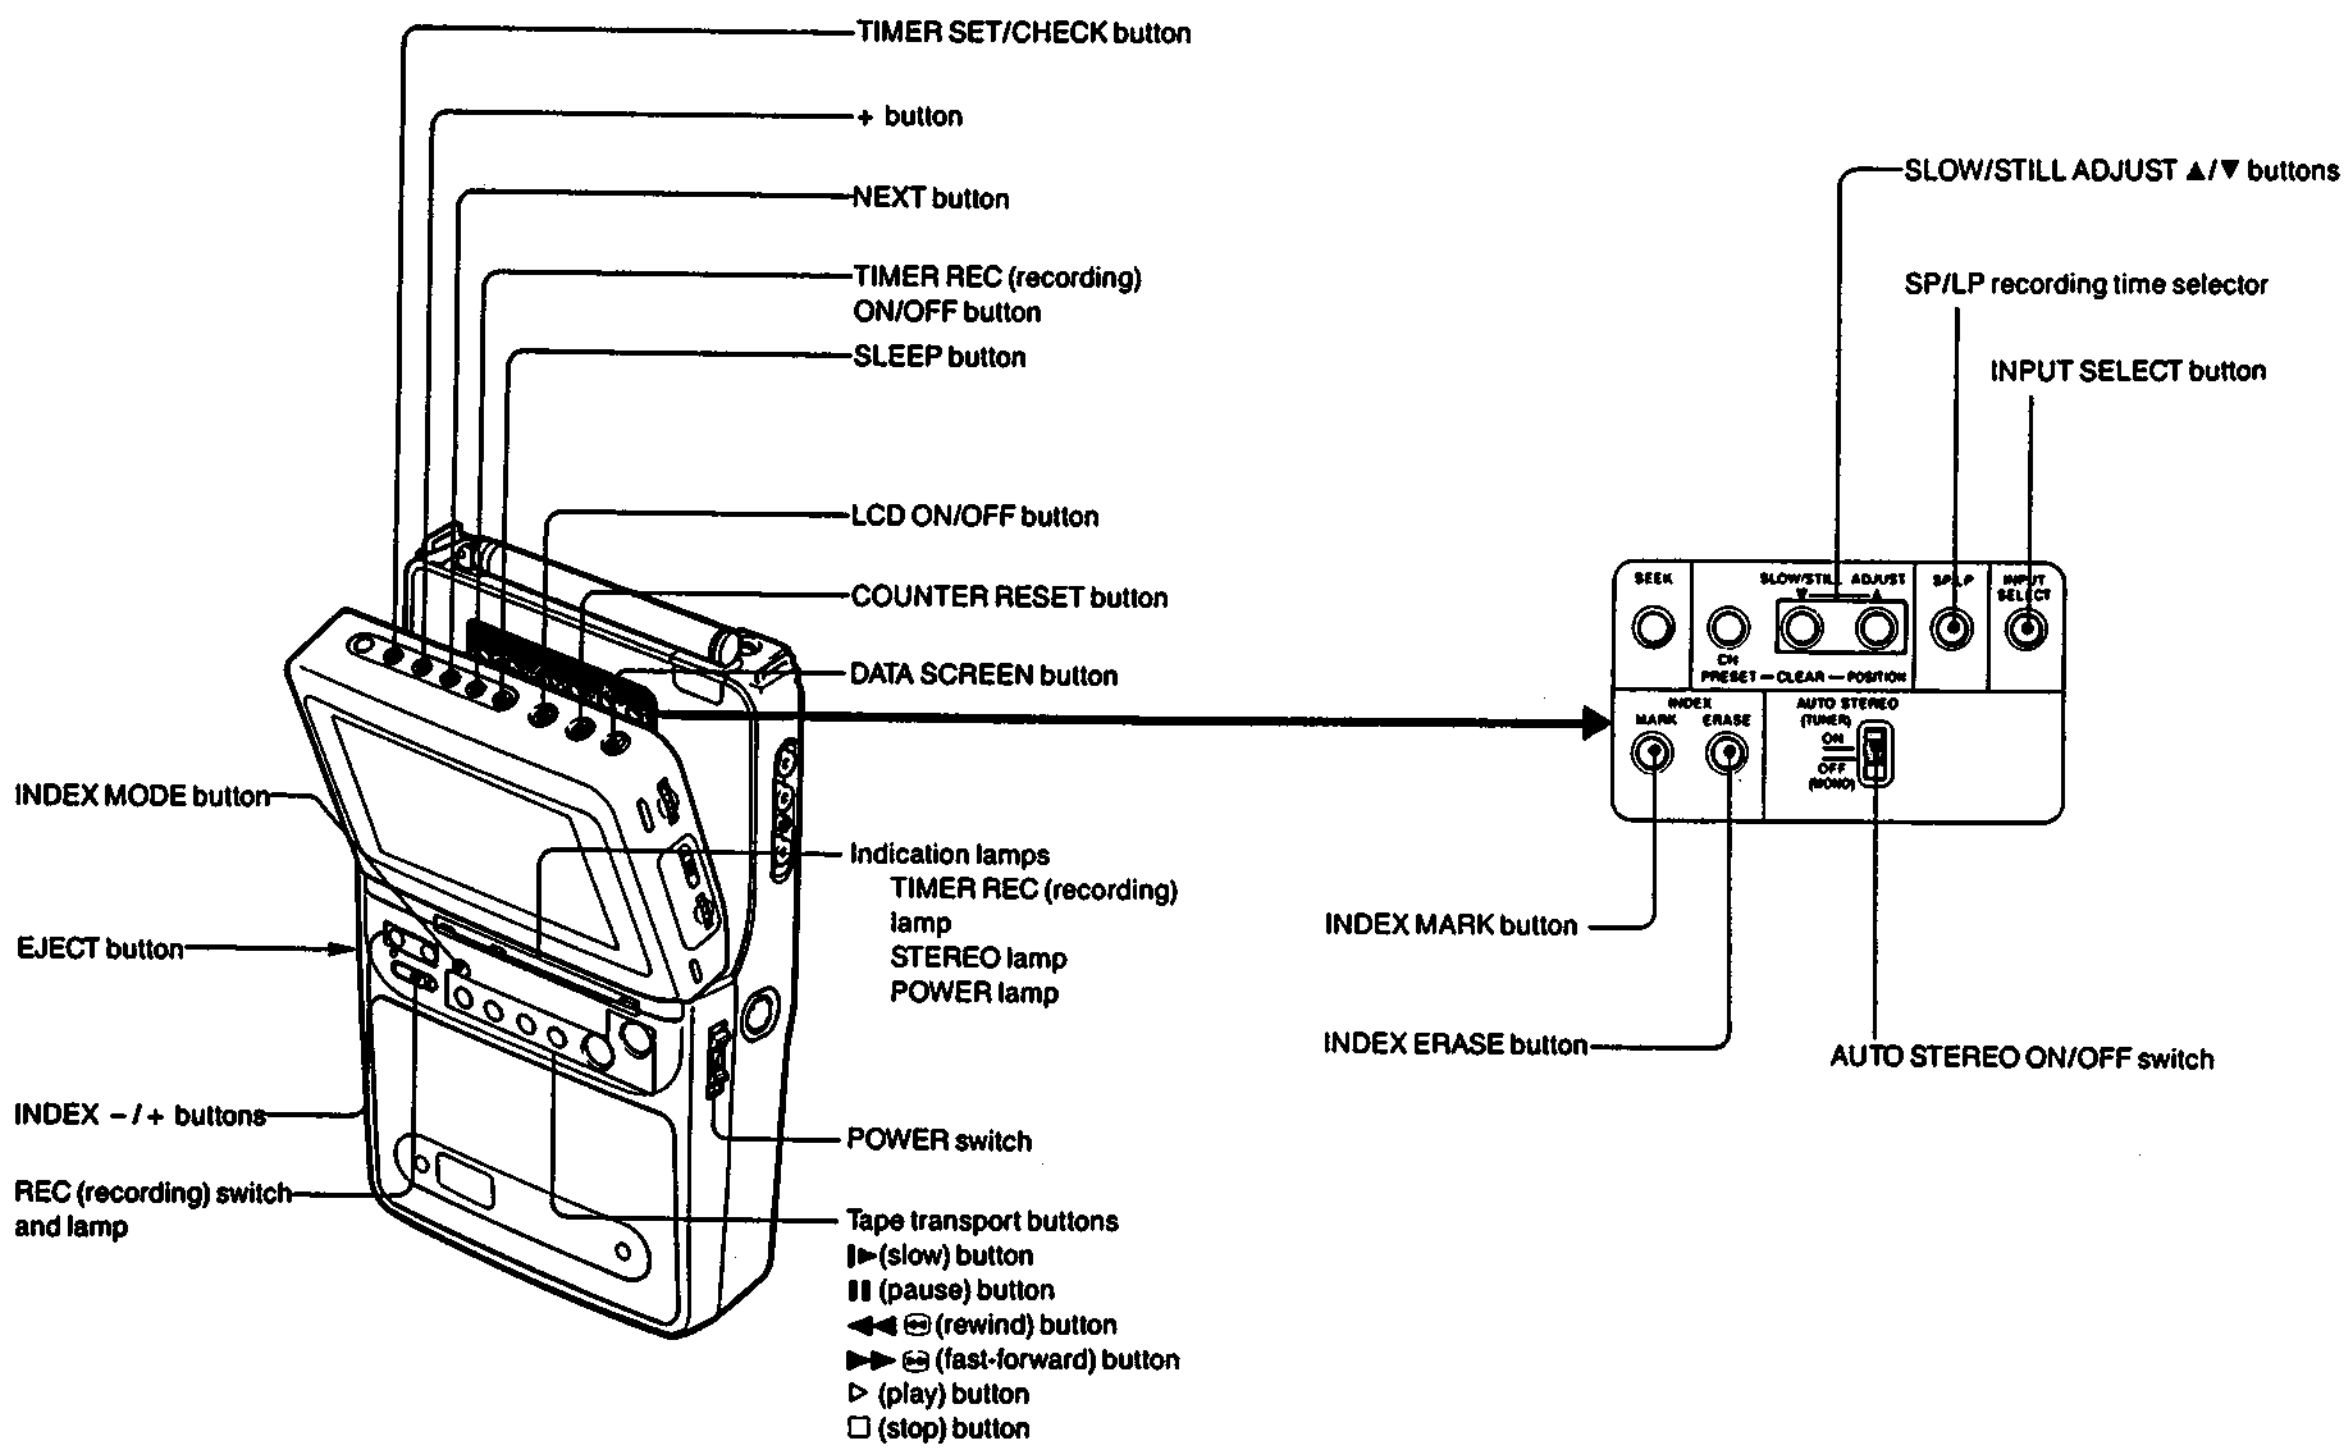


8

9

Getting Ready **Power Sources**

Parts used for connection

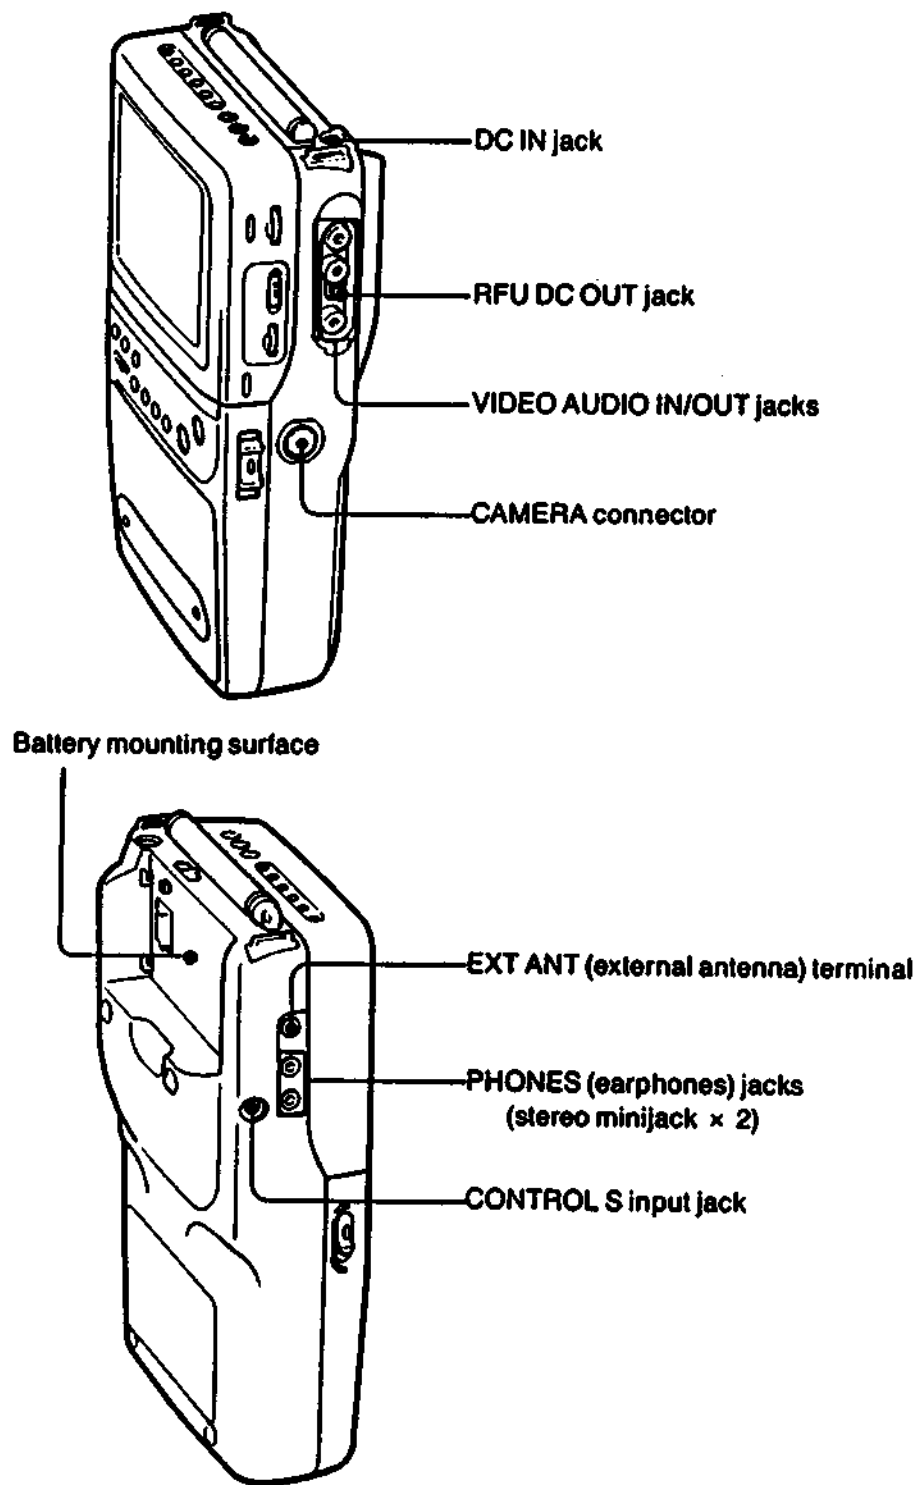

10

Selection of Power Sources

Place	Power sources	Page
Indoors	AC power adaptor AC-V50 (supplied)	16
Outdoors	Battery pack NP-77 (supplied), NP-66H, or NP-77H	12
In the car	DC pack DCP-77	17
	Car battery charger DC-V30	


The above accessories, except for the AC-V50 and NP-77, are not supplied.

Disconnecting the power source during recording or playback operations may damage the cassette tape. If this is done accidentally, supply the power again immediately and turn the power on.

11


Using with Battery Pack — NP-77, NP-55, NP-66H, or NP-77H

- 1 First, charge the battery pack.**
Use the supplied AC-V50 AC power adaptor.

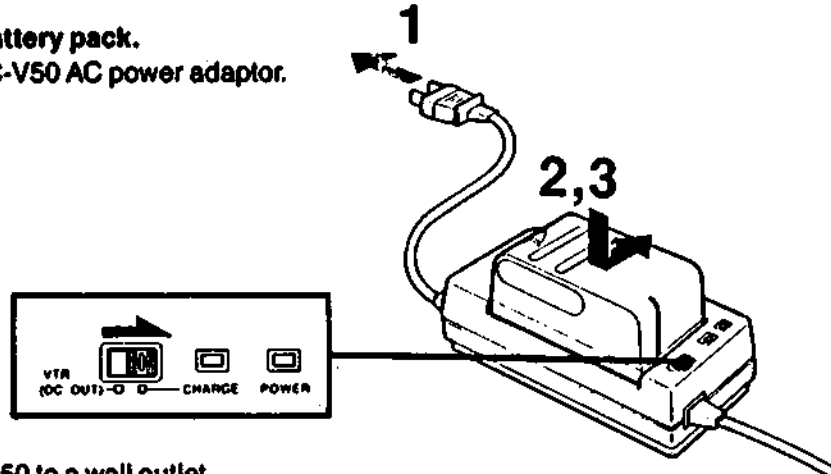


- 1 Connect the AC-V50 to a wall outlet.
2 Install the battery pack.
Align the right side of the battery pack with the line on the AC power adaptor.
3 While pressing the battery pack, slide it in the direction of the arrow.
The POWER lamp (green) and the CHARGE lamp (orange) on the AC-V50 lights up.
The charging begins.
When the charging is completed, the CHARGE lamp goes out.
Unplug the unit from the wall outlet and the POWER lamp goes out.

- 2 Attach the battery pack to the video TV recorder.**
Align the battery pack with the white line on the video TV recorder, then while pressing, slide the battery pack in the direction of the arrow.

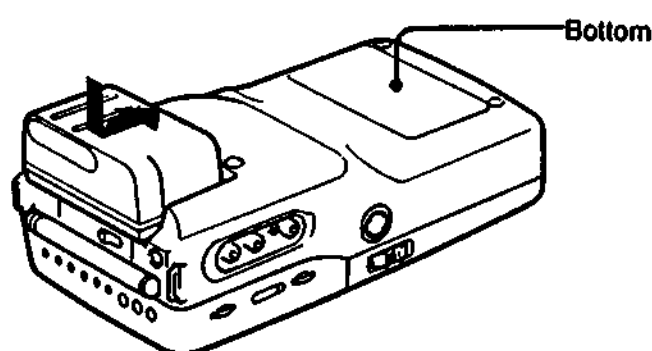

- The charging time is about 120 minutes for an NP-77, 140 minutes for NP-77H, 100 minutes for NP-66H, and 60 minutes for an NP-55.
- The unit cannot be operated with the AC power adaptor when it is used for charging a battery pack, and the battery pack cannot be charged when the AC power adaptor is used to operate the unit.
- An NP-77, NP-55, NP-66H, or NP-77H can also be charged with the BC-55 or BC-77 battery charger.

To remove the battery pack

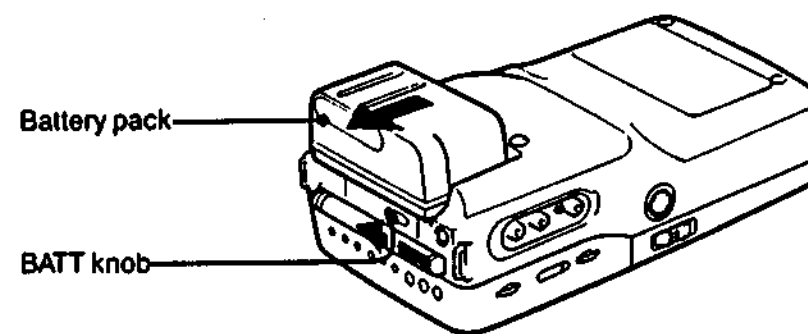

While sliding the BATT knob in the direction of the arrow, slide the battery pack as illustrated.

Operating time

A fully-charged battery pack can operate this unit as follows:

	LCD ON/OFF	NP-77H	NP-77	NP-66H	NP-55
Watching TV programs	ON	Approx. 125 min.	Approx. 100 min.	Approx. 90 min.	Approx. 50 min.
VCR playing back	ON	Approx. 120 min.	Approx. 100 min.	Approx. 90 min.	Approx. 50 min.
TV program recording	ON	Approx. 95 min.	Approx. 75 min.	Approx. 70 min.	Approx. 40 min.
TV program recording	OFF	Approx. 140 min.	Approx. 115 min.	Approx. 105 min.	Approx. 55 min.
Camera recording*	OFF	Approx. 100 min.	Approx. 80 min.	Approx. 75 min.	Approx. 40 min.

* When connecting the color video camera CCD-G1 (not supplied) and setting the LCD ON/OFF switch to OFF.

12

13

Using the Battery Pack Efficiently

How to prepare the rechargeable battery packs

Have sufficient battery pack power to perform 2 or 3 times the amount of recording that you plan to do. "Battery life" as indicated in the instruction manual or catalogue of the video TV recorder is measured by the continuous use of the video TV recorder, at room temperature, using a fully charged battery.

Fast winding or rewinding tape operations consumes much more battery power than normal tape transport operation. Consequently, battery life becomes shorter when these operations are performed frequently.



Battery life is shorter in a cold climate.

Cold climates reduce the efficiency of a battery and cause it to run out more quickly.

When to replace the rechargeable battery pack

When the battery pack is exhausted, the POWER lamp and the BATTERY DOWN indication on the screen starts blinking slowly about five minutes before the battery pack is discharged. Replace the battery when the blinking changes from slow to fast. However, during playback, the BATTERY DOWN indication starts blinking rapidly about a minute before the battery pack is discharged.

Turn off the power of the video TV recorder before replacing the battery. While replacing the battery, keep the cassette inside the cassette holder. When the battery has been replaced, recording can be resumed smoothly without any picture distortion.

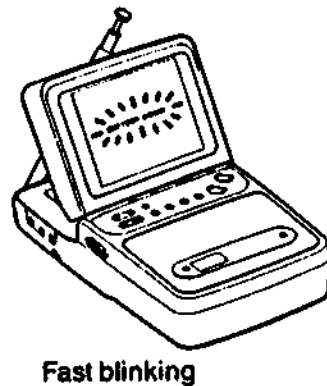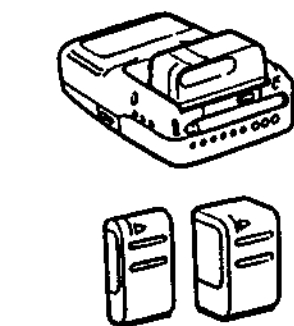

Notes on battery exhaustion when a camera is connected

When the battery is exhausted, the tally lamp (red) displayed in the viewfinder of the camera starts blinking, and the power goes off automatically. Replace the battery pack with a fully charged one when the blinking starts.

Notes on charging

Before using the battery pack, charge it sufficiently. A brand-new battery pack is not charged. Recharge the battery pack when it is fully exhausted.

- If the operation is completed before the BATTERY DOWN indication on the screen or POWER lamp starts blinking, it is recommended that you discharge the battery pack by playing back a tape until BATTERY DOWN or POWER lamp starts blinking rapidly.
- Do not recharge the battery pack before it has been discharged completely. Repeated charging while some capacity remains will reduce the battery capacity. However, the original battery capacity can be recovered if you fully discharge and fully charge the battery pack again.

Keep the terminals clean

If the terminals (metal parts on the back) are soiled, the battery life will become shorter. When the terminals are soiled, or when the battery pack has not been used for a long time, repeatedly attach and remove it several times. This will improve the contact of the battery pack and the video TV recorder. Also, wipe the + and - terminals with a soft cloth or paper.


Notes on the rechargeable battery pack

Battery pack care

- Remove the battery pack from the video TV recorder after use, and keep it in a cool place. When the battery pack is installed on a video TV recorder, a small amount of current flows to the recorder even if the POWER switch is turned off. This causes overdischarge and, consequently, shortens the life of the battery.
- The battery pack is always discharging - even when it is not in use. Thus, the battery should be charged before each use.

How to use the switch on the battery pack

Use this switch as a reminder of the charging condition. Set the switch to the "no mark" position when the charging is completed. Set the switch to the "red mark" position when the battery has been discharged.

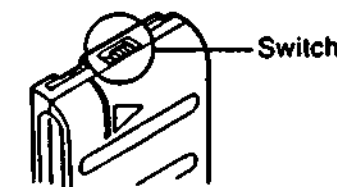

How many times can the battery pack be recharged

It can be fully charged and discharged about 500 times under normal temperatures. If the BATTERY DOWN indication blinks rapidly just after turning on the recorder, even though a fully charged battery pack has been installed, replace the battery pack with a brand new one.

Charging temperature

Lower temperatures require a longer charging time. Charging under a temperature ranging from 10°C to 30°C (50°F to 86°F) is recommended.

Why the battery pack heats up

While the battery pack is being charged or used, a chemical change occurs inside the battery pack which generates electric energy. Consequently, the battery pack becomes warm, but this is not dangerous.

Carrying the battery pack

If the + and - terminals are short-circuited with a piece of metal, the battery heat up abnormally. This is very dangerous. Never put an uncovered battery pack in a pocket together with a key holder or other metal object.


If the battery pack is not used for a long time (about 1 year)

Charge it again, but in this case the battery life will be shorter than normal. After several charging and discharging cycles, the battery life will recover its original capacity.

14

15

Using this unit with the AC Power Adaptor — AC-V50

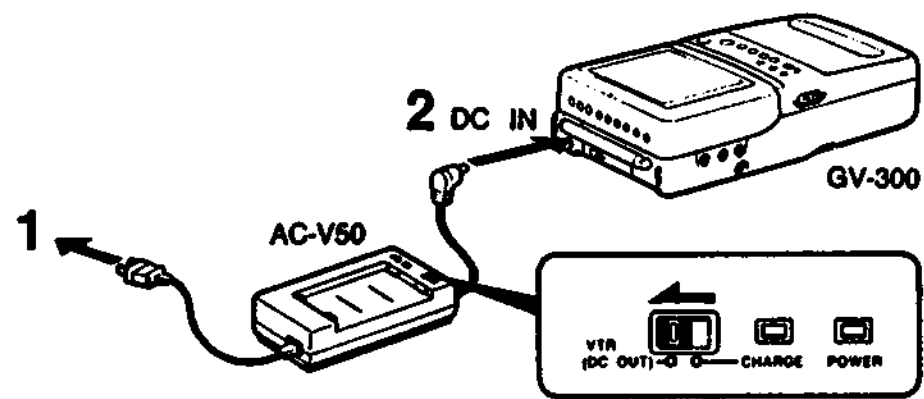

1 Connect the AC power adaptor to a wall outlet.

2 Insert the DC plug of the adaptor to the DC input jack of the video TV recorder.

Note on the AC power adaptor
Use only the supplied AC-V50 AC power adaptor.
Do not use any other AC power adaptor.




Polarity of the plug

- The unit is not disconnected from the AC power source as long as it is connected to the wall outlet.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.


Setting the Clock

Before you set the clock, install a lithium battery. With a lithium battery installed, this unit powers the clock and keeps the last channel in memory when the power source is disconnected.

1 Pull out the lithium battery compartment.

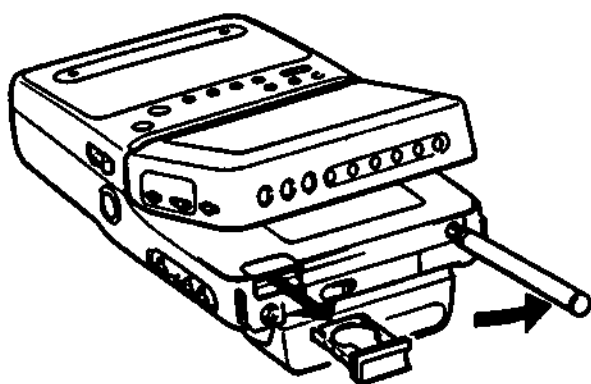

2 Install the supplied CR2032 lithium battery with the + side facing out.

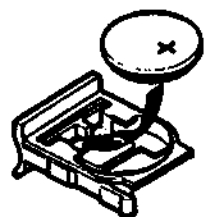


3 Reinsert the compartment.

To remove the lithium battery
Press the battery upward and remove it as illustrated.



Using This Unit with a Car Battery — DCP-77

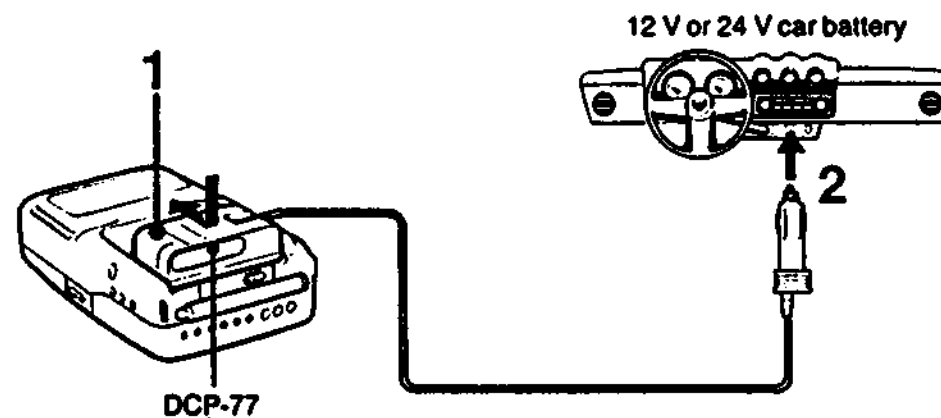

1 Attach the DC pack to the video TV recorder.

2 Connect the plug to the cigarette lighter socket.

- Connect the DCP-77 only to a car with a negative ground car batteries of 12 V or 24 V.
- Attach or remove the DC pack in the same way as the battery pack.
- DCP-55 is not recommended for this unit because the capacity of the DCP-55 is not enough to operate it.

Notes

- Be careful not to let any metal object touch the metal projection on the battery pack. When the battery pack is not used, keep it in its case.
- Keep the video TV recorder away from the power source. If not, noise may appear on the screen.

Notes on using this unit in a car

- For your safety, do not watch the TV or operate the controls while driving.
- Avoid leaving the unit in a place with very high temperatures. If you do, it may cause distortion of the cabinet or malfunction of the unit.
- If you use this unit while your car is not in use, the car battery will be consumed. Avoid using this unit in such condition for more than 12 hours.

Lithium battery life

Approximately 1 year in normal operation.

If the lithium battery becomes weak, the AM 12:00 indication appears on the screen when the DATA SCREEN button is pressed. In this case, replace the battery with a Sony CR2032 lithium battery. Use of a battery other than a Sony CR2032 may present a risk of fire or explosion. After replacing the battery, reset the clock.

Notes on lithium battery

- Keep the lithium battery out of the reach of children.
- Should the battery be swallowed, consult a doctor immediately.
- Before use, wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.
- Do not break up the battery or throw it into a fire because it may explode. Carefully dispose of the used batteries.


Warning

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

Setting the Clock

Before setting

- Make sure that the power source is connected correctly.
- The time indication "PM 12:00" means noon, and "AM 12:00" means midnight.

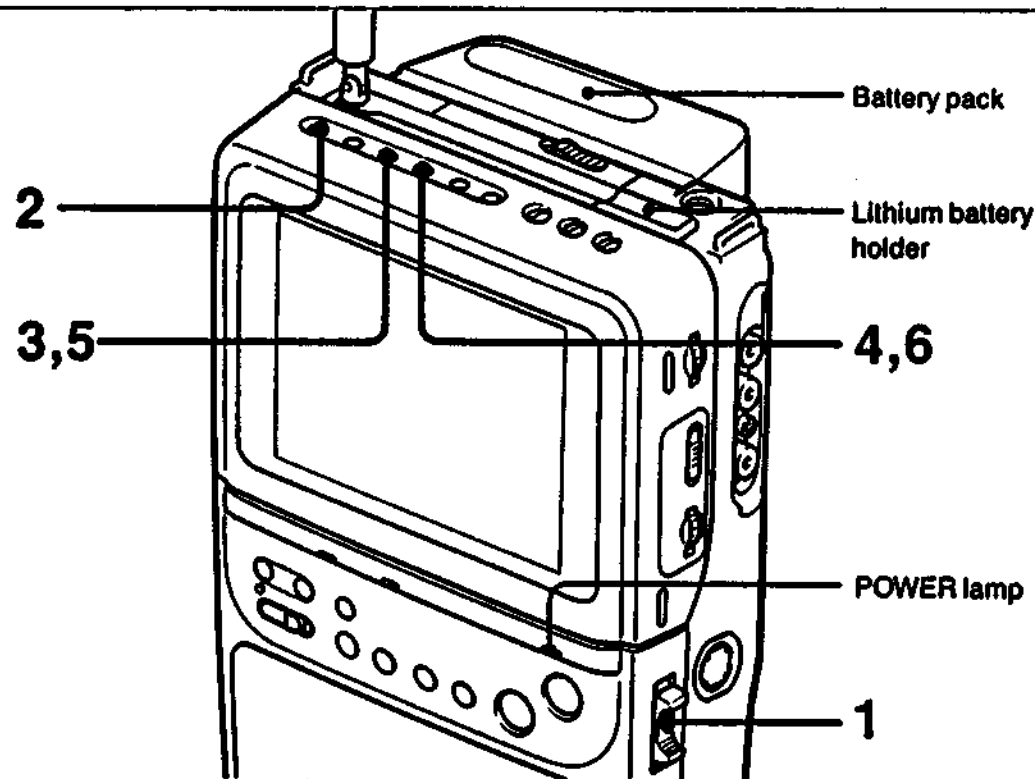

Example: Set to PM 1:15

- 1 Turn the power on.
The POWER lamp lights up.


While pressing the green button, slide the POWER switch to the left to turn the power on.




- 2 Press the CLOCK SET button with a pen or similar object.
The screen will enter the time setting mode.
The screen becomes dark.
The next item to be set blinks.




- 3 Set the hour.
Press the + button repeatedly until you get the desired setting.
If you keep the button pressed, the indication will advance continuously.

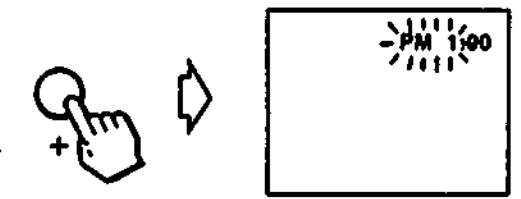


- 4 Press the NEXT button.

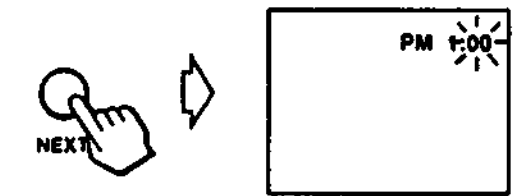

- 5 Set the minute.
Press repeatedly until you get the desired setting.
If you keep the button pressed, the indication will advance continuously.

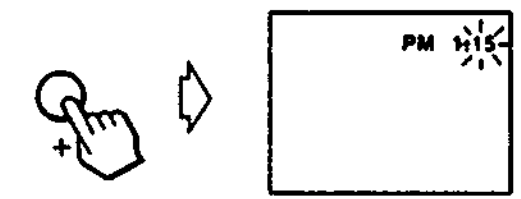

- 6 Press the NEXT button.
The clock starts.
The screen goes back to the normal brightness.

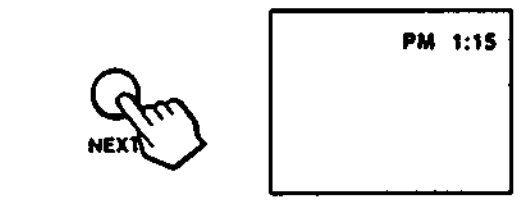

Note

If the lithium battery is not installed, the clock will go back to "AM 12:00" each time the power source is disconnected.

Presetting TV Channels


Your receiver is capable of receiving VHF channels 2-13, UHF channels 14-69 and cable TV channels 1 (A-8), 98 (A-2), 99 (A-1), 14-36 (A to W), 66-125 (W + 30 to W + 84). The channel numbers 1-99 will be displayed in the display window.
This unit is preset at the factory to receive certain channels (see the chart on page 23.) If you want to receive other channels, you need to preset them.

Preset channels

Program position	1	2-13	14-36	37-42	43	44-68	69	70-97	98	99
Corresponding channel	CATV 1	VHF 2-13	CATV 14-36	—	*	—	*	—	CATV 98	CATV 99
Number displayed	1	2-13	14-36	37-42	43	44-68	69	70-97	98	99


* UHF channels are preset around this number.

To Preset New Channels

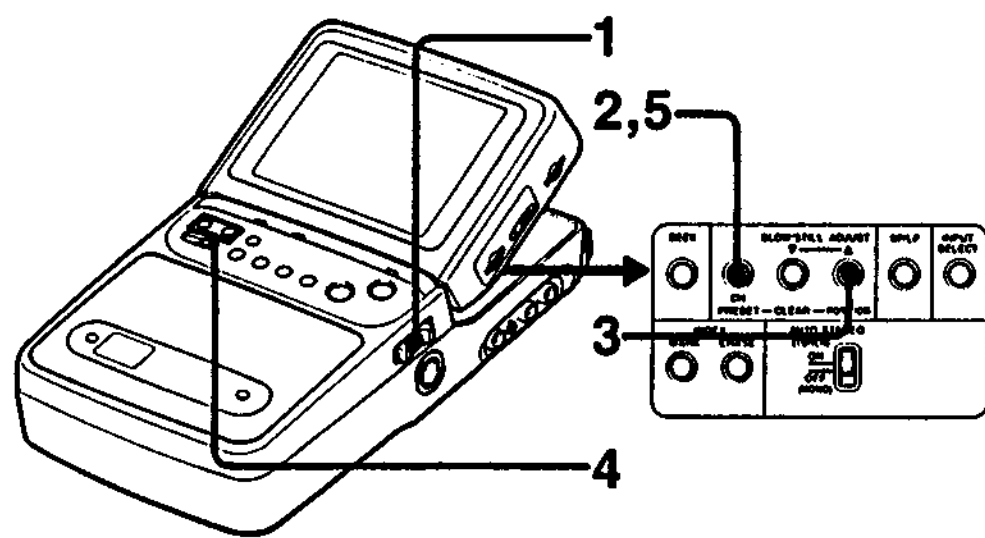


- 1 Turn the power on.
The POWER lamp lights up.
If the TV program is not displayed, press the INPUT SELECT button


While pressing the green button, slide the POWER switch to the left.

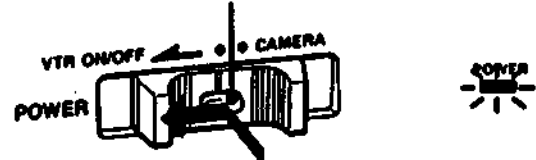


- 2 Press the CH PRESET button.

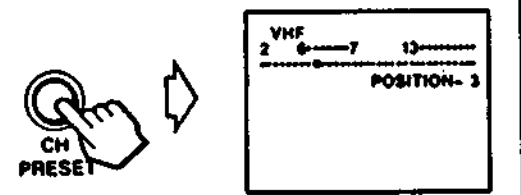

- 3 Press the POSITION button to select the desired program position where the channel is to be stored.

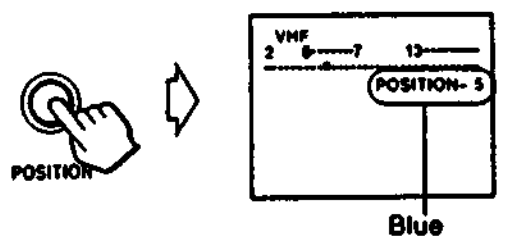

- 4 Press the CHANNEL -/+ buttons repeatedly to select the channel to be stored.
The UHF channel range is displayed after the VHF range*.
Repeat steps 3 and 4 for other channels to be preset.

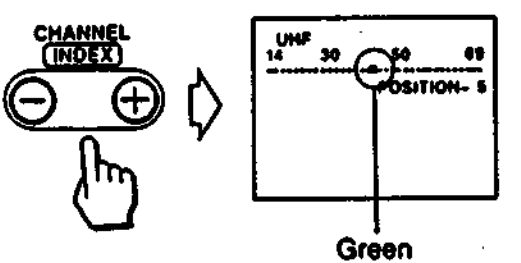

- 5 Press the CH PRESET button.
Channel presetting is completed.

The on-screen display disappears.



* After the channel range is displayed, wait for about 2 seconds before next operation.

To change the order of the channel to be stored
Follow the above steps.

To Erase Channels

The erased program position is skipped when you press the CHANNEL + / - button.

1 Press the CH PRESET button.

2 Press the POSITION button and select the program position to be erased.

3 Press the CLEAR button. The SKIP indication appears.

Repeat steps 2 and 3 for other program position to be erased.

4 Press the CH PRESET button. The on-screen display disappears.

Example: To erase program position 11

2 Press the POSITION button and select the program position to be erased.

3 Press the CLEAR button. The SKIP indication appears.

Repeat steps 2 and 3 for other program position to be erased.

4 Press the CH PRESET button. The on-screen display disappears.

To add the erased channels again
See "To Preset New Channels" on page 22.

Channel Allocation Chart

Frequency (MHz)	50	100	150	200	250	300	400	500	600	700	800
VHF/UHF channels	VHF 2-6		VHF 7-13							UHF 14-69	
CATV channels	A1-A4	A-2-1		J-W						W+30 - W+84	
Band indicator	VHF						UHF				

When the CHANNEL + button is pressed, the above channels will be scanned from the lowest frequency to the highest in sequence. By pressing the CHANNEL - button, the channels will be scanned in reverse.

Cable TV Channel Chart *

Number on this TV	1	98	99	14	15	16	17	18	19	20	21	22
Corresponding CATV channel	A-8	A-2	A-1	A	B	C	D	E	F	G	H	I
	23	24	25	26	27	28	29	30	31	32	33	34
	J	K	L	M	N	O	P	Q	R	S	T	U
												V
												W
												W+30
												W+84

Check with your local cable TV company for more complete information on the available channels.
* The designation of the cable TV channels conforms to the EIA/NCTA recommendation.

Note
Pay cable TV systems use scrambled or encoded signals and require special converters (decoders) besides the normal cable connections.

Watching TV Programs


1 Pull out the antenna fully. Be sure to pull at the base of the antenna. If you have connected an external antenna or CATV cable, be sure to fold in the telescopic antenna.

2 Turn the power on. The POWER lamp lights up. While pressing the green button, slide the POWER switch to the left.


3 If a TV program is not displayed, press the INPUT SELECT button. The display will change as follows:
TV program → LINE
CAMERA

⇩ To be Continued


4 Select the desired channel.
Press + for higher-numbered channels and - for lower-numbered channels. The channels will appear in numerical sequence. Press CHANNEL +/- repeatedly until you get the desired channel on the screen.

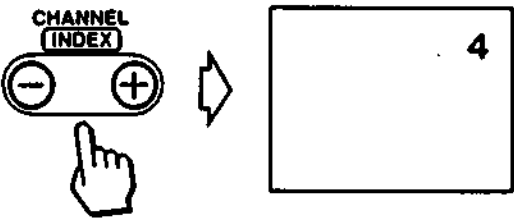

5 Adjust the antenna for the best reception.

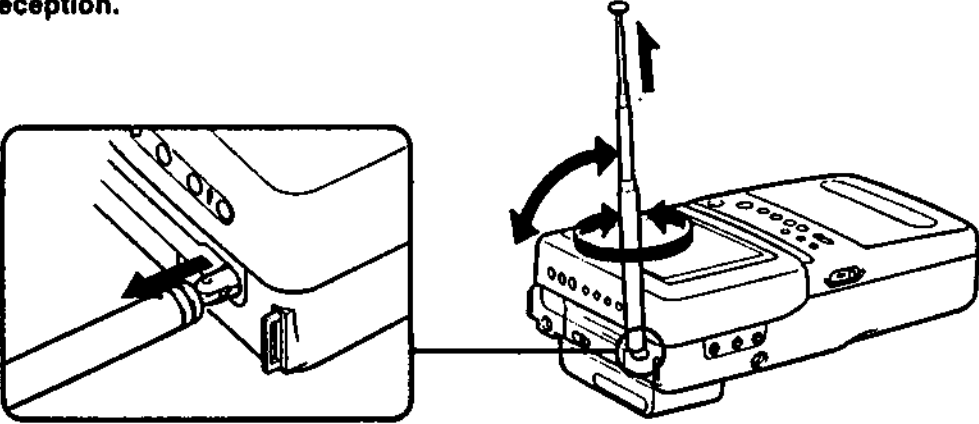


6 Adjust the volume and brightness.

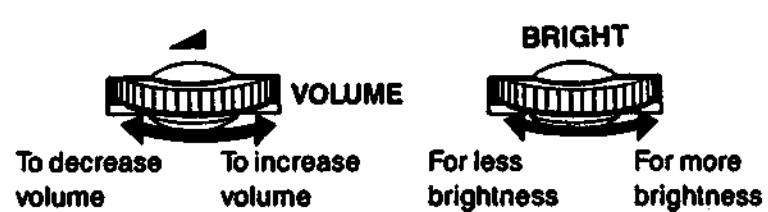


To decrease volume To increase volume For less brightness For more brightness

To turn off the TV
While pressing the green button, slide the POWER switch to the left. The POWER lamp goes out.



To put the antenna away
Slide in the base of the telescopic antenna first, then the center and the point.

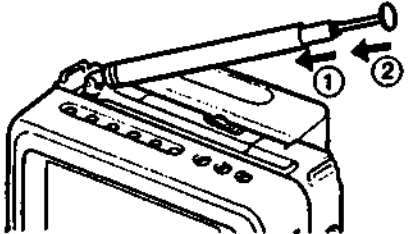

28

To mute (turn off) the picture
Press LCD ON/OFF button. The screen will be muted.




It is recommended to mute the picture when you view the playback picture with another TV or monitor. The picture noise of the TV or monitor is reduced. Battery life will also last longer if you use the unit with the picture turned off. To restore the picture on this unit, press LCD ON/OFF again.

Note
When no picture is displayed and the volume is low, or the earphones are connected, the unit appears to be turned off even though it is not. Be sure to turn off the unit with the POWER switch when it is not in use.

To display the channel number
Press the DATA SCREEN button.

To make the on-screen display disappear, press the DATA SCREEN button again. After the SEEK button is pressed, the VHF or UHF channel range is displayed instead of the channel number, then goes off after a few seconds.

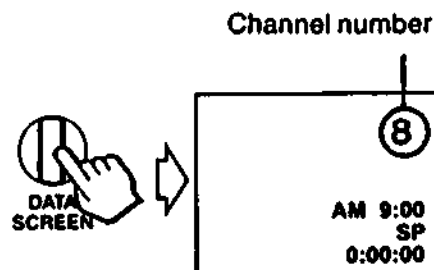


"Last channel" memory function

- While you are watching TV programs, if the power source is disconnected or the battery pack becomes exhausted, the unit turns off with the last channel being memorized. When you turn on the unit again, the last channel appears on the screen. The lithium battery must be installed for this function.
- The last channel memory function also works when the TV signal is cut off, for example, when you go through a tunnel in a moving car.
- If the lithium battery becomes exhausted but the power source is connected, the last channel memory function will still operate.


30

To View a TV Program Without Presetting Channels
When you do not know the channel number of the TV program you wish to view or if you want to use the unit in the moving car, search for the program as follows.

1 Press the SEEK button.
The channel range display appears. For VHF channels, press once. For UHF channels, press twice. To restore the normal display, press once more.

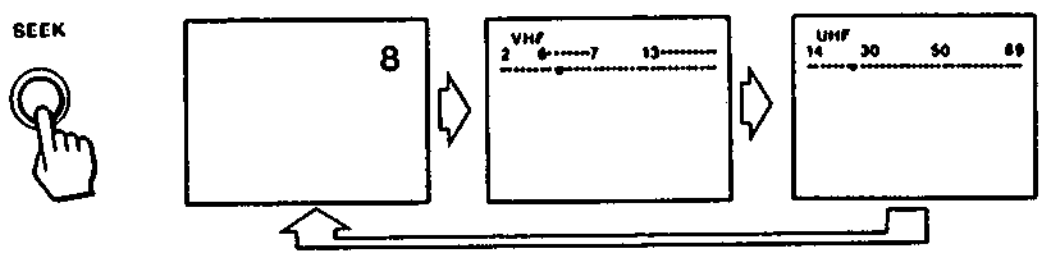

2 Press the CHANNEL +/- buttons to select the channel.

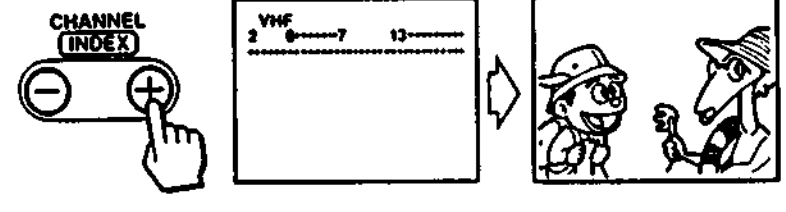


After selecting the channel, the channel range display goes out after a few seconds.

29

Listening to Stereo Programs


Connect the supplied stereo earphones to the PHONES jack to listen to the stereo sound. The speaker of this unit is monaural.

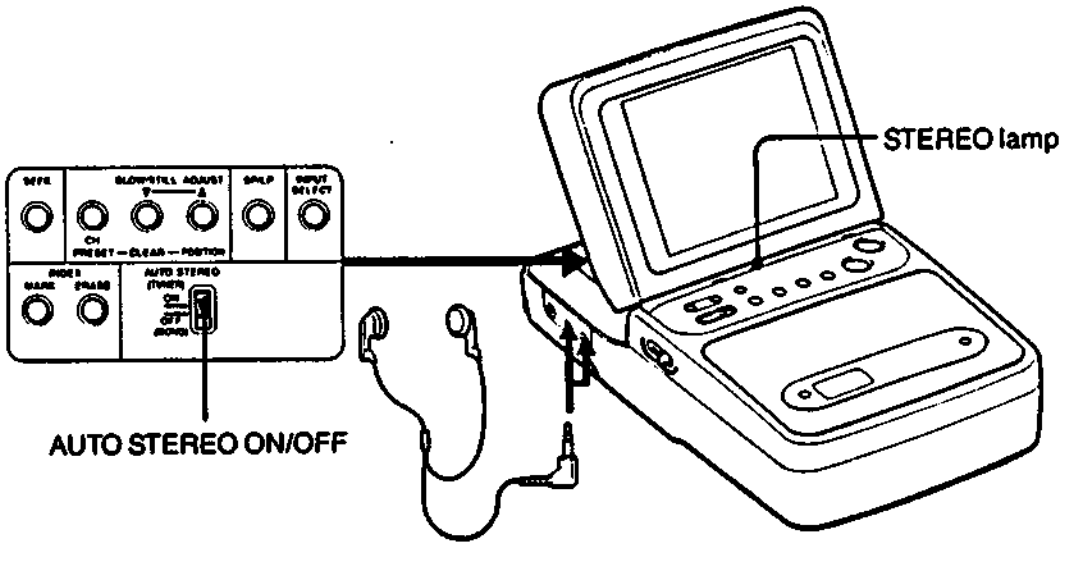

AUTO STEREO ON/OFF

STEREO lamp

Normally set the AUTO STEREO ON/OFF switch to ON. The STEREO lamp lights up automatically whenever a stereo program is received.

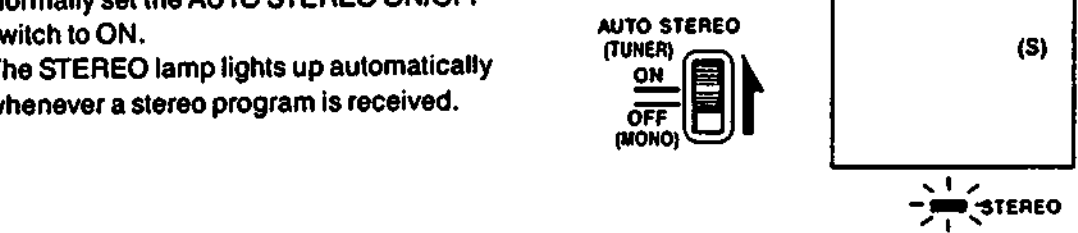

If excessive noise is heard when receiving a stereo program
Set the AUTO STEREO ON/OFF switch to OFF. The sound will be monaural, but the noise will be reduced. In this case, the STEREO lamp goes off. It is recommended to use monaural sound when using the unit in a moving car. To restore the stereo sound, set the switch to ON.




31

Adjusting the Picture and Sound

Adjust the picture and sound to your preference.

To adjust the picture

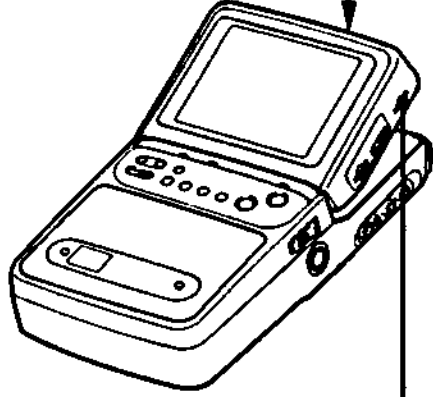

HUE Adjust the skin tone. (Set to the center for standard level.)
greenish tone purplish tone

COLOR Adjust the color intensity. (Set to the center for standard level.)
more color intensity less color intensity

Adjust the brightness.
BRIGHT
for less brightness for more brightness

To listen to the dynamic bass sound

MEGA BASS function
Used for listening to the sound with the stereo headphone.

MEGA BASS
NORM MID MAX
2 2


Set to NORM, MID, or MAX.

32

Using This Unit as a VCR

Inserting a Cassette

Make sure that the power source is connected to the unit.

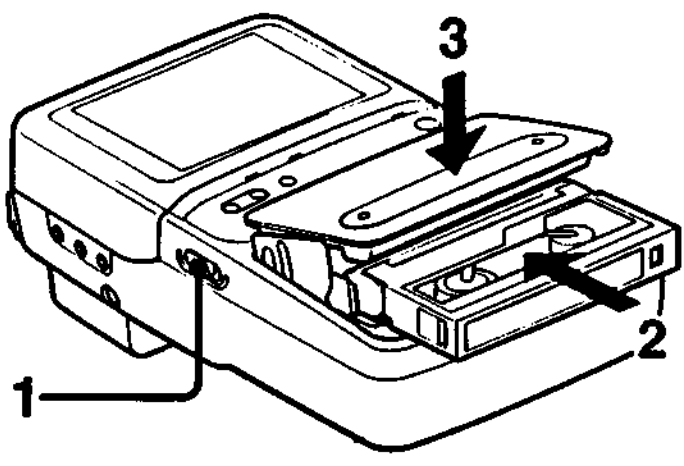

To insert a cassette

- 1 Open the cassette holder with the EJECT button.
While pressing, slide the button to the right.
- 2 Insert the cassette with the window side facing up.
- 3 Close the cassette holder.

When you slide the EJECT button, power is supplied and the cassette holder opens even if the power is turned off. When the cassette holder opens, the power goes off automatically. Slide POWER if you want to continue operation.

34

Using the SLEEP Timer

You can set the unit to turn off automatically after a certain amount of time, after as short as 30 minutes or as long as 5 hours, while viewing a TV program, video playback, or while recording.


Each time you press the SLEEP button, the display will change as follows:

--- → 0:30 → 1:00 → 1:30 → 2:00 2:30
↑
5:00 ← 4:30 ← 4:00 ← 3:30 ← 3:00

Example: To turn off the TV after 2 hours

1 Make sure the clock is set correctly (page 20).
No indication will appear on the screen if the clock is not set.

2 Select the desired time interval by pressing the SLEEP button.

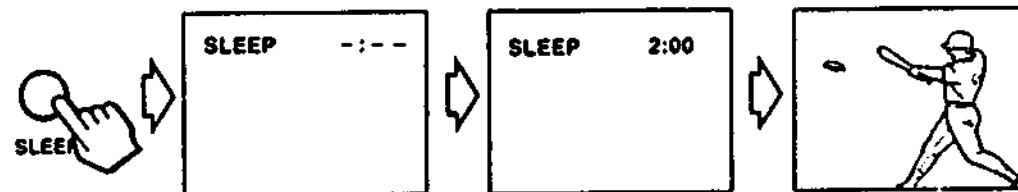


The screen becomes dark.
The normal display will be restored after a few seconds.

The TV will be turned off after 2 hours.
The procedure is the same for tape playback and recording. The tape will stop running after the selected time interval.

To cancel the SLEEP timer


Press the SLEEP button repeatedly until the "---" display appears.
The SLEEP timer can also be canceled by turning off the unit with the POWER switch.

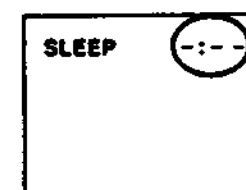

To check the remaining time

Press SLEEP once.
The remaining time is displayed.
The indication will go off after a few seconds.

The unit will be turned off after about 1 hour and 52 minutes.

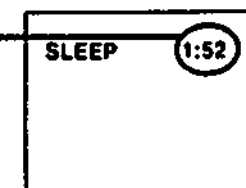

Note

When you use the unit with rechargeable batteries, the unit may turn off before the selected time because the batteries are exhausted.

33

To eject a cassette


Slide the EJECT button. Make sure the tape is not running.

Note

Do not open the cassette holder while the unit is in the vertical position. If you do, the cassette may fall out of the holder and be damaged.

To Prevent Accidental Erasure

When a new recording is made on a previously recorded tape, the previous recording is automatically erased. To protect a recording, slide the red safety tab out to cover the opening.

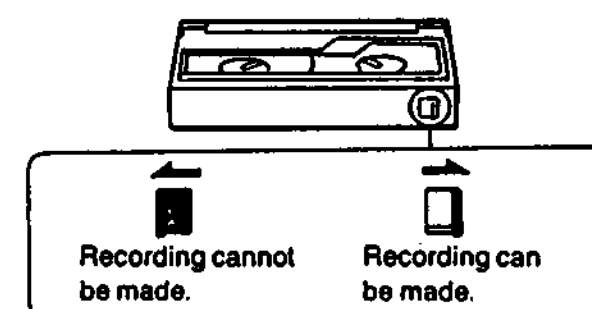

Notes on opening and closing the cassette holder

- Do not insert your finger into the cabinet when the cassette holder is open.
- Be careful not to get your finger caught in the cassette holder.

Notes on the cassette

- Store cassettes in their cases when they are not being used and keep them in an upright position to prevent intrusion of dust and uneven winding.
- Always insert the cassette in the correct position.
- Never insert anything in the small holes on the rear of the cassette.
- Remove the cassette from the video TV recorder when not in use.

35

Recording TV Programs

You can record a TV program while viewing it. For optimal picture and sound quality, connecting an external antenna is recommended. (See page 54.)

- Turn the power on. The POWER lamp lights up. While pressing the green button, slide the POWER switch to the left.
- If the TV program is not displayed, press INPUT SELECT button repeatedly until the TV program is displayed. The display will change as follows: TV program → LINE → CAMERA.

- Select the desired TV channel. (See page 28.) Adjust the telescopic antenna for the best reception. (See page 28.)
- Insert the cassette. (See page 34.)
- Select the recording mode, SP or LP. The recording time of a cassette in the LP mode is twice as long as that in the SP mode. For better picture and sound quality, set to SP.
- Slide the REC switch to the right. Recording starts. For this on-screen display, see page 48.

To stop recording for a moment Press II.

To resume recording Press III again. (If the PAUSE button is not pressed again for about 5 minutes, the pause mode will be released automatically and the unit will stop. This is to protect the video heads and recording will stop.)

To stop recording Press □.

When the tape is recorded to the end
The tape stops automatically, but the unit is not turned off. Turn the power off with the POWER switch.

About the recorded sound
The VOL control setting has no effect on the recording level.

Changing the channel during recording
Set the unit in the recording pause mode and then select another channel. You cannot watch another program while recording.

When recording from the beginning of a tape
Run the video TV recorder for about 15 seconds at the beginning of a cassette before recording. This will prevent missing the starting point or having any previously recorded pictures appear when playing back on another video cassette recorder.

When recording starts
The starting point is marked on the tape automatically and "INDEX MARK" is displayed on the screen. The index mark helps you to find the point where recording begins on a tape.

Recording/playback time
Two tape speeds can be selected with the SP/LP selector. The recording time in the LP mode is twice as long as that in the SP mode. For better picture and sound, recording in the SP mode is recommended. During playback, the mode in which the tape was recorded is selected automatically.

Cassette and their recording time
There are two formats for 8mm video recording, NTSC and PAL. Video cassette tapes are made to correspond to one of these formats. Use NTSC format cassette tapes for this unit. You will find "P6" on the package of NTSC cassettes. In some countries, however, only PAL format cassette tapes with "P5" on the packages are available. If a PAL format cassette is used with this unit, the actual recording time may differ from the recording time indicated on the cassette.

Note
If you record with this unit on a tape that has been recorded in the PCM mode, and if you play back this tape on a VCR with PCM function, the sound may be cut off occasionally. In this case, set the audio monitor switch of the VCR to the standard position.

To stop recording automatically after a certain time — Quick timer
Press the SLEEP button during recording. You can leave the unit function when you go to bed or when you go out, etc. The unit will be turned off automatically at the preset time. For operation, see page 33.

Are you having trouble?

Symptom	Possible cause	Correction
"CASSETTE" indication is displayed when you slide the REC switch.	The safety tab on the cassette is slid out.	Slide the tab in or use a new cassette.
	The tape is at its end.	Rewind the tape or use a new cassette.
	No cassette is inserted.	Insert a cassette.


Using the Tape Counter
During recording or playback, the digits on the counter indicate the actual recording or playback time. By noting the counter reading at a particular point, you can easily find that point later by referring to the tape counter.

- Press DATA SCREEN so that the counter is displayed.
- During recording or playback, press COUNTER RESET at the point you later want to locate. The counter will be set to 0:00:00. Use the counter to find this point later. For your convenience, use both the counter and the index marks.

Notes

- The counter reading and the point on the tape may not correspond exactly. Use the counter as a guide.
- There will be a time lag of several seconds on the counter reading after repeated fast-forward and rewind operations.
- There will also be a time lag of several seconds when a tape recorded in both the LP or SP modes or a tape having a blank portion between the recorded portions is played back.

Recording Stereo Programs

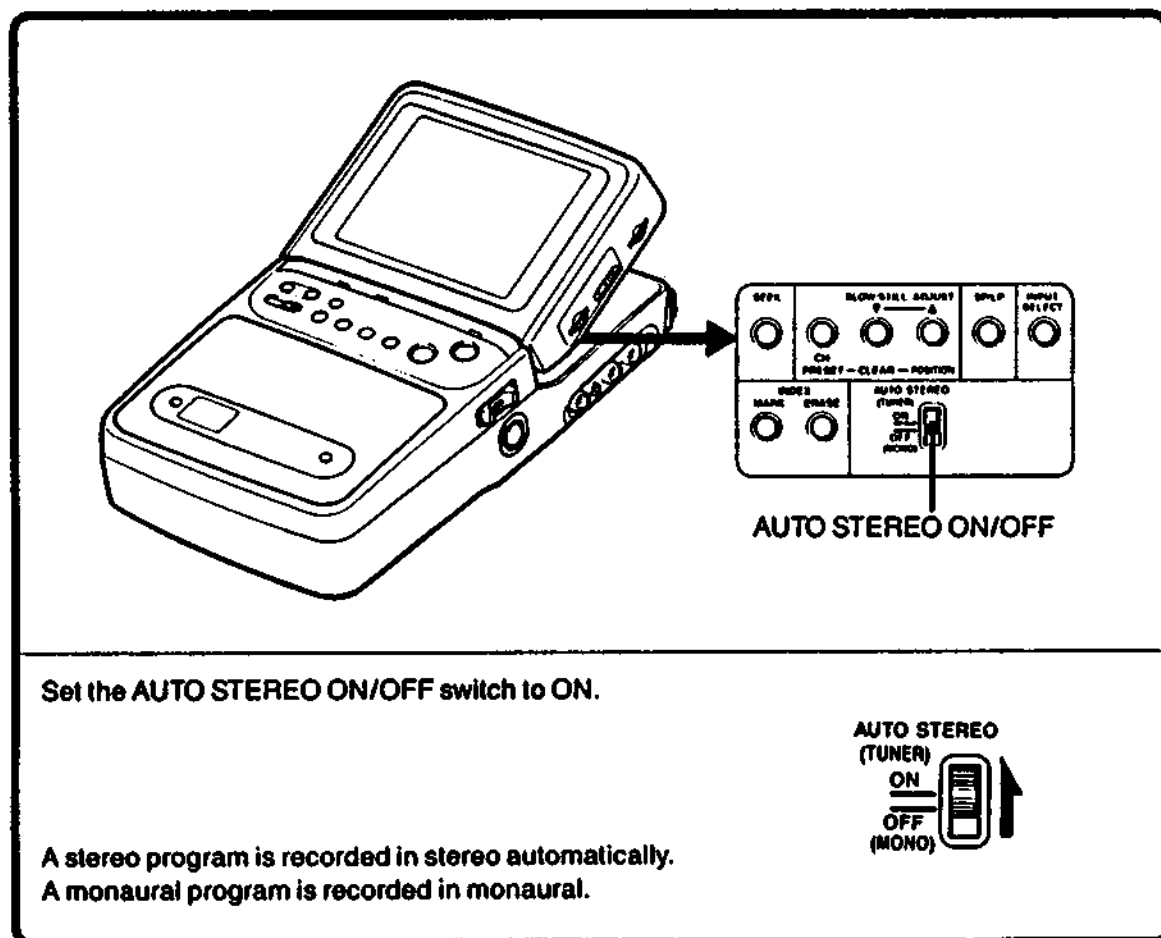


Using the Timer-Activated Recording Feature

By using the timer-activated recording feature, you can program this unit to automatically record a TV program that will be shown within 24 hours of activating the timer. For better recording of picture and sound, use of an external antenna is recommended. See page 54.


Before setting the timer

- Make sure that the power is supplied. (Is the battery pack fully charged? For long recording, use of the AC power source is recommended.)
- Set the clock (see page 20.)
- Insert a cassette (see page 34.) Make sure that the safety tab is slid in.
- Select the recording mode, SP or LP. For better quality picture, set to SP.
- If recording a stereo program, set the AUTO STEREO ON/OFF switch to ON.

Example: To record the program from 8:30 pm to 9:45 pm.

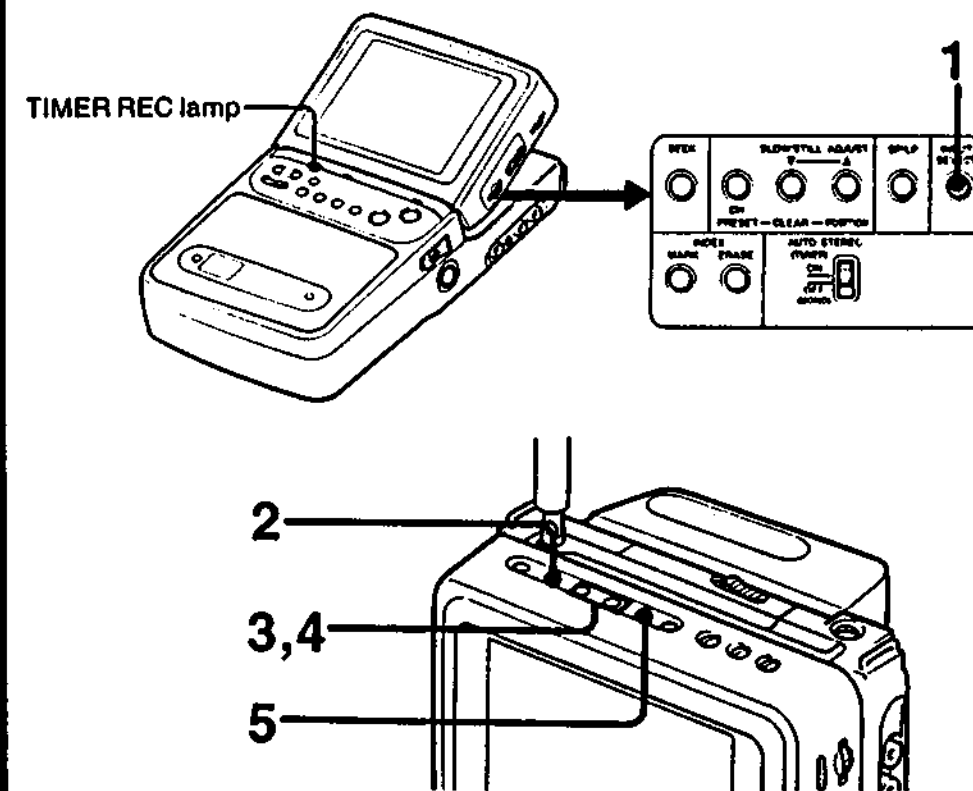

1 Press the INPUT SELECT button repeatedly to select the recording source. For TV program recording, select the desired channel. The input source will be changed as follows:

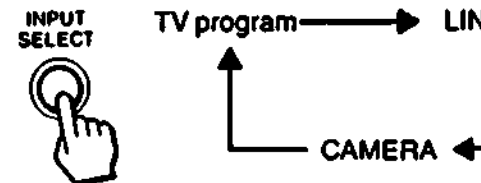

↓ To be Continued

40

41

2 Press the TIMER SET/CHECK button.

The screen becomes dark. Channel 8

Current time: PM 5:20

Starting time: ON TIME PM 8:--

Ending time: OFF TIME ---:--

Recording mode: SP

3 Set the time for the recording to begin.

1) Press the + button to set the hour. Each time you press the + button, the hour indication increases by one. If you keep the button pressed, the indication will increase continuously.

2) Press the NEXT button.

3) Press the + button to set the minutes. Each time you press the + button, the minutes indication increases by one. If you keep the button pressed, the indication will increase continuously.


4) Press the NEXT button. The starting time is now set.

4 Set the time for the recording to stop.

1) Set the hour with the + button.




2) Press the NEXT button.

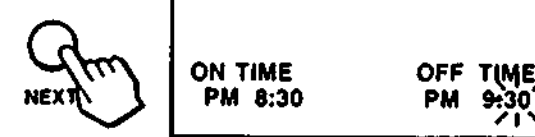

3) Set the minute with the + button.




4) Press the NEXT button. The ending time is now set. The on-screen display disappears.

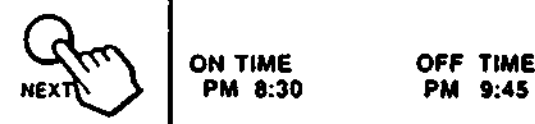

5 Press the TIMER REC ON/OFF button.

The power goes off and the TIMER REC lamp lights up (timer recording standby mode). The recording starts automatically at the preset start time and the power goes off at the preset end time.



Notes

- During timer recording, both picture and sound will be muted. To listen to the sound and watch the picture, press the LCD ON/OFF button.
- When you press the TIMER REC button, the "CASSETTE" indication will appear if the safety tab on the cassette is slid out or if no cassette is inserted.

42

43

Playing Back the Recorded Tapes

To stop the timer recording

Press the TIMER REC ON/OFF button again.
The TIMER REC lamp goes out.

To correct the timer setting before completing the setting

Turn the power off, then on again.
Repeat steps from 1 to 5.

To check the setting

Press the TIMER SET/CHECK button while the TIMER REC lamp is lit.
The power is turned on and the starting and ending time is displayed for a few seconds.



To change the timer setting after completing the setting

Press the TIMER REC ON/OFF button to cancel the timer recording mode, then turn the unit on and set the timer again.

To set the timer while the tape is running

Only the starting and ending time can be set during playback or recording. After stopping the tape, set the recording mode (SP/LP) and channel, and then press the TIMER REC ON/OFF button.

If a power interruption occurs when the unit is connected to the AC power source

Recording stops. Recording starts again after the power is resupplied. When a power interruption occurs during the timer recording standby mode and the power is resupplied, the timer settings will not be affected as long as the lithium battery is installed.

To record to the end of the tape

Set the starting and ending time the same. When the tape reaches the end, recording will stop and the power goes off.

44

To rewind the tape and play it back automatically — Auto play

While pressing the ◀◀ button, press the ▶ button.
The "AUTO PLAY" indication appears.

To mute the picture

Press the LCD ON/OFF button. To restore the picture, press the LCD ON/OFF button again.

To adjust the picture

Adjust the BRIGHT, COLOR, and HUE controls (see page 32.)

To stop playback at the desired time

Use the SLEEP function.
The unit goes off at the preset time. (see page 33.)

When a tape recorded in stereo mode is played back

The "(S)" indication appears and the STEREO lamp lights up.
To listen to the stereo sound, use the stereo earphones.

46

- 1 Turn the power on. The POWER lamp lights up. While pressing the green button, slide the POWER switch to the left.
- 2 Insert a recorded tape (see page 34.)
- 3 Press ▶ to start playback.
- 4 Adjust the volume and the brightness.

To decrease volume To increase volume For less brightness For more brightness

To stop playback Press the □ button.
To rewind the tape Press the ◀◀ button.
To advance the tape Press the ▶▶ button.

45


Various Playback Modes — CRYSTAL-CLEAR still/slow/picture search on LCD		
To stop the tape for a moment — Still picture	During playback STILL	To resume normal playback, press ▶. These modes will be automatically released and playback will resume after the following time intervals: Still: 5 minutes Slow*: 1 minutes.
To view the slow playback picture	During playback SLOW 1/5	
To locate a particular point while viewing the picture — Picture search	During playback ◀◀	
	During playback ▶▶	
To view the picture at high speed — FR picture search	While rewinding ◀◀	When you release the button, the unit will return to the previous mode.
	While fast forwarding ▶▶	

* After normal playback is resumed, the ▶▶ button will not function for about 5 seconds.

If streaks appear in the still and slow playback mode

Adjust the picture as follows:

- 1 Play back the slow motion picture.
- 2 Press the SLOW/STILL ADJUST ▼, ▲ buttons to adjust the picture so that the noise does not appear.

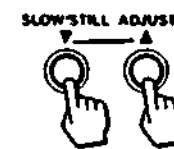

To adjust the upper portion of the picture, press the ▲ button. To adjust the lower portion of the picture, press the ▼ button. The still picture is adjusted at the same time.

When the playback picture is viewed on another TV or monitor



The horizontal bands appear in the still, slow, picture search and FR picture search modes. Noise appears in the still and slow modes. To reduce the horizontal bands, press LCD ON/OFF button to mute the picture of this unit.




Notes on the CRYSTAL-CLEAR still/slow/picture search on LCD
Noiseless pictures can be viewed in the still, slow and picture search modes, owing to the characteristics of the liquid crystal.

47

Using Indexes — to Find the Desired Scene Quickly

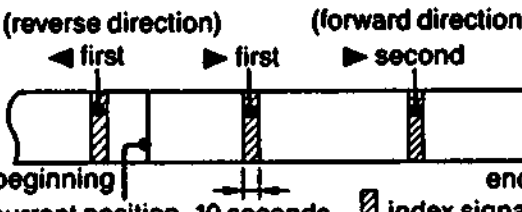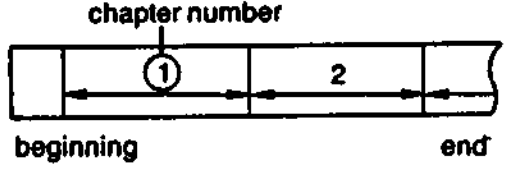
An index can be recorded on the tape. Using the index, you can find the desired scene quickly. There are two kinds of indexes as follows:

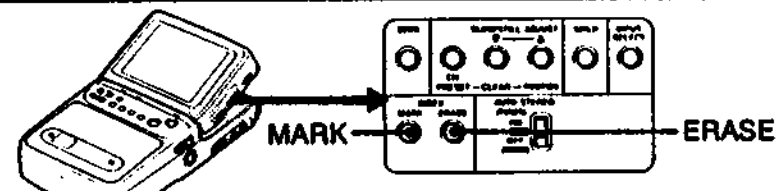A Conventional Index	B Prerecorded index for software
<p>An index on your video tape which you can enter and erase during recording or playback operation. You can find the desired scene by designating the location of the desired index. (e.g. second index in the forward direction, etc.)</p> <p>(reverse direction) (forward direction)</p> 	<p>An index that is already recorded on the commercially available video software. The indexes are already recorded, and you cannot enter or erase them. Each index has the chapter number so you can search the desired part by designating the number.</p> 

To Enter an Index on a Tape	
	
To enter an index during recording	To enter an index during playback
<p>When you start recording with the REC switch or when timer-recording is started, the index signal is automatically recorded for a few seconds*. (Indexes are not recorded when recording with a camera.)</p>  <p>To enter an index during the recording or recording pause mode, press the MARK button. The index signal is recorded for a few seconds*. When the MARK button is pressed during the recording pause mode, the index signal is recorded after you start recording again.</p>	<p>During the playback or playback pause mode, press the MARK button.</p>  <p>The index signal is recorded for a few seconds*. A black band appears on the screen, but is not recorded. In this case, no sound is heard. When the MARK button is pressed during the playback pause mode, the index signal is recorded after you resume the playback operation.</p>

* For SP mode: about 10 seconds
For LP mode: about 18 seconds

48 **Note** Leave at least two minutes between each index. If an interval is too short, you may not be able to find or scan indexes correctly.

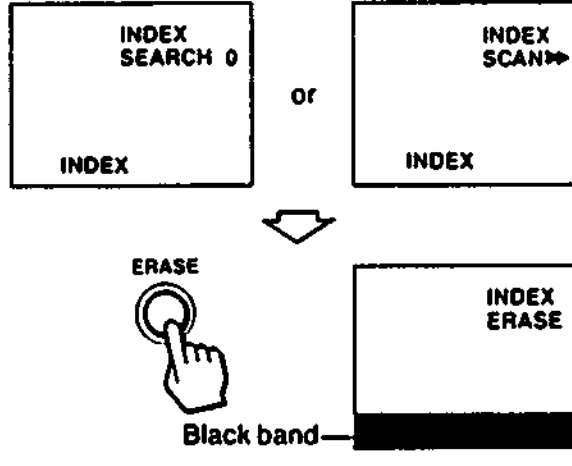To Erase an Index	
<p>1 Search for the index to be erased. (See page 50, 52).</p>	
<p>2 Press the ERASE button. After playback starts, press the button while the following indications on the screen.</p>	
	
<p>When you press the ERASE button, the tape is rewound to the beginning of the index signal, then the index signal is erased. On the screen, the indication "INDEX ERASE" and the black band appear.</p>	







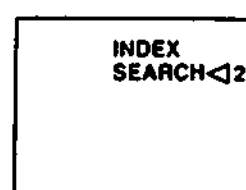

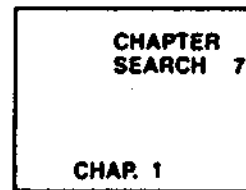
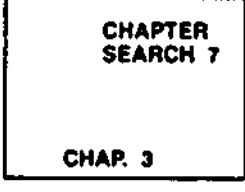
Note Do not press any of the tape transport buttons while entering/erasing an index. If it is done, entering/erasing will not be completed.

- Notes on the Index signal**
- You cannot enter an index signal on a commercially available video software or on a cassette whose safety tab is slid out.
 - You cannot erase an index signal which is prerecorded on a commercially available video software.
 - The index signal cannot be erased in the following cases:
 - When the index signal is recorded on a video camera recorder or other VCRs, and you wish to erase it on this unit.
 - When the index signal is recorded on this unit, and you wish to erase it on a video camera recorder or other VCRs.
 - To erase the index signal completely, use the equipment you used to enter the index signal.

49

To Find a Desired Index — Index Search

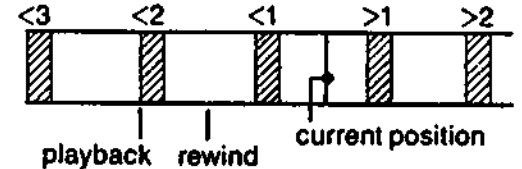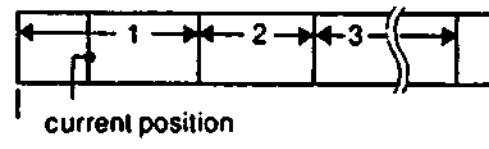When you know the location or chapter number of the desired index, you can designate a number to find the desired part of the tape.

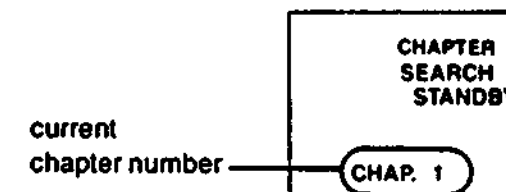		A Conventional Index	B Prerecorded index for software
<p>Example: designating the second index in the reverse direction</p> 		<p>Example: designating chapter number 7</p> 	
<p>1 Press the INDEX MODE button once during playback or the playback pause mode. The unit enters the index standby mode.</p> 			
<p>2 Press INDEX -/+ button repeatedly until the desired index number appears on the screen. The tape is rewound or fast forwarded to the designated index number position, then playback starts.</p> 		<p>Determine the number of indexes between the current position and the desired index. Select the appropriate number. Press + for > (forward) direction, - for < (reverse) direction.</p>   <p>When playback starts, the indication will disappear after about 10 seconds.</p>	<p>Select the chapter number referring to the number on the jacket of the cassette tape. Press + for a higher number, and - for a lower number.</p>   <p>When playback starts, the indication disappears after about 10 seconds.</p>

To correct the chapter or index number
When the "CHAP" or "INDEX" indications are displayed, you can correct the number with the INDEX -/+ button.

Note Even with a video software which has prerecorded indexes, the indication is "INDEX SEARCH" until the tape is played back.


Index search does not function if an interval between indexes is less than two minutes. Leave an interval of at least two minutes between indexes.

50

51

To Scan Each Index Sequentially

The beginning of each index/chapter is played back for about 10 seconds sequentially. Start playback at the desired index/chapter.

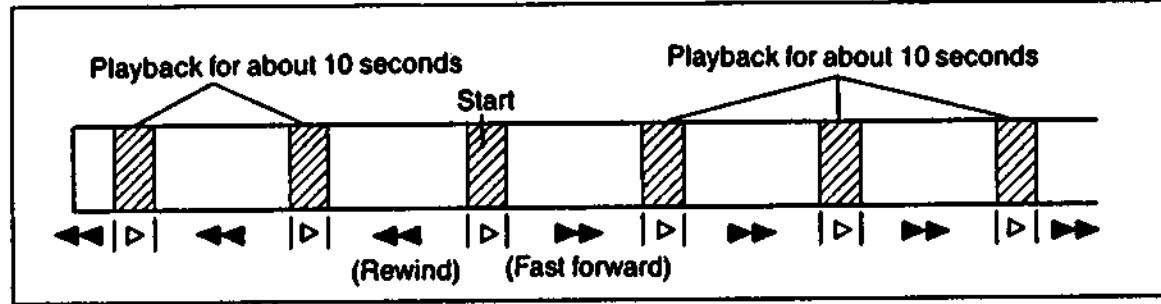

	<p>1 During playback or the playback pause mode, press the INDEX MODE button twice. The unit goes into the index standby mode.</p>	<p>A Conventional Index</p>	<p>B Prerecorded index for software</p>
	<p>2 Press INDEX +/- button. Each chapter/index is played back for about 10 seconds sequentially. Press + for >>> direction, and press - for <<< direction.</p>		
	<p>3 Press > button at the desired point.</p>		


To correct the direction of index scan
Press **INDEX +/-** during index scanning.

If you do not press the **>** button during index scanning, the tape will be rewound or fast forwarded to the end of the tape.

Index scan does not function if an interval between indexes is less than two minutes. Leave an interval of at least two minutes between indexes.

Connecting an Outdoor Antenna and CATV cable

If you cannot obtain satisfactory reception with the telescopic antenna, or when recording TV programs, use an outdoor antenna. For viewing CATV channels, connect the CATV cable.

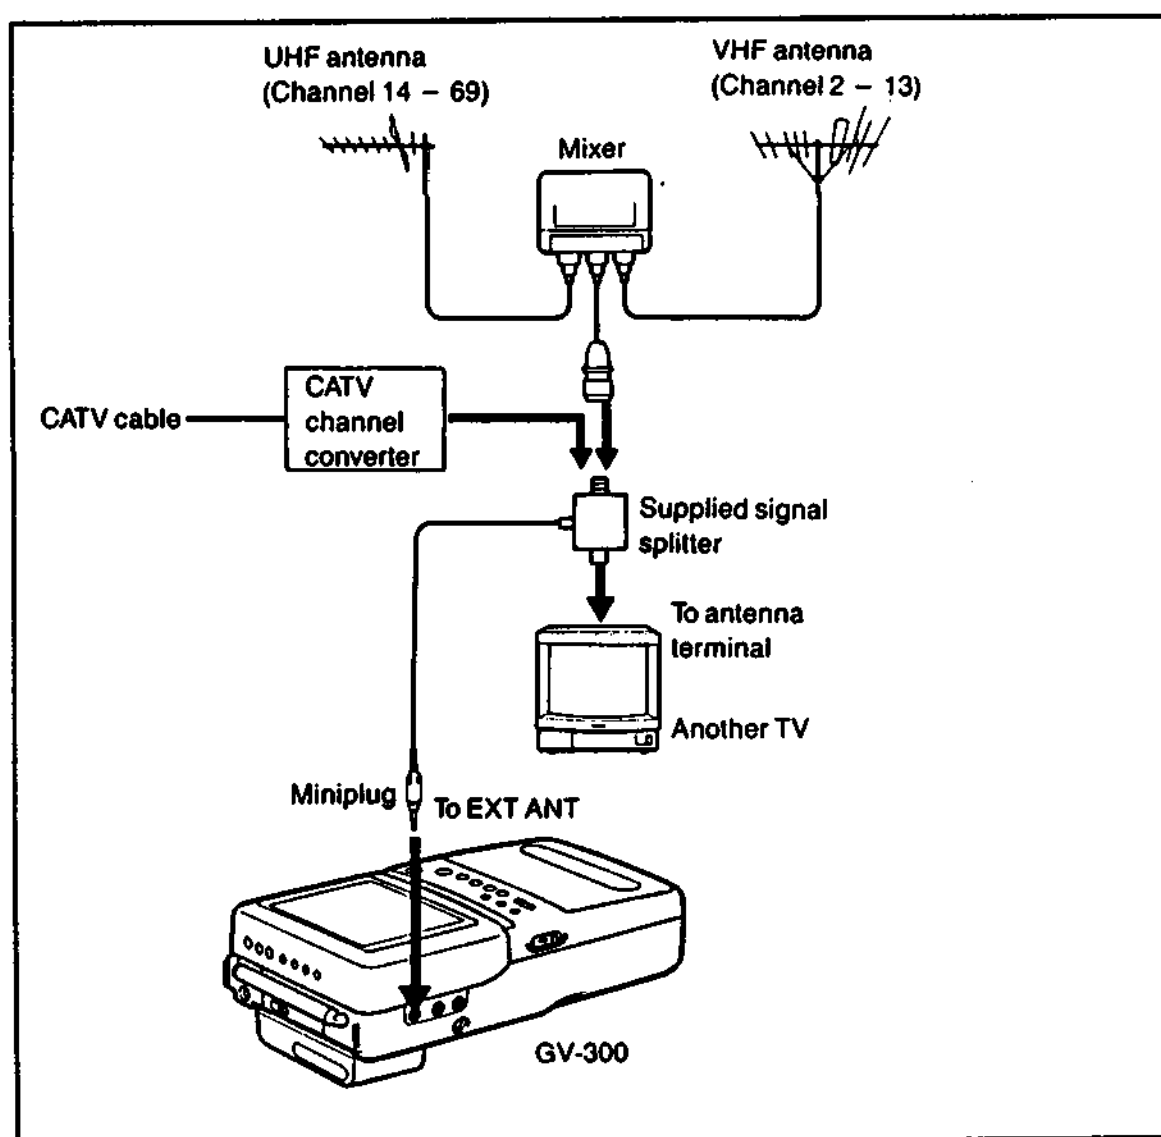

For connection, you can also use the antenna connector EAC-40, the signal splitter EAC-45, the antenna cord CCD-6M, and CCD-2 (not supplied.)

Notes

- Before connecting the antennas, turn off the unit.
- Make connections firmly. A loose connection may cause a distorted picture.
- When using the unit in a car, use the optional VCA-3W or VCA-4E car antenna, etc. For details, refer to the instruction manual of the car antenna.

Connecting other VCRs or Monitors


Notes on the VIDEO/AUDIO IN/OUT Jacks

The VIDEO/AUDIO IN/OUT jacks are automatically set to the input or output jacks according to the operating condition of the unit.

Refer to the following diagram:

Mode selected with INPUT SELECTION button	Stop or recording mode	Playback mode
TUNER (TV program)	output	output
LINE *	input	output
CAMERA	output	output

* When the LINE mode is selected with INPUT SELECT, the INPUT or OUTPUT indication appears with LINE.

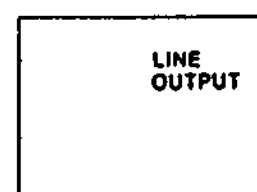


Note

When the LINE OUT jacks of other equipment are connected to the VIDEO/AUDIO IN/OUT jacks on this unit, and signals are output from the jacks of the other equipment to this unit, the picture and sound of the other equipment may be distorted. In such case, turn off the power of this unit or disconnect the other equipment.

Camera Recording — Controlling from the Camera

By connecting an optional Video Camera CCD-G1, recording controlled from the camera is possible. You can hold the camera and keep this unit in a carrying case while recording. For details, refer to the instruction manual of the video camera.

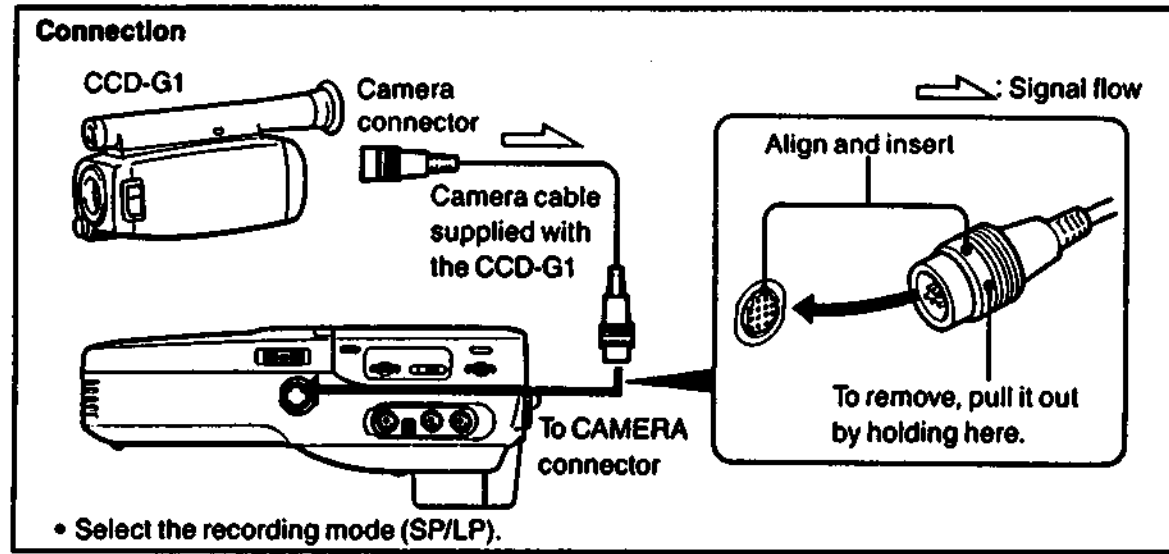

Note
The sound will be recorded in monaural.

Recording with CCD-G1

1 Insert the cassette.

2 Set the POWER switch of this unit to CAMERA. The power of this unit is turned on, and the POWER, STEREO lamp lights up. This unit automatically becomes in the recording pause mode. To have the picture on the screen of this unit, press the LCD ON/OFF button.



Note
Be sure that the POWER lamp lights up. If it does not, turn off the unit once by sliding the POWER switch to the left, then reset the switch to the CAMERA position.

While pressing the green button, slide to the right.

3 Start recording.
Press the REC START/STOP button of the camera.

To index the recording starting point or the desired point, press the MARK button of this unit (see page 48.)

To stop recording for a moment
Press the REC START/STOP button. Press it again to start recording.

To stop recording
Turn the power off of this unit by setting the POWER switch to the center position.

Playing back the newly recorded pictures

1 Turn the power on of this unit. The POWER lamp lights up.

While pressing the green button, slide to the left.



2 Press << button of this unit to rewind the tape.

3 Press □ button of this unit.

4 Press >> button of this unit.

Caution
Do not operate this unit for a long time when it is in a carrying case like the one supplied. Internal heat build-up may occur which can cause this unit to malfunction.


When the POWER switch is set to CAMERA, the operable buttons are: POWER switch, EJECT button, LCD ON/OFF button, DATA SCREEN button, COUNTER RESET button, INDEX mark button, and SP/LP button.

56

57

Camera Recording — Controlling from This Unit

By connecting the optional video camera CCD-G1, it is possible to record with this unit while using the camera in a distant place. For details, refer to the instruction manual of the video camera.

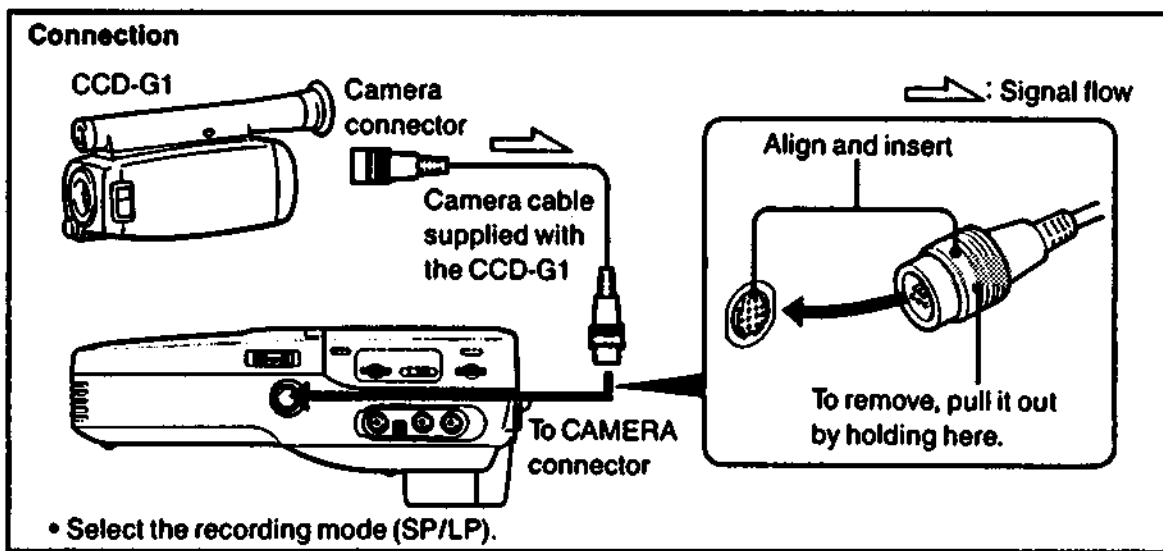

Note
The sound will be recorded in monaural.

Recording

1 Turn the power on of this unit. The POWER lamp lights up.

While pressing the green button, slide the POWER switch to the left.



2 Press the INPUT SELECT button of this unit to display "CAMERA" on the screen. The STEREO lamp lights up. The picture to be recorded appears on the screen. If the focus or color need adjustments, adjust them on the camera. To have the picture disappear, press the LCD ON/OFF button.



3 Slide the REC switch of this unit. Recording starts.



To stop recording for a moment
Press ■ button of this unit.

To stop recording
Press □ button of this unit.

Playing back the newly recorded pictures

1 Press <<< button to rewind the tape.

2 Press □ button.

3 Press >>> button.

Recording with a camera from a distant place

Use the optional pan tilter HVR-200 for camera recording from a distant place, a maximum distance of 5m.

To listen to the sound that is being recorded
While recording, no sound is heard from the speaker. Connect the supplied stereo earphones to PHONES jack to listen to the sound.


To use a camera with the timer-activated recording feature
This feature allows you to record a desired activity at a designated time, for example, a train passing by at a certain time. To set the timer, see page 41. The recording will start automatically at the time you set.

58

59

Using This Unit as a 8mm Video Camera Recorder Monitor

With the following connection, you can view pictures being recorded by the connected video camera recorder. Also you can view the playback pictures from the video camera recorder on this unit.

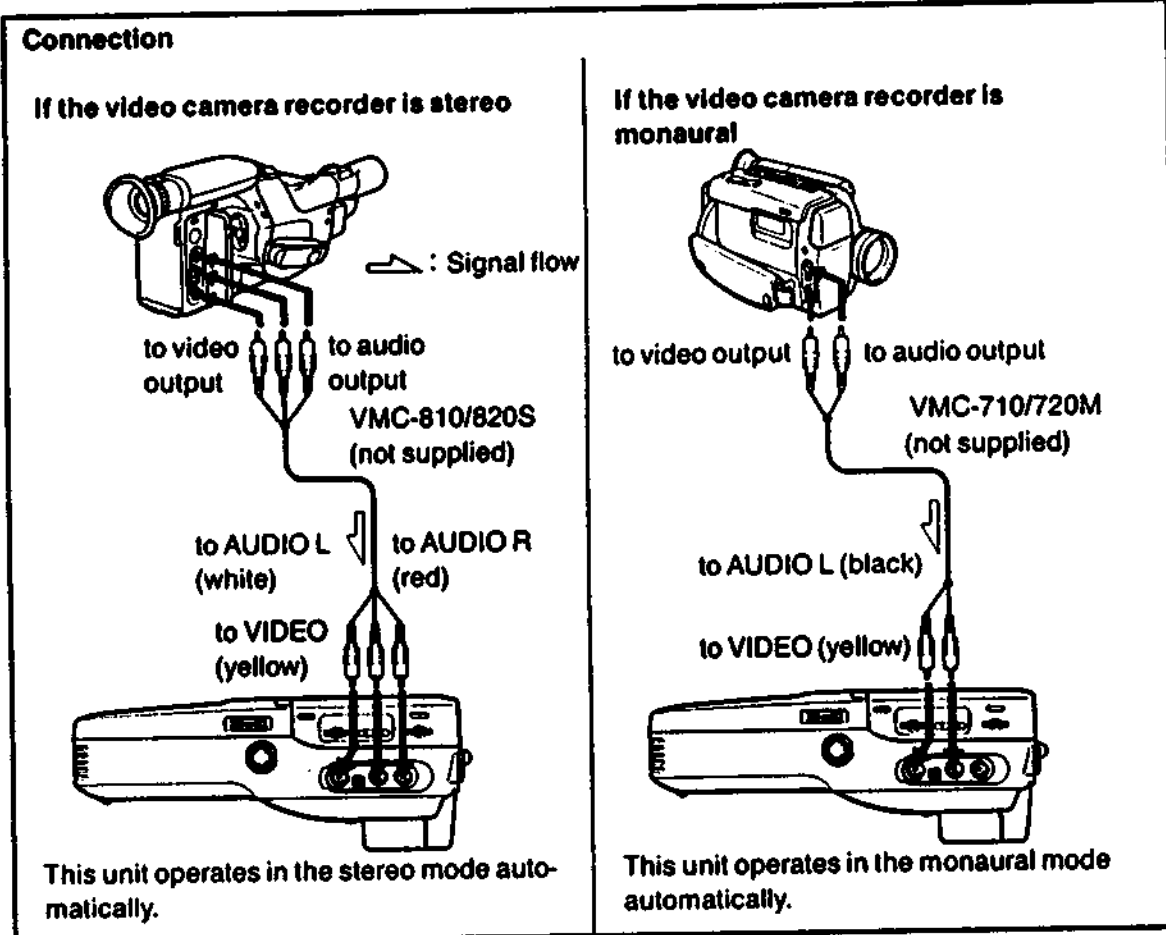


Operation

- Turn the power on. The POWER lamp lights up. While pressing the green button, slide the POWER switch to the left.
- Press the INPUT SELECT button to display "LINE" on the screen.
- Operate the video camera recorder.

60

When connecting both a video camera recorder and a video camera


Set each unit to different angles, then, using the INPUT SELECT button, switch the picture to be recorded on this unit.

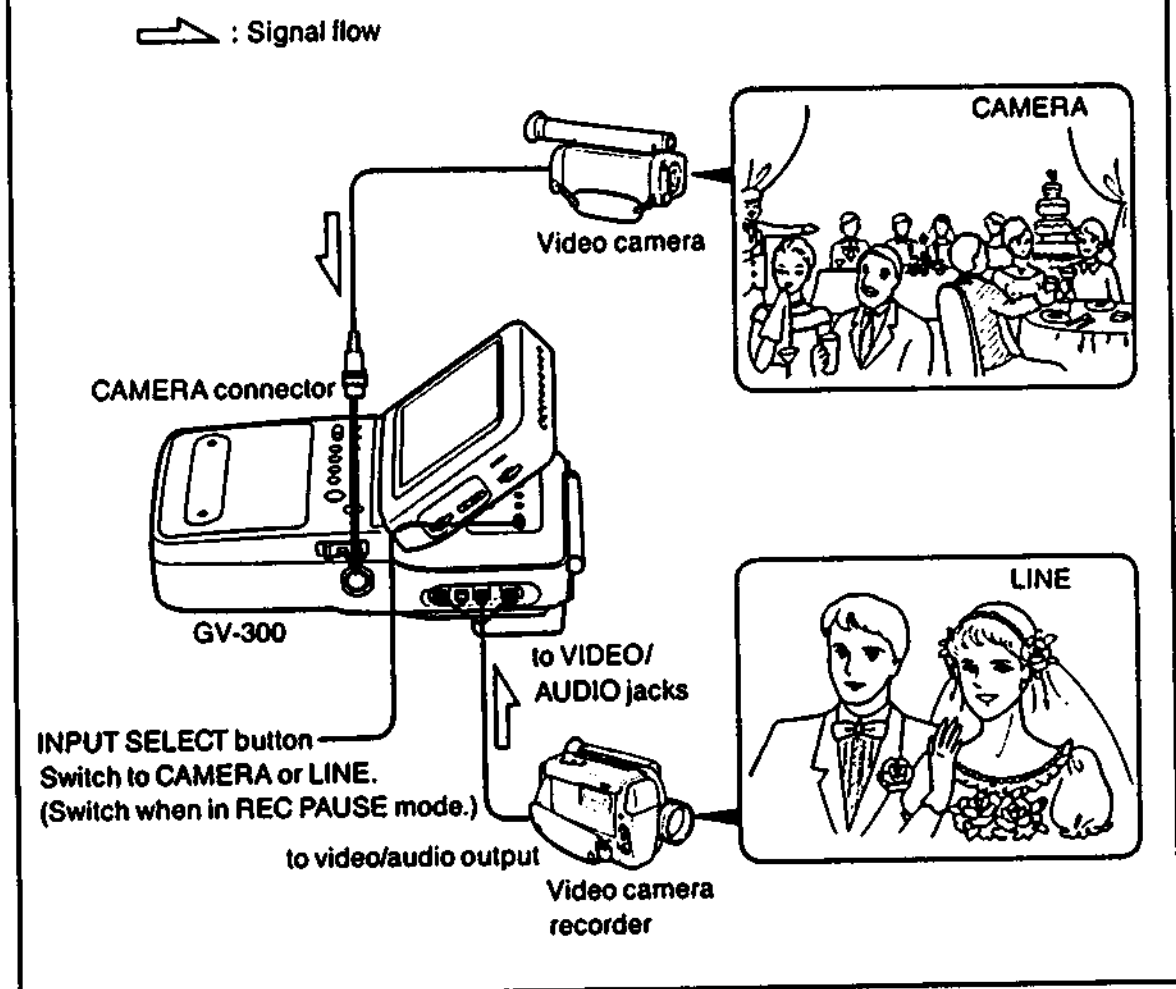

61

To Connect Another TV or Color Monitor

If you connect this unit to another TV or color monitor, you can view the playback pictures or the selected TV program on a larger screen and listen to the dynamic sound. In this case, mute the picture of GV-300 by pressing the LCD ON/OFF button to reduce horizontal bands and noise in the picture of the TV or color monitor during various playback modes.

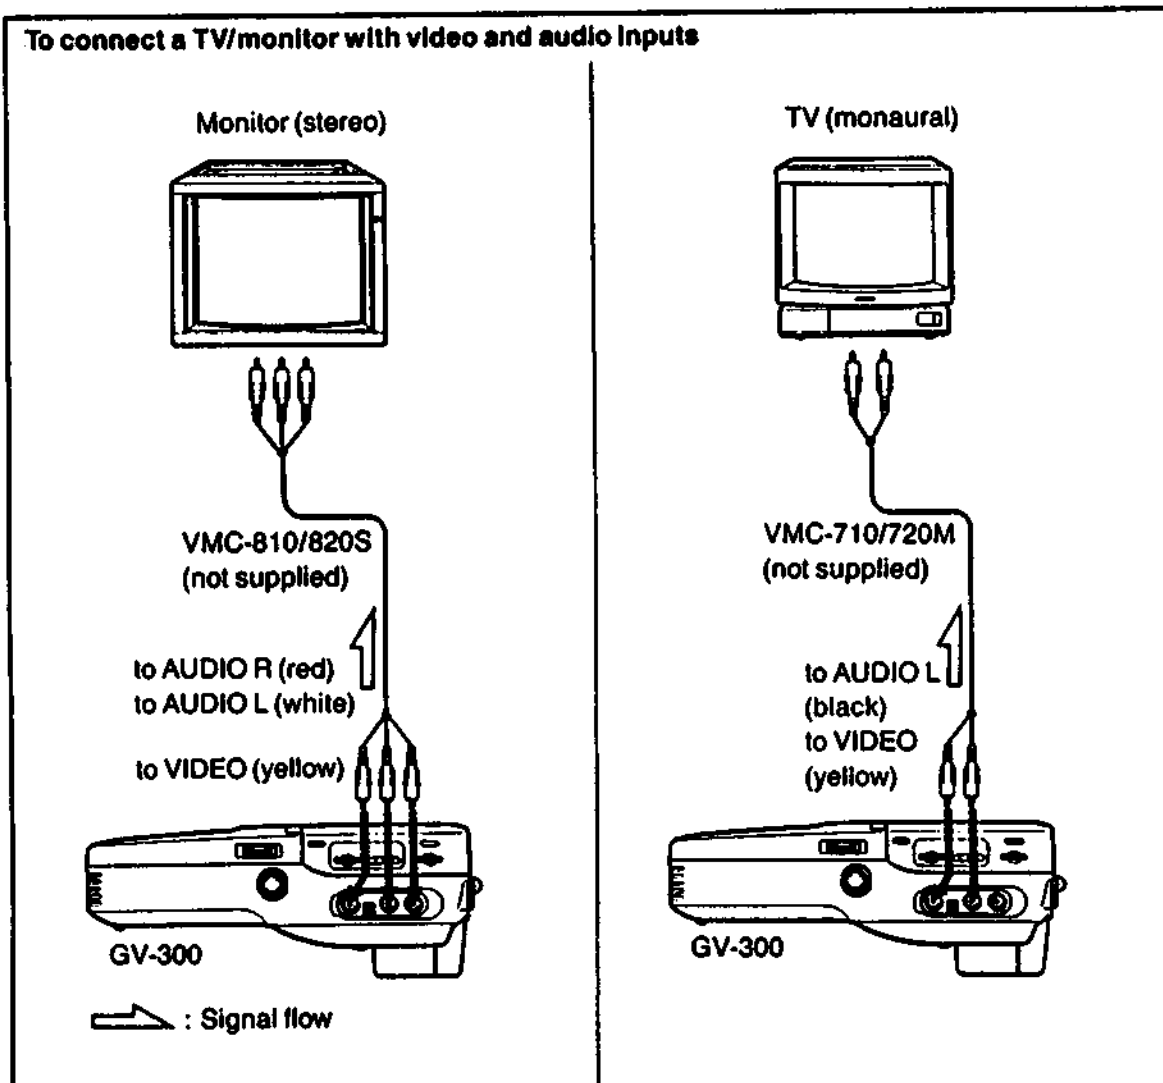


Note
When connecting only to the AUDIO L jack, the L and R sounds are automatically mixed and always output is monaural.

62

To connect a TV without video and audio inputs

Use the RFU-89UCKA RFU kit (not supplied).

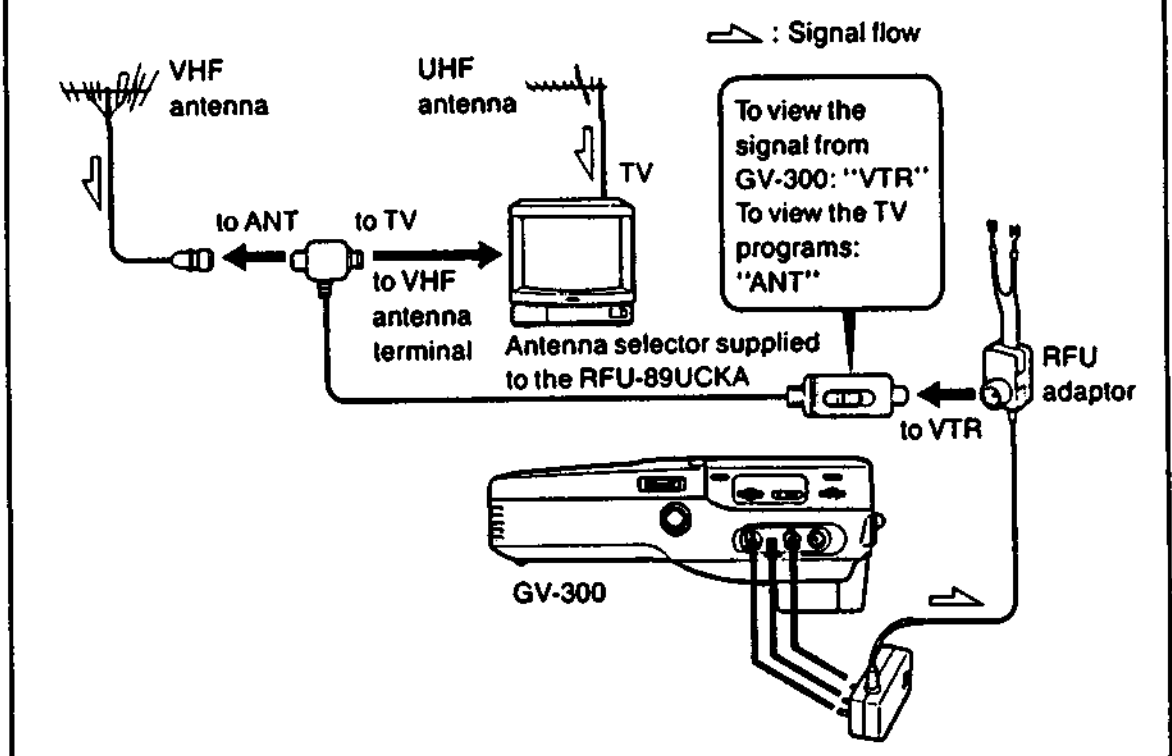

Note on the RFU-89UCKA RFU kit


The RFU-89UCKA includes the following accessories:

- RFU adaptor (1)
- Antenna selector (1)
- Antenna selector adaptor (1)

Channel for VCR

To view the playback picture of this unit, set the antenna selector of the RFU kit to channel 3 or 4, whichever channel is not active in your area, and select the same channel on the connected TV.

To connect the RFU adaptor

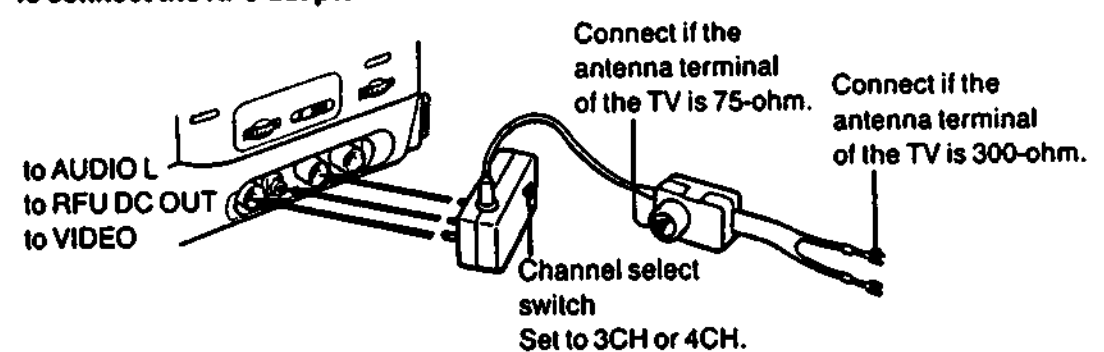


63

Editing Tapes


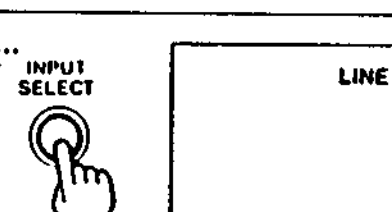

You can edit tapes by connecting when another VCR (8mm, Beta or VHS format) with video/audio input.

To Edit from Another VCR to This Unit

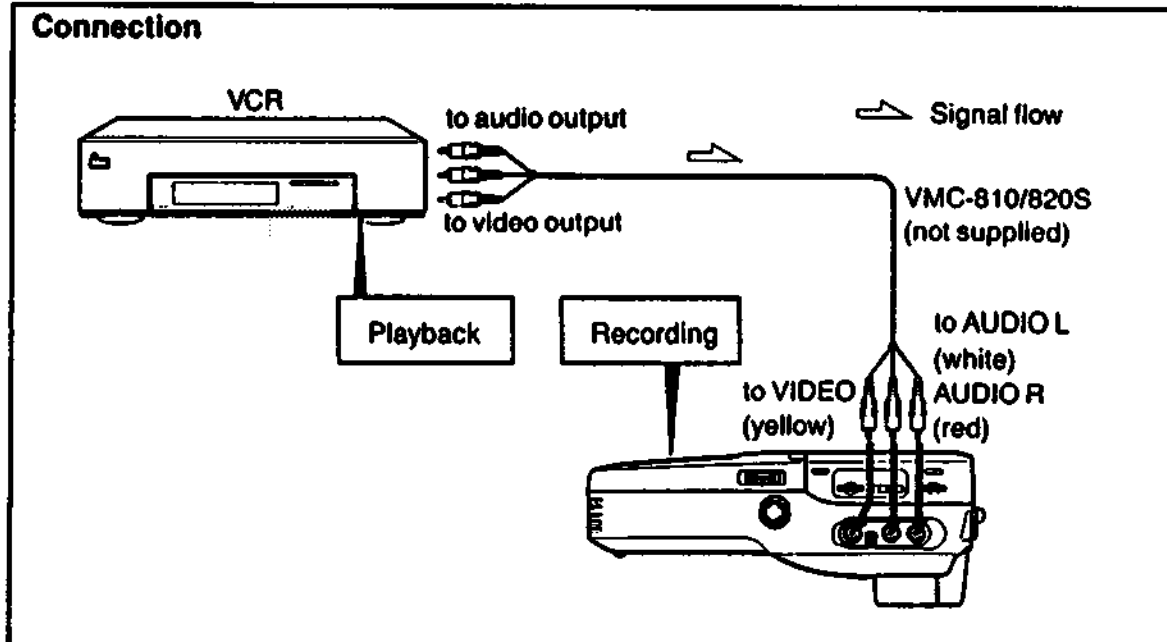

If the VCR to be connected has a monaural audio output only, use a commercially available connecting cord such as the VMC-910/920M. In this case, connect to the AUDIO L and VIDEO jacks.

Operation


- Turn the power on. The POWER lamp illuminates. While pressing green button, slide the POWER switch to the left. 
- Insert the cassette.
- Press the INPUT SELECT button so that the "LINE" indication appears. 
- Select the recording mode (SP/LP) by pressing the SP/LP button. 
- Play back the tape on another VCR and press the II PAUSE button at the point you want to start playing back.
- Set this unit in the recording pause mode.
- Release the II PAUSE buttons on both units.
- After editing is completed, press the □ STOP buttons on both units to stop recording.

64

65


To edit from the VCR equipped with the CONTROL S output

Connect the CONTROL S input jack on this unit and the CONTROL S output jack on the other equipment. Playback/pause on the other VCR and recording/pause on this unit can be operated simultaneously.

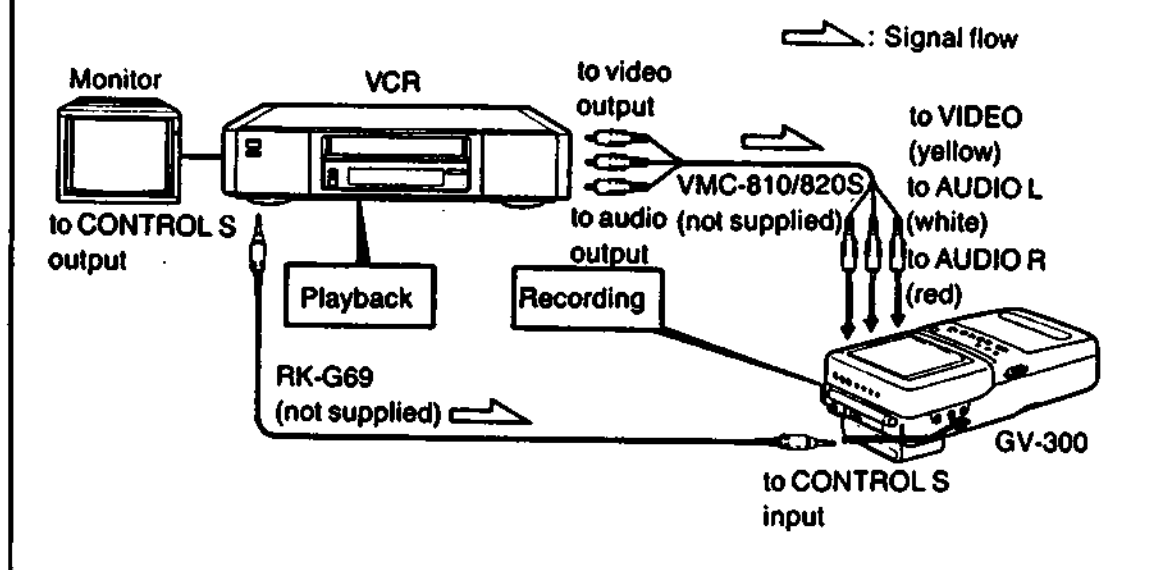


To edit with the editing controller

By connecting the editing controller, the recorder and player can be operated easily with the controller.

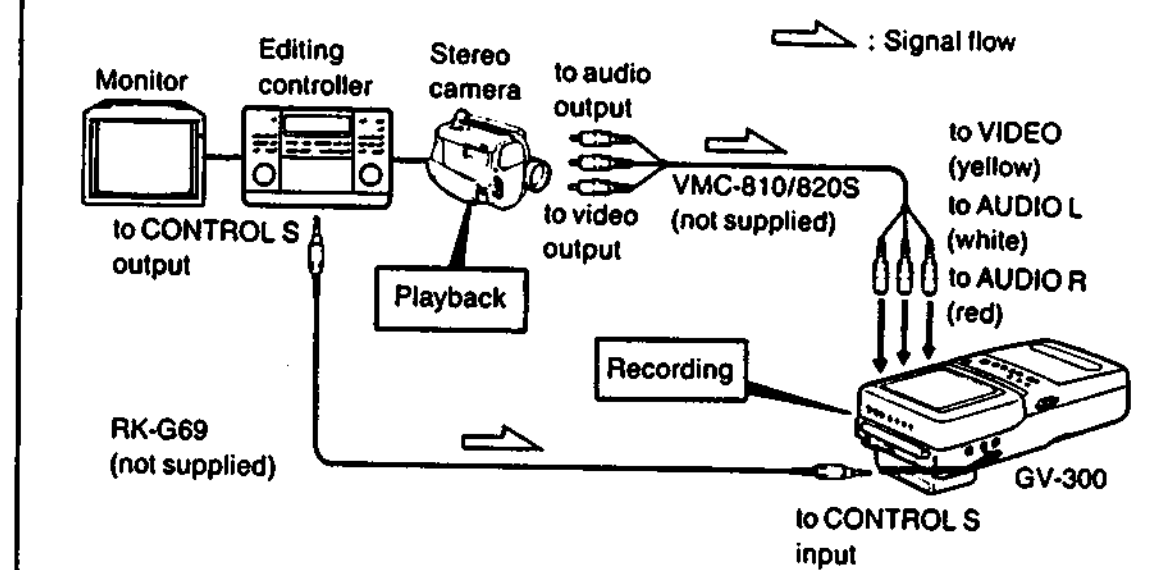

66

67

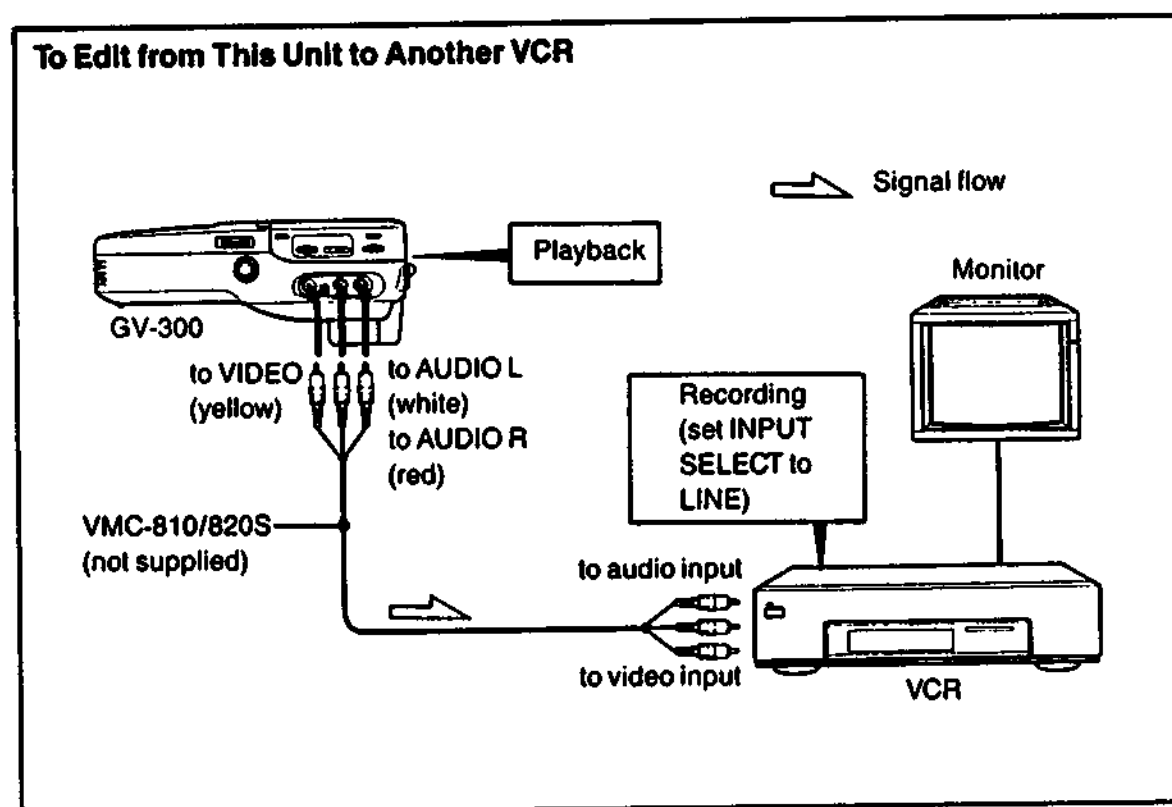

If the VCR to be connected has a monaural audio input only, use a commercially available connecting cord such as VMC-710/720M. In this case, connect to the AUDIO L and VIDEO jacks.

Operation

- Operate the unit on 6.0 V (battery pack)/7.5 V (AC power adaptor)/6.5 V (DC pack DCP-77).
- For DC or AC operation, use the accessories supplied or recommended in this manual.
- Should any solid object or liquid fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Avoid rough handling or mechanical shock to the unit.
- Do not apply excessive force to the LCD.
- Remove and store video cassettes after recording or playback.
- Do not wrap up the unit and operate it because heat may build up internally.
- Avoid using and storing the recorder in the following locations:
 - Locations susceptible to vibration
 - Locations exposed to strong magnetic fields
 - Locations near TV or radio transmitters where strong radio waves are generated
- Do not place the unit on the sand.

Care

- When the unit is not used for a long period of time, periodically turn on the power, operate the recorder and play back a tape for about three minutes.
- Clean the recorder body with a dry, soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.

Maintenance

Video Head Cleaning


To ensure a clear picture, clean the video heads periodically. If playback pictures are noisy or hardly visible, the video heads may be contaminated. In this case, clean the video heads with the Sony V8-25CLH cleaning cassette (not supplied) according to the instructions.

Caution

Do not use commercially available wet-type cleaning cassettes. They may damage the video heads.

Note

If the V8-25CLH cleaning cassette is not available in your area, consult your Sony service facility.

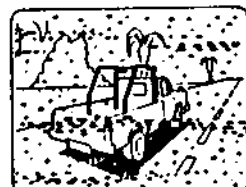

If the Video Head Is Damaged

When playback pictures are not clear even after using the cleaning cassette, the video head may be damaged. In this case, the video head needs to be replaced with a new one. Consult your Sony service facility for replacing the video head.

Note on the built-in lighting system

A built-in lighting system is assembled inside the liquid crystal screen of this unit. The life of the small fluorescent tube used for this built-in lighting system runs out over a period of use. If the lamp becomes dimmer or goes off immediately after you turn it on, even with new batteries, replace the lamp with a new one. To replace the lamp, consult the dealer where you purchased the unit, or a Sony service facility. The expected life of the small fluorescent tube is about three years if this unit is used for an hour each day. When you use this unit in a cold environment, the fluorescent tube will be dimmer at first. As soon as the temperature of the tube rises, it will regain its original brightness.

Note on the LCD

- Do not push the display forcibly.
- Do not operate the unit where the temperature is below 0°C (32°F) or above 40°C (104°F).
- If the unit is used in a cold place, a residual image may appear on the screen. This is not a malfunction of the unit.
- Constant bright points of light (red, blue, or green) may appear on the screen. This is not a malfunction of the unit.

Notes on Moisture Condensation


If this unit is brought directly from a cold place to a warm place, moisture may condense inside the unit or on the surface of the tape. If this happens, the tape may stick to the head drum, damaging both the tape and the unit. Although this unit is furnished with a moisture sensor to prevent possible damage from condensation, do not leave the tape inside the unit.

If moisture condenses inside the unit

The "DEW" indication appears on the screen.

In this case, no button will function except the EJECT button. (However, if you have been watching a TV program, you can continue to do so.)

Eject the cassette, turn off the unit and leave the cassette holder open at least for an hour.

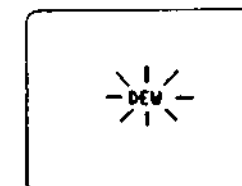

The unit can be used again if the DEW indication does not appear when one of the tape transport buttons is pressed.

Using Your Video TV Recorder Abroad

If you prepare fully charged battery packs and the supplied AC power adaptor (which can be used in all areas with a local power supply of 100 V-240 V), you can use your recorder in any country.












Each country has special TV color broadcast and electricity systems. This unit is designed to record and play back using the NTSC color video signals. Recording and playback of video sources based on other color systems cannot be guaranteed.

NTSC system countries

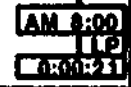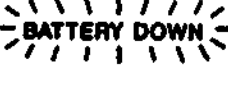Bahama Islands, Canada, Central America, Japan, Korea, Mexico, Taiwan, the Phillipines, U.S.A., etc.


List of On-Screen Displays

The following indications appear on the screen indicating the operation condition and cautions.


Indication	Meaning (reference page)	Indication	Meaning
	Channel (page 28)		Caution for the cassette (page 38)
	Current time Recording mode (page 37) Counter (page 39)		Battery is exhausted (page 14)
	Stereo (page 31)		Moisture condensation (page 71)
	Index (page 48)		Input from VIDEO/AUDIO jack (page 55)
	Index operation (page 48 ~ 53)		Input from CAMERA connector (page 59)
	Tape transport operation (page 47)		

SECTION 2 DISASSEMBLY


2-1. REMOVAL OF CABINET (UPPER) ASSY

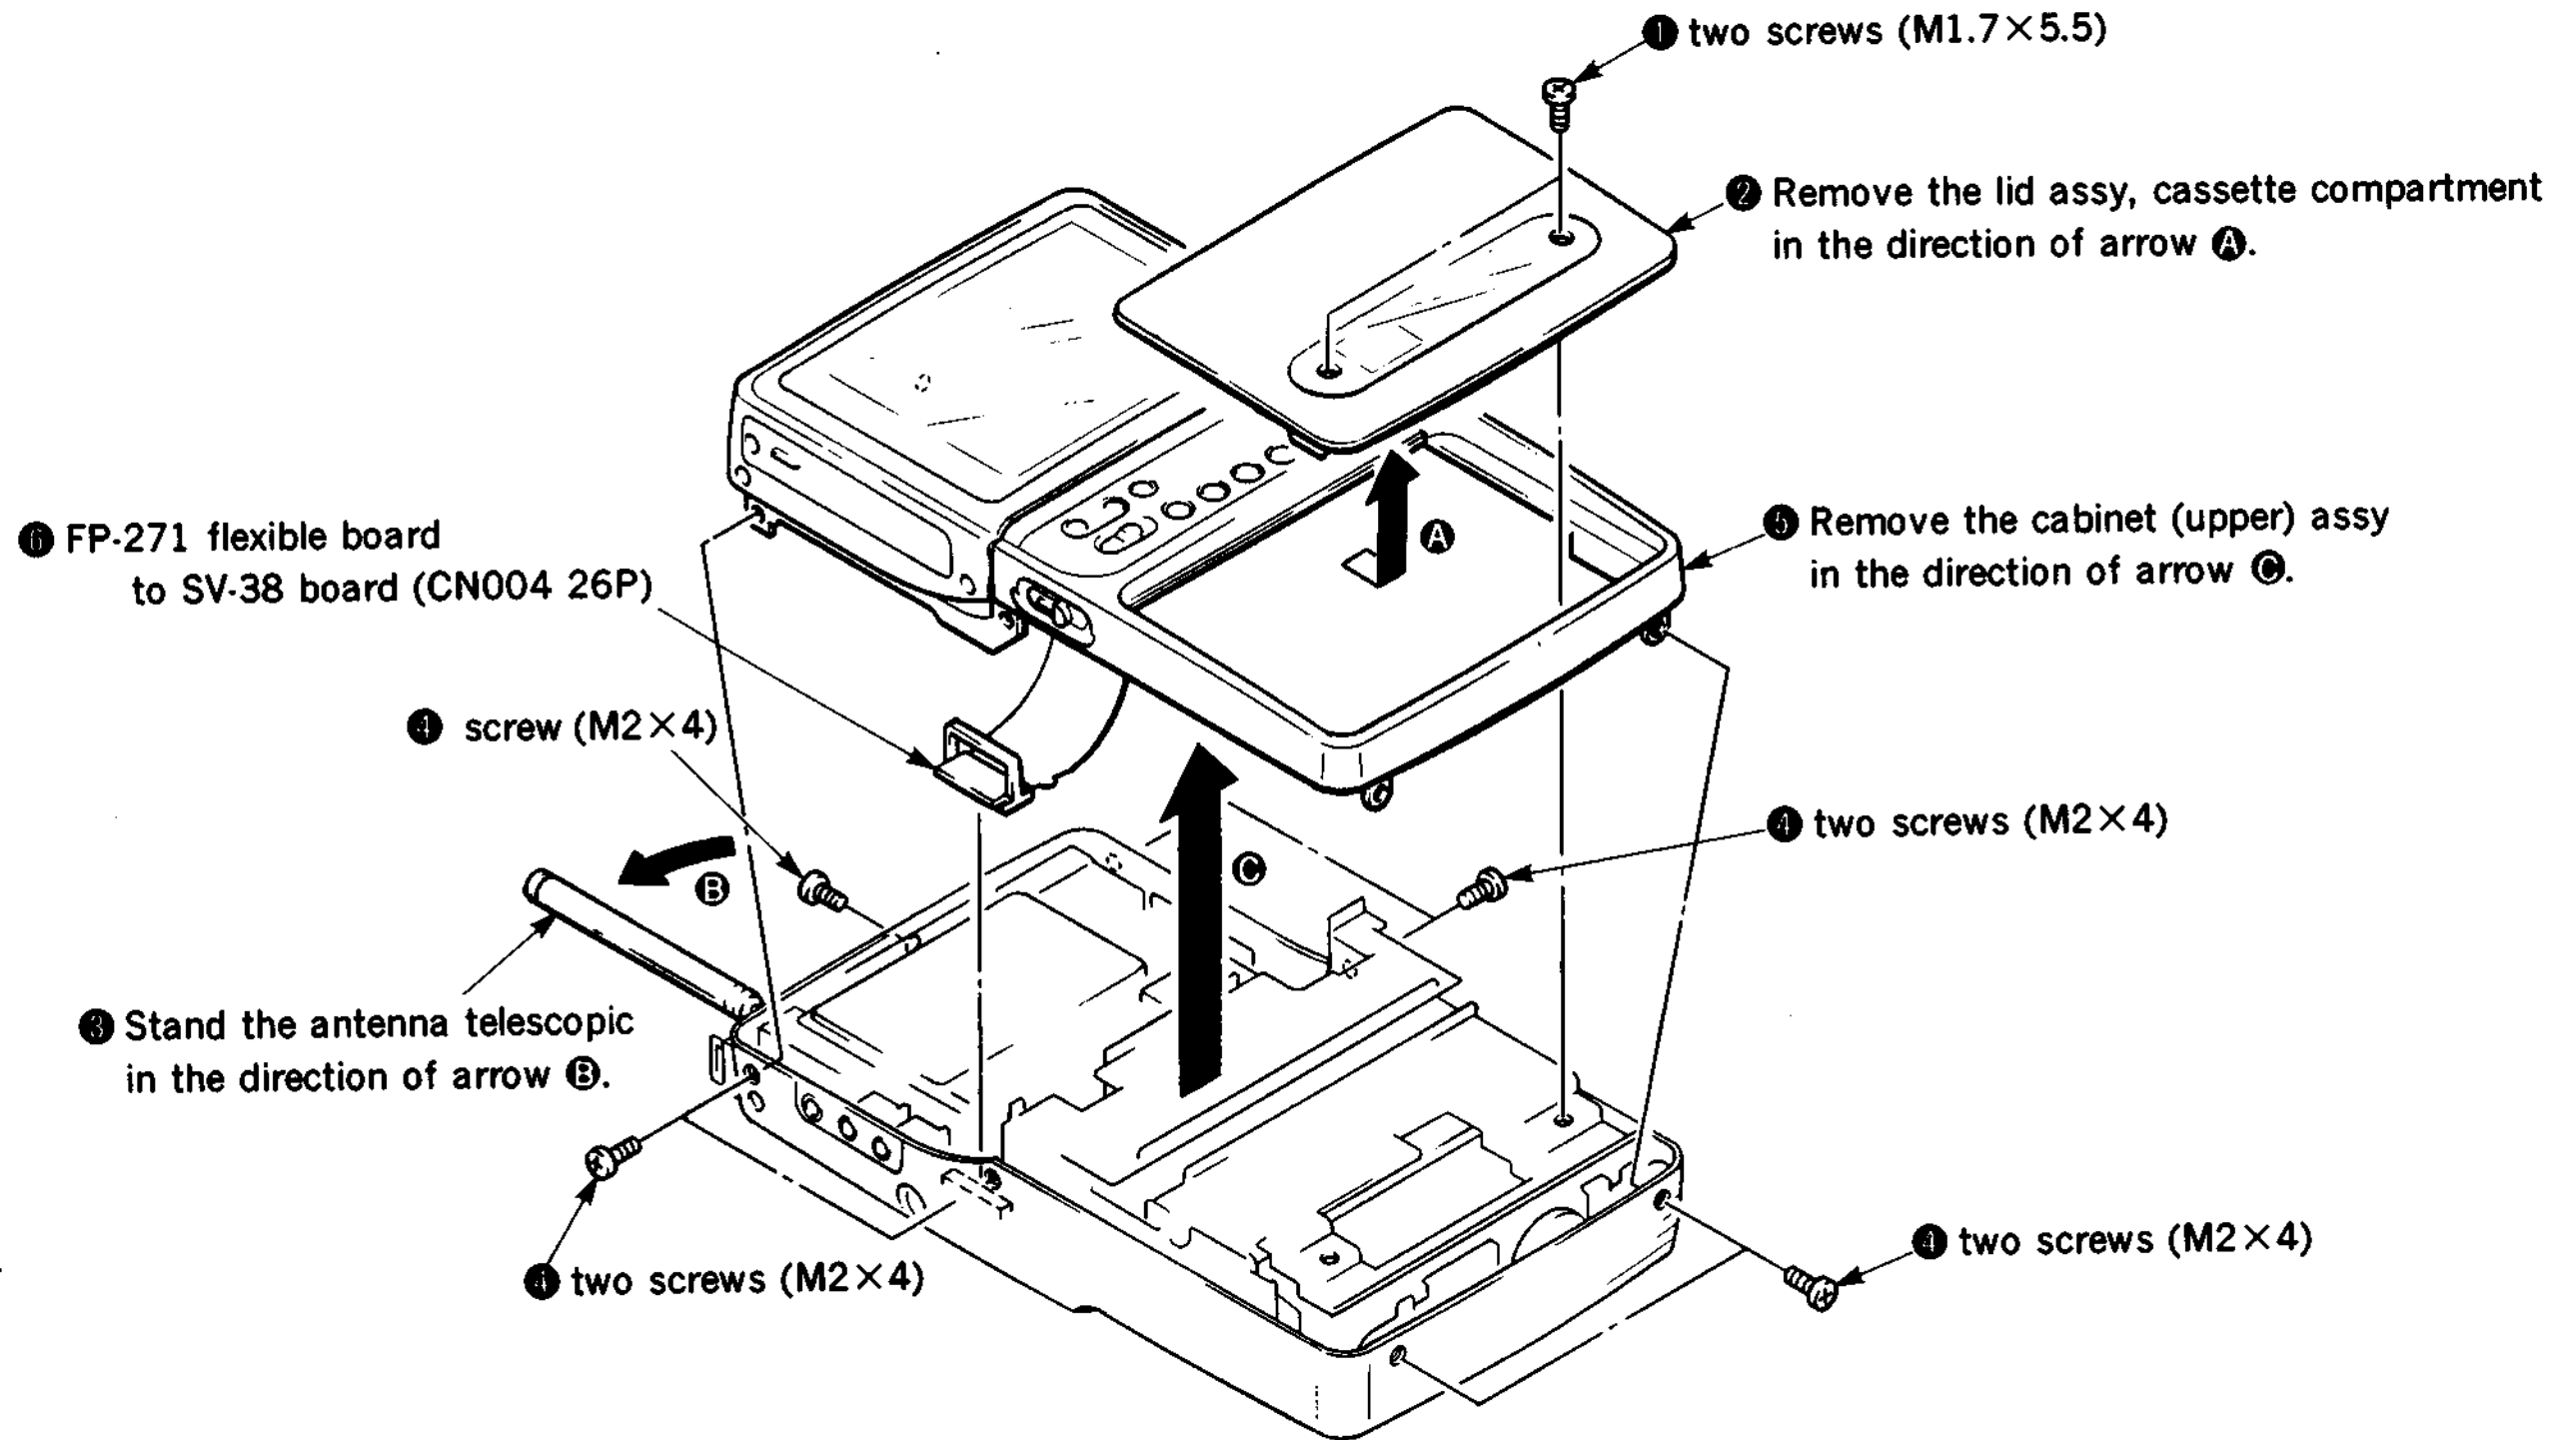


2-2. REMOVAL OF SC UNIT

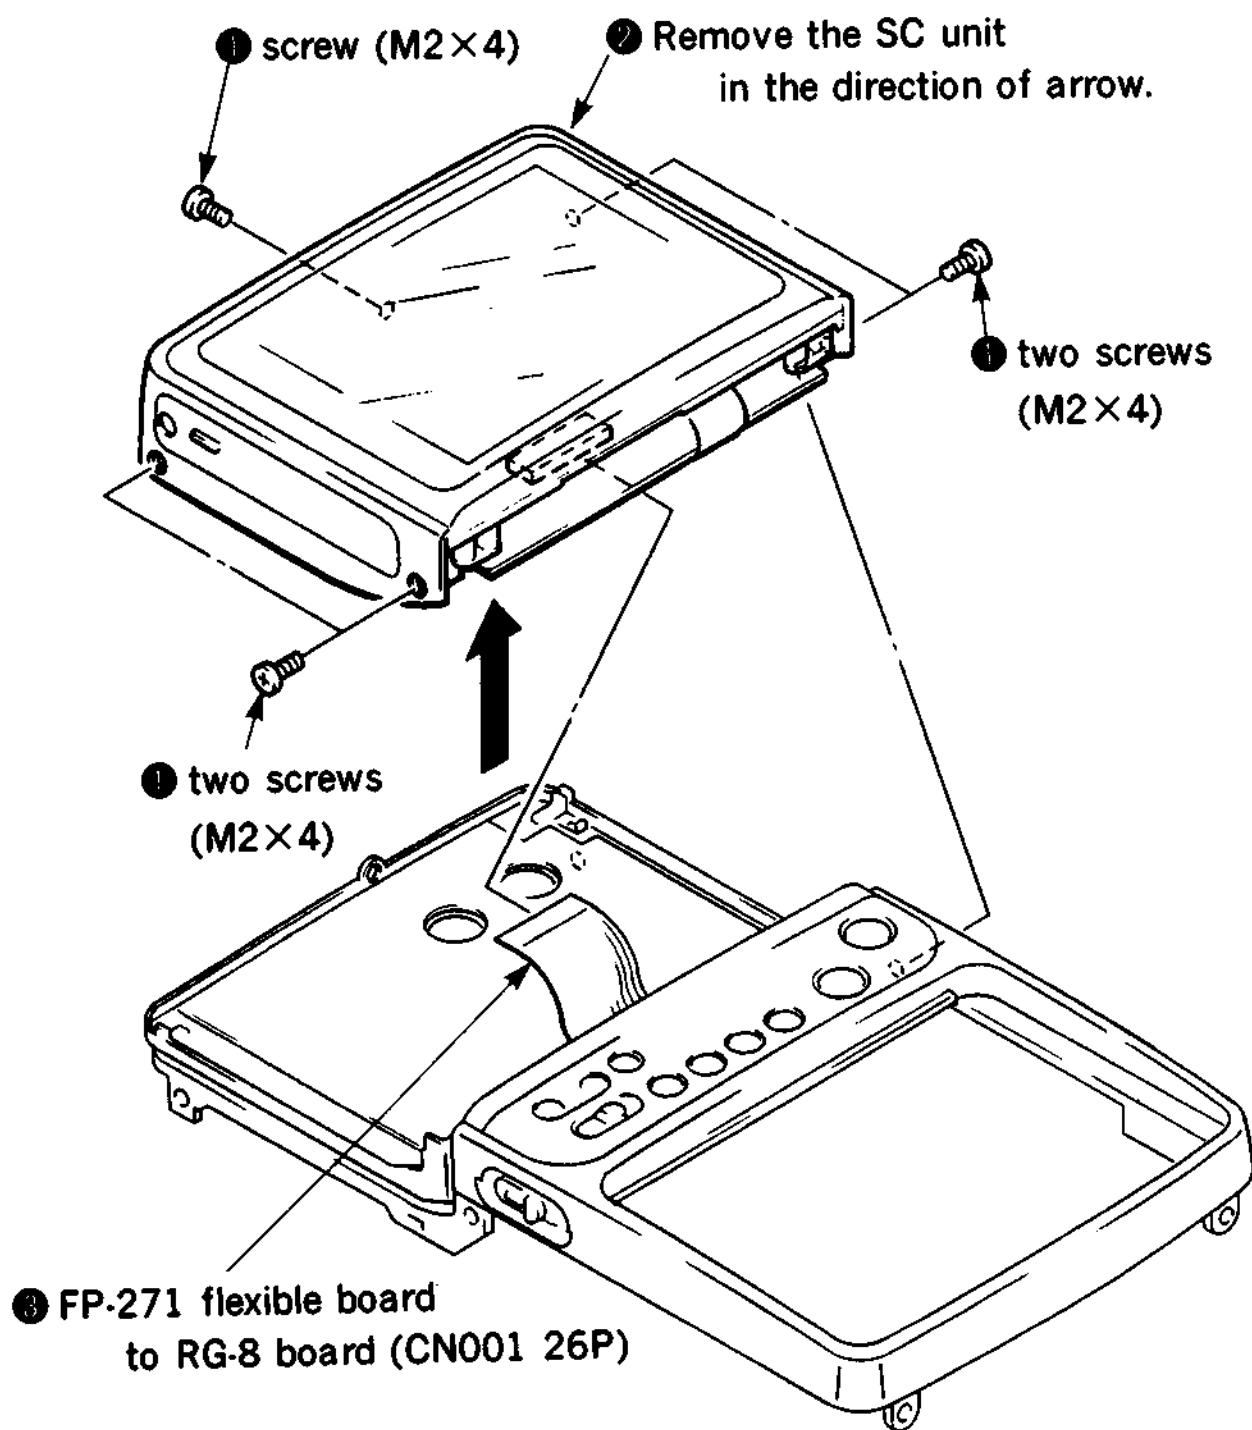


2-3. REMOVAL OF LIQUID CRYSTAL DISPLAY MODULE

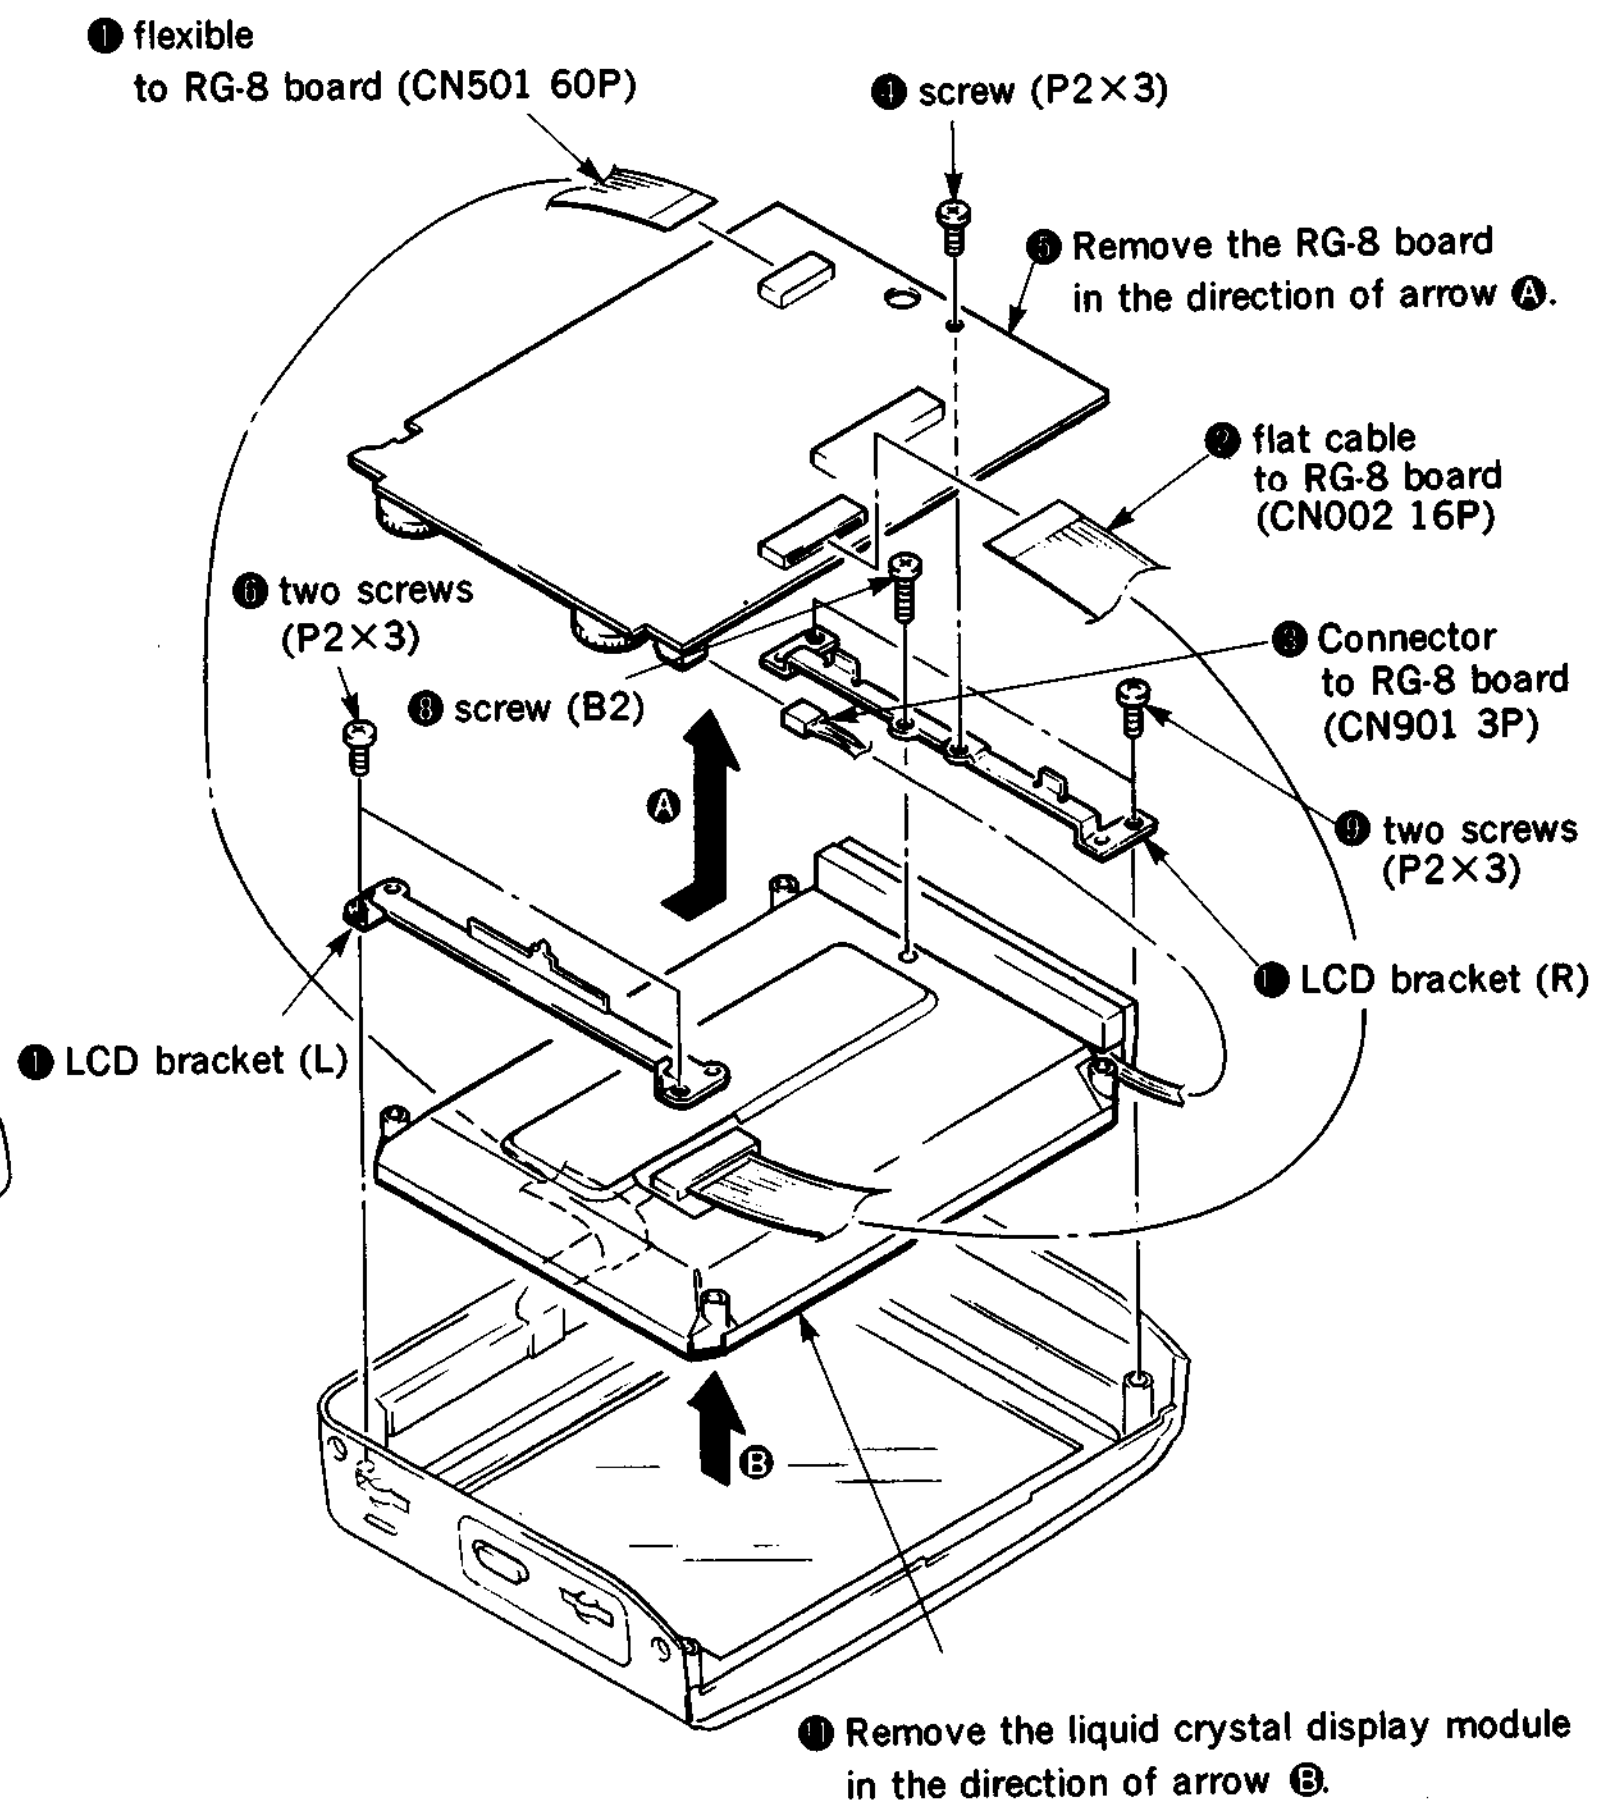


2-4. REMOVAL OF CONTROL SWITCH BLOCK

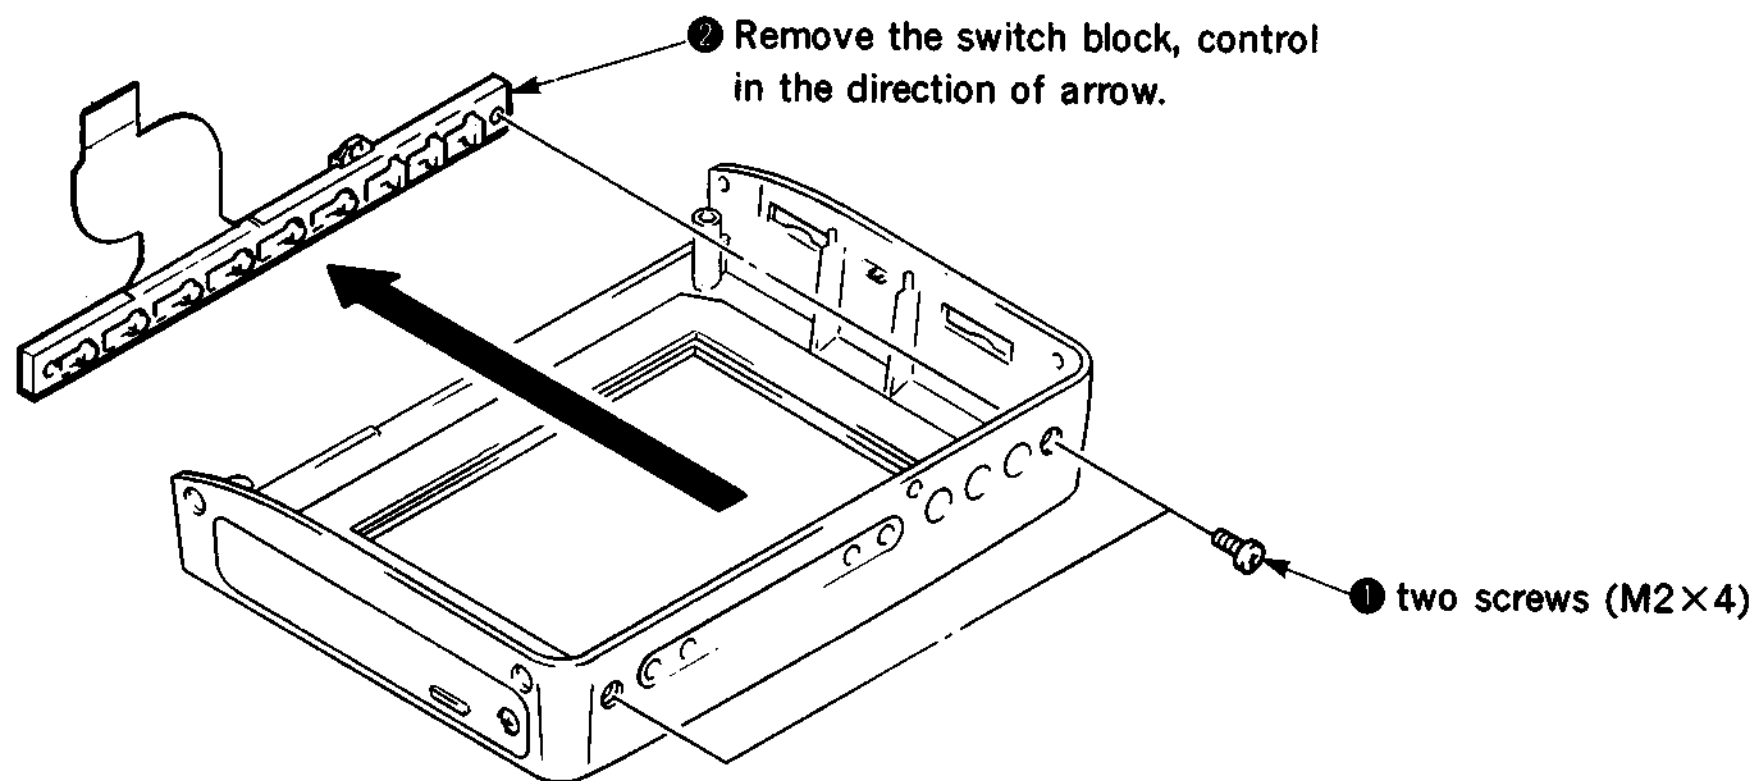


2-5. REMOVAL OF CASSETTE COMPARTMENT ASSY

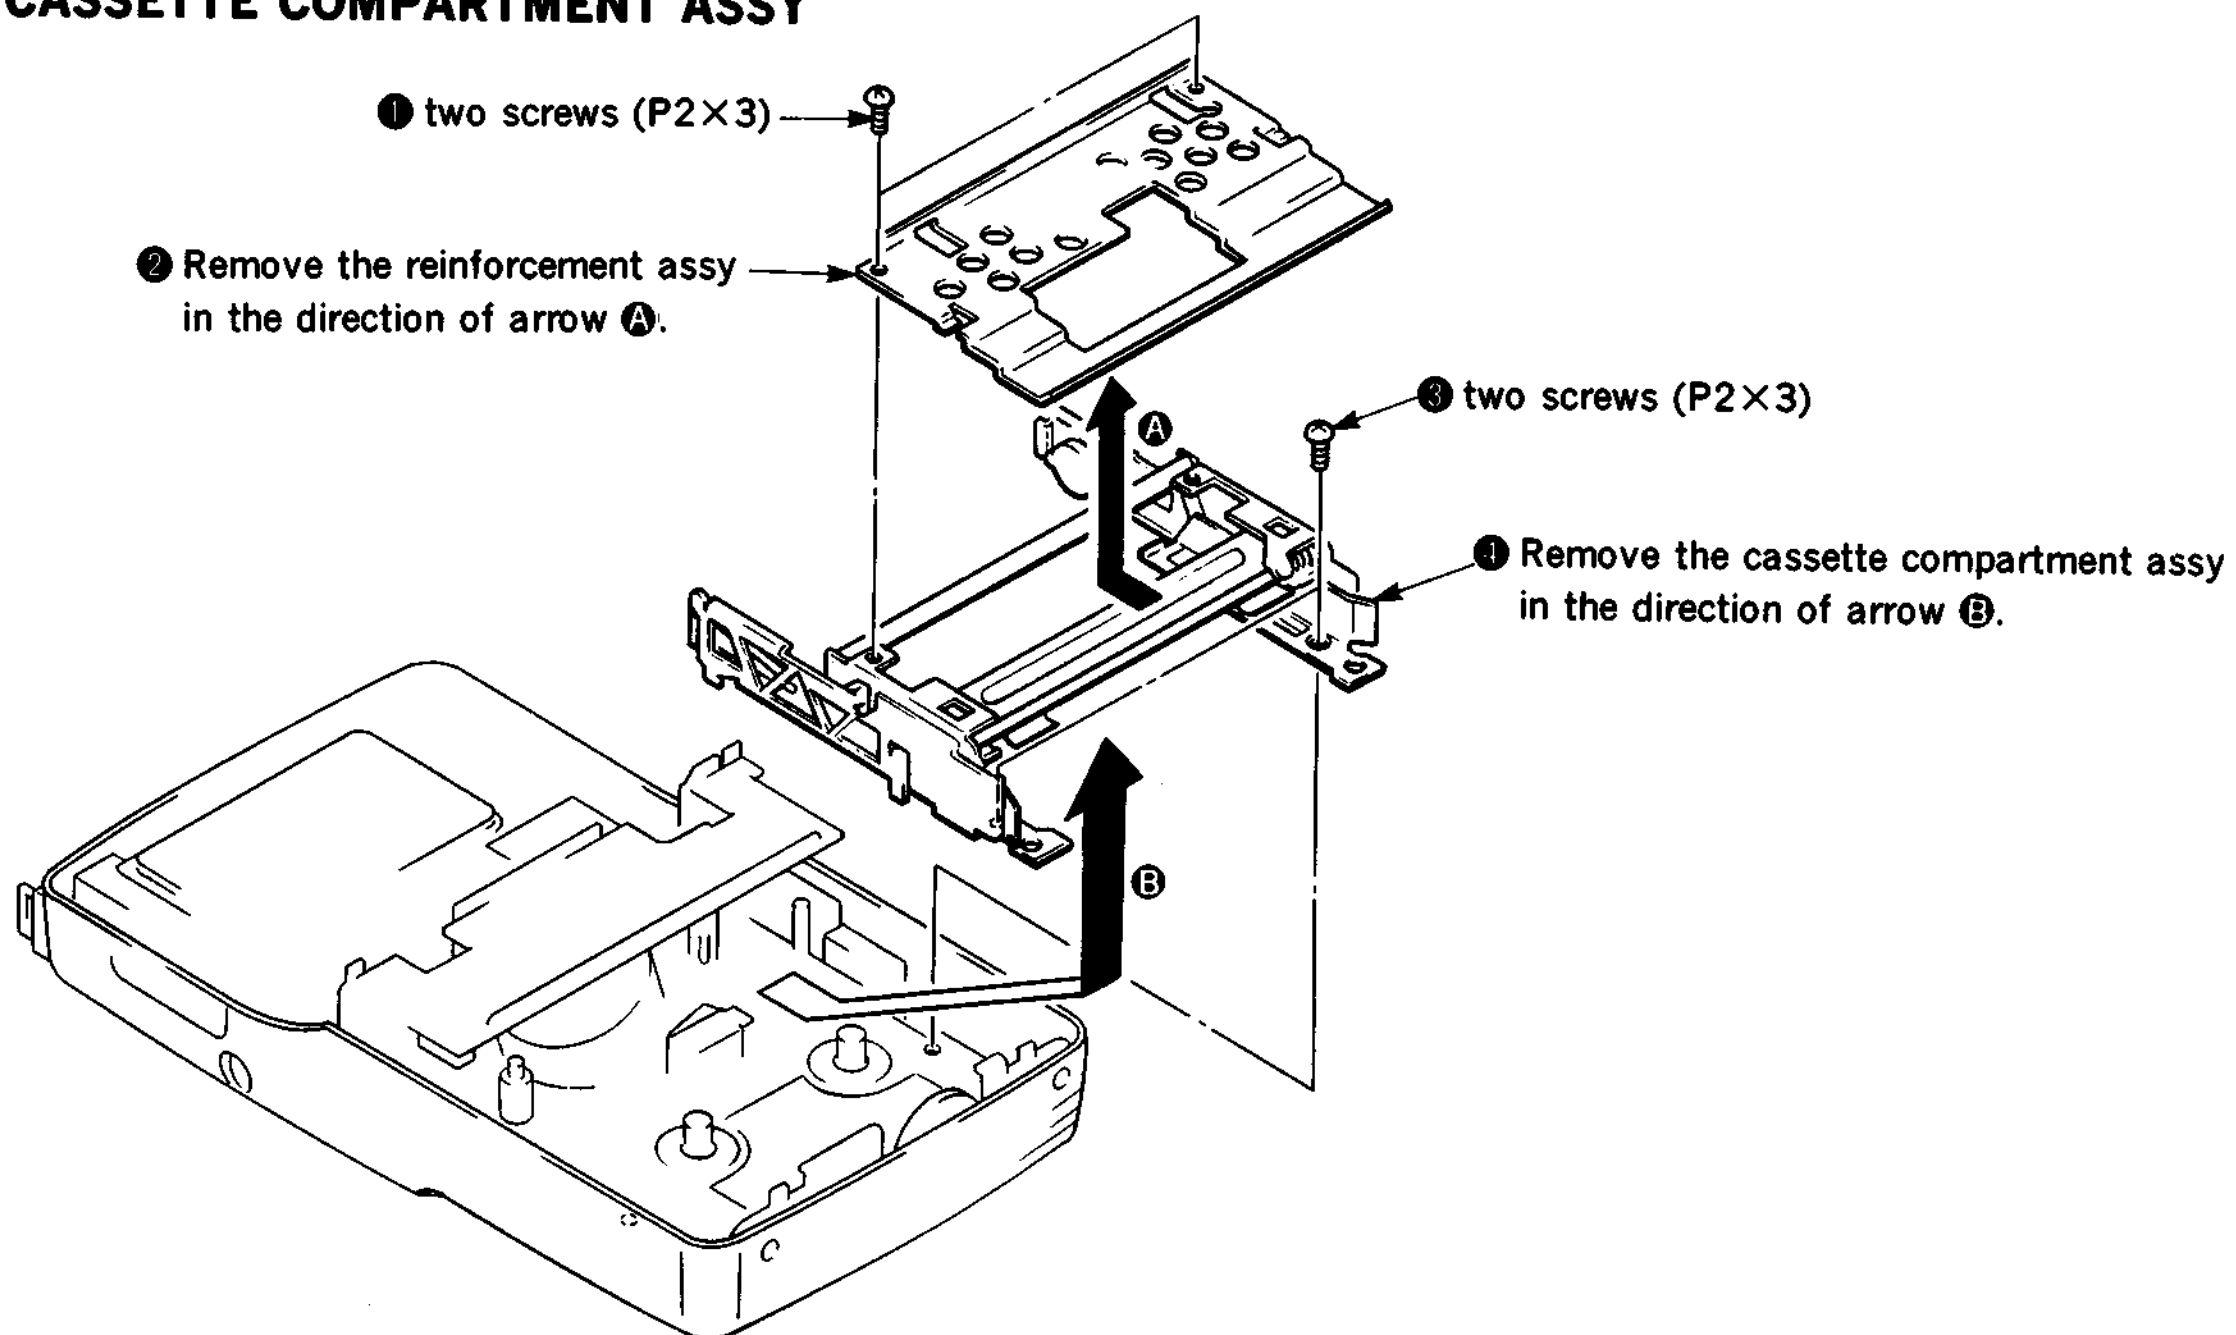


2-6. REMOVAL OF TU-123 BOARD

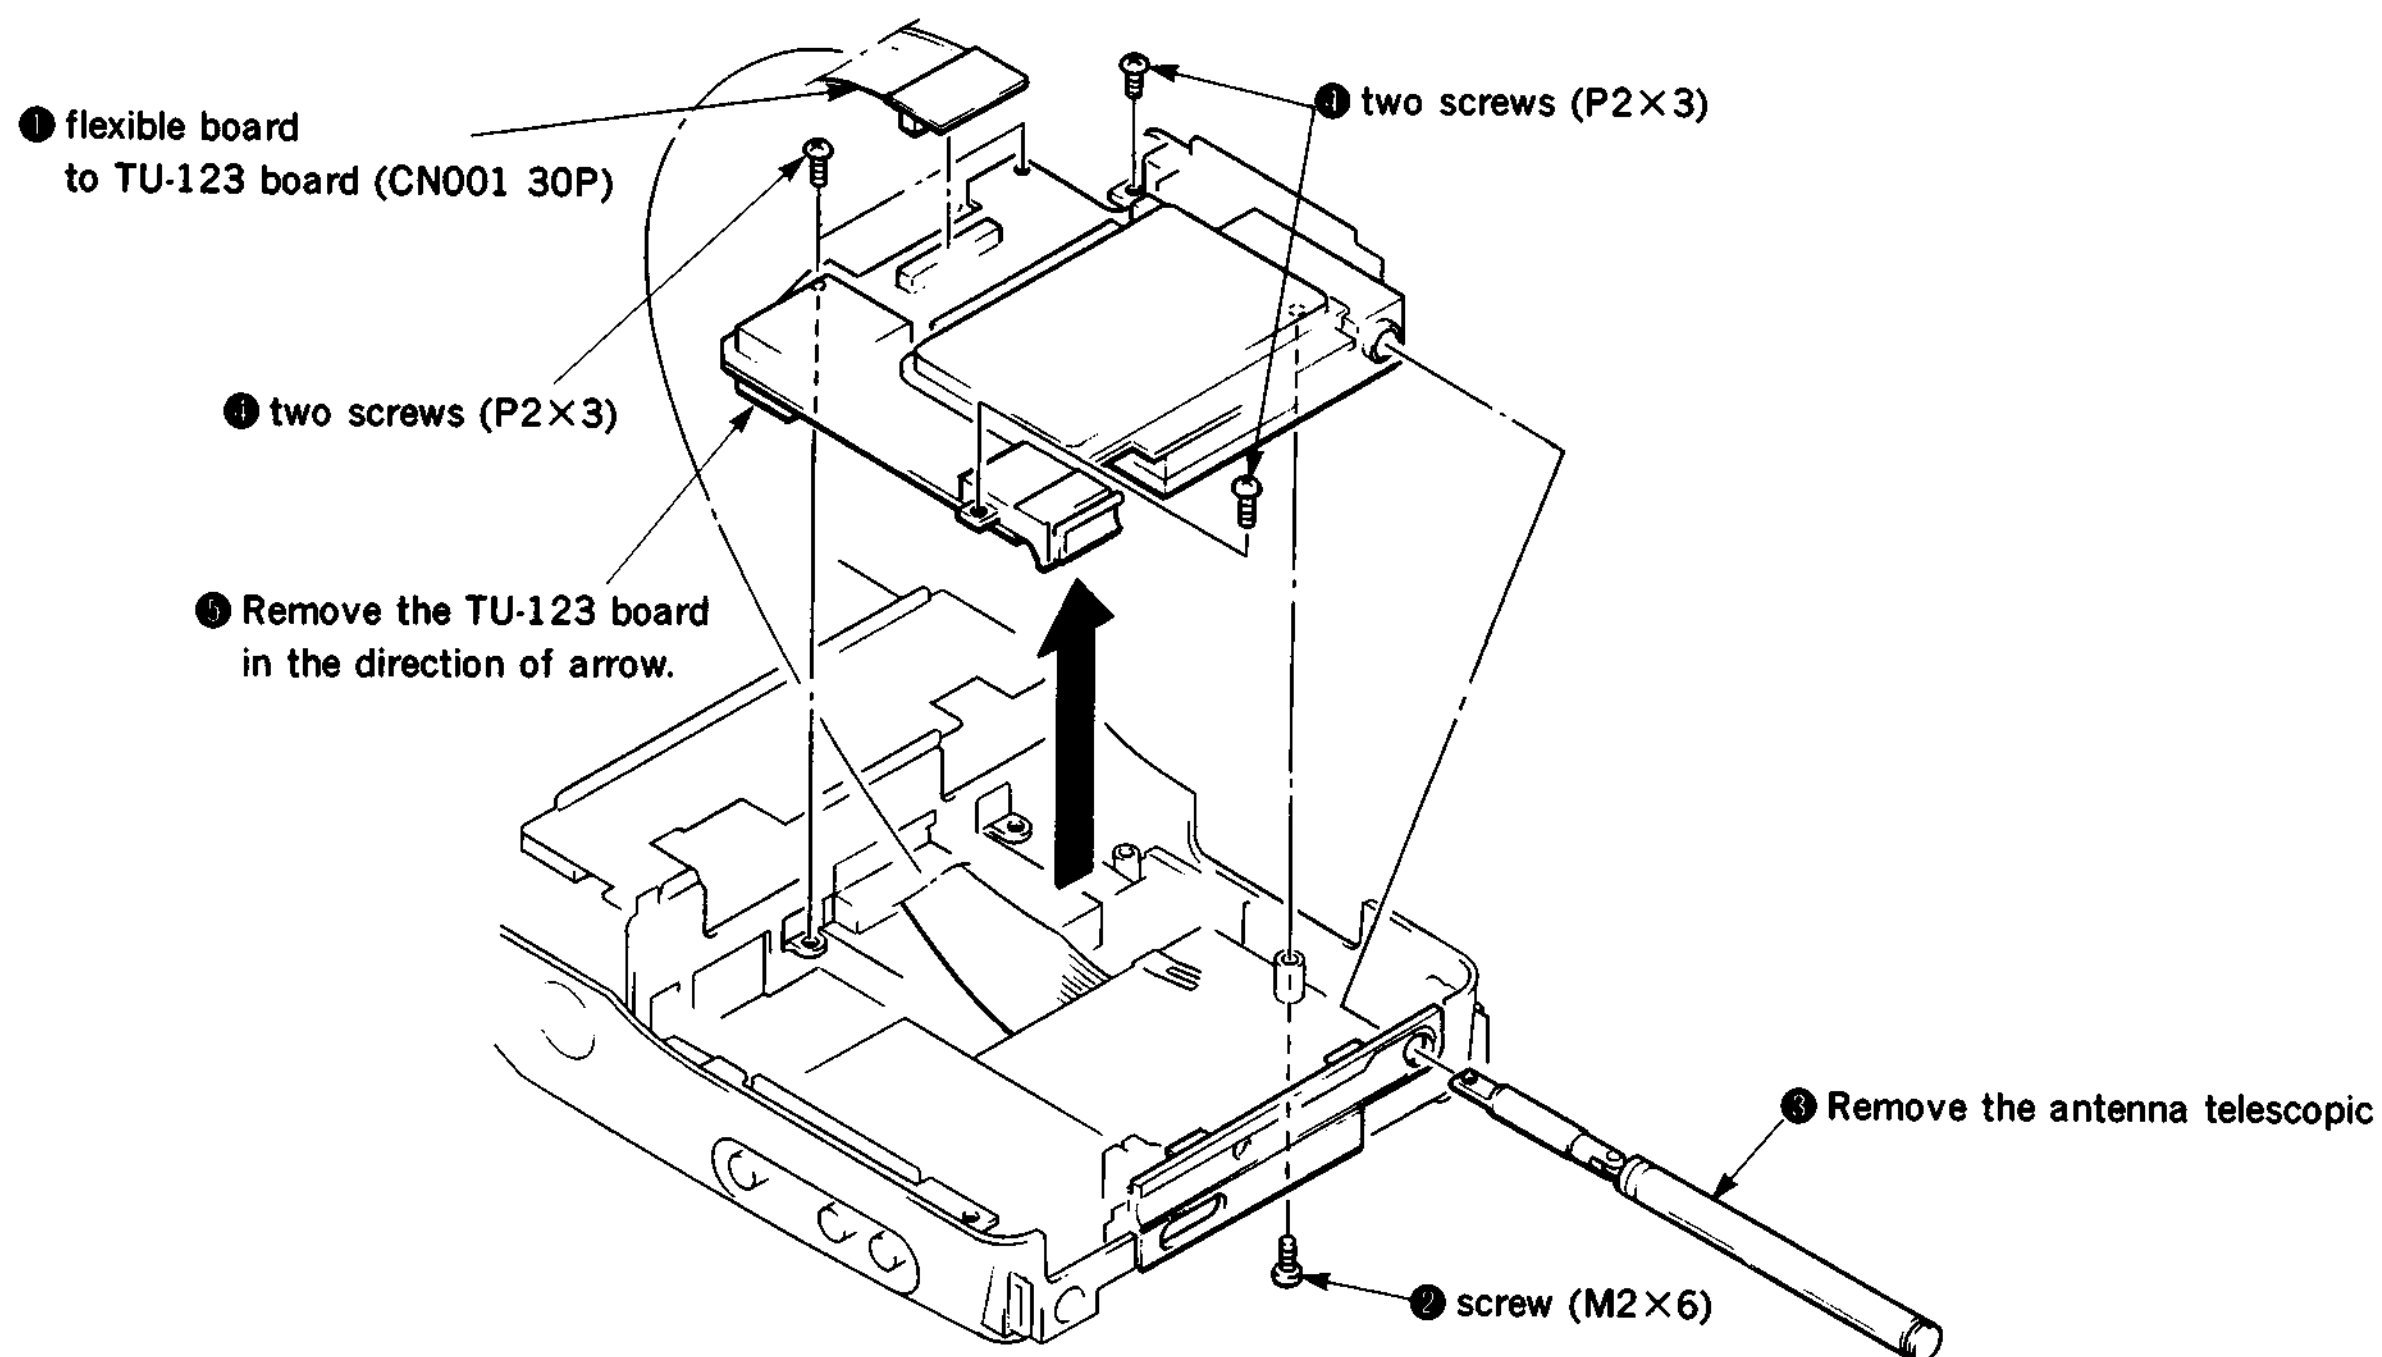


2-7. REMOVAL OF SB BLOCK AND LITHIUM BATTERY

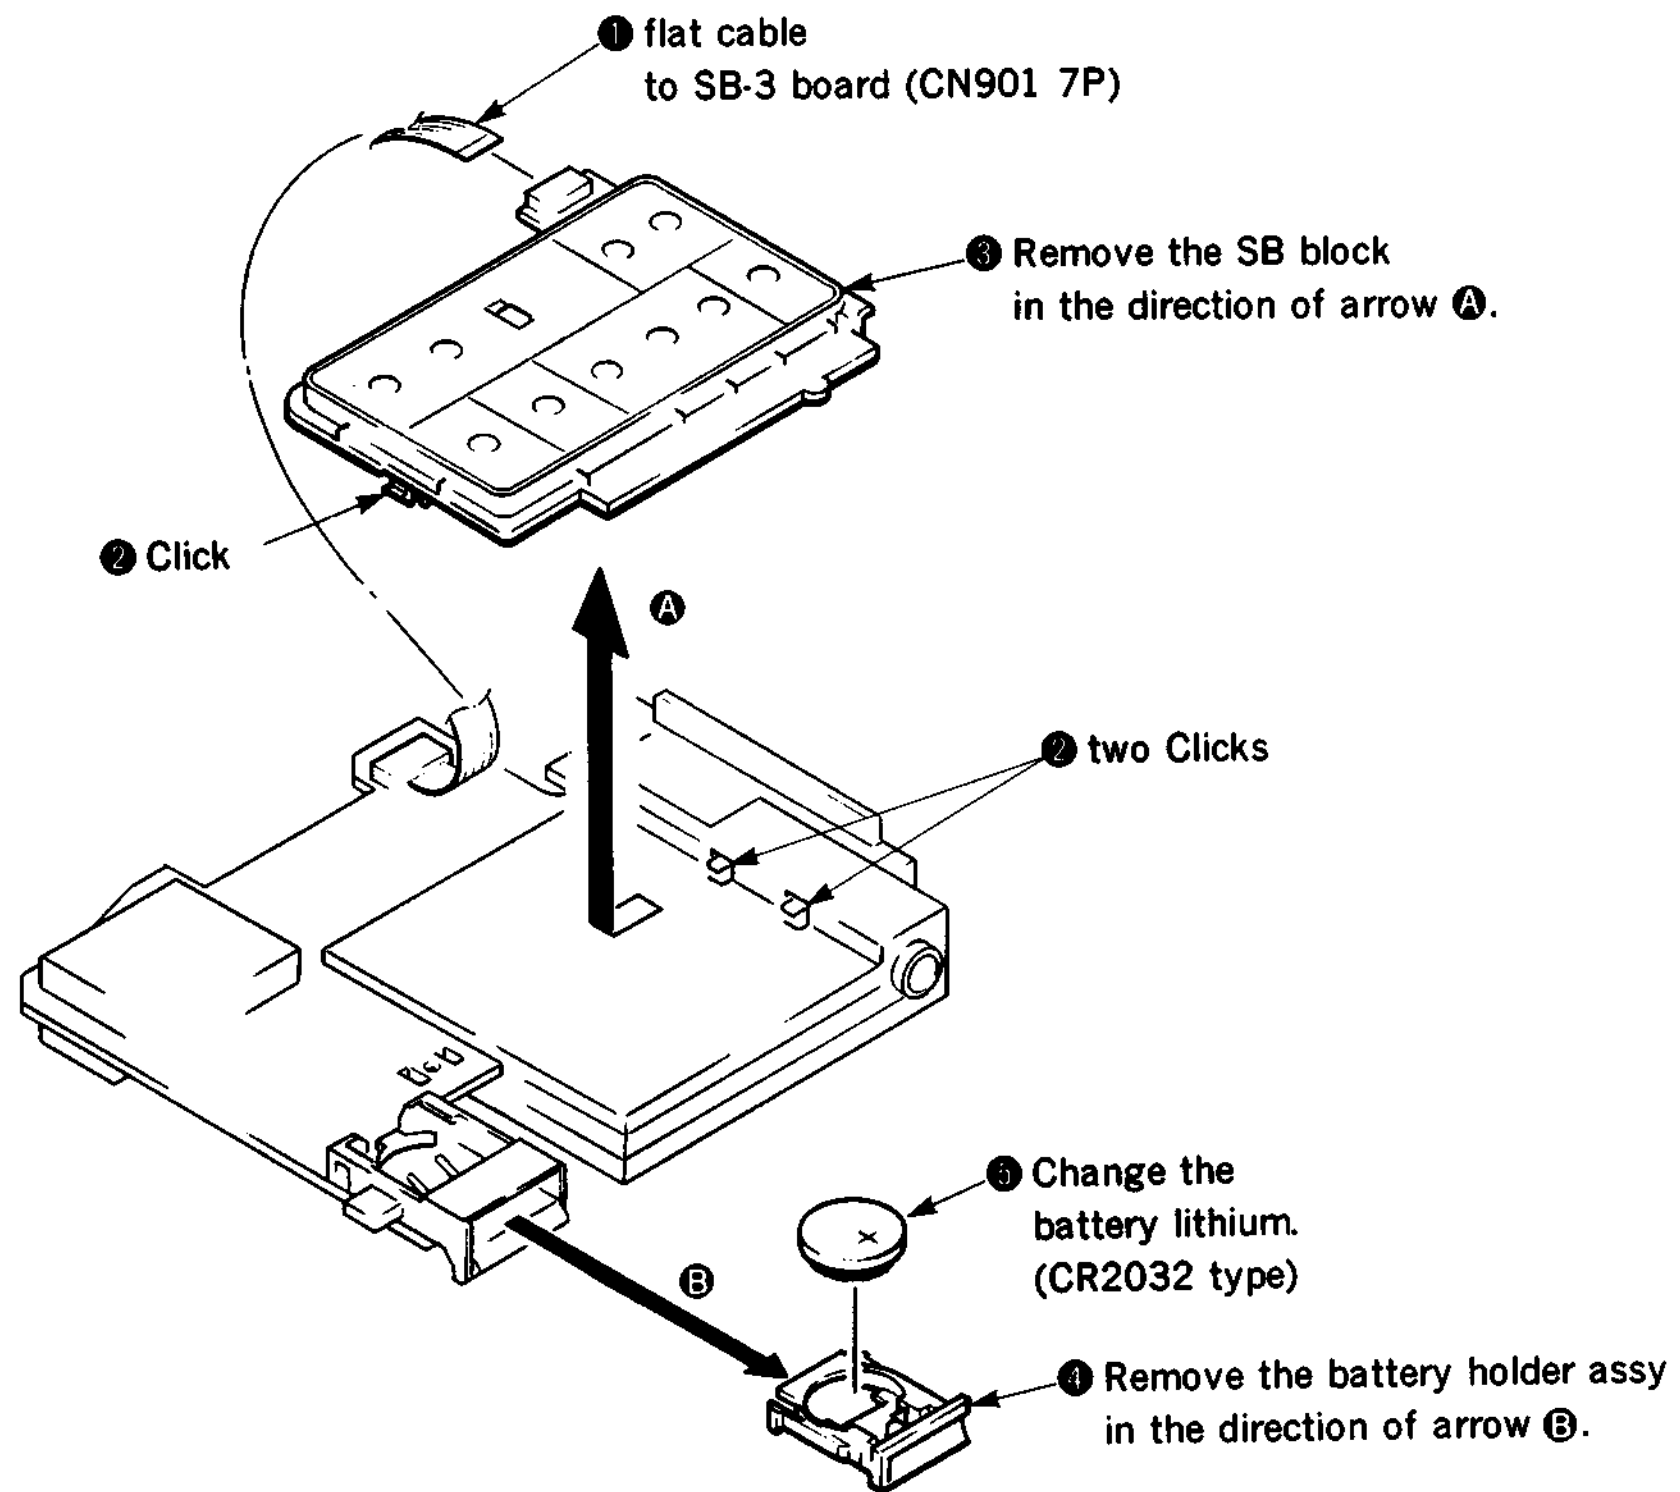

2-8. REMOVAL OF DC-22 BOARD

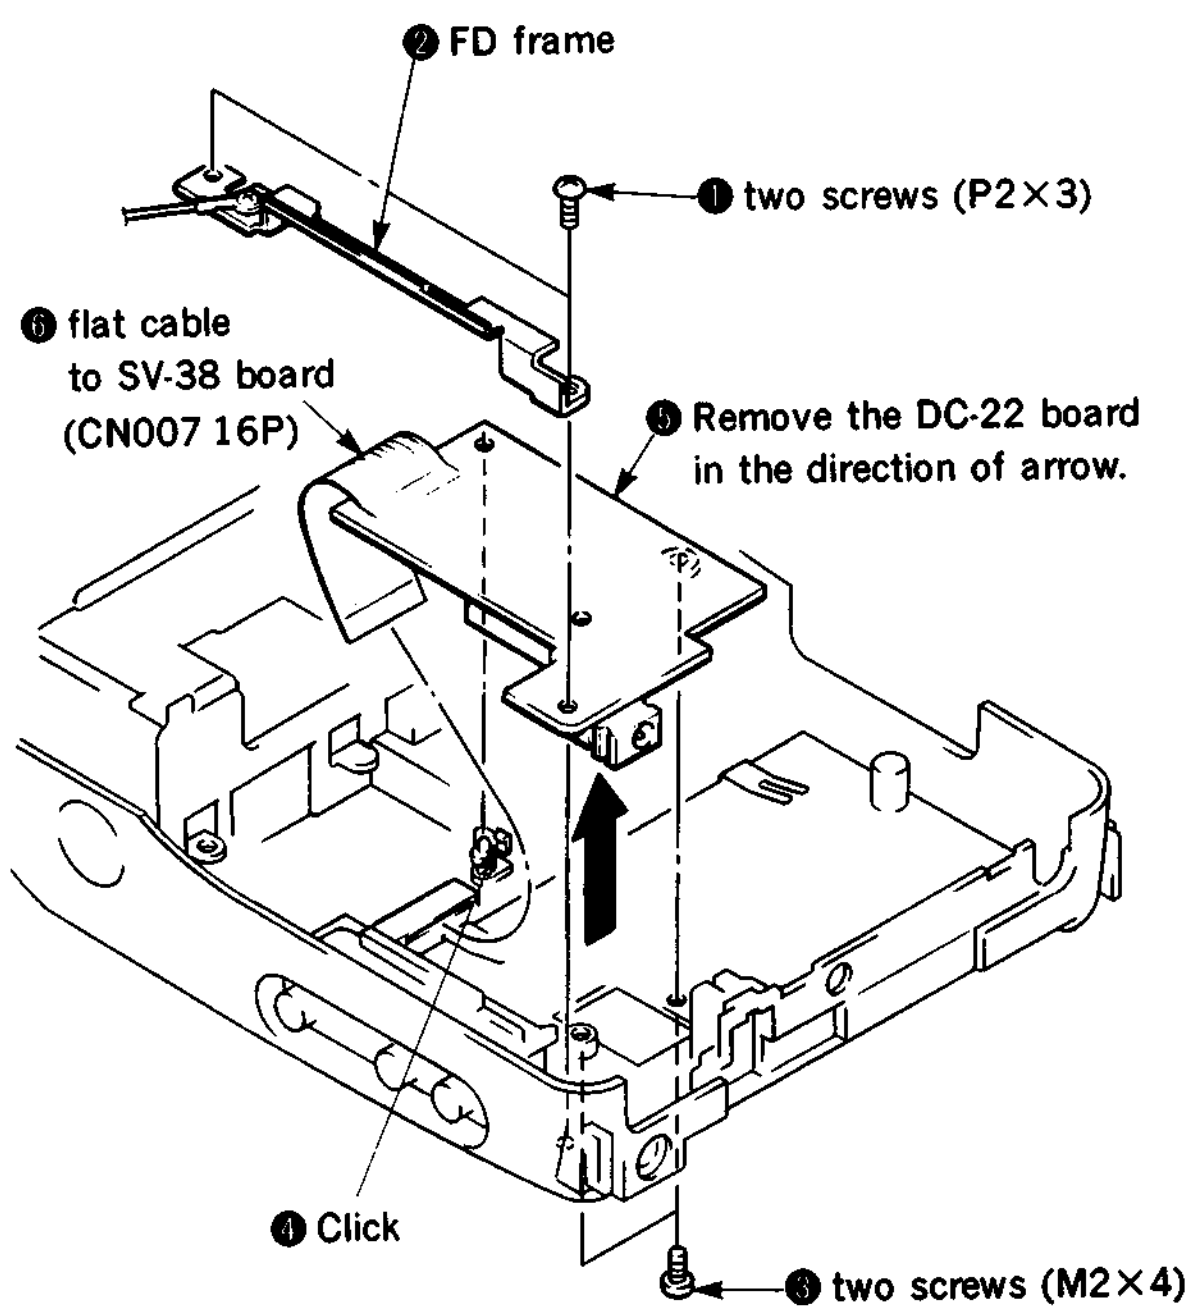


2-9. REMOVAL OF MECHANISM DECK

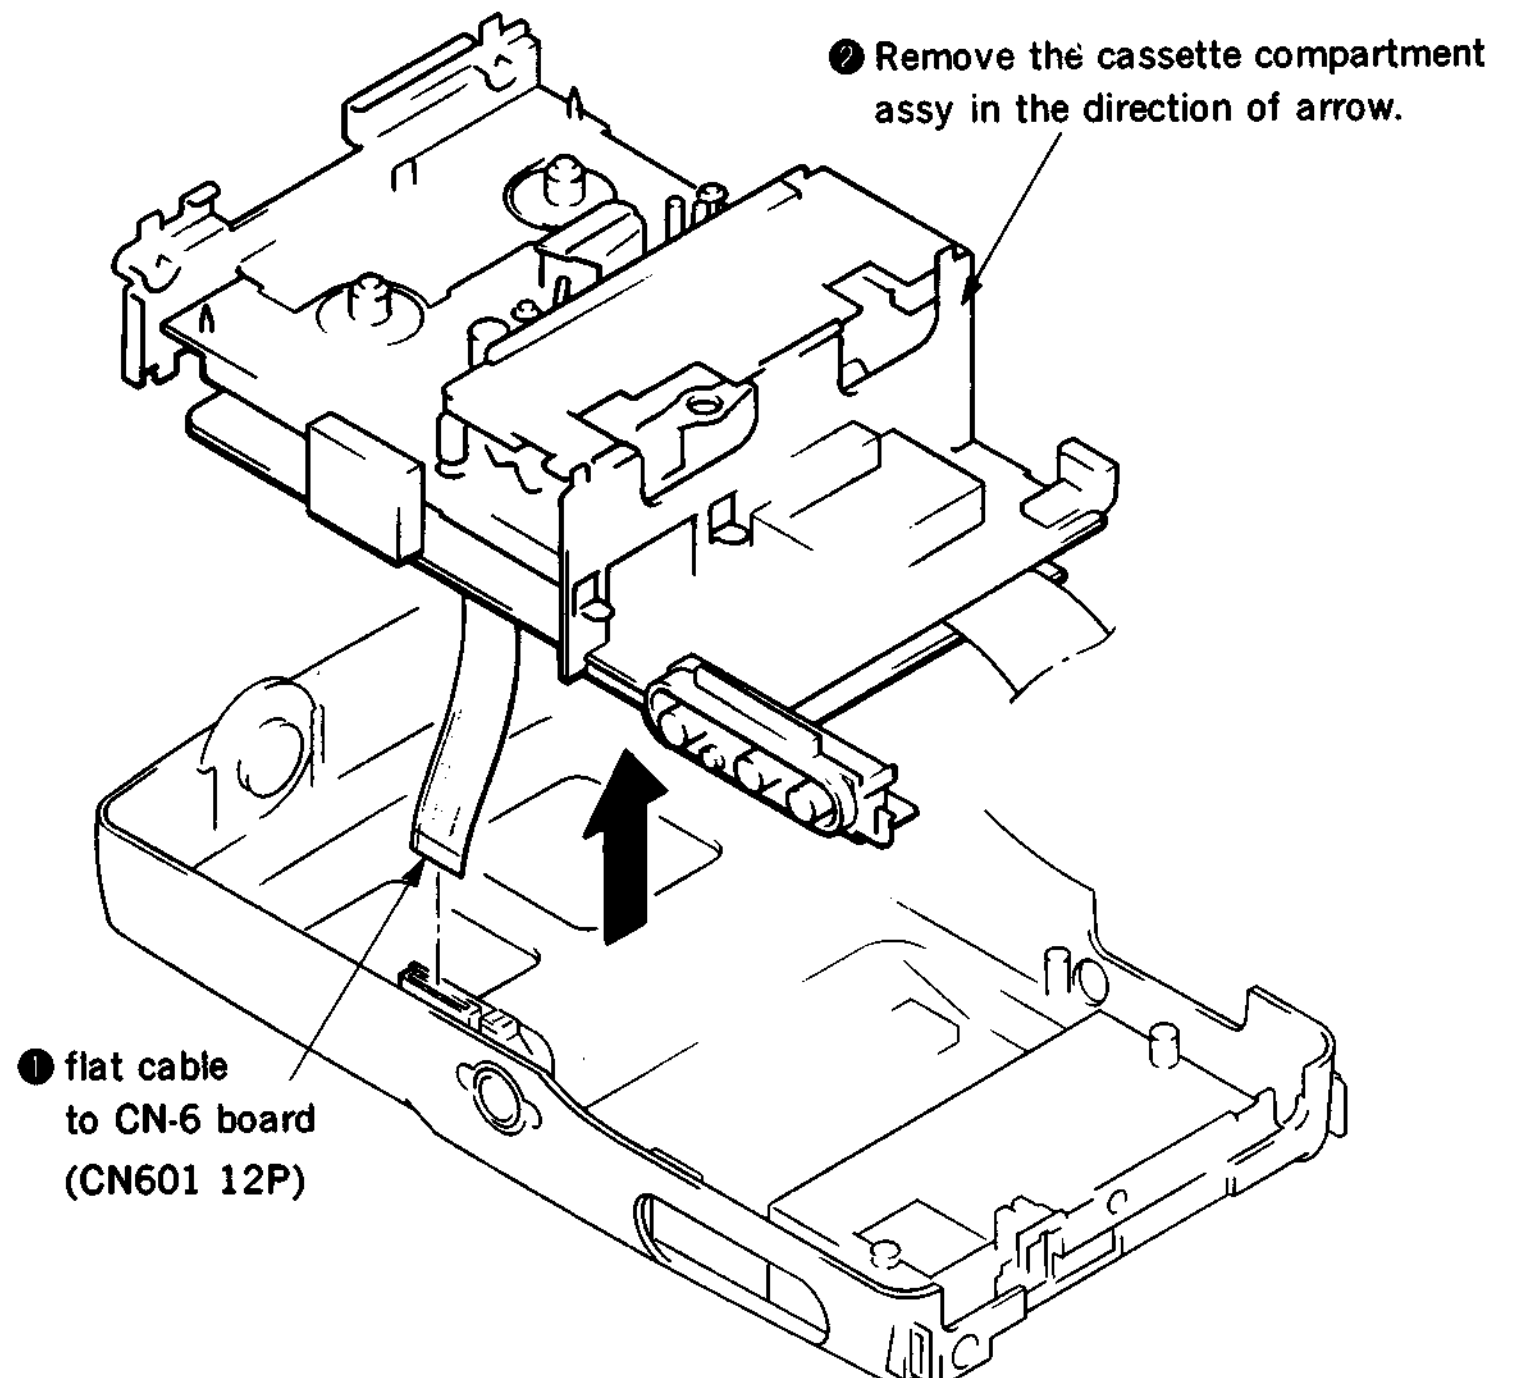


2-10. INTERNAL VIEWS

— UPPER —

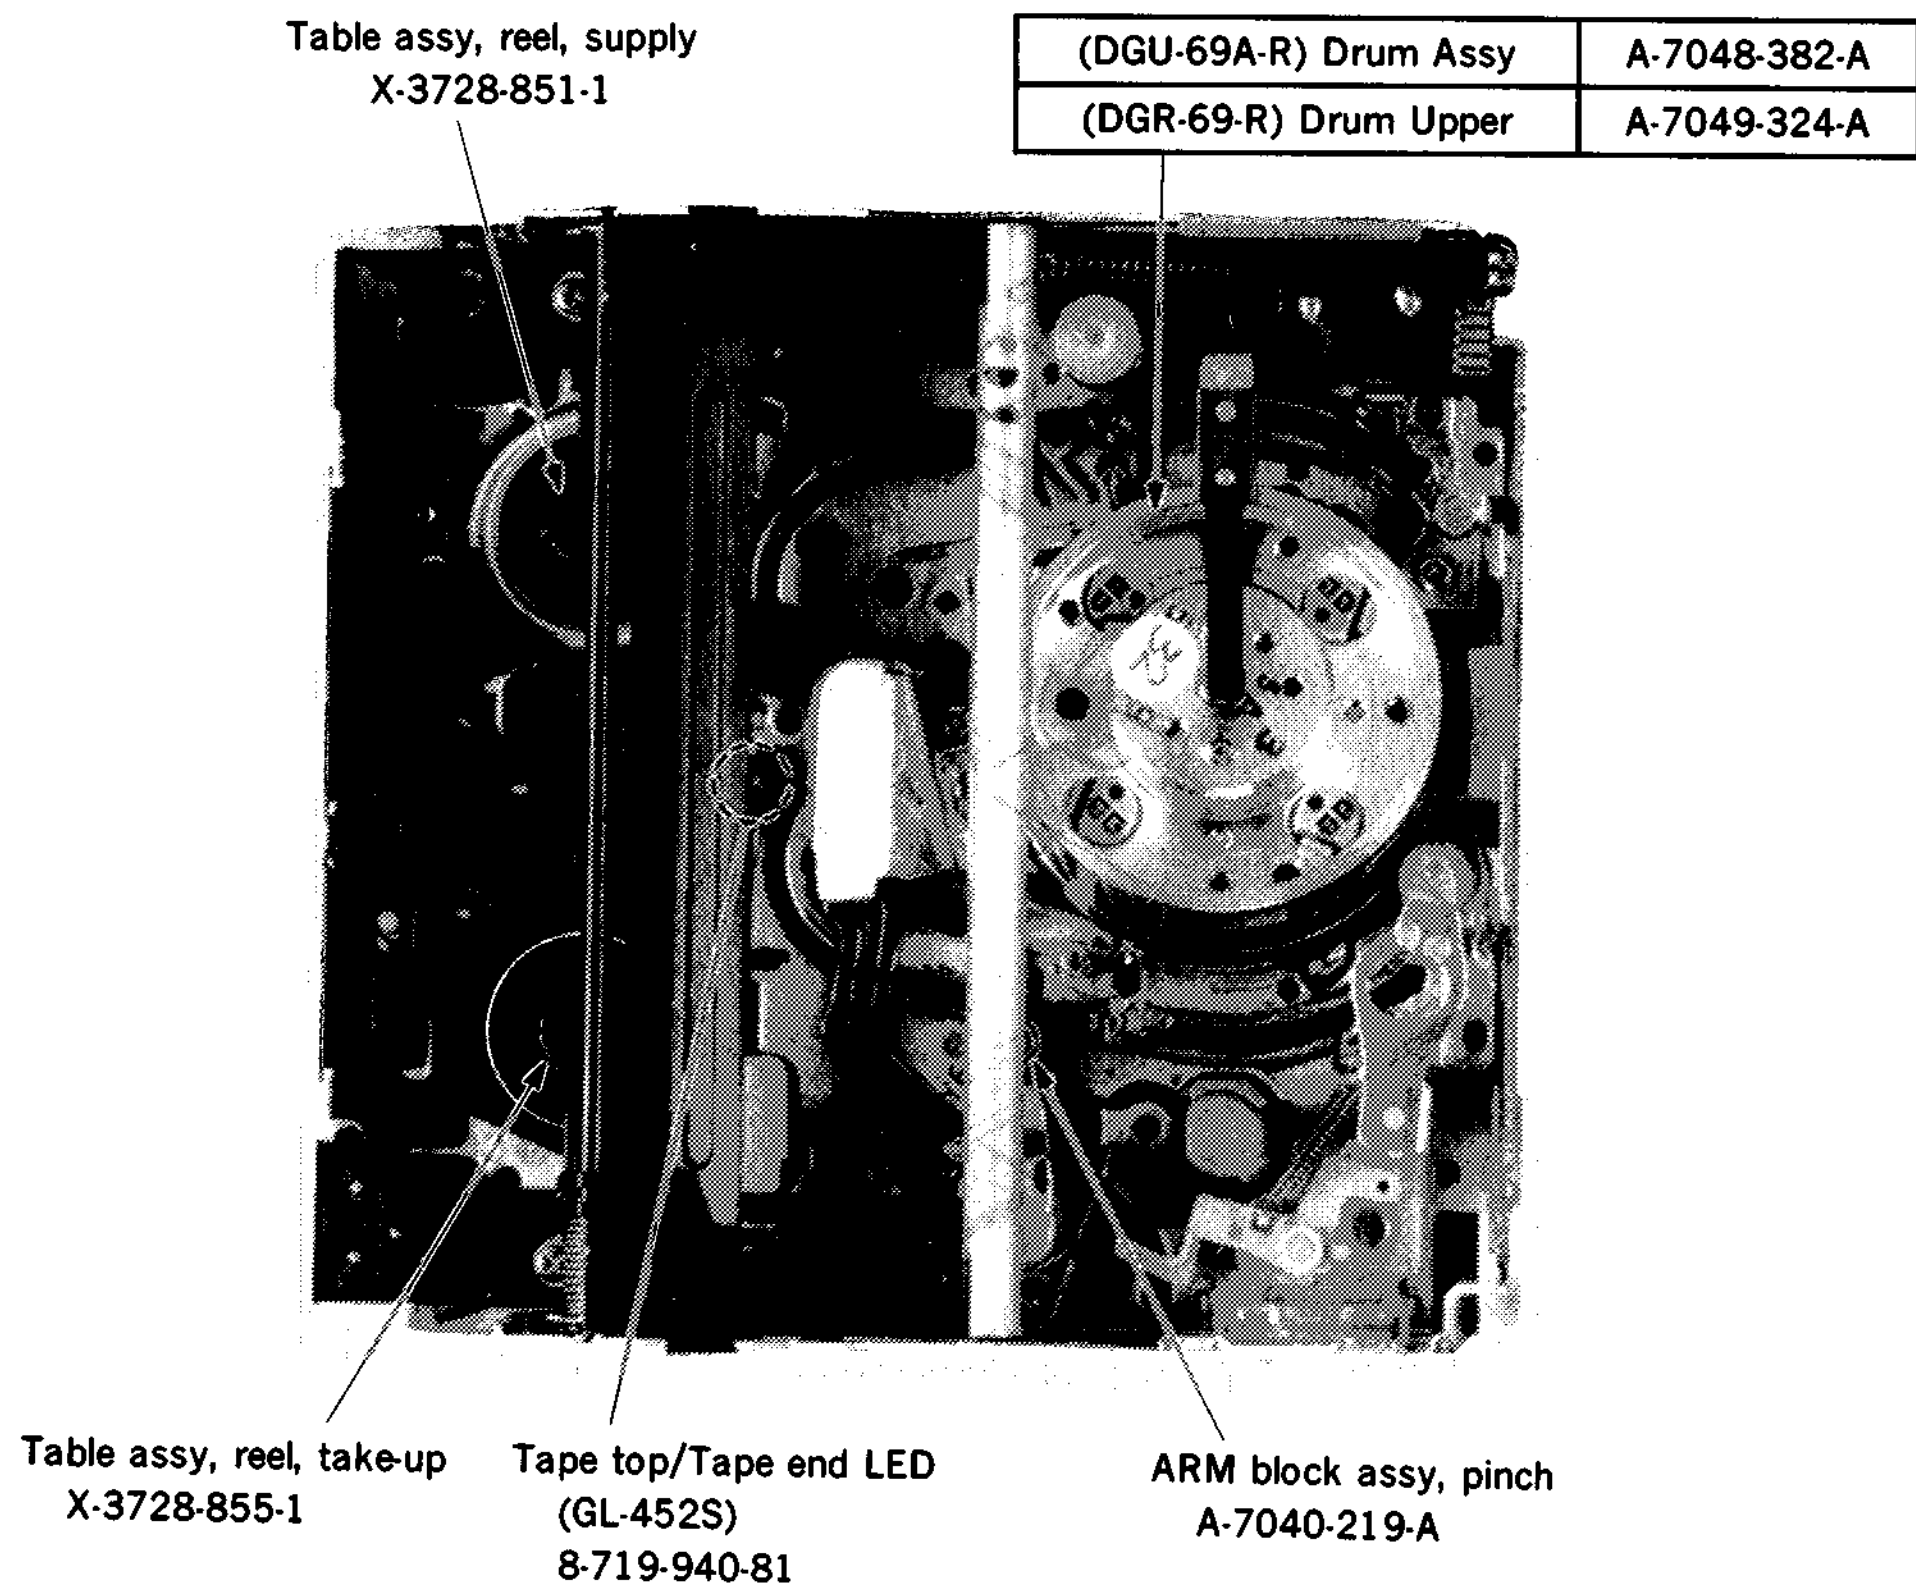

— LOWER —

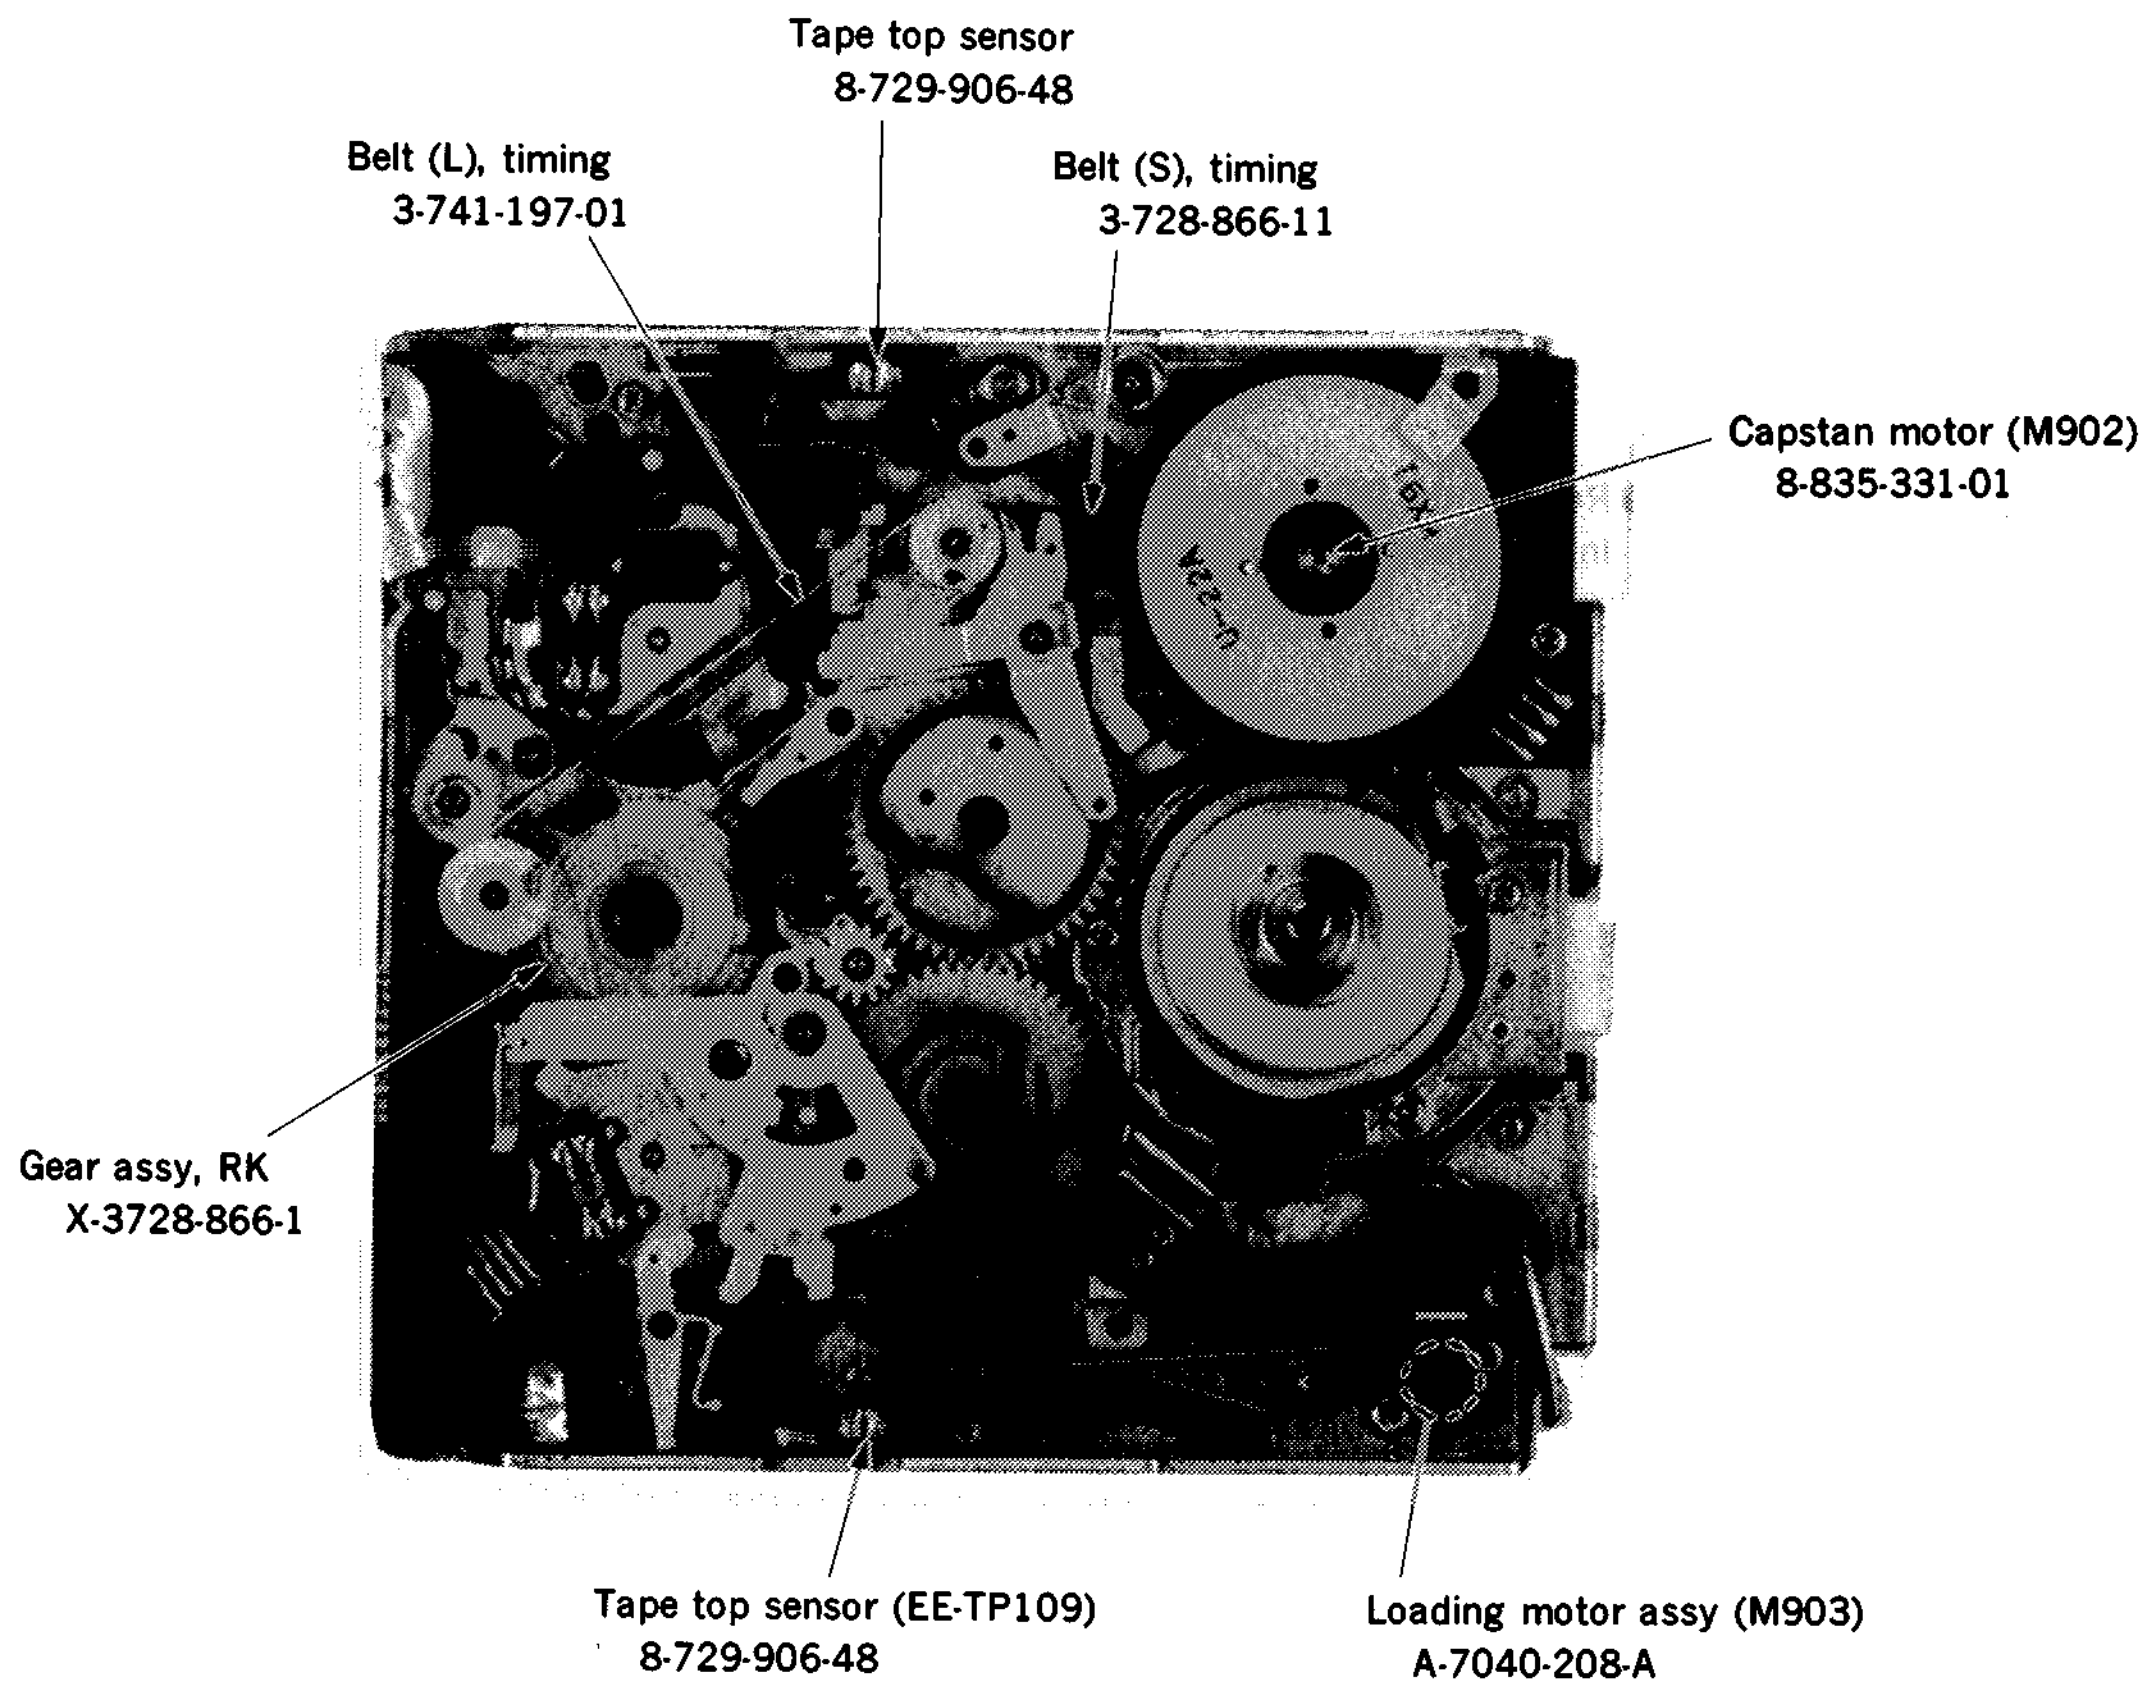

⑦ VIDEO DATA ADJUSTMENT MODE

Short the TEST D (Solder the split land at the lower part of the KB-10 board Q803)

The following display is shown on the LCD.

VIDEO DATA

CFL1 1 (RESET)
 CFL2 1 (DISPLAY)
 NCL1 1 (SLEEP)
 NCL2 1 (NEXT)
 NCLP1 1 (UP)
 NCLP2 1 (CLOCK)

KB-10 BOARD (Component Side)

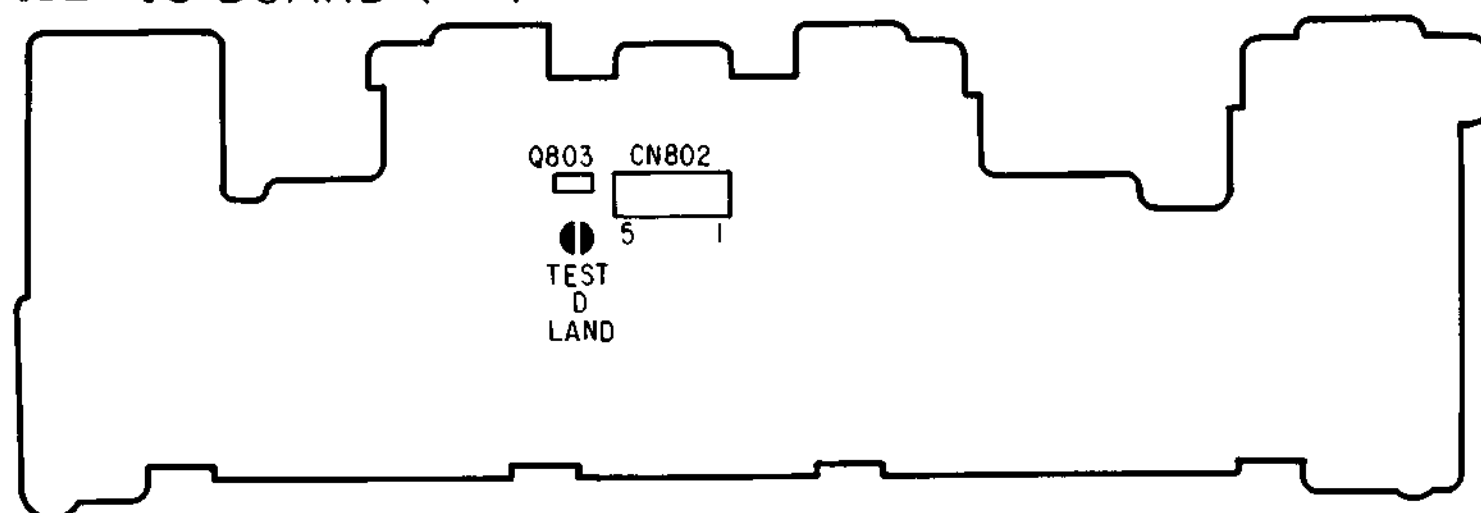


Fig3-2.

Six types of DATA are varied with the KEY on the SC part.

RESET → COUNTER RESET KEY

DISPLAY → DATA SCREEN KEY

SLEEP → SLEEP KEY

NEXT → NEXT KEY

UP → + KEY

CLOCK → CLOCK SET KEY

Pressing each KEY allows to rewrite DATA. ("0" is rewritten to "L", "1" is rewritten to "H".)

Eight modes are adjusted by the types of TAPE (ME, MP), recording (HI BAND, LO BAND) MODE, and TAPE SPEED (SP, LP). when the CH+KEY is pressed, the color of the display on the LCD turns to blue for few seconds from white and returns to white. The function to store the screen DATA in EEPROM is added by this operation. (See to the Table 3-1. for the data writing to EEPROM.)

Table 3-1. EE P ROM Write Data

TEST MODE						CFL1	CFL2	NCL1	NCL2	NCLP1	NCLP2
D	C	B	A	Switch position of the test mode set jig							
1	0	0	0	8	SP•MP	H	L	H	L	H	L
1	0	0	1	9	LP•MP	L	H	L	H	L	H
1	0	1	0	A	SP•ME	H	L	H	L	H	L
1	0	1	1	B	LP•ME	L	H	L	H	L	H
1	1	0	0	C	Hi-8 SP•MP	H	L	L	H	H	L
1	1	0	1	D	Hi-8 LP•MP	L	H	L	H	L	H
1	1	1	0	E	Hi-8 SP•ME	H	L	H	L	H	L
1	1	1	1	F	Hi-8 LP•ME	L	H	L	H	L	H

Note) When EEPROM is replaced, the following adjustment or write should be performed.

1. SW POSI adjustment
2. BATTERY DOWN adjustment
3. VIDEO DATA write
4. Channel preset


3-10. LIST OF SIRCS CODE (CATEGORY : VTR2)

CODE No.	CODE	COMMAND
01	00	CH-1/1
02	01	CH-2/2
03	02	CH-3/3
04	03	CH-4/4
05	04	CH-5/5
06	05	CH-6/6
07	06	CH-7/7
08	07	CH-8/8
09	08	CH-9/9
10	09	CH-10/0
11	0 A	CH-11/ *
12	0 B	CH-12/CH/ENTER/#
13	0 C	CH-13/1 -
14	0 D	CH-14/2 -
17	10	CH-HIGH(+)
18	11	CH-LOW(-)
22	15	POWER ON/OFF
23	16	EJECT
24	17	MPX MAIN/SUB
25	18	STOP
26	19	PAUSE

CODE No.	CODE	COMMAND
27	1 A	PB
28	1 B	REWIND
29	1 C	FF
30	1 D	REC
33	20	STILL
36	23	1/5 SLOW
47	2 E	POWER ON
48	2 F	POWER OFF
50	31	FORWARD
55	36	SLEEP
71	46	COUNTER RESET
72	47	MEM CNTR ON/OFF
73	48	INDEX WRITE
74	49	INDEX ERASE
80	4F	INPUT SELECT
85	54	INDEX ON/OFF
89	58	SPEED CHANGE
91	5A	COUNTER DISPLAY ON/OFF
97	60	TIMER SET
98	61	NEXT
102	65	TIMER REC


4-3. SEMICONDUCTORS

AK93C57F
FA7610N
LM311DR
LM358D
LM358PS
LM393DR
MC34182M
LM393ML
NJM2073M

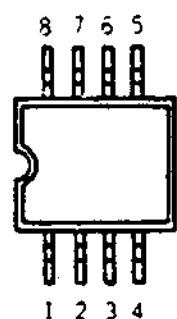


(TOP VIEW)

BA3570F
CXA1138M

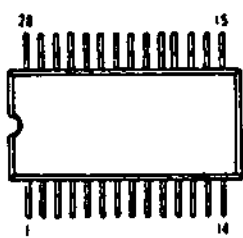


(TOP VIEW)

CXA1124AQ
CXA1208R
CXA1537R
MB606199

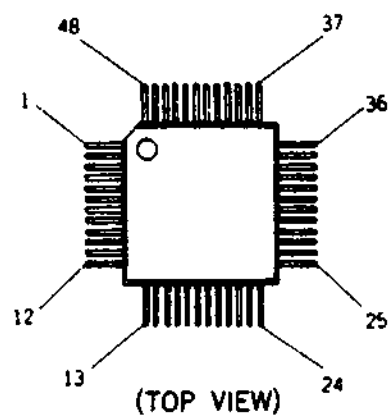


(TOP VIEW)

CXA1127M
CXA8006M

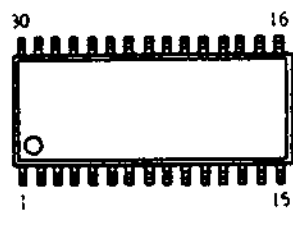


(TOP VIEW)

CXA1201Q

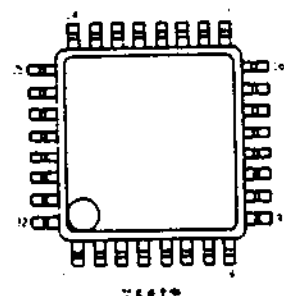


(TOP VIEW)

CXA1202R

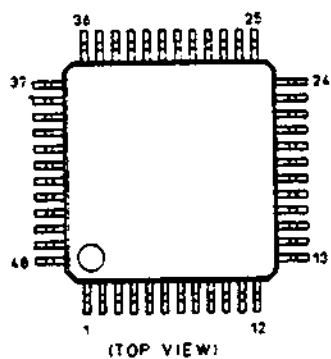


(TOP VIEW)

CXA1207R

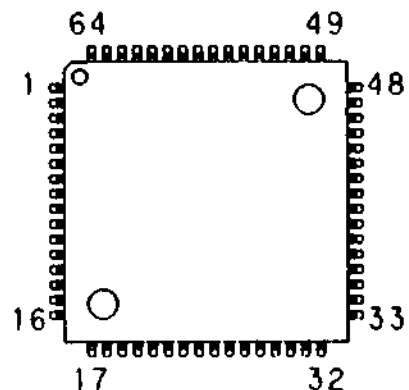


(TOP VIEW)

CXD2106Q

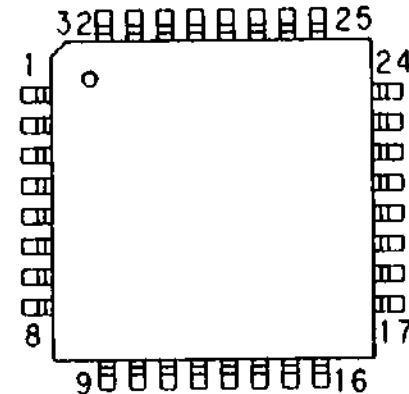


(TOP VIEW)

CXD2107M
CX20115A
MB3775PF
MC14053BF

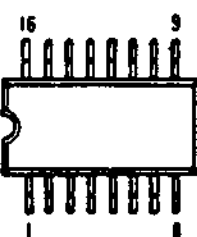


(TOP VIEW)

CXL5502M
 μ PC339G2
 μ PD6451AGT-601

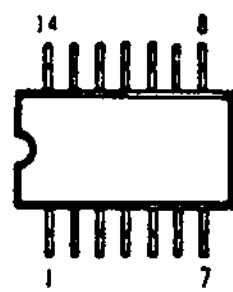


(TOP VIEW)

CXP50116
CXP80116
MC14094BF

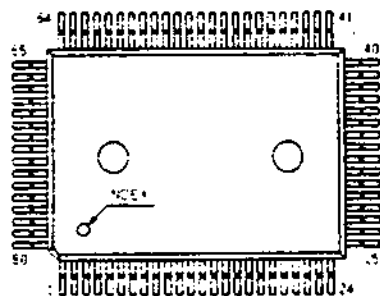


(TOP VIEW)

CX20102
M52018FP

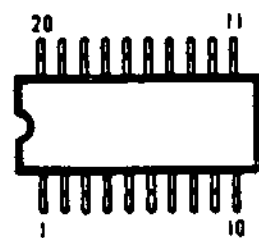


(TOP VIEW)

MC10H116M

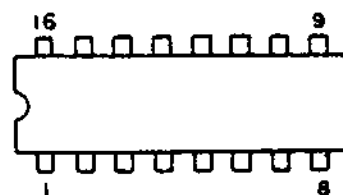


(TOP VIEW)

MC14052BF




M51406FP

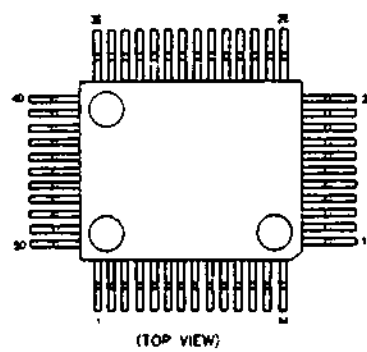


(TOP VIEW)

M52007FP

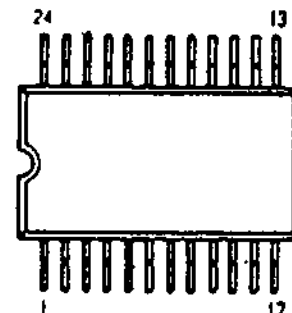

(TOP VIEW)


S-8052ALO-LG-S
S-8054-ALR-LN-S

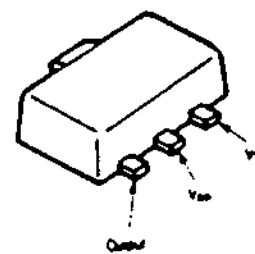


S-81350AG




TC4SU69F
TC4S66F
TC4S81F

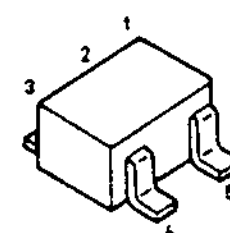


TC7S00F

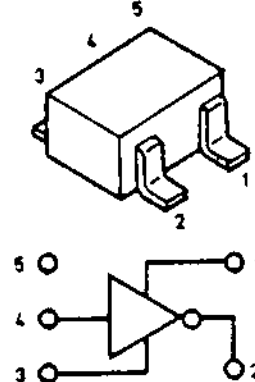


μ PC574J

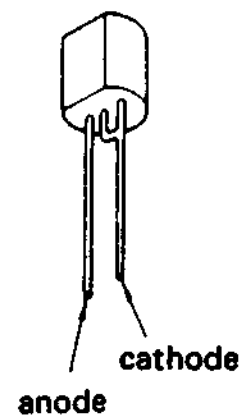


DTA114EK
DTA124EK
DTA143EK
DTA144EK
DTC114EK
DTC124EK
DTC144EK
2SA1037K
2SA1162
2SA1576
2SB624
2SC1623
2SC2412K
2SC3053
2SC3326N
2SC4081

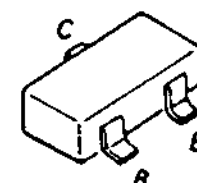



DTA114EU
DTA144EU
DTC124EU
DTC143EU
DTC144EU
DTC144TU
DTC144WU
2SD1119

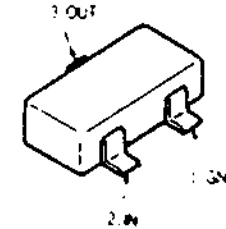


EE-TP109

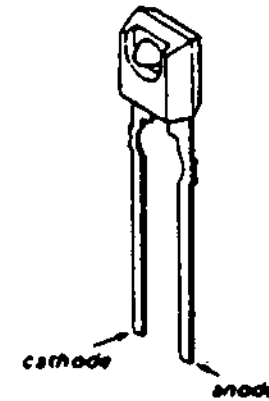


FMS1
FMY3
FMY4

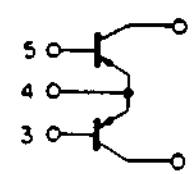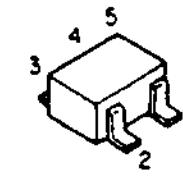


FMW1
FMW2

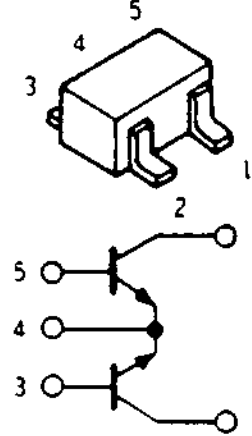


IMH2
IMX2

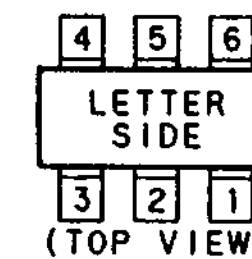


XN4210

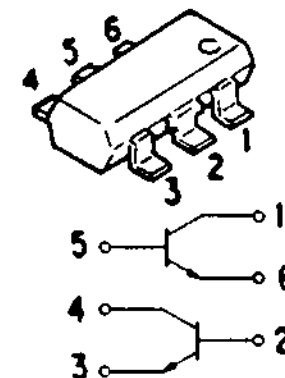


2SB1121

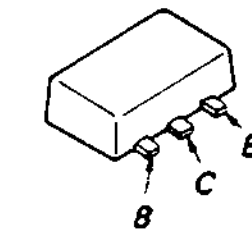


2SB1202

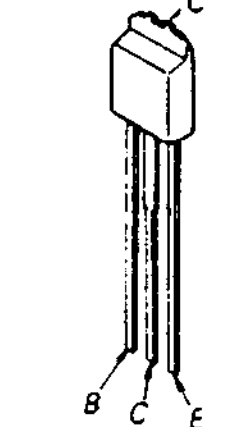


2SC2669

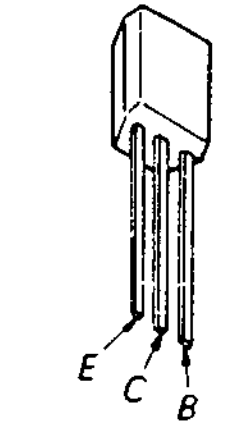


2SC3355

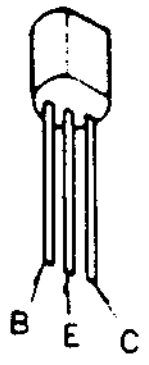


GL-1PR102

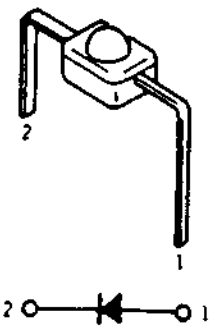

SB10-05CP

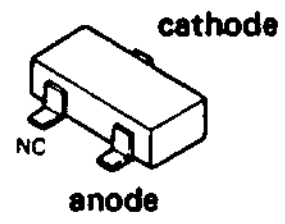


2SD1760

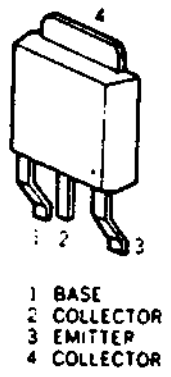


GL452S




TLP-907

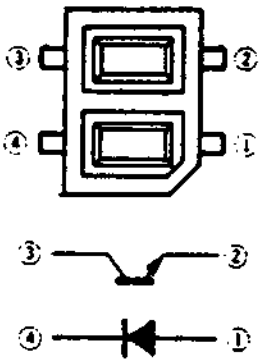


2SK209G

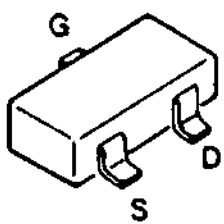


**HZS12A1L
1SS119**

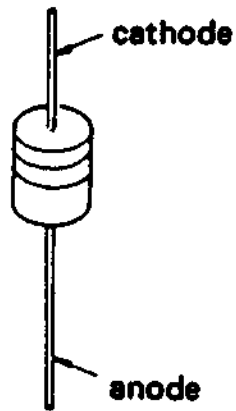


1SS226

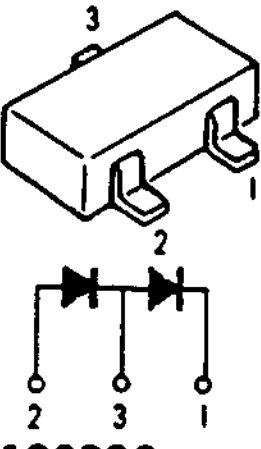


2SK1469

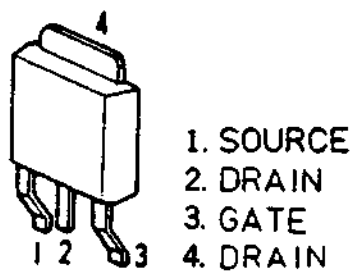


**IMN10
MA121**

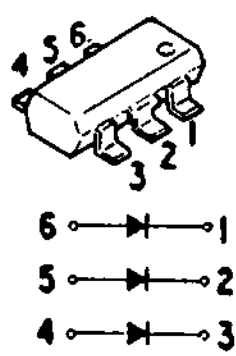


1S2836

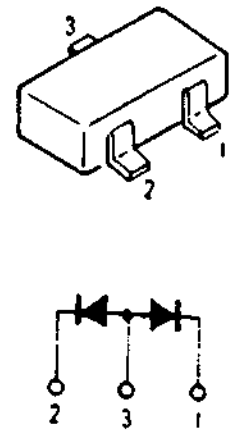


DAN202U

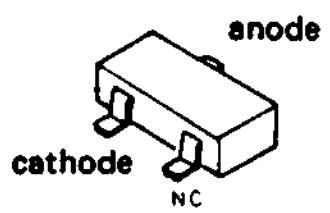

MA152WK


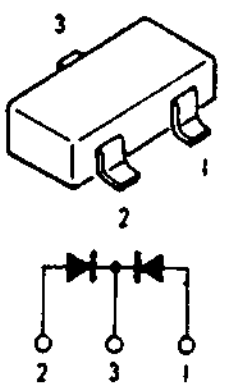


DAP202U

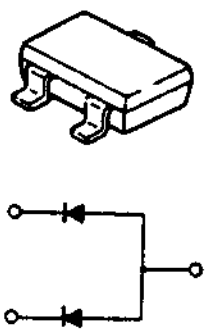

**RD3.6M-B2
RD5.1M-B2
RD5.6M-B2
RD6.2M-B1
RD9.1M-B1
RD9.1M-B2
SB05-05CP**



GL-1EG11

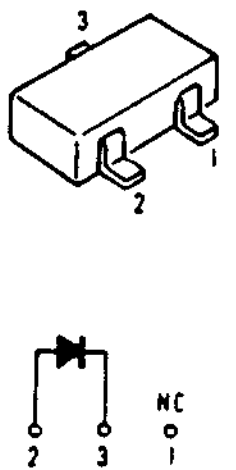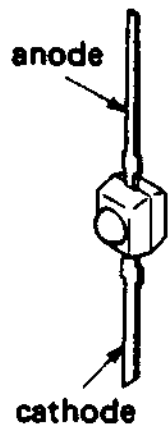


SECTION 5 EXPLODED VIEWS


NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

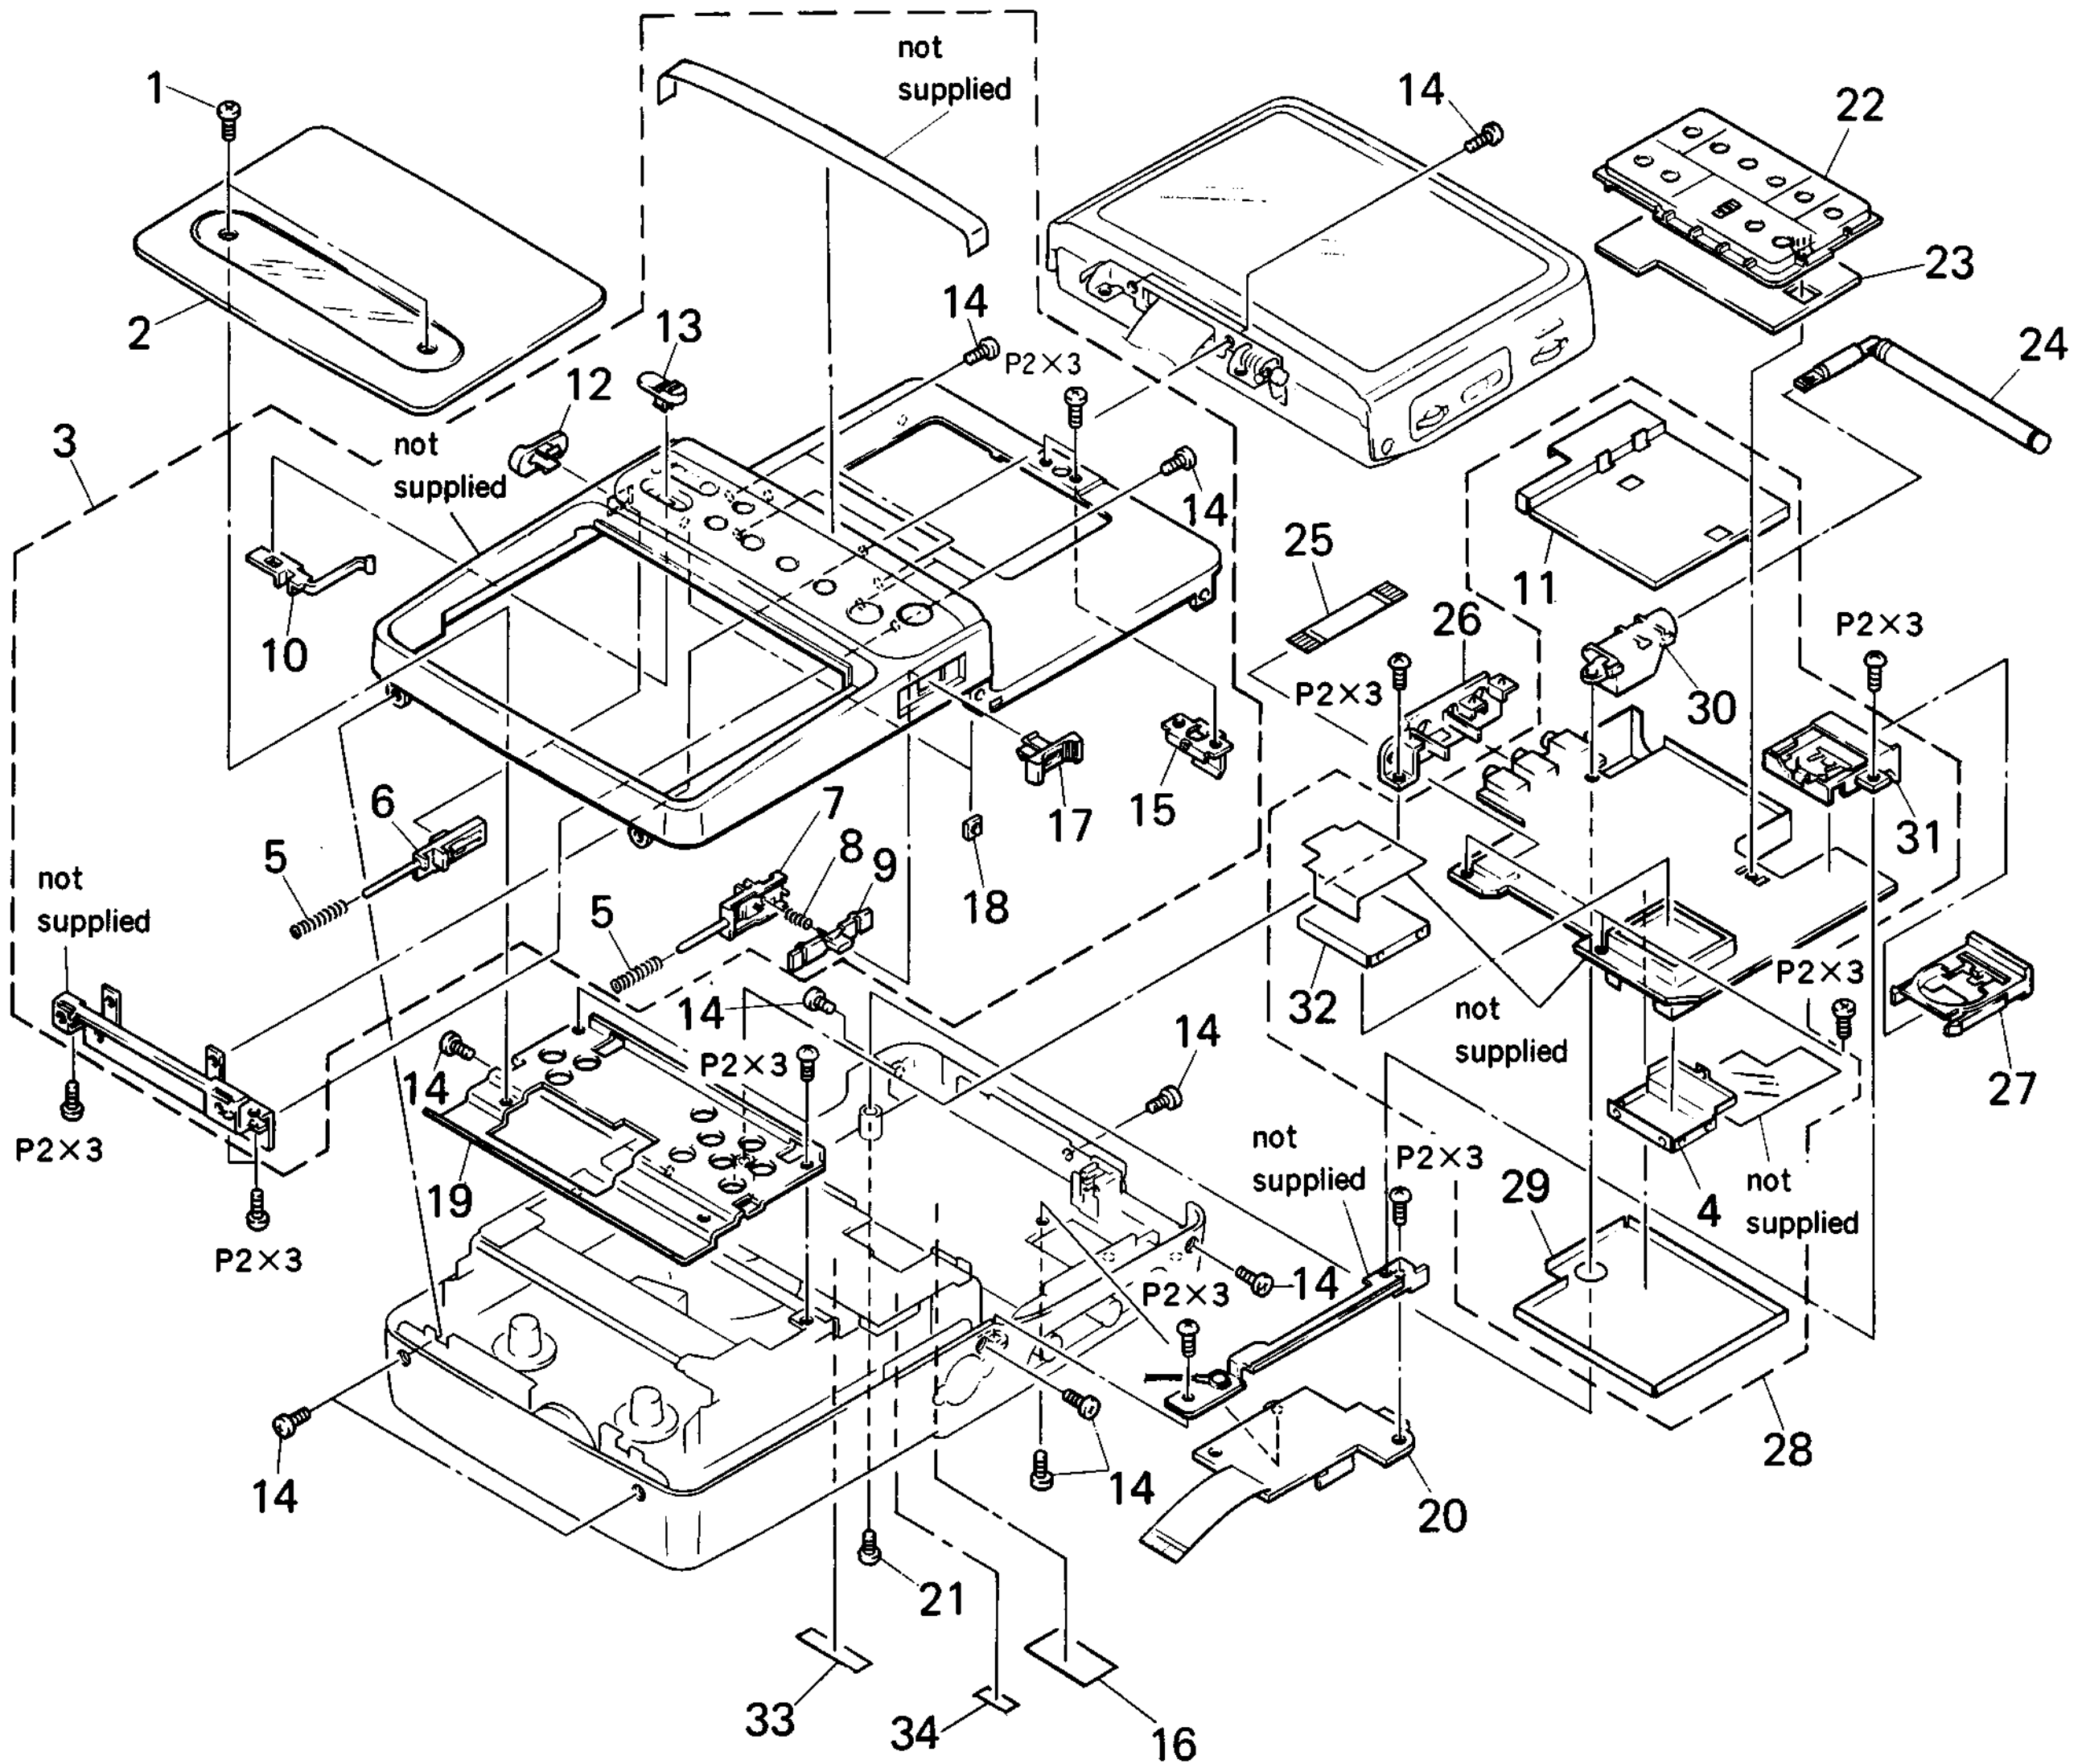


5-1. CABINET (UPPER) ASSEMBLY




Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
1	3-719-555-11	SCREW (M1.7X5.5)		18	3-718-233-01	NUT, PLATE	
2	X-3728-871-1	LID ASSY, CASSETTE COMPARTMENT		19	X-3728-890-1	REINFORCEMENT ASSY	
3	X-3749-097-1	CABINET ASSY, UPPER	5-10, 12-18	20	* A-7071-210-A	DC-22 (A) BOARD, COMPLETE	
4	3-746-907-01	LID, TDD SHIELD CASE		21	3-719-381-21	SCREW (M2X6)	
5	3-741-137-01	SPRING, COMPRESSION		22	X-3749-096-1	HOLDER ASSY, SB	
6	3-740-655-01	BUTTON, EJECT LOCK		23	* 1-634-346-11	SB-3 BOARD	
7	3-744-133-01	PLATE, SLIDE, POWER		24	1-501-456-11	ANTENNA, TELESCOPIC	
8	3-303-973-00	SPRING, COMPRESSION		25	1-575-856-11	CABLE,FLAT(1.0MM PITCH) 7 CORE	
9	3-744-128-01	BUTTON, POWER LOCK		26	3-744-165-01	COVER, HP JACK	
10	3-744-132-01	PLATE, SLIDE, REC		27	X-3728-883-1	HOLDER ASSY, BATTERY	
11	X-3728-886-1	LID ASSY, TU SHIELD CASE		28	* A-7062-317-A	TU-123 BOARD, COMPLETE	4, 11, 29-32
12	3-740-647-01	BUTTON, EJECT		29	3-746-915-01	LID, REAR, TU SHIELD CASE	
13	3-740-648-11	BUTTON, POWER		30	3-744-166-01	HOLDER, ANTENNA	
14	3-719-381-01	SCREW (M2X4)		31	X-3728-887-1	GUIDE ASSY, BATTERY	
15	X-3940-043-1	PLATE, LOCK ASSY		32	3-746-908-01	LID, REAR, TDD SHIELD CASE	
16	* 3-749-513-01	LABEL, MODEL NUMBER (U/C)		33	* 3-704-386-01	LABEL, TELESONIC	
17	3-744-131-01	BUTTON, POWER		34	* 3-704-367-01	LABEL	

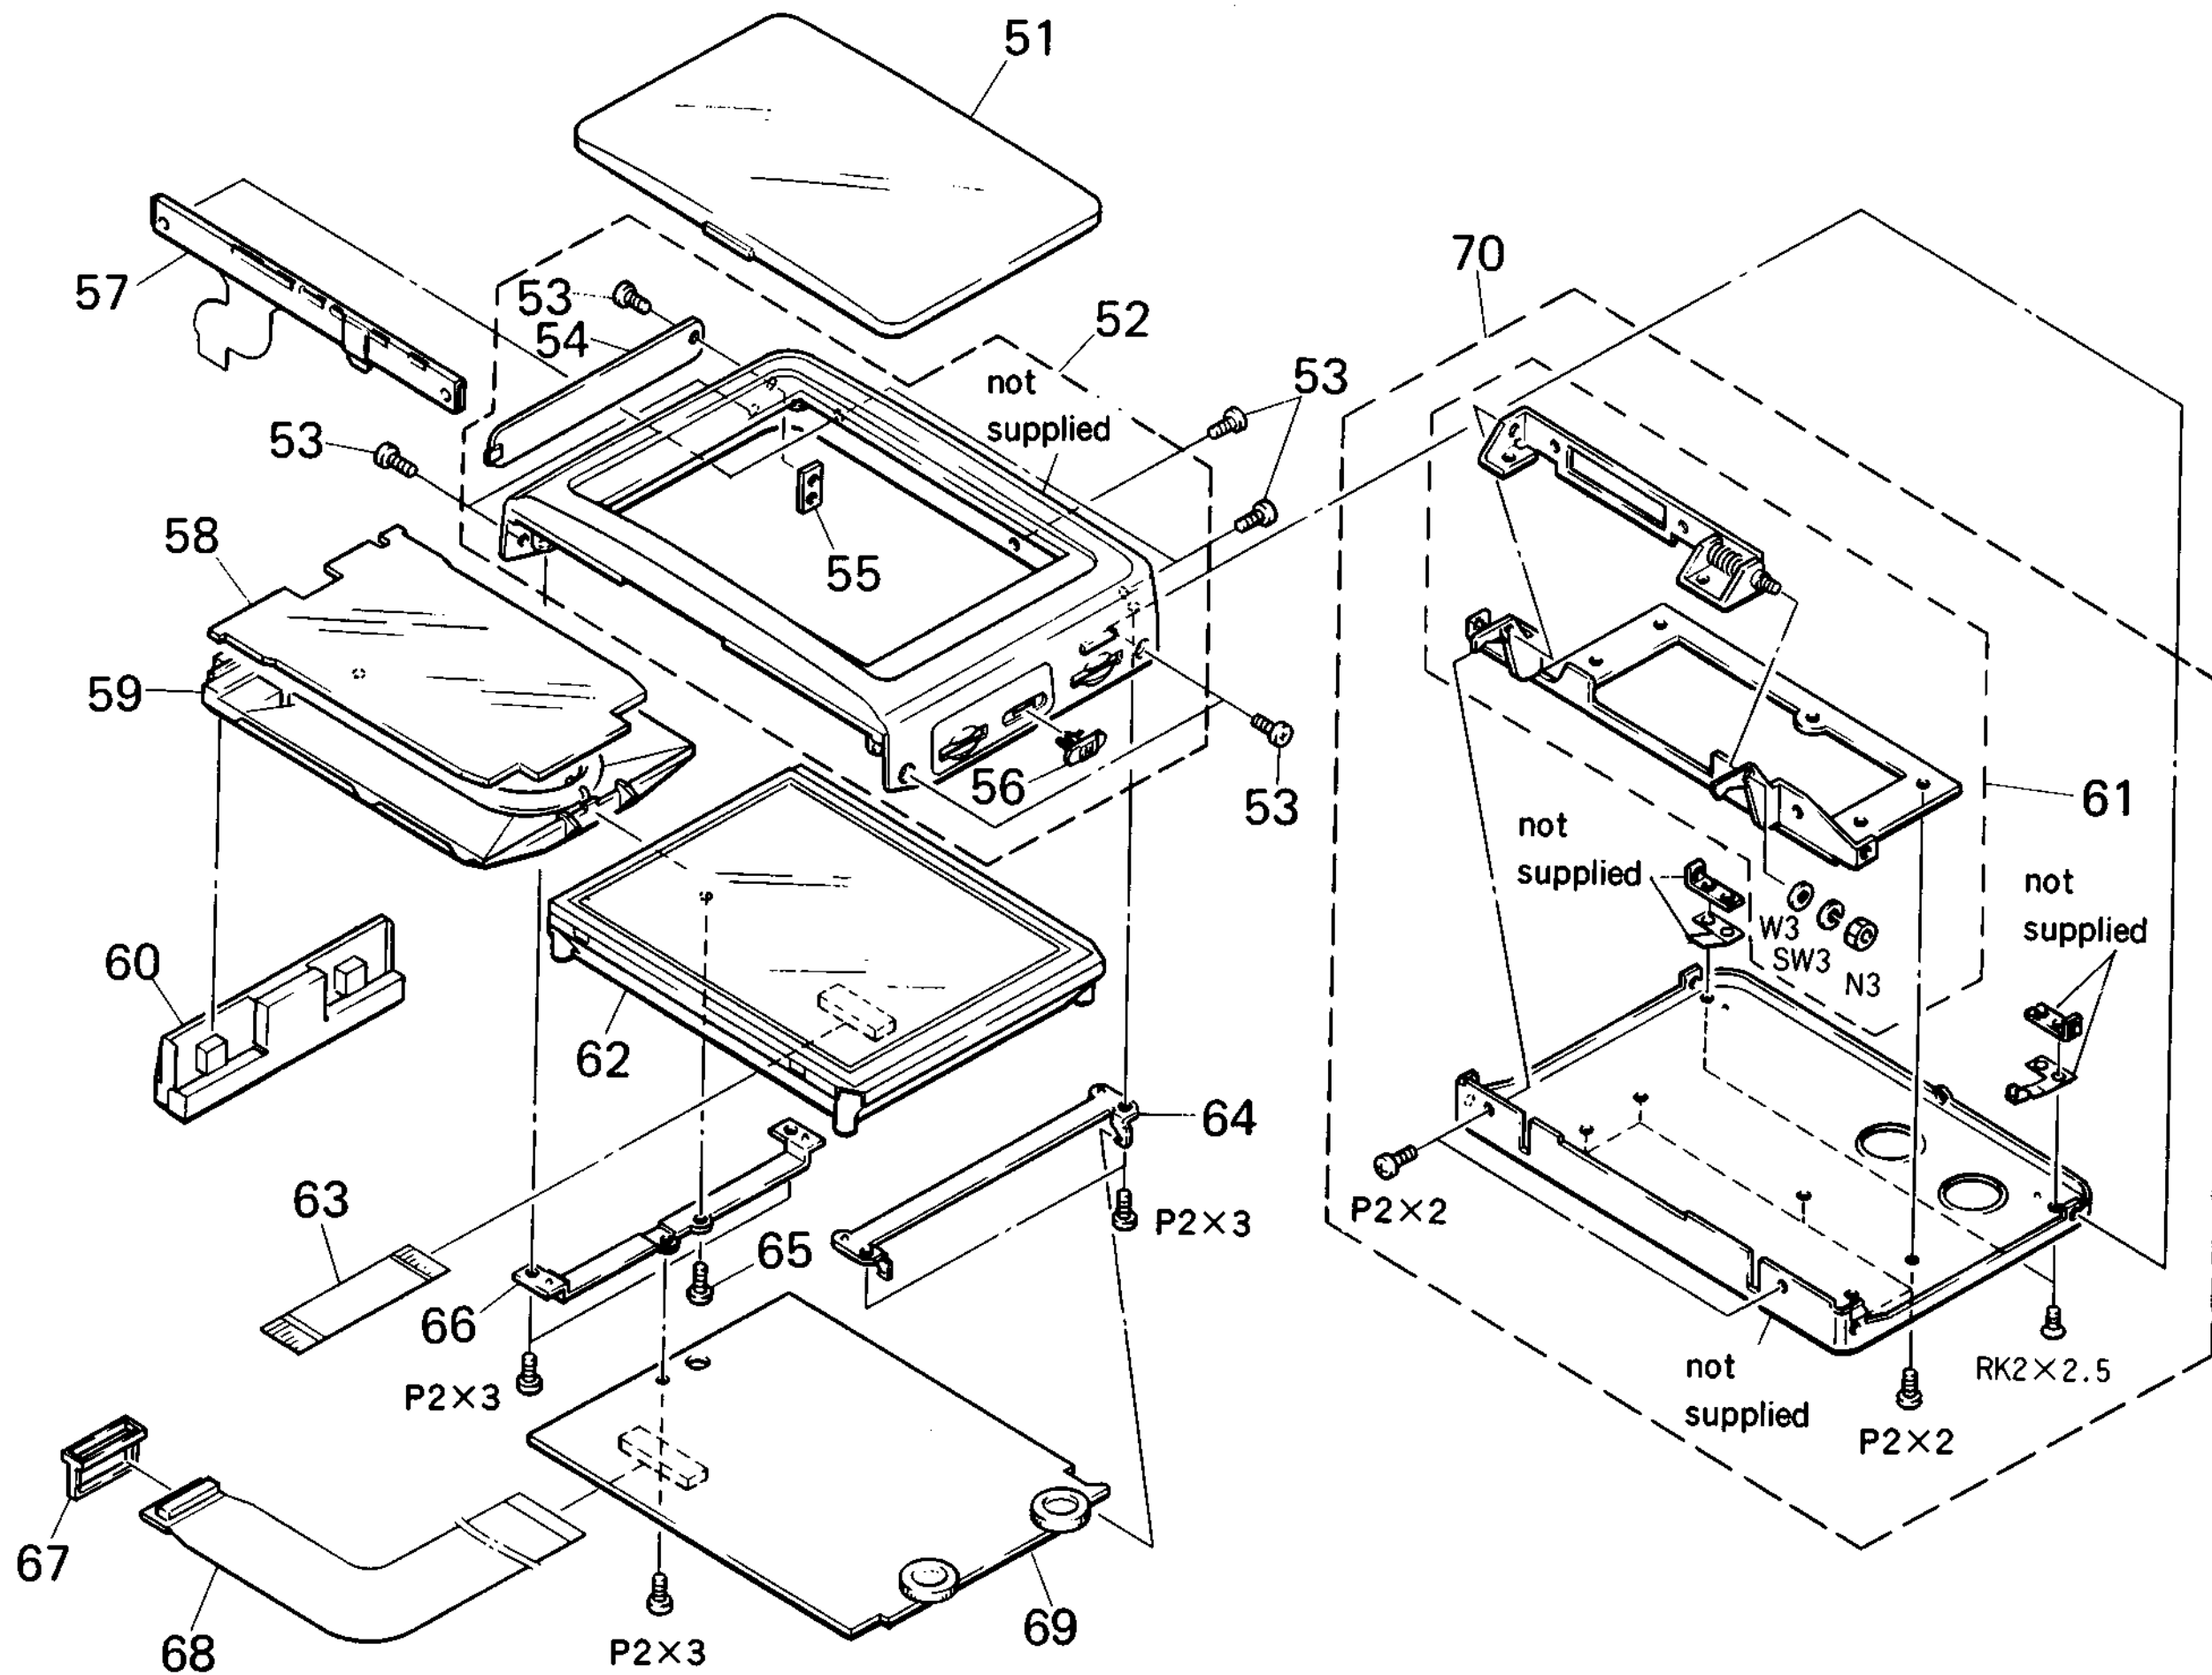5-2. SC UNIT ASSEMBLY




<p>Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.</p>	<p>Note: Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	--

Ref.No	Part No.	Description	Remark
51	3-744-142-01	WINDOW, SC	
52	X-3728-878-1	CABINET ASSY, UPPER, SC	
53	3-719-381-01	SCREW (M2X4)	
54	3-744-174-01	COVER, SIDE	
55	3-730-103-01	NUT, PLATE	
56	3-744-162-01	KNOB, DBB	
57	1-466-334-11	SWITCH BLOCK, CONTROL	
58	3-744-127-01	CURTAIN	
59	1-518-668-11	TUBE UNIT, FLUORECENT (BL901)	
60	 1-466-333-11	INVERTER UNIT, DC-AC	
61	X-3749-223-1	ARM, HINGE ASSY	


Ref.No	Part No.	Description	Remark
62	1-809-002-11	DISPLAY MODULE, LIQUID CRYSTAL (LCD 901)	
63	1-575-858-11	CABLE, FLAT (1.0MM PITCH) 16 CORE (LCD FLEXIBLE)	
64	* 3-744-198-01	BRACKET (R), LCD	
65	3-719-408-01	SCREW (B2), TAPPING, P3	
66	* 3-744-199-01	BRACKET (L), LCD	
67	3-744-152-01	HOLDER, FPC	
68	1-634-994-11	FP-271 FLEXIBLE BOARD	
69	* A-7061-937-A	RG-8 BOARD, COMPLETE	
70	X-3728-882-1	CABINET (BOTTOM) ASSY, SC	61

5-3. CABINET (LOWER) ASSEMBLY

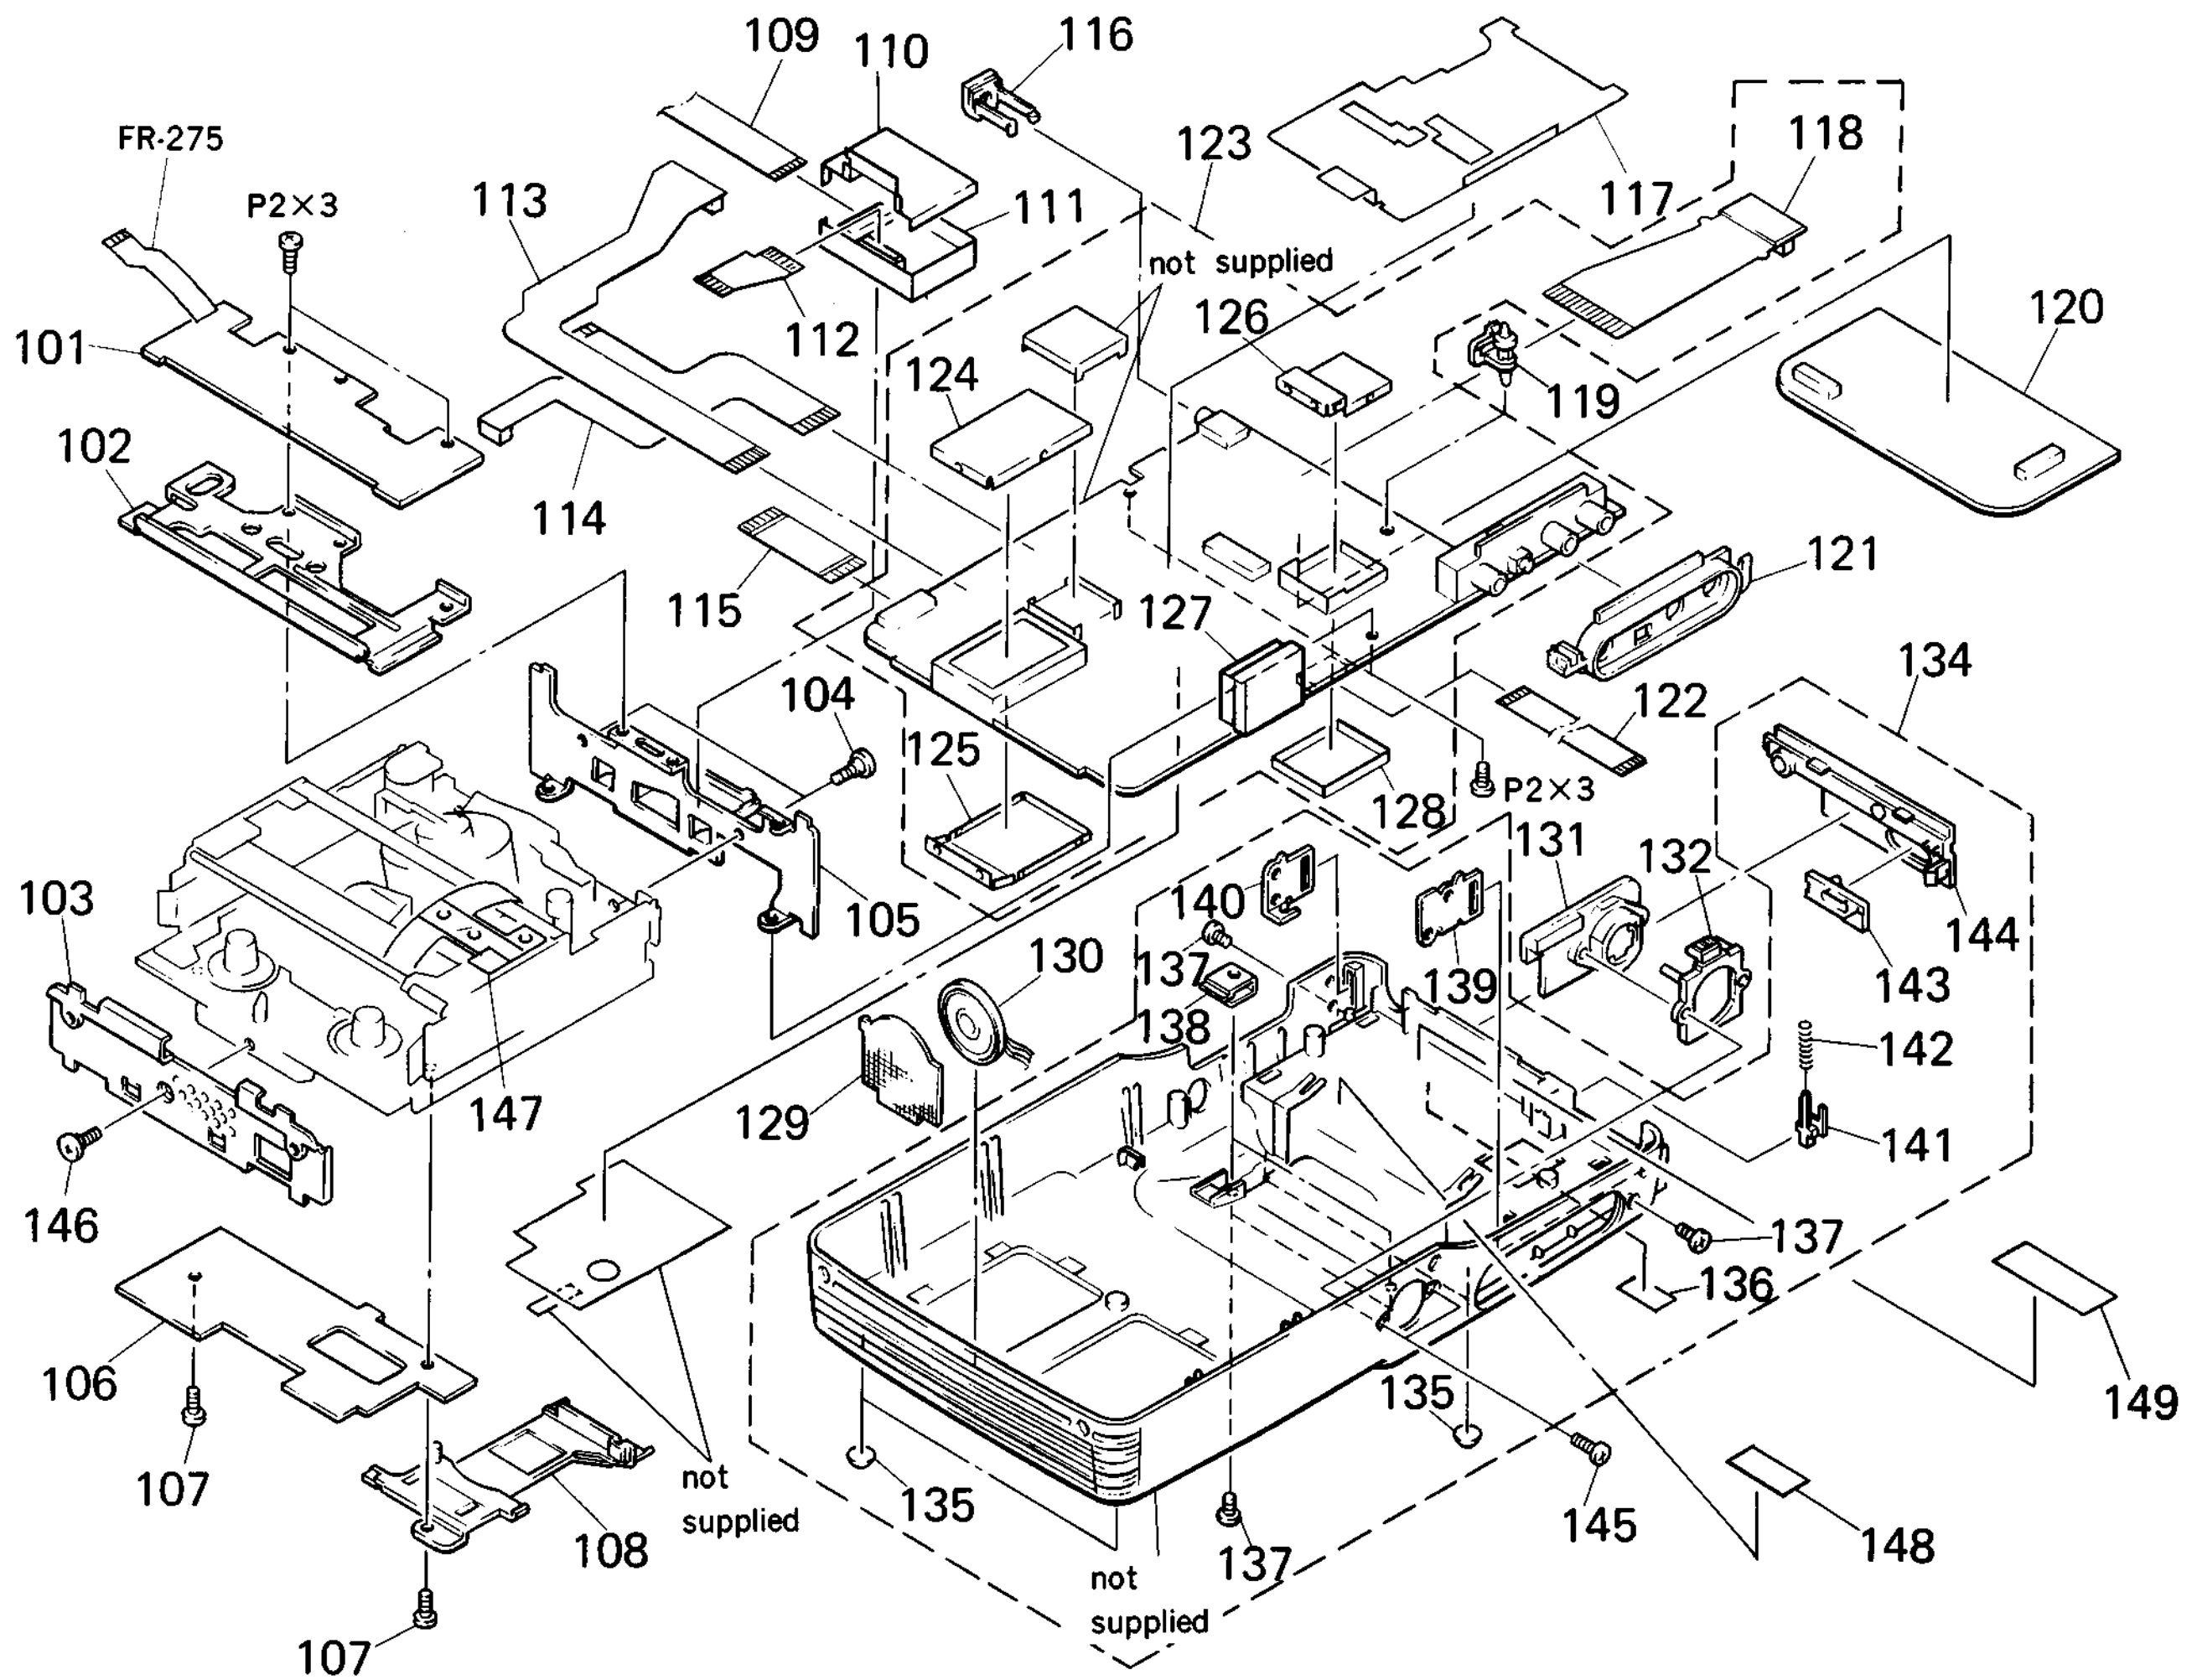

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
101	* A-7071-211-A	KB-10 (A) BOARD, COMPLETE		125	* X-3728-888-1	LID ASSY, REAR,SDD SHIELD CASE	
102	X-3728-889-1	FRAME ASSY, KB		126	* 3-746-903-01	CASE (LID), SHIELD, INDEX	
103	X-3728-884-1	FRAME (FRONT) ASSY, MD		127	A-7061-935-A	CC-32 BOARD, COMPLETE	
104	3-732-791-11	SCREW (M2X3)		128	* X-3728-893-1	CASE (REAR LID) ASSY, SHIELD	
105	X-3728-891-1	FRAME (REAR) ASSY, MD		129	X-3728-892-1	SPACER ASSY, SP	
106	* 1-634-347-11	UC-6 BOARD		130	1-544-323-11	SPEAKER	
107	3-719-408-01	SCREW (B2), TAPPING, P3		131	* 1-634-345-11	CN-6 BOARD	
108	* 3-744-176-01	COVER, MD		132	3-744-157-01	SPACER, CN	
109	1-634-992-11	FP-269 FLEXIBLE BOARD		134	X-3749-098-1	CABINET ASSY, LOWER	135-144
110	X-3728-885-1	LID ASSY, RP SHIELD CASE		135	3-740-607-01	CUSHION	
111	A-7061-932-A	RP-75 BOARD, COMPLETE		136	* 3-747-370-01	LABEL, BATTERY FITTING	
112	1-634-996-11	FP-273 FLEXIBLE BOARD		137	3-719-381-01	SCREW (M2X4)	
113	1-634-997-11	FP-274 FLEXIBLE BOARD		138	3-736-496-01	BRACKET, STAND	
114	1-634-995-11	FP-272 FLEXIBLE BOARD		139	3-744-156-01	HOOK (R), BELT	
115	1-575-859-11	CABLE,FLAT(1.0MM PITCH)15 CORE		140	3-744-155-01	HOOK (L), BELT	
116	3-744-169-01	COVER, CS JACK		141	3-744-159-01	LEVER, RELEASE	
117	* 3-746-901-01	COVER, SV		142	3-564-951-00	SPRING, COMPRESSION	
118	1-634-993-11	FP-270 FLEXIBLE BOARD		143	3-744-161-01	KNOB, RELEASE	
119	3-742-816-01	SUPPORT (V), PC BOARD		144	3-744-168-01	COVER, ANTENNA	
120	* A-7062-315-A	AU-53 (A) BOARD, COMPLETE		145	3-719-381-21	SCREW (M2X6)	
121	3-744-175-01	COVER, IO JACK		146	3-744-603-11	SCREW	
122	1-575-857-11	CABLE,FLAT(1.0MM PITCH)12 CORE		147	3-746-960-01	RIBBON, LID RETAINER	
123	* A-7062-316-A	SV-38 (A) BOARD, COMPLETE	118, 124-128	148	* 3-719-611-41	LABEL, FUSE RATING	
124	* 3-746-902-01	CASE (LID), SHIELD, SDD		149	* 3-704-256-01	LABEL, CAUTION	


5-4. MECHANISM DECK ASSEMBLY (1)

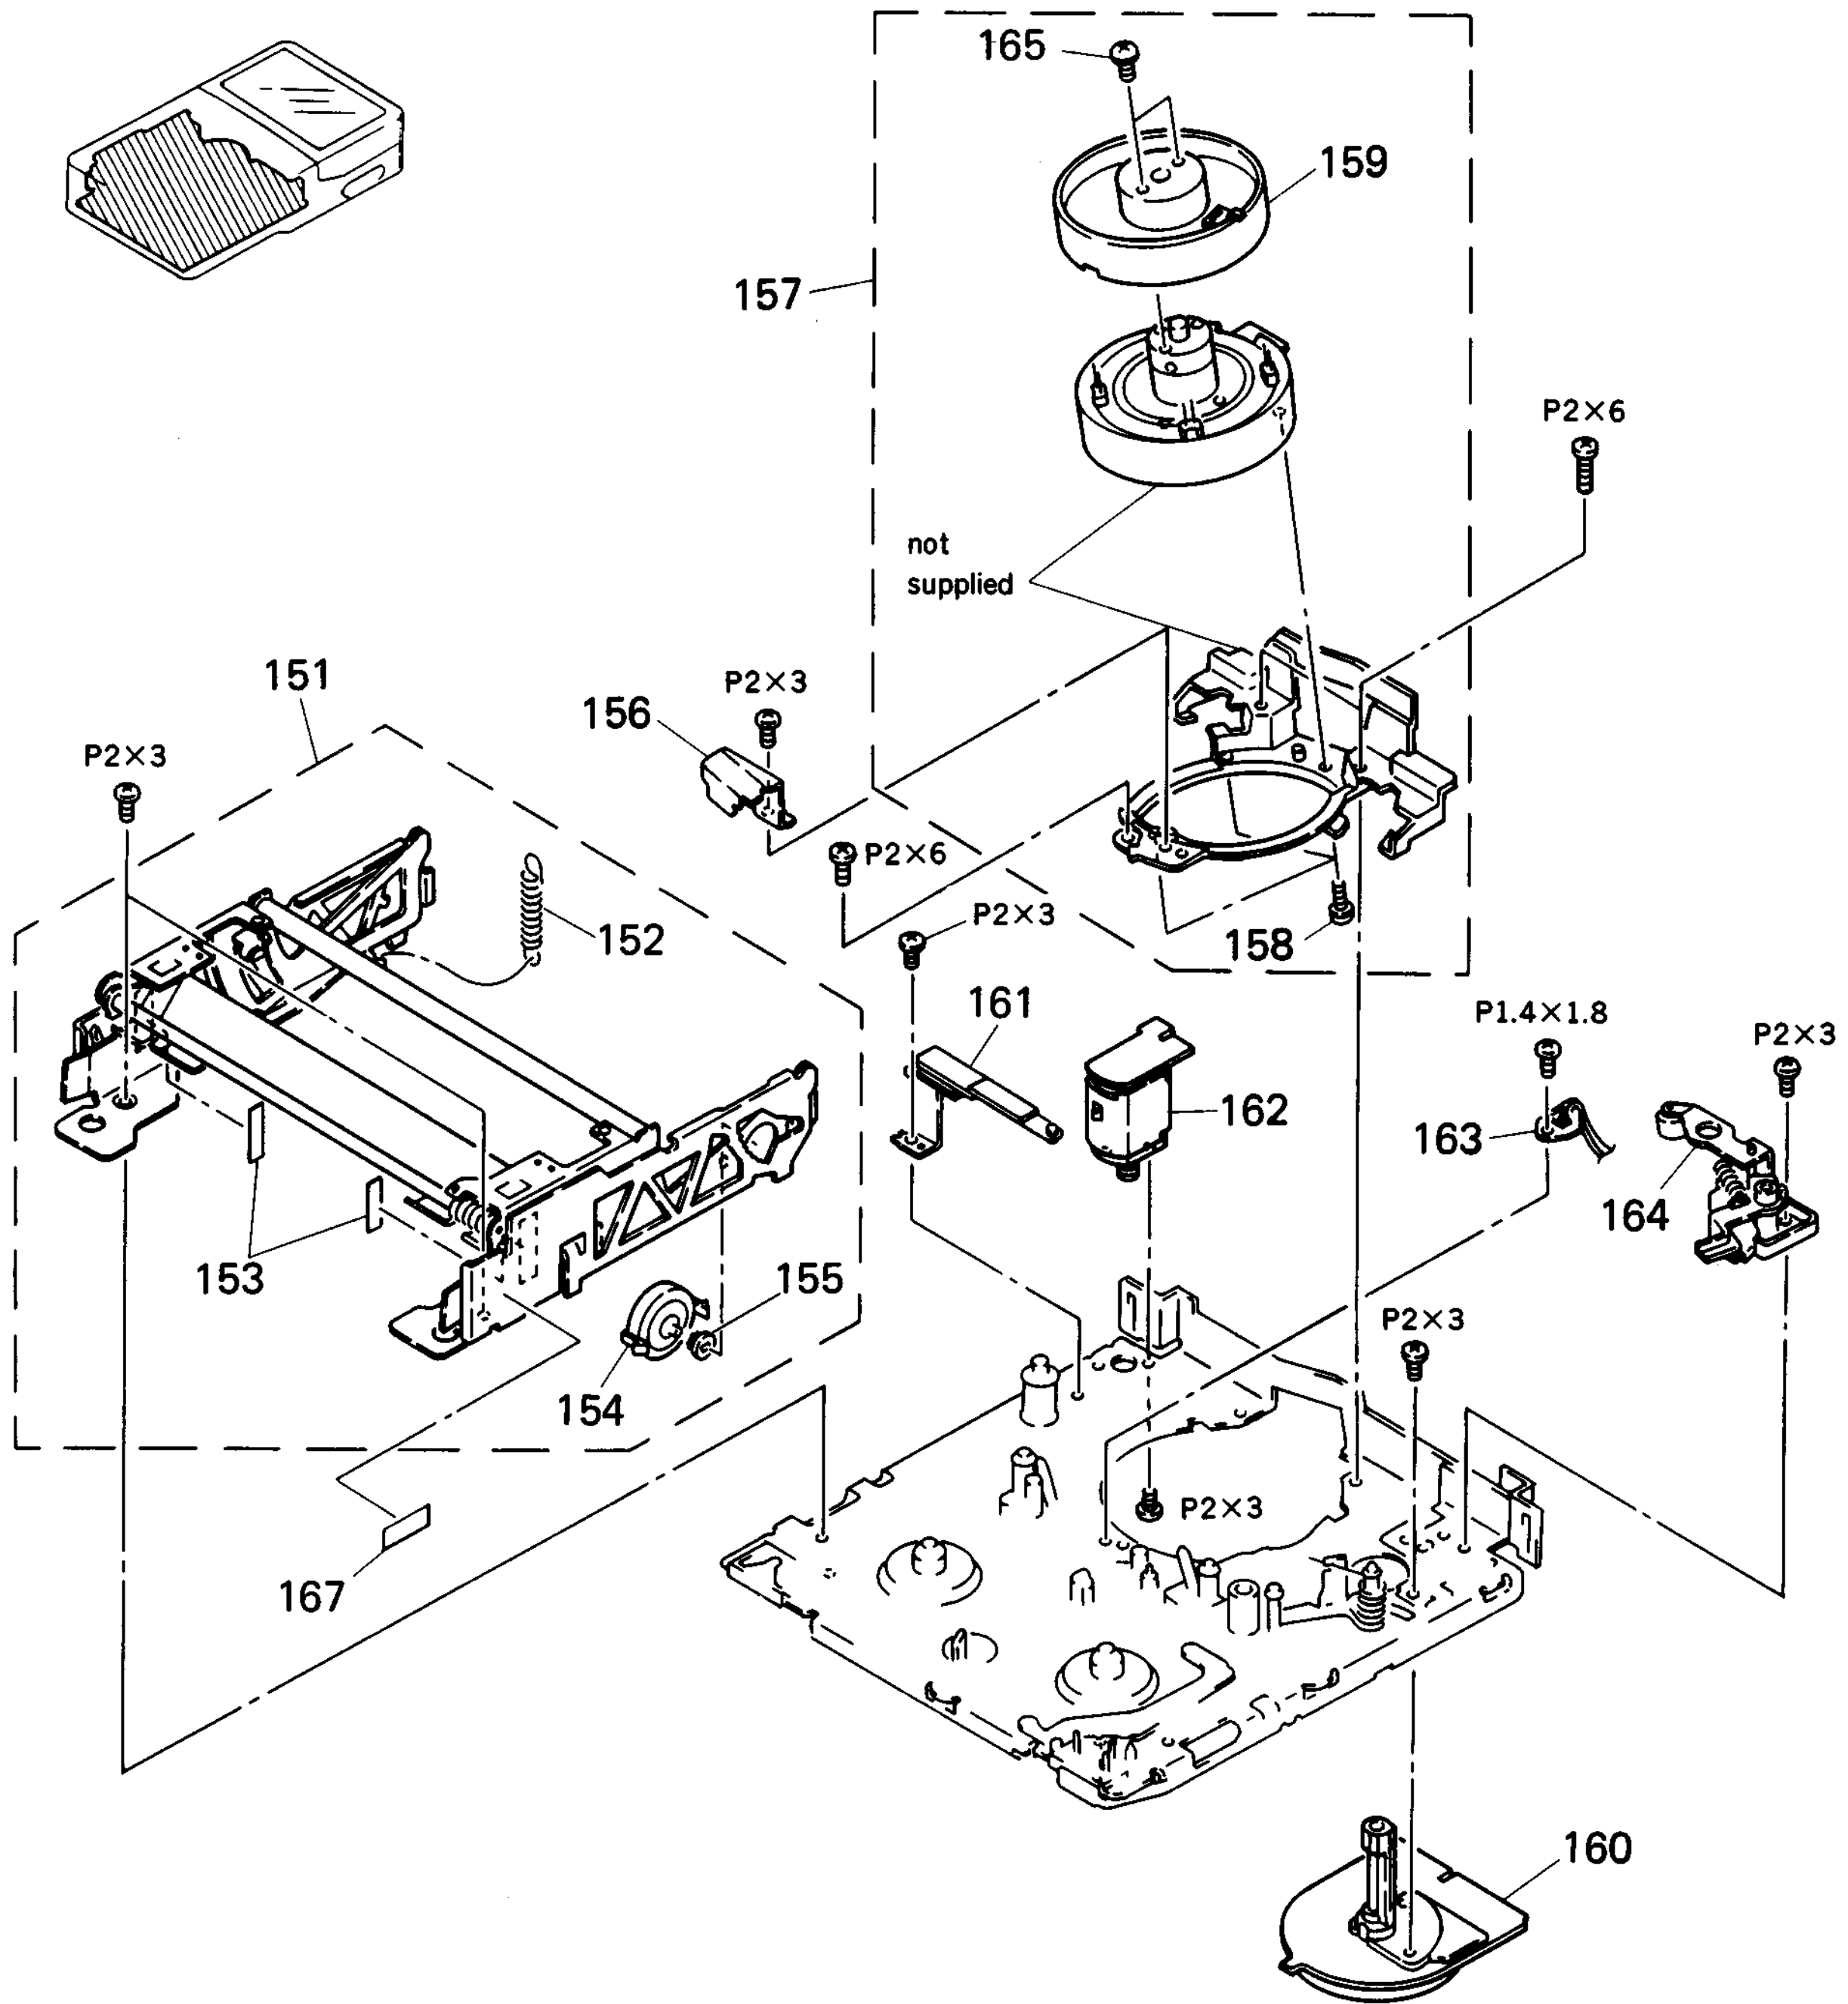

Ref.No	Part No.	Description	Remark
151	X-3728-873-1	CASSETTE COMPARTMENT ASSY	152-155
152	3-728-825-03	SPRING, TENSION	
153	*3-728-829-01	TAPE	
154	3-728-867-02	DAMPER, OIL	
155	3-728-828-02	GEAR, DAMPER	
156	3-728-868-01	GUARD, GUIDE	
157	A-7048-382-A	DRUM ASSY, (DGR-69A-R)	158, 159, 165
158	3-686-493-01	SCREW, (M2X5), P1	


Ref.No	Part No.	Description	Remark
159	A-7049-324-A	DRUM ASSY, ROTARY (UPPER)(DGR-69-R)	
160	8-835-331-01	MOTOR, DC U-22A (CAPSTAN)(M902)	
161	X-3728-864-1	GROUND ASSY, SHAFT	
162	A-7040-208-A	MOTOR ASSY, THREADING (LOADING) (M903)	
163	1-808-505-12	SENSOR (DEW)	
164	A-7040-207-A	ROLLER BLOCK ASSY, HC	
165	3-727-847-01	SCREW (M2X4)	
167	*3-730-176-01	SHEET, MD	

5-5. MECHANISM DECK ASSEMBLY (2)

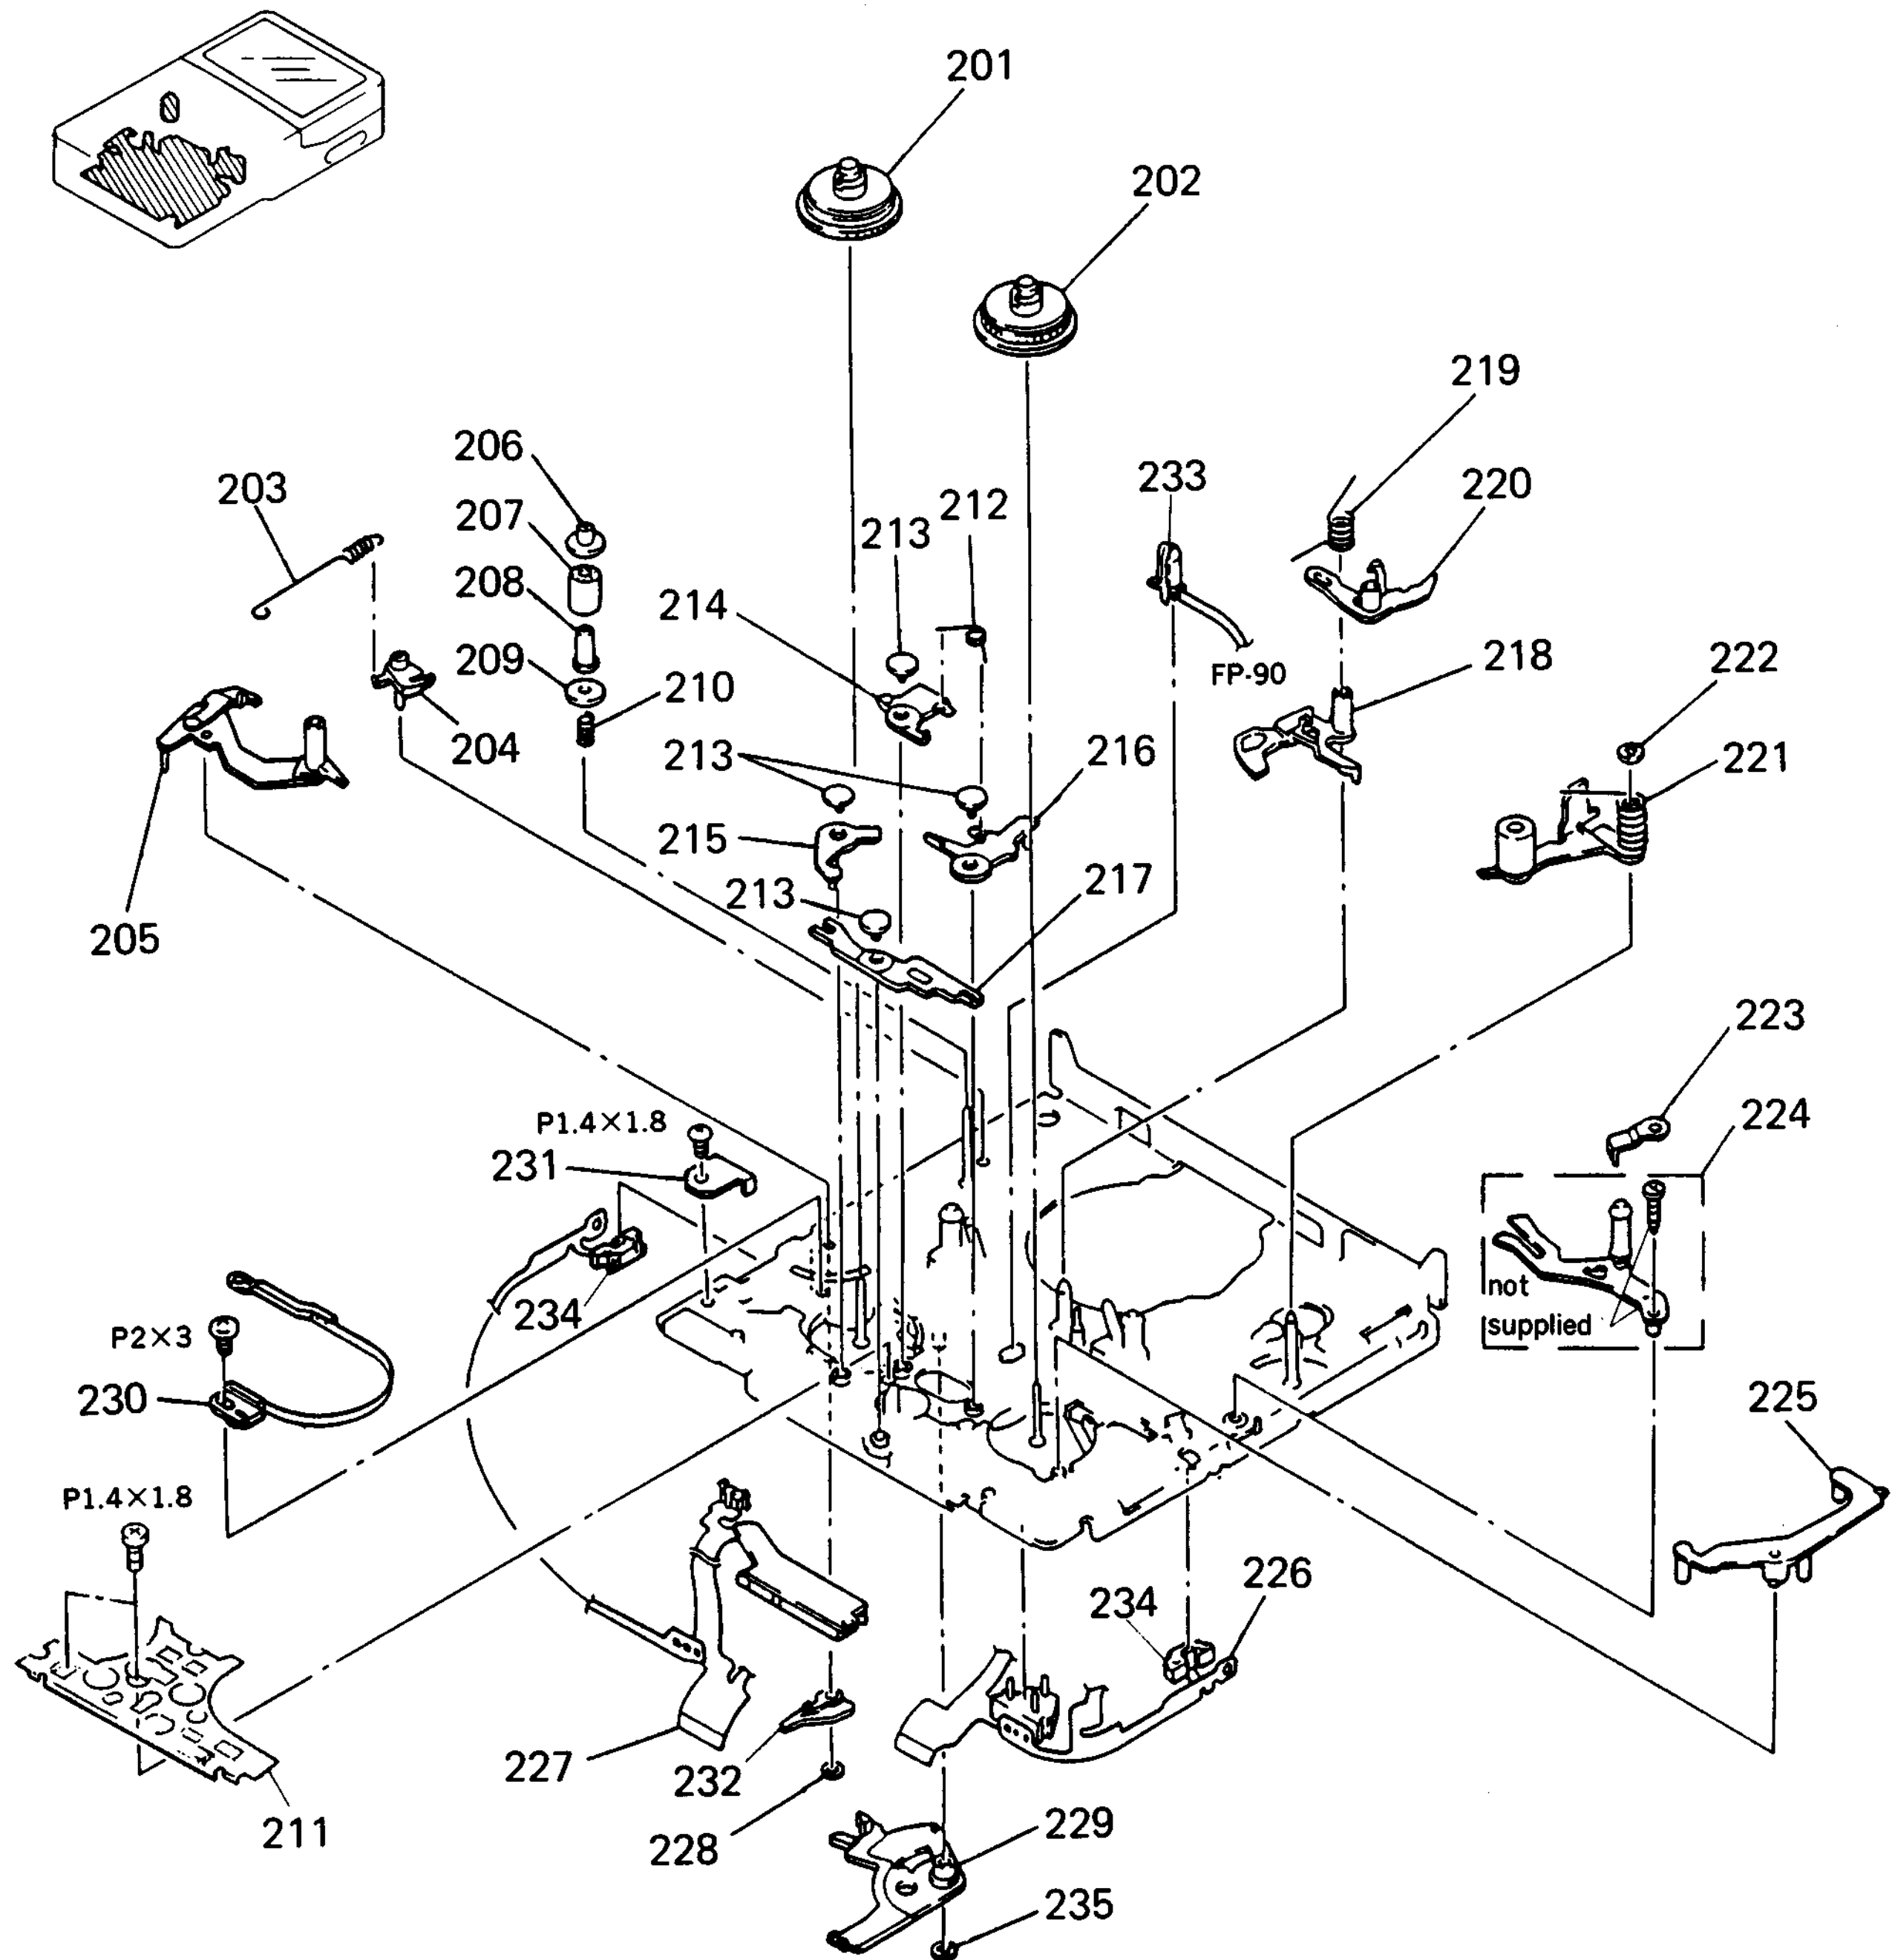

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
201	X-3728-851-1	TABLE ASSY, REEL, S		219	3-726-864-01	SPRING (RK), TORSION	
202	X-3728-855-1	TABLE ASSY, REEL, T		220	3-728-852-02	ARM, RK STOPPER	
203	3-736-414-01	SPRING, TENSION		221	A-7040-219-A	ARM BLOCK ASSY, PINCH	
204	3-728-855-03	ARM, ADJUSTMENT		222	3-669-465-00	WASHER (1.5), STOPPER	
205	X-3728-867-1	ARM ASSY (S), TENSION REGULATOR		223	3-728-808-01	SPRING, LEAF	
206	3-726-884-01	FLANGE, UPPER, TG2		224	X-3728-869-1	ARM ASSY, TG7	
207	3-726-883-01	ROLLER, TG2		225	3-728-848-01	ARM, LB RELEASE	
208	3-726-885-01	SLEEVE, TG2		226	1-628-061-12	FP-90 FLEXIBLE BOARD	
209	3-726-882-02	FLANGE, LOWER, TG2		227	1-628-060-12	FP-89 FLEXIBLE BOARD	
210	3-726-886-01	SPRING, COMPRESSION		228	3-321-393-11	WASHER, STOPPER	
211	3-741-195-01	PLATE, BLIND, RK		229	X-3728-863-1	LEVER ASSY, SW	
212	3-726-866-01	SPRING (ST), TORSION		230	X-3728-859-1	BAND ASSY, TENSION REGULATOR	
213	3-726-858-01	PIN, SHAFT RETAINER		231	3-730-125-01	RETAINER, SW	
214	3-728-849-01	BRAKE, S		232	X-3728-857-1	STOPPER ASSY, TENSION REGULATOR	
215	3-726-852-01	BRAKE, LB		233	3-728-837-01	HOLDER, LED	
216	3-728-850-01	BRAKE, T		234	3-728-869-02	HOLDER, SENSOR	
217	3-726-853-01	LEVER, LB		235	3-726-829-01	WASHER, STOPPER	
218	3-728-875-01	STOPPER, RK					

5-6. MECHANISM DECK ASSEMBLY (3)

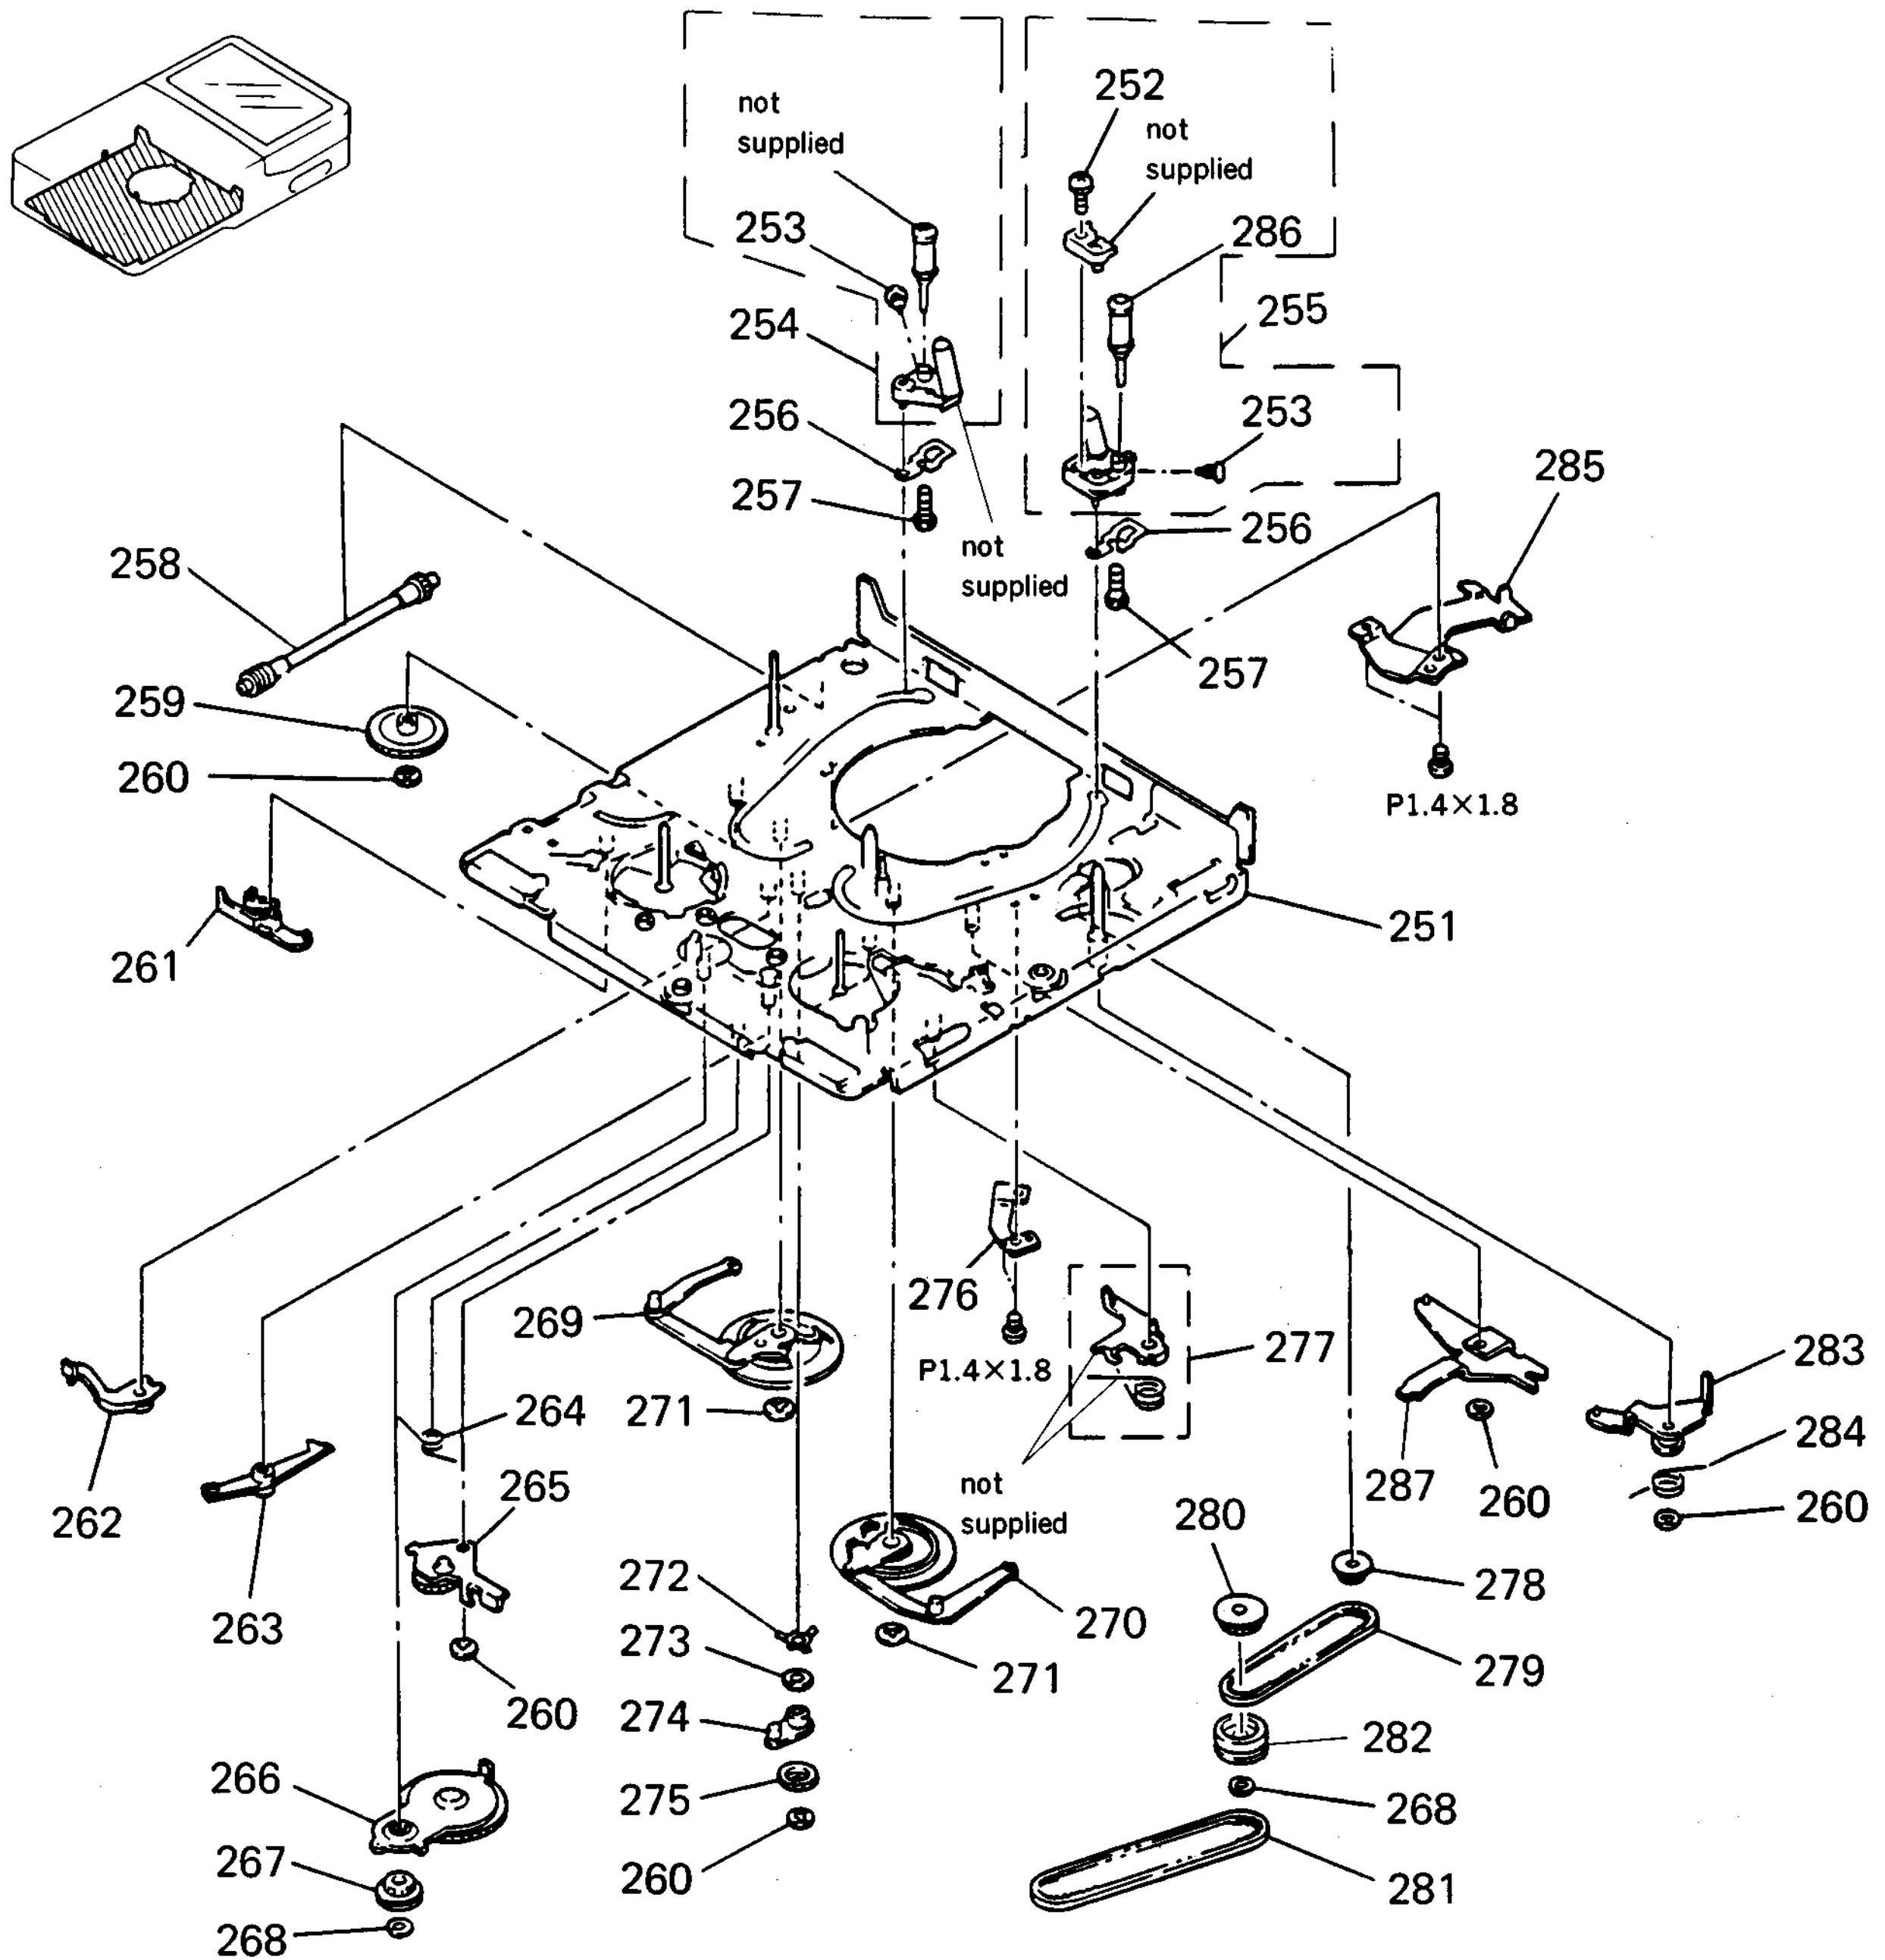

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
251	X-3728-862-1	CHASSIS ASSY, MECHANICAL		269	X-3728-842-1	GEAR (LEFT) ASSY, DRIVE	
252	3-736-473-01	SCREW (M2X0.25)(THREE LOCK)		270	X-3728-843-1	GEAR (RIGHT) ASSY, DRIVE	
253	3-726-822-01	SCREW (M1.4X2) (STEP), HEAD		271	3-669-465-00	WASHER (1.5), STOPPER	
254	A-7040-204-A	COASTER (LEFT) BLOCK ASSY	253	272	3-726-867-01	SPRING, LEAF	
255	A-7040-215-A	COASTER (RIGHT)BLOCK ASSY(NIS)	252, 253, 286	273	3-701-436-21	WASHER, POLYETHYLENE	
256	3-736-485-01	SPRING, LEAF, COSTER		274	3-726-857-02	ARM, UL	
257	3-726-830-01	SCREW (M1.4X4) (THREE LOCK)		275	3-726-856-02	GEAR, UL	
258	X-3728-868-1	WORM ASSY		276	*3-726-805-01	REINFORCEMENT (TT)	
259	3-744-109-01	GEAR, WHEEL		277	X-3726-808-2	BRAKE ASSY, TS	
260	3-726-829-01	WASHER, STOPPER		278	X-3726-805-1	GEAR ASSY, JOINT	
261	3-728-842-01	LEVER, EJECT		279	3-728-866-11	BELT (S), TIMING	
262	3-728-851-01	BRAKE, UL		280	X-3726-838-1	PULLEY (UPPER) ASSY, MIDWAY	
263	3-726-854-01	ARM, BRAKE RELEASE		281	3-741-197-01	BELT (L), TIMING	
264	3-726-865-01	SPRING (LB), TORSION		282	3-741-196-01	PULLEY (LOWER), BELT MIDWAY	
265	A-7040-225-A	GEAR BLOCK ASSY (N), LB		283	X-3726-824-1	ARM ASSY, PINCH SUB	
266	X-3728-866-1	GEAR ASSY, RK		284	3-726-895-01	SPRING	
267	X-3728-858-1	GEAR ASSY, RC		285	X-3726-841-1	REINFORCEMENT (SS) ASSY	
268	3-321-393-11	WASHER, STOPPER		286	X-3728-808-1	ROLLER ASSY (U) (SUS), GUIDE	
				287	X-3728-846-1	LEVER ASSY, THREADING	

SECTION 6 ELECTRICAL PARTS LIST

RP-75

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: μ μ F.

RESISTORS

- All resistors are in ohms.
- F: nonflammable

COILS

- MMH: mH, UH: μ H

SEMICONDUCTORS

In each case, U: μ , for example:
 UA...: μ A..., UPA...: μ PA...,
 UPC...: μ PC, UPD...: μ PD...

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
A-7061-932-A	RP-75 BOARD, COMPLETE	(Ref. No. 1000 series)		<u>COIL</u>			
	*****			L501	1-412-029-11	INDUCTOR CHIP 10UH	
				L502	1-412-033-11	INDUCTOR CHIP 220UH	
				L503	1-412-033-11	INDUCTOR CHIP 220UH	
				L581	1-412-198-11	INDUCTOR 220UH	
				L582	1-412-006-31	INDUCTOR CHIP 10UH	
				<u>TRANSISTOR</u>			
				Q501	8-729-905-12	TRANSISTOR DTA144EU	
				Q550	8-729-905-18	TRANSISTOR DTC144EU	
				Q551	8-729-905-23	TRANSISTOR 2SA1576R	
				Q581	8-729-905-23	TRANSISTOR 2SA1576R	
				Q582	8-729-216-22	TRANSISTOR 2SA1162	
				Q583	8-729-905-23	TRANSISTOR 2SA1576R	
				<u>RESISTOR</u>			
				R502	1-216-825-11	METAL GLAZE 2.2K 5%	1/16W
				R503	1-216-838-11	METAL GLAZE 27K 5%	1/16W
				R504	1-216-838-11	METAL GLAZE 27K 5%	1/16W
				R505	1-216-838-11	METAL GLAZE 27K 5%	1/16W
				R506	1-216-838-11	METAL GLAZE 27K 5%	1/16W
				R507	1-216-825-11	METAL GLAZE 2.2K 5%	1/16W
				R509	1-216-839-11	METAL GLAZE 33K 5%	1/16W
				R510	1-216-831-11	METAL GLAZE 6.8K 5%	1/16W
				R512	1-216-833-11	METAL GLAZE 10K 5%	1/16W
				R514	1-216-833-11	METAL GLAZE 10K 5%	1/16W
				R515	1-216-837-11	METAL GLAZE 22K 5%	1/16W
				R516	1-216-841-11	METAL GLAZE 47K 5%	1/16W
				R517	1-216-825-11	METAL GLAZE 2.2K 5%	1/16W
				R520	1-216-791-11	METAL GLAZE 3.3 5%	1/16W
				R524	1-216-825-11	METAL GLAZE 2.2K 5%	1/16W
				R525	1-216-809-11	METAL GLAZE 100 5%	1/16W
				R526	1-216-809-11	METAL GLAZE 100 5%	1/16W
				R551	1-216-820-11	METAL GLAZE 820 5%	1/16W
				R552	1-216-865-11	METAL GLAZE 3K 5%	1/16W
				R553	1-216-825-11	METAL GLAZE 2.2K 5%	1/16W
				R554	1-216-823-11	METAL GLAZE 1.5K 5%	1/16W
				R555	1-216-837-11	METAL GLAZE 22K 5%	1/16W
				R556	1-216-837-11	METAL GLAZE 22K 5%	1/16W
				R557	1-216-821-11	METAL GLAZE 1K 5%	1/16W
				R558	1-216-839-11	METAL GLAZE 33K 5%	1/16W
				R559	1-216-827-11	METAL GLAZE 3.3K 5%	1/16W
				R560	1-216-827-11	METAL GLAZE 3.3K 5%	1/16W
				R581	1-216-840-11	METAL GLAZE 39K 5%	1/16W
				R582	1-216-837-11	METAL GLAZE 22K 5%	1/16W
				R583	1-216-814-11	METAL GLAZE 270 5%	1/16W
				R584	1-216-813-11	METAL GLAZE 220 5%	1/16W
				R585	1-216-803-11	METAL GLAZE 33 5%	1/16W
				R586	1-216-799-11	METAL GLAZE 15 5%	1/16W
				R587	1-216-821-11	METAL GLAZE 1K 5%	1/16W
				R588	1-216-837-11	METAL GLAZE 22K 5%	1/16W
				R589	1-216-831-11	METAL GLAZE 6.8K 5%	1/16W
				<u>CAPACITOR</u>			
				C501	1-135-180-21	TANTAL CHIP 3.3MF 20%	6.3V
				C502	1-164-361-11	CERAMIC CHIP 0.047MF	16V
				C503	1-135-161-21	TANTAL CHIP 22MF 20%	10V
				C504	1-164-361-11	CERAMIC CHIP 0.047MF	16V
				C505	1-135-161-21	TANTAL CHIP 22MF 20%	10V
				C506	1-164-361-11	CERAMIC CHIP 0.047MF	16V
				C507	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C508	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
				C509	1-164-005-11	CERAMIC CHIP 0.47MF	25V
				C510	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
				C511	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
				C512	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
				C513	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
				C514	1-164-005-11	CERAMIC CHIP 0.47MF	25V
				C515	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
				C516	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C517	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C518	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C519	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C522	1-135-161-21	TANTAL CHIP 22MF 20%	10V
				C523	1-164-360-11	CERAMIC CHIP 0.1MF	16V
				C524	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C525	1-164-360-11	CERAMIC CHIP 0.1MF	16V
				C529	1-164-361-11	CERAMIC CHIP 0.047MF	16V
				C531	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C533	1-135-161-21	TANTAL CHIP 22MF 20%	10V
				C534	1-164-361-11	CERAMIC CHIP 0.047MF	16V
				C535	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
				C550	1-164-227-11	CERAMIC CHIP 0.022MF 10%	25V
				C582	1-162-974-11	CERAMIC CHIP 0.01MF	50V
				C583	1-162-964-11	CERAMIC CHIP 0.001MF 10%	50V
				C584	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
				C585	1-162-953-11	CERAMIC CHIP 100PF 5%	50V
				C586	1-162-955-11	CERAMIC CHIP 150PF 5%	50V
				C587	1-162-952-11	CERAMIC CHIP 82PF 5%	50V
				<u>CONNECTOR</u>			
				CN501	1-565-849-11	SOCKET, CONNECTOR 11P	
				CN502	1-568-740-11	CONNECTOR, FPC (1.0MM)(ZIF)18P	
				CN503	1-568-340-41	CONNECTOR, BOARD TO BOARD 5P	
				<u>DIODE</u>			
				D550	8-719-941-86	DIODE DAN202U	
				<u>IC</u>			
				IC501	8-752-033-38	IC CXA1202R	

Ref.No Part No. Description Remark

VARIABLE RESISTOR

RV501 1-238-092-11 RES, ADJ CERMET 47K
RV502 1-238-092-11 RES, ADJ CERMET 47K

*A-7061-937-A RG-8 BOARD, COMPLETE (Ref. No. 2000 series)

CAPACITOR

C002 1-135-151-21 TANTAL CHIP 4.7MF 20% 4V
C003 1-163-117-00 CERAMIC CHIP 100PF 5% 50V
C004 1-164-161-11 CERAMIC CHIP 0.0022MF 10% 50V
C005 1-164-161-11 CERAMIC CHIP 0.0022MF 10% 50V
C007 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C008 1-135-217-21 TANTAL CHIP 15MF 20% 6.3V
C009 1-135-217-21 TANTAL CHIP 15MF 20% 6.3V
C009 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C010 1-126-206-11 ELECT CHIP 100MF 20% 6.3V
C012 1-135-180-21 TANTAL CHIP 3.3MF 20% 6.3V
C013 1-163-125-00 CERAMIC CHIP 220PF 5% 50V
C014 1-163-125-00 CERAMIC CHIP 220PF 5% 50V
C015 1-163-125-00 CERAMIC CHIP 220PF 5% 50V
C016 1-164-634-11 CERAMIC CHIP 1MF 16V
C018 1-163-011-11 CERAMIC CHIP 0.0015MF 10% 50V
C020 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C021 1-163-097-00 CERAMIC CHIP 15PF 5% 50V
C022 1-135-162-21 TANTAL CHIP 33MF 20% 6.3V
C023 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C024 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C025 1-163-117-00 CERAMIC CHIP 100PF 5% 50V
C026 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C027 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C028 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C029 1-164-634-11 CERAMIC CHIP 1MF 16V
C030 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C031 1-164-634-11 CERAMIC CHIP 1MF 16V
C032 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C033 1-164-634-11 CERAMIC CHIP 1MF 16V
C034 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C035 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C036 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C037 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C038 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C039 1-164-161-11 CERAMIC CHIP 0.0022MF 10% 50V
C040 1-135-181-21 TANTAL CHIP 4.7MF 20% 6.3V
C041 1-135-149-21 TANTAL CHIP 2.2MF 20% 10V
C042 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C043 1-164-182-11 CERAMIC CHIP 0.0033MF 10% 50V
C044 1-126-204-11 ELECT CHIP 47MF 20% 16V
C045 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C046 1-163-113-00 CERAMIC CHIP 68PF 5% 50V
C047 1-126-206-11 ELECT CHIP 100MF 20% 6.3V
C048 1-135-177-21 TANTAL CHIP 1MF 20% 20V
C049 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C051 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C054 1-135-156-21 TANTAL CHIP 6.8MF 20% 10V
C055 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C056 1-135-156-21 TANTAL CHIP 6.8MF 20% 10V
C057 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C058 1-126-199-11 ELECT CHIP 6.8MF 20% 35V
C059 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C060 1-126-199-11 ELECT CHIP 6.8MF 20% 35V
C061 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C070 1-163-115-00 CERAMIC CHIP 82PF 5% 50V

Ref.No Part No. Description Remark

C071 1-163-121-00 CERAMIC CHIP 150PF 5% 50V
C072 1-163-115-00 CERAMIC CHIP 82PF 5% 50V
C073 1-163-121-00 CERAMIC CHIP 150PF 5% 50V
C074 1-163-115-00 CERAMIC CHIP 82PF 5% 50V
C075 1-163-121-00 CERAMIC CHIP 150PF 5% 50V
C080 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C081 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C082 1-164-232-11 CERAMIC CHIP 0.01MF 50V
C092 1-163-125-00 CERAMIC CHIP 220PF 5% 50V
C093 1-163-125-00 CERAMIC CHIP 220PF 5% 50V
C803 1-163-038-00 CERAMIC CHIP 0.1MF 25V
C804 1-135-157-21 TANTAL CHIP 10MF 20% 6.3V
C805 1-163-105-00 CERAMIC CHIP 33PF 5% 50V
C809 1-163-038-00 CERAMIC CHIP 0.1MF 25V

CONNECTOR

CN001 1-565-212-11 CONNECTOR, FPC (ZIF) 26P
CN002 1-568-238-11 CONNECTOR, FPC (1.0MM)(ZIF)16P
CN501 1-568-235-21 CONNECTOR, FPC (1.0MM)(ZIF)10P
CN901 1-565-528-11 PIN, CONNECTOR (PC BOARD) 3P

VARIABLE CAPACITOR

CV001 1-141-370-11 CAP, CHIP TRIMMER
CV801 1-141-331-11 CAP, VAR, TRIMMER (CHIP)

DIODE

D001 8-719-400-18 DIODE MA152WK
D002 8-719-400-18 DIODE MA152WK
D003 8-719-400-18 DIODE MA152WK

FILTER

FL001 1-236-598-11 L.P.F (Y)
FL002 1-236-599-11 B.P.F

IC

IC001 8-759-633-73 IC M51406FP
IC003 8-759-009-07 IC MC14053BF
IC801 8-759-150-07 IC UPD6451AGT-601

COIL

L001 1-410-655-31 INDUCTOR CHIP 120UH
L003 1-412-029-11 INDUCTOR CHIP 10UH
L004 1-410-385-11 INDUCTOR CHIP 22UH
L005 1-410-385-11 INDUCTOR CHIP 22UH
L006 1-410-385-11 INDUCTOR CHIP 22UH
L007 1-410-377-31 INDUCTOR CHIP 4.7UH
L008 1-410-377-31 INDUCTOR CHIP 4.7UH
L009 1-410-393-11 INDUCTOR CHIP 100UH
L010 1-410-393-11 INDUCTOR CHIP 100UH
L801 1-410-658-31 INDUCTOR CHIP 220UH
L802 1-412-192-11 INDUCTOR 56UH

TRANSISTOR

Q001 8-729-100-66 TRANSISTOR 2SC1623
Q002 8-729-100-66 TRANSISTOR 2SC1623
Q003 8-729-100-66 TRANSISTOR 2SC1623
Q005 8-729-900-53 TRANSISTOR DTC114EK
Q006 8-729-904-41 TRANSISTOR FMY3
Q007 8-729-904-44 TRANSISTOR FMY4
Q008 8-729-904-41 TRANSISTOR FMY3
Q009 8-729-904-44 TRANSISTOR FMY4
Q010 8-729-904-41 TRANSISTOR FMY3
Q011 8-729-904-44 TRANSISTOR FMY4
Q014 8-729-901-01 TRANSISTOR DTC144EK
Q901 8-729-901-00 TRANSISTOR DTC124EK

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
Q902	8-729-901-05	TRANSISTOR DTA124EK	
<u>RESISTOR</u>			
R001	1-216-748-11	METAL GLAZE 39K	5% 1/10W
R002	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R003	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R004	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R005	1-216-061-00	METAL GLAZE 3.3K	5% 1/10W
R006	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R007	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R008	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R009	1-216-051-00	METAL GLAZE 1.2K	5% 1/10W
R010	1-216-051-00	METAL GLAZE 1.2K	5% 1/10W
R011	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R012	1-216-079-00	METAL GLAZE 18K	5% 1/10W
R013	1-216-085-00	METAL GLAZE 33K	5% 1/10W
R014	1-216-085-00	METAL GLAZE 33K	5% 1/10W
R015	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R016	1-216-105-00	METAL GLAZE 220K	5% 1/10W
R017	1-216-037-00	METAL GLAZE 330	5% 1/10W
R018	1-216-037-00	METAL GLAZE 330	5% 1/10W
R019	1-216-037-00	METAL GLAZE 330	5% 1/10W
R020	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R021	1-216-095-00	METAL GLAZE 82K	5% 1/10W
R022	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R023	1-216-059-00	METAL GLAZE 2.7K	5% 1/10W
R024	1-216-053-00	METAL GLAZE 1.5K	5% 1/10W
R025	1-216-075-00	METAL GLAZE 12K	5% 1/10W
R026	1-216-071-00	METAL GLAZE 8.2K	5% 1/10W
R027	1-216-027-00	METAL GLAZE 120	5% 1/10W
R028	1-216-045-00	METAL GLAZE 680	5% 1/10W
R029	1-216-295-00	METAL GLAZE 0	5% 1/10W
R031	1-216-042-00	METAL GLAZE 510	5% 1/10W
R032	1-216-003-11	METAL GLAZE 12	5% 1/10W
R033	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R034	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R035	1-216-091-00	METAL GLAZE 56K	5% 1/10W
R036	1-216-063-00	METAL GLAZE 3.9K	5% 1/10W
R037	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R038	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R041	1-216-075-00	METAL GLAZE 12K	5% 1/10W
R042	1-216-295-00	METAL GLAZE 0	5% 1/10W
R043	1-216-033-00	METAL GLAZE 220	5% 1/10W
R045	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R046	1-216-083-00	METAL GLAZE 27K	5% 1/10W
R049	1-216-101-00	METAL GLAZE 150K	5% 1/10W
R050	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R052	1-216-059-00	METAL GLAZE 2.7K	5% 1/10W
R053	1-216-090-00	METAL GLAZE 51K	5% 1/10W
R054	1-216-031-00	METAL GLAZE 180	5% 1/10W
R056	1-216-031-00	METAL GLAZE 180	5% 1/10W
R057	1-216-033-00	METAL GLAZE 220	5% 1/10W
R061	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R062	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R064	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R065	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R066	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R067	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R068	1-216-665-11	METAL CHIP 3.9K	0.50% 1/10W
R069	1-216-665-11	METAL CHIP 3.9K	0.50% 1/10W
R070	1-216-121-00	METAL GLAZE 1M	5% 1/10W
R071	1-216-061-00	METAL GLAZE 3.3K	5% 1/10W
R072	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R073	1-216-687-11	METAL CHIP 33K	0.50% 1/10W
R074	1-216-683-11	METAL CHIP 22K	0.50% 1/10W

Ref.No	Part No.	Description	Remark
R075	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R076	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R080	1-216-294-00	METAL GLAZE 10M	5% 1/8W
R501	1-216-101-00	METAL GLAZE 150K	5% 1/10W
R502	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R503	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R504	1-216-081-00	METAL GLAZE 22K	5% 1/10W
R505	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R506	1-216-081-00	METAL GLAZE 22K	5% 1/10W
R507	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R801	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R802	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R803	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R804	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R805	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R806	1-216-748-11	METAL GLAZE 39K	5% 1/10W
R807	1-216-748-11	METAL GLAZE 39K	5% 1/10W
R808	1-216-748-11	METAL GLAZE 39K	5% 1/10W
R809	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R810	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R811	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R812	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R901	1-216-049-00	METAL GLAZE 1K	5% 1/10W
<u>VARIABLE RESISTOR</u>			
RV001	1-241-118-11	RES, VAR, CARBON 20K	
RV002	1-241-117-11	RES, VAR, CARBON 10K	
RV003	1-238-091-11	RES, ADJ CERMET 22K	
RV005	1-238-092-11	RES, ADJ CERMET 47K	
RV006	1-238-091-11	RES, ADJ CERMET 22K	
RV009	1-241-006-11	RES, VAR, CARBON 50K	
RV010	1-238-092-11	RES, ADJ CERMET 47K	
RV601	1-241-029-11	RES, VAR, CARBON 2K/2K	
<u>SWITCH</u>			
SW601	1-570-386-21	SWITCH, SLIDE (DBB)	
<u>CRYSTAL</u>			
X001	1-579-041-11	VIBRATOR, CRYSTAL	

* A-7062-315-A AU-53 BOARD, COMPLETE (Ref. No. 7000 series)			

<u>CAPACITOR</u>			
C104	1-162-974-11	CERAMIC CHIP 0.01MF	50V
C105	1-162-974-11	CERAMIC CHIP 0.01MF	50V
C106	1-162-974-11	CERAMIC CHIP 0.01MF	50V
C107	1-162-963-11	CERAMIC CHIP 680PF	10% 50V
C108	1-135-145-11	TANTAL CHIP 0.47MF	20% 35V
C109	1-162-965-11	CERAMIC CHIP 0.0015MF	10% 50V
C110	1-164-173-11	CERAMIC CHIP 0.0039MF	10% 50V
C111	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C112	1-162-966-11	CERAMIC CHIP 0.0022MF	10% 50V
C113	1-126-205-11	ELECT CHIP 47MF	20% 6.3V
C114	1-164-156-11	CERAMIC CHIP 0.1MF	25V
C115	1-162-974-11	CERAMIC CHIP 0.01MF	50V
C117	1-162-910-11	CERAMIC CHIP 5PF	0.25PF 50V
C118	1-162-968-11	CERAMIC CHIP 0.0047MF	10% 50V
C122	1-135-151-21	TANTAL CHIP 4.7MF	20% 4V
C123	1-162-910-11	CERAMIC CHIP 5PF	0.25PF 50V
C124	1-162-587-11	CERAMIC CHIP 0.039MF	10% 25V
C125	1-162-960-11	CERAMIC CHIP 220PF	10% 50V
C126	1-162-963-11	CERAMIC CHIP 680PF	10% 50V

When indicating parts by reference number, please include the board name.

AU-53

Ref.No	Part No.	Description	Remark			Ref.No	Part No.	Description	Remark		
C127	1-164-174-11	CERAMIC CHIP	0.0082MF	10%	25V	C240	1-163-986-00	CERAMIC CHIP	0.027MF	10%	25V
C128	1-135-177-21	TANTAL CHIP	1MF	20%	20V	C242	1-164-218-11	CERAMIC CHIP	180PF	0.25PF	50V
C129	1-128-004-11	ELECT CHIP	10MF	20%	16V	C243	1-162-966-11	CERAMIC CHIP	0.0022MF	10%	50V
C130	1-128-004-11	ELECT CHIP	10MF	20%	16V	C244	1-163-024-00	CERAMIC CHIP	0.018MF	10%	50V
C131	1-128-003-11	ELECT CHIP	22MF	20%	4V	C245	1-164-172-11	CERAMIC CHIP	0.0056MF	5%	25V
C134	1-126-207-11	ELECT CHIP	33MF	20%	4V	C263	1-124-778-00	ELECT CHIP	22MF	20%	6.3V
C135	1-164-634-11	CERAMIC CHIP	1MF		16V	C264	1-162-968-11	CERAMIC CHIP	0.0047MF	10%	50V
C136	1-163-038-00	CERAMIC CHIP	0.1MF		25V	C265	1-162-968-11	CERAMIC CHIP	0.0047MF	10%	50V
C137	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C269	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C138	1-164-634-11	CERAMIC CHIP	1MF		16V	C270	1-128-003-11	ELECT CHIP	22MF	20%	4V
C139	1-126-207-11	ELECT CHIP	33MF	20%	4V	C271	1-128-003-11	ELECT CHIP	22MF	20%	4V
C140	1-163-024-00	CERAMIC CHIP	0.018MF	10%	50V	C275	1-164-361-11	CERAMIC CHIP	0.047MF		16V
C142	1-164-218-11	CERAMIC CHIP	180PF	0.25PF	50V	C276	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C143	1-162-966-11	CERAMIC CHIP	0.0022MF	10%	50V	C277	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C144	1-164-172-11	CERAMIC CHIP	0.0056MF	5%	25V	C278	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C145	1-163-986-00	CERAMIC CHIP	0.027MF	10%	25V	C281	1-162-965-11	CERAMIC CHIP	0.0015MF	10%	50V
C163	1-124-778-00	ELECT CHIP	22MF	20%	6.3V	C309	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C164	1-162-968-11	CERAMIC CHIP	0.0047MF	10%	50V	C310	1-162-964-11	CERAMIC CHIP	0.001MF	10%	50V
C165	1-162-968-11	CERAMIC CHIP	0.0047MF	10%	50V	C315	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C166	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C316	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C167	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C317	1-164-156-11	CERAMIC CHIP	0.1MF		25V
C168	1-162-968-11	CERAMIC CHIP	0.0047MF	10%	50V	C318	1-135-170-21	TANTAL CHIP	6.8MF	20%	4V
C169	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C319	1-164-156-11	CERAMIC CHIP	0.1MF		25V
C170	1-128-003-11	ELECT CHIP	22MF	20%	4V	C326	1-164-634-11	CERAMIC CHIP	1MF		16V
C171	1-128-003-11	ELECT CHIP	22MF	20%	4V	C401	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C172	1-164-156-11	CERAMIC CHIP	0.1MF		25V	C402	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C173	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C403	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C174	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C404	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C175	1-164-361-11	CERAMIC CHIP	0.047MF		16V	C405	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C176	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C406	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C179	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C407	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C180	1-162-928-11	CERAMIC CHIP	120PF	5%	50V	C408	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C181	1-162-965-11	CERAMIC CHIP	0.0015MF	10%	50V	C411	1-128-003-11	ELECT CHIP	22MF	20%	4V
C182	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C413	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C183	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C414	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V
C204	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C415	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C205	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C416	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C206	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C417	1-135-162-21	TANTAL CHIP	33MF	20%	6.3V
C207	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	C418	1-124-778-00	ELECT CHIP	22MF	20%	6.3V
C208	1-135-145-11	TANTAL CHIP	0.47MF	20%	35V	C420	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C209	1-162-965-11	CERAMIC CHIP	0.0015MF	10%	50V	C421	1-126-207-11	ELECT CHIP	33MF	20%	4V
C210	1-164-173-11	CERAMIC CHIP	0.0039MF	10%	50V	C424	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C211	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C425	1-162-966-11	CERAMIC CHIP	0.0022MF	10%	50V
C212	1-162-966-11	CERAMIC CHIP	0.0022MF	10%	50V	C426	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C213	1-126-205-11	ELECT CHIP	47MF	20%	6.3V	C427	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C214	1-164-156-11	CERAMIC CHIP	0.1MF		25V	C428	1-164-156-11	CERAMIC CHIP	0.1MF		25V
C215	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C429	1-164-634-11	CERAMIC CHIP	1MF		16V
C217	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V	C431	1-135-161-21	TANTAL CHIP	22MF	20%	10V
C218	1-162-968-11	CERAMIC CHIP	0.0047MF	10%	50V	C432	1-135-145-11	TANTAL CHIP	0.47MF	20%	35V
C222	1-135-151-21	TANTAL CHIP	4.7MF	20%	4V	C433	1-164-156-11	CERAMIC CHIP	0.1MF		25V
C223	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V	C434	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C224	1-162-587-11	CERAMIC CHIP	0.039MF	10%	25V	C435	1-162-966-11	CERAMIC CHIP	0.0022MF	10%	50V
C225	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C436	1-164-156-11	CERAMIC CHIP	0.1MF		25V
C226	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	C437	1-126-206-11	ELECT CHIP	100MF	20%	6.3V
C227	1-164-174-11	CERAMIC CHIP	0.0082MF	10%	25V	C438	1-126-206-11	ELECT CHIP	100MF	20%	6.3V
C228	1-135-177-21	TANTAL CHIP	1MF	20%	20V	C440	1-164-634-11	CERAMIC CHIP	1MF		16V
C229	1-128-004-11	ELECT CHIP	10MF	20%	16V	C441	1-164-634-11	CERAMIC CHIP	1MF		16V
C230	1-128-004-11	ELECT CHIP	10MF	20%	16V	C442	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C231	1-128-003-11	ELECT CHIP	22MF	20%	4V	C443	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C234	1-126-207-11	ELECT CHIP	33MF	20%	4V	C444	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C235	1-164-634-11	CERAMIC CHIP	1MF		16V	C450	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C236	1-163-038-00	CERAMIC CHIP	0.1MF		25V	C455	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C237	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C456	1-164-227-11	CERAMIC CHIP	0.022MF	10%	25V
C238	1-164-634-11	CERAMIC CHIP	1MF		16V	C457	1-162-965-11	CERAMIC CHIP	0.0015MF	10%	50V
C239	1-126-207-11	ELECT CHIP	33MF	20%	4V	C458	1-162-916-11	CERAMIC CHIP	12PF	5%	50V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
C459	1-164-005-11	CERAMIC CHIP 0.47MF	25V
<u>CONNECTOR</u>			
CN101	1-569-635-41	CONNECTOR, BOARD TO BOARD 20P	
CN102	1-569-636-41	CONNECTOR, BOARD TO BOARD 22P	
<u>DIODE</u>			
D401	8-719-941-09	DIODE DAP202U	
D402	8-719-941-86	DIODE DAN202U	
<u>FILTER</u>			
FL101	1-236-831-11	FILTER, BAND PASS	
FL102	1-236-832-11	FILTER, BAND PASS	
<u>IC</u>			
IC101	8-752-053-04	IC CXA1537R	
IC103	8-759-009-07	IC MC14053BF	
IC104	8-759-030-16	IC MC34182M	
IC105	8-759-009-07	IC MC14053BF	
IC106	8-759-030-16	IC MC34182M	
IC107	8-759-009-06	IC MC14052BF	
IC108	8-759-030-16	IC MC34182M	
IC109	8-759-030-16	IC MC34182M	
IC110	8-759-234-77	IC TC4S66F	
IC111	8-759-234-77	IC TC4S66F	
IC112	8-759-991-27	IC BA3570F	
IC113	8-752-334-42	IC CXD2106Q	
IC114	8-759-209-15	IC TC4SU69F	
IC115	8-759-209-15	IC TC4SU69F	
IC116	8-759-209-15	IC TC4SU69F	
IC201	8-752-053-04	IC CXA1537R	
<u>COIL</u>			
L101	1-412-066-21	INDUCTOR CHIP 220UH	
L201	1-412-066-21	INDUCTOR CHIP 220UH	
L401	1-412-031-11	INDUCTOR CHIP 47UH	
<u>TRANSISTOR</u>			
Q101	8-729-905-35	TRANSISTOR 2SC4081R	
Q106	8-729-905-35	TRANSISTOR 2SC4081R	
Q107	8-729-905-35	TRANSISTOR 2SC4081R	
Q108	8-729-905-35	TRANSISTOR 2SC4081R	
Q109	8-729-905-35	TRANSISTOR 2SC4081R	
Q111	8-729-905-35	TRANSISTOR 2SC4081R	
Q112	8-729-905-35	TRANSISTOR 2SC4081R	
Q140	8-729-905-18	TRANSISTOR DTC144EU	
Q141	8-729-905-18	TRANSISTOR DTC144EU	
Q201	8-729-905-35	TRANSISTOR 2SC4081R	
Q205	8-729-905-12	TRANSISTOR DTA144EU	
Q208	8-729-905-35	TRANSISTOR 2SC4081R	
Q209	8-729-905-35	TRANSISTOR 2SC4081R	
Q240	8-729-905-18	TRANSISTOR DTC144EU	
Q241	8-729-905-18	TRANSISTOR DTC144EU	
Q308	8-729-905-23	TRANSISTOR 2SA1576R	
Q309	8-729-905-18	TRANSISTOR DTC144EU	
Q310	8-729-905-35	TRANSISTOR 2SC4081R	
Q311	8-729-905-35	TRANSISTOR 2SC4081R	
Q313	8-729-903-10	TRANSISTOR FMW	
Q314	8-729-905-35	TRANSISTOR 2SC4081R	
Q315	8-729-905-23	TRANSISTOR 2SA1576R	
Q401	8-729-905-35	TRANSISTOR 2SC4081R	
Q402	8-729-905-35	TRANSISTOR 2SC4081R	
Q403	8-729-905-23	TRANSISTOR 2SA1576R	
Q404	8-729-905-35	TRANSISTOR 2SC4081R	

Ref.No	Part No.	Description	Remark
Q405	8-729-920-XX	TRANSISTOR DTA114EU	
Q406	8-729-920-XX	TRANSISTOR DTA114EU	
Q407	8-729-905-18	TRANSISTOR DTC144EU	
Q408	8-729-905-35	TRANSISTOR 2SC4081R	
Q409	8-729-905-35	TRANSISTOR 2SC4081R	
Q410	8-729-905-18	TRANSISTOR DTC144EU	
Q411	8-729-905-35	TRANSISTOR 2SC4081R	
Q412	8-729-905-23	TRANSISTOR 2SA1576R	
Q413	8-729-920-XX	TRANSISTOR DTA114EU	
<u>RESISTOR</u>			
R101	1-216-864-11	METAL GLAZE	0 5% 1/16W
R105	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R106	1-216-840-11	METAL GLAZE	39K 5% 1/16W
R107	1-216-864-11	METAL GLAZE	0 5% 1/16W
R108	1-216-864-11	METAL GLAZE	0 5% 1/16W
R109	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R110	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R111	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R112	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R113	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R114	1-216-857-11	METAL GLAZE	1M 5% 1/16W
R115	1-216-850-11	METAL GLAZE	270K 5% 1/16W
R116	1-216-820-11	METAL GLAZE	820 5% 1/16W
R117	1-216-820-11	METAL GLAZE	820 5% 1/16W
R127	1-216-864-11	METAL GLAZE	0 5% 1/16W
R128	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R129	1-216-840-11	METAL GLAZE	39K 5% 1/16W
R130	1-216-851-11	METAL GLAZE	330K 5% 1/16W
R133	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R135	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R139	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R140	1-216-815-11	METAL GLAZE	330 5% 1/16W
R141	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R142	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R143	1-216-828-11	METAL GLAZE	3.9K 5% 1/16W
R144	1-216-834-11	METAL GLAZE	12K 5% 1/16W
R145	1-216-819-11	METAL GLAZE	680 5% 1/16W
R146	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R147	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R148	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R149	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R150	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R151	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R152	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R153	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R154	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R155	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R156	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R157	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R158	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R159	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R160	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R161	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R162	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R163	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R164	1-216-834-11	METAL GLAZE	12K 5% 1/16W
R165	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R166	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R167	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R168	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R169	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R170	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R171	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R172	1-216-834-11	METAL GLAZE	12K 5% 1/16W
R173	1-216-845-11	METAL GLAZE	100K 5% 1/16W

When indicating parts by reference number, please include the board name.

AU-53

Ref.No	Part No.	Description	Remark
R174	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R175	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R176	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R177	1-216-811-11	METAL GLAZE	150 5% 1/16W
R178	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R179	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R182	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R183	1-216-864-11	METAL GLAZE	0 5% 1/16W
R184	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R185	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R186	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R188	1-216-824-11	METAL GLAZE	1.8K 5% 1/16W
R189	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R190	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R191	1-216-820-11	METAL GLAZE	820 5% 1/16W
R192	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R193	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R199	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R201	1-216-864-11	METAL GLAZE	0 5% 1/16W
R205	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R206	1-216-840-11	METAL GLAZE	39K 5% 1/16W
R207	1-216-864-11	METAL GLAZE	0 5% 1/16W
R210	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R211	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R212	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R213	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R214	1-216-857-11	METAL GLAZE	1M 5% 1/16W
R215	1-216-850-11	METAL GLAZE	270K 5% 1/16W
R216	1-216-819-11	METAL GLAZE	680 5% 1/16W
R217	1-216-819-11	METAL GLAZE	680 5% 1/16W
R227	1-216-864-11	METAL GLAZE	0 5% 1/16W
R228	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R229	1-216-840-11	METAL GLAZE	39K 5% 1/16W
R230	1-216-851-11	METAL GLAZE	330K 5% 1/16W
R233	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R235	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R236	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R239	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R240	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R241	1-216-815-11	METAL GLAZE	330 5% 1/16W
R242	1-216-813-11	METAL GLAZE	220 5% 1/16W
R243	1-216-828-11	METAL GLAZE	3.9K 5% 1/16W
R244	1-216-834-11	METAL GLAZE	12K 5% 1/16W
R245	1-216-819-11	METAL GLAZE	680 5% 1/16W
R246	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R247	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R248	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R249	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R250	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R251	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R252	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R253	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R254	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R254	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R255	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R257	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R258	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R259	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R260	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R261	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R262	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R269	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R270	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R271	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R272	1-216-834-11	METAL GLAZE	12K 5% 1/16W

Ref.No	Part No.	Description	Remark
R273	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R274	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R275	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R276	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R277	1-216-811-11	METAL GLAZE	150 5% 1/16W
R278	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R279	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R280	1-216-864-11	METAL GLAZE	0 5% 1/16W
R281	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R284	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R293	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R314	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R315	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R316	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R318	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R319	1-216-835-11	METAL GLAZE	15K 5% 1/16W
R323	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R324	1-216-830-11	METAL GLAZE	5.6K 5% 1/16W
R325	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R327	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R328	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R329	1-216-828-11	METAL GLAZE	3.9K 5% 1/16W
R330	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R330	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R331	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R332	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R333	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R334	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R335	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R401	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R402	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R403	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R404	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R405	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R407	1-216-849-11	METAL GLAZE	220K 5% 1/16W
R408	1-216-847-11	METAL GLAZE	150K 5% 1/16W
R409	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R410	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R411	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R412	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R413	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R414	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R415	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R421	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R422	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R423	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R424	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R425	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R426	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R427	1-216-864-11	METAL GLAZE	0 5% 1/16W
R428	1-216-864-11	METAL GLAZE	0 5% 1/16W
R429	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R430	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R431	1-216-819-11	METAL GLAZE	680 5% 1/16W
R432	1-216-819-11	METAL GLAZE	680 5% 1/16W
R433	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R434	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R435	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R436	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R437	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R438	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R440	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R441	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R442	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R443	1-216-823-11	METAL GLAZE	1.5K 5% 1/16W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
R444	1-216-816-11	METAL GLAZE 390 5%	1/16W
R445	1-216-833-11	METAL GLAZE 10K 5%	1/16W
R446	1-216-845-11	METAL GLAZE 100K 5%	1/16W
R447	1-216-845-11	METAL GLAZE 100K 5%	1/16W
R450	1-216-833-11	METAL GLAZE 10K 5%	1/16W
R451	1-216-833-11	METAL GLAZE 10K 5%	1/16W
R453	1-216-857-11	METAL GLAZE 1M 5%	1/16W
R456	1-216-804-11	METAL GLAZE 39 5%	1/16W
R457	1-216-804-11	METAL GLAZE 39 5%	1/16W
R458	1-216-841-11	METAL GLAZE 47K 5%	1/16W
R459	1-216-833-11	METAL GLAZE 10K 5%	1/16W
R460	1-216-833-11	METAL GLAZE 10K 5%	1/16W
R461	1-216-829-11	METAL GLAZE 4.7K 5%	1/16W
R462	1-216-833-11	METAL GLAZE 10K 5%	1/16W
R463	1-216-829-11	METAL GLAZE 4.7K 5%	1/16W
R464	1-216-817-11	METAL GLAZE 470 5%	1/16W
R465	1-216-842-11	METAL GLAZE 56K 5%	1/16W
R466	1-216-847-11	METAL GLAZE 150K 5%	1/16W
R467	1-216-829-11	METAL GLAZE 4.7K 5%	1/16W
R468	1-216-831-11	METAL GLAZE 6.8K 5%	1/16W

VARIABLE RESISTOR

RV101	1-238-091-11	RES, ADJ CERMET 22K
RV102	1-238-090-11	RES, ADJ CERMET 10K
RV201	1-238-092-11	RES, ADJ CERMET 47K
RV202	1-238-090-11	RES, ADJ CERMET 10K
RV203	1-238-091-11	RES, ADJ CERMET 22K
RV204	1-238-089-11	RES, ADJ CERMET 4.7K
RV401	1-238-093-11	RES, ADJ CERMET 100K
RV402	1-238-093-11	RES, ADJ CERMET 100K

CRYSTAL

X101	1-579-050-11	VIBRATOR, CRYSTAL
------	--------------	-------------------

A-7062-316-A SV-38 BOARD, COMPLETE (Ref. No. 5000 series) *****

- 1-634-993-11 FP-270 FLEXIBLE BOARD
- 3-744-169-01 COVER, CS JACK
- 3-744-175-01 COVER, IO JACK
- *3-746-902-01 CASE (LID), SHIELD, SDD
- *3-746-903-01 CASE (LID), SHIELD, INDEX

CAPACITOR

C101	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C102	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C103	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C104	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C105	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C106	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C107	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C108	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C109	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C110	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C111	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C112	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C113	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C114	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C115	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C116	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C117	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C118	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C119	1-162-945-11	CERAMIC CHIP 22PF 5%	50V

Ref.No	Part No.	Description	Remark
C120	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C121	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C122	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
C123	1-162-974-11	CERAMIC CHIP 0.01MF	50V
C124	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C125	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C126	1-135-159-21	TANTAL CHIP 10MF 20%	20V
C127	1-126-206-11	ELECT CHIP 100MF 20%	6.3V
C128	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
C131	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C132	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C134	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C135	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
C136	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C138	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C139	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C140	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C141	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C142	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
C143	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
C144	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
C145	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
C146	1-162-995-11	CERAMIC CHIP 0.022MF	50V
C201	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
C202	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
C203	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
C204	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
C206	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
C208	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C209	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C210	1-135-157-21	TANTAL CHIP 10MF 20%	6.3V
C211	1-162-964-11	CERAMIC CHIP 0.001MF 10%	50V
C212	1-164-633-11	CERAMIC CHIP 0.1MF 10%	25V
C213	1-162-969-11	CERAMIC CHIP 0.0068MF 10%	25V
C214	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C215	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C216	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C217	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C218	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C219	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C220	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C221	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C222	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C223	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
C224	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C225	1-162-970-11	CERAMIC CHIP 0.01MF 10%	25V
C226	1-162-917-11	CERAMIC CHIP 15PF 5%	50V
C228	1-162-917-11	CERAMIC CHIP 15PF 5%	50V
C229	1-164-360-11	CERAMIC CHIP 0.1MF	16V
C230	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C231	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C232	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C233	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C234	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C235	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C236	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C237	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C238	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C239	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C240	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C241	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C242	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C243	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C244	1-162-945-11	CERAMIC CHIP 22PF 5%	50V
C245	1-162-945-11	CERAMIC CHIP 22PF 5%	50V

When indicating parts by reference number, please include the board name.

SV-38

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C246	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C427	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C247	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C428	1-127-558-11	ELECT(SOLID)	10MF 20% 10V
C248	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C429	1-135-216-11	TANTAL CHIP	10MF 20% 10V
C249	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C430	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C250	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C431	1-127-558-11	ELECT(SOLID)	10MF 20% 10V
C251	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C432	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C252	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C433	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C253	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C434	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C254	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C435	1-135-159-21	TANTAL CHIP	10MF 20% 20V
C255	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C436	1-135-181-21	TANTAL CHIP	4.7MF 20% 6.3V
C256	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C437	1-163-809-11	CERAMIC CHIP	0.047MF 10% 25V
C257	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C438	1-136-718-11	TANTAL CHIP	0.1MF 5% 25V
C258	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C439	1-164-330-21	CERAMIC CHIP	0.22MF 10% 16V
C259	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C440	1-164-330-21	CERAMIC CHIP	0.22MF 10% 16V
C260	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C441	1-164-330-21	CERAMIC CHIP	0.22MF 10% 16V
C261	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C442	1-164-634-11	CERAMIC CHIP	1MF 16V
C262	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C443	1-135-159-21	TANTAL CHIP	10MF 20% 20V
C263	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C444	1-162-967-11	CERAMIC CHIP	0.0033MF 10% 50V
C265	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C445	1-162-970-11	CERAMIC CHIP	0.01MF 10% 25V
C266	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C446	1-164-330-21	CERAMIC CHIP	0.22MF 10% 16V
C267	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C447	1-162-967-11	CERAMIC CHIP	0.0033MF 10% 50V
C268	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C448	1-164-330-21	CERAMIC CHIP	0.22MF 10% 16V
C269	1-162-945-11	CERAMIC CHIP	22PF 5% 50V	C449	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C270	1-162-970-11	CERAMIC CHIP	0.01MF 10% 25V	C450	1-162-967-11	CERAMIC CHIP	0.0033MF 10% 50V
C271	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C451	1-164-633-11	CERAMIC CHIP	0.1MF 10% 25V
C272	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C453	1-163-809-11	CERAMIC CHIP	0.047MF 10% 25V
C302	1-162-966-11	CERAMIC CHIP	0.0022MF 10% 50V	C454	1-162-964-11	CERAMIC CHIP	0.001MF 10% 50V
C305	1-162-974-11	CERAMIC CHIP	0.01MF 50V	C455	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C308	1-162-956-11	CERAMIC CHIP	180PF 5% 50V	C456	1-135-180-21	TANTAL CHIP	3.3MF 20% 6.3V
C309	1-162-947-11	CERAMIC CHIP	33PF 5% 50V	C457	1-135-149-21	TANTAL CHIP	2.2MF 20% 10V
C310	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C458	1-163-809-11	CERAMIC CHIP	0.047MF 10% 25V
C311	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C460	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C312	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C461	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C313	1-135-149-21	TANTAL CHIP	2.2MF 20% 10V	C499	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C315	1-162-970-11	CERAMIC CHIP	0.01MF 10% 25V	C601	1-164-005-11	CERAMIC CHIP	0.47MF 25V
C317	1-135-180-21	TANTAL CHIP	3.3MF 20% 6.3V	C602	1-164-005-11	CERAMIC CHIP	0.47MF 25V
C319	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C603	1-135-177-21	TANTAL CHIP	1MF 20% 20V
C320	1-162-970-11	CERAMIC CHIP	0.01MF 10% 25V	C604	1-124-779-00	ELECT CHIP	10MF 20% 16V
C321	1-164-633-11	CERAMIC CHIP	0.1MF 10% 25V	C605	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C401	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C606	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C402	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C607	1-164-361-11	CERAMIC CHIP	0.047MF 16V
C403	1-127-489-11	ELECT(SOLID)	10MF 20% 10V	C608	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C404	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C609	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C405	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C610	1-164-361-11	CERAMIC CHIP	0.047MF 16V
C406	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C611	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C407	1-163-123-00	CERAMIC CHIP	180PF 5% 50V	C612	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C408	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C613	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C409	1-164-633-11	CERAMIC CHIP	0.1MF 10% 25V	C614	1-124-778-00	ELECT CHIP	22MF 20% 6.3V
C410	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C615	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C411	1-164-361-11	CERAMIC CHIP	0.047MF 16V	C616	1-164-222-11	CERAMIC CHIP	0.22MF 25V
C412	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C617	1-135-177-21	TANTAL CHIP	1MF 20% 20V
C413	1-164-633-11	CERAMIC CHIP	0.1MF 10% 25V	C618	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C414	1-164-633-11	CERAMIC CHIP	0.1MF 10% 25V	C619	1-162-955-11	CERAMIC CHIP	150PF 5% 50V
C415	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	C620	1-126-607-11	ELECT CHIP	47MF 20% 4V
C416	1-162-964-11	CERAMIC CHIP	0.001MF 10% 50V	C621	1-135-157-21	TANTAL CHIP	10MF 20% 6.3V
C417	1-164-361-11	CERAMIC CHIP	0.047MF 16V	C622	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C418	1-162-916-11	CERAMIC CHIP	12PF 5% 50V	C623	1-135-201-11	TANTAL CHIP	10MF 20% 4V
C419	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C624	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C420	1-127-491-00	ELECT(SOLID)	22MF 20% 10V	C625	1-124-778-00	ELECT CHIP	22MF 20% 6.3V
C421	1-164-360-11	CERAMIC CHIP	0.1MF 16V	C626	1-164-005-11	CERAMIC CHIP	0.47MF 25V
C422	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	C627	1-135-201-11	TANTAL CHIP	10MF 20% 4V
C423	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	C628	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C424	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C629	1-135-180-21	TANTAL CHIP	3.3MF 20% 6.3V
C425	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	C630	1-135-180-21	TANTAL CHIP	3.3MF 20% 6.3V
C426	1-127-558-11	ELECT(SOLID)	10MF 20% 10V	C631	1-126-607-11	ELECT CHIP	47MF 20% 4V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark			Ref.No	Part No.	Description	Remark		
C632	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C723	1-162-995-11	CERAMIC CHIP	0.022MF		50V
C633	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C724	1-162-945-11	CERAMIC CHIP	22PF	5%	50V
C634	1-135-201-11	TANTAL CHIP	10MF	20%	4V	C725	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C635	1-164-005-11	CERAMIC CHIP	0.47MF		25V	C726	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C636	1-162-952-11	CERAMIC CHIP	82PF	5%	50V	C727	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C637	1-135-201-11	TANTAL CHIP	10MF	20%	4V	C728	1-135-146-21	TANTAL CHIP	0.68MF	20%	25V
C638	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C729	1-135-177-21	TANTAL CHIP	1MF	20%	20V
C639	1-162-954-11	CERAMIC CHIP	120PF	5%	50V	C731	1-162-950-11	CERAMIC CHIP	56PF	5%	50V
C640	1-135-201-11	TANTAL CHIP	10MF	20%	4V	C732	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C641	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C733	1-162-936-11	CERAMIC CHIP	5PF	0.25PF	50V
C642	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C749	1-164-360-11	CERAMIC CHIP	0.1MF		16V
C643	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	C750	1-162-947-11	CERAMIC CHIP	33PF	5%	50V
C644	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C801	1-164-361-11	CERAMIC CHIP	0.047MF		16V
C645	1-162-965-11	CERAMIC CHIP	0.0015MF	10%	50V	C804	1-162-965-11	CERAMIC CHIP	0.0015MF	10%	50V
C646	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C805	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C647	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C806	1-162-950-11	CERAMIC CHIP	56PF	5%	50V
C648	1-126-607-11	ELECT CHIP	47MF	20%	4V	C807	1-162-951-11	CERAMIC CHIP	68PF	5%	50V
C649	1-162-959-11	CERAMIC CHIP	330PF	5%	50V	C809	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C650	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C810	1-162-951-11	CERAMIC CHIP	68PF	5%	50V
C651	1-135-201-11	TANTAL CHIP	10MF	20%	4V	C813	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C652	1-162-950-11	CERAMIC CHIP	56PF	5%	50V	C819	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C653	1-162-944-11	CERAMIC CHIP	18PF	5%	50V	C820	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C655	1-163-135-00	CERAMIC CHIP	560PF	5%	50V	C821	1-124-778-00	ELECT CHIP	22MF	20%	6.3V
C656	1-162-950-11	CERAMIC CHIP	56PF	5%	50V	C823	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C657	1-135-201-11	TANTAL CHIP	10MF	20%	4V	C824	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C658	1-162-944-11	CERAMIC CHIP	18PF	5%	50V	C825	1-164-145-11	CERAMIC CHIP	390PF	5%	50V
C659	1-164-005-11	CERAMIC CHIP	0.47MF		25V	C826	1-164-634-11	CERAMIC CHIP	1MF		16V
C660	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C827	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C663	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C828	1-124-779-00	ELECT CHIP	10MF	20%	16V
C664	1-124-778-00	ELECT CHIP	22MF	20%	6.3V	C829	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C665	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C831	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C666	1-164-361-11	CERAMIC CHIP	0.047MF		16V	C832	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C667	1-164-005-11	CERAMIC CHIP	0.47MF		25V	C833	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C668	1-135-177-21	TANTAL CHIP	1MF	20%	20V	C834	1-162-951-11	CERAMIC CHIP	68PF	5%	50V
C669	1-126-246-11	ELECT CHIP	220MF	20%	4V	C836	1-163-128-00	CERAMIC CHIP	300PF	5%	50V
C670	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C837	1-162-995-11	CERAMIC CHIP	0.022MF		50V
C671	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C838	1-162-948-11	CERAMIC CHIP	39PF	5%	50V
C672	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C839	1-162-943-11	CERAMIC CHIP	15PF	5%	50V
C673	1-135-149-21	TANTAL CHIP	2.2MF	20%	10V	C840	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C674	1-135-146-21	TANTAL CHIP	0.68MF	20%	25V	C841	1-162-995-11	CERAMIC CHIP	0.022MF		50V
C676	1-135-201-11	TANTAL CHIP	10MF	20%	4V	C842	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C677	1-126-607-11	ELECT CHIP	47MF	20%	4V	C843	1-162-995-11	CERAMIC CHIP	0.022MF		50V
C679	1-164-005-11	CERAMIC CHIP	0.47MF		25V	C844	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C701	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C845	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C702	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	C846	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C703	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C847	1-162-942-11	CERAMIC CHIP	12PF	5%	50V
C704	1-162-954-11	CERAMIC CHIP	120PF	5%	50V	C850	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C705	1-162-952-11	CERAMIC CHIP	82PF	5%	50V	C851	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C706	1-162-951-11	CERAMIC CHIP	68PF	5%	50V	C852	1-163-116-00	CERAMIC CHIP	91PF	5%	50V
C707	1-162-950-11	CERAMIC CHIP	56PF	5%	50V	C854	1-163-104-00	CERAMIC CHIP	30PF	5%	50V
C708	1-162-967-11	CERAMIC CHIP	0.0033MF	10%	50V	C855	1-162-951-11	CERAMIC CHIP	68PF	5%	50V
C709	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	C856	1-162-955-11	CERAMIC CHIP	150PF	5%	50V
C710	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	C859	1-162-954-11	CERAMIC CHIP	120PF	5%	50V
C711	1-162-955-11	CERAMIC CHIP	150PF	5%	50V	C863	1-162-952-11	CERAMIC CHIP	82PF	5%	50V
C712	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	C901	1-164-361-11	CERAMIC CHIP	0.047MF		16V
C713	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C905	1-164-360-11	CERAMIC CHIP	0.1MF		16V
C714	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C906	1-135-156-21	TANTAL CHIP	6.8MF	20%	10V
C715	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C907	1-164-360-11	CERAMIC CHIP	0.1MF		16V
C716	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V	C908	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C717	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C909	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C718	1-126-607-11	ELECT CHIP	47MF	20%	4V	C911	1-164-634-11	CERAMIC CHIP	1MF		16V
C719	1-162-926-11	CERAMIC CHIP	82PF	5%	50V	C912	1-164-634-11	CERAMIC CHIP	1MF		16V
C720	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C913	1-164-634-11	CERAMIC CHIP	1MF		16V
C721	1-162-974-11	CERAMIC CHIP	0.01MF		50V	C921	1-164-634-11	CERAMIC CHIP	1MF		16V
C722	1-135-177-21	TANTAL CHIP	1MF	20%	20V	C922	1-164-634-11	CERAMIC CHIP	1MF		16V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
C923	1-162-918-11	CERAMIC CHIP	18PF 5% 50V
C924	1-162-918-11	CERAMIC CHIP	18PF 5% 50V
C925	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C926	1-162-968-11	CERAMIC CHIP	0.0047MF 10% 50V
C927	1-164-634-11	CERAMIC CHIP	1MF 16V
C928	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C930	1-162-926-11	CERAMIC CHIP	82PF 5% 50V
C931	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V
C932	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C933	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C934	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C935	1-135-181-21	TANTAL CHIP	4.7MF 20% 6.3V
C936	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C937	1-135-181-21	TANTAL CHIP	4.7MF 20% 6.3V
C938	1-162-974-11	CERAMIC CHIP	0.01MF 50V
C939	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C940	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C941	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C942	1-164-227-11	CERAMIC CHIP	0.022MF 10% 25V
C943	1-162-964-11	CERAMIC CHIP	0.001MF 10% 50V
C948	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C949	1-164-360-11	CERAMIC CHIP	0.1MF 16V
C950	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C952	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C953	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C954	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C955	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C956	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C958	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C959	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C960	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C962	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C971	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C972	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C973	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C974	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C977	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C978	1-164-634-11	CERAMIC CHIP	1MF 16V
C979	1-164-360-11	CERAMIC CHIP	0.1MF 16V

CERAMIC FILTER

CF701 1-567-306-11 FILTER, CERAMIC

CONNECTOR

CN001 1-566-531-11 CONNECTOR, FPC (ZIF) 15P
 CN002 1-569-030-11 CONNECTOR, FPC (ZIF) 21P
 CN003 1-569-481-11 CONNECTOR, FPC 30P
 CN004 1-569-633-61 CONNECTOR, BOARD TO BOARD 26P
 CN005 1-569-631-41 CONNECTOR, BOARD TO BOARD 20P
 CN006 1-569-632-41 CONNECTOR, BOARD TO BOARD 22P
 CN007 1-566-532-11 CONNECTOR, FPC (ZIF) 16P
 CN008 1-569-363-21 CONNECTOR, FPC 15P
 CN009 1-566-531-11 CONNECTOR, FPC (ZIF) 15P
 CN601 *1-566-095-11 PIN, BOARD TO BOARD 6P
 CN701 1-566-528-21 CONNECTOR, FPC (ZIF) 12P
 CN801 1-566-534-21 CONNECTOR, FPC (ZIF) 18P

VARIABLE CAPACITOR

CV101 1-141-331-11 CAP, VAR, TRIMMER (CHIP)

DIODE

D101 8-719-938-72 DIODE SB01-05CP
 D103 8-719-105-52 DIODE RD3.6M-B2
 D104 8-719-105-XX DIODE RD6.2M-B1
 D107 8-719-941-09 DIODE DAP202U

Ref.No	Part No.	Description	Remark
D108	8-719-404-40	DIODE MA121	
D199	8-719-404-40	DIODE MA121	
D199	8-719-911-19	DIODE 1SS119	
D201	8-719-941-86	DIODE DAN202U	
D202	8-719-404-40	DIODE MA121	
D203	8-719-404-40	DIODE MA121	
D204	8-719-941-09	DIODE DAP202U	
D205	8-719-941-09	DIODE DAP202U	
D301	8-719-941-86	DIODE DAN202U	
D401	8-719-938-78	DIODE SB10-05PCP	
D402	8-719-941-09	DIODE DAP202U	
D403	8-719-938-75	DIODE SB05-05CP	
D404	8-719-938-75	DIODE SB05-05CP	
D601	8-719-404-40	DIODE MA121	
D602	8-719-404-40	DIODE MA121	
D802	8-719-800-76	DIODE 1SS226	
D901	8-719-106-44	DIODE RD9.1M-B2	
D902	8-719-106-44	DIODE RD9.1M-B2	
D921	8-719-941-86	DIODE DAN202U	
D922	8-719-941-09	DIODE DAP202U	
D924	8-719-941-09	DIODE DAP202U	
D925	8-719-941-09	DIODE DAP202U	

FERRITE BEAD RING

FB101 1-543-256-11 BEAD, FERRITE
 FB102 1-412-390-21 INDUCTOR CHIP 0UH
 FB201 1-543-256-11 BEAD, FERRITE
 FB202 1-543-256-11 BEAD, FERRITE
 FB203 1-412-390-21 INDUCTOR CHIP 0UH
 FB204 1-412-390-21 INDUCTOR CHIP 0UH
 FB205 1-543-256-11 BEAD, FERRITE
 FB921 1-412-390-21 INDUCTOR CHIP 0UH
 FB925 1-412-390-21 INDUCTOR CHIP 0UH
 FB926 1-412-390-21 INDUCTOR CHIP 0UH

FILTER

FL601 1-236-757-21 FILTER, LOW PASS (C)
 FL603 1-236-751-21 FILTER, LOW PASS
 FL701 1-236-575-11 B.P.F (PAL-M)
 FL702 1-236-146-11 FILTER, BAND PASS
 FL801 1-409-475-21 FILTER, TRAP

IC

IC101 8-752-816-99 IC CXP50116-088Q
 IC102 8-759-990-78 IC S-81350AG-REG
 IC103 8-759-940-33 IC S-8052ALO-LG-S
 IC104 8-759-946-03 IC S-8054ALR-LN-S
 IC105 8-759-720-23 IC AK93C57F-E1
 IC106 8-759-009-22 IC MC14094BF
 IC107 8-759-209-15 IC TC4SU69F
 IC108 8-759-209-97 IC TC4S81F
 IC109 8-759-209-97 IC TC4S81F
 IC201 8-759-234-77 IC TC4S66F
 IC202 8-759-234-77 IC TC4S66F
 IC204 8-759-998-98 IC LM358DR
 IC206 8-752-816-17 IC CXP80116-682Q
 IC301 1-808-841-11 ATF HIC
 IC302 8-759-100-97 IC UPC339G2
 IC401 8-759-945-17 IC MB3775PF
 IC402 8-759-998-94 IC LM311DR-E1
 IC403 8-759-990-55 IC CXA8006M-E1
 IC404 8-759-805-06 IC CXA1127M
 IC405 8-759-107-68 IC CX20115A
 IC601 8-752-036-19 IC CXA1207R
 IC602 8-752-033-40 IC CXA1201Q
 IC701 8-752-036-20 IC CXA1208R
 IC802 8-759-012-00 IC MC10H116M

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
IC803	8-759-998-32	IC CXD-2107M	
IC901	8-759-701-02	IC NJM2073M	
IC921	8-759-990-94	IC MB606199	
IC922	8-752-010-20	IC CX20102	
IC923	8-759-231-32	IC TC7S00F	
IC924	8-759-231-32	IC TC7S00F	
<u>JACK</u>			
J101	1-563-282-11	JACK, SMALL TYPE	
J701	1-569-639-11	JACK, PIN 3P	
<u>COIL</u>			
L102	1-410-993-11	INDUCTOR CHIP 1UH	
L103	1-410-993-11	INDUCTOR CHIP 1UH	
L104	1-410-993-11	INDUCTOR CHIP 1UH	
L105	1-410-993-11	INDUCTOR CHIP 1UH	
L106	1-410-993-11	INDUCTOR CHIP 1UH	
L107	1-410-993-11	INDUCTOR CHIP 1UH	
L201	1-408-789-21	INDUCTOR CHIP 100UH	
L203	1-410-993-11	INDUCTOR CHIP 1UH	
L204	1-410-993-11	INDUCTOR CHIP 1UH	
L205	1-410-993-11	INDUCTOR CHIP 1UH	
L206	1-410-993-11	INDUCTOR CHIP 1UH	
L207	1-410-993-11	INDUCTOR CHIP 1UH	
L208	1-410-993-11	INDUCTOR CHIP 1UH	
L209	1-410-993-11	INDUCTOR CHIP 1UH	
L210	1-410-993-11	INDUCTOR CHIP 1UH	
L211	1-410-993-11	INDUCTOR CHIP 1UH	
L212	1-410-993-11	INDUCTOR CHIP 1UH	
L401	1-424-104-11	COIL, CHOKE 10UH	
L402	1-410-337-11	INDUCTOR 1UH	
L403	1-424-104-11	COIL, CHOKE 10UH	
L404	1-424-104-11	COIL, CHOKE 10UH	
L405	1-424-106-11	COIL, CHOKE 47UH	
L406	1-424-104-11	COIL, CHOKE 10UH	
L407	1-424-106-11	COIL, CHOKE 47UH	
L408	1-424-105-11	COIL, CHOKE 22UH	
L409	1-408-789-21	INDUCTOR CHIP 100UH	
L601	1-412-032-11	INDUCTOR CHIP 100UH	
L602	1-410-388-21	INDUCTOR CHIP 39UH	
L603	1-410-390-11	INDUCTOR CHIP 56UH	
L604	1-410-393-11	INDUCTOR CHIP 100UH	
L605	1-410-379-31	INDUCTOR CHIP 6.8UH	
L606	1-410-390-11	INDUCTOR CHIP 56UH	
L607	1-410-393-11	INDUCTOR CHIP 100UH	
L608	1-412-029-11	INDUCTOR CHIP 10UH	
L609	1-412-029-11	INDUCTOR CHIP 10UH	
L610	1-412-032-11	INDUCTOR CHIP 100UH	
L611	1-412-032-11	INDUCTOR CHIP 100UH	
L701	1-410-393-11	INDUCTOR CHIP 100UH	
L702	1-410-393-11	INDUCTOR CHIP 100UH	
L703	1-410-656-11	INDUCTOR CHIP 150UH	
L704	1-410-655-31	INDUCTOR CHIP 120UH	
L705	1-410-393-11	INDUCTOR CHIP 100UH	
L706	1-410-385-11	INDUCTOR CHIP 22UH	
L707	1-410-385-11	INDUCTOR CHIP 22UH	
L708	1-410-377-31	INDUCTOR CHIP 4.7UH	
L801	1-410-167-41	INDUCTOR CHIP 820UH	
L802	1-410-657-21	INDUCTOR CHIP 180UH	
L803	1-412-032-11	INDUCTOR CHIP 100UH	
L804	1-412-032-11	INDUCTOR CHIP 100UH	
L805	1-410-379-31	INDUCTOR CHIP 6.8UH	
L806	1-410-378-11	INDUCTOR CHIP 5.6UH	
L808	1-410-386-11	INDUCTOR CHIP 27UH	
L809	1-410-380-31	INDUCTOR CHIP 8.2UH	

Ref.No	Part No.	Description	Remark
L811	1-410-380-31	INDUCTOR CHIP 8.2UH	
L813	1-410-393-11	INDUCTOR CHIP 100UH	
L814	1-410-383-31	INDUCTOR CHIP 15UH	
L817	1-410-658-31	INDUCTOR CHIP 220UH	
L818	1-410-656-11	INDUCTOR CHIP 150UH	
L819	1-412-280-31	INDUCTOR 330UH	
L820	1-412-029-11	INDUCTOR CHIP 10UH	
L821	1-410-375-11	INDUCTOR CHIP 3.3UH	
L901	1-412-032-11	INDUCTOR CHIP 100UH	
L902	1-412-031-11	INDUCTOR CHIP 47UH	
L922	1-412-058-11	INDUCTOR CHIP 10UH	
L923	1-412-058-11	INDUCTOR CHIP 10UH	
<u>IC LINK</u>			
PS201	△.1-532-605-00	LINK, IC (ICP-N10)	
<u>TRANSISTOR</u>			
Q101	8-729-905-18	TRANSISTOR DTC144EU	
Q102	8-729-905-35	TRANSISTOR 2SC4081R	
Q103	8-729-220-93	TRANSISTOR 2SK209G	
Q104	8-729-905-18	TRANSISTOR DTC144EU	
Q105	8-729-905-35	TRANSISTOR 2SC4081R	
Q106	8-729-905-23	TRANSISTOR 2SA1576R	
Q107	△.8-729-220-93	TRANSISTOR 2SK209G	
Q108	△.8-729-220-93	TRANSISTOR 2SK209G	
Q109	8-729-905-12	TRANSISTOR DTA144EU	
Q110	8-729-905-35	TRANSISTOR 2SC4081R	
Q111	8-729-905-22	TRANSISTOR 2SA1576Q	
Q112	8-729-905-22	TRANSISTOR 2SA1576Q	
Q113	8-729-921-08	TRANSISTOR DTC144TU	
Q114	8-729-403-24	TRANSISTOR XN4210	
Q115	8-729-921-08	TRANSISTOR DTC144TU	
Q116	8-729-403-24	TRANSISTOR XN4210	
Q117	8-729-907-00	TRANSISTOR DTC114EU	
Q118	8-729-920-59	TRANSISTOR IMX2	
Q201	8-729-905-35	TRANSISTOR 2SC4081R	
Q202	8-729-905-35	TRANSISTOR 2SC4081R	
Q203	8-729-921-08	TRANSISTOR DTC144TU	
Q204	8-729-902-96	TRANSISTOR FMS1	
Q205	8-729-903-82	TRANSISTOR FMW2	
Q206	8-729-907-00	TRANSISTOR DTC114EU	
Q207	8-729-905-35	TRANSISTOR 2SC4081R	
Q208	8-729-820-46	TRANSISTOR 2SB1202FAS	
Q209	8-729-905-35	TRANSISTOR 2SC4081R	
Q210	8-729-403-24	TRANSISTOR XN4210	
Q212	8-729-905-12	TRANSISTOR DTA144EU	
Q213	8-729-905-18	TRANSISTOR DTC144EU	
Q214	8-729-905-18	TRANSISTOR DTC144EU	
Q215	8-729-905-18	TRANSISTOR DTC144EU	
Q216	8-729-905-35	TRANSISTOR 2SC4081R	
Q301	8-729-905-23	TRANSISTOR 2SA1576R	
Q302	8-729-905-35	TRANSISTOR 2SC4081R	
Q303	8-729-905-23	TRANSISTOR 2SA1576R	
Q304	8-729-905-35	TRANSISTOR 2SC4081R	
Q305	8-729-905-18	TRANSISTOR DTC144EU	
Q306	8-729-905-18	TRANSISTOR DTC144EU	
Q401	8-729-905-35	TRANSISTOR 2SC4081R	
Q402	8-729-901-04	TRANSISTOR DTA114EK	
Q403	8-729-905-35	TRANSISTOR 2SC4081R	
Q404	△.8-729-805-25	TRANSISTOR 2SB1121	
Q405	8-729-905-35	TRANSISTOR 2SC4081R	
Q406	8-729-905-61	TRANSISTOR DTC124EU	
Q407	8-729-905-35	TRANSISTOR 2SC4081R	
Q408	△.8-729-805-25	TRANSISTOR 2SB1121	
Q409	△.8-729-805-25	TRANSISTOR 2SB1121	

When indicating parts by reference number, please include the board name.

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description	Remark
Q410	△.8-729-805-25	TRANSISTOR 2SB1121	
Q411	△.8-729-805-25	TRANSISTOR 2SB1121	
Q412	8-729-905-35	TRANSISTOR 2SC4081R	
Q413	8-729-907-00	TRANSISTOR DTC114EU	
Q415	8-729-905-18	TRANSISTOR DTC144EU	
Q416	8-729-905-12	TRANSISTOR DTA144EU	
Q418	△.8-729-162-44	TRANSISTOR 2SB624-V4	
Q419	8-729-907-00	TRANSISTOR DTC114EU	
Q420	8-729-907-00	TRANSISTOR DTC114EU	
Q601	8-729-905-23	TRANSISTOR 2SA1576R	
Q602	8-729-905-35	TRANSISTOR 2SC4081R	
Q603	8-729-905-35	TRANSISTOR 2SC4081R	
Q604	8-729-905-12	TRANSISTOR DTA144EU	
Q605	8-729-905-18	TRANSISTOR DTC144EU	
Q606	8-729-905-35	TRANSISTOR 2SC4081R	
Q607	8-729-905-12	TRANSISTOR DTA144EU	
Q608	8-729-905-18	TRANSISTOR DTC144EU	
Q609	8-729-905-23	TRANSISTOR 2SA1576R	
Q610	8-729-905-35	TRANSISTOR 2SC4081R	
Q611	8-729-905-23	TRANSISTOR 2SA1576R	
Q612	8-729-905-35	TRANSISTOR 2SC4081R	
Q613	8-729-905-35	TRANSISTOR 2SC4081R	
Q614	8-729-905-35	TRANSISTOR 2SC4081R	
Q615	8-729-905-35	TRANSISTOR 2SC4081R	
Q616	8-729-905-23	TRANSISTOR 2SA1576R	
Q617	8-729-905-35	TRANSISTOR 2SC4081R	
Q618	8-729-141-48	TRANSISTOR 2SB624-BV345	
Q619	8-729-905-18	TRANSISTOR DTC144EU	
Q620	8-729-907-00	TRANSISTOR DTC114EU	
Q625	8-729-905-12	TRANSISTOR DTA144EU	
Q626	8-729-905-18	TRANSISTOR DTC144EU	
Q627	8-729-905-23	TRANSISTOR 2SA1576R	
Q628	8-729-920-48	TRANSISTOR IMH2	
Q629	8-729-905-35	TRANSISTOR 2SC4081R	
Q631	8-729-905-12	TRANSISTOR DTA144EU	
Q632	8-729-905-18	TRANSISTOR DTC144EU	
Q701	8-729-905-35	TRANSISTOR 2SC4081R	
Q702	8-729-905-23	TRANSISTOR 2SA1576R	
Q703	8-729-905-35	TRANSISTOR 2SC4081R	
Q704	8-729-905-18	TRANSISTOR DTC144EU	
Q705	8-729-905-18	TRANSISTOR DTC144EU	
Q706	8-729-905-35	TRANSISTOR 2SC4081R	
Q707	8-729-905-18	TRANSISTOR DTC144EU	
Q801	8-729-905-18	TRANSISTOR DTC144EU	
Q802	8-729-905-35	TRANSISTOR 2SC4081R	
Q803	8-729-905-35	TRANSISTOR 2SC4081R	
Q804	8-729-905-35	TRANSISTOR 2SC4081R	
Q806	8-729-905-35	TRANSISTOR 2SC4081R	
Q807	8-729-905-35	TRANSISTOR 2SC4081R	
Q808	8-729-905-35	TRANSISTOR 2SC4081R	
Q810	8-729-905-35	TRANSISTOR 2SC4081R	
Q811	8-729-905-35	TRANSISTOR 2SC4081R	
Q813	8-729-905-18	TRANSISTOR DTC144EU	
Q814	8-729-905-23	TRANSISTOR 2SA1576R	
Q815	8-729-905-35	TRANSISTOR 2SC4081R	
Q817	8-729-905-18	TRANSISTOR DTC144EU	
Q818	△.8-729-822-51	TRANSISTOR 2SK1469	
Q819	8-729-141-48	TRANSISTOR 2SB624-BV345	
Q820	8-729-905-18	TRANSISTOR DTC144EU	
Q821	8-729-202-38	TRANSISTOR 2SC3326N	
Q822	8-729-905-35	TRANSISTOR 2SC4081R	
Q823	8-729-905-23	TRANSISTOR 2SA1576R	
Q824	8-729-905-35	TRANSISTOR 2SC4081R	
Q825	8-729-905-23	TRANSISTOR 2SA1576R	
Q826	8-729-905-35	TRANSISTOR 2SC4081R	

Ref.No	Part No.	Description	Remark
Q827	8-729-905-35	TRANSISTOR 2SC4081R	
Q828	8-729-202-38	TRANSISTOR 2SC3326N	
Q829	8-729-905-35	TRANSISTOR 2SC4081R	
Q830	8-729-905-35	TRANSISTOR 2SC4081R	
Q831	8-729-920-48	TRANSISTOR IMH2	
Q833	8-729-905-35	TRANSISTOR 2SC4081R	
Q834	8-729-905-18	TRANSISTOR DTC144EU	
Q835	8-729-905-18	TRANSISTOR DTC144EU	
Q901	8-729-905-35	TRANSISTOR 2SC4081R	
Q902	8-729-141-48	TRANSISTOR 2SB624-BV345	
Q911	8-729-905-35	TRANSISTOR 2SC4081R	
Q912	8-729-905-35	TRANSISTOR 2SC4081R	
Q921	8-729-905-18	TRANSISTOR DTC144EU	
Q922	8-729-905-35	TRANSISTOR 2SC4081R	
Q923	8-729-905-35	TRANSISTOR 2SC4081R	
Q927	8-729-905-61	TRANSISTOR DTC124EU	
Q928	8-729-924-36	TRANSISTOR DTC143EU	
Q929	8-729-905-15	TRANSISTOR DTC144WU	
Q930	8-729-905-23	TRANSISTOR 2SA1576R	
Q931	8-729-905-35	TRANSISTOR 2SC4081R	
Q932	8-729-907-00	TRANSISTOR DTC114EU	
<u>RESISTOR</u>			
R101	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R102	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R103	1-216-851-11	METAL GLAZE 330K	5% 1/16W
R104	1-216-842-11	METAL GLAZE 56K	5% 1/16W
R105	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R106	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R107	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R108	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R109	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R110	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R112	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R113	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R114	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R115	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R118	1-216-842-11	METAL GLAZE 56K	5% 1/16W
R127	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R129	1-216-815-11	METAL GLAZE 330	5% 1/16W
R130	1-216-861-11	METAL GLAZE 2.2M	5% 1/16W
R131	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R132	1-216-861-11	METAL GLAZE 2.2M	5% 1/16W
R133	1-216-861-11	METAL GLAZE 2.2M	5% 1/16W
R135	1-216-839-11	METAL GLAZE 33K	5% 1/16W
R136	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R137	1-216-843-11	METAL GLAZE 68K	5% 1/16W
R138	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R139	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R140	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R141	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R144	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R145	1-216-849-11	METAL GLAZE 220K	5% 1/16W
R146	1-216-822-11	METAL GLAZE 1.2K	5% 1/16W
R147	1-216-025-00	METAL GLAZE 100	5% 1/10W
R155	1-216-849-11	METAL GLAZE 220K	5% 1/16W
R156	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R157	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R158	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R159	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R160	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R161	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R162	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R163	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R164	1-216-834-11	METAL GLAZE 12K	5% 1/16W

When indicating parts by reference number, please include the board name.

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description	Remark
R165	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R166	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R167	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R168	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R169	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R170	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R171	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R172	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R173	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R174	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R175	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R179	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R181	1-216-864-11	METAL GLAZE 0	5% 1/16W
R182	1-216-864-11	METAL GLAZE 0	5% 1/16W
R184	1-216-864-11	METAL GLAZE 0	5% 1/16W
R186	1-216-864-11	METAL GLAZE 0	5% 1/16W
R188	1-216-864-11	METAL GLAZE 0	5% 1/16W
R190	1-216-864-11	METAL GLAZE 0	5% 1/16W
R191	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R194	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R195	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R201	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R202	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R203	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R204	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R205	1-216-838-11	METAL GLAZE 27K	5% 1/16W
R206	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R207	1-216-851-11	METAL GLAZE 330K	5% 1/16W
R208	1-216-832-11	METAL GLAZE 8.2K	5% 1/16W
R209	1-216-838-11	METAL GLAZE 27K	5% 1/16W
R210	1-216-843-11	METAL GLAZE 68K	5% 1/16W
R211	1-216-843-11	METAL GLAZE 68K	5% 1/16W
R212	1-216-828-11	METAL GLAZE 3.9K	5% 1/16W
R213	1-216-192-00	METAL GLAZE 560	5% 1/8W
R214	1-216-172-00	METAL GLAZE 82	5% 1/8W
R215	1-216-835-11	METAL GLAZE 15K	5% 1/16W
R216	1-216-828-11	METAL GLAZE 3.9K	5% 1/16W
R217	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R218	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R219	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R220	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R221	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R222	1-216-853-11	METAL GLAZE 470K	5% 1/16W
R223	1-216-853-11	METAL GLAZE 470K	5% 1/16W
R224	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R225	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R226	1-216-830-11	METAL GLAZE 5.6K	5% 1/16W
R227	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R228	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R229	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R230	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R231	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R232	1-216-842-11	METAL GLAZE 56K	5% 1/16W
R233	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R234	1-216-842-11	METAL GLAZE 56K	5% 1/16W
R235	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R236	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R237	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R238	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R239	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R241	1-216-336-11	METAL GLAZE 47K	1% 1/10W
R242	1-216-336-11	METAL GLAZE 47K	1% 1/10W
R250	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R251	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R252	1-216-833-11	METAL GLAZE 10K	5% 1/16W

Ref.No	Part No.	Description	Remark
R253	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R262	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R264	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R265	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R267	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R268	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R269	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R270	1-216-194-00	METAL GLAZE 680	5% 1/8W
R271	1-216-194-00	METAL GLAZE 680	5% 1/8W
R272	1-216-194-00	METAL GLAZE 680	5% 1/8W
R273	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R274	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R275	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R276	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R277	1-216-827-11	METAL GLAZE 3.3K	5% 1/16W
R279	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R280	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R281	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R282	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R285	1-216-864-11	METAL GLAZE 0	5% 1/16W
R299	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R301	1-216-827-11	METAL GLAZE 3.3K	5% 1/16W
R302	1-216-827-11	METAL GLAZE 3.3K	5% 1/16W
R303	1-216-827-11	METAL GLAZE 3.3K	5% 1/16W
R304	1-216-864-11	METAL GLAZE 0	5% 1/16W
R305	1-216-854-11	METAL GLAZE 560K	5% 1/16W
R306	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R307	1-216-827-11	METAL GLAZE 3.3K	5% 1/16W
R308	1-216-864-11	METAL GLAZE 0	5% 1/16W
R312	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R313	1-216-847-11	METAL GLAZE 150K	5% 1/16W
R314	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R316	1-216-839-11	METAL GLAZE 33K	5% 1/16W
R317	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R318	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R319	1-216-809-11	METAL GLAZE 100	5% 1/16W
R320	1-216-811-11	METAL GLAZE 150	5% 1/16W
R321	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R322	1-216-838-11	METAL GLAZE 27K	5% 1/16W
R323	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R325	1-216-826-11	METAL GLAZE 2.7K	5% 1/16W
R326	1-216-824-11	METAL GLAZE 1.8K	5% 1/16W
R327	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R328	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R329	1-216-826-11	METAL GLAZE 2.7K	5% 1/16W
R330	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R331	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R332	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R342	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R343	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R401	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R402	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R403	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R404	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R405	1-216-828-11	METAL GLAZE 3.9K	5% 1/16W
R407	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R408	1-216-836-11	METAL GLAZE 18K	5% 1/16W
R409	1-216-033-00	METAL GLAZE 220	5% 1/10W
R410	1-216-033-00	METAL GLAZE 220	5% 1/10W
R411	1-216-045-00	METAL GLAZE 680	5% 1/10W
R412	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R413	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R414	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R415	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R416	1-216-045-00	METAL GLAZE 680	5% 1/10W

When indicating parts by reference number, please include the board name.

SV-38

Ref.No	Part No.	Description	Remark
R417	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R418	1-216-824-11	METAL GLAZE	1.8K 5% 1/16W
R419	1-216-045-00	METAL GLAZE	680 5% 1/10W
R420	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R421	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R422	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R423	1-216-823-11	METAL GLAZE	1.5K 5% 1/16W
R424	1-216-823-11	METAL GLAZE	1.5K 5% 1/16W
R425	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R426	1-216-830-11	METAL GLAZE	5.6K 5% 1/16W
R427	1-216-824-11	METAL GLAZE	1.8K 5% 1/16W
R428	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R429	1-216-843-11	METAL GLAZE	68K 5% 1/16W
R430	1-216-823-11	METAL GLAZE	1.5K 5% 1/16W
R431	1-216-789-11	METAL GLAZE	2.2 5% 1/16W
R432	1-216-789-11	METAL GLAZE	2.2 5% 1/16W
R433	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R434	1-216-830-11	METAL GLAZE	5.6K 5% 1/16W
R435	1-216-789-11	METAL GLAZE	2.2 5% 1/16W
R436	1-216-815-11	METAL GLAZE	330 5% 1/16W
R437	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R438	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R439	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R440	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R441	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R443	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R444	1-216-848-11	METAL GLAZE	180K 5% 1/16W
R445	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R446	1-216-848-11	METAL GLAZE	180K 5% 1/16W
R447	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R448	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R451	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R452	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R453	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R454	1-216-841-11	METAL GLAZE	47K 5% 1/16W
R455	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R456	1-216-801-11	METAL GLAZE	22 5% 1/16W
R460	1-217-671-11	METAL GLAZE	1 5% 1/10W
R461	1-217-671-11	METAL GLAZE	1 5% 1/10W
R462	1-217-671-11	METAL GLAZE	1 5% 1/10W
R463	1-217-671-11	METAL GLAZE	1 5% 1/10W
R464	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R466	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R467	1-216-828-11	METAL GLAZE	3.9K 5% 1/16W
R468	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R469	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R470	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R471	1-216-864-11	METAL GLAZE	0 5% 1/16W
R601	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R602	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R603	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R604	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R605	1-216-859-11	METAL GLAZE	1.5M 5% 1/16W
R606	1-216-857-11	METAL GLAZE	1M 5% 1/16W
R607	1-216-855-11	METAL GLAZE	680K 5% 1/16W
R608	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R609	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R610	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R611	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R612	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R613	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R614	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R615	1-216-832-11	METAL GLAZE	8.2K 5% 1/16W
R616	1-216-832-11	METAL GLAZE	8.2K 5% 1/16W
R617	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W

Ref.No	Part No.	Description	Remark
R618	1-216-822-11	METAL GLAZE	1.2K 5% 1/16W
R619	1-216-015-00	METAL GLAZE	39 5% 1/10W
R620	1-216-827-11	METAL GLAZE	3.3K 5% 1/16W
R625	1-216-838-11	METAL GLAZE	27K 5% 1/16W
R626	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R627	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R628	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R629	1-216-842-11	METAL GLAZE	56K 5% 1/16W
R630	1-216-817-11	METAL GLAZE	470 5% 1/16W
R631	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R632	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R633	1-216-013-00	METAL GLAZE	33 5% 1/10W
R634	1-216-304-11	METAL GLAZE	3.3 5% 1/10W
R635	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R636	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R637	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R638	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R639	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R640	1-216-830-11	METAL GLAZE	5.6K 5% 1/16W
R641	1-216-836-11	METAL GLAZE	18K 5% 1/16W
R642	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R643	1-216-699-11	METAL CHIP	100K 0.50% 1/10W
R645	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R646	1-216-822-11	METAL GLAZE	1.2K 5% 1/16W
R647	1-216-830-11	METAL GLAZE	5.6K 5% 1/16W
R648	1-216-819-11	METAL GLAZE	680 5% 1/16W
R649	1-216-819-11	METAL GLAZE	680 5% 1/16W
R650	1-216-816-11	METAL GLAZE	390 5% 1/16W
R651	1-216-817-11	METAL GLAZE	470 5% 1/16W
R652	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R653	1-216-815-11	METAL GLAZE	330 5% 1/16W
R654	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R655	1-216-817-11	METAL GLAZE	470 5% 1/16W
R656	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R657	1-216-811-11	METAL GLAZE	150 5% 1/16W
R658	1-216-813-11	METAL GLAZE	220 5% 1/16W
R659	1-216-815-11	METAL GLAZE	330 5% 1/16W
R661	1-216-801-11	METAL GLAZE	22 5% 1/16W
R662	1-216-820-11	METAL GLAZE	820 5% 1/16W
R663	1-216-819-11	METAL GLAZE	680 5% 1/16W
R664	1-216-826-11	METAL GLAZE	2.7K 5% 1/16W
R665	1-216-817-11	METAL GLAZE	470 5% 1/16W
R668	1-216-809-11	METAL GLAZE	100 5% 1/16W
R669	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R670	1-216-809-11	METAL GLAZE	100 5% 1/16W
R671	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R672	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R673	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R674	1-216-821-11	METAL GLAZE	1K 5% 1/16W
R675	1-216-831-11	METAL GLAZE	6.8K 5% 1/16W
R676	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R679	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R684	1-216-857-11	METAL GLAZE	1M 5% 1/16W
R685	1-216-857-11	METAL GLAZE	1M 5% 1/16W
R686	1-216-828-11	METAL GLAZE	3.9K 5% 1/16W
R687	1-216-829-11	METAL GLAZE	4.7K 5% 1/16W
R688	1-216-845-11	METAL GLAZE	100K 5% 1/16W
R689	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R690	1-216-830-11	METAL GLAZE	5.6K 5% 1/16W
R691	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R692	1-216-837-11	METAL GLAZE	22K 5% 1/16W
R694	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R695	1-216-825-11	METAL GLAZE	2.2K 5% 1/16W
R698	1-216-833-11	METAL GLAZE	10K 5% 1/16W
R699	1-216-822-11	METAL GLAZE	1.2K 5% 1/16W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
R701	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R702	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R704	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R705	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R707	1-216-818-11	METAL GLAZE 560	5% 1/16W
R708	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R709	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R710	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R711	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R712	1-216-822-11	METAL GLAZE 1.2K	5% 1/16W
R714	1-216-822-11	METAL GLAZE 1.2K	5% 1/16W
R715	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R717	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R718	1-216-828-11	METAL GLAZE 3.9K	5% 1/16W
R719	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R720	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R721	1-216-832-11	METAL GLAZE 8.2K	5% 1/16W
R723	1-216-830-11	METAL GLAZE 5.6K	5% 1/16W
R724	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R725	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R726	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R727	1-216-817-11	METAL GLAZE 470	5% 1/16W
R728	1-216-864-11	METAL GLAZE 0	5% 1/16W
R730	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R753	1-216-823-11	METAL GLAZE 1.5K	5% 1/16W
R754	1-216-864-11	METAL GLAZE 0	5% 1/16W
R755	1-216-809-11	METAL GLAZE 100	5% 1/16W
R801	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R804	1-216-811-11	METAL GLAZE 150	5% 1/16W
R805	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R806	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R807	1-216-816-11	METAL GLAZE 390	5% 1/16W
R808	1-216-818-11	METAL GLAZE 560	5% 1/16W
R809	1-216-823-11	METAL GLAZE 1.5K	5% 1/16W
R810	1-216-819-11	METAL GLAZE 680	5% 1/16W
R811	1-216-835-11	METAL GLAZE 15K	5% 1/16W
R812	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R813	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R814	1-216-811-11	METAL GLAZE 150	5% 1/16W
R815	1-216-813-11	METAL GLAZE 220	5% 1/16W
R816	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R817	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R818	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R819	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R820	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R821	1-216-811-11	METAL GLAZE 150	5% 1/16W
R822	1-216-823-11	METAL GLAZE 1.5K	5% 1/16W
R823	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R824	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R825	1-216-835-11	METAL GLAZE 15K	5% 1/16W
R826	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R827	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R829	1-216-813-11	METAL GLAZE 220	5% 1/16W
R830	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R831	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R832	1-216-844-11	METAL GLAZE 82K	5% 1/16W
R833	1-216-022-00	METAL GLAZE 75	5% 1/10W
R834	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R835	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R836	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R837	1-216-849-11	METAL GLAZE 220K	5% 1/16W
R838	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R839	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R840	1-216-817-11	METAL GLAZE 470	5% 1/16W
R841	1-216-817-11	METAL GLAZE 470	5% 1/16W

Ref.No	Part No.	Description	Remark
R842	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R843	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R844	1-216-820-11	METAL GLAZE 820	5% 1/16W
R845	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R846	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R847	1-216-817-11	METAL GLAZE 470	5% 1/16W
R849	1-216-839-11	METAL GLAZE 33K	5% 1/16W
R850	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R851	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R852	1-216-809-11	METAL GLAZE 100	5% 1/16W
R855	1-216-813-11	METAL GLAZE 220	5% 1/16W
R856	1-216-817-11	METAL GLAZE 470	5% 1/16W
R857	1-216-817-11	METAL GLAZE 470	5% 1/16W
R860	1-216-813-11	METAL GLAZE 220	5% 1/16W
R861	1-216-818-11	METAL GLAZE 560	5% 1/16W
R862	1-216-819-11	METAL GLAZE 680	5% 1/16W
R863	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R864	1-216-831-11	METAL GLAZE 6.8K	5% 1/16W
R865	1-216-832-11	METAL GLAZE 8.2K	5% 1/16W
R867	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R868	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R869	1-216-817-11	METAL GLAZE 470	5% 1/16W
R870	1-216-816-11	METAL GLAZE 390	5% 1/16W
R873	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R875	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R876	1-216-817-11	METAL GLAZE 470	5% 1/16W
R877	1-216-817-11	METAL GLAZE 470	5% 1/16W
R878	1-216-812-11	METAL GLAZE 180	5% 1/16W
R879	1-216-818-11	METAL GLAZE 560	5% 1/16W
R880	1-216-817-11	METAL GLAZE 470	5% 1/16W
R882	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R885	1-216-817-11	METAL GLAZE 470	5% 1/16W
R886	1-216-817-11	METAL GLAZE 470	5% 1/16W
R889	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R890	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R891	1-216-864-11	METAL GLAZE 0	5% 1/16W
R892	1-216-837-11	METAL GLAZE 22K	5% 1/16W
R893	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R894	1-216-811-11	METAL GLAZE 150	5% 1/16W
R895	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R901	1-216-789-11	METAL GLAZE 2.2	5% 1/16W
R902	1-216-789-11	METAL GLAZE 2.2	5% 1/16W
R906	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R907	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R908	1-216-815-11	METAL GLAZE 330	5% 1/16W
R909	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R911	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R912	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R913	1-216-861-11	METAL GLAZE 2.2M	5% 1/16W
R914	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R915	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R916	1-216-849-11	METAL GLAZE 220K	5% 1/16W
R921	1-216-857-11	METAL GLAZE 1M	5% 1/16W
R923	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R924	1-216-832-11	METAL GLAZE 8.2K	5% 1/16W
R925	1-218-270-11	METAL GLAZE 1.1K	5% 1/16W
R926	1-216-822-11	METAL GLAZE 1.2K	5% 1/16W
R927	1-216-645-11	METAL CHIP 560	0.50% 1/10W
R928	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R932	1-216-834-11	METAL GLAZE 12K	5% 1/16W
R933	1-216-816-11	METAL GLAZE 390	5% 1/16W
R935	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R936	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R937	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R938	1-216-821-11	METAL GLAZE 1K	5% 1/16W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
R939	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R940	1-216-001-00	METAL GLAZE 10	5% 1/10W
R941	1-216-819-11	METAL GLAZE 680	5% 1/16W
R942	1-216-814-11	METAL GLAZE 270	5% 1/16W
R944	1-216-819-11	METAL GLAZE 680	5% 1/16W
R946	1-216-827-11	METAL GLAZE 3.3K	5% 1/16W
R948	1-216-825-11	METAL GLAZE 2.2K	5% 1/16W
R950	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R952	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R953	1-216-819-11	METAL GLAZE 680	5% 1/16W
R954	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R955	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R956	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R958	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R959	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R961	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R963	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R965	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R968	1-216-829-11	METAL GLAZE 4.7K	5% 1/16W
R969	1-216-833-11	METAL GLAZE 10K	5% 1/16W
R970	1-216-816-11	METAL GLAZE 390	5% 1/16W
R971	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R972	1-216-845-11	METAL GLAZE 100K	5% 1/16W
R974	1-216-841-11	METAL GLAZE 47K	5% 1/16W
R978	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R979	1-216-821-11	METAL GLAZE 1K	5% 1/16W
R986	1-216-835-11	METAL GLAZE 15K	5% 1/16W

NETWORK

RB101	1-236-412-11	NETWORK, RES 1.0K
RB102	1-236-433-11	NETWORK, RES 56K
RB103	1-236-433-11	NETWORK, RES 56K
RB104	1-236-424-11	NETWORK, RES 10K
RB105	1-236-424-11	NETWORK, RES 10K
RB106	1-236-424-11	NETWORK, RES 10K
RB107	1-236-424-11	NETWORK, RES 10K
RB108	1-236-424-11	NETWORK, RES 10K
RB109	1-236-424-11	NETWORK, RES 10K
RB110	1-236-424-11	NETWORK, RES 10K
RB111	1-236-412-11	NETWORK, RES 1.0K
RB112	1-236-424-11	NETWORK, RES 10K
RB113	1-236-424-11	NETWORK, RES 10K
RB115	1-236-412-11	NETWORK, RES 1.0K
RB116	1-236-412-11	NETWORK, RES 1.0K
RB117	1-236-412-11	NETWORK, RES 1.0K
RB118	1-236-412-11	NETWORK, RES 1.0K
RB119	1-236-412-11	NETWORK, RES 1.0K
RB120	1-236-412-11	NETWORK, RES 1.0K
RB121	1-236-412-11	NETWORK, RES 1.0K
RB122	1-236-424-11	NETWORK, RES 10K
RB123	1-236-424-11	NETWORK, RES 10K
RB130	1-236-424-11	NETWORK, RES 10K
RB131	1-236-424-11	NETWORK, RES 10K
RB132	1-236-436-11	NETWORK, RES 100K
RB201	1-236-412-11	NETWORK, RES 1.0K
RB202	1-236-412-11	NETWORK, RES 1.0K
RB203	1-236-412-11	NETWORK, RES 1.0K
RB204	1-236-412-11	NETWORK, RES 1.0K
RB205	1-236-412-11	NETWORK, RES 1.0K
RB206	1-236-412-11	NETWORK, RES 1.0K
RB207	1-236-412-11	NETWORK, RES 1.0K
RB208	1-236-412-11	NETWORK, RES 1.0K
RB209	1-236-412-11	NETWORK, RES 1.0K
RB210	1-236-412-11	NETWORK, RES 1.0K
RB211	1-236-412-11	NETWORK, RES 1.0K

Ref.No	Part No.	Description	Remark
RB212	1-236-412-11	NETWORK, RES 1.0K	
RB213	1-236-412-11	NETWORK, RES 1.0K	
RB214	1-236-424-11	NETWORK, RES 10K	
RB215	1-236-424-11	NETWORK, RES 10K	
RB216	1-236-424-11	NETWORK, RES 10K	
RB217	1-236-424-11	NETWORK, RES 10K	
RB218	1-236-424-11	NETWORK, RES 10K	
RB219	1-236-424-11	NETWORK, RES 10K	
RB220	1-236-424-11	NETWORK, RES 10K	
RB221	1-236-424-11	NETWORK, RES 10K	
RB222	1-236-424-11	NETWORK, RES 10K	
RB223	1-236-412-11	NETWORK, RES 1.0K	
RB224	1-236-424-11	NETWORK, RES 10K	
RB225	1-236-412-11	NETWORK, RES 1.0K	
RB227	1-236-412-11	NETWORK, RES 1.0K	
RB801	1-236-412-11	NETWORK, RES 1.0K	
RB802	1-236-412-11	NETWORK, RES 1.0K	
RB803	1-236-412-11	NETWORK, RES 1.0K	
RB804	1-236-412-11	NETWORK, RES 1.0K	
RB921	1-236-412-11	NETWORK, RES 1.0K	
RB922	1-236-412-11	NETWORK, RES 1.0K	
RB923	1-236-412-11	NETWORK, RES 1.0K	
RB924	1-236-424-11	NETWORK, RES 10K	
RB925	1-236-412-11	NETWORK, RES 1.0K	
RB926	1-236-412-11	NETWORK, RES 1.0K	
RB927	1-236-420-11	NETWORK, RES 4.7K	
RB929	1-236-412-11	NETWORK, RES 1.0K	
RB930	1-236-412-11	NETWORK, RES 1.0K	

VARIABLE RESISTOR

RV301	1-238-090-11	RES, ADJ CERMET 10K
RV401	1-238-087-11	RES, ADJ CERMET 1K
RV402	1-238-089-11	RES, ADJ CERMET 4.7K
RV601	1-238-092-11	RES, ADJ CERMET 47K
RV602	1-238-089-11	RES, ADJ CERMET 4.7K
RV603	1-238-088-11	RES, ADJ, CERMET 2.2K
RV604	1-238-091-11	RES, ADJ CERMET 22K
RV605	1-238-088-11	RES, ADJ, CERMET 2.2K
RV606	1-238-086-11	RES, ADJ CERMET 470
RV607	1-238-088-11	RES, ADJ, CERMET 2.2K
RV608	1-238-092-11	RES, ADJ CERMET 47K
RV609	1-238-087-11	RES, ADJ CERMET 1K
RV701	1-238-087-11	RES, ADJ CERMET 1K
RV802	1-238-087-11	RES, ADJ CERMET 1K
RV923	1-230-868-11	RES, ADJ, METAL GLAZE 2.2K

THERMISTOR

TH301	1-800-200-00	THERMISTOR
-------	--------------	------------

CRYSTAL

X101	1-527-997-21	VIBRATOR, CRYSTAL
X102	1-577-118-11	VIBRATOR, LITHIUM NIOBATE
X201	1-577-349-21	VIBRATOR, CRYSTAL
X701	1-577-080-11	VIBRATOR, CRYSTAL
X921	1-577-290-21	VIBRATOR, CRYSTAL

A-7061-935-A CC-32 BOARD, COMPLETE (Ref. No. 5000 series)

CAPACITOR

C001	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C003	1-135-180-21	TANTAL CHIP	3.3MF	20%	6.3V
C004	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C005	1-162-946-11	CERAMIC CHIP	27PF	5%	50V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark		
C006	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C007	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C008	1-135-180-21	TANTAL CHIP	3.3MF	20%	6.3V
C009	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C010	1-164-360-11	CERAMIC CHIP	0.1MF		16V
C011	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C013	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C015	1-135-180-21	TANTAL CHIP	3.3MF	20%	6.3V
C016	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C017	1-162-974-11	CERAMIC CHIP	0.01MF		50V
C018	1-162-946-11	CERAMIC CHIP	27PF	5%	50V

IC

IC001	8-752-329-49	IC CXL5502M-2			
-------	--------------	---------------	--	--	--

COIL

L001	1-410-988-11	INDUCTOR CHIP	0.39UH		
L002	1-410-988-11	INDUCTOR CHIP	0.39UH		
L003	1-412-031-11	INDUCTOR CHIP	47UH		
L004	1-410-988-11	INDUCTOR CHIP	0.39UH		
L005	1-410-988-11	INDUCTOR CHIP	0.39UH		
L008	1-412-031-11	INDUCTOR CHIP	47UH		
L009	1-410-988-11	INDUCTOR CHIP	0.39UH		
L010	1-410-988-11	INDUCTOR CHIP	0.39UH		

RESISTOR

R001	1-216-857-11	METAL GLAZE	1M	5%	1/16W
R002	1-216-823-11	METAL GLAZE	1.5K	5%	1/16W
R003	1-216-821-11	METAL GLAZE	1K	5%	1/16W
R004	1-216-844-11	METAL GLAZE	82K	5%	1/16W
R005	1-216-864-11	METAL GLAZE	0	5%	1/16W
R007	1-216-864-11	METAL GLAZE	0	5%	1/16W

*A-7062-317-A TU-123 BOARD, COMPLETE (Ref. No. 6000 series) *****

- 3-744-166-01 HOLDER, ANTENNA
- 3-746-907-01 LID, TDD SHIELD CASE
- 3-746-908-01 LID, REAR, TDD SHIELD CASE
- 3-746-915-01 LID, REAR, TU SHIELD CASE
- 3-741-147-01 CAP, PS SHIELD

CAPACITOR

C001	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C002	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C004	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C005	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C006	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C007	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C008	1-164-005-11	CERAMIC CHIP	0.47MF		25V
C009	1-126-205-11	ELECT CHIP	47MF	20%	6.3V
C010	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C011	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C012	1-163-035-00	CERAMIC CHIP	0.047MF		50V
C015	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C019	1-163-090-00	CERAMIC CHIP	7PF	0.25PF	50V
C020	1-163-090-00	CERAMIC CHIP	7PF	0.25PF	50V
C022	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C023	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C024	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C025	1-135-217-21	TANTAL CHIP	15MF	20%	6.3V
C026	1-135-217-21	TANTAL CHIP	15MF	20%	6.3V
C027	1-135-149-21	TANTAL CHIP	2.2MF	20%	10V

Ref.No	Part No.	Description	Remark		
C029	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C030	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C031	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C032	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C033	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C034	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C035	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C038	1-163-115-00	CERAMIC CHIP	82PF	5%	50V
C039	1-163-163-00	CERAMIC CHIP	18PF	5%	50V
C041	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C042	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C044	1-163-009-11	CERAMIC CHIP	0.001MF	10%	50V
C045	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C046	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C048	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C049	1-126-205-11	ELECT CHIP	47MF	20%	6.3V
C055	1-135-217-21	TANTAL CHIP	15MF	20%	6.3V
C056	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C057	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C058	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C059	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C060	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C061	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C070	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C071	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C072	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C073	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C074	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C075	1-136-707-11	FILM CHIP	0.012MF	5%	25
C076	1-136-703-11	FILM CHIP	0.0056MF	5%	25V
C078	1-135-202-21	TANTAL CHIP	22MF	20%	4V
C079	1-136-699-11	FILM CHIP	0.0027MF	5%	25V
C080	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C081	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C082	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C083	1-135-181-21	TANTAL CHIP	4.7MF	20%	6.3V
C084	1-135-177-21	TANTAL CHIP	1MF	20%	25V
C085	1-135-180-21	TANTAL CHIP	3.3MF	20%	6.3V
C086	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V
C088	1-164-634-11	CERAMIC CHIP	1MF		16V
C089	1-164-634-11	CERAMIC CHIP	1MF		16V
C090	1-135-177-21	TANTAL CHIP	1MF	20%	25V
C091	1-135-177-21	TANTAL CHIP	1MF	20%	25V
C110	1-135-157-21	TANTAL CHIP	10MF	20%	6.3V
C111	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C112	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C113	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C114	1-163-036-00	CERAMIC CHIP	0.068MF		50V
C115	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C501	1-163-037-11	CERAMIC CHIP	0.022MF	10%	25V
C502	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C503	1-135-217-21	TANTAL CHIP	15MF	20%	6.3V
C504	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C505	1-163-011-11	CERAMIC CHIP	0.0015MF	10%	50V
C506	1-126-204-11	ELECT CHIP	47MF	20%	16V
C507	1-135-156-21	TANTAL CHIP	6.8MF	20%	10V
C508	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C509	1-124-779-00	ELECT CHIP	10MF	20%	16V
C510	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C511	1-126-200-11	ELECT CHIP	10MF	20%	35V
C512	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C513	1-164-232-11	CERAMIC CHIP	0.01MF		50V
C514	1-163-038-00	CERAMIC CHIP	0.1MF		25V
C515	1-135-156-21	TANTAL CHIP	6.8MF	20%	10V
C516	1-163-038-00	CERAMIC CHIP	0.1MF		25V

When indicating parts by reference number, please include the board name.

TU-123

Ref.No	Part No.	Description	Remark
C517	1-135-153-21	TANTAL CHIP	2.2MF 20% 25V
C518	1-163-038-00	CERAMIC CHIP	0.1MF 25V
C520	1-126-602-11	ELECT CHIP	3.3MF 20% 50V
C521	1-163-036-00	CERAMIC CHIP	0.068MF 50V
C522	1-135-155-21	TANTAL CHIP	4.7MF 20% 16V
C524	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C525	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C526	1-163-117-00	CERAMIC CHIP	100PF 5% 50V
C527	1-163-037-11	CERAMIC CHIP	0.022MF 10% 25V

CERAMIC FILTER

CF001	1-409-332-00	CERAMIC TRAP (4.5MHZ)
CF002	1-577-610-11	DISCRIMINATOR, CERAMIC
CF003	1-577-559-11	FILTER, CERAMIC

CONNECTOR

CN001	1-569-634-11	CONNECTOR, BOARD TO BOARD 30P
CN002	1-566-523-11	CONNECTOR, FPC (ZIF) 7P
CN003	*1-565-541-11	PIN, CONNECTOR (PC BOARD) 2P

DIODE

D001	8-719-400-18	DIODE MA152WK
D501	8-719-400-18	DIODE MA152WK
D502	8-719-400-18	DIODE MA152WK
D503	8-719-400-18	DIODE MA152WK
D504	8-719-400-18	DIODE MA152WK
D601	8-719-106-44	DIODE RD9.1M-B2

FERRITE BEAD RING

FB501	1-412-390-21	INDUCTOR CHIP 0UH
FB502	1-412-390-21	INDUCTOR CHIP 0UH

IC

IC001	8-759-634-94	IC M52018FP
IC002	8-759-634-94	IC M52018FP
IC003	8-752-035-70	IC CXA1124AQ
IC004	8-759-030-05	IC LM393ML
IC501	8-759-979-50	IC FA7610N
IC502	8-759-157-40	IC UPC574J

ISOLATION

IU001	1-466-330-11	AMPLIFIER, ISOLATION (RA-1)
-------	--------------	-----------------------------

JACK

J001	1-507-921-00	JACK
J601	1-563-282-21	JACK, SMALL TYPE
J602	1-563-282-21	JACK, SMALL TYPE

COIL

L002	1-412-168-11	INDUCTOR	0.33UH
L003	1-410-989-11	INDUCTOR CHIP	0.47UH
L004	1-412-029-11	INDUCTOR CHIP	10UH
L006	1-412-029-11	INDUCTOR CHIP	10UH
L009	1-410-383-31	INDUCTOR CHIP	15UH
L010	1-410-382-31	INDUCTOR CHIP	12UH
L013	1-410-998-31	INDUCTOR CHIP	2.7UH
L014	1-410-994-11	INDUCTOR CHIP	1.2UH
L015	1-412-029-11	INDUCTOR CHIP	10UH
L016	1-412-029-11	INDUCTOR CHIP	10UH
L017	1-412-031-11	INDUCTOR CHIP	47UH
L501	1-412-028-11	INDUCTOR CHIP	4.7UH
L502	1-412-028-11	INDUCTOR CHIP	4.7UH
L503	1-412-028-11	INDUCTOR CHIP	4.7UH
L505	1-412-030-11	INDUCTOR CHIP	22UH

Ref.No	Part No.	Description	Remark
<u>TRANSISTOR</u>			
Q001	8-729-230-99	TRANSISTOR 2SC2669	
Q003	8-729-901-47	TRANSISTOR DTA143EK	
Q004	8-729-901-47	TRANSISTOR DTA143EK	
Q005	8-729-901-47	TRANSISTOR DTA143EK	
Q006	8-729-100-66	TRANSISTOR 2SC1623	
Q009	8-729-100-66	TRANSISTOR 2SC1623	
Q010	8-729-216-22	TRANSISTOR 2SA1162	
Q012	8-729-100-66	TRANSISTOR 2SC1623	
Q015	8-729-100-66	TRANSISTOR 2SC1623	
Q020	8-729-901-01	TRANSISTOR DTC144EK	
Q104	8-729-100-66	TRANSISTOR 2SC1623	
Q105	8-729-601-58	TRANSISTOR 2SC3053	
Q501	8-729-421-15	TRANSISTOR 2SD1119-Q	
Q502	8-729-901-06	TRANSISTOR DTA144EK	
Q503	8-729-901-01	TRANSISTOR DTC144EK	

RESISTOR

R002	1-216-295-00	METAL GLAZE	0	5%	1/10W
R003	1-216-295-00	METAL GLAZE	0	5%	1/10W
R006	1-216-021-00	METAL GLAZE	68	5%	1/10W
R007	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R008	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R009	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R010	1-216-019-00	METAL GLAZE	56	5%	1/10W
R015	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R016	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R017	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R018	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R022	1-216-091-00	METAL GLAZE	56K	5%	1/10W
R023	1-216-091-00	METAL GLAZE	56K	5%	1/10W
R024	1-216-295-00	METAL GLAZE	0	5%	1/10W
R025	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R026	1-216-025-00	METAL GLAZE	100	5%	1/10W
R027	1-216-037-00	METAL GLAZE	330	5%	1/10W
R028	1-216-037-00	METAL GLAZE	330	5%	1/10W
R029	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R030	1-216-025-00	METAL GLAZE	100	5%	1/10W
R032	1-216-025-00	METAL GLAZE	100	5%	1/10W
R033	1-216-027-00	METAL GLAZE	120	5%	1/10W
R036	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R038	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R039	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R040	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W
R041	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W
R042	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W
R045	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R046	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R047	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R048	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R049	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R052	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R053	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R054	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W
R055	1-216-033-00	METAL GLAZE	220	5%	1/10W
R056	1-216-045-00	METAL GLAZE	680	5%	1/10W
R057	1-216-037-00	METAL GLAZE	330	5%	1/10W
R058	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R059	1-216-049-00	METAL GLAZE	1K	5%	1/10W
R074	1-216-691-11	METAL CHIP	47K	0.50%	1/10W
R075	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R076	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R077	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R078	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W
R079	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
R080	1-216-690-11	METAL CHIP 43K	0.50% 1/10W
R082	1-216-121-00	METAL GLAZE 1M	5% 1/10W
R083	1-216-097-00	METAL GLAZE 100K	5% 1/10W
R084	1-216-097-00	METAL GLAZE 100K	5% 1/10W
R085	1-216-748-11	METAL GLAZE 39K	5% 1/10W
R086	1-216-075-00	METAL GLAZE 12K	5% 1/10W
R087	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R088	1-216-045-00	METAL GLAZE 680	5% 1/10W
R089	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R092	1-216-089-00	METAL GLAZE 47K	5% 1/10W
R093	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R102	1-216-081-00	METAL GLAZE 22K	5% 1/10W
R103	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R104	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R105	1-216-109-00	METAL GLAZE 330K	5% 1/10W
R106	1-216-081-00	METAL GLAZE 22K	5% 1/10W
R107	1-216-081-00	METAL GLAZE 22K	5% 1/10W
R108	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R109	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R110	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R501	1-216-055-00	METAL GLAZE 1.8K	5% 1/10W
R502	1-216-091-00	METAL GLAZE 56K	5% 1/10W
R503	1-216-069-00	METAL GLAZE 6.8K	5% 1/10W
R504	1-216-113-00	METAL GLAZE 470K	5% 1/10W
R505	1-216-117-00	METAL GLAZE 680K	5% 1/10W
R506	1-216-748-11	METAL GLAZE 39K	5% 1/10W
R507	1-216-103-00	METAL GLAZE 180K	5% 1/10W
R508	1-216-001-00	METAL GLAZE 10	5% 1/10W
R509	1-216-105-00	METAL GLAZE 220K	5% 1/10W
R511	1-216-009-00	METAL GLAZE 22	5% 1/10W
R512	1-216-043-00	METAL GLAZE 560	5% 1/10W
R513	1-216-097-00	METAL GLAZE 100K	5% 1/10W
R514	1-216-097-00	METAL GLAZE 100K	5% 1/10W
R516	1-216-043-00	METAL GLAZE 560	5% 1/10W
R517	1-216-043-00	METAL GLAZE 560	5% 1/10W
R518	1-216-043-00	METAL GLAZE 560	5% 1/10W
R520	1-216-067-00	METAL GLAZE 5.6K	5% 1/10W
R521	1-216-081-00	METAL GLAZE 22K	5% 1/10W
R601	1-216-025-00	METAL GLAZE 100	5% 1/10W
R602	1-216-025-00	METAL GLAZE 100	5% 1/10W
R603	1-216-025-00	METAL GLAZE 100	5% 1/10W
R604	1-216-025-00	METAL GLAZE 100	5% 1/10W
<u>VARIABLE RESISTOR</u>			
RV001	1-238-089-11	RES, ADJ CERMET 4.7K	
RV003	1-238-090-11	RES, ADJ CERMET 10K	
RV004	1-238-090-11	RES, ADJ CERMET 10K	
RV005	1-238-089-11	RES, ADJ CERMET 4.7K	
RV006	1-238-092-11	RES, ADJ CERMET 47K	
RV007	1-238-091-11	RES, ADJ CERMET 22K	
RV501	1-238-087-11	RES, ADJ CERMET 1K	
<u>FILTER</u>			
SWF001	1-579-111-11	FILTER, SAW	
<u>COIL</u>			
T001	1-460-077-11	COIL	
T002	1-460-076-11	COIL	
T003	1-460-076-11	COIL	
T004	1-460-076-11	COIL	
<u>TRANSFORMER</u>			
T501	1-450-107-11	TRANSFORMER, DC-DC CONVERTER	

Ref.No	Part No.	Description	Remark
<u>TUNER</u>			
TU001	1-465-453-11	TUNER, ET (BT-KA301)	

*1-634-347-11	UC-6 BOARD, COMPLETE	(Ref. No. 8000 series)	*****
3-746-939-01	INSULATOR, UC		
<u>CONNECTOR</u>			
CN001	1-566-529-11	CONNECTOR, FPC (ZIF) 13P	
CN002	1-566-527-11	CONNECTOR, FPC (ZIF) 11P	
CN003	1-566-547-11	CONNECTOR, FPC (NON ZIF) 15P	

*1-634-345-11	CN-6 BOARD, COMPLETE	(Ref. No. 3000 series)	*****
<u>CONNECTOR</u>			
CN601	1-566-544-41	CONNECTOR, FPC (NON ZIF) 12P	
CN602	1-565-527-11	PIN, CONNECTOR (PC BOARD) 2P	
<u>DIODE</u>			
D602	8-719-106-43	DIODE RD9.1M-B1	
D603	8-719-106-43	DIODE RD9.1M-B1	
D604	8-719-106-43	DIODE RD9.1M-B1	
D605	8-719-106-43	DIODE RD9.1M-B1	
D606	8-719-106-43	DIODE RD9.1M-B1	
D608	8-719-105-91	DIODE RD5.6M-B2	
<u>JACK</u>			
J601	1-562-952-11	CONNECTOR 12P	

A-7071-210-A	DC-22 BOARD, COMPLETE	(Ref. No. 8000 series)	*****
1-575-823-11	CABLE, FLAT (1.0MM PITCH) 16P		
*3-744-170-01	HOLDER, DC		
3-746-959-01	SPACER, DC		
<u>FUSE</u>			
F701	△.1-532-777-21	FUSE, MICRO (SECONDARY) 1.25A 125V	
F702	△.1-532-777-21	FUSE, MICRO (SECONDARY) 1.25A 125V	
F703	△.1-532-777-21	FUSE, MICRO (SECONDARY) 1.25A 125V	
F704	△.1-532-777-21	FUSE, MICRO (SECONDARY) 1.25A 125V	
F705	△.1-532-777-21	FUSE, MICRO (SECONDARY) 1.25A 125V	
F706	△.1-532-777-21	FUSE, MICRO (SECONDARY) 1.25A 125V	
<u>JACK</u>			
J701	1-568-727-11	JACK, (DC IN)	
J702	1-537-241-11	TERMINAL BOARD (BATTERY)	

When indicating parts by reference number, please include the board name.

<p>Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.</p>	<p>Note: Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
--	---

Ref.No	Part No.	Description	Remark
*A-7071-211-A	KB-10 (A) BOARD, COMPLETE	(Ref. No. 8000 series)	

*3-744-130-01 HOLDER (PC), LED

CONNECTOR

CN802 1-566-760-11 PIN, CONNECTOR (PC BOARD) 5P

DIODE

D801 8-719-970-40 DIODE GL-1EG11
D803 8-719-918-65 DIODE GL-1PR102
D804 8-719-918-65 DIODE GL-1PR102
D805 8-719-918-65 DIODE GL-1PR102
D808 8-719-951-22 DIODE IMN10

D809 8-719-951-22 DIODE IMN10
D810 8-719-104-34 DIODE 1S2836

TRANSISTOR

Q801 8-729-403-24 TRANSISTOR XN4210
Q802 8-729-403-24 TRANSISTOR XN4210
Q803 8-729-403-24 TRANSISTOR XN4210
Q804 8-729-920-48 TRANSISTOR IMH2

RESISTOR

R801 1-216-033-00 METAL GLAZE 220 5% 1/10W
R803 1-216-037-00 METAL GLAZE 330 5% 1/10W
R804 1-216-037-00 METAL GLAZE 330 5% 1/10W
R805 1-216-037-00 METAL GLAZE 330 5% 1/10W
R807 1-216-081-00 METAL GLAZE 22K 5% 1/10W

R808 1-216-077-00 METAL GLAZE 15K 5% 1/10W

SWITCH

S801 1-572-344-11 SWITCH, SLIDE (POWER)
S802 1-572-078-11 SWITCH, TACTILE (CHANNEL -)
S803 1-572-078-11 SWITCH, TACTILE (CHANNEL +)
S805 1-571-102-11 SWITCH, SLIDE (EJECT)
S806 1-572-078-11 SWITCH, TACTILE (REW)

S807 1-572-078-11 SWITCH, TACTILE (FF)
S808 1-572-078-11 SWITCH, TACTILE (PLAY)
S809 1-572-078-11 SWITCH, TACTILE (STOP)
S810 1-572-078-11 SWITCH, TACTILE (PAUSE)
S811 1-571-102-11 SWITCH, SLIDE (REC)

S812 1-572-078-11 SWITCH, TACTILE (STEP)
S813 1-572-078-11 SWITCH, TACTILE (INDEX MODE)

*1-634-346-11 SB-3 BOARD (Ref. No. 6000 series)

CONNECTOR

CN901 1-566-539-11 CONNECTOR, FPC (NON ZIF) 7P

RESISTOR

R903 1-216-077-00 METAL GLAZE 15K 5% 1/10W
R904 1-216-081-00 METAL GLAZE 22K 5% 1/10W
R905 1-216-101-00 METAL GLAZE 150K 5% 1/10W
R906 1-216-077-00 METAL GLAZE 15K 5% 1/10W
R907 1-216-081-00 METAL GLAZE 22K 5% 1/10W

R908 1-216-089-00 METAL GLAZE 47K 5% 1/10W

SWITCH

S903 1-572-078-11 SWITCH, TACTILE (INDEX MARK)



Ref.No	Part No.	Description	Remark
S904	1-572-078-11	SWITCH, TACTILE (INDEX ERASE)	
S905	1-572-078-11	SWITCH, TACTILE (SP/LP)	
S906	1-572-078-11	SWITCH, TACTILE (CLEAR)	
S907	1-572-078-11	SWITCH, TACTILE (POSITION)	
S908	1-572-078-11	SWITCH, TACTILE (PRESET)	


S909 1-572-078-11 SWITCH, TACTILE (SEEK)
S910 1-572-078-11 SWITCH, TACTILE (INPUT SELECT)
S911 1-571-275-31 SWITCH, SLIDE (AUTO STEREO)

ACCESSORIES & PACKING MATERIALS

1-417-173-11 DISTRIBUTOR, ANTENNA
△ 1-528-174-31 BATTERY, LITHIUM (CR2032 TYPE)
2-366-919-00 BAG, PROTECTION
3-701-625-00 BAG, POLYETHYLENE
3-728-996-01 CASE, SOFT
*3-744-184-01 CUSHION (UPPER)
*3-744-185-01 CUSHION (LOWER)
3-751-853-21 MANUAL, INSTRUCTION (ENGLISH)
3-751-853-31 MANUAL, INSTRUCTION (FRENCH)(CND MODEL)

When indicating parts by reference number, please include the board name.

Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No	Part No.	Description	Remark



		MISCELLANEOUS	


△	1-466-333-11	INVERTER UNIT, DC-AC	
	1-466-334-11	SWITCH BLOCK, CONTROL	
	1-544-323-11	SPEAKER	
	1-569-346-11	CONNECTOR, FPC (TRANSLATION) 10P	
	1-569-347-11	CONNECTOR, FPC (TRANSLATION) 13P	
	1-572-253-11	SWITCH, SLIDE (ENCODER)	
	1-575-856-11	CABLE, FLAT (1.0MM PITCH) 7 CORE	
	1-575-857-11	CABLE, FLAT (1.0MM PITCH) 12 CORE	
	1-575-858-11	CABLE, FLAT (1.0MM PITCH) 16 CORE (LCD FLEXIBLE)	
	1-575-859-11	CABLE, FLAT (1.0MM PITCH) 15 CORE	
	1-628-060-12	FP-89 FLEXIBLE BOARD	
	1-628-061-12	FP-90 FLEXIBLE BOARD	
	1-634-994-11	FP-271 FLEXIBLE BOARD	
	1-634-995-11	FP-272 FLEXIBLE BOARD	
	1-634-996-11	FP-273 FLEXIBLE BOARD	
	1-634-997-11	FP-274 FLEXIBLE BOARD	
	1-808-505-12	SENSOR (DEW)	
AN901	1-501-456-11	ANTENNA, TELESCOPIC	
BL901	1-518-668-11	TUBE UNIT, FLUORECENT	
D301	8-719-820-44	PHOTO COUPLER TLP907-0 (SONY2)	
D302	8-719-940-81	DIODE GL452S	
D303	8-719-820-44	PHOTO COUPLER TLP907-0 (SONY2)	
LCD901	1-809-002-11	DISPLAY MODULE, LIQUID CRYSTAL	
M902	8-835-331-01	MOTOR, DC U-22A (CAPSTAN)	
M903	A-7040-208-A	MOTOR ASSY, THREADING (LOADING)	
Q301	8-729-906-48	EE-TP109	
Q302	8-729-906-48	EE-TP109	
S302	1-572-298-11	SWITCH, PUSH (ME/MP, MP HG, REC PROOF)	
S901	1-571-099-11	SWITCH (CASSETTE DOWN)	

HARDWARE

Ref.No	Part No.	Description	Remark
		SCREW	
	7-627-553-37	SCREW (M2X3), SPECIAL HEAD	
	7-627-555-88	SCREW (M1.4X1.8)	
		PRECISION SCREW	
	7-627-553-18	SCREW,PRECISION +P 2X2	
	7-627-555-88	SCREW, PRECISION +P 1.4X1.8	
	7-627-452-48	SCREW,PRECISION +RK 2X2.5	
	7-627-553-37	PRECISION SCREW +P 2X3 TYPE 3	
	7-627-553-68	SCREW, PRECISION +P 2X6 TYPE3	
		NUT	
	7-684-023-04	N 3, TYPE 2	
		WASHER	
	7-623-208-22	SW 3,TYPE 2	
	7-688-003-01	W 3, SMALL	

When indicating parts by reference number, please include the board name.

Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 7 MECHANICAL ADJUSTMENTS

For Mechanical Adjustments

Refer to mechanical adjustment (8 mm Video MECHANICAL ADJUSTMENT MANUAL III) manual for the adjustments and checks of mechanism section and the mechanical parts replacement. (9-972-732-11)

For setting of the track shift mode, however, refer to the following.

7-1. SETTING THE TRACK SHIFT MODE

[Setting Method]

- 1) Setting the test mode* 0011 (Jig switching position 3)

CN802

1	TEST B
2	GND
3	TEST A
4	TEST C
5	TEST D

Jig switching position 3

*Refer to [8-1-7. Test mode].

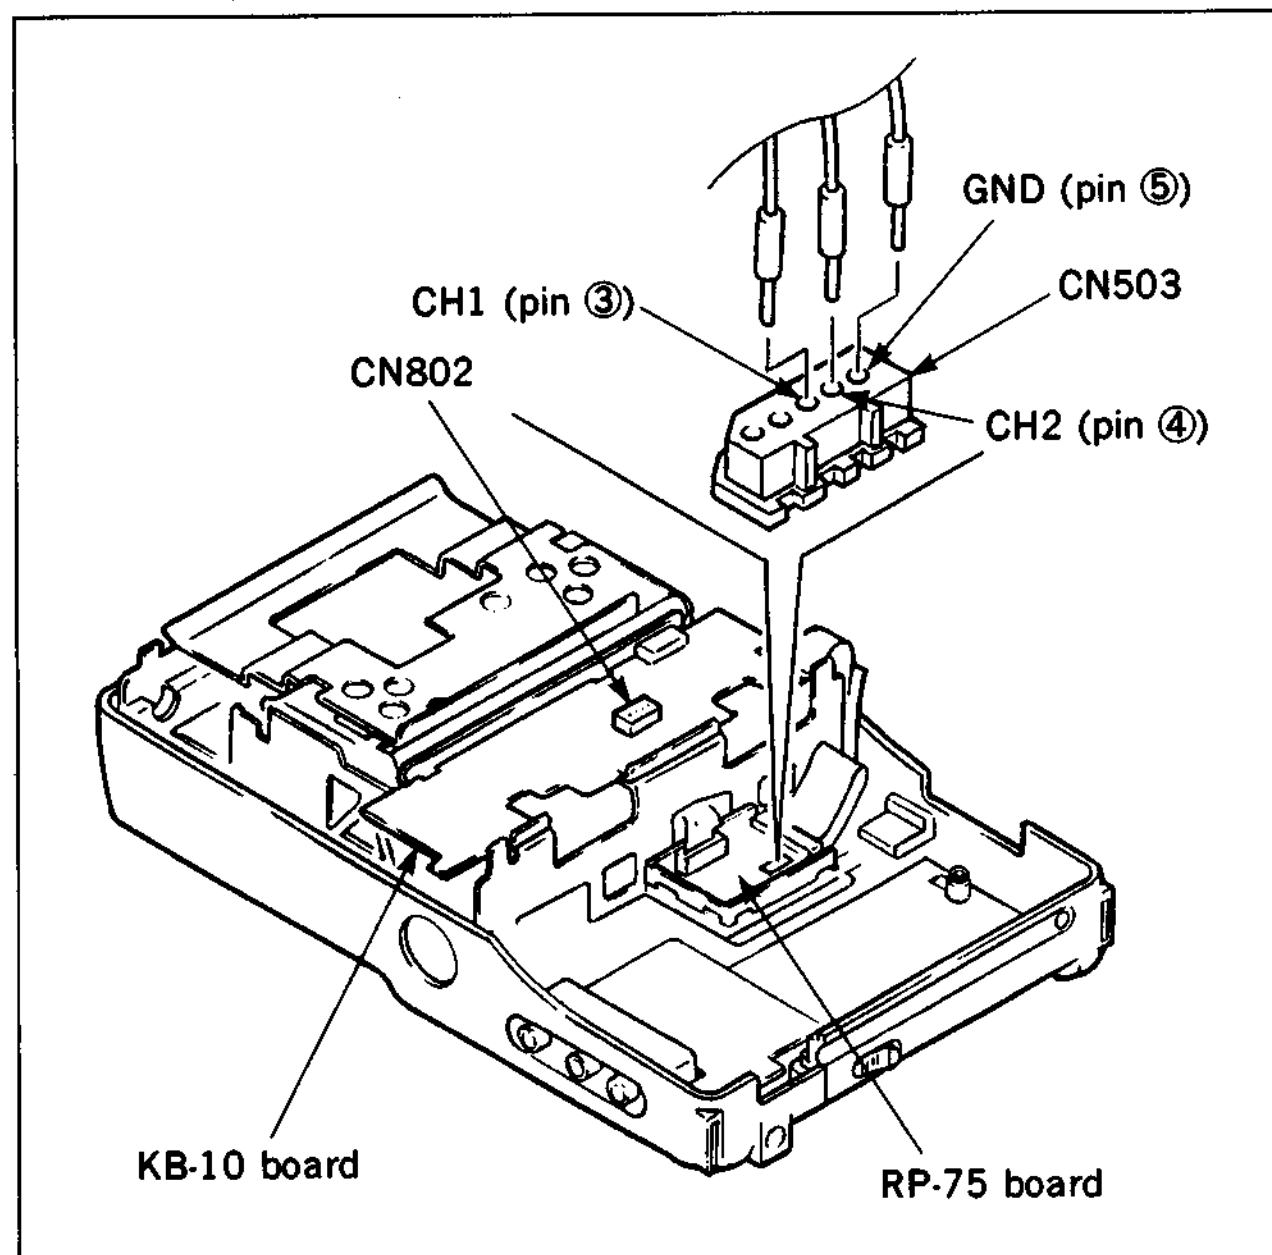


Fig. 7-1.

7-2. PREPARATION FOR ADJUSTMENT

- 1) Clean the tape running surfaces (tape guide, drum, capstan shaft, pinch roller.)
- 2) Connect to the oscilloscope.
CH1 : RP-75 board CN503 pin ③ (PB RF)
CH2 : RP-75 board CN503 pin ④ (SWP)
- 3) Play back the tracking alignment tape (WR5-1NP) (8-967-995-02).
- 4) Check that the RF waveform of the oscilloscope is flat at both inlet and outlet sides. When not flat, make adjustment as follows. (Refer to mechanical adjustment manual.)

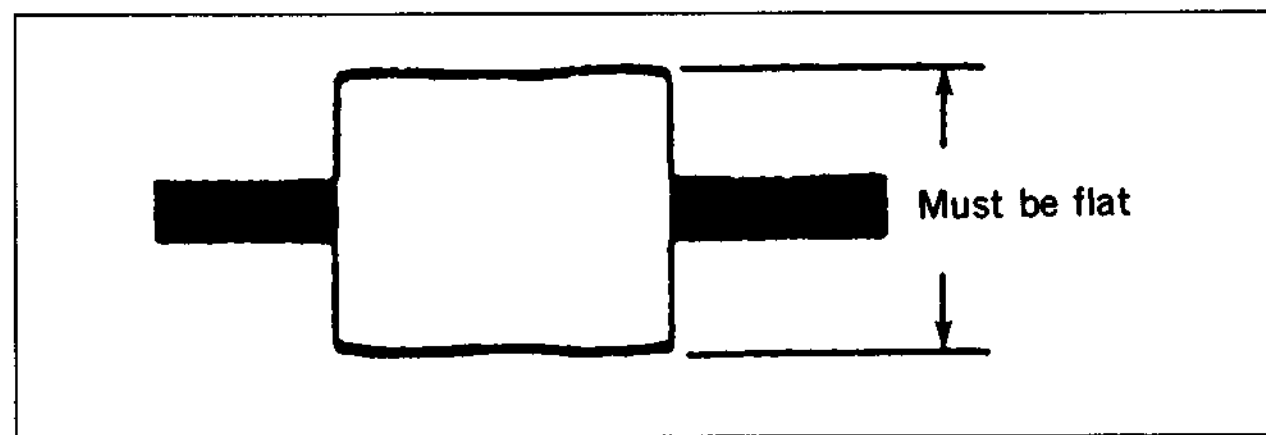


Fig. 7-2.

**SECTION 8
ELECTRICAL ADJUSTMENTS**

See the adjusting parts location diagram from on page 184 for the adjustment.

8-1. PREPARATION FOR ADJUSTMENT

The following measurement instruments are used for the electric adjustment.

8-1-1. Using Instruments

- 1) Monitor TV
- 2) Oscilloscope having two phenomena, band of 10MHz or more, and the delay mode.
- 3) Frequency counter
- 4) Pattern generator (having the video output terminal)
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion rate meter
- 9) Audio attenuator
- 10) Stabilized power source
- 11) Alignment tape
 - For tracking adjustment (WR5-1NP) Part code: 8-967-995-02
 - For checking of SP mode operation (WR5-5NSP) Part code: 8-967-995-42 (WR5-4NSP) Part code: 8-967-995-41
 - For checking of LP mode operation (WR5-4NL) Part code: 8-967-995-51
 - For Hi 8 SP mode operation (WR5-8NSE) Part code: 8-967-995-43
 - For checking of AFM stereo operation (WR5-9NS) Part code: 8-967-995-23
 - For video frequency characteristic adjustment (WR5-7NE) Part code: 8-967-995-13

- 12) Extension harness
 - Between AU-53 board CN101 and SV-38 board CN005 J-6082-111-A
 - Between AU-53 board CN102 and SV-38 board CN006 J-6082-112-A
 - Between RG-8 board CN001 and SV-38 board CN004 J-6082-113-A
- 13) Multiplex transmission signal generator
- 14) COMMON voltage adjustment jig (J-6082-024-A)

8-1-2. Connection of Instruments

If there is no special direction, connect the measuring instru-

ments as shown in the following figure and perform the adjustment.

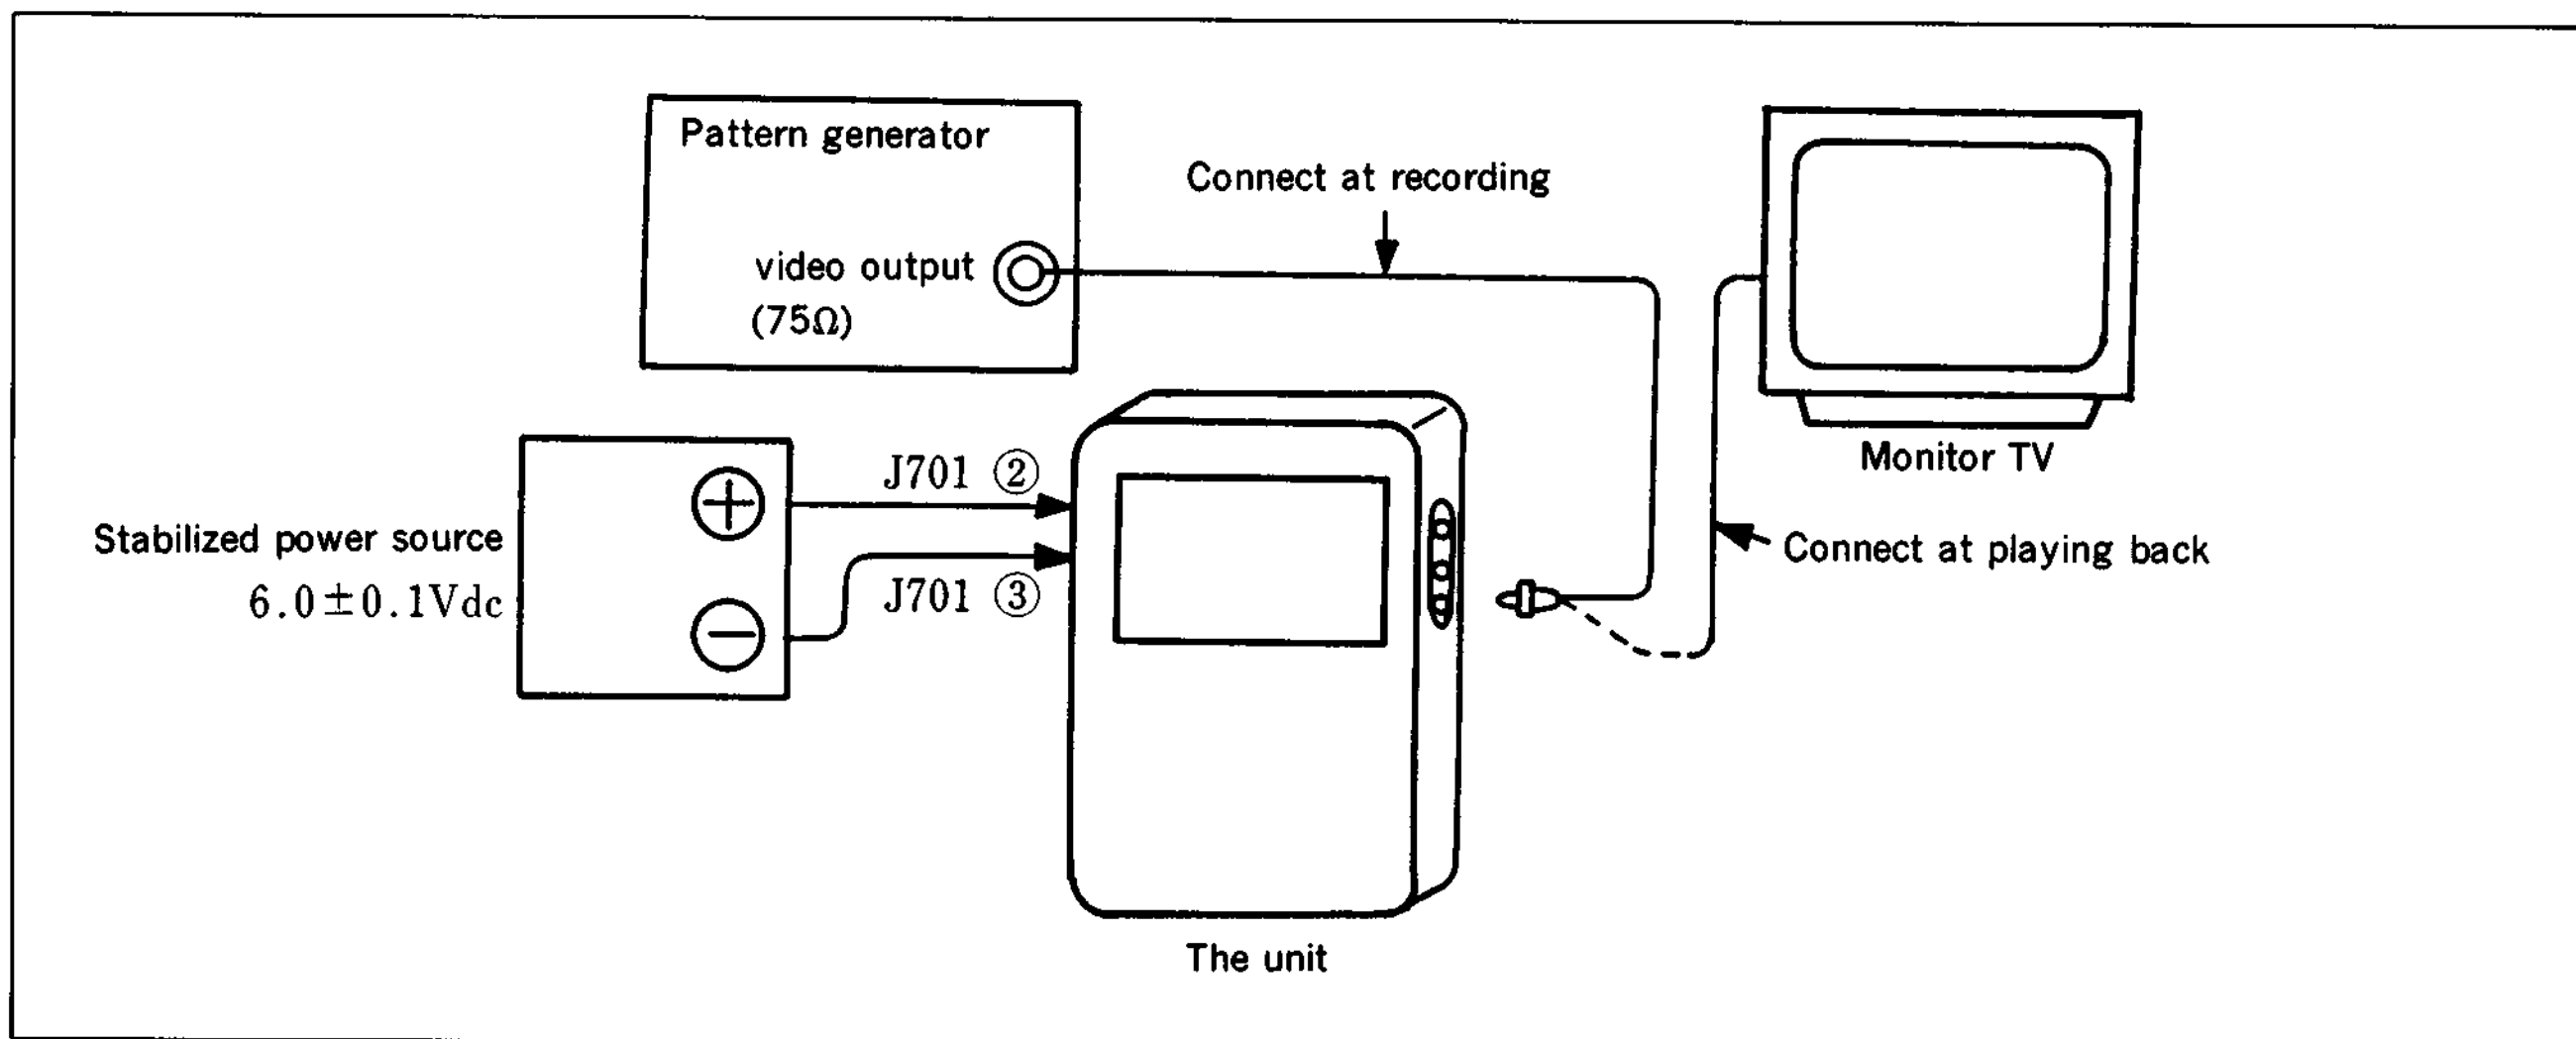


Fig. 8-1.

8-1-3. VIDEO/AUDIO Terminal of the Unit

The VIDEO/AUDIO (L/R) terminal of the unit has the function of both input and output. The operation as the input terminal or as the output terminal is automatically selected according to the operating condition of the unit.

When connecting with the other instruments, perform the connection according to the input-output of the terminal.

The operation condition of the unit and the automatic input-output election of the terminal.

Input mode selected with the INPUT SELECT button	The case that the unit is stopped or the recording mode is selected.	The case that the unit is set to the playback mode.
TUNER (television screen)	Output	Output
LINE*	Input	Output
CAMERA	Output	Output

* When the LINE is selected with the INPUT SELECT button, the display of INPUT or OUTPUT is shown according to the operation condition.

8-1-4. Set-up at the Adjustment

As the video signal obtained from the pattern generator is used as the adjustment signal for adjusting, it is required that the video output signal satisfies the specified value. Connect the pattern generator and the oscilloscope with the VIDEO input-output terminal. Check that the amplitude of the synchronous signal of the video signal is approximately 0.3V, the amplitude of the picture part is approximately 0.7V, the amplitude of the burst signal is approximately 0.3V and is flat, and the level proportion of the burst signal and the red signal is 0.30 : 0.66.

The video signal (color bar) used for the adjustment is shown in the Fig. 8-2.

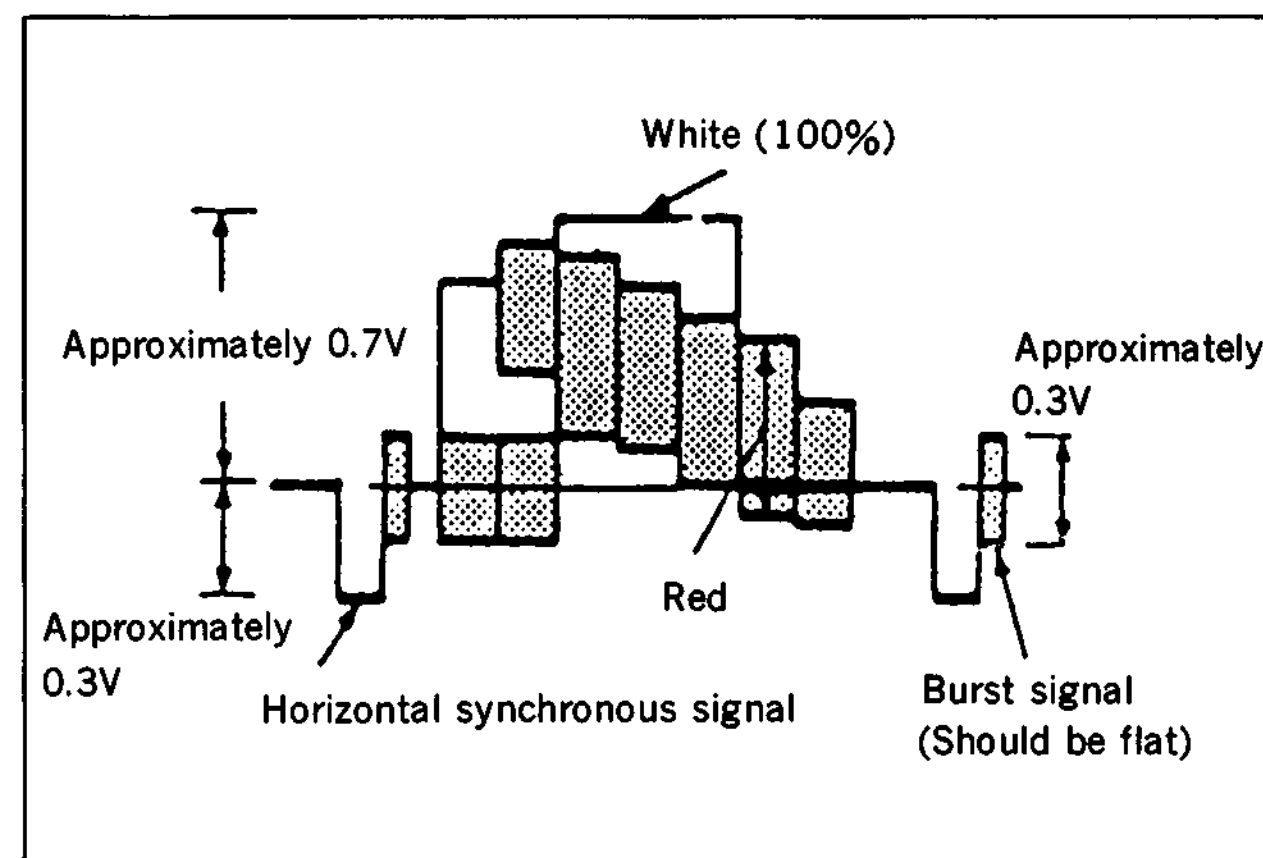


Fig. 8-2. Color bar signal of the pattern generator

8-1-5. Alignment Tape

The following tapes are prepared for the alignment tape.

Use the tape designated in the signal column of each adjustment.

Name	Recording mode	Type of tape	Speed of tape	Recording contents		Usage
				Video area	PCM area	
Tracking WR5-1NP	L	MP	SP	CH2: 1MHz Signal for tape pass adjustment Marker for switching position adjustment(CH1: 9MHz)		Tape pass adjustment Switching position adjustment
Video frequency characteristic WR5-7NE	E	ME	SP	RF sweep 0~15MHz Marker 2, 4.5, 7, 8.5, 10MHz		Frequency characteristic adjustment
Checking operation WR5-4NSP or WR5-5NSP	L	MP	SP	<ul style="list-style-type: none"> • Video signal Color bar 4 minutes Monoscope 4 minutes • Audio signal (AFM) 400Hz 60% modulation 	<ul style="list-style-type: none"> • Audio signal (PCM) monoscope part 20Hz, 20sec. Re- 400Hz, 20sec. } peat 14kHz, 20sec. } four 	Checking operation
					WR5-8NSE	
WR5-4NL	L	MP	LP	<ul style="list-style-type: none"> • Video signal Color bar 4 minutes monoscope 4 minutes • Audio signal (AFM) 400Hz 60% modulation 		
AFM stereo checking operation WR5-9NS	L	MP	SP	<ul style="list-style-type: none"> • Video signal Color bar 4 minutes monoscope 4 minutes • Audio signal (AFM) <ul style="list-style-type: none"> • Color bar part Lch : 400Hz L+R (1.5MHz±60kHz) Rch : 1kHz L-R (1.7MHz±30kHz) • monoscope part DEV + Bilingual (including a RF ID signal) 	<ul style="list-style-type: none"> • Audio signal (PCM) monoscope part 20Hz, 20sec. Re- 400Hz, 20sec. } peat 14kHz, 20sec. } four 	AFM stereo PB matrix adjustment

Note : Recording mode

L.....Normal mode

E.....hi8(Hi band) mode

Types of tape

MP.....Application type metal tape

ME.....Steam metal tape

Table 8-1.

The 75% color bar signal recorded in the alignment tape is shown in the Fig.8-3.

Note : Measure with the VIDEO INPUT-OUTPUT terminal (75Ω terminal) playback mode.

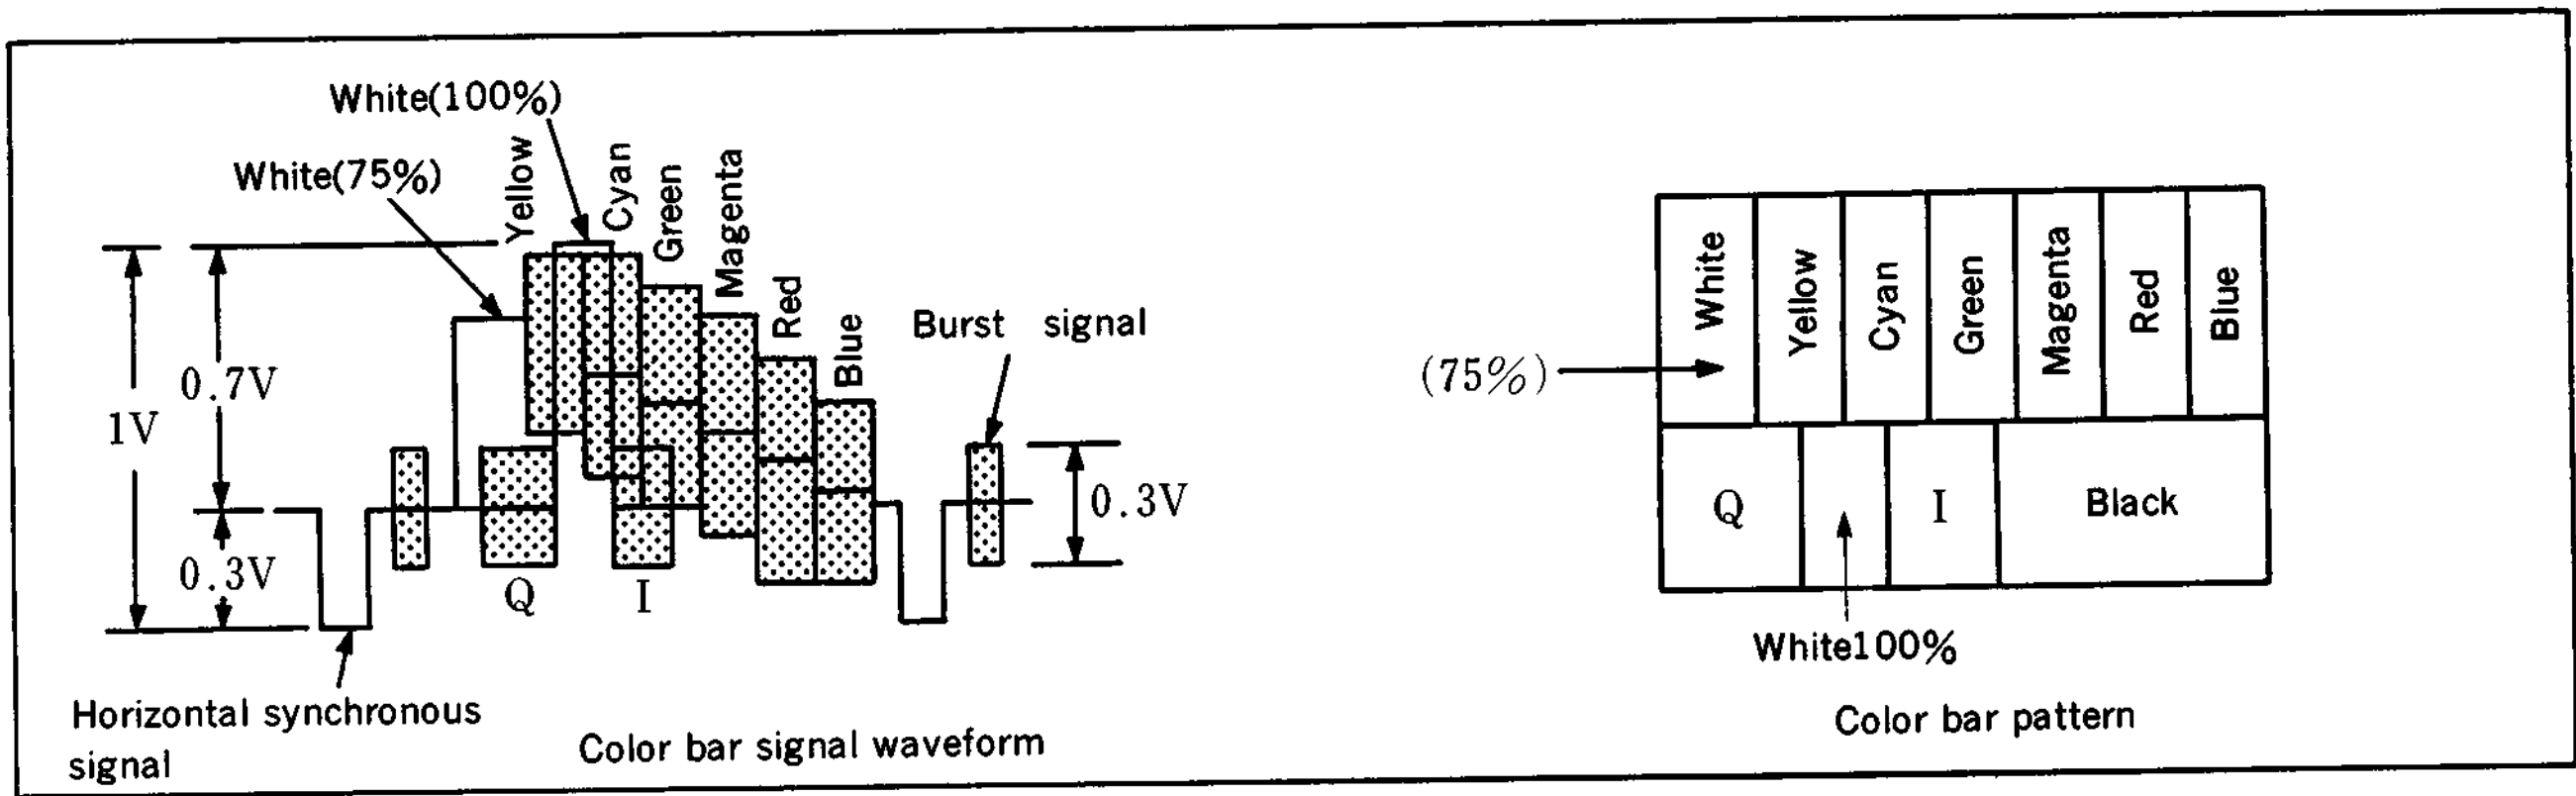


Fig.8-3. Color bar signal of the alignment tape

8-1-6. Input/Output Level and Impedance

VIDEO/AUDIO (L/R) Input-output terminal (pin jack)
 VIDEO input Input signal : 1Vp-p, 75Ω unbalance, Synchronous negative
 VIDEO output Output signal : 1Vp-p, 75Ω unbalance, Synchronous negative
 AUDIO input Input level : -7.5dBs(0dBs=0.775Vrms)
 Input impedance : 47kΩ or more

AUDIO output Specified output : -7.5dBs
 Output impedance : 10kΩ or less

① Normal mode

Normal set condition

② Emergency off (Release of emergency stop)

③ TT TEST

MODE for extending the SIRCS code (For producing line)

④ Track shift

Run on the ATF track shift condition at the playback mode.

Timer microcomputer is in the clock adjustment mode.

⑤ SW POSI

Adjustment mode of switch position.

SWPOSI is stored in EEPROM as 16bit DATA. This data is adjusted dividing high 8bit and low 8bit. Use CH+/- KEY.

TEST MODE0101 : Varies at 16 μ sec per 1STEP.

TEST MODE0100 : Varies at 1 μ sec per 1STEP. When low 8 bit is incremented from FF. HEX, high 8 bit goes UP. And when it is decremented from 00.HEX, high 8 bit goes DOWN.

Preset function of the SW POSI is added. The preset function sets to high 8 bit to 07. HEX, when the DATA SCREEN KEY of SC part is pressed in the SW POSI adjustment mode. The low 8 bit is not varied.

⑥ BATTTERY DOWN ADJUSTMENT

Adjusted with TEST MODE 0111. When this mode is set, the following display is shown on LCD.

PRE	-1.76
DOWN	-1.74

Supplying voltage for adjusting is performed with applying 5.50V + 0.02V to the battery terminal in the TUNER REC SP MODE. When pressing the INDEX KEY on the KB-10 board, the color of display on the LCD turns to blue for few seconds from white, and then returns to white. The voltage of the battery PRE, DOWN is stored in EEPROM as the 8bit DATA by this operation.

⑦ VIDEO DATA ADJUSTMENT MODE


Short the TEST D (Solder the split land at the lower part of the KB-10 board Q803)

The following display is shown on the LCD.

VIDEO DATA

CFL1 1 (RESET)
 CFL2 1 (DISPLAY)
 NCL1 1 (SLEEP)
 NCL2 1 (NEXT)
 NCLP1 1 (UP)
 NCLP2 1 (CLOCK)

KB-10 BOARD (COMPONENT SIDE)

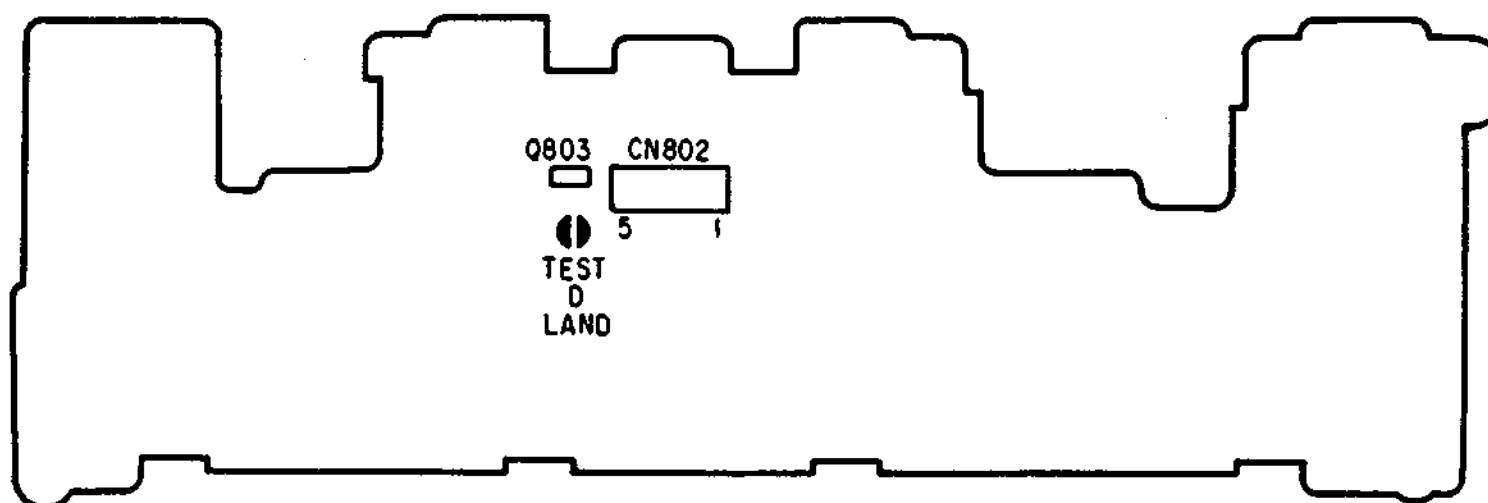

Six types of DATA are varied with the KEY on the SC part.

RESET → COUNTER RESET KEY

DISPLAY → DATA SCREEN KEY

SLEEP → SLEEP KEY

NEXT → NEXT KEY

UP → + KEY

CLOCK → CLOCK SET KEY

Pressing each KEY allows to rewrite DATA. ("0" is rewritten to "L", "1" is rewritten to "H".)

Eight modes are adjusted by the types of TAPE (ME, MP), recording (HI BAND, LO BAND) MODE, and TAPE SPEED (SP, LP).when the CH+KEY is pressed, the color of the display on the LCD turns to blue for few seconds from white and returns to white. The function to store the screen DATA in EEPROM is added by this operation. (See to the Table 8-2. for the data writing to EEPROM.)

Table 8-2. EE P ROM Write Data

TEST MODE						CFL1	CFL2	NCL1	NCL2	NCLP1	NCLP2
D	C	B	A	Switch position of the test mode set jig							
1	0	0	0	8	SP•MP	H	L	H	L	H	L
1	0	0	1	9	LP•MP	L	H	L	H	L	H
1	0	1	0	A	SP•ME	H	L	H	L	H	L
1	0	1	1	B	LP•ME	L	H	L	H	L	H
1	1	0	0	C	Hi-8 SP•MP	H	L	L	H	H	L
1	1	0	1	D	Hi-8 LP•MP	L	H	L	H	L	H
1	1	1	0	E	Hi-8 SP•ME	H	L	H	L	H	L
1	1	1	1	F	Hi-8 LP•ME	L	H	L	H	L	H

Note) When EEPROM is replaced, the following adjustment or write should be performed.

1. SW POSI adjustment
2. BATTERY DOWN adjustment
3. VIDEO DATA write
4. Channel preset

8-2. POWER SOURCE PART ADJUSTMENT

8-2-1. UNREG Power Source Voltage Check (SV-38 board)

Mode	Stop (POWER ON)
Measuring instrument	Digital voltmeter
BL UNREG check	
Measurement point	CN007 Pin ⑫
Specified value	$5.9 \pm 0.2Vdc$
DD UNREG check	
Measurement point	CN007 Pin ⑪
Specified value	$5.9 \pm 0.2Vdc$
SS UNREG check	
Measurement point	CN007 Pin ⑥
Specified value	$5.9 \pm 0.2Vdc$
LD UNREG check	
Measurement point	CN07 Pin ③
Specified value	$5.9 \pm 0.2Vdc$
CAP UNREG check	
Measurement point	CN007 Pin ①
Specified value	$5.9 \pm 0.2Vdc$

[Checking method]

- 1) Check that the voltage of the stabilized power source is $6.0 \pm 0.1Vdc$.
- 2) Each specified value should be satisfied.

8-2-2. Switch 5V Adjustment (SV-38 board)

Mode	Tuner receiver, record (SP mode)
Signal	Optional TV broadcast
Measurement point	CN009 Pin ⑭
Measuring instrument	Digital voltmeter
Adjustment element	RV401
Specified value	$4.95 \pm 0.05Vdc$

[Adjustment Method]

- 1) Adjust with RV401 to $4.95 \pm 0.05Vdc$.

8-2-3. DD Converter Frequency Adjustment (SV-38 board)

Mode	Stop (POWER ON)
Measurement point	IC401 Pin ①
Measuring instrument	Frequency counter
Adjustment element	RV402
Specified value	$479 \pm 5kHz$

[Adjustment Method]

- 1) Adjust the oscillation frequency to $4.95 \pm 0.05Vdc$ with RV402.

8-2-4. -8V Adjustment (TU-123 board)

Mode	Stop (POWER ON)
Measurement point	CN001 Pin ⑳
Measuring instrument	Digital voltmeter
Adjustment element	RV501
Specified value	$-8.0 \pm 0.1Vdc$

[Adjustment Method]

- 1) Adjust with RV501 to $-8.0 \pm 0.1Vdc$.

8-2-5. LCD Power Source Voltage Check (RG-8 board)

Mode	Stop
Measuring instrument	Digital voltmeter
+13V check	
Measurement point	CN001 Pin ㉓
Specified value	$13.0 \pm 0.7Vdc$
-20V check	
Measurement point	CN001 Pin ㉑
Specified value	$-20.0 \pm 1.5Vdc$

[Checking Method]

- 1) Each specified value should be satisfied.

8-2-6. CAM UNREG Check (CN-6 board)

Mode	Camera standby
Measurement point	CN601 Pin ①
Measuring instrument	Digital voltmeter
Specified value	5.75±0.10Vdc

[Connection]

- 1) Connect the CAMERA connector with the camera.
If there is no camera, connect the resistance of 12Ω 5W between CN601 Pin ① and Pin ⑤.

[Checking Method]

- 1) Turn on the power, and input CAMERA with the INPUT SELECT button.
- 2) Check that the voltage of the stabilized power source is 6.0±0.1Vdc.
- 3) Check that the voltage of the CN601 Pin ① is 5.75±0.10Vdc.

8-3. SYSTEM CONTROL SYSTEM ADJUSTMENT

8-3-1. Clock Precision Adjustment (SV-38 board)

Mode	Stop (POWER ON)
Test mode *	0011 (Jig switch position 3)
Measurement point	CN003 Pin ②
Measuring instrument	Frequency counter
Adjustment element	CV101
Specified value	16384.0±0.2Hz

* Refer to [8-1-7. Test mode].

[Adjustment Method]

- 1) Set the test mode * 0011 (jig switch position 3).
- 2) Adjust with CV101 to 16384.0±0.2Hz.

8-3-2. Battery Down Adjustment

Refer to [8-1-7. Test Mode ⑥ Battery Down Adjustment].

8-4. SERVO SYSTEM ADJUSTMENT

8-4-1. CUE/REV Adjustment (SV-38 board)

Mode	CUE and REV
Signal	Alignment tape : for checking the SP mode operation (WR5-5NSP) : for checking the LP mode operation (WR5-4NL)
Measurement point	IC301 Pin ⑩ and Pin ⑪ and Q306 ③
Measuring instrument	Oscilloscope
Adjustment element	RV301
Specified value	WR5-5NSP at CUE/REV Q306 ③ DC voltage level is "H" WR5-4NL at CUE/REV Q306 ③ DC voltage level is "L"

[Adjustment Method]

- 1) Adjust the IC302 Pin ⑩ to 3.0±0.1Vdc with RV301.
- 2) Play back the WR5-5NSP and set the CUE and REV mode, check that the DC voltage level of Q306 ③ is "H" (4Vdc or more). And play back the WR5-4NL and set the CUE and REV mode, check that the DC voltage level of Q306 ③ is "L" (1Vdc or less).
- 3) When the item 2) is not satisfied, play back the WR5-5NSP and set the CUE and REV mode, measure the DC voltage of IC302 Pin ⑩. Set this value as V_{SP} . Play back the WR5-4NL and set the CUE and REV mode, measure the DC voltage of IC301 Pin ⑩. Set this value as V_{LP} .

$$V = \frac{V_{SP} + V_{LP}}{2}$$
Obtain the value of V , and adjust with RV301 so that the DC voltage of IC302 Pin ⑩ is the value of V .
- 4) Return to the item 2) and reconfirm.

8-4-2. Switching Position Adjustment (RP-75 board)

Mode	Playback
Test mode *	0101 (Jig switching position 5) and 0100 (Jig switching position 4)
Signal	Alignment tape: for tracking adjustment (WR5-1NP)
Measurement point	CH1: CN503 Pin ④ (RF SW P) CH2: CN503 Pin ③ (RF OUT)
Measuring instrument	Oscilloscope
Adjustment KEY	KB-10 board S802 (CH-) and S803 (CH+)
Specified value	$t=0\pm 5\mu\text{sec}$

[Adjustment Method]

- 1) Set the test mode * 0101 (Jig switching position 5).
- 2) Press the DATA SCREEN button on the upper part of the LCD.
- 3) Press the S802(CH-) and S803(CH+) switches on the KB-10 board so that "t" is nearly 0. (rough adjustment)
- 4) Set the test mode * 0100 (Jig switching position 4).
- 5) Press S802(CH-) and S803 (CH+) switches on the KB-10 board so that $t=0\pm 5\mu\text{sec}$. (fine adjustment)
- 6) Disconnect the test mode jig.

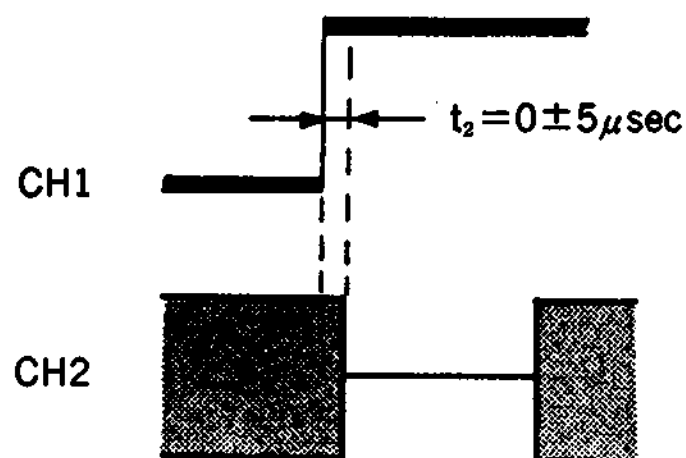


Fig. 8-6.

8-5. VIDEO SYSTEM ADJUSTMENT

Adjust the video system in the following procedures in principle. The color bar signal supplied from the pattern generator is used as the video input signal for the video system adjustment of the recording mode. Check that the synchronous signal and the color burst signal are satisfied with the specified value designated to the adjusting setup as shown in the figure 8-2.

[Adjustment Procedures]

- 1) Playback frequency characteristic adjustment
- 2) fsc check
- 3) SYNC AGC adjustment
- 4) IR adjustment
- 5) Y/C separation adjustment
- 6) Emphasis Y level adjustment
- 7) De-emphasis Y level adjustment
- 8) Playback Y level adjustment
- 9) Y FM carrier adjustment
- 10) Y FM deviation adjustment
- 11) Recording Y level adjustment
- 12) Chroma emphasis adjustment
- 13) Recording chroma level adjustment

8-5-1. Playback Frequency Characteristic Adjustment (RP-75 board)

Mode	Playback
Signal	Alignment tape : for frequency characteristic adjustment(WR5-7NE)
Measurement point	CH1 : CN503 Pin ④(RF SWP) CH2 : CN503 Pin ③(PB RF)
Measuring instrument	Oscilloscope
Adjustment element	PB1-CH : RV501 PB2-CH : RV502
Specified value	2.0MHz level : 8.5MHz level = 50 : 23±2

[Adjustment Method]

- 1) Adjust with each RV so that the PB1-CH, PB2-CH and PB RF OUT satisfy the specified value.

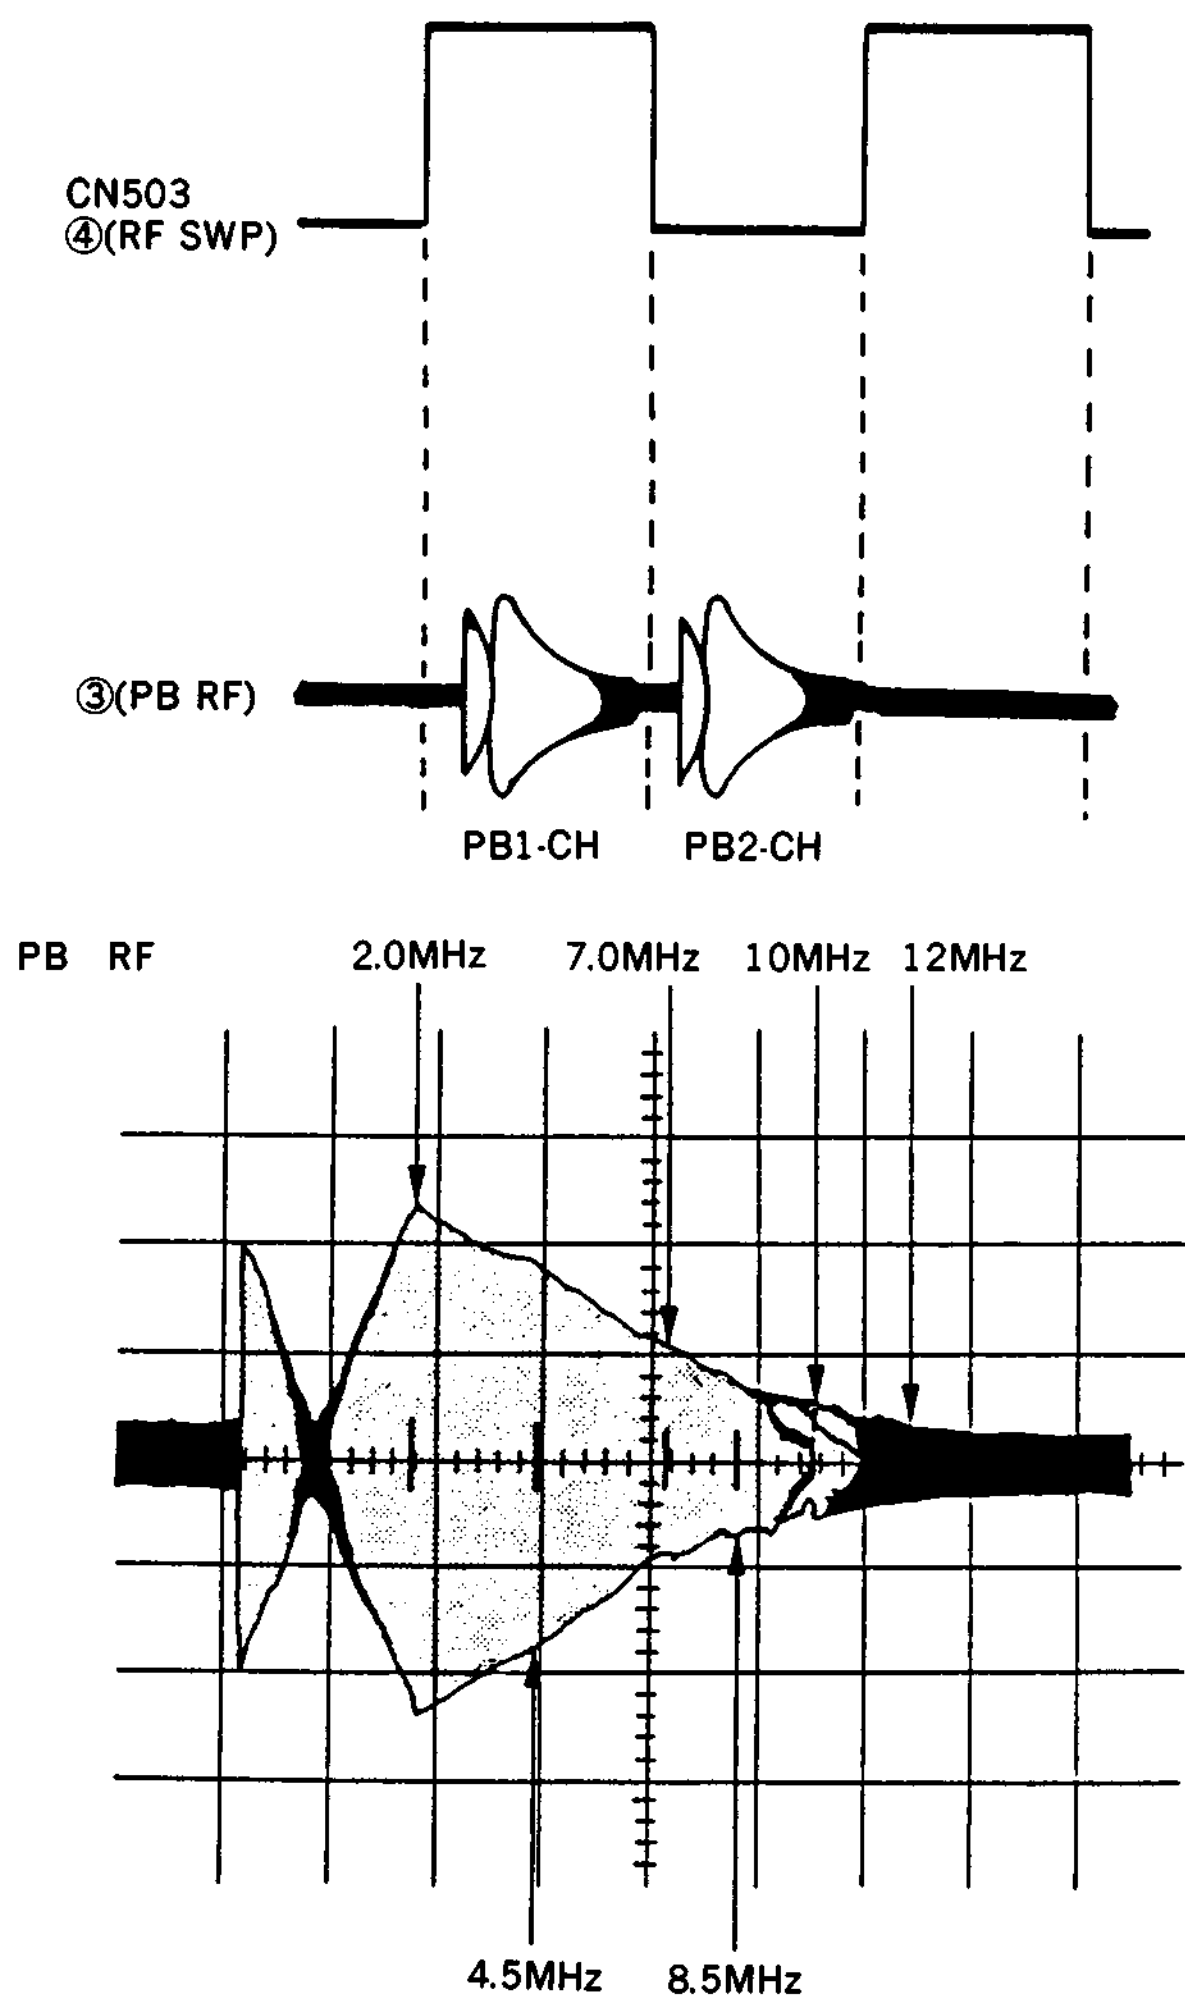


Fig. 8-7

8-5-2. fsc Check (SV-38 board)

Mode	Playback
Signal	Alignment tape : for operation check(WR5-5NSP) Color bar part
Measurement point	IC701 Pin ⑫
Measuring instrument	Oscilloscope Frequency counter
Specified value	Oscillation frequency : $3579545 \pm 150\text{Hz}$ Output level : $450 \pm 50\text{mVp-p}$

[Checking Method]

- 1) Check that the oscillation frequency of the IC701 Pin ⑫ is $3579545 \pm 150\text{Hz}$ and the output level is $450 \pm 50\text{mVp-p}$.

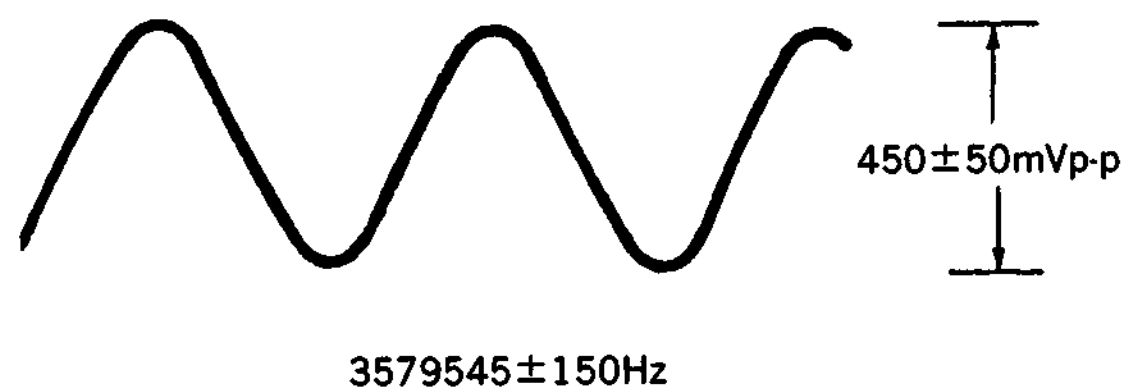


Fig.8-8.

8-5-3. SYNC AGC Adjustment (SV-38 board)

Mode	Recording
Signal	Color bar
Measurement point	IC601 Pin ⑳
Measuring instrument	Oscilloscope
Adjustment element	RV608
Specified value	$0.50 \pm 0.02\text{Vp-p}$

[Adjustment Method]

- 1) Adjust with RV608 to $0.50 \pm 0.02\text{Vp-p}$.

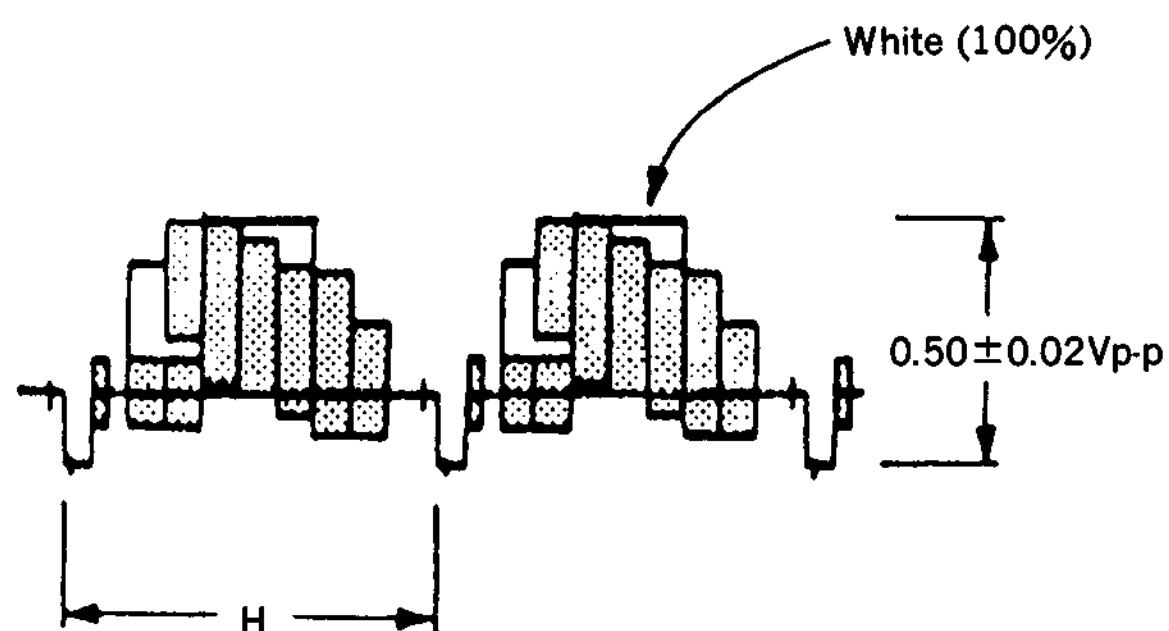


Fig. 8-9.

8-5-4. IR Adjustment (SV-38 board)

Mode	Recording
Signal	Color bar
Measurement point	IC601 Pin ⑦
Measuring instrument	Oscilloscope
Adjustment element	RV604
Specified value	Minimize the red remaining chroma element (60mVp-p or less)

[Preparation]

- 1) Short with the jumper wire between the Pin ⑭ and Pin ⑮ of IC601.

[Adjustment Method]

- 1) Minimize the red remaining chroma element with RV604. (60mVp-p)
- 2) After the adjustment, disconnect the jumper wire.

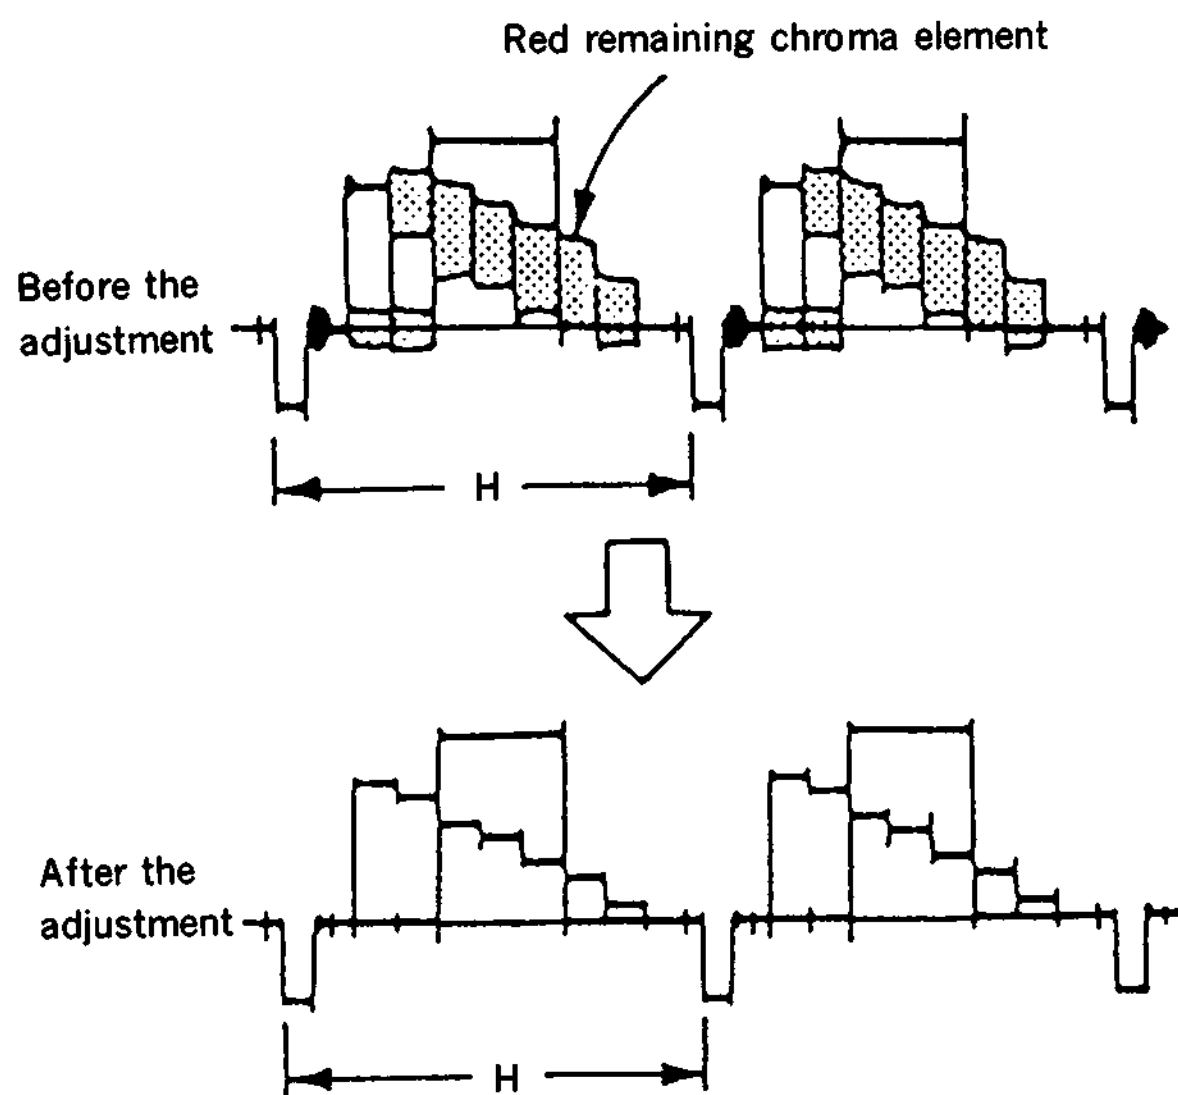


Fig.8-10.

8-5-5. Y/C Separation Adjustment (SV-38 board)

Mode	Recording
Signal	Color bar
Measurement point	IC601 Pin ⑩
Measuring instrument	Oscilloscope
Adjustment element	RV601, RV606 (alternate adjustment)
Specified value	Minimize the red remaining chroma element (30mVp-p or less)

[Adjustment Method]

- 1) Adjust RV601 and RV606 alternately, and minimize the red remaining chroma element.

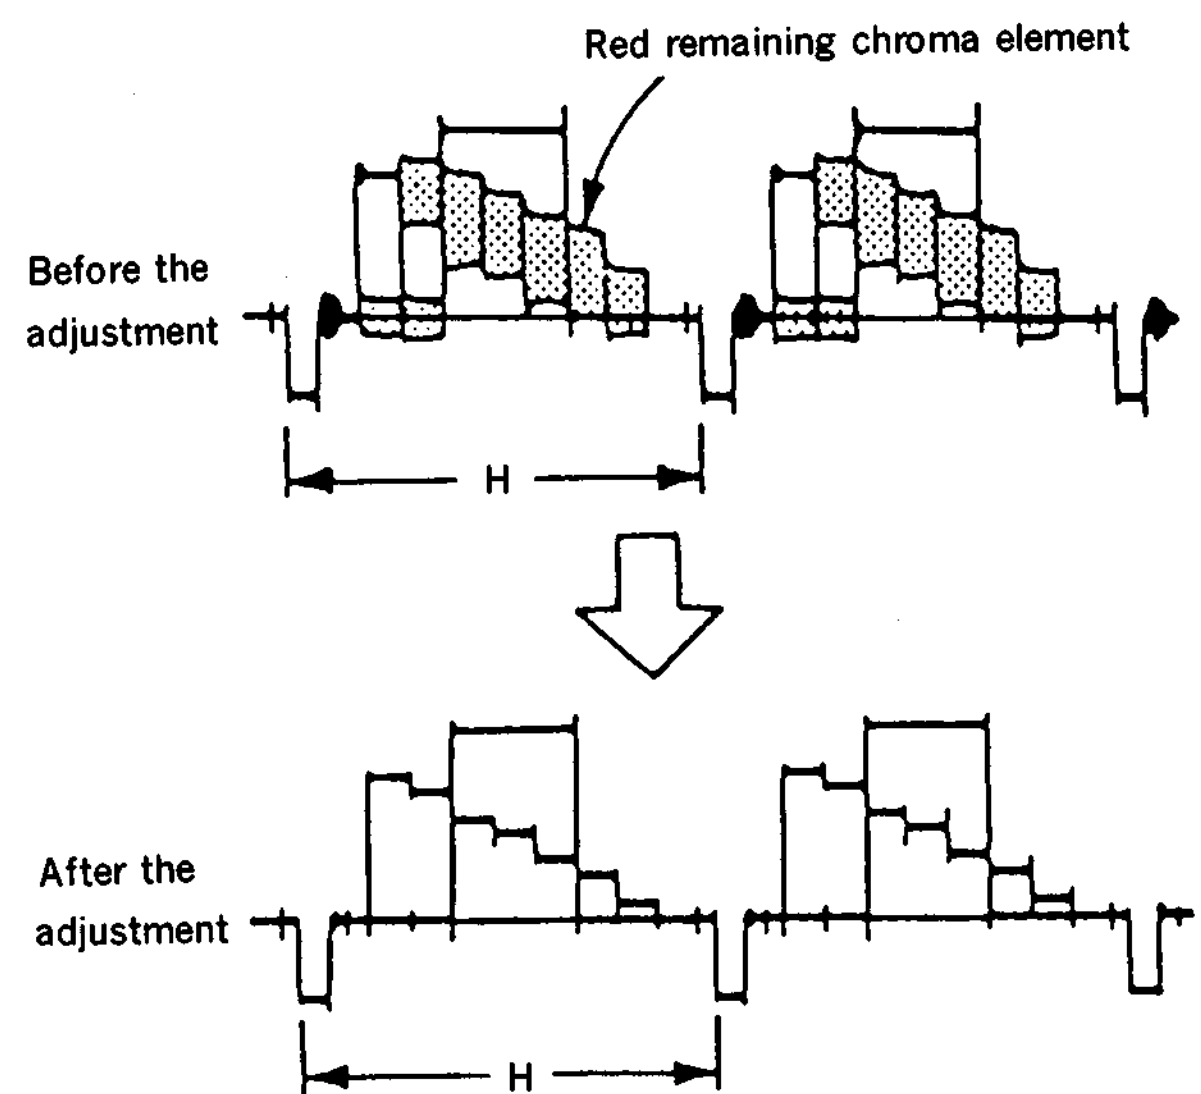


Fig.8-11.

8-5-6. Emphasis Y Level Adjustment (SV-38 board)

Mode	Recording
Signal	Color bar
Measurement point	IC601 Pin ③
Measuring instrument	Oscilloscope
Adjustment element	RV607
Specified value	$0.50 \pm 0.02V_{p-p}$

[Adjustment Method]

- 1) Adjust with RV607 to $0.50 \pm 0.02V_{p-p}$.

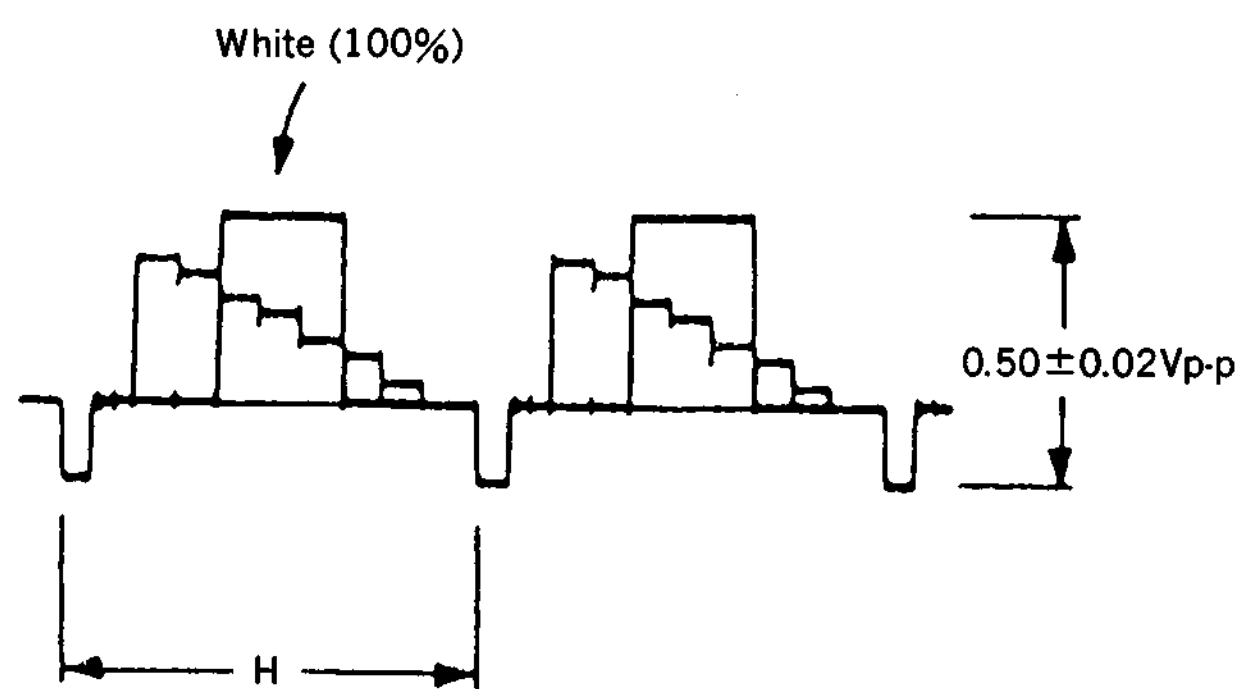


Fig.8-12.

8-5-7. De-emphasis Y Level Adjustment (SV-38 board)

Mode	Playback
Signal	Alignment tape: for operation check (WR5-5NSP)
Measurement point	IC601 Pin ②
Measuring instrument	Oscilloscope
Adjustment element	RV605
Specified value	$0.50 \pm 0.02V_{p-p}$

[Adjustment Method]

- 1) Adjust with RV605 to $0.50 \pm 0.02V_{p-p}$.

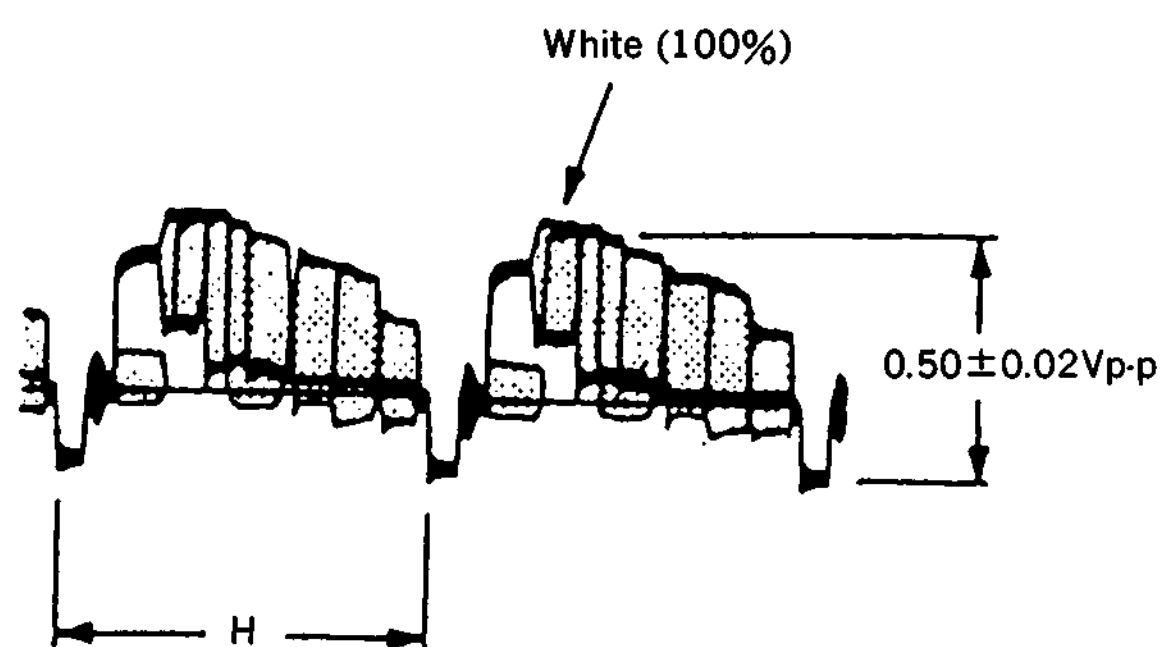


Fig.8-13.

8-5-8. Playback Y Level Adjustment (SV-38 board)

Mode	Playback
Signal	Alignment tape: for operation check (WR5-5NSP) and (WR5-8NSE) color bar part
Measurement point	CN004 Pin ④
Measuring instrument	Oscilloscope
Adjustment element	RV609
Specified value	$1.00 \pm 0.05V_{p-p}$

[Adjustment Method]

- 1) Play back WR5-5NSP and adjust with RV609 to $1.00 \pm 0.05V_{p-p}$.

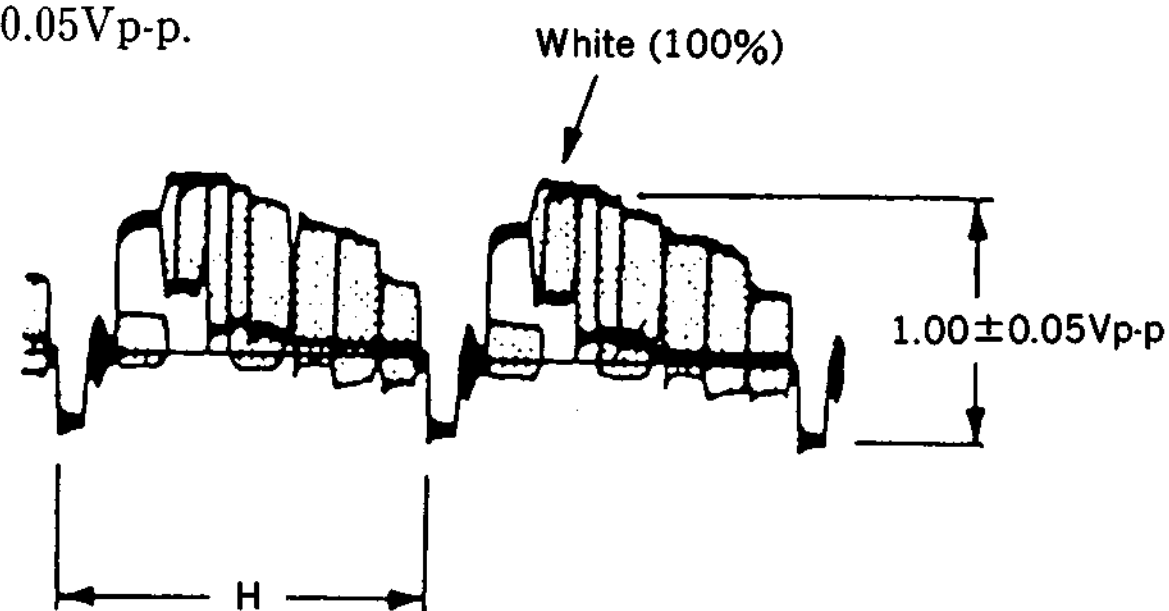


Fig.8-14.

- 2) Play back WR5-8NSE and check that it is $1.00 \pm 0.1V_{p-p}$.

8-5-9. Y FM Carrier Adjustment (SV-38 board)

Mode	Recording
Signal	No signal
Measurement point	CN801 Pin ⑩
Measuring instrument	Frequency counter
Adjustment element	RV602
Specified value	$4.37 \pm 0.02MHz$

[Adjustment Method]

- 1) Adjust with RV602 to $4.37 \pm 0.02MHz$.
- 2) After the adjustment, be sure to perform [Y FM deviation adjustment].

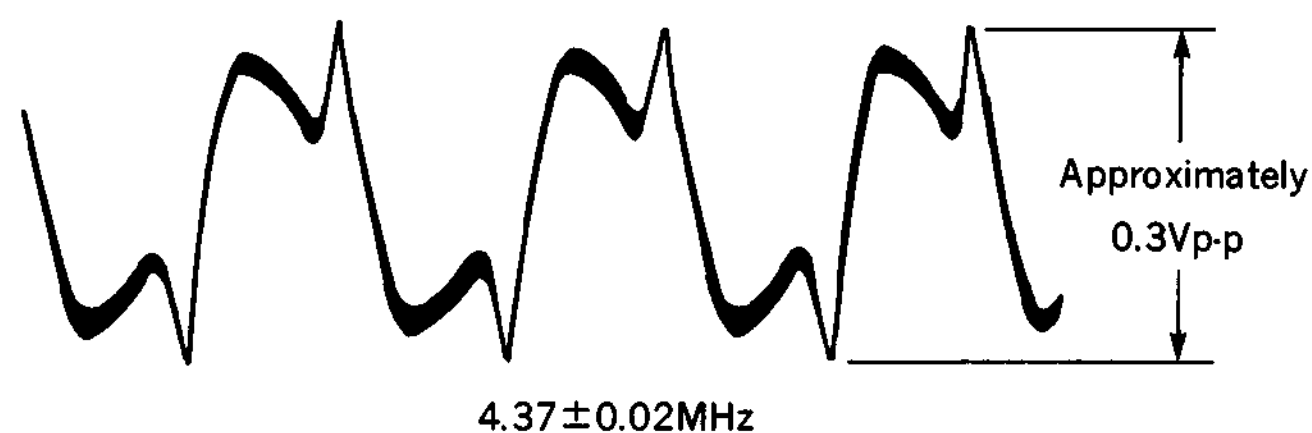


Fig.8-15.

8-5-10. Y FM Deviation Adjustment (SV-38 board)

Mode	Recording and playback
Signal	Color bar
Measurement point	VIDEO input-output terminal (75Ω terminal)
Measuring instrument	Oscilloscope
Adjustment element	RV603
Specified value	Playback level is $1.00 \pm 0.05V_{p-p}$

Note) 「De-emphasis Y level adjustment」, 「Playback Y level adjustment」 and 「Y FM carrier adjustment」 should be completed.

[Adjustment Method]

- Record the color bar signal.
- Play back the recorded signal.
- Check the playback output.
Specified value : $1.00 \pm 0.05V_{p-p}$
- When the specified value is not satisfied, rotate RV603 as shown in the following table and return to the item 1), and then perform the reconfirmation.

	Rotating direction of RV603
Over the specified value	Clockwise (↻)
Under the specified value	Counterclockwise (↻)

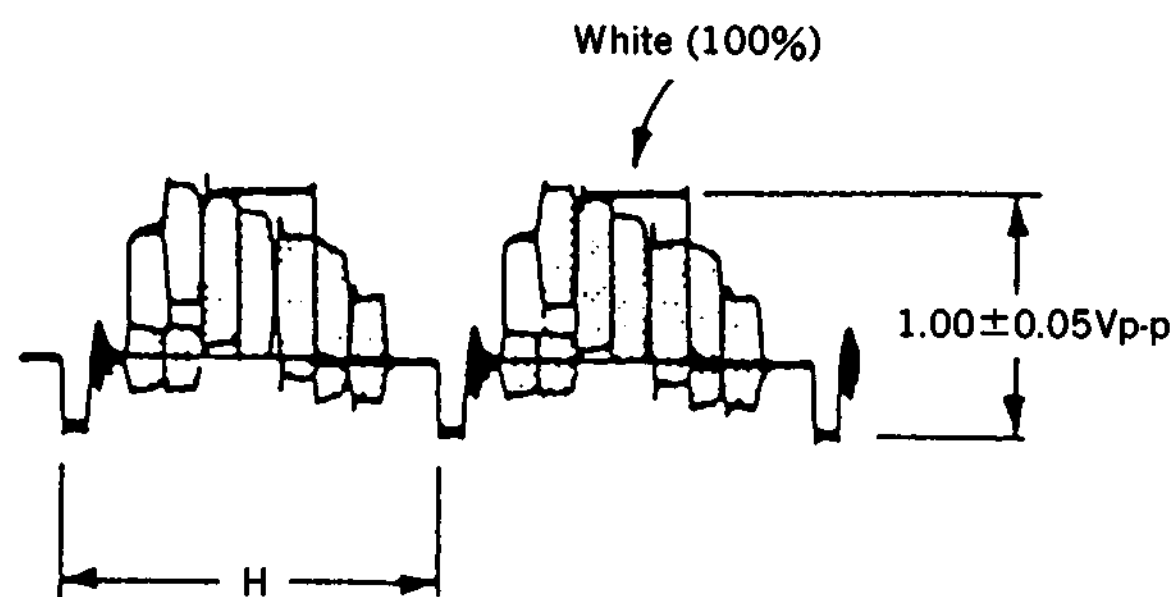


Fig.8-16

8-5-11. Recording Y Level Adjustment (SV-38 board)

Mode	Recording
Signal	No signal
Measurement point	CN801 Pin ⑩
Measuring instrument	Oscilloscope (20MHz band limit ON)
Adjustment element	RV802
Specified value	$260 \pm 5mV$

[Adjustment Method]

- Adjust with RV802 to $260 \pm 5mV$.

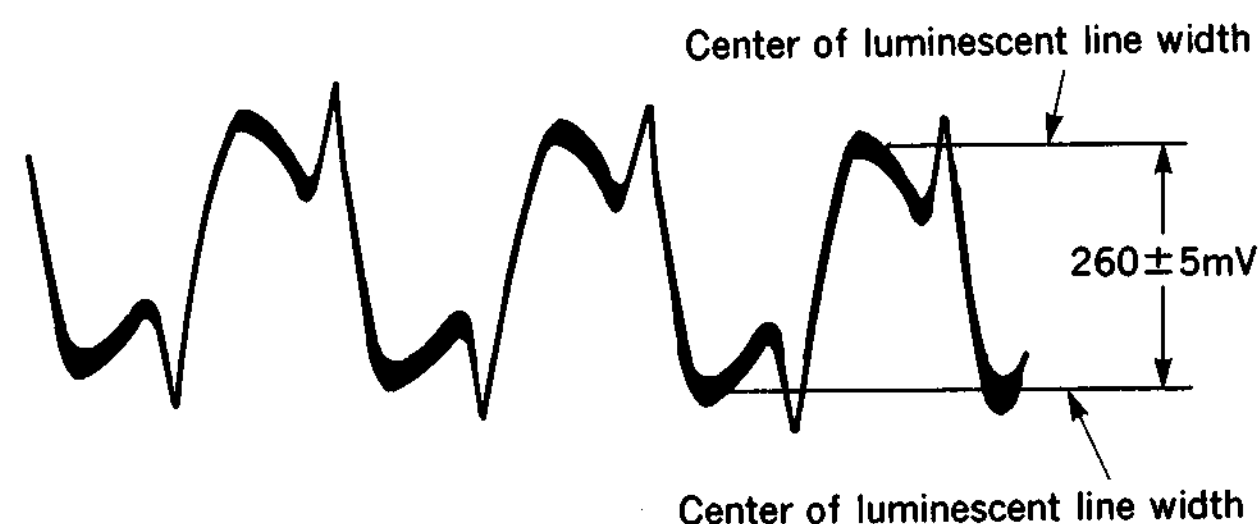


Fig.8-17.

8-5-12. Chroma Emphasis Adjustment (SV-38 board)

Mode	Recording
Signal	Color bar
Measurement point	IC701 Pin ⑭
Measuring instrument	Oscilloscope
Adjustment element	FL702
Specified value	Minimize the red level

[Preparation]

- Connect the resistance of $3.3k\Omega$ between the IC701 Pin ⑭ and GND.

[Adjustment Method]

- Minimize the red level with FL702.
- After the adjustment, disconnect the resistance connected in the preparation.

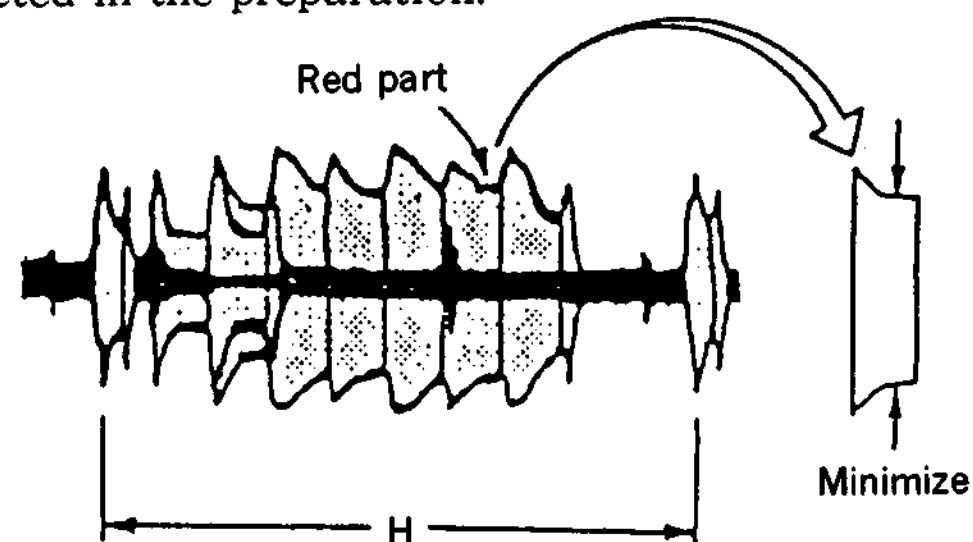


Fig.8-18.

8-5-13. Recording Chroma Level Adjustment (SV-38 board)

Mode	Recording
Signal	Color bar
Measurement point	CN801 Pin ①
Measuring instrument	Oscilloscope
Adjustment element	RV701
Specified value	Red level : $140 \pm 10 \text{mVp-p}$

[Adjustment Method]

- 1) Adjust the red level to $140 \pm 10 \text{mVp-p}$ with RV701.

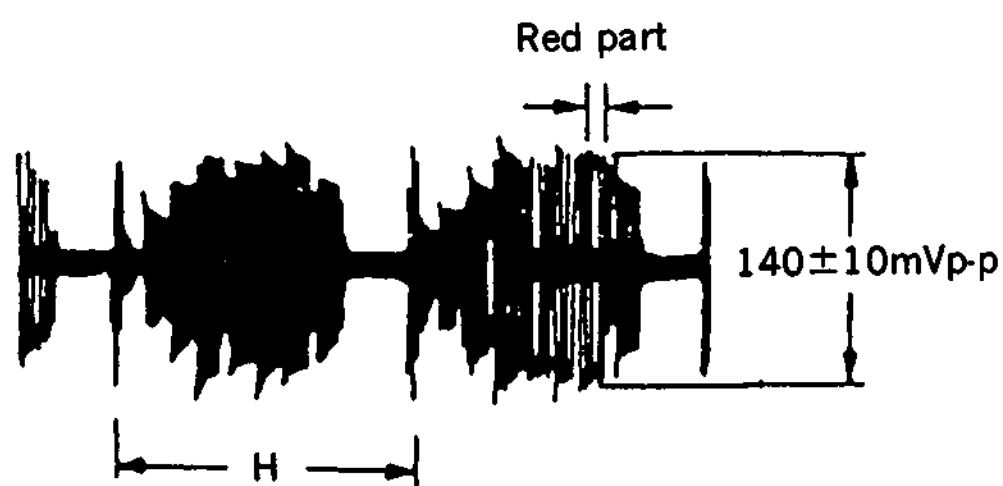



Fig.8-19.

8-6. LCD SYSTEM ADJUSTMENT

Caution: If you touch the back light holder, you may receive an electric shock. Be careful to perform the adjustment.

[Preparation]

- 1) The adjustment except for [white balance adjustment] and [V COM DC adjustment], the back light unit is not required. Remove it and perform the adjustment.
- 3) Set the VR as follows if there is no special direction.
 - BRIGHT (RV009)
 -Set the mechanical center position and short among pin ①, ② and ③.

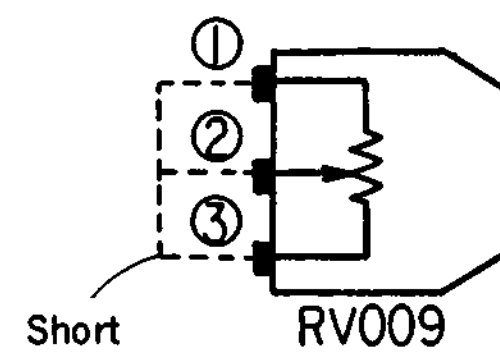

- COLOR (RV001)
 -The position where the voltage of IC001 46 of the RG-8 board is $1.5 \pm 0.1 \text{Vdc}$.
- HUE (RV002)
 -The position where the voltage of IC001 ③ of the RG-8 board is $1.79 \pm 0.05 \text{Vdc}$.

[Video input signal for adjustment]

Input the color bar signal, which the chroma signal and the burst signal are turned off, to the video input terminal as a video input signal for adjustment. Check with the CN001 pin ④ of the RG-8 board.

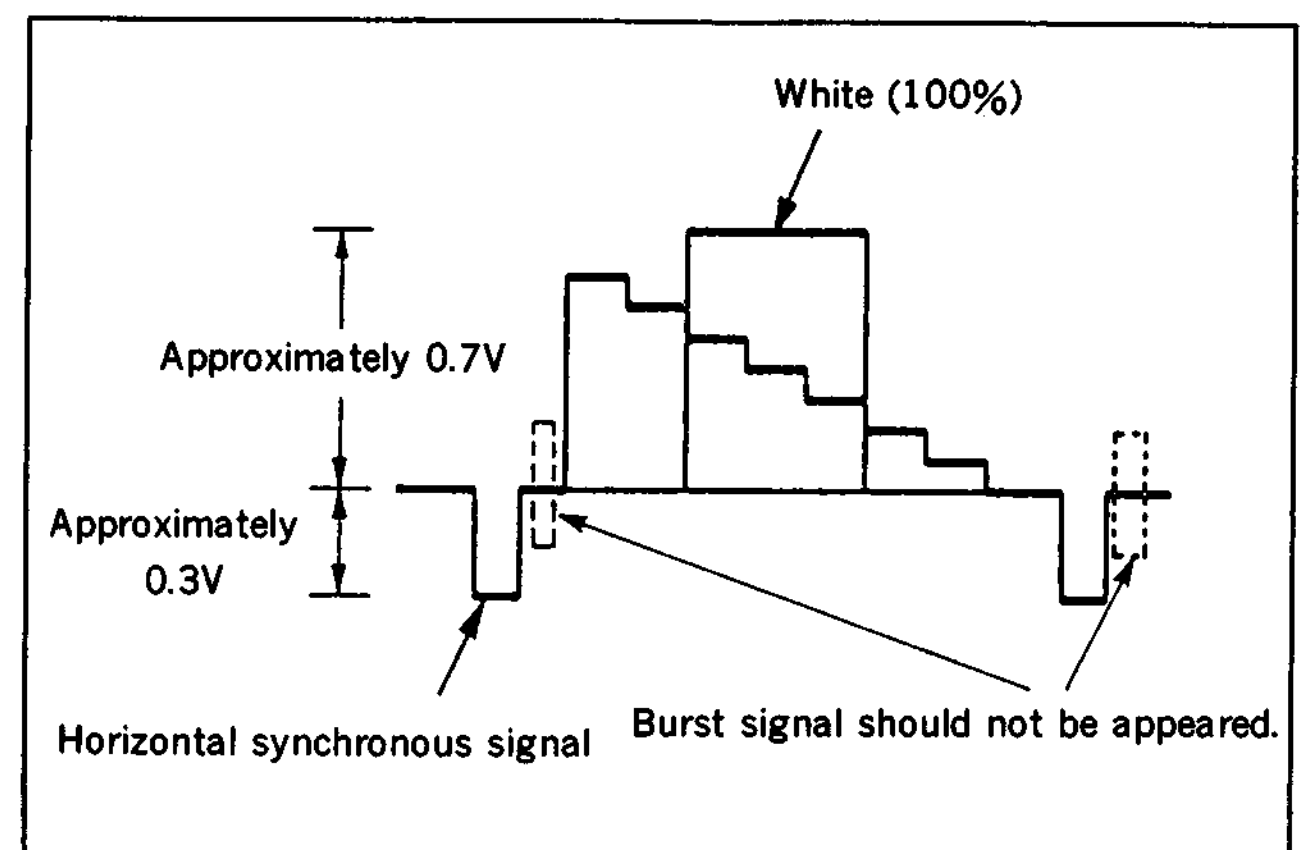


Fig.8-20. Color bar signal which the chroma signal and the burst signal are turned off

8-6-1. Contrast Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar which the chroma signal and the burst signal are turned off.
Measurement point	CN002 Pin ⑦
Measuring instrument	Oscilloscope
Adjustment element	RV005
Specified value	$3.5 \pm 0.1V$

[Adjustment Method]

- 1) Adjust with RV005 so that the voltage between white (100%) and the pedestal is $3.5 \pm 0.1V$.

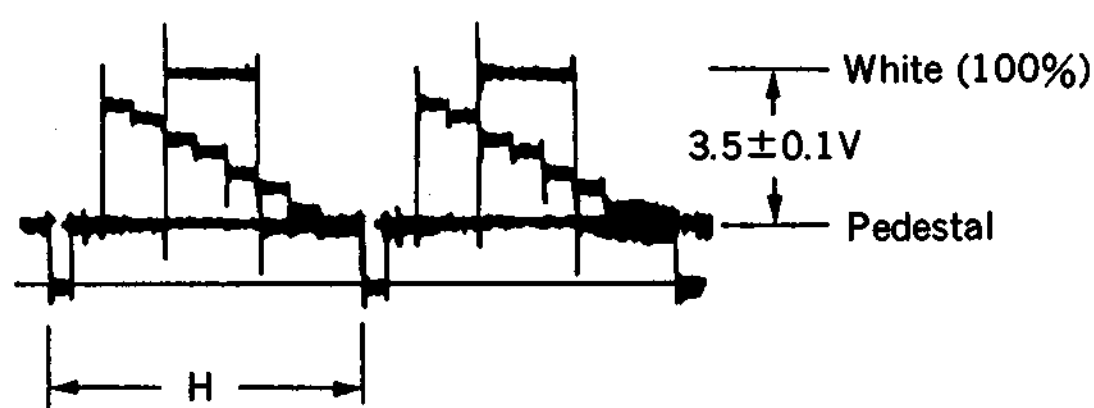


Fig.8-21.

8-6-2. R Gain Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar which the chroma signal and the burst signal are turned off
Measurement point	CN002 Pin ⑩
Measuring instrument	Oscilloscope
Adjustment element	RV006
Specified value	$3.5 \pm 0.1V$

[Adjustment Method]

- 1) Adjust with RV006 so that the voltage between white (100%) and the pedestal is $3.5 \pm 0.1V$.

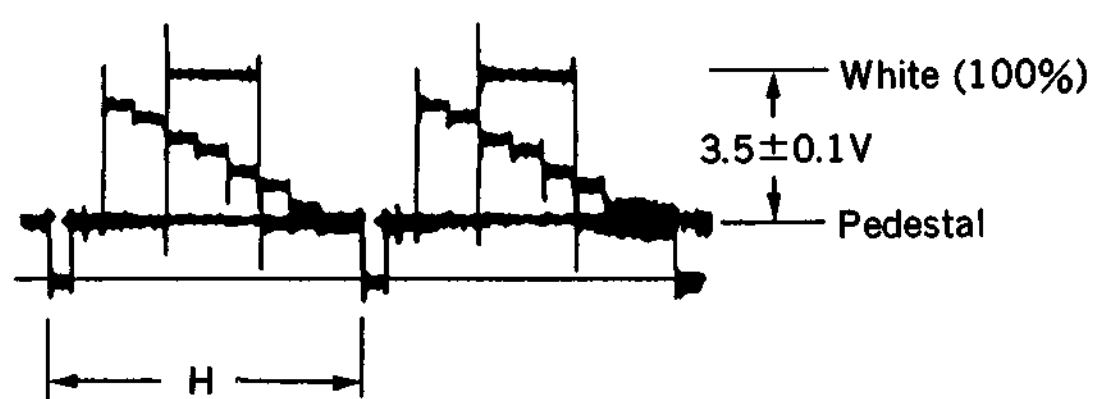


Fig. 8-22.

8-6-3. B Gain Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar which the chroma signal and the burst signal are turned off
Measurement point	CN002 Pin ⑪
Measuring instrument	Oscilloscope
Adjustment element	RV003
Specified value	$3.1 \pm 0.1V$

[Adjustment Method]

- 1) Adjust with RV003 so that the voltage between white (100%) and the pedestal is $3.1 \pm 0.1V$.



Fig. 8-23.

8-6-4. Sub Bright Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar which the chroma signal and the burst signal are turned off
Measurement point	CN002 Pin ⑨
Measuring instrument	Oscilloscope (DC range)
Adjustment element	RV010
Specified value	$-3.7 \pm 0.1V$

[Connection]

- 1) Install the LCD unit and perform the adjustment.

[Adjustment Method]

- 1) Adjust with RV010 so that the DC level of the pedestal part of the positive polarity G signal is $-3.7 \pm 0.1Vdc$.

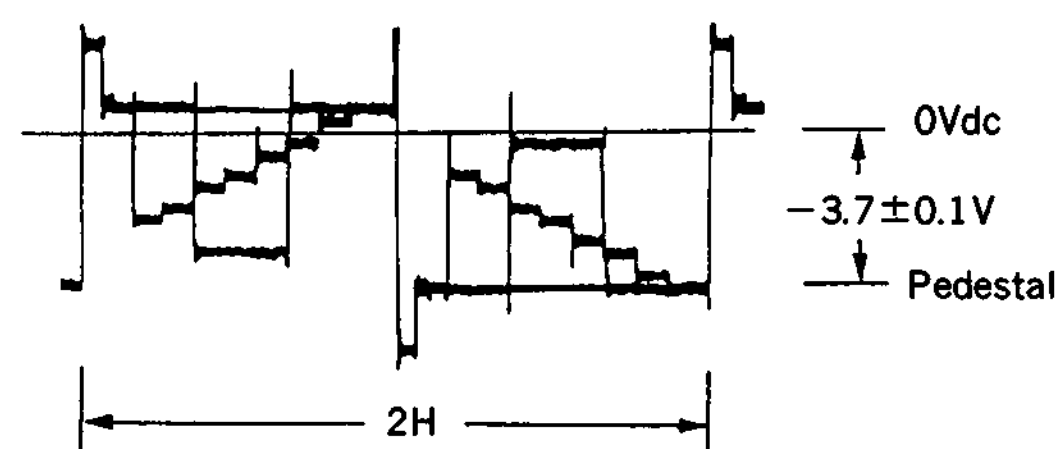


Fig.8-24.

8-6-5. fsc Adjustment (RG-8 board)

Mode	POWER ON
Signal	Video signal which the chroma signal, the burst signal and the Y signal are turned off.(Video signal with only synchronous signal)
Measurement point	IC001 Pin ②
Measuring instrument	Frequency counter
Adjustment element	CV001
Specified value	3549545±300Hz

Note : Connect the frequency counter through the buffer amplifier (oscilloscope, etc) with high impedance (1MΩ or more) and low capacity.

[Adjustment Method]

- 1) Adjust with CV001 so that the fsc frequency is 3579545±300Hz.

8-6-6. White Balance Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar which the chroma signal and the burst signal are turned off.
Measurement point	Check on the LCD screen
Measuring instrument	
Adjustment element	RV003 (B gain) RV006 (R gain)
Specified value	Screen should not be colored.

[Connection]

- 1) Perform the adjustment connecting the LCD unit and the back light.

[Adjustment Method]

- 1) Check that the LCD screen is not colored. If the screen is colored, adjust with RV003 (B gain) and RV006 (R gain).

8-6-7. V COM DC Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar which the chroma signal and the burst signal are turned off
Measurement point	LCD screen
Measuring instrument	Oscilloscope
Adjustment element	V COM DC VR on the LCD unit
Specified value	The amplitude of the flicker waveform is the minimum.

Note : Perform the [V COM DC adjustment] with assembling the LCD block.

Take care that the external light should not enter into the light receiving part of the COMMON voltage adjustment jig.

[Adjustment Method]

- 1) Expose the light receiving part of the COMMON voltage adjustment jig to the LCD screen. (Point down the LCD screen not to receive the external light.)
- 2) Connect the oscilloscope with the COMMON voltage adjustment jig.
- 3) Turn V COM DC VR and check that the flicker waveform as shown in the fig.8-26 is output.

(When the flicker waveform is not output, check the exposing method of the light receiving part and the external light condition, and check with turning the BRIGHT control.)

- 4) Minimize the flicker waveform amplitude with V COM DC VR.

Note : Turn V COM DC VR slowly because it takes long time to respond to LCD.

The minimum point of the flicker waveform amplitude is nearly coincided with the maximum point of the contrast.

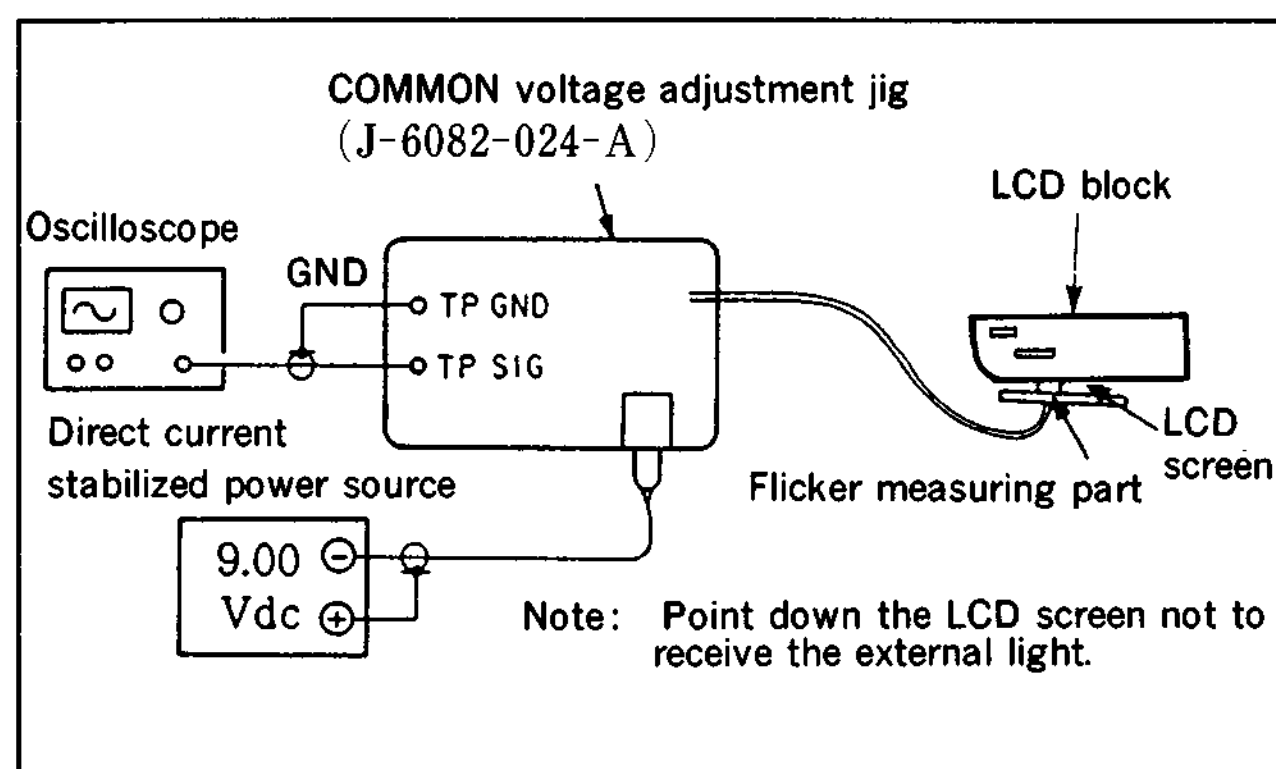


Fig.8-25

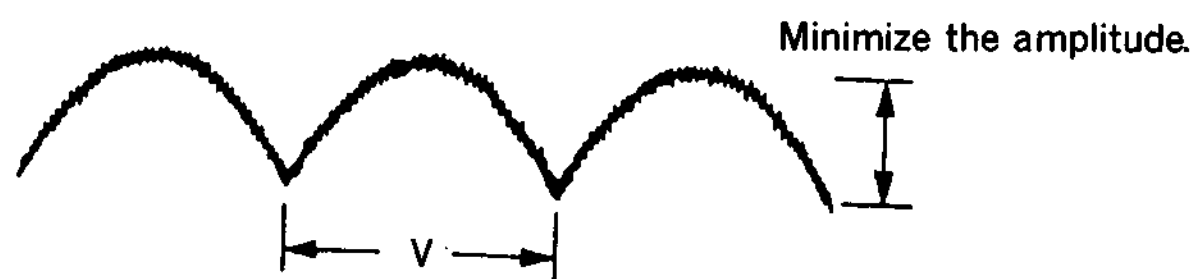


Fig.8-26.

8-6-8. Character Position Adjustment (RG-8 board)

Mode	POWER ON
Signal	Color bar
Measurement point	LCD screen
Measuring instrument	
Adjustment element	CV801
Specified value	A = B

[Adjustment Method]

- 1) Press the CLOCK SET button of the LCD block and check that black frame and "AM0:00" display on the LCD screen.
- 2) Make black frame on the right end of the LCD screen with CV801 and adjust so that it disappears.
- 3) Press twice the NEXT button of the LCD block and turn off the black frame on the LCD screen. (It takes approximately five seconds to turn off the frame.)

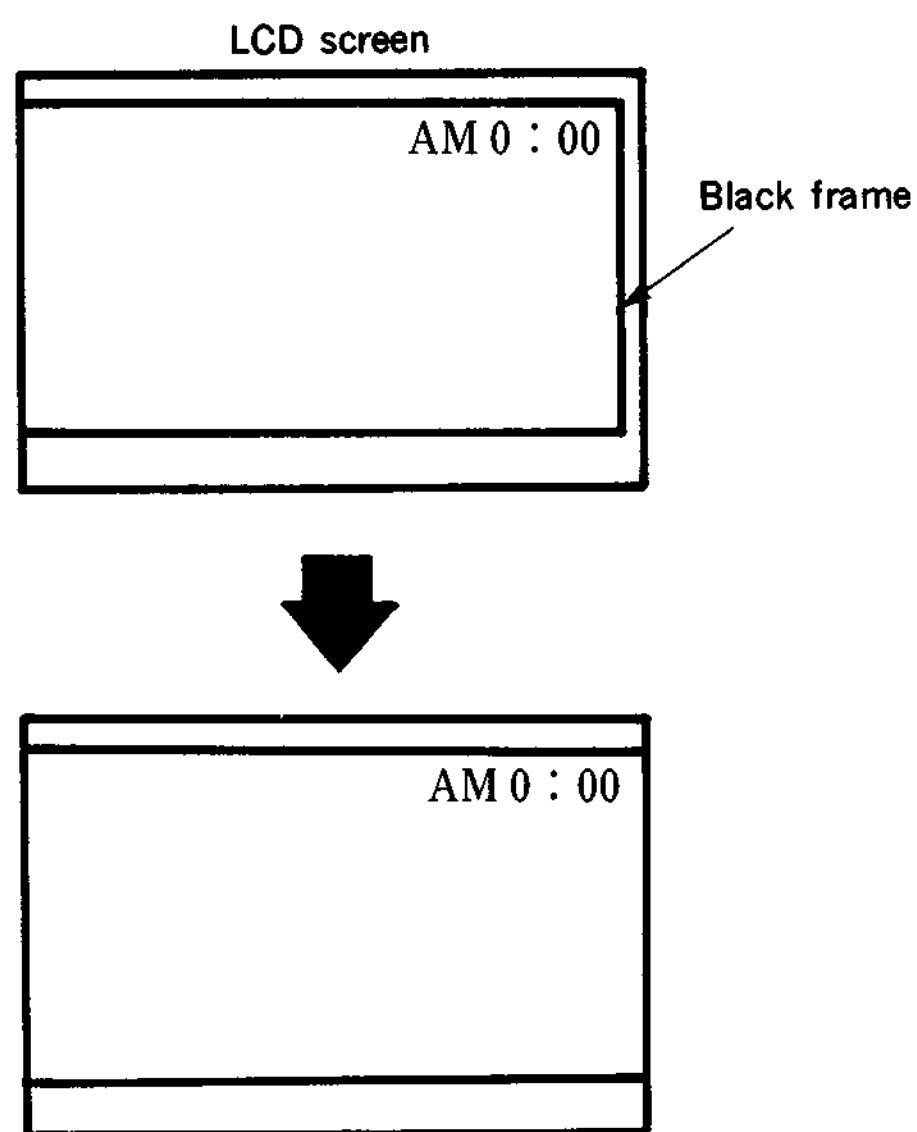


Fig.8-27.

8-7. MARKER SYSTEM ADJUSTMENT

8-7-1. Playback VCO Free Oscillation Frequency Adjustment (SV-38 board)

Mode	Playback
Signal	Optional tape
Measurement point	CL921 (Open side of R928)
Measuring instrument	Frequency counter
Adjustment element	RV923
Specified value	$11.58 \pm 0.05 \text{MHz}$

Note: Connect the frequency counter through the high impedance and low capacity buffer amplifier (oscilloscope, etc).

[Connection]

- 1) Short with the jumper wire between the IC922 Pin ① and Pin ⑩ (SW5V).
- 2) Short with the jumper wire between Q922 ③ and GND.

[Adjustment Method]

- 1) Adjust with RV923 to $11.58 \pm 0.05 \text{MHz}$.
- 2) After the adjustment, disconnect the jumper wire connected in the preparation.

8-8. TUNER SYSTEM ADJUSTMENT (TU-123 BOARD)

[Notes]

- 1) The IFT for adjustment (T001 to 004) is such an adjusted coil and is almost properly set that it is not required to turn so much. For adjustment, use an adjustment screwdriver with 0.8mm width (pink TORAY, etc.). Be careful to adjust because it is easy to break.
- 2) For VR for adjustment (RV001, 003 to 007, 501), use an adjustment screwdriver with 2mm width (yellow TORAY, etc.).
- 3) When adjusting, basically follow the following adjustment procedures.
When the replacing parts are designated, however, omit some adjustment procedures if they are required.

[Adjustment Procedures]

Note) When performing the adjustment in 1) to 4), remove the cutland soldering between the TU001 IF terminal and R006, and input the designated signal through the R006 side.

- 1) FAS adjustment (When replacing T001, C019, 020)
- 2) P.REF adjustment (When replacing IC001)
- 3) AFT adjustment (When replacing IC001)
- 4) S.REF adjustment (When replacing IC001)

Note) After the adjustment of 1) to 4), reinstall the cutland soldering.

- 5) MPX LEVEL adjustment (When replacing IC002, CF002)
- 6) FILTER adjustment (When replacing IC003)
- 7) VCO adjustment
- 8) Separation adjustment
- 9) RF AGC adjustment

8-8-1. FAS Adjustment (TU-123 board)

Adjust when replacing T001, C019, 020.

Signal input	Remove the cutland soldering of the IF terminal, and input from the R006 side of the cutland.
Signal	47.25MHz, -20dBm carrier signal
Measurement point	Q001 collector
Measuring instrument	Oscilloscope
Adjustment element	T001
Specified value	The minimum of the output level

[Adjustment Method]

- 1) Adjust with T001 so that the output level is the minimum.

8-8-2. P.REF Adjustment (TU-123 board)

Adjust when replacing IC001.

Signal input	Remove the cutland soldering of the IF terminal, and input from the R006 side
Signal	45.75MHz, -20dBm Carrier signal
Measurement point	IC001 Pin ①
Measuring instrument	Oscilloscope (DC range)
Adjustment element	T002
Specified value	The minimum of the DC level

[Adjustment Method]

- 1) Adjustment with T002 so that the DC level is the minimum.

8-8-3. AFT Adjustment (TU-123 board)

Adjust when replacing IC001.

Signal input	Remove the cutland soldering of the IF terminal, and input from the R006 side
Signal	45.75MHz, -20dBm Carrier signal
Measurement point	IC001 Pin ⑭
Measuring instrument	Oscilloscope (DC range)
Adjustment element	T003
Specified value	$2.3 \pm 0.1Vdc$

[Adjustment Method]

- 1) Adjust with T003 to be $2.3 \pm 0.1Vdc$.

8-8-4. S.REF Adjustment (TU-123 board)

Adjust when replacing IC002.

Signal input	Remove the cutland soldering of the IF terminal, and input from the R006 side
Signal	45.75MHz, -20dBm Carrier signal
Measurement point	IC002 Pin ①
Measuring instrument	Oscilloscope (DC range)
Adjustment element	T004
Specified value	The minimum of the DC level

[Adjustment Method]

- 1) Adjust with T004 so that the DC level is the minimum.

8-8-5. MPX LEVEL Adjustment (TU-123 board)

Adjust when replacing IC002 and CF 002.

Signal	400Hz, 100%MOD (± 25 kHz dev.) See Fig. 8-28
Measurement point	IC003 Pin ③
Measuring instrument	Oscilloscope
Adjustment element	RV003
Specified value	0.70 ± 0.03 Vp-p

[Connection]

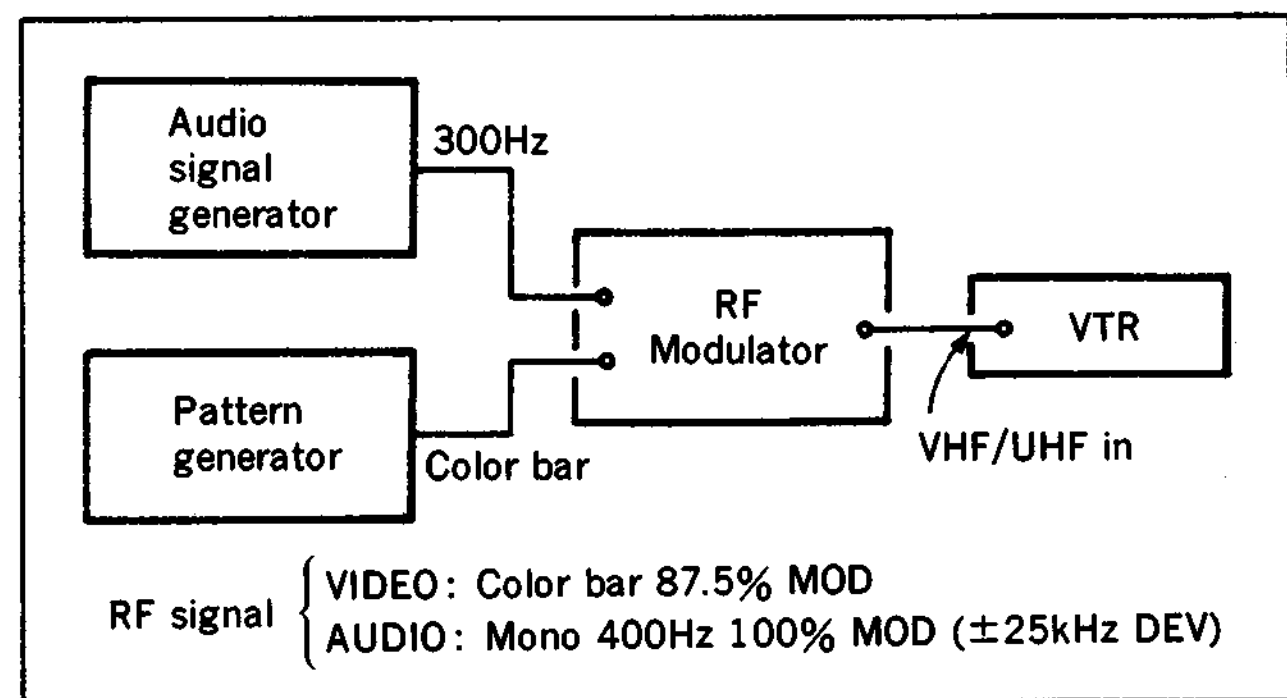


Fig. 8-28.

[Adjustment Method]

- 1) Adjust with RV003 to 0.70 ± 0.03 Vp-p.

8-8-6. FILTER Adjustment (TU-123 board)

Adjust when replacing IC003.

Signal input	Short the negative side of C073 with GND, and input signal to IC003 Pin ③ through the capacitor of 1μ F.
Signal	23.6kHz, 0dBm Carrier signal
Measurement point	IC003 Pin ④
Measuring instrument	Oscilloscope
Adjustment element	RV007
Specified value	The minimum of the amplitude

[Adjustment Method]

- 1) Adjust with RV007 so that the amplitude is the minimum.

8-8-7. VCO Adjustment (TU-123 board)

Signal input	Short the negative side of C073 with GND, and input signal to IC003 Pin ③ through the capacitor of 1μ F.
Signal	No signal and 15.734kHz, 0dBm Carrier signal
Measurement point	IC003 Pin ③
Measuring instrument	Oscilloscope (DC range)
Adjustment element	RV006
Specified value	The DC level at no-signal, at 15.734kHz and at input of the 0dBm carrier signal is the same.

[Adjustment Method]

- 1) Adjust with RV006 so that the DC level at no-signal, at 15,734kHz, and at input of the 0dBm carrier signal is the same.

Note) Too much turning RV006 will cause that the DC level is not allowed to change. The point to adjust is where the DC level changes and the DC level is the same position as that of no-signal.

8-8-8. Separation Adjustment (TU-123 board)

Signal	<ul style="list-style-type: none"> • MPX signal : See table • Connection : See Fig. 8-29
Measurement point	CN001 Pin ⑬(Rch out) CN001 Pin ⑮ (Lch out)
Measuring instrument	Oscilloscope
Adjustment element	RV004, RV005
Specified value	The minimum of the Crosstalk

[Signal]

Signal	Modulation
Stereo Pilot Signal	ON
Main Channel Signal	Lch : 400Hz, 30% Rch : 2kHz, 30%
Sub Channel Signal	NOISE REDUCTION : ON PRE EMPHASIS : ON

[Connection]

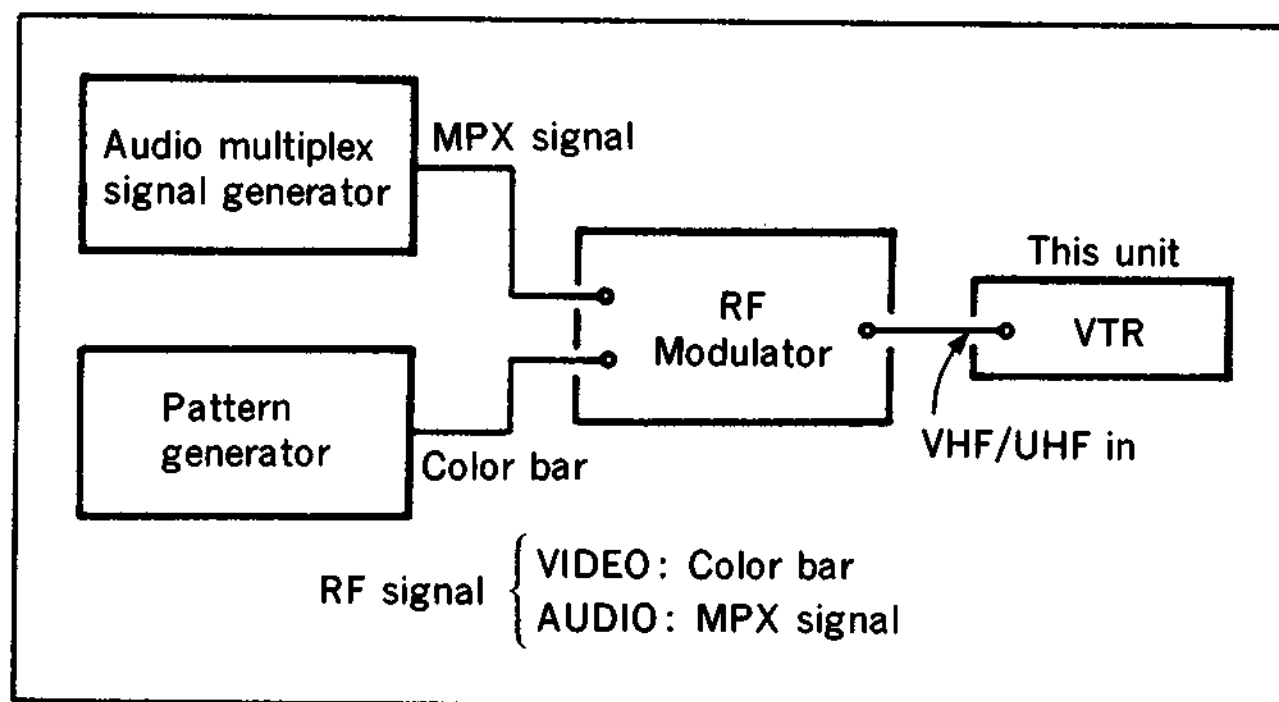


Fig.8-29

[Adjustment Method]

- 1) Adjust with RV004 and 005 so that the crosstalk is the minimum.

8-8-9. RF AGC Adjustment (TU-123 board)

Mode	E-E
Signal	Broadcast TV signal
Adjustment element	RV001

[Adjustment Method]

- 1) Connect the monitor TV.
- 2) Adjust the monitor TV to the most proper contrast and receive the broadcast TV signal.
- 3) Turn RV001 to show the snow noise.
- 4) Turn RV001 in the reverse direction, and set to the point that the snow noise disappears.
- 5) Receive each channel and check that there is no beat by the cross modulation, picture distortion and snow noise.

8-9. AUDIO SYSTEM ADJUSTMENT

- Adjust using the color bar signal as the video signal input.

[Connection of the measuring instruments for audio]

Connect the audio system measuring instruments as shown in the following figure as well as the video system measuring instruments. Set the power switch to the [VTR] side if there is no special direction.

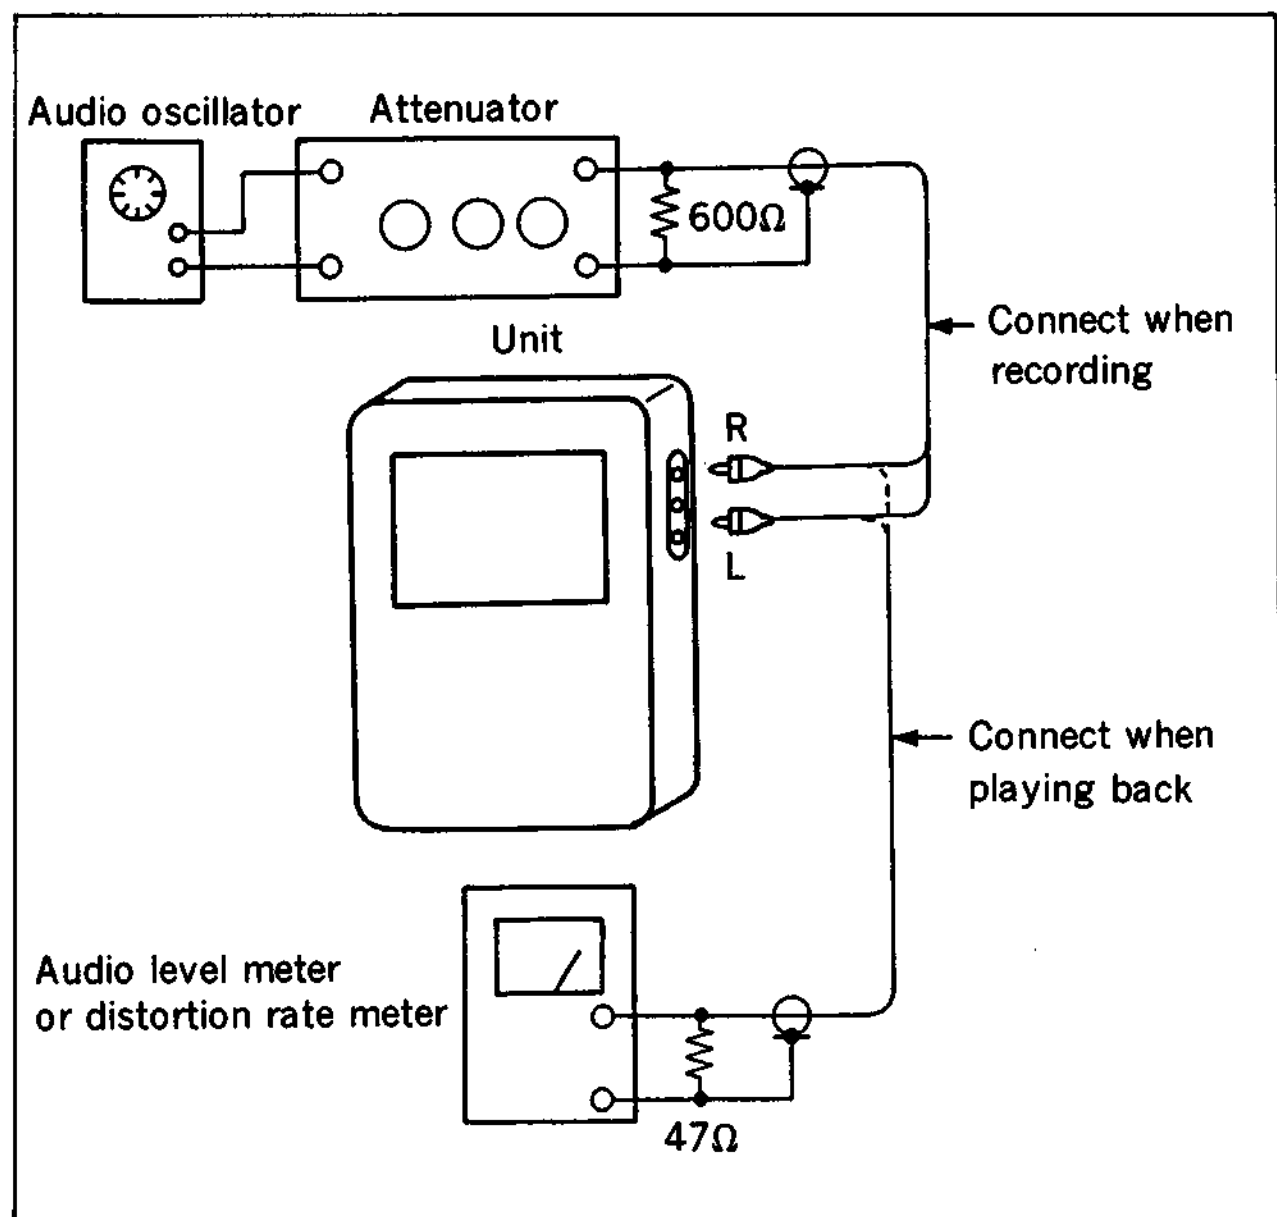


Fig.8-30.

[VIDEO/AUDIO terminal of the unit]

The VIDEO and AUDIO (L/R) terminal has a function both input and output. The operation as the input terminal or as the output terminal is automatically selected according to the operation mode of the unit.

When connecting with other instruments, perform according to input-output of the terminal.

Operation mode of the unit and the input-output automatic selection of the terminal

Input mode selected with the INPUT SELECT button	The case that the unit is stopped or the recording mode is set	The case that the unit is set to the playback mode
TUNER (Television screen)	Output	Output
LINE*	Input	Output
CAMERA	Output	Output

*When the LINE is selected with the INPUT SELECT button, the display of INPUT and OUTPUT is shown.

[Setting of the switches]

Set the following mode if there is no special direction.

- SP/LP buttonSP
- INPUT SELECT buttonLINE
- AUTO STEREO switchON
- LINE AUDIO button.....ST
- AUDIO MONITOR button.....(S) and MAIN

[Notes]

- When the sound signal is input, input the same signal to both L and R channel if there is no special direction.
- Be sure to insert a plug (shorting plug or dummy plug) to the AUDIO R input-output terminal if there is no special direction. When a plug is not inserted, the monaural mode is set and the proper adjustment is not performed.
(Monaural mode)
At recording.....REC AFM RF 1.7MHz carrier is not output.
At playing backL+R signal is output from the AUDIO L input-output terminal.

[Adjustment Procedures]

- 1.5MHz carrier frequency adjustment
- 1.7MHz carrier frequency adjustment
- E-E output level check
- 1.5MHz carrier level check
- 1.7MHz carrier level adjustment
- 1.5MHz deviation adjustment
- 1.7MHz deviation adjustment note)
- Recording matrix L+R adjustment
- Recording matrix L-R adjustment
- Playback matrix adjustment
- Total level characteristic separation check
- Total distortion rate check

Note) The adjustment method of the 1.7 MHz deviation adjustment is shown later.

8-9-1. 1.5MHz Carrier Frequency Adjustment (AU-53 board)

Mode	Recording
Signal	No signal
Measurement point	IC101 Pin ⑬
Measuring instrument	Frequency counter
Adjustment element	RV102
Specified value	$1.50 \pm 0.02\text{MHz}$

Note : Use the 10: 1 probe for connecting the frequency counter.

[Connection]

- 1) Short with the jumper wire between IC113 pin ⑫ (PLL PB) and CN101 Pin ① (SW 5V).

[Adjustment Method]

- 1) Adjust with RV102 to $1.5 \pm 0.02\text{MHz}$.
- 2) Keep the jumper wire for connecting and perform the 1.7MHz carrier frequency adjustment.

8-9-2. 1.7MHz Carrier Frequency Adjustment (AU-53 board)

Mode	Recording
Signal	No signal
Measurement point	IC201 Pin ⑬
Measuring instrument	Frequency counter
Adjustment element	RV202
Specified value	$1.70 \pm 0.01\text{MHz}$

Note : Use the 10: 1 probe for connecting the frequency counter.

[Connection]

- 1) Short with the jumper wire between IC113 pin ⑫ (PLL PB) and CN101 Pin ① (SW 5V).

[Adjustment Method]

- 1) Adjust with RV202 to $1.70 \pm 0.01\text{MHz}$.
- 2) After the adjustment, disconnect the jumper wire.

8-9-3. E-E Output Level Check

Mode	Camera recording
Signal	CN-6 board J601 Pin ⑤ [Pin ⑨] 400Hz, -15dBs
Measurement point	AUDIO L [R] Input-output terminal
Measuring instrument	Audio level meter
Specified value	$-7.5 \pm 2\text{dBs}$

[Checking Method]

- 1) Check that the 400Hz signal is $-7.5 \pm 2\text{dBs}$.

8-9-4. 1.5MHz Carrier Level Check (AU-53 board)

Mode	Recording
Signal	No signal (Both L and R 600Ωterminal)
Measurement point	CN102 Pin ③
Measuring instrument	Oscilloscope
Specified value	$128 \pm 10\text{mVp-p}$

[Preparation]

- 1) Terminate both L and R AUDIO terminals at 600Ω. The pin plug should not be inserted to the R terminal. (For setting to the monaural mode)

[Checking Method]

- 1) Check that the 1.5MHz REC AFM RF signal level is $128 \pm 10\text{mVp-p}$. (Read the center level of the luminescent width.)

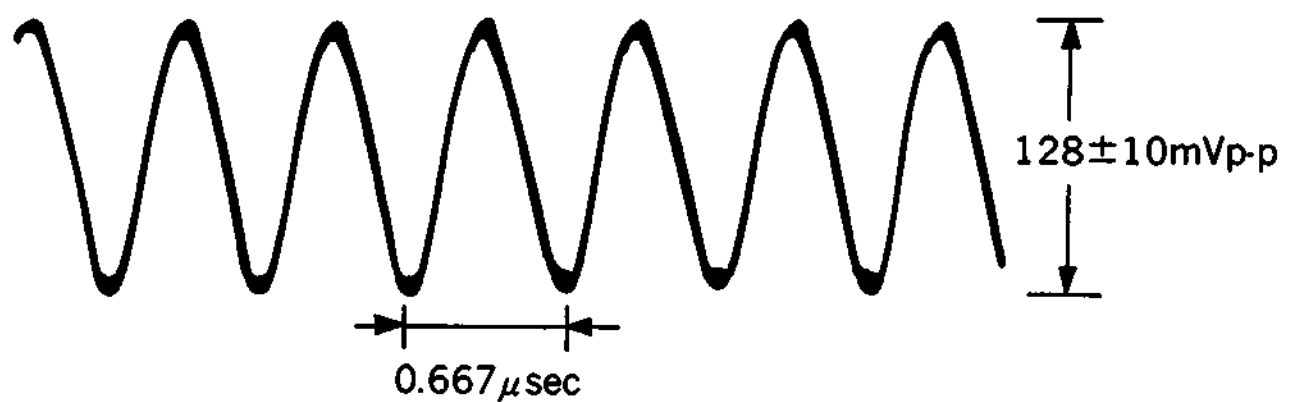


Fig.8-31.

8-9-5. 1.7MHz Carrier Level Adjustment (AU-53 board)

Mode	Recording
Signal	No signal (Both L and R 600Ωterminal)
Measurement point	CN102 Pin ③
Measuring instrument	Oscilloscope
Adjustment element	RV203
Specified value	(1.5MHz carrier level) - (1.7MHz carrier level) = $27 \pm 10\text{mV}$

[Preparation]

- 1) Terminate both L and R AUDIO terminals at 600Ω. Check that the dummy plug is inserted to the R terminal. (For setting the stereo mode)

[Adjustment Method]

- 1) Connect the capacitor of 0.01μF between IC201 pin ⑭ and GND.
- 2) Measure the 1.5MHz carrier level by the oscilloscope and write it down.
- 3) Disconnect the capacitor connected in the procedure 1).
- 4) Connect the capacitor of 0.01μF between IC101 Pin ⑭ and GND.
- 5) Measure the 1.7MHz carrier level by the oscilloscope and adjust with RV 203 to (1.5MHz carrier level) - (1.7MHz carrier level) = $27 \pm 10\text{mV}$.
- 6) Disconnect the capacitor connected in the procedure 4).

8-9-6. 1.5MHz Deviation Adjustment (AU-53 board)

Mode	Playback
Signal	Alignment tape: for operation check (WR5-4NSP)
Measurement point	CN101 Pin ⑤
Measuring instrument	Oscilloscope
Adjustment element	RV101
Specified value	$925 \pm 21\text{mVp-p}$ ($-7.5 \pm 0.2\text{dBs}$)

[Adjustment Method]

- 1) Adjust with RV101 so that the 400Hz signal level is $925 \pm 21\text{mVp-p}$.

8-9-7. Recording Matrix L+R Adjustment (AU-53 board)

Mode	Recording
Signal	1. 400Hz, -7.5dBs AUDIO L input-output terminal Input 2. 400Hz, -7.5dBs AUDIO R input-output terminal Input
Measurement point	IC104 Pin ①
Measuring instrument	Oscilloscope
Adjustment element	RV401
Specified value	The level difference at the L terminal input and the R terminal input is $0 \pm 5\text{mVp-p}$.

Note: Measure the signal level after passing one minute or more from the signal input.

[Adjustment Method]

- 1) Input 400Hz and -7.5dBs signal to the AUDIO L input-output terminal. (Insert the shorting plug to the R terminal.)
- 2) Read the signal level of IC104 Pin ① and write it down.
- 3) Input 400Hz and -7.5dBs signal to the AUDIO R input-output terminal. (Insert the shorting plug to the L terminal.)
- 4) Adjust with RV401 so that the signal level of IC104 Pin ① is $\pm 5\text{mVp-p}$ measured in the procedure 2).

8-9-8. Recording Matrix L-R Adjustment

Mode	Recording
Signal	400Hz, -7.5dBs Input to the both L and R terminal of AUDIO input-output terminal.
Measurement point	IC105 Pin ①
Measuring instrument	Oscilloscope
Adjustment element	RV402
Specified value	$0 \pm 10\text{mVp-p}$

Note : Use the 1:1 probe.

[Adjustment Method]

- 1) Adjust with RV402 so that the signal level of IC106 Pin ① is $0 \pm 10\text{mVp-p}$.

8-9-9. Playback Matrix Adjustment (AU-53 board)

Mode	Playback
Signal	Alignment tape: for AFM stereo operation check (WR5-9NS)
Measurement point	CN101 Pin ⑤ and Pin ⑦
Measuring instrument	Oscilloscope
Adjustment element	RV204
Specified value	The distortion of the 400Hz output waveform of CN101 pin ⑤ and the 1kHz output waveform of pin ⑦ is the minimum.

[Adjustment Method]

- 1) Adjust with RV204 so that the distortion of the 400Hz output waveform of CN101 pin ⑤ and the 1kHz output waveform of pin ⑦ is the minimum.

8-9-10. Total Level Characteristic Separation Check

Mode	Self playback
Signal	400Hz, -7.5dBs: AUDIO L [R] input-output terminal No signal (Insert a shorting plug.): AUDIO R [L] input-output terminal
Measurement point	AUDIO L [R] input-output terminal
Measuring instrument	Audio level meter
Specified value	Signal level: $-7.5 \pm 2\text{dBs}$ Cross talk level: -25.0dBs or less

Note : Be sure to insert the dummy plug to the R terminal when measuring the L side playback output level.

[Checking Method]

- 1) Record the signal.
- 2) Connect the audio level meter to the AUDIO L [R] input-output terminal.
- 3) Play back the recorded part and check that the L [R] output signal level is $-7.5 \pm 2\text{dBs}$.
- 4) Check that the R [L] output cross talk level is -25.0dBs or less.

8-9-11. Total Distortion Rate Check

Mode	Self playback
Signal	400Hz, -7.5dBs Input both L and R AUDIO input-output terminals
Measurement point	AUDIO L [R] input-output terminal
Measuring instrument	Distortion Rate Meter
Specified value	1.2% or less

Note : Be sure to insert the dummy plug to the R terminal when measuring the L side playback distortion rate.

[Checking Method]

- 1) Record the signal.
- 2) Connect the distortion rate meter to the AUDIO L [R] input-output terminal.
- 3) Play back the recorded part and check that the distortion rate of the L [R] output is 1.2% or less.

